



Mid-Size ProLine T-Bar Gear 17 HP with 52in Side Discharge Mower

Model No. 30342 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine Installation Assembly	 3	Valve and Camshaft Assembly Kawasaki FH541V-AS30	 19
Fuel Tank Assembly	 4	Lubrication Equipment Assembly Kawasaki FH541V-AS30	 20
Lower Control Assembly	 5	Cooling Equipment Assembly Kawasaki FH541V-AS30	 21
Transmission Drive Assembly	 6	Electric Equipment Assembly Kawasaki FH541V-AS30	 22
Wheel Drive and Brake Assembly	 7	Control Equipment Assembly Kawasaki FH541V-AS30	 23
Upper Handle Assembly	 8	Carburetor Assembly Kawasaki FH541V-AS30	 24
Control Panel Assembly	 9	Muffler and Air Filter Assembly Kawasaki FH541V-AS30	 25
Carrier Frame Assembly	 10	Fuel Tank/Fuel Valve Assembly Kawasaki FH541V-AS30	 26
Spindle, Pulley and Belt Assembly	 11	Starter Assembly Kawasaki FH541V-AS30	 27
Deck Decal Assembly 106-0619	 12	Decal Assembly Kawasaki FH541V-AS30	 28
Outer Spindle Assembly 106-0787	 13		
Spindle Assembly No. 106-0785	 14		
Deck Assembly	 15		
Drive Belt and Tensioner Assembly	 16		
Cylinder/Crankcase Assembly Kawasaki FH541V-AS30	 17		
Piston/Crankshaft Assembly Kawasaki FH541V-AS30	 18		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes

- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Kawasaki dealer | |


PROTOTYPE

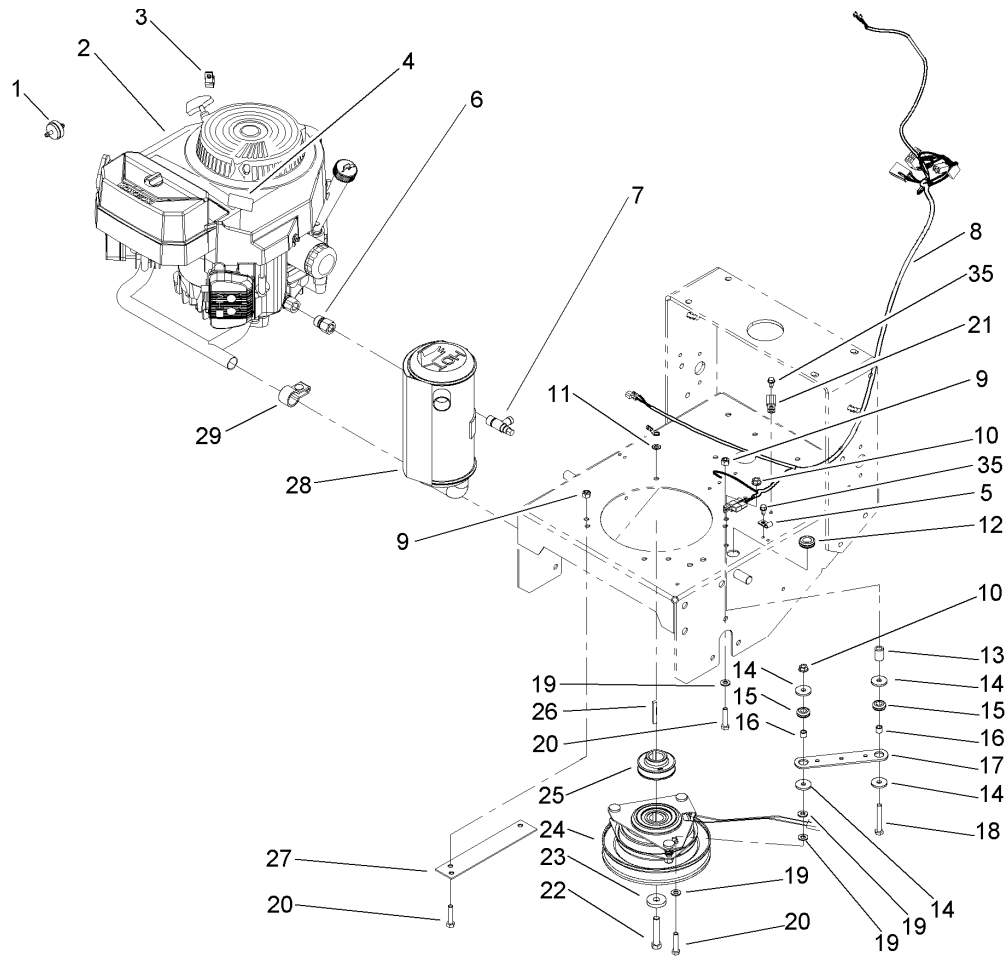

Engine Installation Assembly


Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
2		1	Engine-Kawasaki, Fh541v-As30
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning, Hot Surfaces
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	103-1965	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
9	3296-29	4	Nut-Lock, NI
10	32128-20	2	Nut-HF
11	3255-8	1	Washer-Lock
12	237-124	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	5	Screw-HH
21	2412-134	1	R-Clamp
22	3212-9	1	Screw-HH
23	112843	1	Washer
24	105-2635	1	Clutch / Brake

Ref	Part No.	Qty.	Description
25	105-0827	1	Pulley-Drive
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
28	100-6467	1	Muffler
29	103-5465	1	Clamp-Muffler
35	12-3270	2	Screw
99	103-1964	1	Hose-Drain, Oil

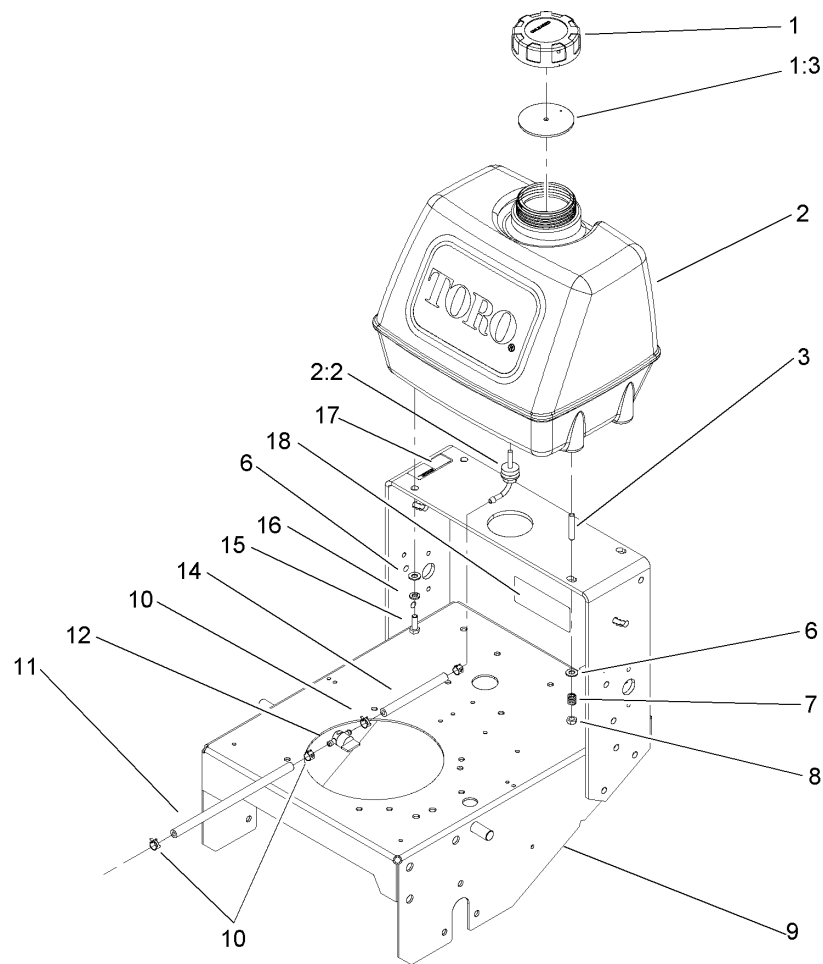


Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	106-0730	1	Fuel Tank ASM				
2:2	103-2605	1	Fitting-Fuel, Bulkhead				
3	104-8121	2	Stud-Threaded				
6	3256-23	4	Washer-Flat				
7	1-633349	2	Spring-Tank, Fuel				
8	3296-47	2	Nut-Lock, NI				
9	106-0546-01	1	Gear Frame ASM				
10	2412-98	4	Clamp				
11	47-2982	1	Hose-Fuel				
12	1-603770	1	Valve-Fuel				
14	47-2980	1	Hose-Fuel				
15	322-4	2	Screw-HH				
16	3253-4	2	Washer-Lock				
17	95-2814	1	Decal-Shut Off, Fuel				
18	98-0776	1	Decal-Caution				

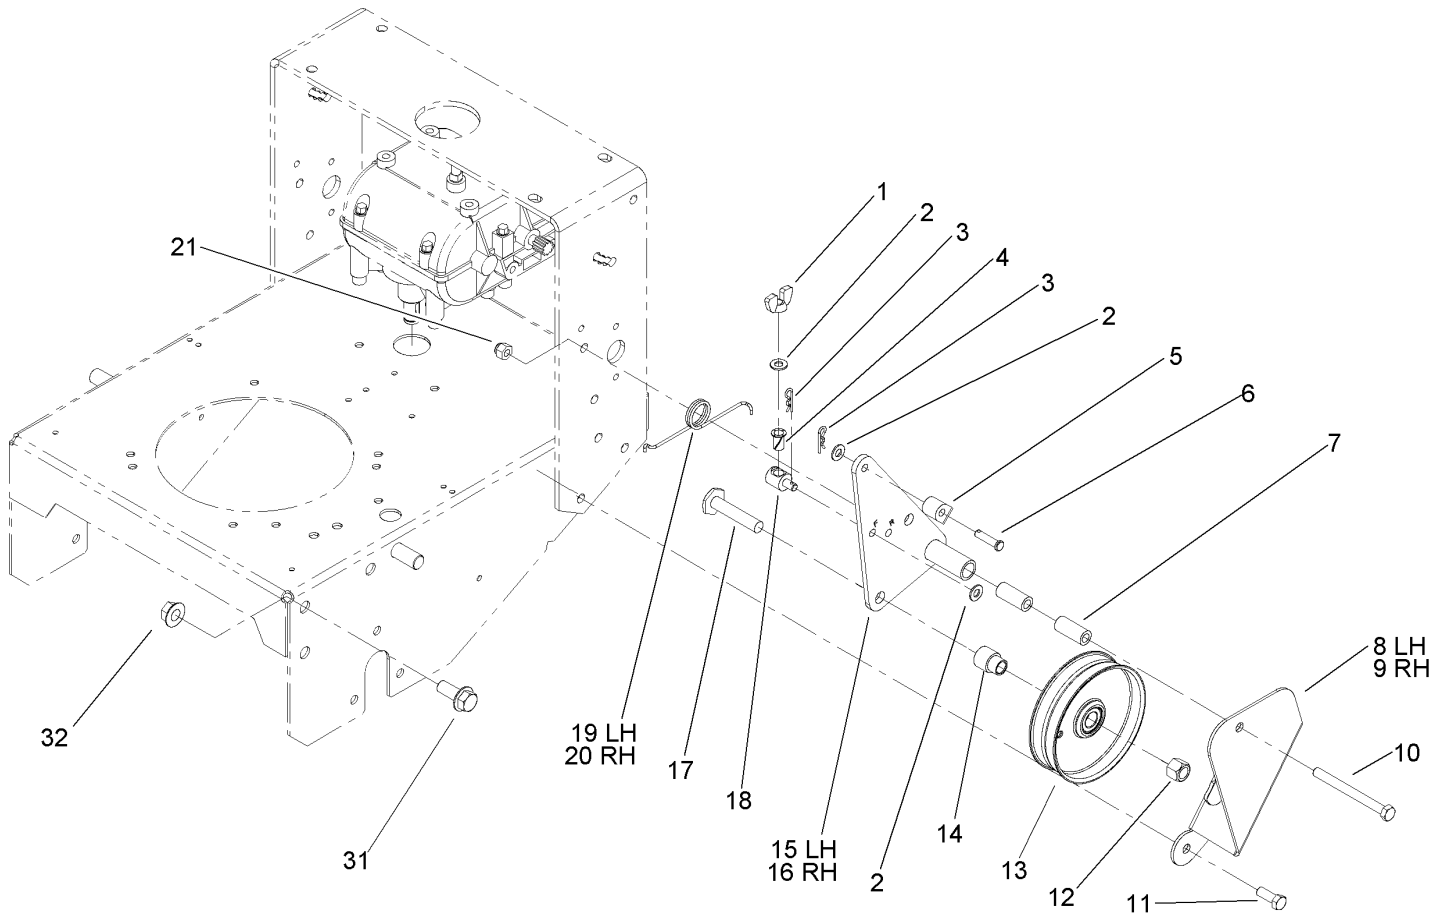


Lower Control Assembly

Ref	Part No.	Qty.	Description				
1	32103-25	2	Nut-Wing	PROTOTYPE			
2	3256-23	6	Washer-Flat				
3	3290-307	4	Pin-Hair				
4	52-2890	2	Bushing-Nylon				
5	74-0521	2	Fitting-Rod				
6	283-6	2	Pin-Clevis				
7	74-0040	4	Spacer-Pivot, Idler				
8	67-6380-01	1	Bracket-Support, LH				
9	67-6370-01	1	Bracket-Support, RH				
10	323-16	2	Screw-HH				
11	323-6	4	Screw-HH				
12	3296-23	2	Nut-Lock, NI				
13	95-2800	2	Pulley-Idler				
14	95-2801	2	Spacer-Pulley				
15	74-0220-01	1	Bracket-Idler, LH				
16	74-0230-01	1	Bracket-Idler, RH				
17	51-4450	2	Screw-Leveler				
18	68-9690	2	Fitting-Rod				
19	51-4380	1	Spring-Torsion, LH				
20	51-4370	1	Spring-Torsion, RH				
21	3296-39	6	Nut-Lock, NI				
31	3234-32	6	Screw-HHF				
32	32128-23	6	Nut-HF				

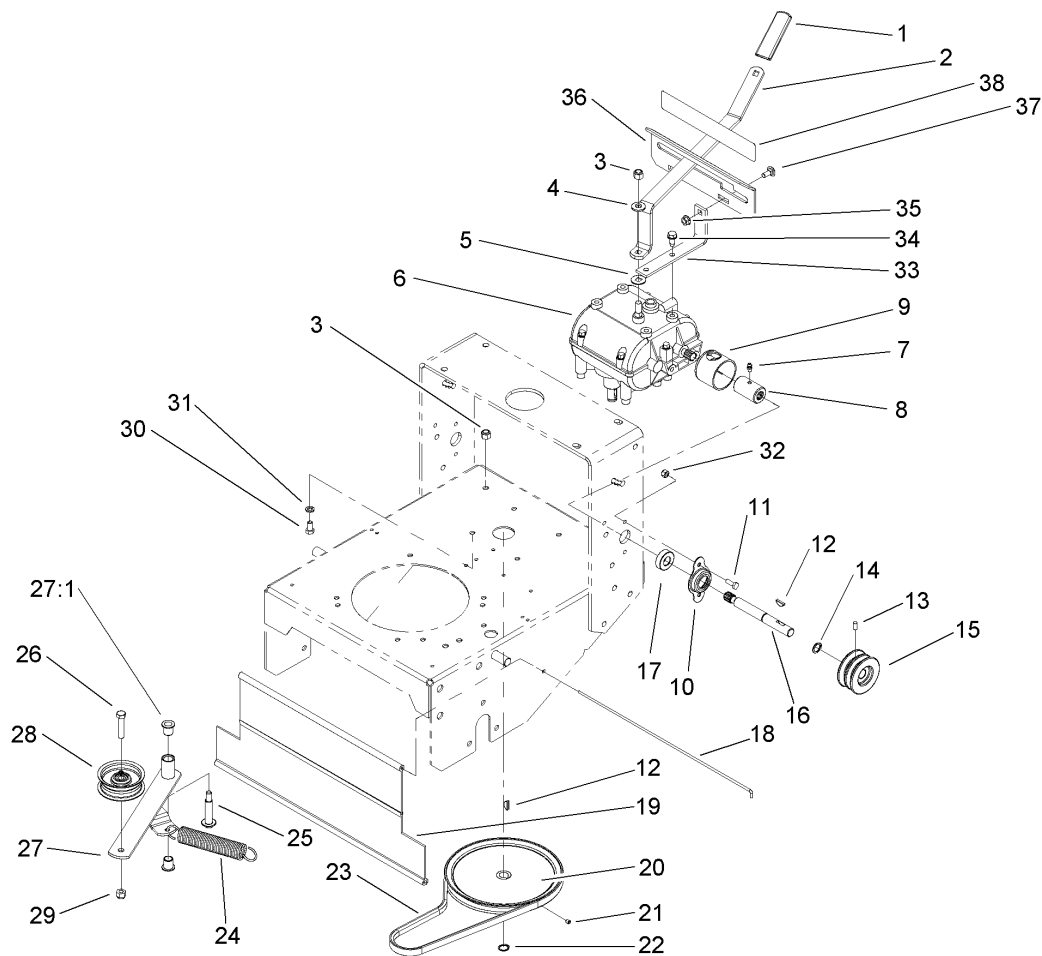

Transmission Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	47-1970	1	Grip	25	27-6230	1	Bolt-Wheel
2	98-3274-03	1	Lever-Shift	26	323-9	1	Screw-HH
3	3296-6	2	Nut-Lock	27	16-7509	1	Lever-Idler
4	98-5975	1	Washer-Belleville	27:1	256-155	2	Bushing-Flange
5	1-323379	1	Washer	28	62-4540	1	Pulley
6	1-323500	1	Transmission	29	3296-39	1	Nut-Lock, NI
7	302-5	2	Fitting-Grease	30	322-2	4	Screw-HH
8	1-323680	2	Coupler	31	3253-4	4	Washer-Lock
9	51-4220	2	Guard-Coupler	32	3296-42	4	Nut-Lock, NI
10	1-323254	2	Flange-Output	33	1-323389-03	2	Bracket-Plate, Shift
11	321-4	4	Screw-HH	34	9264964	4	Screw-Hwh, Thd Cut
12	3257-5	3	Key-Woodruff	35	32128-20	2	Nut-HF
13	3245-9	2	Screw-Set	36	1-323387-03	1	Plate-Shift
14	32151-62	2	Ring-Retaining	37	3230-1	2	Bolt-CARR
15	105-2698	2	Pulley-Transmission	38	98-3256	1	Decal-Speed, Ground
16	104-1102	2	Shaft-Output				
17	1-323252	2	Bearing-Shaft				
18	95-1529	1	Rod-Shield				
19	95-1526	1	Shield-Trailing				
20	105-5646	1	Pulley-Driven				
21	3245-1	1	Screw-Set, HSH				
22	32120-64	1	Ring-Snap, External				
23	105-5668	1	V-Belt				
24	68-2190	1	Spring				

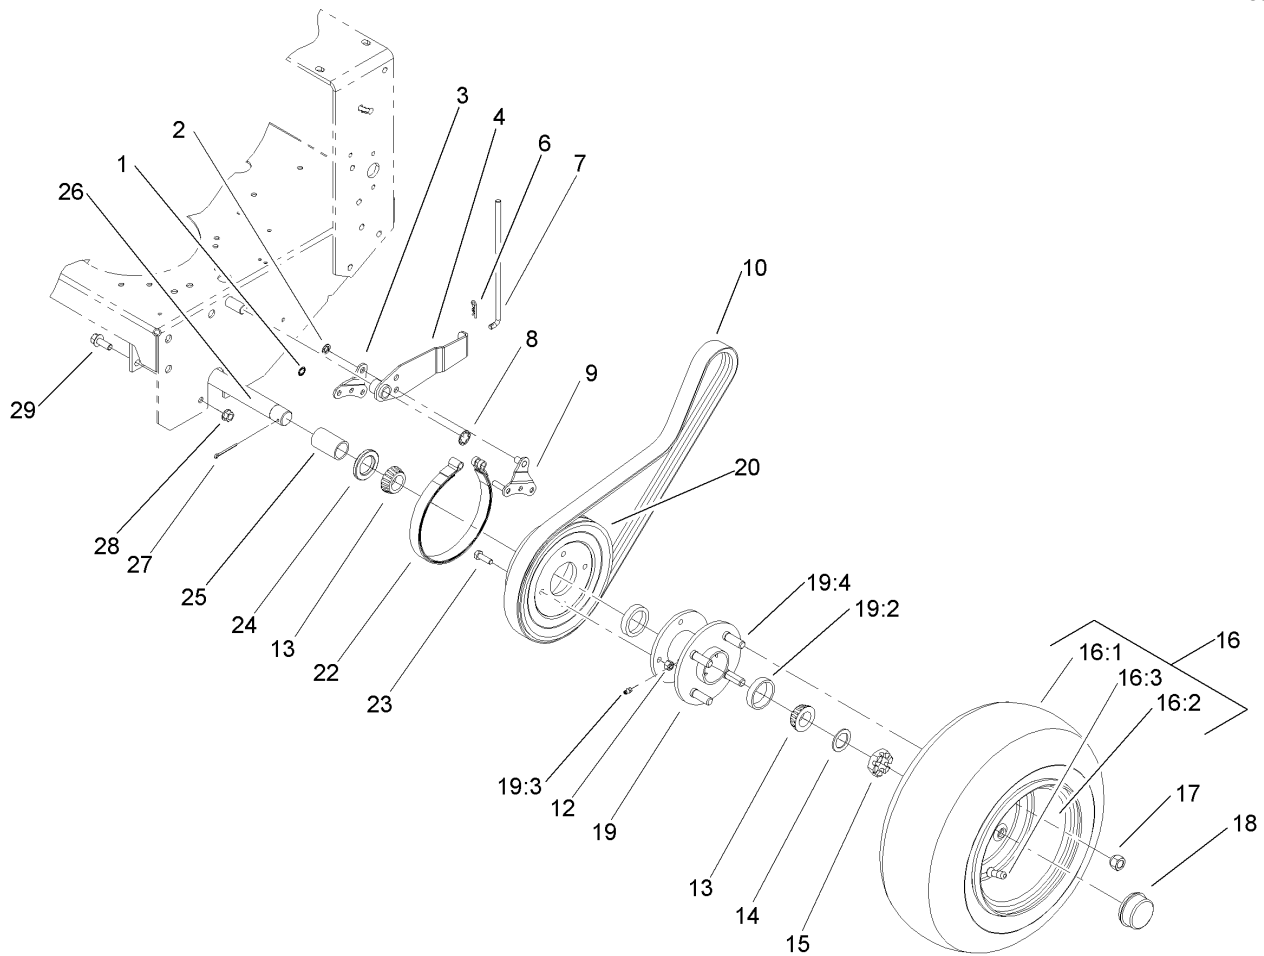

Wheel Drive and Brake Assembly


Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	106-8792	2	Plate-Link, Brake
4	106-8779-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	51-4580	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	51-4290	2	V-Belt
12	3296-29	8	Nut-Lock, NI
13	254-94	4	Bearing-Cone, Tapered
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	106-0892	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	106-0893	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	1-413333	2	Hub/wheel ASM
19:2	254-72	2	Bearing-Cup, Tapered
19:3	302-19	1	Fitting-Grease
19:4	1-633926	4	Stud-Wheel
20	106-5544	2	Pulley-Wheel

Ref	Part No.	Qty.	Description
22	1-323262	2	Band-Brake
23	322-5	8	Screw-HH
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	104-1196-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

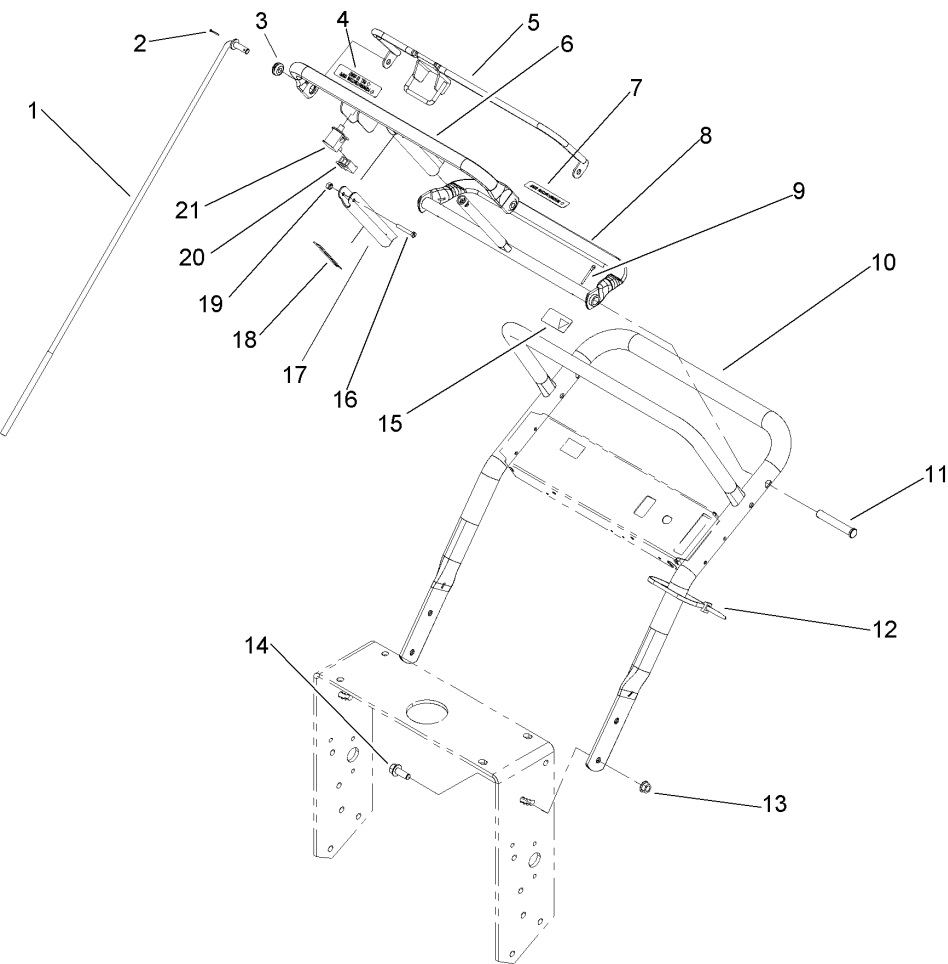


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	105-4677	2	Rod-Control				
2	3272-4	2	Pin-Cotter				
3	237-141	2	Grommet-Rubber				
4	82-2290	1	Decal				
5	82-7680-03	1	Bail ASM				
6	82-7690-03	1	Bar-Control				
7	82-2280	1	Decal				
8	106-5477-03	1	Control Pivot ASM				
9	3272-11	2	Pin-Cotter				
10	105-3158-03	1	Upper Handle ASM				
11	283-55	2	Pin-Clevis				
12	3290-378	1	Tie-Cable				
13	32128-21	4	Nut-HF				
14	3234-11	4	Screw-HHF				
15	98-4387	1	Decal-Protection, Ear				
16	32105-1	1	Screw-SHH				
17	51-4850-03	1	Lever-Brake, Parking				
18	52-2010	1	Decal-Lever, Parking				
19	3296-2	1	Nut-Lock				
20	218-595	1	Connector-Body				
21	82-2190	1	Switch-Bail				

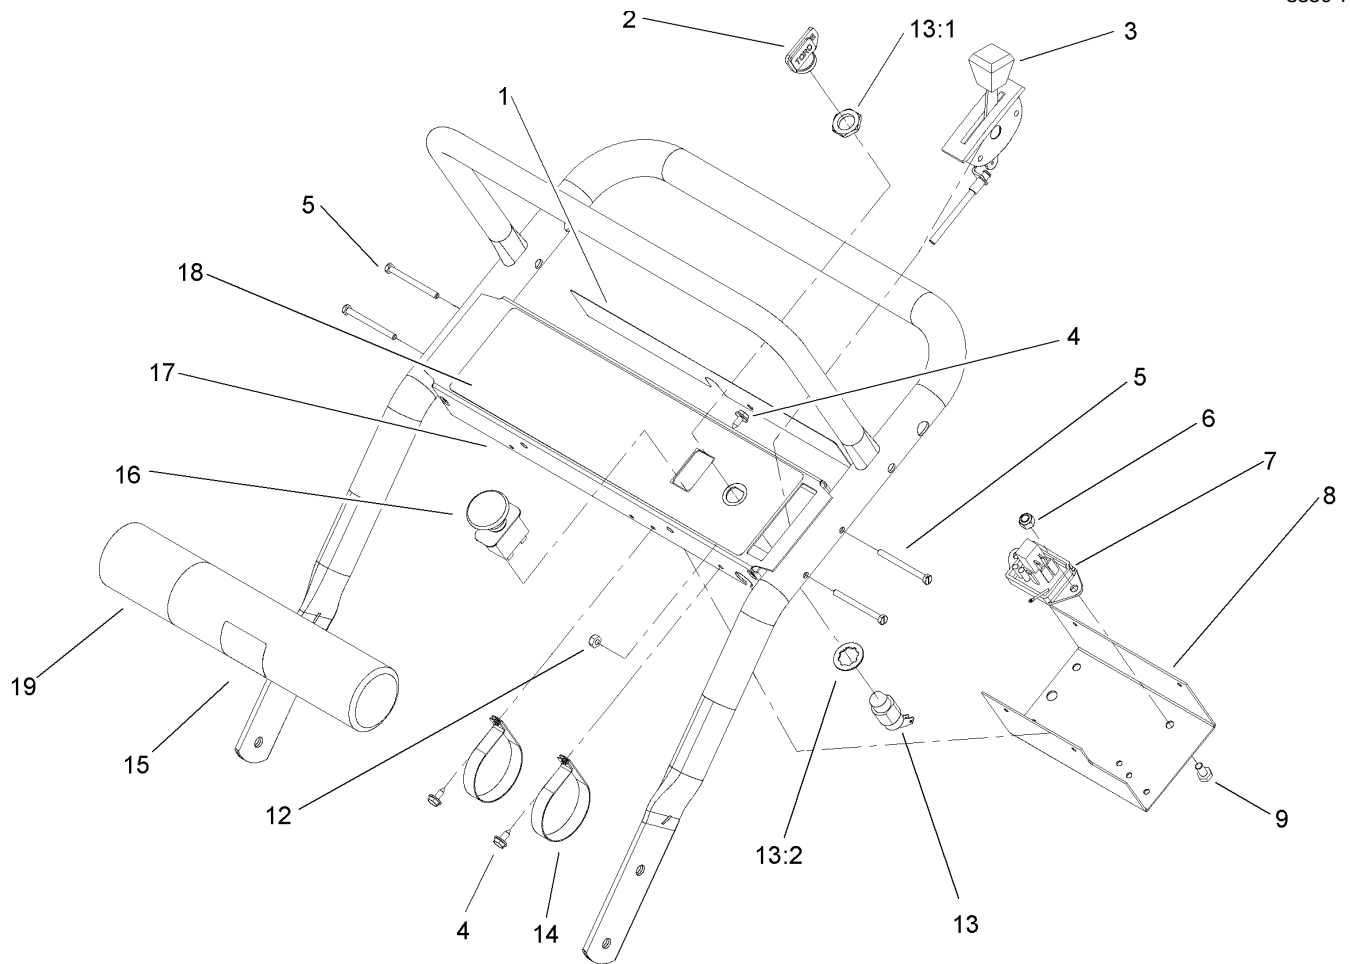


Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	105-0884	1	Decal-Danger				
2	63-8360	1	Key-Ignition				
3	107-4101	1	Cable-Throttle				
4	32104-76	4	Screw				
5	32105-14	4	Screw-SHH				
6	3296-42	1	Nut-Lock, NI				
7	104-8141	1	Module-Delay				
8	93-1187-03	1	Panel-Bottom				
9	321-2	1	Screw-HH				
12	3296-2	4	Nut-Lock				
13	29-5560	1	Switch-On/off				
13:1	218-461	1	Nut-HH				
13:2	3254-5	1	Washer-Tooth				
14	2412-120	2	R-Clamp				
15	104-7050	1	Housing-Manual				
16	104-8140	1	Switch-PTO				
17	104-8177-03	1	Panel-Control				
18	106-5499	1	Decal-Control Panel				
19	104-7048	1	Cap-Housing				

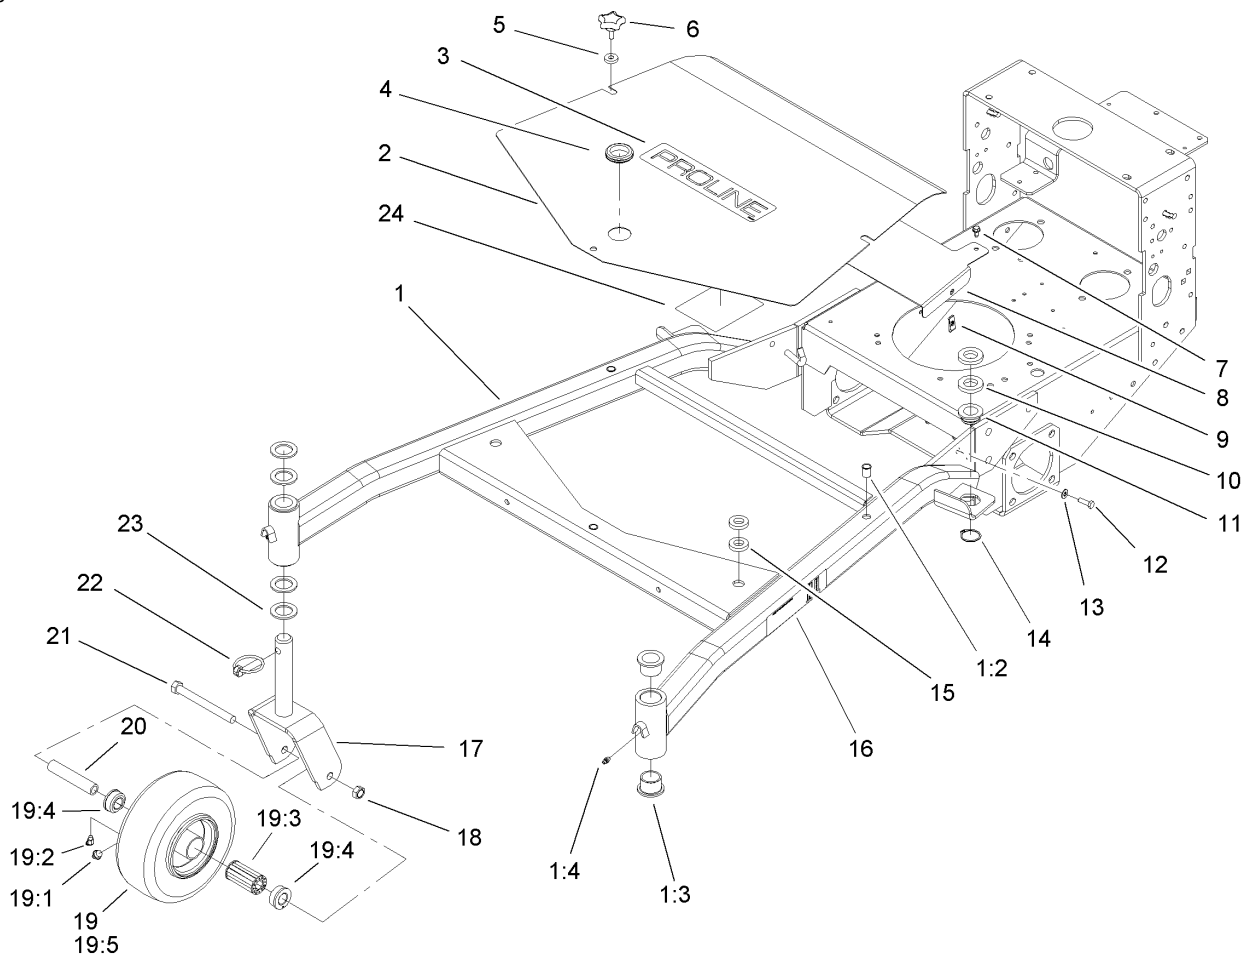


Carrier Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0708	1	Carrier Frame ASM	19:3	83-4740	1	Bearing
1:2	32148-9	3	Insert-Nut	19:4	62-5580	2	Bearing-Outside
1:3	94-1291	4	Bushing	19:5	100-6452	1	Tire-Tubeless
1:4	302-5	2	Fitting-Grease	20	100-6453	2	Bushing-Spanner
2	106-3360-01	1	Cover-Frame, Carrier	21	325-19	2	Screw-HH
3	106-0719	1	Decal	22	283-71	2	Pin-Lynch
4	240-3	1	Grommet-Rubber	23	3-6781	8	Washer-Thrust
5	106-0565	3	Washer-Rubber	24	106-5503	1	Decal-Service, Hydro Tbar
6	106-0887	3	Knob	24	106-5505	1	Decal-Service, Gear Tbar
7	12-3270	2	Screw	24	106-5511	1	Decal-Service, Gear Pistol Grip
8	106-3361-01	1	Shield-Heat	24	106-5513	1	Decal-Service, Hydro Pistol Grip
9	3290-199	2	Nut-Speed				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	321-5	2	Screw-HH				
13	3256-22	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	105-0842	4	Spacer				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock, Side				
19	100-6451	2	Castor Wheel ASM				
19:1	232-27	1	Stem-Valve				
19:2	302-11	1	Fitting-Lube, 45 DEG				

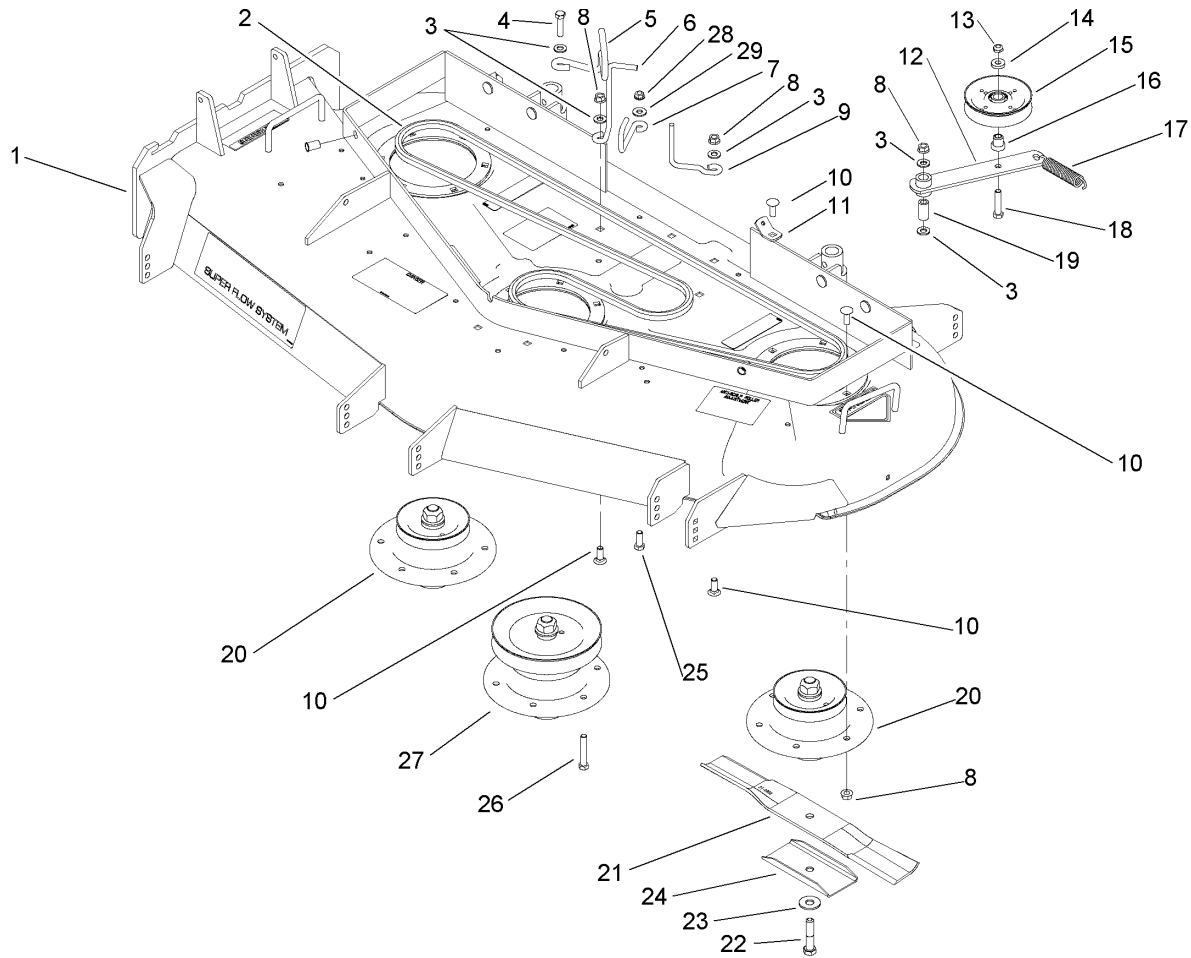


Spindle, Pulley and Belt Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0619	1	Deck ASM	25	323-6	1	Screw-HH
2	104-6397	1	V-Belt	26	323-11	1	Screw-HH
3	3256-24	5	Washer-Flat	27	106-0785	1	Spindle Housing ASM
4	323-8	1	Screw-HH	28	32128-25	1	Nut-HF
5	105-0850	1	Guide-Belt	29	3256-3	1	Washer-Flat
6	98-5980	1	Guide-Belt				
7	104-6396	1	Guide-Belt				
8	32128-21	20	Nut-HF				
9	52-4780	1	Rod-Belt				
10	3231-22	18	Screw-CARR				
11	104-6374	1	Plate-Spring				
12	104-6375	1	Idler Arm ASM				
13	3296-5	1	Nut-Lock				
14	7-0081	1	Washer-Flat				
15	65-5940	1	Pulley-Idler				
16	104-6379	1	Bushing-Pulley				
17	51-3650	1	Spring-Extension				
18	3211-8	1	Screw-HH				
19	51-3640	1	Sleeve				
20	106-0787	2	Spindle Housing ASM				
21	27-0990	3	Blade				
22	44-2200	3	Screw-Blade				
23	3256-6	3	Washer-Flat				
24	92-9820	3	Stiffener-Blade				

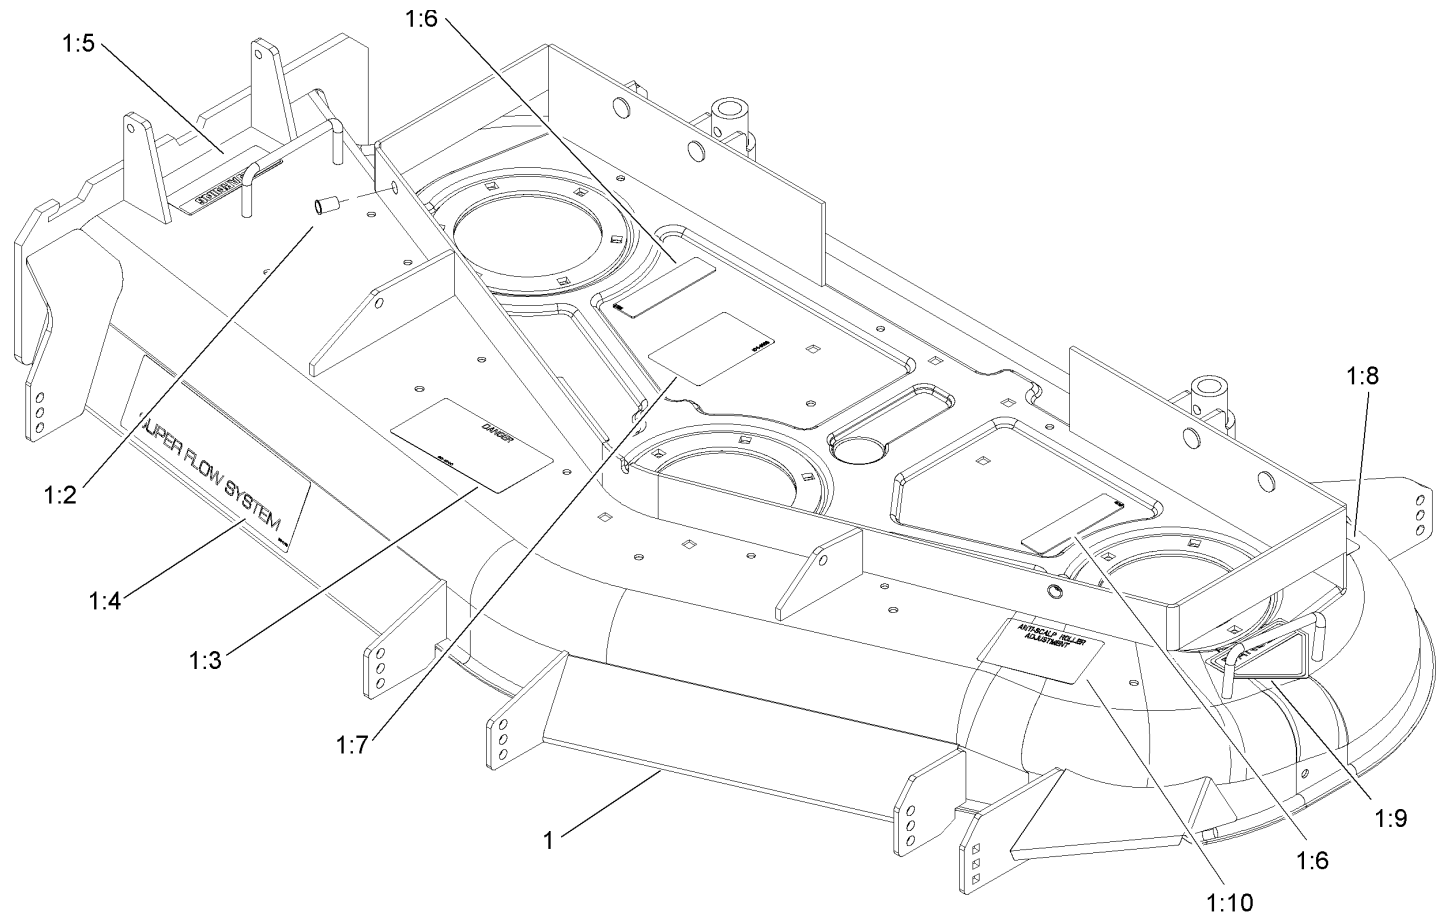

Deck Decal Assembly 106-0619


Ref	Part No.	Qty.	Description				
1		1	52in Deck ASM				
1:2	32148-10	2	Insert-Threaded				
1:3	66-1340	1	Decal-Danger				
1:4	106-0705	1	Decal				
1:5	104-8569	1	Decal-Warning				
1:6	67-5360	3	Decal-Danger				
1:7	104-8186	1	Decal-Routing, Belt				
1:8	68-8340	1	Decal-Torque				
1:9	43-8480	1	Decal-Danger				
1:10	106-5532	1	Decal-Scalp, Anti				

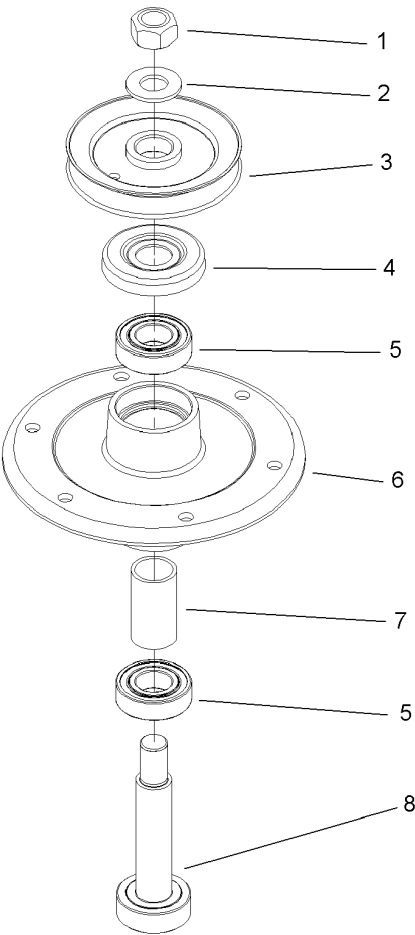

Outer Spindle Assembly 106-0787


Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1118	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0782	1	Shaft-Spindle				

PROTOTYPE

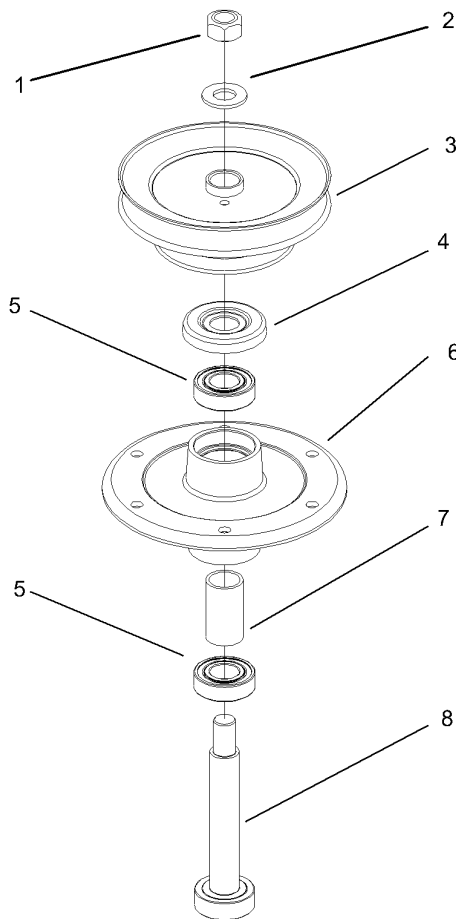


Spindle Assembly No. 106-0785

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1117	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0781	1	Shaft-Spindle				

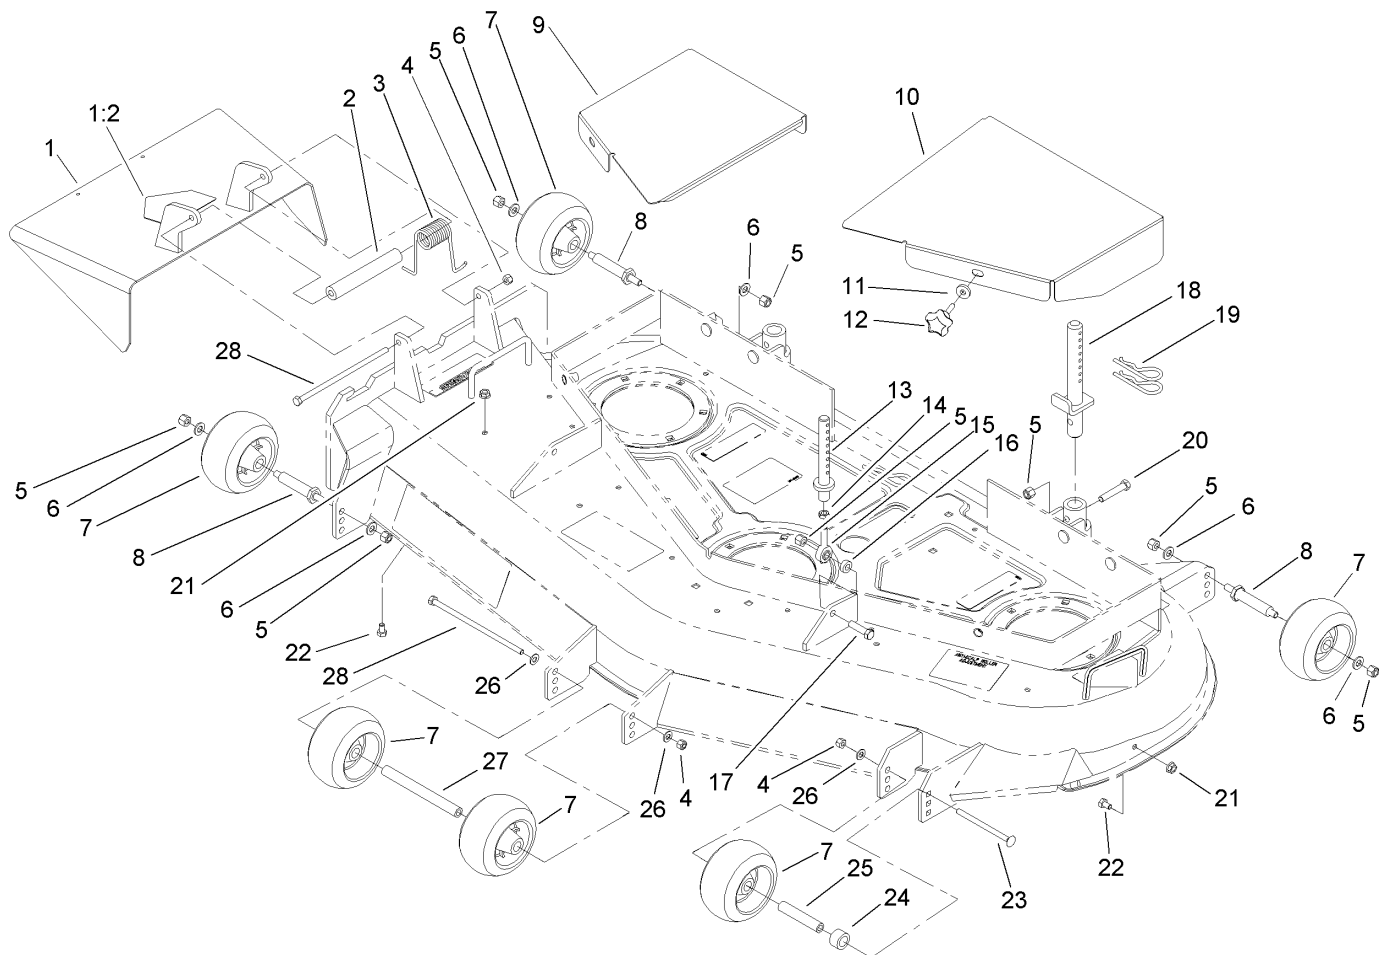


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-4623	1	Deflector ASM	24	106-0563	1	Spacer-Wheel
1:2	93-1122	1	Decal-Danger	25	106-0545	1	Bushing-Roller
2	105-4622	1	Spacer	26	3256-23	3	Washer-Flat
3	104-8554	1	Spring-Torsion	27	98-5967	1	Spacer-Wheel
4	3296-29	3	Nut-Lock, NI	28	322-50	2	Screw-HH
5	3296-39	10	Nut-Lock, NI				
6	3256-24	6	Washer-Flat				
7	68-2730	6	Wheel-Gage				
8	99-2842	3	Spacer				
9	106-3363-01	1	Cover-Belt, RH				
10	106-3362-01	1	Cover-Belt, LH				
11	106-0565	2	Washer-Rubber				
12	106-0887	2	Knob				
13	106-0684	2	Front Pin ASM				
14	3220-3	2	Nut-Jam				
15	1-613204	2	Balljoint				
16	104-1156	2	Spacer				
17	323-8	2	Screw-HH				
18	106-3365	2	Rear Pin ASM				
19	3290-256	6	Pin-Hair				
20	323-10	2	Screw-HH				
21	32128-20	6	Nut-HF				
22	322-1	6	Screw-HH				
23	3230-30	1	Screw-CARR				

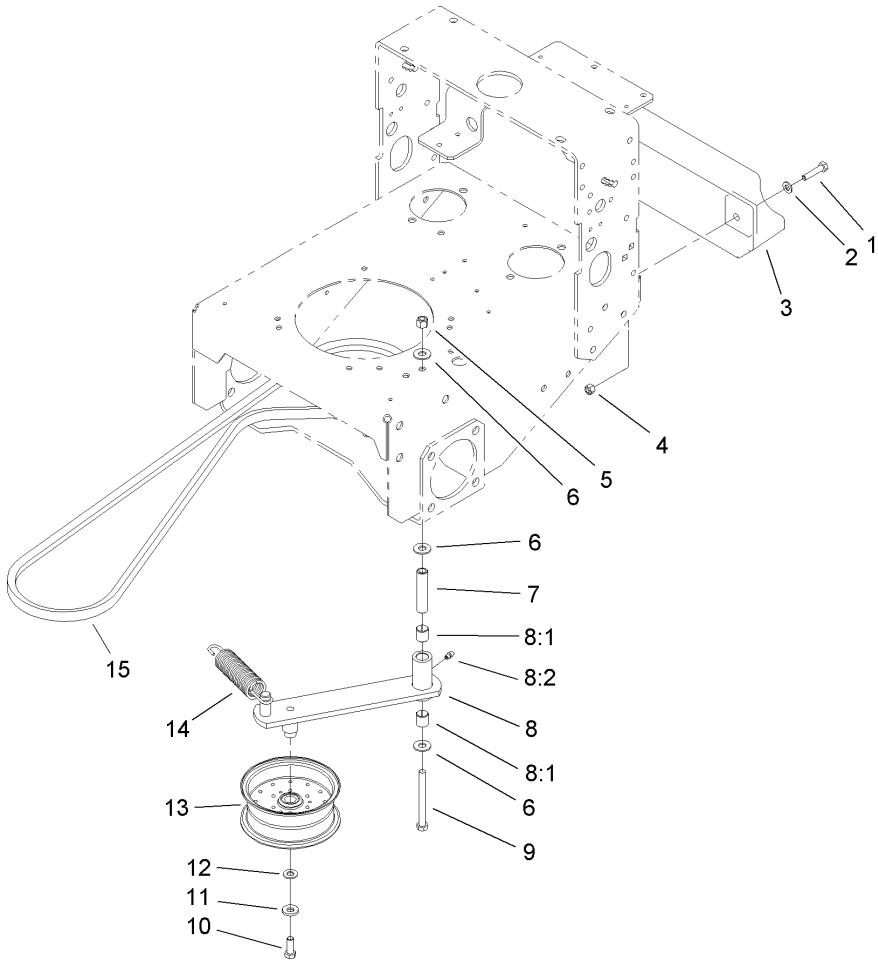


Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description				
1	322-7	2	Screw-HH				
2	3256-23	2	Washer-Flat				
3	105-3173-01	1	Weight-Rear				
4	3296-29	2	Nut-Lock, NI				
5	3296-39	1	Nut-Lock, NI				
6	52-2860	3	Washer				
7	104-6377	1	Tube-Idler				
8	106-0734	1	Idler Arm ASM				
8:1	1-513034	2	Sleeve-Bearing				
8:2	302-5	1	Fitting-Grease				
9	323-42	1	Screw-HH				
10	323-6	1	Screw-HH				
11	98-5975	1	Washer-Belleville				
12	3256-24	1	Washer-Flat				
13	1-413099	1	Pulley-Idler				
14	105-8443	1	Spring-Extension				
15	106-0632	1	V-Belt				

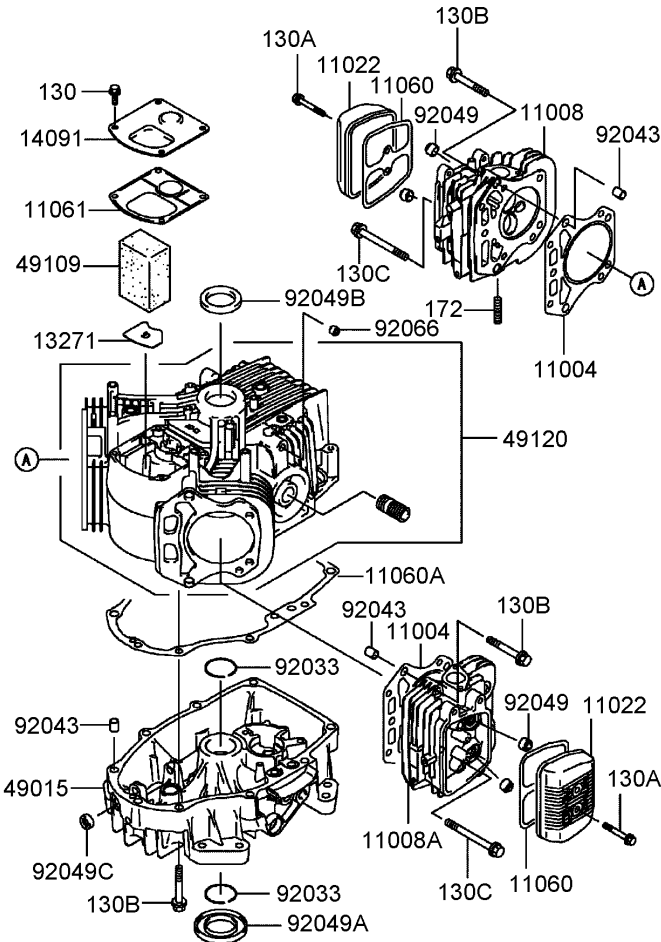


Cylinder/Crankcase Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
11004	11004-7010	2	Gasket-Head				
11008	11008-6043	1	Head-Comp-Cylinder,#1				
11008A	11008-7020	1	Head-Comp-Cylinder,#2				
11022	11022-7003	2	Case-Rocker				
11060	11060-7001	1	Gasket,rocker Case				
11060A	11060-7008	1	Gasket,crankcase Cover				
11061	11061-7001	1	Gasket,breather				
13271	13271-7016	1	Plate				
14091	14091-7006	1	Cover				
49015	49015-6253	1	Cover-Crankcase				
49109	49109-7002	1	Element-Breather				
49120	49120-7023	1	Crankcase-Comp				
92033	92033-7003	2	Ring-Snap				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil,rv2 6x11x10.2				
92049A	92049-7015	1	Seal-Oil,sd 35x62x8 L HS				
92049B	92049-7016	1	Seal-Oil,sd 35x48x8 R HS				
92049C	92049-7019	1	Seal-Oil,so 8x14x5 HS				
92066	92066-7002	1	Plug				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	17	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				

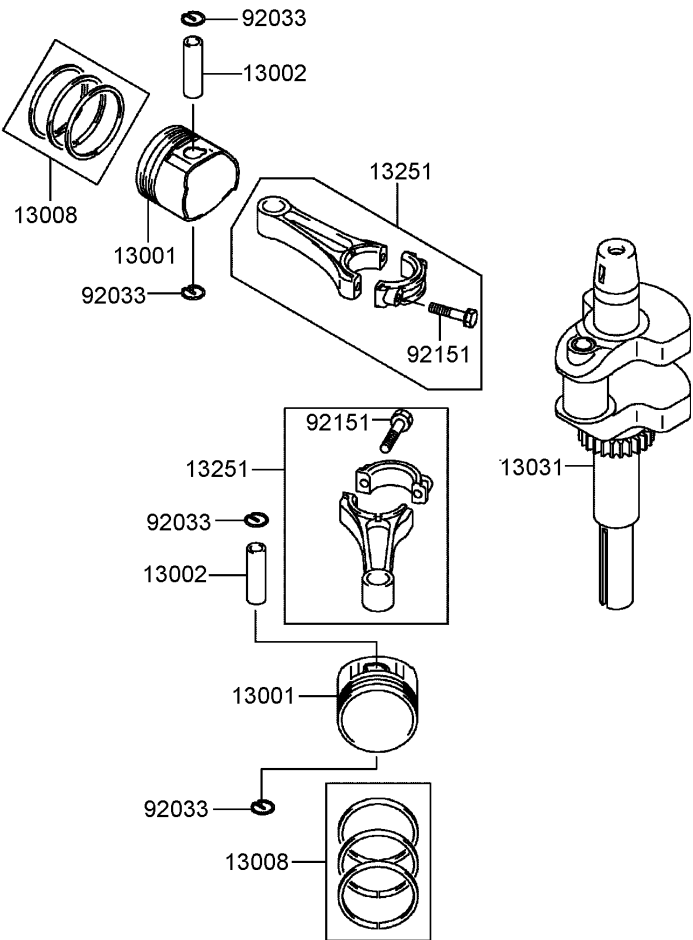


Piston/Crankshaft Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
13001	13001-7010	2	Piston-Engine				
13002	13002-7001	2	Pin-Piston				
13008	13008-6060	2	Ring-Set-Piston				
13031	13031-7036	1	Crankshaft-Comp				
13251	13251-7010	2	Rod-Assy-Connecting				
92033	92033-7005	4	Ring-Snap				
92151	92151-7017	4	Bolt,6x35				

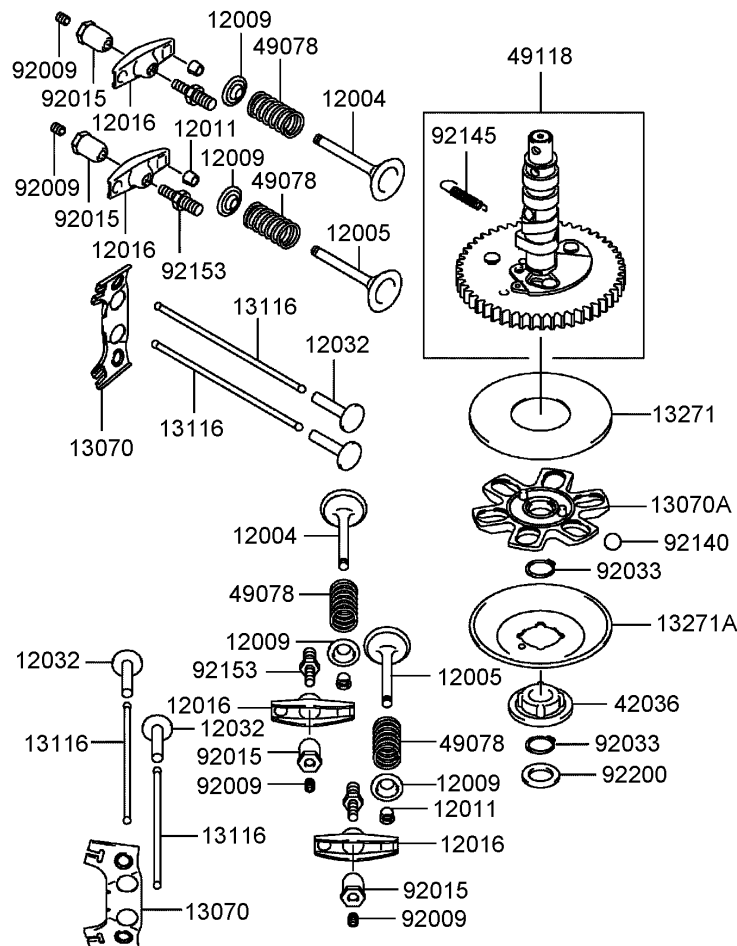


Valve and Camshaft Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
12004	12004-7003	2	Valve-Intake				
12005	12005-7003	2	Valve-Exhaust				
12009	12009-7001	4	Retainer-Valve Spring				
12011	12011-2056	8	Collet				
12016	12016-7001	4	Arm-Rocker				
12032	12032-7001	4	Tappet				
13070	13070-7001	2	Guide				
13070A	13070-7004	1	Guide				
13116	13116-2057	4	Rod-Push				
13271	13271-7007	1	Plate				
13271A	13271-7021	1	Plate,governor				
42036	42036-7009	1	Sleeve				
49078	49078-7001	4	Spring-Engine Valve				
49118	49118-7004	1	Camshaft-Comp				
92009	92009-2341	4	Screw				
92015	92015-2253	4	Nut				
92033	92033-7001	2	Ring-Snap				
92140	92140-7002	6	Ball				
92145	92145-7001	1	Spring				
92153	92153-7019	4	Bolt				
92200	92200-7001	1	Washer				

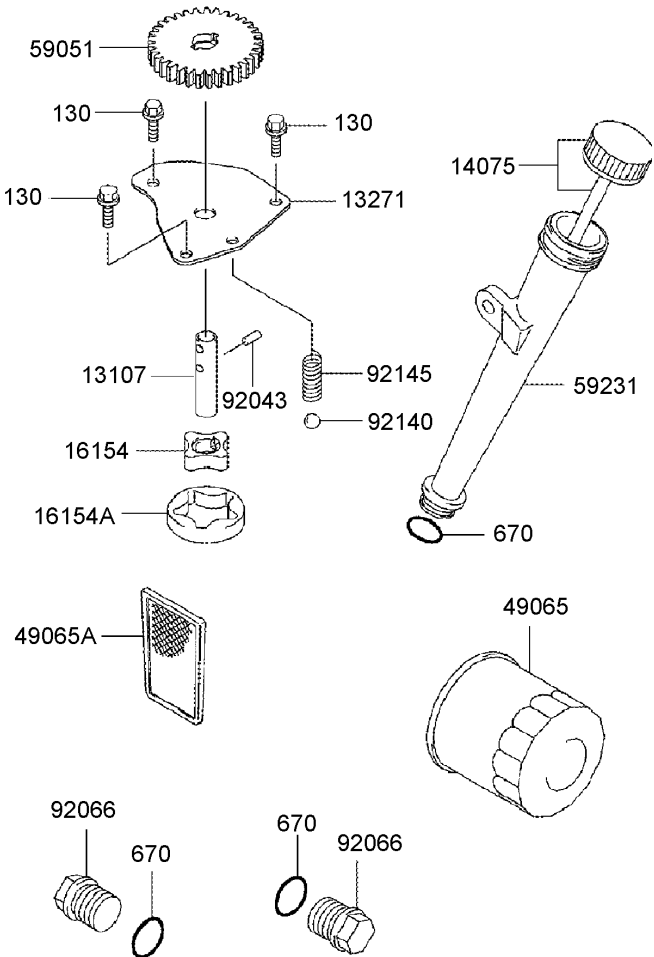


Lubrication Equipment Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
13107	13107-7009	1	Shaft				
13271	13271-7017	1	Plate				
14075	14075-7009	1	Cap-Assy				
16154	16154-2053	1	Rotor-Pump,in				
16154A	16154-2054	1	Rotor-Pump,out				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7004	1	Filter-Oil				
59051	59051-7011	1	Gear-Spur				
59231	59231-7005	1	Filler				
92043	92043-7003	2	Pin				
92066	92066-7003	2	Plug				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	3	O Ring,16mm				

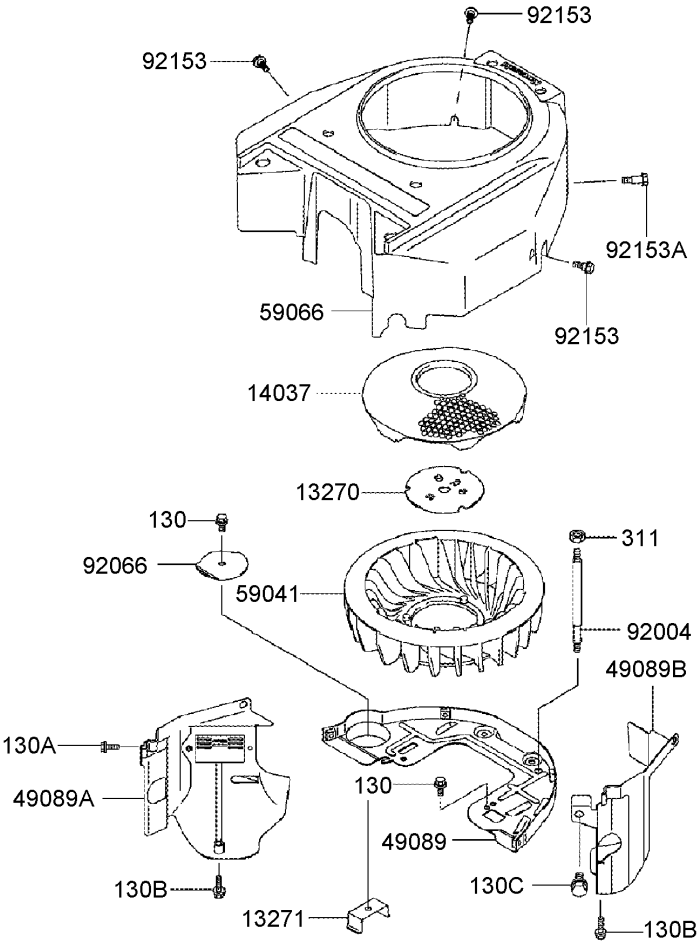


Cooling Equipment Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸13271	13271-7002	1	Plate				
❸14037	14037-7021-9H	1	Screen				
❸49089	49089-7032	1	Shroud-Engine				
❸49089A	49089-7042	1	Shroud-Engine				
❸49089B	49089-7043	1	Shroud-Engine				
❸59041	59041-7010	1	Fan				
❸59066	59066-7024	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92066	92066-7004	1	Plug				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸130	130B0612	3	Bolt-Flanged				
❸130A	130B0616	2	Bolt-Flanged				
❸130B	130B0625	2	Bolt-Flanged				
❸130C	130B0816	1	Bolt-Flanged				
❸311	311B0600	2	Nut-Hex				

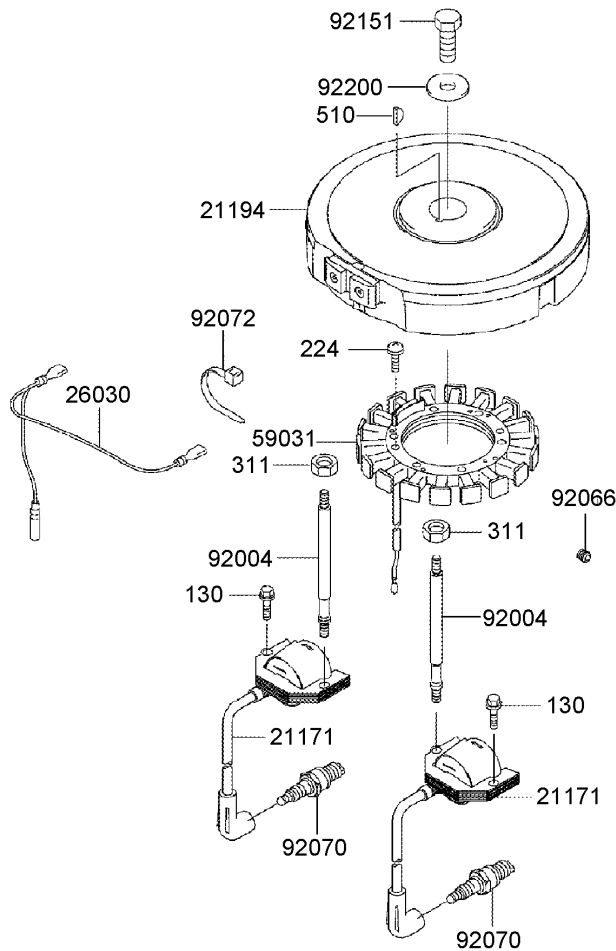


Electric Equipment Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
②21171	21171-7013	2	Coil-Assy-Ignition				
②21194	21194-7007	1	Flywheel-Comp				
②26030	26030-7001	1	Harness				
②59031	59031-7002	1	Coil-Charging				
②92004	92004-7009	2	Stud				
②92066	92066-7002	1	Plug				
②92070	92070-7003	2	Plug-Spark,rcj8y,solid				
②92072	92072-7003	2	Band				
②92151	92151-2097	1	Bolt,12x30				
②92200	92200-7002	1	Washer				
②130	130B0620	2	Bolt-Flanged				
②224	224B0520	4	Screw-Pan-Wp-Cros				
②311	311B0600	2	Nut-Hex				
②510	510A5100	1	Key-Woodruff				

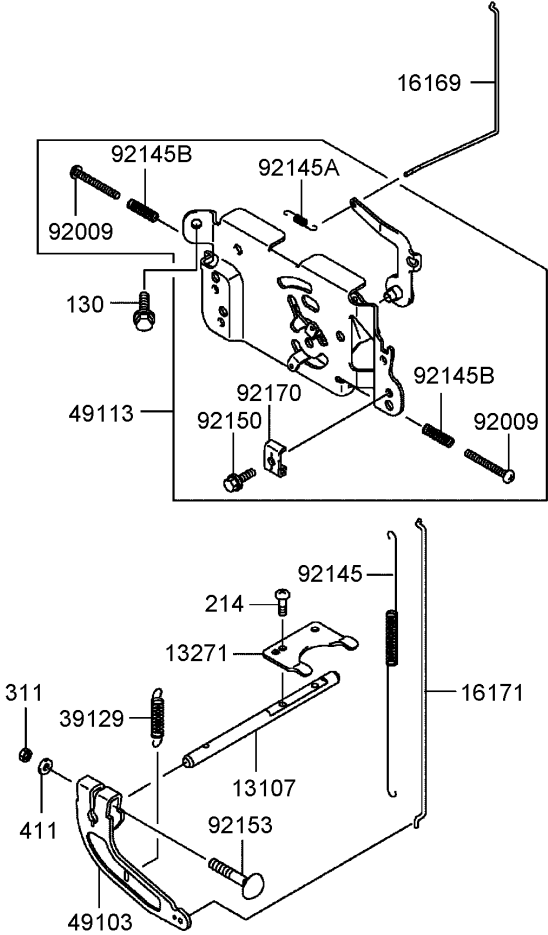

Control Equipment Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
13107	13107-7010	1	Shaft				
13271	13271-7018	1	Plate				
16169	16169-7010	1	Link-Choke				
16171	16171-7001	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7004	1	Arm-Governor				
49113	49113-7027	1	Panel-Control, Comp				
92009	92009-7007	2	Screw,4x35				
92145	92145-7003	1	Spring				
92145A	92145-7004	1	Spring				
92145B	92145-7005	2	Spring				
92150	92150-2182	1	Bolt,5x18				
92153	92153-7005	1	Bolt,6x35				
92170	92170-7001	1	Clamp				
130	130B0612	2	Bolt-Flanged				
214	214B0408	2	Screw-Pan				
311	311B0600	1	Nut-Hex				
411	411b0600	1	Washer-Plain				

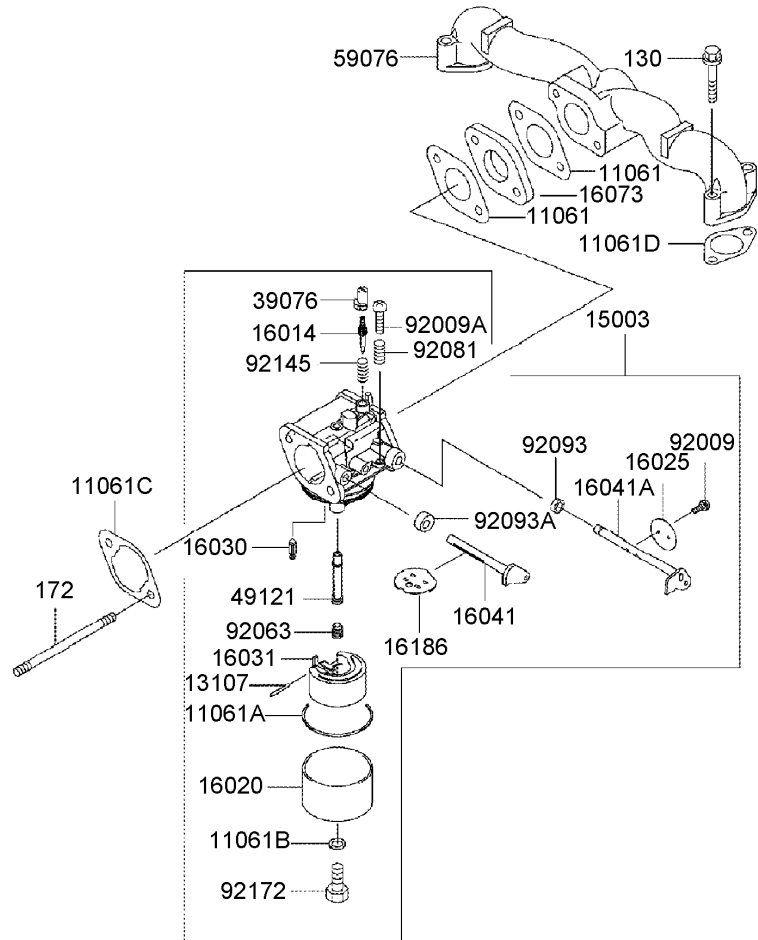


Carburetor Assembly

Kawasaki FH541V-AS30


Ref	Part No.	Qty.	Description
11061	11061-7004	2	Gasket,insulator
11061A	11061-7009	1	Gasket,chamber
11061B	11061-7010	1	Gasket,screw
11061C	11061-7018	1	Gasket,air Cleaner
11061D	11061-7019	2	Gasket
13107	13107-7018	1	Shaft
15003	15003-7107	1	Carburetor ASM
16014	16014-7007	1	Screw-Pilot Air
16020	16020-7003	1	Chamber-Float
16025	16025-7006	1	Valve-Throttle
16030	16030-7003	1	Valve-Float
16031	16031-7002	1	Float
16041	16041-7016	1	Shaft-Carburetor,choke
16041A	16041-7018	1	Shaft-Carburetor,throttle
16073	16073-7007	1	Insulator
16186	16186-7004	1	Valve-Assy-Choke
39076	39076-7001	1	Limiter
49121	49121-7010	1	Nozzle-Main
59076	59076-7001	1	Manifold-Intake
92009	92009-2083	2	Screw
92009A	92009-2349	1	Screw
92063	92063-7065	1	Jet-Main, #112
92081	92081-2234	1	Spring
92093	92093-2100	1	Seal

Ref	Part No.	Qty.	Description
92093A	92093-7003	1	Seal
92145	92145-7015	1	Spring
92172	92172-7002	1	Screw
130	130B0635	4	Bolt-Flanged
172	172G0690	2	Bolt-Stud

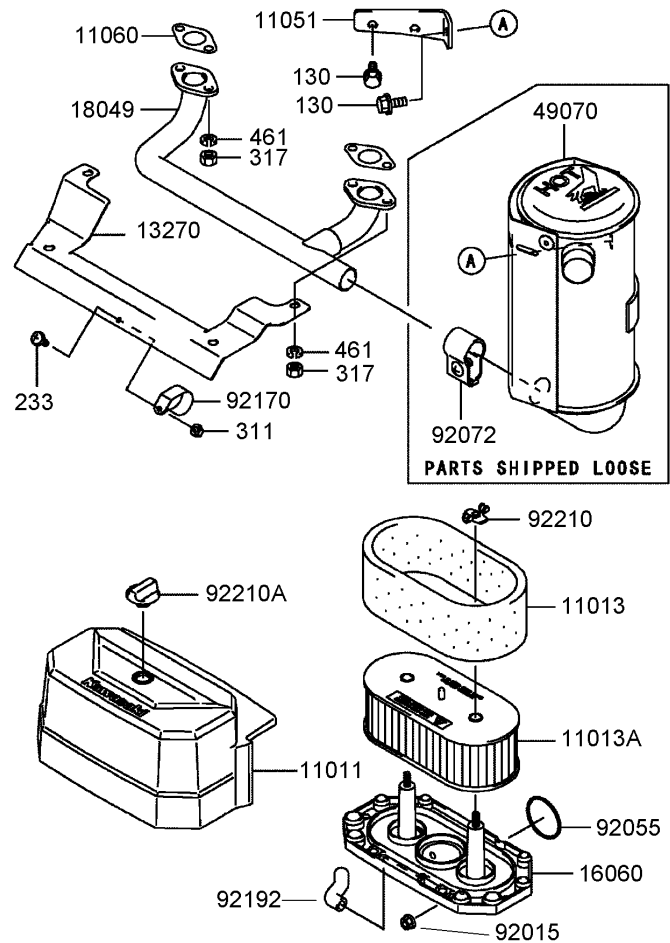


Muffler and Air Filter Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
❸11011	11011-7036	1	Case-Filter, Air				
❸11013	11013-7025	1	Element-Filter, Air				
❸11013A	11013-7031	1	Element-Filter, Air				
❸11051	11051-7005-9H	1	Bracket				
❸11060	11060-7021	2	Gasket,muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7015	1	Muffler-Comp				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	O-Ring				
❸92072	92072-7008	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸130	130B0816	2	Bolt-Flanged				
❸233	233B0416	1	Screw-Pan-Wp+-				
❸311	311B0400	1	Nut-Hex				
❸317	317R0800	4	Nut-Hex-Small				
❸461	461F0800	4	Washer-Spring				

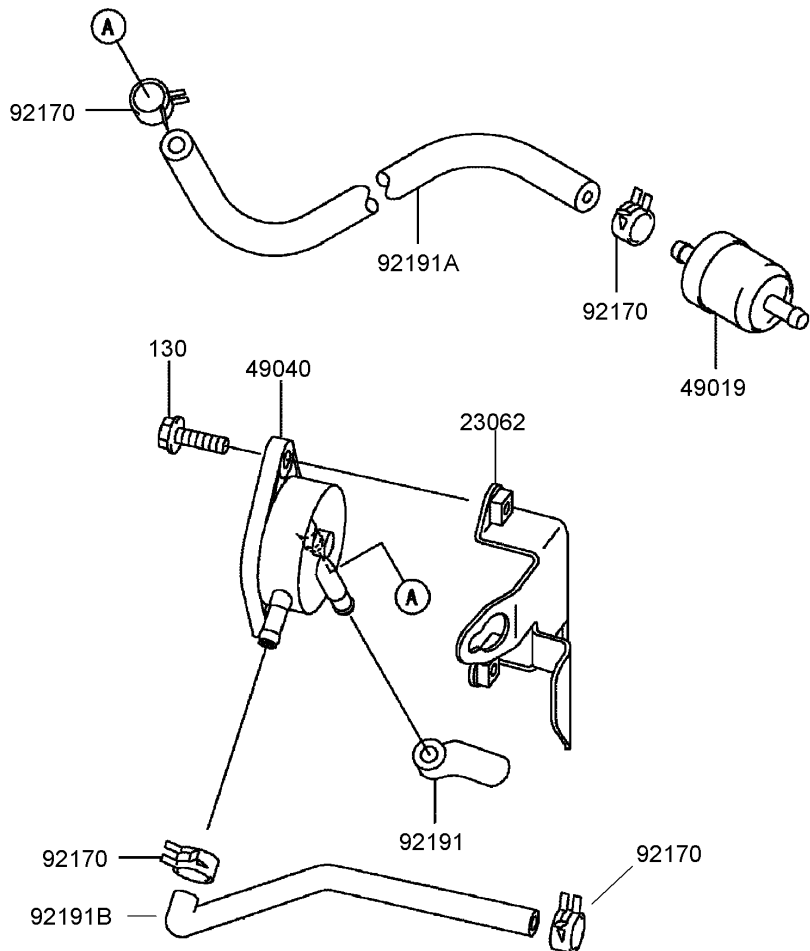



Fuel Tank/Fuel Valve Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
③ 23062	23062-7004-9H	1	Bracket-Comp				
③ 49019	49019-7001	1	Filter-Fuel				
③ 49040	49040-7001	1	Pump-Fuel				
③ 92170	92170-2088	4	Clamp				
③ 92191	92191-7002	1	Tube				
③ 92191A	92191-7003	1	Tube,6.35x12.7x160				
③ 92191B	92191-7004	1	Tube				
③ 130	130B0620	2	Bolt-Flanged				

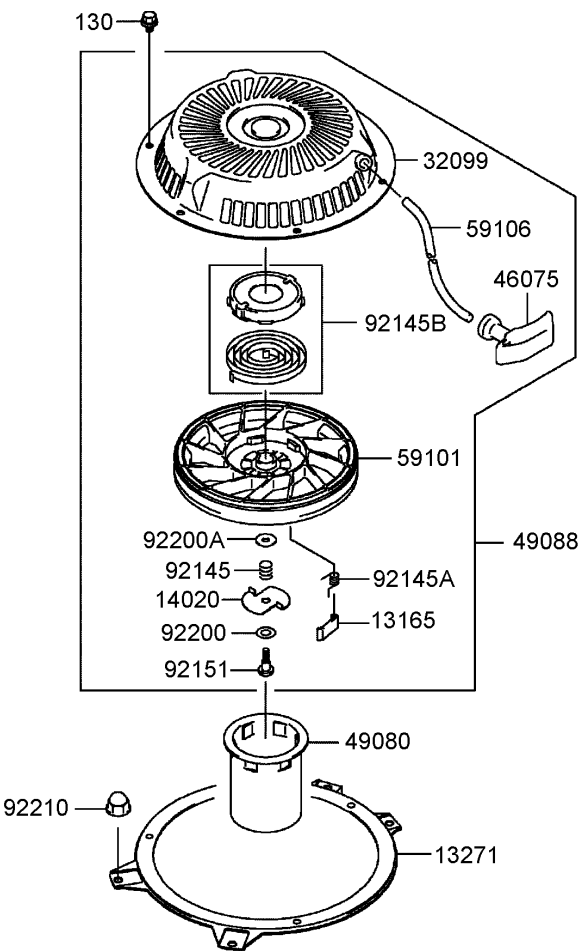

Starter Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
❸ 13165	13165-7001	2	Pawl-Starter, Recoil				
❸ 13271	13271-7003-9H	1	Plate				
❸ 14020	14020-7001	1	Retainer				
❸ 32099	32099-7002	1	Case-Starter, Recoil				
❸ 46075	46075-7001	1	Grip-Recoil, Starter				
❸ 49080	49080-7001	1	Pulley-Starting				
❸ 49088	49088-7013	1	Starter-Recoil				
❸ 59101	59101-7001	1	Reel-Recoil				
❸ 59106	59106-7001	1	Rope				
❸ 92145	92145-7006	1	Spring				
❸ 92145A	92145-7007	2	Spring				
❸ 92145B	92145-7008	1	Spring				
❸ 92151	92151-7008	1	Bolt				
❸ 92200	92200-7004	1	Washer				
❸ 92200A	92200-7005	1	Washer				
❸ 92210	92210-0003	4	Nut				
❸ 130	130B0608	3	Bolt-Flanged				

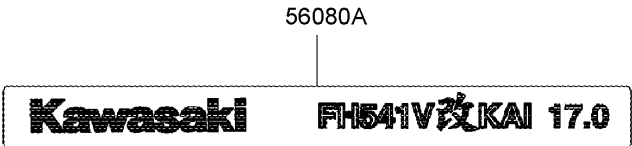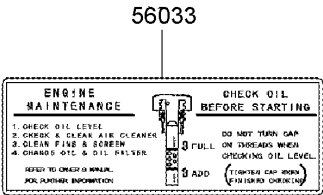

Decal Assembly
Kawasaki FH541V-AS30

Ref	Part No.	Qty.	Description				
56033	56033-7002	1	Label-Manual				
56070	56070-7001	1	Label-Warning				
56080	56080-2077	1	Label-Brand				
56080A	56080-7023	1	Label-Brand				

PROTOTYPE

NOTES

PROTOTYPE

NOTES

PROTOTYPE

NOTES

PROTOTYPE



PROTOTYPE