



Mid-Size ProLine, Pistol Grip, Hydro Drive 15 HP with 36in Side Discharge Mower

Model No. 30527 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	 3	Oil Pan / Lubrication Assembly Kohler CV15T 41624	 20
Transmission and Drive Pulley Assembly	 4	Head / Valve / Breather Assembly Kohler CV15T 41624	 21
Linkage Assembly	 5	Ignition / Electrical Assembly Kohler CV15T 41624	 22
Wheel Drive Assembly	 6	Blower Housing and Baffle Assembly Kohler CV15T 41624	 23
Hydraulic Assembly	 7	Starting System Assembly Kohler CV15T 41624	 24
Hydraulic Pump Assembly No. 106-5490	 8	Fuel System Assembly Kohler CV15T 41624	 25
Lower Control Assembly	 9	Engine Control Assembly Kohler CV15T 41624	 26
Upper Handle Assembly	 10	Air Intake / Filtration Assembly Kohler CV15T 41624	 27
Electrical Assembly	 12	Exhaust Assembly Kohler CV15T 41624	 28
Deck Assembly	 13	Attachments and Accessories List	 29
Deflector Assembly No. 107-4140	 14		
Front Caster and Blade Brake Assembly	 15		
Spindle, Blade and Belt Assembly	 17		
Crankshaft Assembly Kohler CV15T 41624	 18		
Crankcase Assembly Kohler CV15T 41624	 19		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power take off
HHE. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll over protection system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HS. hex	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head
HYD. hydraulic	WH. wing head


Footnotes

- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain Parts From Your Local Kohler Dealer | |

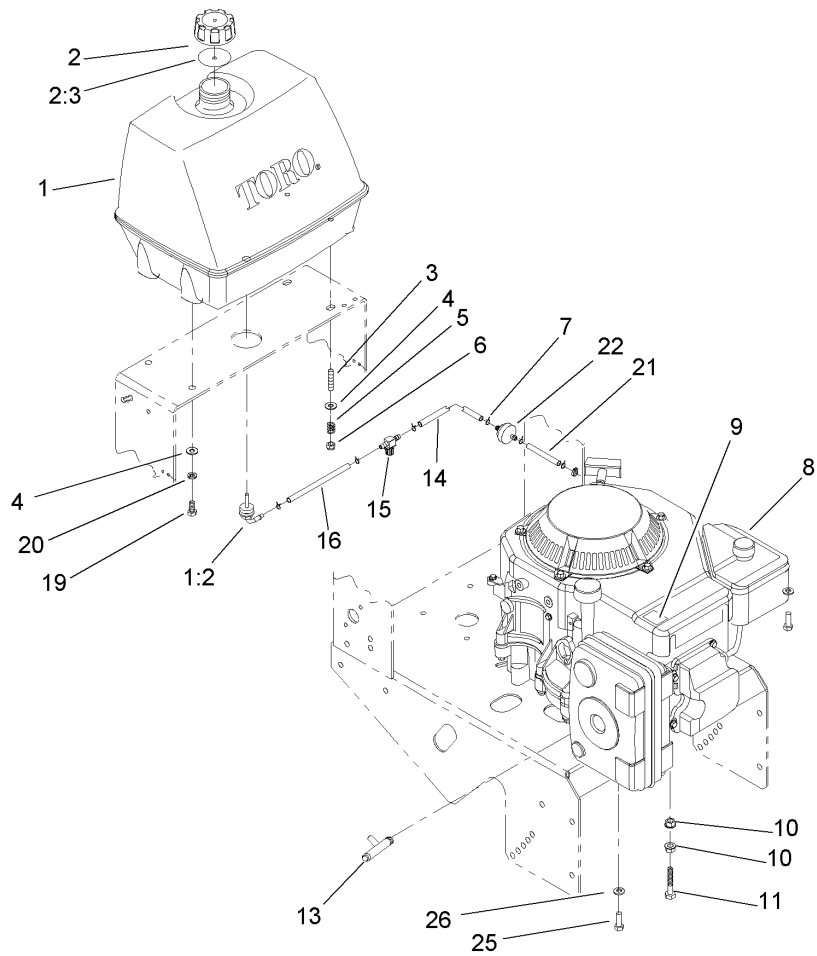

Engine and Fuel System Assembly


Ref	Part No.	Qty.	Description				
1	106-0730	1	Fuel Tank ASM				
1:2	103-2605	1	Fitting-Fuel, Bulkhead				
2	88-3980	1	Gas Cap ASM				
2:3	88-4010	1	Gasket-Cap, Gas				
3	1-633023	2	Stud				
4	3256-23	4	Washer-Flat				
5	1-633349	2	Spring-Tank, Fuel				
6	3296-47	2	Nut-Lock, NI				
7	1-303077	6	Clamp				
8		1	Engine-Kohler, Cv15t-41624				
9	106-0699	1	Decal-Warning, Hot Surfaces				
10	3290-357	2	Nut-HHF				
11	323-13	1	Screw-HH				
13	103-1965	1	Valve-Drain, Oil				
14	1-603776	1	Hose-Line, Fuel				
15	1-603770	1	Valve-Fuel				
16	1-603955	1	Hose-Fuel				
19	322-3	2	Screw-HH				
20	1-805005	2	Washer-Lock				
21	47-2983	1	Hose-Fuel				
22	1-303197	1	Filter-Fuel				
25	33114-025	4	Screw-HH				
26	1-303334	4	Washer-Spring				

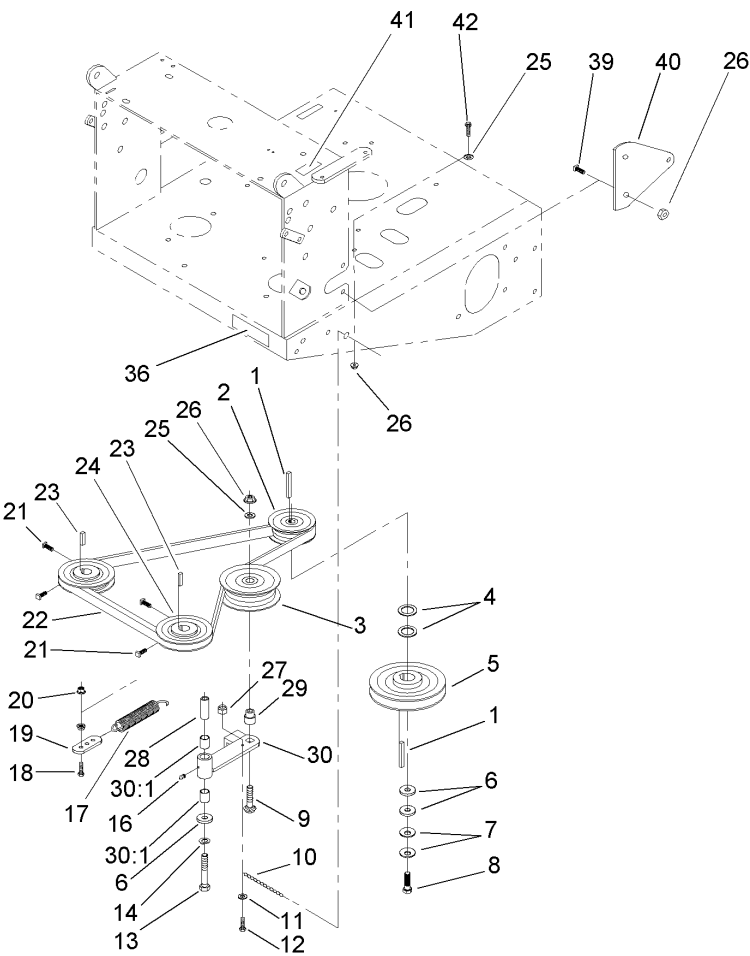

Transmission and Drive Pulley Assembly

Ref	Part No.	Qty.	Description
1	1-807259	2	Key
2	1-653035	1	Pulley
3	1-603843	1	Pulley-Idler
4	1-523157	2	Washer-Spacer
5	103-1668	1	Sheave
6	1-373034	3	Washer
7	1-603610	2	Washer-Spring
8	3212-6	1	Screw-HH
9	3231-29	1	Screw-CARR
10	1-323365	1	Chain-Link, Twist
11	3256-14	1	Washer-Flat
12	1-809069	1	Screw-Cap Socket Head
13	323-12	1	Screw-HH
14	3253-5	1	Washer-Lock
16	302-19	1	Fitting-Grease
17	1-603402	1	Spring-Extension
18	322-5	1	Screw-HH
19	1-603801	1	Anchor-Spring
20	32128-20	6	Nut-HF
21	1-803050	4	Screw-Set
22	106-2740	1	V-Belt-Drive, Hydro
23	1-807272	2	Key
24	1-413010	2	Sheave W/hub
25	3256-24	2	Washer-Flat


Ref	Part No.	Qty.	Description
26	3290-357	7	Nut-HHF
27	3296-2	1	Nut-Lock
28	1-603044	1	Bushing
29	1-603496	1	Bushing-Idler
30	1-602521	1	Idler Arm ASM
30:1	103-4681	2	Sleeve-Bearing
36	98-0776	1	Decal-Caution
39	323-4	2	Screw-HH
40	1-413497	1	Bellcrank
41	95-2814	1	Decal-Shut Off, Fuel
42	323-7	1	Screw-HH

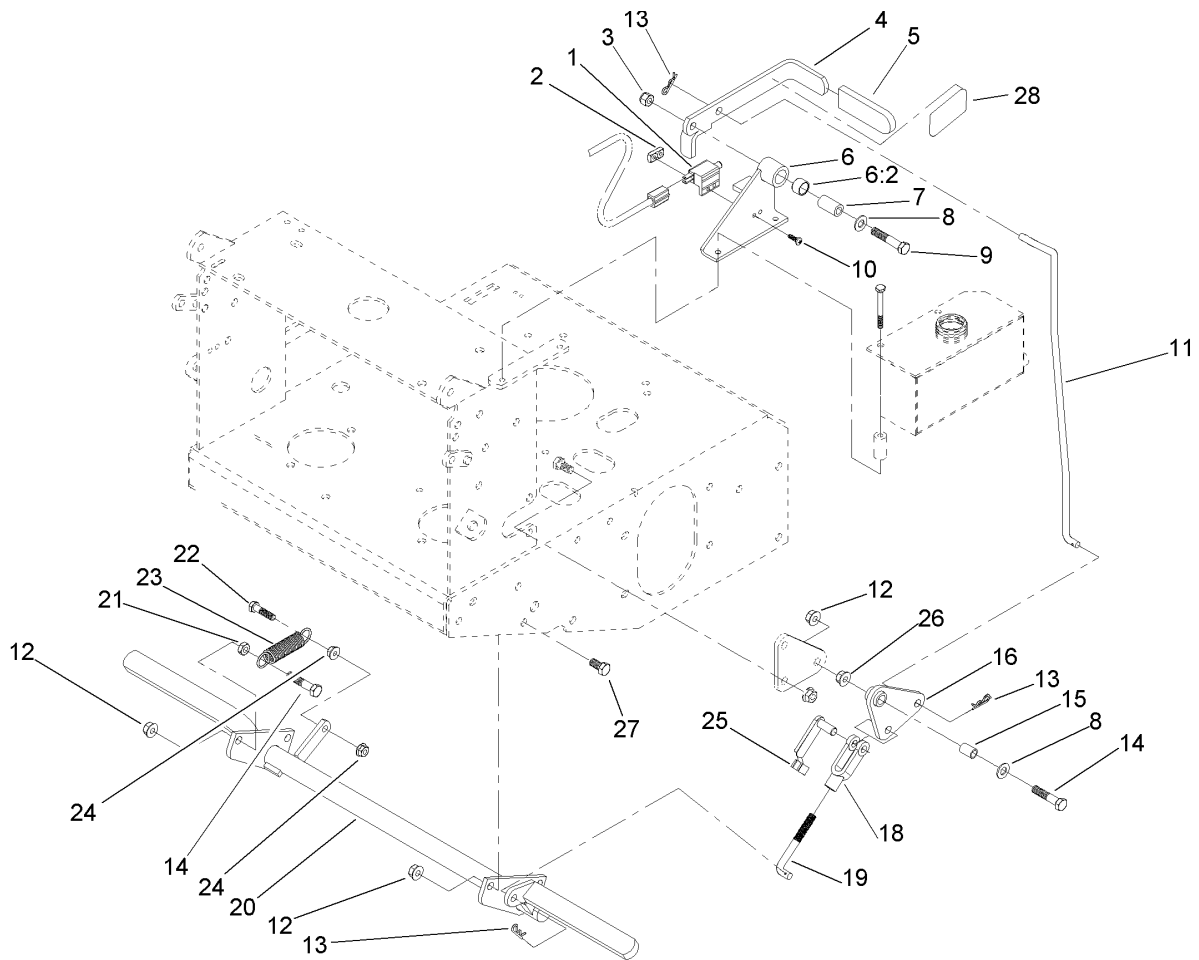

Linkage Assembly

Ref	Part No.	Qty.	Description
1	1-513051	1	Switch-Open, Normally
2	1-633181	1	Plate-Tapped
3	3296-39	1	Nut-Lock, NI
4	1-412501-03	1	Lever-Parkbrake
5	1-303020	1	Grip-Lever
6	1-414504	1	Bracket ASM
6:2	1-413347	2	Sleeve-Bushing
7	1-413344	1	Bushing-Pivot
8	3256-24	2	Washer-Flat
9	323-10	1	Screw-HH
10	3290-500	2	Screw-PPH
11	1-413496	1	Linkage-Upper
12	3290-357	5	Nut-HHF
13	1-806003	3	Pin-Hair
14	323-9	2	Screw-HH
15	1-303548	1	Bushing-Plastic
16	1-414508	1	Bellcrank ASM
18	1-633131	1	Yoke-Linkage, Brake
19	1-413489	1	Linkage-Lower
20	103-2085-03	1	Brake ASM
21	3218-3	1	Nut-Jam
22	322-6	1	Screw-HH
23	1-323161	1	Spring-Idler
24	32128-20	2	Nut-HF


Ref	Part No.	Qty.	Description
25	103-2399	1	Pin-Spring, Clevis
26	32128-21	1	Nut-HF
27	323-4	3	Screw-HH
28	103-2103	1	Decal-Brake, Park

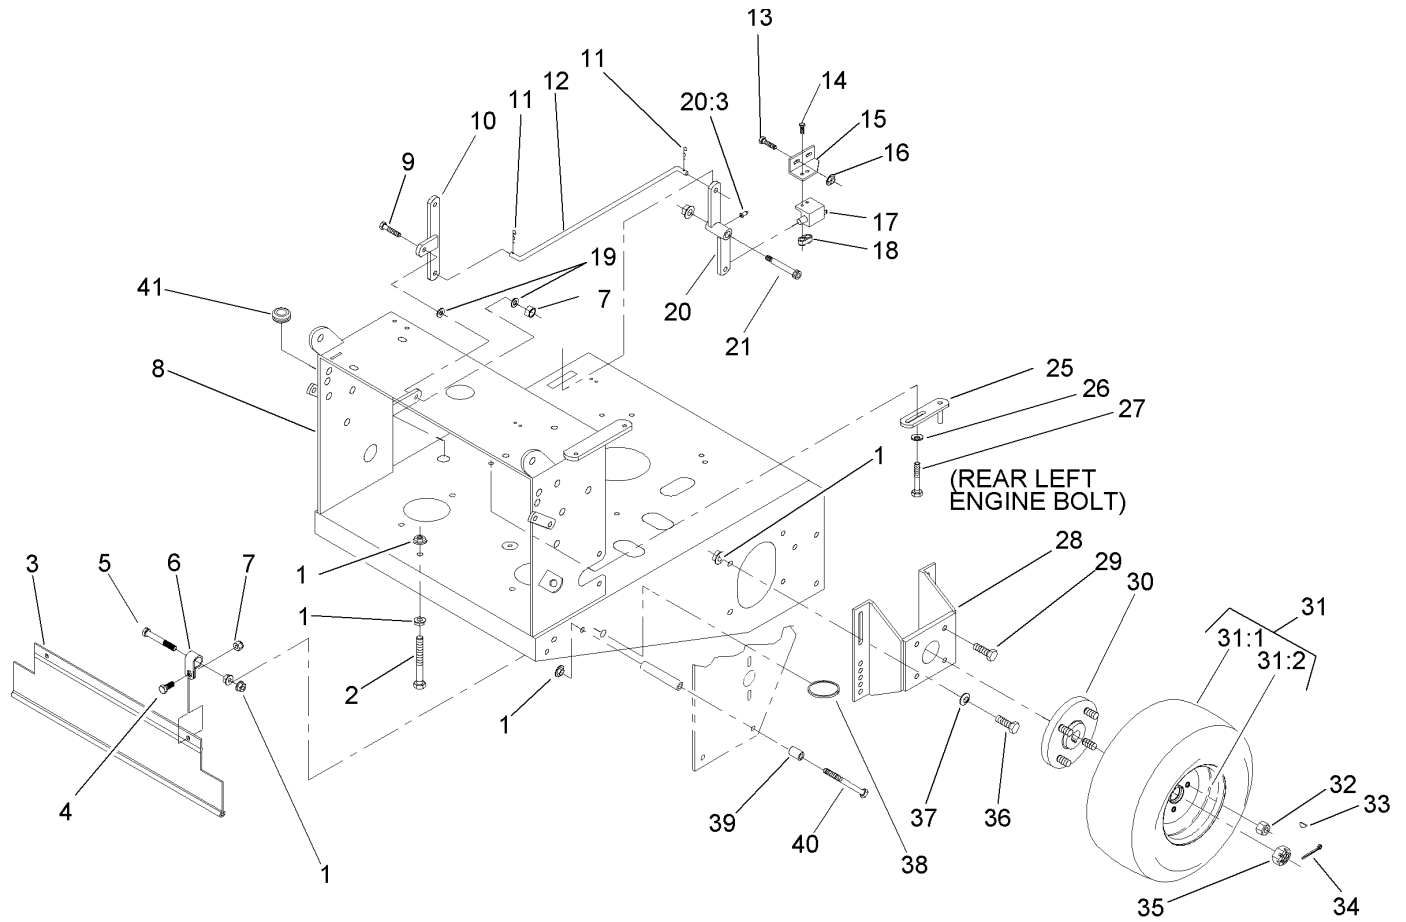

Wheel Drive Assembly

Ref	Part No.	Qty.	Description
1	3290-357	11	Nut-HHF
2	323-11	1	Screw-HH
3	103-2056	1	Shield-Drag
4	322-3	2	Screw-HH
5	323-13	4	Screw-HH
6	1-413510	2	Clip-Loom
7	3296-29	3	Nut-Lock, NI
8	103-6495-01	1	Deck-Engine
9	322-6	2	Screw-HH
10	1-322090-01	1	Bellcrank ASM
11	1-806003	3	Pin-Hair
12	1-323172	1	Linkage-Engage, Blade
13	321-3	2	Screw-HH
14	3290-500	2	Screw-PPH
15	1-323213	1	Bracket-Switch, Blade
16	32128-33	2	Nut-HF
17	1-513051	1	Switch-Open, Normally
18	1-633181	1	Plate-Tapped
19	3256-23	5	Washer-Flat
20	1-322108	1	Bellcrank ASM
20:3	302-40	1	Fitting-Grease
21	1-809062	1	Screw
25	1-322110	1	Guide-Belt
26	1-303334	1	Washer-Spring


Ref	Part No.	Qty.	Description
27	33114-030	1	Screw-HH
28	1-322162-01	2	Mount-Motor
29	3234-12	8	Screw-HHF
30	1-602997	2	Hub W/studs
31		2	Wheel And Tire ASM
31:1	1-413474	1	Tire-Turfmaster
31:2	1-603715	1	Wheel-Rim
32	242-50	8	Nut-Lug
33	1-807019	2	Key-Woodruff
34	1-806800	2	Pin-Cotter
35	32136-5	2	Nut-Hex, Slotted
36	323-6	8	Screw-HH
37	98-5975	8	Washer-Belleville
38	1-323366	1	Ring-Split
39	105-4820	1	Spacer-Short
40	323-23	1	Screw-HH
41	1-543296	1	Grommet

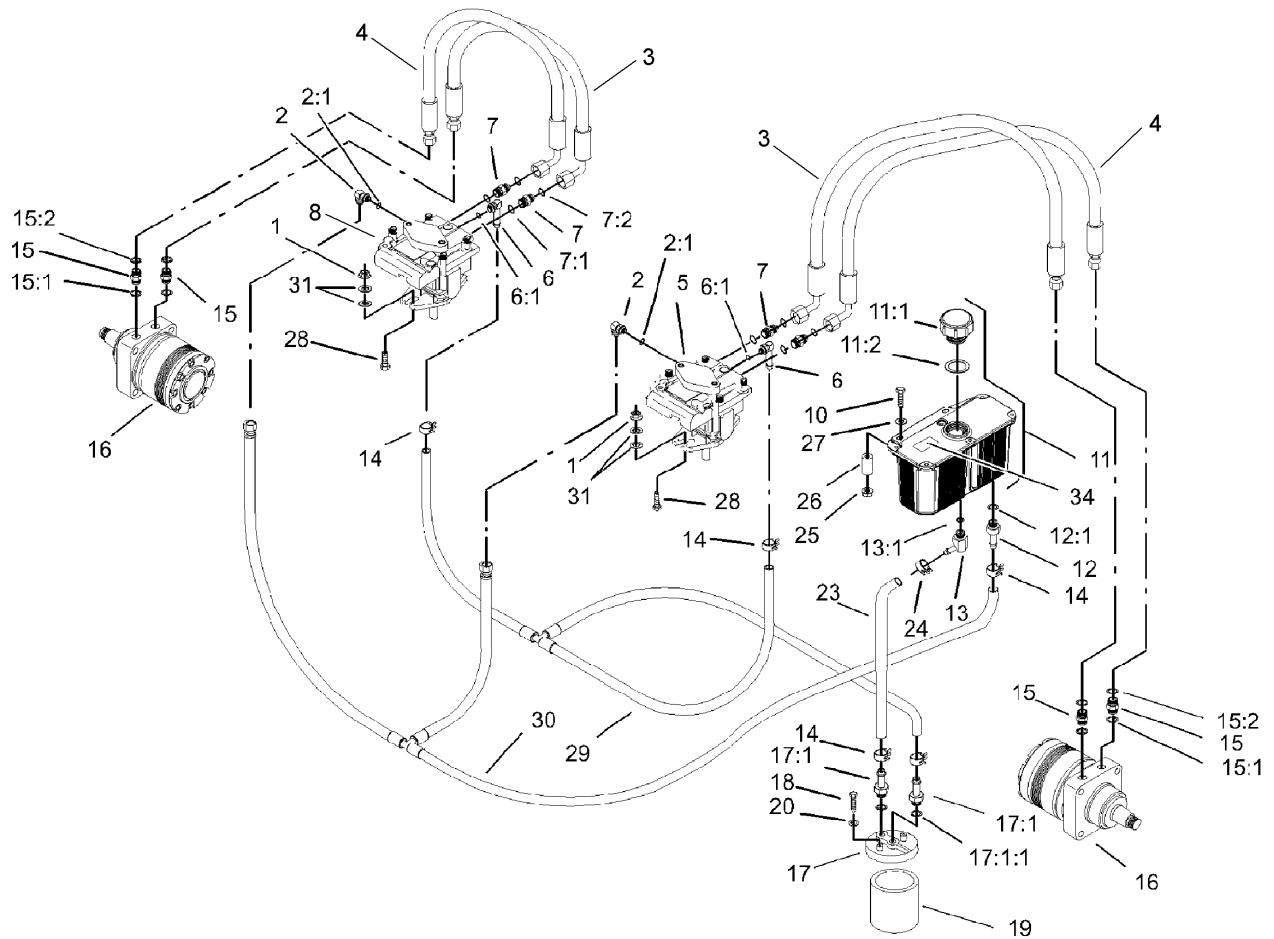

Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	3290-357	4	Nut-HHF
2	103-1802	2	Fitting-Hyd, 90 DEG
2:1	1-603921	1	O-Ring
3	1-323241	2	Hose-Pressure, High
4	1-613034	2	Hose-Pressure, High
5	103-4611	1	Pump-HYD
●5:1	105-6184	1	Seal Kit
●5:2	105-6185	1	Plate-Valve
●5:8	103-2664	1	Input Shaft Kit
●5:9	94-6922	1	Bearing-Thrust
●5:10	103-2666	1	Cylinder Block Kit
6	103-1799	2	Elbow-90 DEG
6:1	237-42	1	O-Ring
7	1-603990	4	Fitting-Straight
7:1	1-603920	1	O-Ring
7:2	1-603992	1	O-Ring
8	106-5490	1	Pump-HYD
10	321-15	2	Screw-HH
11	103-1946	1	Reservoir-HYD
11:1	103-1948	1	Cap-Reservoir, HYD
11:2	103-1949	1	Gasket-Cap
12	103-1801	1	Adapter-Straight
12:1	237-42	1	O-Ring
13	103-1807	1	Elbow-45 DEG

Ref	Part No.	Qty.	Description
13:1	237-42	1	O-Ring
14	103-1988	3	Clamp-Hose
15	1-603991	4	Fitting-Straight
15:1	237-80	1	O-Ring
15:2	1-603992	1	O-Ring
16	1-603718	2	Motor-Wheel
●16:1	1-000119	1	Seal Kit
17	103-2889	1	Filter Head ASM
17:1	103-1912	2	Adapter-Straight
17:1:1	237-42	1	O-Ring
18	321-3	2	Screw-HH
19	1-633750	1	Filter-HYD
20	1-805004	2	Washer-Lock
23	103-2959	1	Hose-Charge
24	103-1716	3	Clamp-Hose
25	32128-33	2	Nut-HF
26	103-2191	2	Spacer
27	3256-22	2	Washer-Flat
28	323-7	4	Screw-HH
29	103-3914	1	Charge Hose ASM
30	103-4019	1	Case Drain Hose ASM
31	3256-3	8	Washer-Flat
34	1-523552	1	Decal-Tank, HYD

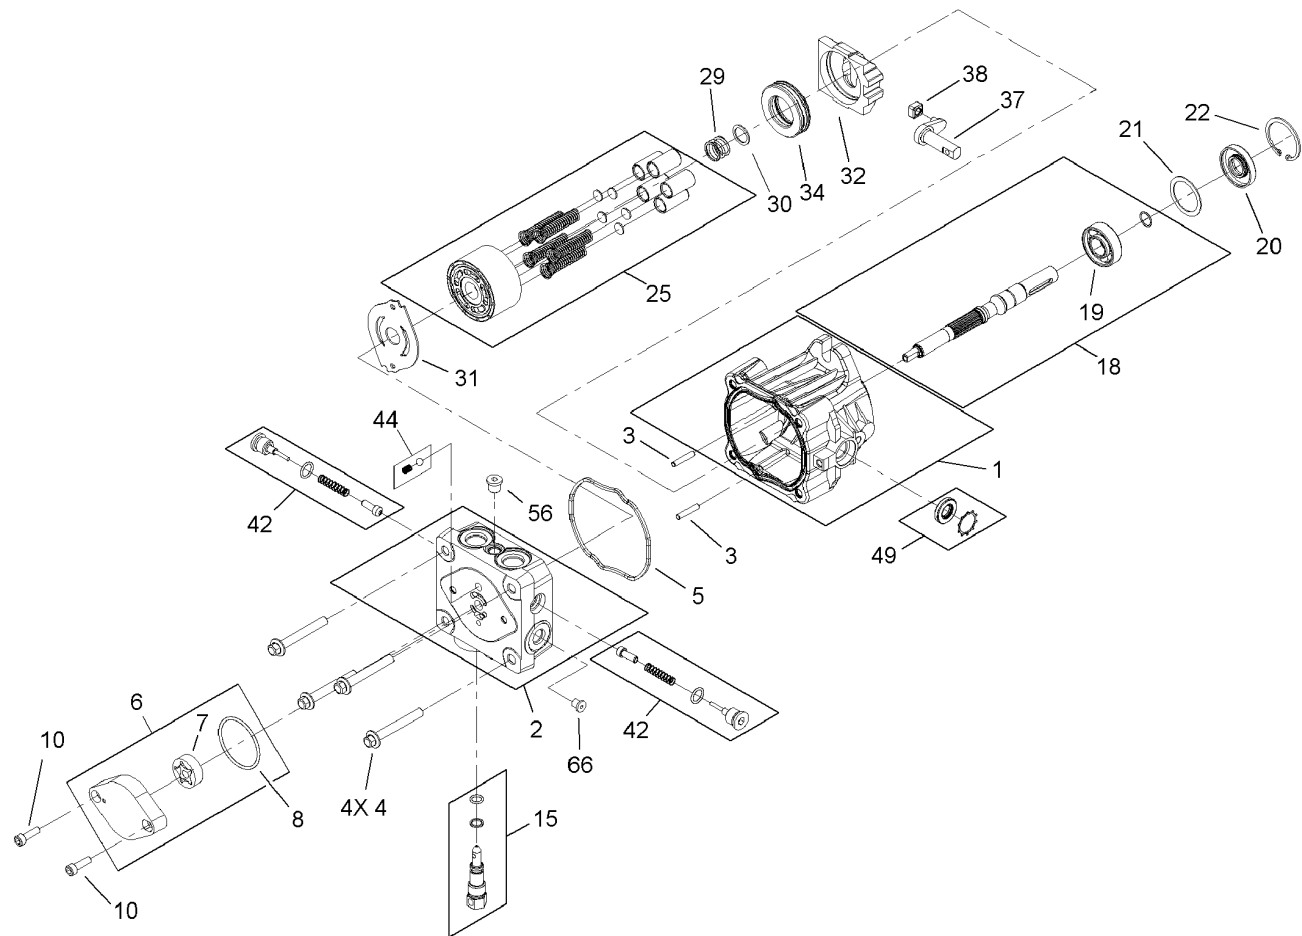

Hydraulic Pump Assembly No. 106-5490


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit	44	106-8760	1	Charge Relief Valve Kit
2	106-8752	1	End Cap Kit (W/poppets)	49	106-8761	1	Trunnion Seal/retainer Kit
3	106-8753	2	Pin-Headless, Straight	56	106-8762	1	Plug-HSH
4	106-8754	4	Bolt-HF	66	106-8763	1	Plug-HSH
5	106-8755	1	O-Ring	99	105-6184	1	Seal Kit
6	106-8756	1	Charge Pump Kit				
7	104-2122	1	Gerotor ASM				
8	106-8757	1	O-Ring				
10	106-8758	2	Screw-HSH				
15	106-8759	1	Bypass Valve Kit				
18	103-2664	1	Input Shaft Kit				
19	104-5311	1	Bearing-Ball				
20	104-5310	1	Seal-Lip				
21	104-5308	1	Spacer				
22	104-5309	1	Ring-Retaining				
25	104-2106	1	Cylinder Block ASM				
29	94-1936	1	Spring-Block				
30	94-1937	1	Washer-Block, Thrust				
31	105-6185	1	Plate-Valve				
32	94-1907	1	Swashplate-Variable				
34	94-6922	1	Bearing-Thrust				
37	94-1909	1	Arm-Trunion				
38	94-1910	1	Guide-Slot				
42	98-3252	2	Valve-Check (W/poppet)				

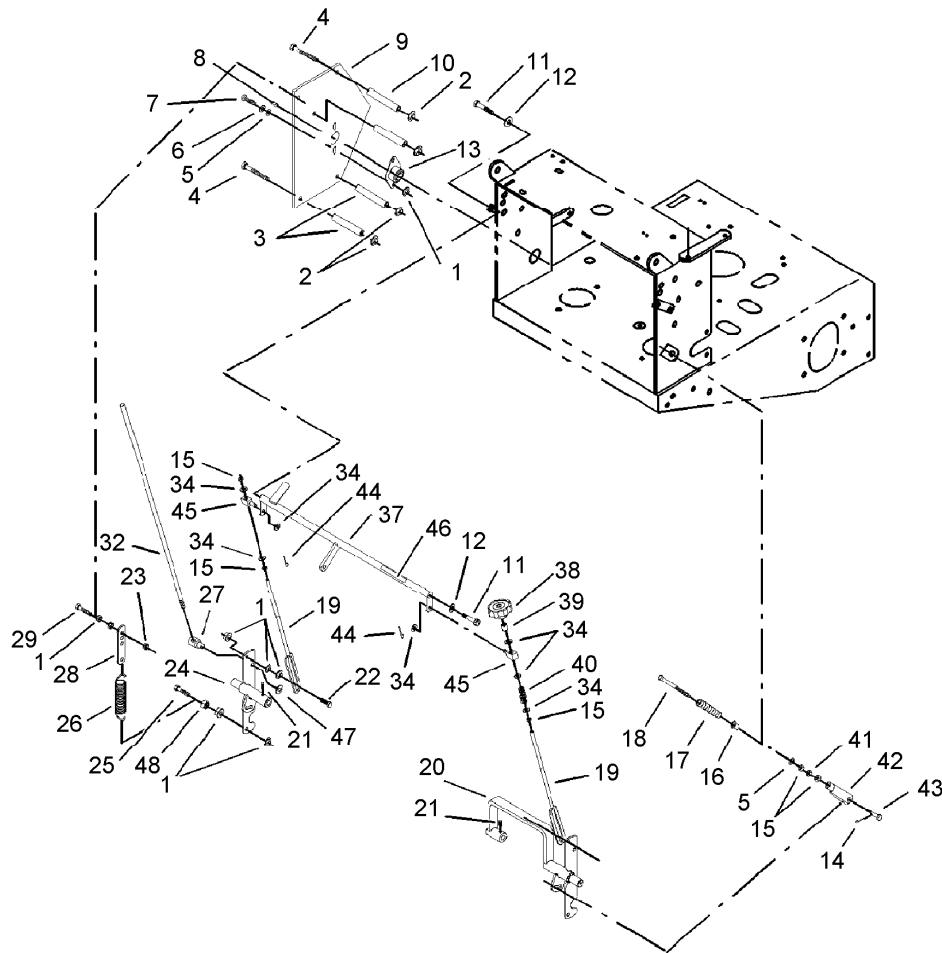

Lower Control Assembly

Ref	Part No.	Qty.	Description
1	32128-20	12	Nut-HF
2	3290-357	7	Nut-HHF
3	1-323197-01	4	Spacer-Shield
4	323-16	7	Screw-HH
5	3256-2	6	Washer-Flat
6	1-805005	4	Washer-Lock
7	322-3	4	Screw-HH
8	302-19	2	Fitting-Grease
9	103-4753-01	2	Shield-Controls, Hydro
10	1-323195-01	4	Spacer-Shield
11	1-809056	2	Screw
12	3256-24	2	Washer-Flat
13	1-633102	2	Bearing-Flange, Side
14	1-806003	2	Pin-Hair
15	3219-2	7	Nut-Hex
16	1-603735	2	Bushing-Flanged
17	1-603807	2	Spring-Return, Neutral
18	1-603737	2	Bolt-Return, Neutral
19	1-413350	2	Link-Control, Speed
20	103-4796-01	1	Shaft-Control, RH
21	1-803022	2	Screw-Set
22	1-403180	2	Screw-HH
23	3296-29	2	Nut-Lock, NI
24	103-1190-01	1	Shaft-Control, LH


Ref	Part No.	Qty.	Description
25	322-6	2	Screw-HH
26	1-603693	2	Spring-Extension
27	103-1235	2	Swivel-Lever, Drive
28	1-613089	2	Tab-Spring, Extension.
29	1-800016	2	Bolt-Tap, HH
32	1-413219	2	Rod-Lever, Drive
34	3256-23	7	Washer-Flat
37	1-412203-01	1	Crank-Control, Speed
38	1-413151	1	Knob-Tracking
39	1-603903	1	Spacer
40	1-323245	1	Spring-Compression
41	3220-2	2	Nut-Jam
42	1-303105	2	Yoke-Adjustable
43	1-808280	2	Pin-Clevis
44	3272-5	2	Pin-Cotter
45	1-603676	2	Swivel-Adjustable, Short
46	105-4109	1	Decal-Tracking
47	32151-47	2	Ring-Retaining
48	3218-2	2	Nut-Jam

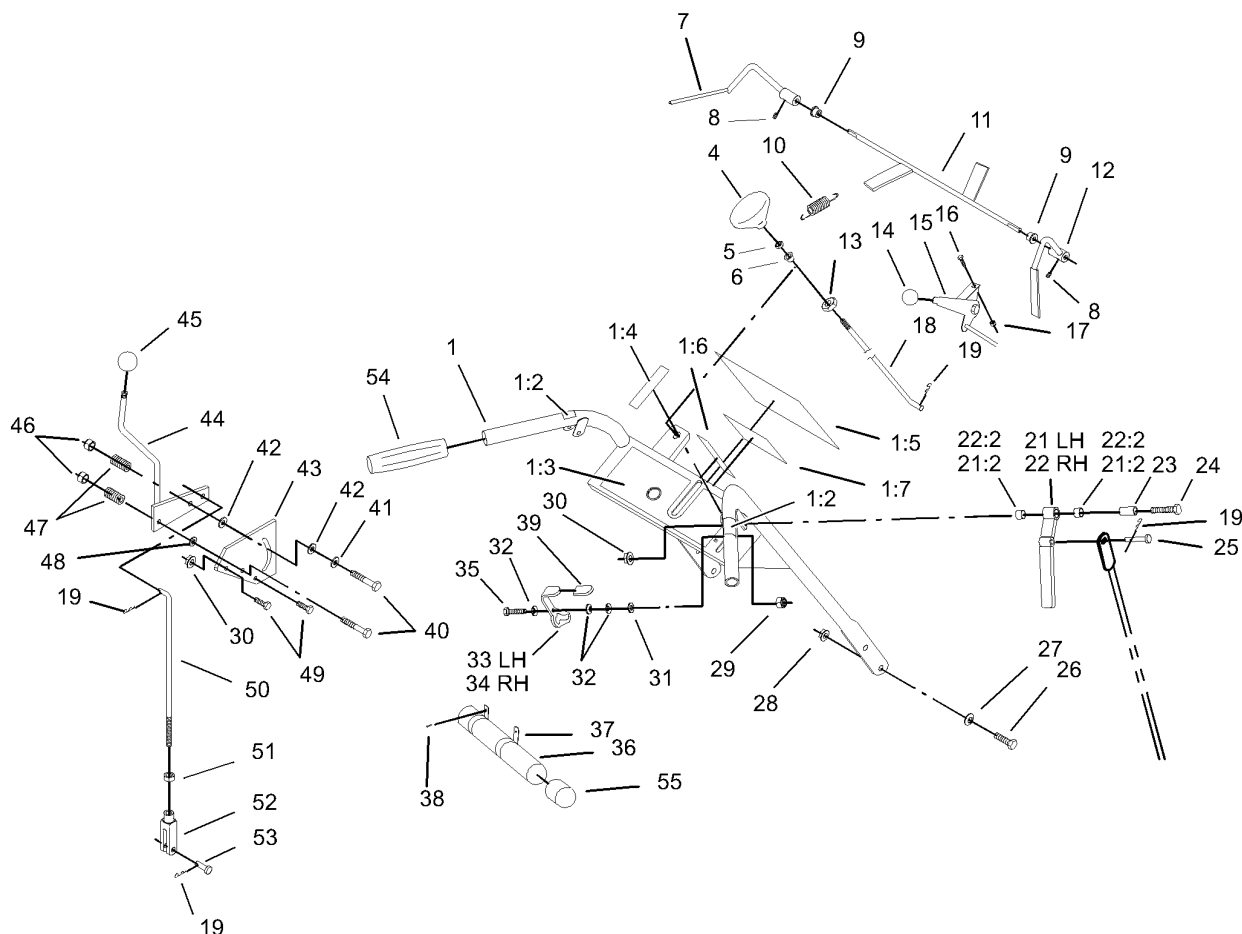

Upper Handle Assembly


Ref	Part No.	Qty.	Description
1	106-0751	1	Handle ASM
1:2	105-4110	2	Decal-Lock, Neutral
1:3	106-0829	1	Decal-Control Panel, Hydro
1:4	1-323689	1	Decal-Throttle
1:5	106-0750	1	Decal
1:6	95-5537	1	Decal-Engage, Deck
1:7	106-2743	1	Decal-Caution, Brake
4	1-323134	1	Knob-Push/pull
5	3218-2	1	Nut-Jam
6	1-323143	1	Bearing-Nylon
7	1-412183-03	1	Lever-LH
8	1-803322	2	Screw-Set
9	1-303365	2	Bushing-Nylon
10	1-303363	1	Spring-Extension
11	106-2717-03	1	Operator Presence Control Rod
12	1-412185-03	1	Lever-RH
13	1-323142	1	Nut-Push
14	1-513592	1	Knob-Ball
15	1-323322	1	Cable-Control, Throttle
16	1-807513	2	Bolt-CARR
17	3296-2	2	Nut-Lock
18	1-323181	1	Linkage-Blade
19	1-806003	3	Pin-Hair
21	103-0218	1	LH Drive Lever ASM

Ref	Part No.	Qty.	Description
21:2	1-413152	2	Sleeve-Bushing
22	103-0219	1	RH Drive Lever ASM
22:2	1-413152	2	Sleeve-Bushing
23	1-603749	2	Bushing-Lever, Drive
24	321-9	2	Screw-HH
25	1-613055	2	Pin-Clevis
26	323-6	4	Screw-HH
27	98-5975	4	Washer-Belleville
28	3290-357	4	Nut-HHF
29	3296-42	2	Nut-Lock, NI
30	32128-33	4	Nut-HF
31	3256-2	2	Washer-Flat
32	1-303435	6	Washer-Spring
33	1-413148	1	Latch-Lever, LH Drive
34	1-413150	1	Latch-Lever, RH Drive
35	321-10	2	Screw-HH
36	104-7050	1	Housing-Manual
37	2412-120	2	R-Clamp
38	32104-76	2	Screw
39	1-303019	2	Grip-Latch
40	322-10	2	Screw-HH
41	1-603716	1	Washer-Friction
42	1-323244	2	Washer-Friction
43	1-603730	1	Plate-Lever, Shifter

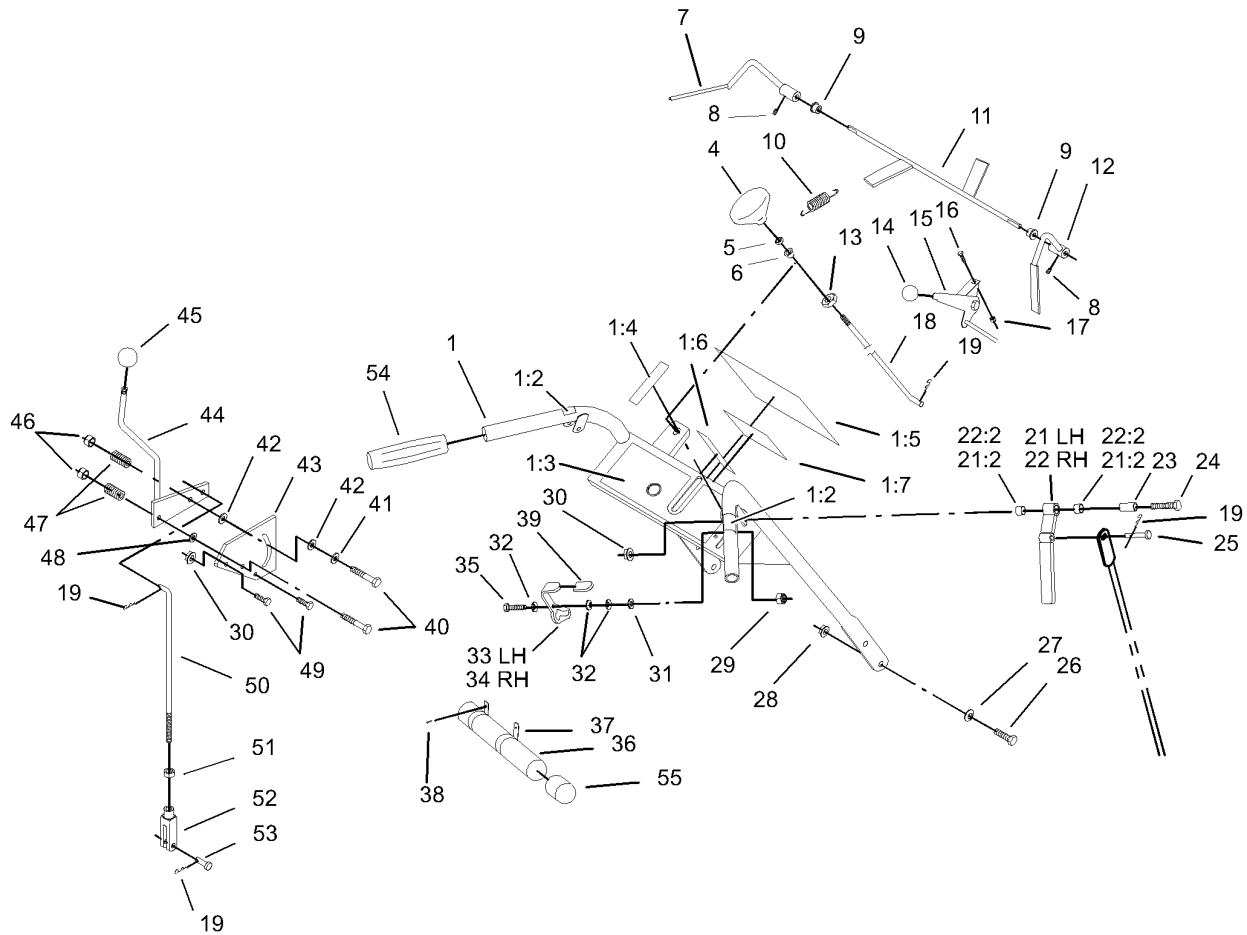


Upper Handle Assembly (continued)

Ref	Part No.	Qty.	Description
44	106-2748	1	Lever-Shift
45	1-603175	1	Knob-Ball
46	3296-29	2	Nut-Lock, NI
47	1-323245	2	Spring-Compression
48	3256-23	1	Washer-Flat
49	321-3	2	Screw-HH
50	1-323522	1	Rod-Control, Speed
51	3220-2	1	Nut-Jam
52	1-303105	1	Yoke-Adjustable
53	1-808280	1	Pin-Clevis
54	1-303097	2	Grip-Handle
55	104-7048	1	Cap-Housing

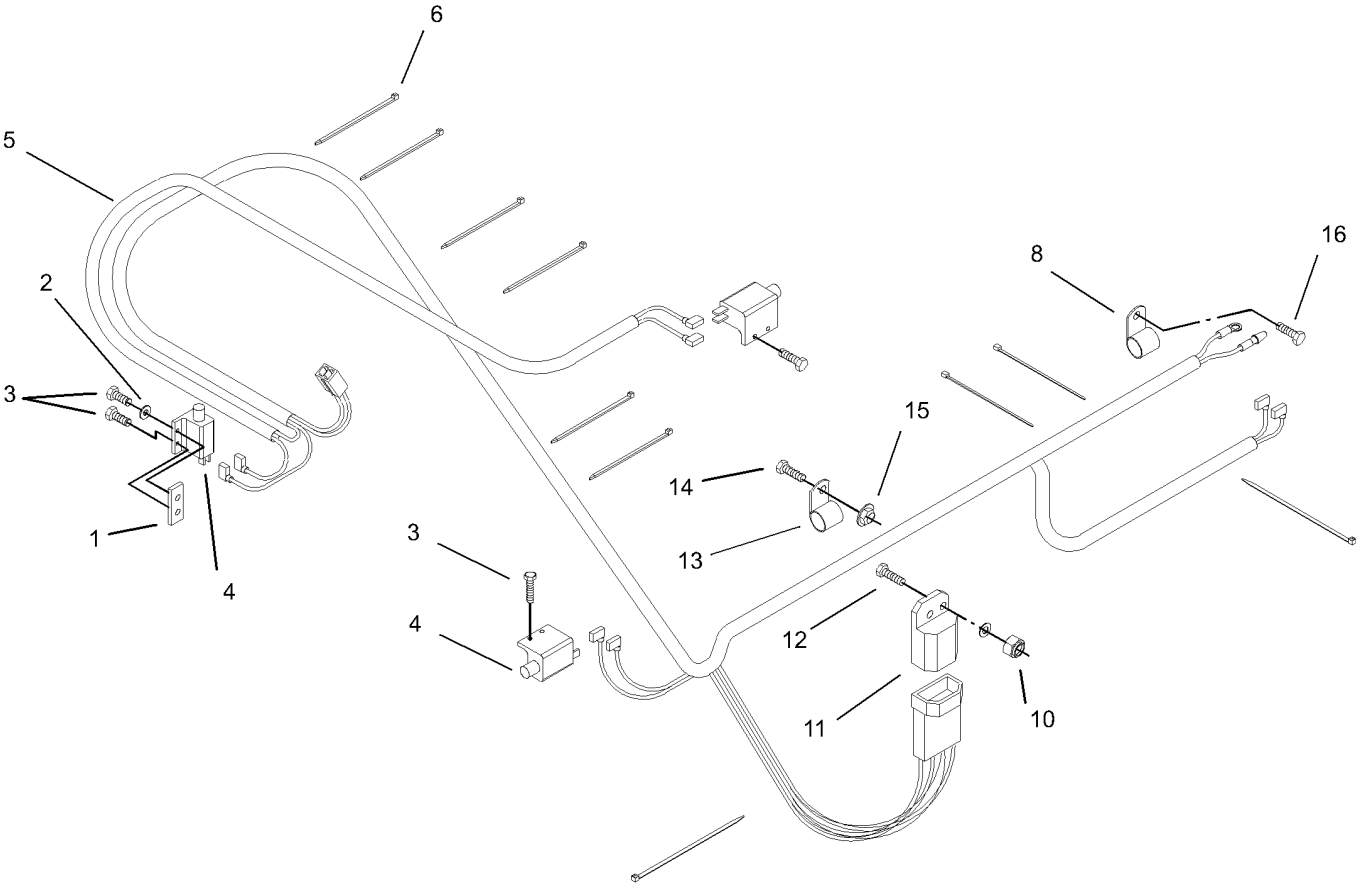


Electrical Assembly

Ref	Part No.	Qty.	Description				
1	1-633181	2	Plate-Tapped				
2	3256-14	1	Washer-Flat				
3	3290-500	3	Screw-PPH				
4	1-513051	2	Switch-Open, Normally				
5	103-2286	1	Harness-Wire				
6	1-303287	6	Tie-Plastic				
8	1-413510	1	Clip-Loom				
10	3296-42	2	Nut-Lock, NI				
11	1-323430	1	Module-Interlock				
12	321-4	1	Screw-HH				
13	1-603727	1	Clip-Loom				
14	321-3	1	Screw-HH				
15	32128-33	1	Nut-HF				
16	33114-016	1	Screw-HH				

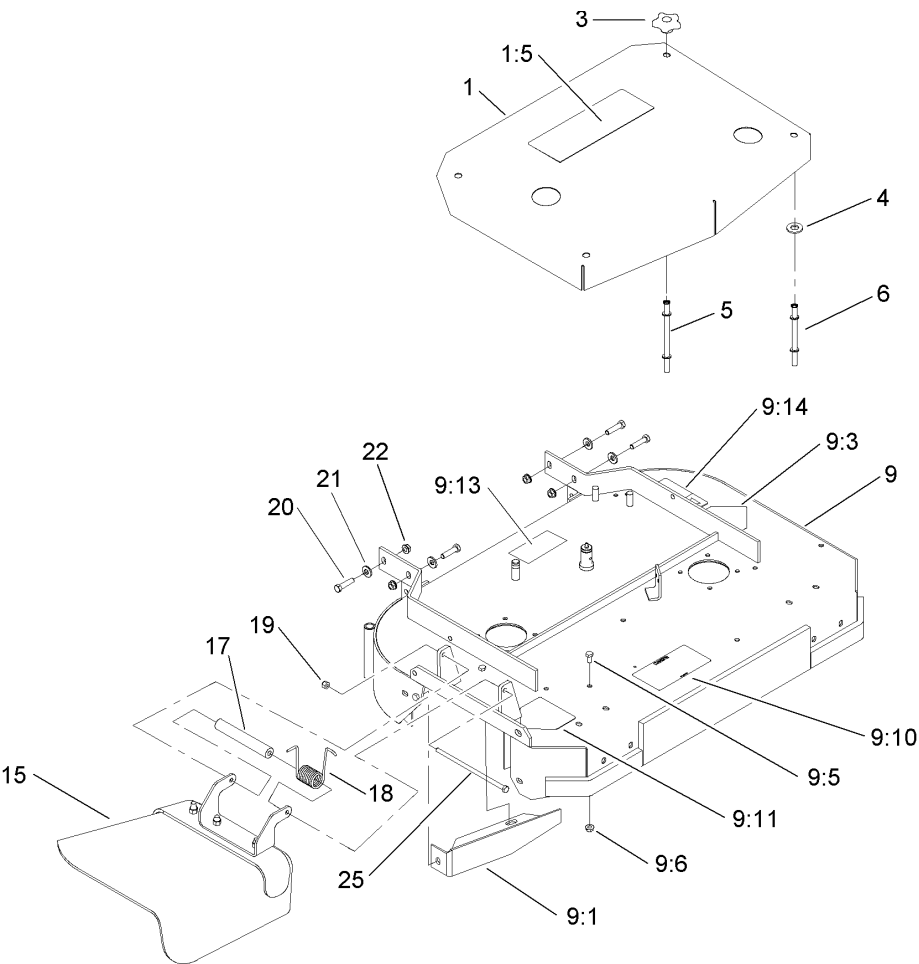


Deck Assembly

Ref	Part No.	Qty.	Description				
1	1-304258	1	Belt Shield ASM				
1:5	106-0711	1	Decal				
3	106-4161	4	Knob-Handle				
4	1-323417	4	Washer				
5	1-303536	2	Stud-Shield, Belt (Long)				
6	1-303537	2	Stud-Shield, Belt (Short)				
9	107-4214	1	Deck ASM				
9:1	1-302189-01	1	Baffle-Dogleg				
9:3	1-403005	1	Decal-Danger				
9:5	322-2	8	Screw-HH				
9:6	32128-20	8	Nut-HF				
9:10	66-1340	1	Decal-Danger				
9:11	93-1122	1	Decal-Danger				
9:13	98-3296	1	Decal-Routing, Belt				
9:14	98-5130	1	Decal-Torque, Bolt				
15	107-4140	1	Deflector ASM				
17	105-4622	1	Spacer				
18	104-8554	1	Spring-Torsion				
19	3296-29	1	Nut-Lock, NI				
20	323-8	6	Screw-HH				
21	98-5975	6	Washer-Belleville				
22	3290-357	14	Nut-HHF				
25	322-50	1	Screw-HH				

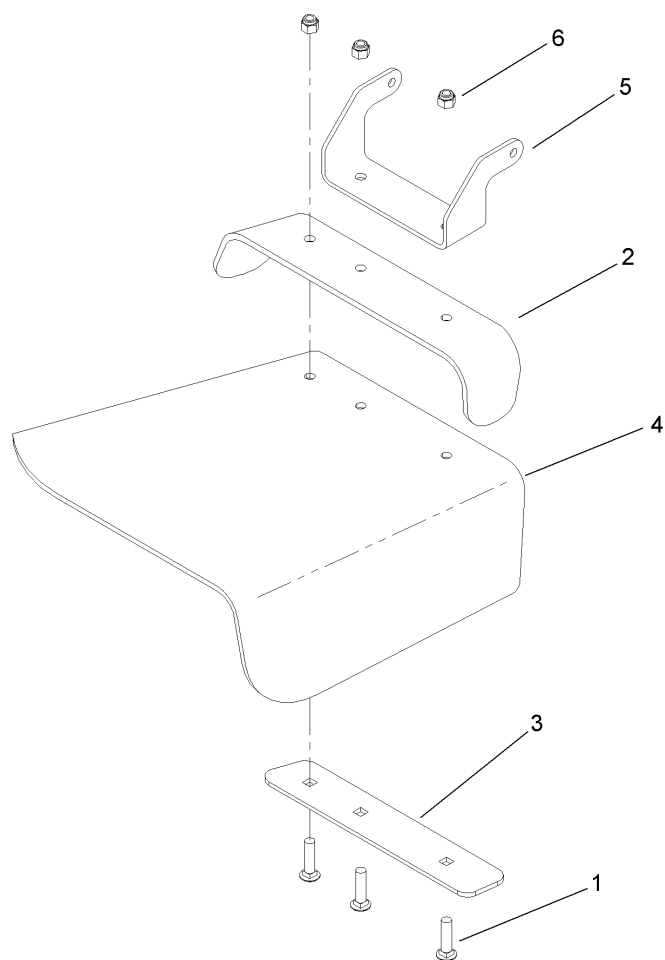


Deflector Assembly No. 107-4140

Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

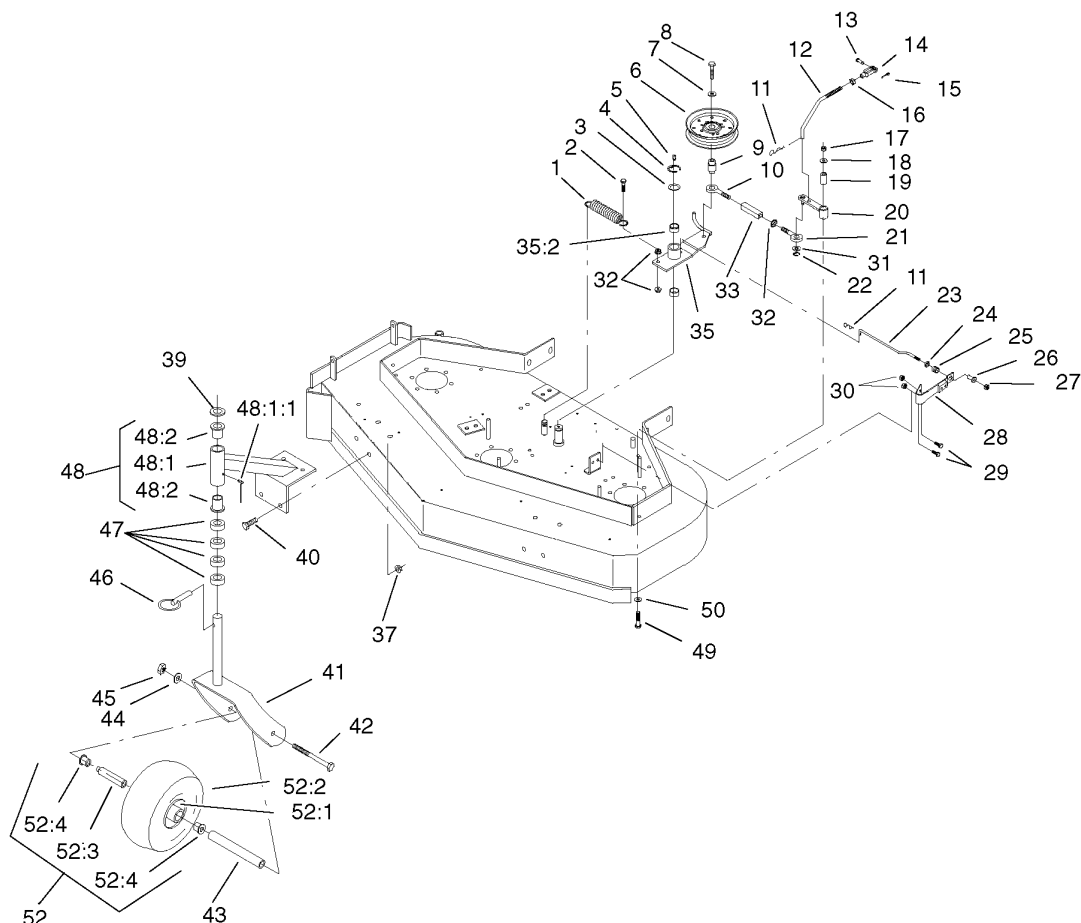


Front Caster and Blade Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-323071	1	Spring-Extension	25	1-323747	1	Spring-Compression
2	322-6	1	Screw-HH	26	1-323746	1	Spacer-Flanged
3	1-303352	1	Washer-Spindle	27	3296-56	1	Nut-Lock, NI
4	32151-103	1	Ring-Snap	28	1-324372	1	Pad/spring ASM
5	302-19	1	Fitting-Grease	29	321-4	2	Screw-HH
6	1-603843	1	Pulley-Idler	30	3296-42	2	Nut-Lock, NI
7	98-5975	3	Washer-Belleville	31	3256-23	1	Washer-Flat
8	702809	1	Screw-Cap	32	32128-20	3	Nut-HF
9	1-303434	1	Bushing-Engagement	33	1-303236	1	Body-Turnbuckle
10	1-303348	1	Eyebolt-Thread, LH	35	103-3600	1	Idler Arm ASM
11	1-806003	3	Pin-Hair	35:2	1-323729	2	Sleeve-Bearing
12	1-323174	1	Arm-Linkage, Assist	37	3290-357	8	Nut-HHF
13	1-808280	1	Pin-Clevis	39	1-513338	2	Washer-Flat
14	1-303105	1	Yoke-Adjustable	40	323-4	8	Screw-HH
15	3272-5	1	Pin-Cotter	41	1-322145-01	2	Fork
16	3219-2	1	Nut-Hex	42	325-20	2	Screw-HH
17	3296-29	1	Nut-Lock, NI	43	1-513547	2	Spacer
18	3256-3	1	Washer-Flat	44	3253-7	2	Washer-Lock
19	1-403179	1	Tube-Pivot	45	3217-9	2	Nut-Hex
20	1-322235	1	Arm-Assist	46	1-809020	2	Pin
21	1-303238	1	Eyebolt-Thread, RH	47	1-303314	8	Spacer-Caster
22	32120-35	1	E-Ring	48	1-302203	2	Support ASM
23	1-323715	1	Rod-Brake	48:1		1	Support-Caster
24	1-323748	1	Ring-Push On	48:1:1	302-52	1	Fitting-Grease

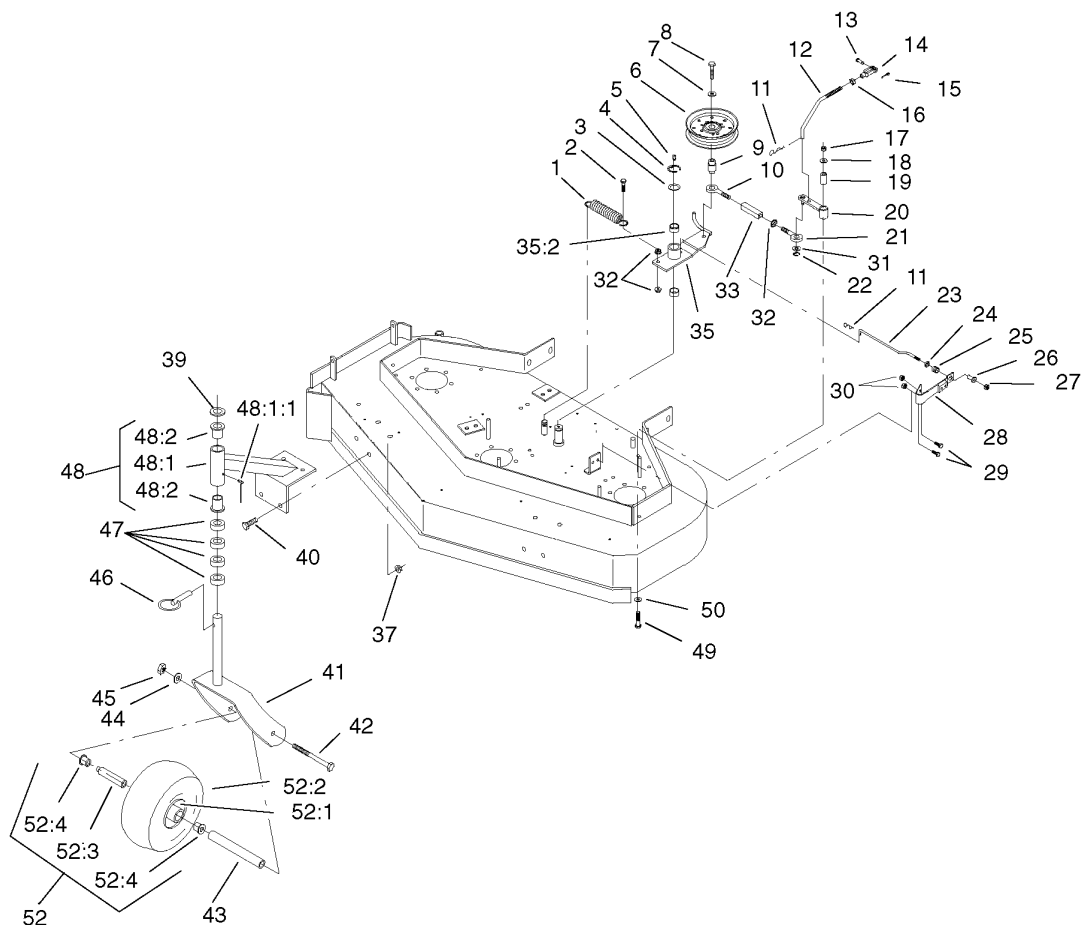


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
48:2	1-303514	2	Bearing-Flanged
49	322-10	1	Screw-HH
50	1-303334	1	Washer-Spring
52	1-513648	2	Wheel And Tire ASM
52:1		1	Rim
52:2	1-513808	1	Tire
52:3	1-513809	1	Bearing
52:4	1-513810	2	Bushing

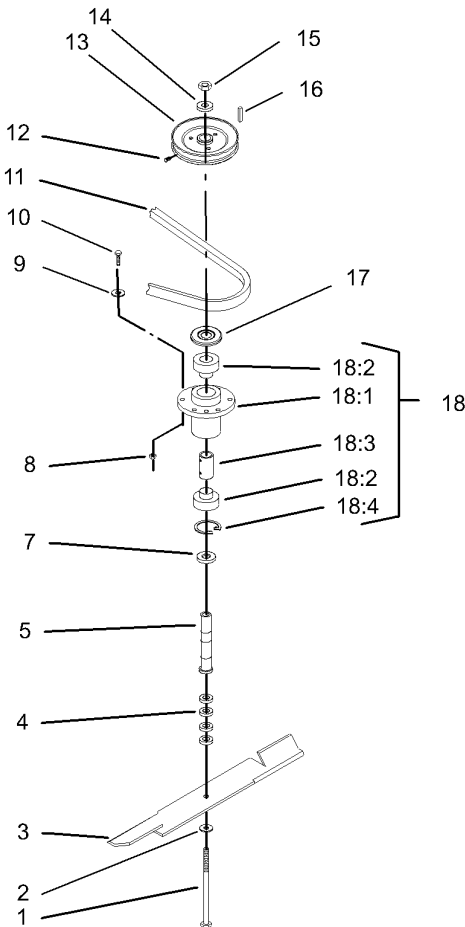


Spindle, Blade and Belt Assembly

Ref	Part No.	Qty.	Description				
1	1-800861	2	Screw-Cap, HH				
2	1-513208	2	Washer-Spring				
3	103-2508	2	Blade-Lift, Low				
3	103-2528	2	Blade-Notched				
4	1-323539	8	Spacer-Drive, Blade				
5	1-323529	2	Tube-Spindle, Short				
7	103-2535	2	Spacer-Guard, Bottom				
8	32128-20	8	Nut-HF				
9	1-303334	8	Washer-Spring				
10	322-6	8	Screw-HH				
11	106-2741	1	V-Belt				
12	1-803310	2	Screw-Set				
13	1-403183	2	Sheave				
14	1-323339	2	Washer-Retainer, Sheave				
15	3219-6	2	Nut-Hex				
16	1-807267	2	Key				
17	103-1330	2	Guard-Bearing, Top				
18	107-4065	2	Cutter Housing ASM				
18:1	103-7975	1	Housing-Spindle				
18:2	103-2477	2	Bearing-Ball				
18:3	103-2534	1	Spacer-Bearing				
18:4	32120-8	1	Ring-Snap				

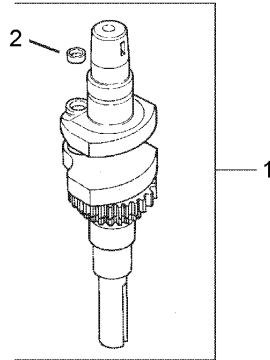


Crankshaft Assembly Kohler CV15T 41624

Ref	Part No.	Qty.	Description
②1	12 014 30-S	1	Crankshaft (Includes 2)
②2	12 139 01-S	1	Plug-Cup

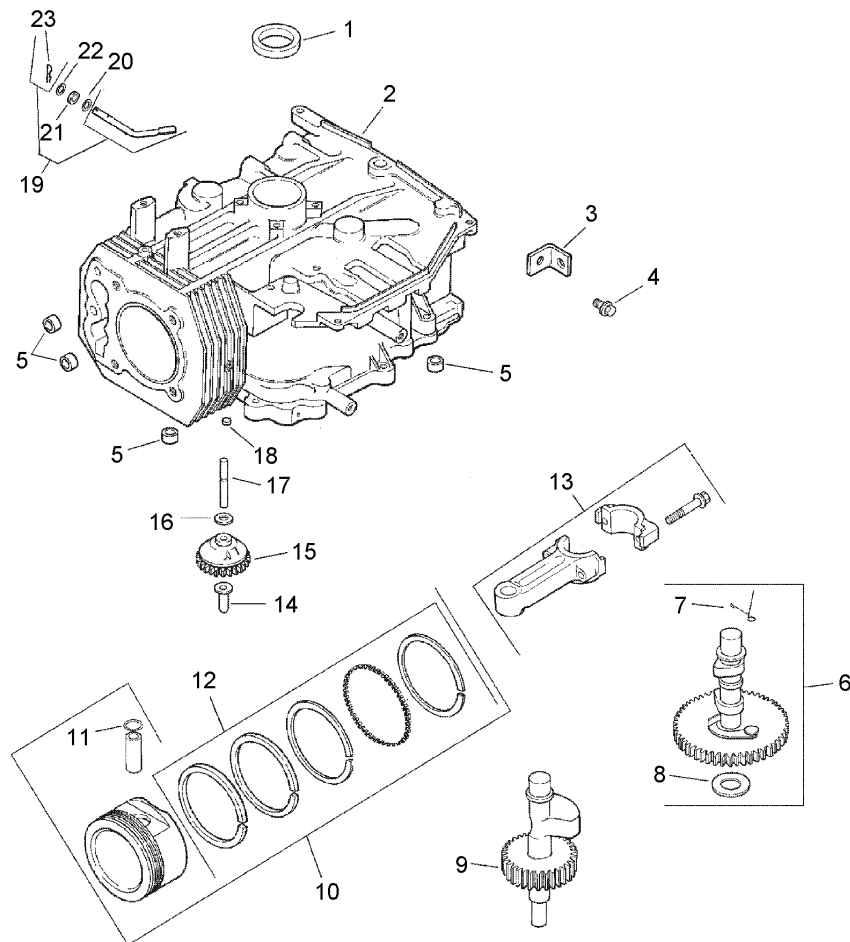


Crankcase Assembly Kohler CV15T 41624

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Oil, Front	13	12 067 05-S	1	Rod-Connecting (Std.)
2	2	1	Crankcase	13	12 067 06-S	1	Rod-Connecting (.25)
3	12 445 02-S	1	Strap-Lifting	14	12 380 01-S	1	Pin-Regulating, Governor
4	M-839025-S	1	Screw-HF (M8x1.25x25)	15	12 043 05-S	1	Gear-Governor
5	24 380 13-S	4	Pin-Locating	16	M-631005-S	1	Washer-Plain (6mm)
6	12 755 49-S	1	Camshaft Kit (Includes 7,8)	17	12 144 02-S	1	Shaft-Gear, Governor
7	12 089 37-S	1	Spring-Actuating	18	52 139 09-S	1	Plug-Cup
8	12 422 08-S	1	Shim-Camshaft, Blue	19	12 755 64-S	1	Governor Cross Shaft Kit (Includes 23)
8	12 422 09-S	1	Shim-Camshaft, Red	20	X-25-102-S	1	Washer-Plain, 1/4in
8	12 422 10-S	1	Shim-Camshaft, Yellow	21	12 032 01-S	1	Seal-Cross Shaft, Governor
8	12 422 11-S	1	Shim-Camshaft, Green	22	M-631015-S	1	Washer-Plain (6mm)
8	12 422 12-S	1	Shim-Camshaft, Gray	23	12 154 05-S	1	Clip-Pin, Hitch
8	12 422 13-S	1	Shim-Camshaft, Black				
8	12 422 07-S	1	Shim-Camshaft, White				
9	12 144 27-S	1	Shaft-Balance				
10	12 874 07-S	1	Piston W/ring Set (Std.) (Includes 11,12)				
10	12 874 08-S	1	Piston W/ring Set (.25)				
10	12 874 09-S	1	Piston W/ring Set (.50)				
10	12 874 11-S	1	Piston W/ring Set (.08)				
11	12 018 02-S	2	Retainer-Pin, Piston				
12	12 108 07-S	1	Ring Set (Std. And .08)				
12	12 108 08-S	1	Ring Set (.25)				
12	12 108 09-S	1	Ring Set (.50)				

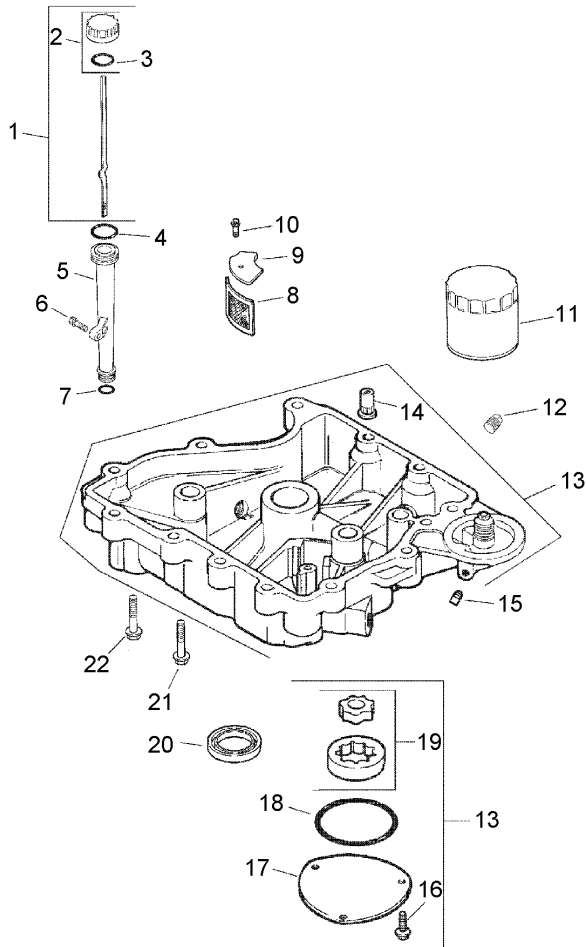


Oil Pan / Lubrication Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
❶1	12 038 01-S	1	Dipstick ASM (Includes 2,3)				
❷2	25 755 13-S	1	Oil Fill Cap Kit (Includes 3)				
❸3	25 153 02-S	1	O-Ring				
❹4	12 153 02-S	1	O-Ring				
❺5	12 123 04-S	1	Tube-Fill, Oil				
❻6	M-545020-S	1	Screw-HF (M5x0.8x20)				
❼7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)				
❽8	25 162 07-S	1	Screen-Pickup, Oil				
❾9	12 096 03-S	1	Cover-Screen, Oil Pickup				
❿10	M-545016-S	1	Screw-HF (M5x0.8x16)				
⓫11	12 050 01-S	1	Filter-Oil				
⓬12	25 139 57-S	2	Plug-SQH (3/8in Nptf)				
⓭13	12 199 50-S	1	Oil Pan ASM (Includes 14,16-19)				
⓮14	25 462 09-S	1	Valve-Relief, Oil Pressure				
⓯15	25 139 52-S	1	Plug-Pipe (1/8in)				
⓰16	M-545016-S	3	Screw-HF (M5x0.8x16)				
⓱17	12 096 34-S	1	Cover-Pump, Oil				
⓲18	12 153 06-S	1	O-Ring (Oil Pump Cover)				
⓳19	12 393 01-S	1	Oil Pump ASM				
⓴20	12 032 03-S	1	Seal-Oil, Front				
⓵21	24 086 16-S	11	Screw-HF (M8x1.25x45)				
⓶22	24 086 17-S	1	Screw-HF (M8x1.25x45)				

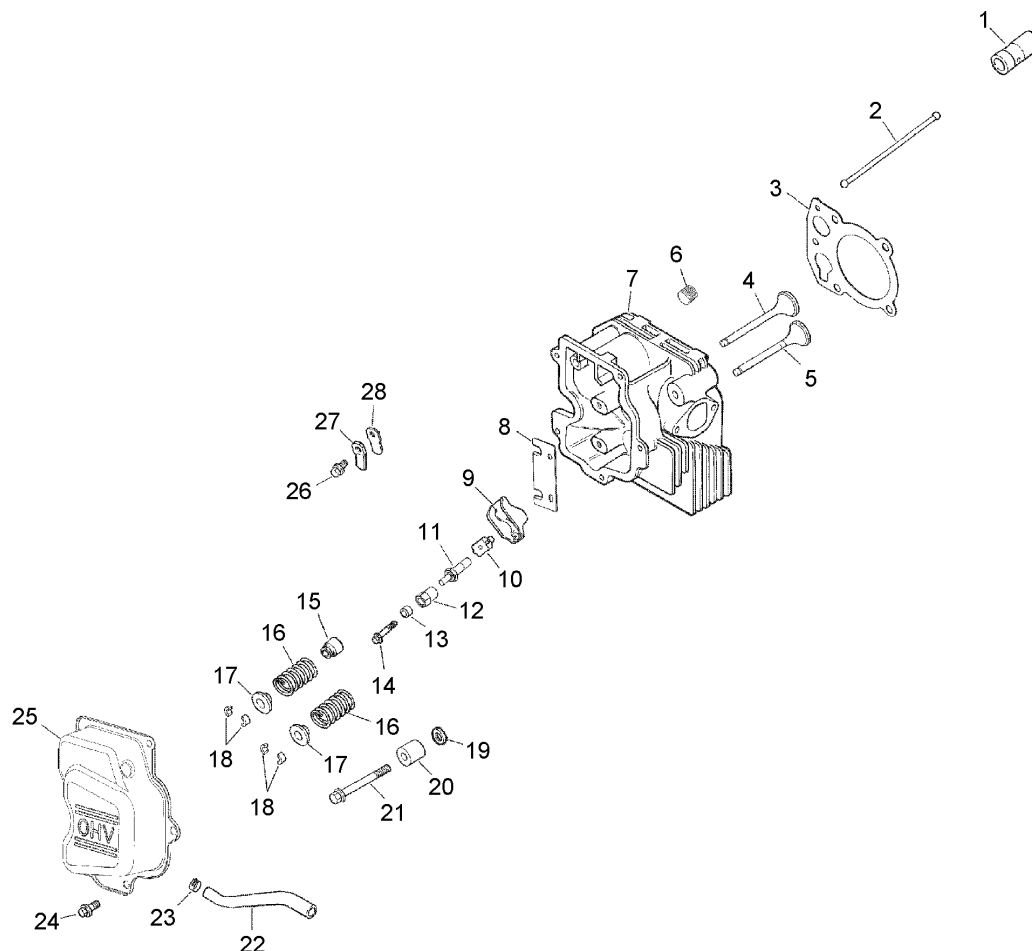


Head / Valve / Breather Assembly Kohler CV15T 41624

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	25 351 01-S	2	Lifter-Valve	❶25	12 096 47-S	1	Cover-Valve
❶2	12 411 04-S	2	Rod-Push	❶26	M-545010-S	1	Screw-HF (M5x0.8x10)
❶3	12 041 10-S	1	Gasket-Head, Cylinder	❶27	66 018 04-S	1	Retainer-Reed, Breather
❶4	12 017 01-S	1	Valve-Intake (Std.)	❶28	12 402 02-S	1	Reed-Breather
❶5	12 016 01-S	1	Valve-Exhaust (Std.)	❶❸	12 017 02-S	1	Valve-Intake (.25)
❶6	25 139 60-S	1	Plug-Pipe, 1/8in Allen Head	❶❸	12 016 02-S	1	Valve-Exhaust (.25)
❶7	12 318 19-S	1	Head-Cylinder				
❶8	12 146 22-S	2	Plate-Guide				
❶9	25 186 01-S	2	Arm-Rocker				
❶10	25 599 01-S	2	Pivot-Arm, Rocker				
❶11	25 072 12-S	2	Stud-Rocker				
❶12	25 100 29-S	2	Nut-Hex				
❶13	25 086 112-S	2	Screw-Set				
❶14	M-640034-S	2	Screw-HF (M6x1.0x34)				
❶15	66 032 05-S	2	Seal-Stem, Valve				
❶16	12 089 34-S	2	Spring-Valve				
❶17	12 173 01-S	2	Cap-Spring, Valve				
❶18	12 755 03-S	2	Retainer Kit				
❶19	12 468 05-S	1	Washer-Plain (13/32in)				
❶20	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port				
❶21	20 086 02-S	5	Screw-HF (M10x1.5x81)				
❶22	25 237 14-S	2	Clamp				
❶23	12 326 18-S	1	Hose-Breather				
❶24	M-645016-S	5	Screw-HF (M6x1.0x16)				

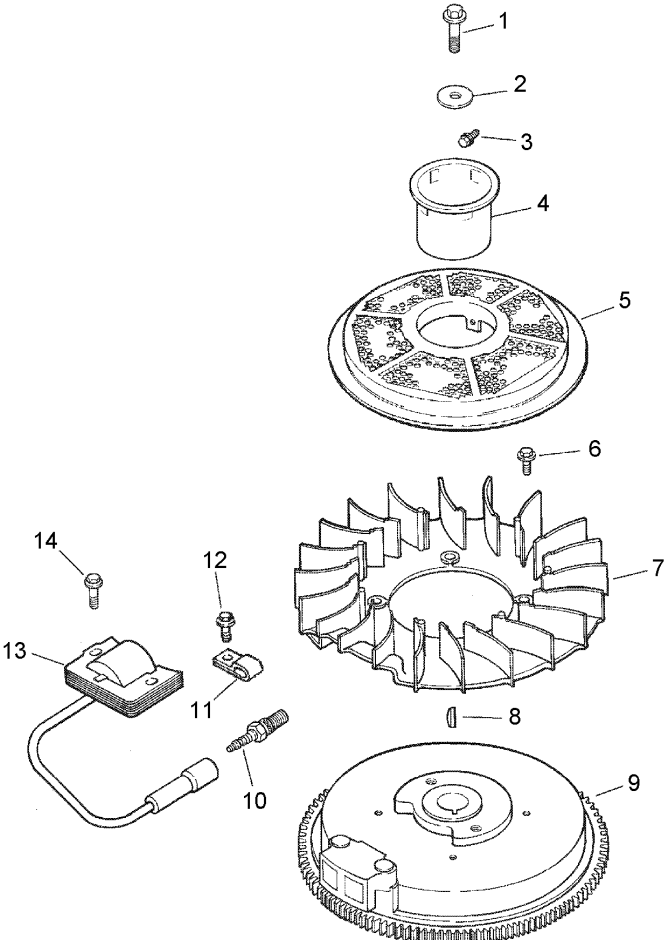


Ignition / Electrical Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
1	12 086 14-S	1	Screw-HF (M10x1.5x46)				
2	12 468 03-S	1	Washer-Plain (3/8in)				
3	M-545010-S	3	Screw-HF (M5x0.8x10)				
4	12 109 07-S	1	Cup-Drive, Starter				
5	12 162 09-S	1	Screen-Grass				
6	25 086 47-S	4	Bolt-Shoulder (M6x1.0x16)				
7	12 157 03-S	1	Fan				
8	X-42-15-S	1	Key				
9	12 025 56-S	1	Flywheel				
10	12 132 02-S	1	Spark Plug				
11	X-728-1-S	1	Clip				
12	M-545010-S	3	Screw-HF (M5x0.8x10)				
13	12 584 05-S	1	Module-Ignition				
14	M-545020-S	2	Screw-HF (M5x0.8x20)				
15	25 086 110-S	2	Screw-Tapping, Slotted				
16	12 518 07-S	1	Lead-White (18in, 18 Gauge, Fully Insulated Female Disconnect Terminals)				
17	12 454 03-S	1	Tie-Wire				

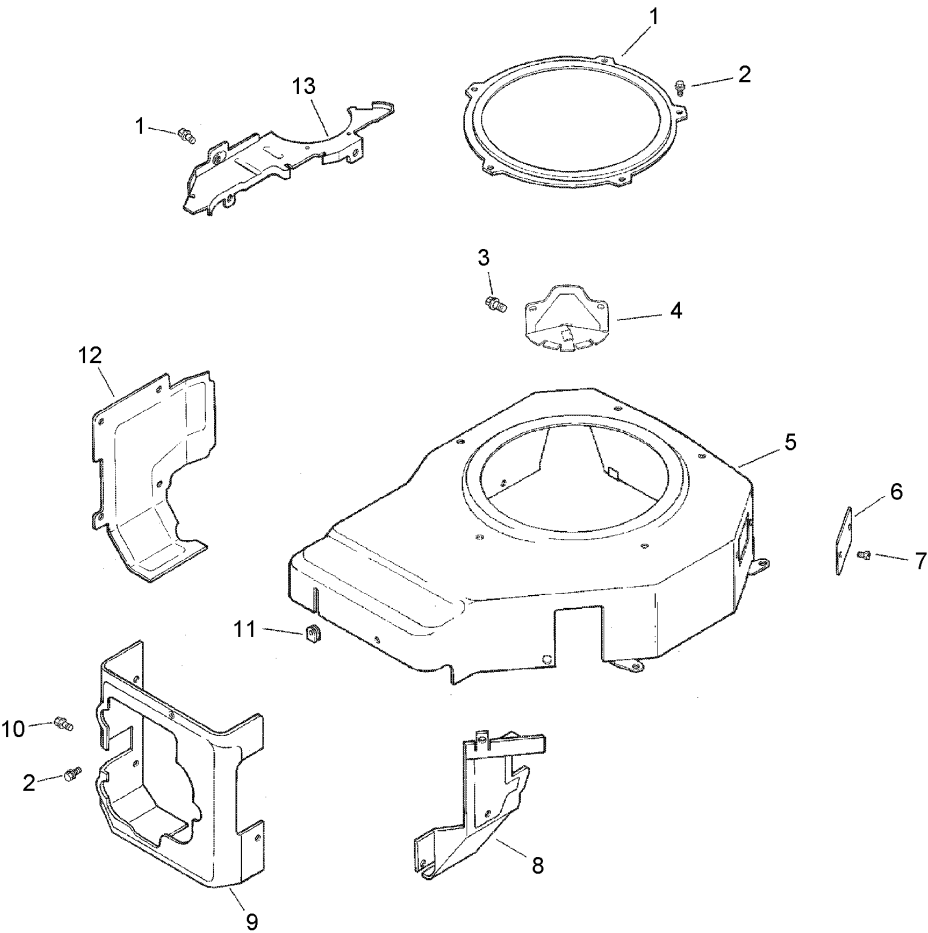


Blower Housing and Baffle Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
❶1	12 314 10-S	1	Guard-Screen, Grass				
❷2	M-545010-S	8	Screw-HF (M5x0.8x10)				
❸3	M-550010-S	6	Screw-HF (M5x0.8x10)				
❹4	12 096 29-S	1	Cover-Starter				
❺5	12 027 53-S	1	Housing-Blower				
❻6	12 096 27-S	1	Cover (Rectifier-regulator)				
❼7	M-639016-S	2	Screw-HF (M6x1.0x16)				
❽8	12 063 10-S	1	Baffle-Side, Intake				
❾9	12 063 08-S	1	Baffle-Head, Cylinder				
❿10	M-561016-S	1	Screw-HF (M5x0.8x16)				
⓫11	12 313 03-S	1	Grommet-Spark Plug				
⓬12	12 063 19-S	1	Baffle				
⓭13	12 146 07-S	1	Plate-Housing, Blower				
⓯❶	12 113 124-S	1	Decal-15hp				
⓯❶	25 113 39-S	1	Decal-Lamination, Clear				

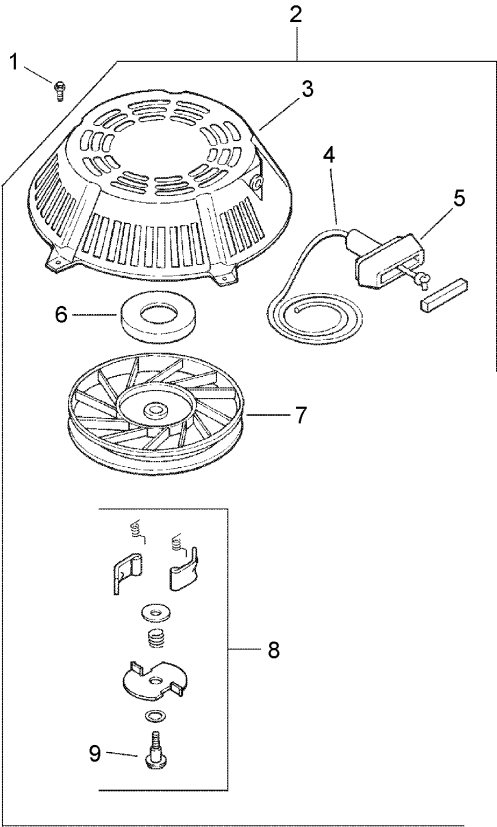


Starting System Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
❶1	M-550010-S	5	Screw-HF (M5x0.8x10)				
❷2	12 165 01-S	1	Retractable Starter ASM (Includes 3-9)				
❸3	12 081 01-S	1	Housing-Starter				
❹4	12 160 01-S	1	Rope-Starter				
❺5	25 166 01-S	1	Handle-Start, Recoil				
❻6	12 089 06-S	1	Spring And Keeper				
❼7	12 093 01-S	1	Pulley				
❸8	12 757 06-S	1	Dog Repair Kit (Includes 9)				
❹9	41 086 09-S	1	Screw-Pozidriv				
❶❸	12 113 07-S	1	Decal-Starting				

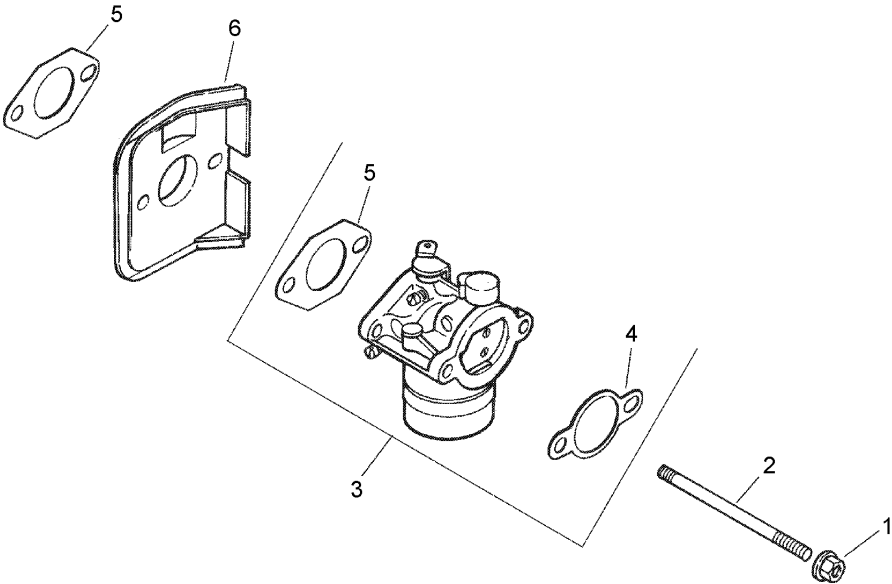

Fuel System Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description				
1	M-641060-S	2	Nut-HF				
2	M-629116-S	2	Stud (M6x1.0x116)				
3	12 853 140-S	1	Carburetor Kit (Includes 4, 5)				
4	12 041 02-S	1	Gasket-Base, Air Cleaner				
5	12 041 01-S	2	Gasket-Carburetor				
6	12 265 04-S	1	Deflector-Heat				
13	12 757 02-S	1	Float Kit				
13	12 757 03-S	1	Carburetor Repair Kit				
13	12 757 08-S	1	Choke Repair Kit				
13	12 757 36-S	1	Throttle Shaft Bearing Kit				
13	12 757 37-S	1	Bowl Replacement Kit				
13	12 755 92-S	1	High Altitude Kit				

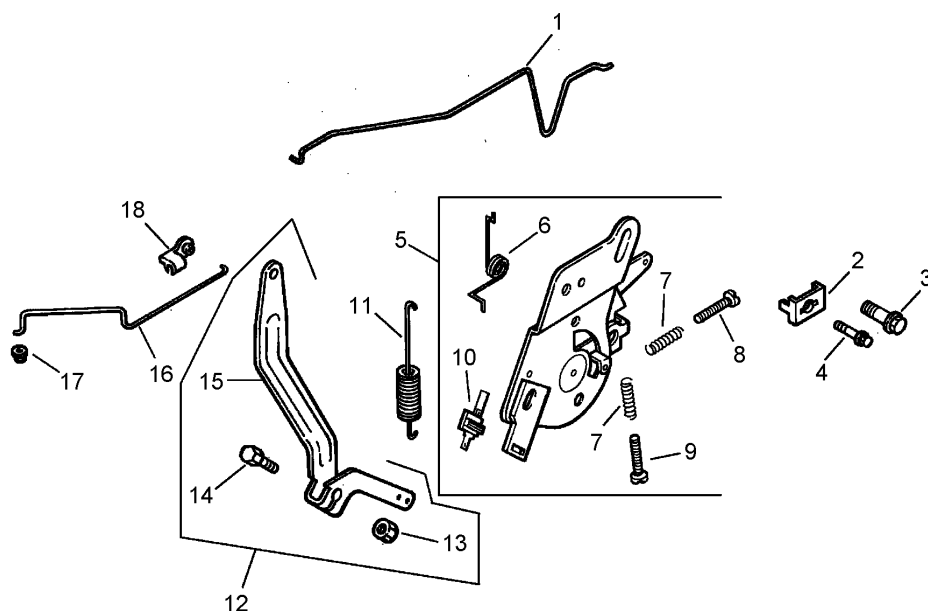

Engine Control Assembly


Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
③1	12 079 07-S	1	Linkage-Choke				
③2	12 237 01-S	1	Clamp-Cable				
③3	M-664020-S	2	Screw-Socket, Lobed (M6x1.0x20)				
③4	M-545016-S	2	Screw-HF (M5x0.8x16)				
③5	12 536 06-S	1	Speed Control ASM (Includes 6-10)				
③6	12 089 23-S	1	Spring-Return, Choke				
③7	12 089 11-S	2	Spring-Control, Speed				
③8	12 086 39-S	1	Screw-Pan Head (W/loctite)				
③9	M-443020-S	1	Screw-Pan Head (M4x0.7x20)				
③10	25 452 14-S	1	Terminal-Switch, Kill				
③11	12 089 19-S	1	Spring-Governor				
③12	12 755 83-S	1	Governor Lever Kit (Includes 13-15)				
③13	12 100 07-S	1	Nut-HF (M6x1.0)				
③14	52 211 04-S	1	Screw-HF (M6x1.0x25)				
③15	12 090 28-S	1	Lever-Governor				
③16	12 079 01-S	1	Linkage-Throttle				
③17	25 158 08-S	1	Bushing-Retaining, Linkage				
③18	25 158 11-S	1	Bushing-Retaining, Linkage				

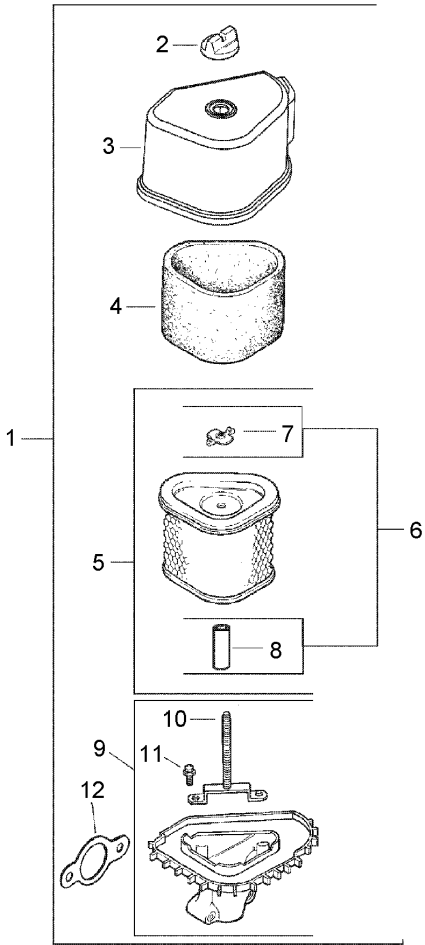

Air Intake / Filtration Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
1	12 743 04-S	1	Air Cleaner Kit (Includes 2-12)				
2	20 341 01-S	1	Knob-Cover				
3	12 096 44-S	1	Cover-Cleaner, Air				
4	12 083 12-S	1	Precleaner				
5	12 083 10-S	1	Element-Cleaner, Air (Includes 6-8)				
6	12 743 12-S	1	Seal Kit (Includes 7, 8)				
7	12 100 08-S	1	Nut-Wing				
8	12 032 11-S	1	Seal				
9	12 094 14-S	1	Base-Cleaner, Air (Includes 10, 11)				
10	12 072 04-S	1	Stud-Plate, Mounting				
11	12 086 01-S	2	Screw				
12	12 041 02-S	1	Gasket-Base, Air Cleaner				
13	12 113 04-S	1	Decal-Cleaner, Air				

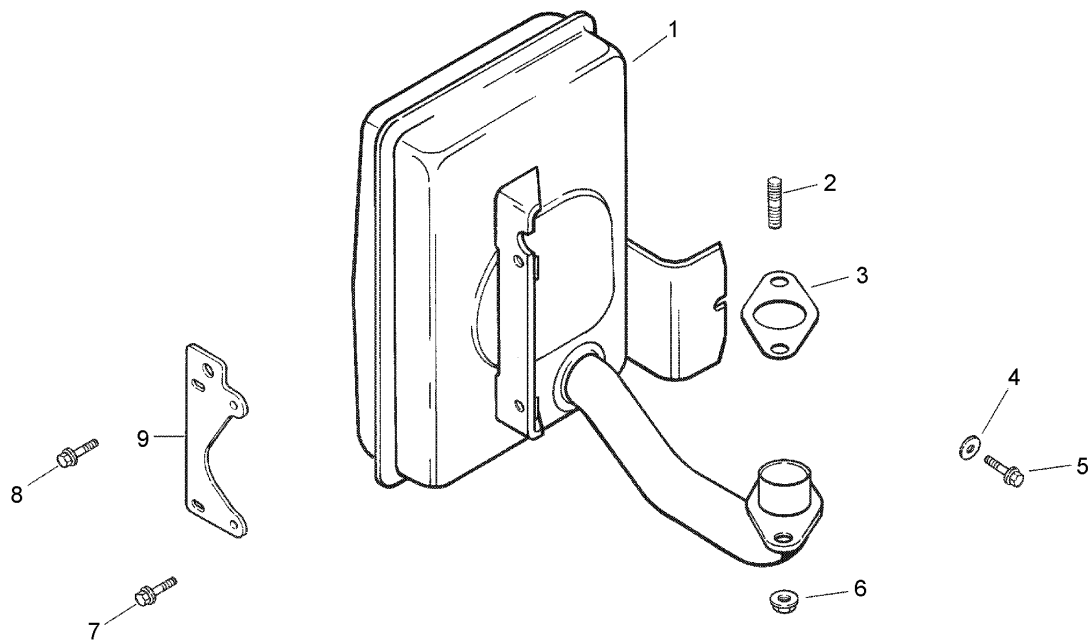

Exhaust Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
1	12 068 44-S	1	Muffler				
2	25 072 04-S	2	Stud (M8x1.25x33)				
3	12 041 03-S	1	Gasket-Manifold, Exhaust				
4	X-25-78-S	1	Washer-Plain (1/4in)				
5	M-545016-S	1	Screw-HF (M5x0.8x16)				
6	M-841080-S	2	Nut-HF (M8x1.25)				
7	M-645016-S	2	Screw-HF (M6x1.0x16)				
8	M-645025-S	2	Screw-HF (M6x1.0x25)				
9	12 126 71-S	1	Bracket-Muffler				
10	12 112 20-S	2	Spacer				
11	12 522 18	1	Block-Short				
12	12 755 93-S	1	Gasket Set				

Attachments and Accessories

For 30527 - Mid-Size ProLine Pistol Grip Hydro, 15 HP with 36in Side Discharge Mower

Product Name	Model/Part
Atomic Blade With Decal ASM	. 104-8590
Weight Kit	. 107-4100
Sulky	. 30109
36in Recycler Kit	. 30142
Soft Bag (3 Bushel)	. 30198

NOTES

NOTES

