



Z557 Z Master[®]

With 152cm TURBO FORCE Side Discharge Mower

Model No. 74246TE - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		


Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain Parts From Kohler
- ❹ Optional equipment

Contents

Description	Page	Description	Page
Front Frame Assembly	3	Group 2-Crankcase Assembly Kohler CH740-0007	28
Castor and Wheel Assembly	5	Group 3-Oil Pan/Lubrication Assembly Kohler CH740-0007	29
Main Frame Assembly	6	Group 4-Head/Valve/Breather Assembly Kohler CH740-0007	30
Brake and Wheel Hub Assembly	7	Group 5-Ignition/Electrical Assembly Kohler CH740-0007	31
Steering Control Assembly	8	Group 6-Blower Housing Assembly Kohler CH740-0007	32
Hydraulic System Assembly	9	Group 7-Starter Assembly Kohler CH740-0007	33
Seat and Roll-Over-Protection-System Assembly	11	Group 8-Fuel System Assembly Kohler CH740-0007	34
Seat Assembly No. 107-1867	12	Group 9-Engine Control Assembly Kohler CH740-0007	35
Roll-Over-Protection-System Assembly No. 107-0038	13	Group 10-Air Intake/Filtration Assembly Kohler CH740-0007	36
Deck Mounting Assembly	14	Group 11-Exhaust Assembly Kohler CH740-0007	37
Drive Idler Assembly	15		
Z-Stand Assembly	16		
Engine and Clutch Assembly	17		
Muffler and Guard Assembly	18		
Fuel Tank Assembly	19		
Electrical Components Assembly	20		
Deck Assembly	21		
Spindle Assembly No. 106-3217	23		
Deck Assembly No. 107-3974	24		
Rubber Deflector Assembly No. 106-3249	25		
Lever Assembly No. 106-3242	26		
Group 1-Crankshaft Assembly Kohler CH740-0007	27		


PROTOTYPE

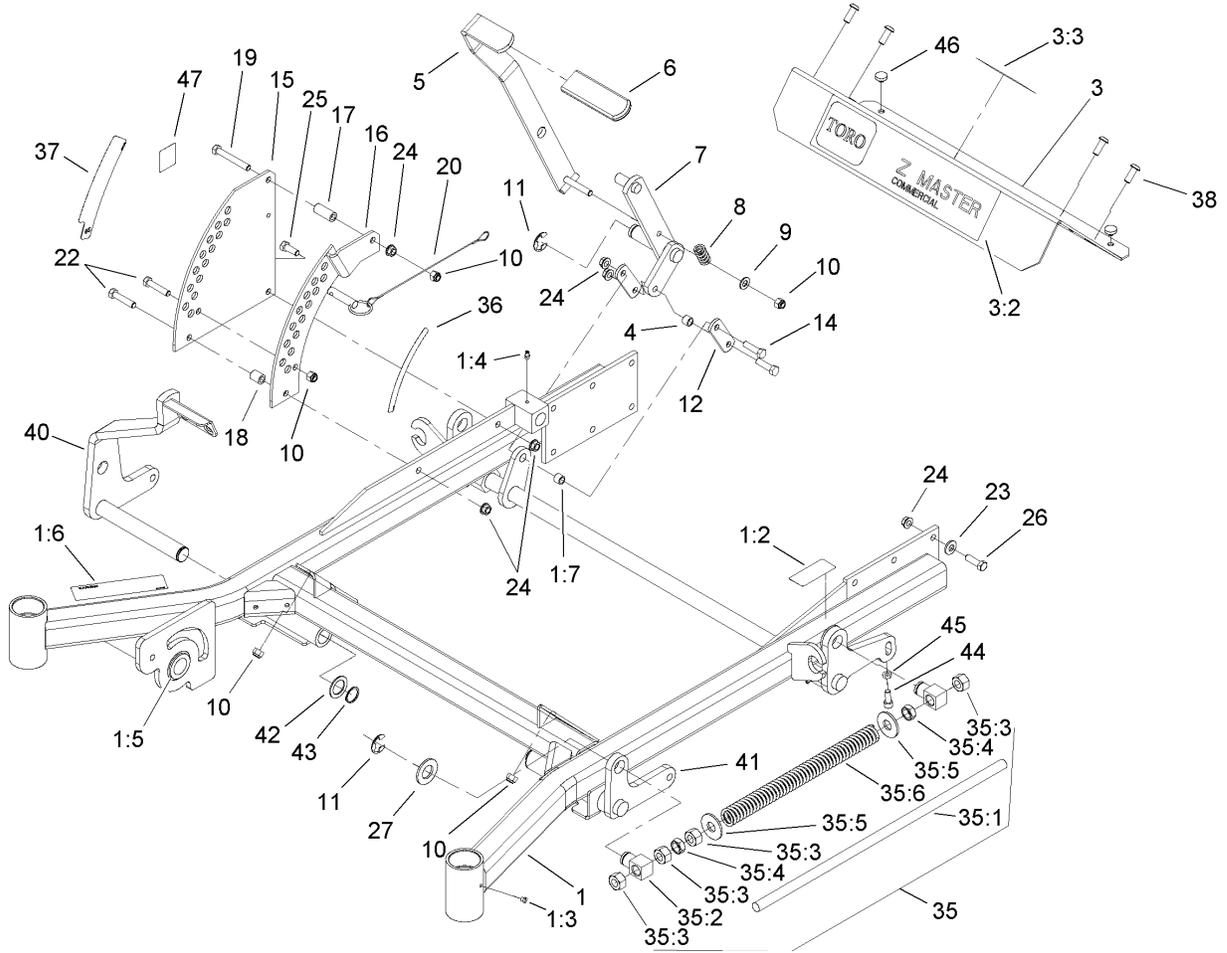

Front Frame Assembly

Ref	Part No.	Qty.	Description
1	107-3980	1	Front Frame ASM
1:2	107-3968	1	Decal-Brake, Parking
1:3	1-811010	2	Plug
1:4	302-19	5	Fitting-Grease
1:5	94-1291	2	Bushing
1:6	107-3969	1	Decal-Warning (Z-stand)
1:7	103-1918	1	Bushing
3	107-3976	1	Footrest
3:2	106-7451	1	Decal
3:3	107-1866	1	Decal-Danger, Slope
4	103-1918	1	Bushing
5	103-2083-03	1	Lever-Lift
6	1-633295	1	Grip-Lever, Lift
7	103-2064-03	1	Arm-Lift, Deck
8	1-633325	1	Spring-Compression
9	3256-24	1	Washer-Flat
10	3296-39	9	Nut-Lock, NI
11	32151-103	5	Ring-Snap
12	1-633068	2	Arm-Lift, Deck
14	323-29	2	Screw-HH
15	1-633889-01	1	Plate-Lift, Deck
16	1-632899-01	1	Plate-Lift, Deck
17	1-633082	1	Bushing-Lever, Lift
18	1-633080	1	Bushing-Lever, Lift

Ref	Part No.	Qty.	Description
19	323-13	1	Screw-HH
20	106-9951	1	Hitch Pin ASM
22	323-9	2	Screw-HH
23	98-5975	12	Washer-Belleville
24	3290-357	15	Nut-HHF
25	323-6	1	Screw-HH
26	323-7	12	Screw-HH
27	3256-29	4	Washer-Flat
35		2	Front Frame Spring ASM
35:1	1-633096	1	Rod-Lift, Deck
35:2	1-633441	2	Swivel-Deck Mount, Rear
35:3	3217-11	4	Nut-Hex
35:4	3218-6	2	Nut-Jam
35:5	3256-7	2	Washer-Flat
35:6	1-633064	1	Spring-Support, Deck
36	107-3962	1	Decal-Deck Height, Small
37	107-3961	1	Decal-Deck Height, Large
38	3274-94	4	Screw-HSBH
40	106-8983-01	1	RH Deck Lift ASM
41	106-8984-01	1	LH Deck Lift ASM
42	1-523157	2	Washer-Spacer
43	32151-29	2	Ring-Retaining
44	3274-18	2	Screw-HSH
45	3218-2	2	Nut-Jam

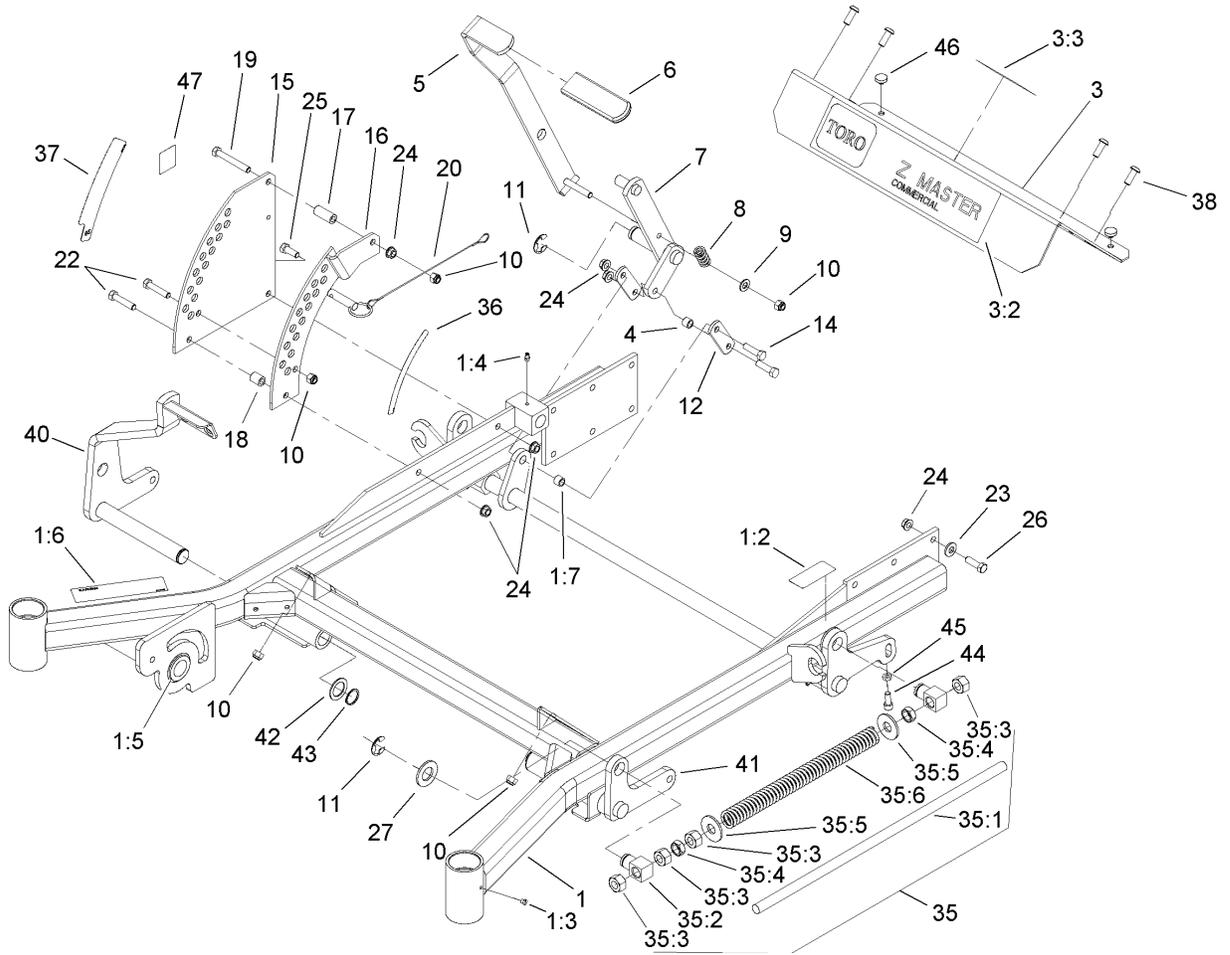


Front Frame Assembly (continued)

Ref	Part No.	Qty.	Description
46	1-513658	2	Bumper
47	105-4674	1	Decal-Noise, Ce

--	--	--	--

PROTOTYPE

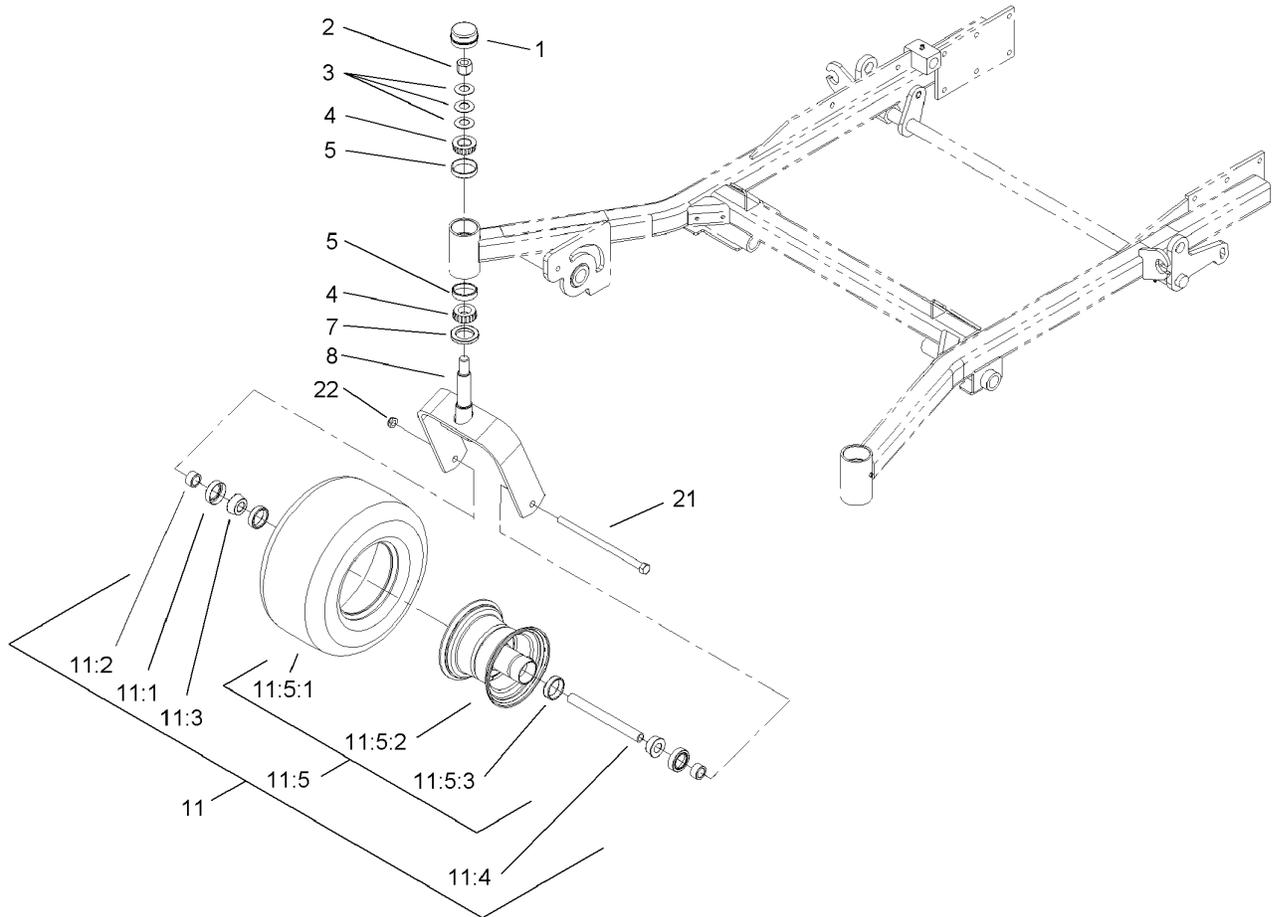


Castor and Wheel Assembly

Ref	Part No.	Qty.	Description
1	1-543513	2	Cap-Grease
2	3296-51	2	Nut-Lock, NI
3	1-633508	6	Washer-Bellville
4	254-94	4	Bearing-Cone, Tapered
5	254-72	4	Bearing-Cup, Tapered
7	1-543511	2	Seal-Grease
8	103-1474-01	2	Fork-Caster
11	1-644251	2	Caster Wheel ASM
11:1	1-633580	2	Seal-Bearing
11:2	1-633581	2	Spacer-Bearing
11:3	1-633585	2	Bearing-Cone, Taper
11:4	1-633959	1	Spacer-Caster, Front
11:5		1	Wheel & Tire ASM
11:5:1	1-523009	1	Tire
11:5:2	1-633987	1	Wheel
11:5:3	1-633584	2	Bearing-Cup
21	325-39	2	Screw-HH
22	3296-45	2	Nut-Lock, NI

--	--	--	--


PROTOTYPE

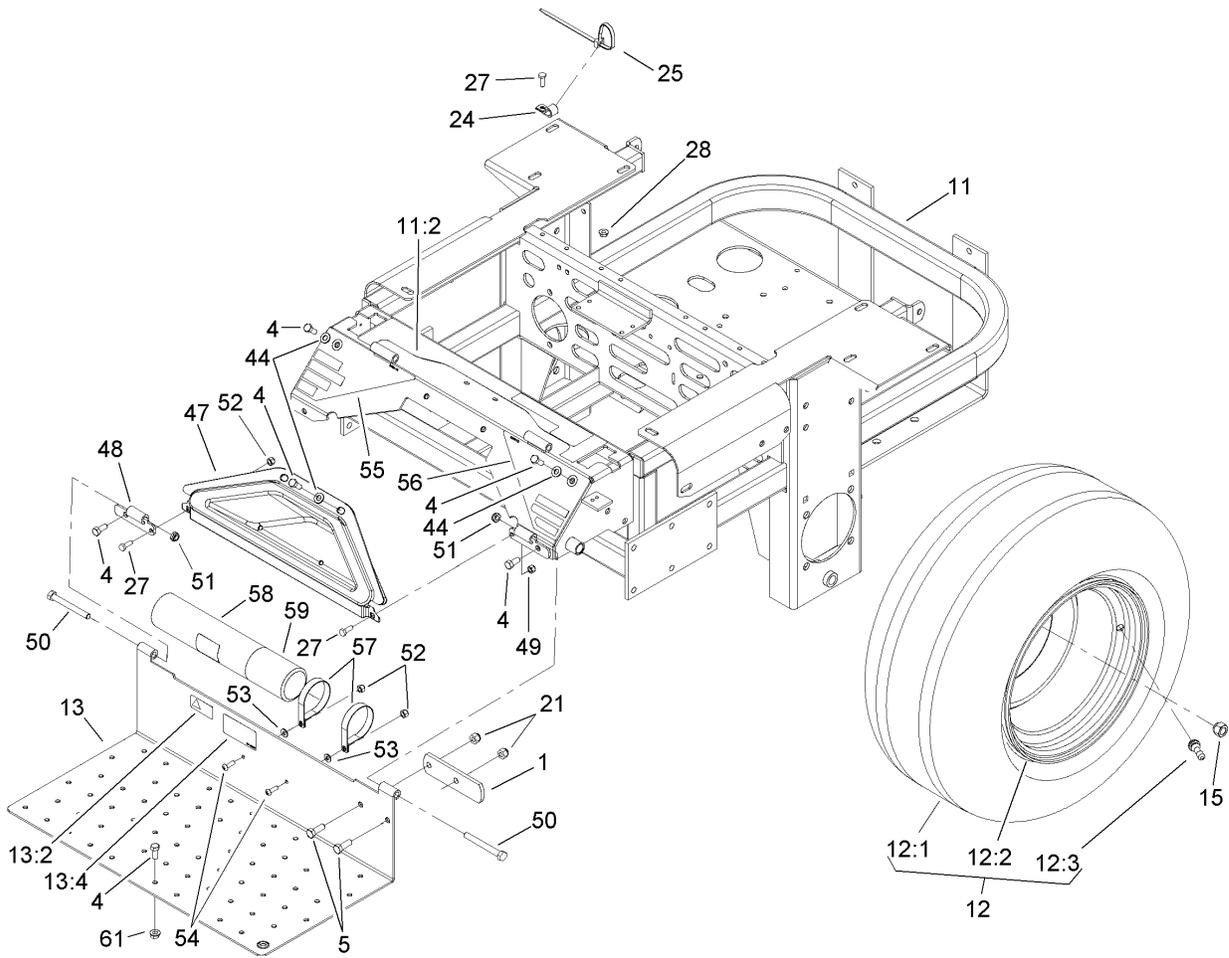

Main Frame Assembly

Ref	Part No.	Qty.	Description
1	1-633964-03	1	Stop-Brake, Park
4	322-43	7	Screw-HH
5	323-6	2	Screw-HH
11	107-3966	1	Main Frame ASM
11:2	107-9872	1	Decal-Console, Top
12	1-633970	2	Wheel And Tire ASM
12:1	1-633993	1	Tire
12:2	1-633992	1	Wheel
12:3	232-27	1	Stem-Valve
13	107-3981	1	Floorpan
13:2	98-4387	1	Decal-Protection, Ear
13:4	107-3982	1	Decal-Location, Manual
15	242-50	8	Nut-Lug
21	3296-39	2	Nut-Lock, NI
24	1-513762	1	Clip-Loom
25	1-303335	1	Tie-Plastic
27	321-4	3	Screw-HH
28	32128-33	1	Nut-HF
44	3256-70	6	Washer-Flat
47	106-7498	1	Pocket
48	106-7488-03	1	Hinge-Floorpan, LH
49	106-7489-03	1	Hinge-Floorpan, RH
50	323-20	2	Screw-HH
51	3296-59	2	Nut-Lock, NI


Ref	Part No.	Qty.	Description
52	3296-42	4	Nut-Lock, NI
53	3256-63	2	Washer-Flat
54	3258-166	2	Screw
55	107-3964	1	Decal-Warning, Right
56	107-3963	1	Decal-Danger, Left
57	107-1865	2	R-Clamp
58	104-7050	1	Housing-Manual
59	104-7048	1	Cap-Housing
61	32128-25	1	Nut-HF

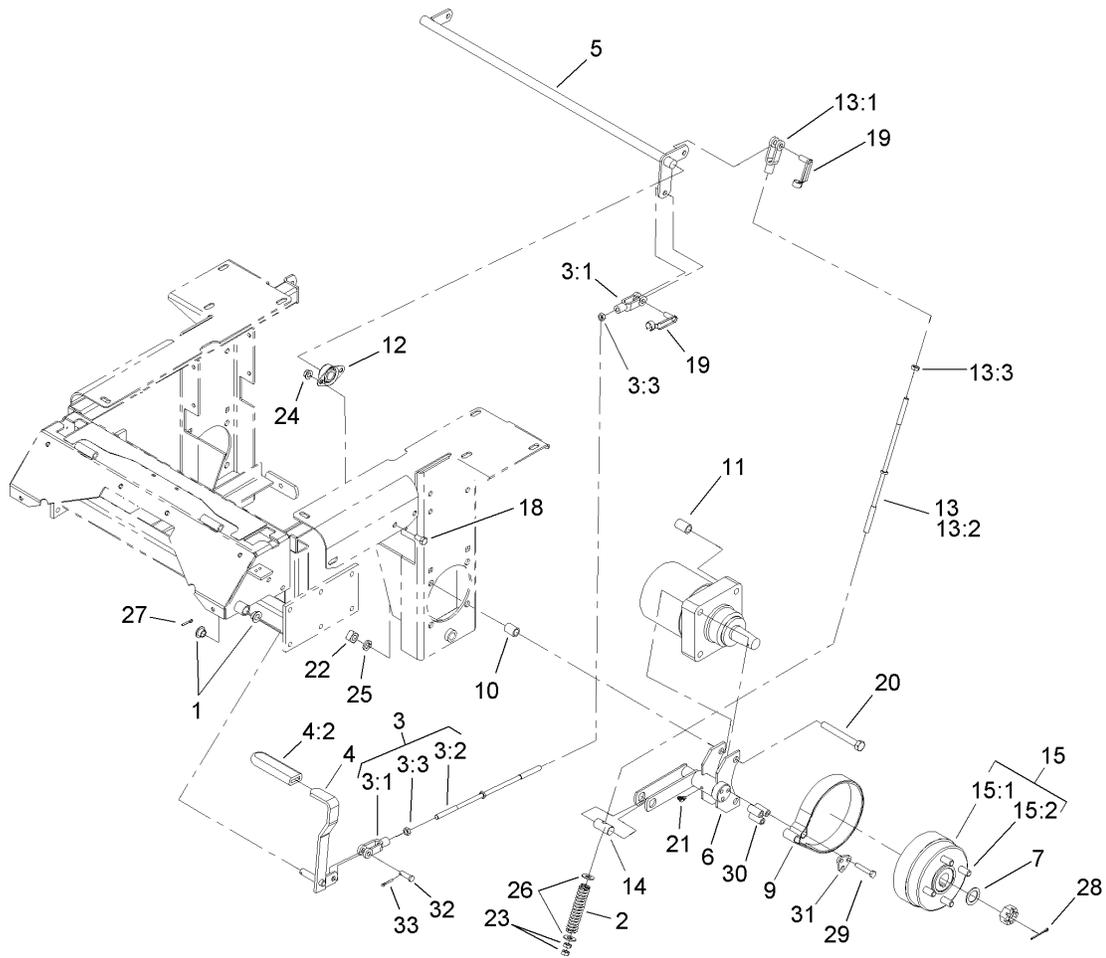

Brake and Wheel Hub Assembly

Ref	Part No.	Qty.	Description
1	1-513140	2	Bearing-Control
2	1-633454	2	Spring-Brake
3	103-4332	1	Brake Rod And Yoke ASM
3:1	1-633131	2	Yoke-Linkage, Brake
3:2	1-633477	1	Rod-Brake
3:3	3219-3	2	Nut-HH
4	1-634500	1	Brake Lever ASM
4:2	1-633268	1	Grip-Lever, Brake
5	1-632217-03	1	Shaft-Brake
6	103-0352-03	2	Bracket-Brake
7	1-523157	2	Washer-Spacer
9	103-0355	2	Band-Brake
10	1-633380	4	Spacer-Wheel, Short
11	1-633382	4	Spacer-Wheel, Long
12	1-633102	2	Bearing-Flange, Side
13	103-4333	2	Brake Rod And Yoke ASM
13:1	1-633131	1	Yoke-Linkage, Brake
13:2	1-633477	1	Rod-Brake
13:3	3219-3	1	Nut-HH
14	1-633144	2	Pin-Trunion
15	103-0590	2	Hub And Wheel ASM
15:1	103-0589	1	Wheel Hub ASM
15:2	1-633926	4	Stud-Wheel
18	323-4	4	Screw-HH


Ref	Part No.	Qty.	Description
19	103-2399	3	Pin-Spring, Clevis
20	325-17	8	Screw-HH
21	1481	2	Fitting-Grease
22	103-0131	8	Nut-Square
23	3219-3	4	Nut-HH
24	3290-357	4	Nut-HHF
25	3253-7	8	Washer-Lock
26	3256-4	4	Washer-Flat
27	3272-10	1	Pin-Cotter
28	1-806800	2	Pin-Cotter
29	322-9	6	Screw-HH
30	103-0384	6	Spacer
31	103-0374	2	Retainer-Band, Brake
32	1-808285	1	Pin-Clevis
33	3272-10	1	Pin-Cotter

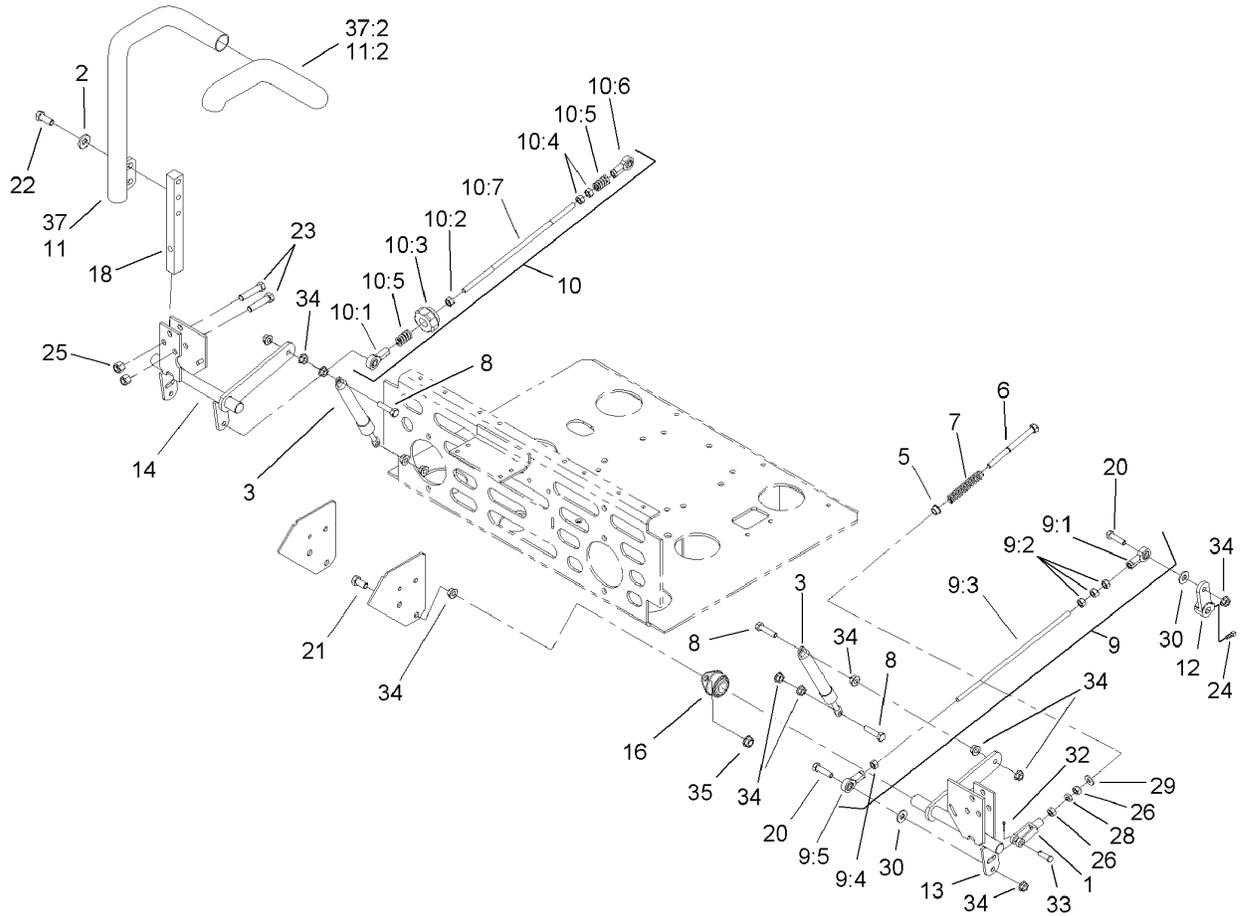

Steering Control Assembly

Ref	Part No.	Qty.	Description
1	1-303105	2	Yoke-Adjustable
2	98-5975	4	Washer-Belleville
3	103-4079	2	Damper-Control, Motion
5	1-603735	2	Bushing-Flanged
6	1-603737	2	Bolt-Return, Neutral
7	1-603807	2	Spring-Return, Neutral
8	1-403180	4	Screw-HH
9	103-4331	1	Tracking Rod ASM
9:1	1-543017	1	Balljoint-RH
9:2	3219-2	3	Nut-Hex
9:3	103-3064	1	Link-Rod, Tracking
9:4	1-804524	1	Nut
9:5	1-633152	1	Balljoint-Thread, LH
10	103-4330	1	Tracking Rod ASM
10:1	1-543017	1	Balljoint-RH
10:2	3219-2	1	Nut-Hex
10:3	103-3060	1	Knob-Tracking
10:4	1-804524	2	Nut
10:5	1-323245	2	Spring-Compression
10:6	1-633152	1	Balljoint-Thread, LH
10:7	103-3064	1	Link-Rod, Tracking
11	106-9982	1	LH Lever ASM
11:2	106-9987	1	Grip-Control, Motion
12	1-632208	2	Arm-Control, Pump


Ref	Part No.	Qty.	Description
13	103-4781	1	Control-Motion, LH
14	103-4782	1	Control-Motion, RH
16	1-633102	4	Bearing-Flange, Side
18	103-0407	2	Arm-Shaft, Control
20	322-6	4	Screw-HH
21	323-4	8	Screw-HH
22	323-6	4	Screw-HH
23	323-9	6	Screw-HH
24	1-803022	2	Screw-Set
25	3296-39	6	Nut-Lock, NI
26	3219-2	4	Nut-Hex
28	3220-2	2	Nut
29	3256-2	2	Washer-Flat
30	3256-3	4	Washer-Flat
32	3272-5	2	Pin-Cotter
33	1-808280	2	Pin-Clevis
34	32128-20	16	Nut-HF
35	3290-357	8	Nut-HHF
37	106-9983	1	RH Lever ASM
37:2	106-9987	1	Grip-Control, Motion

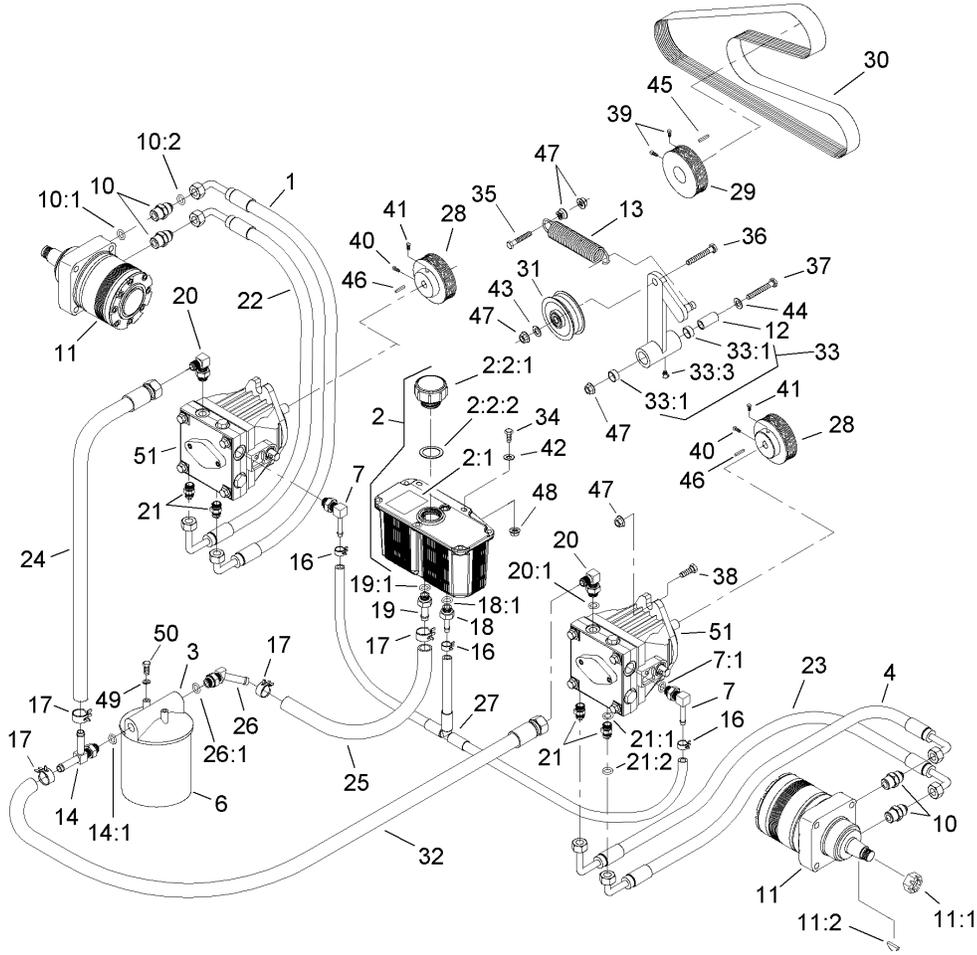

Hydraulic System Assembly

Ref	Part No.	Qty.	Description
1	103-3736	1	HYD Hose ASM
2	107-8433	1	HYD Reservoir ASM
2:1	107-2131	1	Decal-Surface, Hot
2:2:1	103-1948	1	Cap-Reservoir, HYD
2:2:2	103-1949	1	Gasket-Cap
3	104-7836	1	Head-Filter
4	103-3733	1	HYD Hose ASM
6	1-633750	1	Filter-HYD
6	1-633752	1	Filter-Hyd, Winter
7	103-1799	2	Elbow-90 DEG
7:1	237-42	1	O-Ring
10	1-603991	4	Fitting-Straight
10:1	237-80	1	O-Ring
10:2	1-603992	1	O-Ring
11	1-523328	2	Motor-Wheel
11:1	1-809036	1	Nut-HH
11:2	3257-42	1	Key-Woodruff
11:99	103-2748	1	Drive Link Kit
11:99	1-000099	1	Seal Kit
11:99	1-000139	1	Bearing Kit
12	1-603384	1	Bushing-Pivot, Idler
13	103-3330	1	Spring-Extension
14	103-1828	1	Adapter-Run, Tee
14:1	237-42	1	O-Ring

Ref	Part No.	Qty.	Description
16	103-1716	3	Clamp-Hose
17	103-1988	4	Clamp-Hose
18	103-1801	1	Adapter-Straight
18:1	237-42	1	O-Ring
19	103-1912	1	Adapter-Straight
19:1	237-42	1	O-Ring
20	103-1802	2	Fitting-Hyd, 90 DEG
20:1	237-42	1	O-Ring
21	1-603990	4	Fitting-Straight
21:1	237-79	1	O-Ring
21:2	1-603992	1	O-Ring
22	103-3737	1	HYD Hose ASM
23	103-3735	1	HYD Hose ASM
24	103-1826	1	HYD Hose ASM
25	103-1808	1	Hose-HYD
26	103-1807	1	Elbow-45 DEG
26:1	237-42	1	O-Ring
27	103-1806	1	HYD Hose ASM
28	1-633568	2	Sheave
29	1-633567	1	Sheave
30	1-633749	1	Belt-Drive, Pump
31	1-633167	1	Sheave-Idler
32	103-1827	1	HYD Hose ASM
33	1-634277	1	Bearing Arm ASM

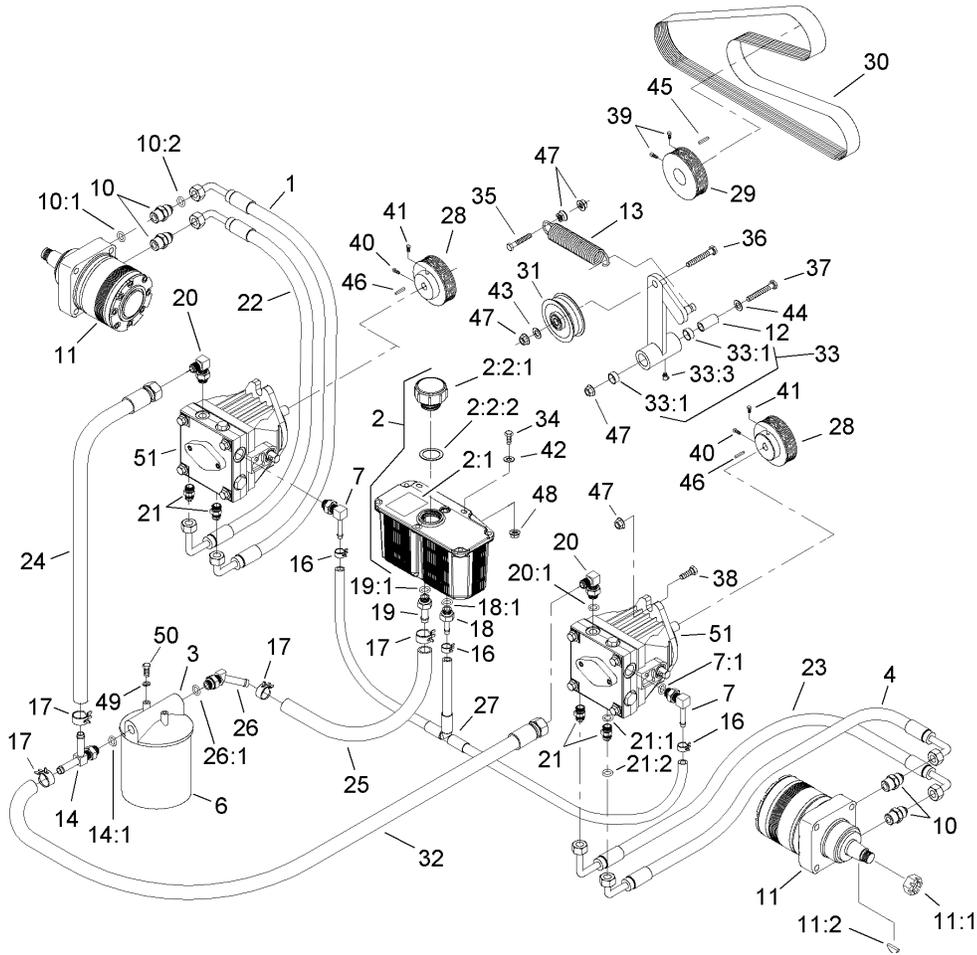


Hydraulic System Assembly (continued)

Ref	Part No.	Qty.	Description
33:1	1-513034	2	Sleeve-Bearing
33:3	302-40	1	Fitting-Grease
34	321-6	2	Screw-HH
35	323-8	1	Screw-HH
36	323-9	1	Screw-HH
37	1-800805	1	Screw-HH
38	323-7	4	Screw-HH
39	1-803022	2	Screw-Set
40	30-1710	2	Screw
41	1-803050	2	Screw-Set
42	3256-22	2	Washer-Flat
43	3256-3	1	Washer-Flat
44	3256-4	1	Washer-Flat
45	13-2840	1	Key-Square
46	1-807272	2	Key
47	3290-357	8	Nut-HHF
48	32128-33	2	Nut-HF
49	1-805004	2	Washer-Lock
50	321-3	2	Screw-HH
51	103-2675	2	Pump-HYD
●51:1	103-2664	1	Input Shaft Kit
●51:2	94-6922	1	Bearing-Thrust
●51:3	103-2666	1	Cylinder Block Kit
●51:4	105-6185	1	Plate-Valve

Ref	Part No.	Qty.	Description
●51:5	105-6184	1	Seal Overhaul Kit
●51:7	106-2053	1	Shock Valve Kit


PROTOTYPE

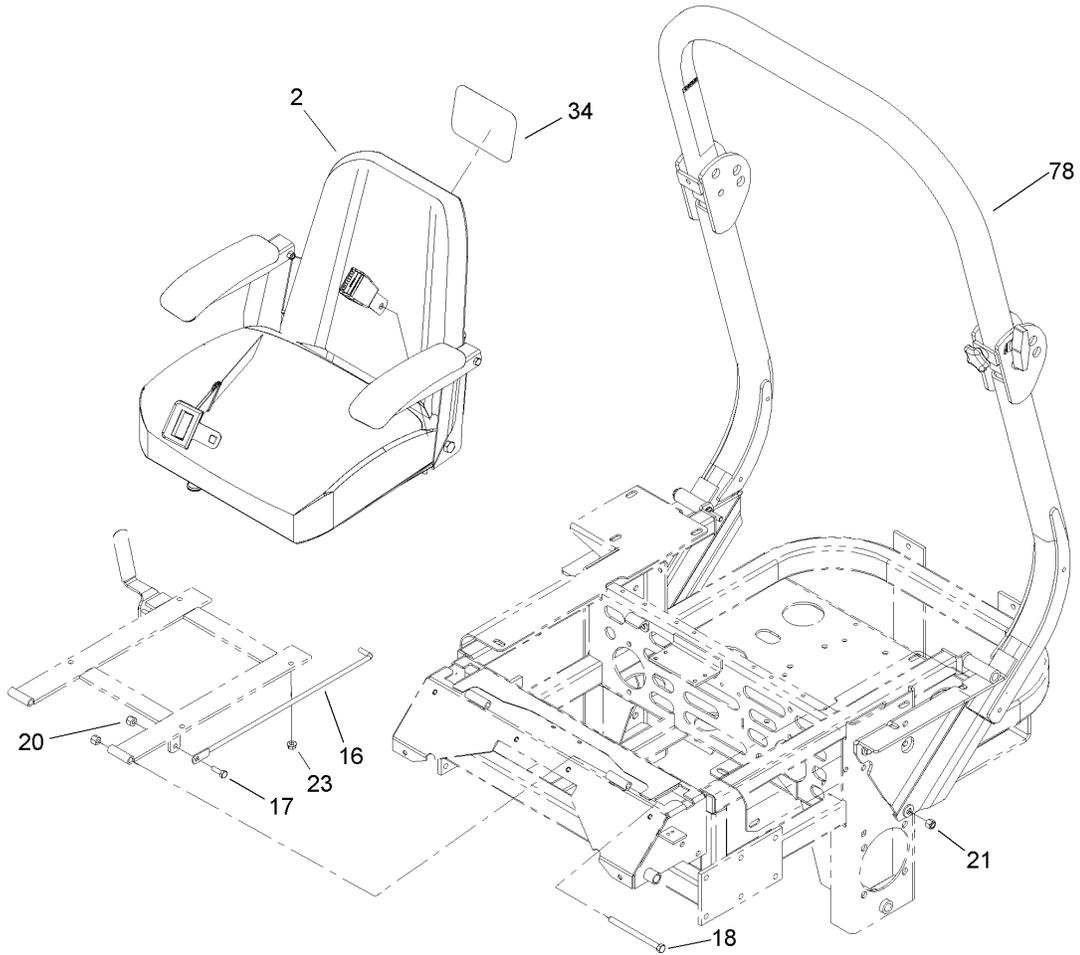

Seat and Roll-Over-Protection-System Assembly


Ref	Part No.	Qty.	Description				
2	107-1867	1	Seat ASM				
16	1-633293	1	Rod-Holdup, Seat				
17	322-5	1	Screw-HH				
18	323-39	2	Screw-HH				
20	3296-29	3	Nut-Lock, NI				
21	3296-39	5	Nut-Lock, NI				
23	32128-20	4	Nut-HF				
34	99-4693	1	Decal				
78	107-0038	1	Rops ASM				


PROTOTYPE

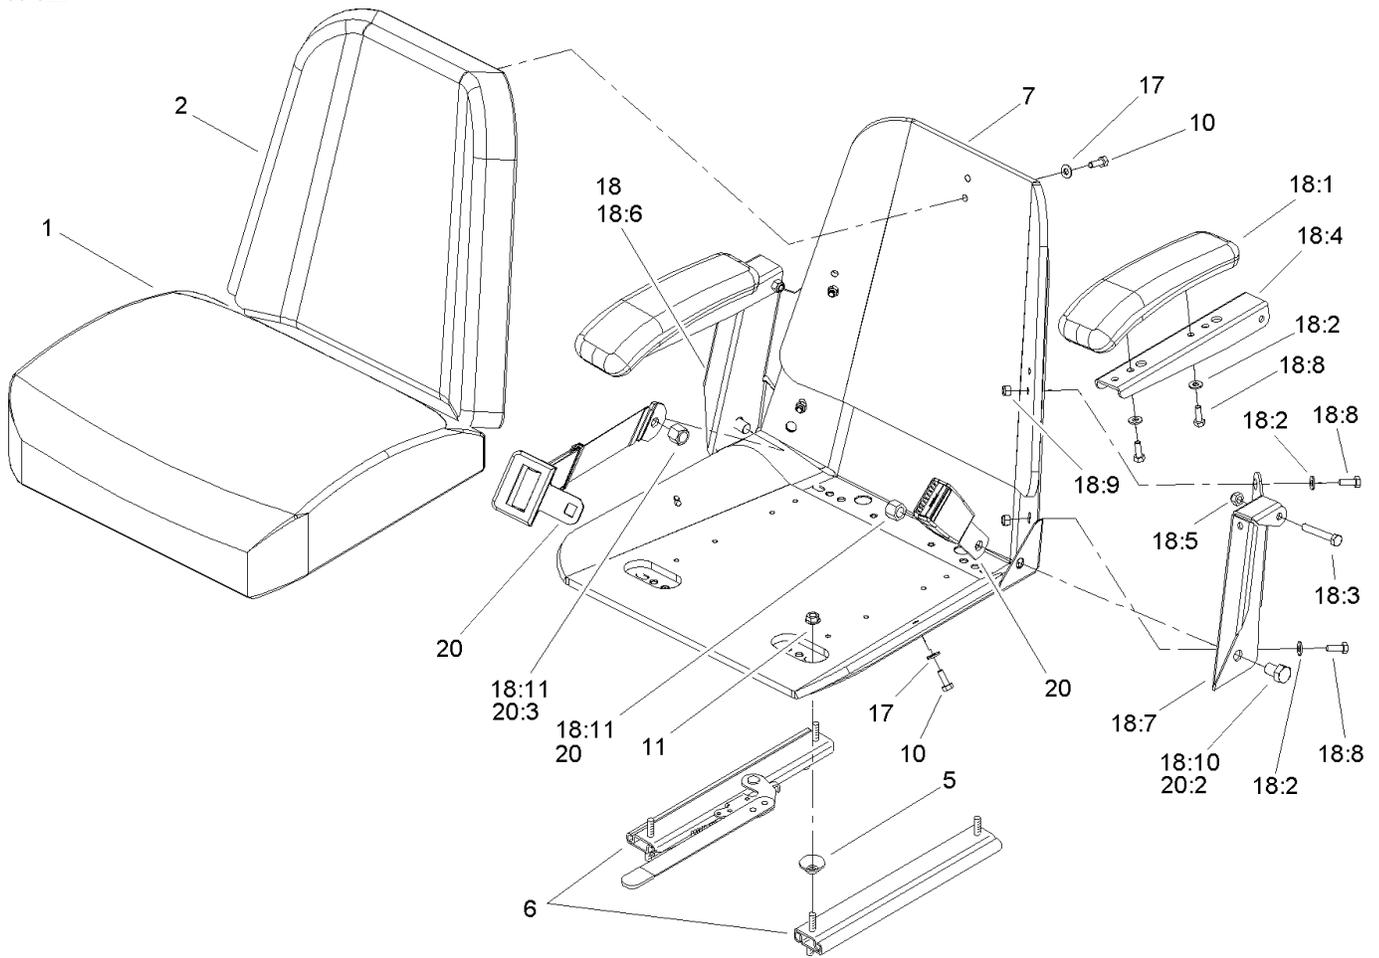

Seat Assembly No. 107-1867

Ref	Part No.	Qty.	Description
1	103-0290	1	Cushion-Seat, Bottom
2	104-7754	1	Cushion-Seat, Back
5	1-543401	4	Spacer-Track
6	1-643255	1	Track-Seat
7	1-633859	1	Frame-Seat
10	321-30	11	Screw-HH
11	32128-20	4	Nut-HF
17	3256-22	11	Washer-Flat
18	105-3620	1	Armrest Kit
18:1	1-633710	2	Cushion-Armrest
18:2	3256-22	4	Washer-Flat
18:3	322-10	2	Screw-HH
18:4	105-3623	2	Channel-Armrest
18:5	32153-3	2	Nut-Lock
18:6	105-3621	1	Bracket-Armrest, RH
18:7	105-3622	1	Bracket-Armrest, LH
18:8	321-30	6	Screw-HH
18:9	3296-42	4	Nut-Lock, NI
18:10	325-2	2	Screw-HH
18:11	3296-23	2	Nut-Lock, NI
20	103-4469	1	Seatbelt Kit
20:2	3212-4	2	Screw-HH
20:3	3296-38	2	Nut-Lock NI

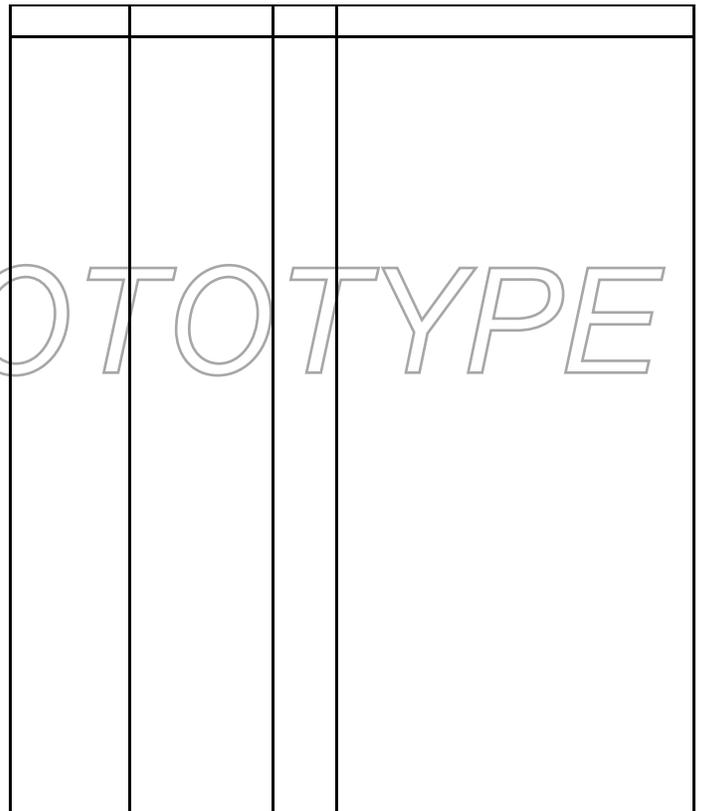


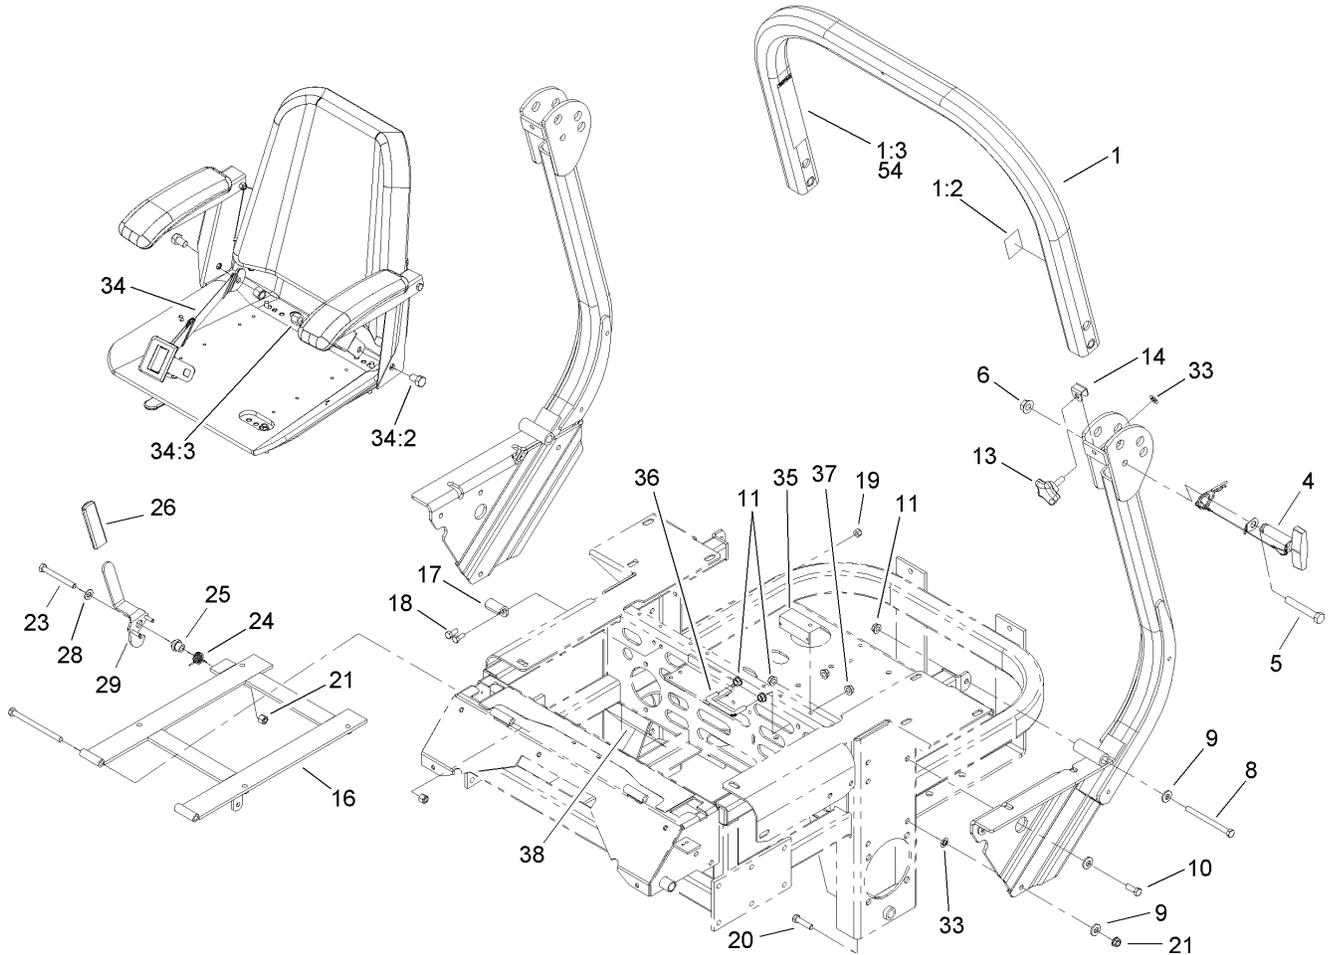

Roll-Over-Protection-System Assembly No. 107-0038

Ref	Part No.	Qty.	Description
1		1	Upper Tube ASM
1:2	107-2101	1	Decal-Rops
1:3	107-2102	1	Decal-Warning, Folding Rops
4	107-3060	2	Pin Latch ASM
5	325-13	2	Screw-HH
6	32128-23	2	Nut-HF
8	323-23	2	Screw-HH
9	98-5975	8	Washer-Belleville
10	323-6	4	Screw-HH
11	3290-357	8	Nut-HHF
13	106-0887	2	Knob
14	107-3124	2	Clip
16	107-3052-03	1	Frame-Support, Seat
17	107-3058	1	Catch-Latch, Seat
18	322-3	2	Screw-HH
19	3296-29	2	Nut-Lock, NI
20	323-8	2	Screw-HH
21	3296-39	3	Nut-Lock, NI
23	323-20	1	Screw-HH
24	107-0076	1	Spring-Torsion
25	107-0075	1	Bushing-Latch, Seat
26	62-9130	1	Grip-Handle
28	3256-24	1	Washer-Flat
29	107-3083	1	Latch ASM


Ref	Part No.	Qty.	Description
33	107-3154	4	Nut-Push
34	103-4469	1	Seatbelt Kit
34:2	3212-4	2	Screw-HH
34:3	3296-38	2	Nut-Lock NI
35	107-3074	1	Template-Drill, Seat Catch
36	107-3073	1	U-Bolt
37	32128-21	2	Nut-HF
38	107-2112	1	Decal-Warning
54	107-3069	1	Decal-Warning, Folding Rops (Ce)

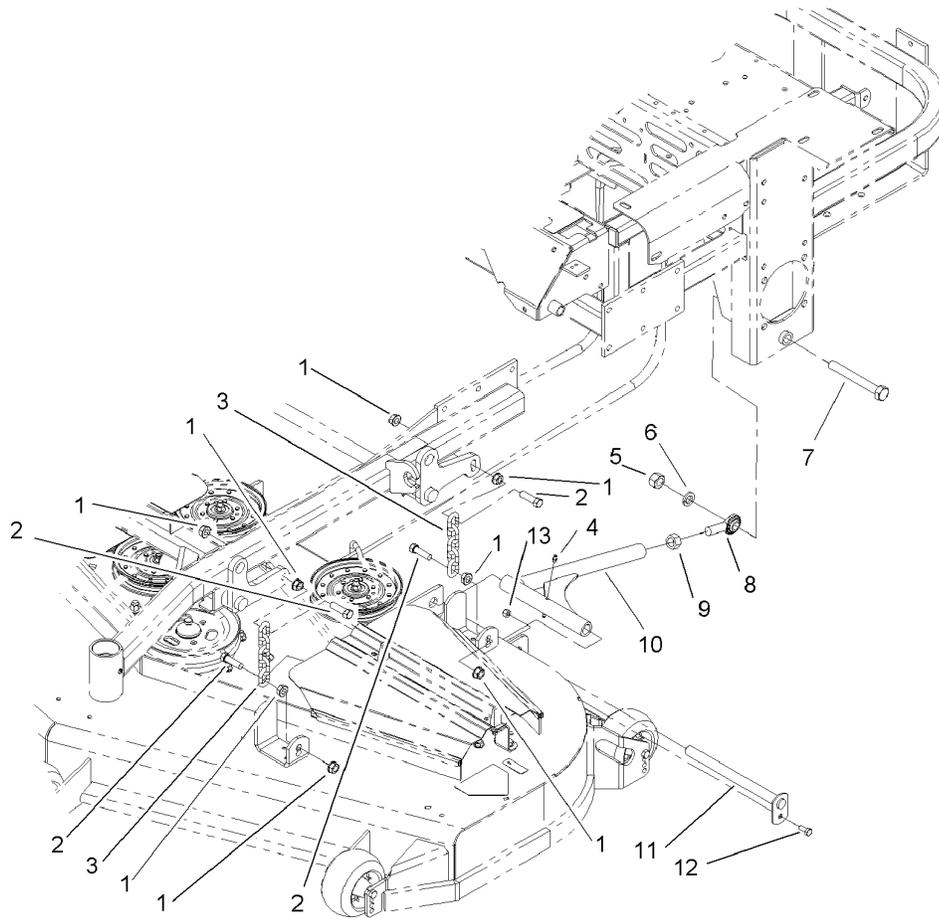

Deck Mounting Assembly

Ref	Part No.	Qty.	Description
1	32128-37	16	Nut-HF
2	103-1898	8	Screw-HH
3	1-633447	4	Chain-Lift, Deck
4	302-19	4	Fitting-Grease
5	3217-11	2	Nut-Hex
6	3253-8	2	Washer-Lock
7	327-11	2	Screw-HH
8	1-633029	2	Balljoint-Spherical
9	3219-6	2	Nut-Hex
10	103-1072-01	2	Strut
11	1-632199-01	2	Pin-Strut
12	322-3	2	Screw-HH
13	3296-29	2	Nut-Lock, NI

<p style="font-size: 48px; opacity: 0.5; transform: rotate(-1deg);">PROTOTYPE</p>			
-----------------------------------------------------------------------------------	--	--	--

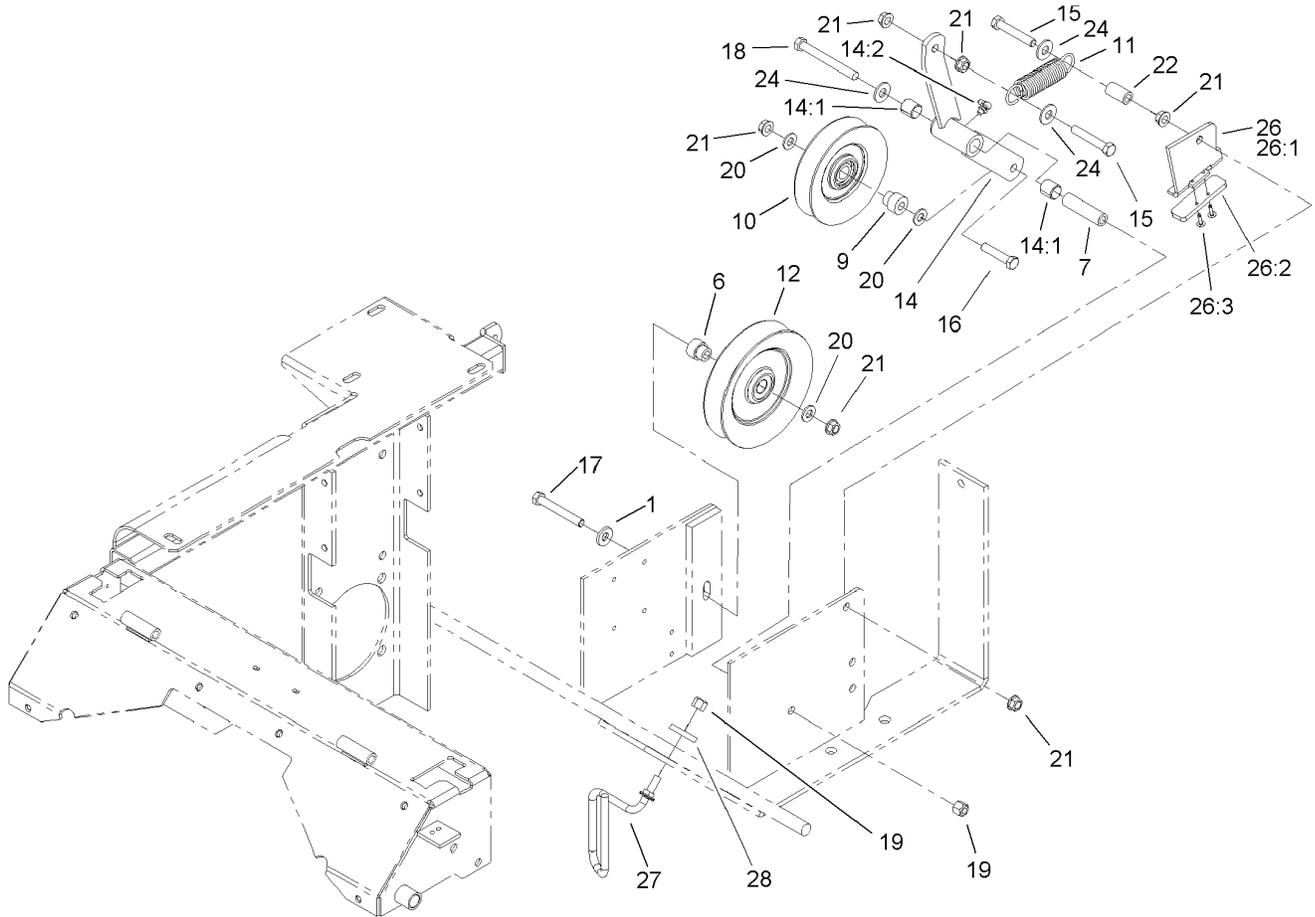


Drive Idler Assembly

Ref	Part No.	Qty.	Description
1	98-5975	1	Washer-Belleville
6	103-2627	1	Bushing-Idler
7	1-603384	1	Bushing-Pivot, Idler
9	1-603496	1	Bushing-Idler
10	99-4638	1	Idler
11	1-603402	1	Spring-Extension
12	1-633166	1	Pulley-Idler
14	103-3147	1	Arm ASM
14:1	1-513034	2	Sleeve-Bearing
14:2	302-40	1	Fitting-Grease
15	323-12	2	Screw-HH
16	323-9	1	Screw-HH
17	323-13	1	Screw-HH
18	1-800805	1	Screw-HH
19	3296-39	2	Nut-Lock, NI
20	3256-24	3	Washer-Flat
21	3290-357	6	Nut-HHF
22	1-603401	1	Spacer-Fender
24	3256-4	3	Washer-Flat
26	106-3271	1	Travel Limiter ASM
26:1	106-3228-03	1	Plate-Limiter, Pulley
26:2	106-3229	1	Pad-Bumber
26:3	3269-24	2	Rivet
27	105-7772	1	Guide-Belt

Ref	Part No.	Qty.	Description
28	112843	1	Washer


PROTOTYPE

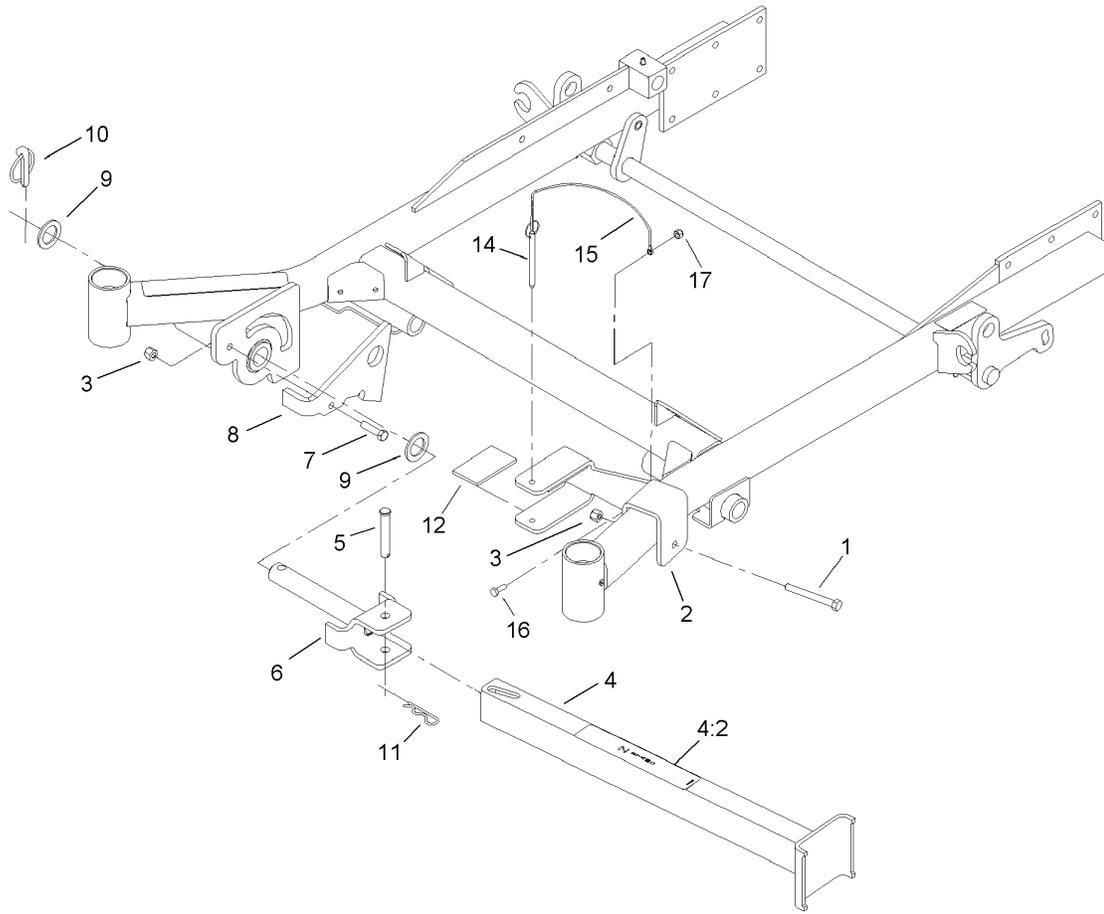

Z-Stand Assembly

Ref	Part No.	Qty.	Description
1	323-20	1	Screw-HH
2	100-6542-01	1	Bracket-Cradle
3	3296-39	2	Nut-Lock, NI
4	107-1874	1	Leg ASM
4:2	106-7464	1	Decal-Z Stand
5	283-55	1	Pin-Clevis
6	100-9692-01	1	Pivot Pin ASM
7	323-8	1	Screw-HH
8	100-9686-01	1	Bracket-Latch
9	3-6781	2	Washer-Thrust
10	283-71	1	Pin-Lynch
11	3290-355	1	Pin-Hair
12	100-6547	2	Cushion-Rubber
14	105-1647	1	Pin-Hitch, Cotterless
15	100-9385	1	Lanyard-Nylon
16	321-4	1	Screw-HH
17	3296-42	1	Nut-Lock, NI

PROTOTYPE

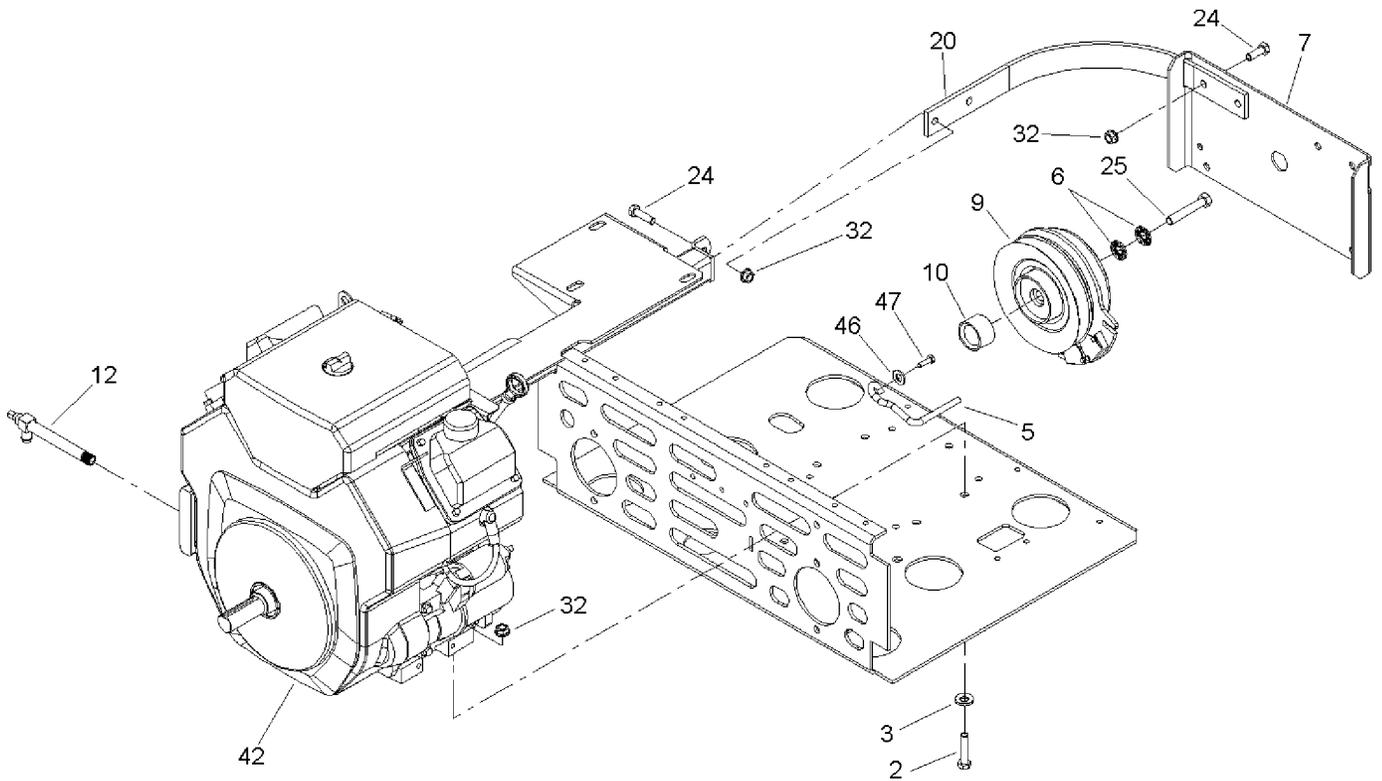


Engine and Clutch Assembly

Ref	Part No.	Qty.	Description
2	323-9	4	Screw-HH
3	98-5975	4	Washer-Belleville
5	52-4780	1	Rod-Belt
6	1-603610	2	Washer-Spring
7	1-633615-03	1	Guard-Clutch
9	103-3132	1	Clutch
10	1-633179	1	Spacer-Clutch
12	103-1996	1	Valve-Oil Drain, Long
20	1-643264-03	2	Bracket-Guard, Top
24	323-6	6	Screw-HH
25	3212-10	1	Screw-HH
32	3290-357	8	Nut-HHF
42		1	Engine-Kohler, Ch740-0007
46	3256-24	1	Washer-Flat
47	323-4	1	Screw-HH

--	--	--	--	--


PROTOTYPE

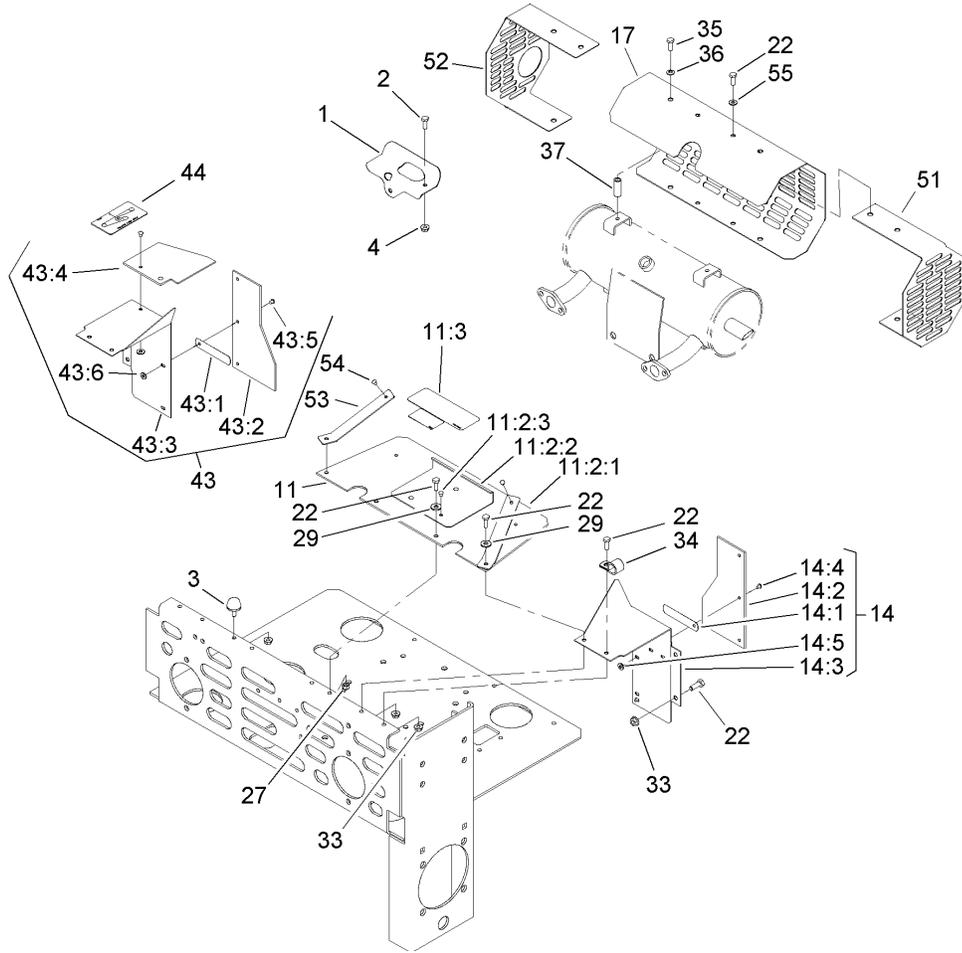

Muffler and Guard Assembly

Ref	Part No.	Qty.	Description
1	103-3388	1	Shield-Heat, Cable
2	321-4	1	Screw-HH
3	1-523420	2	Bumper
4	32128-33	1	Nut-HF
11	107-3977	1	Shield ASM
11:2:1	103-1308	1	Shield-Engine
11:2:2	1-633300-03	1	Lift-Shield
11:2:3	1-803035	3	Rivet-Pop
11:3	107-3978	1	Decal-Devices, Rotating
14	1-634796	1	LH Shield ASM
14:1	1-523285	1	Clip-Baffle, Rear
14:2	1-633301	1	Shield-Engine
14:3	1-633795-03	1	Baffle-Engine Shield, LH
14:4	1-803035	3	Rivet-Pop
14:5	3256-63	3	Washer-Flat
17	1-643313-03	1	Guard-Muffler
22	321-4	12	Screw-HH
27	3296-42	6	Nut-Lock, NI
29	3256-2	4	Washer-Flat
33	32128-33	8	Nut-HF
34	1-633396	1	Clip-Loom
35	1-809076	2	Screw
36	1-323235	2	Washer-Spring
37	1-323236	2	Spacer


Ref	Part No.	Qty.	Description
43	1-644316	1	RH Shield ASM
43:1	1-523285	1	Clip-Baffle, Rear
43:2	1-633301	1	Shield-Engine
43:3	1-633794-03	1	Shield-RH
43:4	1-643315	1	Baffle-Cooler, Engine
43:5	1-803035	5	Rivet-Pop
43:6	3256-63	5	Washer-Flat
44	1-643339	1	Decal-Routing, Belt
51	107-2137-03	1	Shield-Muffler, LH
52	107-2138-03	1	Shield-Muffler, RH
53	107-2140-03	2	Shield Strap
54	1-803035	2	Rivet-Pop
55	3256-63	2	Washer-Flat

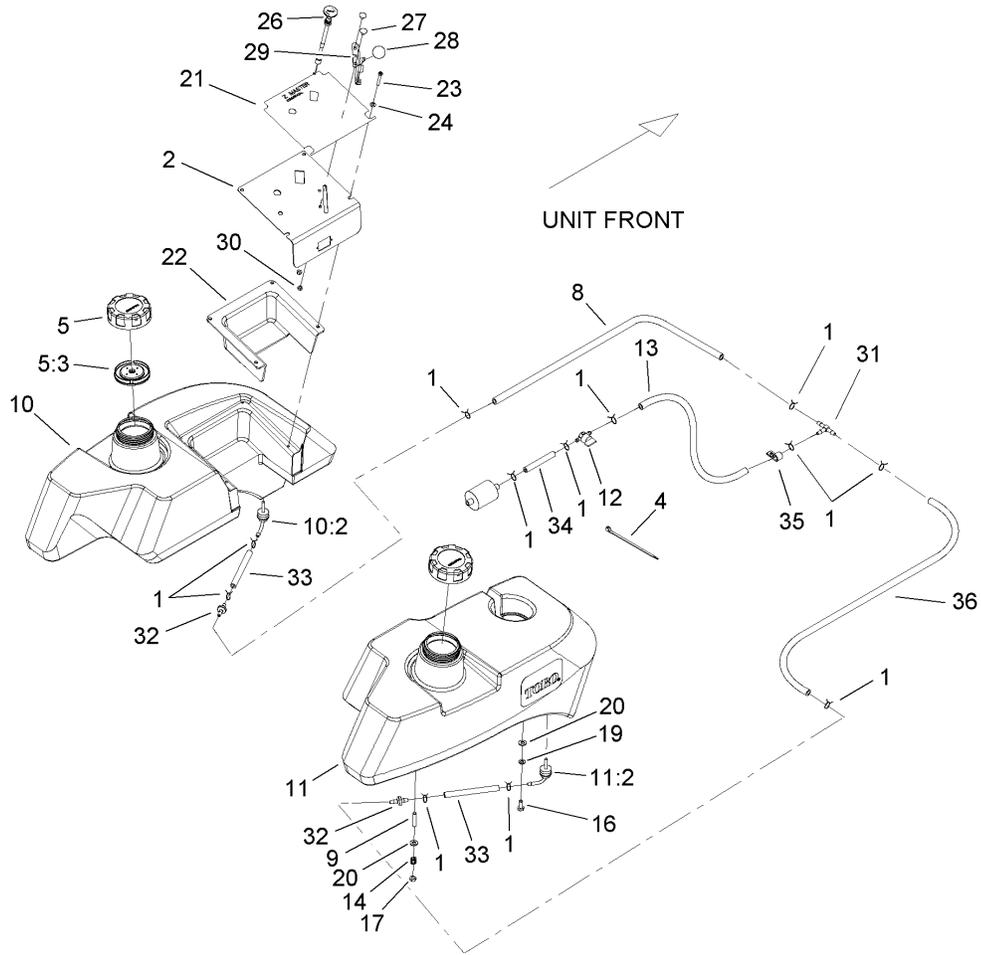

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-303077	13	Clamp
2	106-9966-03	1	Panel-Control
4	1-303335	4	Tie-Plastic
5	88-3980	2	Gas Cap ASM
5:3	88-4010	1	Gasket-Cap, Gas
8	94-7420	1	Hose-Fuel
9	1-633023	6	Stud
10	106-9980	1	LH Fuel Tank ASM
10:2	103-2605	1	Fitting-Fuel, Bulkhead
11	106-9979	1	RH Fuel Tank ASM
11:2	103-2605	1	Fitting-Fuel, Bulkhead
12	1-603770	1	Valve-Fuel
13	107-2119	1	Hose-Fuel
14	1-633349	6	Spring-Tank, Fuel
16	322-3	2	Screw-HH
17	3296-47	6	Nut-Lock, NI
19	1-805005	2	Washer-Lock
20	3256-23	8	Washer-Flat
21	107-3965	1	Decal-Panel, Control
22	99-4940	1	Shield-Panel, Control
23	1-803071	4	Screw
24	1-303435	4	Washer-Spring
26	106-9962	1	Control-Choke, Push/pull
27	1-807513	2	Bolt-CARR


Ref	Part No.	Qty.	Description
28	1-513592	1	Knob-Ball
29	1-633696	1	Cable-Throttle
30	3296-2	2	Nut-Lock
31	99-5005	1	Fitting-Tee, Barbed
32	99-5000	2	Valve-Check, Fuel
33	99-7190	2	Hose-Fuel
34	105-8342	1	Hose-Fuel
35	1-513762	1	Clip-Loom
36	1-543526	1	Hose-Fuel

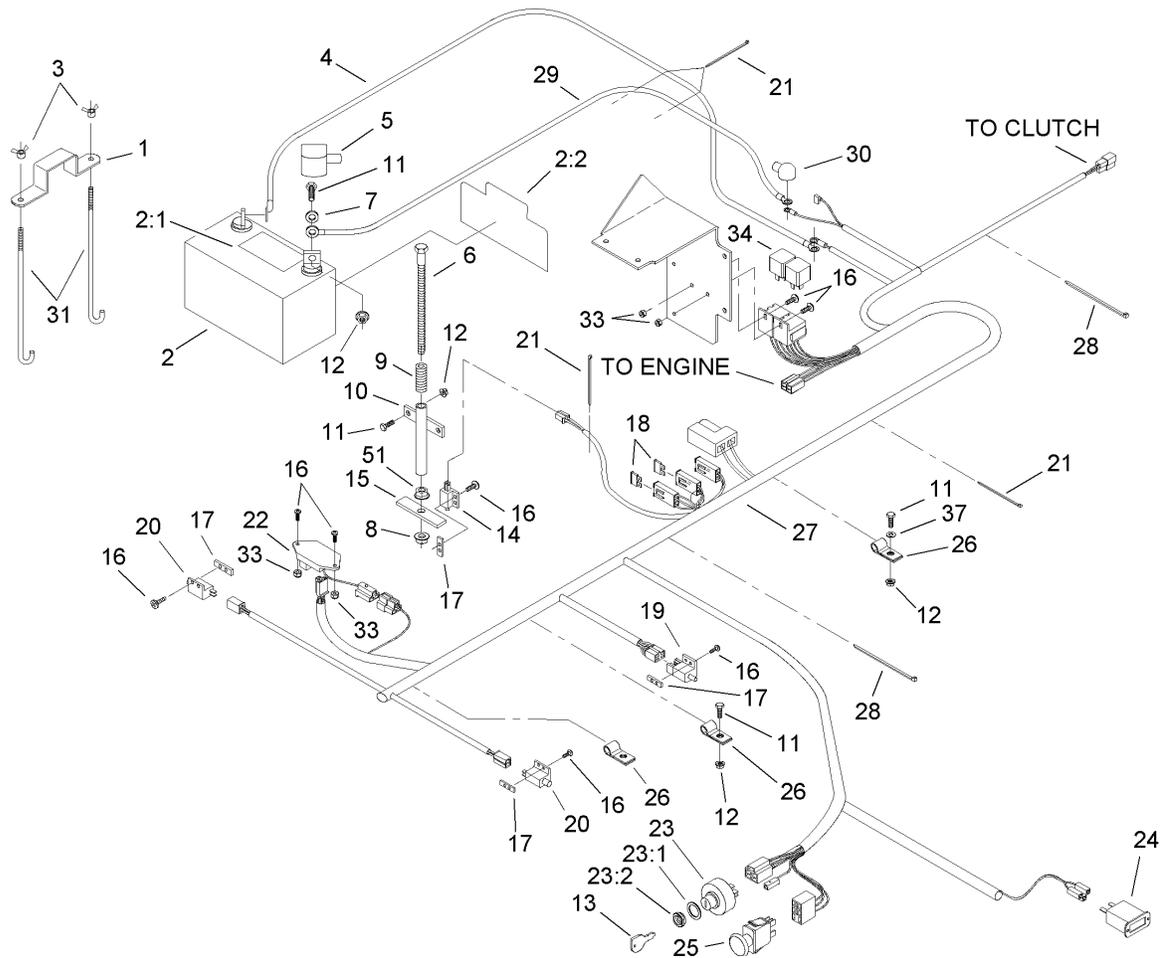

Electrical Components Assembly

Ref	Part No.	Qty.	Description
1	1-633652-03	1	Strap-Holddown
2	105-1692	1	Battery
2:1	104-4163	1	Decal-Battery
2:2	104-4164	1	Decal-Battery
3	1-543792	2	Wingnut
4	1-633307	1	Wire-Ground
5	1-543391	1	Insulator-Battery
6	1-800282	1	Screw-HH
7	3256-2	2	Washer-Flat
8	3296-29	1	Nut-Lock, NI
9	1-523415	1	Spring-Switch, Seat
10	1-522424-03	1	Mount-Spring, Seat
11	321-4	6	Screw-HH
12	32128-33	6	Nut-HF
13	63-8360	2	Key-Ignition
14	1-513152	1	Switch-Closed, Normally
15	1-513180	1	Plate-Switch, Seat
16	3290-500	14	Screw-PPH
17	1-633181	4	Plate-Tapped
18	1-816001	2	Fuse-Blade Type, 20 Amp
19	1-633111	1	Switch
20	1-513051	2	Switch-Open, Normally
21	1-303287	5	Tie-Plastic
22	100-6186	1	Module-Delay, Seat


Ref	Part No.	Qty.	Description
23	88-9830	1	Key Switch ASM
23:1	3254-5	1	Washer-Tooth
23:2	218-461	1	Nut-HH
24	1-513374	1	Meter-Hour
25	1-633673	1	Switch-Delta
26	1-633396	3	Clip-Loom
27	106-7497	1	Harness-Wire
28	1-303335	2	Tie-Plastic
29	1-523281	1	Wire-Starter
30	1-543393	1	Insulator-Solenoid
31	1-633651	2	Bolt-Holddown
33	3296-2	6	Nut-Lock
34	1-643275	2	Relay
37	3256-22	1	Washer-Flat
51	3217-6	1	Nut-Hex

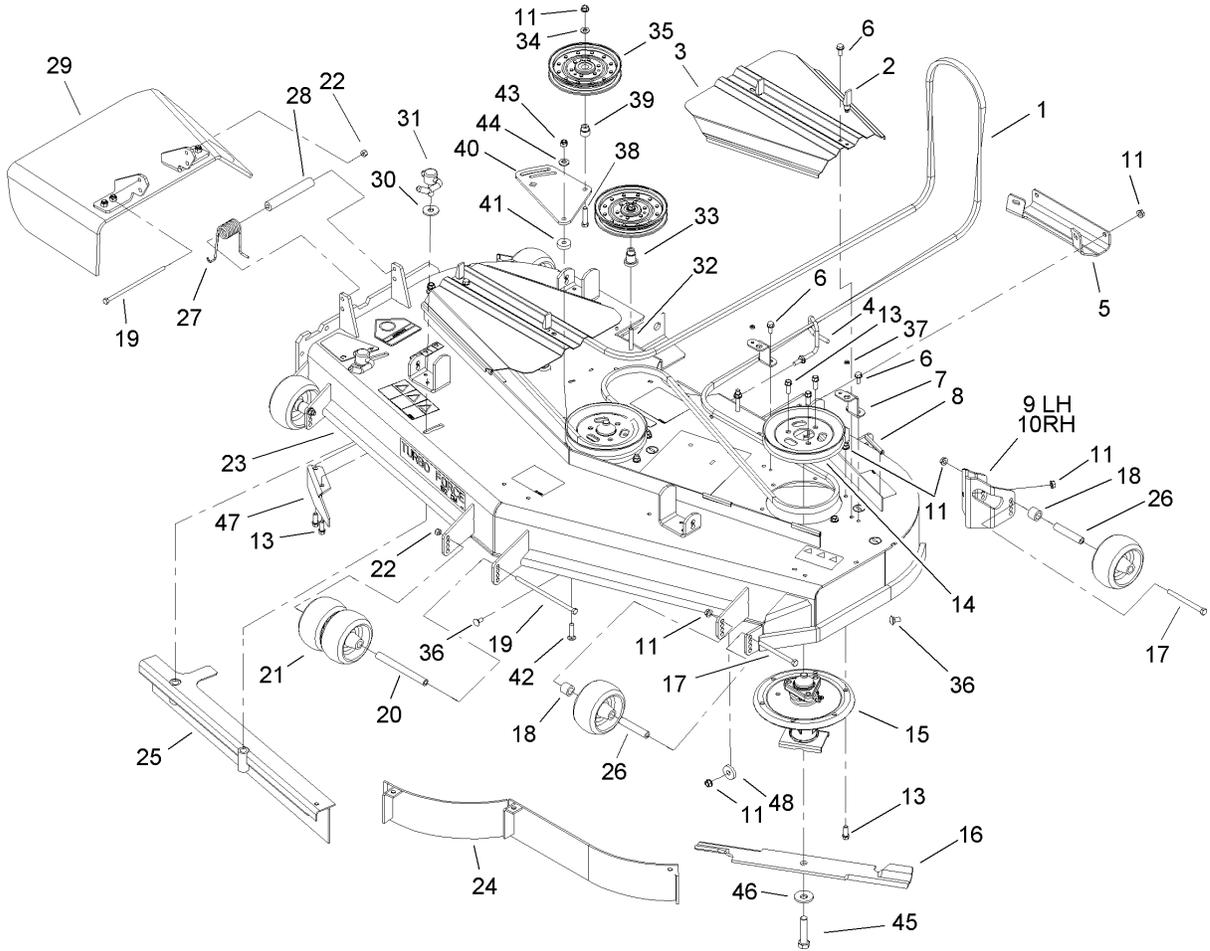

Deck Assembly

Ref	Part No.	Qty.	Description
1	105-8783	1	Belt
2	74-5950	4	Latch-Swell
3	105-8786-01	2	Cover-Belt
4	106-3220	1	Guide-Wire
5	105-8792-01	1	Plate-Skid
6	32144-70	6	Screw-HH
7	105-8787-01	4	Bracket-Cover
8	105-7699	8	Seal-Strip
9	106-7354-01	1	Plate-Roller, LH
10	106-7355-01	1	Plate-Roller, RH
11	3290-357	42	Nut-HHF
13	95-1726	33	Screw-Taptite
14	105-7734	3	Pulley
15	106-3217	3	Spindle ASM
16	105-7718	3	Blade-Rotary, High Flow
17	323-23	4	Screw-HH
18	98-7913	4	Tube-Spacer
19	322-50	2	Screw-HH
20	98-5967	1	Spacer
21	1-603299	6	Roller-Anti Scalp
22	3296-29	2	Nut-Lock, NI
23	107-3974	1	60 Deck ASM
24	105-7657-01	1	Baffle ASM
25	105-7669-01	1	Baffle ASM


Ref	Part No.	Qty.	Description
26	98-7912	4	Tube-Spinner
27	104-8554	1	Spring-Torsion
28	105-4622	1	Spacer
29	106-3249	1	Rubber Deflector ASM
30	105-7697	2	Washer-Plastic
31	106-3242	2	Lever ASM
32	323-12	2	Screw-HH
33	106-3214	2	Support-Pulley
34	3256-24	3	Washer-Flat
35	1-633109	3	Idler-Flat
36	3231-1	10	Screw-CARR
37	99-3058	4	Washer
38	323-9	1	Screw-HH
39	1-603496	1	Bushing-Idler
40	105-7787-01	1	Plate-Idler
41	105-7788	2	Spacer
42	3231-4	2	Screw-CARR
43	3296-39	2	Nut-Lock, NI
44	98-5975	1	Washer-Belleville
45	103-0862	3	Screw-Cap
46	103-0865	3	Washer-Blade Bolt, Heavy
47	106-3216-01	1	Baffle-Discharge
48	112843	1	Washer
49	105-7777-03	3	Blade-Recy, 20.5

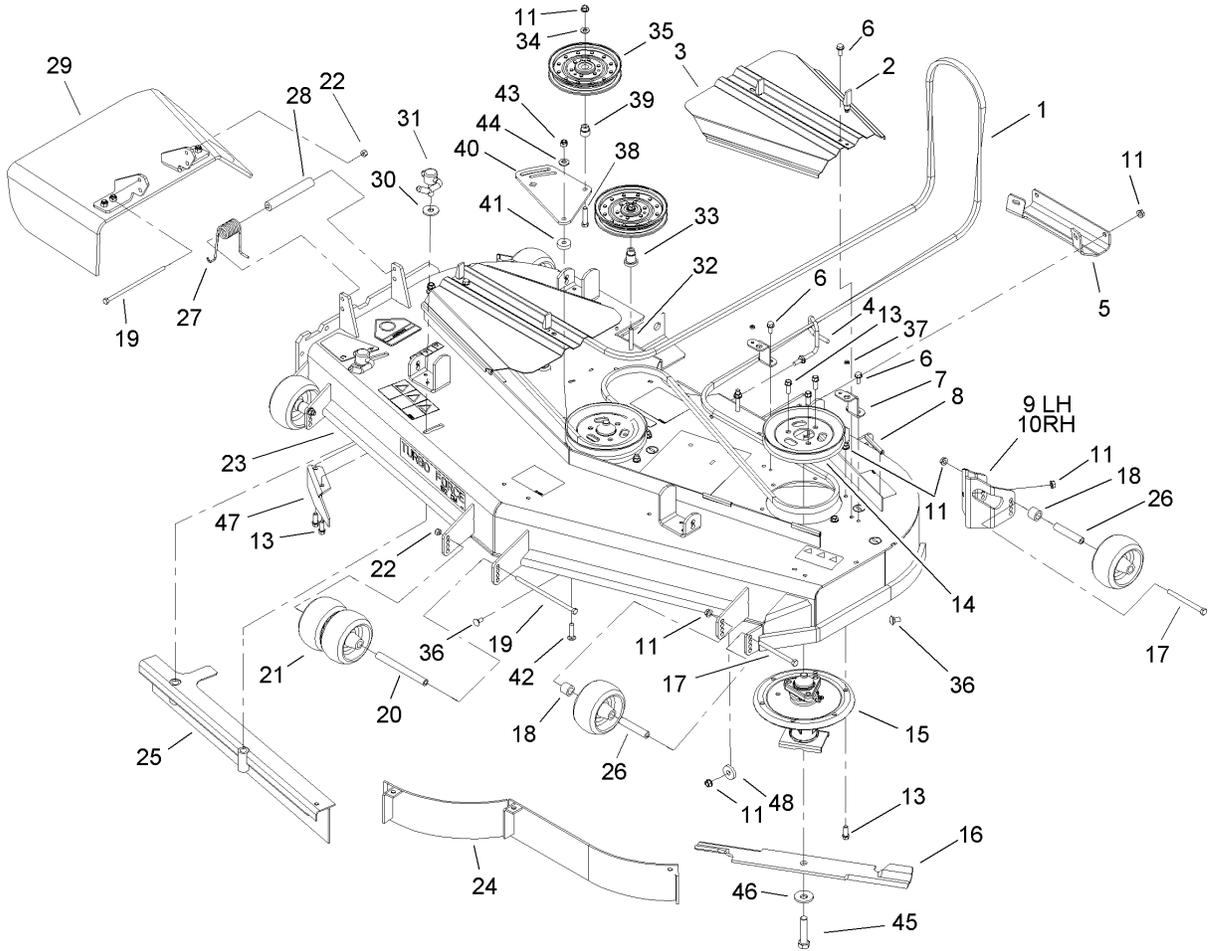

Deck Assembly (continued)


Ref	Part No.	Qty.	Description
④99	105-7716-03	3	Blade-Lo Flow, 20.5
④99	105-7715-03	3	Blade-Mid Flow, 20.5
④99	105-8777-03	3	Blade-Atomic, 20.5

<p style="font-size: 48px; opacity: 0.5;">PROTOTYPE</p>			
---------------------------------------------------------	--	--	--

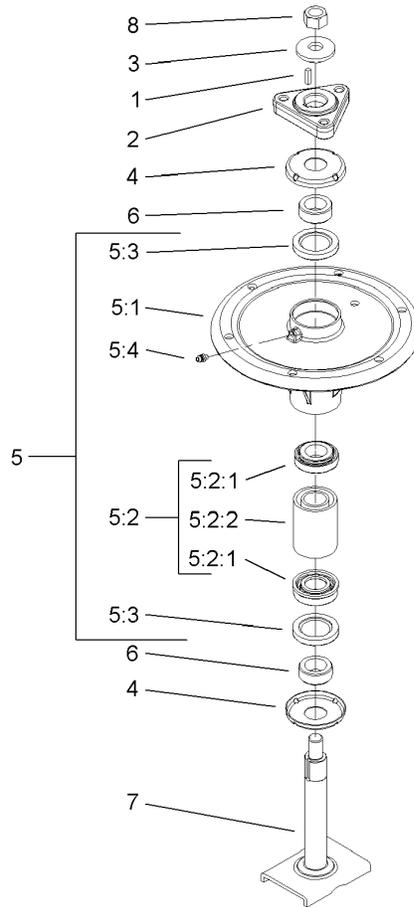

Spindle Assembly No. 106-3217


Ref	Part No.	Qty.	Description				
1	10-8040	1	Key-Square				
2	106-3277	1	Hub-Pulley				
3	103-0865	1	Washer-Blade Bolt, Heavy				
4	106-3204	2	Shield-Bearing				
5		1	Spindle Bearing ASM				
5:1	106-3211	1	Housing-Spindle				
5:2	106-3207	1	Bearing ASM				
5:2:1	27-0960	1	Bearing ASM				
5:2:2	106-3206	1	Spacer-Set, Matched				
5:3	253-133	2	Seal-Oil				
5:4	302-5	1	Fitting-Grease				
6	106-3218	2	Spacer-Seal				
7	106-3233	1	Spindle Shaft ASM				
8	3219-6	1	Nut-Hex				

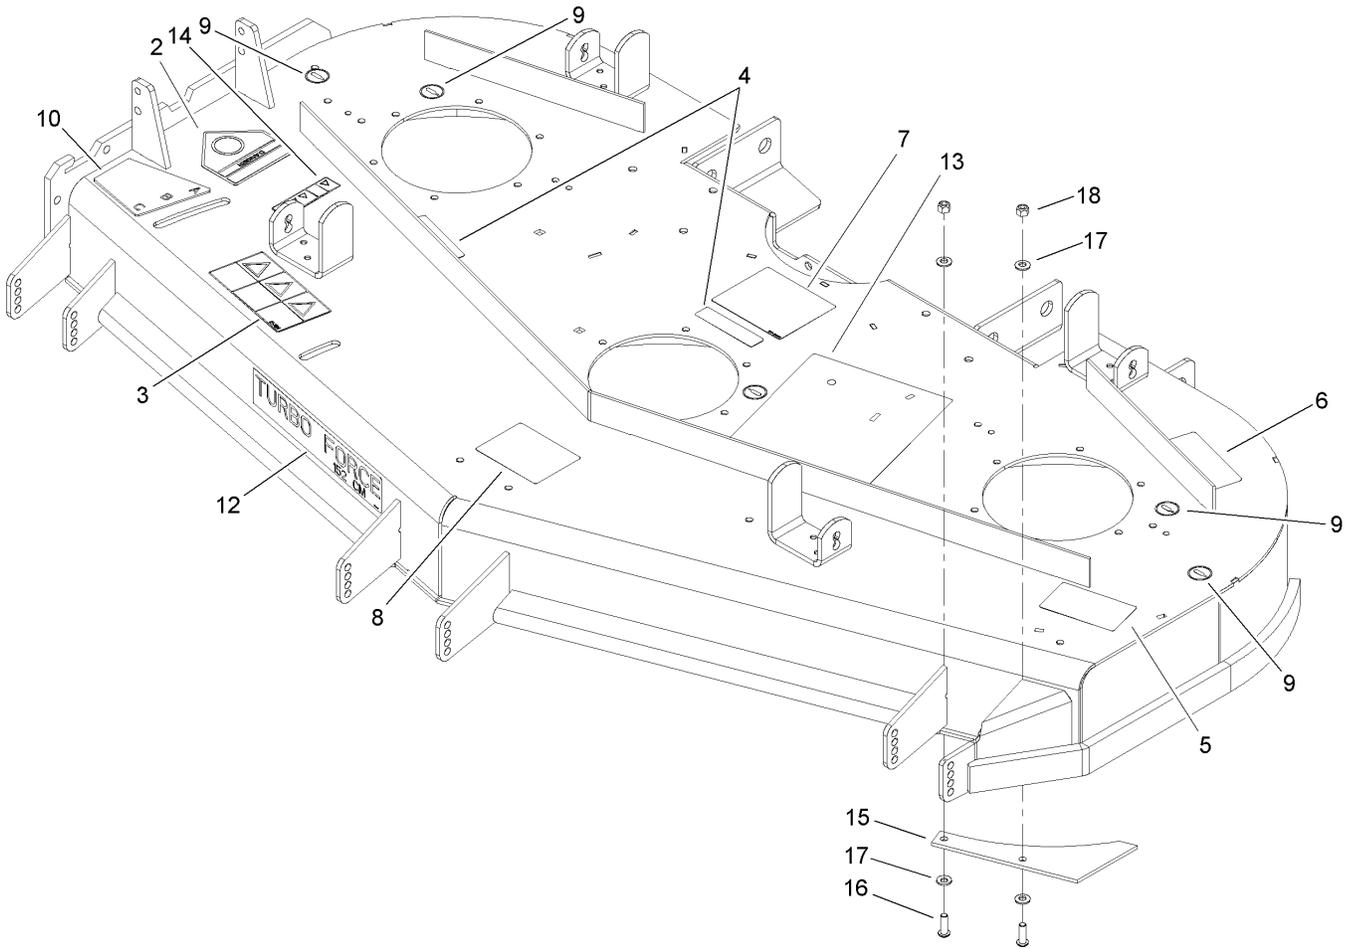

Deck Assembly No. 107-3974

Ref	Part No.	Qty.	Description
2	54-9220	1	Decal-Danger
3	93-7824	1	Decal-Danger
4	98-1977	3	Decal-Warning
5	93-7010	1	Decal-Danger
6	93-7818	1	Decal-Torque, Blade Bolt
7	107-3996	1	Decal - Belt Routing (Ce)
8	99-8939	1	Decal-Anti Scalp
9	58-6520	5	Decal-Grease
10	107-3993	1	Decal-Adjustment, Baffle
12	107-3983	1	Decal
13	107-3984	1	Decal - Check Service (Ce)
14	93-7828	1	Decal-Warning, Deflector
15	107-3137	1	Plate-Turbo
16	3274-104	2	Screw-HSBH
17	1-303334	4	Washer-Spring
18	3296-29	2	Nut-Lock, NI


<p style="font-size: 48px; opacity: 0.5;">PROTOTYPE</p>			
---------------------------------------------------------	--	--	--

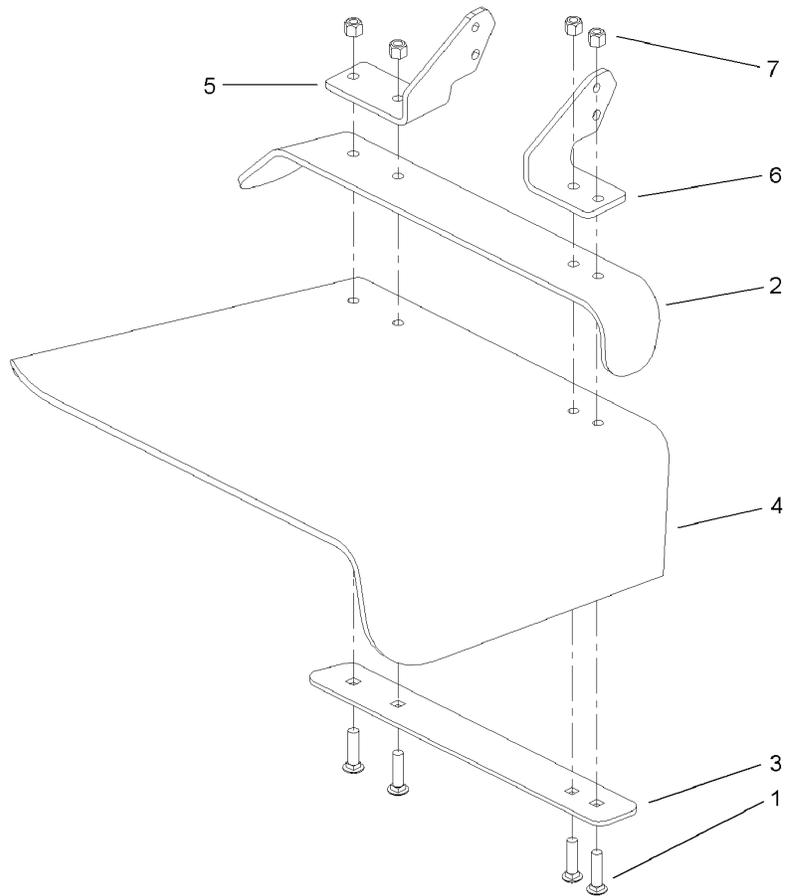

Rubber Deflector Assembly No. 106-3249

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	107-1617	1	Deflector-Rubber
5	106-3252-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	3296-39	4	Nut-Lock, NI

PROTOTYPE

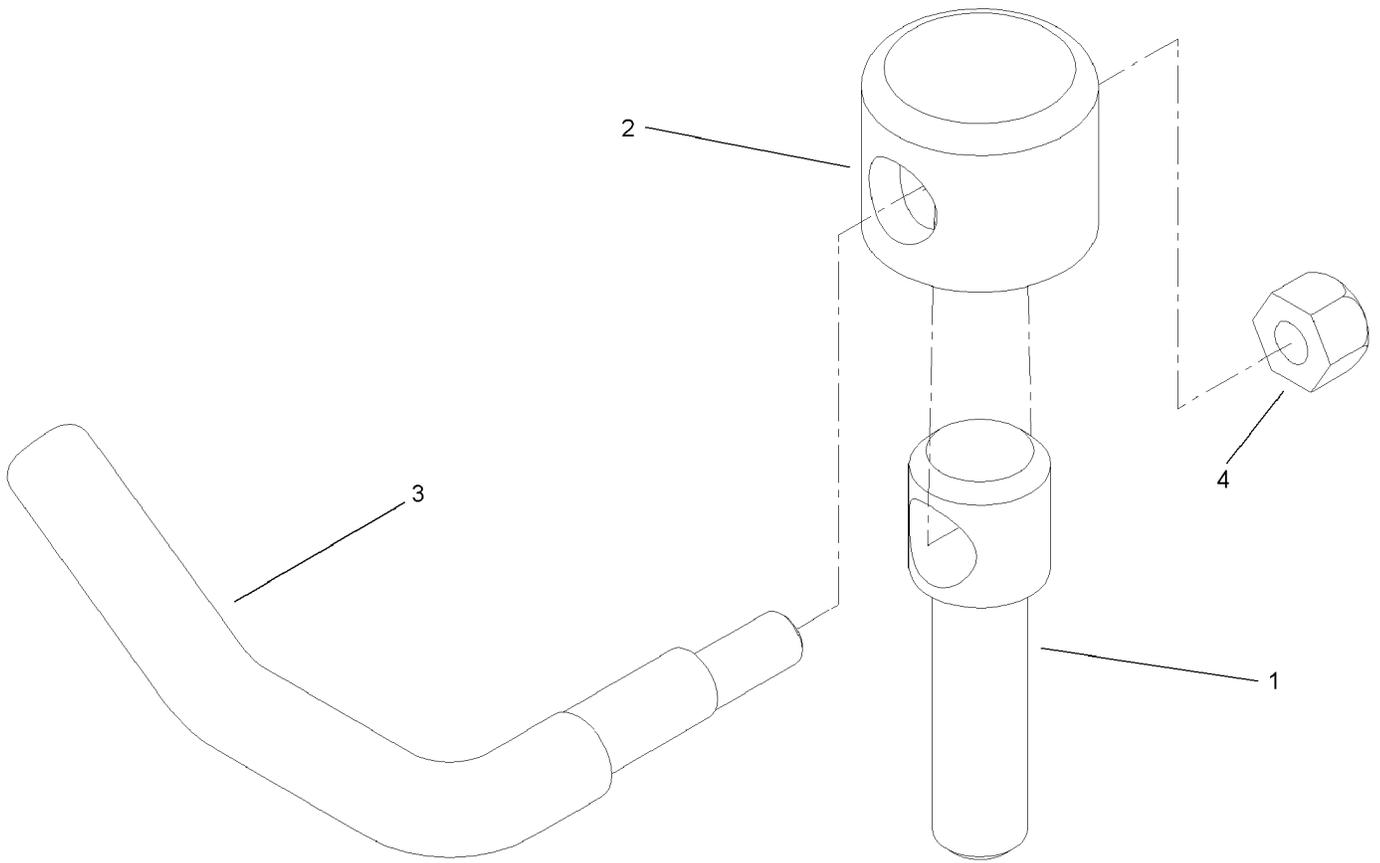


Lever Assembly No. 106-3242

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	106-3240	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

--	--	--	--


PROTOTYPE

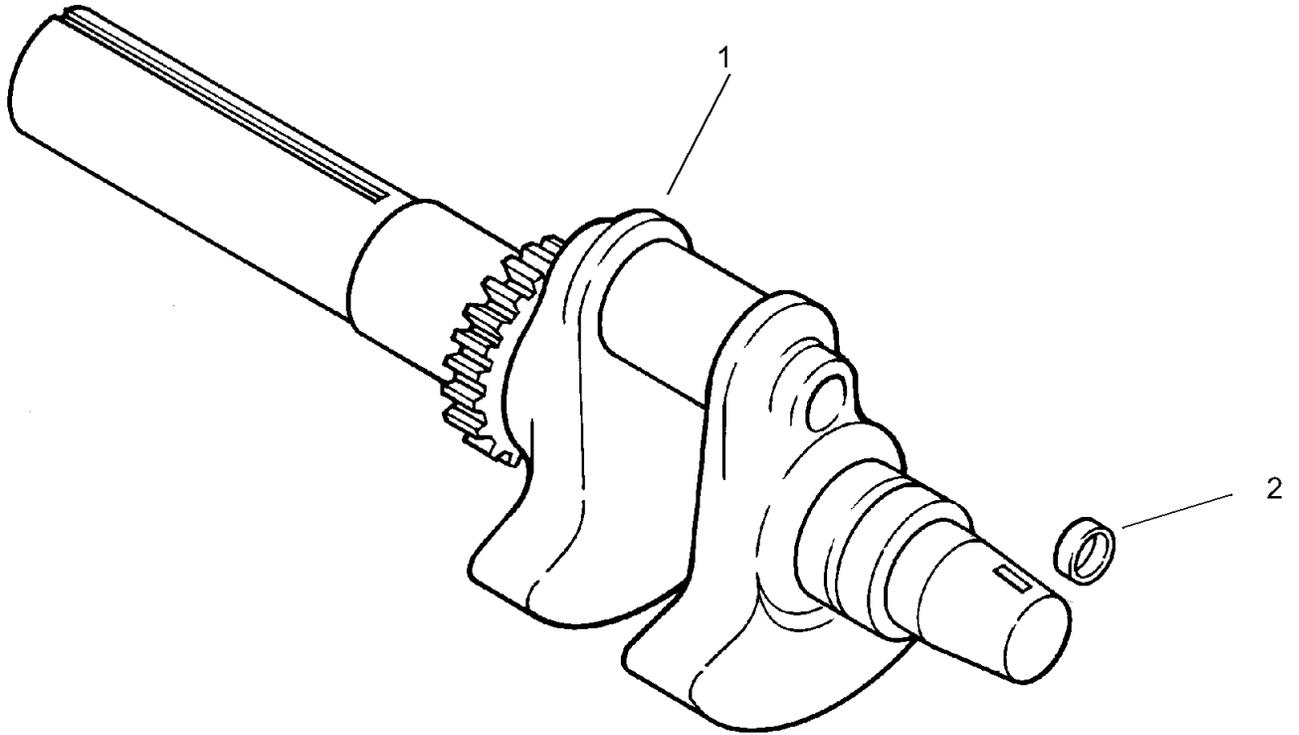

Group 1-Crankshaft Assembly Kohler CH740-0007

Ref	Part No.	Qty.	Description				
1	24 014 06-S	1	Crankshaft (Includes 2)				
2	52 139 09-S	1	Plug, Cup				


PROTOTYPE

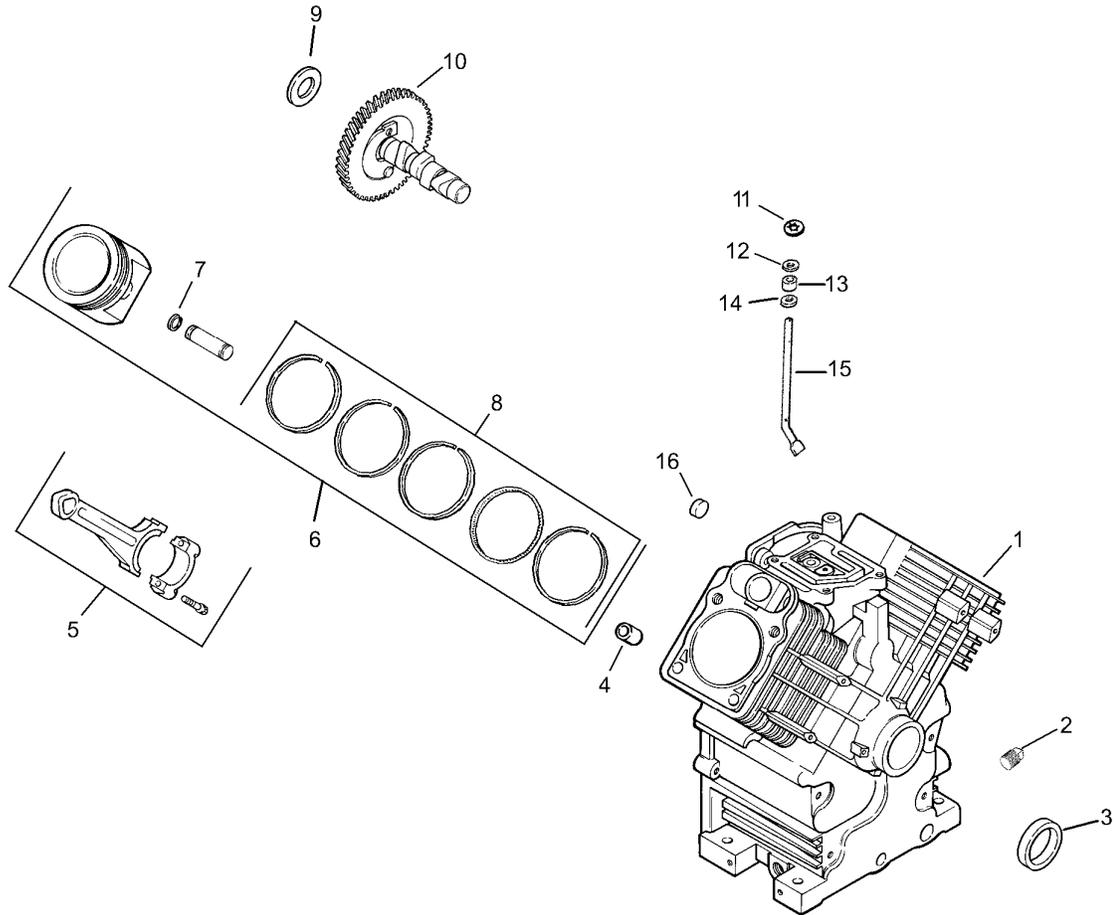

Group 2-Crankcase Assembly Kohler CH740-0007


Ref	Part No.	Qty.	Description
1	N/A	1	Bolt-Thru
2	25 139 57-S	2	Plug, Sq. Hd. Solid 3/8
3	24 032 01-S	1	Seal-Oil
4	24 380 13-S	6	Pin, Locating
5	24 067 13-S	2	Rod-Connecting (Std)
6	24 067 14-S	2	Rod-Connecting (.25)
7	24 874 08-S	2	Piston W/ring Set (Std.)(Includes 7, 8)
8	24 874 16-S	2	Piston W/ring Set (.080)
9	24 018 01-S	4	Retainer-Piston Pin
10	24 108 04-S	2	Set-Ring (Std)
11	12 422 09-S	1	Shim, Camshaft - Red
12	12 422 13-S	1	Shim, Camshaft - Black
13	12 422 07-S	1	Shim, Camshaft - White
14	12 422 08-S	1	Shim, Camshaft - Blue
15	12 422 10-S	1	Shim, Camshaft - Yellow
16	12 422 11-S	1	Shim, Camshaft - Green
17	12 422 12-S	1	Shim, Camshaft - Gray
18	24 012 18-S	1	Camshaft
19	24 018 09-S	1	Retainer-Ring
20	M-931010-S	1	Washer-Flat
21	28 032 09-S	1	Seal-Governor Cross
22	24 468 15-S	1	Washer
23	24 144 38-S	1	Shaft, Governor Cross

Ref	Part No.	Qty.	Description
16	52 139 09-S	1	Plug, Cup

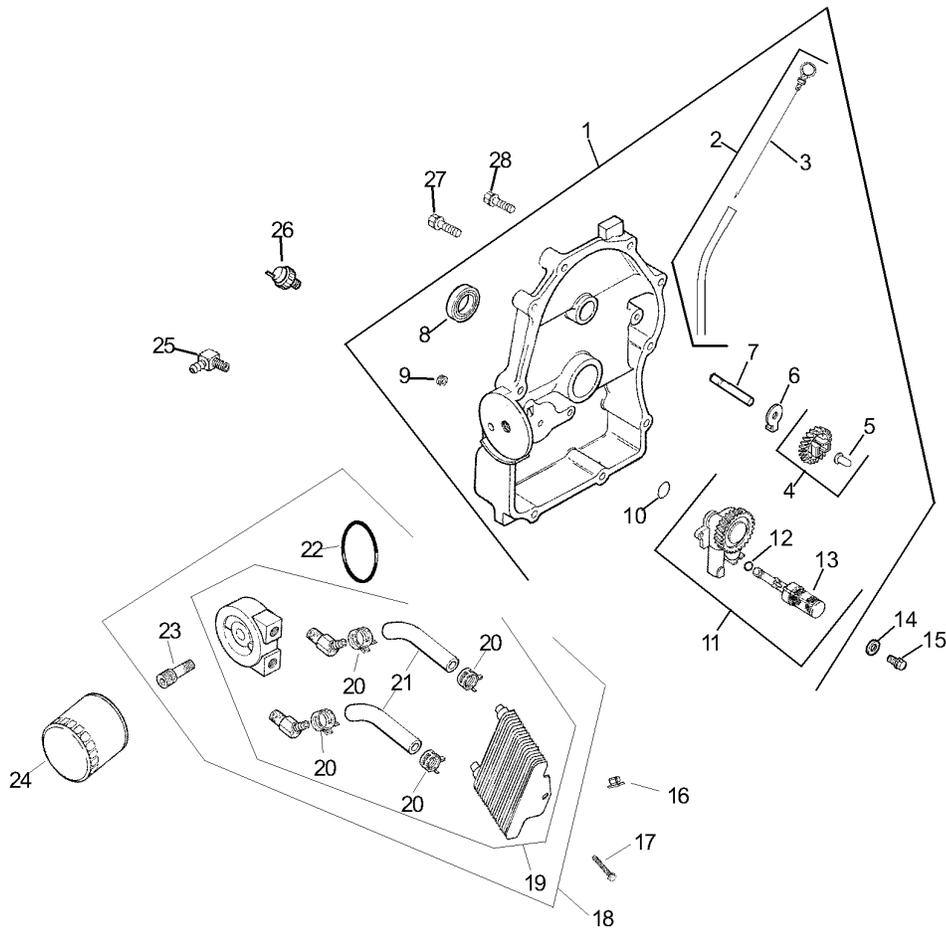

Group 3-Oil Pan/Lubrication Assembly Kohler CH740-0007


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	24 009 83-S	1	Plate, Closure Assembly (Includes 2-13)	22	24 153 13-S	1	O-Ring
2	24 755 121-S	1	Tube Assembly, Dipstick (Includes 3)	23	28 136 01-S	1	Nipple, Oil Filter
3	24 038 10-S	1	Dipstick	24	52 050 02-S	1	Filter-Oil
4	24 043 12-S	1	Kit, Governor Gear (Includes 5)	25	25 155 02-S	1	Connector, 90(Hose
5	12 380 01-S	1	Pin, Governor Regulating	26	24 099 03-S	1	Switch-Pressure
6	52 448 02-S	1	Tab-Locking	27	24 086 16-S	9	Screw, Hex. Flange M8x1.25x45
7	12 144 02-S	1	Shaft, Governor Gear	28	24 086 17-S	1	Screw, Hex. Flange M8x1.25x45
8	52 032 08-S	1	Seal-Oil	29	24 113 25-S	1	Decal, Oil Cooler
9	25 139 60-S	1	Plug-Allen Head				
10	24 153 08-S	1	O-Ring				
11	24 393 10-S	1	Oil Pump Assembly (Includes 12, 13)				
12	24 153 01-S	1	O-Ring				
13	24 381 04-S	1	Pick-Up-Oil				
14	M-631005-S	2	Washer, Plain 6 Mm				
15	M-645025-S	2	Screw, Hex. Flange M6x1.0x25				
16	24 100 01-S	2	Nut				
17	25 086 49-S	2	Screw-Tapping 1/4-1x3/4"				
18	54 755 21-S	1	Kit, Oil Cooler (Includes 19-23)				
19	24 594 09-S	1	Cooler Assembly, Oil (Includes 20, 21)				
20	24 237 10-S	4	Clamp, Hose				
21	24 326 15-S	2	Hose, Oil				

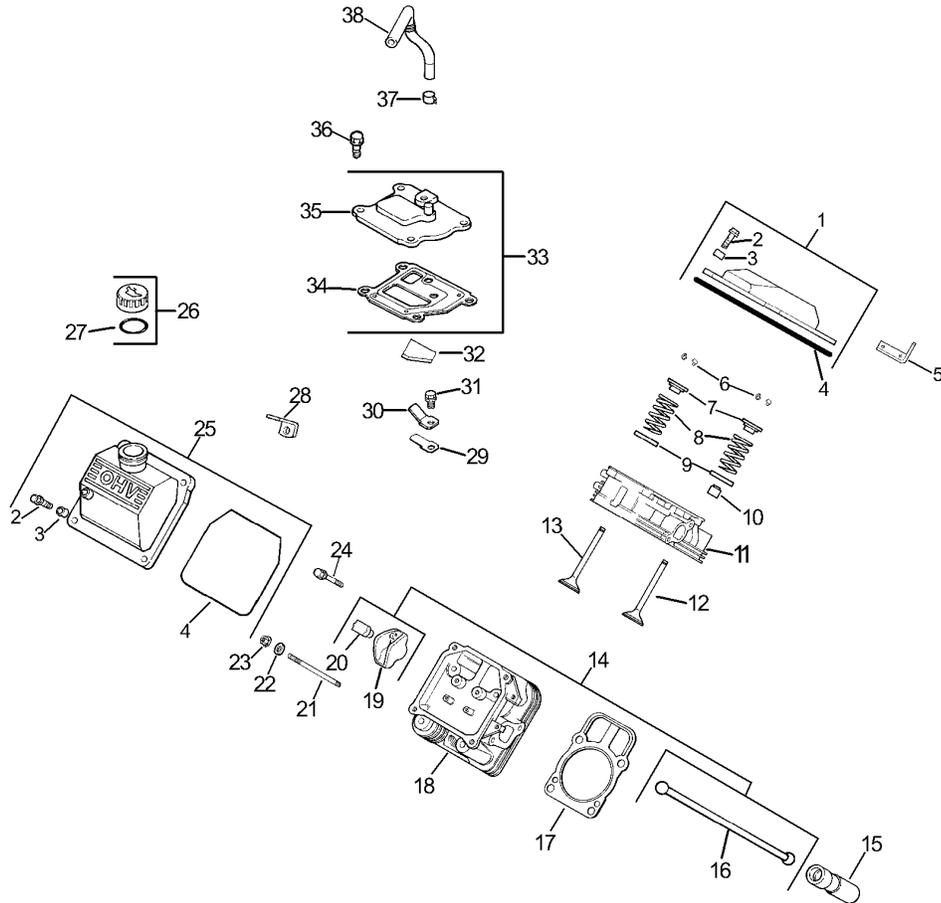

Group 4-Head/Valve/Breather Assembly Kohler CH740-0007

Ref	Part No.	Qty.	Description
1	24 755 74-S	1	Kit, Valve Cover-Plain (Includes 2-4)
2	M-651030-S	4	Screw-HF
3	24 112 08-S	4	Spacer
4	24 153 23-S	1	O-Ring, Valve Cover
5	24 445 01-S	1	Strap-Lifting
6	12 755 03-S	4	Kit, Retainer
7	12 173 01-S	4	Cap, Valve Spring
8	24 089 02-S	4	Spring-Valve
9	235011-S	4	Retainer-Spring
10	66 032 05-S	2	Seal-Valve Stem
11	24 318 65-S	1	#1 Cylinder Head ASM
12	24 017 01-S	2	Valve-Intake (Std)
13	24 017 02-S	2	Valve-Intake (.25)
14	24 016 01-S	2	Valve-Exhaust (Std)
15	24 016 02-S	2	Valve-Exhaust (.25)
16	24 755 66-S	1	Kit, Valve Train(Includes 16, 19, 20)
17	25 351 01-S	4	Lifter, Valve
18	24 411 05-S	4	Rod-Push
19	24 041 37-S	2	Gasket, Cylinder Head
20	24 318 66-S	1	#2 Cylinder Head ASM
21	25 186 01-S	4	Arm, Rocker
22	24 599 01-S	4	Pivot-Rocker Arm


Ref	Part No.	Qty.	Description
21	24 072 09-S	8	Stud, Cyl. Head
22	24 468 16-S	8	Washer,flat
23	24 100 10-S	8	Nut-HF
24	M-640034-S	4	Screw, Hex. Flange M6x1.0x34
25	24 755 75-S	1	Kit, Valve Cover-Oil Fill (Includes 2-4)
26	24 755 46-S	1	Kit, Oil Fill Cap (Includes 27)
27	25 153 02-S	1	O-Ring
28	12 445 05-S	1	Strap-Lifting
29	24 402 03-S	1	Reed
30	12 018 01-S	1	Retainer, Breather Reed
31	M-545010-S	1	Screw, Hex. Flange M5x0.8x10
32	24 050 01-S	1	Filter-Breather
33	24 033 01-S	1	Kit, Breather (Includes 34, 35)
34	24 041 23-S	1	Gasket-Breather
35	24 096 86-S	1	Cover-Breather
36	M-645020-S	4	Screw, Hex. Flange M6.1.0x20
37	25 237 08-S	2	Clamp-Hose
38	24 326 31-S	1	Hose-Breather

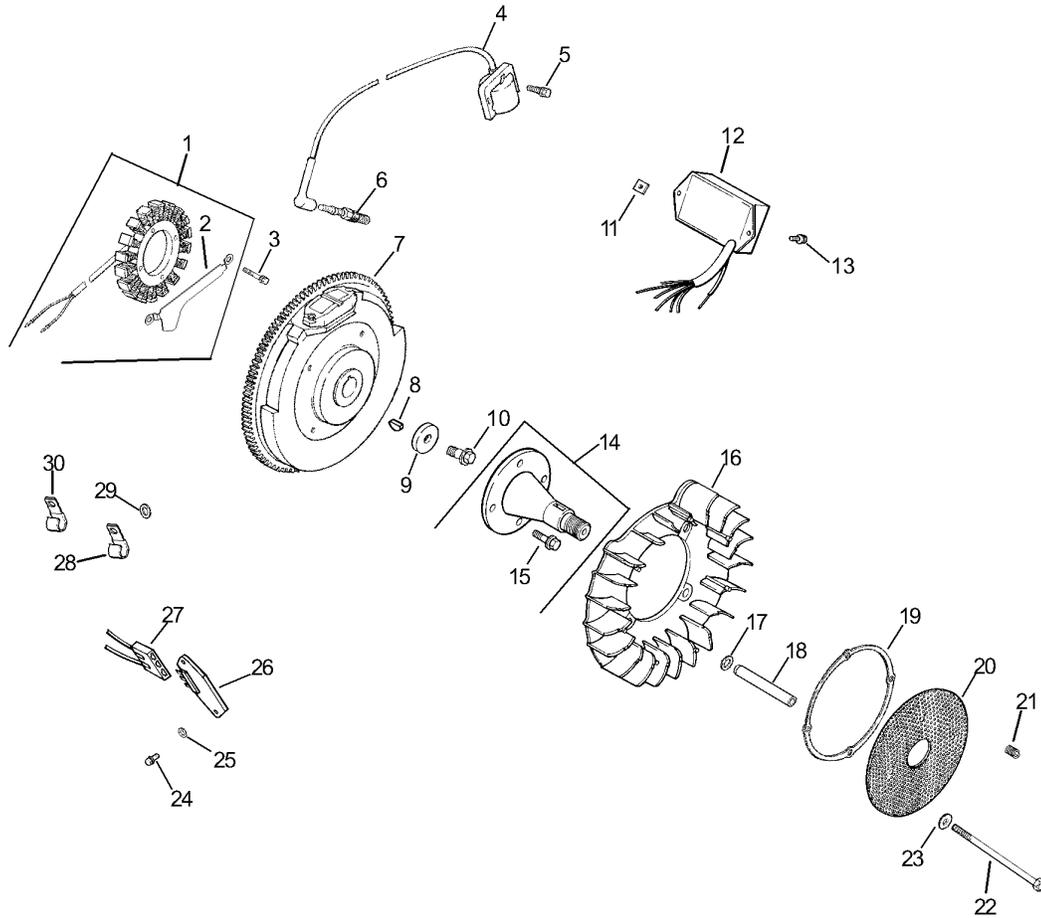

Group 5-Ignition/Electrical Assembly Kohler CH740-0007


Ref	Part No.	Qty.	Description
1	54 755 09-S	1	Kit, Stator (Includes 2)
2	24 126 71-S	1	Bracket-Stator Wire
3	M-548025-S	2	Screw, Hex. Cap M5x0.8x25
4	24 584 15-S	2	Module-Ignition
5	M-561025-S	4	Screw-HSH
6	12 132 06-S	2	Plug-Spark
7	24 025 25-S	1	Flywheel
8	X-42-15-S	1	Key
9	12 468 03-S	1	Washer, Plain 3/8
10	12 086 14-S	1	Screw, Hex. Flange M10x1.5x46
11	24 100 02-S	2	Nut-Plastic
12	24 584 27-S	1	Module, Spark Advance
13	24 086 41-S	2	Screw
14	24 755 08-S	1	Kit, Front Drive Shaft (Includes 15)
15	M-839025-S	4	Screw, Hex. Flange M8x1.25x25
16	24 157 07-S	1	Fan
17	24 468 11-S	4	Washer-Spring
18	24 112 14-S	4	Spacer
19	24 141 06-S	1	Ring-Support
20	24 162 22-S	1	Screen-Grass
21	25 086 43-S	1	Screw-Set
22	M-603100-S	4	Screw-HH
23	X-25-53-S	4	Washer
24	24 086 18-S	2	Screw

Ref	Part No.	Qty.	Description
25	X-25-92-S	2	Washer
26	25 403 03-S	1	Rectifier-Regulator
27	236602-S	1	Connector Rectifier-Regulator (3 Contact)
28	47 154 01-S	1	Clip-Cable
29	X-25-63-S	1	Washer
30	48 154 02-S	1	Clip-Cable
13	24 518 12-S	1	Lead, Black (6in - 12 Gauge - Insulated Grip Barrel Eyelet Terminals)
13	X-22-11-S	1	Washer, Lock 1/4 * Used To Attach Carburetor Ground Lead To Carburetor Baffle.
13	24 176 98-S	1	Harness, Wiring
13	25 454 03-S	2	Tie, Wire

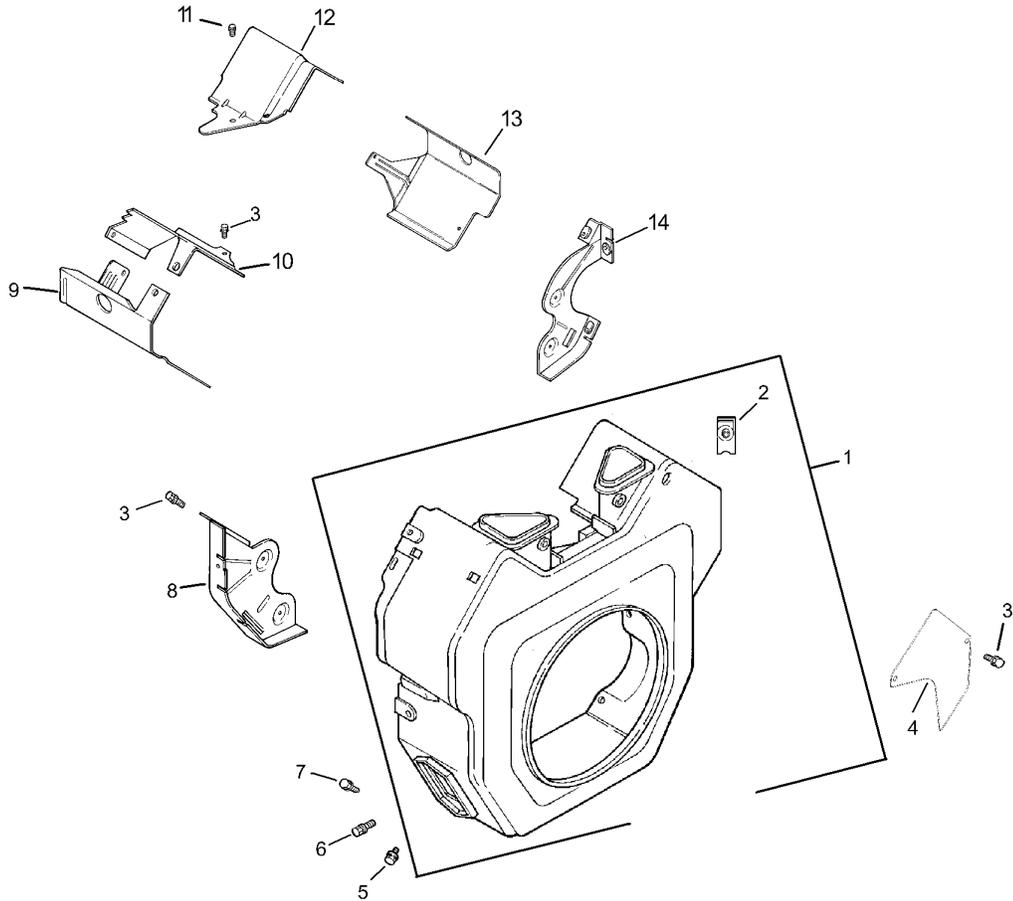

Group 6-Blower Housing Assembly Kohler CH740-0007


Ref	Part No.	Qty.	Description
1	84 027 13-S	1	Housing, Blower (Includes 2)
2	25 154 02-S	4	Clip, Mounting
3	M-645016-S	10	Screw, Hex. Flange M6x1.0x16
4	24 096 63-S	2	Panel, Access
5	M-551016-S	1	Screw-HF
6	M-545016-S	2	Screw, Hex. Flange M5x0.8x16
7	M-545020-S	4	Screw, Hex. Flange M5x0.8x20
8	24 146 19-S	1	Plate, Backing-#2 Side
9	24 063 39-S	1	Baffle, Cyl. Barrel-#2
10	24 063 17-S	1	Baffle-Valley #2 Side
11	M-545010-S	2	Screw, Hex. Flange M5x0.8x10
12	24 063 59-S	1	Baffle-Valley, #1 Side
13	24 063 58-S	1	Baffle-Cylinder, #2 Side
14	24 146 20-S	1	Plate-Backing, #1 Side
15	24 113 124-S	1	Decal, 27 Hp

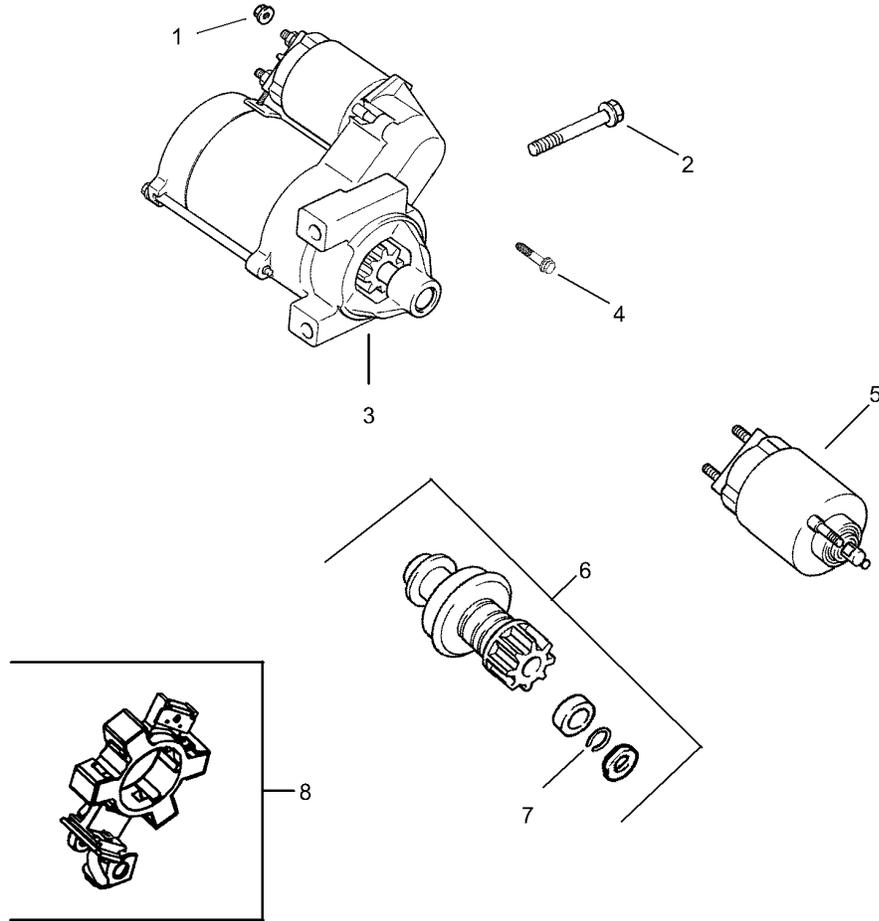

Group 7-Starter Assembly Kohler CH740-0007

Ref	Part No.	Qty.	Description				
1	M-841080-S	1	Nut, Hex. Flange M8x1.25				
2	M-839080-S	2	Screw-HF				
3	25 098 09-S	1	Starter, Solenoid Shift Assembly (Includes 4-8)				
4	25 086 113-S	3	Screw-External Torx Head				
5	25 435 05-S	1	Kit, Solenoid (Includes 4)				
6	25 755 33-S	1	Kit, Pinion Drive (Includes 7)				
7	25 141 05-S	1	Ring				
8	25 225 01-S	1	Kit, Brush				


PROTOTYPE

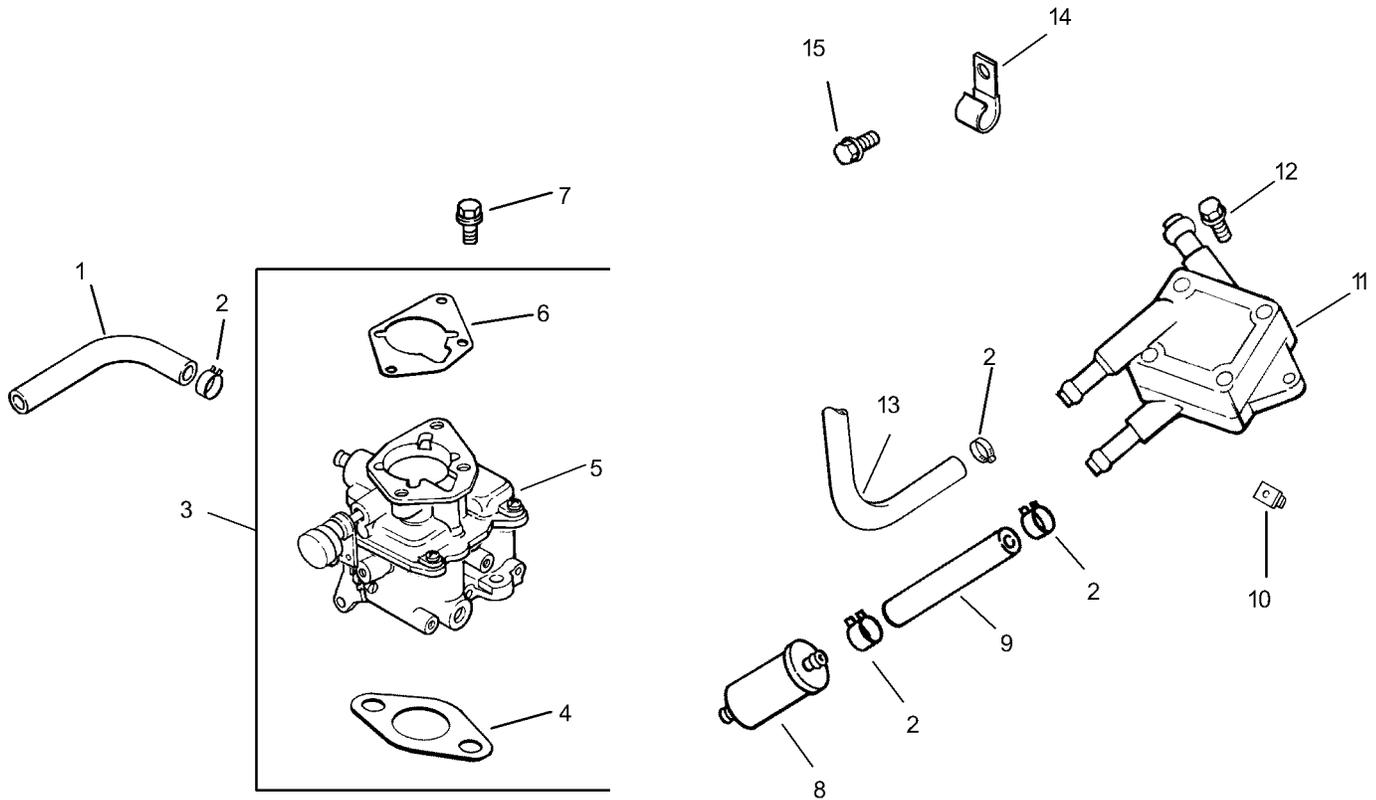

Group 8-Fuel System Assembly Kohler CH740-0007

Ref	Part No.	Qty.	Description
1	25 353 32-S	1	Line-Fuel
2	25 237 14-S	6	Clamp, Hose
3	24 853 93-S	1	Kit, Carburetor W/gasket (Includes 4-6)
4	24 041 17-S	1	Gasket-Carburetor
5	24 053 93	1	Carburetor Assembly (For Information Only, Not Available Separately)(Service With Kits 24 757 01-S, 24 757 02-S, 24 757 03-S, 24 757 07-S, 24 757 08-S, And 24 757 09-S)
6	24 041 06-S	1	Gasket-Air Cleaner
7	M-651030-S	2	Screw-HF
8	24 050 02-S	1	Filter-Fuel
9	25 353 15-S	1	Line-Fuel, 3-1/2"
10	24 100 01-S	2	Nut
11	24 393 16-S	1	Pump-Fuel
12	24 086 12-S	2	Screw
13	24 353 02-S	1	Line-Fuel
14	47 154 01-S	1	Clip-Cable
15	M-650012-S	1	Screw-HF
16	24 757 01-S	1	Solenoid Kit
17	24 757 02-S	1	Float Kit
18	24 757 03-S	1	Carburetor Repair Kit
19	24 757 07-S	1	Choke Repair Kit


Ref	Part No.	Qty.	Description
16	24 757 08-S	1	Repair Kit, Accelerator Pump Seal And Bushing
17	24 757 09-S	1	Repair Kit, Accelerator Pump Diaphragm

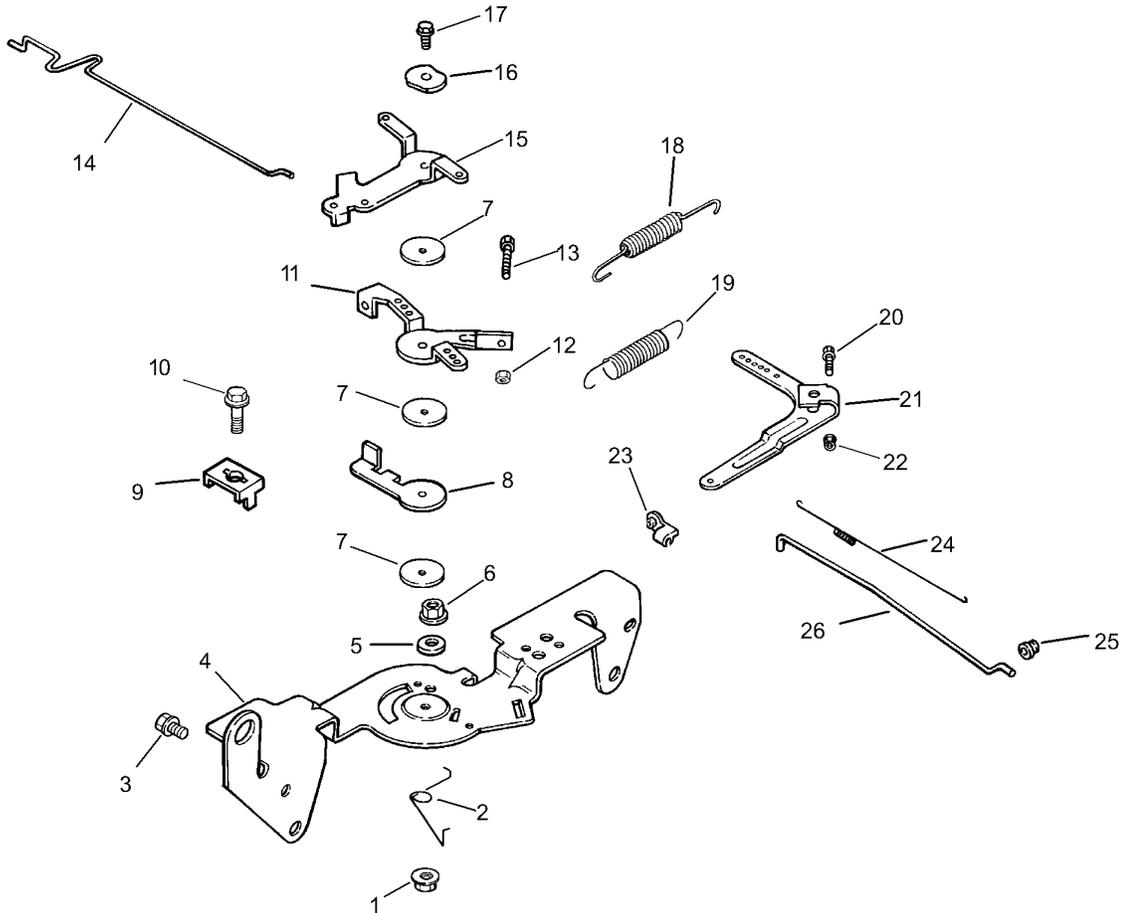

Group 9-Engine Control Assembly Kohler CH740-0007

Ref	Part No.	Qty.	Description
1	M-547050-S	1	Nut-Hex
2	24 089 03-S	1	Spring-Choke Return
3	M-645016-S	4	Screw, Hex. Flange M6x1.0x16
4	24 126 56-S	1	Bracket-Control
5	X-20-1-S	1	Washer-Lock
6	M-541050-S	1	Nut, Hex. Flange M5x0.8
7	24 468 01-S	3	Washer
8	24 090 07-S	1	Lever-Actuator, throttle
9	12 237 01-S	2	Clamp, Cable
10	M-545016-S	3	Screw, Hex. Flange M5x0.8x16
11	24 090 03-S	1	Lever-Throttle Control
12	M-446030-S	1	Nut, Hex. M4x0.7
13	M-401030-S	1	Screw, Hex. Flange M4x0.7x30
14	24 079 21-S	1	Linkage-Choke
15	24 090 05-S	1	Lever-Choke
16	41 468 03-S	1	Washer-Wave
17	M-545020-S	1	Screw, Hex. Flange M5x0.8x20
18	24 089 51-S	1	Spring-Governor
19	24 089 46-S	1	Spring-Governor
20	24 211 03-S	1	Bolt
21	24 090 33-S	1	Lever-Governor
22	M-641060-S	1	Nut, Hex. Flange M6x1.0
23	25 158 11-S	1	Bushing, Linkage Retaining
24	24 089 01-S	1	Spring-Linkage


Ref	Part No.	Qty.	Description
25	25 158 08-S	1	Bushing, Linkage Retaining
26	24 079 01-S	1	Linkage-Throttle

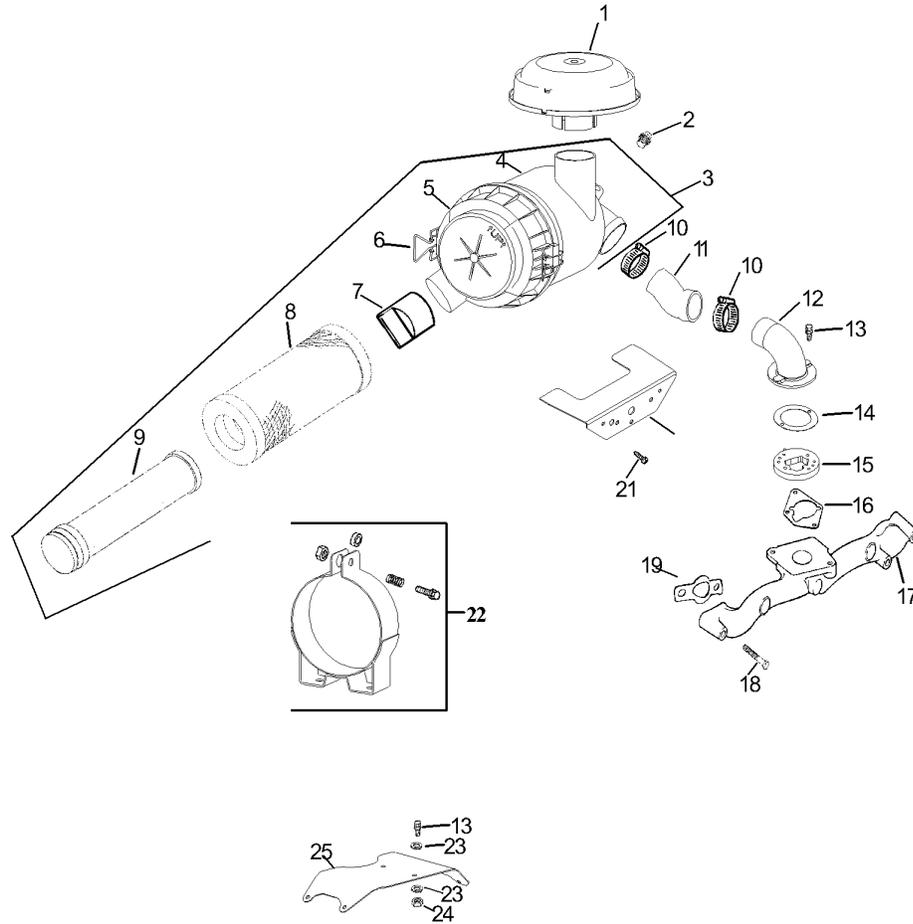

Group 10-Air Intake/Filtration Assembly Kohler CH740-0007

Ref	Part No.	Qty.	Description
①	25 324 02-S	1	Hood, Air Cleaner
②	25 139 20-S	1	Plug, Pipe
③	25 048 07-S	1	Cleaner, Heavy Duty Air (Includes 4-9)
④	25 081 01-S	1	Housing, Heavy Duty Aircleaner
⑤	25 096 06-S	1	Cover ASM
⑥	25 154 05-S	2	Clip
⑦	24 462 07-S	1	Valve, Dust Ejector
⑧	25 083 01-S	1	Element, Air-Primary
⑨	25 083 04-S	1	Element, Air-Safety
⑩	25 237 07-S	2	Clamp, Hose
⑪	24 326 32-S	1	Hose, Air Cleaner
⑫	24 029 21-S	1	Adapter-Air Cleaner
⑬	M-639016-S	6	Screw-HF
⑭	24 041 34-S	1	Gasket-Adapter
⑮	24 029 26-S	1	Adapter ASM
⑯	24 041 06-S	1	Gasket-Air Cleaner
⑰	24 164 14-S	1	Manifold
⑱	25 086 84-S	4	Screw-Hfh
⑲	24 041 01-S	2	Gasket-Intake Manifold
⑳	24 314 25-S	1	Shield-Debris
㉑	24 086 06-S	2	Screw
㉒	25 126 02-S	1	Air Cleaner Bracketasm,
㉓	X-25-73-S	4	Washer-Plain

Ref	Part No.	Qty.	Description
㉔	M-647060-S	2	Nut, Hex Lock
㉕	24 126 98-S	1	Bracket, Air Cleaner

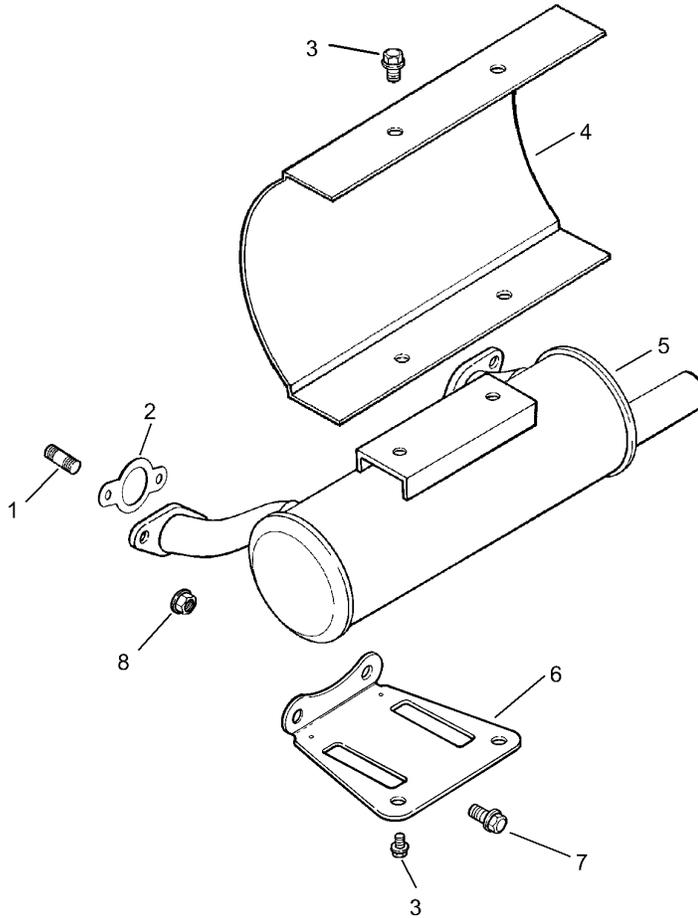

Group 11-Exhaust Assembly Kohler CH740-0007

Ref	Part No.	Qty.	Description				
1	25 072 04-S	4	Stud M8x1.25x33				
2	24 041 49-S	2	Gasket-Exhaust				
3	M-650012-S	4	Screw-HF				
4	24 314 04-S	1	Shield, Heat				
5	24 068 18-S	1	Muffler				
6	24 126 12-S	1	Bracket-Muffler				
7	M-839020-S	2	Screw-Hex Flange				
8	M-841080-S	4	Nut, Hex. Flange M8x1.25				
1	24 755 113-S	0	Set-Gasket				

PROTOTYPE

NOTES

PROTOTYPE

NOTES

PROTOTYPE



PROTOTYPE