Form No. 3470-233 Rev C

TORO®

Count on it.

Parts Catalog

Titan® MyRIDE® 60in Zero Turn

Riding Mower

Model No. 76609—Serial No. 400000000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3470-233 C

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
ROPS Assembly No. 164-0228 6
Transaxle Assembly 8
LH Hydro Assembly No. 161-6352 10
RH Hydro Assembly No. 161-6353 12
Styling Assembly 14
Fuel Tank Assembly 16
Motion Control Assembly 18
Caster Wheel Assembly 20
Wheel and Tire Assembly 22
Electrical Assembly 24
Decklift Assembly 26
Engine and Muffler Assembly 28
Seat Pan Assembly 30
60 Inch Deck Assembly 32
Deck Decal Assembly No. 163-2323 34
Idler Arm Assembly No. 161-6406 36
Attachments and Accessories 38

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved


Frame Assembly

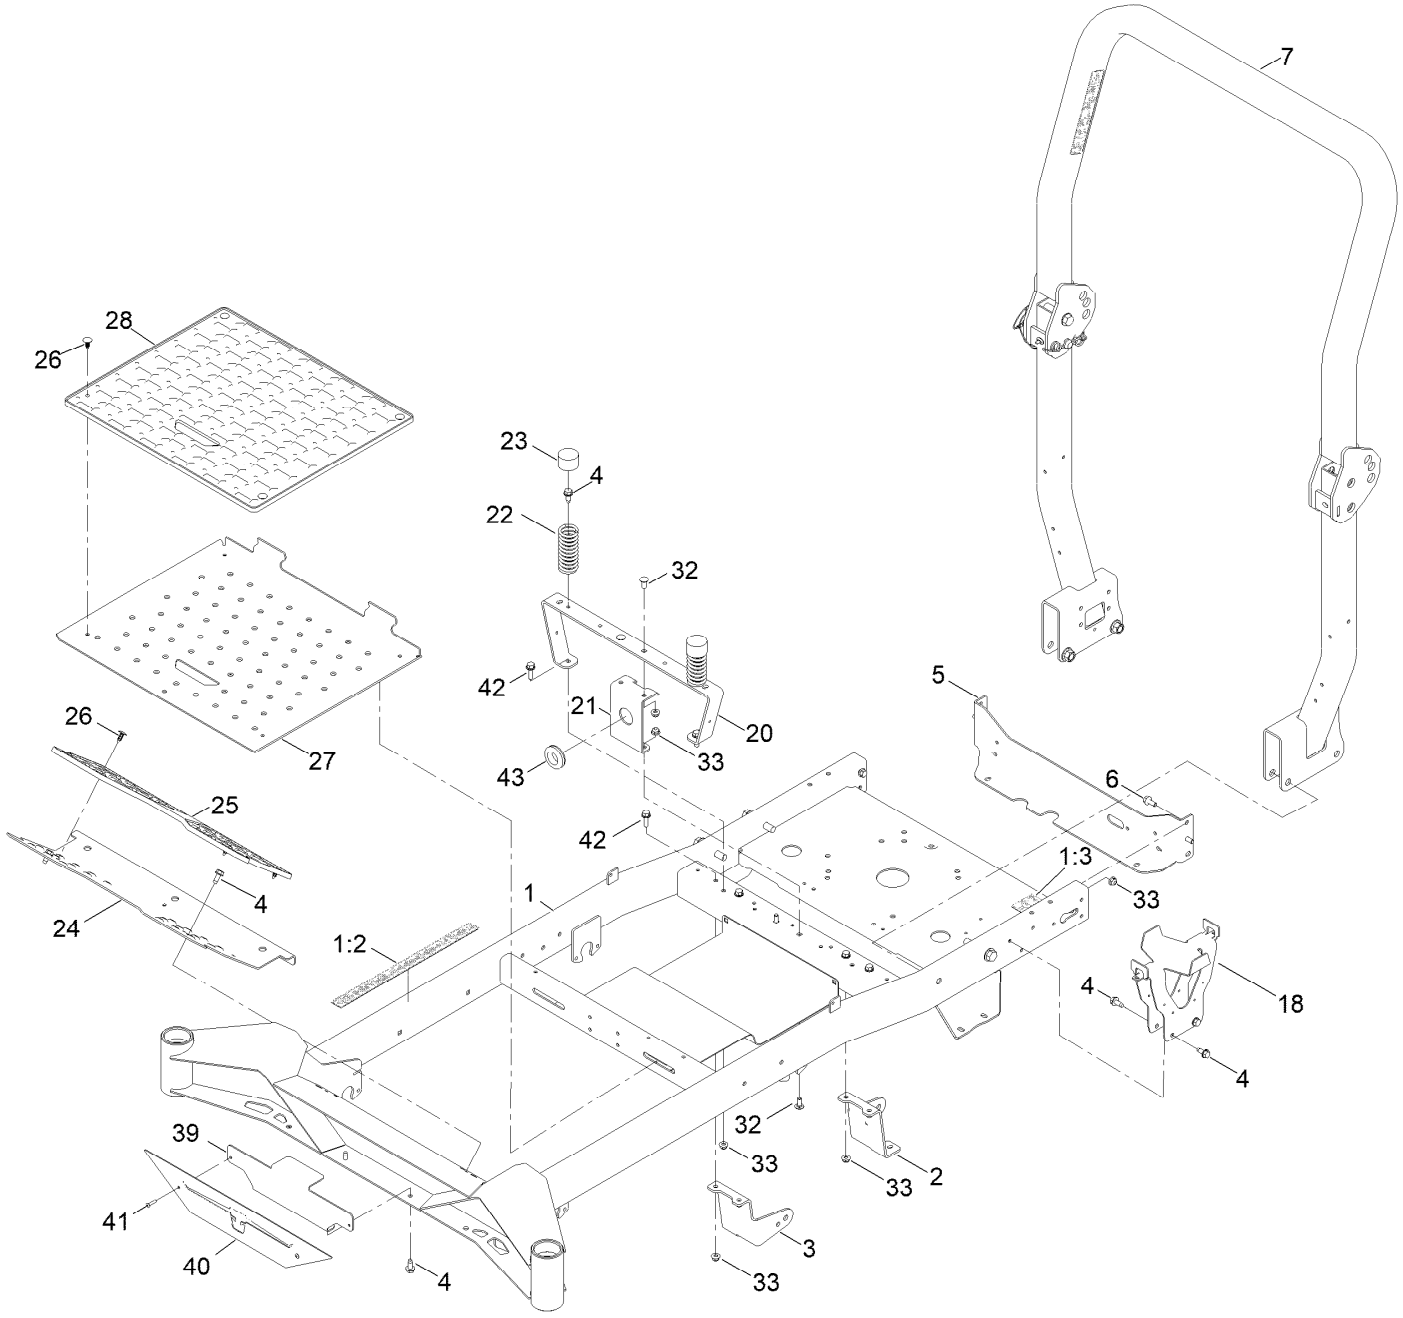

Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-2385	1	Frame W/Decals ASM
1:2	161-6647	1	Decal-Warning
1:3	161-6207	1	Decal-Bypass
2	161-6506-01	1	Mount-Drive, LH
3	161-6507-01	1	Mount-Drive, RH
4	32144-70	10	Screw-HWHTF
5	163-3137-03	1	Plate-Mount, Rear
6	139-2598	4	Screw-HHF
7	164-0228	1	ASM-ROPS
18	161-6314-03	1	Tray-Battery
20	161-6318-03	1	Support-Seat
21	161-9738	1	Bracket-Latch, Frame (Mty/Btv)
22	138-2548	2	Spring-Compression
23	701178	2	Cap-Protector
24	145-6369-01	1	Pan-Floor
25	147-7611	1	Floor Mat - Titan
26	117-2382	8	Plug-Plastic
27	145-6370-01	1	Pan-Floor
28	147-7609	1	Floor Mat
32	137-3061	4	Bolt-CARR
33	119-4041	14	Nut-HF
39	147-2878-01	1	Plate-Backer
40	147-2879-03	1	Logo-Plate-Front
41	130-8451	2	Rivet-Trifold
42	139-2596	6	Screw-HHF
43	108-3723	1	Grommet

ROPS Assembly No. 164-0228

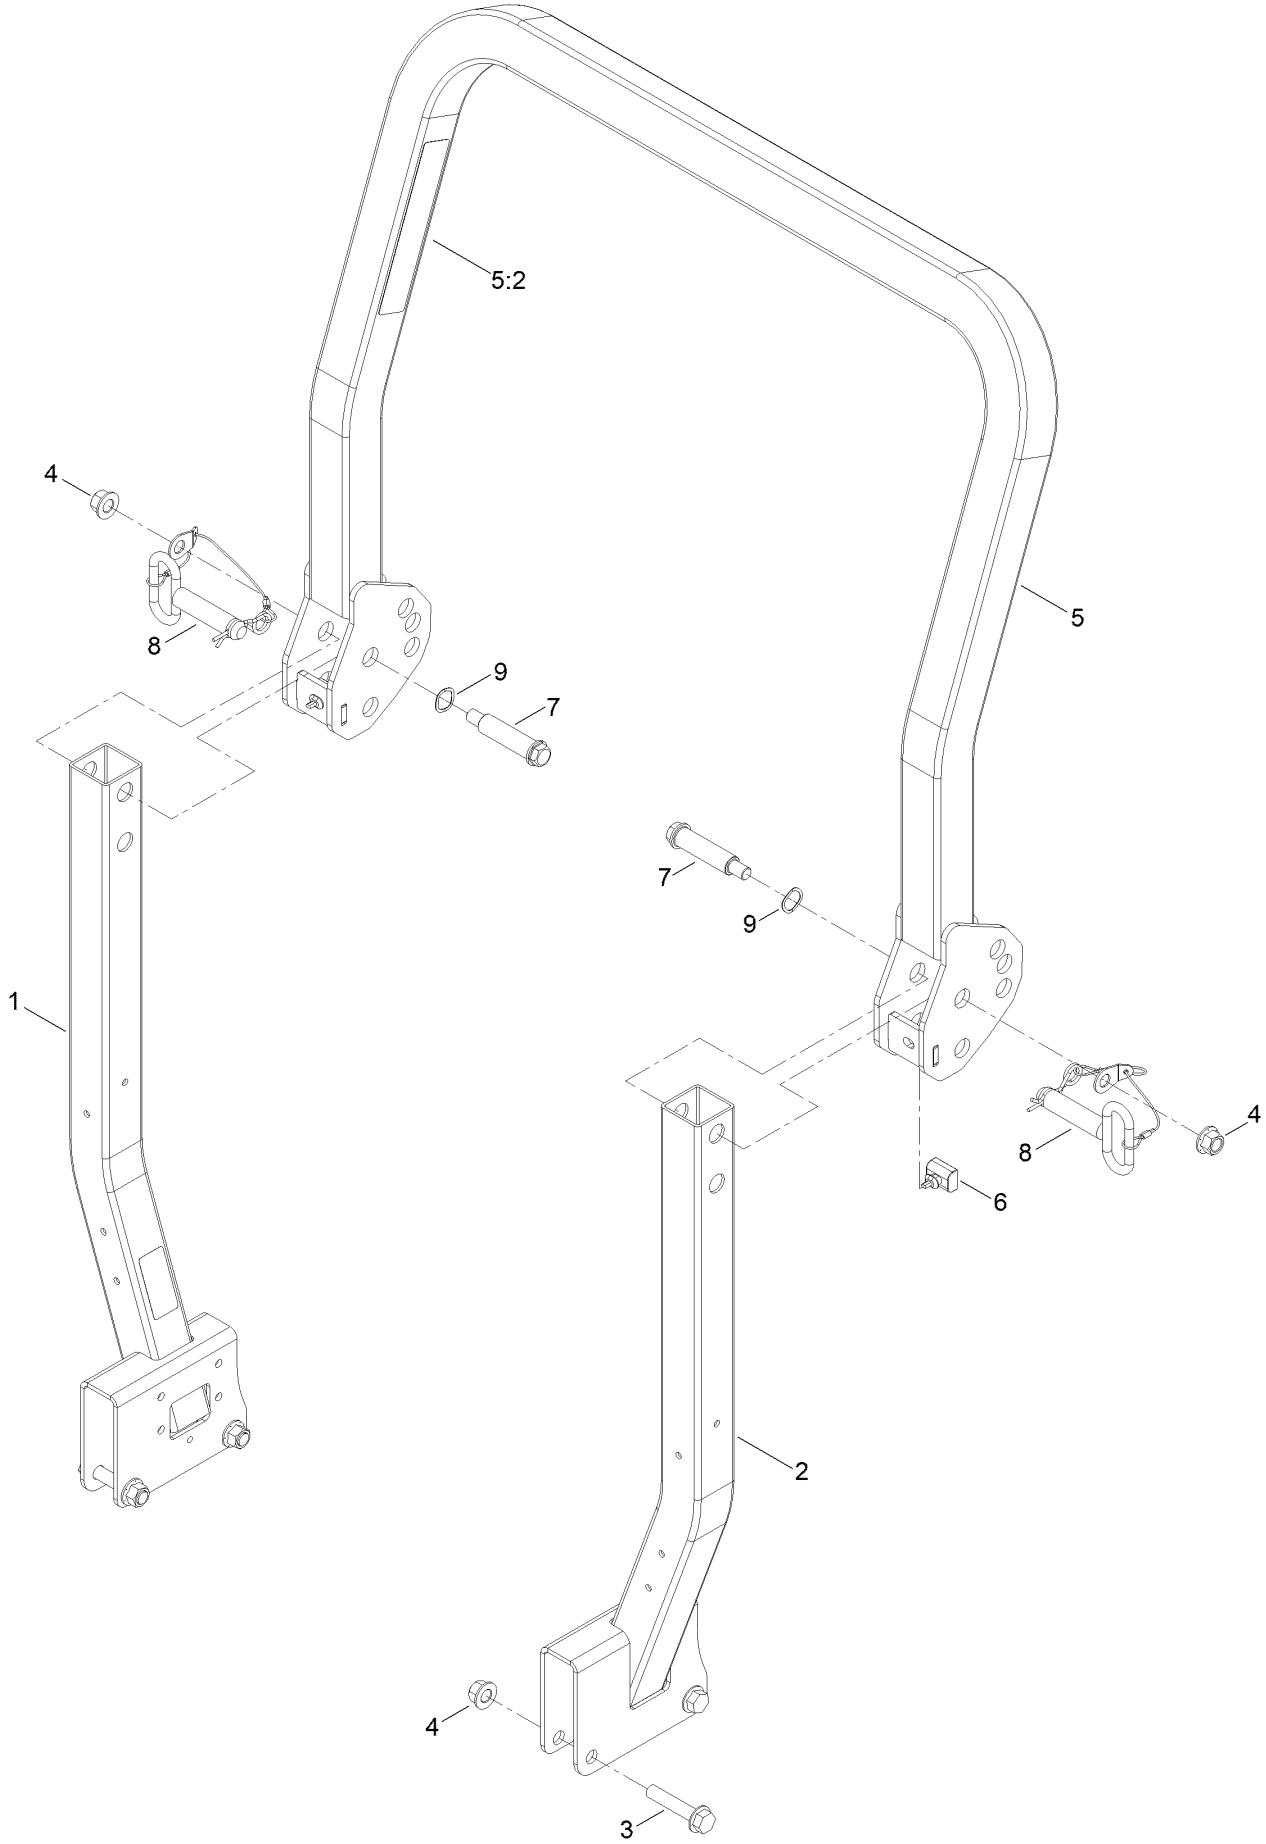


ROPS Assembly No. 164-0228 (continued)

Ref.	Part Number	Qty.	Description
1		1	RH ROPS ASM [black] ●
2		1	LH ROPS ASM [black] ●
3	127-7444	4	Screw-HHF
4	139-1689	6	Nut-HF
5		1	Tube-ROPS, Upper ASM ●
5:2	107-3069	1	Decal-Warning
6	109-5337	2	Bumper-ROPS
7	161-4505	2	Bolt-Shoulder
8	161-4477	2	ROPS Pin ASM
9	119-4164	2	Washer-Wave

● Not serviced separately

Transaxle Assembly

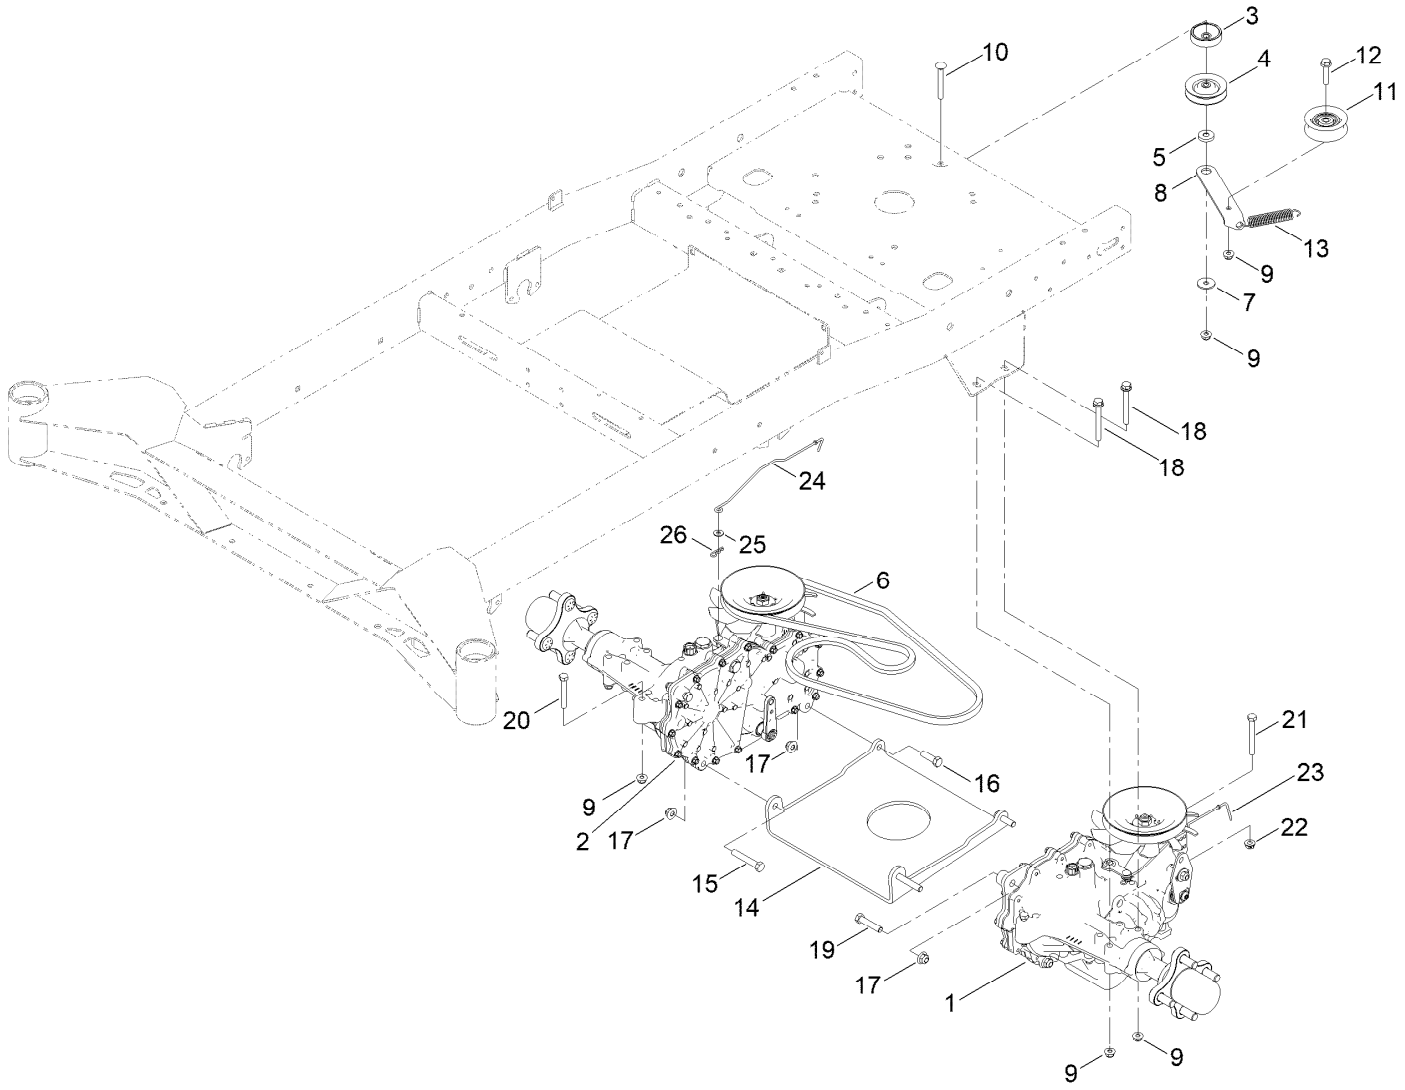


Transaxle Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-6352	1	LH Hydro Transaxle ASM
2	161-6353	1	RH Hydro Transaxle ASM
3	138-9809	1	Spacer
4	68-0030	1	Idler
5	138-7277	1	Spacer-Arm, Idler
6	145-6363	1	V-Belt (A Sec 66.30 El)
7	5-4460	1	Washer-Pivot
8	147-2925	1	Arm-Idler
9	119-4041	8	Nut-HF
10	139-2588	1	Screw-CARR
11	138-7597	1	Pulley-Idler, Flat
12	140-5024	1	Screw-HHF
13	137-7040	1	Spring-Return, Pedal
14	161-9754-03	1	Plate-Hydro
15	139-2589	2	Screw-HH
16	136-8684	2	Screw-HH
17	119-4042	6	Nut-HF, NI
18	138-7590	4	Screw-HHF
19	139-2602	2	Screw-HH
20	322-11	2	Screw-HH
21	145-6388	2	Screw-HH Spcl
22	139-2574	2	Nut-HF
23	147-2987	1	Rod-Bypass, LH
24	147-2986	1	Rod-Bypass, RH
25	119-8952	2	Washer-Spcl
26	137-3083	2	Pin-Hair

LH Hydro Assembly No. 161-6352

Items Not Shown
14 Oil, 20W50
13 Sealant
200 Seal Kit

Parts Included in 200 Seal Kit:
10,30,31,33,35,41,56,57,71,103,
130,157.

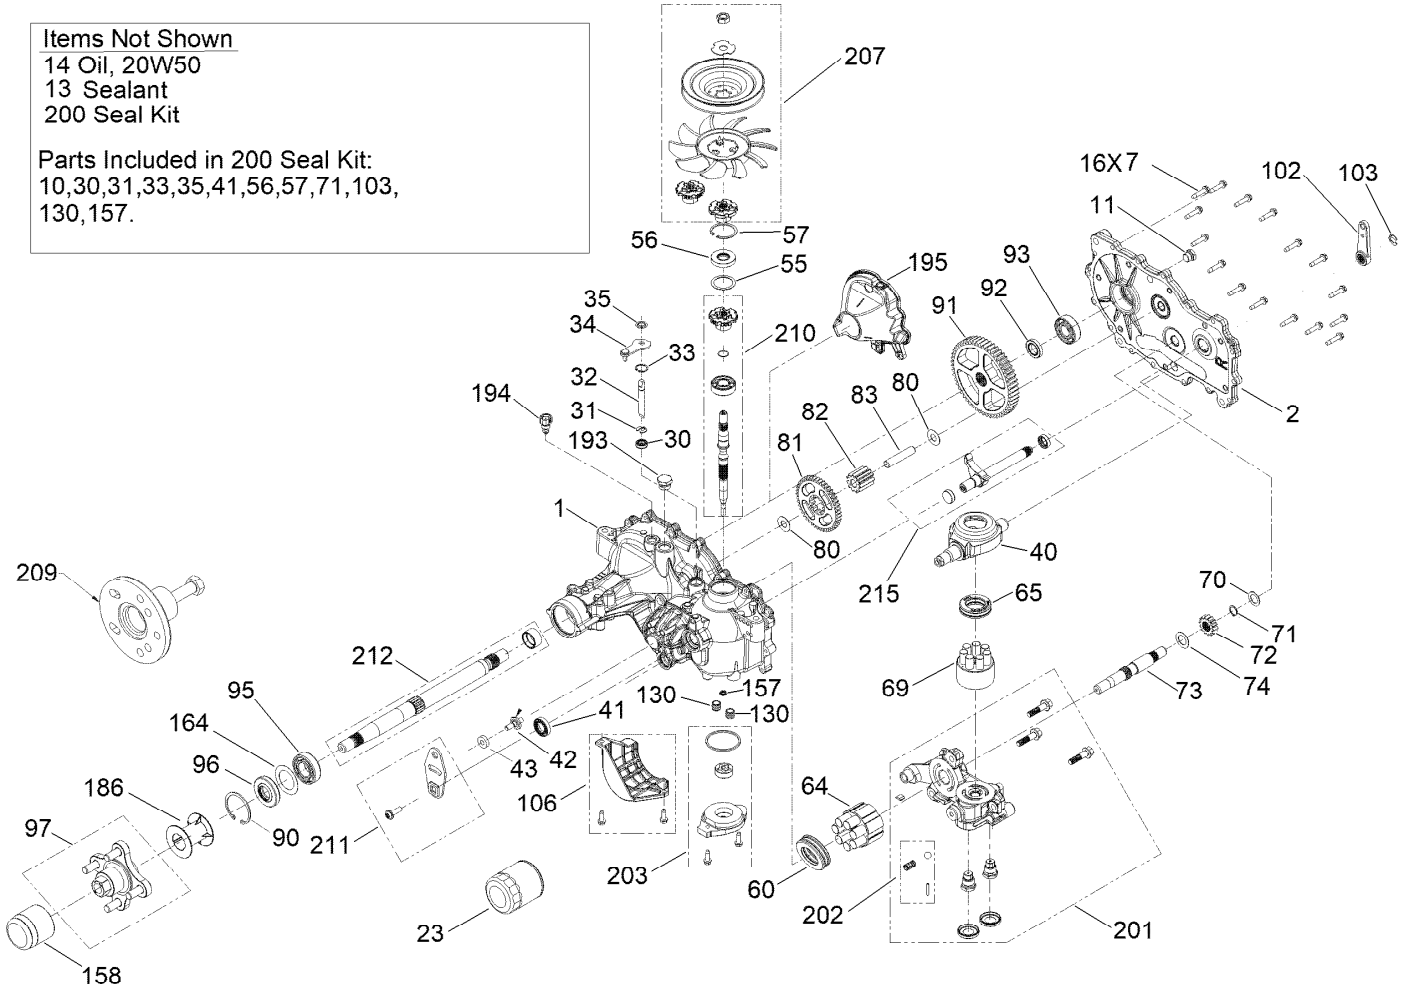


LH Hydro Assembly No. 161-6352 (continued)

Ref.	Part Number	Qty.	Description
1	140-8345	1	RH Main Housing Kit
2	140-8349	1	RH Side Cover Kit
7	117-5359	1	Screw-HHF
11	135-1140	1	Plug-Straight
13	104-2147	1	Sealant, Silicone - Non-Flammable
23	109-3321	1	Element-Oil Filter, HYD
30	139-7497	1	Seal-Lip
31	106-8677	1	Ring-Retaining, External
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Internal
34	112-9852	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, External
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
55	104-5308	1	Spacer
57	104-5309	1	Ring-Retaining
60	112-4154	1	Bearing-Thrust
64	139-4074	1	Cylinder Block ASM Kit
65	94-6922	1	Bearing-Thrust
69	110-8561	1	Pump Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	131-0905	1	Gear-14T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer
80	94-1933	1	Washer
81	114-1692	1	Gear-45T
82	120-7974	1	Gear-11T
90	104-2169	1	Ring-Retaining
91	114-1694	1	Gear-54T
92	120-7975	1	Spacer
93	135-1361	1	Bearing-Ball
95	130-8477	1	Bearing-Ball
96	104-2144	1	Seal
97	116-3872	1	Hub-Offset
102	125-0021	1	Handle-Brake
103	131-0906	1	Ring-Retaining, EXT
106	139-7499	1	Filter Guard Kit
130	126-3251	1	Tube-Charge
157	126-1930	1	Gerotor Seal Kit
158	116-6214	1	Cap-Axle, Long
164	121-5745	1	Spacer
186	116-6213	1	Tube-Axle
193	140-8343	1	Plug
194	140-8356	1	Breather Fitting ASM
195	140-8357	1	RH Internal Expansion Tank ASM
200	140-8351	1	Seal Kit
202	114-8464	1	Charge Relief Kit
203	114-8465	1	Charge Kit
207	135-7343	1	Fan And Pulley Kit
209	114-8467	1	Puller-Hub, 4 Bolt
210	139-7502	1	Input Shaft Kit
211	117-5362	1	Control Arm Kit
215	140-8352	1	Inboard Kit

RH Hydro Assembly No. 161-6353

Items Not Shown
14 Oil, 20W50
13 Sealant
200 Seal Kit


Parts Included in 200 Seal Kit:
10,30,31,33,35,41,56,57,71,103,
130,157.

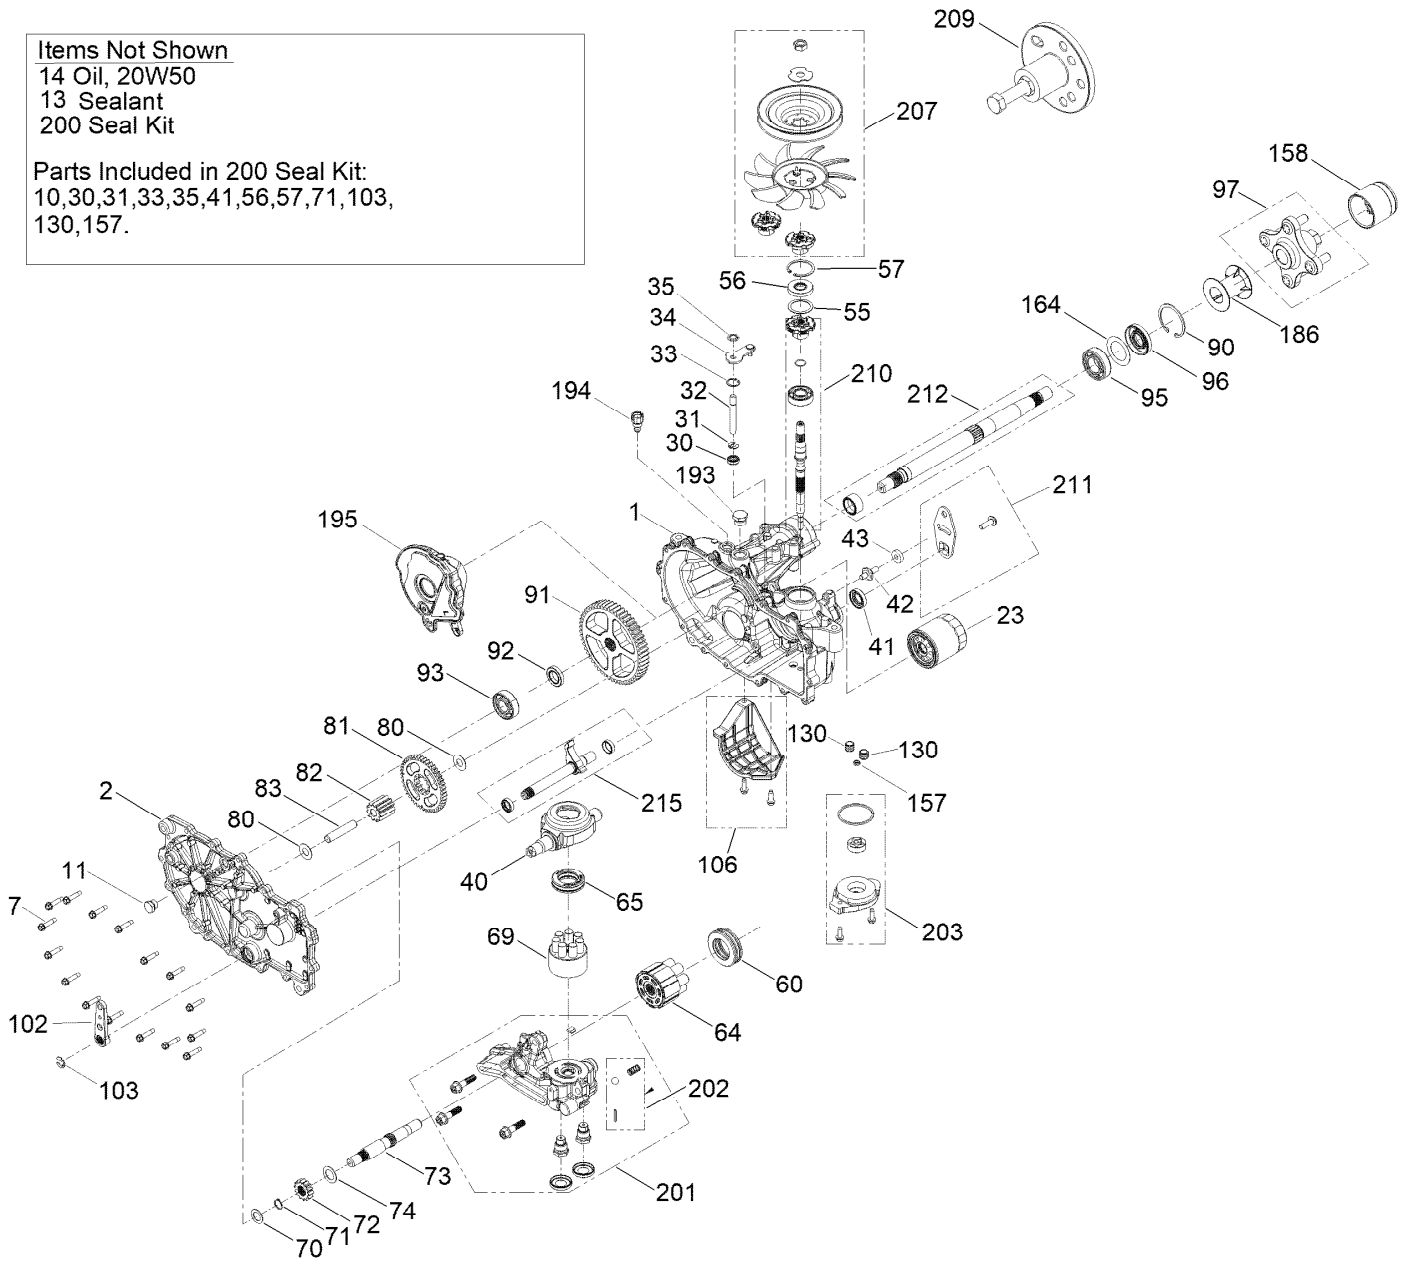

RH Hydro Assembly No. 161-6353 (continued)

Ref.	Part Number	Qty.	Description
1	140-8347	1	LH Main Housing Kit
2	140-8350	1	LH Side Cover Kit
7	117-5359	1	Screw-HHF
11	135-1140	1	Plug-Straight
13	104-2147	1	Sealant, Silicone - Non-Flammable
23	109-3321	1	Element-Oil Filter, HYD
30	139-7497	1	Seal-Lip
31	106-8677	1	Ring-Retaining, External
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Internal
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, External
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
55	104-5308	1	Spacer
57	104-5309	1	Ring-Retaining
60	112-4154	1	Bearing-Thrust
64	139-4074	1	Cylinder Block ASM Kit
65	94-6922	1	Bearing-Thrust
69	110-8561	1	Pump Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	131-0905	1	Gear-14T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer
80	94-1933	1	Washer
81	114-1692	1	Gear-45T
82	120-7974	1	Gear-11T
90	104-2169	1	Ring-Retaining
91	114-1694	1	Gear-54T
92	120-7975	1	Spacer
93	135-1361	1	Bearing-Ball
95	130-8477	1	Bearing-Ball
96	104-2144	1	Seal
97	116-3872	1	Hub-Offset
102	125-0021	1	Handle-Brake
103	131-0906	1	Ring-Retaining, EXT
106	139-7498	1	Filter Guard Kit
130	126-3251	1	Tube-Charge
157	126-1930	1	Gerotor Seal Kit
158	116-6214	1	Cap-Axle, Long
164	121-5745	1	Spacer
186	116-6213	1	Tube-Axle
193	140-8343	1	Plug
194	140-8356	1	Breather Fitting ASM
195	140-8358	1	LH Internal Expansion Tank ASM
200	140-8351	1	Seal Kit
202	114-8464	1	Charge Relief Kit
203	114-8465	1	Charge Kit
207	135-7343	1	Fan And Pulley Kit
209	114-8467	1	Puller-Hub, 4 Bolt
210	139-7502	1	Input Shaft Kit
211	117-5362	1	Control Arm Kit
215	140-8353	1	Inboard Kit


Styling Assembly

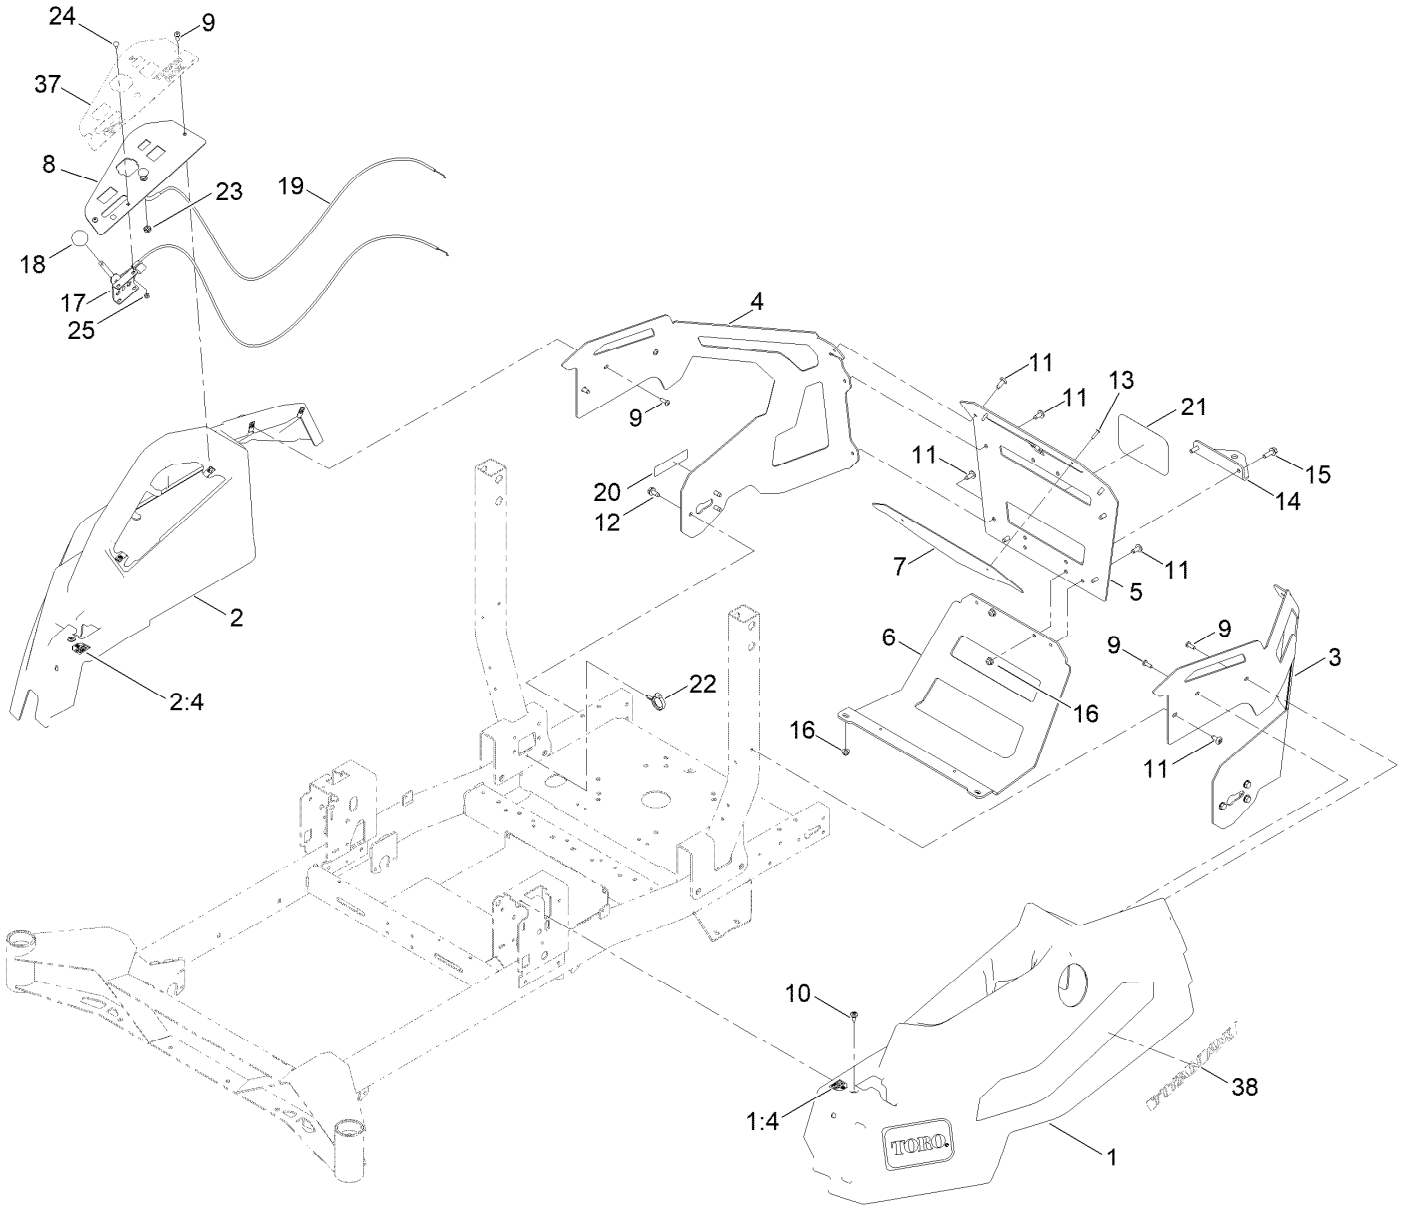

Styling Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-6389	1	Titan Max LH Pod ASM
1:4	139-2395	1	Decal-Control Lever, LH
2	161-6390	1	Titan Max RH Pod ASM
2:4	139-2394	1	Decal-Control Lever, RH
3	161-6315-01	1	Guard-Engine, LH
4	161-6316-01	1	Guard-Engine, RH
5	147-2998-03	1	Guard-Engine
6	147-3000-03	1	Guard-Muffler
7	147-2999-01	1	Plate-Backer
8	161-6203-03	1	Panel-Control
9	138-0689	6	Screw-PH
10	120-7950	2	Screw-Torx
11	138-9753	10	Screw
12	32144-70	6	Screw-HWHTF
13	130-8451	2	Rivet-Trifold
14	117-1232-03	1	Bracket-Hitch
15	139-2596	2	Screw-HHF
16	119-4041	4	Nut-HF
17	139-6734	1	Cable-Control, Throttle
18	1-603175	1	Knob-Ball
19	115-2756	1	Choke Control ASM
20	142-5864	1	Decal-Spark Arrester
21	99-4693	1	Decal
22	104-2490	1	Clamp-Hose
23	3220-3	1	Nut-HJ
24	135-1929	2	Bolt-CARR
25	3296-2	2	Nut-Lock, NI
37	161-9793	1	Decal-Panel, Control
38	161-9794	2	Decal-Titan Max


Fuel Tank Assembly

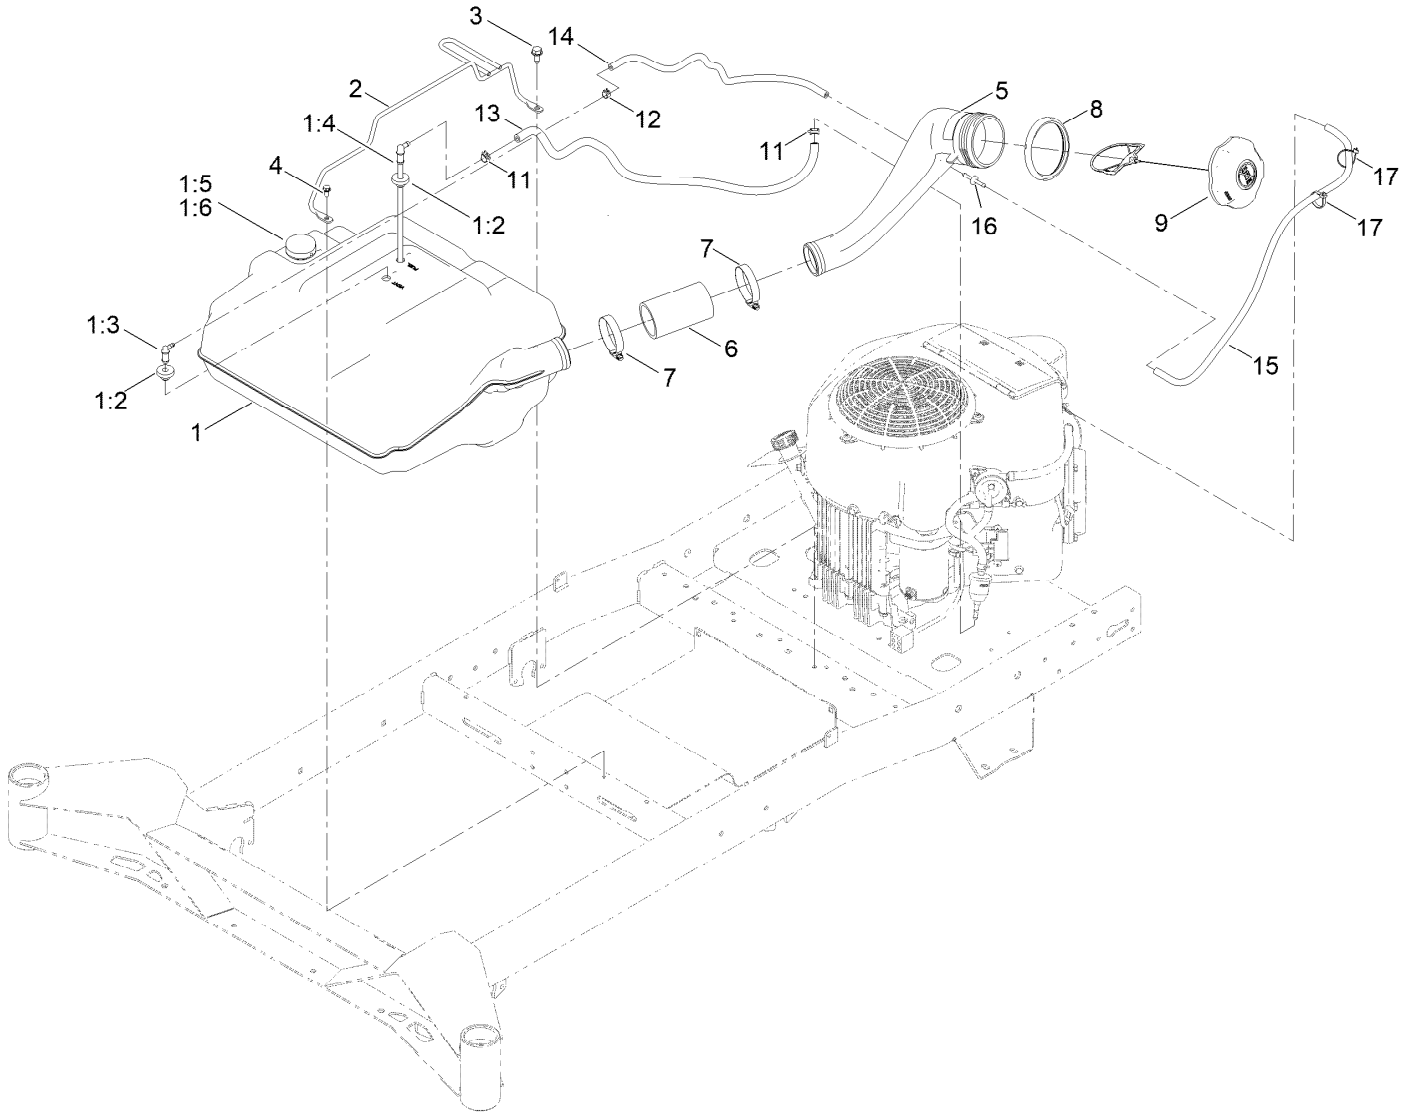

Fuel Tank Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-6234	1	Tank ASM-Fuel
1:2	46-6560	2	Bushing
1:3	144-5302	1	Fitting-Elbow 90
1:4	133-9269	1	Grommet-Fuel
1:5	161-6415	1	Remote Gauge ASM
1:6	161-6317	1	Fitting - Pickup, Fuel
2	161-6494	1	Hold Down ASM
3	32144-70	1	Screw-HWHTF
4	32144-4	1	Screw-HWH
5	161-6235	1	Neck-Filler, Fuel
6	145-4698	1	Hose-Filler, Fuel
7	2412-130	2	Clamp-Hose
8	147-7712	1	Ring-Retaining
9	137-4119	1	Cap-Fuel, Ratcheting
11	2412-98	2	Clamp-Hose
12	2412-80	1	Clamp-Hose
13	110-1872	1	Hose-Fuel
14	143-2545	1	Hose-Fuel
15	117-9569	1	Hose-Fuel
16	144-1983	1	Adapter Orifice
17	614249	2	Tie-Cable


Motion Control Assembly

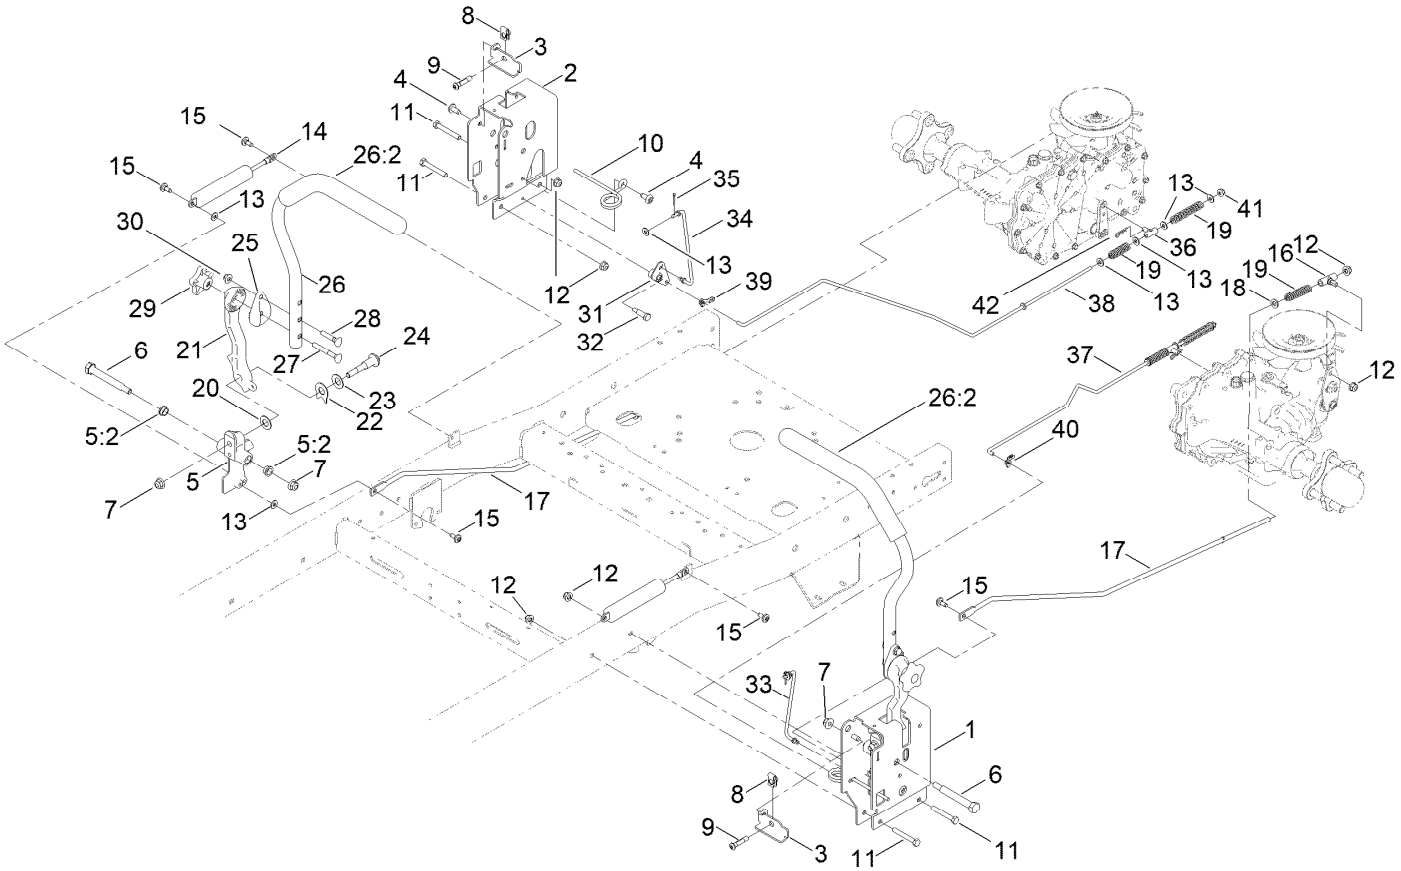

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-4615-03	1	Control Box - LH G7
2	145-4647-03	1	Control Box - RH G7
3	147-7580-03	2	Adjustment Plate-Control Box
4	138-9753	4	Screw
5	145-4648	2	Pivot Arm ASM
5:2	256-156	2	Bushing-Flange
6	115-5099	2	Bolt-Pivot
7	104-8301	4	Nut-HF, NI
8	112-3306	2	Nut
9	126-4299	2	Screw-HSBH
10	145-6253	2	Spring-Torsion
11	322-11	4	Screw-HH
12	104-8300	8	Nut-HF, NI
13	119-8952	14	Washer-Spcl
14	132-6853	2	Damper-Non Cavitating
15	120-7950	6	Screw-Torx
16	138-7218	2	Mount-Rod, Hydro
17	161-9725	2	Rod-Hydro
18	120-9683	2	Washer-Plain
19	138-7252	6	Spring-Compression
20	120-2273	2	Washer-Flat
21	147-5191-05	2	Arm-Control, 32 Teeth
22	142-8478	2	Spacer, Anti-Rotation
23	119-8925	2	Washer-Belleville
24	117-1198	2	Bolt-Pivot
25	147-5192-05	2	Disc-Adjustment Handle, 32 Teeth
26	145-6327	2	Handle-Control,
26:2	147-3029	1	Grip
27	145-6366	2	Screw-Handle
28	137-3008	2	Screw-Handle
29	117-5976	2	Knob-Handle
30	138-8401	2	Nut-HF
31	161-6420	2	Bellcrank
32	145-6364	2	Bolt-Shoulder
33	145-4607	1	Link-Brake, LH
34	145-6238	1	Link-Brake, RH
35	120-9716	2	Pin-Cotter
36	119-8857	2	Mount-Pivot
37	145-0408	1	Rod-Brake LH
38	145-0407	1	Rod-Brake, RH
39	144-1815	1	Clip-Rod, RH (7R, 1/4In)
40	144-1816	1	Clip-Rod, LH (7L, 1/4In)
41	119-4040	2	Nut-HF, NI
42	137-3083	2	Pin-Hair


Caster Wheel Assembly

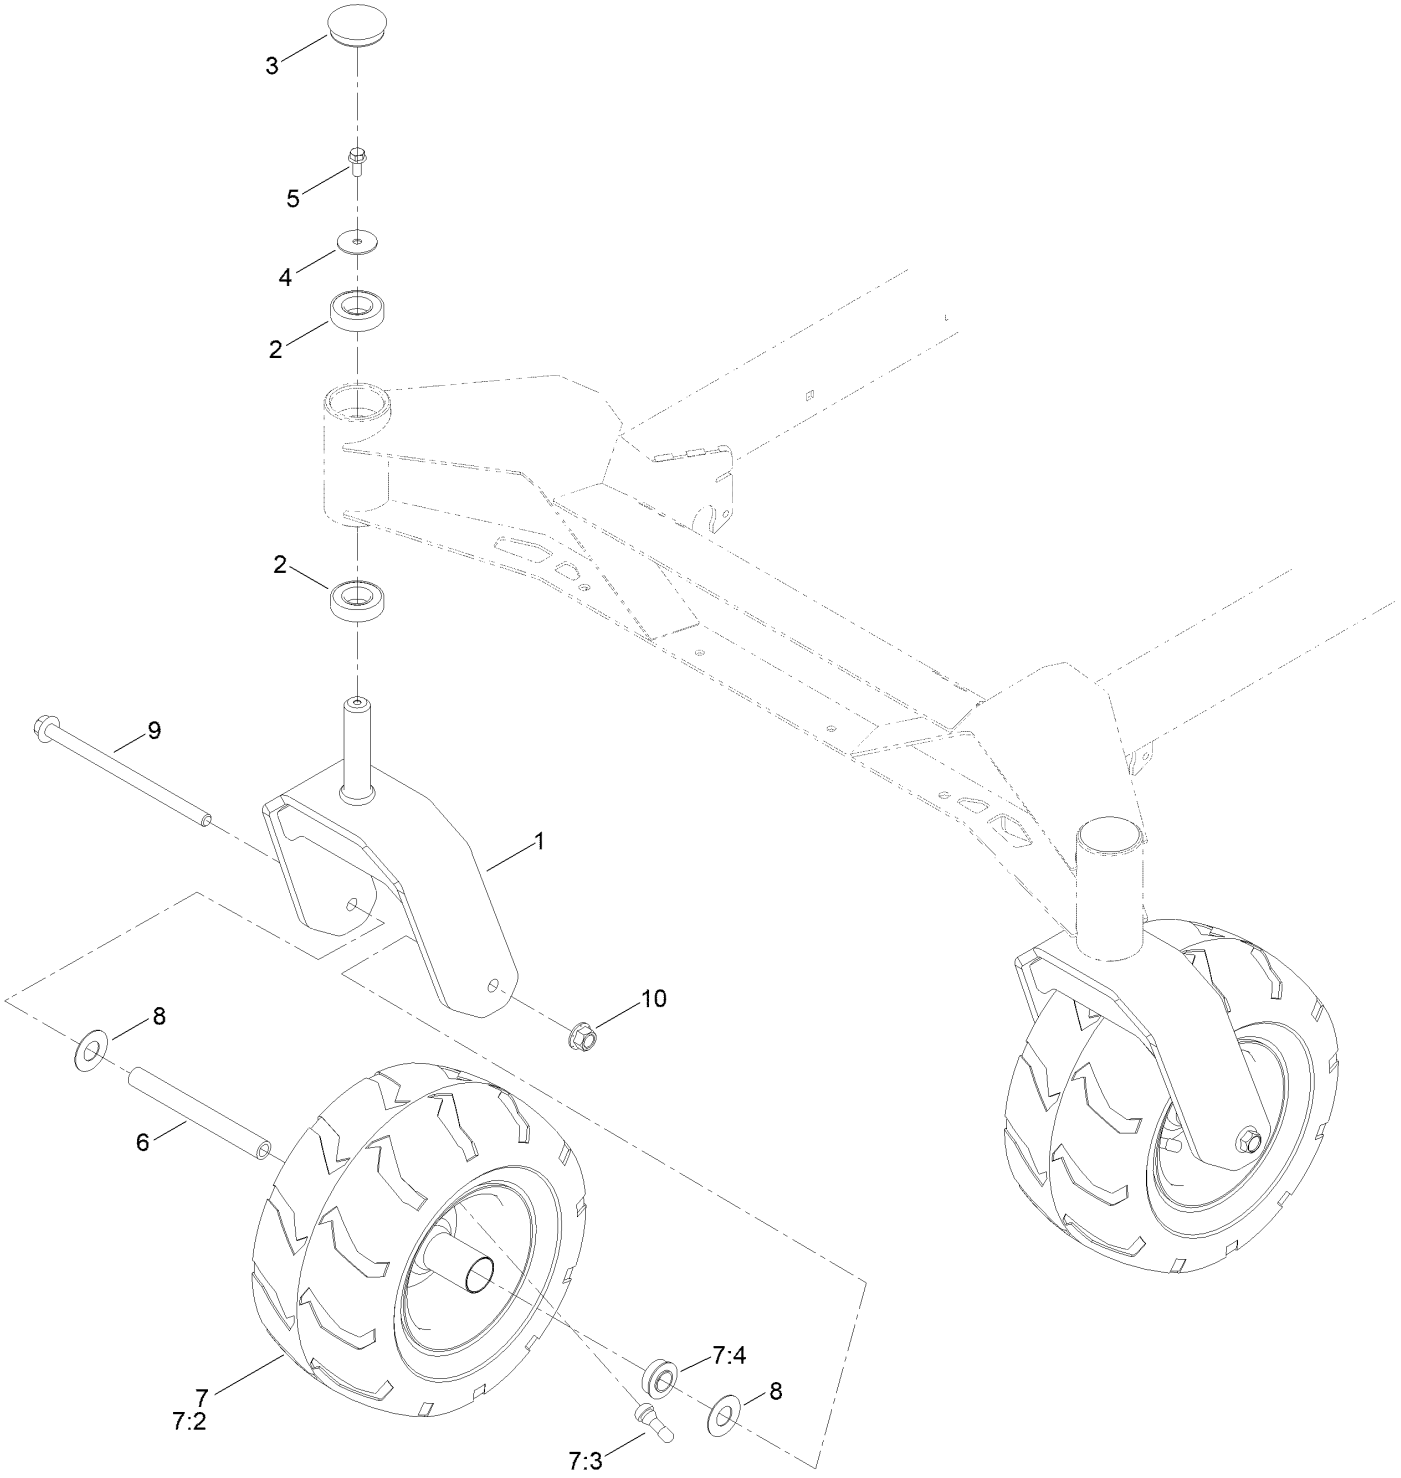

Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-6375-01	2	Castor Fork [red]
2	109-3678	4	Bearing-Ball
3	144-0375	2	Cap, Grease
4	115-1151	2	Washer-Flat
5	100-1668	2	Screw-HHF
6	133-4487	2	Spanner-Wheel
7	147-7647	2	Tire And Wheel ASM
7:2	147-7648	1	Tire 13X6.5-6, Treaded
7:3	232-27	1	Stem-Valve
7:4	147-7652	2	Bearing
8	136-5590	4	Washer
9	139-2559	2	Screw-HHF
10	139-1689	2	Nut-HF


Wheel and Tire Assembly

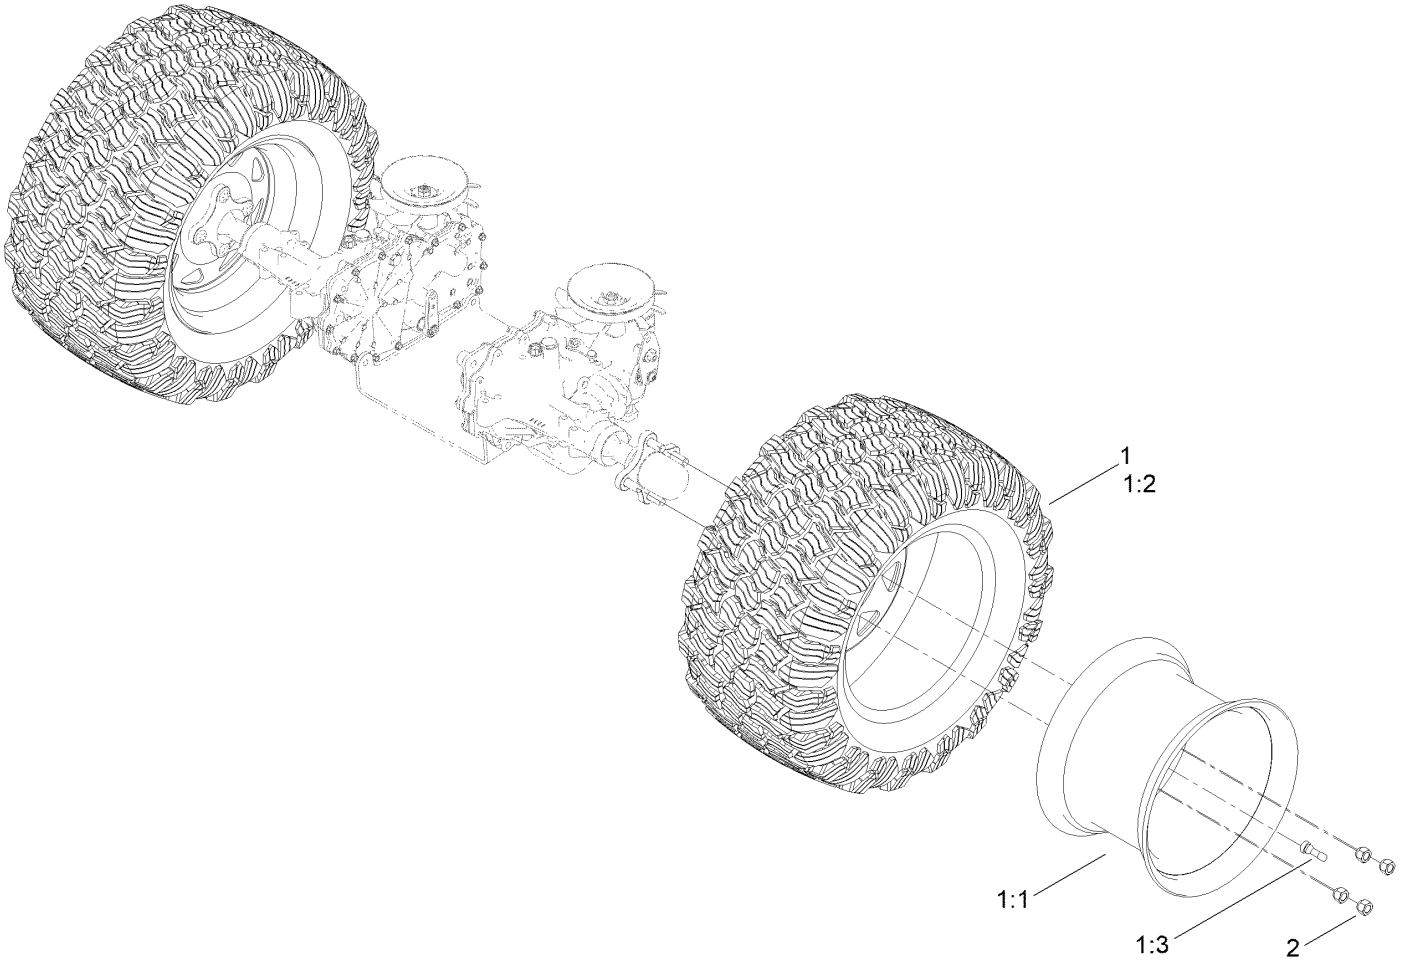

Wheel and Tire Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-9726	2	Wheel And Tire ASM
1:1	140-7969	1	Wheel
1:2	161-9727	1	Tire
1:3	232-27	1	Stem-Valve
2	139-2564	8	Nut-Lug

Electrical Assembly

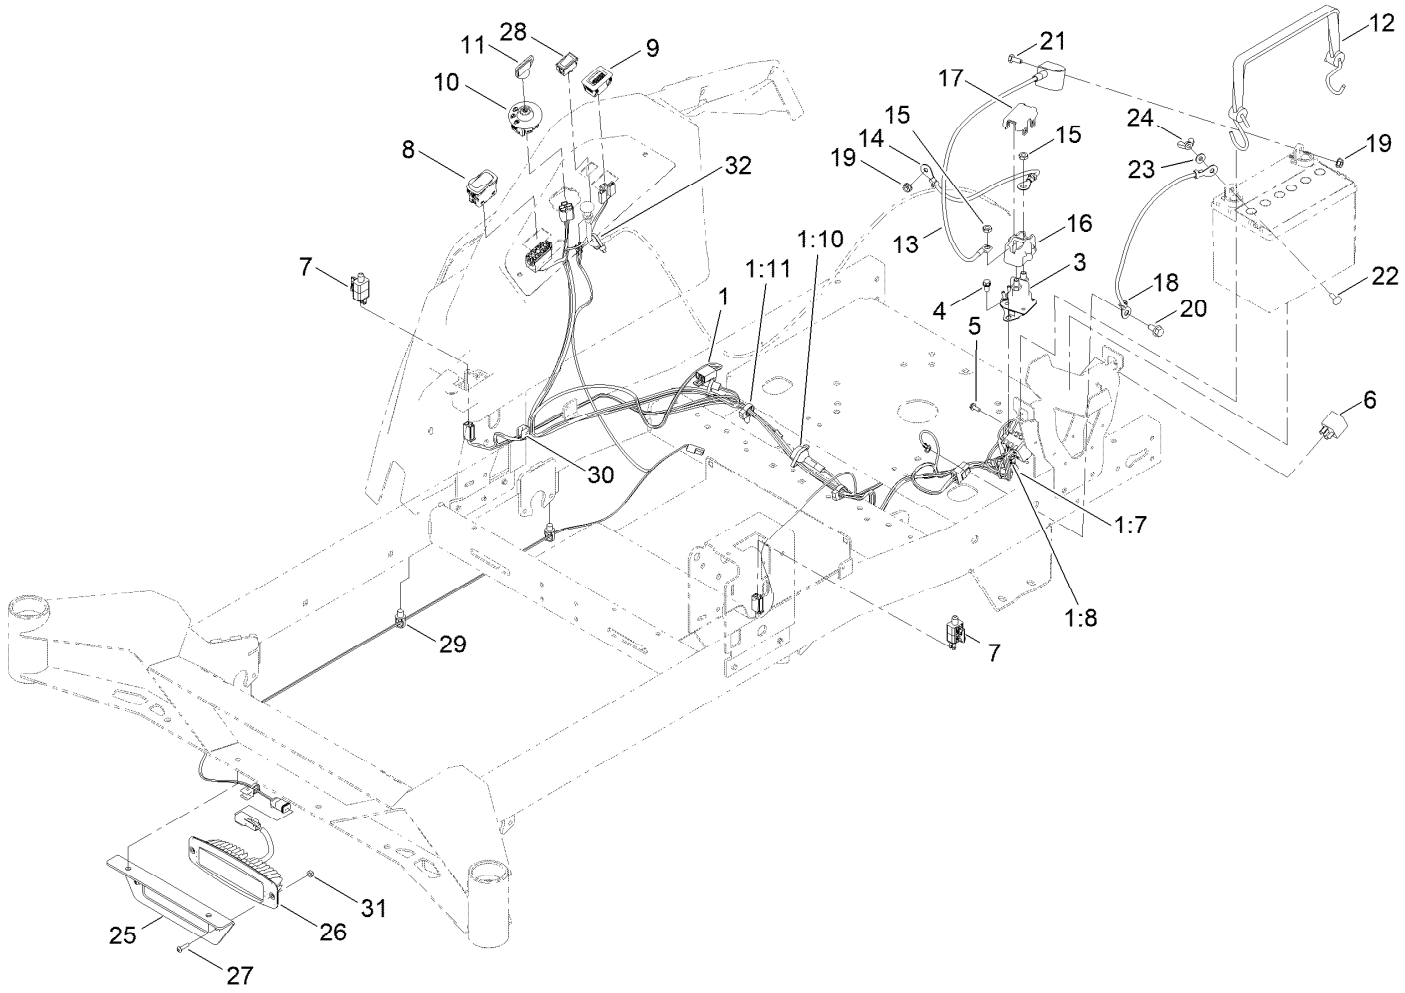


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-6382	1	Harness-Wire, Main
1:7	109355	1	Fuse-Blade, 15 Amp
1:8	109102	1	Fuse-Blade, 25 Amp
1:9	32180-435	1	Cap-Over Mold, 1M/1F ●
1:10	100-4918	1	Diode
1:11	32180-047	3	Clip-Tubing, Harness
3	117-1197	1	Solenoid
4	32144-4	2	Screw-HWH
5	139-1713	1	Screw-Thd Roll
6	1-643275	1	Relay
7	110-6765	2	Switch
8	139-6368	1	Switch-Rocker, On-None-On
9	139-6404	1	Hour Meter
10	137-4100	1	Switch-Ignition
11	63-8360	1	Key-Ignition
12	139-2381	1	Strap-Rubber
13	147-2941	1	Cable-Battery,Red
14	121-0711	1	Cable-Battery, Positive
15	139-2580	2	Nut-HJ
16	140-2080	1	Cover-Solenoid
17	140-2081	1	Cap-Solenoid
18	119-8899	1	Cable-Battery, Black
19	139-2575	2	Nut-HF
20	33104-016	1	Screw-HHF
21	137-3041	1	Screw-HH
22	137-3053	1	Screw-CARR
23	119-8952	1	Washer-Spcl
24	32103-22	1	Nut-Wing
25	163-2331-03	1	Bracket-Mounting, Light
26	139-8089	1	Light - Flush Mount
27	104-2408	2	Screw-HSBH
28	92-8875	1	Switch-Rocker
29	161-9748	1	Harness-Wire, Light Harness
30	32180-082	1	Clip-Edge W/Tie, Perpendicular
31	3296-2	2	Nut-Lock, NI
32	3290-378	1	Tie-Cable

● Not illustrated


Decklift Assembly

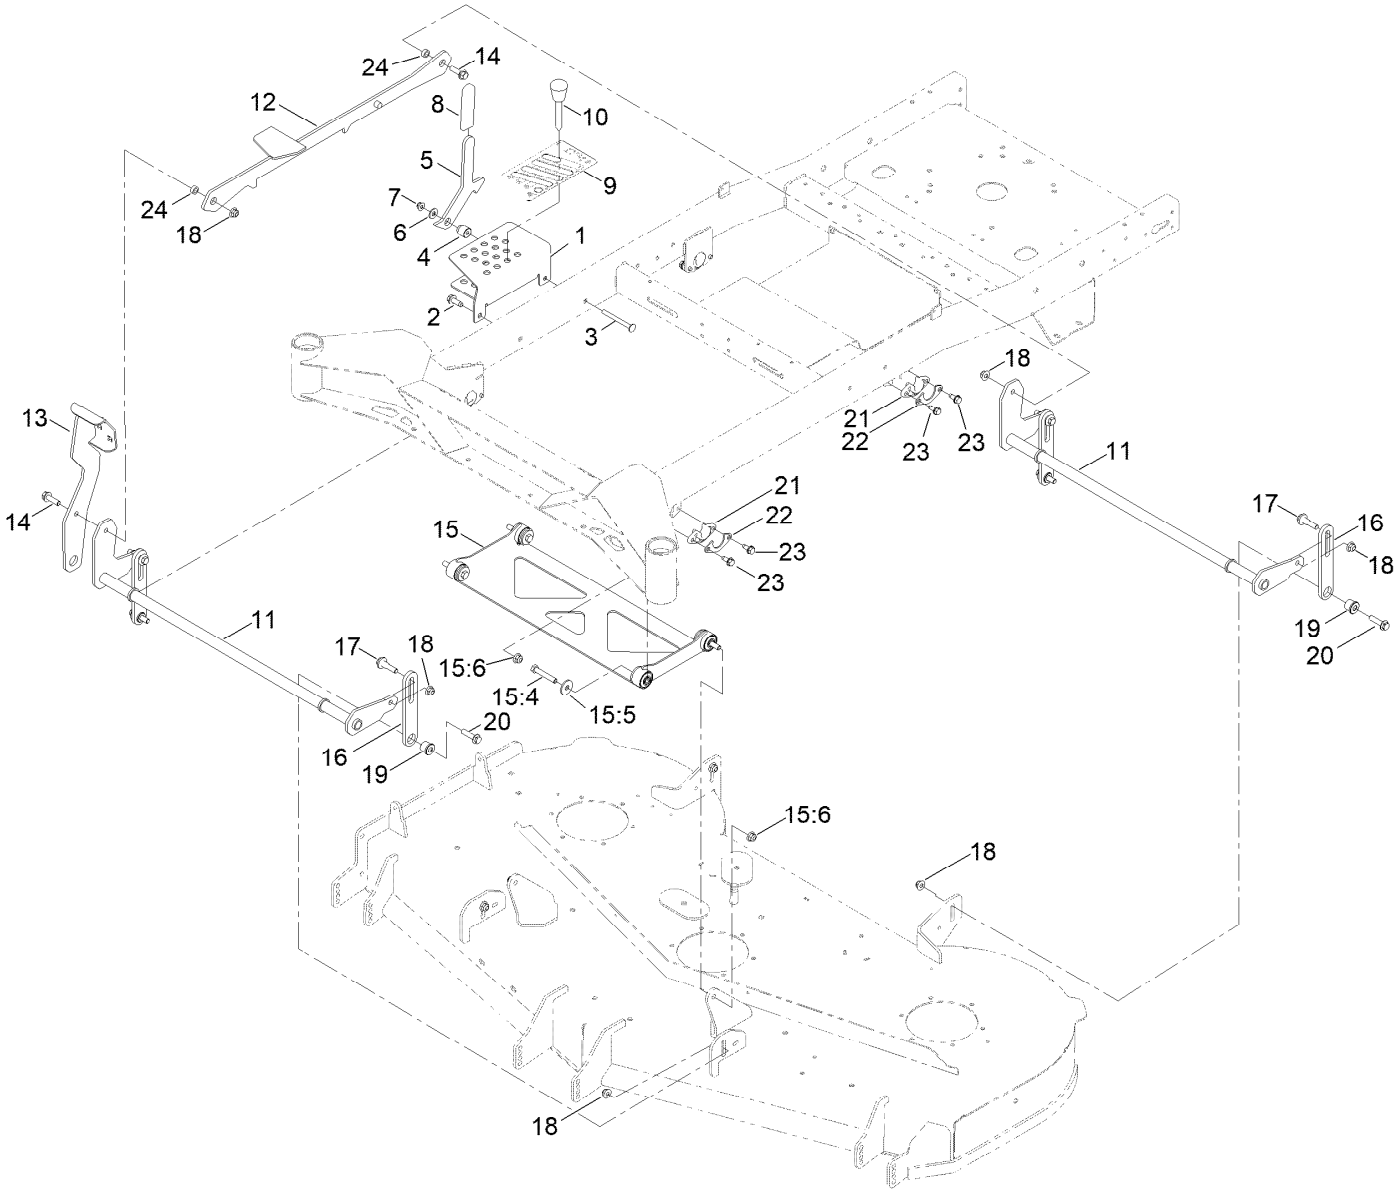

Decklift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-6260-01	1	Bracket-HOC
2	139-2428	1	Screw-HWH
3	138-0741	1	Screw-CARR
4	145-6282	1	Spacer-Stepped
5	145-6279	1	Plate-Transport Lock
6	137-3082	1	Washer-Plain
7	119-4041	1	Nut-HF
8	140-0413	1	Grip-Handle
9	147-2867	1	Decal-HOC
10	140-2146	1	HOC Pin ASM
11	161-4632-01	2	Pivot ASM-Decklift [red]
12	145-6262-01	1	Link ASM-HOC [red]
13	145-6278-01	1	Pedal ASM [red]
14	119-4061	2	Screw-HHF
15	161-6214	1	Deck Strut ASM
15:4	323-11	4	Screw-HH
15:5	2844	4	Washer
15:6	104-8301	4	Nut-HF, NI
16	163-2370-01	4	Link-HOC
17	130-0742	4	Bolt-Shoulder
18	119-4042	10	Nut-HF, NI
19	161-9819	4	Bushing-Deck Lift
20	3234-18	4	Screw-HHF
21	139-5872	4	Bearing-Flange
22	138-7204	4	Gusset-Deck Lift
23	32144-70	8	Screw-HWHTF
24	140-2093	2	Spacer

Engine and Muffler Assembly

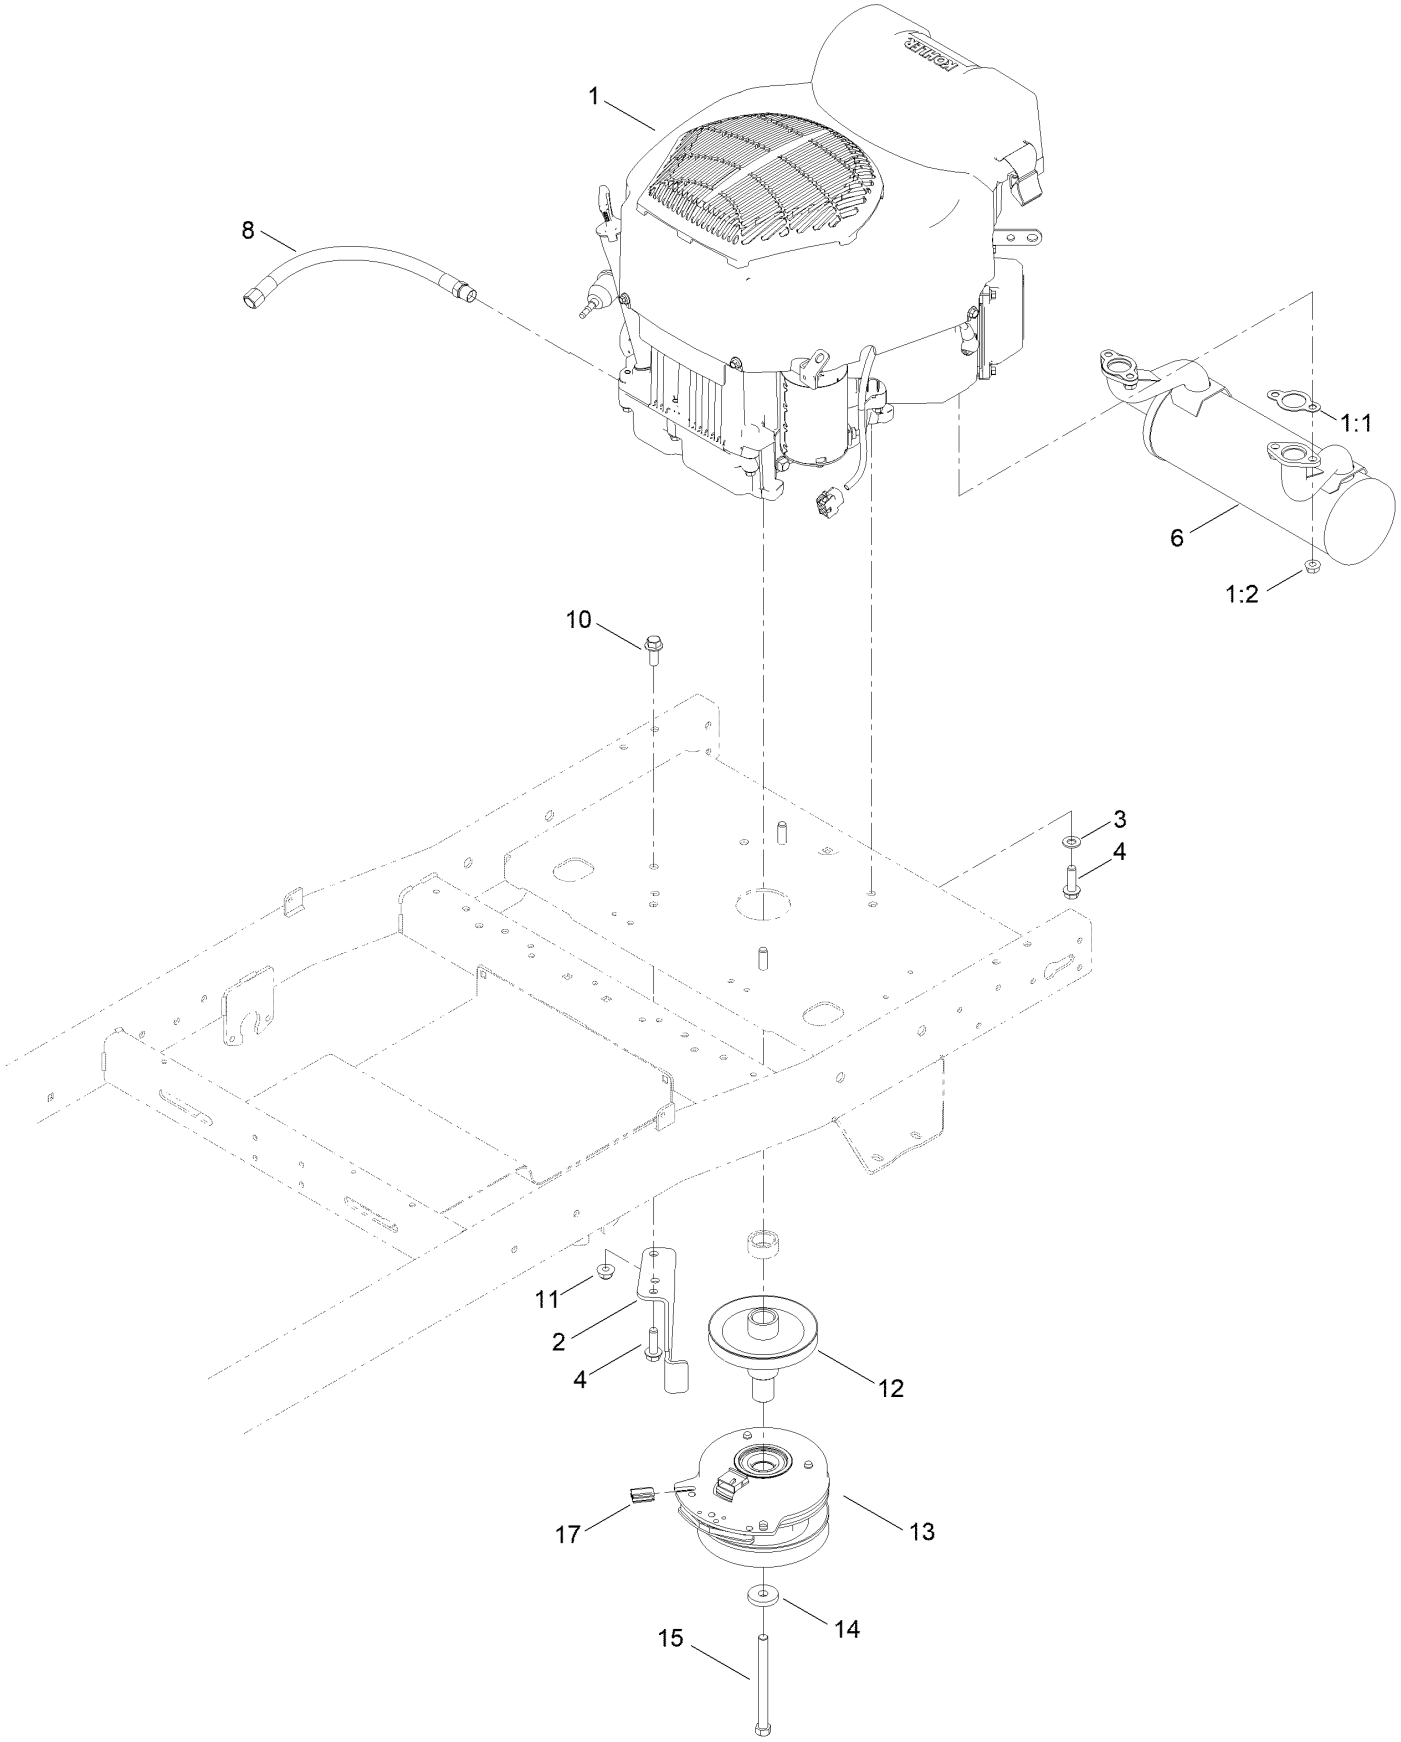


Engine and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fr730V-S09-R ■▲
1:1	1-653313	2	Gasket-Exhaust
1:2	114-3549	4	Nut
1:3	114-3550	4	Washer-Lock ●
2	137-7000	1	Stop-Clutch (Wide)
3	3256-24	3	Washer-Plain
4	323-50	4	Bolt-HH
6	126-4360	1	Muffler
8	106-7022	1	Tube-Drain, Oil
10	3234-42	1	Screw-HHF
11	104-8301	1	Nut-HF, NI
12	138-9831	1	Pulley-Engine
13	127-3410	1	Clutch-PTO
14	112843	1	Washer
15	3212-19	1	Screw-HH
17	120-2217	1	Isolator-Clutch

● Not illustrated
▲ Obtain parts from www.kawpower.com
■ Not serviced separately


Seat Pan Assembly

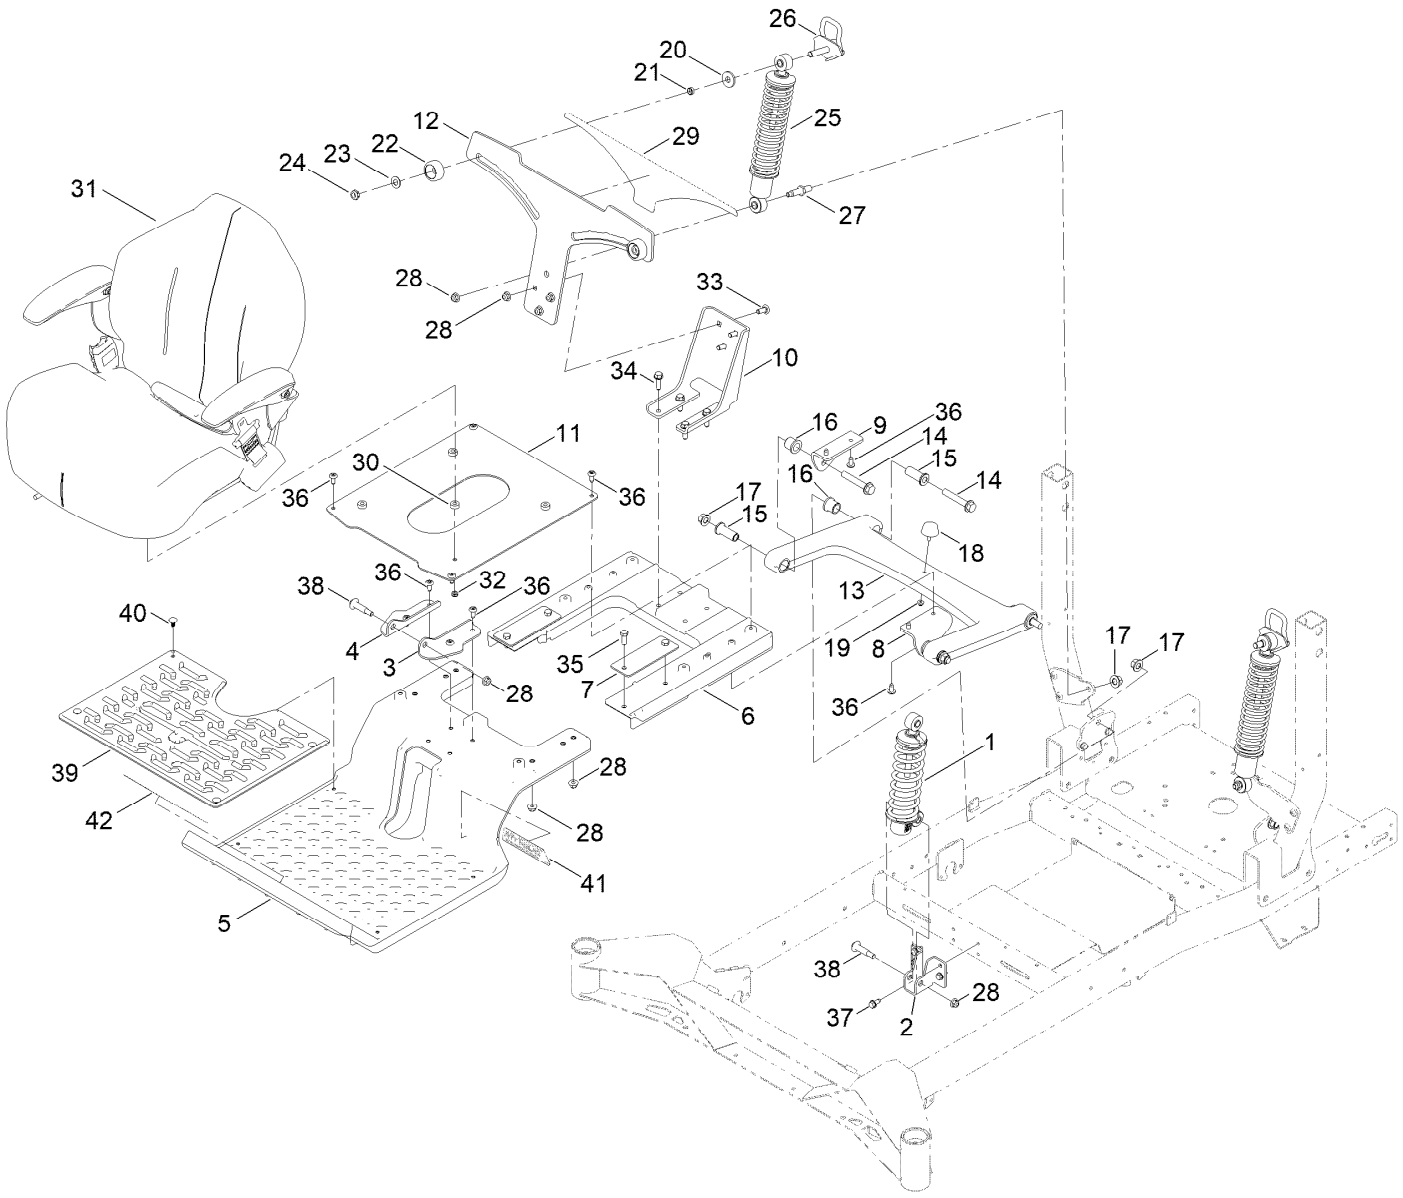

Seat Pan Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-2427	1	Shock/Spring ASM
2	145-6323-01	1	Bracket-Mount Damper, Lower
3	133-9318-05	1	Bracket-Shock Mount, Upper LH
4	133-9319-05	1	Bracket-Shock Mount, Upper RH
5	133-7083-05	1	Subframe-Front
6	137-7031-05	1	Subframe-Rear
7	133-7089-05	2	Plate-Backer
8	161-6326	1	Bracket-Trailing Arm, LH
9	161-6325	1	Bracket-Trailing Arm, RH
10	161-6357-05	1	Bracket-Mount, Lower
11	161-6356-05	1	Plate-Seat, Myride
12	136-1744-05	1	Plate-Mounting,Adj Shock
13	161-6328	1	Trailing Arm
14	3234-40	4	Screw-HF
15	161-6324	4	Spacer-Pivot
16	127-6745	4	Bushing-Flange
17	99-5107	6	Nut-HF Nylock
18	131-8834	1	Bumper
19	104-7201	1	Nut-HF, NI
20	131-4699	2	Washer-Plastic
21	133-5109	2	Bearing-Sleeve
22	136-5636	2	Knob-Lock, Cam
23	3-6803	2	Washer-Adjusting
24	3296-45	2	Nut-Hex
25	133-5193	2	Shock/Spring ASM
26	136-9017	2	Cam Lock ASM
27	133-4401	2	Bolt-Shoulder
28	104-8301	11	Nut-HF, NI
29	136-1720	1	Decal-Myride
30	140-3461	4	Spacer
31	161-9737	1	Seat ASM
32	3296-47	4	Nut-Lock,NI
33	3231-22	3	Screw-CARR
34	32144-109	4	Screw-Thd
35	323-6	4	Screw-HH
36	138-9753	12	Screw
37	32144-70	4	Screw-HWHTF
38	136-9028	2	Bolt-Shoulder, HWH
39	144-2634	1	Floor Mat
40	117-2382	4	Plug-Plastic
41	161-6392	1	Decal-Myride
42	161-9755	1	Decal-Myride


60 Inch Deck Assembly

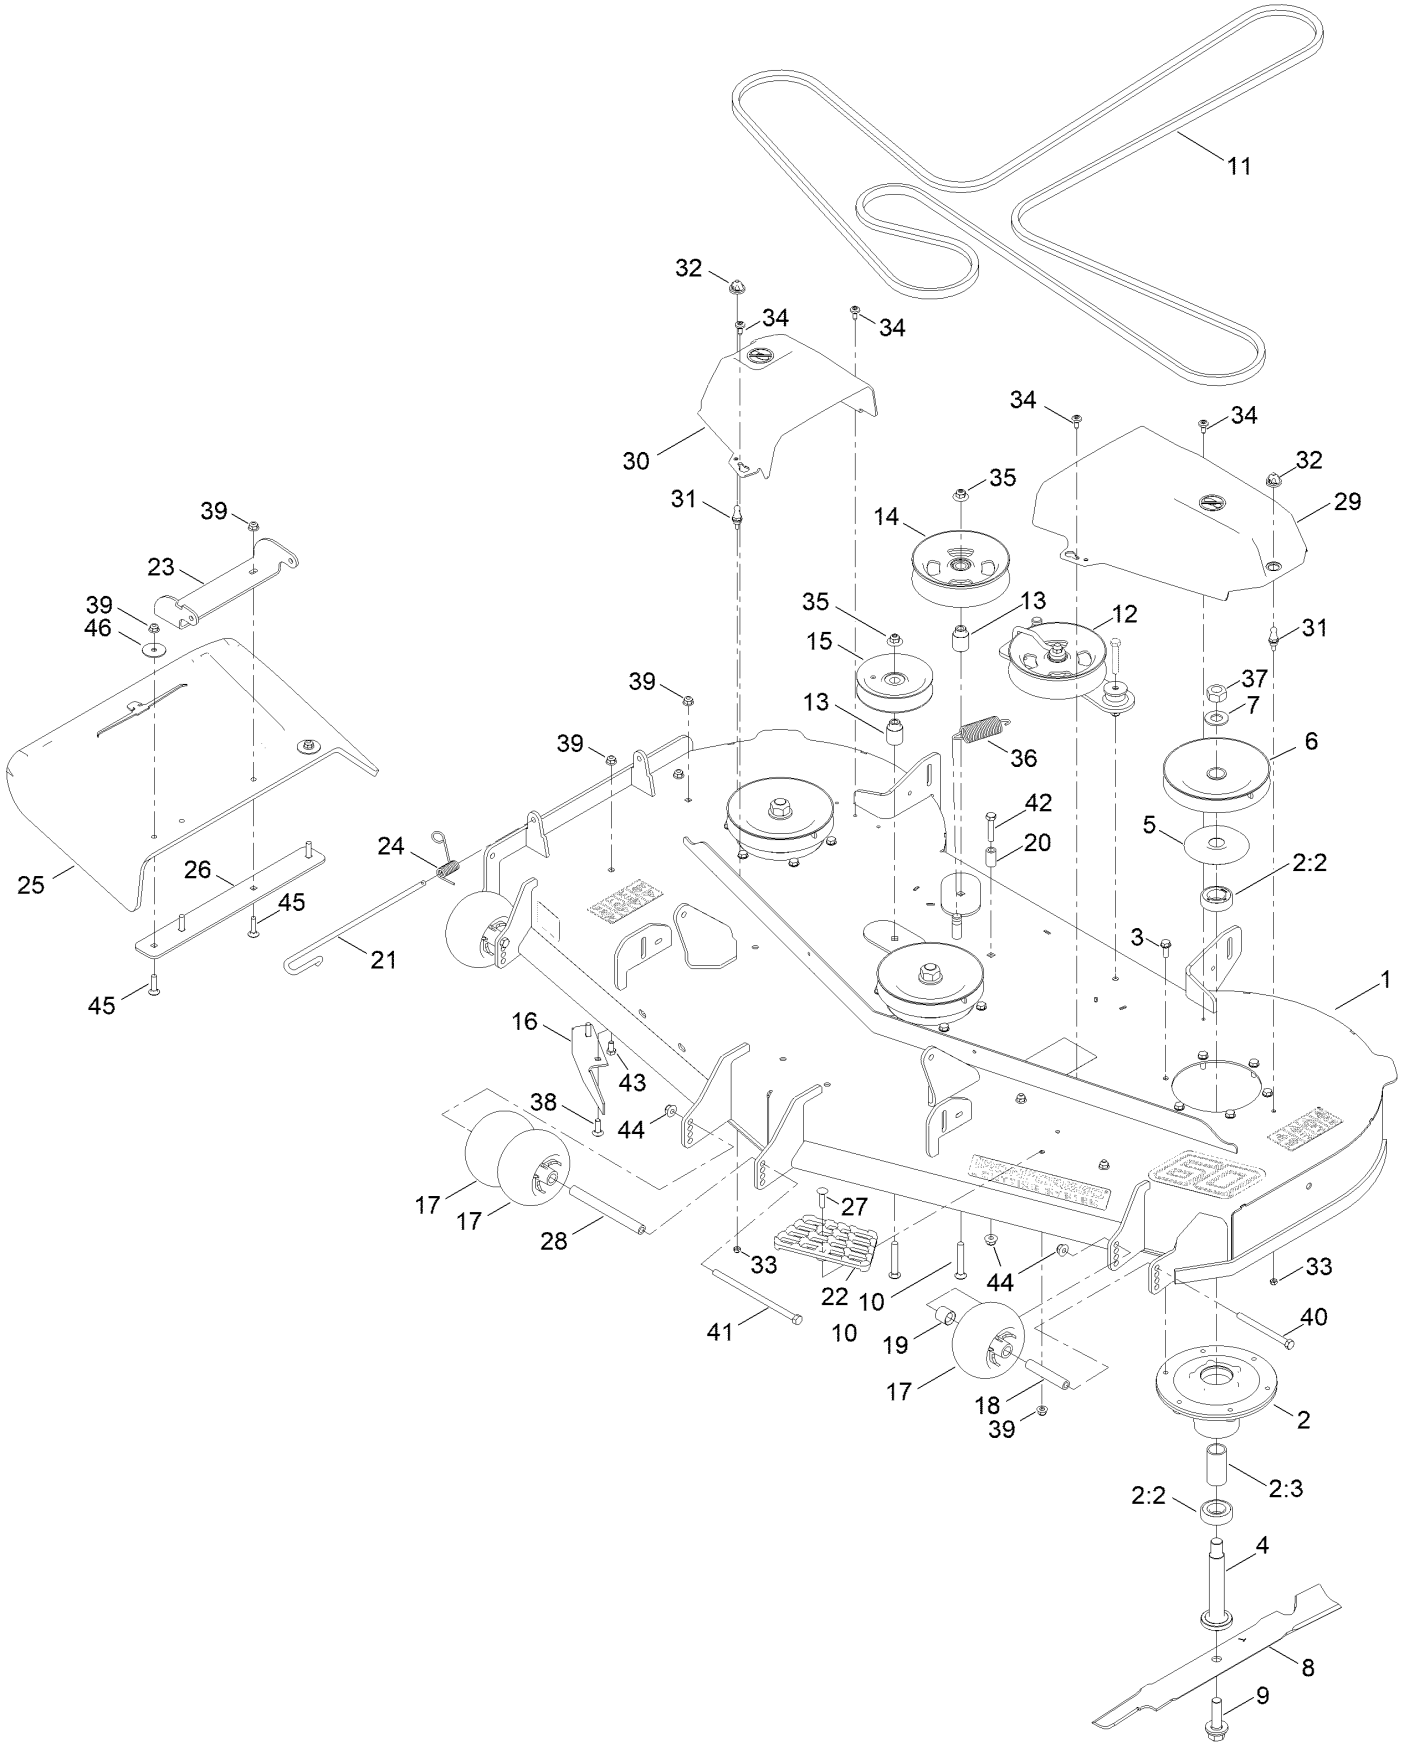

60 Inch Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-2323	1	ASM-Deck, 60
2	139-2357	3	Spindle ASM
2:2	116-0720	2	Bearing-Ball
2:3	138-7220	1	Spacer-Bearing
3	32144-41	18	Screw-Taptite
4	115-2642	3	Shaft-Spindle
5	138-7221	3	Shield-Bearing
6	147-7674	3	Pulley
7	7-4150	3	Washer
8	115-9649-03	3	Blade-Hi Flow
9	145-0412	3	Screw-Blade
10	3231-31	2	Screw-CARR
11	135-5776	1	Belt,V-B X 186.00"
12	161-6406	1	Idler Arm ASM
13	161-6398	2	Bushing-Idler, Fixed
14	132-9425	1	Pulley-Idler, Flat
15	132-4718	1	Pulley-Idler, Flat
16	119-3388-03	1	Baffle-Cutoff
17	1-603299	4	Roller-Scalp, Anti
18	138-7229	2	Tube-Spanner
19	104-0892	2	Spacer-Axle, Rear
20	138-7230	1	Spacer-Fender
21	138-7231	1	Pin-Chute
22	126-4781-03	1	Step-Deck
23	114-1648-03	1	Bracket-Deflector, Upper
24	138-7232	1	Spring-Torsion
25	147-3015	1	Deflector - Molded
26	115-5048-03	1	Plate-Deflector
27	139-1702	1	Bolt-Carriage
28	98-5967	1	Spacer-Wheel
29	147-2854	1	Cover-Belt, LH
30	147-2853	1	Cover-Belt, RH
31	147-2872	2	Stud-Ball
32	147-2871	2	Grommet-Ball
33	115-7373	2	Nut-Lock
34	120-7950	4	Screw-Torx
35	109-6658	2	Nut-Flange, NI
36	139-3616	1	Spring - Extension
37	3219-7	3	Nut-Hex
38	3230-22	2	Screw-CARR
39	104-8300	10	Nut-HF, NI
40	323-23	2	Screw-HH
41	108-5388	1	Screw-HH
42	323-9	1	Screw-HH
43	322-2	3	Screw-HH
44	104-8301	4	Nut-HF, NI
45	3230-3	4	Screw-CARR
46	3256-68	2	Washer-Flat


Deck Decal Assembly No. 163-2323

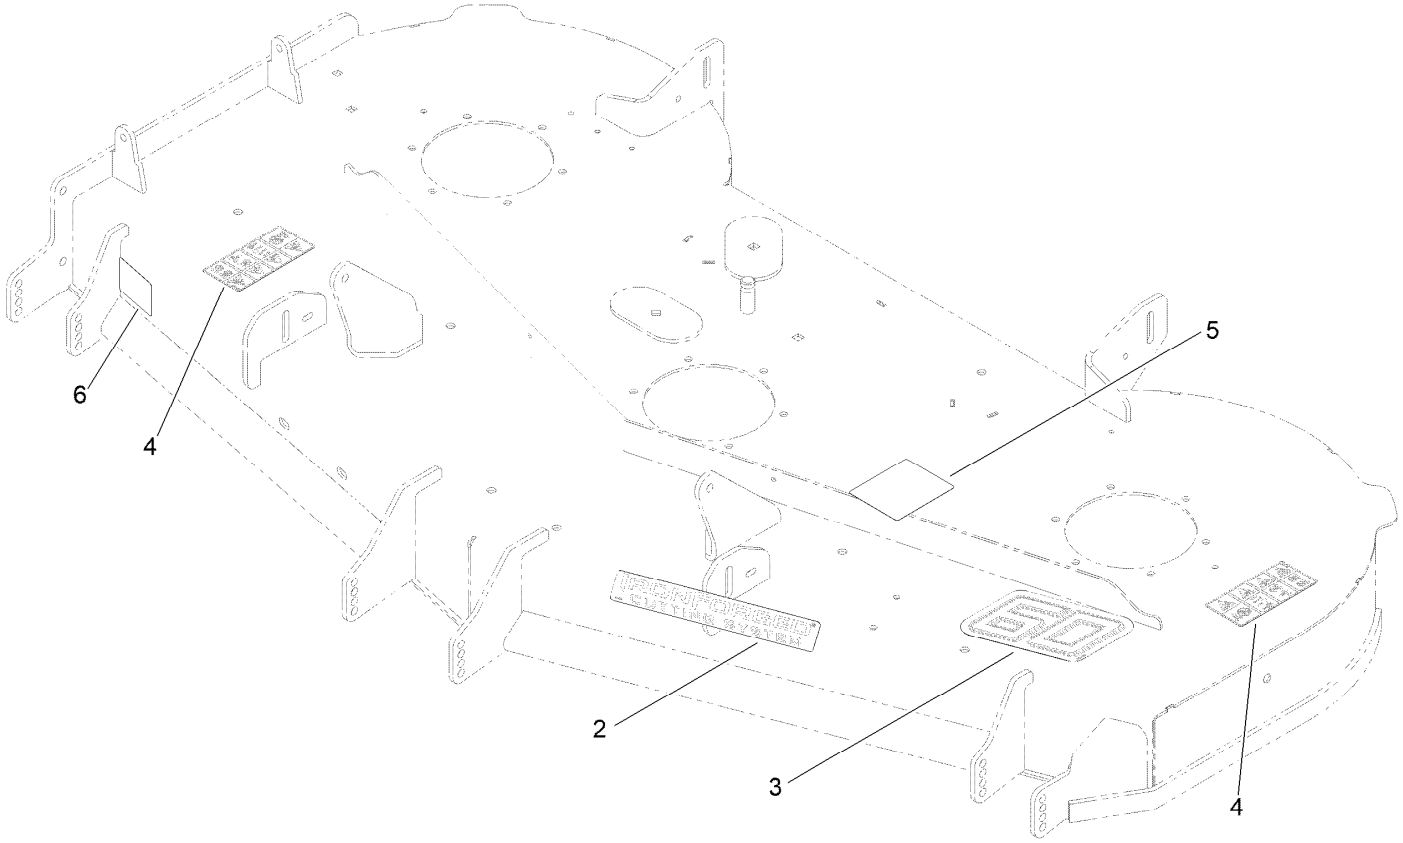

Deck Decal Assembly No. 163-2323 (continued)

Ref.	Part Number	Qty.	Description
2	147-7567	1	Decal - Iron Forged
3	147-7570	1	Decal - Deck 60
4	161-6620	2	Decal-Danger, Deck
5	117-1194	1	Decal-Routing, Belt
6	130-0765	1	Decal-Scalp, Anti

Idler Arm Assembly No. 161-6406

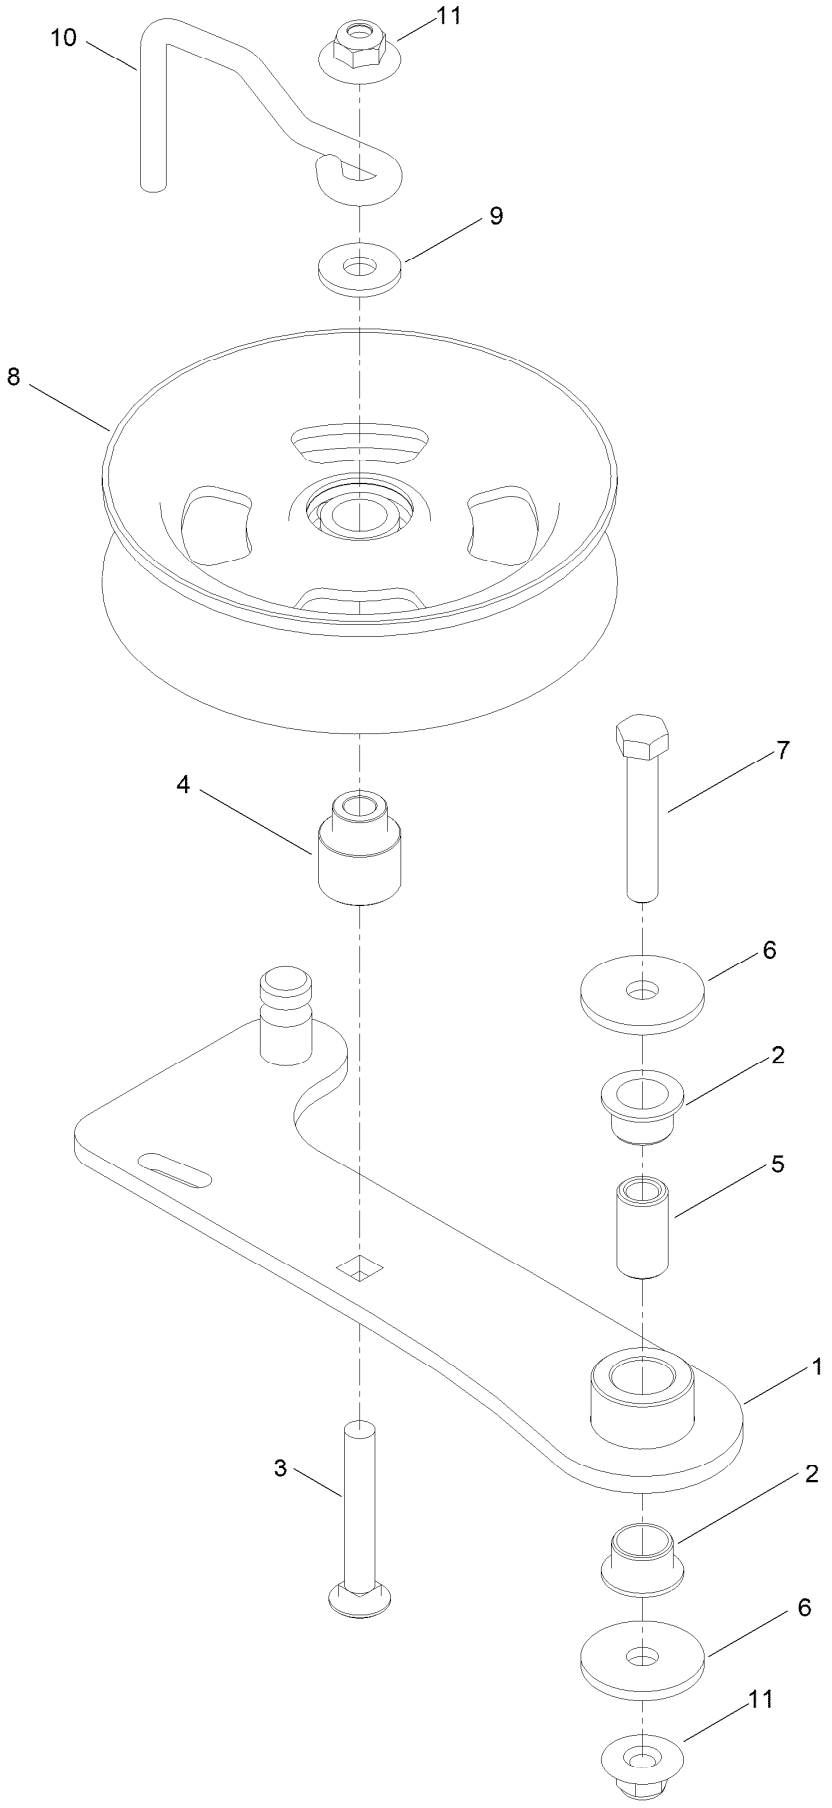

Idler Arm Assembly No. 161-6406 (continued)

Ref.	Part Number	Qty.	Description
1	161-6407	1	Idler Arm ASM
2	108-2973	2	Bushing-Flange
3	3231-31	1	Screw-CARR
4	126-7684	1	Bushing-Idler
5	161-6410	1	Bushing-Pivot, Idler
6	1-213069	2	Washer
7	323-11	1	Screw-HH
8	132-9425	1	Pulley-Idler, Flat
9	80-6990	1	Washer-Hardened
10	161-6411	1	Guide-Belt, Idler
11	109-6658	2	Nut-Flange, NI

Attachments and Accessories

For 76609 — Titan MyRIDE 60in Zero Turn Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Blade-Hi Flow, 20.5in	115-9649-03P
Toro Hydro Kit	121-3783
Jack Kit	127-6666
Fuel Stabilizer .05 oz	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Toro Premium Fuel Treatment 12oz Bottle	131-6572
60in Recycler Kit	136-7490
Oil-30/10W-30 Synthetic (Quart)	138-6053
Suspension Seat	139-3626
HD Bagger Cover Kit	140-5036
Leaf Bagging Enhancement Kit	140-5122
Hardtop Sun Canopy	144-3719
Kit-Striping, 54/60in	147-8781
Mount, Jack Titan	147-8824
10W30 4-Cycle Engine Oil (32oz Bottle)	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Toro Deluxe Rider Cover	490-7319
Powered Bagger, Titan Models ROHS	79348
Slope Sensor Kit	79489

Notes:



Count on it.