

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10273C - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- ❶

Not illustrated
- ❷


Not serviced separately
- ❸

Included in Repair Kit No. 632809
- ❹

Obtain parts from your local Tecumseh dealer

Contents


Description	Page	Description	Page
Housing, Handle Bracket and Wheel Assembly	 3	Recoil Starter Assembly No. 590739	
Engine and Blade Assembly	 4	Tecumseh Model LV195EA-362005B	 12
Handle Assembly	 5	Recoil Starter Assembly No. 590702 (Optional)	
Rear Grass Bag Assembly	 6	Tecumseh Model LV195EA-362005B	 13
Carburetor Assembly No. 640303 Tecumseh Model LV195EA-362005B	 7		
Engine Assembly No. 1 Tecumseh Model LV195EA-362005B	 8		
Engine Assembly No. 2 Tecumseh Model LV195EA-362005B	 10		

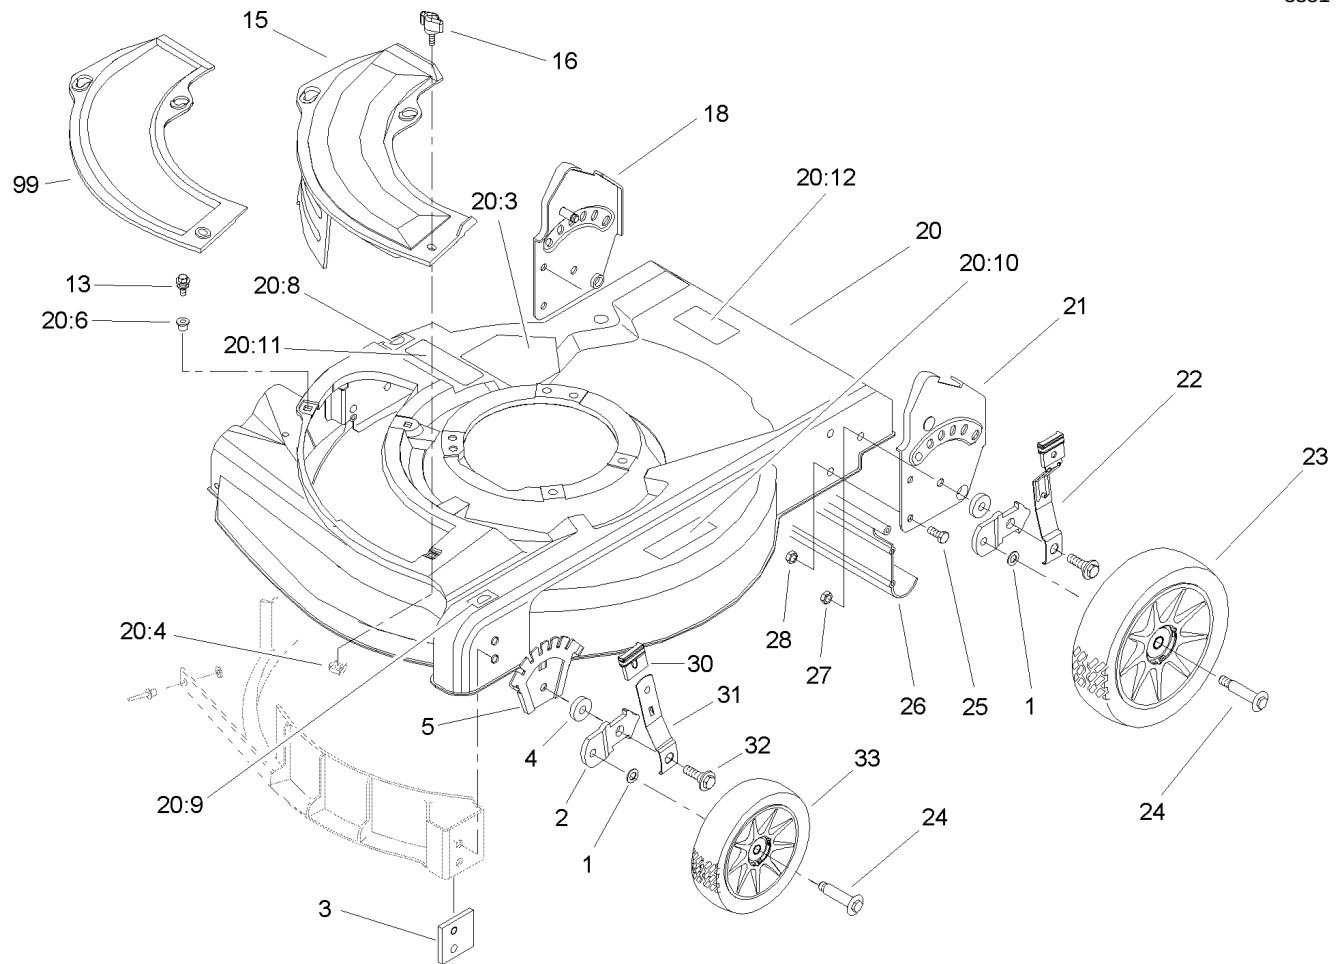

Housing, Handle Bracket and Wheel Assembly


Ref	Part No.	Qty.	Description
1	40-1940	4	Washer
2	95-7403-03	4	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate-Baffle
4	92-4890	4	Washer-Wheel
5	92-4881-03	2	Plate-Height, Adjustment
13	614677	2	Screw-Sems
15	92-8630	1	Plate-Mulch
16	98-8332	1	Knob
18	92-7742	1	RH Handle Bracket ASM
20	105-1264	1	Housing
20:3	56-6270	1	Decal-Danger
20:4	613765	1	Nut-Cage
20:6	94-1610	2	Nut-Clip
20:8	104-7616	1	Decal-Hoc,lh
20:9	104-7617	1	Decal-Hoc,rh
20:10	104-7627	1	Decal-Warning
20:11	104-7629	1	Decal-Warning
20:12	104-7634	1	Decal-Manual
21	92-7743	1	LH Handle Bracket ASM
22	92-1005	2	Rear Spring Arm ASM
23	95-7437	2	Wheel And Tire ASM
24	92-1099	4	Bolt-Shoulder
25	322-3	4	Screw-HH
26	92-8647	1	Shield-Trailing

Ref	Part No.	Qty.	Description
27	3296-39	2	Nut-Lock, NI
28	3296-29	4	Nut-Lock, NI
30	92-1008	4	Knob-Lever, Height Adjustment
31	614687	2	Arm-Front Spring
32	614672	4	Bolt-Shoulder
33	95-7436	2	Wheel And Tire ASM
99	95-7052	1	Plate-Opening, Chute

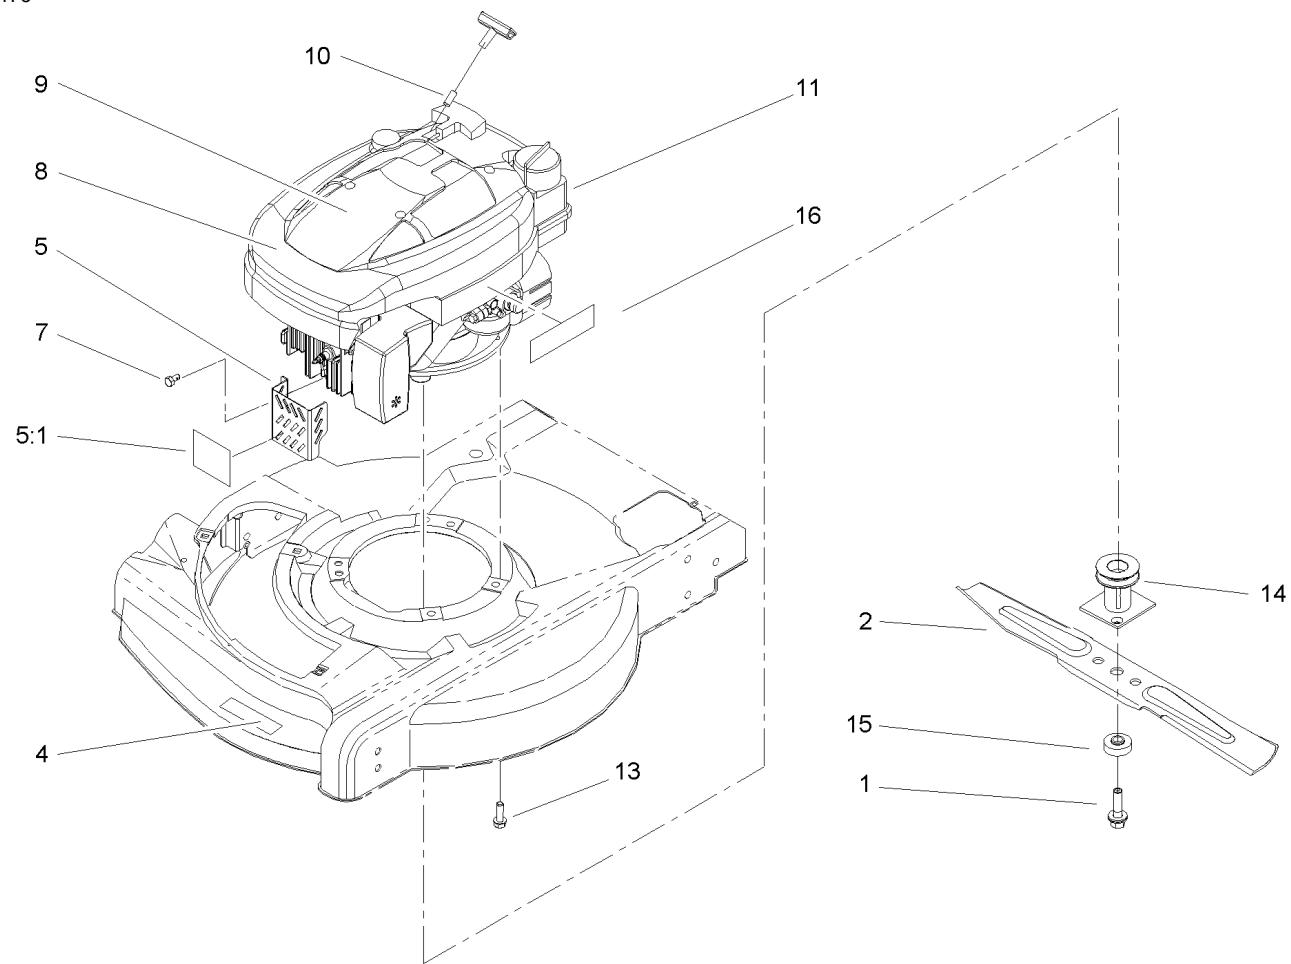


Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	612543-03	1	Blade				
4	104-7958	1	Decal-Deck				
5	106-8387	1	Muffler Guard Assembly				
5:1	106-5517	1	Decal-Surface, Hot				
7	32144-85	1	Screw-HWH				
8	98-1593	1	Applique				
9	106-8375	1	Decal-Recoil				
10	92-1701	1	Stop-Rope				
11		1	Engine-Tecumseh, Lv195ea-362005b				
13	95-1726	3	Screw-Taptite				
14	106-3950	1	Driver-Blade				
15	106-6826	1	Spacer				
16	105-6832	1	Decal-Primer				

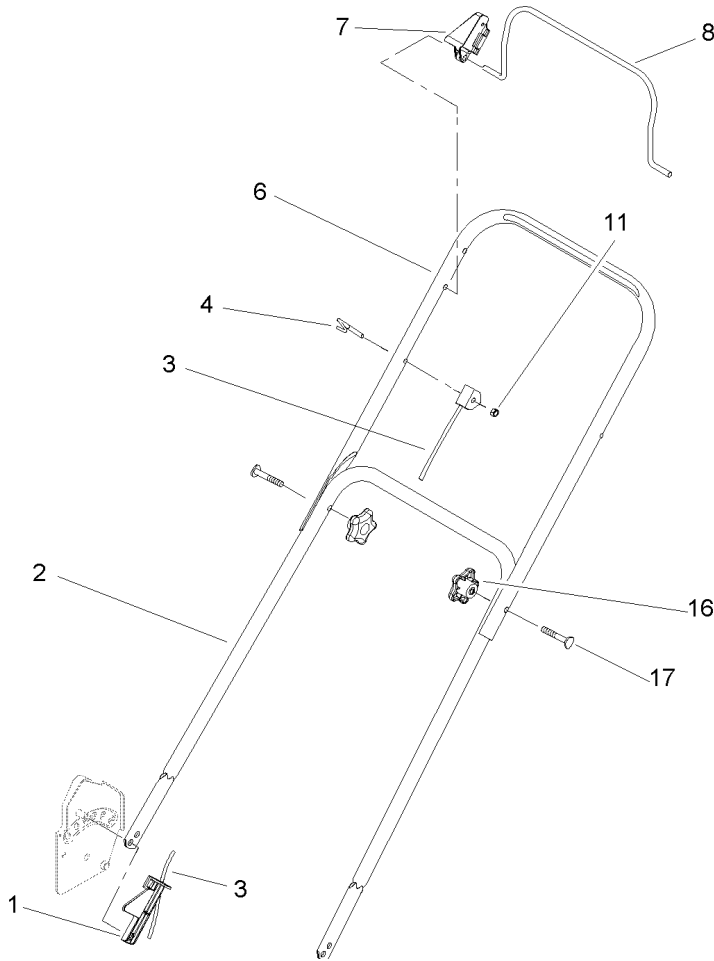


Handle Assembly

Ref	Part No.	Qty.	Description				
1	104-1013	1	Guard-Cable				
2	614643-05	1	Handle-Lower				
3	100-5989	1	Brake Cable ASM				
4	106-8330	1	Guide-Rope				
6	100-2888-05	1	Handle-Upper				
7	107-0757	1	Stop-Pivot				
8	93-4184-03	1	Bail-Brake				
11	3296-73	1	Nut-Lock, NI				
16	106-4161	2	Knob-Handle				
17	614697	2	Screw				

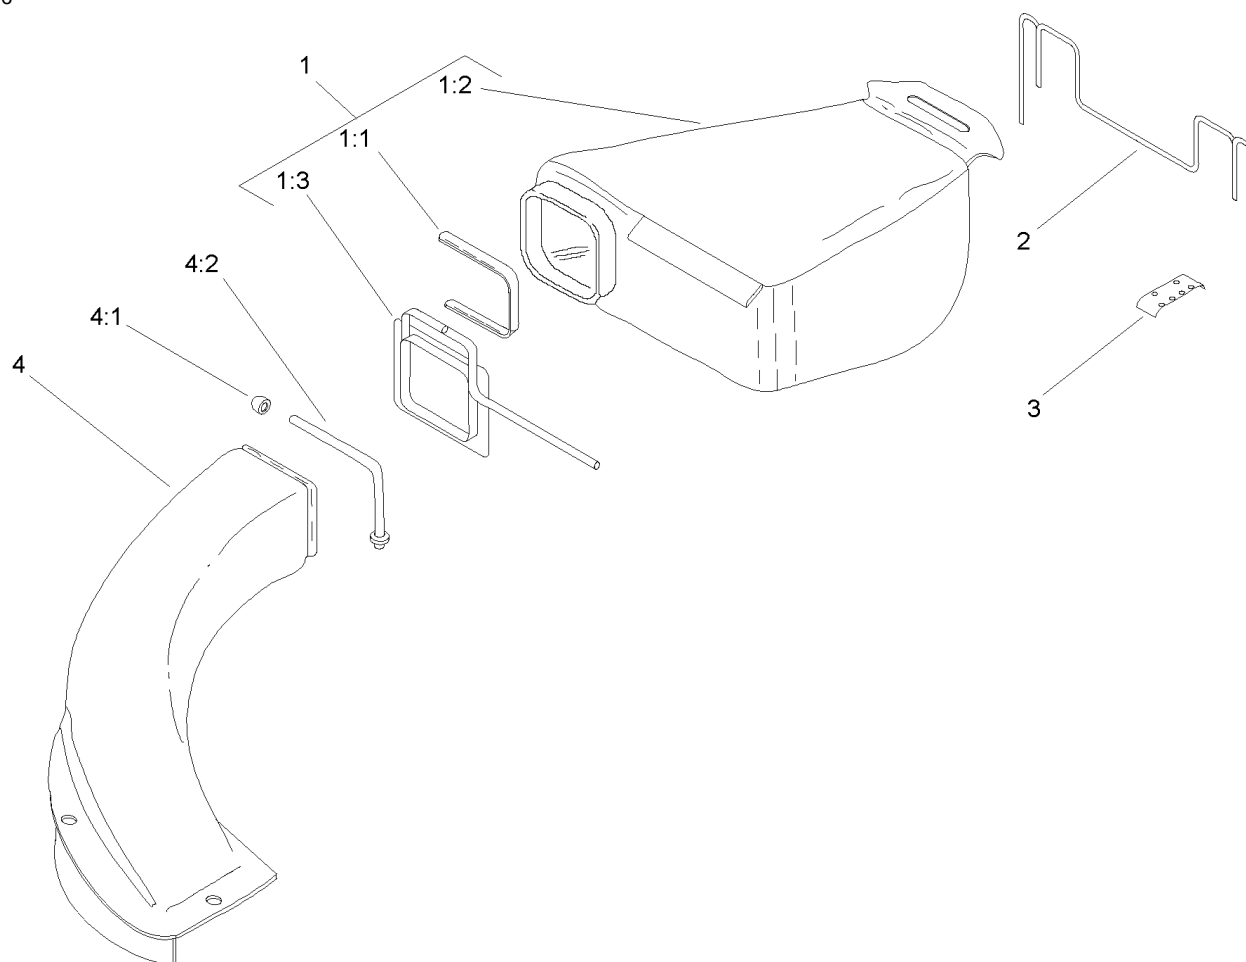

Rear Grass Bag Assembly

Ref	Part No.	Qty.	Description				
① 1	100-6361	1	Bag And Adapter ASM				
1:1	614700	1	Strap-Tie				
1:2	100-6362	1	Replacement Bag ASM				
1:3	684727-03	1	Adapter				
2	613455	1	Hanger-Wire				
3	613462-03	2	Clamp-Hanger				
4	684729	1	Chute And Support ASM				
4:1	614589	1	Nut-Cap				
4:2	614591	1	Support-Chute				

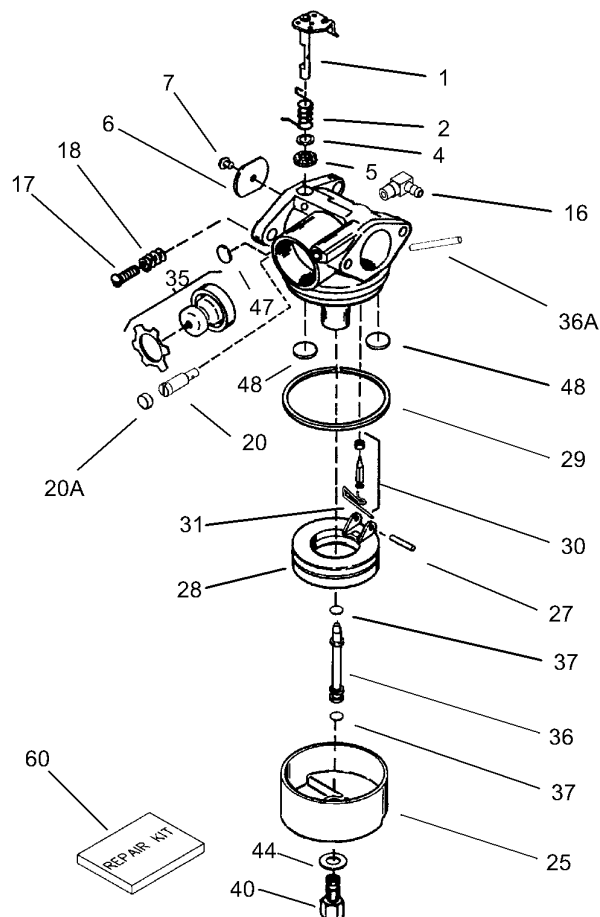


Carburetor Assembly No. 640303 Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④2	631767	1	Spring-Throttle Return	③④47	630748	1	Welch Plug-Idle Mixture Well
③④4	631184	1	Washer-Dust Seal	③④48	631027	2	Welch Plug-Atmospheric Vent
③④5	631183	1	Seal-Dust	③④60	632809	1	Repair Kit
④6	640070	1	Shutter-Throttle				
③④7	650506	1	Screw-Shutter				
④16	631807	1	Fitting-Fuel				
④17	651025	1	Throttle Crack Screw/Idle Speedscrew				
④18	630766	1	Spring-Tension				
④20	640018	1	Screw-Idle Restrictor				
③④20A	640200	1	Cap-Idle Restrictor Screw				
④25	631867	1	Bowl-Float				
③④27	631024	1	Shaft-Float				
④28	632802	1	Float (Plastic)				
③④29	631028	1	O-Ring-Float Bowl				
③④30	632807	1	Inlet Needle, Seat, And Clip (Incl. Ref. #31)				
③④31	631022	1	Clip-Spring				
④35	640259	1	Retainer Ring-Primerbulb (Red)				
④36	640019	1	Tube-Main Nozzle				
④36A	632766	1	Extension-Bowl Vent Tube				
③④37	632547	2	O-Ring-Main Nozzle Tube				
④40	640087	1	High Speed Bowl Nut				
③④44	27110A	1	Washer-Bowl Nut				

Engine Assembly No. 1

Tecumseh Model LV195EA-362005B

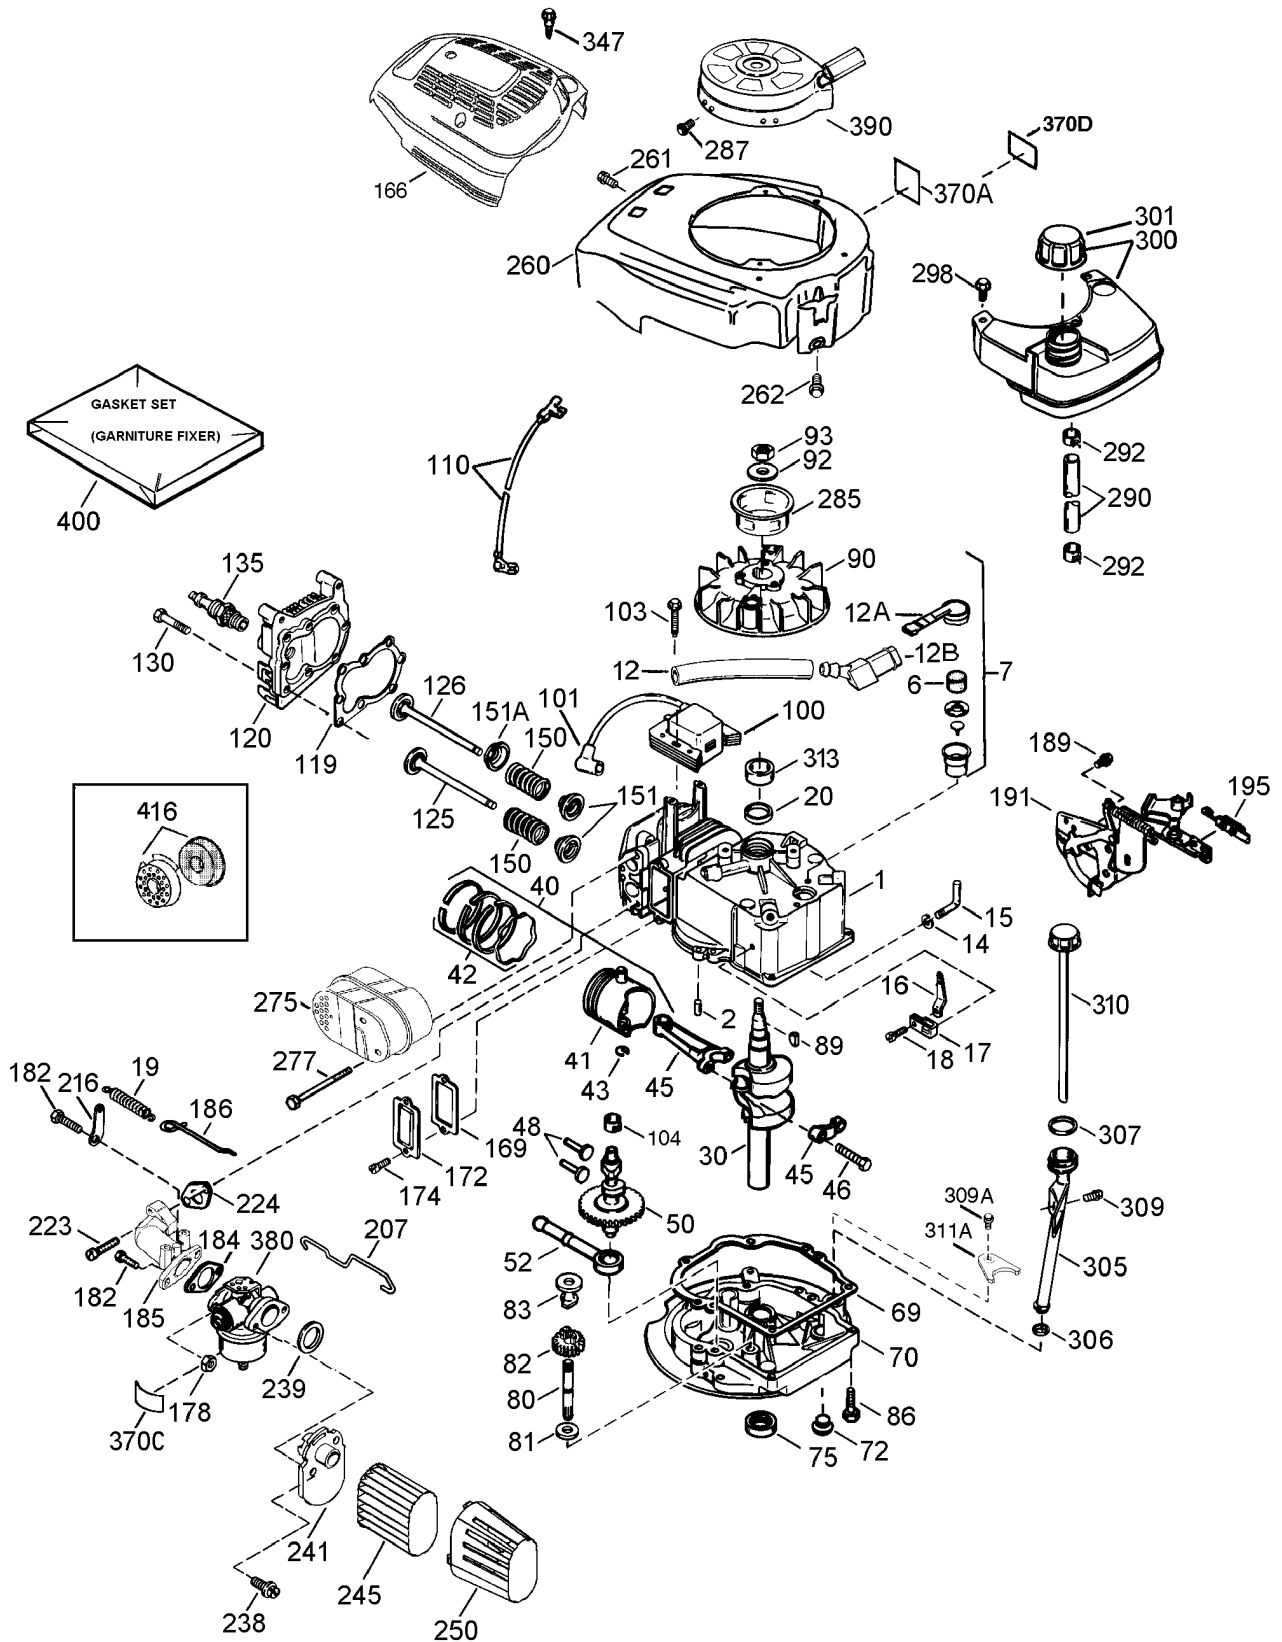

Engine Assembly No. 1


Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④1	37465	1	Cylinder(Incl. Ref. #2, 20 And 150)	④125	37288	1	Exhaust Valve (Std.) (Incl. Ref. #151)
④2	26727	2	Pin-Dowel	④126	37289	1	Intake Valve (Std.) (Incl. Ref. #151and 151a)
④6	33734	1	Element-Breather	④130	6021A	8	Screw, 5/16-18 X 1-7/16in
④7	36557	1	Breather ASM (Incl. Ref. #6 And 12a)	④135	35395	1	Resistor-Spark Plug (Rj19lm)
④12	36775	1	Tube-Breather	④150	31672	2	Spring-Valve
④12A	36558	1	Breather Cover And Tube (Incl. Ref. #12b)	④151	31673	2	Cap-Valve Spring
④12B	36694	1	Elbow-Tube, Breather	④151A	40017	1	Seal-Intake Valve
④14	28277	1	Washer	④166	37813	1	Engine Shroud (Green)
④15	30589	1	Governor Rod (Incl. Ref. #14)	③④169	36783	1	Gasket-Valve Cover
④16	34839A	1	Lever-Governor	④172	36784	1	Cover-Valve
④17	31335	1	Clamp-Governor Lever	④174	30200	2	Screw, 10-24 X 9/16in
④18	651018	1	Screw, T-15, 8-32 X 19/64in	④178	29752	2	Nut And Lock Washer, 1/4-28
④19	36281	1	Spring-Extension	④182	6201	2	Screw, 1/4-28 X 7/8in
④20	32600	1	Seal-Oil	③④184	26756	1	Gasket-Carburetor To Intake Pipe
④30	37692	1	Crankshaft	④185	37466	1	Pipe-Intake
④40	40027	1	Piston, Pin And Ring Set (Std.)	④186	32653	1	Link-Governor
④41	40042	1	Piston And Pin ASM (Std.) (Incl. Ref. #43)	④189	650839	2	Screw, 1/4-20 X 3/8in
④42	40006	1	Ring Set (Std.)	④191	36559A	1	S.e. Brake Bracket (Incl. Ref. #195)
④43	20381	2	Retaining Ring-Piston Pin	④195	610973	1	Terminal
④45	36777	1	Connecting Rod ASM (Incl. Ref. #46)	④207	34336A	1	Link-Throttle
④46	32610A	2	Bolt-Connecting Rod	④216	33086	1	Lever-R.p.m. Adjusting
④48	27241	2	Lifter-Valve	④223	650451	2	Screw, 1/4-20 X 1in
④50	37460	1	Camshaft (Exhaust Mcr) (Incl. Ref. #104)	③④224	36786	1	Gasket-Intake Pipe
④52	29914	1	Oil Pump ASM	④238	650932	2	Screw, 10-32 X 49/64in
③④69	37609	1	Gasket-Mounting Flange	③④239	34338	1	Gasket-Air Cleaner
④70	37608	1	Mounting Flange (Incl. Ref. #72-83, 306, 309a And 311a)	④241	36919	1	Collar-Air Cleaner
④72	37614	1	Plug-Oil Drain	④245	36905	1	Filter-Air Cleaner
④75	27897	1	Seal-Oil	④250	37122	1	Cover-Air Cleaner
④80	30574A	1	Shaft-Governor	④260	37696A	1	Housing-Blower
④81	30590A	1	Washer	④261	30200	2	Screw, 10-24 X 9/16in
④82	30591	1	Governor Gear ASM (Incl. Ref. #81)	④262	650831	2	Screw, 1/4-20 X 1/2in
④83	30588A	1	Spool-Governor	④275	37498	1	Muffler
④86	650488	6	Screw, 1/4-20 X 1-1/4in	④277	650988	2	Screw, 1/4-20 X 2-9/32in
④89	611004	1	Key-Flywheel	④285	35000A	1	Cup-Starter
④90	611112	1	Flywheel	④287	650926	2	Screw, 8-32 X 21/64in
④92	650815	1	Washer-Belleville	④290	29774	1	Line-Fuel
④93	650816	1	Nut-Flywheel	④292	26460	2	Clamp-Fuel Line
④100	34443C	1	Ignition-Solid State	④298	28763	2	Screw
④101	610118	1	Cover-Spark Plug				
④103	651007	2	Screw, T-15, 10-24 X 15/16in				
④104	37480	1	Bushing-Cam				
④110	37047	1	Wire-Ground				
③④119	36787	1	Gasket-Cylinder Head				
④120	37714	1	Sprocket Assembly				
④125	36780	1	Exhaust Valve (1/32" Os) (Incl. Ref. #151)				

Engine Assembly No. 2


Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description				
④ 300	35586A	1	Fuel Tank (Incl. Ref. #292 And 301)				
④ 301	36246	1	Fuel Cap ASM				
④ 305	35647	1	Tube-Oil Fill				
③ ④ 306	37610	1	O-Ring				
④ 307	35499	1	O-Ring				
④ 309	650562	1	Screw, 10-32 X 1/2in				
④ 309A	650783	1	Screw, 10-24 X 3/4in				
④ 310	35648	1	Dipstick				
④ 311A	37611	1	Bracket-Hold Down				
④ 313	34080	1	Spacer				
④ 347	650898A	1	Screw, 10-32 X 27/32in				
④ 370A	36261	2	Decal-Lubrication				
④ 370C	37695	1	Decal-Primer				
④ 370D	35977	1	Decal-Warning				
④ 380	640303	1	Carburetor (Incl. Ref. #184)				
④ 390	590739	1	Starter-Rewind				
④ 400	37613	1	Gasket Set				
④ 416	37530	1	Kit-Spark Arrestor (Optional)				
④	750876	1	Short Block Asm				

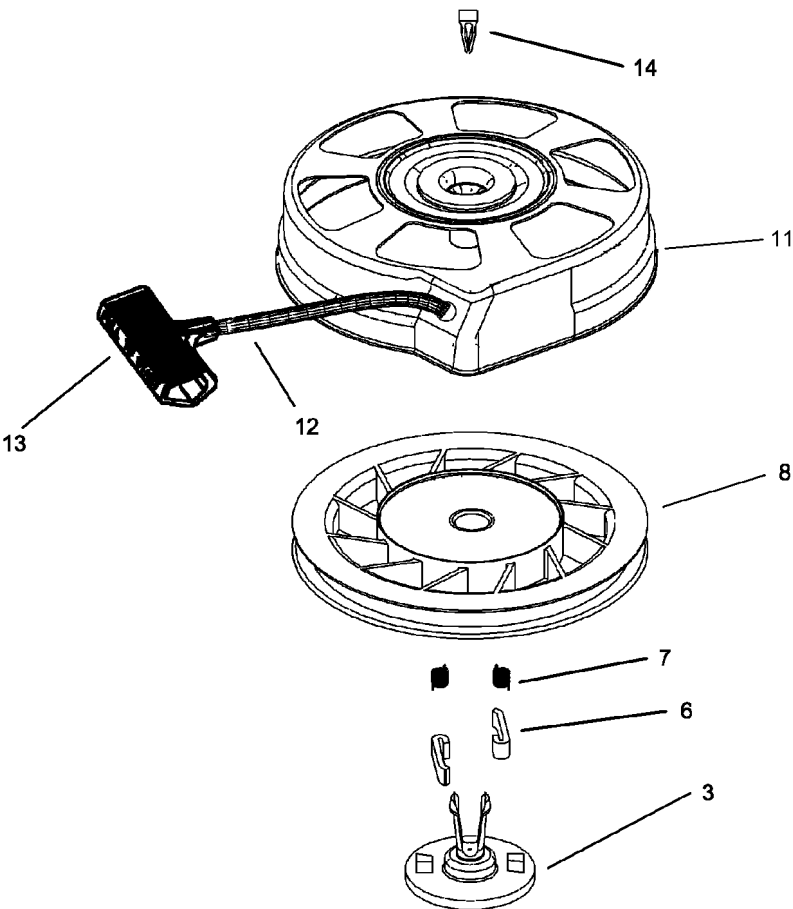

Recoil Starter Assembly No. 590739
Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description				
0	590739	0	Starter-Rewind				
3	590740	1	Retainer				
6	590616	2	Dog-Starter				
7	590617	2	Spring-Dog				
8	590618A	1	Pulley And Rewind Spring ASM				
11	590638	1	Housing Assembly-Starter				
12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)				
13	590701	1	Handle-Starter				
14	590760	1	Clp-Spring				

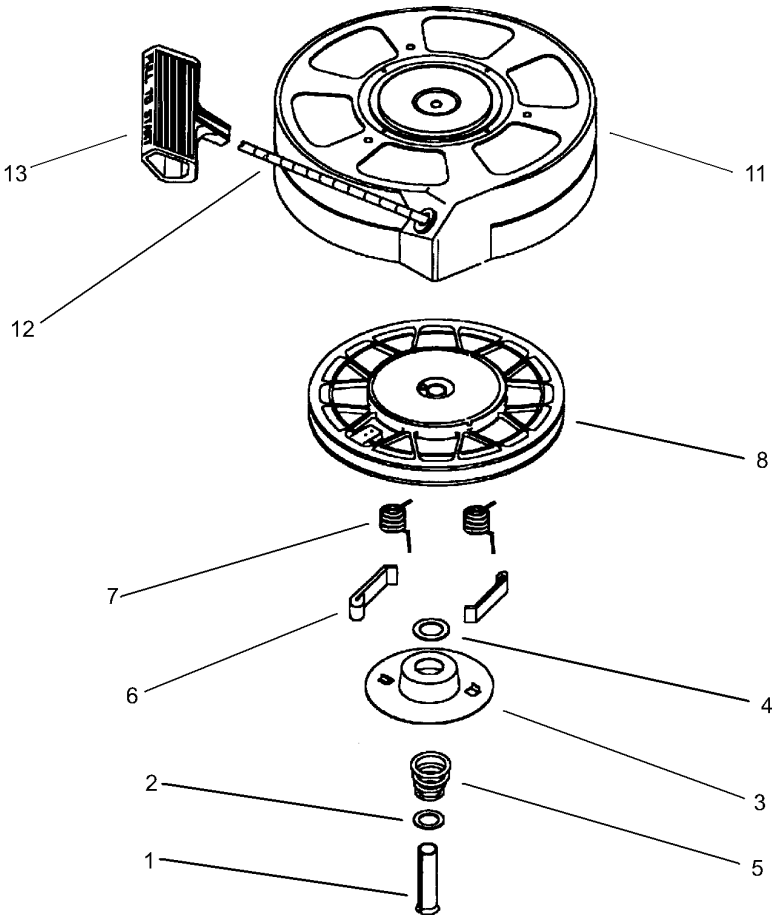

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Model LV195EA-362005B

Ref	Part No.	Qty.	Description				
④1	590599A	1	Spring Pin ASM (Incl. Ref. #4)				
④2	590600	1	Washer				
④3	590696	1	Retainer				
④4	590601	1	Washer				
④5	590697	1	Spring-Brake				
④6	590698	2	Dog-Starter				
④7	590699	2	Spring-Dog				
④8	590700	1	Pulley And Rewind Spring ASM				
④11	590703A	1	Starter Housing ASM (40 Degree Grommet)				
④12	590535	1	Rope-Starter (Length 98in X 9/64in Dia.)				
④13	590701	1	Handle-Starter				

NOTES

NOTES

LAWN-BOY®