Form No. 3472-745 Rev B

TORO®

Count on it.

Parts Catalog

52in Z Master® Professional 2000

Series Riding Mower

Model No. 77291—Serial No. 418100000 and Up

Register at www.Toro.com.
Original Instructions (EN)

3472-745 B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly 4
Roll-Over Protection System Assembly No. 139-8063 6
Hydro Drive Assembly 8
LH Transaxle Assembly No. 145-8424 10
RH Transaxle Assembly No. 145-8425 12
Throttle, Choke and Guards Assembly 14
Fuel Assembly 16
Fuel Tank Assembly No. 163-3471 18
Seat Mount Assembly 20
Motion Control Assembly 22
Left and Right Motion Control Assembly 24
Front Caster Wheel Assembly 26
Fork and Caster Wheel Assembly 28
Rear Drive Wheel Assembly 30
Electrical Assembly 32
Wire Harness Assembly No. 147-2363 34
Deck Lift Assembly 36
Deck Strut Assembly No. 140-1179 38
Engine, Clutch and Muffler Assembly 40
Seat Suspension Assembly 42
Seat Assembly No. 147-2383 44
Decal Assembly 46
Deck Assembly 48
Deck Decal Assembly No. 147-7372 50
Spindle Assembly No. 139-2357 52
Deflector Assembly No. 144-2635 54
Idler Arm Assembly No. 139-1087 56
Attachments and Accessories 58

© 2026—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

Frame Assembly

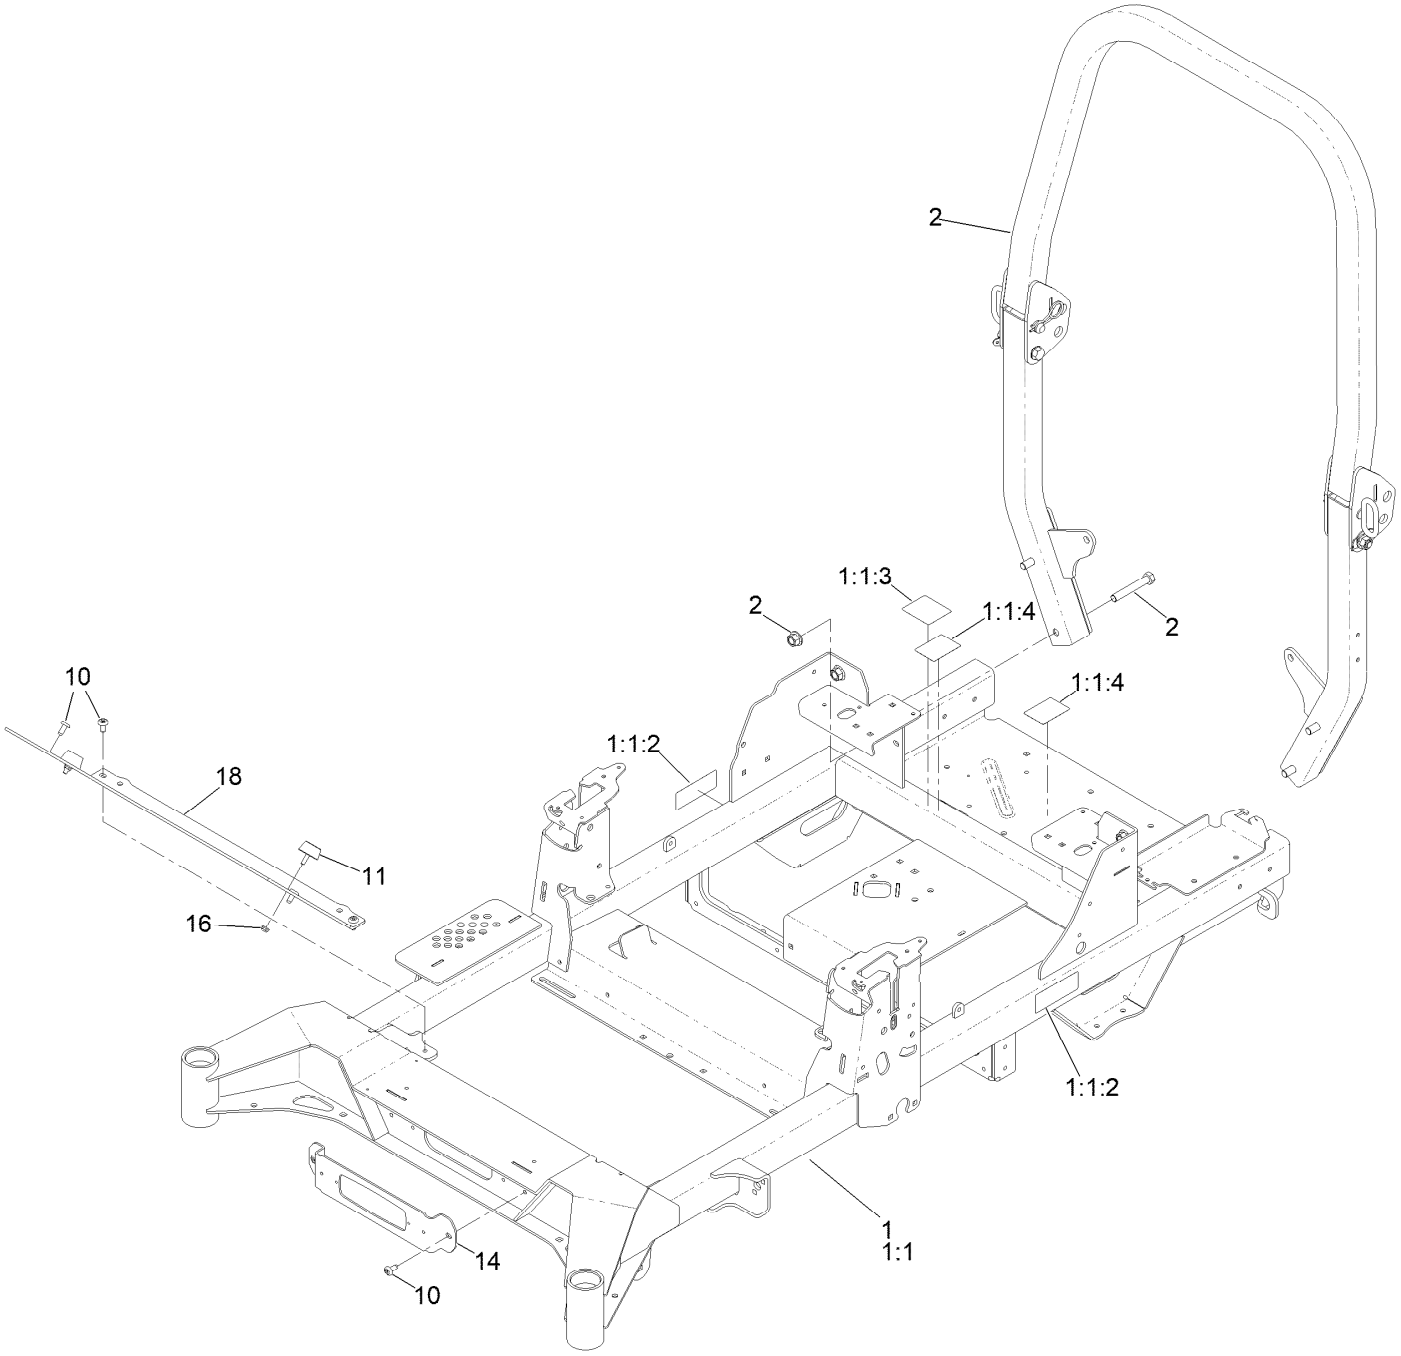


Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-8476	1	Frame ASM
1:1		1	Frame-48/52 ●
1:1:2	126-4363	2	Decal-Warning
1:1:3	109-6014	1	Decal-Routing, Belt
1:1:4	147-4982	2	Decal-Bypass
2	139-8063	1	ASM-ROPS
10	138-9753	6	Screw
11	131-8834	2	Bumper
14	140-4994-01	1	Bracket-Light
16	104-7201	2	Nut-HF, NI
18	140-4997-01	1	Toeboard

● Not serviced separately

Roll-Over Protection System Assembly
No. 139-8063

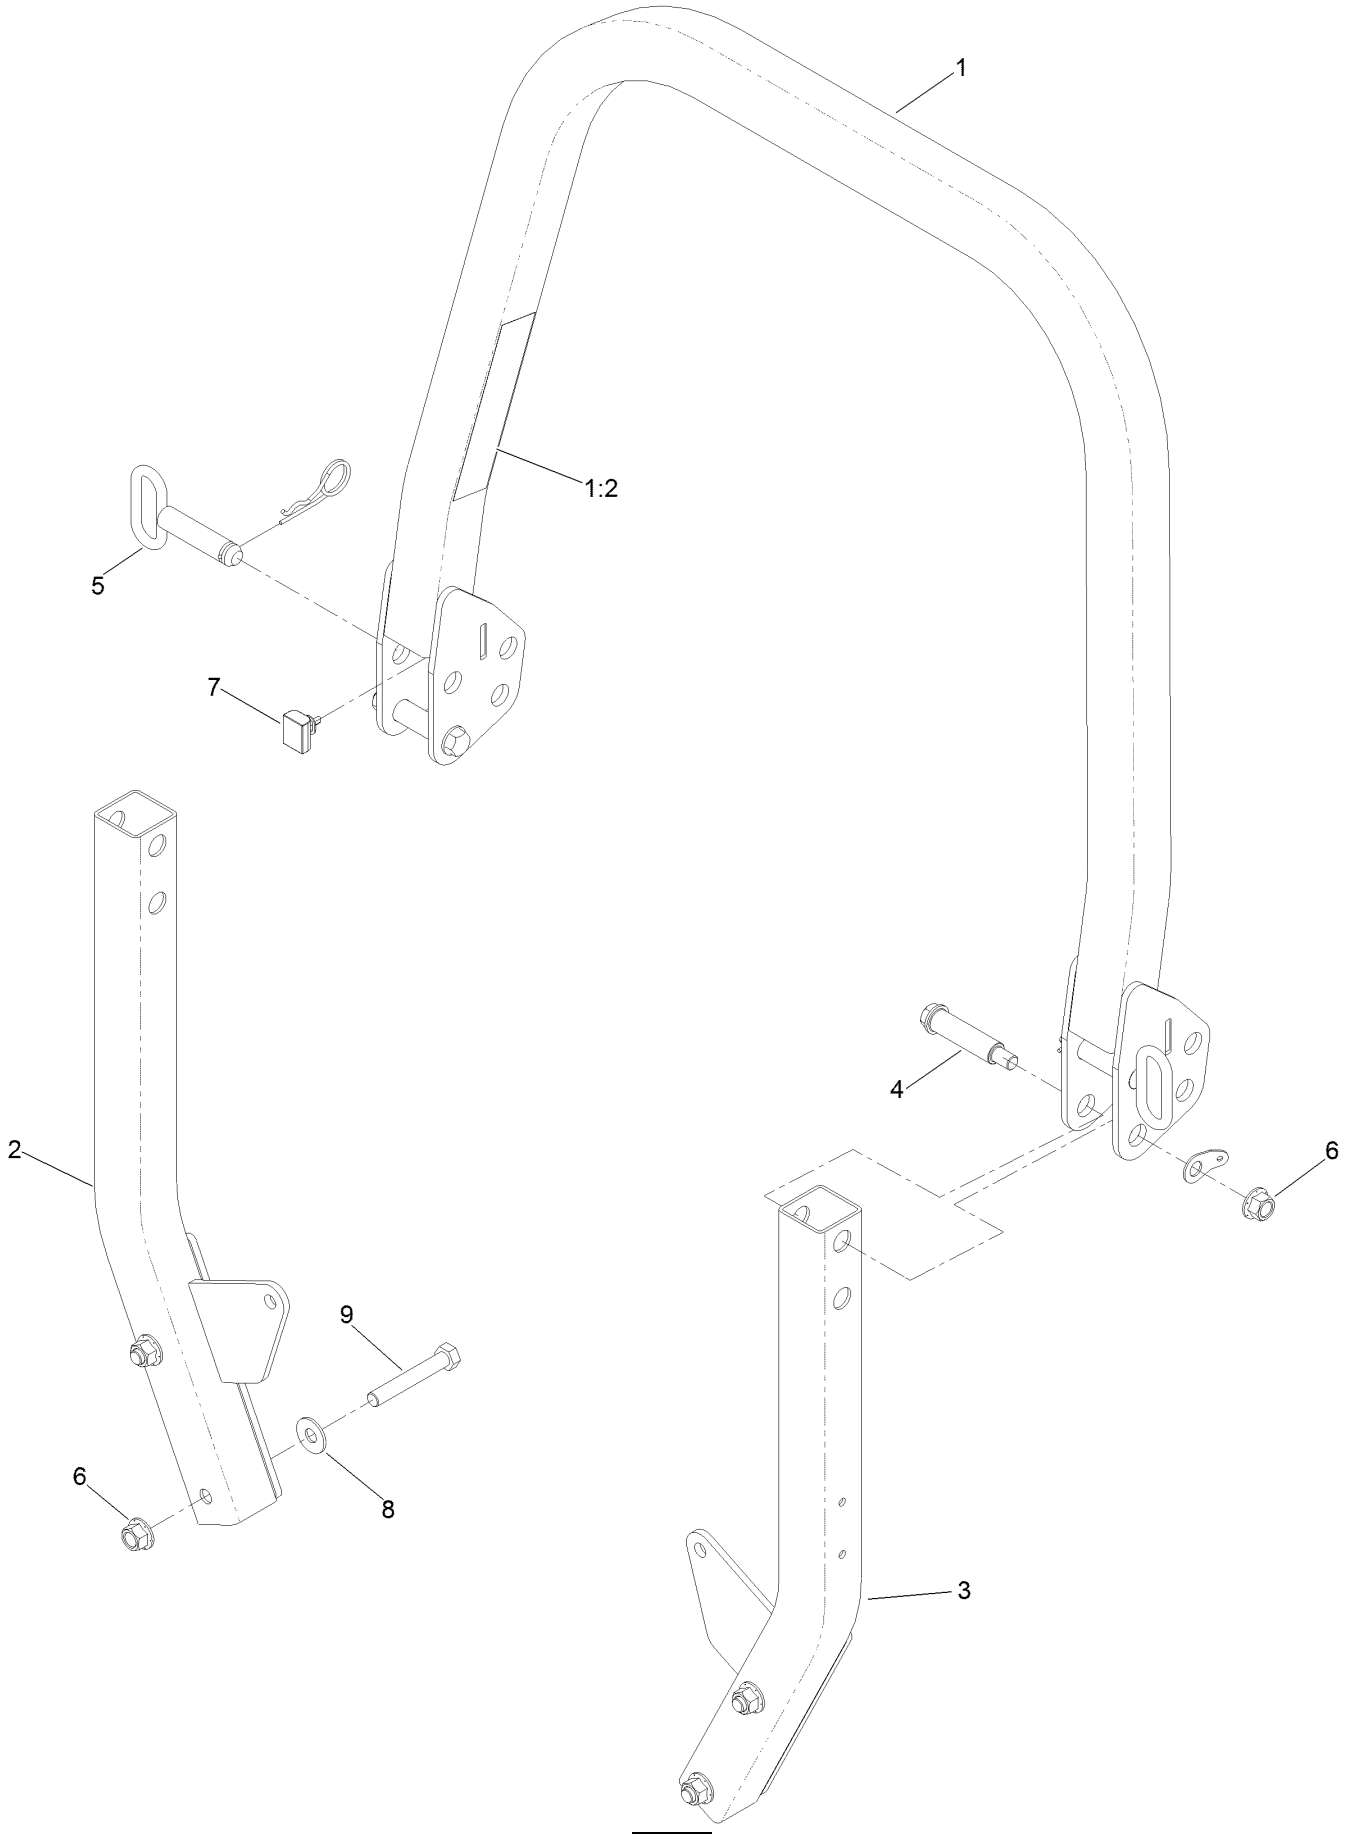


Roll-Over Protection System Assembly No. 139-8063 (continued)

Ref.	Part Number	Qty.	Description
1		1	Upper ROPS ASM ●
1:2	107-3069	1	Decal-Warning
2		1	ASM-ROPS, RH Suspension [black] ●
3		1	ASM-ROPS, LH Suspension [black] ●
4	126-9209	2	Bolt-Shoulder
5	161-4477	2	ROPS Pin ASM
6	99-5107	6	Nut-HF Nylock
7	109-5337	2	Bumper-ROPS
8	109-9505	4	Washer-Spring
9	325-13	4	Screw-HH

● Not serviced separately


Hydro Drive Assembly

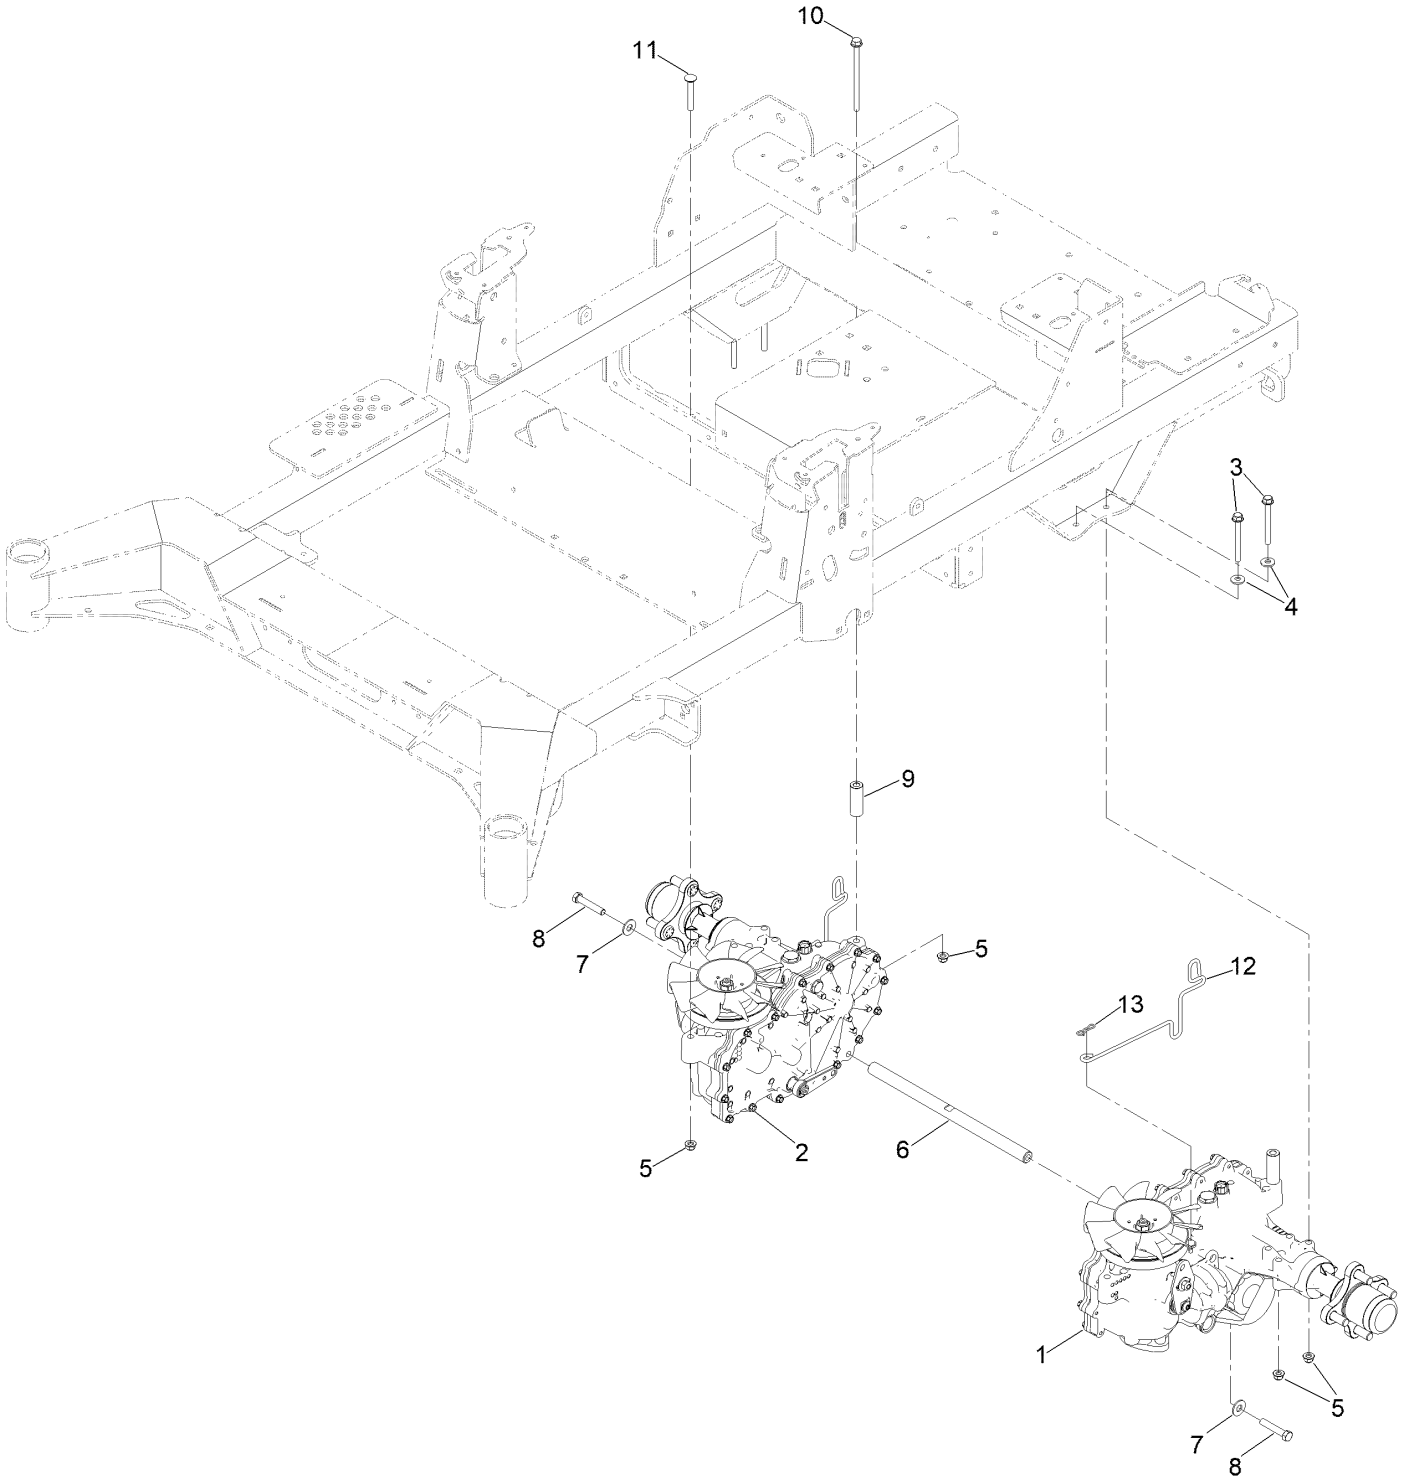

Hydro Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-8424	1	Transaxle ASM
2	145-8425	1	Transaxle ASM
3	126-4687	4	Screw-HHF
4	1-303334	4	Washer-Spring
5	104-8300	8	Nut-HF, NI
6	145-5708	1	Shaft-Spacer
7	3256-4	2	Washer-Flat
8	94-7972	2	Screw-HH, Patch
9	109-3652	2	Spacer
10	126-5896	2	Screw HHF
11	3230-7	2	Bolt-CARR
12	125-8950	2	Rod-Bypass
13	119-1415	2	Pin-Cotter, Locking


LH Transaxle Assembly No. 145-8424

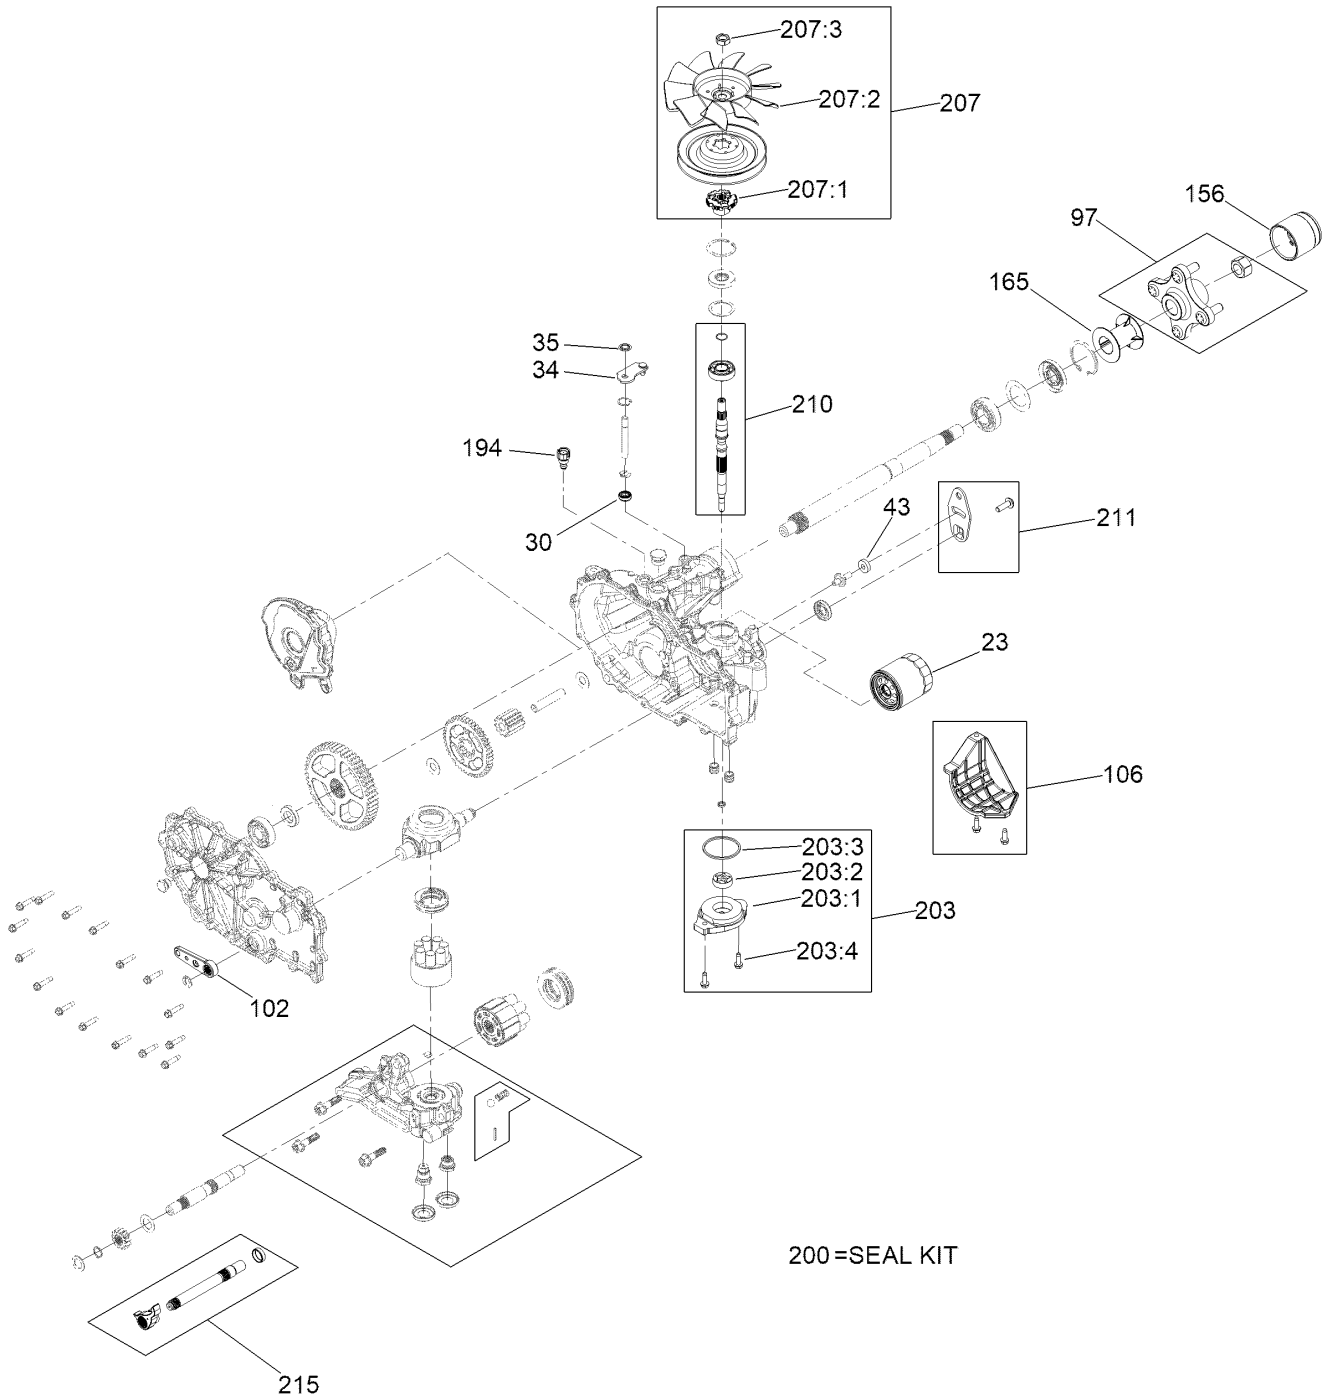

LH Transaxle Assembly No. 145-8424 (continued)

Ref.	Part Number	Qty.	Description
23	109-3321	1	Element-Oil Filter, HYD
30	139-7497	1	Seal-Lip
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, External
43	112-9853	1	Puck-Friction
97	116-3872	1	Hub-Offset
102	125-0021	1	Handle-Brake
106	120-7979	1	Guard-Filter, LH
156	116-6214	1	Cap-Axle, Long
165	116-6213	1	Tube-Axle
194	147-7366	1	Assembly-Fitting, Breather
200	121-3243	1	Seal Kit
203	114-8465	1	Charge Kit
203:1	114-8457	1	Cover-Charge Pump
203:2	104-2122	1	Gerotor ASM
203:3	109-3540	1	O Ring-Seal
203:4	104-2120	1	Screw
207	126-8904	1	Fan And Pulley Kit
207:1	126-8905	1	Hub-Fan
207:2	126-0226	1	Fan
207:3	116-9714	1	Nut-HJ
210	121-3248	1	Input Shaft Kit
211	117-5362	1	Control Arm Kit
215	140-8353	1	Inboard Kit


RH Transaxle Assembly No. 145-8425

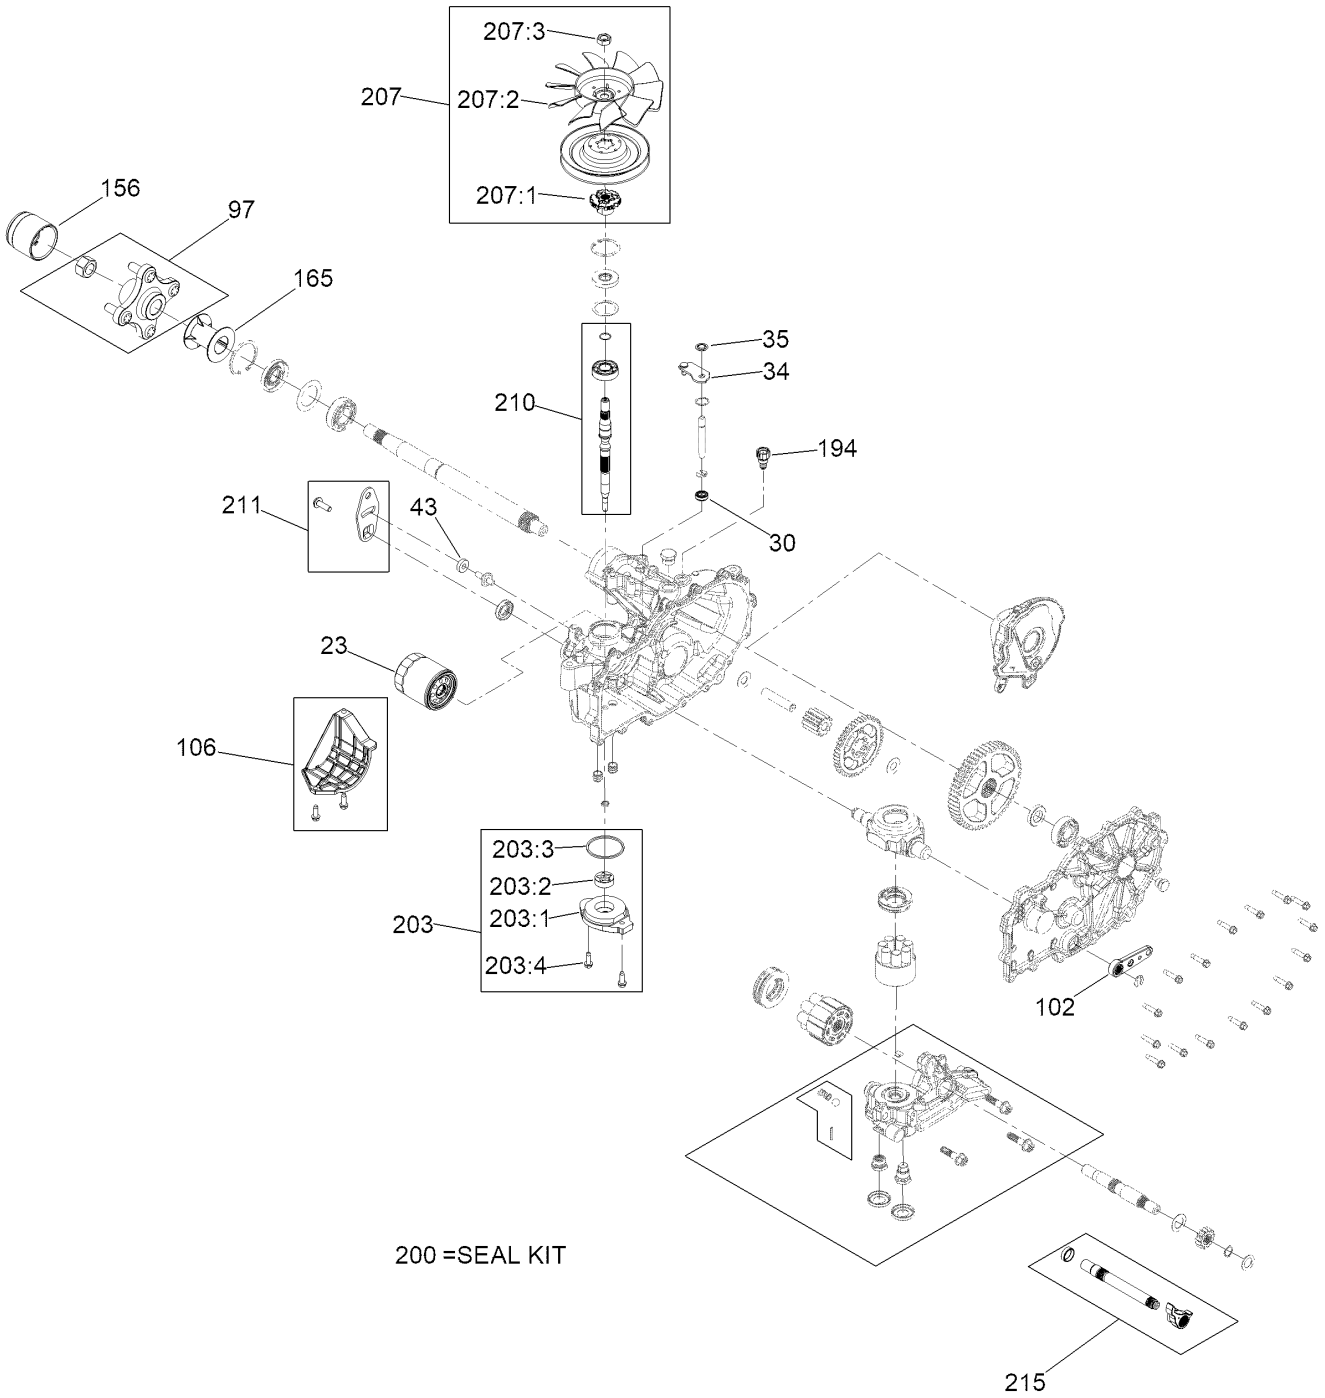

RH Transaxle Assembly No. 145-8425 (continued)

Ref.	Part Number	Qty.	Description
23	109-3321	1	Element-Oil Filter, HYD
30	139-7497	1	Seal-Lip
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, External
43	112-9853	1	Puck-Friction
97	116-3872	1	Hub-Offset
102	125-0021	1	Handle-Brake
106	120-7981	1	Guard-Filter, RH
156	116-6214	1	Cap-Axle, Long
165	116-6213	1	Tube-Axle
194	147-7366	1	Assembly-Fitting, Breather
200	121-3243	1	Seal Kit
203	114-8465	1	Charge Kit
203:1	114-8457	1	Cover-Charge Pump
203:2	104-2122	1	Gerotor ASM
203:3	109-3540	1	O Ring-Seal
203:4	104-2120	1	Screw
207	126-8904	1	Fan And Pulley Kit
207:1	126-8905	1	Hub-Fan
207:2	126-0226	1	Fan
207:3	116-9714	1	Nut-HJ
210	121-3248	1	Input Shaft Kit
211	117-5362	1	Control Arm Kit
215	140-8353	1	Inboard Kit


Throttle, Choke and Guards Assembly

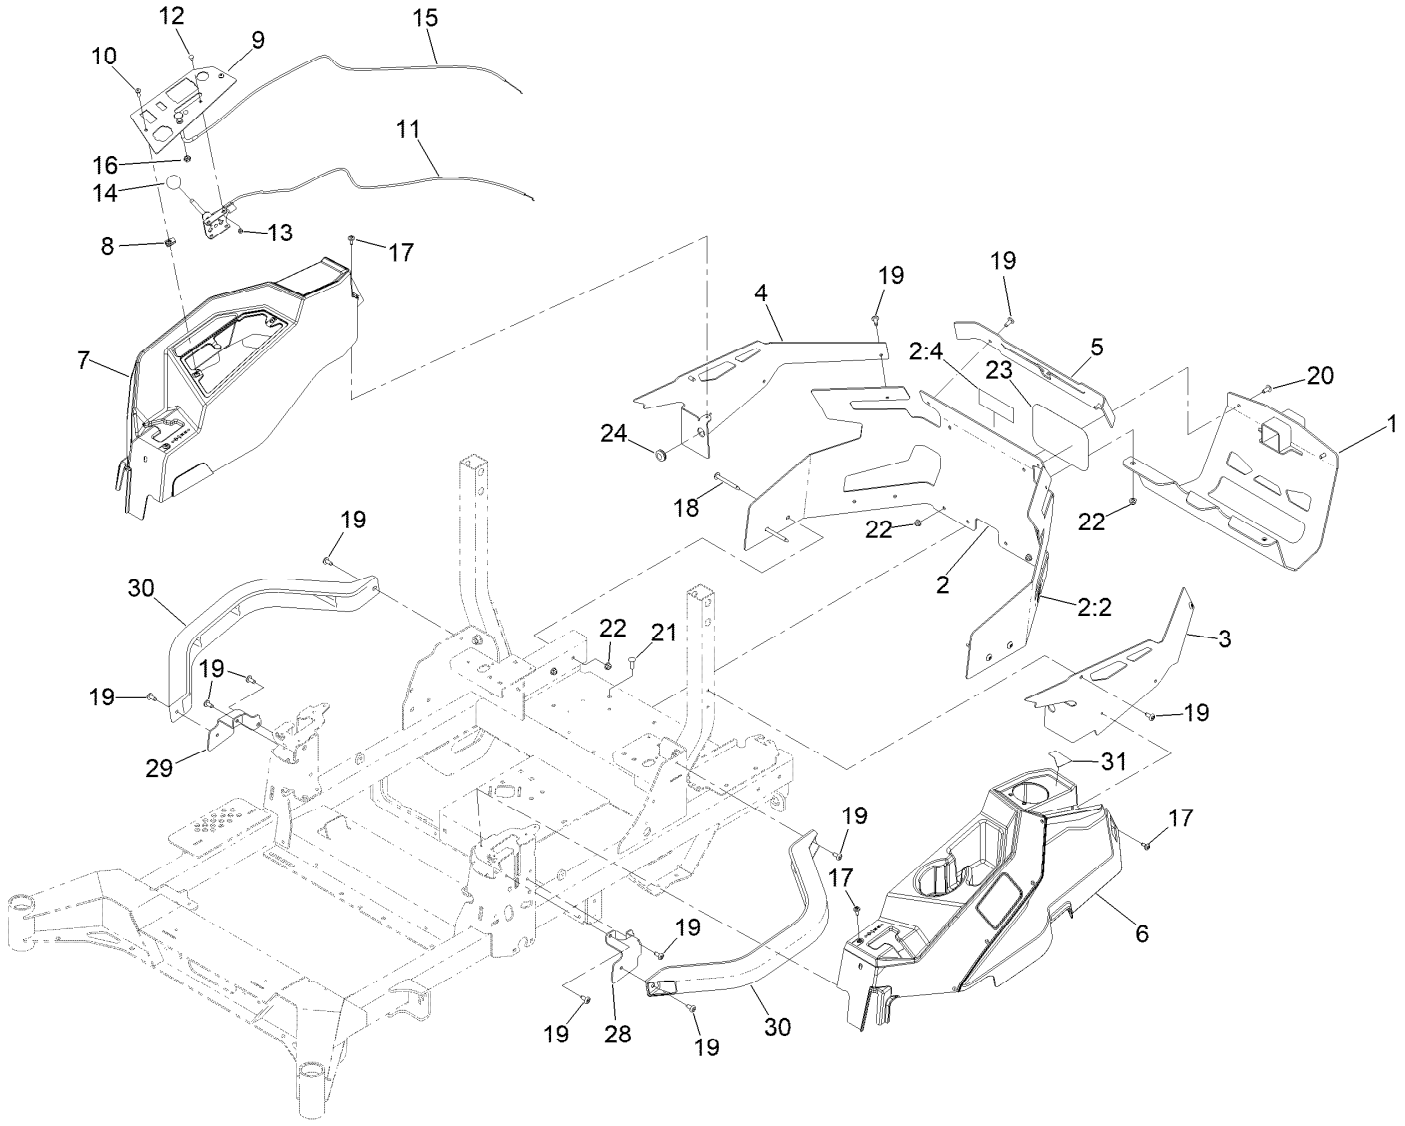

Throttle, Choke and Guards Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-2408-03	1	Guard-Muffler
2	145-7022	1	Rear Guard ASM
2:2	106-5517	2	Decal-Warning
2:4	147-7364	1	Decal-Hitch
3	145-8443-01	1	Guard-Rear, LH
4	145-8444-01	1	Guard-Rear, RH
5	145-7007-01	1	Guard-Rear, Top
6	147-2352	1	LH Pod ASM
7	147-2353	1	RH Pod ASM
8	107069	2	Clip
9	145-8498-03	1	Panel-Control
10	138-0689	2	Screw-PH
11	139-6734	1	Cable-Control, Throttle
12	1-807513	2	Bolt-CARR
13	3296-2	2	Nut-Lock, NI
14	1-603175	1	Knob-Ball
15	139-6735	1	Cable-Control, Choke
16	3220-3	1	Nut-HJ
17	120-7950	6	Screw-Torx
18	126-6267	4	Screw-TTH
19	138-9753	14	Screw
20	126-6268	2	Screw-TTH
21	3230-22	2	Screw-CARR
22	104-8300	8	Nut-HF, NI
23	67-7320	1	Decal
24	112-7069	1	Grommet
28	145-8481-01	1	Bracket-Mount, LH
29	145-8484-01	1	Bracket-Mount, RH
30	147-2385-01	2	Tube-Pod
31	147-2399	1	Decal-Fuel Fill


Fuel Assembly

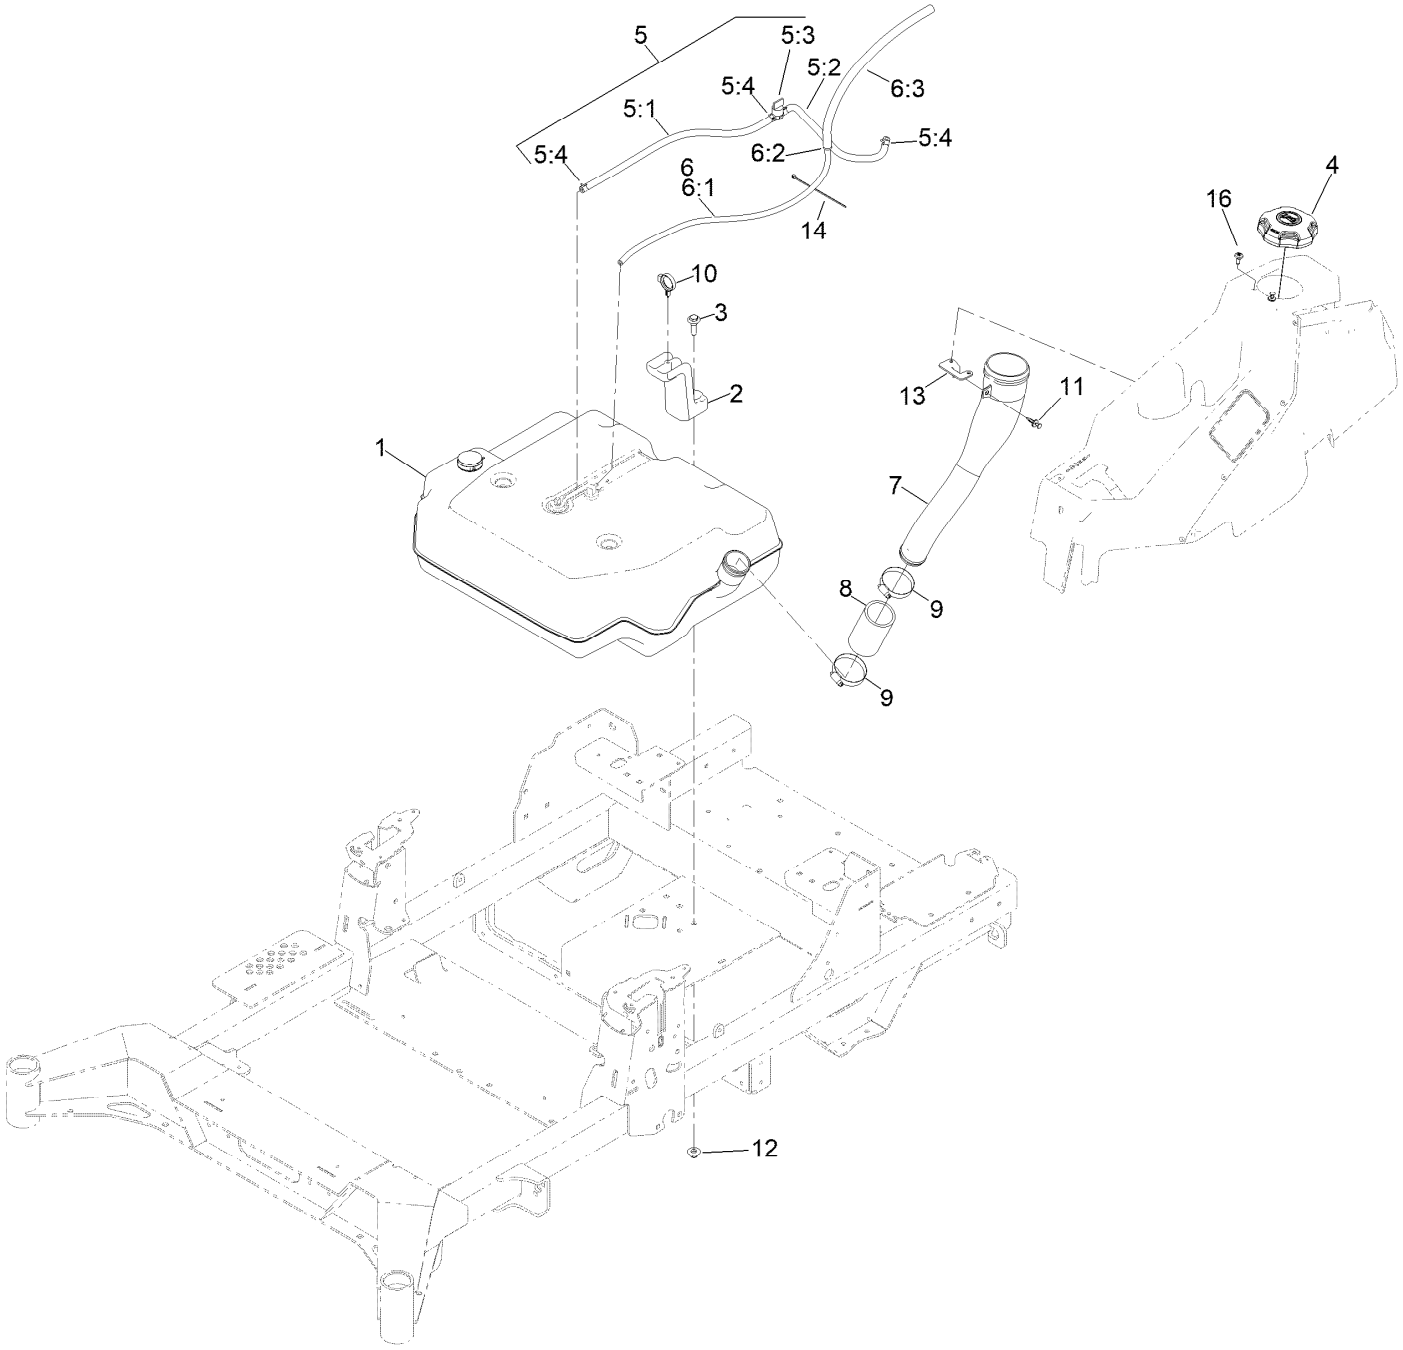

Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	163-3471	1	Tank ASM-Fuel
2	145-5778	1	Retainer-Tank, Rear
3	614672	1	Screw-Shoulder, HWH
4	137-4119	1	Cap-Fuel, Ratcheting
5	163-0110	1	Hose Assembly-Fuel/Valve
5:1	109-0301	1	Hose-Fuel
5:2	114-3766	1	Hose-Fuel
5:3	1-603770	1	Valve-Fuel
5:4	2412-98	4	Clamp-Hose
6	163-0111	1	Hose Assembly-Fuel/Vent/Orifice
6:1	138-3152	1	Hose-Fuel
6:2	116-4630	1	Fitting-Orifice, Straight
6:3	116-4344	1	Hose-Fuel
7	147-2431	1	Neck-Filler, Fuel
8	145-4698	1	Hose-Filler, Fuel
9	2412-130	2	Clamp-Hose
10	104-2490	1	Clamp-Hose
11	125-9622	1	Rivet-Blind
12	104-8301	1	Nut-HF, NI
13	161-2890	1	Bracket-Mounting, Fill
14	32180-082	1	Clip-Edge W/Tie, Perpendicular
16	120-7950	2	Screw-Torx


Fuel Tank Assembly No. 163-3471

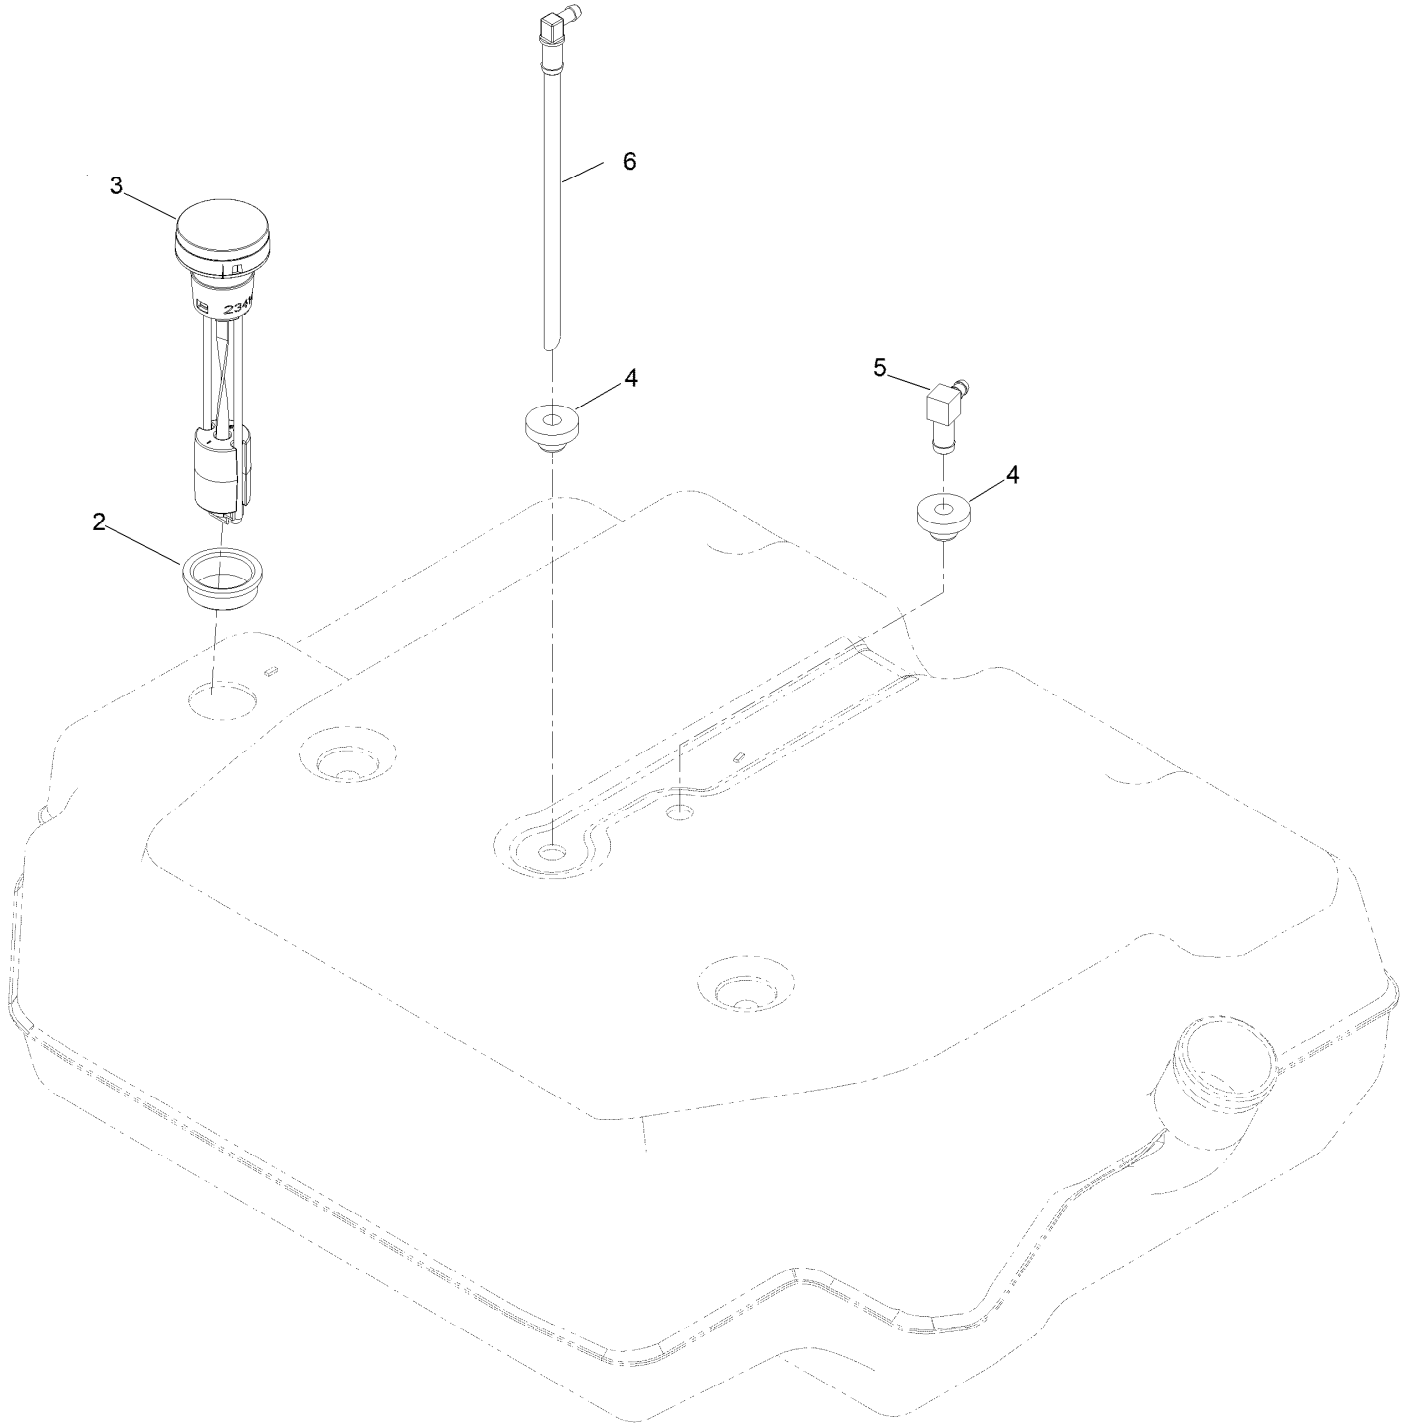

Fuel Tank Assembly No. 163-3471 (continued)

Ref.	Part Number	Qty.	Description
2	133-9269	1	Grommet-Fuel
3	139-8058	1	Gauge-Fuel
4	46-6560	2	Bushing
5	126-9057	1	Fitting-90 DEG
6	140-4955	1	Connector Elbow-90 DEG


Seat Mount Assembly

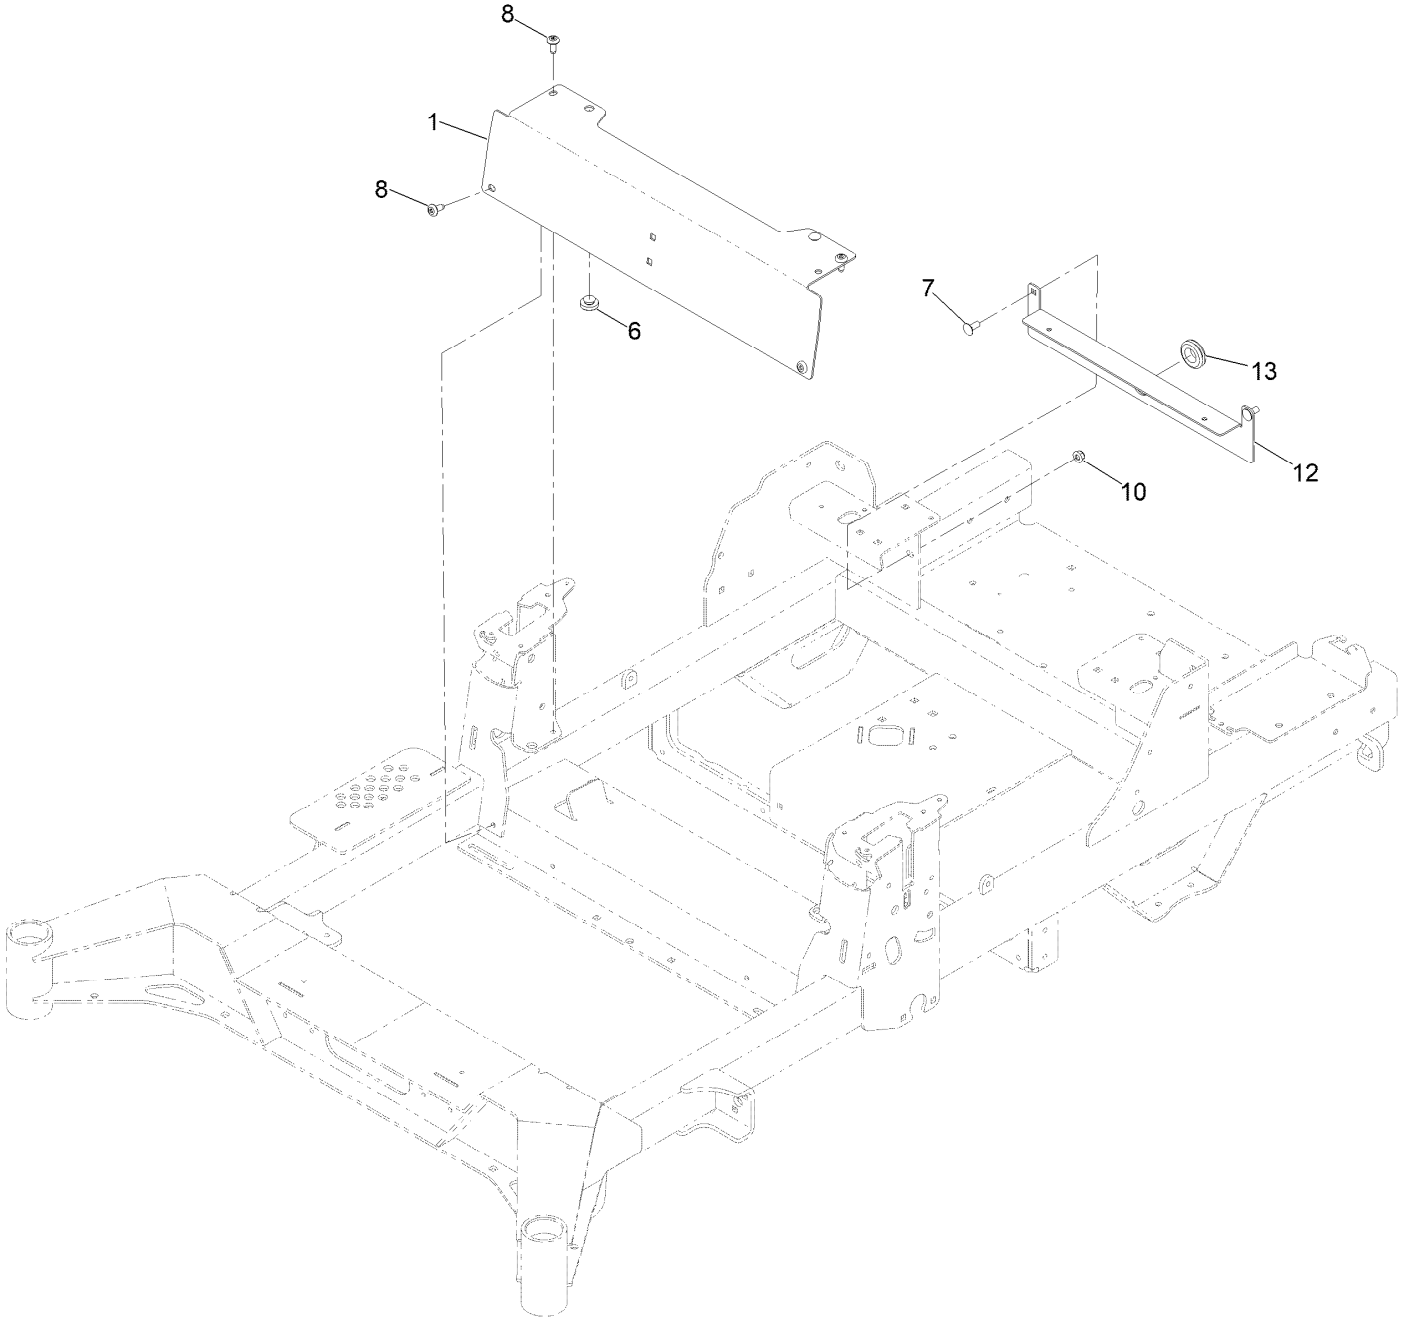

Seat Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-2398-03	1	Plate-Badge, Front [black]
6	135-0505	2	Bumper-Seat
7	3230-23	2	Bolt-CARR
8	138-9753	4	Screw
10	104-8300	2	Nut-HF, NI
12	147-2362-03	1	Bracket-Firewall
13	1-543286	1	Grommet


Motion Control Assembly

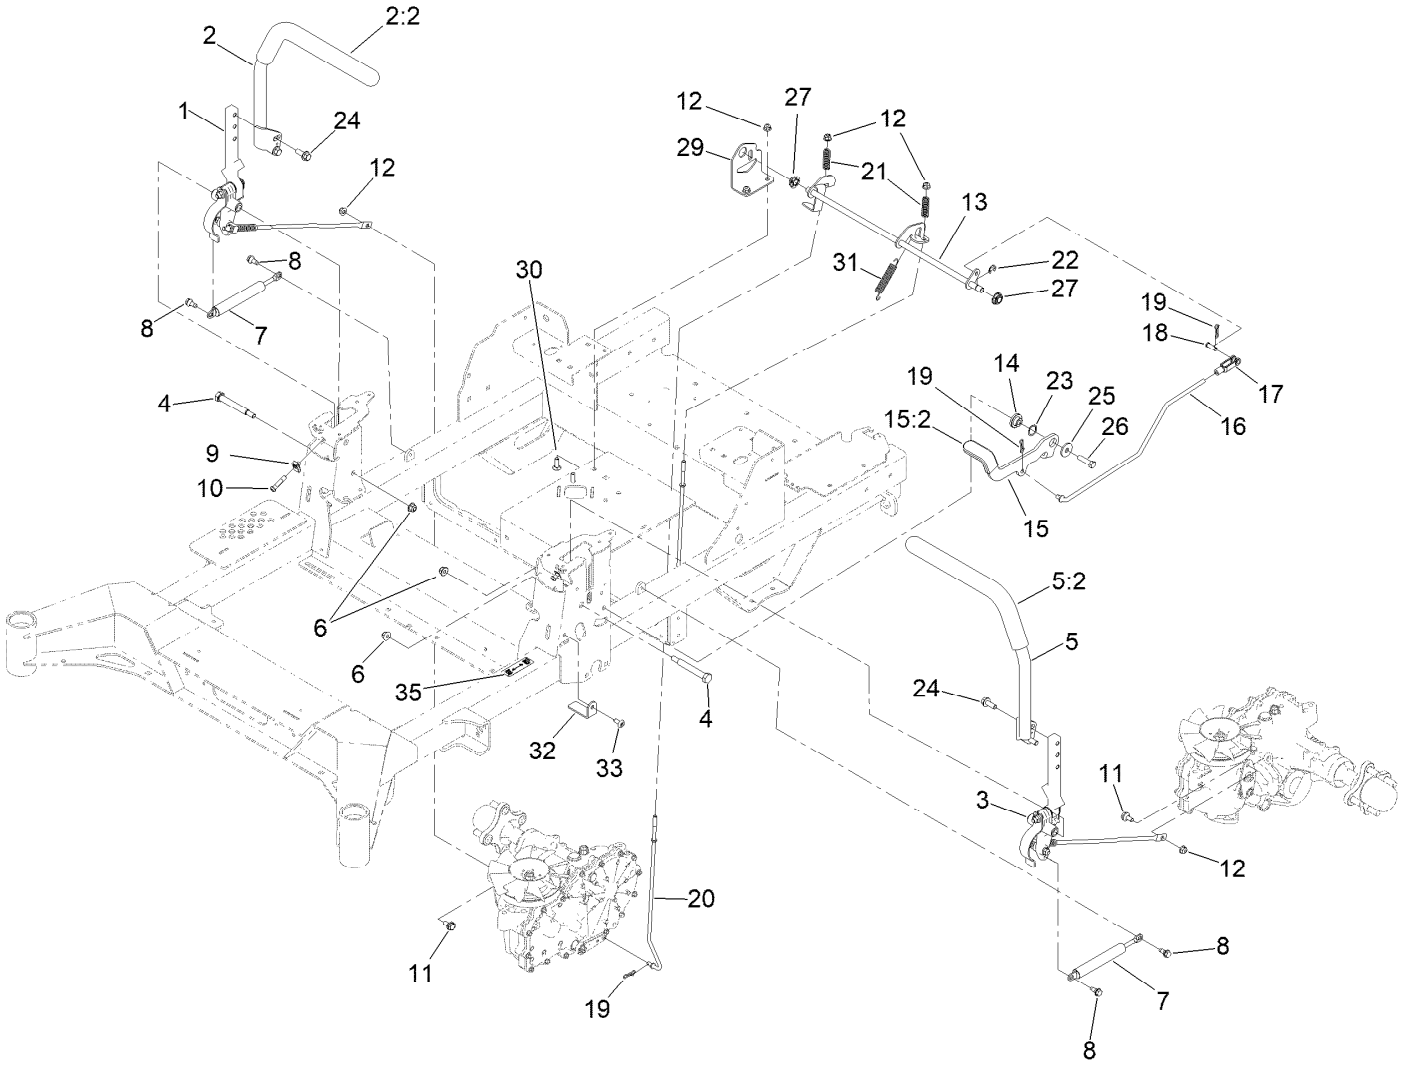

Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-5725	1	Motion Control ASM-RH
2	147-2390	1	RH Handle ASM
2:2	109-5668	1	Grip-Lever, Control
3	145-5724	1	Motion Control ASM-LH
4	115-5099	2	Bolt-Pivot
5	147-2391	1	LH Handle ASM
5:2	109-5668	1	Grip-Lever, Control
6	104-8301	3	Nut-HF, NI
7	142-6851	2	Damper
8	126-4424	4	Screw-Shoulder
9	112-3306	2	Nut
10	126-4299	2	Screw-HSBH
11	37-8771	2	Bolt-Shoulder, HF
12	104-8300	6	Nut-HF, NI
13	145-5719	1	Shaft-Brake
14	126-5989	1	Pivot-Flange
15	147-7375	1	Lever-Brake
15:2	132-4749	1	Grip-Lever
16	145-5722	1	Linkage-Brake, Upper
17	1-303105	1	Yoke-Adjustable
18	1-808280	1	Pin-Clevis
19	119-1415	4	Pin-Cotter, Locking
20	126-7217	2	Linkage-Brake, Lower
21	109-7694	2	Spring-Compression
22	32120-47	1	Ring-Retaining, External
23	119-4164	1	Washer-Wave
24	110-5052	4	Screw-HHF
25	2844	1	Washer
26	323-8	1	Screw-HH
27	126-5820	2	Bearing-Spherical
29	145-5726	1	Bracket-Brake
30	3230-22	2	Screw-CARR
31	109-7124	1	Spring-Extension
32	145-3685	2	Plate-Stop, Rtn
33	138-9753	2	Screw
35	115-9625	1	Decal-Brake, Parking


Left and Right Motion Control Assembly

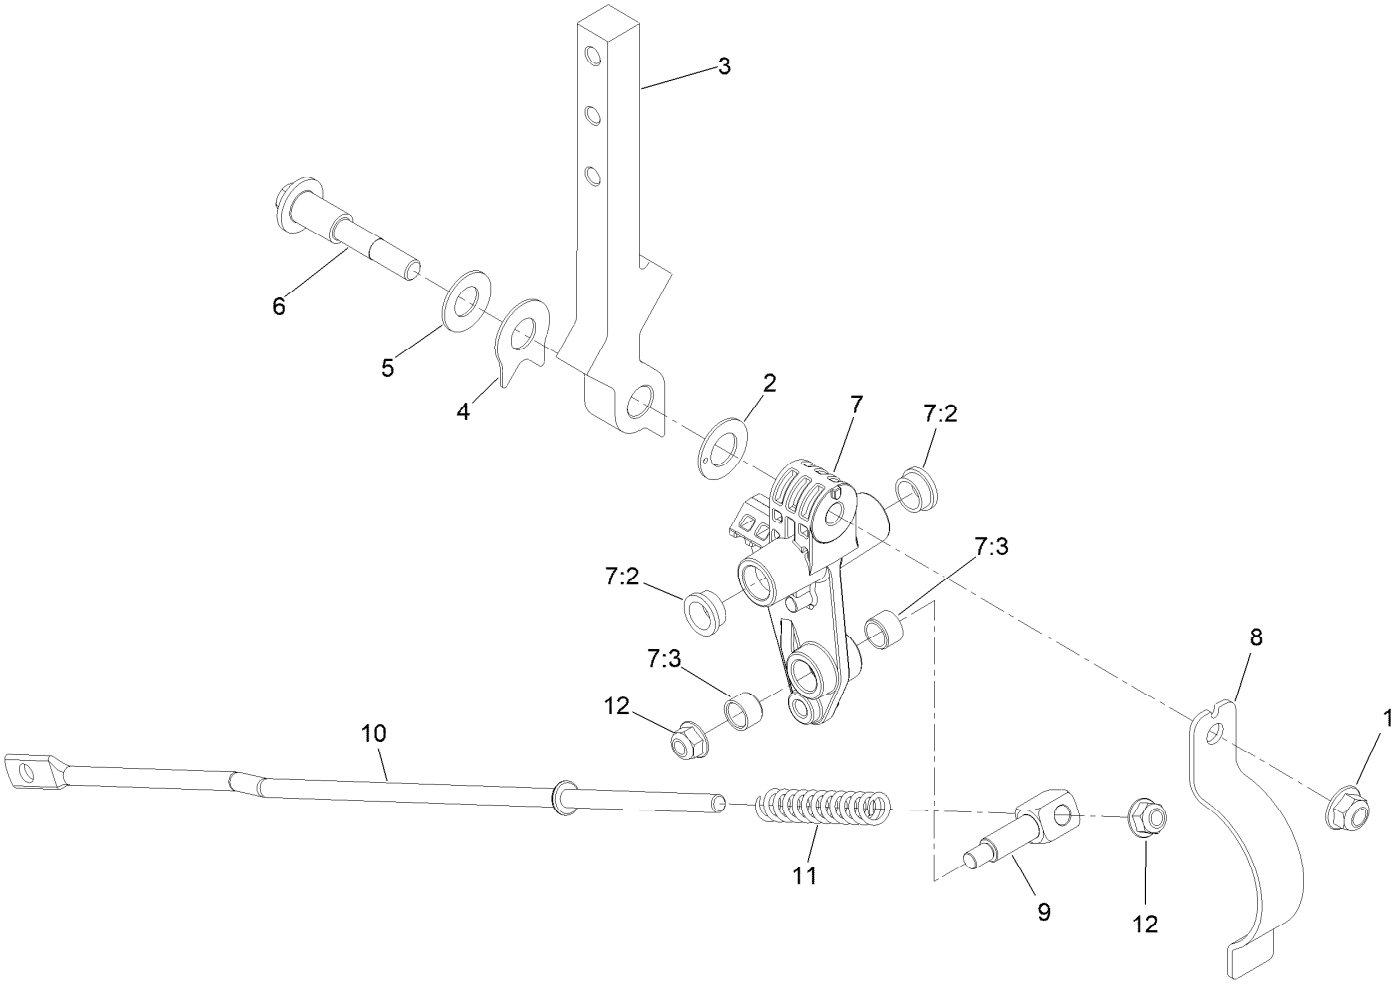

Left and Right Motion Control Assembly (continued)

Ref.	Part Number	Qty.	Description
1	104-8301	1	Nut-HF, NI
2	126-7296	1	Washer-Friction
3	147-2389	1	Arm-Control
4	142-8478	1	Spacer, Anti-Rotation
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	145-5798	1	ASM-Control Arm
7:2	126-8909	2	Bushing
7:3	1-413152	2	Bushing-Sleeve
8	145-5799	1	Spring-Rtn
9	126-5434	1	Swivel
10	145-5723	1	Link-Control
11	126-8195	1	Spring-Return, Neutral
12	104-8300	2	Nut-HF, NI

Front Caster Wheel Assembly

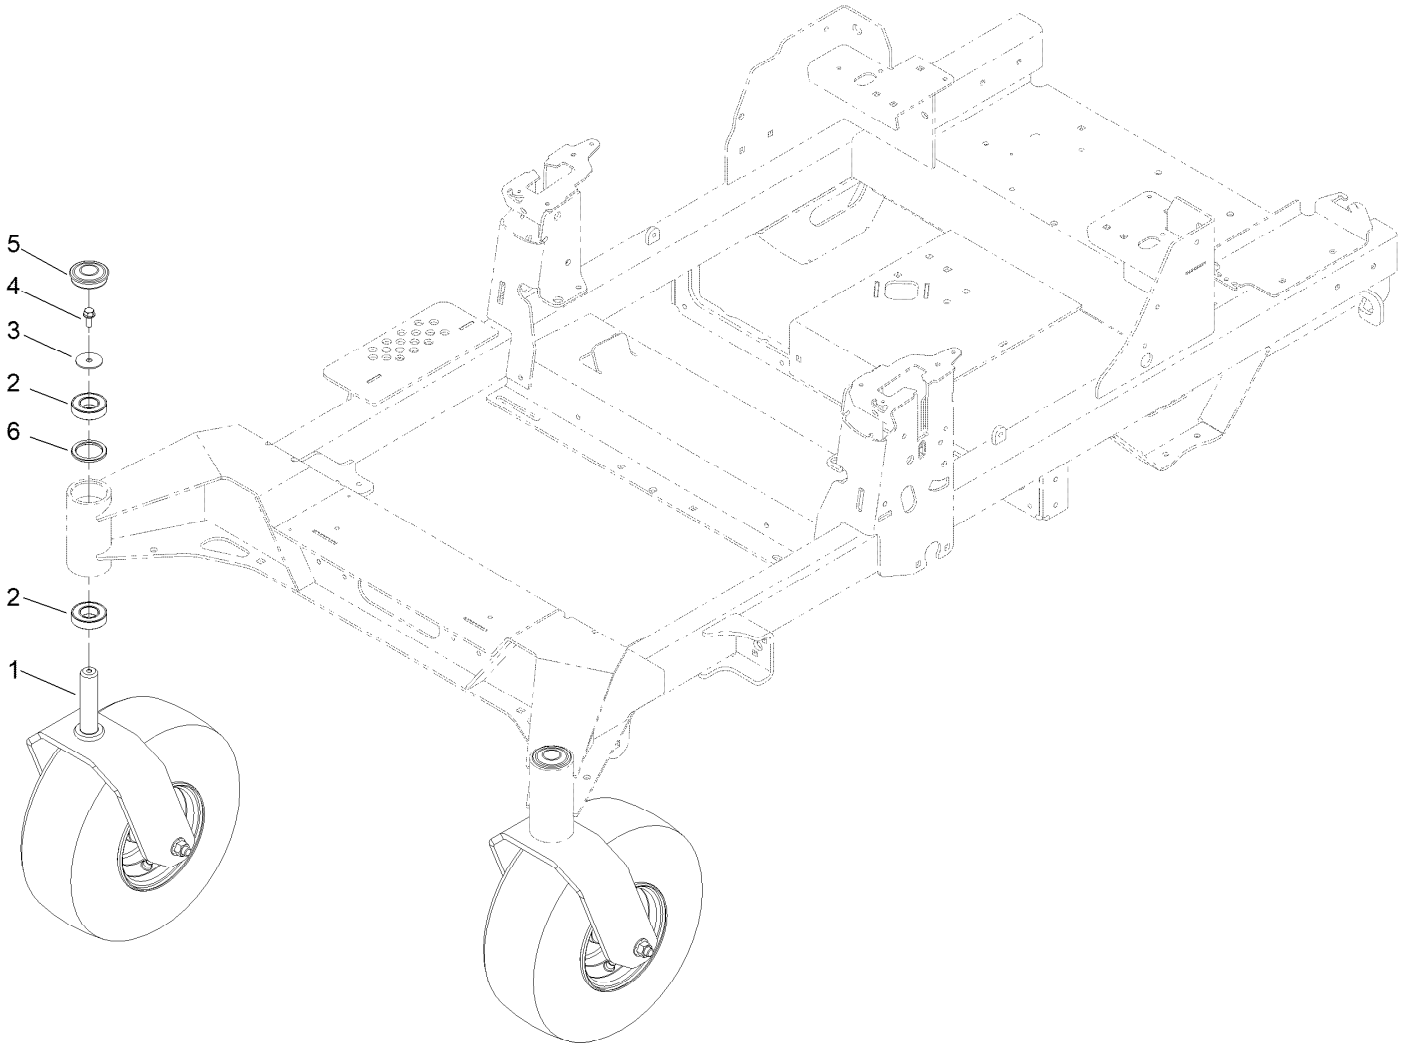


Front Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1		2	ASM, Front Caster W/ Fork ●
2	109-3678	4	Bearing-Ball
3	3256-68	2	Washer-Flat
4	100-1668	2	Screw-HHF
5	144-0375	2	Cap-Grease
6	145-3660	2	Spacer-Bearing

● Not serviced separately

Fork and Caster Wheel Assembly

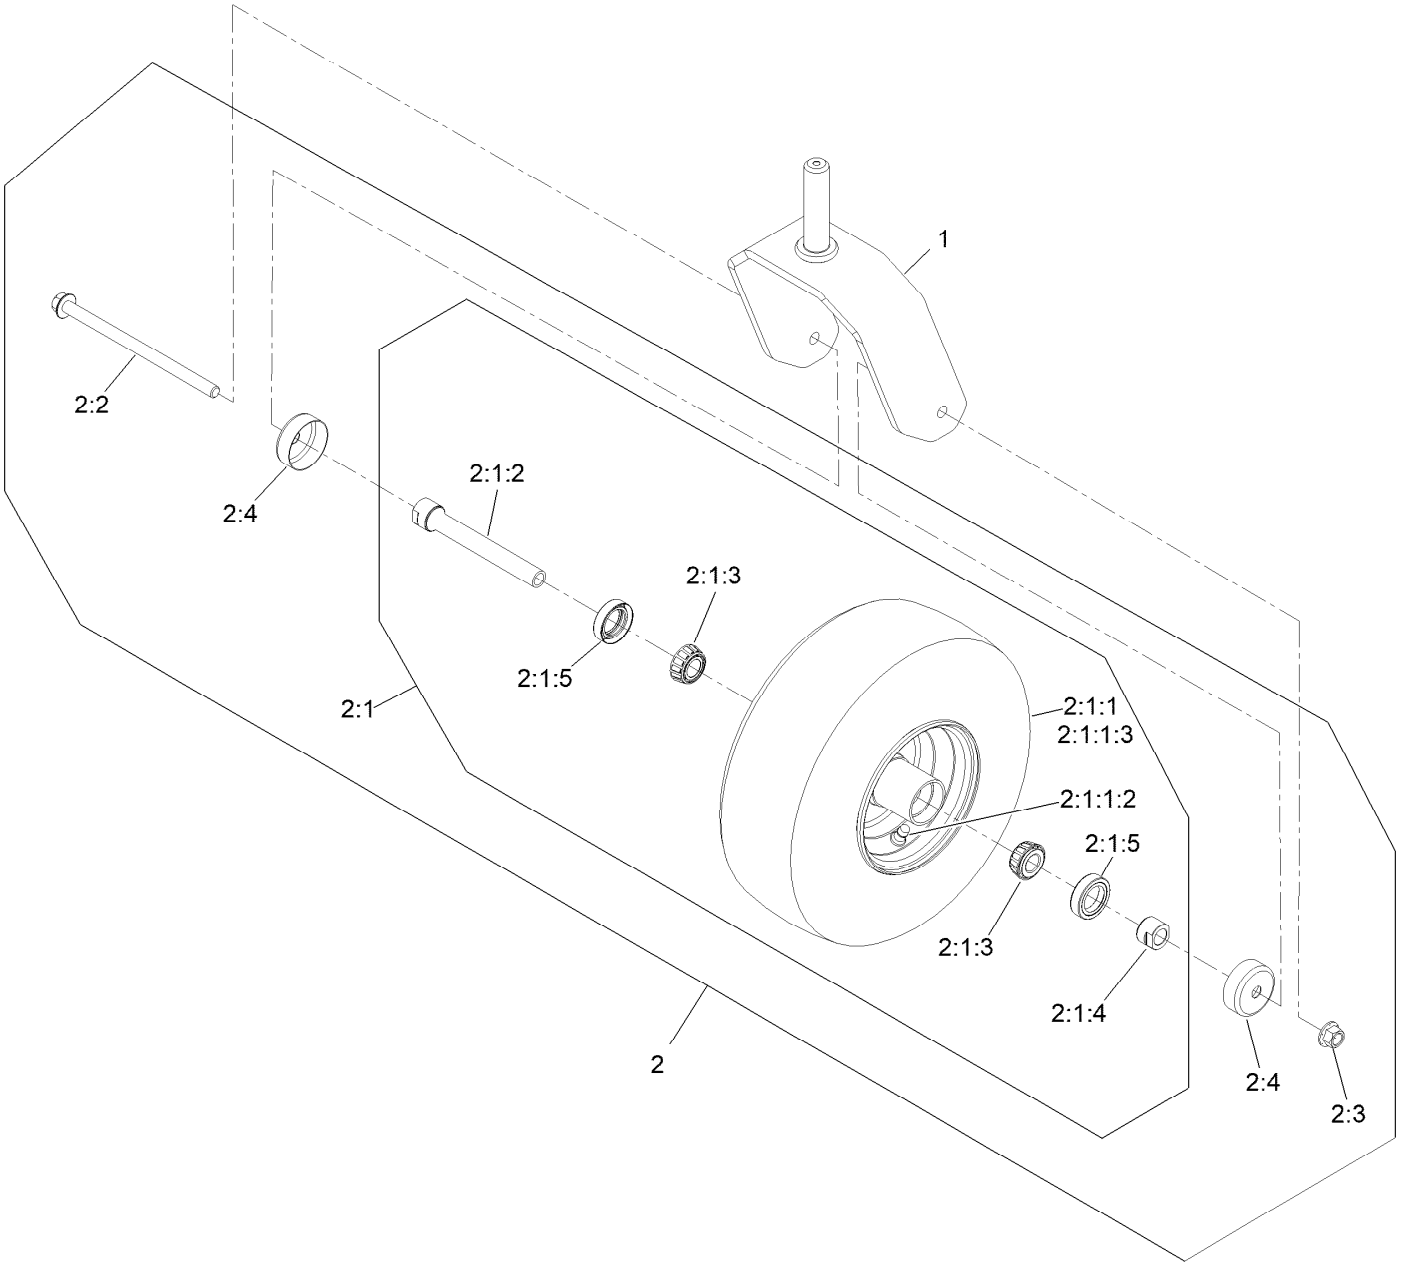


Fork and Caster Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	142-7827-01	1	Fork-Caster
2	139-3639	1	ASM-Pneumatic 13X6.50-6
2:1		1	Wheel And Bearings ASM ●
2:1:1		1	Wheel And Tire ASM 13X6.5-6 ●
2:1:1:2	5108	1	Valve
2:1:1:3	126-5959	1	Tire
2:1:2	126-7796	1	Caster Axle ASM
2:1:3	1-633585	2	Bearing-Cone, Taper
2:1:4	103-3051	1	Spacer-Nut
2:1:5	103-0063	2	Seal-Caster
2:2	126-5389	1	Screw-HHF
2:3	99-5107	1	Nut-HF Nylock
2:4	103-2768	2	Guard-Seal

● Not serviced separately


Rear Drive Wheel Assembly

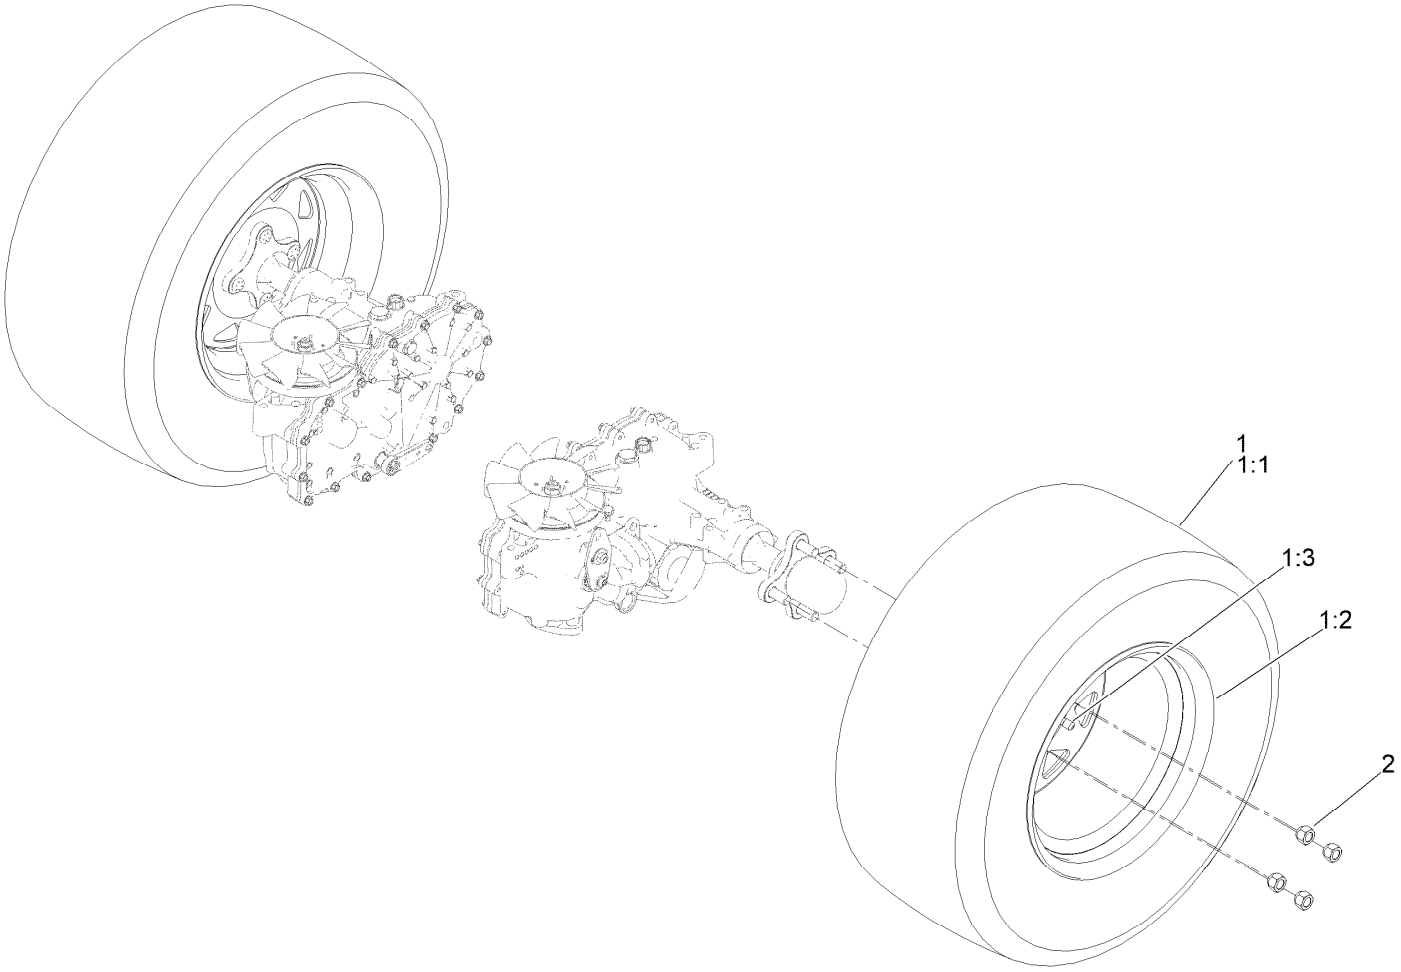

Rear Drive Wheel Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-5030	2	ASM-Voodoo Trac 24X10.5-12
1:1	147-5033	1	Tire-Voodoo 24X10.5-12
1:2	140-7969	1	Wheel
1:3	232-27	1	Stem-Valve
2	139-2564	8	Nut-Lug

Electrical Assembly

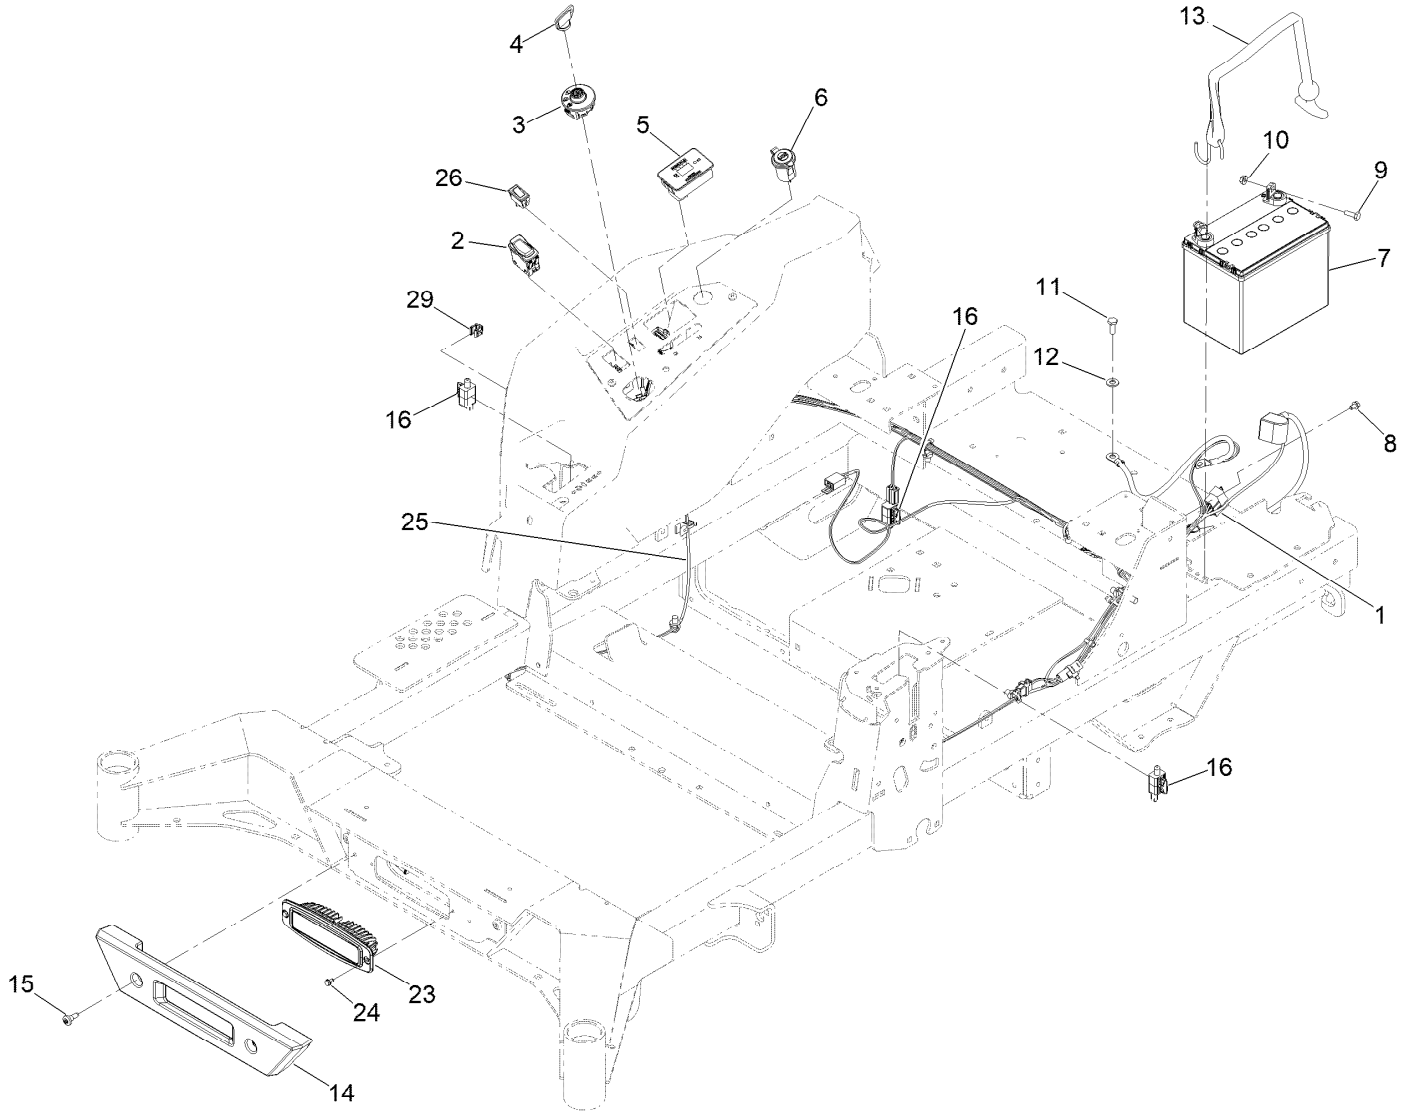


Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-2363	1	Harness-Wire, Zmaster
2	139-6368	1	Switch-Rocker, On-None-On
3	137-4100	1	Switch-Ignition
4	63-8360	1	Key-Ignition
5	116-5609	1	Module ASM
6	140-7955	1	Port-Power, USB
7	104-8162	1	Battery
8	99-8445	1	Screw-HWH
9	321-4	2	Screw-HH
10	32128-33	2	Nut-HF
11	33114-020	1	Screw-HH
12	33094-00	1	Washer-Plain
13	142-8697	1	Strap, Bungee
14	147-7853	1	Bumper-Front
15	135-2015	2	Screw-Shoulder
16	110-6765	3	Switch
23	139-8089	1	Light - Flush Mount
24	104-2065	2	Screw-HWH
25	140-1213	1	Harness-Wire, Light Kit
26	92-8875	1	Switch-Rocker
29	32180-082	1	Clip-Edge W/Tie, Perpendicular
99	1-603511	1	Keys-Ignition (Spare Pair) ● ■

● Not illustrated

■ Optional Equipment


Wire Harness Assembly No. 147-2363

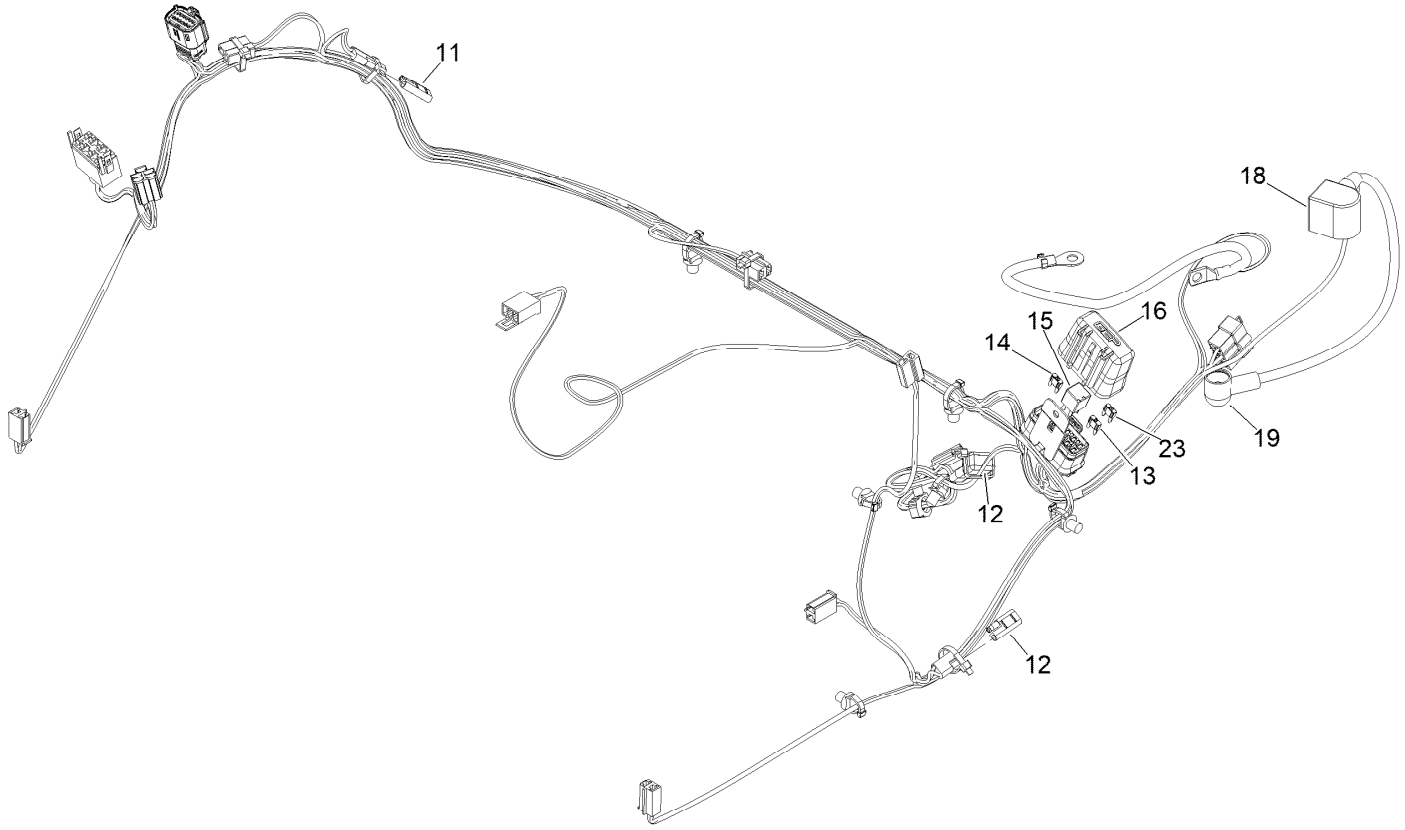

Wire Harness Assembly No. 147-2363 (continued)

Ref.	Part Number	Qty.	Description
11	116-0053	2	Cap-Plug
12	103-3895	1	Diode
13	121-8867	1	Fuse-Mini Blade, 15 Amp
14	121-8868	1	Fuse-Mini Blade, 20 Amp
15	126-3991	1	Relay-Micro
16	32180-176	1	Cover-Block, Fuse
18	126-8876	1	Insulator-Battery
19	1-543393	1	Insulator-Solenoid
23	121-8869	1	Fuse-Mini Blade, 25 Amp


Deck Lift Assembly

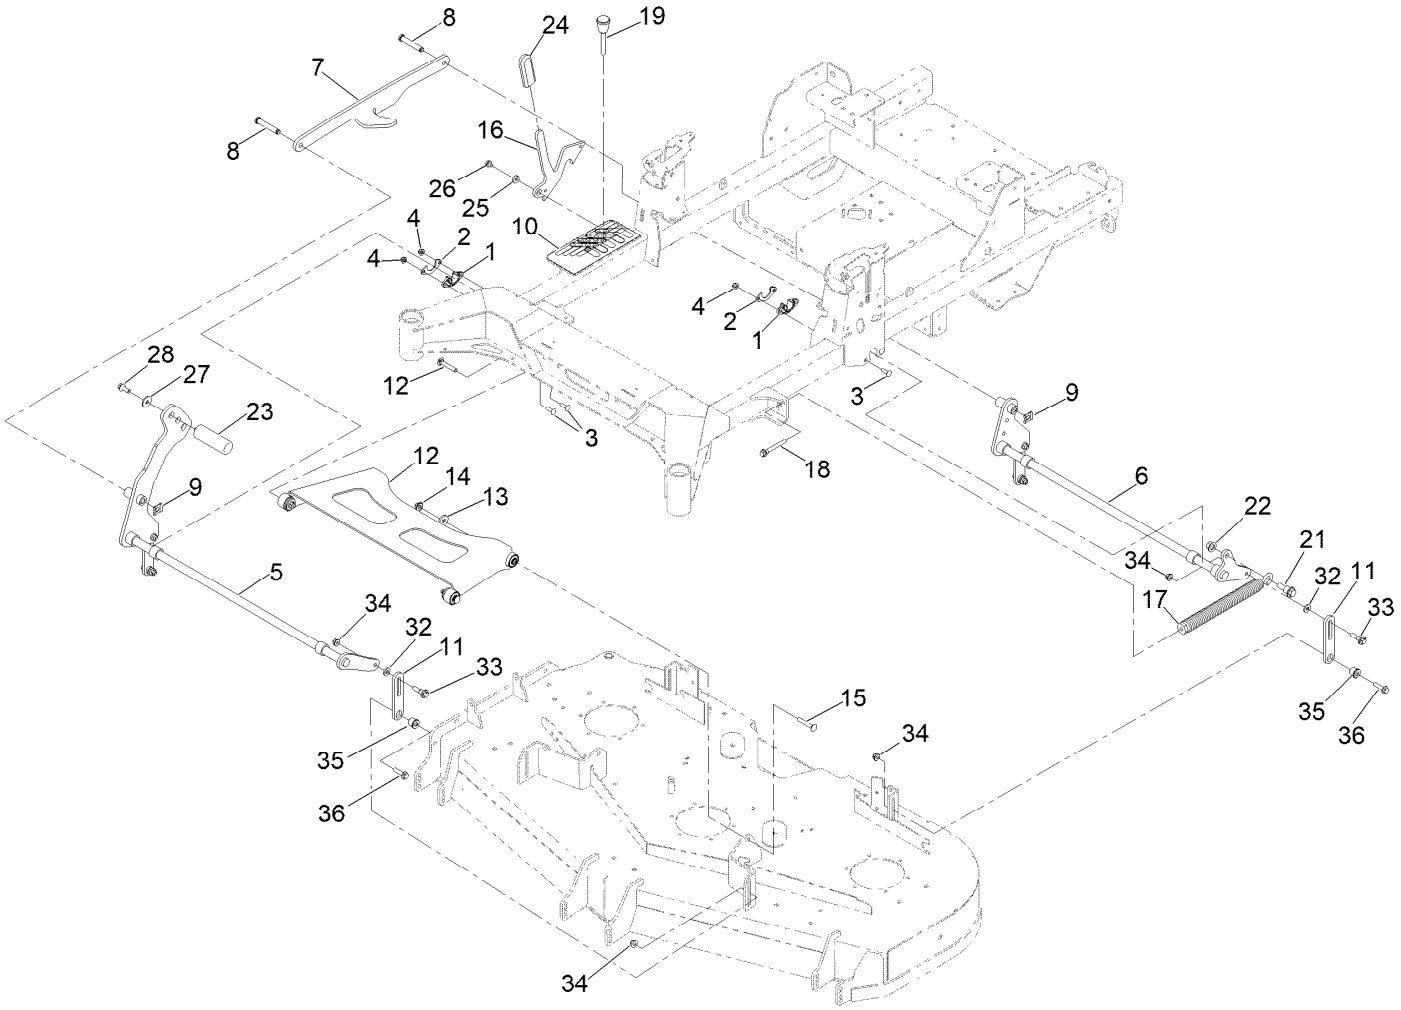

Deck Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
1	139-5872	4	Bearing-Flange
2	116-2887	4	Gusset-Lift, Deck
3	3230-22	8	Screw-CARR
4	104-8300	8	Nut-HF, NI
5	147-7389-03	1	Shaft-Lift, Deck
6	140-4975-03	1	Shaft-Lift, Deck
7	126-4639-03	1	Link-HOC
8	126-9181	2	Pin-Clevis
9	138-8491	2	Clip-Pin
10	147-2360	1	Decal-HOC
11	161-9818-03	4	Link-Lift, Deck
12	140-1179	1	Deck Strut W/ Bushings ASM
13	1-373034	2	Washer
14	109-6658	2	Nut-Flange, NI
15	3231-7	2	Screw-CARR
16	145-8475-03	1	Plate-Transport Lock
17	116-0886	1	Spring-Extension
18	92-7674	1	Bolt-Shoulder
19	126-5401	1	Pin-HOC
21	116-0780	1	Screw-Shoulder, HHF
22	99-5107	1	Nut-HF Nylock
23	147-7949	1	Pedal-Foot Lift
24	132-4749	1	Grip-Lever
25	104-7658	1	Spacer
26	9266934	1	Screw
27	2844	1	Washer
28	3234-42	1	Screw-HHF
32	43-0940	4	Spacer
33	130-0742	4	Bolt-Shoulder
34	104-8301	8	Nut-HF, NI
35	161-9819	4	Bushing-Deck Lift
36	3234-18	4	Screw-HHF


Deck Strut Assembly No. 140-1179

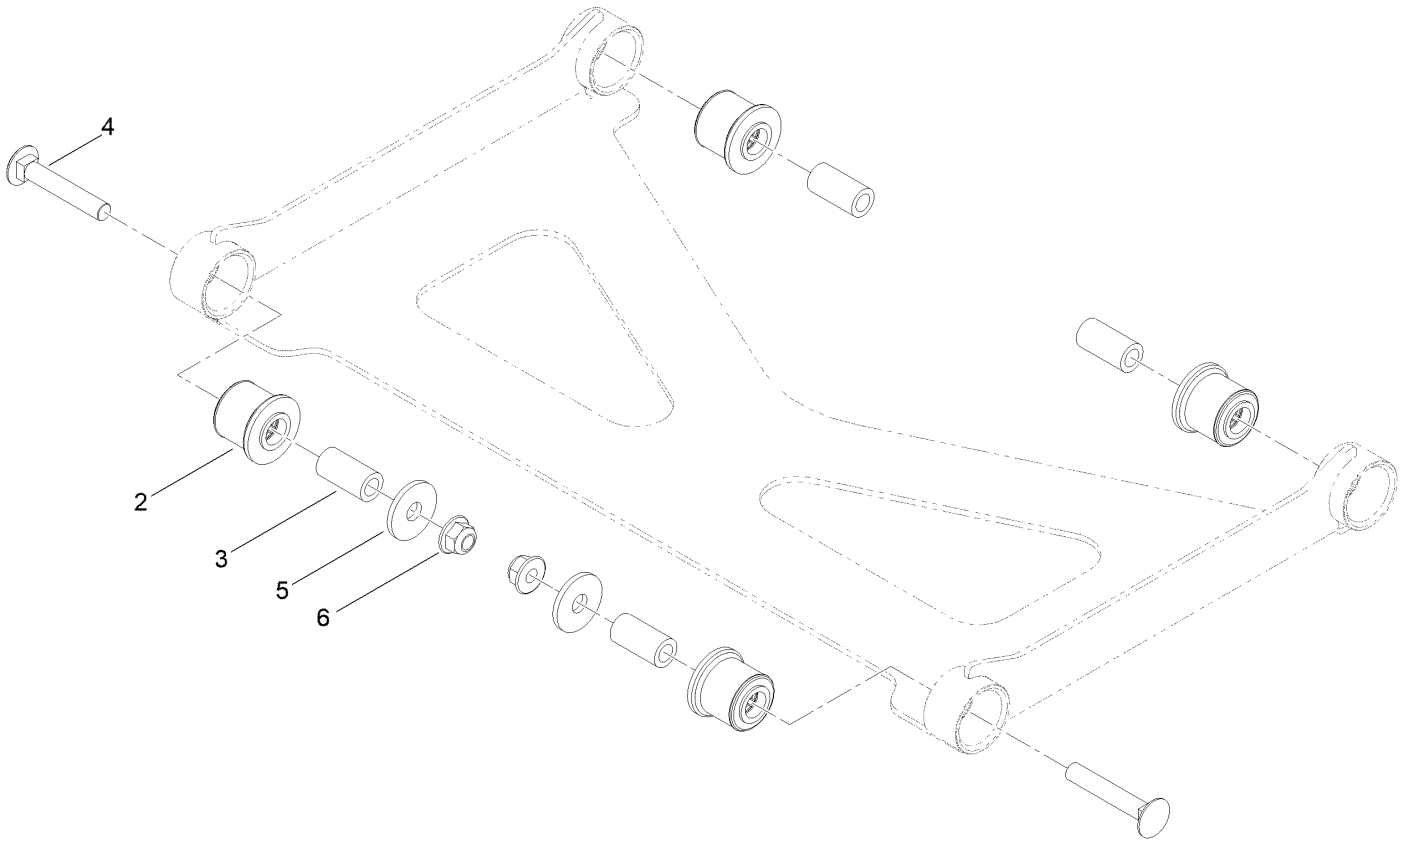

Deck Strut Assembly No. 140-1179 (continued)

Ref.	Part Number	Qty.	Description
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI

Engine, Clutch and Muffler Assembly

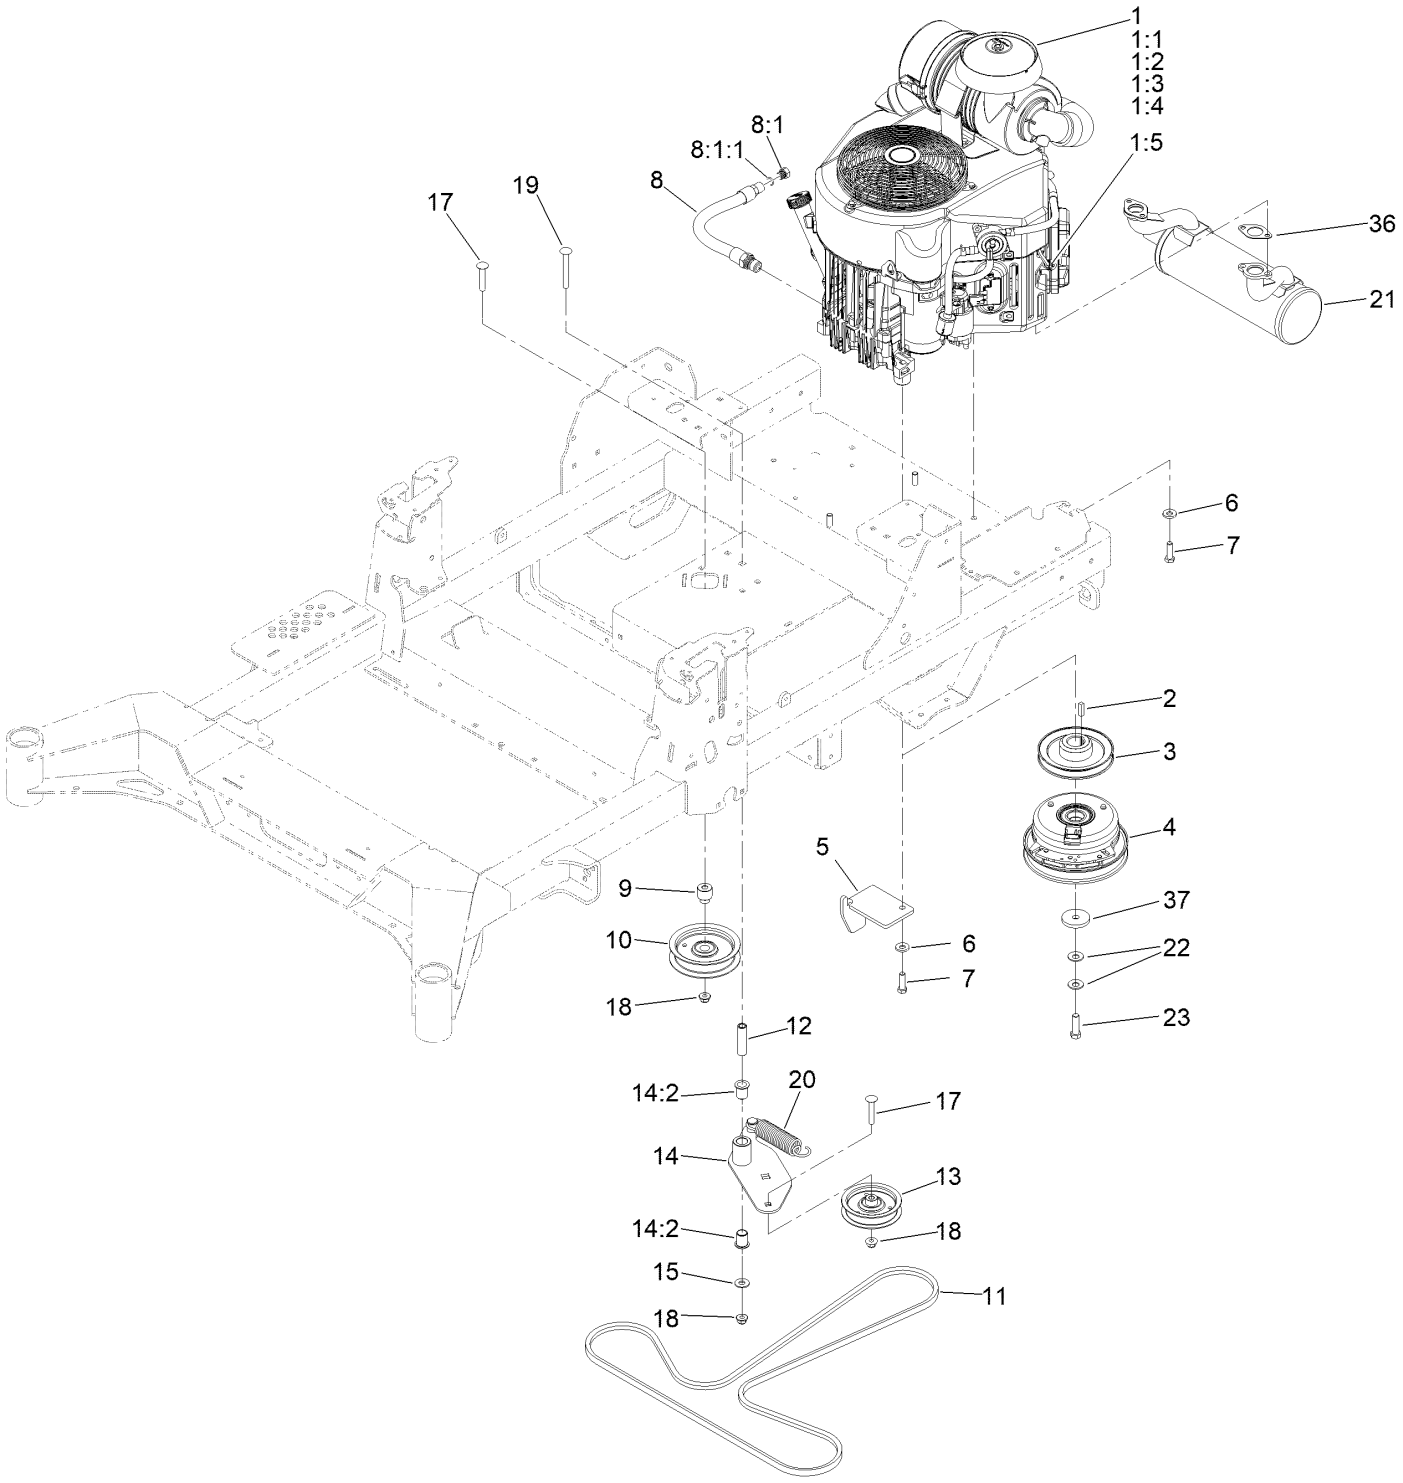


Engine, Clutch and Muffler Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx730V ▲◆
1:1		1	Filter-Oil ●▲◆
1:2		1	Filter-Fuel ●▲◆
1:3		1	Element-Filter, Air (Inner) ● ▲◆
1:4		1	Element-Filter, Air (Outer) ● ▲◆
1:5	92-2153	2	Plug-Spark
2	1-807259	1	Key
3	126-5358	1	Sheave (W/Hub)
4	147-2401	1	Clutch 6.75, 105 Ftlb, 1.125 Dd
5	140-1190	1	Anchor-Clutch
6	98-5975	4	Washer-Belleville
7	323-7	4	Screw-HH
8	116-4924	1	Engine Oil Drain Hose ASM
8:1	353-508	1	Plug-HH ■
8:1:1	237-42	1	O-Ring
9	126-7684	1	Bushing-Idler
10	132-4718	1	Pulley-Idler, Flat
11	145-5727	1	Belt-V
12	139-6690	1	Bushing, Idler Pivot
13	140-4964	1	Pulley-Idler, Flat
14	145-5731	1	Idler Arm ASM
14:2	138-2573	1	Bushing-Flange
15	3256-4	1	Washer-Flat
17	117-9971	2	Bolt-Carriage
18	104-8301	3	Nut-HF, NI
19	3231-42	1	Screw-CARR
20	138-7264	1	Spring-Extension
21	126-4360	1	Muffler
22	1-603610	2	Washer-Spring
23	109-9761	1	Screw-HH
36	1-653313	2	Gasket-Exhaust
37	109-6919	1	Washer-Plain

● Not illustrated
▲ Not serviced separately
■ Torque to 24-26 ft-lb
◆ Obtain parts from www.kawpower.com


Seat Suspension Assembly

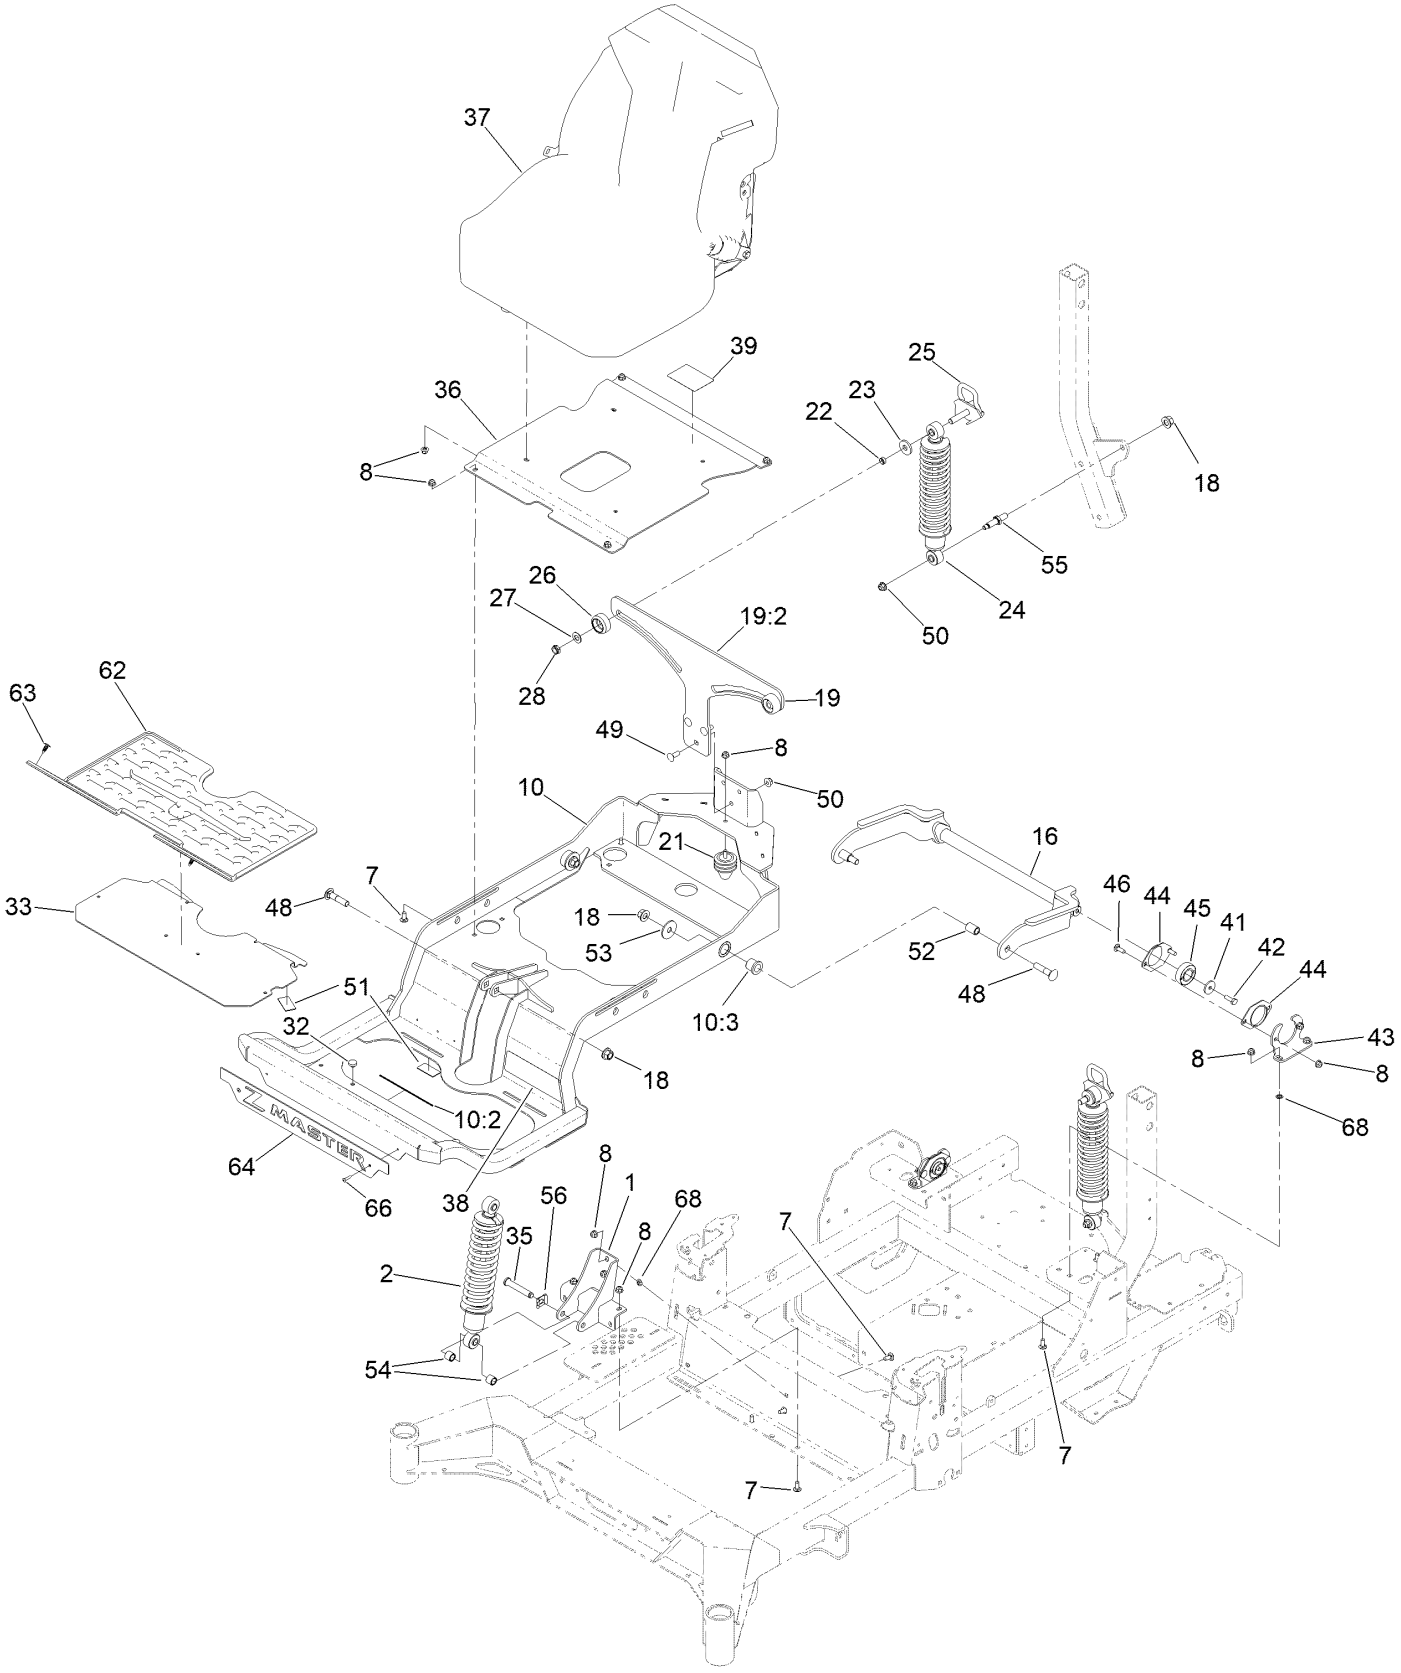

Seat Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description
1	145-7036-03	1	Mount-Shock, Lower [black]
2	136-1719	1	Shock ASM-Front
7	3230-23	8	Bolt-CARR
8	104-8300	21	Nut-HF, NI
10	147-4978	1	Subframe ASM
10:2	132-0871	1	Decal-Danger
10:3	127-6745	2	Bushing-Flange
16	127-6754-03	1	Arm-Trailing
18	99-5107	5	Nut-HF Nylock
19	144-2602	1	Bracket-Mounting
19:2	132-5067	1	Decal-Adjustment, Ride
21	126-5491	1	Isolator
22	133-5109	2	Bearing-Sleeve
23	131-4699	2	Washer-Plastic
24	133-1815	2	Shock/Spring ASM
25	136-9017	2	Cam Lock ASM
26	136-5636	2	Knob-Lock, Cam
27	3-6803	2	Washer-Adjusting
28	3296-45	2	Nut-Hex
32	1-513658	2	Bumper
33	144-0381-01	1	Floorpan
35	126-9181	1	Pin-Clevis
36	140-1197-03	1	Pan-Seat
37	147-2383	1	Seat ASM-Standard
38	144-0437	1	Decal-Myride
39	144-2669	1	Decal-Service Aid
41	105-3048	2	Washer-Flat
42	116-0648	2	Screw-HH, Thd Lock
43	127-6759-03	2	Bracket-Bearing
44	127-6743	4	Housing-Bearing, Flange
45	1-653346	2	Bearing
46	3230-10	8	Bolt-CARR
48	127-6768	3	Screw-CARR
49	3231-22	3	Screw-CARR
50	104-8301	5	Nut-HF, NI
51	130-0733	4	Pad-Rubber
52	127-6751	2	Spacer-Aluminum
53	86-1990	2	Washer
54	140-4869	2	Spacer-Tube
55	133-4401	2	Bolt-Shoulder
56	138-8491	1	Clip-Pin
62	144-0355	1	Floormat-Myride
63	117-2382	2	Plug-Plastic
64	147-4956-03	1	Plate-Badge
66	130-8451	2	Rivet-Trifold
68	117-2749	6	Nut-Push


Seat Assembly No. 147-2383

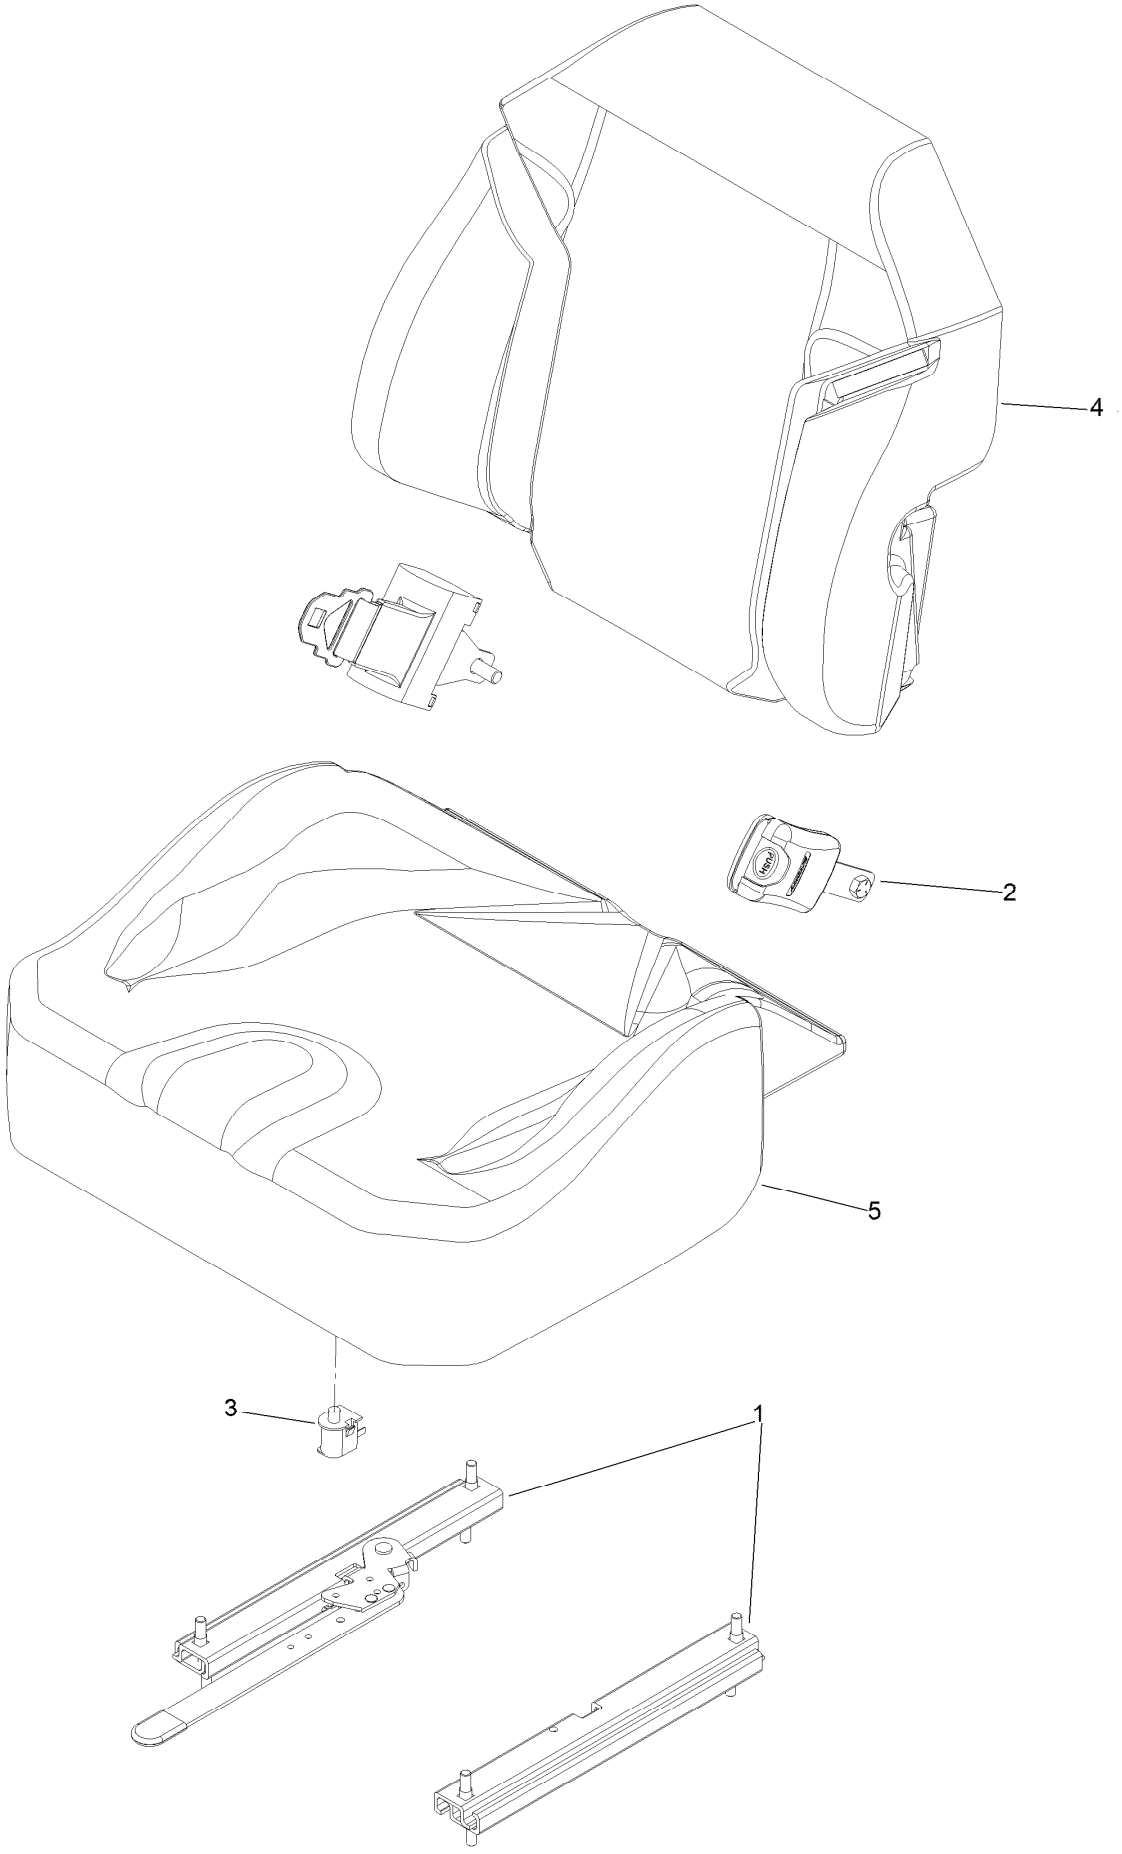

Seat Assembly No. 147-2383 (continued)

Ref.	Part Number	Qty.	Description
1	147-7883	1	Seat Track Kit
2	130-2854	1	Seat Belt Kit
3	82-2190	1	Switch-Bail
4	147-7367	1	Cover-Back, Seat
5	147-7369	1	Cover-Bottom, Seat


Decal Assembly

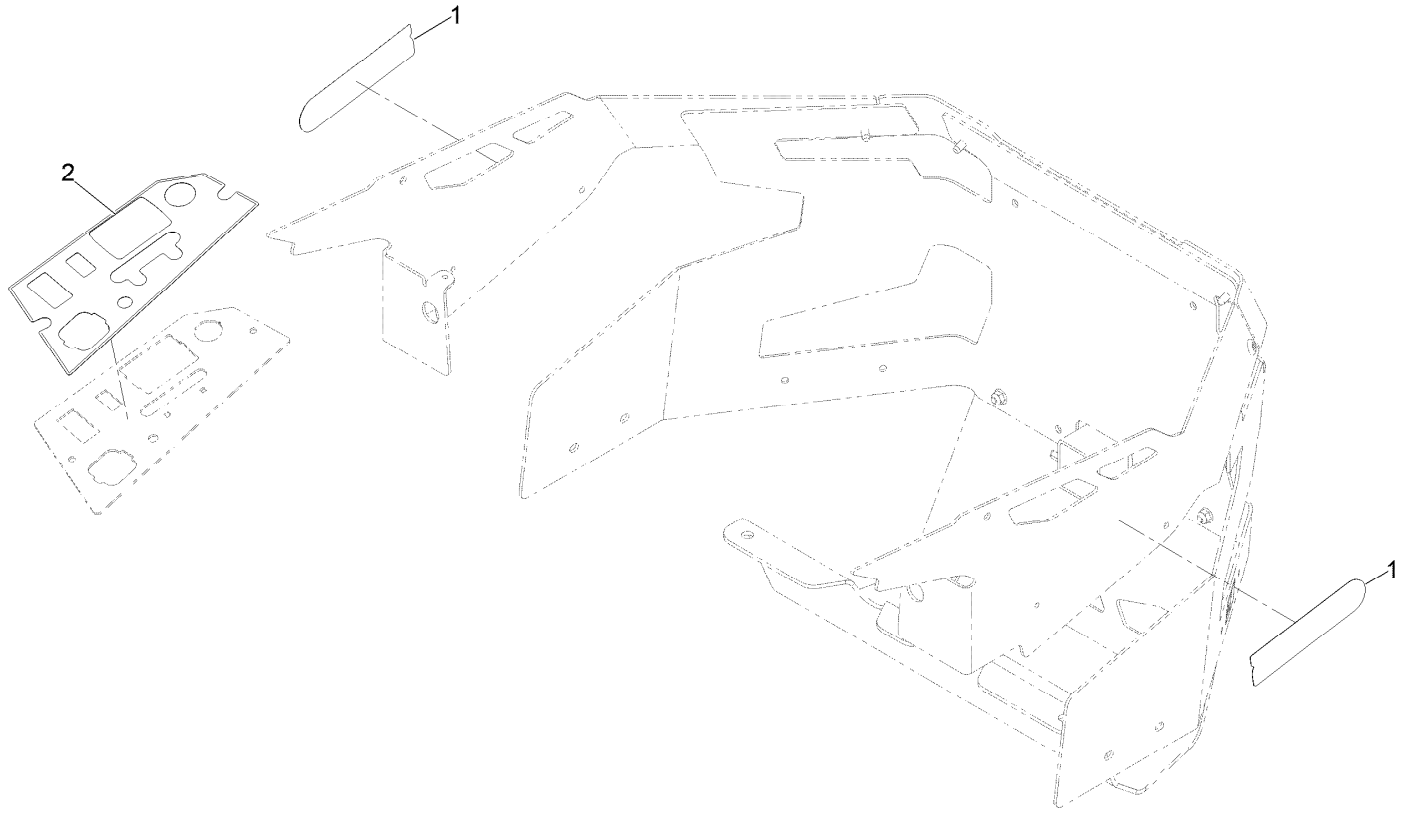

Decal Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
1	145-8407	2	Decal-2000 Series
2	147-4953	1	Decal-Panel, Control


Deck Assembly

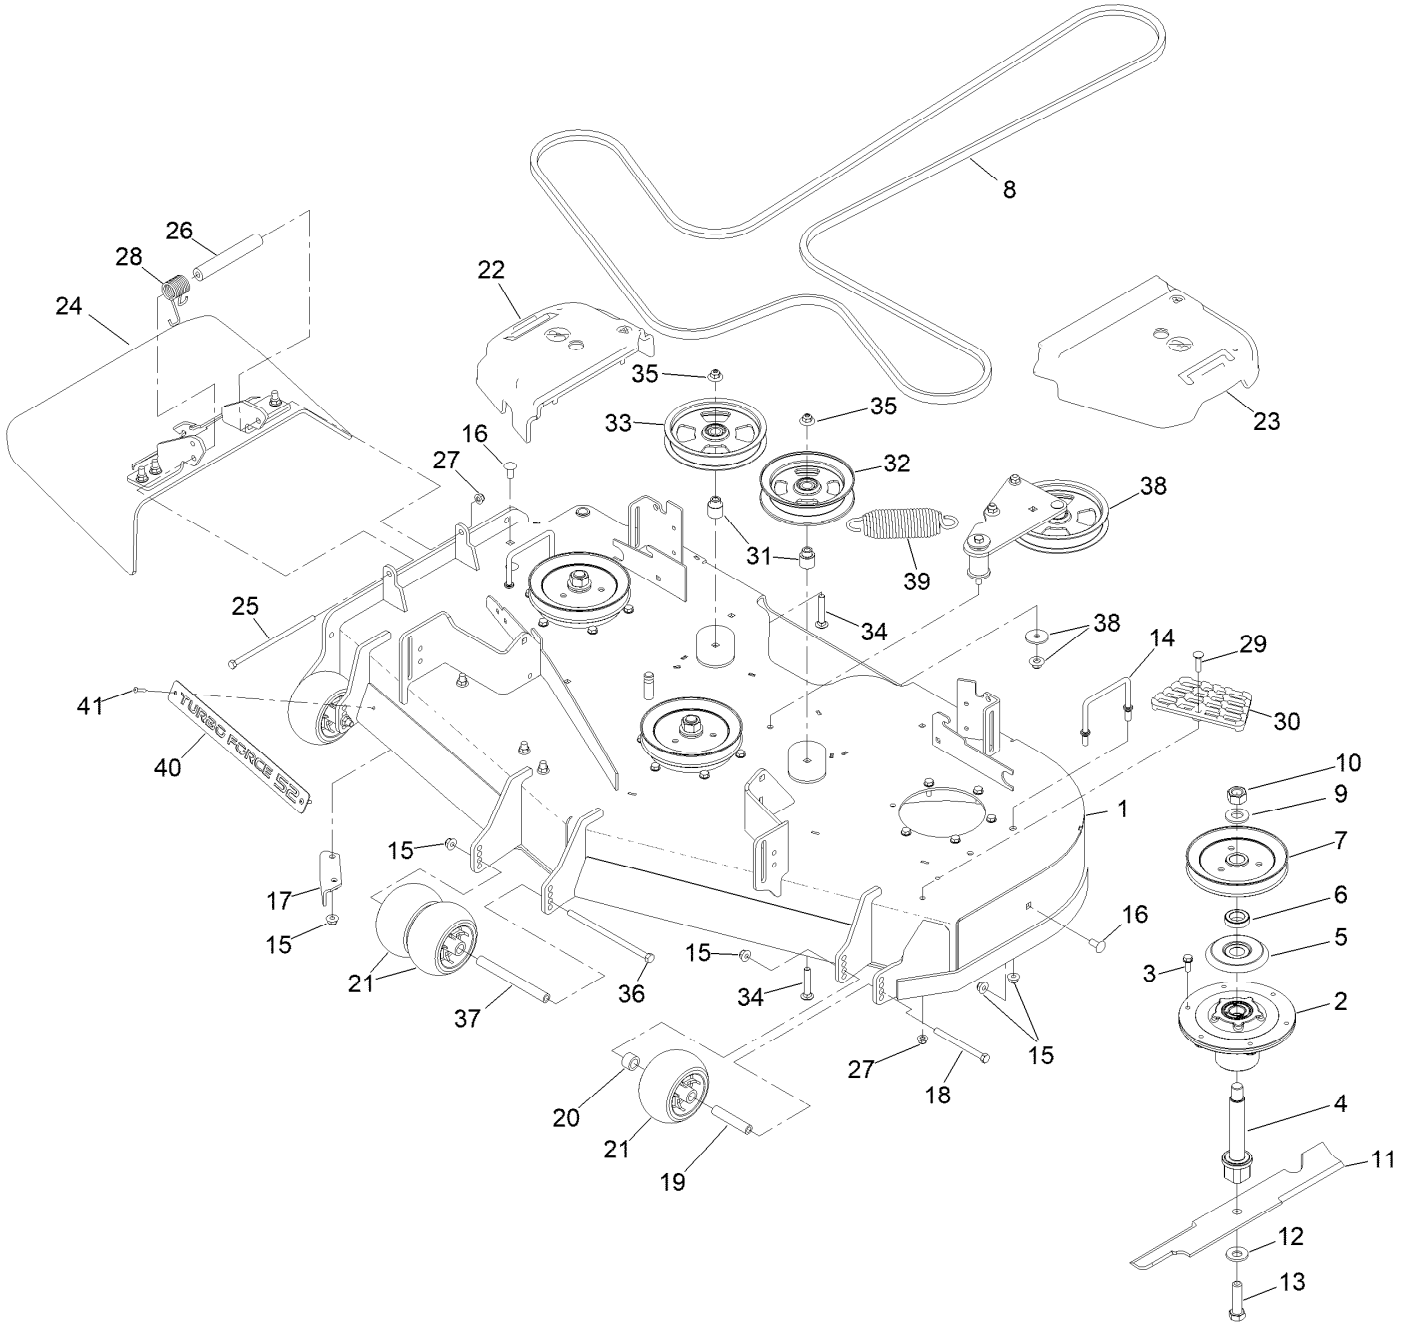

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	147-7372	1	Deck Decal ASM
2	139-2357	3	Spindle ASM
3	32144-41	18	Screw-Taptite
4	133-2126	3	Shaft-Spindle
5	117-7210	3	Shield-Bearing
6	147-2381	3	Spacer-Pulley
7	138-6058	3	Sheave-Blade Drive 6.50
8	144-0356	1	Belt-V
9	103-2802	3	Washer
10	116-7306	3	Nut-Hex
11	133-2134	3	Blade-Rotary, 18.0In (Hi Flow)
12	125-1736	3	Washer-Belleville
13	51-4060	3	Screw-Blade
14	109-6982	2	Wireform-Cover
15	104-8301	15	Nut-HF, NI
16	3231-27	8	Screw-CARR
17	107-8541-01	1	Baffle-Discharge
18	323-23	2	Screw-HH
19	133-2129	2	Tube-Shafting
20	133-2128	2	Tube-Spacer
21	1-603299	4	Roller-Scalp, Anti
22	109-6935	1	Cover-Belt, RH
23	109-6936	1	Cover-Belt, LH
24	144-2635	1	Rubber Deflector ASM
25	322-50	1	Screw-HH
26	105-4622	1	Spacer
27	104-8300	2	Nut-HF, NI
28	108-4052	1	Spring-Torsion
29	3230-3	1	Screw-CARR
30	126-4781-03	1	Step-Deck
31	139-8061	2	Bushing, Idler
32	132-9425	1	Pulley-Idler, Flat
33	132-9424	1	Pulley-Idler, Flat
34	3231-7	2	Screw-CARR
35	109-6658	2	Nut-Flange, NI
36	108-5388	1	Screw-HH
37	98-5967	1	Spacer-Wheel
38	139-1087	1	Idler Arm ASM
39	116-6317	1	Spring-Extension
40	147-4975-03	1	Plate-Turbo Force
41	130-8451	2	Rivet-Trifold

Deck Decal Assembly No. 147-7372

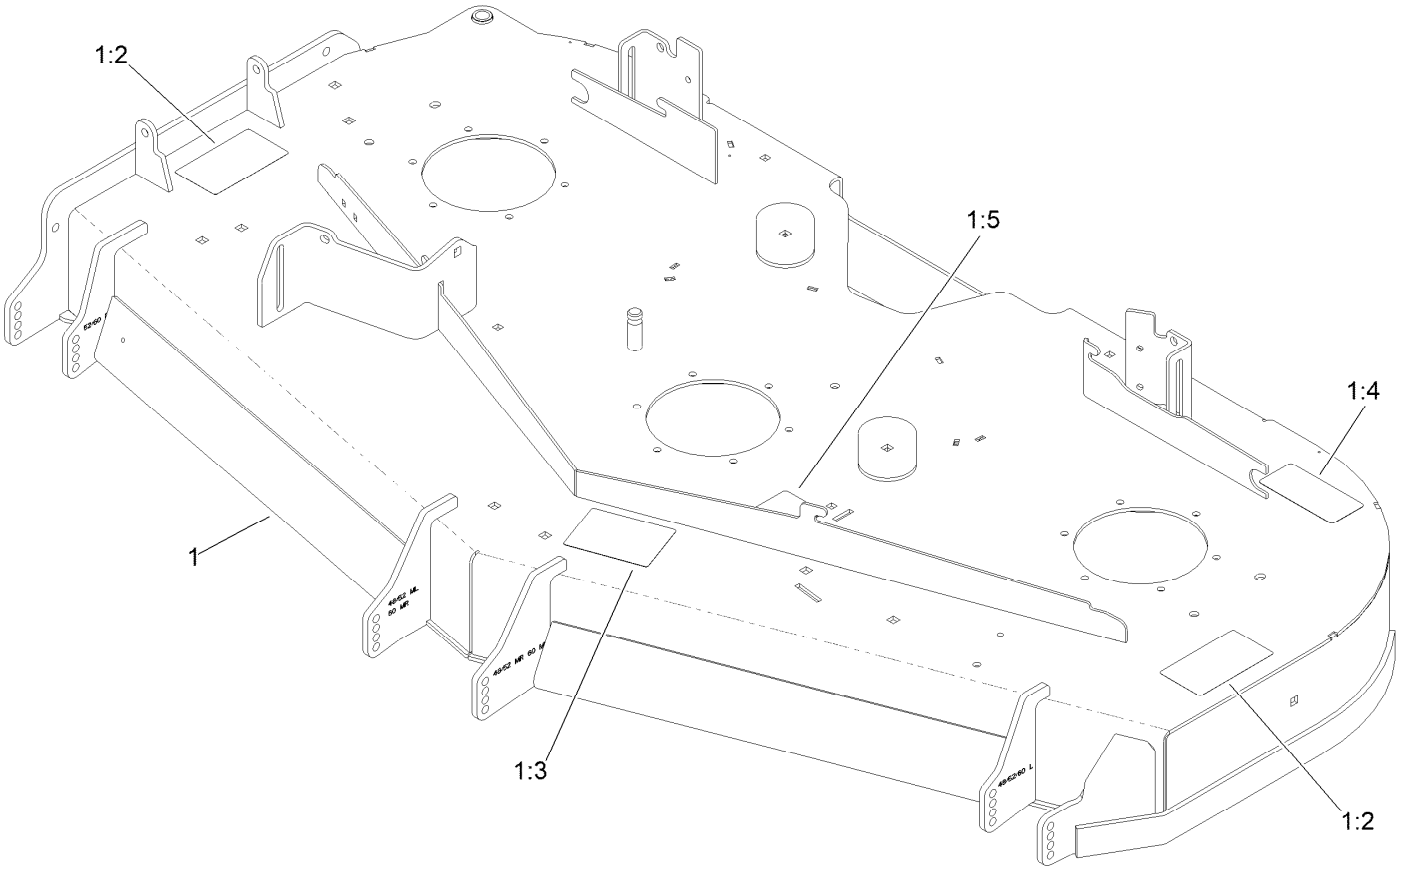


Deck Decal Assembly No. 147-7372 (continued)

Ref.	Part Number	Qty.	Description
1		1	ASM-Deck W/Decals ●
1:2	117-3848	2	Decal-Danger
1:3	127-0326	1	Decal-Scalp, Anti
1:4	93-7818	1	Decal-Torque, Blade Bolt
1:5	109-6035	1	Decal-Routing, Belt

● Not serviced separately


Spindle Assembly No. 139-2357

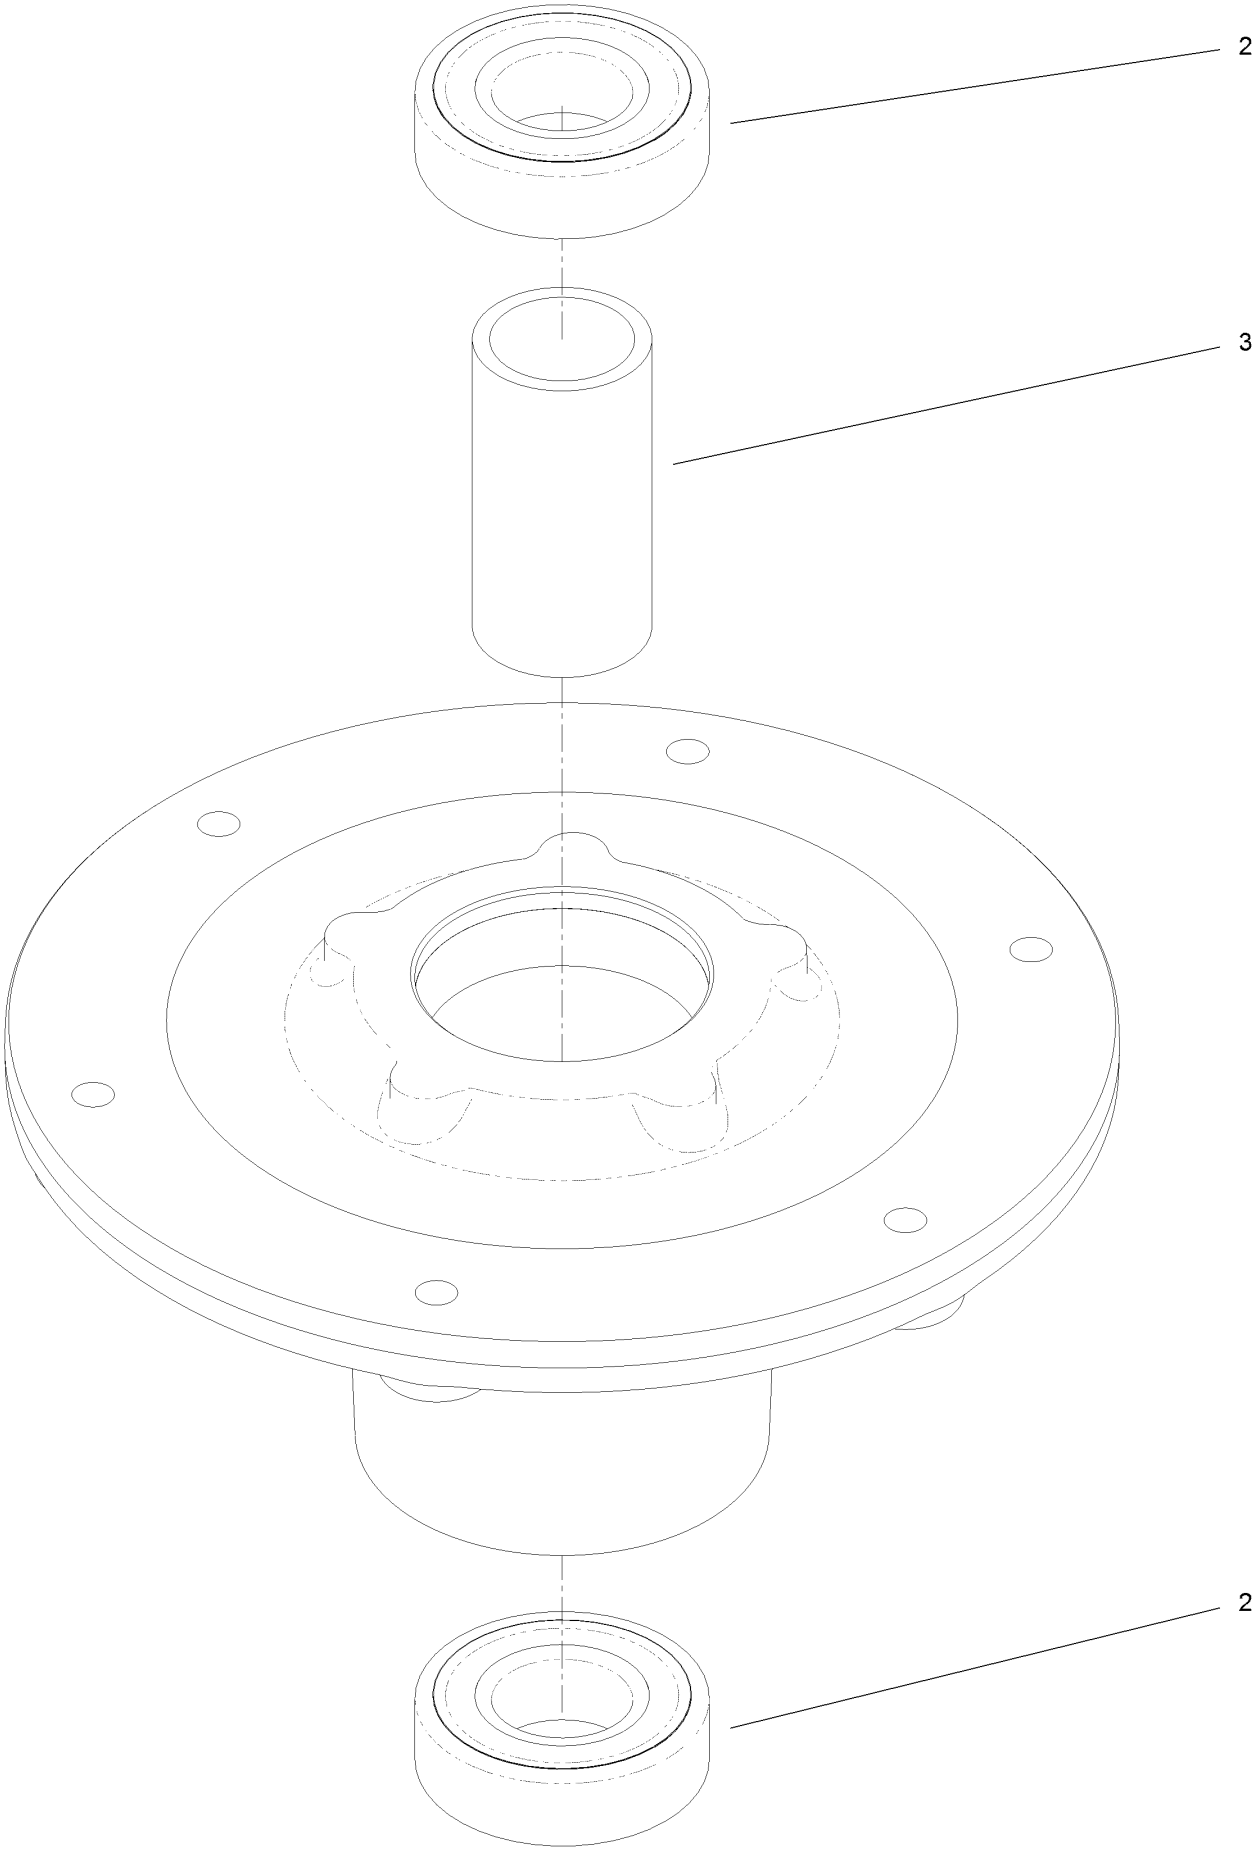

Spindle Assembly No. 139-2357 (continued)

Ref.	*Part Number*	*Qty.*	*Description*
2	116-0720	2	Bearing-Ball
3	138-7220	1	Spacer-Bearing


Deflector Assembly No. 144-2635

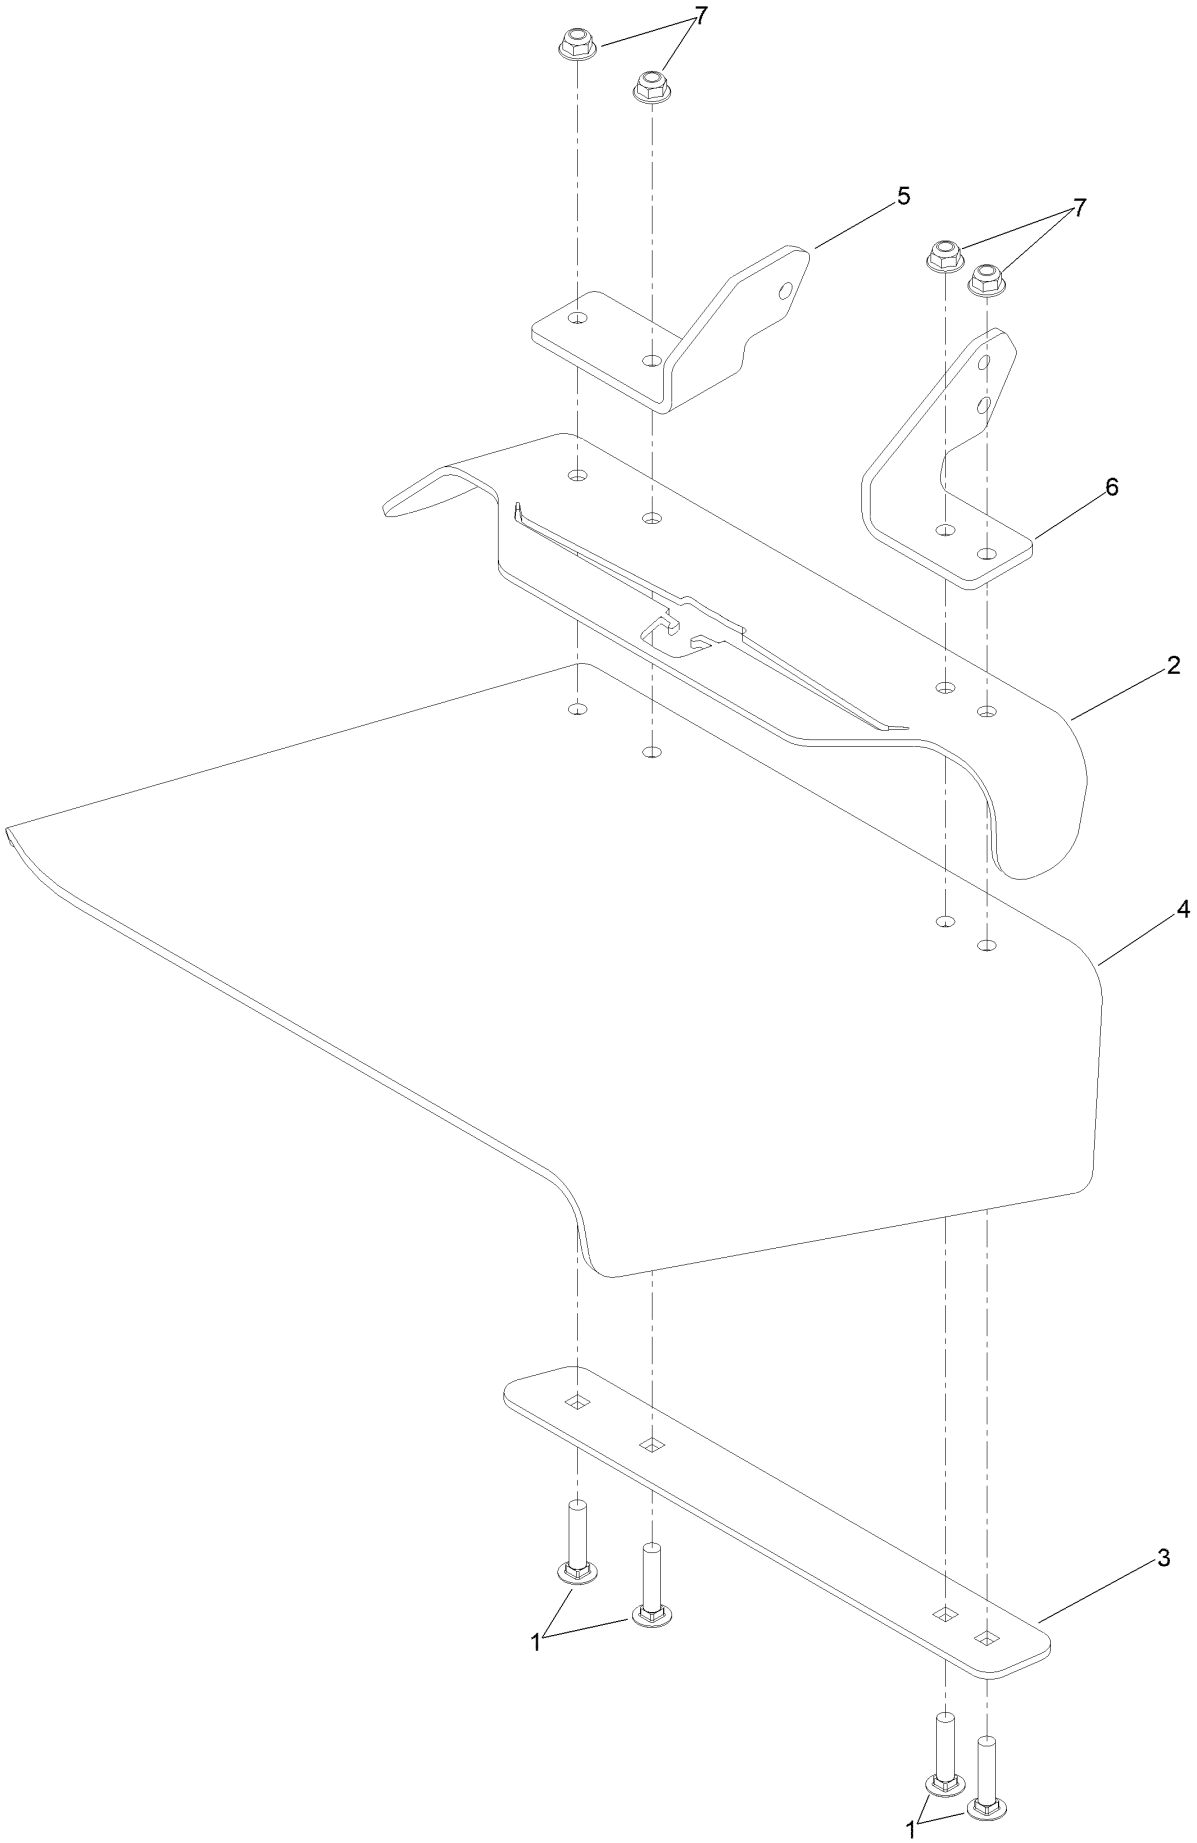

Deflector Assembly No. 144-2635 (continued)

Ref.	Part Number	Qty.	Description
1	3231-5	4	Screw-CARR
2	161-9815-01	1	Plate-Deflector Mount
3	106-3248-03	1	Strap-Discharge
4	161-3464	1	Deflector-Deck, Rubber
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

Idler Arm Assembly No. 139-1087

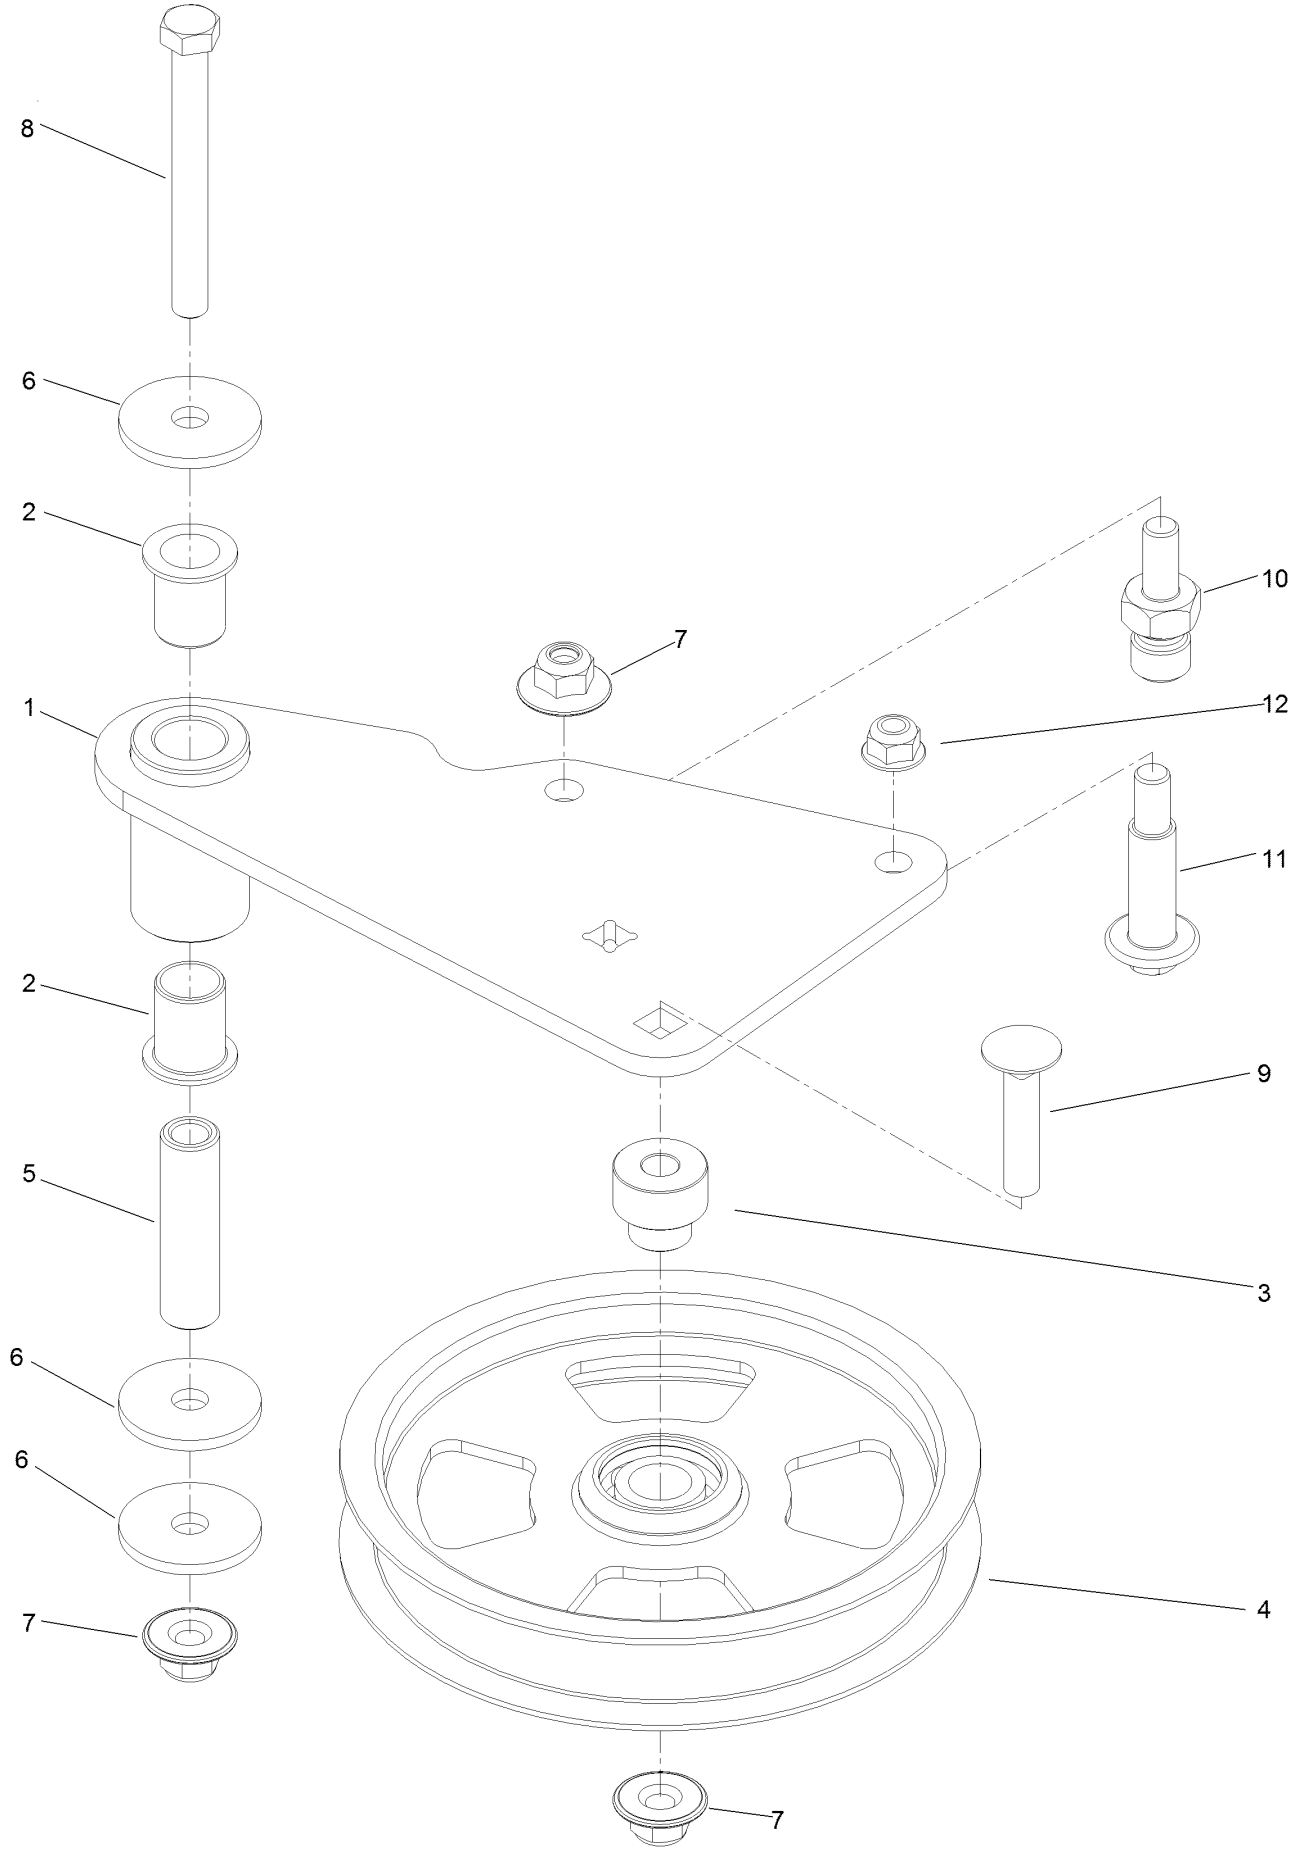

Idler Arm Assembly No. 139-1087 (continued)

Ref.	Part Number	Qty.	Description
1	139-1086	1	Idler Arm ASM
2	138-2573	2	Bushing-Flange
3	139-8060	1	Bushing, Idler
4	132-9424	1	Pulley-Idler, Flat
5	139-6690	1	Bushing, Idler Pivot
6	1-213069	3	Washer
7	109-6658	3	Nut-Flange, NI
8	323-15	1	Screw-HH
9	3231-5	1	Screw-CARR
10	132-4729	1	Anchor-Spring, Short
11	136-9028	1	Bolt-Shoulder, HWH
12	104-8301	1	Nut-HF, NI

Attachments and Accessories

For 77291 — 52in Z Master Professional 2000 Series Riding Mower

Product Name	Model/Part
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Striper Kit	126-7882
Jack Kit	127-6666
Blade-Rotary, 18.0in (Hi Flow)	133-2134
Blade-Rotary, Atomic 18.0	133-2159
Blade-Rotary, Recycling 18.0in	133-2162
Blade (6 Pack) 18in Hi Flow	133-2175
Blade (6 Pack) 18in Recycle	133-2178
Blade (6 Pack) 18in Atomic	133-2181
Spark Arrestor, 1.25 I.D.	137-8098
Tweel-Turf Tire	139-3649
Recycler Kit	139-6653
Semi Pneumatic Wheel and Tire Assembly, 13x6.50-6	140-4896
Wheel And Tire Asm	140-7959
Trimmer Mount	144-2665
Jack Mount Kit	144-2676
Hardtop Sun Canopy	144-3719
Handle Extension Kit	145-3615
13x6.5n6 Caster Tweel Asm	147-6294
Bucket Mount Kit, Z Master 2000 or 4000 Series Riding Mower	147-6345
Universal Mount Kit, Z Master 2000 or 4000 Series Riding Mower	147-6346
Baffle Kit, Turbo Force 52in	147-7361
Arm Rest Kit	147-7397
Electric Deck Lift Kit	147-7867
2in Reciever Hitch Kit	161-2810
Fuel Pickup with Screen Kit	161-6806
Bagger Kit, Z Master 2000 / 4000	78439
Z 4000 52in Completion Kit	78465

Notes:



Count on it.