

LAWN-BOY®

Gold Series® Lawnmower

Model No. 10654 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute, and Rear Door Assembly 3	Carburetor Assembly Honda Model No. Gcv160a sta1 16
Rear Axle and Low Wheel Assembly 4	Air Cleaner Assembly Honda Model No. Gcv160a sta1 17
Front Axle Assembly 5	Muffler Assembly Honda Model No. Gcv160a sta1 18
Engine and Blade Assembly 6	Flywheel Assembly Honda Model No. Gcv160a sta1 19
HP 2 Bail Handle Assembly 7	Control Assembly Honda Model No. Gcv160a sta1 20
Rear Bag Assembly 8	Choke Base Assembly Honda Model No. Gcv160a sta1 21
Cylinder Barrel Assembly Honda Model No. Gcv160a sta1 9	Top Cover Assembly Honda Model No. Gcv160a sta1 22
Oil Pan Assembly Honda Model No. Gcv160a sta1 10	Label Assembly Honda Model No. Gcv160a sta1 23
Crankshaft Assembly Honda Model No. Gcv160a sta1 11		
Piston and Connecting Rod Assembly Honda Model No. Gcv160a sta1 12		
Camshaft Pulley Assembly Honda Model No. Gcv160a sta1 13		
Recoil Starter Assembly Honda Model No. Gcv160a sta1 14		
Fan Cover Assembly Honda Model No. Gcv160a sta1 15		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes


- ❶ Not serviced separately
- ❷ Obtain parts from your local Honda dealer.

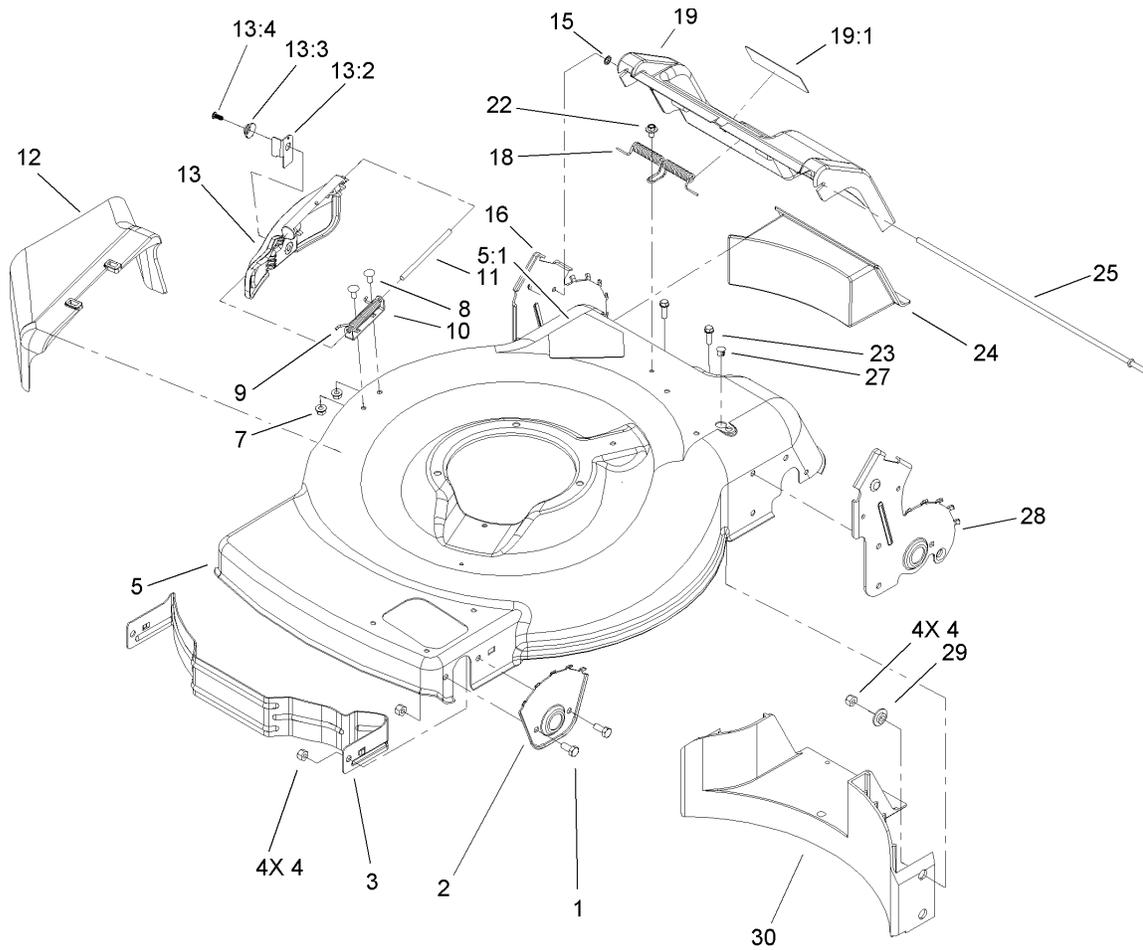

Deck, Side Chute, and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-Hoc, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	106-8343	1	Housing ASM
5:1	105-6838	1	Decal-Danger
7	32128-32	2	Nut-HHF
8	3229-11	2	Screw-CARR
9	99-5293	1	Spring-Torsion
10	99-5292	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Side Discharge
13	106-8394	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Pushnut
16	107-0790	1	RH Rear HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	106-8389	1	Door ASM-Service
19:1	106-8388	1	Decal-Warning, Door
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH
24	105-1842	1	Plug-Discharge, Rear

Ref	Part No.	Qty.	Description
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	107-0783	1	LH Rear HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-3047	1	Baffle-Rear

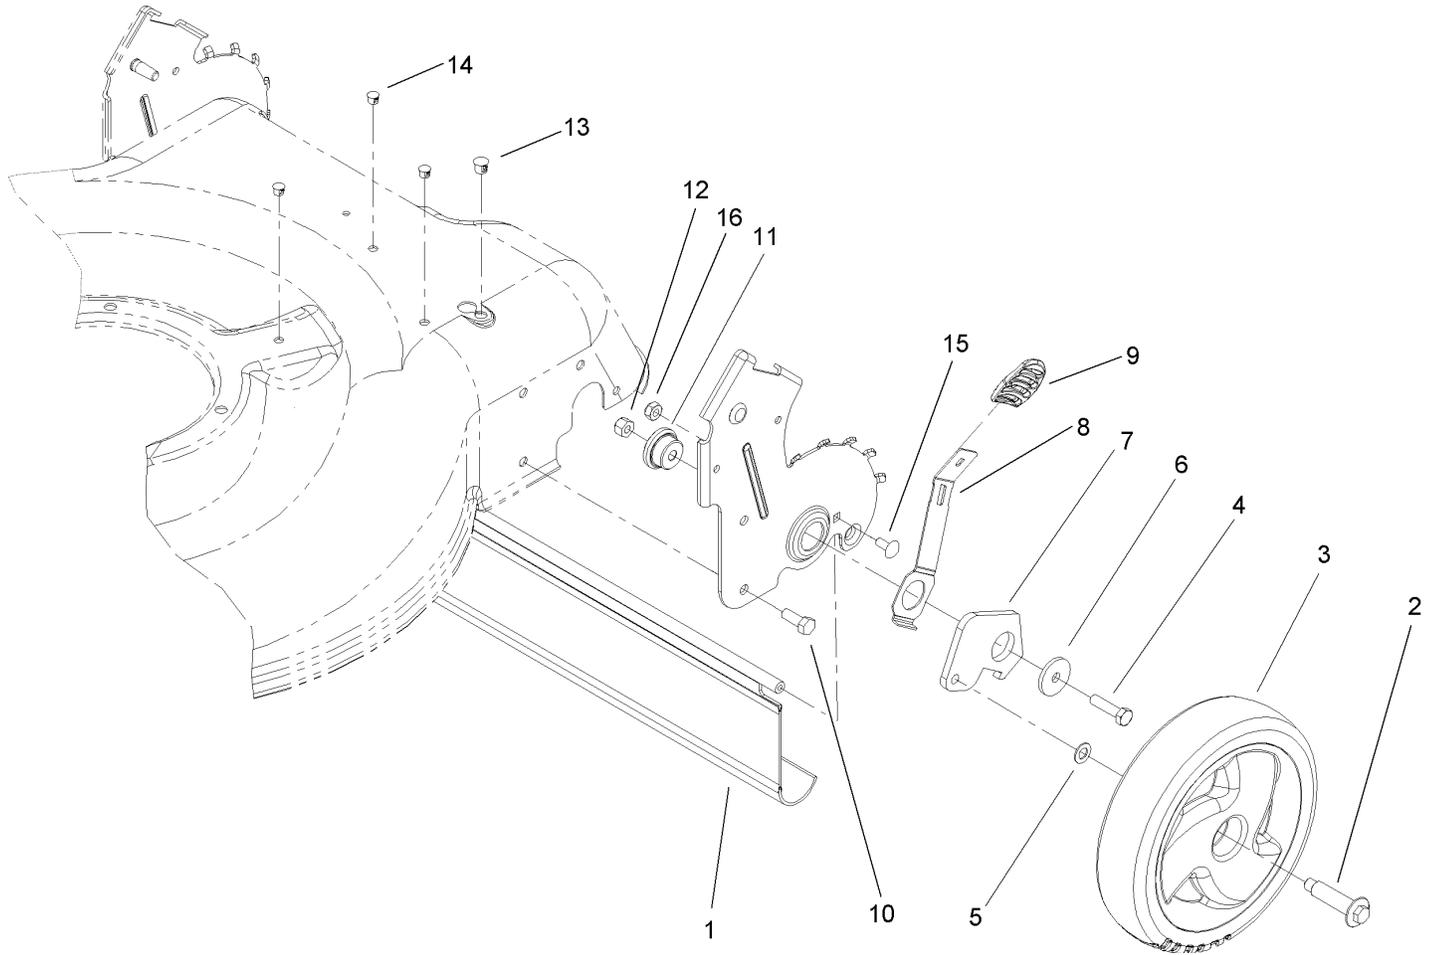

Rear Axle and Low Wheel Assembly


Ref	Part No.	Qty.	Description
1	105-1843	1	Shield-Trailing
2	614650	2	Bolt-Shoulder
3	107-1916	2	8in Wheel ASM
4	322-6	2	Screw-HH
5	40-1940	2	Washer
6	105-3048	2	Washer-Flat
7	105-1819	2	Arm-Pivot, Rear
8	105-1809	2	Arm-Spring
9	107-1904	2	Knob-Lever, HOC
10	322-4	4	Screw-HH
11	105-1818	2	Bushing-Mount, HOC
12	3296-29	2	Nut-Lock, NI
13	104-9368	1	Plug-Dome
14	104-9373	3	Plug-Dome
15	3229-11	2	Screw-CARR
16	3296-16	2	Nut-Lock, NI

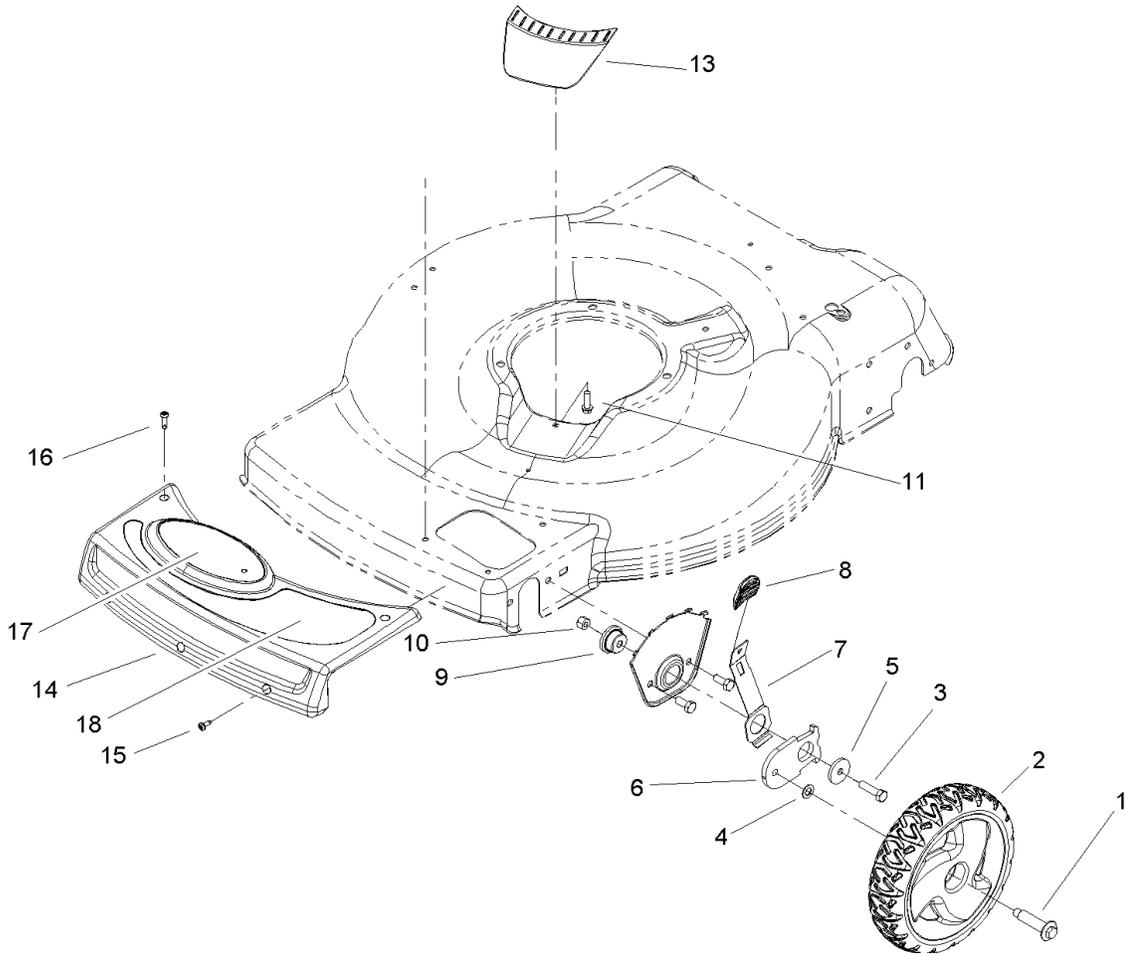

Front Axle Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	107-1916	2	8in Wheel ASM
3	322-6	2	Screw-HH
4	40-1940	2	Washer
5	105-3048	2	Washer-Flat
6	105-1807	2	Arm-Pivot, Front
7	105-1809	2	Arm-Spring
8	107-1904	2	Knob-Lever, HOC
9	105-1818	2	Bushing-Mount, HOC
10	3296-29	2	Nut-Lock, NI
11	46-8091	1	Screw-HWH
13	105-3005	1	Cover-Belt Opening
14	107-1908	1	Bumper-Wpm
15	105-6849	3	Screw-Thread Forming
16	105-6828	2	Screw
17	107-3764	1	Decal-Housing
18	107-3763	1	Decal-Housing

--	--	--	--

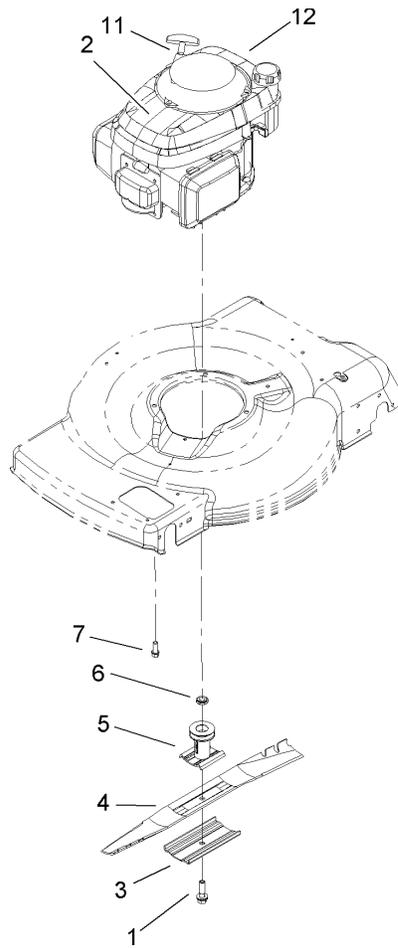


Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	107-3760	1	Decal-Recoil				
3	105-3029-03	1	Support-Blade				
4	104-8697-03	1	Blade-22 Inch				
5	106-3987	1	Blade Driver ASM				
6	106-3999	1	Spacer-Driver				
7	95-1726	3	Screw-Taptite				
11	92-1701	1	Stop-Rope				
12		1	Engine-Honda Model No.gcv 160a Sta1				

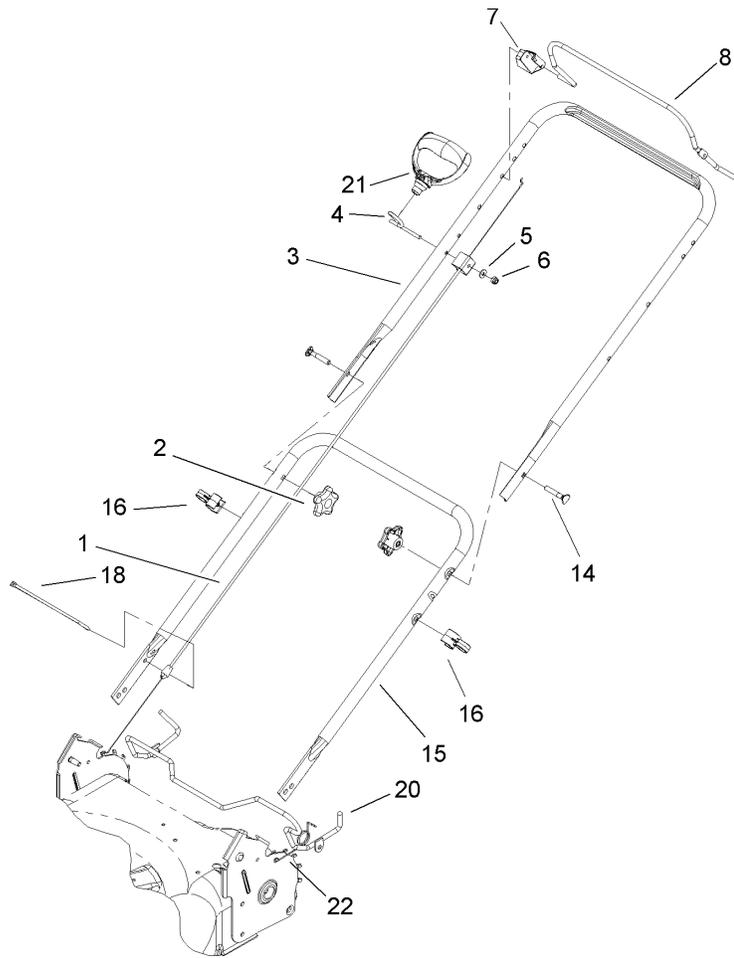

HP 2 Bail Handle Assembly


Ref	Part No.	Qty.	Description				
1	107-1903	1	Cable-Brake, Hp				
2	106-4161	2	Knob-Handle				
3	104-8680-05	1	Handle-Upper				
4	107-1935	1	Guide-Rope				
5	3256-1	1	Washer-Flat				
6	3296-73	1	Nut-Lock, NI				
7	107-0757	1	Stop-Pivot				
8	106-3991	1	Bail-Brake				
14	92-2260	2	Screw-Handle				
15	107-0784-05	1	Handle-Lower				
16	106-6805	1	Guide-Cable				
18	614249	1	Strap-Tie				
20	107-0768	1	Release Lever ASM				
21	106-8345	1	Handle-Recoil				
22	107-7472	1	Spring-Torsion				

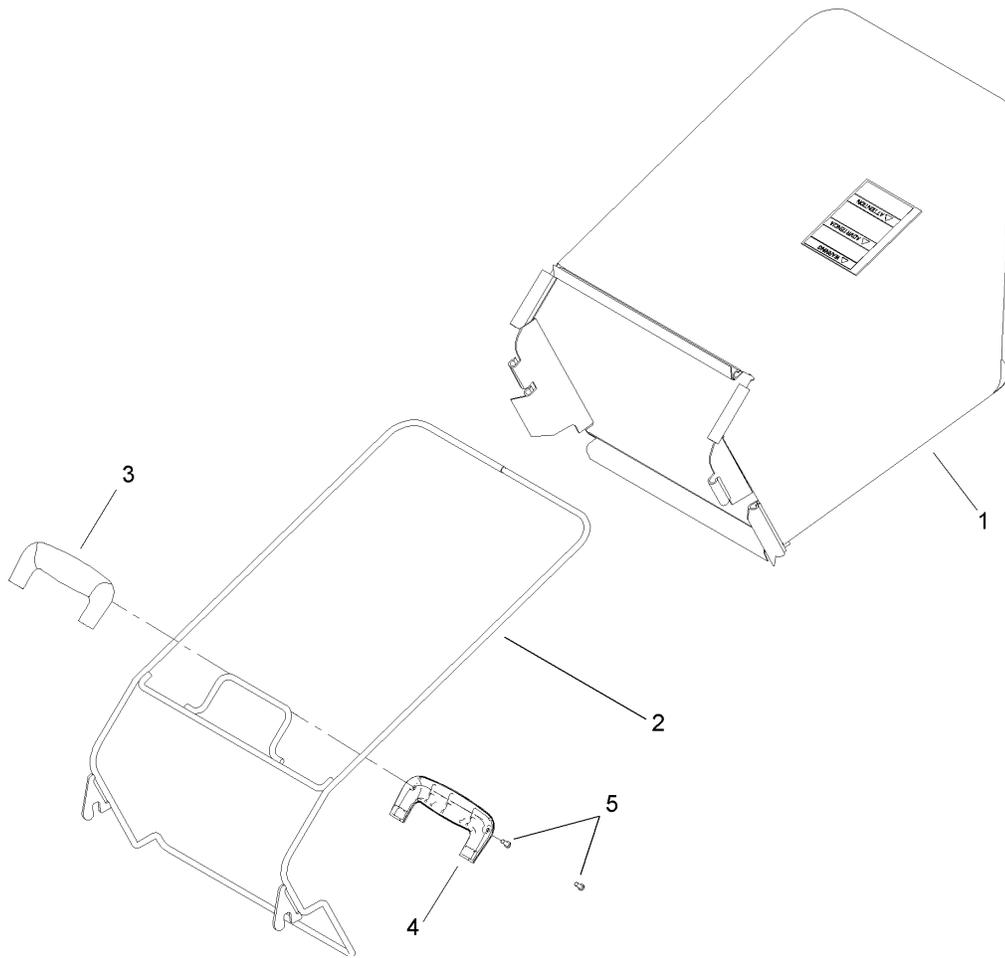

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	106-8392	1	Grass Bag ASM
2	105-6831-03	1	Brace Bag Frame ASM
3	107-1905	1	Handle-Bag, Top
4	107-1906	1	Handle-Bag, Bottom
5	32144-111	2	Screw-PPH


--	--	--	--

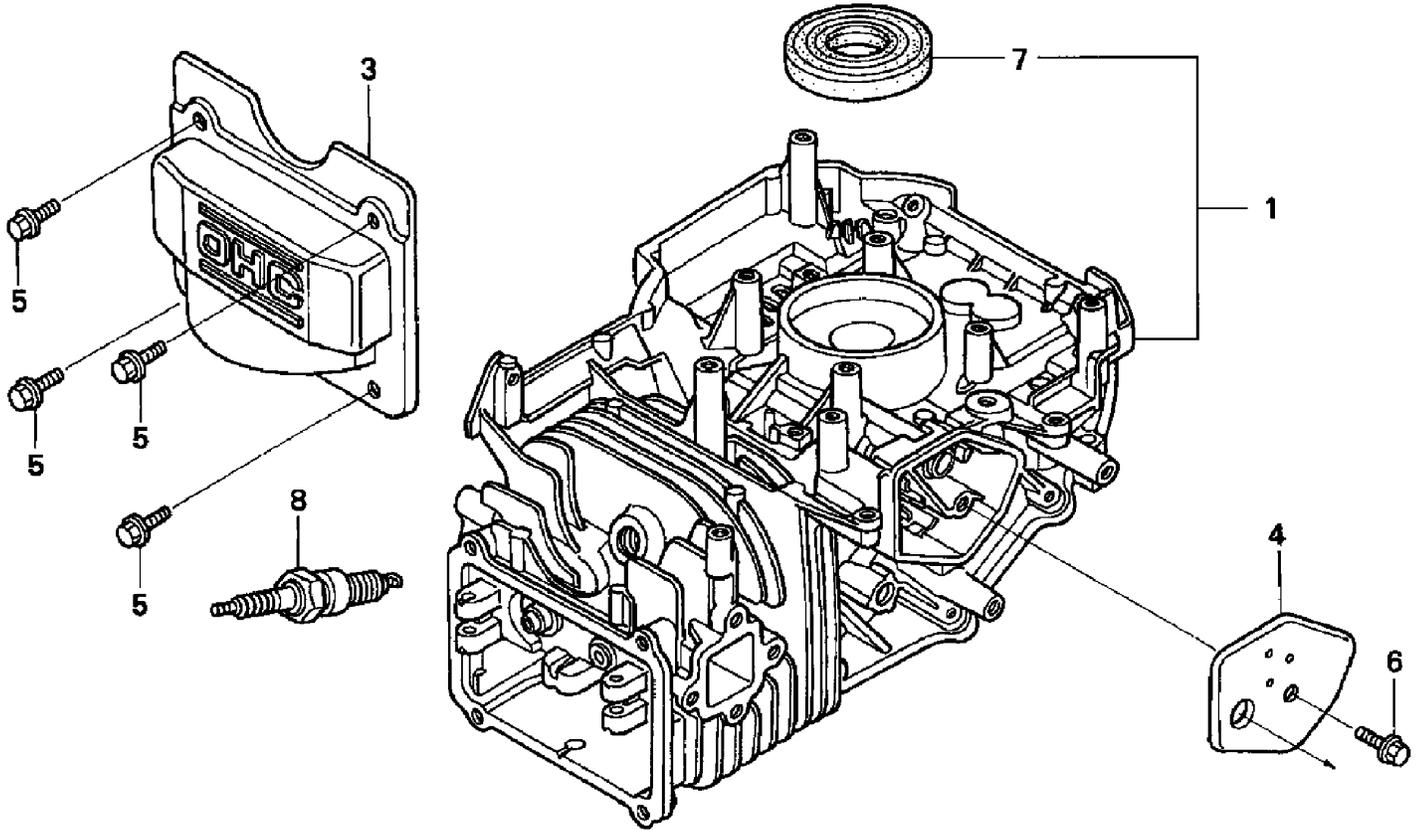

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Cylinder Barrel Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description				
2	12000-ZL8-415	1	Cylinder ASM (.010)				
3	12311-ZL8-000	1	Cover, Head				
4	12355-ZL8-000	1	Cover, Breather (Breather Valve Asm.)				
5	90013-883-000	4	Bolt-Flange (6x12) (Ct200)				
6	90014-952-000	1	Bolt, Flange (6x14)				
7	91201-ZL8-003	1	Oil Seal (25.4x62x6)				
8	98079-56846	1	Spark Plug (Bpr6es) (Ngk)				

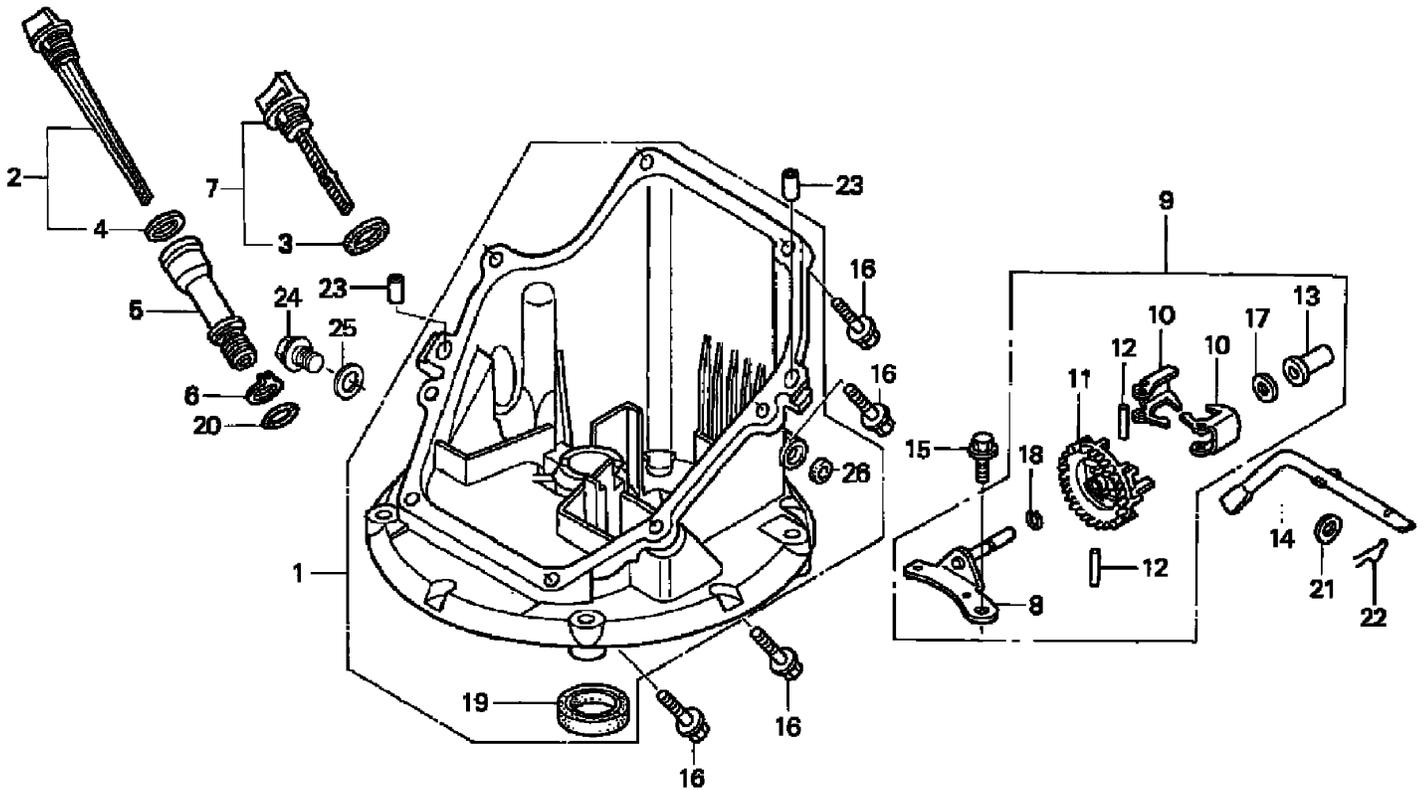


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL

Oil Pan Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
1	11300-ZM0-811	1	Pan Asm., Oil
2	15650-ZM0-801	1	Dipstick-Oil
4	15625-ZE6-000	1	Gasket, Oil Filler Cap
5	15631-ZM0-000	1	Extension-Oil Filler
6	15639-ZM0-000	1	Washer, Extension Lock
8	16508-ZM0-010	1	Shaft, Governor Holder
9	16510-ZM0-010	1	Governor Asm.
10	16511-ZL8-000	2	Weight, Governor
11	16512-ZM0-000	1	Holder, Governor Weight
12	16513-ZE1-000	2	Pin, Governor Weight
13	16531-ZE1-000	1	Slider, Governor
14	16541-ZM0-000	1	Shaft, Governor Arm
15	90014-952-000	1	Bolt, Flange (6x14)

Ref	Part No.	Qty.	Description
16	90121-952-000	8	Bolt, Flange (6x25)
17	90451-ZE1-000	1	Washer, Thrust (6mm)
18	90602-ZE1-000	1	Clip-Governor Holder
19	91202-ZL8-003	1	Oil Seal (28x41.25x6)
20	91356-MA6-005	1	O-Ring
21	94101-06800	1	Washer
22	94251-08000	1	Pin, Lock (8mm)
23	94301-08200	2	Pin, Dowel (8x20)

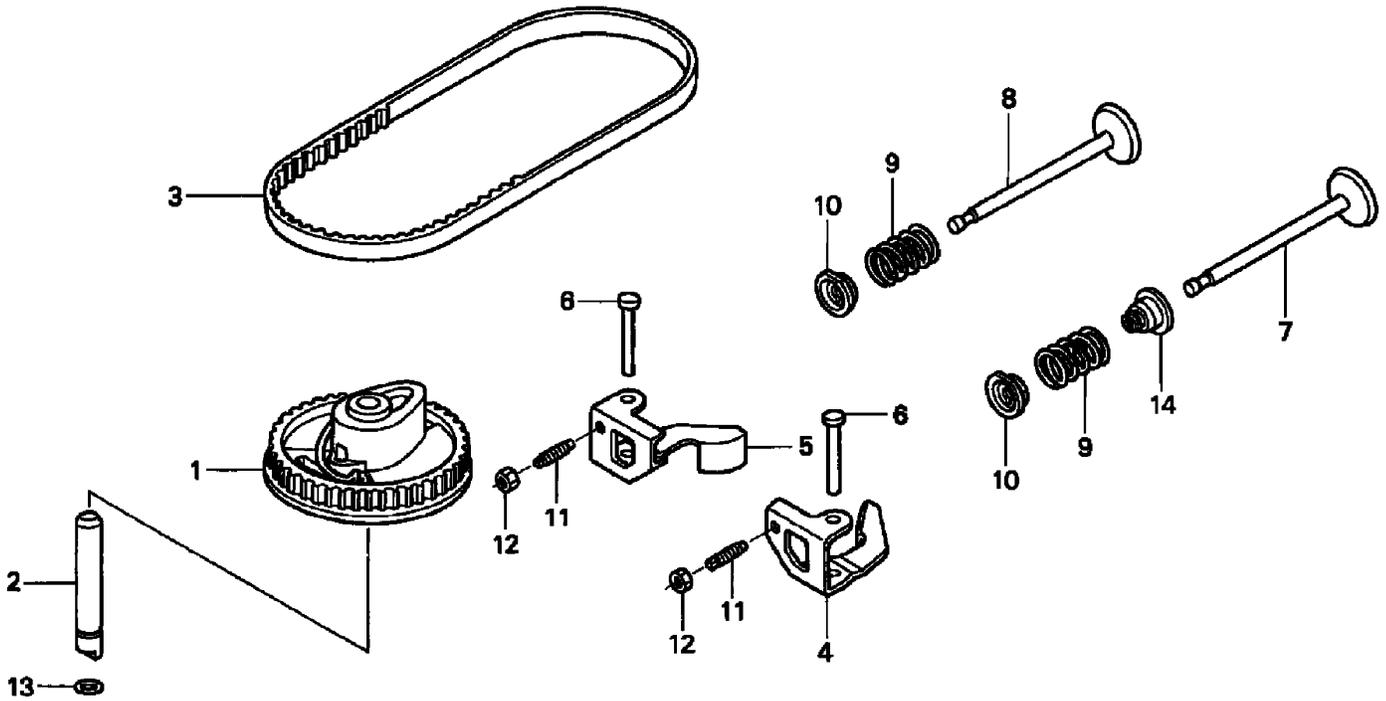


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Camshaft Pulley Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
1	14320-ZL8-010	1	Pulley, Camshaft
2	14324-ZL8-000	1	Shaft, Cam Pulley
3	14400-Z0J-014	1	Belt, Timing (84hu7 G-
4	14431-Z0J-000	1	Arm-In. Valve Rocker
5	14441-Z0J-000	1	Arm, Ex. Valve Rocker
6	14461-ZL8-000	2	Shaft, Rocker Arm
7	14711-ZL8-000	1	Valve, In.
8	14721-ZL8-000	1	Valve, Ex.
9	14751-ZL8-000	2	Spring, Valve
10	14771-Z0J-000	2	Retainer-Valve Spring
11	90012-333-000	2	Screw, Tappet Adj.
12	90206-001-000	2	Nut, Tappet Adj.
13	91301-ZM0-V31	1	O-Ring (6.8x1.9)

Ref	Part No.	Qty.	Description
14	12209-ZM0-003	1	Seal, Valve Stem

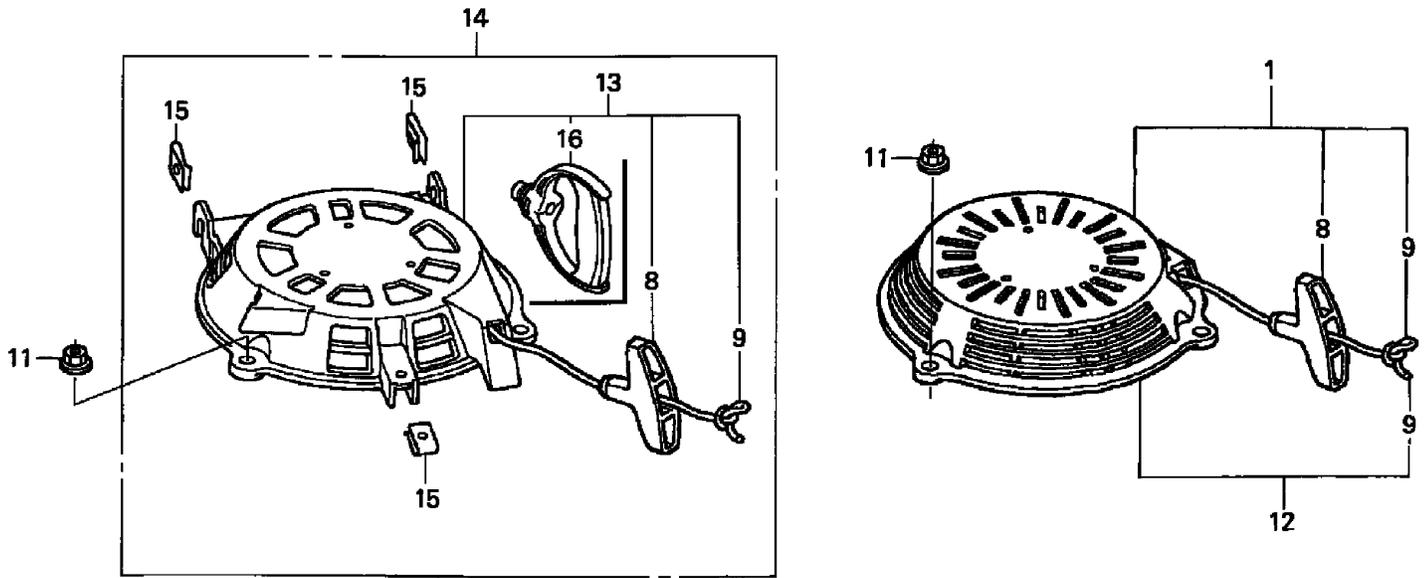


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Recoil Starter Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
9	28462-Z0L-V71	1	Rope, Recoil Starter
11	90201-ZM0-000	3	Nut, Flange (6mm)
13	28400-Z0L-V70	1	Starter Asm., Recoil
15	66871-KY2-700	3	Nut, Cowl (Upper)
16	28461-Z0L-V71	1	Knob, Recoil Starter

--	--	--	--

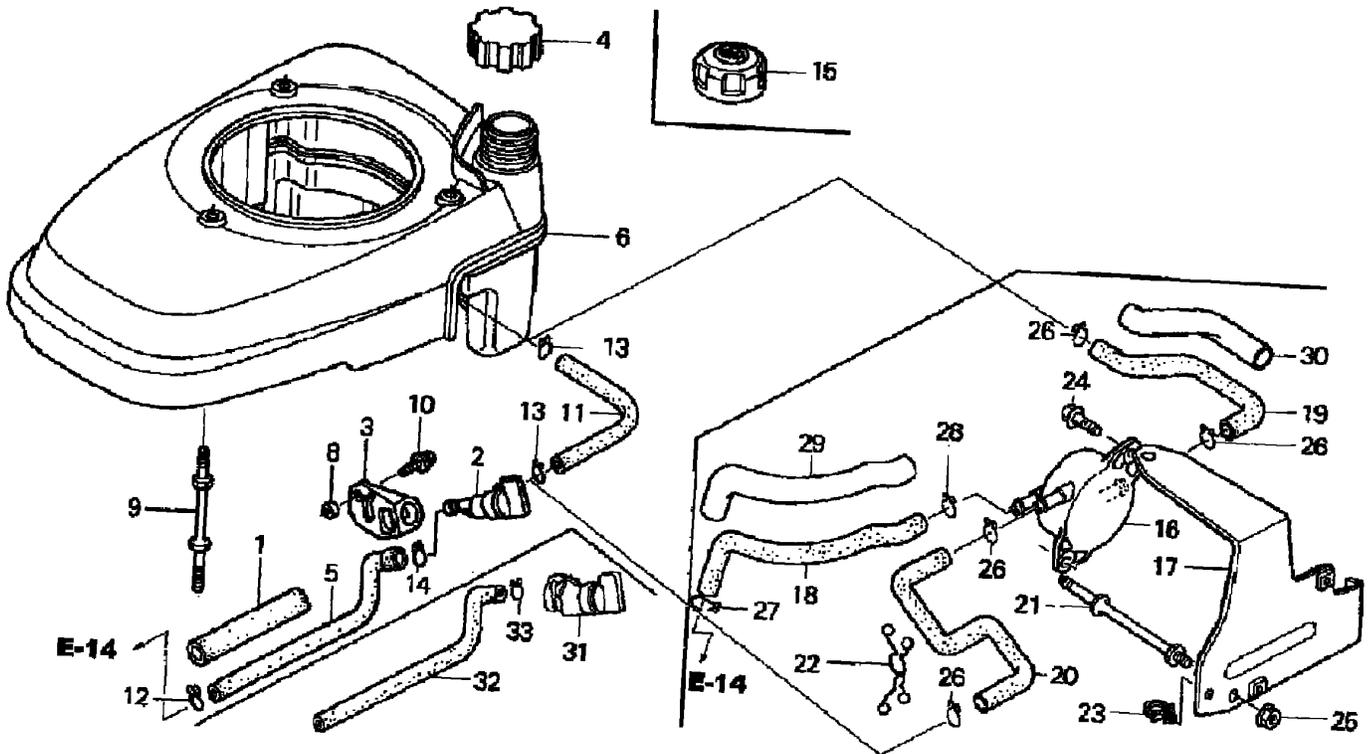


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Fan Cover Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
①	16854-ZH8-000	1	Rubber-Supporter (107mm)
②	16950-ZG9-M03	1	Petcock Asm.
③	16956-ZG9-M00	1	Bracket, Petcock
④	17620-ZL8-013	1	Cap Asm., Fuel Tank
⑤	17702-ZM0-000	1	Tube, Fuel
⑥	19610-Z0L-800ZA	1	Cover-Fan
⑧	91501-ZOL-800	1	Collar-Fuel Petcock
⑨	90043-ZL8-000	3	Bolt, Stud
⑩	93891-05010-08	1	Screw-Washer (5x10)
⑪	17701-Z0L-000	1	Tube, Fuel Tank
⑫	95002-02080	1	Clip-Tube (B8)
⑬	95002-02100	2	Clip, Tube (B10)
⑭	95002-50000	1	Clip, Tube (C9)

--	--	--	--

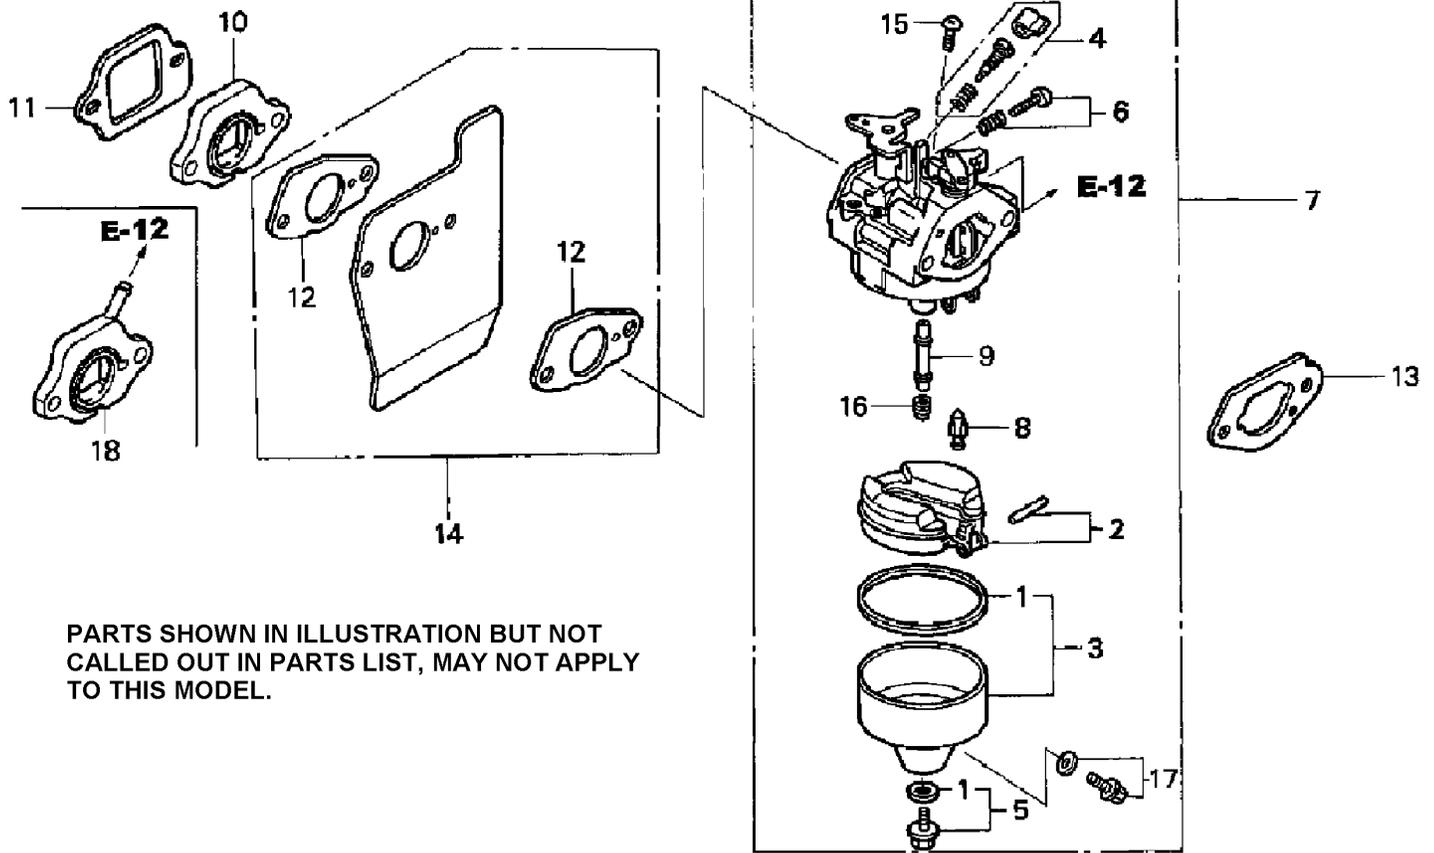


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Carburetor Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
1	16010-883-015	1	Gasket Set
2	16013-ZL1-003	1	Float Set
3	16015-887-782	1	Chamber Set, Float
5	16028-ZE0-005	1	Screw Set B
7	16100-Z0L-801	1	Carburetor Asm. (Bb62g A)
8	16155-ZM0-003	1	Valve, Float
9	16166-ZM0-003	1	Nozzle, Main
10	16211-ZL8-000	1	Insulator, Carburetor
11	16212-ZL8-000	1	Gasket, Insulator
12	16221-883-800	2	Gasket, Carburetor
13	16228-ZL8-000	1	Gasket, Carburetor (Choke Side)
14	19650-ZM0-000	1	Guide, Air
15	93550-05006-0H	1	Screw-Pan


Ref	Part No.	Qty.	Description
16	99101-124-0600	1	Jet, Main (#60)
	99101-124-0620	1	Jet, Main (#62)
	99101-124-0650	1	Jet, Main (#65)
17	16024-ZE1-811	1	Screw Set-Drain

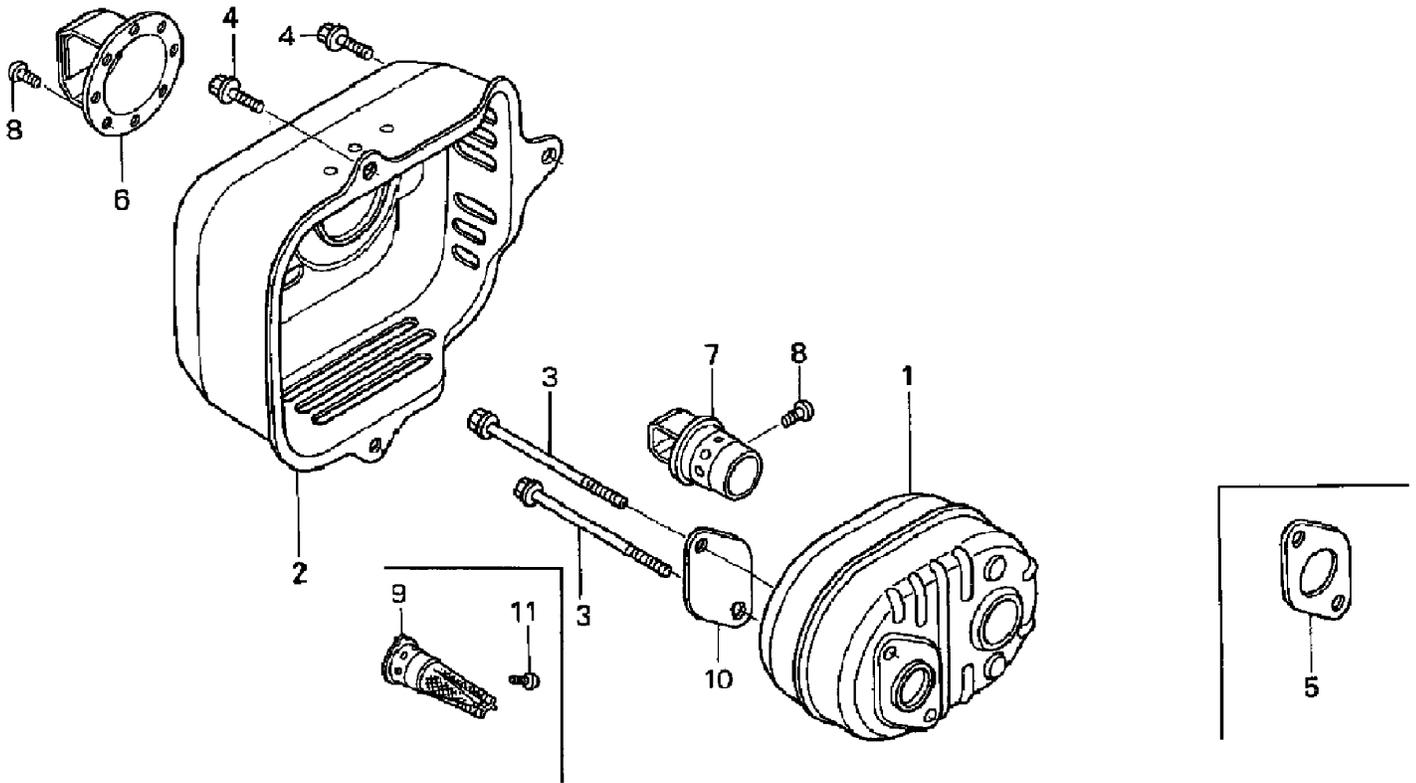

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Muffler Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description				
1	18310-ZM0-000	1	Muffler				
2	18321-Z0L-J00	1	Protector, Muffler (Cbu)				
3	90004-ZL8-000	2	Bolt, Flange (6x79) (Ct200)				
4	90013-883-000	3	Bolt-Flange (6x12) (Ct200)				
5	18381-ZL8-305	1	Gasket, Muffler				
9	A8350-ZL8-000	1	Arrester-Spark				
10	18356-ZL8-000	1	Plate, Arrester Number				
11	90055-ZE1-000	1	Screw-Tapping (4x6)				

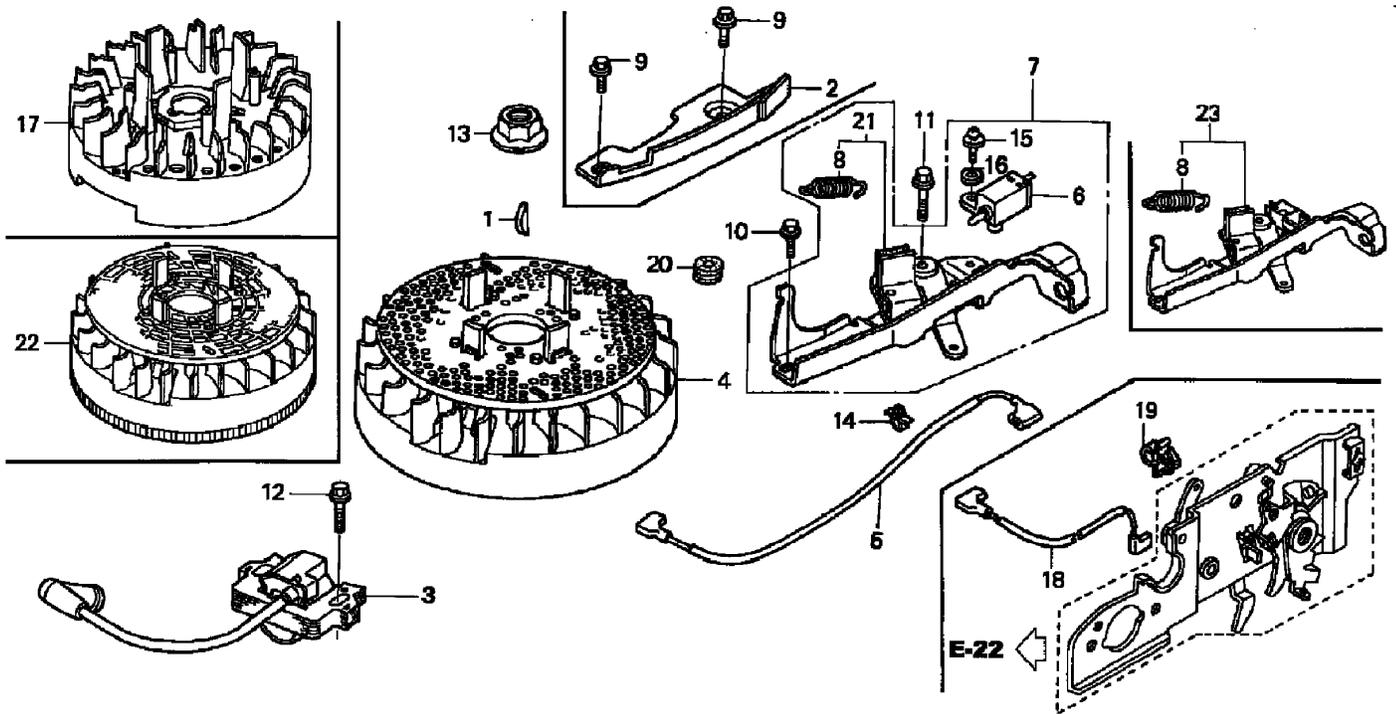


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Flywheel Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
①	13331-357-000	1	Key, Special Woodruff (25x18)
③	30500-Z0J-003	1	Coil Asm., Ignition
④	31105-Z0L-010	1	Flywheel ASM
⑤	32195-ZM0-800	1	Wire-Stop Switch
⑥	35120-ZM0-003	1	Engine Stop Switch ASM
⑧	75113-ZM0-000	1	Spring, Brake Lever
⑩	90014-952-000	1	Bolt, Flange (6x14)
⑪	90018-ZE1-000	1	Bolt-Flange
⑫	90022-888-010	1	Bolt, Flange (6x20) (Ct200)
⑬	90201-878-003	1	Nut, Special (14mm)
⑭	90681-959-003	1	Clip, Cable (A)
⑮	93892-04012-00	1	Screw-Washer
⑯	94103-04000	1	Washer-Plain
⑳	11344-MB0-000	1	Grommet A-Rr Cover


Ref	Part No.	Qty.	Description
⑳	75110-Z0L-800	1	Brake Sub ASM

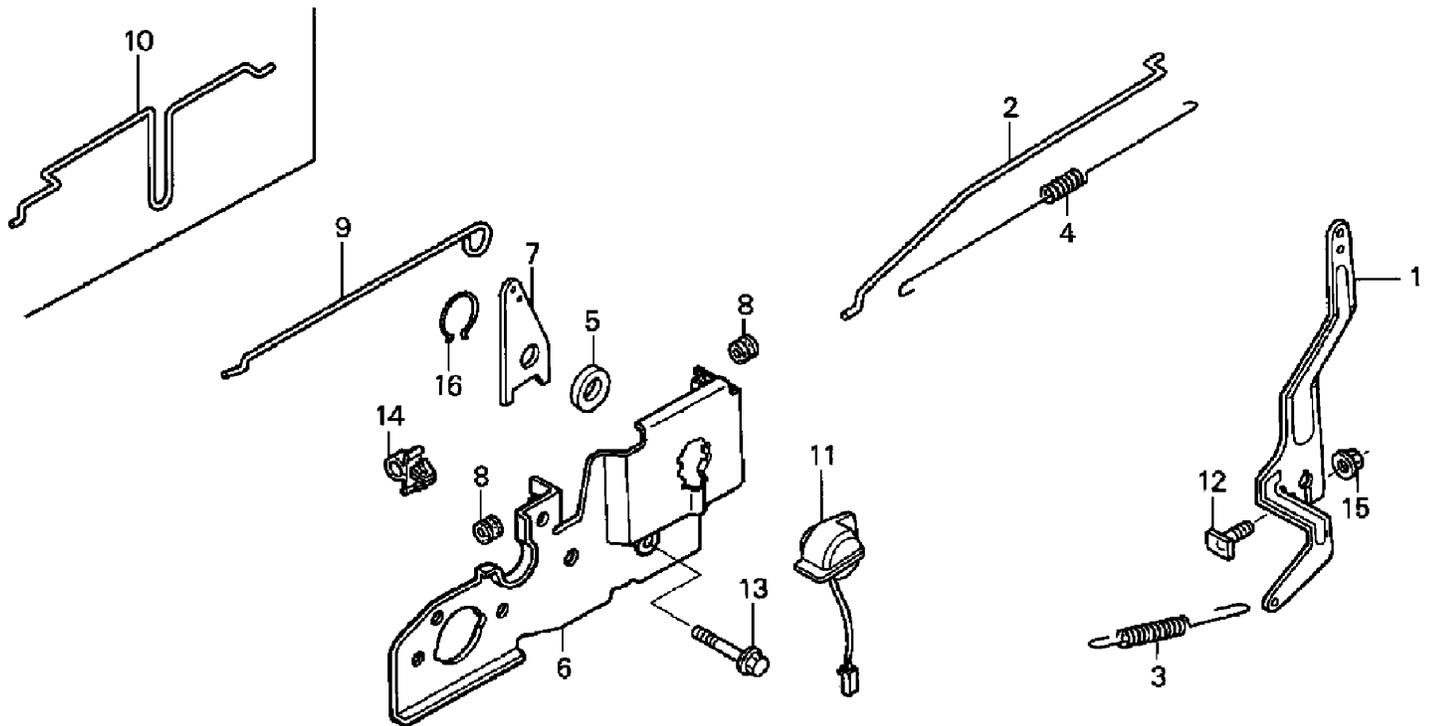

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Control Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description				
1	16551-ZM0-010	1	Arm, Governor				
2	16555-Z0L-800	1	Rod, Governor				
3	16561-Z0L-000	1	Spring, Governor				
4	16562-ZM0-000	1	Spring, Throttle Return				
6	16580-Z0L-810	1	Base, Control				
12	90015-ZE5-010	1	Bolt-Governor Arm				
13	90016-ZE8-000	1	Bolt, Flange (6x45)				
15	94050-06000	1	Nut-Flange (6mm)				

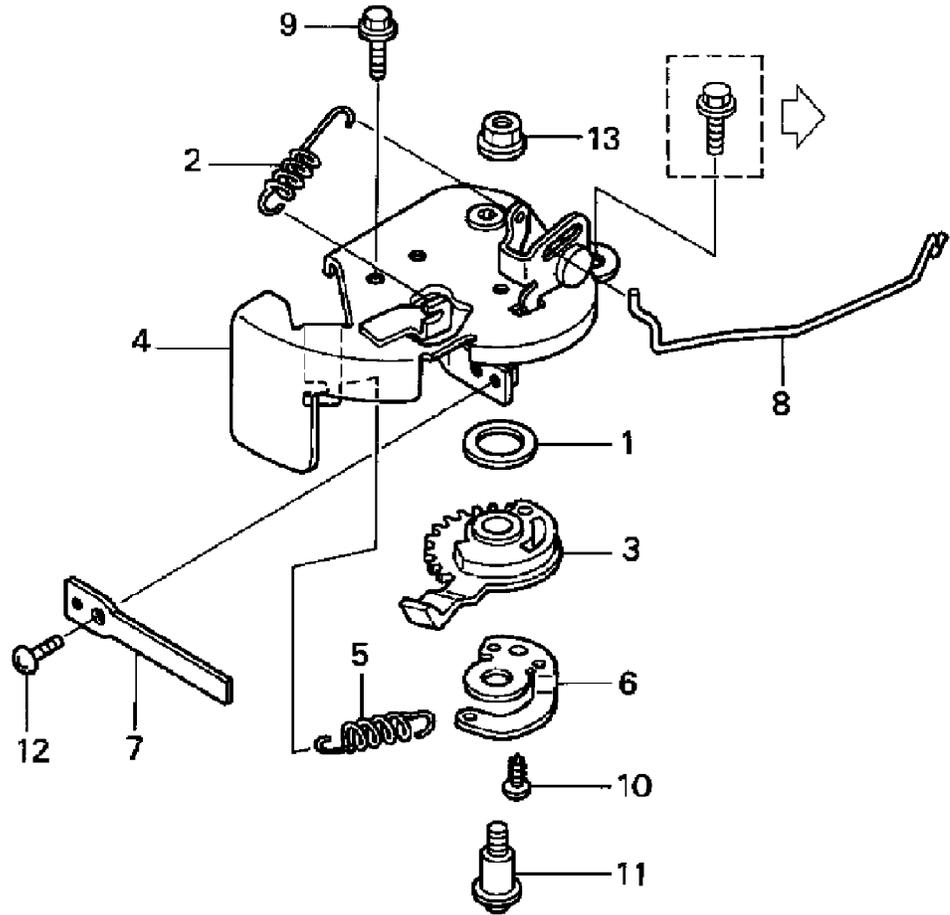

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Choke Base Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
①	16251-Z0L-800	1	Seal, Choke Lever
②	16592-ZJ1-000	1	Spring, Cable Return
③	16612-Z0L-800	1	Lever, Choke
④	16613-Z0L-800	1	Base, Choke
⑤	16614-Z0L-800	1	Spring, Choke Lever
⑥	16616-Z0L-800	1	Hook, Choke Spring
⑦	16619-Z0L-800	1	Plate, Choke
⑧	16632-Z0L-800	1	Rod, Stop
⑨	90029-888-000	1	Bolt, Flange (6x16)
⑩	90102-SP1-003	1	Screw, Tapping (4x8) (Po)
⑪	90141-KT8-000	1	Screw, Pan (5x19)
⑫	93500-04008-0H	1	Screw, Pan (4x8)
⑬	94050-05000	1	Nut, Flange (5mm)

LAWN-BOY®