

LAWN-BOY®

Gold Series® Lawnmower

Model No. 10654 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute, and Rear Door Assembly	 3	Carburetor Assembly Honda Model No. Gcv160a sta1	 16
Rear Axle and Low Wheel Assembly	 4	Air Cleaner Assembly Honda Model No. Gcv160a sta1	 17
Front Axle Assembly	 5	Muffler Assembly Honda Model No. Gcv160a sta1	 18
Engine and Blade Assembly	 6	Flywheel Assembly Honda Model No. Gcv160a sta1	 19
HP 2 Bail Handle Assembly	 7	Control Assembly Honda Model No. Gcv160a sta1	 20
Rear Bag Assembly	 8	Choke Base Assembly Honda Model No. Gcv160a sta1	 21
Cylinder Barrel Assembly Honda Model No. Gcv160a sta1	 9	Top Cover Assembly Honda Model No. Gcv160a sta1	 22
Oil Pan Assembly Honda Model No. Gcv160a sta1	 10	Label Assembly Honda Model No. Gcv160a sta1	 23
Crankshaft Assembly Honda Model No. Gcv160a sta1	 11		
Piston and Connecting Rod Assembly Honda Model No. Gcv160a sta1	 12		
Camshaft Pulley Assembly Honda Model No. Gcv160a sta1	 13		
Recoil Starter Assembly Honda Model No. Gcv160a sta1	 14		
Fan Cover Assembly Honda Model No. Gcv160a sta1	 15		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes


- ❶ Not serviced separately
- ❷ Obtain parts from your local Honda dealer.

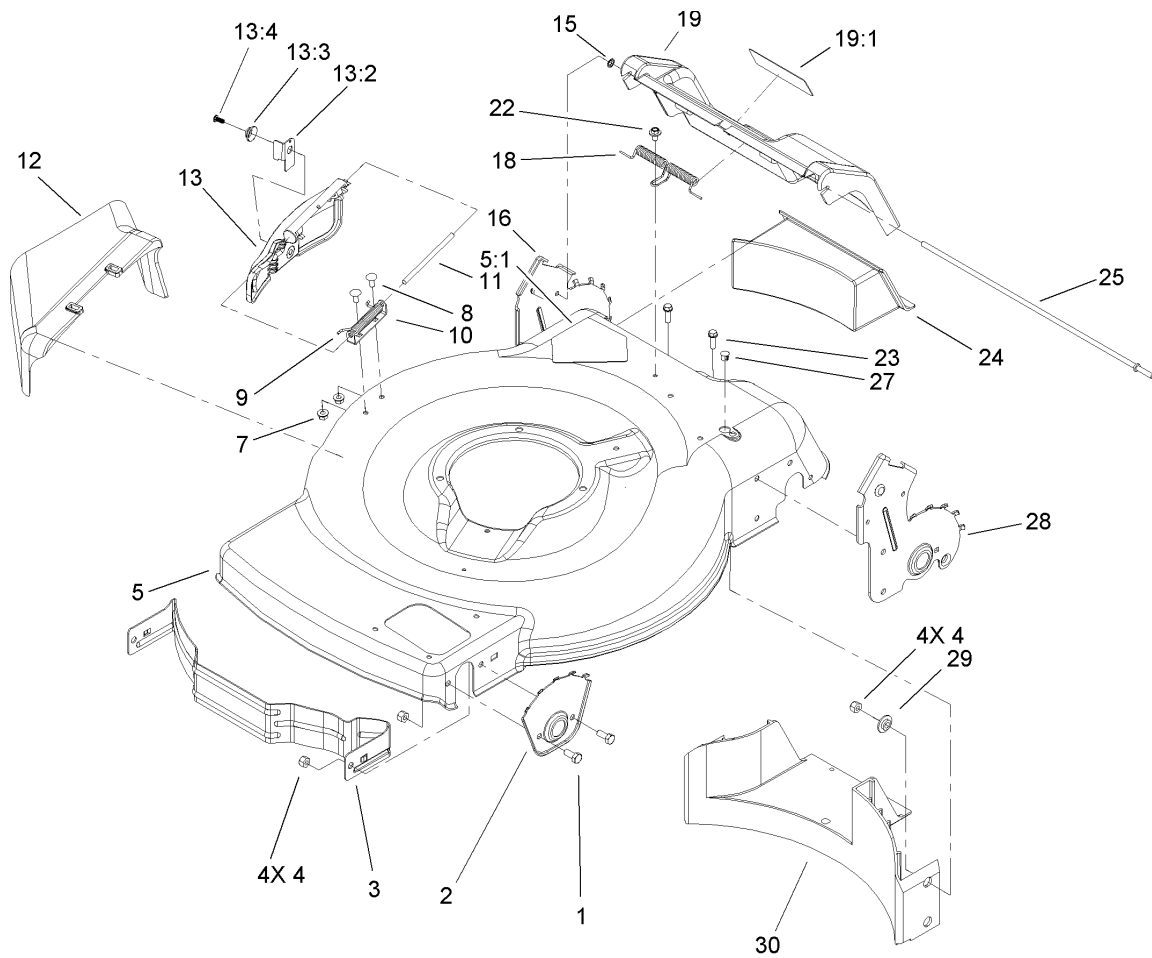

Deck, Side Chute, and Rear Door Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-Hoc, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	106-8343	1	Housing ASM
5:1	105-6838	1	Decal-Danger
7	32128-32	2	Nut-HHF
8	3229-11	2	Screw-CARR
9	99-5293	1	Spring-Torsion
10	99-5292	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Side Discharge
13	106-8394	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Pushnut
16	107-0790	1	RH Rear HOC Plate ASM
18	105-3032	1	Spring-Door, Rear
19	106-8389	1	Door ASM-Service
19:1	106-8388	1	Decal-Warning, Door
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH
24	105-1842	1	Plug-Discharge, Rear

Ref	Part No.	Qty.	Description
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	107-0783	1	LH Rear HOC Plate ASM
29	105-3006	4	Washer-Stepped
30	105-3047	1	Baffle-Rear

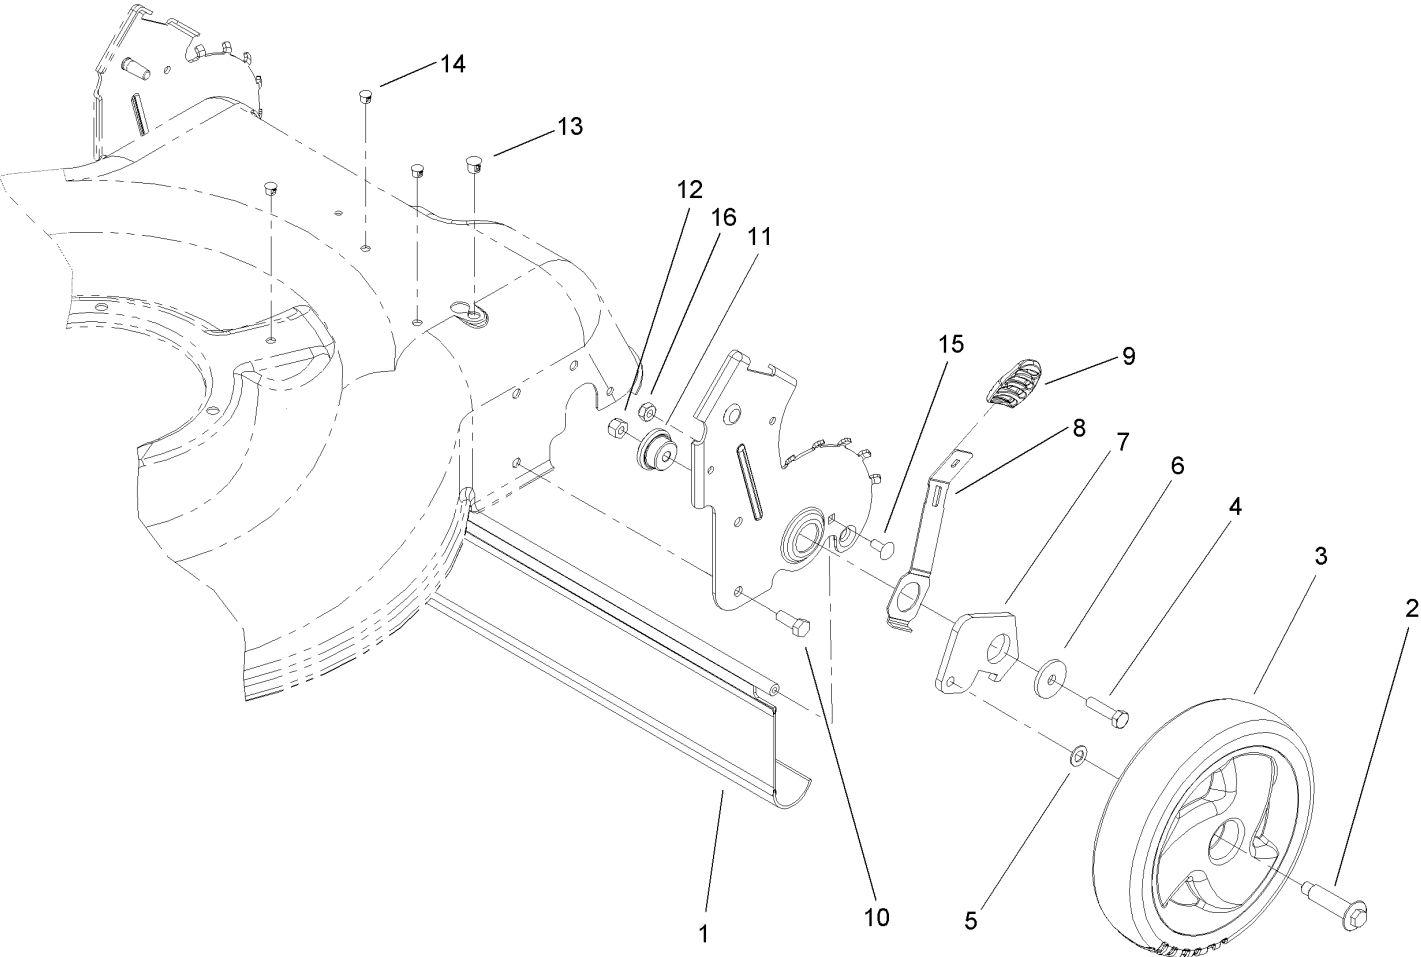


Rear Axle and Low Wheel Assembly

Ref	Part No.	Qty.	Description				
1	105-1843	1	Shield-Trailing				
2	614650	2	Bolt-Shoulder				
3	107-1916	2	8in Wheel ASM				
4	322-6	2	Screw-HH				
5	40-1940	2	Washer				
6	105-3048	2	Washer-Flat				
7	105-1819	2	Arm-Pivot, Rear				
8	105-1809	2	Arm-Spring				
9	107-1904	2	Knob-Lever, HOC				
10	322-4	4	Screw-HH				
11	105-1818	2	Bushing-Mount, HOC				
12	3296-29	2	Nut-Lock, NI				
13	104-9368	1	Plug-Dome				
14	104-9373	3	Plug-Dome				
15	3229-11	2	Screw-CARR				
16	3296-16	2	Nut-Lock, NI				

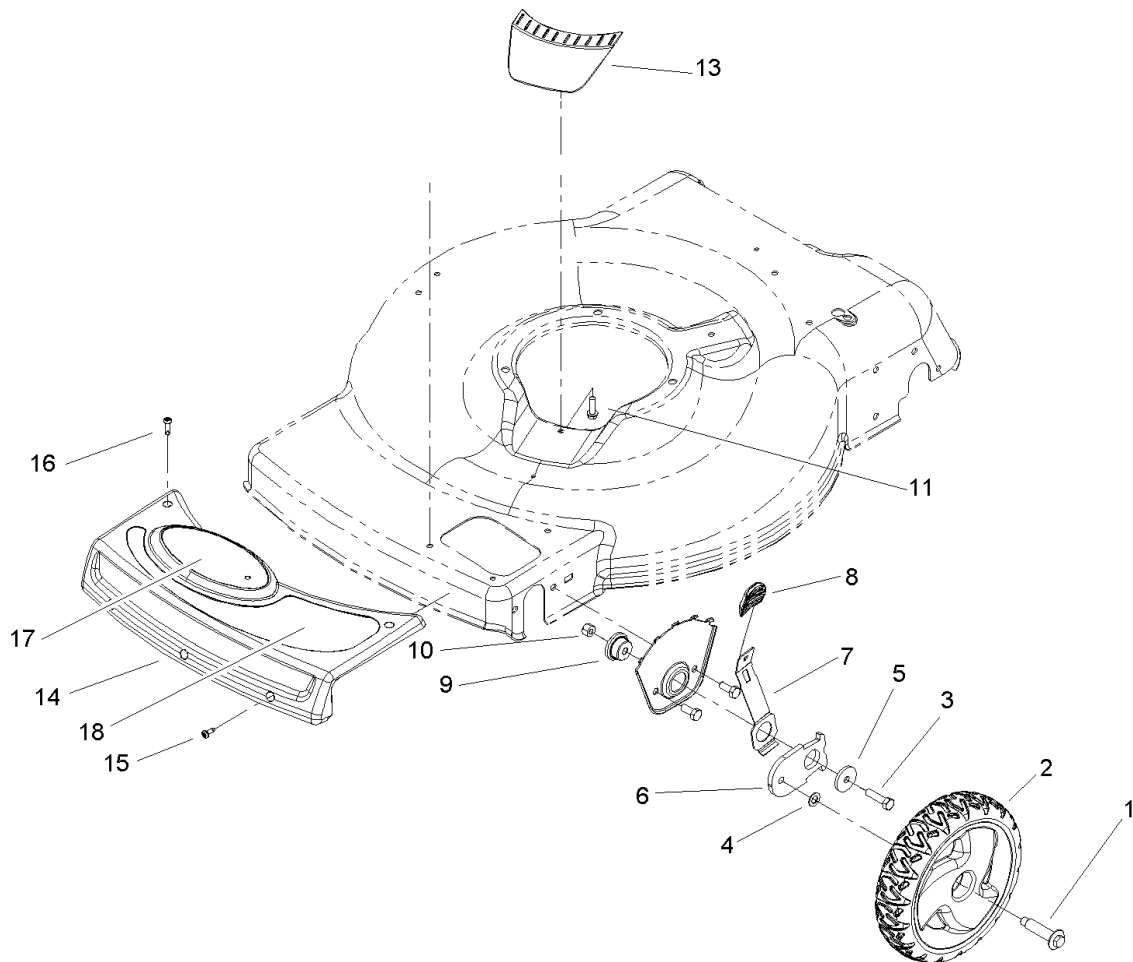


Front Axle Assembly

Ref	Part No.	Qty.	Description				
1	614650	2	Bolt-Shoulder				
2	107-1916	2	8in Wheel ASM				
3	322-6	2	Screw-HH				
4	40-1940	2	Washer				
5	105-3048	2	Washer-Flat				
6	105-1807	2	Arm-Pivot, Front				
7	105-1809	2	Arm-Spring				
8	107-1904	2	Knob-Lever, HOC				
9	105-1818	2	Bushing-Mount, HOC				
10	3296-29	2	Nut-Lock, NI				
11	46-8091	1	Screw-HWH				
13	105-3005	1	Cover-Belt Opening				
14	107-1908	1	Bumper-Wpm				
15	105-6849	3	Screw-Thread Forming				
16	105-6828	2	Screw				
17	107-3764	1	Decal-Housing				
18	107-3763	1	Decal-Housing				

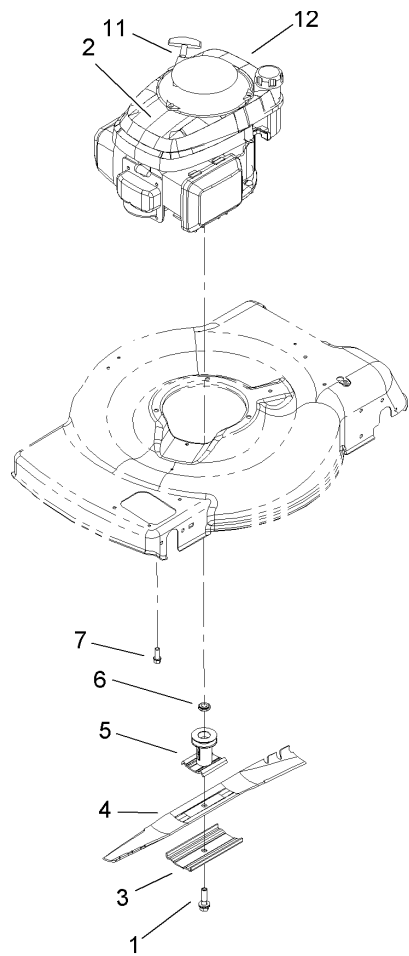


Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	107-3760	1	Decal-Recoil				
3	105-3029-03	1	Support-Blade				
4	104-8697-03	1	Blade-22 Inch				
5	106-3987	1	Blade Driver ASM				
6	106-3999	1	Spacer-Driver				
7	95-1726	3	Screw-Taptite				
11	92-1701	1	Stop-Rope				
12		1	Engine-Honda Model No.gcv 160a Sta1				

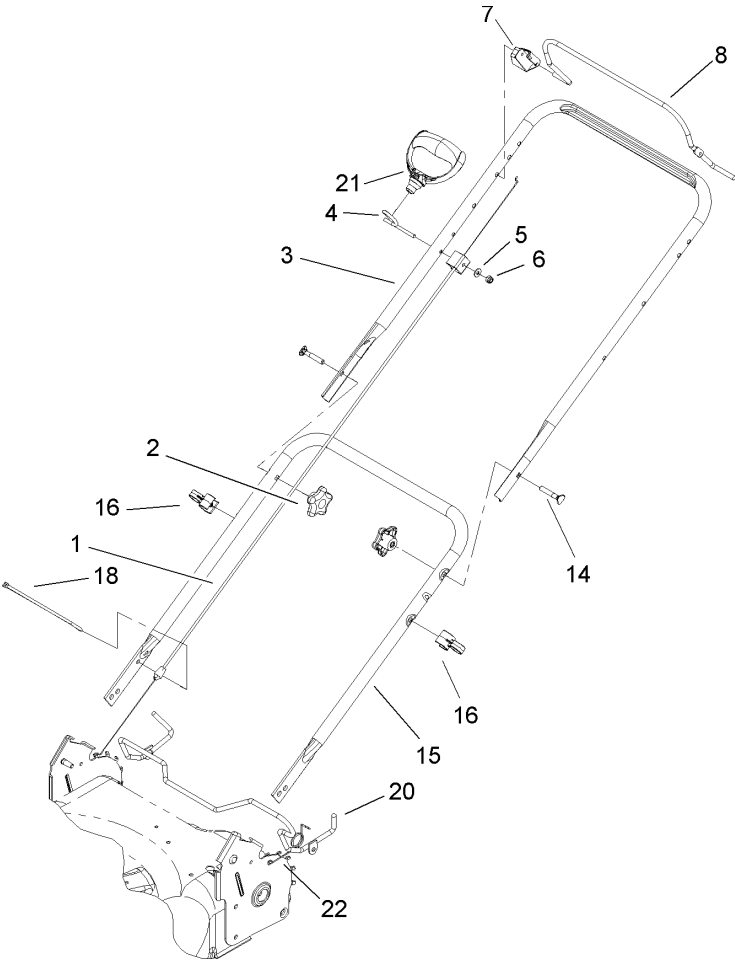


HP 2 Bail Handle Assembly

Ref	Part No.	Qty.	Description				
1	107-1903	1	Cable-Brake, Hp				
2	106-4161	2	Knob-Handle				
3	104-8680-05	1	Handle-Upper				
4	107-1935	1	Guide-Rope				
5	3256-1	1	Washer-Flat				
6	3296-73	1	Nut-Lock, NI				
7	107-0757	1	Stop-Pivot				
8	106-3991	1	Bail-Brake				
14	92-2260	2	Screw-Handle				
15	107-0784-05	1	Handle-Lower				
16	106-6805	1	Guide-Cable				
18	614249	1	Strap-Tie				
20	107-0768	1	Release Lever ASM				
21	106-8345	1	Handle-Recoil				
22	107-7472	1	Spring-Torsion				

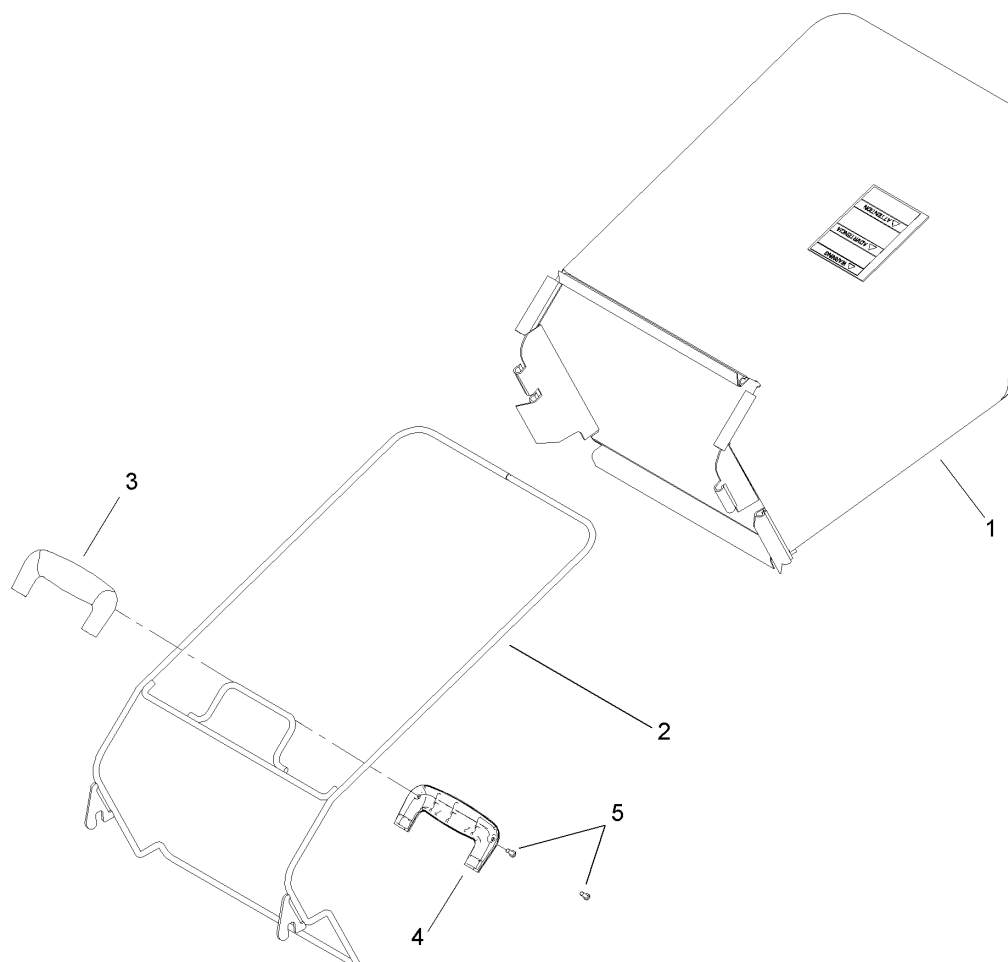

Rear Bag Assembly

Ref	Part No.	Qty.	Description
1	106-8392	1	Grass Bag ASM
2	105-6831-03	1	Brace Bag Frame ASM
3	107-1905	1	Handle-Bag, Top
4	107-1906	1	Handle-Bag, Bottom
5	32144-111	2	Screw-PPH

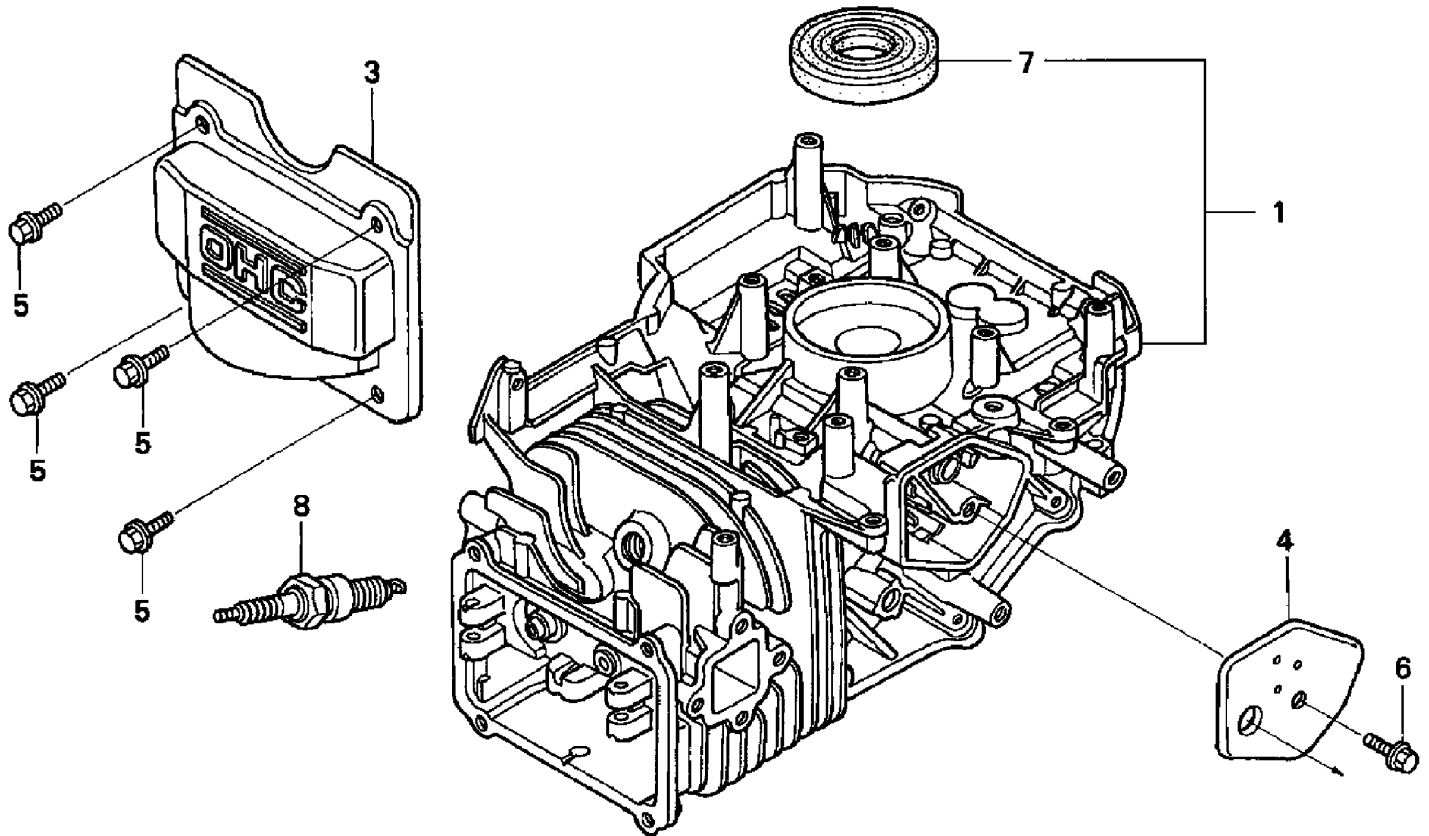


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Cylinder Barrel Assembly

Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description				
21	12000-ZL8-415	1	Cylinder ASM (.010)				
23	12311-ZL8-000	1	Cover, Head				
24	12355-ZL8-000	1	Cover, Breather (Breather Valve Asm.)				
25	90013-883-000	4	Bolt-Flange (6x12) (Ct200)				
26	90014-952-000	1	Bolt, Flange (6x14)				
27	91201-ZL8-003	1	Oil Seal (25.4x62x6)				
28	98079-56846	1	Spark Plug (Bpr6es) (Ngk)				

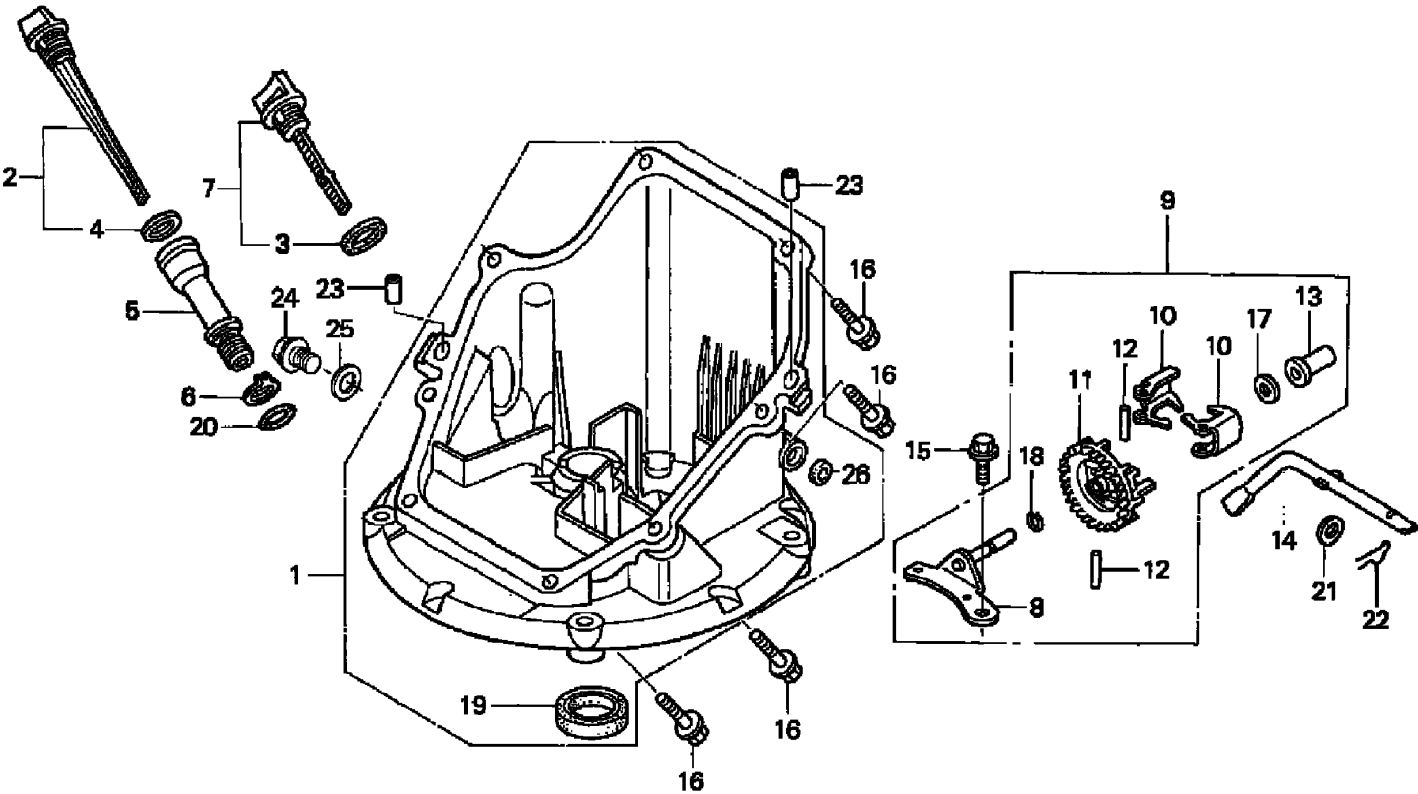


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL

Oil Pan Assembly

Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	11300-ZM0-811	1	Pan Asm., Oil	16	90121-952-000	8	Bolt, Flange (6x25)
2	15650-ZM0-801	1	Dipstick-Oil	17	90451-ZE1-000	1	Washer, Thrust (6mm)
4	15625-ZE6-000	1	Gasket, Oil Filler Cap	18	90602-ZE1-000	1	Clip-Governor Holder
5	15631-ZM0-000	1	Extension-Oil Filler	19	91202-ZL8-003	1	Oil Seal (28x41.25x6)
6	15639-ZM0-000	1	Washer, Extension Lock	20	91356-MA6-005	1	O-Ring
8	16508-ZM0-010	1	Shaft, Governor Holder	21	94101-06800	1	Washer
9	16510-ZM0-010	1	Governor Asm.	22	94251-08000	1	Pin, Lock (8mm)
10	16511-ZL8-000	2	Weight, Governor	23	94301-08200	2	Pin, Dowel (8x20)
11	16512-ZM0-000	1	Holder, Governor Weight				
12	16513-ZE1-000	2	Pin, Governor Weight				
13	16531-ZE1-000	1	Slider, Governor				
14	16541-ZM0-000	1	Shaft, Governor Arm				
15	90014-952-000	1	Bolt, Flange (6x14)				

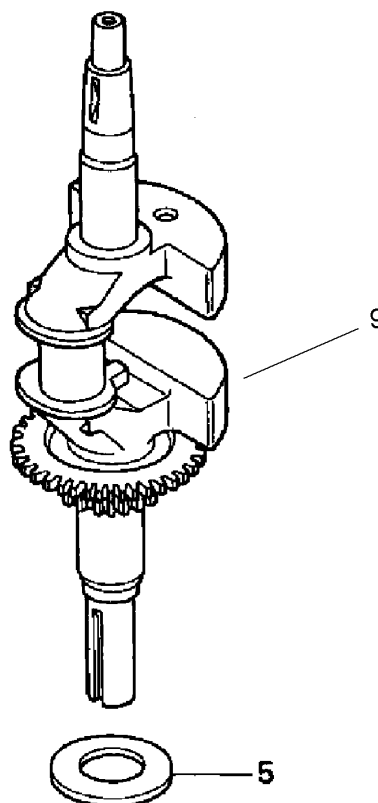


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Crankshaft Assembly

Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description				
25	90402-ZL8-000	1	Washer, Thrust				
29	13310-Z0L-V70	1	Crankshaft				

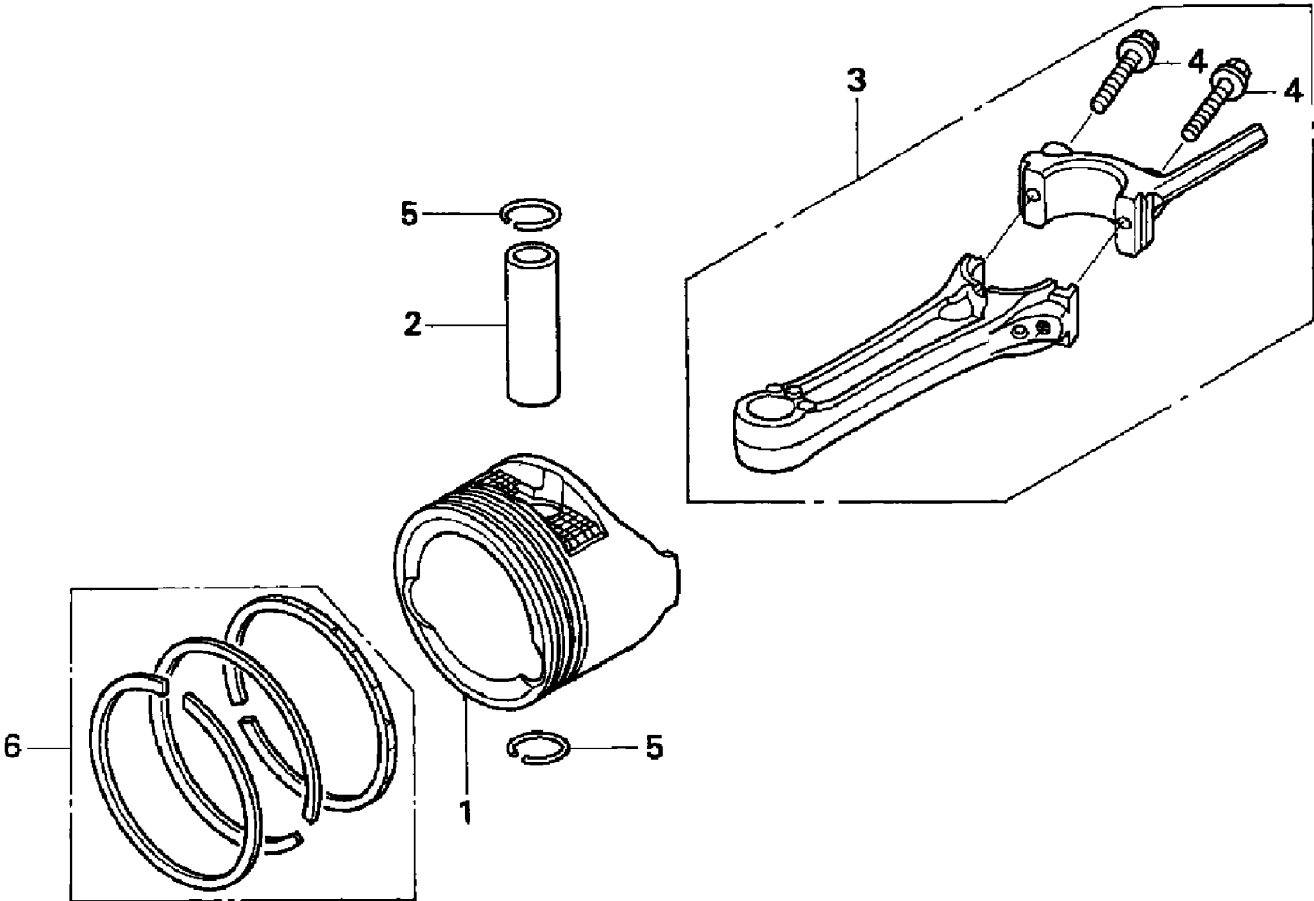

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Piston and Connecting Rod Assembly
Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description				
❶1	13101-ZL8-000	1	Piston				
❷2	13111-ZE0-000	1	Pin, Piston				
❸3	13200-ZL8-000	1	Rod Asm., Connecting				
❹4	90001-ZE1-000	2	Bolt, Connecting Rod				
❺5	90551-ZE0-000	2	Clip, Piston Pin (13mm)				
❻6	13010-ZL8-003	1	Ring Set, Piston (Riken)				
❼	13010-ZL8-024	1	Ring Set, Piston (Teikoku)				

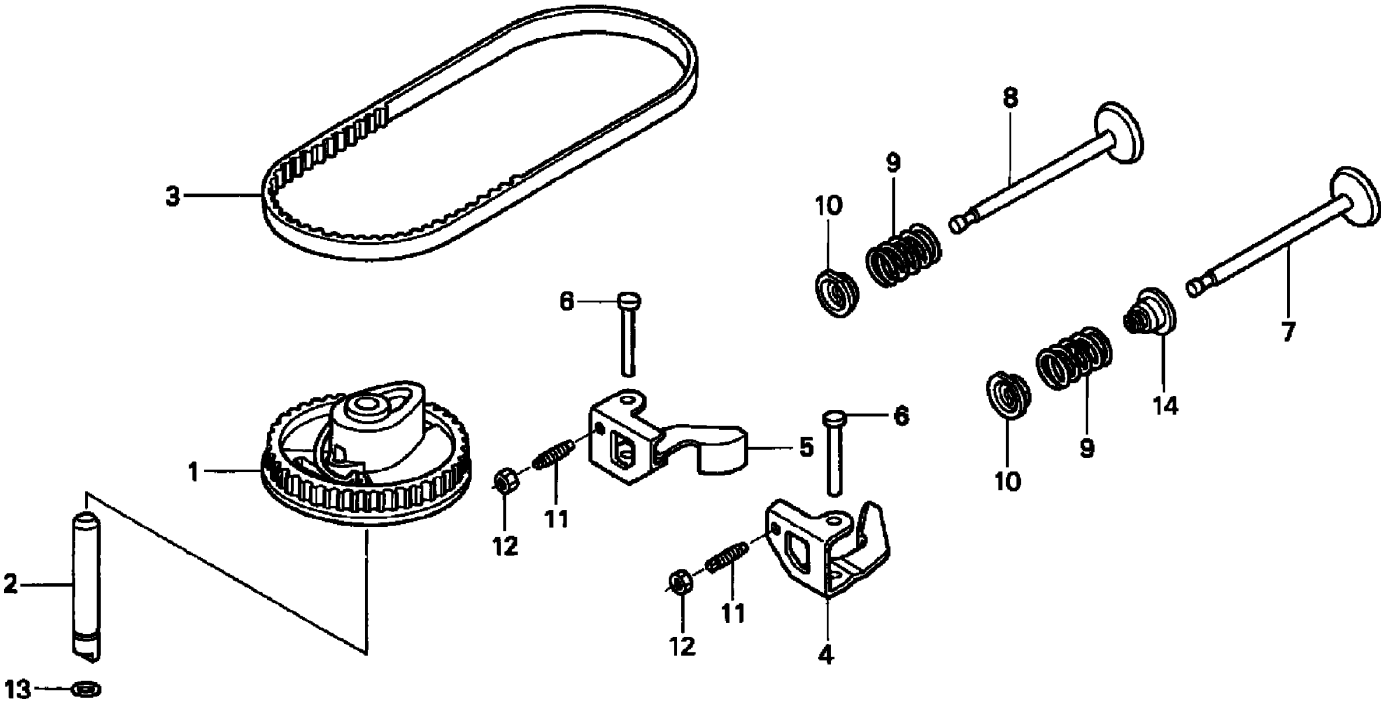

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Camshaft Pulley Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	14320-ZL8-010	1	Pulley, Camshaft	❶14	12209-ZM0-003	1	Seal, Valve Stem
❶2	14324-ZL8-000	1	Shaft, Cam Pulley				
❶3	14400-Z0J-014	1	Belt, Timing (84hu7 G-014				
❶4	14431-Z0J-000	1	Arm-In. Valve Rocker				
❶5	14441-Z0J-000	1	Arm, Ex. Valve Rocker				
❶6	14461-ZL8-000	2	Shaft, Rocker Arm				
❶7	14711-ZL8-000	1	Valve, In.				
❶8	14721-ZL8-000	1	Valve, Ex.				
❶9	14751-ZL8-000	2	Spring, Valve				
❶10	14771-Z0J-000	2	Retainer-Valve Spring				
❶11	90012-333-000	2	Screw, Tappet Adj.				
❶12	90206-001-000	2	Nut, Tappet Adj.				
❶13	91301-ZM0-V31	1	O-Ring (6.8x1.9)				

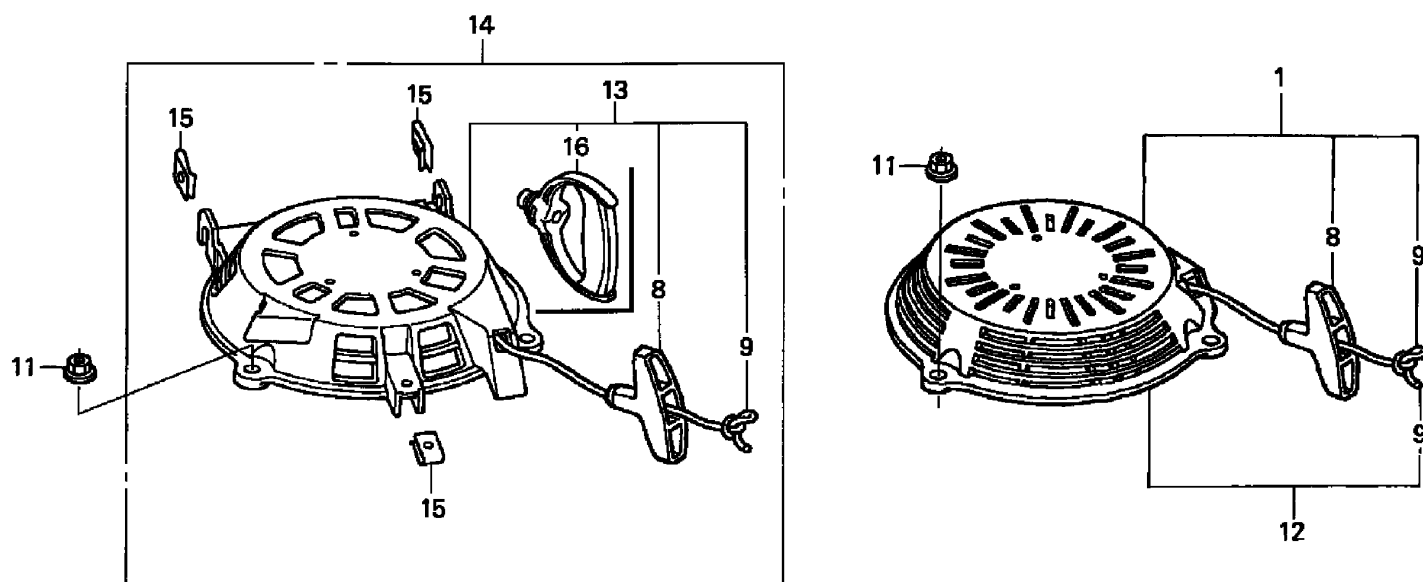


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Recoil Starter Assembly

Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description				
29	28462-Z0L-V71	1	Rope, Recoil Starter				
211	90201-ZM0-000	3	Nut, Flange (6mm)				
213	28400-Z0L-V70	1	Starter Asm., Recoil				
215	66871-KY2-700	3	Nut, Cowl (Upper)				
216	28461-Z0L-V71	1	Knob, Recoil Starter				

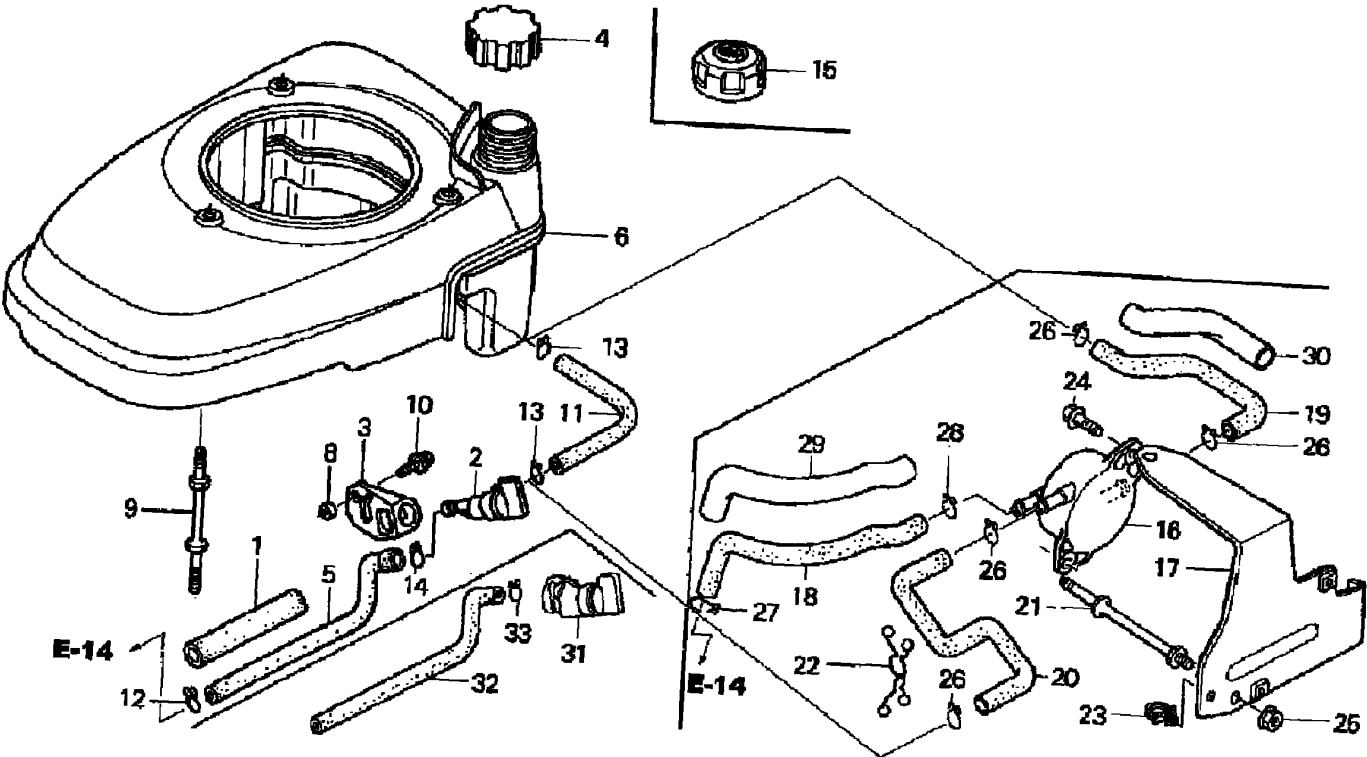

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Fan Cover Assembly
Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description				
②1	16854-ZH8-000	1	Rubber-Supporter (107mm)				
②2	16950-ZG9-M03	1	Petcock Asm.				
②3	16956-ZG9-M00	1	Bracket, Petcock				
②4	17620-ZL8-013	1	Cap Asm., Fuel Tank				
②5	17702-ZM0-000	1	Tube, Fuel				
②6	19610-Z0L-800ZA	1	Cover-Fan				
②8	91501-ZOL-800	1	Collar-Fuel Petcock				
②9	90043-ZL8-000	3	Bolt, Stud				
②10	93891-05010-08	1	Screw-Washer (5x10)				
②11	17701-Z0L-000	1	Tube, Fuel Tank				
②12	95002-02080	1	Clip-Tube (B8)				
②13	95002-02100	2	Clip, Tube (B10)				
②14	95002-50000	1	Clip, Tube (C9)				

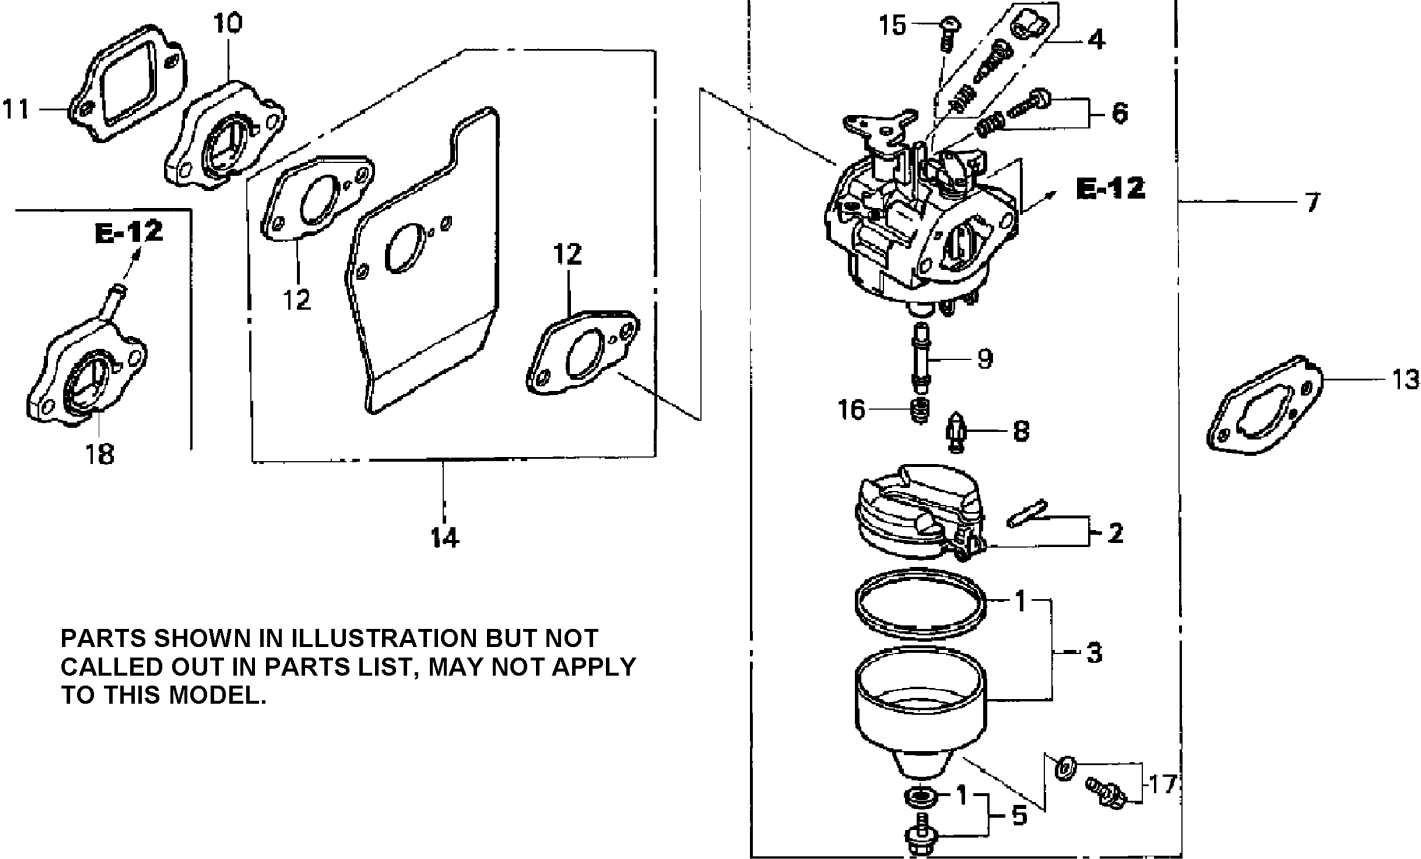

Carburetor Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description
❶1	16010-883-015	1	Gasket Set
❷2	16013-ZL1-003	1	Float Set
❸3	16015-887-782	1	Chamber Set, Float
❺5	16028-ZE0-005	1	Screw Set B
❷7	16100-Z0L-801	1	Carburetor Asm. (Bb62g A)
❸8	16155-ZM0-003	1	Valve, Float
❹9	16166-ZM0-003	1	Nozzle, Main
❺10	16211-ZL8-000	1	Insulator, Carburetor
❻11	16212-ZL8-000	1	Gasket, Insulator
❽12	16221-883-800	2	Gasket, Carburetor
❾13	16228-ZL8-000	1	Gasket, Carburetor (Choke Side)
❿14	19650-ZM0-000	1	Guide, Air
⓫15	93550-05006-0H	1	Screw-Pan

Ref	Part No.	Qty.	Description
❸16	99101-124-0600	1	Jet, Main (#60)
❹	99101-124-0620	1	Jet, Main (#62)
❺	99101-124-0650	1	Jet, Main (#65)
❸17	16024-ZE1-811	1	Screw Set-Drain

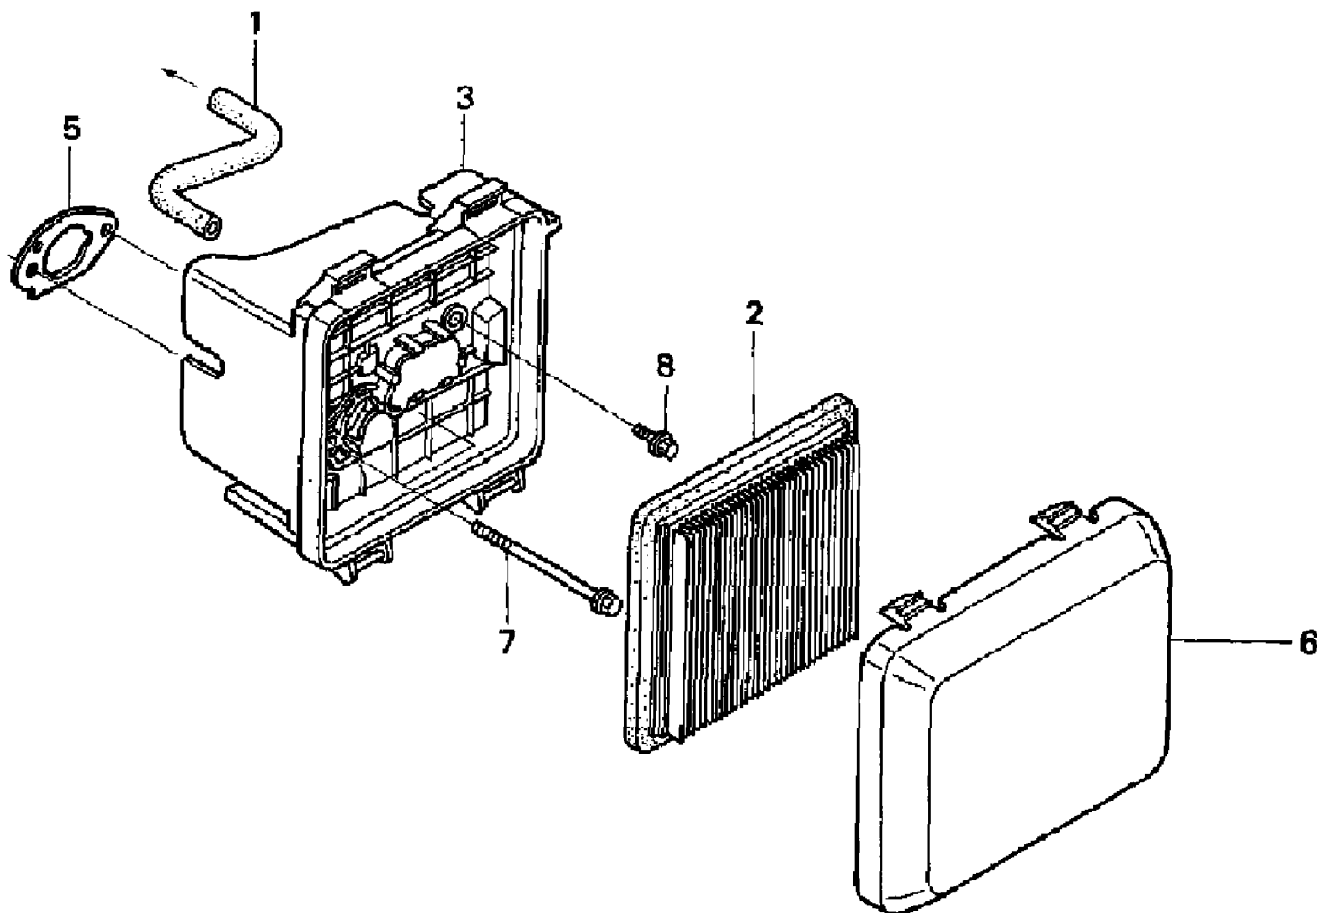


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Air Cleaner Assembly

Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description				
21	15721-ZM0-000	1	Tube, Breather				
22	17211-ZL8-003	1	Element-Air Cleaner				
23	17220-ZM0-000	1	Case Asm., Air Cleaner				
25	17228-ZM0-000	1	Gasket, Air Cleaner				
26	17231-Z0L-020	1	Cover, Air Cleaner				
29	90003-ZM0-000	2	Bolt, Flange (6x86) (Ct200)				
28	95701-06014	1	Bolt-Flange				

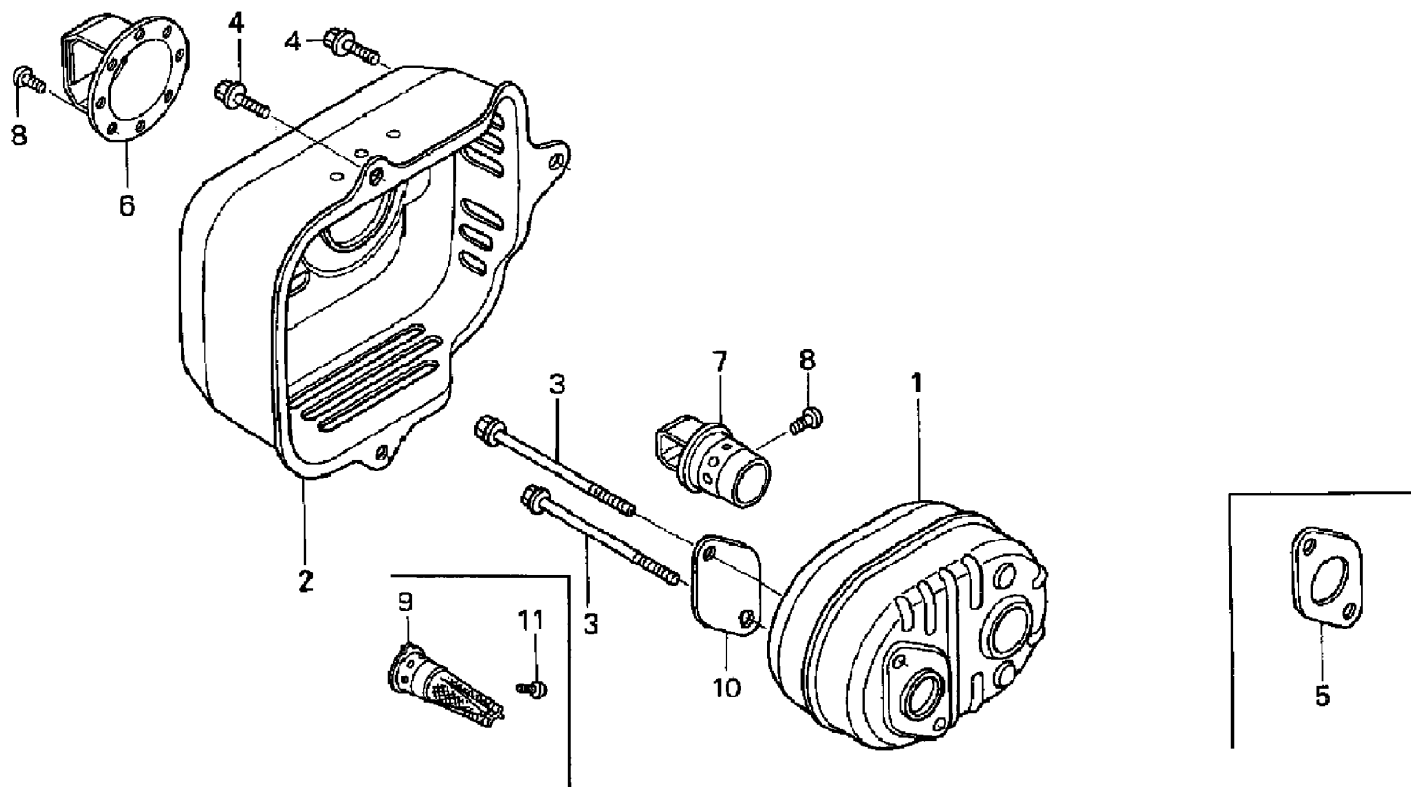


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Muffler Assembly

Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description				
21	18310-ZM0-000	1	Muffler				
22	18321-Z0L-J00	1	Protector, Muffler (Cbu)				
23	90004-ZL8-000	2	Bolt, Flange (6x79) (Ct200)				
24	90013-883-000	3	Bolt-Flange (6x12) (Ct200)				
25	18381-ZL8-305	1	Gasket, Muffler				
29	A8350-ZL8-000	1	Arrester-Spark				
210	18356-ZL8-000	1	Plate, Arrester Number				
211	90055-ZE1-000	1	Screw-Tapping (4x6)				

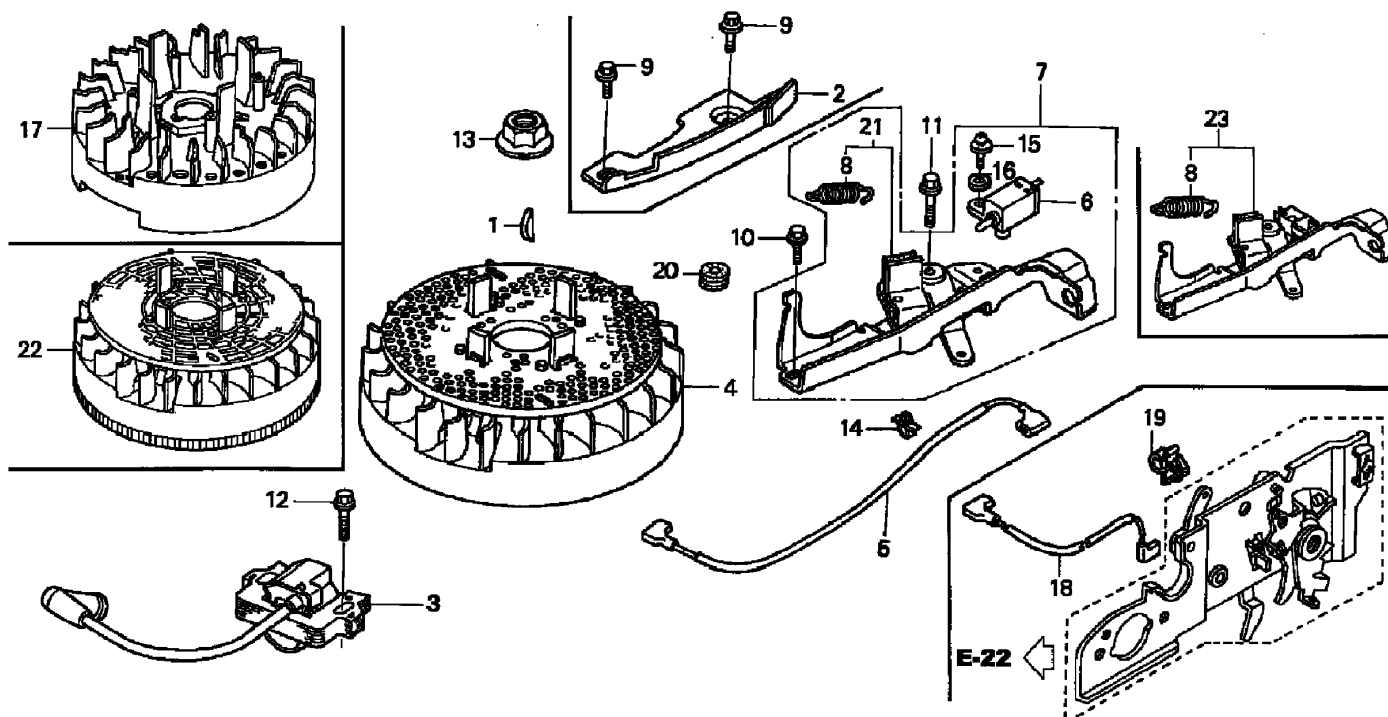

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Flywheel Assembly Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
21	13331-357-000	1	Key, Special Woodruff (25x18)	21	75110-Z0L-800	1	Brake Sub ASM
23	30500-Z0J-003	1	Coil Asm., Ignition				
24	31105-Z0L-010	1	Flywheel ASM				
25	32195-ZM0-800	1	Wire-Stop Switch				
26	35120-ZM0-003	1	Engine Stop Switch ASM				
28	75113-ZM0-000	1	Spring, Brake Lever				
210	90014-952-000	1	Bolt, Flange (6x14)				
211	90018-ZE1-000	1	Bolt-Flange				
212	90022-888-010	1	Bolt, Flange (6x20) (Ct200)				
213	90201-878-003	1	Nut, Special (14mm)				
214	90681-959-003	1	Clip, Cable (A)				
215	93892-04012-00	1	Screw-Washer				
216	94103-04000	1	Washer-Plain				
220	11344-MB0-000	1	Grommet A-Rr Cover				

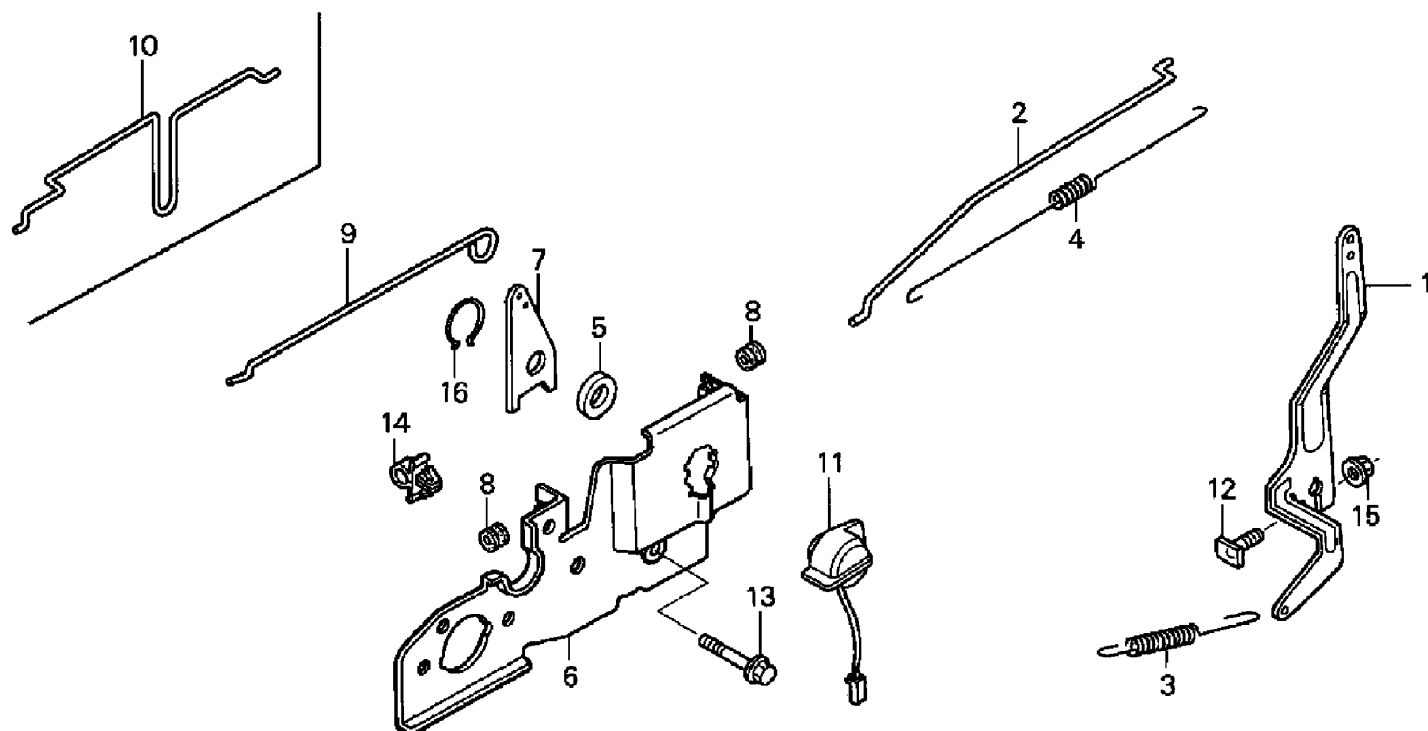


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Control Assembly

Honda Model No. Gcv160a sta1


Ref	Part No.	Qty.	Description				
②1	16551-ZM0-010	1	Arm, Governor				
②2	16555-Z0L-800	1	Rod, Governor				
②3	16561-Z0L-000	1	Spring, Governor				
②4	16562-ZM0-000	1	Spring, Throttle Return				
②6	16580-Z0L-810	1	Base, Control				
②12	90015-ZE5-010	1	Bolt-Governor Arm				
②13	90016-ZE8-000	1	Bolt, Flange (6x45)				
②15	94050-06000	1	Nut-Flange (6mm)				

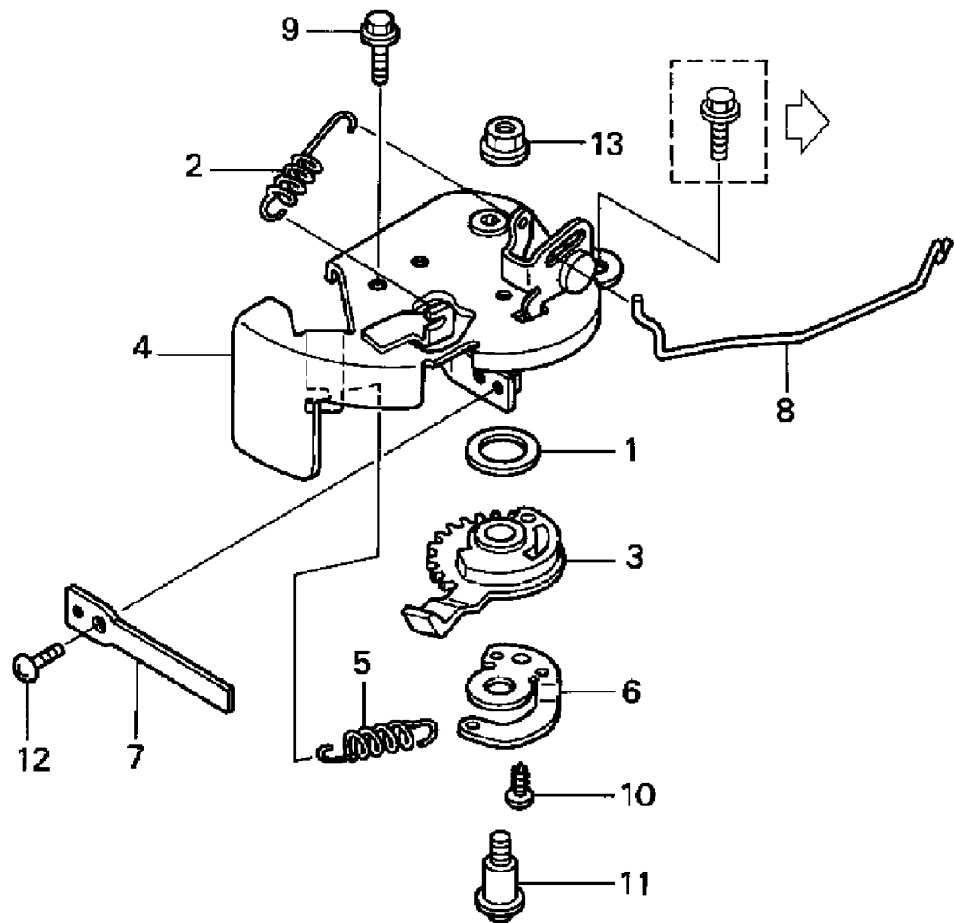

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Choke Base Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description				
❶1	16251-Z0L-800	1	Seal, Choke Lever				
❷2	16592-ZJ1-000	1	Spring, Cable Return				
❸3	16612-Z0L-800	1	Lever, Choke				
❹4	16613-Z0L-800	1	Base, Choke				
❺5	16614-Z0L-800	1	Spring, Choke Lever				
❻6	16616-Z0L-800	1	Hook, Choke Spring				
❼7	16619-Z0L-800	1	Plate, Choke				
❽8	16632-Z0L-800	1	Rod, Stop				
❾9	90029-888-000	1	Bolt, Flange (6x16)				
❿10	90102-SP1-003	1	Screw, Tapping (4x8) (Po)				
❶11	90141-KT8-000	1	Screw, Pan (5x19)				
❶12	93500-04008-0H	1	Screw, Pan (4x8)				
❶13	94050-05000	1	Nut, Flange (5mm)				

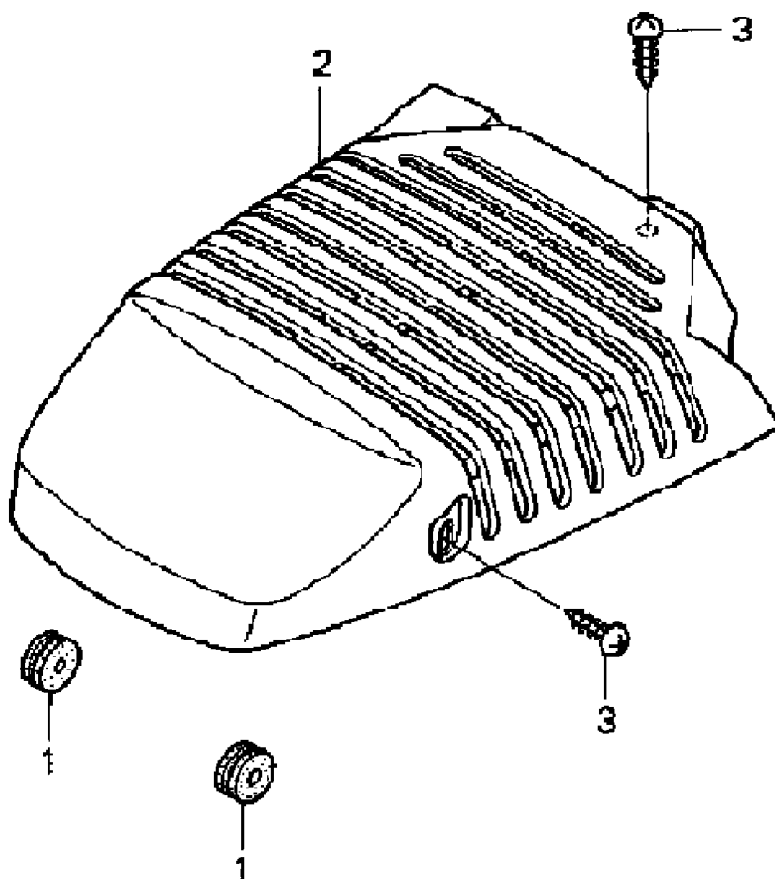


PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Top Cover Assembly

Honda Model No. Gcv160a sta1

[illegible]

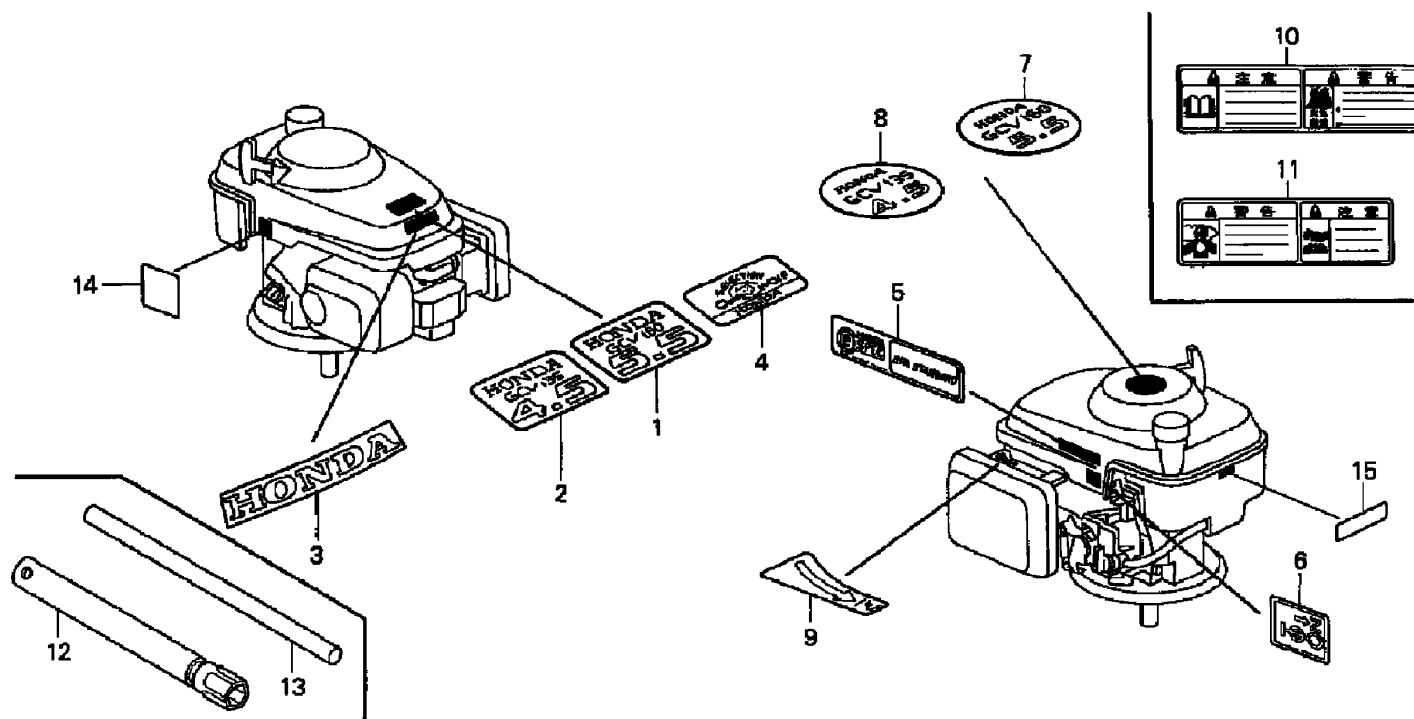

PARTS SHOWN IN ILLUSTRATION BUT NOT CALLED OUT IN PARTS LIST, MAY NOT APPLY TO THIS MODEL.

Label Assembly
Honda Model No. Gcv160a sta1

Ref	Part No.	Qty.	Description				
29	87528-Z0L-800	1	Mark, Choke Indication				
214	87594-VG3-010	1	Mark-Oil Caution				

LAWN-BOY®