



Mid-Size ProLine, T-Bar, Hydro Drive, 15 HP with 112cm Side Discharge Mower

Model No. 30299TE - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Oil Cooler Assembly	 3	Decal and Belt Assembly	 20
Pivot and Linkage Assembly	 4	Crankshaft Assembly Kohler CV15S-41620	 21
Handle Assembly	 5	Crankcase Assembly Kohler CV15S-41620	 22
Control Panel Assembly	 6	Oil Pan and Lubrication Assembly Kohler CV15S-41620	 23
Parking Brake Assembly	 7	Head, Valve and Breather Assembly Kohler CV15S-41620	 24
Fuel Tank, Hydro Pump and Power-Take-Off Assembly	 8	Ignition and Electrical Assembly Kohler CV15S-41620	 25
Hydraulic Pump Assembly No. 95-1538	 9	Blower Housing and Baffle Assembly Kohler CV15S-41620	 26
Hydraulic and Drive System Assembly	 10	Starting System Assembly Kohler CV15S-41620	 27
Wheel Motor Assembly No. 82-8230	 12	Fuel System Assembly Kohler CV15S-41620	 28
Battery Assembly	 13	Engine Control Assembly Kohler CV15S-41620	 29
Deck Assembly	 14	Air Intake and Filtration Assembly Kohler CV15S-41620	 30
Deflector Assembly No. 107-4194	 15	Exhaust Assembly Kohler CV15S-41620	 31
Spindle and Idler Assembly	 16	Attachments and Accessories List	 32
Spindle Housing Assembly No. 67-7600	 17		
Spindle Housing Assembly No. 67-7660	 18		
Carrier Frame Assembly	 19		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power take off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll over protection system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HS. hex	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

- ❶ Not illustrated
- ❸ Obtain from Kohler.


- ❷ Not serviced separately

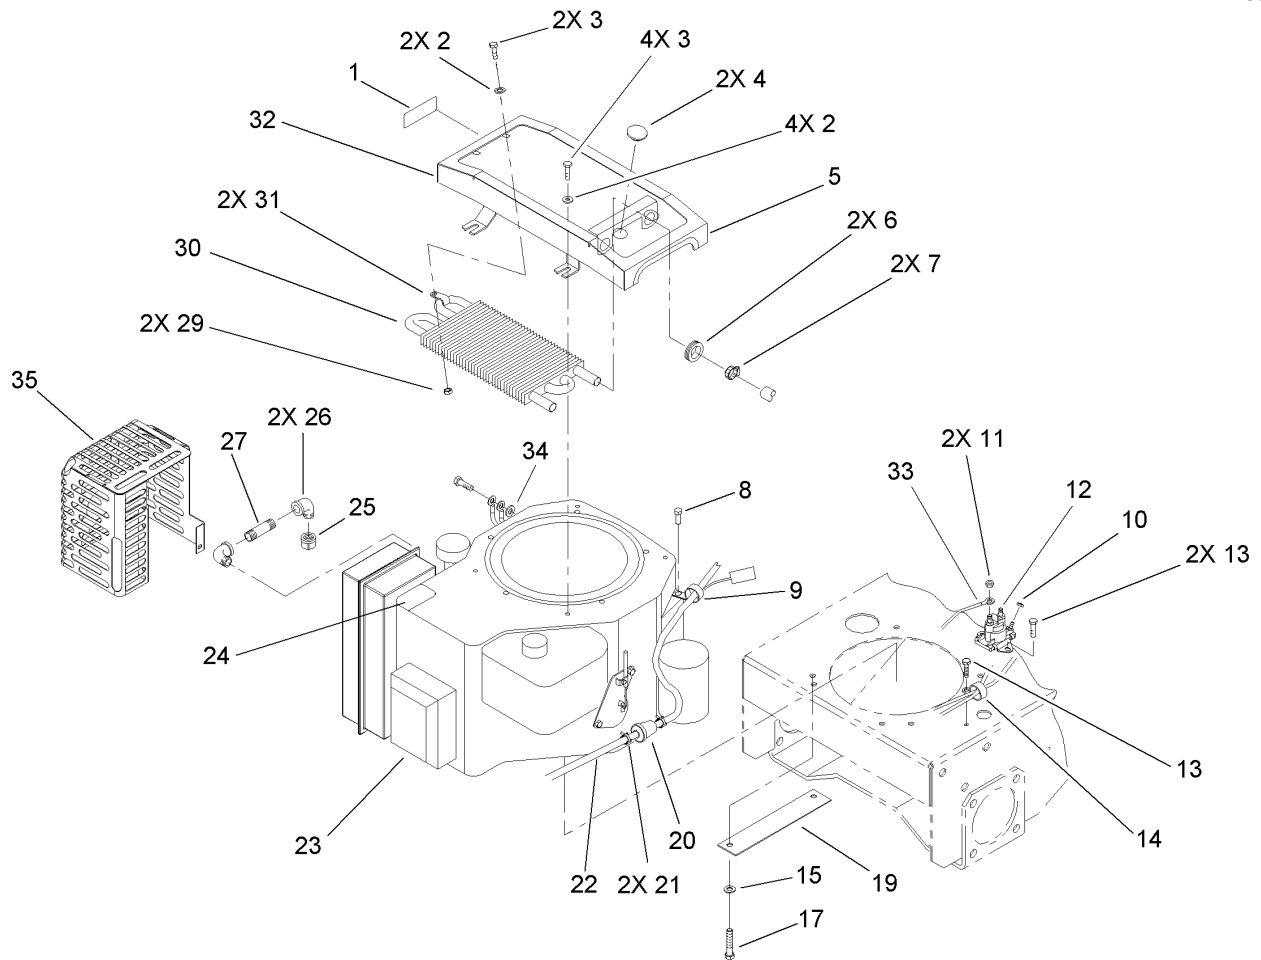

Engine and Oil Cooler Assembly

Ref	Part No.	Qty.	Description
1	93-9353	1	Decal-Shut Off, Fuel
2	3256-1	6	Washer-Flat
3	321-39	6	Screw-HH
4	2410-71	2	Plug-Plastic
5	29-0642	1	Trim-Mount, Cooler
6	240-9	2	Grommet
7	2412-136	2	Clamp-Hose
8	32144-19	1	Screw-SHWH
9	2412-106	1	Clamp-R
10	32149-8	2	Nut-Keps
11	32149-1	2	Nut-Keps
12	28-4210	1	Solenoid
13	32144-4	3	Screw-HWH
14	2412-106	1	Clamp-R
15	3256-23	4	Washer-Flat
17	57-6380	4	Screw-HH
19	94-5847-01	1	Cover-Pulley
20	56-6360	1	Filter-Fuel
21	2412-98	4	Clamp
22	47-2964	1	Hose-Fuel
23		1	Engine-Kohler, Cv15s-41620
24	93-8069	1	Decal-Surface, Hot
25	288-4	1	Cap-Pipe
26	74-0950	2	Elbow-Street, 90 DEG


Ref	Part No.	Qty.	Description
27	289-46	1	Nipple-Pipe
29	3296-42	2	Nut-Lock, NI
30	100-6480	1	Cooler-Oil
31	2412-134	2	R-Clamp
32	82-4500-03	1	Mount-Cooler
33	54-3092	1	Wire ASM
34	3255-8	1	Washer-Lock
35	105-0872-03	1	Guard-Muffler

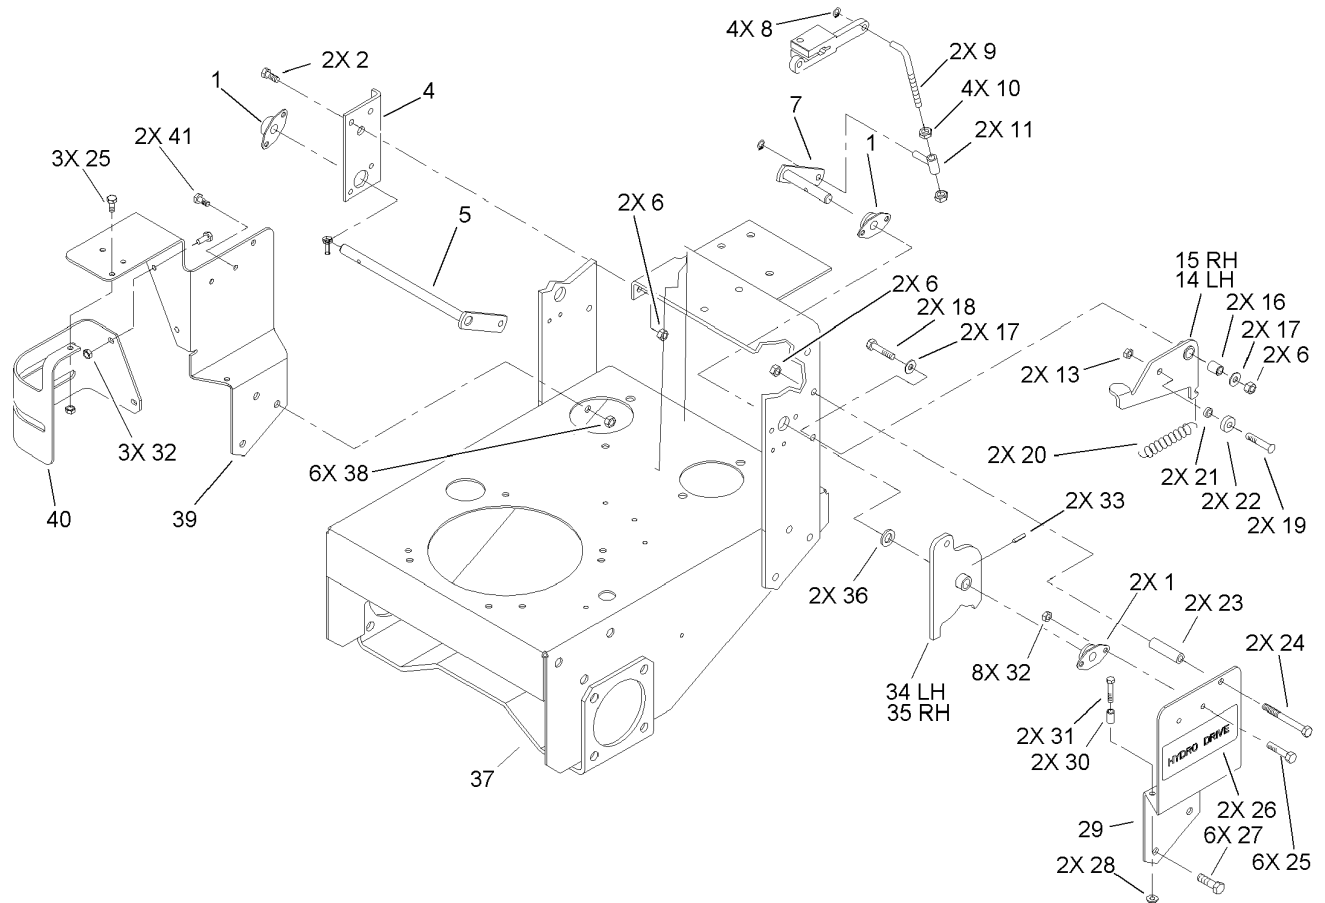

Pivot and Linkage Assembly

Ref	Part No.	Qty.	Description
1	82-4130	4	Side Flange Bearing ASM
2	322-5	4	Screw-HH
4	82-4210-01	1	Bracket-Bushing
5	94-9059	1	Lever-Pivot, RH
6	3296-29	6	Nut-Lock, NI
7	94-9057	1	Lever-Pivot, LH
8	32151-3	4	Ring-Grip, Ext
9	94-9093	2	Rod-Link
10	3218-2	4	Nut-Jam
11	94-9062	2	Sleeve
13	3296-47	2	Nut-Lock, NI
14	82-4330-01	1	Arm-Detent, LH
15	82-4340-01	1	Arm-Detent, RH
16	82-4370	2	Bushing-Arm, Detent
17	3256-23	4	Washer-Flat
18	322-7	2	Screw-HH
19	3274-32	2	Screw-HSBH
20	82-4160	2	Spring-Detent
21	82-4240	2	Spacer-Bearing
22	251-259	2	Bearing-Ball
23	82-3920	2	Stop-Reverse
24	322-14	2	Screw-HH
25	321-3	9	Screw-HH
26	106-0700	2	Decal


Ref	Part No.	Qty.	Description
27	323-6	6	Screw-HH
28	32128-10	2	Nut-Lock, HHF
29	95-1530-01	1	Bracket-Pivot, LH
30	95-1516	2	Spacer-Tubular
31	321-5	2	Screw-HH
32	3296-42	11	Nut-Lock, NI
33	32121-4	2	Pin-Roll, Slotted
34	94-9054-01	1	Arm-Pivot, LH
35	94-9061-01	1	Arm-Pivot, RH
36	257-5	2	Washer-Thrust
37	106-0726-01	1	Frame ASM
38	3296-39	6	Nut-Lock, NI
39	95-1522-01	1	Bracket-Pivot, RH
40	95-5868-01	1	Guard-Filter
41	321-3	2	Screw-HH

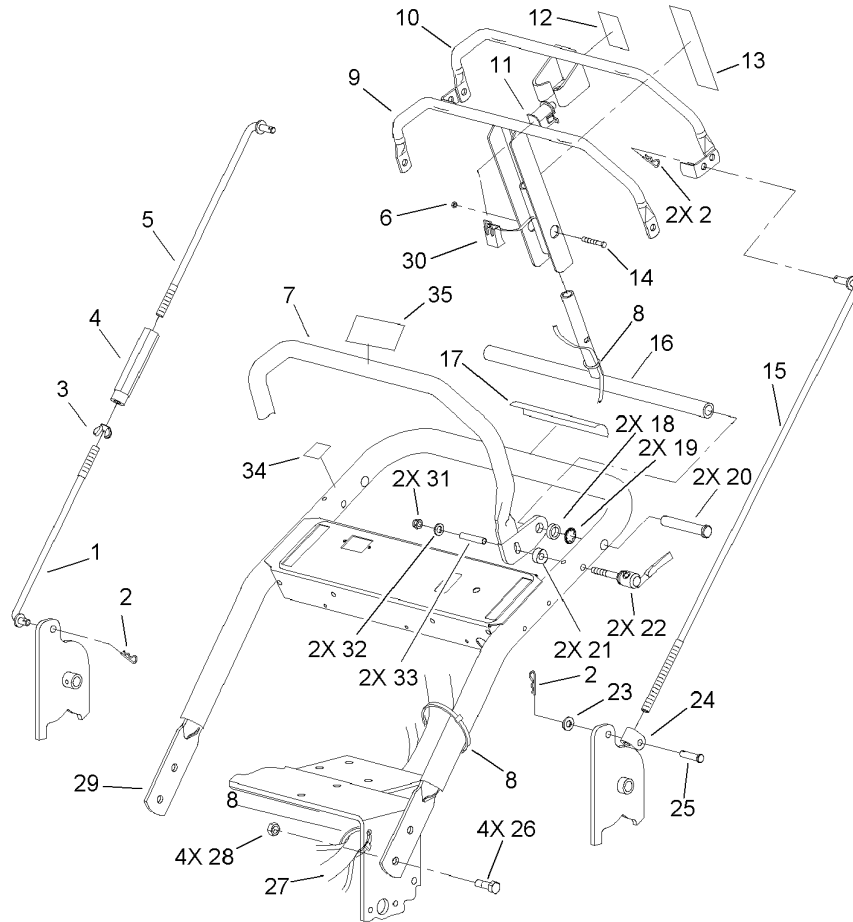

Handle Assembly


Ref	Part No.	Qty.	Description
1	95-1506	1	Rod-Control, Lower
2	3290-307	4	Pin-Hair
3	32103-3	1	Nut-Wing
4	95-1504	1	Turnbuckle
5	95-1505	1	Rod-Control, Upper
6	32153-1	1	Nut-Lock, Side
7	95-1536-03	1	Handle ASM
8	3290-378	3	Tie-Cable
9	104-6380-03	1	Control Bar ASM
10	104-6386-03	1	Bail ASM
11	82-2190	1	Switch-Bail
12	95-5850	1	Decal-Drive
13	106-0701	1	Decal
14	32105-12	1	Screw
15	94-9095	1	Rod-Control
16	104-6383-03	1	Pivot ASM
17	95-5893	1	Decal-Slope
18	95-5855	2	Spacer
19	32151-80	2	Nut-Push-On, Circular
20	283-55	2	Pin-Clevis
21	82-3840	2	Spacer
22	95-5853	2	Quick Release Lock ASM
23	3256-23	1	Washer-Flat
24	74-0521	1	Fitting-Rod

Ref	Part No.	Qty.	Description
25	283-6	1	Pin-Clevis
26	3234-11	4	Screw-HHF
27	106-0679	1	Harness-Wire
28	32128-21	4	Nut-HF
29	95-5856-03	1	Handle-Upper
30	218-595	1	Connector-Body
31	33023-00	2	Nut-Lock
32	3290-436	2	Washer-Belleville
33	95-5854	2	Sleeve
34	95-5862	1	Decal-Lock, Speed
35	98-4387	1	Decal-Protection, Ear

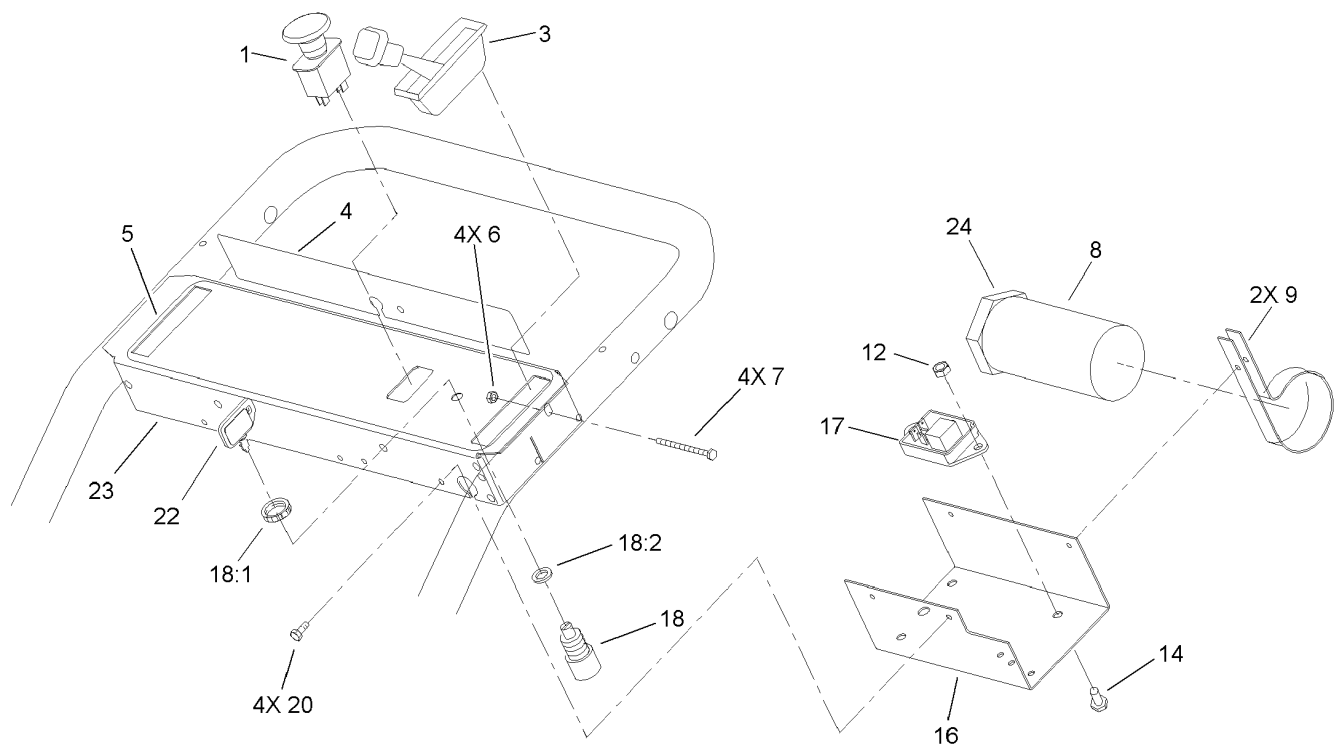


Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	104-8140	1	Switch-PTO				
3	74-0630	1	Control-Throttle				
4	95-1545	1	Decal-Warning				
5	106-0685	1	Decal-Panel, Control				
6	3296-2	4	Nut-Lock				
7	32105-14	4	Screw-SHH				
8	104-7050	1	Housing-Manual				
9	2412-120	2	R-Clamp				
12	3296-42	1	Nut-Lock, NI				
14	321-3	1	Screw-HH				
16	93-1187-03	1	Panel-Bottom				
17	104-8141	1	Module-Delay				
18	23-0660	1	Switch-Starter				
18:1	218-461	1	Nut-HH				
18:2	3254-5	1	Washer-Tooth				
20	32104-76	4	Screw				
22	63-8360	2	Key-Ignition				
23	104-8177-03	1	Panel-Control				
24	104-7048	1	Cap-Housing				

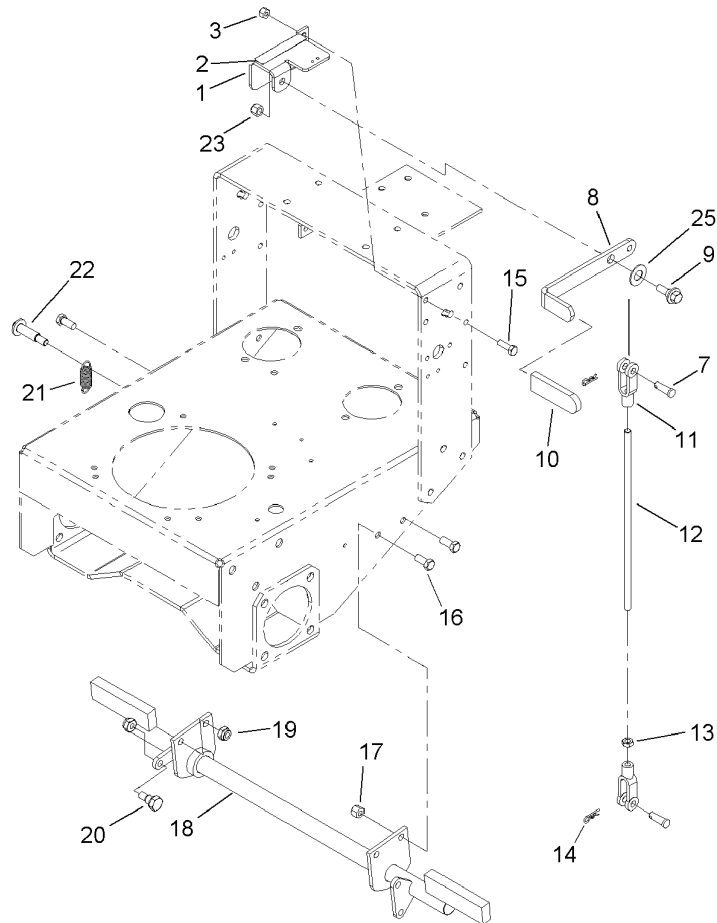

Parking Brake Assembly


Ref	Part No.	Qty.	Description				
1	106-0666-01	1	Brake Handle Support ASM				
2	106-0807	1	Decal				
3	3296-29	2	Nut-Lock, NI				
7	1-808285	2	Pin-Clevis				
8	106-0671-01	1	Handle-Brake				
9	93-2364	1	Bolt-Shoulder				
10	1-303020	1	Grip-Lever				
11	1-633131	2	Yoke-Linkage, Brake				
12	106-0670	1	Rod-Connecting, Brake				
13	3220-3	1	Nut-Jam				
14	3290-307	2	Pin-Hair				
15	322-5	2	Screw-HH				
16	323-5	3	Screw-HH				
17	3296-39	3	Nut-Lock, NI				
18	106-0660-01	1	Parking Brake ASM				
19	3296-44	2	Nut-Lock, NI				
20	27-5240	1	Bolt-Shoulder				
21	613386	1	Spring-Brake				
22	56-6590	1	Bolt-Wheel				
23	3296-6	1	Nut-Lock				
25	257-7	1	Bearing-Thrust				

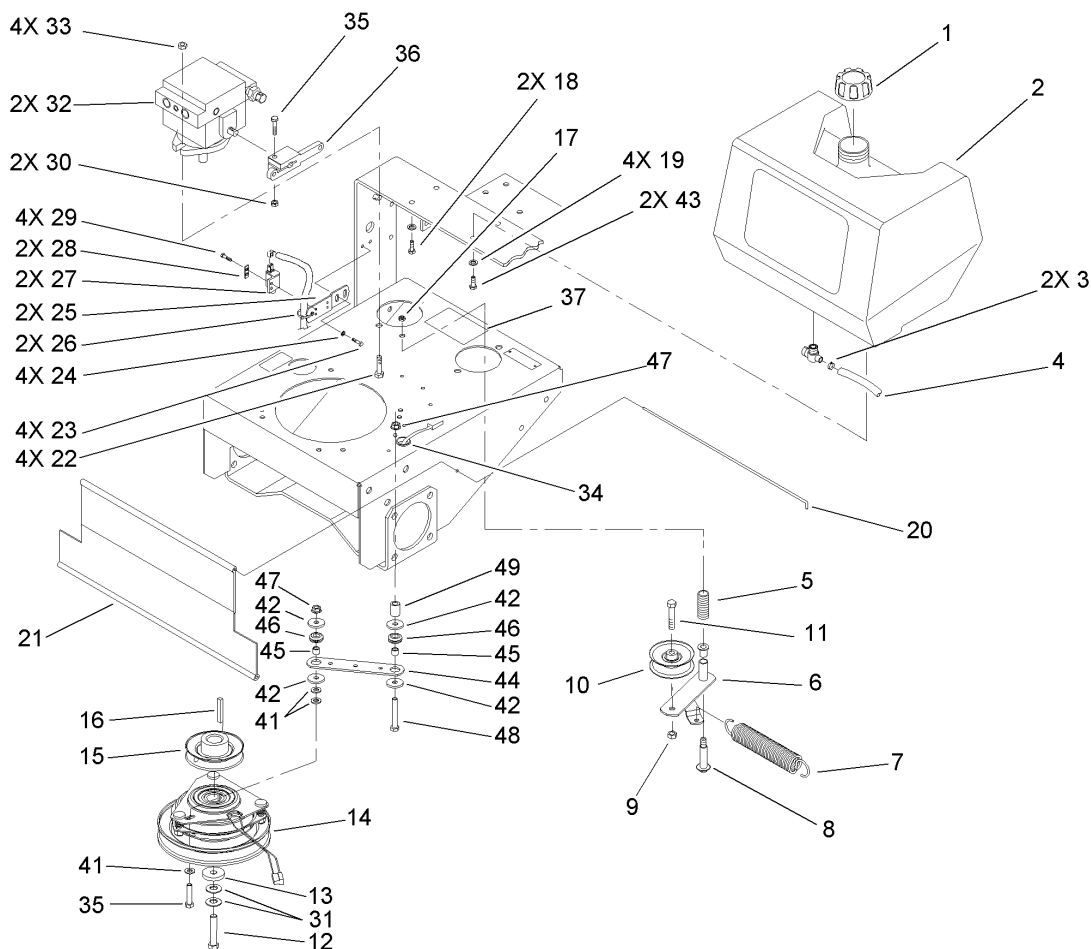

Fuel Tank, Hydro Pump and Power-Take-Off Assembly

Ref	Part No.	Qty.	Description
1	55-3570	1	Gas Cap ASM
2	95-2802	1	Tank-Fuel
3	2412-98	2	Clamp
4	47-2982	1	Hose-Fuel
5	88-1880	1	Spring-Compression
6	86-4770	1	Idle Lever ASM
7	68-2190	1	Spring
8	27-6230	1	Bolt-Wheel
9	3296-39	1	Nut-Lock, NI
10	62-4540	1	Pulley
11	323-9	1	Screw-HH
12	3212-9	1	Screw-HH
13	107-4136	1	Washer
14	105-2635	1	Clutch / Brake
15	44-5940	1	Pulley
16	608006	1	Key-Square
17	3296-6	1	Nut-Lock
18	322-3	2	Screw-HH
19	3253-4	4	Washer-Lock
20	95-1529	1	Rod-Shield
21	95-1526	1	Shield-Trailing
22	324-5	4	Screw-HH
23	32144-4	4	Screw-HWH
24	3256-1	4	Washer-Flat


Ref	Part No.	Qty.	Description
25	82-4580-03	2	Bracket-Neutral
26	3290-378	2	Tie-Cable
27	1-513051	2	Switch-Open, Normally
28	82-4570	2	Plate-Switch
29	32144-1	4	Screw-Taptite
30	3296-29	2	Nut-Lock, NI
31	1-603610	2	Washer-Spring
32	95-1538	2	HYD Pump ASM
33	32128-42	4	Nut-HF
34	237-124	1	Grommet
35	322-7	3	Screw-HH
36	82-3790	2	Arm-Pump
37	95-5851	1	Decal-Valve
41	3256-23	3	Washer-Flat
42	1-613235	4	Washer
43	322-4	2	Screw-HH
44	1-633543-03	1	Strap-Clutch, Brake
45	1-633545	2	Spacer
46	1-633630	2	Grommet-Brake
47	32128-20	2	Nut-HF
48	322-11	1	Screw-HH
49	104-6373	1	Tube-Retainer

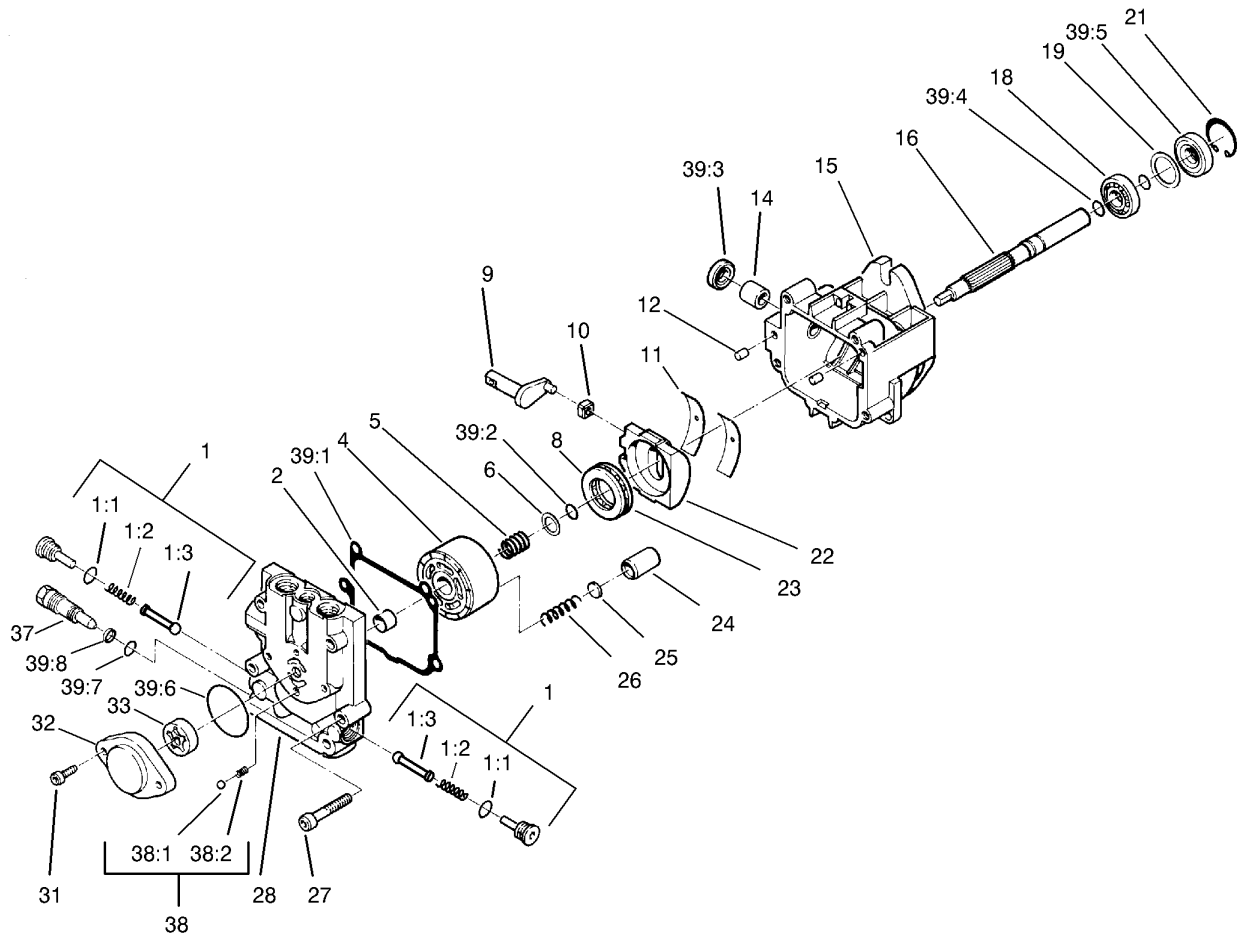

Hydraulic Pump Assembly No. 95-1538

Ref	Part No.	Qty.	Description
1	80-6120	2	Check Valve Kit
21:1		1	O-Ring
21:2		1	Spring
21:3		1	Poppet
22		1	Journal-Bearing
24		1	Block-Cylinder
25		1	Spring
26		1	Washer
28		1	Plate-Thrust
29		1	Arm-Trunion
210		1	Guide-Slot
211		2	Cradle-Bearing
212		2	Pin
214		1	Journal-Bearing
215		1	Housing
216		1	Shaft
218		1	Bearing-Ball
219		1	Spacer
221		1	Ring-Retaining
222		1	Swashplate ASM
223		1	Roller-Thrust
224		5	Piston
225		5	Washer-Thrust
226		5	Spring-Piston
227		4	Screw

Ref	Part No.	Qty.	Description
228		1	Cap-End
231		2	Screw
232		1	Housing-Pump, Charge
233		1	Gerotor ASM
237		1	Valve-Bypass
38	80-6110	1	Relief Valve Charge Kit
238:1		1	Ball
238:2		1	Spring
239	80-6130	1	Seal Kit
239:1		1	Gasket-Cap, End
239:2		1	Ring-Retaining
239:3		1	Seal-Lip
239:4		2	Ring-Retaining
239:5		1	Seal-Lip
239:6		1	O-Ring
239:7		1	O-Ring
239:8		1	Ring-Back Up

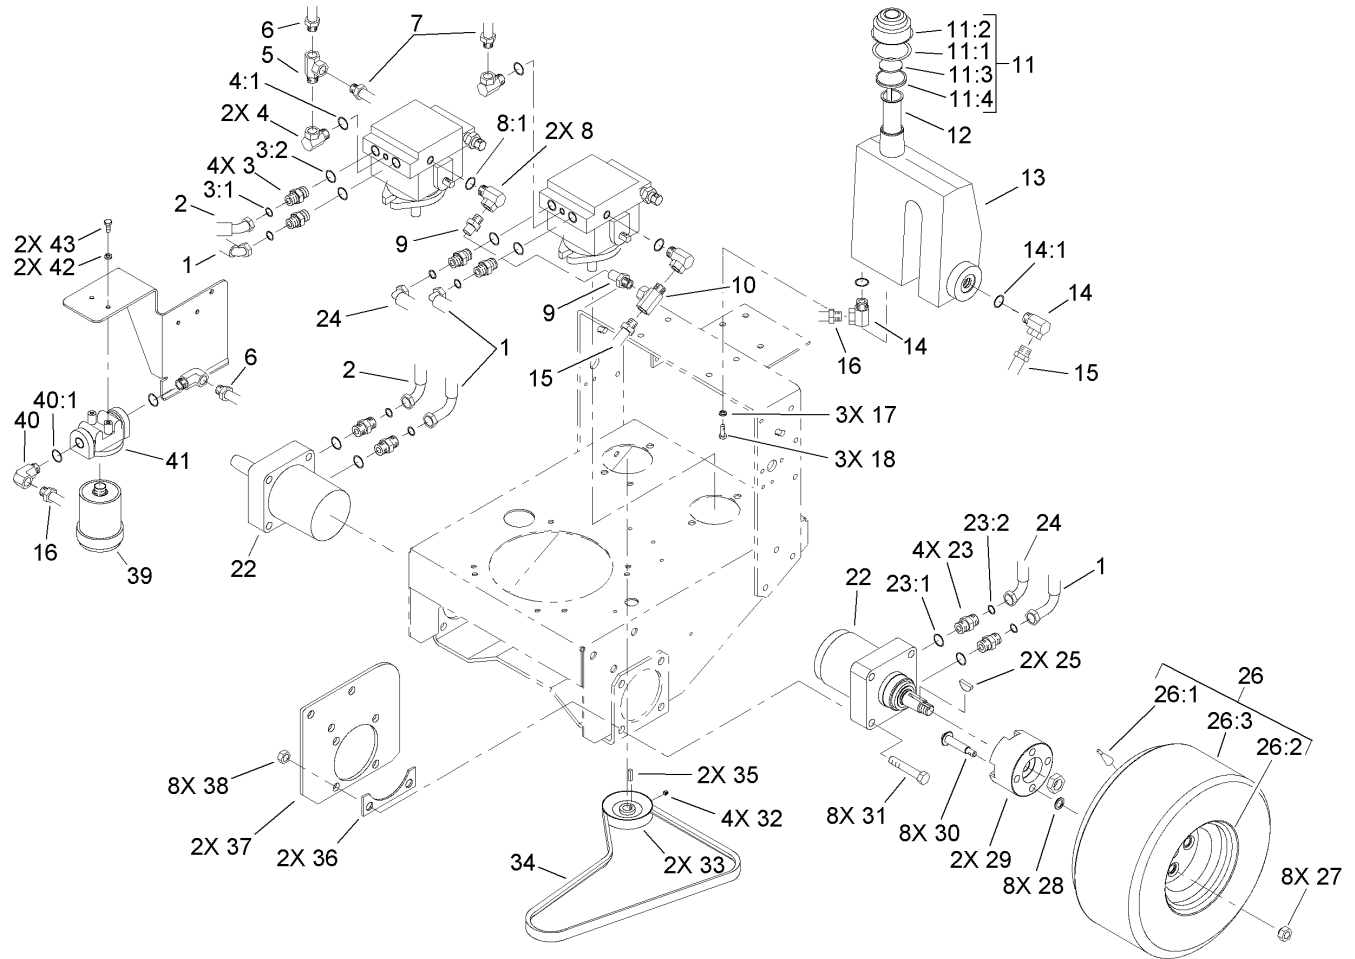


Hydraulic and Drive System Assembly

Ref	Part No.	Qty.	Description
1	106-0825	2	HYD Hose ASM
2	106-0824	1	HYD Hose ASM
3	340-4	4	Fitting-Hyd, Straight
3:1	237-30	1	O-Ring
3:2	237-79	1	O-Ring
4	354-116	2	Swivel-Pipe, Female
4:1	237-78	1	O-Ring
5	2815-16	1	Fitting-Hyd, Tee
6	95-5880	1	HYD Hose ASM
7	82-4170	1	HYD Hose ASM
8	354-115	2	Fitting-Hyd, 90 DEG
8:1	237-42	1	O-Ring
9	82-4201	1	HYD Hose ASM
10	2815-15	1	Fitting-Hyd, Tee
11	76-0200	1	Oil Cap ASM
11:1	237-71	1	O-Ring
11:2	76-0190	1	Cap-Oil
11:3	76-0220	1	Foam-Filter, Oil Cap
11:4	76-0240	1	Dipstick
12	29-0590	1	Screen-Filler
13	95-1532	1	Reservoir-Oil
14	354-118	2	Fitting-Hyd, 90 DEG
14:1	237-79	1	O-Ring
15	82-4194	2	HYD Hose ASM


Ref	Part No.	Qty.	Description
16	82-4200	1	HYD Hose ASM
17	3253-4	3	Washer-Lock
18	322-3	3	Screw-HH
22	82-8230	2	Wheel Motor ASM
23	340-6	4	Fitting-Hyd, Straight
23:1	237-30	1	O-Ring
23:2	237-80	1	O-Ring
24	106-0826	1	HYD Hose ASM
25	3257-8	2	Key-Woodruff
26		2	Wheel And Tire ASM
26:1	232-27	1	Stem-Valve
26:2	242-87	1	Wheel
26:3	231-117	1	Tire
27	242-50	8	Nut-Lug
28	32112-17	8	Pushnut
29	82-3830	2	Hub-Wheel
30	3213-8	8	Screw-HH
31	325-11	8	Screw-HH
32	3241-5	4	Screw-Set
33	95-1528	2	Pulley-Pump
34	82-4110	1	V-Belt
35	80-6090	2	Key-Pump
36	86-4740-01	2	Spacer-Frame
37	86-4730-01	2	Plate-Frame



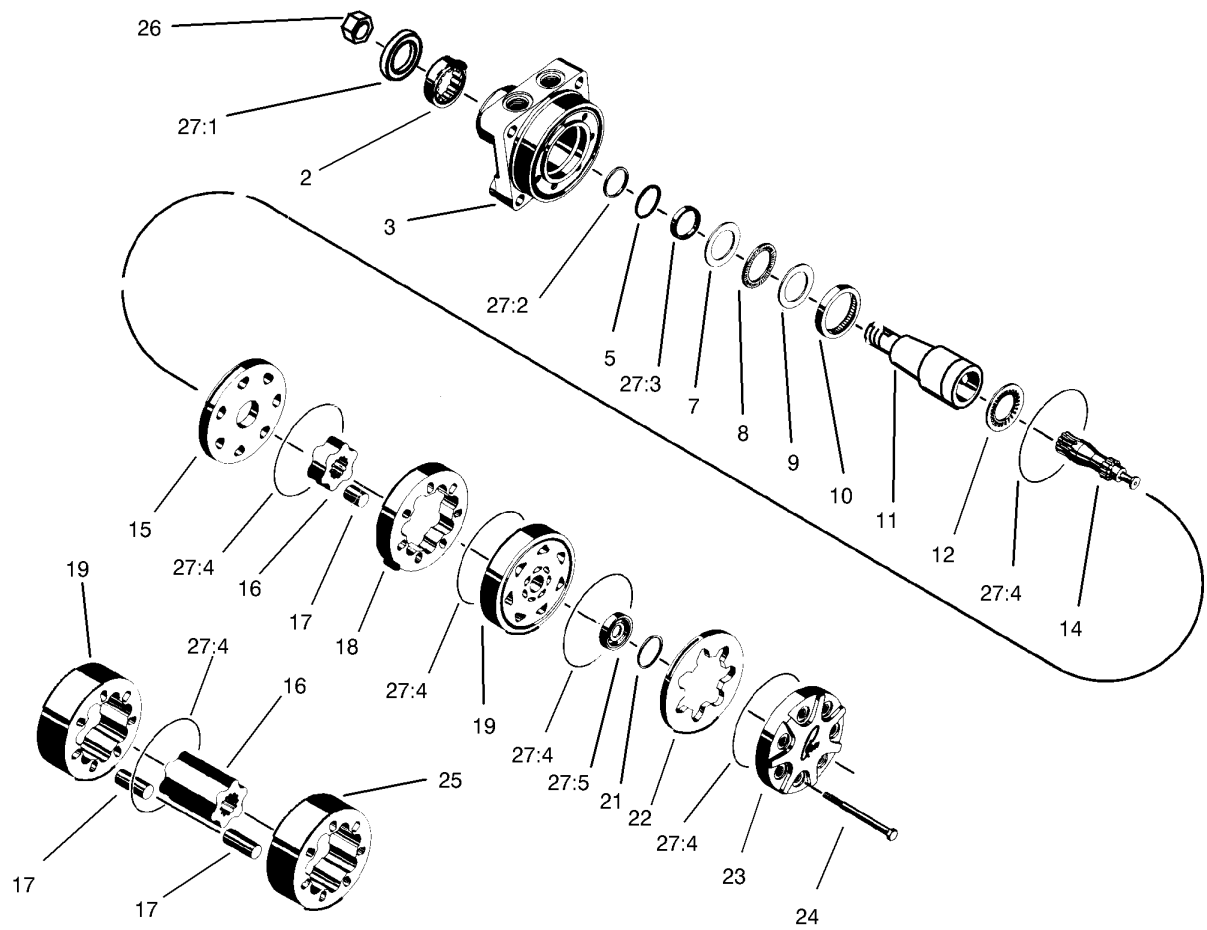


Wheel Motor Assembly No. 82-8230

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2		1	Bearing	27:4		5	O-Ring
3		1	Housing	27:5		1	Commutator
5		1	Washer-Back Up				
7		1	Washer-Thrust				
8		1	Bearing-Thrust				
9		1	Washer-Thrust				
10		1	Bearing-Inner				
11		1	Coupling-Shaft				
12		1	Bearing-Thrust				
14		1	Link-Drive				
15		1	Plate-Wear				
16		1	Rotor				
17		7	Vane				
18		1	Stator				
19		1	Manifold				
21		1	Seal-Commutator				
22		1	Commutator-Ring				
23		1	Cover-End				
24		1	Bolt-Special				
25		1	Stator-Half				
26	85-7310	1	Nut-Motor, Wheel				
27	85-7320	1	Seal Kit				
27:1		1	Seal				
27:2		1	Washer-Back Up				
27:3		1	Seal				

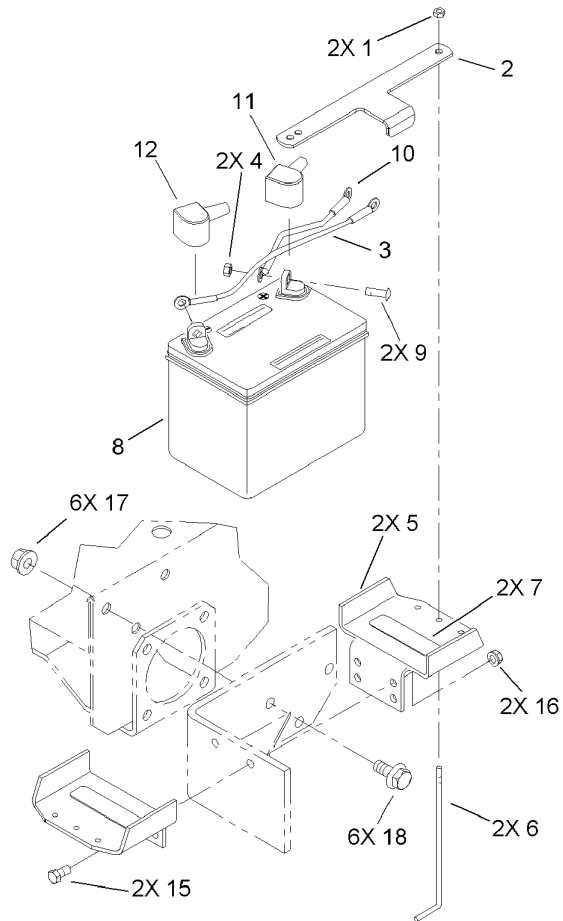

Battery Assembly


Ref	Part No.	Qty.	Description				
1	3296-42	2	Nut-Lock, NI				
2	104-8568-03	1	Plate-Hold Down, Battery				
3	54-3094	1	Wire ASM				
4	32149-1	2	Nut-Keps				
5	92-2350-01	2	Holder-Battery				
6	12-5950	2	Rod-Support, Battery				
7	51-4210	2	Pad-Tank, Fuel				
8	104-8162	1	Battery				
9	322-3	2	Screw-HH				
10	100-6457	1	Cable-Battery, Red				
11	77-0981	1	Boot-Terminal, Red				
12	77-0980	1	Boot-Terminal, Black				
15	323-9	2	Screw-HH				
16	3296-39	2	Nut-Lock, NI				
17	32128-23	6	Nut-HF				
18	3234-32	6	Screw-HHF				

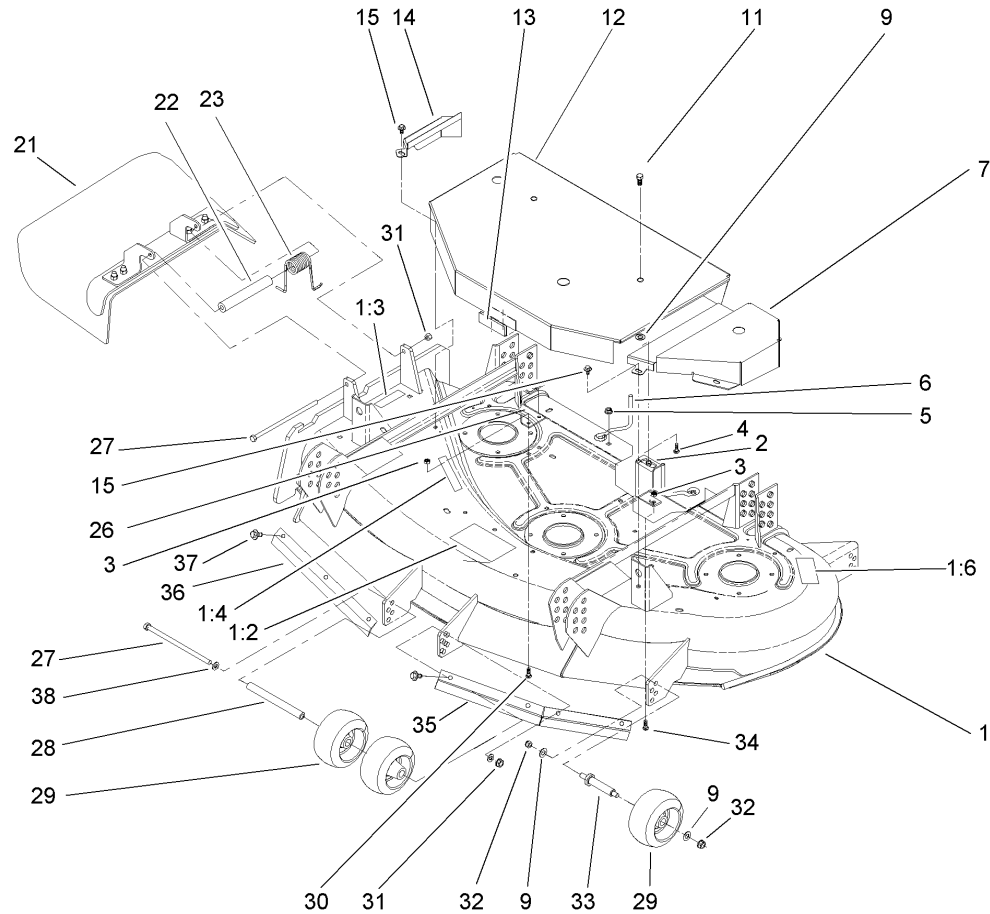

Deck Assembly


Ref	Part No.	Qty.	Description
1	107-4247	1	112cm Deck ASM
1:2	93-7824	1	Decal-Danger
1:3	93-7828	1	Decal-Warning, Deflector
1:4	93-7273	1	Decal-Danger
1:6	93-7818	1	Decal-Torque, Blade Bolt
2	54-3240-03	1	LH Cover Bracket ASM
3	3296-42	4	Nut-Lock, NI
4	3230-2	2	Bolt-CARR
5	32128-13	2	Nut-HF
6	52-4780	2	Rod-Belt
7	54-2220-01	1	Cover-Deck, LH
9	3256-24	6	Washer-Flat
11	323-4	2	Screw-HH
12	54-3190-01	1	Cover-Center
13	29-0641	5	Trim-Jiffy
14	54-2250-01	1	Cover-Deck, RH
15	9266714	5	Screw-HWH
21	107-4194	1	Deflector ASM
22	105-4622	1	Spacer
23	104-8554	1	Spring-Torsion
26	54-3230-03	1	RH Cover Bracket ASM
27	322-50	2	Screw-HH
28	98-5967	1	Spacer-Wheel
29	68-2730	4	Wheel-Gage

Ref	Part No.	Qty.	Description
30	3229-1	2	Screw-CARR
31	3296-29	2	Nut-Lock, NI
32	3296-39	4	Nut-Lock, NI
33	99-2842	2	Spacer
34	3229-3	2	Screw-CARR
35	99-4578-01	1	Guard-Lh, Intl
36	99-4579-01	1	Guard-Rh, Intl
37	32144-14	7	Screw-HWH
38	3256-23	2	Washer-Flat

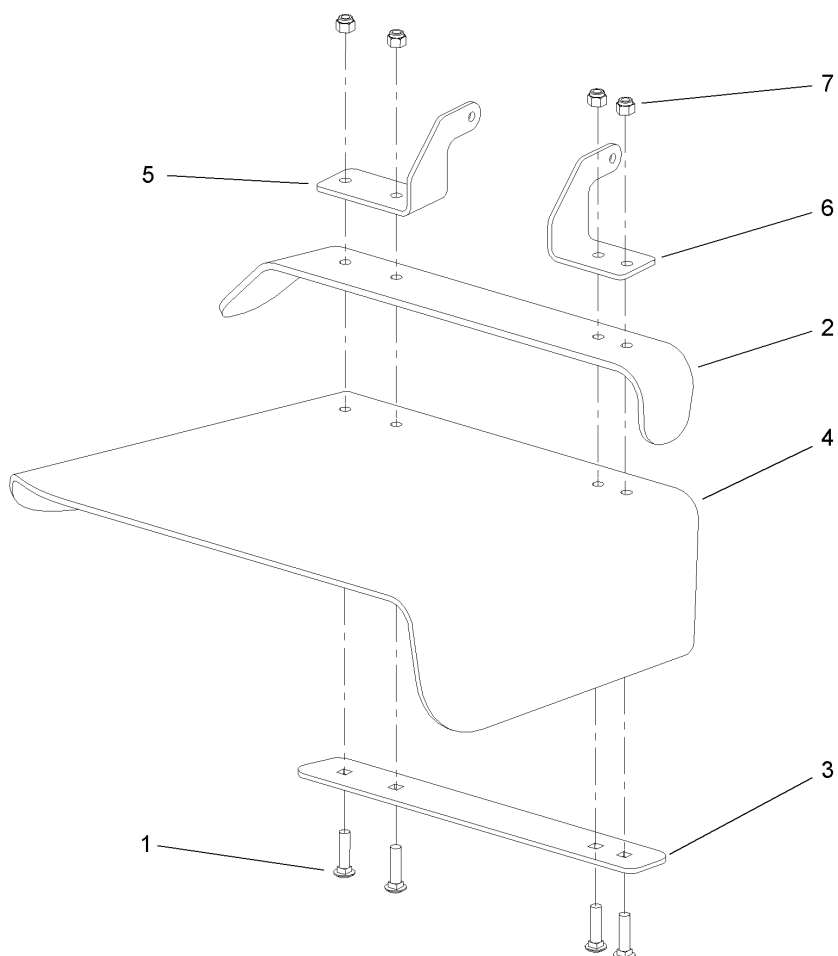


Deflector Assembly No. 107-4194

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

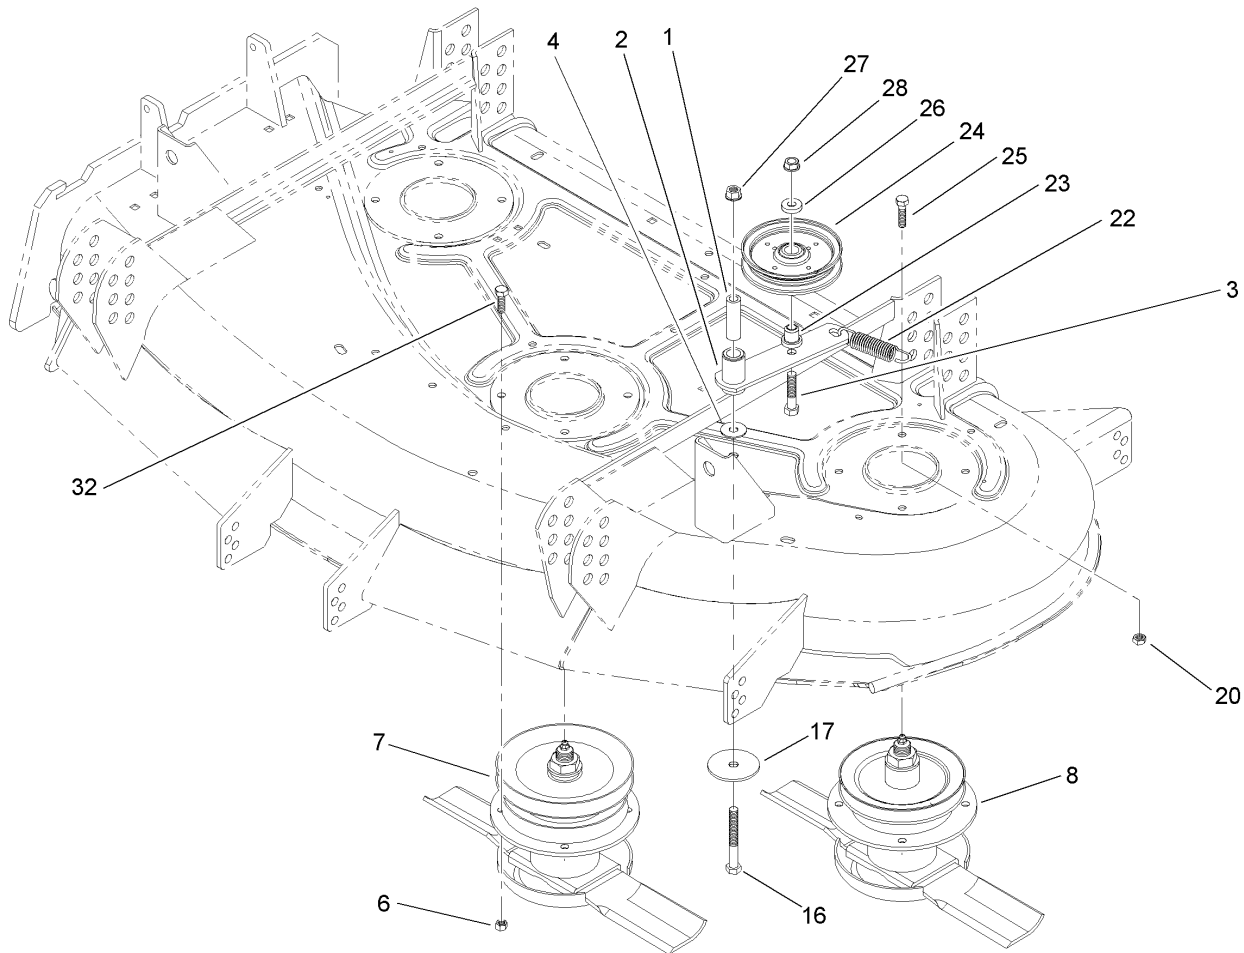


Spindle and Idler Assembly

Ref	Part No.	Qty.	Description				
1	79-2760	1	Spacer				
2	92-1657	1	Idler Arm ASM				
3	3211-8	1	Screw-HH				
4	52-2860	1	Washer				
6	32152-1	12	Nut-Lock, Cone				
7	67-7600	1	Spindle Housing ASM				
8	67-7660	2	Spindle Housing ASM				
16	323-13	1	Screw-HH				
17	20-9530	1	Washer-End				
20	3218-2	1	Nut-Jam				
22	54-2730	1	Spring-Extension				
23	65-5950	1	Bushing-Pulley				
24	65-5940	1	Pulley-Idler				
25	322-6	1	Screw-HH				
26	7-0081	1	Washer-Flat				
27	32128-19	1	Nut-HF				
28	3296-5	1	Nut-Lock				
32	322-4	11	Screw-HH				

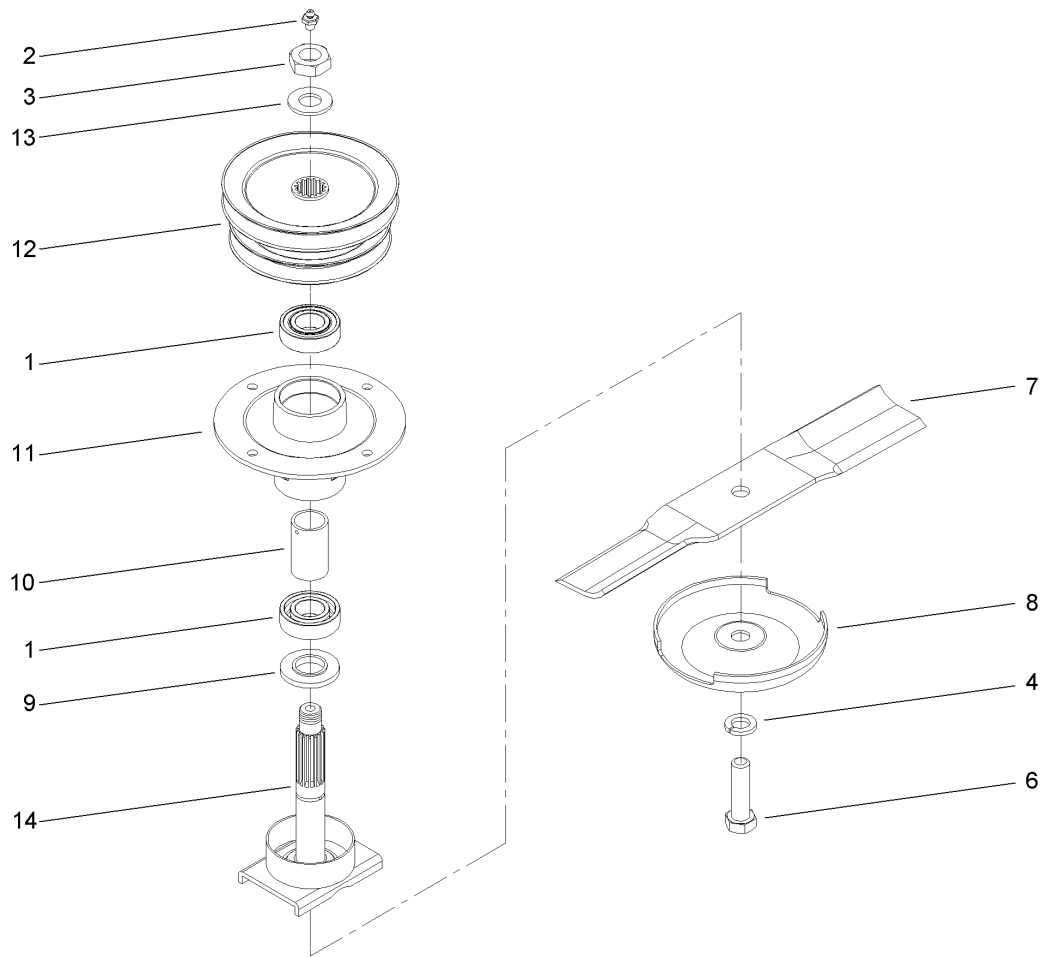


Spindle Housing Assembly No. 67-7600

Ref	Part No.	Qty.	Description				
1	251-257	2	Bearing-Ball				
2	302-2	1	Fitting-Grease				
3	32146-20	1	Nut-Jam				
4	3253-8	1	Washer-Lock				
6	51-4060	1	Screw-Blade				
7	54-0010-03	1	Blade				
8	67-7561	1	Cup-Scalp, Anti				
9	67-7570	1	Spacer-Spindle				
10	67-7580	1	Spacer-Bearing				
11	67-7590	1	Housing-Spindle				
12	67-7650	1	Pulley-Center				
13	106-0776	1	Washer-Pinion				
14	71-2790-03	1	Spindle ASM				

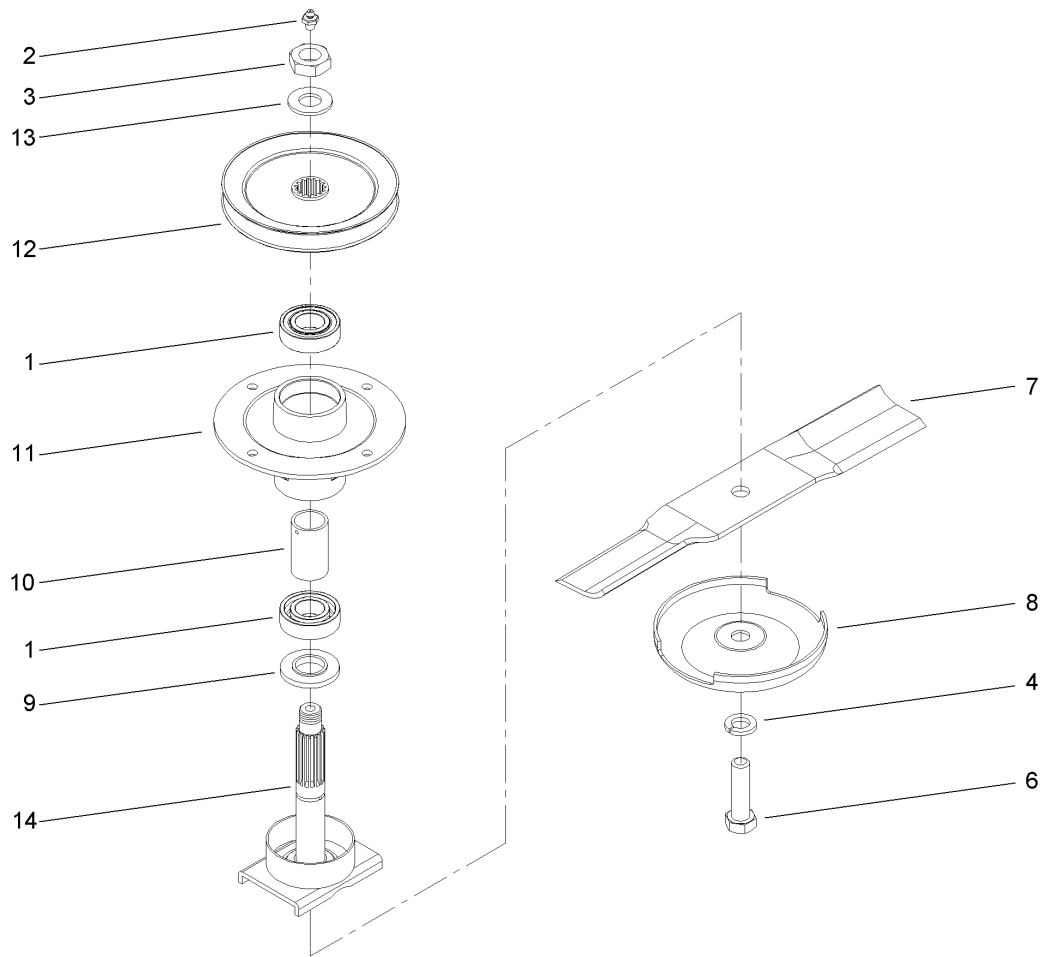

Spindle Housing Assembly No. 67-7660


Ref	Part No.	Qty.	Description				
1	251-257	2	Bearing-Ball				
2	302-2	1	Fitting-Grease				
3	32146-20	1	Nut-Jam				
4	3253-8	1	Washer-Lock				
6	51-4060	1	Screw-Blade				
7	54-0010-03	1	Blade				
8	67-7561	1	Cup-Scalp, Anti				
9	67-7570	1	Spacer-Spindle				
10	67-7580	1	Spacer-Bearing				
11	67-7590	1	Housing-Spindle				
12	67-7690	1	Pulley-Deck				
13	106-0776	1	Washer-Pinion				
14	71-2780-03	1	Spindle Shaft ASM				

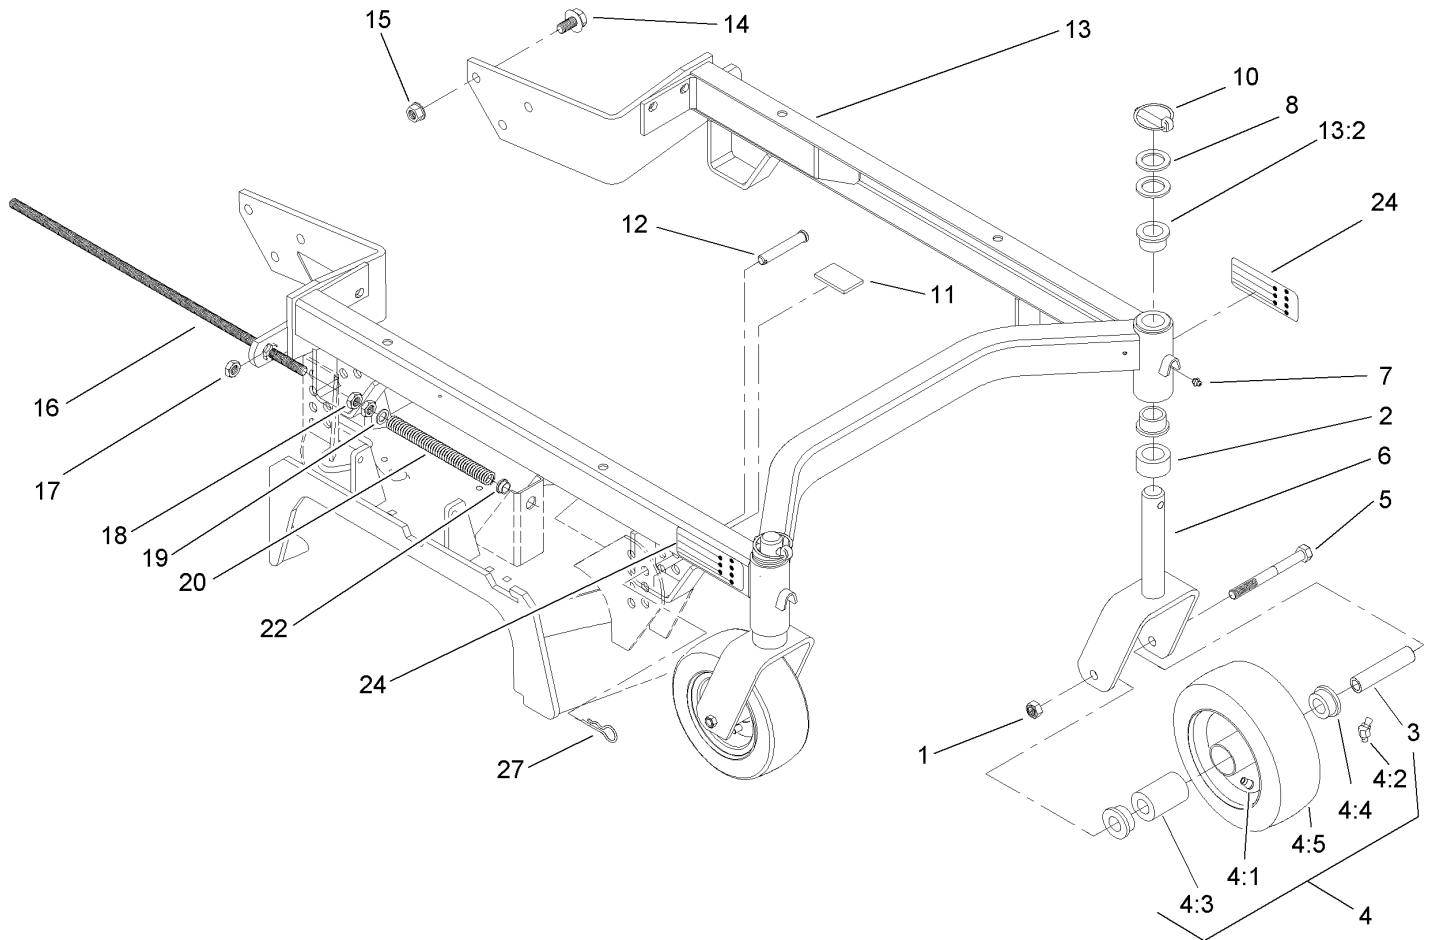

Carrier Frame Assembly


Ref	Part No.	Qty.	Description
1	32153-5	2	Nut-Lock, Side
2	93-1166	2	Spacer-Castor
3	100-6453	2	Bushing-Spanner
4	100-6451	2	Castor Wheel ASM
4:1	232-27	1	Stem-Valve
4:2	302-11	1	Fitting-Lube, 45 DEG
4:3	83-4740	1	Bearing
4:4	62-5580	2	Bearing-Outside
4:5	100-6452	1	Tire-Tubeless
5	325-19	2	Screw-HH
6	100-6455-01	2	Castor Fork ASM
7	302-5	2	Fitting-Grease
8	3-6781	8	Washer-Thrust
10	3290-384	2	Pin-Lynch
11	74-0340	4	Cushion-Rubber
12	283-55	4	Pin-Clevis
13	94-4175	1	Frame ASM
13:2	94-1291	4	Bushing
14	3234-6	6	Screw-HHF
15	32128-23	6	Nut-HF
16	74-0310	2	Shaft-Adjusting
17	3296-45	2	Nut-Lock, NI
18	3218-5	4	Nut-Jam
19	41-8440	2	Washer

Ref	Part No.	Qty.	Description
20	74-0290	2	Spring
22	256-156	2	Bushing-Flange
24	93-7819	2	Decal-HOC
27	3290-355	4	Pin-Hair

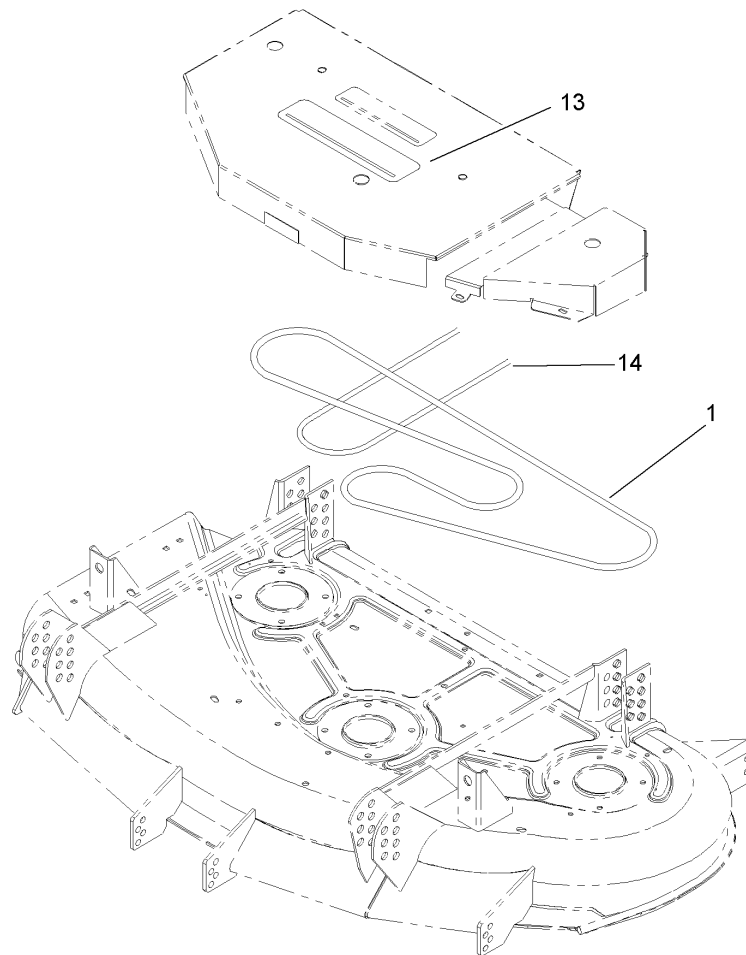


Decal and Belt Assembly

Ref	Part No.	Qty.	Description
1	27-1160	1	V-Belt
13	106-0713	1	Decal
14	54-2750	1	V-Belt, Drive

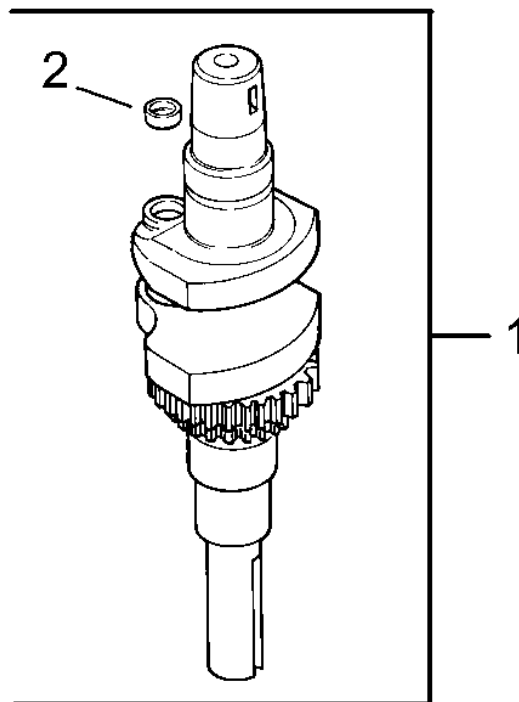


Crankshaft Assembly Kohler CV15S-41620

Ref	Part No.	Qty.	Description
②1	12 014 30-S	1	Crankshaft (Incl. Ref. #2)
②2	12 139 01-S	1	Plug-Cup

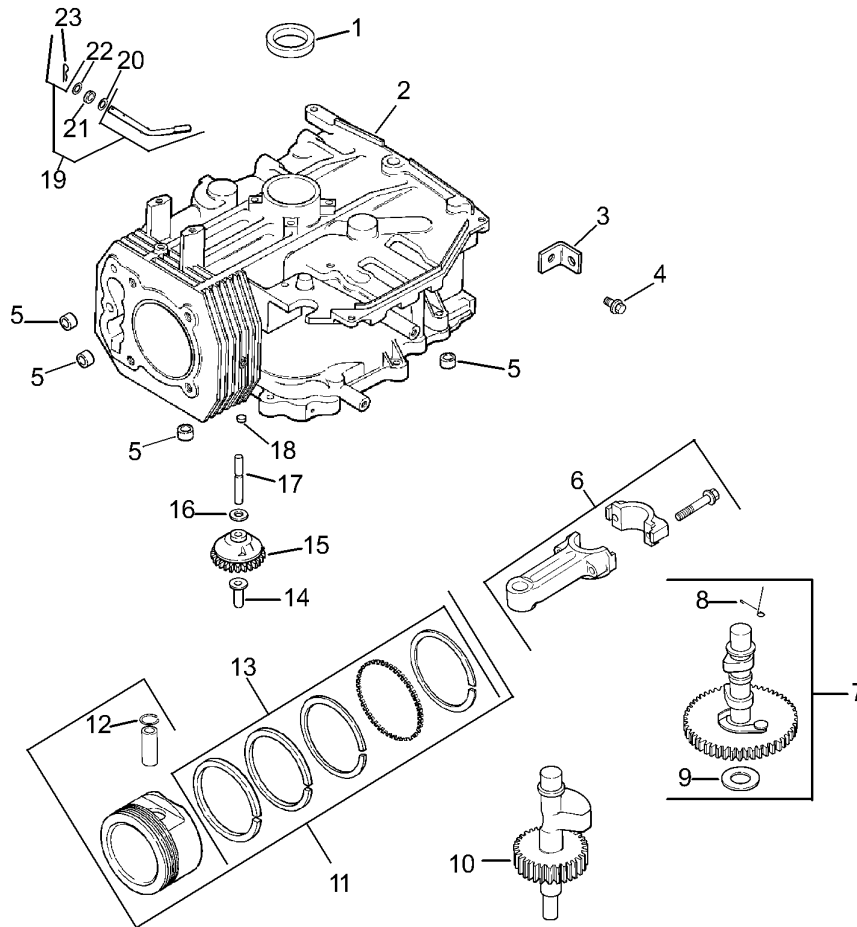


Crankcase Assembly Kohler CV15S-41620

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	12 032 03-S	1	Seal-Oil, Front	❶	12 108 08-S	1	Ring Set (.25)
❷		1	Crankcase	❷	12 108 09-S	1	Ring Set (.50)
❸	12 445 02-S	1	Strap-Lifting	❶14	12 380 01-S	1	Pin-Regulating, Governor
❹	M-839025-S	1	Screw-HF (M8x1.25x25)	❶15	12 043 05-S	1	Gear-Governor
❺	24 380 13-S	4	Pin-Locating	❶16	M-631005-S	1	Washer-Plain (6mm)
❻	12 067 05-S	1	Rod-Connecting (Std.)	❶17	12 144 02-S	1	Shaft-Gear, Governor
❼	12 067 06-S	1	Rod-Connecting (.25)	❶18	52 139 09-S	1	Plug-Cup
❽	12 755 49-S	1	Kit, Camshaft (Incl. Ref. #8 And 9)	❶19	12 755 64-S	1	Kit, Governor Cross Shaft W/clip (Incl. Ref. #23)
❽8	12 089 31-S	1	Spring-Actuating				
❽9	12 422 08-S	0	Shim-Camshaft, Blue	❶20	X-25-102-S	1	Washer-Plain, 1/4in
❽	12 422 09-S	0	Shim-Camshaft, Red	❶21	12 032 01-S	1	Seal-Cross Shaft, Governor
❽	12 422 10-S	1	Shim-Camshaft, Yellow	❶22	M-631015-S	1	Washer-Plain (6mm)
❽	12 422 11-S	0	Shim-Camshaft, Green	❶23	12 154 05-S	1	Clip-Pin, Hitch
❽	12 422 12-S	0	Shim-Camshaft, Gray				
❽	12 422 13-S	0	Shim-Camshaft, Black				
❽	12 422 07-S	0	Shim-Camshaft, White				
❶10	12 144 27-S	1	Shaft-Balance				
❶11	12 874 07-S	1	Piston W/ring Set (Std.)(Incl. Ref. #12 And 13)				
❽	12 874 11-S	1	Piston W/ring Set (.08)				
❽	12 874 08-S	1	Piston W/ring Set (.25)				
❽	12 874 09-S	1	Piston W/ring Set (.50)				
❶12	12 018 02-S	2	Retainer-Pin, Piston				
❶13	12 108 07-S	1	Ring Set (Std. And .08)				

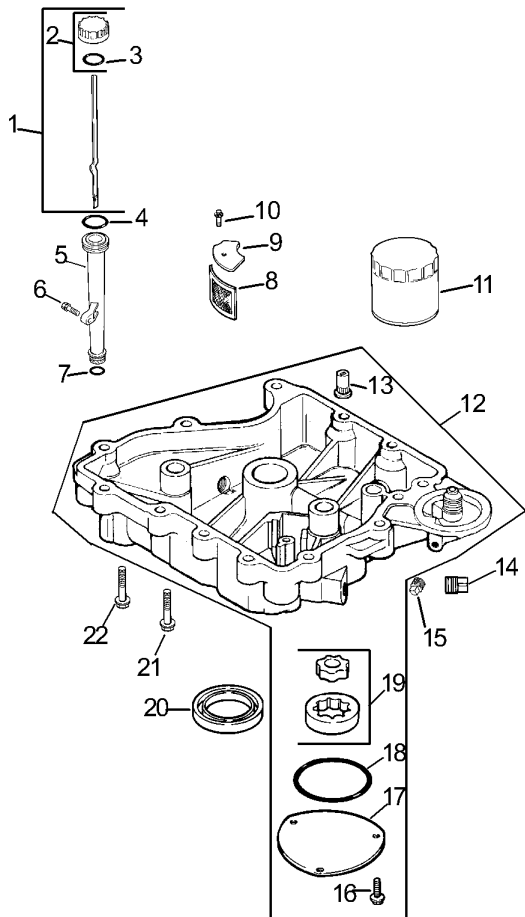

Oil Pan and Lubrication Assembly
Kohler CV15S-41620


Ref	Part No.	Qty.	Description				
❶1	12 038 01-S	1	Dipstick Assembly (Incl. Ref. #2 And 3)				
❷2	25 755 13-S	1	Kit, Oil Fill Cap (Incl. Ref. #3)				
❸3	25 153 02-S	1	O-Ring				
❹4	12 153 02-S	1	O-Ring				
❺5	12 123 04-S	1	Tube-Fill, Oil				
❻6	M-545020-S	1	Screw-HF (M5x0.8x20)				
❼7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)				
❽8	25 162 07-S	1	Screen-Pickup, Oil				
❾9	12 096 03-S	1	Cover-Screen, Oil Pickup				
❿10	M-545016-S	1	Screw-HF (M5x0.8x16)				
❶11	52 050 02-S	1	Filter-Oil				
❶12	12 199 50-S	1	Pan Assembly, Oil (Incl. Ref. #13 And 16-19)				
❶13	25 462 09-S	1	Valve-Relief, Oil Pressure				
❶14	25 139 57-S	2	Plug-SQH (3/8in Nptf)				
❶15	25 139 52-S	1	Plug-Pipe (1/8in)				
❶16	M-545016-S	3	Screw-HF (M5x0.8x16)				
❶17	12 096 34-S	1	Cover-Pump, Oil				
❶18	12 153 06-S	1	O-Ring (Oil Pump Cover)				
❶19	12 393 01-S	1	Oil Pump ASM				
❶20	12 032 03-S	1	Seal-Oil, Front				
❶21	24 086 16-S	10	Screw-HF (M8x1.25x45)				
❶22	24 086 17-S	1	Screw-HF (M8x1.25x45)				

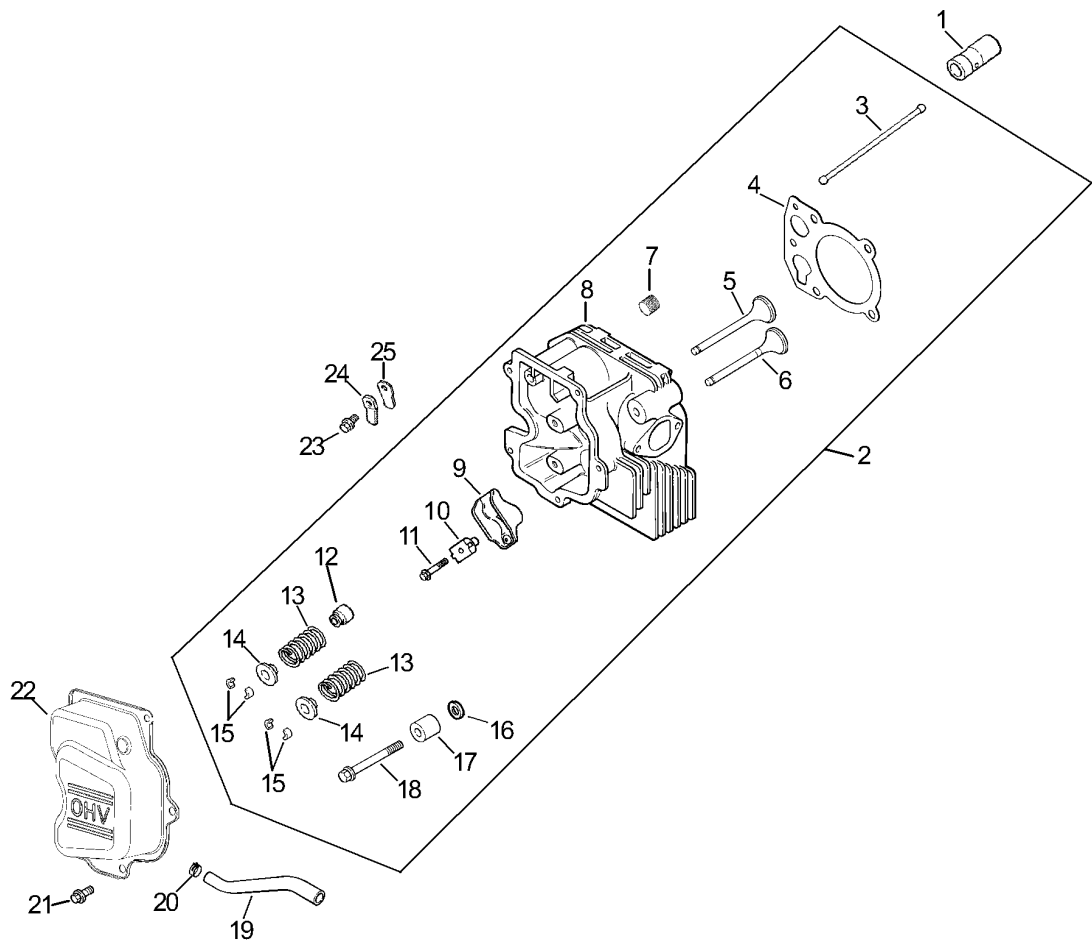

Head, Valve and Breather Assembly
Kohler CV15S-41620


Ref	Part No.	Qty.	Description
❶1	25 351 01-S	2	Lifter-Valve
❶2	12 755 81-S	1	Kit, Cylinder Head (Incl. Ref. #3-18, Carburetor Gasket 12 041 01-S (2), Air Cleaner Base Gasket 12 041 02-S, & Exhaust Manifold Gasket 12 041 03-S)
❶3	12 411 04-S	2	Rod-Push
❶4	12 041 10-S	1	Gasket-Head, Cylinder
❶5	12 017 01-S	1	Valve-Intake (Std.)
❶6	12 016 01-S	1	Valve-Exhaust (Std.)
❶7	25 139 60-S	1	Plug-Pipe, 1/8in Allen Head
❶8	12 318 19-S	1	Head-Cylinder
❶9	25 186 01-S	2	Arm-Rocker
❶10	12 599 03-S	2	Pivot-Arm, Rocker
❶11	M-640034-S	2	Screw-HF (M6x1.0x34)
❶12	66 032 05-S	2	Seal-Stem, Valve
❶13	12 089 34-S	2	Spring-Valve
❶14	12 173 01-S	2	Cap-Spring, Valve
❶15	12 755 03-S	2	Retainer Kit
❶16	12 468 05-S	1	Washer-Plain (13/32in)
❶17	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port
❶18	20 086 02-S	5	Screw-HF (M10x1.5x81)
❶19	25 237 14-S	2	Clamp
❶20	12 326 18-S	1	Hose-Breather
❶21	M-645016-S	5	Screw-HF (M6x1.0x16)

Ref	Part No.	Qty.	Description
❶22	12 096 47-S	1	Cover-Valve
❶23	M-545010-S	1	Screw-HF (M5x0.8x10)
❶24	12 018 01-S	1	Retainer-Reed, Breather
❶25	12 402 02-S	1	Reed-Breather
❶❶	12 017 02-S	1	Valve-Intake (.25)
❶❶	12 016 02-S	1	Valve-Exhaust (.25)
❶❶	12 041 01-S	1	Gasket-Carburetor
❶❶	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❶	12 041 03-S	1	Gasket-Manifold, Exhaust

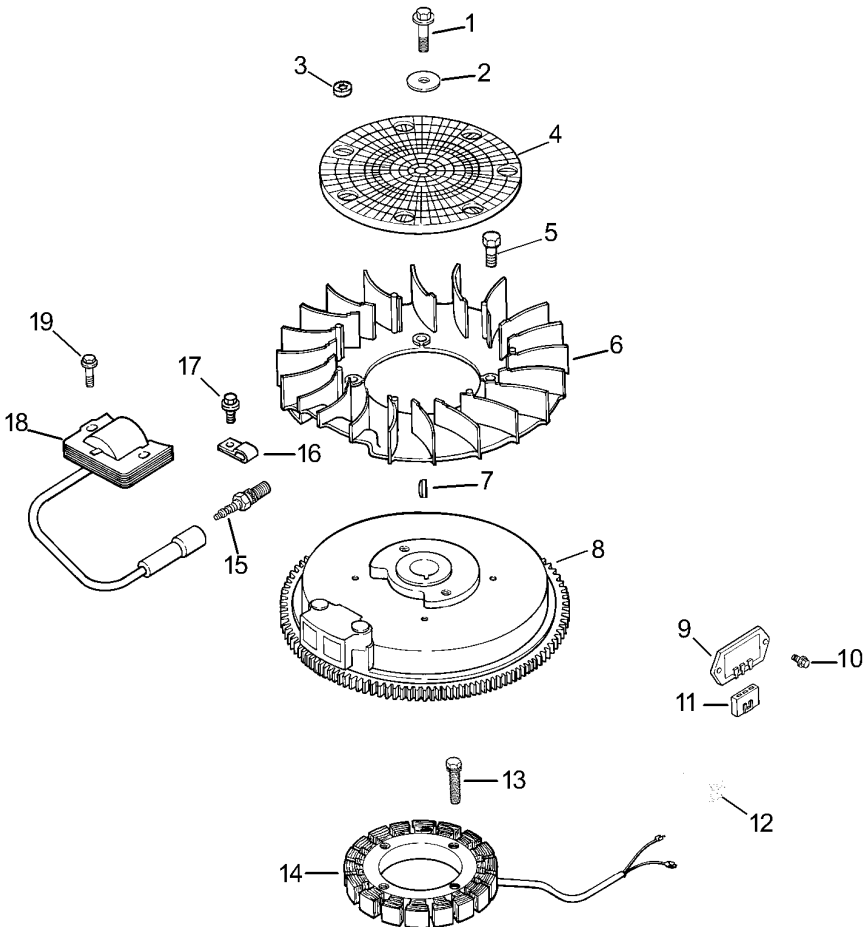


Ignition and Electrical Assembly
Kohler CV15S-41620


Ref	Part No.	Qty.	Description				
❸1	12 086 14-S	1	Screw-HF (M10x1.5x46)				
❸2	12 468 03-S	1	Washer-Plain (3/8in)				
❸3	24 018 03-S	3	Retainer				
❸4	24 162 03-S	1	Screen-Grass				
❸5	25 086 47-S	4	Bolt-Shoulder (M6x1.0x16)				
❸6	12 157 06-S	1	Fan				
❸7	X-42-15-S	1	Key				
❸8	12 025 33-S	1	Flywheel				
❸9	41 403 09-S	1	Rectifier-Regulator				
❸10	M-639016-S	2	Screw-HF (M6x1.0x16)				
❸11	236602-S	1	Connector				
❸12	41 155 03-S	1	Connector-Contact, Two				
❸13	M-548025-S	2	Screw (M5x0.8x25)				
❸14	237878-S	1	Kit, Stator (Includes: 25 452 01-S)				
❸15	12 132 06-S	1	Spark Plug				
❸16	X-728-1-S	2	Clip				
❸17	M-545010-S	2	Screw-HF (M5x0.8x10)				
❸18	12 584 04-S	1	Module-Ignition				
❸19	M-545020-S	2	Screw-HF (M5x0.8x20)				
❶❸	X-22-11-S	1	Washer-Lock (1/4in)				
❶❸	12 518 01-S	1	Lead-White, Ground To Kill (19in, 18 Gauge)				
❶❸	25 518 05-S	0	Lead-Black, Rectifier To Connector				
❶❸	24 518 12-S	1	Lead-Black (5in, 12 Gauge)				

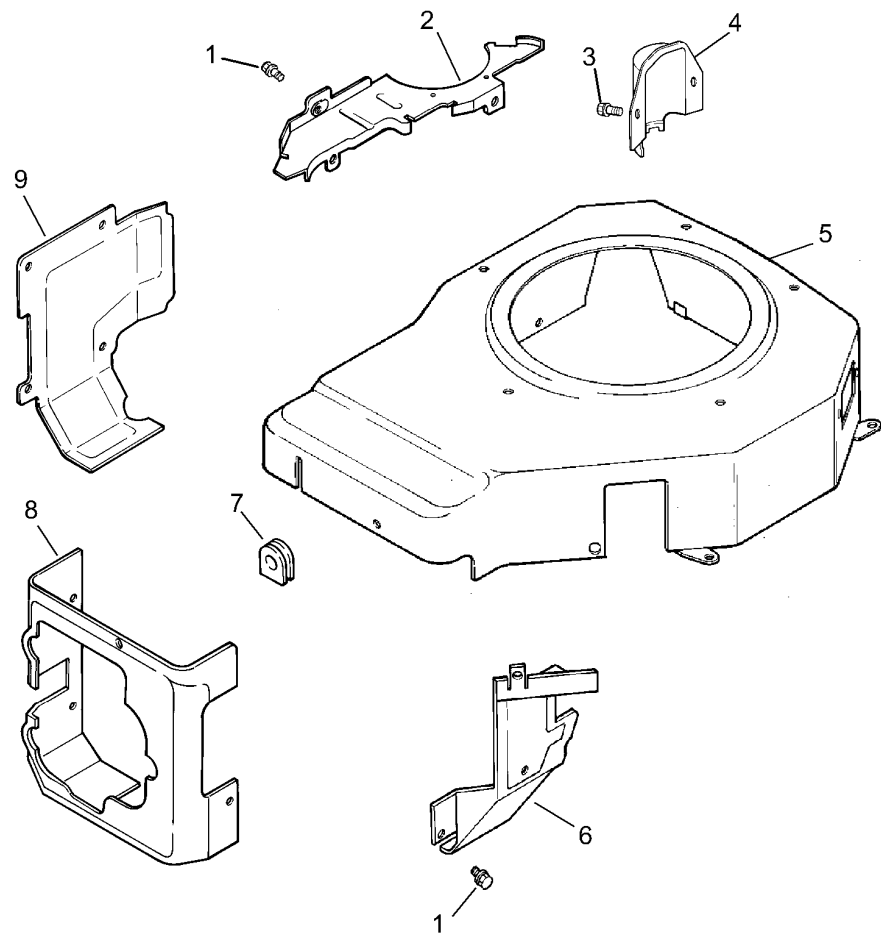

Blower Housing and Baffle Assembly
Kohler CV15S-41620

Ref	Part No.	Qty.	Description				
❶1	M-545010-S	5	Screw-HF (M5x0.8x10)				
❷2	12 146 07-S	1	Plate-Housing, Blower				
❸3	M-550010-S	2	Screw-HF (M5x0.8x10)				
❹4	24 096 05-S	1	Cover-Pinion				
❺5	12 027 55-S	1	Housing-Blower				
❻6	12 063 10-S	1	Baffle-Side, Intake				
❼7	12 313 03-S	1	Grommet-Spark Plug				
❽8	12 063 08-S	1	Baffle-Head, Cylinder				
❾9	12 063 19-S	1	Baffle				


27

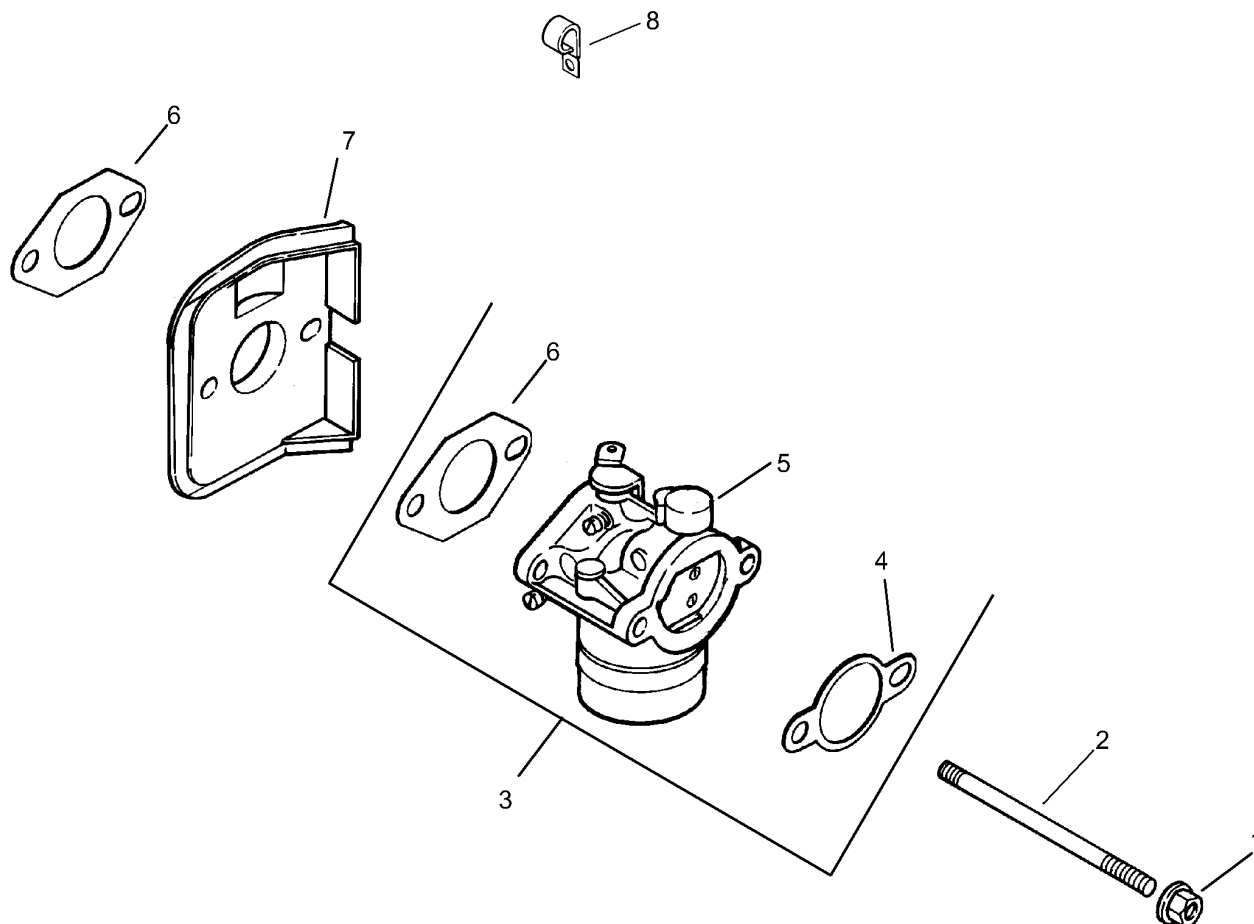

Fuel System Assembly

Kohler CV15S-41620


Ref	Part No.	Qty.	Description				
③1	M-641060-S	2	Nut-HF				
③2	M-629116-S	2	Stud (M6x1.0x116)				
③3	12 853 139-S	1	Kit, Carburetor W/gasket (Incl. Ref. #4-6 [qty. 1])				
③4	12 041 02-S	1	Gasket-Base, Air Cleaner				
③5	12 053 139	1	Carburetor Assembly (Includes: 12 75702-S, 12 757 03-S, & 12 755 92-s)(For Information Only Not Available Separately)				
③6	12 041 01-S	2	Gasket-Carburetor				
③7	12 265 04-S	1	Deflector-Heat				
③8	47 154 01-S	1	Clip-Cable				
①③	12 757 02-S	1	Float Kit				
①③	12 757 03-S	1	Carburetor Repair Kit				
①③	12 757 08-S	1	Choke Repair Kit				
①③	12 757 36-S	1	Throttle Shaft Bearing Kit				
①③	12 755 92-S	1	High Altitude Kit				

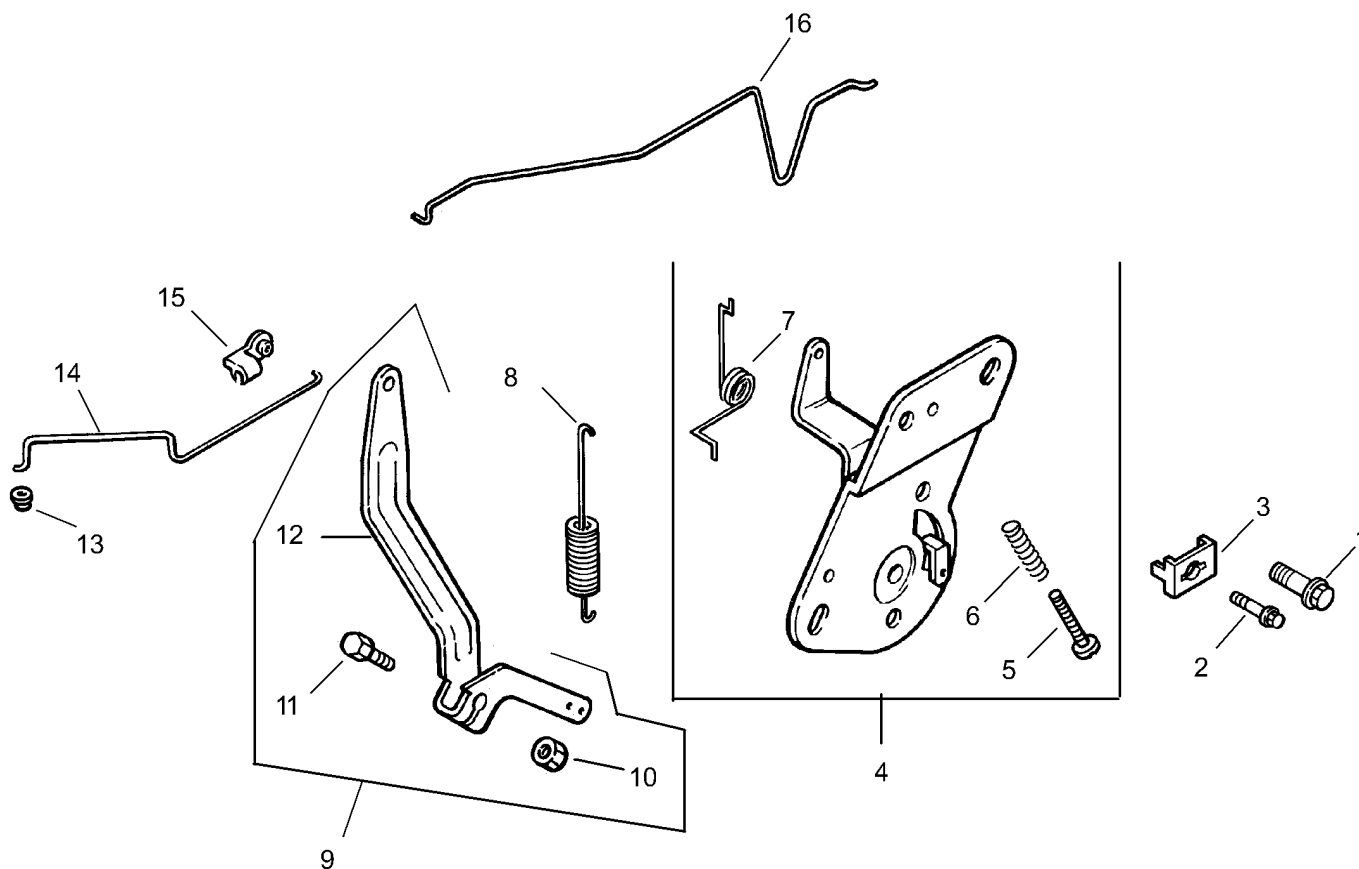

Engine Control Assembly


Kohler CV15S-41620

Ref	Part No.	Qty.	Description				
③1	M-664020-S	2	Screw-Socket, Lobed (M6x1.0x20)				
③2	M-545016-S	1	Screw-HF (M5x0.8x16)				
③3	12 237 01-S	1	Clamp-Cable				
③4	12 536 01-S	1	Control, Speed Assembly (Incl. Ref. #5-7)				
③5	12 086 39-S	1	Screw-Pan Head (W/loctite)				
③6	12 089 11-S	1	Spring-Control, Speed				
③7	12 089 23-S	1	Spring-Return, Choke				
③8	12 089 19-S	1	Spring-Governor				
③9	12 755 83-S	1	Kit, Governor Lever (Incl. Ref. #10-12)				
③10	12 100 07-S	1	Nut-HF (M6x1.0)				
③11	52 211 04-S	1	Screw-HF (M6x1.0x25)				
③12	12 090 28-S	1	Lever-Governor				
③13	25 158 08-S	1	Bushing-Retaining, Linkage				
③14	12 079 01-S	1	Linkage-Throttle				
③15	25 158 11-S	1	Bushing-Retaining, Linkage				
③16	12 079 07-S	1	Linkage-Choke				

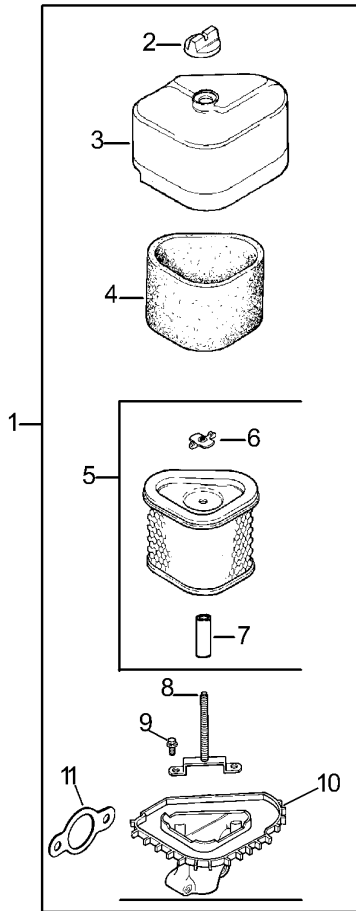

Air Intake and Filtration Assembly
Kohler CV15S-41620

Ref	Part No.	Qty.	Description				
1	12 743 04-S	1	Kit, Air Cleaner (Incl. Ref. #2-11)				
2	25 341 03-S	1	Knob-Cover				
3	12 096 44-S	1	Cover-Cleaner, Air				
4	12 083 12-S	1	Precleaner				
5	12 083 10-S	1	Element, Air Cleaner (Incl. Ref. #6)				
6	12 100 01-S	1	Nut-Wing				
7	12 032 11-S	1	Seal				
8	12 072 04-S	1	Stud-Plate, Mounting				
9	12 086 01-S	2	Screw				
10	12 094 14-S	1	Base-Cleaner, Air				
11	12 041 02-S	1	Gasket-Base, Air Cleaner				

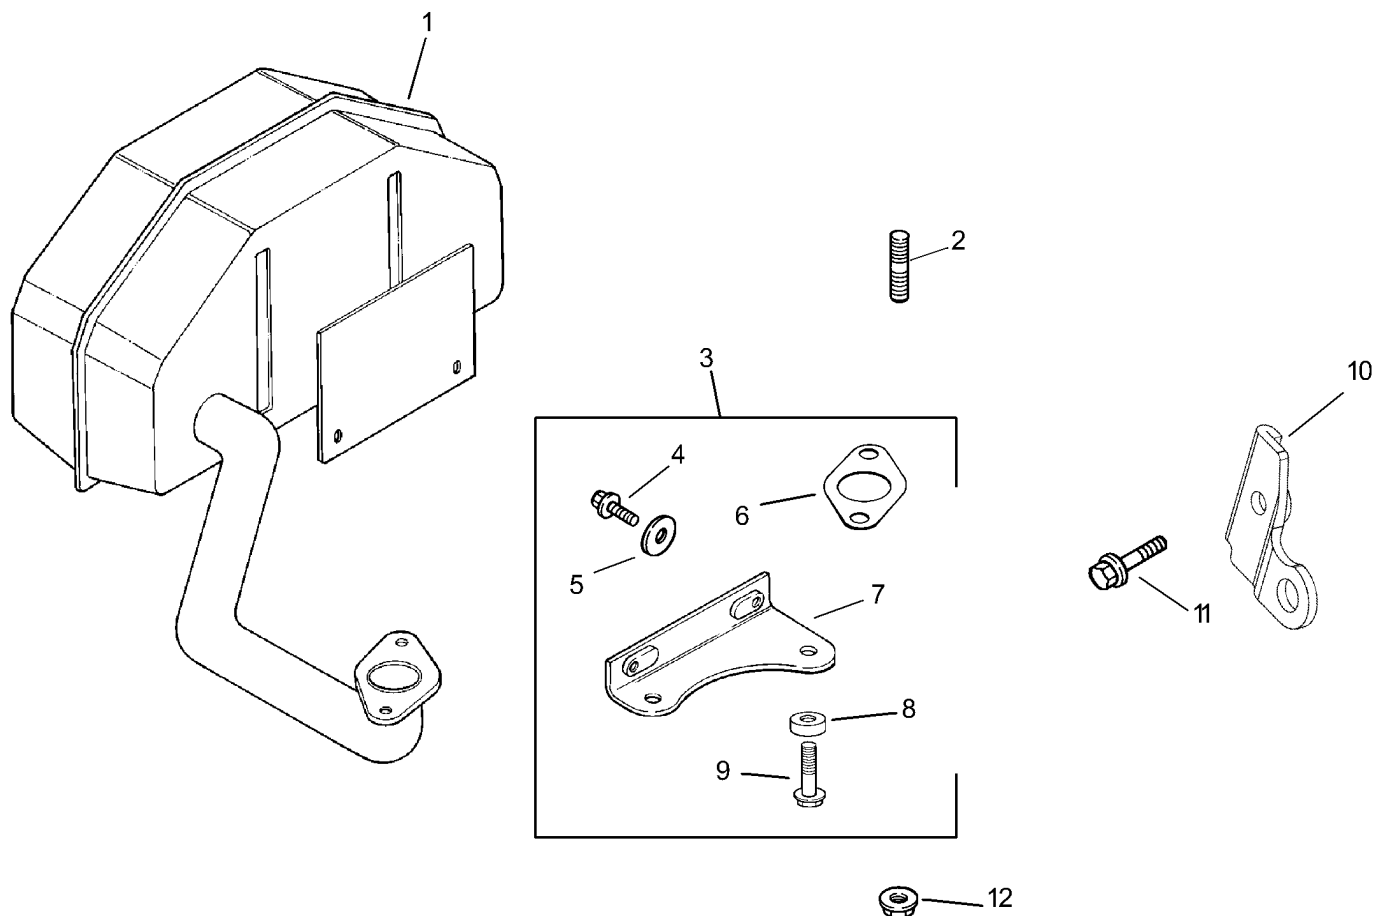

Exhaust Assembly Kohler CV15S-41620

Ref	Part No.	Qty.	Description				
③1	12 068 35-S	1	Muffler				
③2	25 072 04-S	2	Stud (M8x1.25x33)				
③3	12 755 30-S	1	Kit, Bracket (Incl. Ref. #4-9)				
③4	M-650012-S	1	Screw-HF (M6x1.0x12)				
③5	X-25-52-S	2	Washer				
③6	12 041 03-S	1	Gasket-Manifold, Exhaust				
③7	12 126 55-S	1	Bracket, Muffler				
③8	12 468 01-S	1	Washer				
③9	12 086 13-S	1	Screw, Hex. Flange M8x1.25x 50				
③10	12 126 87-S	1	Bracket-Strap, Lifting				
③11	M-645020-S	1	Screw-HF (M6x1.0x20)				
③12	M-841080-S	1	Nut-HF (M8x1.25)				
①③	12 522 18	1	Block-Short				
①③	12 755 93-S	1	Gasket Set				

Attachments and Accessories

For 30299TE - Mid-Size ProLine T-Bar Hydro, 15 HP with 112cm Side Discharge Mower

Product Name	Model/Part
Atomic Blade	. 104-1300
Striping Kit	. 106-3370
Soft Bag (3 Bushel)	. 30104
BLADE	. 54-0010-03
44 Inch Recycler Kit	. 99-4582

NOTES

NOTES

NOTES

