



Mid-Size ProLine, Pistol Grip, Hydro, 17 HP with 44in Side Discharge Mower

Model No. 30440 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine, Clutch and Brake Assembly	 3	Cylinder/Crankcase Assembly Kawasaki FH541V-AS27	 21
Fuel Tank, Hydraulic Tank, Pump and Filter Assembly	 4	Piston/Crankshaft Assembly Kawasaki FH541V-AS27	 22
Hydraulic Pump Assembly No. 106-5490	 5	Valve/Camshaft Assembly Kawasaki FH541V-AS27	 23
Wheel and Drive Assembly	 6	Lubrication Equipment Assembly Kawasaki FH541V-AS27	 24
Hydraulic Wheel Motor Assembly No. 104-1171	 7	Cooling Equipment Assembly Kawasaki FH541V-AS27	 25
Lower Control Assembly	 8	Electric Equipment Assembly Kawasaki FH541V-AS27	 26
Hydraulic Plumbing Assembly	 9	Control Equipment Assembly Kawasaki FH541V-AS27	 27
Upper Control Assembly	 10	Carburetor Assembly Kawasaki FH541V-AS27	 28
Control Panel Assembly	 11	Muffler and Air Filter Assembly Kawasaki FH541V-AS27	 29
Battery Assembly	 12	Fuel Tank/Fuel Valve Assembly Kawasaki FH541V-AS27	 30
Parking Brake Assembly	 13	Starter Assembly Kawasaki FH541V-AS27	 31
Carrier Frame Assembly	 14	Decals Kawasaki FH541V-AS27	 32
Spindle, Pulley and Belt Assembly	 15	Attachments and Accessories List	 33
Spindle Assembly No. 106-0786	 16		
Spindle Assembly No. 106-0784	 17		
Deck Assembly	 18		
Deflector Assembly No. 107-4194	 19		
Drive Belt and Tensioner Assembly	 20		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power take off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll over protection system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HS. hex	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Kawasaki dealer | |

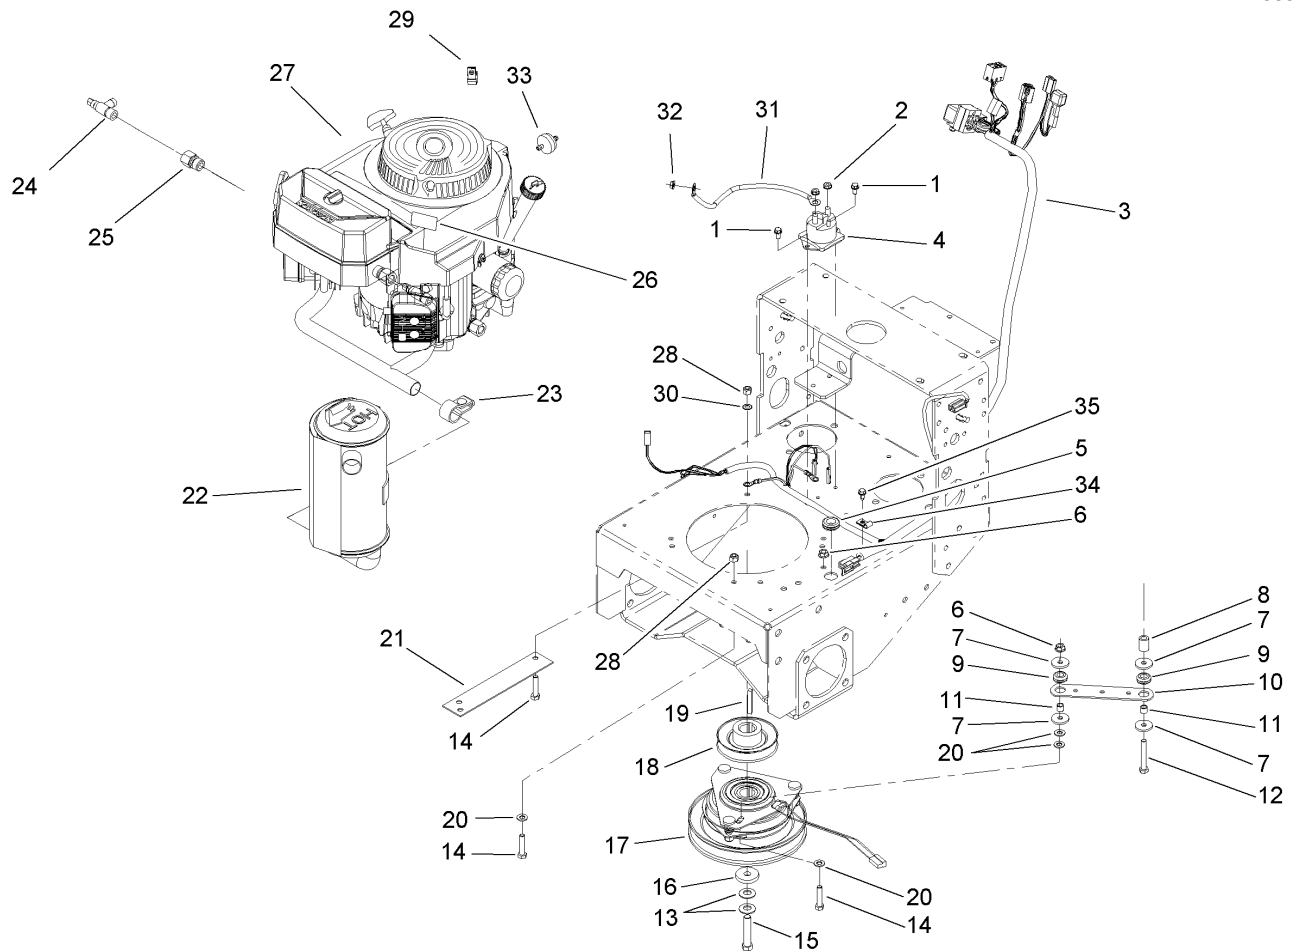

Engine, Clutch and Brake Assembly

Ref	Part No.	Qty.	Description
1	32144-4	2	Screw-HWH
2	32149-1	2	Nut-Keps
3	106-8780	1	Harness-Wire
4	28-4210	1	Solenoid
5	237-124	1	Grommet
6	32128-20	2	Nut-HF
7	1-613235	4	Washer
8	104-6373	1	Tube-Retainer
9	1-633630	2	Grommet-Brake
10	1-633543-03	1	Strap-Clutch, Brake
11	1-633545	2	Spacer
12	322-11	1	Screw-HH
13	1-603610	2	Washer-Spring
14	322-7	5	Screw-HH
15	3212-9	1	Screw-HH
16	107-4136	1	Washer
17	105-2635	1	Clutch / Brake
18	44-5940	1	Pulley
19	608006	1	Key-Square
20	3256-23	5	Washer-Flat
21	94-5847-01	1	Cover-Pulley
22	100-6467	1	Muffler
23	103-5465	1	Clamp-Muffler
24	103-1965	1	Valve-Drain, Oil


Ref	Part No.	Qty.	Description
25	103-1966	1	Adapter
26	106-0699	1	Decal-Warning, Hot Surfaces
27	106-0699	1	Engine-Kawasaki, Fh541v-As27
28	3296-29	4	Nut-Lock, NI
29	2412-87	1	Clamp-Cable
30	3255-8	1	Washer-Lock
31	105-0834	1	Cable-Battery
32	32149-2	1	Nut-Keps
33	56-6360	1	Filter-Fuel
34	2412-72	1	Clip-Closed, Insulated
35	12-3270	1	Screw
99	103-1964	1	Hose-Drain, Oil

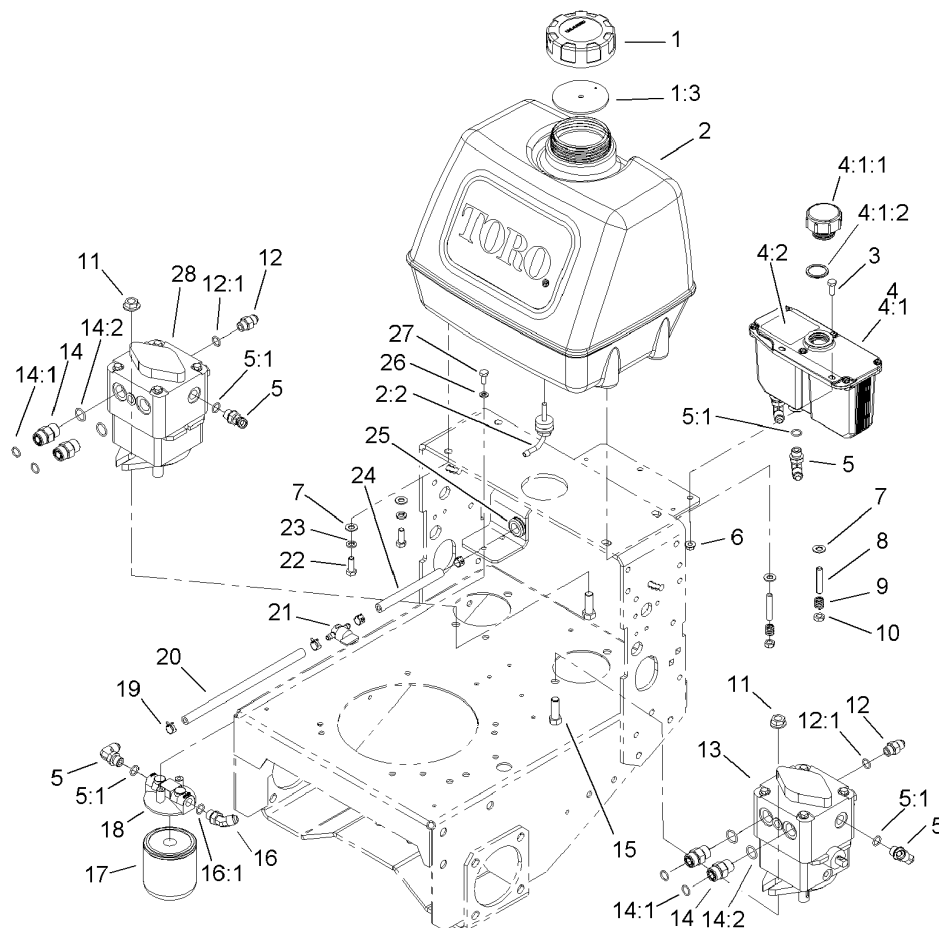

Fuel Tank, Hydraulic Tank, Pump and Filter Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	321-4	2	Screw-HH
4	103-1947	1	HYD Reservoir ASM
4:1		1	Reservoir-HYD
4:1:1	103-1948	1	Cap-Reservoir, HYD
4:1:2	103-1949	1	Gasket-Cap
4:2	1-523552	1	Decal-Tank, HYD
5	353-374	5	Elbow-90 DEG
5:1	237-42	1	O-Ring
6	32128-33	2	Nut-HF
7	3256-23	4	Washer-Flat
8	104-8121	2	Stud-Threaded
9	1-633349	2	Spring-Tank, Fuel
10	3296-47	2	Nut-Lock, NI
11	32128-42	4	Nut-HF
12	353-384	2	Fitting-Straight
12:1	237-42	1	O-Ring
13	106-5490	1	Pump-HYD
14	340-4	4	Fitting-Hyd, Straight
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring


Ref	Part No.	Qty.	Description
15	324-5	4	Screw-HH
16	353-212	1	Elbow
16:1	237-42	1	O-Ring
17	1-633750	1	Filter-HYD
17	1-633752	1	Filter-Hyd, Winter
18	104-7836	1	Head-Filter
19	2412-98	4	Clamp
20	47-2982	1	Hose-Fuel
21	1-603770	1	Valve-Fuel
22	322-4	2	Screw-HH
23	3253-4	2	Washer-Lock
24	47-2980	1	Hose-Fuel
25	237-124	1	Grommet
26	3253-3	2	Washer-Lock
27	321-3	2	Screw-HH
28	106-5489	1	Pump-HYD

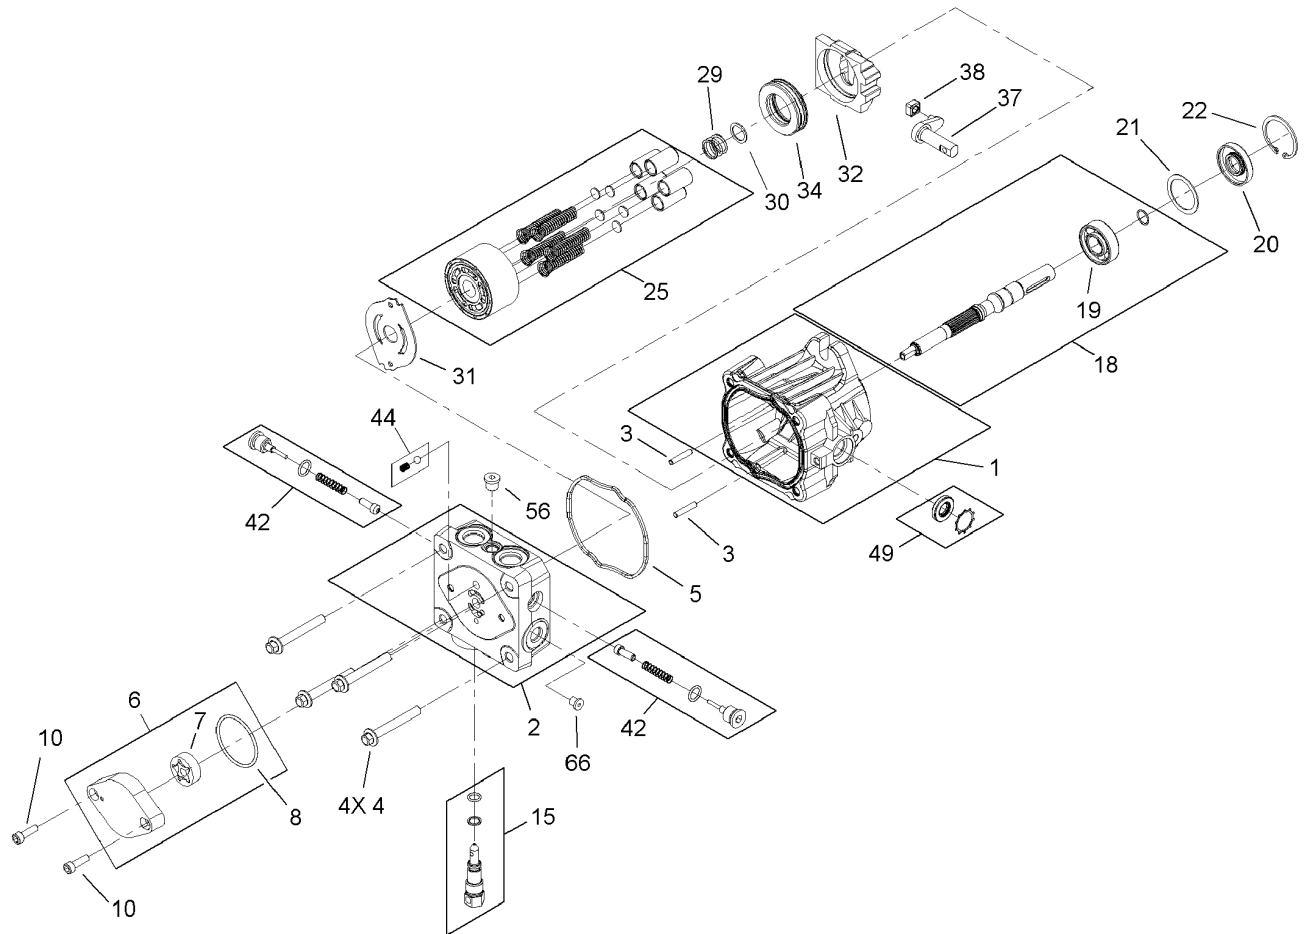

Hydraulic Pump Assembly No. 106-5490

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal/retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
99	105-6184	1	Seal Kit

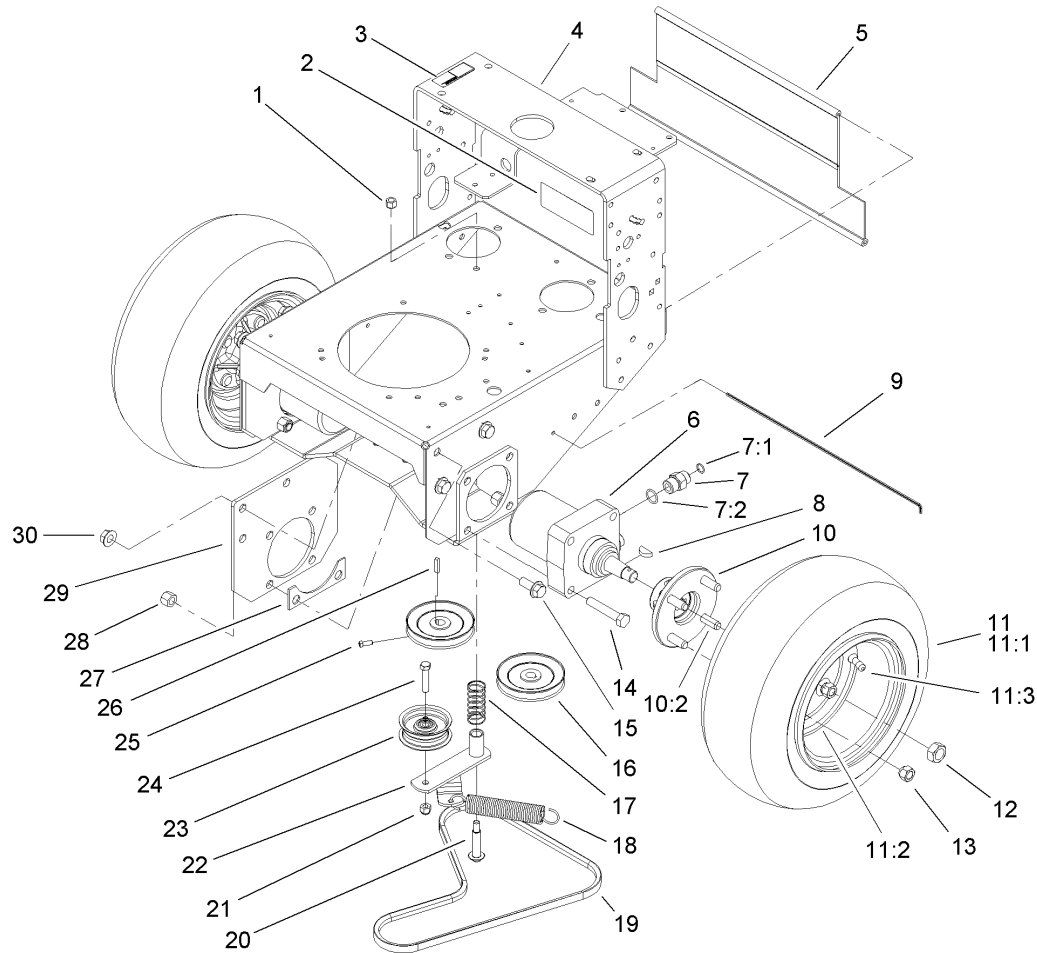

Wheel and Drive Assembly


Ref	Part No.	Qty.	Description
1	3296-6	1	Nut-Lock
2	98-0776	1	Decal-Caution
3	95-2814	1	Decal-Shut Off, Fuel
4	106-0548-01	1	Hydro Frame ASM
5	95-1526	1	Shield-Trailing
6	104-1171	2	Motor-Wheel
7	340-6	4	Fitting-Hyd, Straight
7:1	237-30	1	O-Ring
7:2	237-80	1	O-Ring
8	3257-8	2	Key-Woodruff
9	95-1529	1	Rod-Shield
10	105-0800	2	Wheel Hub/stud ASM
10:2	10-6830	4	Stud-Type, Drive
11	106-0892	2	Wheel And Tire ASM
11:1	104-6322	1	Tire
11:2	106-0893	1	Wheel
11:3	232-27	1	Stem-Valve
12	85-7310	2	Nut-Motor, Wheel
13	242-50	8	Nut-Lug
14	325-11	8	Screw-HH
15	3234-32	4	Screw-HHF
15	3234-22	2	Screw-HHF
16	105-5648	2	Pulley-Pump
17	88-1880	1	Spring-Compression

Ref	Part No.	Qty.	Description
18	68-2190	1	Spring
19	105-5649	1	V-Belt
20	27-6230	1	Bolt-Wheel
21	3296-39	1	Nut-Lock, NI
22	86-4770	1	Idler Lever ASM
23	62-4540	1	Pulley
24	323-9	1	Screw-HH
25	3241-5	4	Screw-Set
26	80-6090	2	Key-Pump
27	86-4740-01	2	Spacer-Frame
28	3296-23	8	Nut-Lock, NI
29	105-5643-01	2	Plate-Frame
30	32128-23	6	Nut-HF

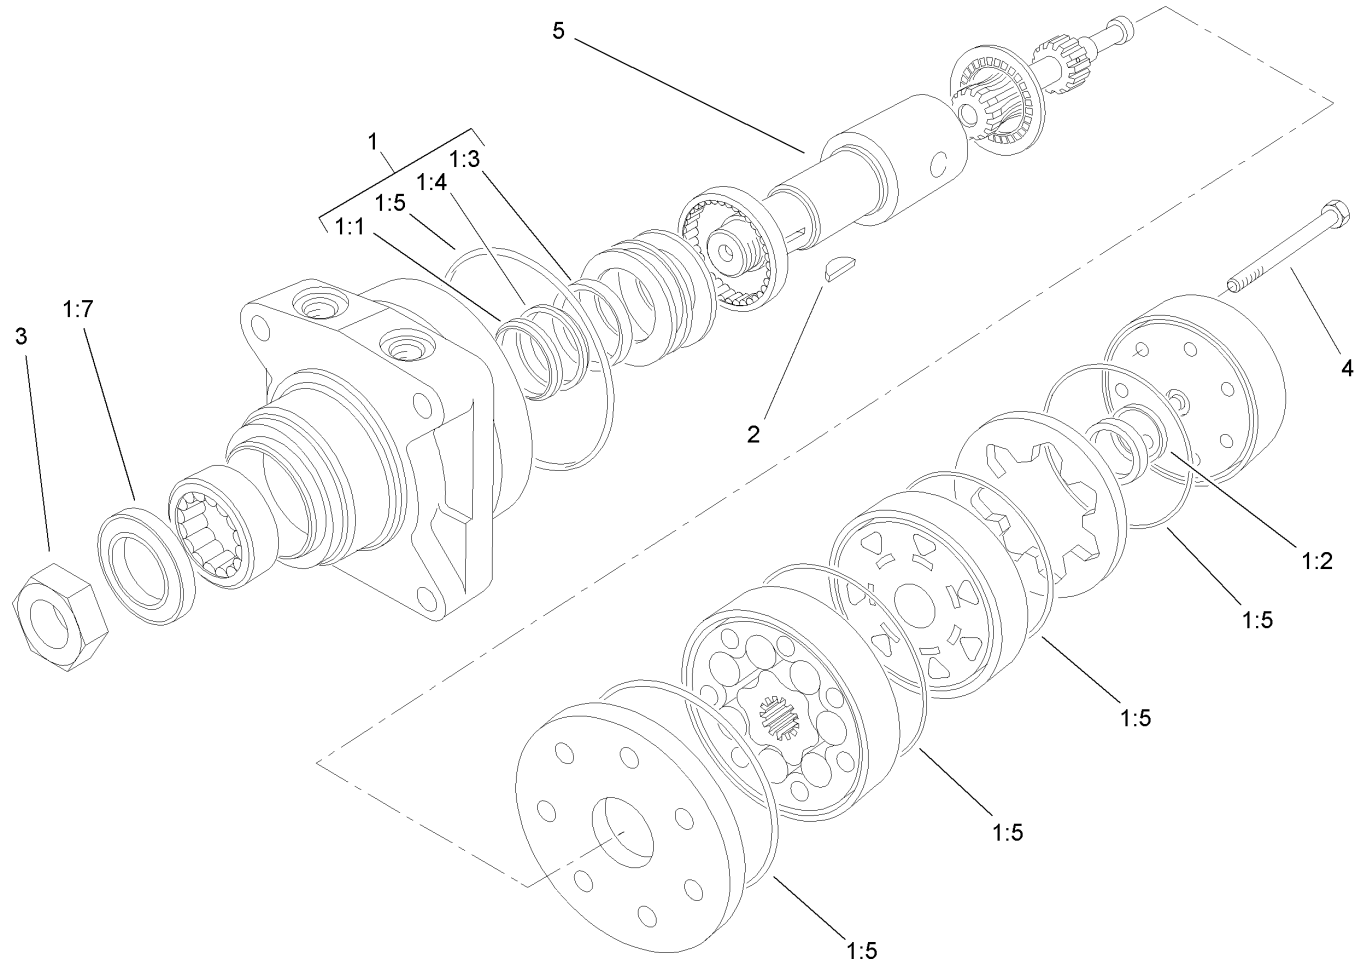

Hydraulic Wheel Motor Assembly No. 104-1171


Ref	Part No.	Qty.	Description				
1	1-000119	1	Seal Kit				
1:1		1	Ring-Back Up				
1:2		1	Seal-Commutator				
1:3		1	Seal-Shaft (Viton)				
1:4		1	Washer-Back Up, Steel				
1:5		5	Ring-Seal (Viton)				
1:7		1	Seal-Dirt & Water				
2	3257-8	1	Key-Woodruff				
3	85-7310	1	Nut-Motor, Wheel				
4	106-5549	6	Bolt-Special				
5	106-8764	1	Shaft-Coupling				

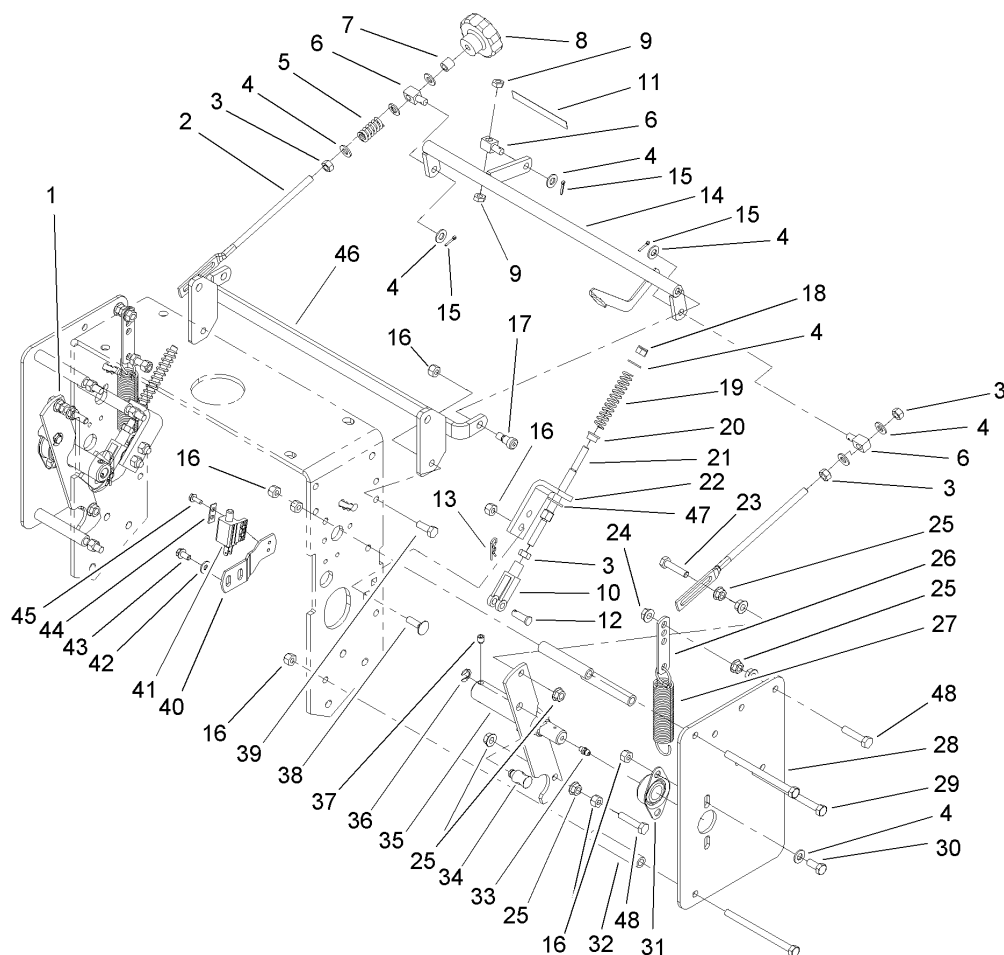

Lower Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-5484	1	RH Control Arm ASM	25	32128-20	14	Nut-HF
2	1-413350	2	Link-Control, Speed	26	1-613089	2	Tab-Spring, Extension.
3	3219-2	5	Nut-Hex	27	1-603693	2	Spring-Extension
4	3256-23	14	Washer-Flat	28	104-9817-01	2	Plate-Side, Hydro
5	1-323245	1	Spring-Compression	29	322-38	6	Screw-HH
6	1-603676	3	Swivel-Adjustable, Short	30	322-3	4	Screw-HH
7	1-603903	1	Spacer	31	1-633102	2	Bearing-Flange, Side
8	1-413151	1	Knob-Tracking	32	104-9820	6	Spacer-Shield
9	3220-2	2	Nut-Jam	33	302-5	2	Fitting-Grease
10	1-303105	2	Yoke-Adjustable	34	103-1235	2	Swivel-Lever, Drive
11	105-4109	1	Decal-Tracking	35	106-5480	1	LH Control Arm ASM
12	1-808280	2	Pin-Clevis	36	32151-47	2	Ring-Retaining
13	3290-307	2	Pin-Hair	37	3246-3	4	Screw-HS
14	106-5538-01	1	Speed Control Crank ASM	38	3230-2	4	Bolt-CARR
15	3272-5	3	Pin-Cotter	39	322-4	2	Screw-HH
16	3296-29	18	Nut-Lock, NI	40	106-5539-01	1	Bracket-Neutral
17	1-809056	2	Screw	41	1-513051	1	Switch-Open, Normally
18	3296-4	2	Nut-Lock	42	3256-1	2	Washer-Flat
19	1-603807	2	Spring-Return, Neutral	43	32144-4	2	Screw-HWH
20	1-603735	2	Bushing-Flanged	44	82-4570	1	Plate-Switch
21	105-9372	2	Stud-Adjustment	45	32144-1	2	Screw-Taprite
22	104-9802-01	2	Bracket-Mount, Spring	46	105-3163-01	1	Crank Support ASM
23	1-403180	2	Screw-HH	47	3256-24	2	Washer-Flat
24	32128-25	2	Nut-HF	48	1-800016	4	Bolt-Tap, HH

9

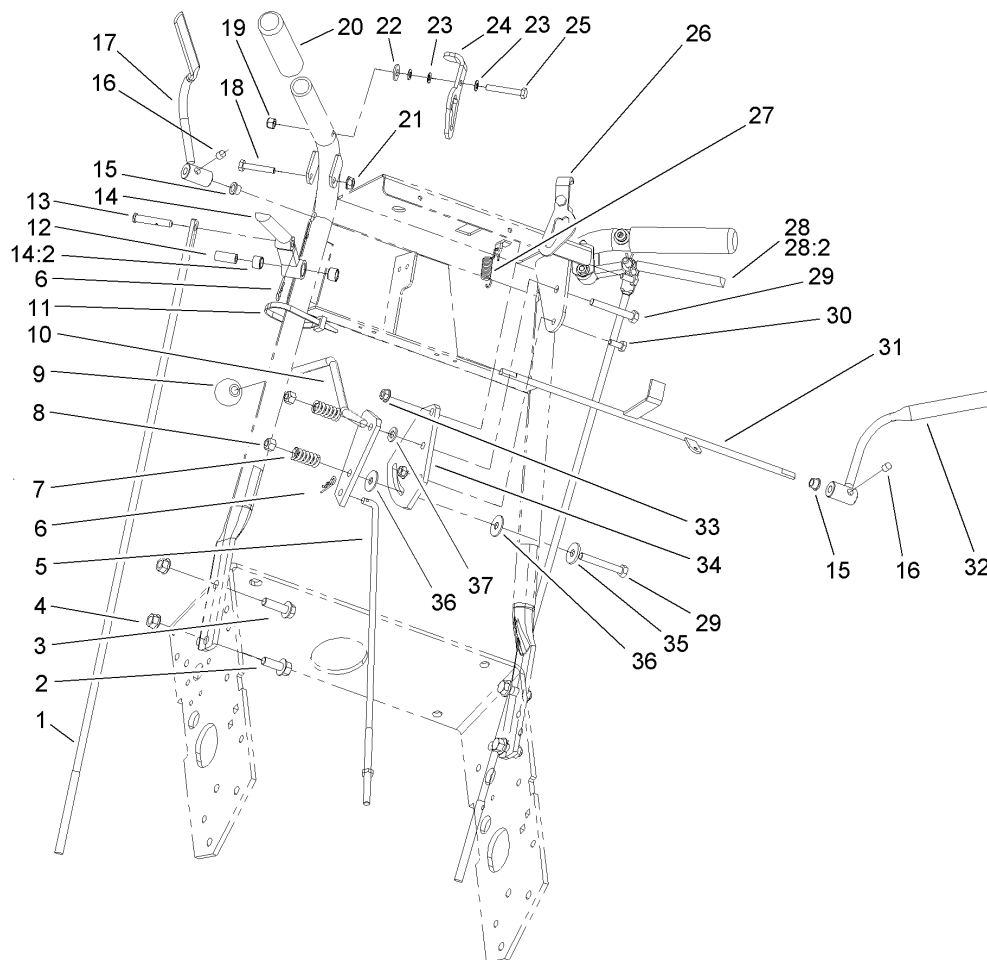

Upper Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-413219	2	Rod-Lever, Drive	24	106-5483	1	Latch-Thumb, LH
2	3234-11	2	Screw-HHF	25	321-10	2	Screw-HH
3	3234-24	2	Screw-HHF	26	106-5481	1	Latch-Thumb, RH
4	32128-21	4	Nut-HF	27	1-303363	1	Spring-Extension
5	106-5534	1	Rod-Control, Speed	28	103-0219	1	RH Drive Lever ASM
6	3290-307	3	Pin-Hair	28:2	1-413152	2	Sleeve-Bushing
7	1-323245	2	Spring-Compression	29	322-11	2	Screw-HH
8	3296-29	2	Nut-Lock, NI	30	321-3	2	Screw-HH
9	233-42	1	Knob	31	104-9803	1	Rod ASM
10	106-2748	1	Lever-Shift	32	106-5486	1	RH Opc Lever ASM
11	3290-378	1	Tie-Cable	33	32128-33	2	Nut-HF
12	1-603749	2	Bushing-Lever, Drive	34	1-603730	1	Plate-Lever, Shifter
13	1-613055	2	Pin-Clevis	35	1-603716	1	Washer-Friction
14	103-0218	1	LH Drive Lever ASM	36	1-323244	2	Washer-Friction
14:2	1-413152	2	Sleeve-Bushing	37	3256-23	1	Washer-Flat
15	1-303365	2	Bushing-Nylon				
16	1-803322	2	Screw-Set				
17	106-5485	1	LH Opc Lever ASM				
18	321-9	2	Screw-HH				
19	3296-42	2	Nut-Lock, NI				
20	104-9838	2	Grip-Foam				
21	32128-33	2	Nut-HF				
22	3256-2	2	Washer-Flat				
23	1-303435	6	Washer-Spring				

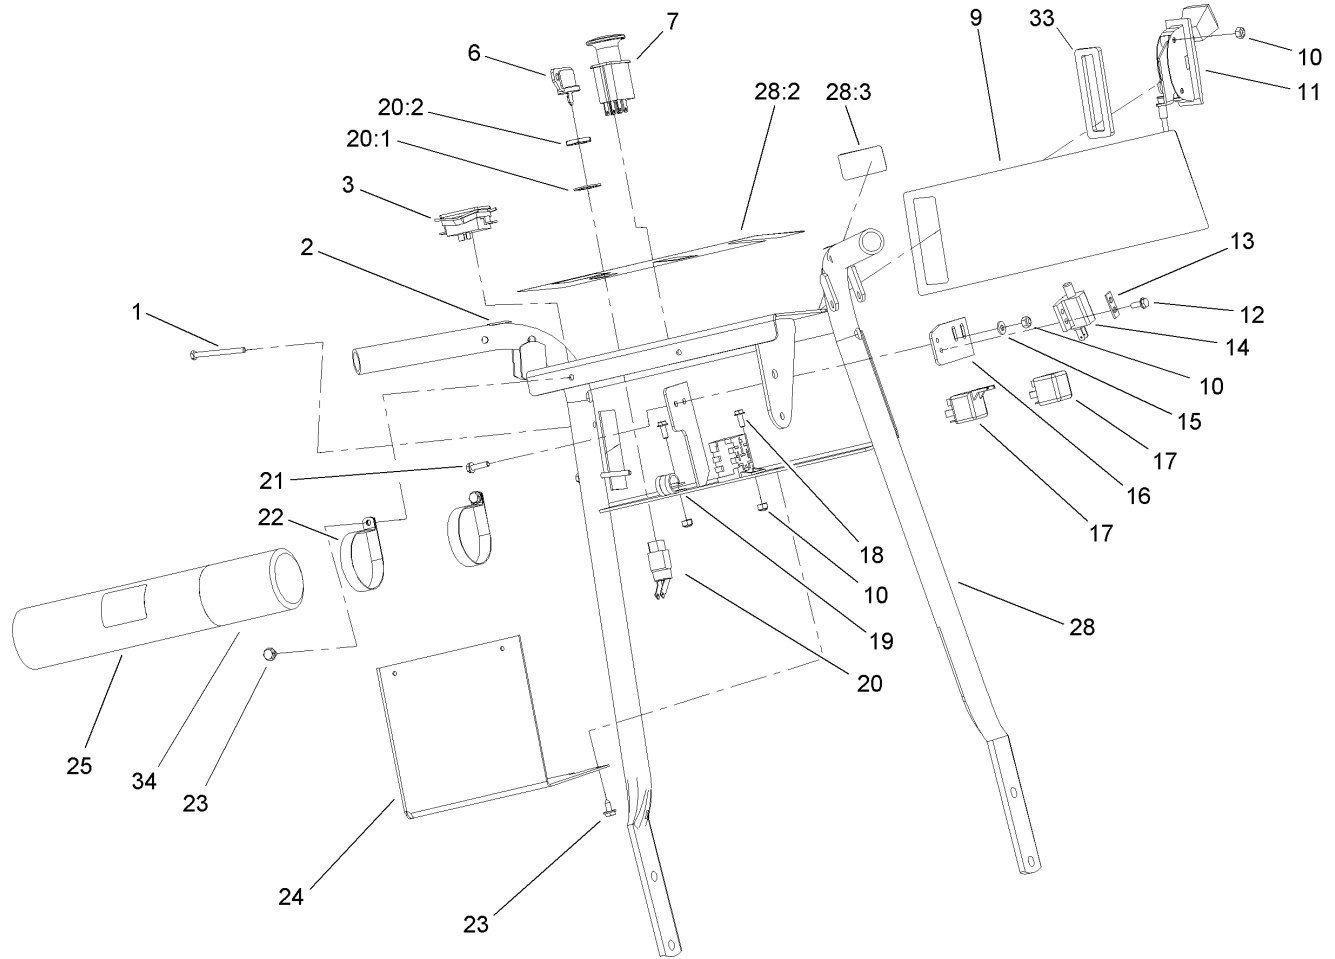

Control Panel Assembly


Ref	Part No.	Qty.	Description
1	32105-14	2	Screw-SHH
2	105-4110	2	Decal-Lock, Neutral
3	104-8143	1	Hourmeter
6	63-8360	1	Key-Ignition
7	95-7489	1	Switch-PTO
9	106-5501	1	Decal-Control, Throttle
10	3296-2	6	Nut-Lock
11	107-4072	1	Cable-Throttle
12	32144-1	2	Screw-Taptite
13	82-4570	1	Plate-Switch
14	1-513051	1	Switch-Open, Normally
15	3256-14	2	Washer-Flat
16	105-4137-03	1	Plate-Mounting, Switch
17	98-7249	1	Relay
18	3290-321	2	Screw-HWH
19	2412-134	1	R-Clamp
20	88-9830	1	Key Switch ASM
20:1	3254-5	1	Washer-Tooth
20:2	218-461	1	Nut-HH
21	32105-13	2	Screw-SHH
22	2412-120	2	R-Clamp
23	32104-76	4	Screw
24	105-4112-03	1	Bracket-Cover
25	104-7050	1	Housing-Manual

Ref	Part No.	Qty.	Description
28	105-3176	1	Handle ASM
28:2	106-5516	1	Decal-Panel, Control
28:3	98-4387	1	Decal-Protection, Ear
33	106-5487	1	Gasket-Throttle
34	104-7048	1	Cap-Housing

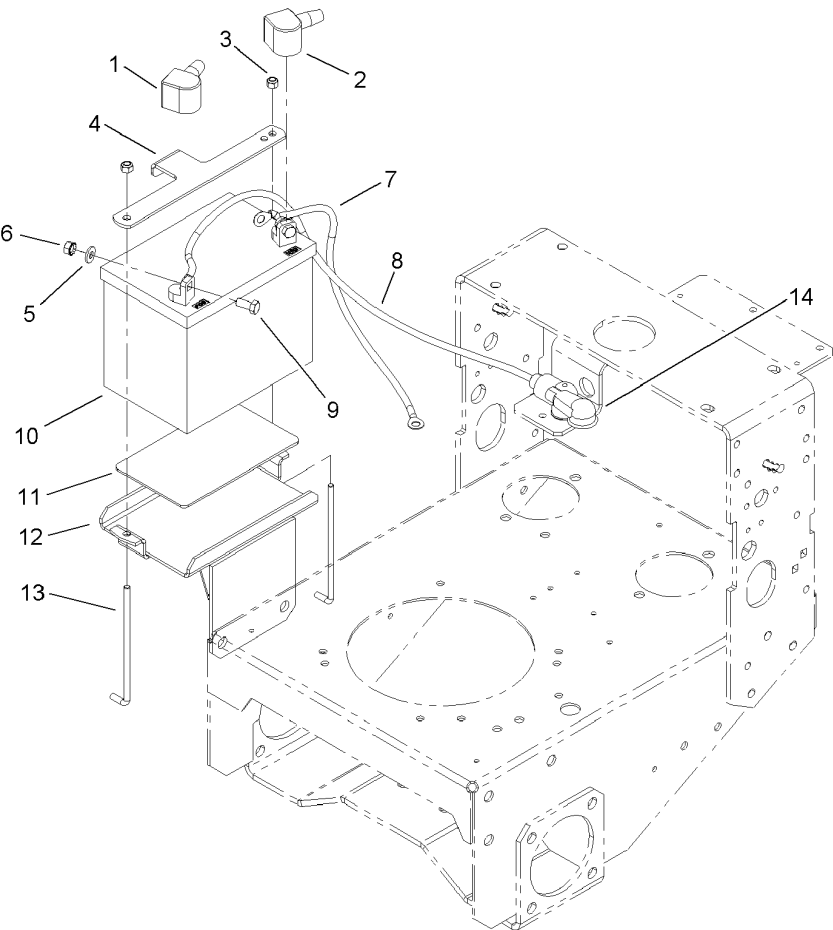


Battery Assembly

Ref	Part No.	Qty.	Description				
1	77-0981	1	Boot-Terminal, Red				
2	77-0980	1	Boot-Terminal, Black				
3	3296-42	2	Nut-Lock, NI				
4	104-8568-03	1	Plate-Hold Down, Battery				
5	3256-2	2	Washer-Flat				
6	32149-1	2	Nut-Keps				
7	105-0833	1	Cable-Battery, Black				
8	100-6457	1	Cable-Battery, Red				
9	322-3	2	Screw-HH				
10	104-8162	1	Battery				
11	62-4300	1	Anti-Skid Pad				
12	105-3150-01	1	Battery Tray ASM				
13	104-8567	2	Holddown-Battery				
14	93-3190	1	Boot-Insulator, Terminal				

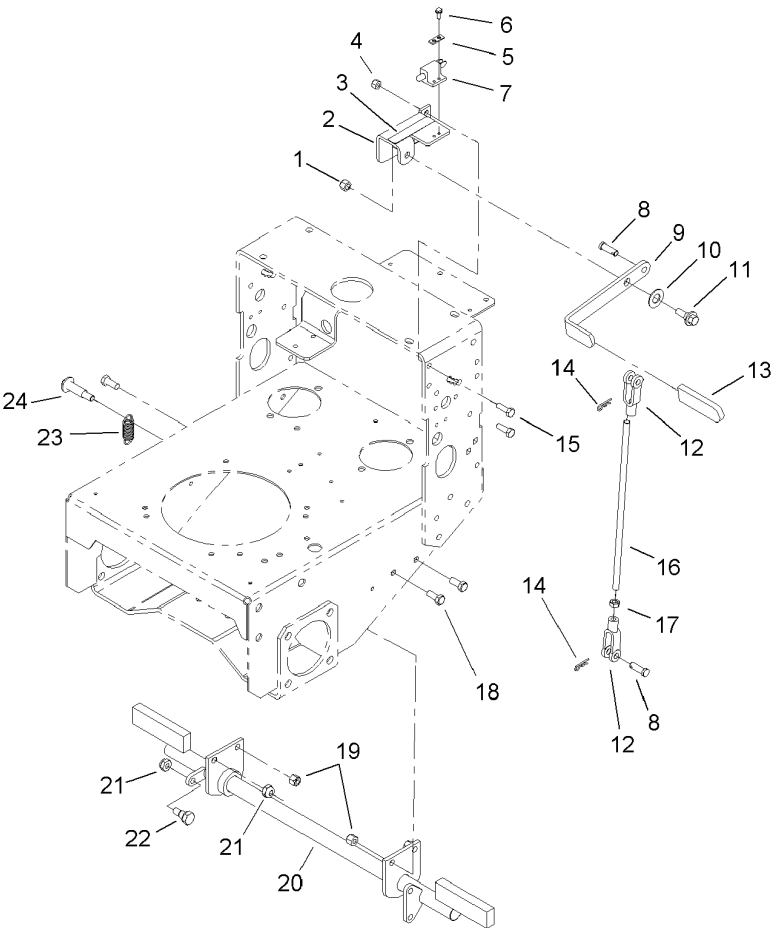


Parking Brake Assembly

Ref	Part No.	Qty.	Description				
1	3296-6	1	Nut-Lock				
2	106-0666-01	1	Brake Handle Support ASM				
3	104-2838	1	Decal-Brake				
4	3296-29	2	Nut-Lock, NI				
5	82-4570	1	Plate-Switch				
6	32144-1	2	Screw-Taptite				
7	95-1653	1	Switch-Pole, Single				
8	1-808285	2	Pin-Clevis				
9	106-0671-01	1	Handle-Brake				
10	257-7	1	Bearing-Thrust				
11	93-2364	1	Bolt-Shoulder				
12	1-633131	2	Yoke-Linkage, Brake				
13	1-303020	1	Grip-Lever				
14	3290-307	2	Pin-Hair				
15	322-5	2	Screw-HH				
16	106-0670	1	Rod-Connecting, Brake				
17	3220-3	1	Nut-Jam				
18	323-5	3	Screw-HH				
19	3296-39	3	Nut-Lock, NI				
20	106-0660-01	1	Parking Brake ASM				
21	3290-357	2	Nut-HHF				
22	27-5240	1	Bolt-Shoulder				
23	613386	1	Spring-Brake				
24	56-6590	1	Bolt-Wheel				

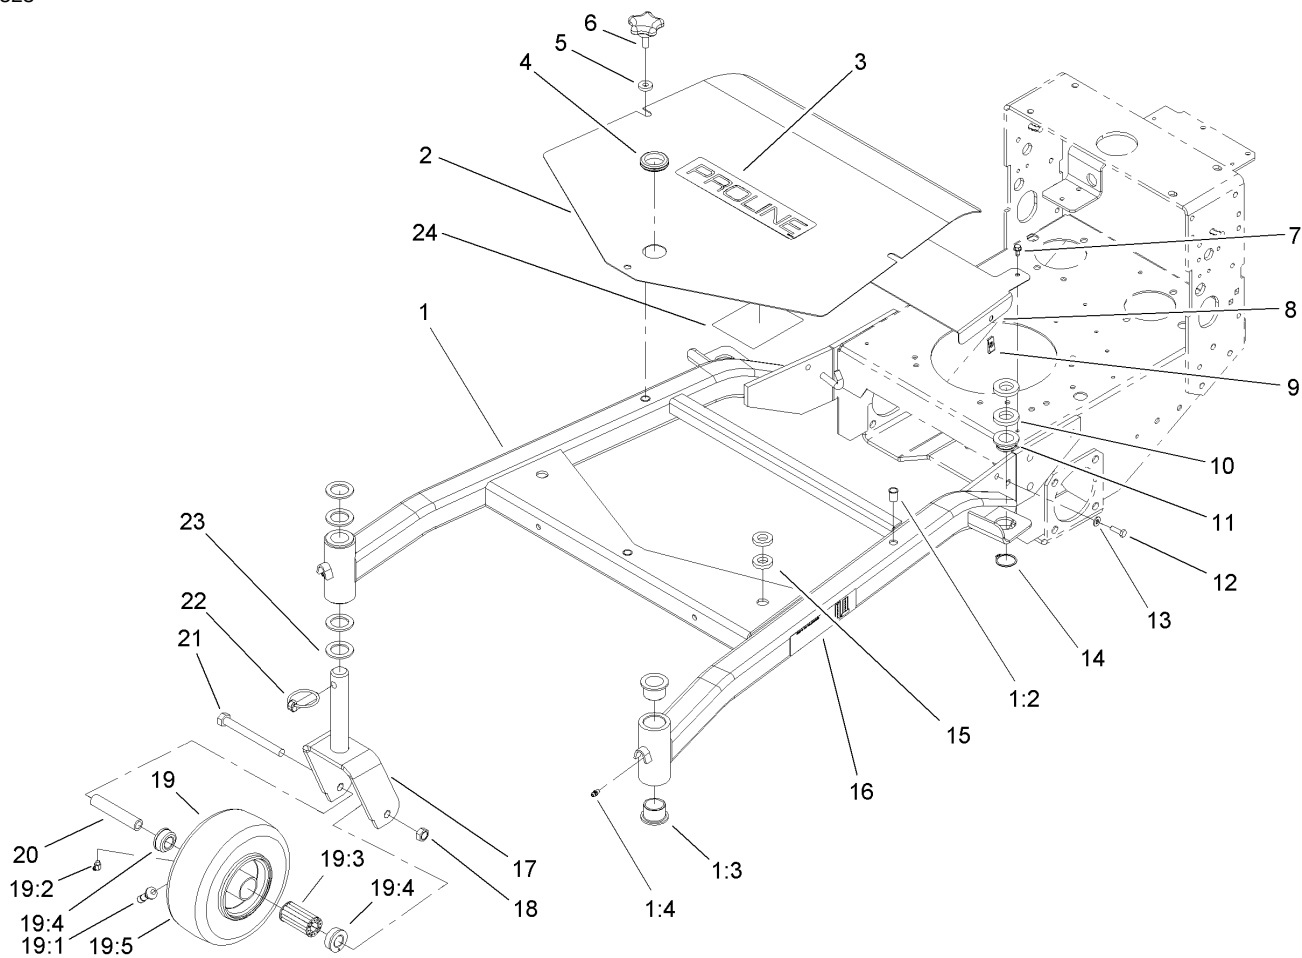


Carrier Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0707	1	Carrier Frame ASM	19:3	83-4740	1	Bearing
1:2	32148-9	3	Insert-Nut	19:4	62-5580	2	Bearing-Outside
1:3	94-1291	4	Bushing	19:5	100-6452	1	Tire-Tubeless
1:4	302-5	2	Fitting-Grease	20	100-6453	2	Bushing-Spanner
2	106-0537-01	1	Cover	21	325-19	2	Screw-HH
3	106-0719	1	Decal	22	283-71	2	Pin-Lynch
4	240-3	1	Grommet-Rubber	23	3-6781	8	Washer-Thrust
5	106-0565	3	Washer-Rubber	24	106-5503	1	Decal-Service, Hydro Tbar
6	106-0887	3	Knob	24	106-5505	1	Decal-Service, Gear Tbar
7	12-3270	2	Screw	24	106-5511	1	Decal-Service, Gear Pistol Grip
8	105-9389-01	1	Shield-Heat	24	106-5513	1	Decal-Service, Hydro Pistol Grip
9	3290-199	2	Nut-Speed				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	321-5	2	Screw-HH				
13	3256-22	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	105-0842	4	Spacer				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock, Side				
19	100-6451	2	Castor Wheel ASM				
19:1	232-27	1	Stem-Valve				
19:2	302-11	1	Fitting-Lube, 45 DEG				

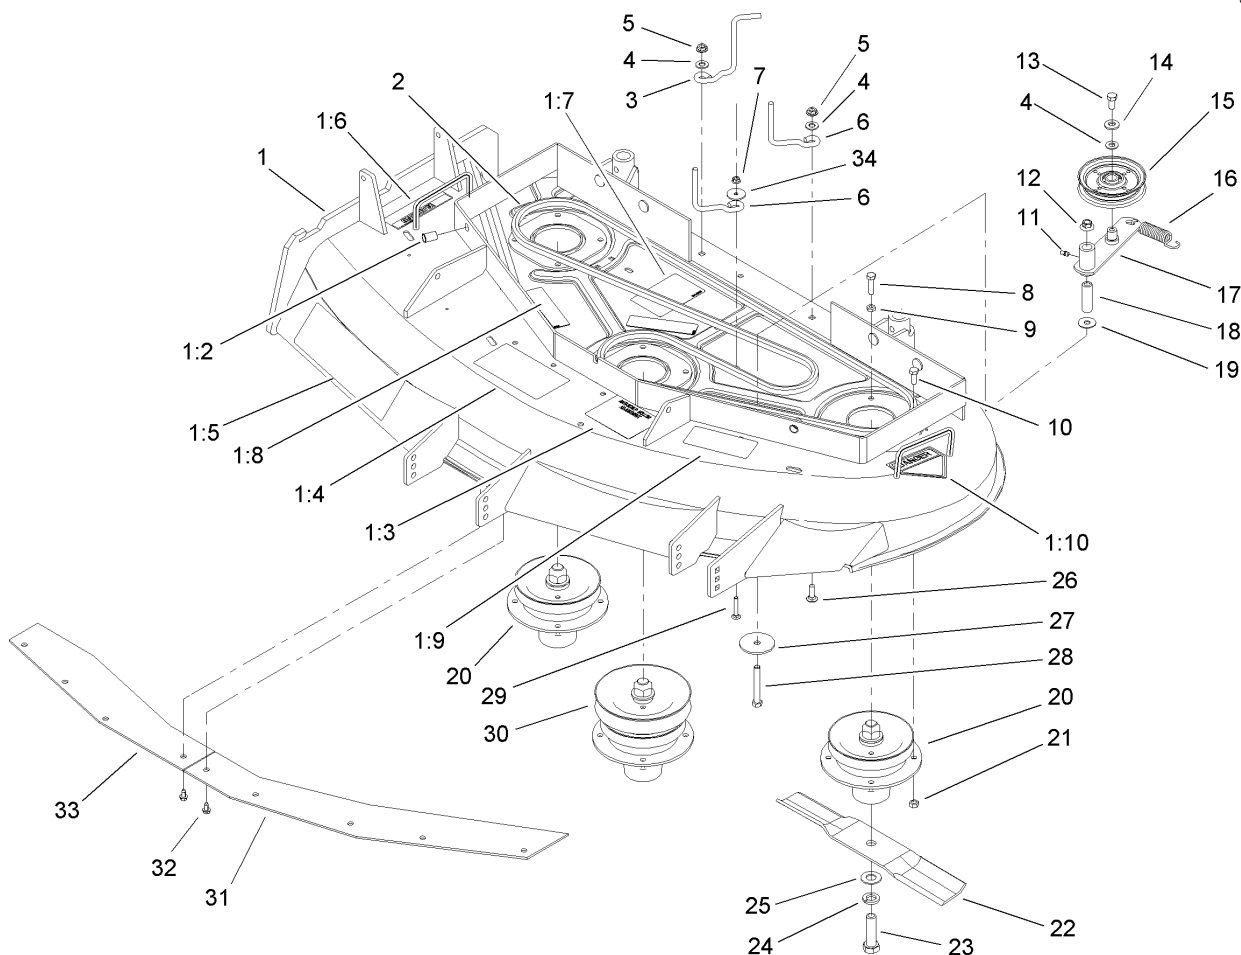


Spindle, Pulley and Belt Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-4212	1	Deck ASM	16	54-2730	1	Spring-Extension
1:2	32148-10	2	Insert-Threaded	17	104-8110	1	Idler Arm ASM
1:3	106-5532	1	Decal-Anti Scalp	18	104-8113	1	Tube-Idler
1:4	66-1340	1	Decal-Danger	19	52-2860	1	Washer
1:5	106-0704	1	Decal	20	106-0786	2	Spindle Housing ASM
1:6	93-1122	1	Decal-Danger	21	32152-1	12	Nut-Lock, Cone
1:7	104-8186	1	Decal-Routing, Belt	22	54-0010-03	3	Blade
1:8	67-5360	3	Decal-Danger	23	51-4060	3	Screw-Blade
1:9	68-8340	1	Decal-Torque	24	3253-8	3	Washer-Lock
1:10	43-8480	1	Decal-Danger	25	3256-27	3	Washer-Flat
2	27-1160	1	V-Belt	26	3230-2	2	Bolt-CARR
3	106-5488	1	Guide-Belt	27	20-9530	1	Washer-End
4	3256-24	3	Washer-Flat	28	323-13	1	Screw-HH
5	32128-13	2	Nut-HF	29	3229-4	1	Screw-CARR
6	52-4780	2	Rod-Belt	30	106-0784	1	Spindle Housing ASM
7	32128-10	1	Nut-Lock, HHF	31	100-3258-03	1	Plate-Blowout, LH
8	322-6	1	Screw-HH	32	12-3270	9	Screw
9	3218-2	1	Nut-Jam	33	100-3257-03	1	Plate-Blowout, RH
10	322-4	11	Screw-HH	34	1-503033	1	Washer-Retainer, Pulley
11	302-19	1	Fitting-Grease				
12	32128-19	1	Nut-HF				
13	323-4	1	Screw-HH				
14	98-5975	1	Washer-Belleville				
15	65-5940	1	Pulley-Idler				

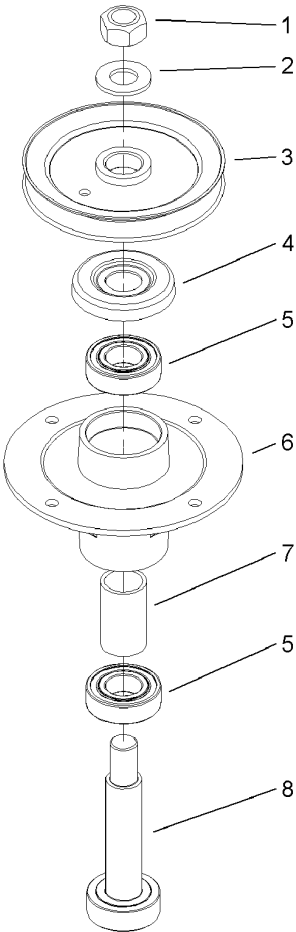


Spindle Assembly No. 106-0786

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1181	1	Pulley ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0818	1	Housing-Spindle				
7	106-0794	1	Spacer-Bearing				
8	106-0780	1	Shaft-Spindle				

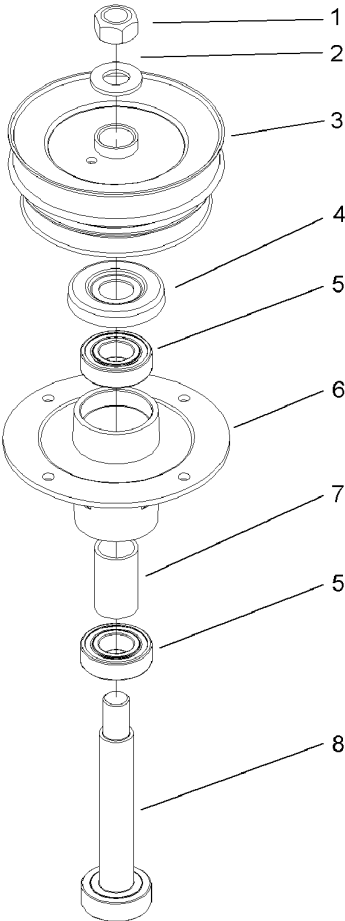


Spindle Assembly No. 106-0784

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1116	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0818	1	Housing-Spindle				
7	106-0794	1	Spacer-Bearing				
8	106-0779	1	Shaft-Spindle				

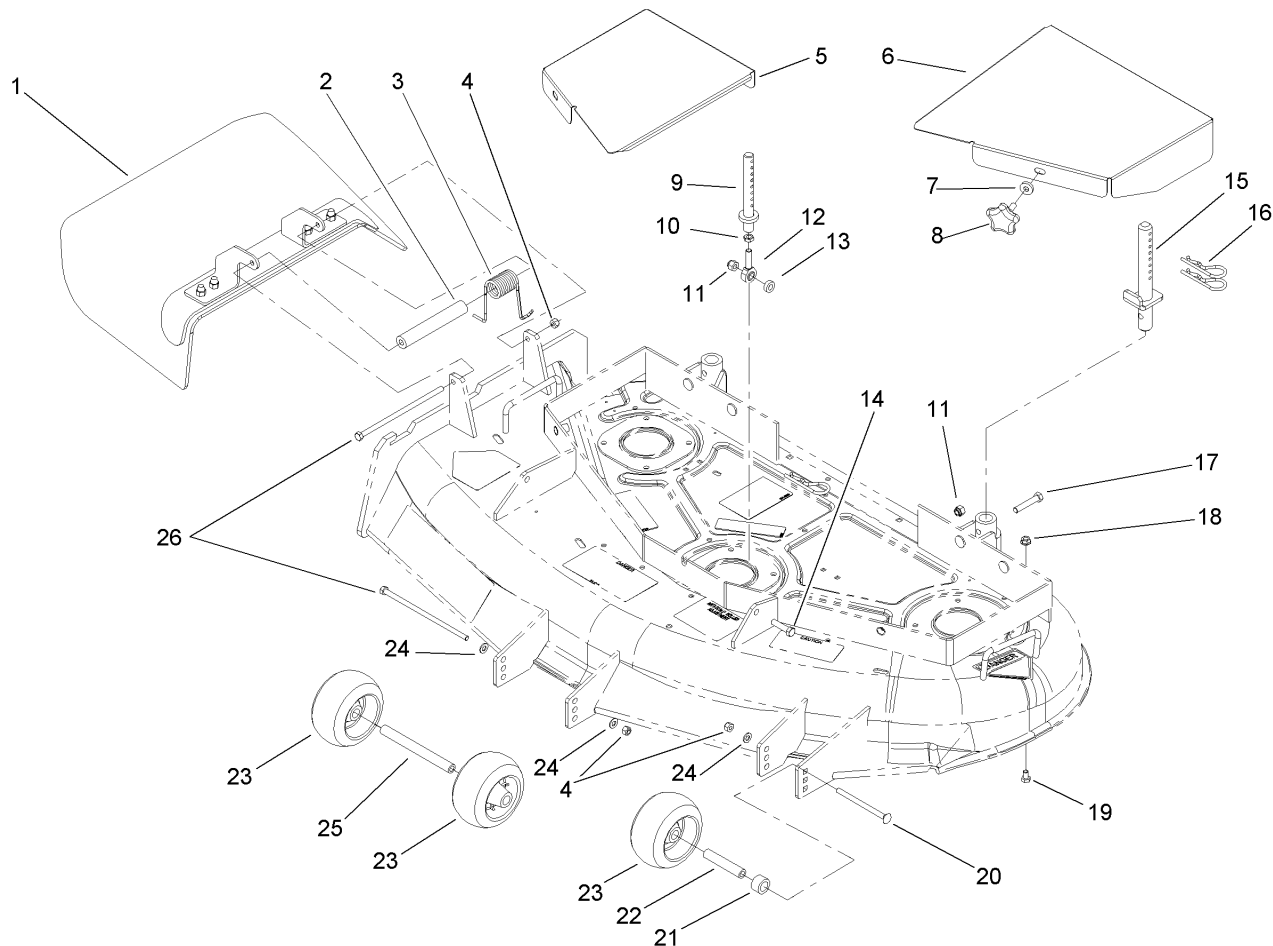


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-4194	1	Deflector ASM	25	98-5967	1	Spacer-Wheel
2	105-4622	1	Spacer	26	322-50	2	Screw-HH
3	104-8554	1	Spring-Torsion				
4	3296-29	3	Nut-Lock, NI				
5	106-3363-01	1	Cover-Belt, RH				
6	106-3362-01	1	Cover-Belt, LH				
7	106-0565	2	Washer-Rubber				
8	106-0887	2	Knob				
9	106-0684	2	Front Pin ASM				
10	3220-3	2	Nut-Jam				
11	3296-39	4	Nut-Lock, NI				
12	1-613204	2	Balljoint				
13	104-1156	2	Spacer				
14	323-8	2	Screw-HH				
15	106-3365	2	Rear Pin ASM				
16	3290-256	6	Pin-Hair				
17	323-10	2	Screw-HH				
18	32128-20	4	Nut-HF				
19	322-1	4	Screw-HH				
20	3230-30	1	Screw-CARR				
21	106-0563	1	Spacer-Wheel				
22	106-0545	1	Bushing-Roller				
23	1-603299	3	Roller-Anti Scalp				
24	3256-23	3	Washer-Flat				

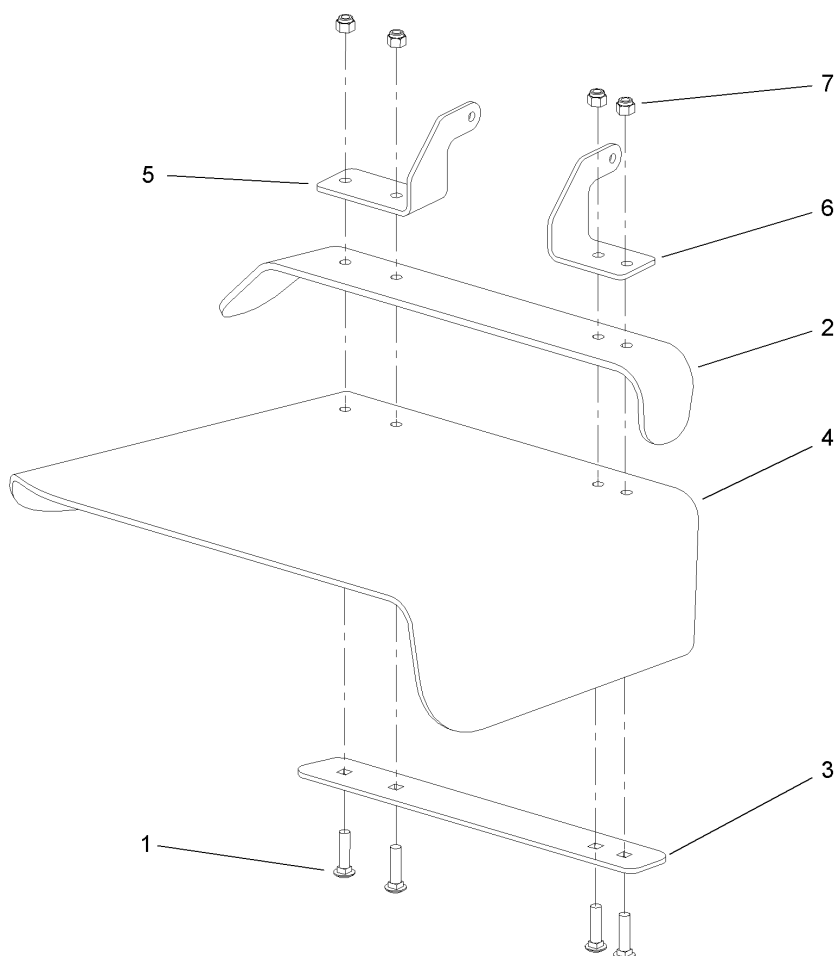


Deflector Assembly No. 107-4194

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

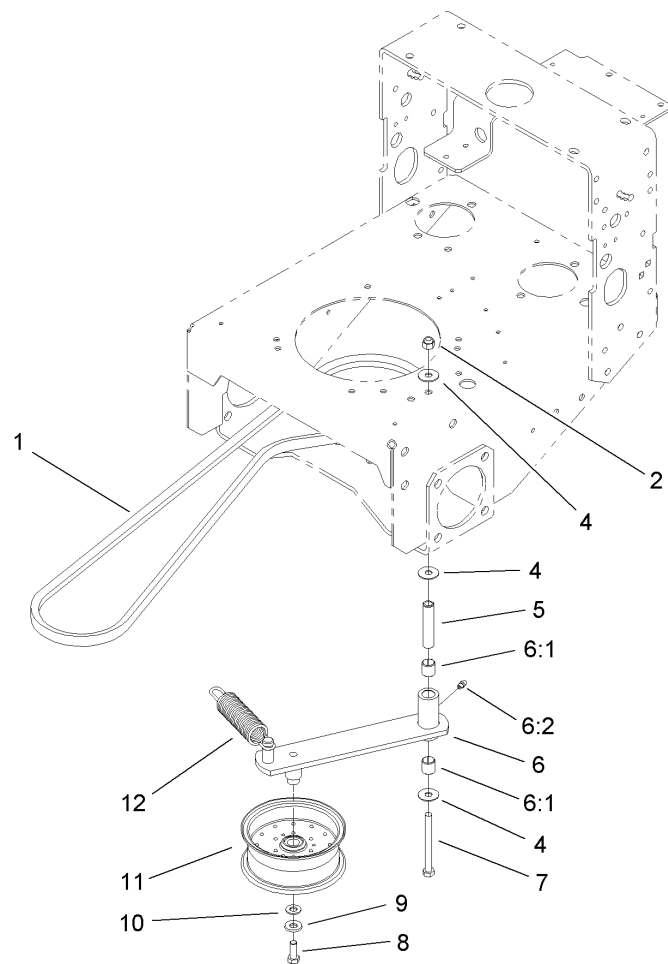

Drive Belt and Tensioner Assembly


Ref	Part No.	Qty.	Description				
1	104-8120	1	V-Belt, PTO				
2	3296-39	1	Nut-Lock, NI				
4	52-2860	3	Washer				
5	104-6377	1	Tube-Idler				
6	106-0734	1	Idler Arm ASM				
6:1	1-513034	2	Sleeve-Bearing				
6:2	302-5	1	Fitting-Grease				
7	323-42	1	Screw-HH				
8	323-6	1	Screw-HH				
9	98-5975	1	Washer-Belleville				
10	3256-24	1	Washer-Flat				
11	1-413099	1	Pulley-Idler				
12	105-8443	1	Spring-Extension				

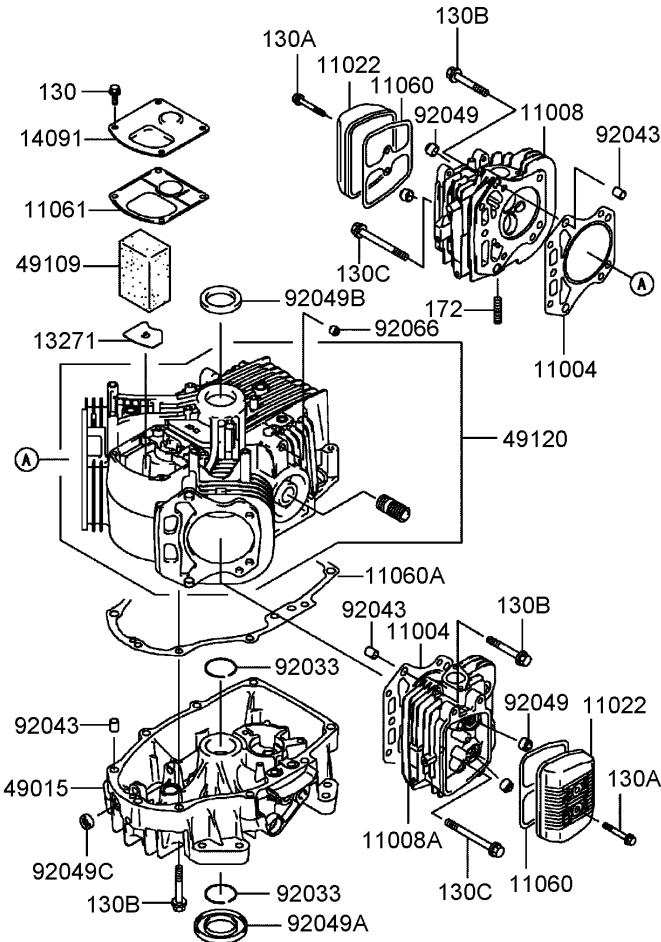

Cylinder/Crankcase Assembly


Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
11004	11004-7016	2	Gasket-Head				
11008	11008-6043	1	Head-Cylinder, No. 1				
11008A	11008-7020	1	Head-Cylinder, No. 2				
11022	11022-7003	2	Case-Rocker				
11060	11060-7001	2	Gasket-Case, Rocker				
11060A	11060-7008	1	Gasket-Cover, Crankcase				
11061	11061-7001	1	Gasket-Breather				
13271	13271-7016	1	Plate				
14091	14091-7006	1	Cover				
49015	49015-6253	1	Cover-Crankcase				
49109	49109-7002	1	Element-Breather				
49120	49120-7023	1	Crankcase-Comp				
92033	92033-7003	2	Ring-Snap				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil, Rvc2 (6x11x10.2)				
92049A	92049-7015	1	Seal-Oil, Sd (35x62x8 L Hs)				
92049B	92049-7016	1	Seal-Oil, Sd (35x48x8 R Hs)				
92049C	92049-7019	1	Seal-Oil, So (8x14x5 Hs)				
92066	92066-7002	1	Plug				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	17	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				

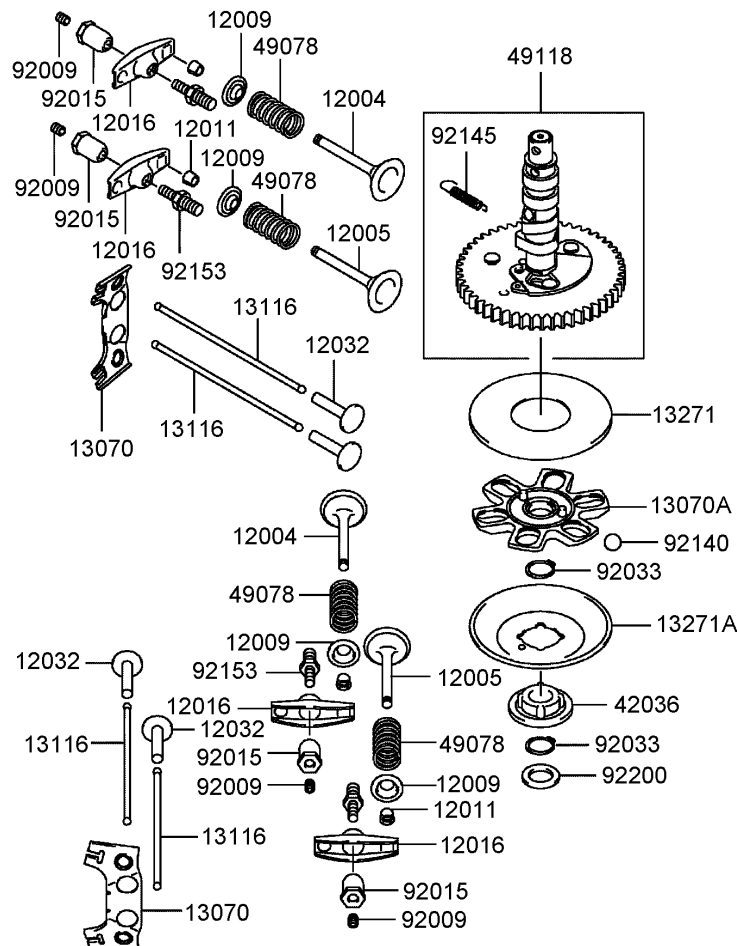


Valve/Camshaft Assembly
Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
⑨12004	12004-7003	2	Valve-Intake				
⑨12005	12005-7003	2	Valve-Exhaust				
⑨12009	12009-7001	4	Retainer-Spring, Valve				
⑨12011	12011-2056	8	Collet				
⑨12016	12016-7001	4	Arm-Rocker				
⑨12032	12032-7001	4	Tappet				
⑨13070	13070-7001	2	Guide				
⑨13070A	13070-7004	1	Guide				
⑨13116	13116-2057	4	Rod-Push				
⑨13271	13271-7007	1	Plate				
⑨13271A	13271-7021	1	Plate-Governor				
⑨42036	42036-7009	1	Sleeve				
⑨49078	49078-7001	4	Spring-Valve, Engine				
⑨49118	49118-7004	1	Camshaft-Comp				
⑨92009	92009-2341	4	Screw				
⑨92015	92015-2253	4	Nut				
⑨92033	92033-7001	2	Ring-Snap				
⑨92140	92140-7002	6	Ball				
⑨92145	92145-7001	1	Spring				
⑨92153	92153-7019	4	Bolt				
⑨92200	92200-7001	1	Washer				

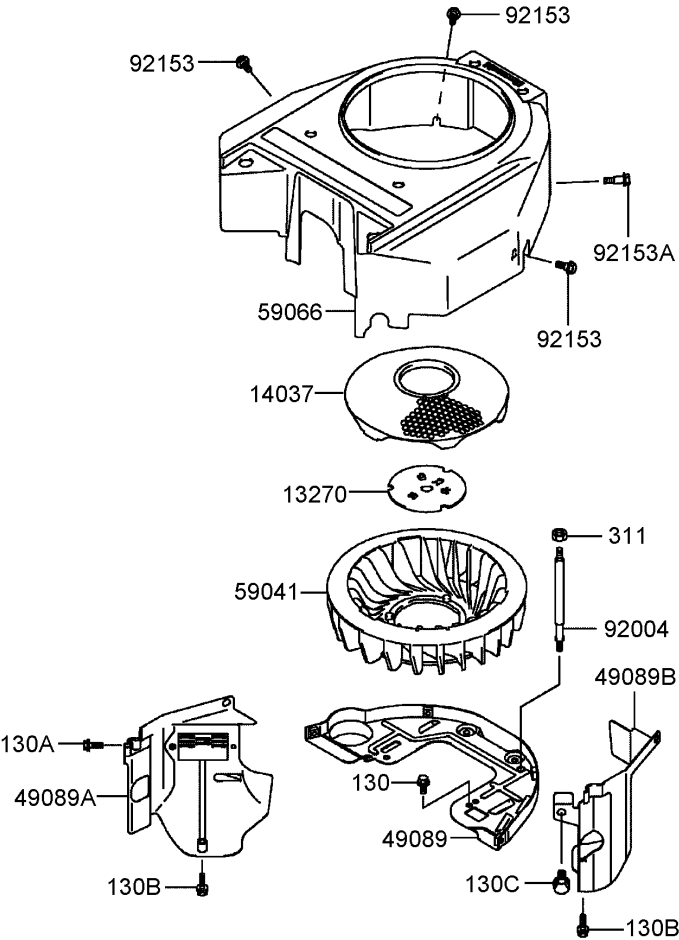

Cooling Equipment Assembly
Kawasaki FH541V-AS27


Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7021-9H	1	Screen				
❸49089	49089-7032	1	Shroud-Engine				
❸49089A	49089-7042	1	Shroud-Engine				
❸49089B	49089-7043	1	Shroud-Engine				
❸59041	59041-7010	1	Fan				
❸59066	59066-7024	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸130	130B0612	2	Bolt-Flanged				
❸130A	130B0616	2	Bolt-Flanged				
❸130B	130B0625	2	Bolt-Flanged				
❸130C	130B0816	1	Bolt-Flanged				
❸311	311B0600	2	Nut-Hex				

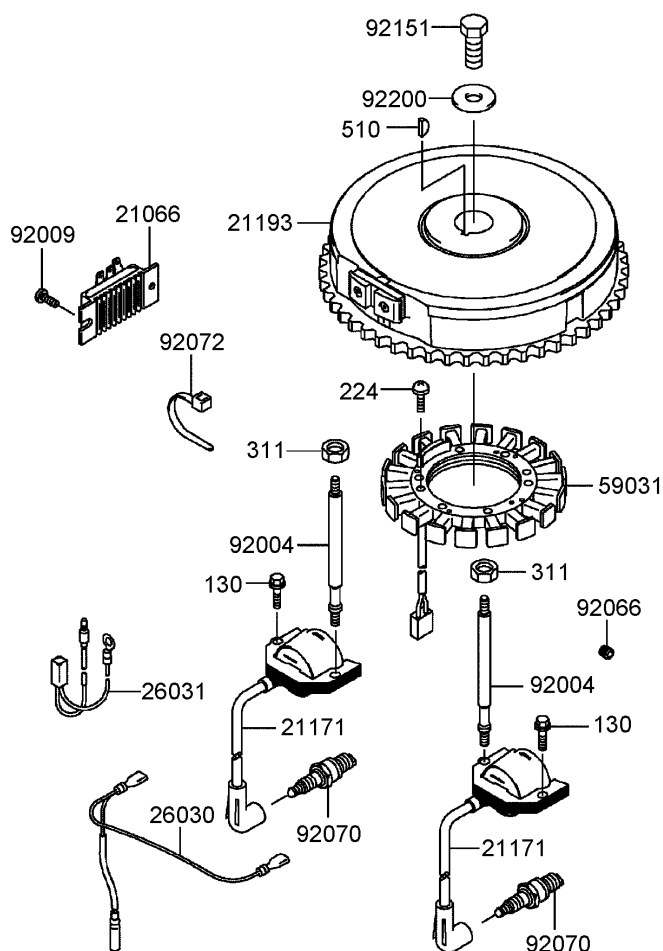

Electric Equipment Assembly


Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
⑨21066	21066-7011	1	Regulator-Voltage				
⑨21171	21171-7013	2	Ignition Coil ASM				
⑨21193	21193-7007	1	Flywheel ASM				
⑨26030	26030-7001	1	Harness				
⑨26031	26031-7002	1	Harness				
⑨59031	59031-7001	1	Coil-Charging				
⑨92004	92004-7009	2	Stud				
⑨92009	92009-2308	1	Screw				
⑨92066	92066-7002	1	Plug				
⑨92070	92070-7003	2	Plug-Spark (Rcj8y, Solid)				
⑨92072	92072-7003	2	Band				
⑨92151	92151-2097	1	Bolt (12x30)				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	2	Bolt-Flanged				
⑨224	224B0520	4	Screw-Pan				
⑨311	311B0600	2	Nut-Hex				
⑨510	510A5100	1	Key-Woodruff				

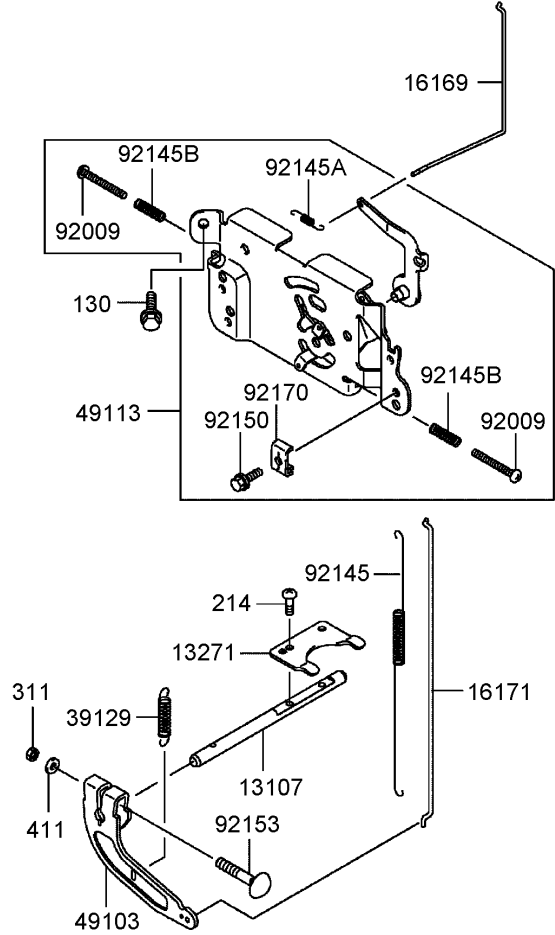


Control Equipment Assembly
Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271	13271-7018	1	Plate				
③16169	16169-7010	1	Link-Choke				
③16171	16171-7001	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7027	1	Panel-Control, Comp				
③92009	92009-7007	2	Screw (4x35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	2	Spring				
③92150	92150-2182	1	Bolt (5x18)				
③92153	92153-7005	1	Bolt (6x35)				
③92170	92170-7001	1	Clamp				
③130	130B0612	2	Bolt-Flanged				
③214	214B0408	2	Screw-Pan				
③311	311B0600	1	Nut-Hex				
③411	411b0600	1	Washer-Plain				

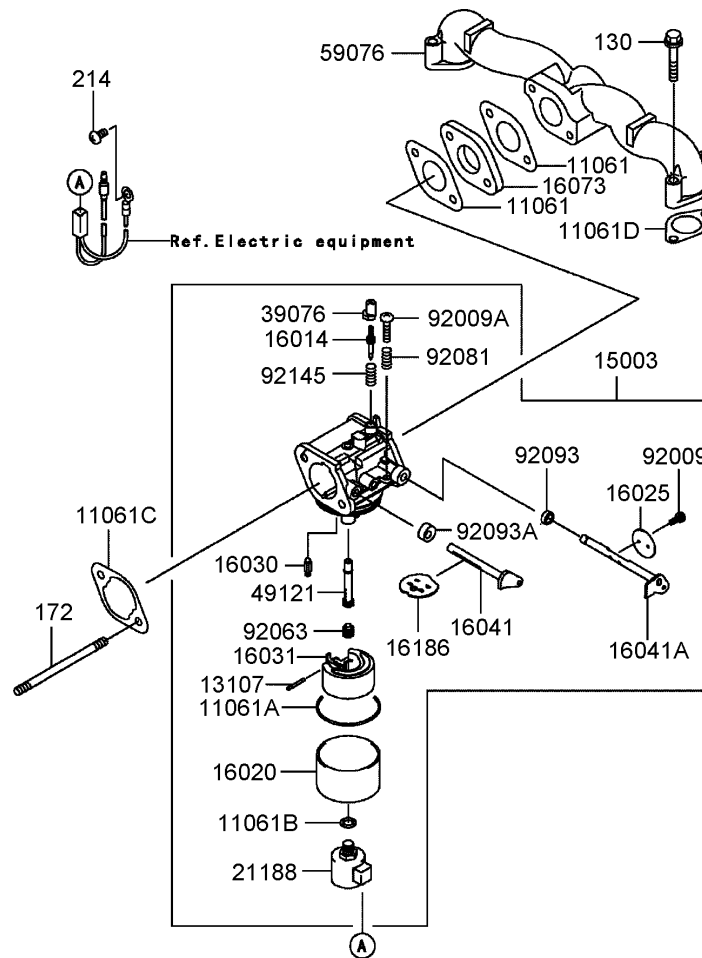


Carburetor Assembly Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑤11061	11061-7004	2	Gasket-Insulator	⑤92093	92093-2100	1	Seal
⑤11061A	11061-7009	1	Gasket-Chamber	⑤92093A	92093-7003	1	Seal
⑤11061B	11061-7010	1	Gasket-Screw	⑤92145	92145-7015	1	Spring
⑤11061C	11061-7018	1	Gasket-Cleaner, Air	⑤130	130B0635	4	Bolt-Flanged
⑤11061D	11061-7019	2	Gasket	⑤172	172G0690	2	Bolt-Stud
⑤13107	13107-7018	1	Shaft	⑤214	214B0510	1	Screw-Pan
⑤15003	15003-7106	1	Carburetor ASM				
⑤16014	16014-7007	1	Screw-Air, Pilot				
⑤16020	16020-7003	1	Chamber-Float				
⑤16025	16025-7006	1	Valve-Throttle				
⑤16030	16030-7003	1	Valve-Float				
⑤16031	16031-7002	1	Float				
⑤16041	16041-7016	1	Shaft-Choke, Carburetor				
⑤16041A	16041-7018	1	Shaft-Throttle, Carburetor				
⑤16073	16073-7007	1	Insulator				
⑤16186	16186-7004	1	Choke Valve ASM				
⑤21188	21188-7002	1	Solenoid				
⑤39076	39076-7001	1	Limiter				
⑤49121	49121-7010	1	Nozzle-Main				
⑤59076	59076-7001	1	Manifold-Intake				
⑤92009	92009-2083	2	Screw				
⑤92009A	92009-2349	1	Screw				
⑤92063	92063-7065	1	Jet-Main, #112				
⑤92081	92081-2234	1	Spring				

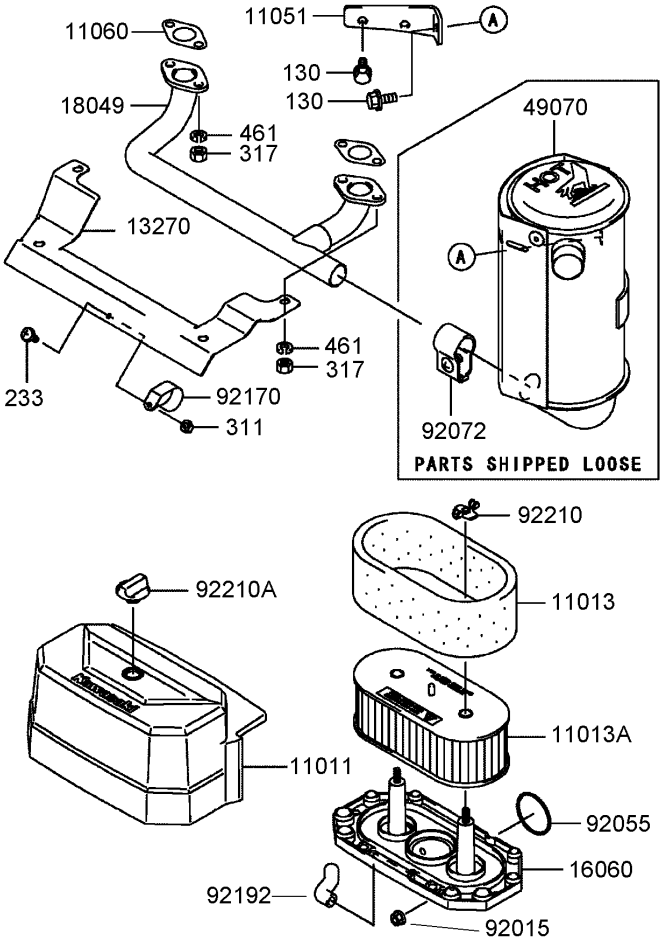


Muffler and Air Filter Assembly
Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
❸11011	11011-7036	1	Case-Filter, Air				
❸11013	11013-7025	1	Element-Filter, Air				
❸11013A	11013-7031	1	Element-Filter, Air				
❸11051	11051-7005-9H	1	Bracket				
❸11060	11060-7021	2	Gasket-Muffler				
❸13270	13270-7008	1	Plate				
❸16060	16060-7016	1	Pipe-Intake				
❸18049	18049-7001	1	Pipe-Exhaust				
❸49070	49070-7015	1	Muffler-Comp				
❸92015	92015-1193	2	Nut				
❸92055	92055-7015	1	O-Ring				
❸92072	92072-7008	1	Band				
❸92170	92170-7002	1	Clamp				
❸92192	92192-7010	1	Tube				
❸92210	92210-7004	2	Nut				
❸92210A	92210-7019	1	Nut				
❸130	130B0816	2	Bolt-Flanged				
❸233	233B0416	1	Screw-Pan				
❸311	311B0400	1	Nut-Hex				
❸317	317R0800	4	Nut-Hex, Small				
❸461	461F0800	4	Washer-Spring				

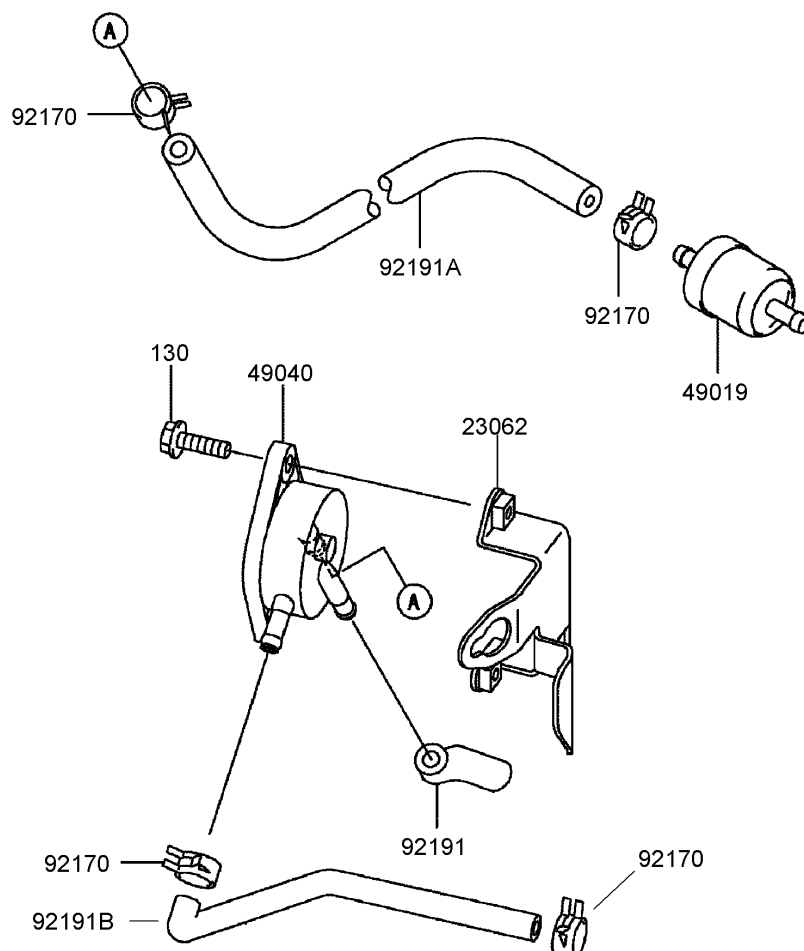

Fuel Tank/Fuel Valve Assembly Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket-Comp				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube (6.35x12.7x160)				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged				

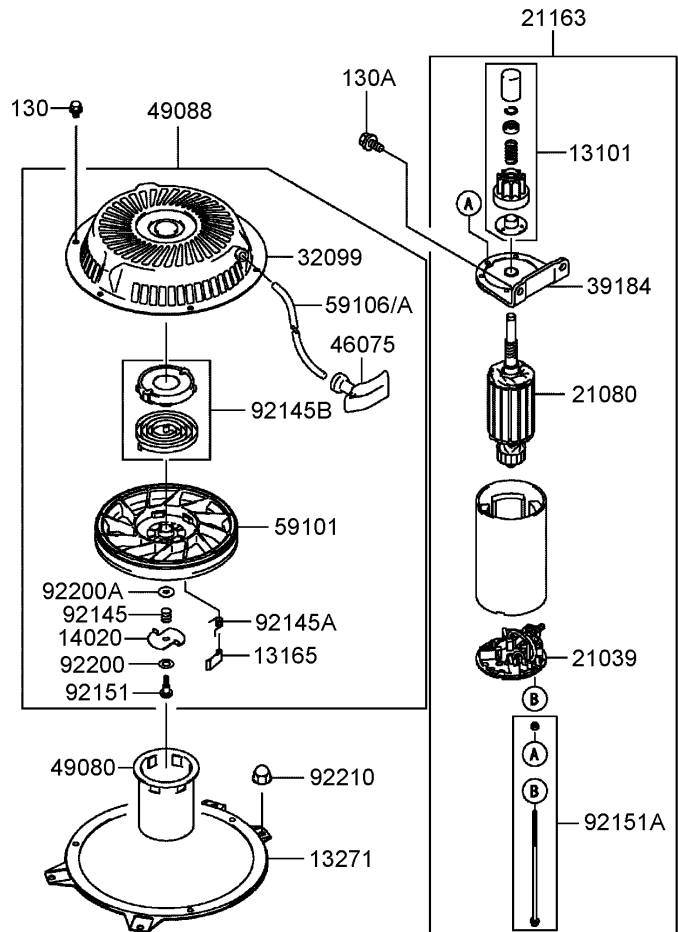

Starter Assembly Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
13101	13101-7003	1	Gear ASM	130	130B0608	3	Bolt-Flanged
13165	13165-7001	4	Pawl-Starter, Recoil	130A	130B0816	2	Bolt-Flanged
13271	13271-7003-9H	1	Plate				
14020	14020-7001	1	Retainer				
21039	21039-7004	1	Brush				
21080	21080-7001	1	Armature				
21163	21163-7010	1	Starter-Electric				
32099	32099-7002	1	Case-Recoil, Starter				
39184	39184-7004	1	Bracket ASM				
46075	46075-7001	1	Grip-Recoil, Starter				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7013	1	Starter-Recoil				
59101	59101-7001	1	Reel-Recoil				
59106	59106-7001	1	Rope				
59106A	59106-7005	1	Rope				
92145	92145-7006	1	Spring				
92145A	92145-7007	2	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92151A	92151-7013	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				
92210	92210-0003	4	Nut				



56033 -



56070



56080

56080A

Kawasaki FH430V改KA 15.0

Decals

Kawasaki FH541V-AS27

Ref	Part No.	Qty.	Description				
56033	56033-7002	1	Label-Manual				
56070	56070-7001	1	Label-Warning				
56080	56080-2077	1	Label-Brand				
56080A	56080-7023	1	Label-Brand				

Attachments and Accessories

For 30440 - Mid-Size ProLine Pistol Grip Hydro, 17 HP with 44in Side Discharge Mower

Product Name	Model/Part
Atomic Blade	. 104-1300
Striping Kit	. 106-3370
Weight Kit	. 106-5491
Soft Bag (3 Bushel)	. 30104
Steel Grass Catcher	. 30107
Tru Trak Sully	. 30110
High Lift Blade	. 55-4940-03
Recycler Blade	. 92-7952-03
44 Inch Recycler Kit	. 99-4582
44 Inch Mulching Kit	. 99-8525

NOTES

NOTES

