Form Number 3352-530

Mid-Size ProLine, Pistol Grip, Hydro Drive
15 HP with 48in Side Discharge Mower

Model No. 30528 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel System Assembly	3
Transmission and Drive Pulley Assembly	4
Linkage Assembly	5
Wheel Drive Assembly	6
Hydraulic Assembly	7
Hydraulic Pump Assembly No. 106-5490	8
Lower Control Assembly	9
Upper Handle Assembly	10
Electrical Assembly	12
Deck Assembly	13
Deflector Assembly No. 107-4140	14
Front Caster and Blade Brake Assembly	15
Spindle, Blade and Belt Assembly	17
Crankshaft Assembly Kohler CV15T 41624	18
Crankcase Assembly Kohler CV15T 41624	19
Oil Pan / Lubrication Assembly Kohler CV15T 41624	20
Head / Valve / Breather Assembly Kohler CV15T 41624	21
Ignition / Electrical Assembly Kohler CV15T 41624	22
Blower Housing and Baffle Assembly Kohler CV15T 41624	23
Starting System Assembly Kohler CV15T 41624	24
Fuel System Assembly Kohler CV15T 41624	25
Engine Control Assembly Kohler CV15T 41624	26
Air Intake / Filtration Assembly Kohler CV15T 41624	27
Exhaust Assembly Kohler CV15T 41624	28
Attachments and Accessories List	29

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PPH	phillips pan head
PRH	phillips round head
PTH	phillips truss head
PTO	power take off
RH	right hand
ROPS	roll over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated


❷ Not serviced separately

❸ Obtain Parts From Your Local Kohler Dealer

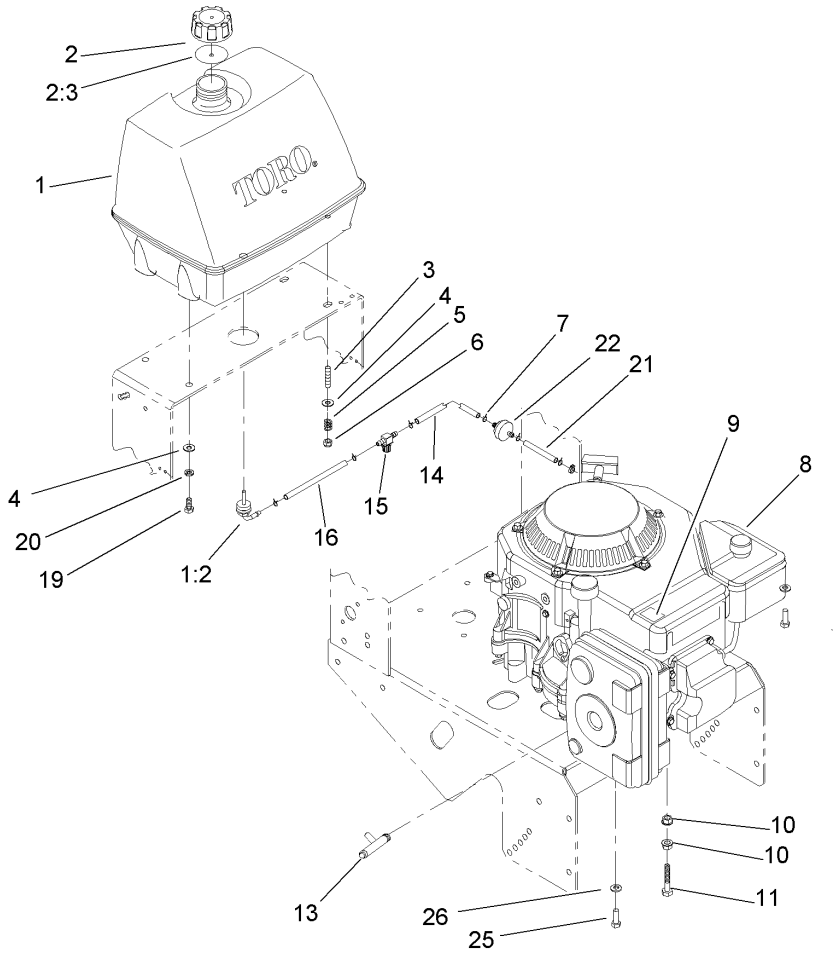

Engine and Fuel System Assembly


Ref	Part No.	Qty.	Description
1	106-0730	1	Fuel Tank ASM
1:2	103-2605	1	Fitting-Fuel, Bulkhead
2	88-3980	1	Gas Cap ASM
2:3	88-4010	1	Gasket-Cap, Gas
3	1-633023	2	Stud
4	3256-23	4	Washer-Flat
5	1-633349	2	Spring-Tank, Fuel
6	3296-47	2	Nut-Lock, NI
7	1-303077	6	Clamp
❷8		1	Engine-Kohler, Cv15t-41624
9	106-0699	1	Decal-Warning, Hot Surfaces
10	3290-357	2	Nut-HHF
11	323-13	1	Screw-HH
13	103-1965	1	Valve-Drain, Oil
14	1-603776	1	Hose-Line, Fuel
15	1-603770	1	Valve-Fuel
16	1-603955	1	Hose-Fuel
19	322-3	2	Screw-HH
20	1-805005	2	Washer-Lock
21	47-2983	1	Hose-Fuel
22	1-303197	1	Filter-Fuel
25	33114-025	4	Screw-HH
26	1-303334	4	Washer-Spring

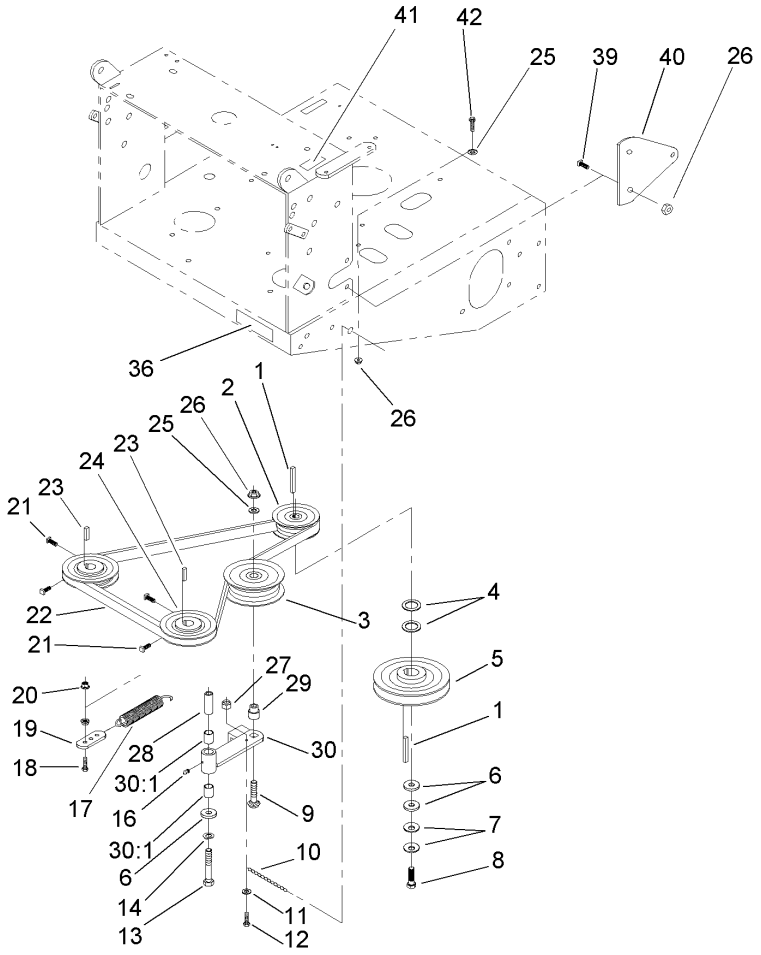

Transmission and Drive Pulley Assembly

Ref	Part No.	Qty.	Description
1	1-807259	2	Key
2	1-653035	1	Pulley
3	1-603843	1	Pulley-Idler
4	1-523157	2	Washer-Spacer
5	103-1667	1	Sheave
6	1-373034	3	Washer
7	1-603610	2	Washer-Spring
8	3212-6	1	Screw-HH
9	3231-29	1	Screw-CARR
10	1-323365	1	Chain-Link, Twist
11	3256-14	1	Washer-Flat
12	1-809069	1	Screw-Cap Socket Head
13	323-12	1	Screw-HH
14	3253-5	1	Washer-Lock
16	302-19	1	Fitting-Grease
17	1-603402	1	Spring-Extension
18	322-5	1	Screw-HH
19	1-603801	1	Anchor-Spring
20	32128-20	6	Nut-HF
21	1-803050	4	Screw-Set
22	106-2740	1	V-Belt-Drive, Hydro
23	1-807272	2	Key
24	1-413010	2	Sheave W/hub
25	3256-24	2	Washer-Flat


Ref	Part No.	Qty.	Description
26	3290-357	7	Nut-HHF
27	3296-2	1	Nut-Lock
28	1-603044	1	Bushing
29	1-603496	1	Bushing-Idler
30	1-602521	1	Idler Arm ASM
30:1	103-4681	2	Sleeve-Bearing
36	98-0776	1	Decal-Caution
39	323-4	2	Screw-HH
40	1-413497	1	Bellcrank
41	95-2814	1	Decal-Shut Off, Fuel
42	323-7	1	Screw-HH

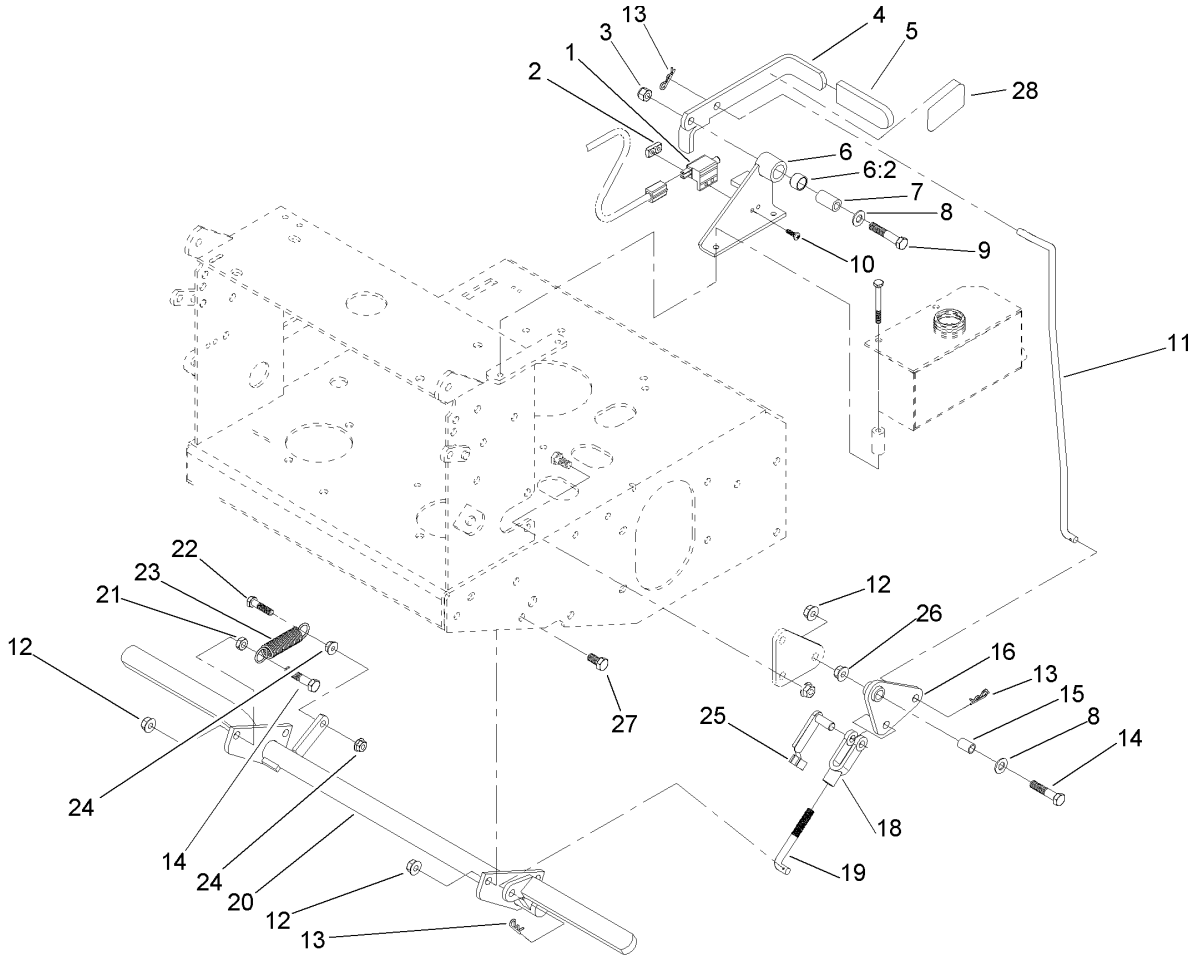

Linkage Assembly

Ref	Part No.	Qty.	Description
1	1-513051	1	Switch-Open, Normally
2	1-633181	1	Plate-Tapped
3	3296-39	1	Nut-Lock, NI
4	1-412501-03	1	Lever-Parkbrake
5	1-303020	1	Grip-Lever
6	1-414504	1	Bracket ASM
6:2	1-413347	2	Sleeve-Bushing
7	1-413344	1	Bushing-Pivot
8	3256-24	2	Washer-Flat
9	323-10	1	Screw-HH
10	3290-500	2	Screw-PPH
11	1-413496	1	Linkage-Upper
12	3290-357	5	Nut-HHF
13	1-806003	3	Pin-Hair
14	323-9	2	Screw-HH
15	1-303548	1	Bushing-Plastic
16	1-414508	1	Bellcrank ASM
18	1-633131	1	Yoke-Linkage, Brake
19	1-413489	1	Linkage-Lower
20	103-2004-03	1	Brake
21	3218-3	1	Nut-Jam
22	322-6	1	Screw-HH
23	1-323161	1	Spring-Idler
24	32128-20	2	Nut-HF


Ref	Part No.	Qty.	Description
25	103-2399	1	Pin-Spring, Clevis
26	32128-21	1	Nut-HF
27	323-4	3	Screw-HH
28	103-2103	1	Decal-Brake, Park

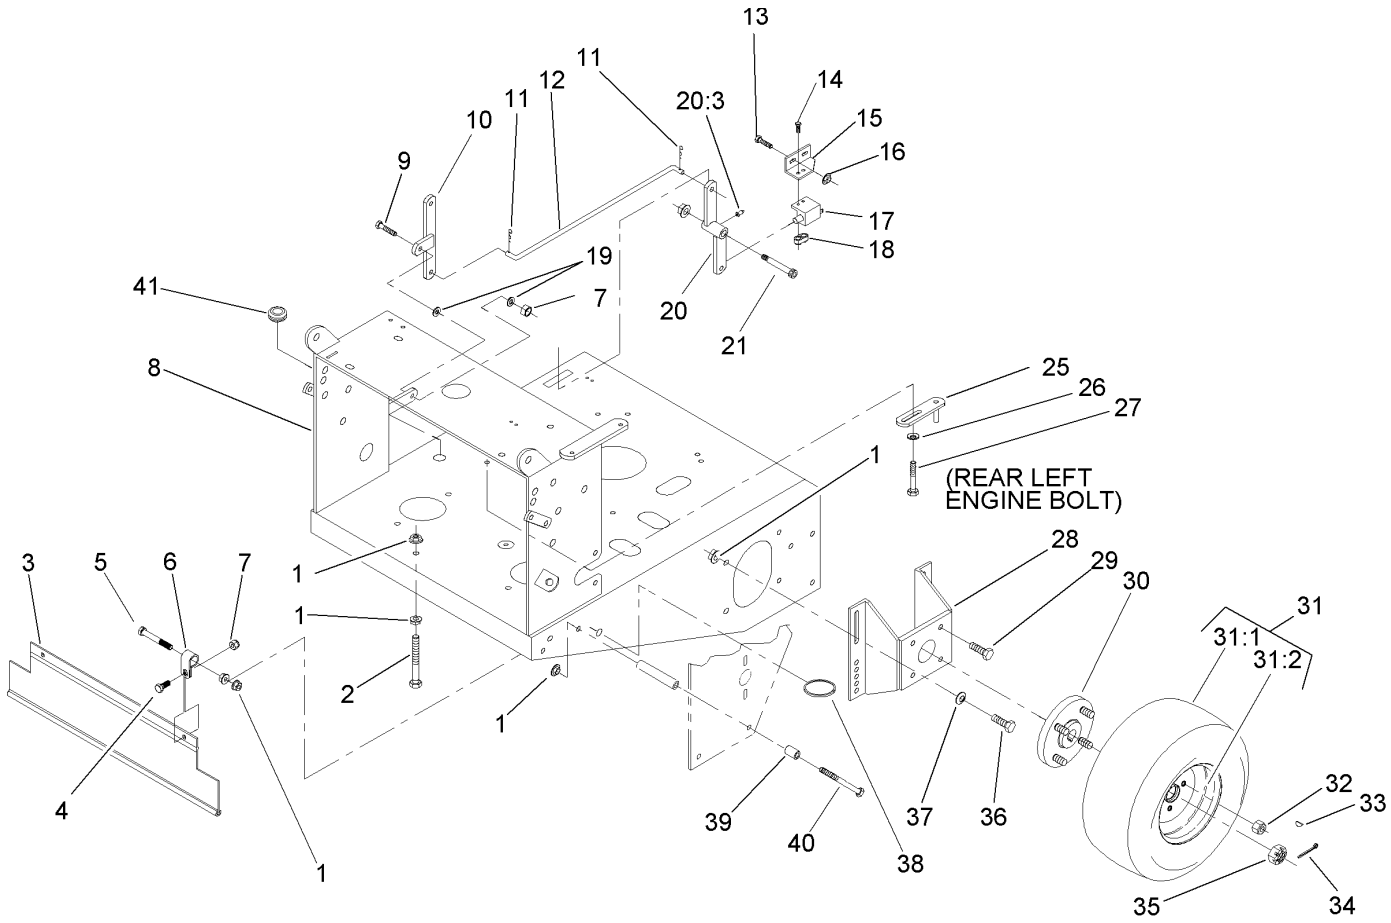

Wheel Drive Assembly

Ref	Part No.	Qty.	Description
1	3290-357	11	Nut-HHF
2	323-11	1	Screw-HH
3	103-2056	1	Shield-Drag
4	322-3	2	Screw-HH
5	323-13	4	Screw-HH
6	1-413510	2	Clip-Loom
7	3296-29	3	Nut-Lock, NI
8	103-6495-01	1	Deck-Engine
9	322-6	2	Screw-HH
10	1-322090-01	1	Bellcrank ASM
11	1-806003	3	Pin-Hair
12	1-323172	1	Linkage-Engage, Blade
13	321-3	2	Screw-HH
14	3290-500	1	Screw-PPH
15	1-323213	1	Bracket-Switch, Blade
16	32128-33	2	Nut-HF
17	1-513051	1	Switch-Open, Normally
18	1-633181	1	Plate-Tapped
19	3256-23	5	Washer-Flat
20	1-322108	1	Bellcrank ASM
20:3	302-40	1	Fitting-Grease
21	1-809062	1	Screw
25	1-322110	1	Guide-Belt
26	1-303334	1	Washer-Spring


Ref	Part No.	Qty.	Description
27	33114-030	1	Screw-HH
28	1-402062-01	2	Mount-Motor
29	3234-12	8	Screw-HHF
30	1-602997	2	Hub W/studs
❷31		2	Wheel & Tire ASM
31:1	1-613264	1	Tire-Turfmaster
31:2	1-603715	1	Wheel-Rim
32	242-50	8	Nut-Lug
33	1-807019	2	Key-Woodruff
34	1-806800	2	Pin-Cotter
35	32136-5	2	Nut-Hex, Slotted
36	323-6	8	Screw-HH
37	98-5975	12	Washer-Belleville
38	1-323366	1	Ring-Split
39	105-4820	1	Spacer-Short
40	323-23	1	Screw-HH
41	1-543296	1	Grommet

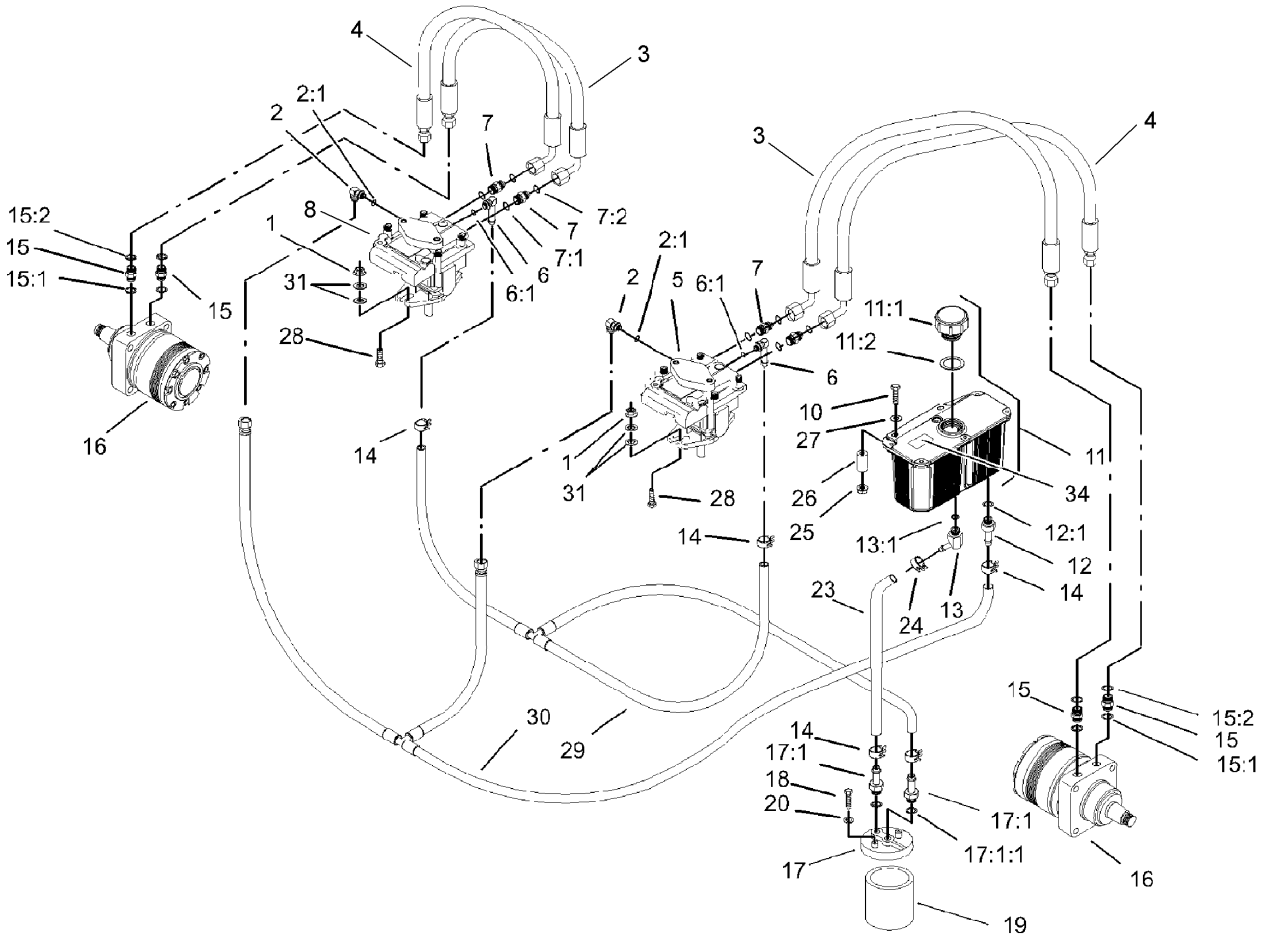

Hydraulic Assembly

Ref	Part No.	Qty.	Description
1	3290-357	4	Nut-HHF
2	103-1802	2	Fitting-Hyd, 90 DEG
2:1	1-603921	1	O-Ring
3	1-323241	2	Hose-Pressure, High
4	1-613034	2	Hose-Pressure, High
5	103-4611	1	Pump-HYD
❶5:1	105-6184	1	Seal Kit
❶5:2	105-6185	1	Plate-Valve
❶5:8	103-2664	1	Input Shaft Kit
❶5:9	94-6922	1	Bearing-Thrust
❶5:10	103-2666	1	Cylinder Block Kit
6	103-1799	2	Elbow-90 DEG
6:1	237-42	1	O-Ring
7	1-603990	4	Fitting-Straight
7:1	1-603920	1	O-Ring
7:2	1-603992	1	O-Ring
8	106-5490	1	Pump-HYD
10	321-15	2	Screw-HH
11	103-1946	1	Reservoir-HYD
11:1	103-1948	1	Cap-Reservoir, HYD
11:2	103-1949	1	Gasket-Cap
12	103-1801	1	Adapter-Straight
12:1	237-42	1	O-Ring
13	103-1807	1	Elbow-45 DEG


Ref	Part No.	Qty.	Description
13:1	237-42	1	O-Ring
14	103-1988	3	Clamp-Hose
15	1-603991	4	Fitting-Straight
15:1	237-80	1	O-Ring
15:2	1-603992	1	O-Ring
16	1-603718	2	Motor-Wheel
❶16:1	1-000119	1	Seal Kit
17	103-2889	1	Filter Head ASM
17:1	103-1912	2	Adapter-Straight
17:1:1	237-42	1	O-Ring
18	321-3	2	Screw-HH
19	1-633750	1	Filter-HYD
20	1-805004	2	Washer-Lock
23	103-2959	1	Hose-Charge
24	103-1716	3	Clamp-Hose
25	32128-33	2	Nut-HF
26	103-2191	2	Spacer
27	3256-22	2	Washer-Flat
28	323-7	4	Screw-HH
29	103-3914	1	Charge Hose ASM
30	103-4019	1	Case Drain Hose ASM
31	3256-3	8	Washer-Flat
34	1-523552	1	Decal-Tank, HYD

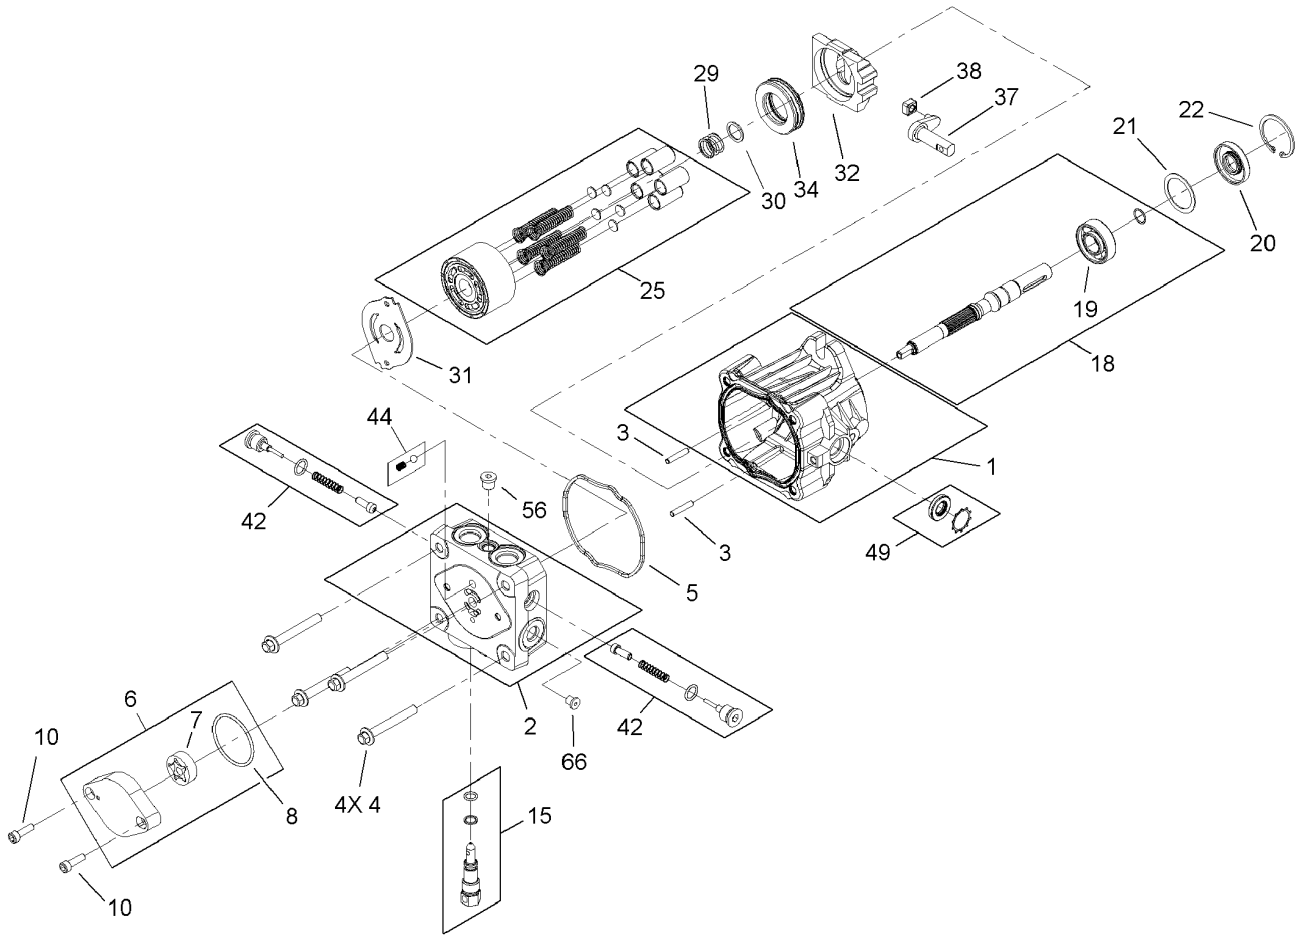

Hydraulic Pump Assembly No. 106-5490

Ref	Part No.	Qty.	Description
1	106-8751	1	Housing Kit
2	106-8752	1	End Cap Kit (W/poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	106-8758	2	Screw-HSH
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	104-2106	1	Cylinder Block ASM
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Block, Thrust
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	94-1909	1	Arm-Trunion
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/poppet)


Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	106-8761	1	Trunnion Seal/retainer Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
❶99	105-6184	1	Seal Kit

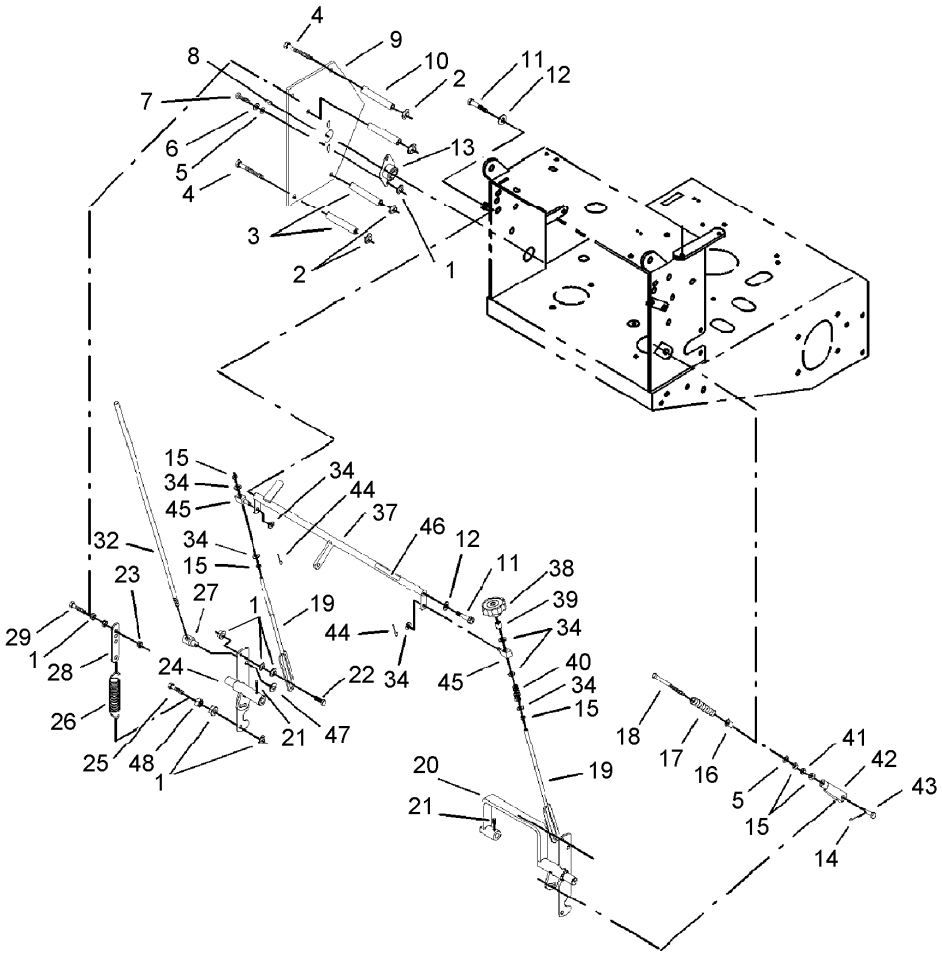

Lower Control Assembly

Ref	Part No.	Qty.	Description
1	32128-20	12	Nut-HF
2	3290-357	7	Nut-HHF
3	1-323197-01	4	Spacer-Shield
4	323-16	7	Screw-HH
5	3256-2	6	Washer-Flat
6	1-805005	4	Washer-Lock
7	322-3	4	Screw-HH
8	302-19	2	Fitting-Grease
9	103-4753-01	2	Shield-Controls, Hydro
10	1-323195-01	4	Spacer-Shield
11	1-809056	2	Screw
12	3256-24	2	Washer-Flat
13	1-633102	2	Bearing-Flange, Side
14	1-806003	2	Pin-Hair
15	3219-2	7	Nut-Hex
16	1-603735	2	Bushing-Flanged
17	1-603807	2	Spring-Return, Neutral
18	1-603737	2	Bolt-Return, Neutral
19	1-413350	2	Link-Control, Speed
20	103-4796-01	1	Shaft-Control, RH
21	1-803022	2	Screw-Set
22	1-403180	2	Screw-HH
23	3296-29	2	Nut-Lock, NI
24	103-1190-01	1	Shaft-Control, LH


Ref	Part No.	Qty.	Description
25	322-6	2	Screw-HH
26	1-603693	2	Spring-Extension
27	103-1235	2	Swivel-Lever, Drive
28	1-613089	2	Tab-Spring, Extension.
29	1-800016	2	Bolt-Tap, HH
32	1-413219	2	Rod-Lever, Drive
34	3256-23	7	Washer-Flat
37	1-412203-01	1	Crank-Control, Speed
38	1-413151	1	Knob-Tracking
39	1-603903	1	Spacer
40	1-323245	1	Spring-Compression
41	3220-2	2	Nut-Jam
42	1-303105	2	Yoke-Adjustable
43	1-808280	2	Pin-Clevis
44	3272-5	2	Pin-Cotter
45	1-603676	2	Swivel-Adjustable, Short
46	105-4109	1	Decal-Tracking
47	32151-47	2	Ring-Retaining
48	3218-2	2	Nut-Jam

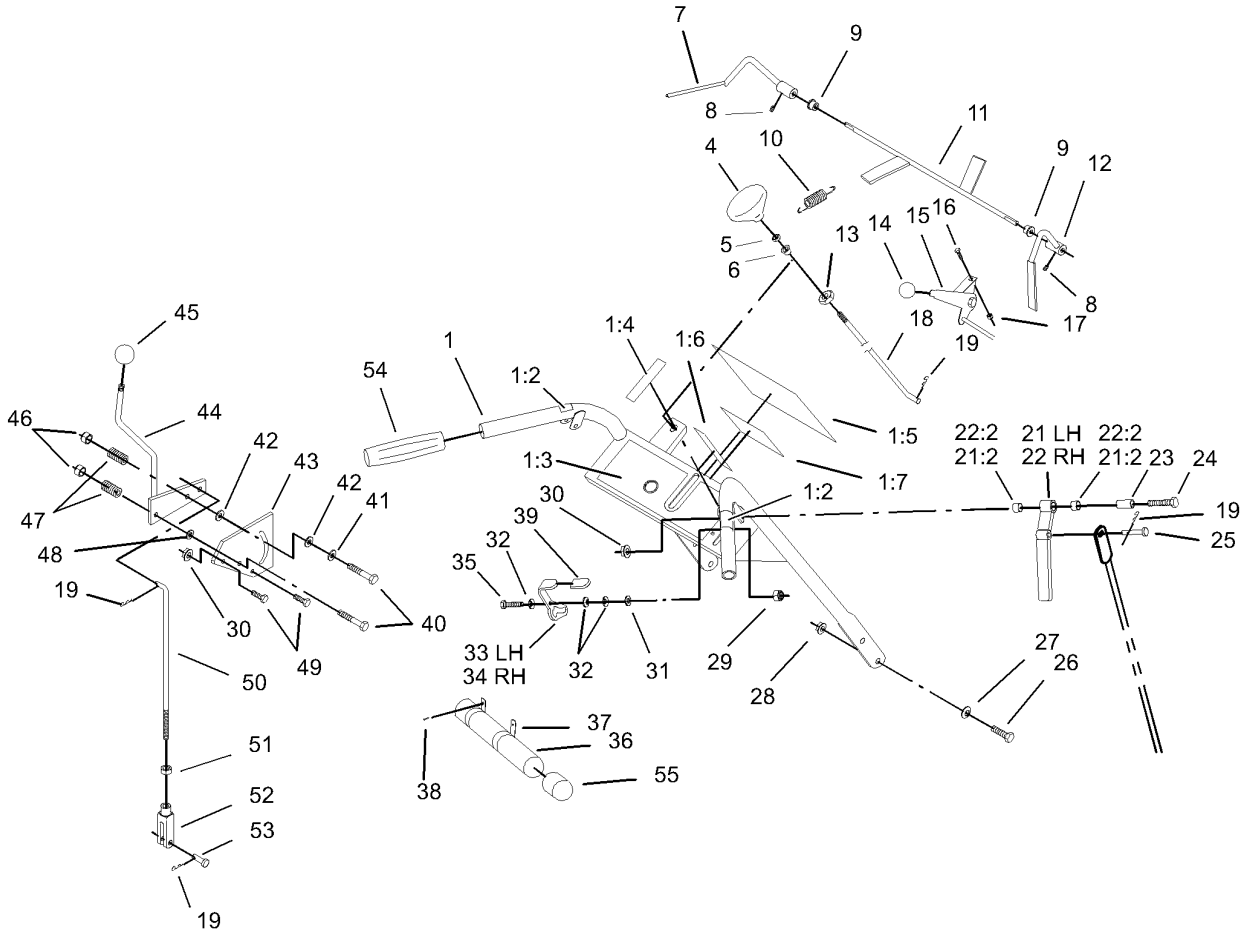

Upper Handle Assembly


Ref	Part No.	Qty.	Description
1	106-0751	1	Handle ASM
1:2	105-4110	2	Decal-Lock, Neutral
1:3	106-0829	1	Decal-Control Panel, Hydro
1:4	1-323689	1	Decal-Throttle
1:5	106-0750	1	Decal
1:6	95-5537	1	Decal-Engage, Deck
1:7	106-2743	1	Decal-Caution, Brake
4	1-323134	1	Knob-Push/pull
5	3218-2	1	Nut-Jam
6	1-323143	1	Bearing-Nylon
7	1-412183-03	1	Lever-LH
8	1-803322	2	Screw-Set
9	1-303365	2	Bushing-Nylon
10	1-303363	1	Spring-Extension
11	106-2717-03	1	Operator Presence Control Rod
12	1-412185-03	1	Lever-RH
13	1-323142	1	Nut-Push
14	1-513592	1	Knob-Ball
15	1-323322	1	Cable-Control, Throttle
16	1-807513	2	Bolt-CARR
17	3296-2	2	Nut-Lock
18	1-323181	1	Linkage-Blade
19	1-806003	3	Pin-Hair
21	103-0218	1	LH Drive Lever ASM

Ref	Part No.	Qty.	Description
21:2	1-413152	2	Sleeve-Bushing
22	103-0219	1	RH Drive Lever ASM
22:2	1-413152	2	Sleeve-Bushing
23	1-603749	2	Bushing-Lever, Drive
24	321-9	2	Screw-HH
25	1-613055	2	Pin-Clevis
26	323-6	4	Screw-HH
27	98-5975	4	Washer-Belleville
28	3290-357	4	Nut-HHF
29	3296-42	2	Nut-Lock, NI
30	32128-33	4	Nut-HF
31	3256-2	2	Washer-Flat
32	1-303435	6	Washer-Spring
33	1-413148	1	Latch-Lever, LH Drive
34	1-413150	1	Latch-Lever, RH Drive
35	321-10	2	Screw-HH
36	104-7050	1	Housing-Manual
37	2412-120	2	R-Clamp
38	32104-76	2	Screw
39	1-303019	2	Grip-Latch
40	322-10	2	Screw-HH
41	1-603716	1	Washer-Friction
42	1-323244	2	Washer-Friction
43	1-603730	1	Plate-Lever, Shifter

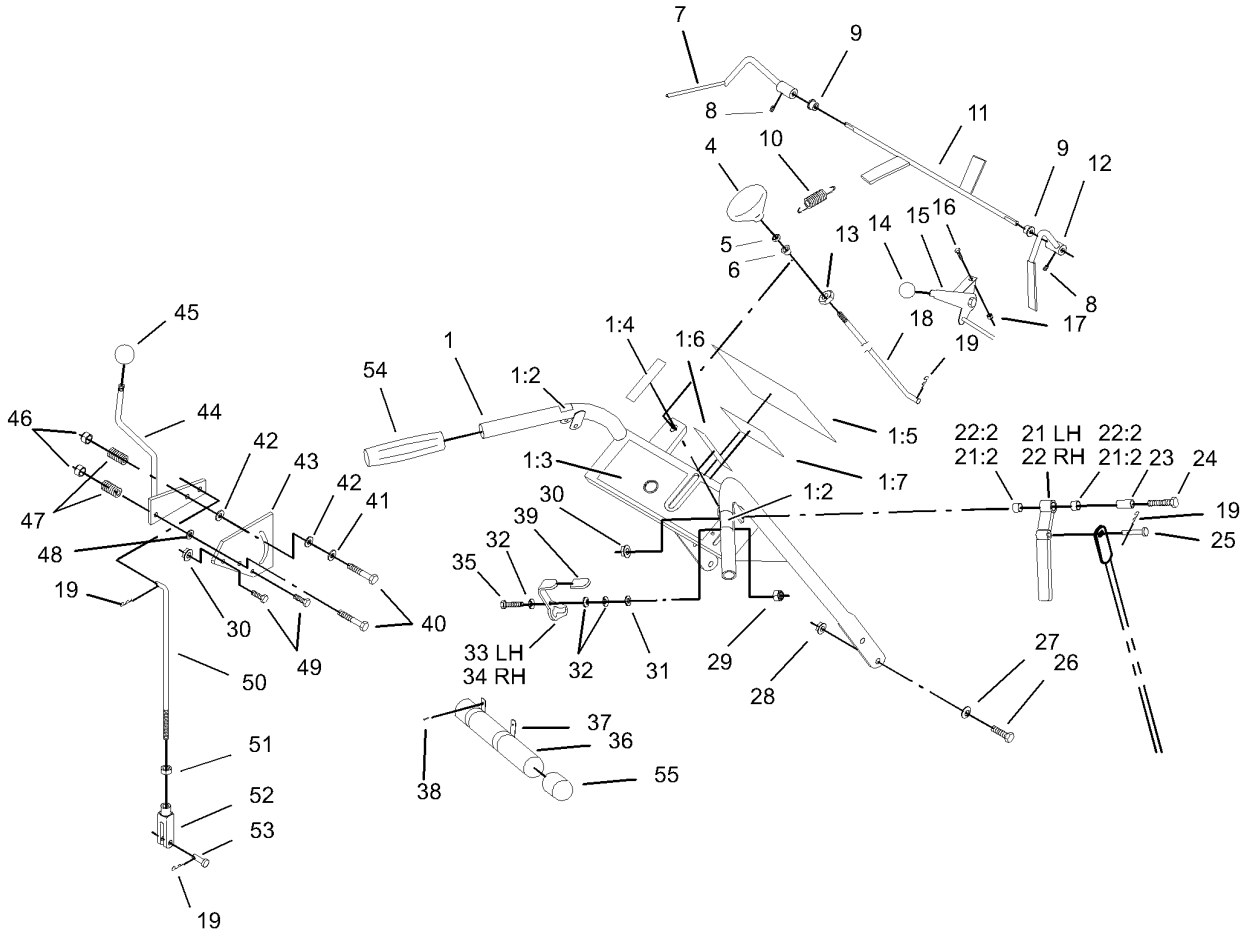


Upper Handle Assembly (continued)

Ref	Part No.	Qty.	Description
44	106-2748	1	Lever-Shift
45	1-603175	1	Knob-Ball
46	3296-29	2	Nut-Lock, NI
47	1-323245	2	Spring-Compression
48	3256-23	1	Washer-Flat
49	321-3	2	Screw-HH
50	1-323522	1	Rod-Control, Speed
51	3220-2	1	Nut-Jam
52	1-303105	1	Yoke-Adjustable
53	1-808280	1	Pin-Clevis
54	1-303097	2	Grip-Handle
55	104-7048	1	Cap-Housing

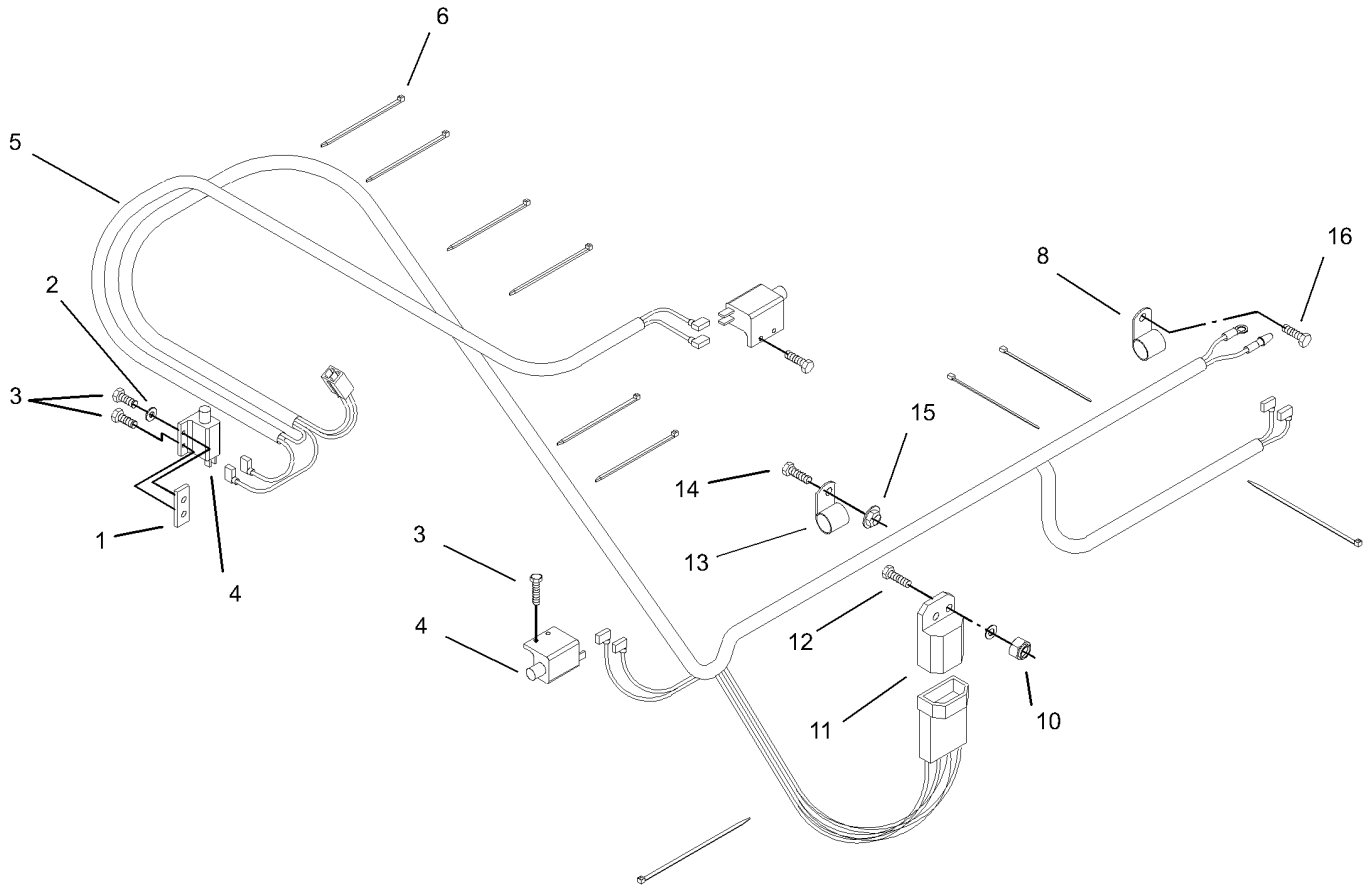

Electrical Assembly


Ref	Part No.	Qty.	Description
1	1-633181	2	Plate-Tapped
2	3256-14	1	Washer-Flat
3	3290-500	3	Screw-PPH
4	1-513051	2	Switch-Open, Normally
5	103-2286	1	Harness-Wire
6	1-303287	6	Tie-Plastic
8	1-413510	1	Clip-Loom
10	3296-42	2	Nut-Lock, NI
11	1-323430	1	Module-Interlock
12	321-4	1	Screw-HH
13	1-603727	1	Clip-Loom
14	321-3	1	Screw-HH
15	32128-33	1	Nut-HF
16	33114-016	1	Screw-HH

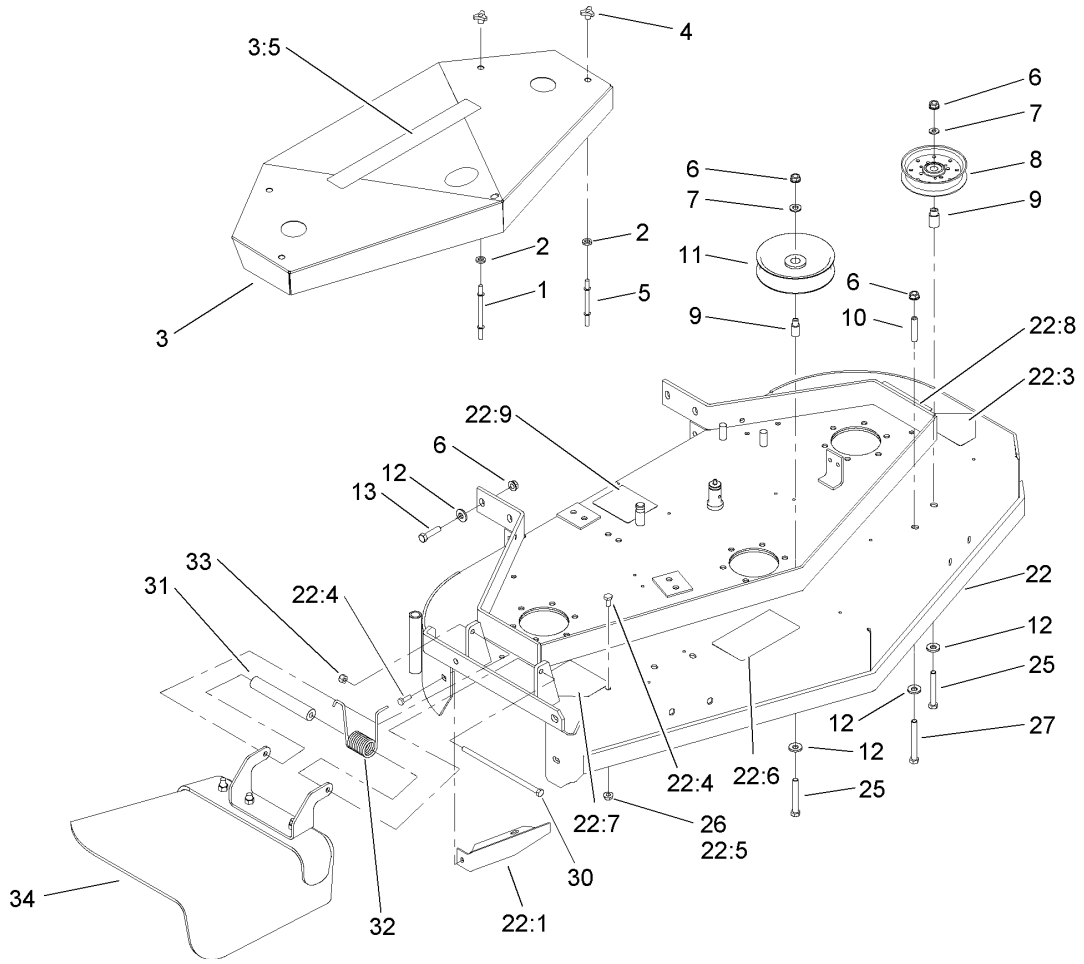

Deck Assembly


Ref	Part No.	Qty.	Description
1	1-303536	3	Stud-Shield, Belt (Long)
2	1-323417	5	Washer
3	1-404246	1	Shield-Belt
3:5	106-0712	1	Decal
4	106-4161	5	Knob-Handle
5	1-303537	2	Stud-Shield, Belt (Short)
6	3290-357	9	Nut-HHF
7	3256-24	2	Washer-Flat
8	1-403186	1	Idler-Pulley, Flat
9	1-403184	2	Bushing-Idler
10	1-403188	1	Spacer
11	1-613098	1	Pulley-Idler
12	98-5975	9	Washer-Belleville
13	323-6	6	Screw-HH
22	107-4215	1	Deck ASM
22:1	1-402107-01	1	Baffle-Dogleg
22:3	1-403005	1	Decal-Danger
22:4	322-2	4	Screw-HH
22:5	32128-20	4	Nut-HF
22:6	66-1340	1	Decal-Danger
22:7	93-1122	1	Decal-Danger
22:8	98-5130	1	Decal-Torque, Bolt
22:9	99-3943	1	Decal-Routing, Belt
25	323-13	2	Screw-HH

Ref	Part No.	Qty.	Description
26	32128-20	14	Nut-HF
27	323-20	1	Screw-HH
30	322-50	1	Screw-HH
31	105-4622	1	Spacer
32	104-8554	1	Spring-Torsion
33	3296-29	1	Nut-Lock, NI
34	107-4140	1	Deflector ASM

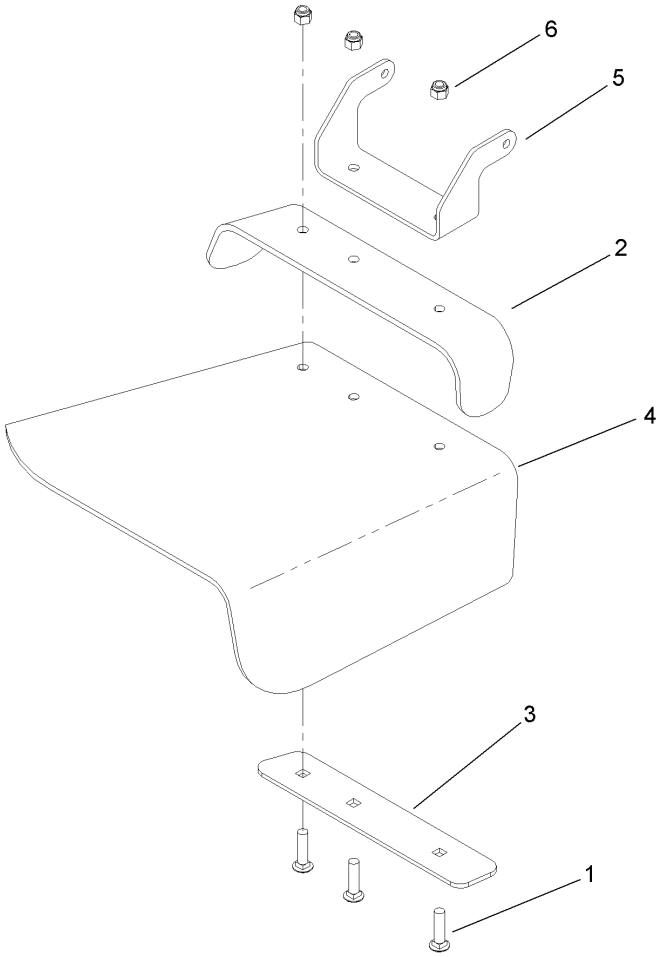

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

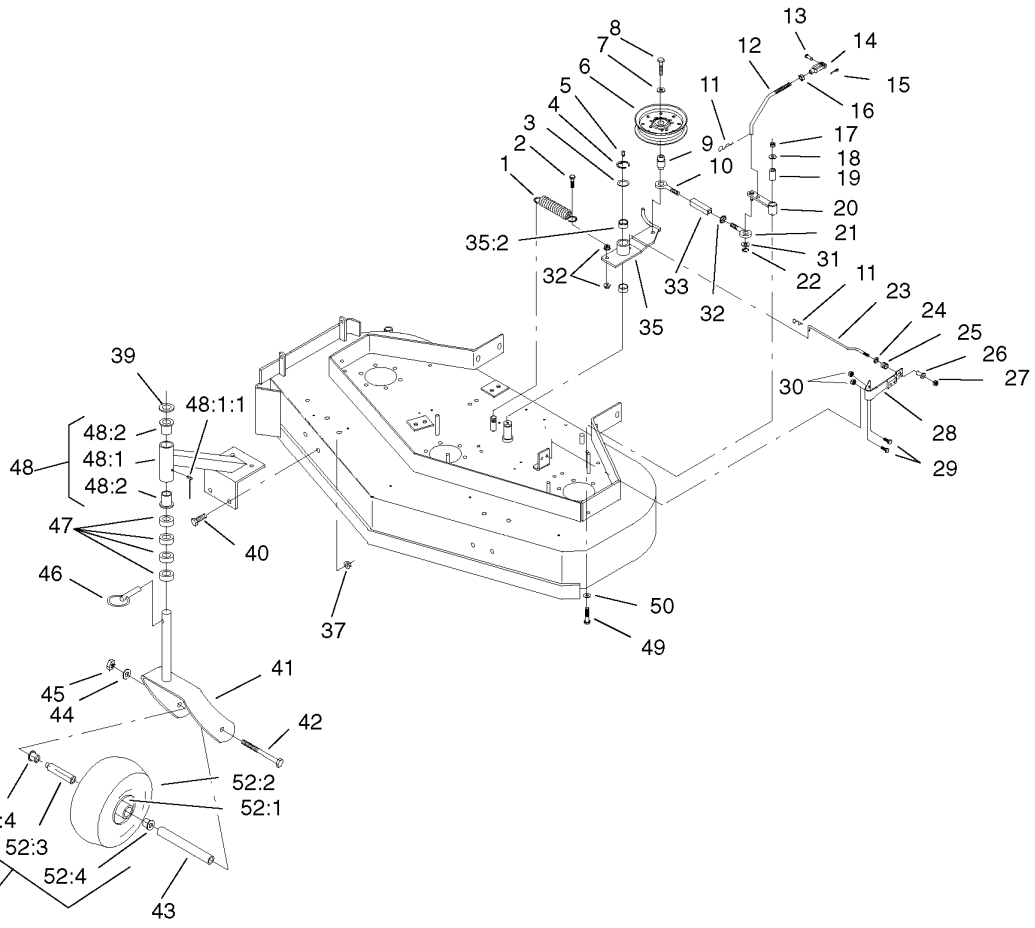

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
1	1-323071	1	Spring-Extension
2	322-6	2	Screw-HH
3	1-303352	1	Washer-Spindle
4	32151-103	1	Ring-Snap
5	302-19	1	Fitting-Grease
6	1-603843	1	Pulley-Idler
7	98-5975	3	Washer-Belleville
8	702809	1	Screw-Cap
9	1-303434	1	Bushing-Engagement
10	1-303348	1	Eyebolt-Thread, LH
11	1-806003	3	Pin-Hair
12	1-323174	1	Arm-Linkage, Assist
13	1-808280	1	Pin-Clevis
14	1-303105	1	Yoke-Adjustable
15	3272-5	1	Pin-Cotter
16	3219-2	1	Nut-Hex
17	3296-29	1	Nut-Lock, NI
18	3256-3	1	Washer-Flat
19	1-403179	1	Tube-Pivot
20	1-322235	1	Arm-Assist
21	1-303238	1	Eyebolt-Thread, RH
22	32120-35	1	E-Ring
23	1-323714	1	Rod-Brake
24	1-323748	1	Ring-Push On

Ref	Part No.	Qty.	Description
25	1-323747	1	Spring-Compression
26	1-323746	1	Spacer-Flanged
27	3296-56	1	Nut-Lock, NI
28	1-324372	1	Pad/spring ASM
29	321-4	2	Screw-HH
30	3296-42	2	Nut-Lock, NI
31	3256-23	1	Washer-Flat
32	32128-20	3	Nut-HF
33	1-303236	1	Body-Turnbuckle
35	103-3600	1	Idler Arm ASM
35:2	1-323729	2	Sleeve-Bearing
37	3290-357	8	Nut-HHF
39	1-513338	2	Washer-Flat
40	323-4	8	Screw-HH
41	1-322145-01	2	Fork
42	325-20	2	Screw-HH
43	1-513547	2	Spacer
44	3253-7	2	Washer-Lock
45	3217-9	2	Nut-Hex
46	1-809020	2	Pin
47	1-303314	8	Spacer-Caster
48	1-302203	2	Support ASM
❷48:1		1	Support-Caster
48:1:1	302-52	1	Fitting-Grease

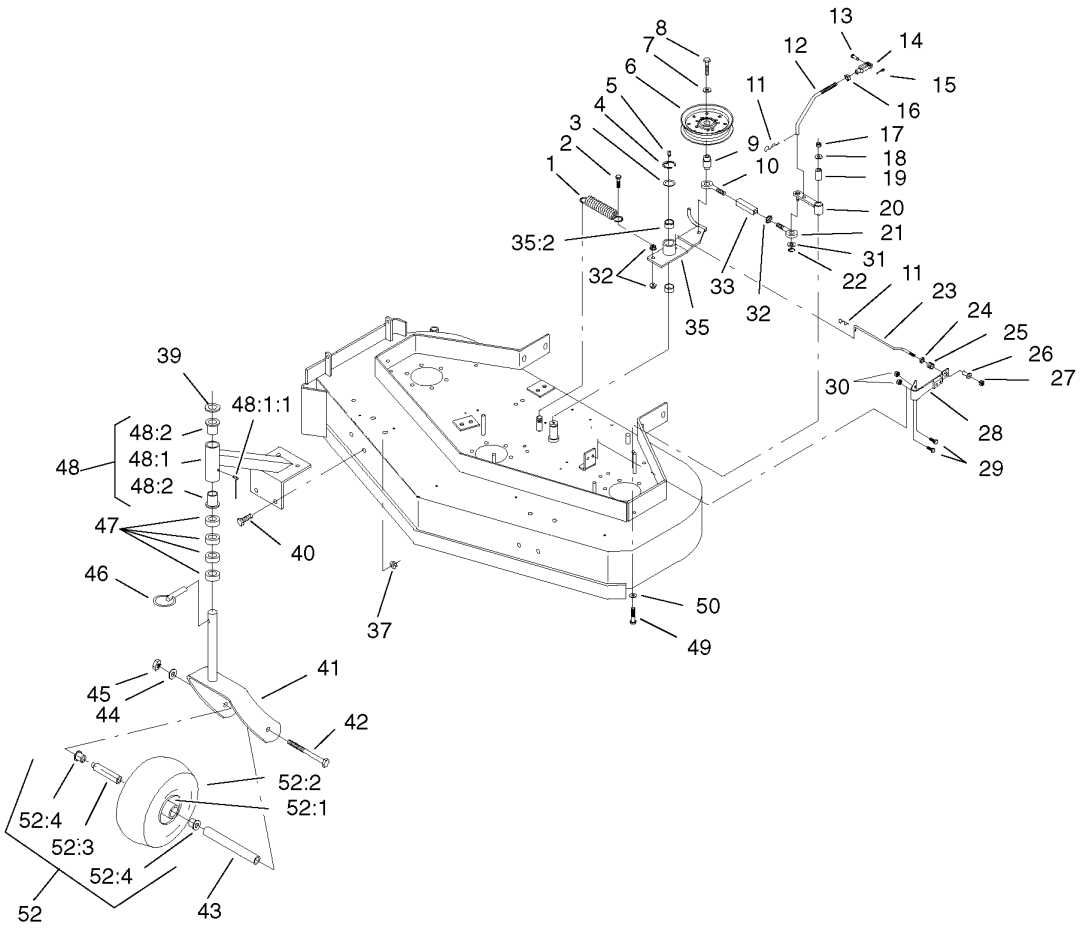


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description
48:2	1-303514	2	Bearing-Flanged
49	322-10	1	Screw-HH
50	1-303334	1	Washer-Spring
52	1-513648	2	Wheel And Tire ASM
❷52:1		1	Rim
52:2	1-513808	1	Tire
52:3	1-513809	1	Bearing
52:4	1-513810	2	Bushing

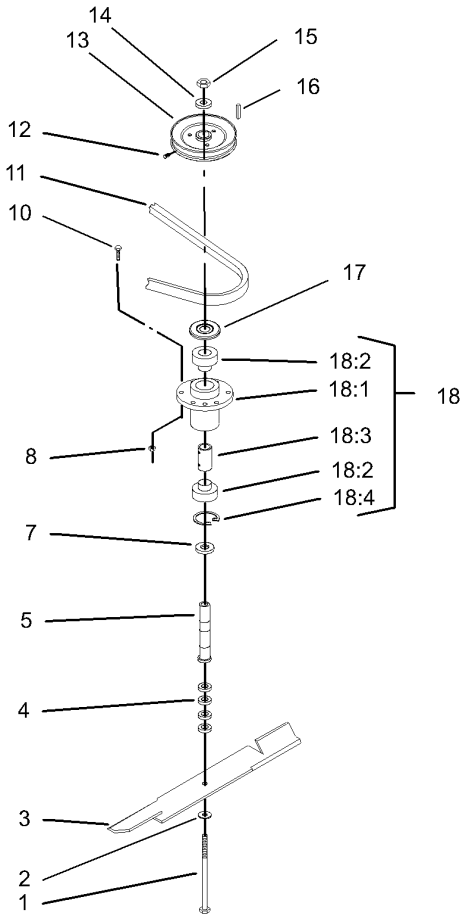


Spindle, Blade and Belt Assembly

Ref	Part No.	Qty.	Description
1	1-800861	3	Screw-Cap, HH
2	1-513208	3	Washer-Spring
3	103-2507	3	Blade-Lift, Low
3	103-2527	3	Blade-Notched
4	1-323539	12	Spacer-Drive, Blade
5	1-323529	3	Tube-Spindle, Short
7	103-2535	3	Spacer-Guard, Bottom
8	3296-39	18	Nut-Lock, NI
10	323-7	18	Screw-HH
11	1-403171	1	Belt-Drive, Blade
12	1-803310	3	Screw-Set
13	1-403183	3	Sheave
14	1-323339	3	Washer-Retainer, Sheave
15	3219-6	3	Nut-Hex
16	1-807267	3	Key
17	103-1330	3	Guard-Bearing, Top
18	107-4065	3	Cutter Housing ASM
18:1	103-7975	1	Housing-Spindle
18:2	103-2477	2	Bearing-Ball
18:3	103-2534	1	Spacer-Bearing
18:4	32120-8	1	Ring-Snap

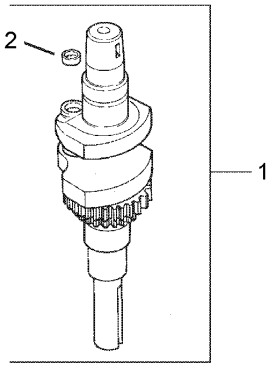

Crankshaft Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	12 014 30-S	1	Crankshaft (Includes 2)
❸2	12 139 01-S	1	Plug-Cup

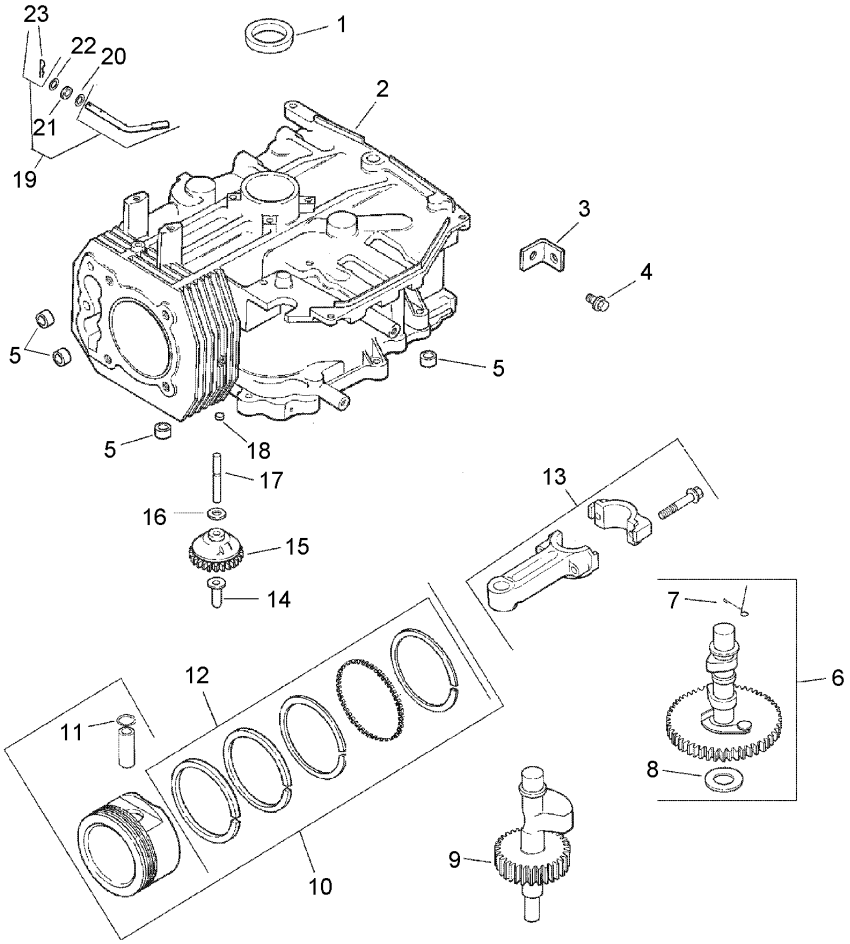

Crankcase Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	12 032 03-S	1	Seal-Oil, Front
❷❸2		1	Crankcase
❸3	12 445 02-S	1	Strap-Lifting
❸4	M-839025-S	1	Screw-HF (M8x1.25x25)
❸5	24 380 13-S	4	Pin-Locating
❸6	12 755 49-S	1	Camshaft Kit (Includes 7,8)
❸7	12 089 37-S	1	Spring-Actuating
❸8	12 422 08-S	1	Shim-Camshaft, Blue
❸8	12 422 09-S	1	Shim-Camshaft, Red
❸8	12 422 10-S	1	Shim-Camshaft, Yellow
❸8	12 422 11-S	1	Shim-Camshaft, Green
❸8	12 422 12-S	1	Shim-Camshaft, Gray
❸8	12 422 13-S	1	Shim-Camshaft, Black
❸8	12 422 07-S	1	Shim-Camshaft, White
❸9	12 144 27-S	1	Shaft-Balance
❸10	12 874 07-S	1	Piston W/ring Set (Std.) (Includes 11,12)
❸10	12 874 08-S	1	Piston W/ring Set (.25)
❸10	12 874 09-S	1	Piston W/ring Set (.50)
❸10	12 874 11-S	1	Piston W/ring Set (.08)
❸11	12 018 02-S	2	Retainer-Pin, Piston
❸12	12 108 07-S	1	Ring Set (Std. And .08)
❸12	12 108 08-S	1	Ring Set (.25)
❸12	12 108 09-S	1	Ring Set (.50)

Ref	Part No.	Qty.	Description
❸13	12 067 05-S	1	Rod-Connecting (Std.)
❸13	12 067 06-S	1	Rod-Connecting (.25)
❸14	12 380 01-S	1	Pin-Regulating, Governor
❸15	12 043 05-S	1	Gear-Governor
❸16	M-631005-S	1	Washer-Plain (6mm)
❸17	12 144 02-S	1	Shaft-Gear, Governor
❸18	52 139 09-S	1	Plug-Cup
❸19	12 755 64-S	1	Governor Cross Shaft Kit (Includes 23)
❸20	X-25-102-S	1	Washer-Plain, 1/4in
❸21	12 032 01-S	1	Seal-Cross Shaft, Governor
❸22	M-631015-S	1	Washer-Plain (6mm)
❸23	12 154 05-S	1	Clip-Pin, Hitch

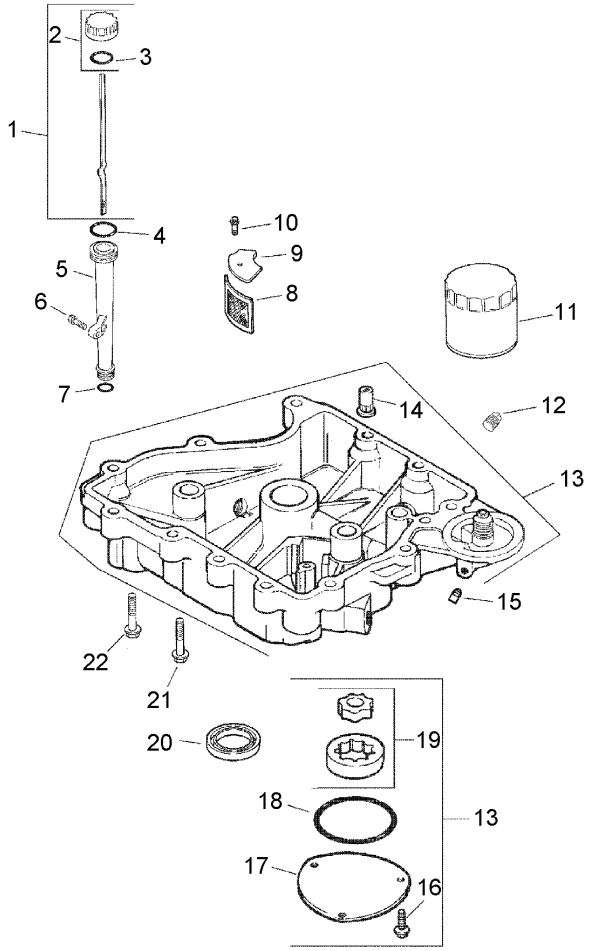

Oil Pan / Lubrication Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	12 038 01-S	1	Dipstick ASM (Includes 2,3)
❸2	25 755 13-S	1	Oil Fill Cap Kit (Includes 3)
❸3	25 153 02-S	1	O-Ring
❸4	12 153 02-S	1	O-Ring
❸5	12 123 04-S	1	Tube-Fill, Oil
❸6	M-545020-S	1	Screw-HF (M5x0.8x20)
❸7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)
❸8	25 162 07-S	1	Screen-Pickup, Oil
❸9	12 096 03-S	1	Cover-Screen, Oil Pickup
❸10	M-545016-S	1	Screw-HF (M5x0.8x16)
❸11	12 050 01-S	1	Filter-Oil
❸12	25 139 57-S	2	Plug-SQH (3/8in Nptf)
❸13	12 199 50-S	1	Oil Pan ASM (Includes 14,16-19)
❸14	25 462 09-S	1	Valve-Relief, Oil Pressure
❸15	25 139 52-S	1	Plug-Pipe (1/8in)
❸16	M-545016-S	3	Screw-HF (M5x0.8x16)
❸17	12 096 34-S	1	Cover-Pump, Oil
❸18	12 153 06-S	1	O-Ring (Oil Pump Cover)
❸19	12 393 01-S	1	Oil Pump ASM
❸20	12 032 03-S	1	Seal-Oil, Front
❸21	24 086 16-S	11	Screw-HF (M8x1.25x45)
❸22	24 086 17-S	1	Screw-HF (M8x1.25x45)

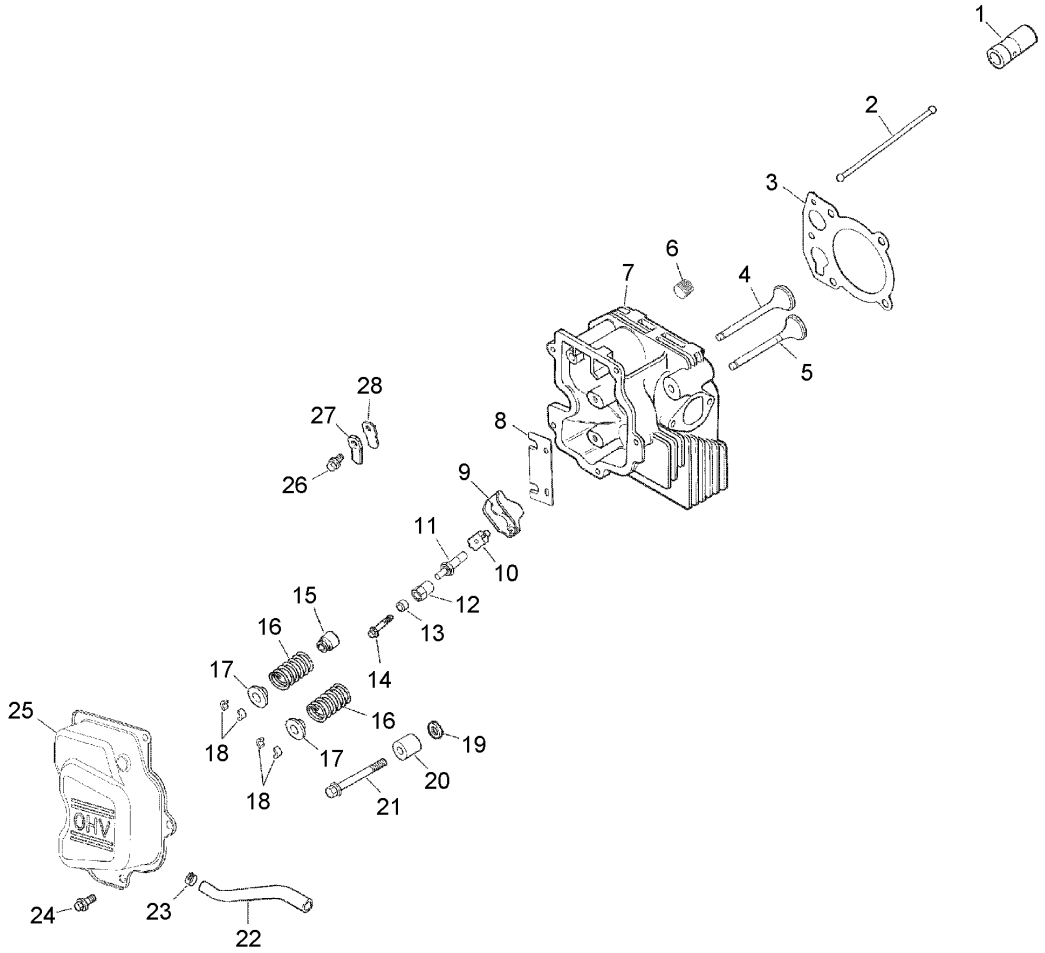

Head / Valve / Breather Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❸1	25 351 01-S	2	Lifter-Valve
❸2	12 411 04-S	2	Rod-Push
❸3	12 041 10-S	1	Gasket-Head, Cylinder
❸4	12 017 01-S	1	Valve-Intake (Std.)
❸5	12 016 01-S	1	Valve-Exhaust (Std.)
❸6	25 139 60-S	1	Plug-Pipe, 1/8in Allen Head
❸7	12 318 19-S	1	Head-Cylinder
❸8	12 146 22-S	2	Plate-Guide
❸9	25 186 01-S	2	Arm-Rocker
❸10	25 599 01-S	2	Pivot-Arm, Rocker
❸11	25 072 12-S	2	Stud-Rocker
❸12	25 100 29-S	2	Nut-Hex
❸13	25 086 112-S	2	Screw-Set
❸14	M-640034-S	2	Screw-HF (M6x1.0x34)
❸15	66 032 05-S	2	Seal-Stem, Valve
❸16	12 089 34-S	2	Spring-Valve
❸17	12 173 01-S	2	Cap-Spring, Valve
❸18	12 755 03-S	2	Retainer Kit
❸19	12 468 05-S	1	Washer-Plain (13/32in)
❸20	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port
❸21	20 086 02-S	5	Screw-HF (M10x1.5x81)
❸22	25 237 14-S	2	Clamp
❸23	12 326 18-S	1	Hose-Breather
❸24	M-645016-S	5	Screw-HF (M6x1.0x16)

Ref	Part No.	Qty.	Description
❸25	12 096 47-S	1	Cover-Valve
❸26	M-545010-S	1	Screw-HF (M5x0.8x10)
❸27	66 018 04-S	1	Retainer-Reed, Breather
❸28	12 402 02-S	1	Reed-Breather
❶❸	12 017 02-S	1	Valve-Intake (.25)
❶❸	12 016 02-S	1	Valve-Exhaust (.25)

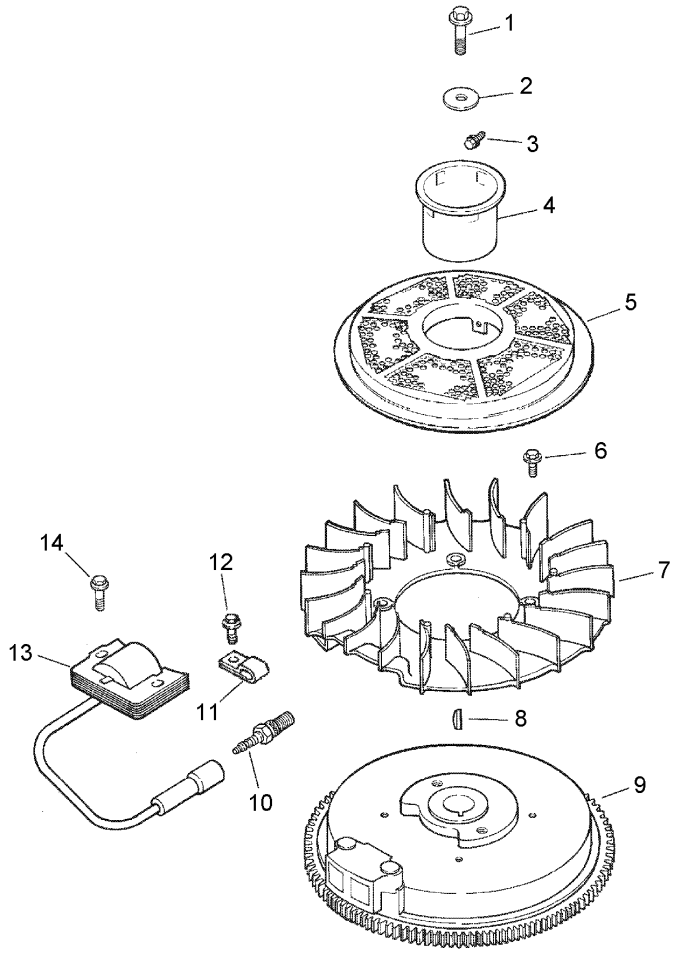


Ignition / Electrical Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 086 14-S	1	Screw-HF (M10x1.5x46)
❸2	12 468 03-S	1	Washer-Plain (3/8in)
❸3	M-545010-S	3	Screw-HF (M5x0.8x10)
❸4	12 109 07-S	1	Cup-Drive, Starter
❸5	12 162 09-S	1	Screen-Grass
❸6	25 086 47-S	4	Bolt-Shoulder (M6x1.0x16)
❸7	12 157 03-S	1	Fan
❸8	X-42-15-S	1	Key
❸9	12 025 56-S	1	Flywheel
❸10	12 132 02-S	1	Spark Plug
❸11	X-728-1-S	1	Clip
❸12	M-545010-S	3	Screw-HF (M5x0.8x10)
❸13	12 584 05-S	1	Module-Ignition
❸14	M-545020-S	2	Screw-HF (M5x0.8x20)
❶❸	25 086 110-S	2	Screw-Tapping, Slotted
❶❸	12 518 07-S	1	Lead-White (18in, 18 Gauge, Fully Insulated Female Disconnect Terminals)
❶❸	12 454 03-S	1	Tie-Wire

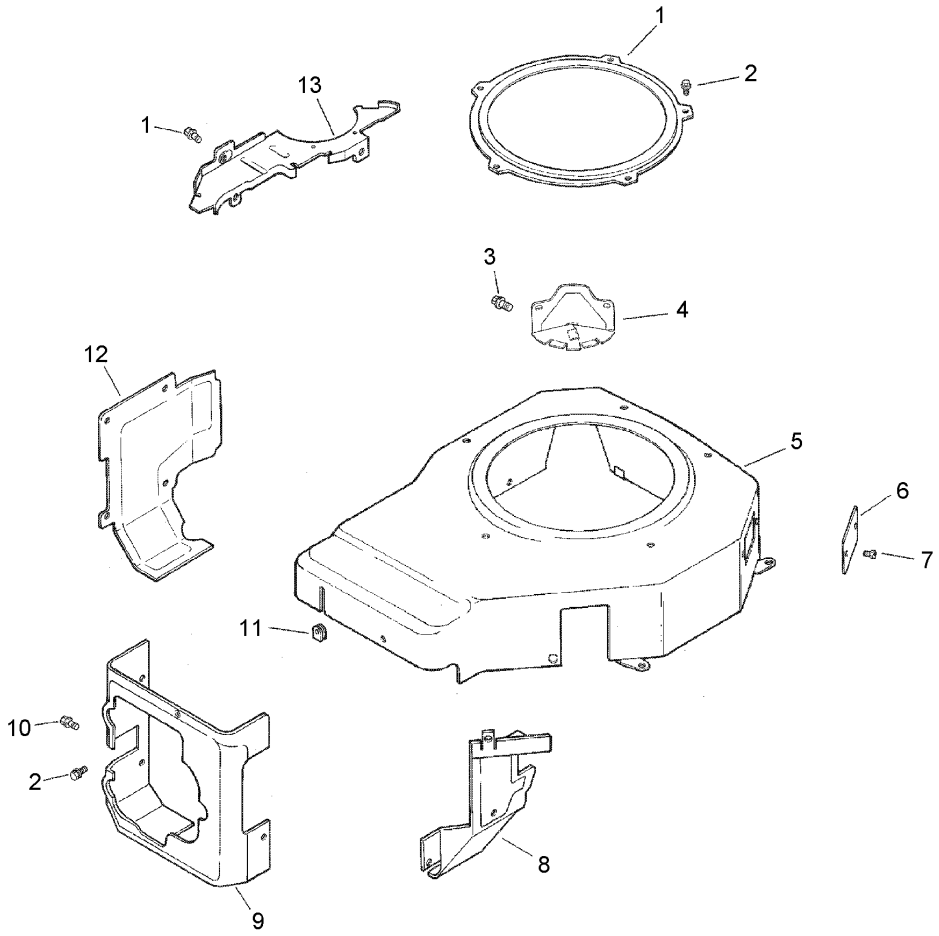


Blower Housing and Baffle Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 314 10-S	1	Guard-Screen, Grass
❸2	M-545010-S	8	Screw-HF (M5x0.8x10)
❸3	M-550010-S	6	Screw-HF (M5x0.8x10)
❸4	12 096 29-S	1	Cover-Starter
❸5	12 027 53-S	1	Housing-Blower
❸6	12 096 27-S	1	Cover (Rectifier-regulator)
❸7	M-639016-S	2	Screw-HF (M6x1.0x16)
❸8	12 063 10-S	1	Baffle-Side, Intake
❸9	12 063 08-S	1	Baffle-Head, Cylinder
❸10	M-561016-S	1	Screw-HF (M5x0.8x16)
❸11	12 313 03-S	1	Grommet-Spark Plug
❸12	12 063 19-S	1	Baffle
❸13	12 146 07-S	1	Plate-Housing, Blower
❶❸	12 113 124-S	1	Decal-15hp
❶❸	25 113 39-S	1	Decal-Lamination, Clear

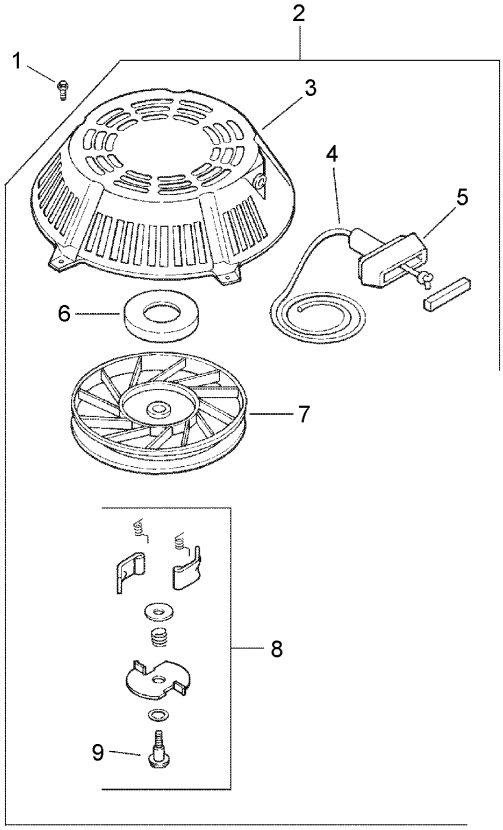


Starting System Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	M-550010-S	5	Screw-HF (M5x0.8x10)
❸2	12 165 01-S	1	Retractable Starter ASM (Includes 3-9)
❸3	12 081 01-S	1	Housing-Starter
❸4	12 160 01-S	1	Rope-Starter
❸5	25 166 01-S	1	Handle-Start, Recoil
❸6	12 089 06-S	1	Spring And Keeper
❸7	12 093 01-S	1	Pulley
❸8	12 757 06-S	1	Dog Repair Kit (Includes 9)
❸9	41 086 09-S	1	Screw-Pozidriv
❶❸	12 113 07-S	1	Decal-Starting

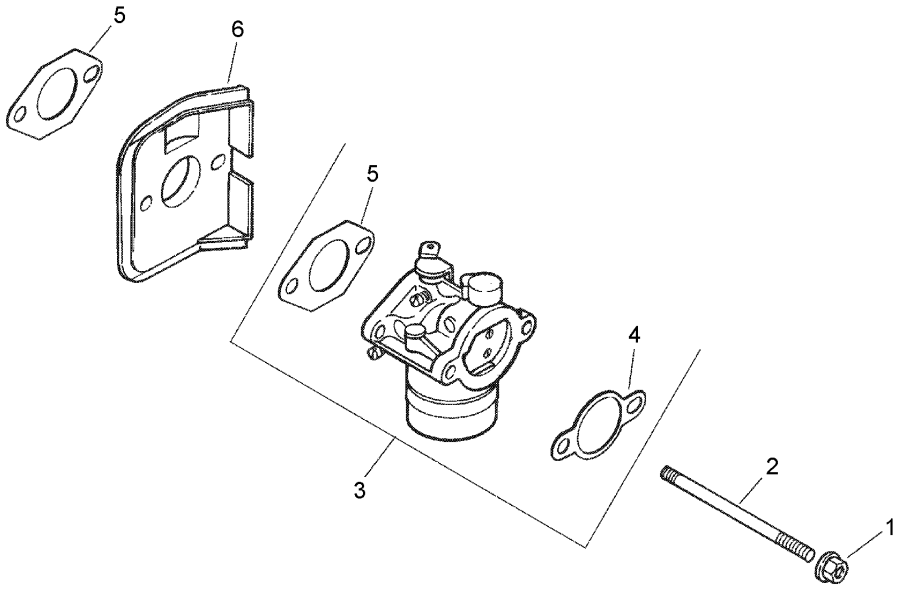


Fuel System Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	M-641060-S	2	Nut-HF
❸2	M-629116-S	2	Stud (M6x1.0x116)
❸3	12 853 140-S	1	Carburetor Kit (Includes 4, 5)
❸4	12 041 02-S	1	Gasket-Base, Air Cleaner
❸5	12 041 01-S	2	Gasket-Carburetor
❸6	12 265 04-S	1	Deflector-Heat
❶❸	12 757 02-S	1	Float Kit
❶❸	12 757 03-S	1	Carburetor Repair Kit
❶❸	12 757 08-S	1	Choke Repair Kit
❶❸	12 757 36-S	1	Throttle Shaft Bearing Kit
❶❸	12 757 37-S	1	Bowl Replacement Kit
❶❸	12 755 92-S	1	High Altitude Kit

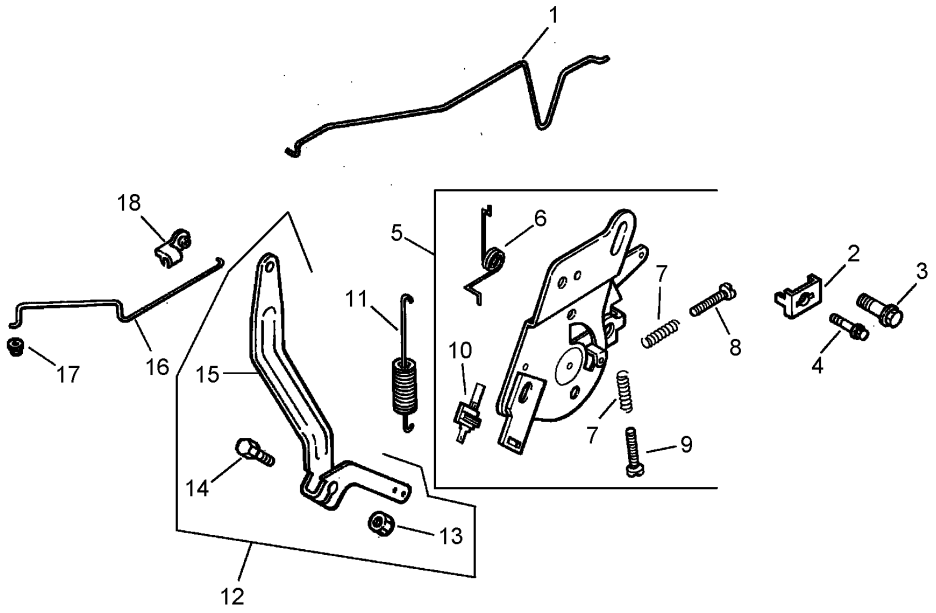


Engine Control Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 079 07-S	1	Linkage-Choke
❸2	12 237 01-S	1	Clamp-Cable
❸3	M-664020-S	2	Screw-Socket, Lobed (M6x1.0x20)
❸4	M-545016-S	2	Screw-HF (M5x0.8x16)
❸5	12 536 06-S	1	Speed Control ASM (Includes 6-10)
❸6	12 089 23-S	1	Spring-Return, Choke
❸7	12 089 11-S	2	Spring-Control, Speed
❸8	12 086 39-S	1	Screw-Pan Head (W/loctite)
❸9	M-443020-S	1	Screw-Pan Head (M4x0.7x20)
❸10	25 452 14-S	1	Terminal-Switch, Kill
❸11	12 089 19-S	1	Spring-Governor
❸12	12 755 83-S	1	Governor Lever Kit (Includes 13-15)
❸13	12 100 07-S	1	Nut-HF (M6x1.0)
❸14	52 211 04-S	1	Screw-HF (M6x1.0x25)
❸15	12 090 28-S	1	Lever-Governor
❸16	12 079 01-S	1	Linkage-Throttle
❸17	25 158 08-S	1	Bushing-Retaining, Linkage
❸18	25 158 11-S	1	Bushing-Retaining, Linkage

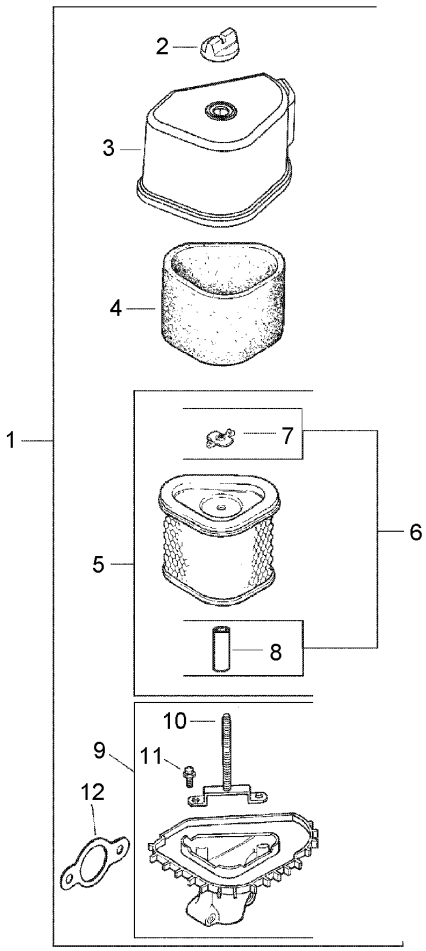

Air Intake / Filtration Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 743 04-S	1	Air Cleaner Kit (Includes 2-12)
❸2	20 341 01-S	1	Knob-Cover
❸3	12 096 44-S	1	Cover-Cleaner, Air
❸4	12 083 12-S	1	Precleaner
❸5	12 083 10-S	1	Element-Cleaner, Air (Includes 6-8)
❸6	12 743 12-S	1	Seal Kit (Includes 7, 8)
❸7	12 100 08-S	1	Nut-Wing
❸8	12 032 11-S	1	Seal
❸9	12 094 14-S	1	Base-Cleaner, Air (Includes 10, 11)
❸10	12 072 04-S	1	Stud-Plate, Mounting
❸11	12 086 01-S	2	Screw
❸12	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❸	12 113 04-S	1	Decal-Cleaner, Air

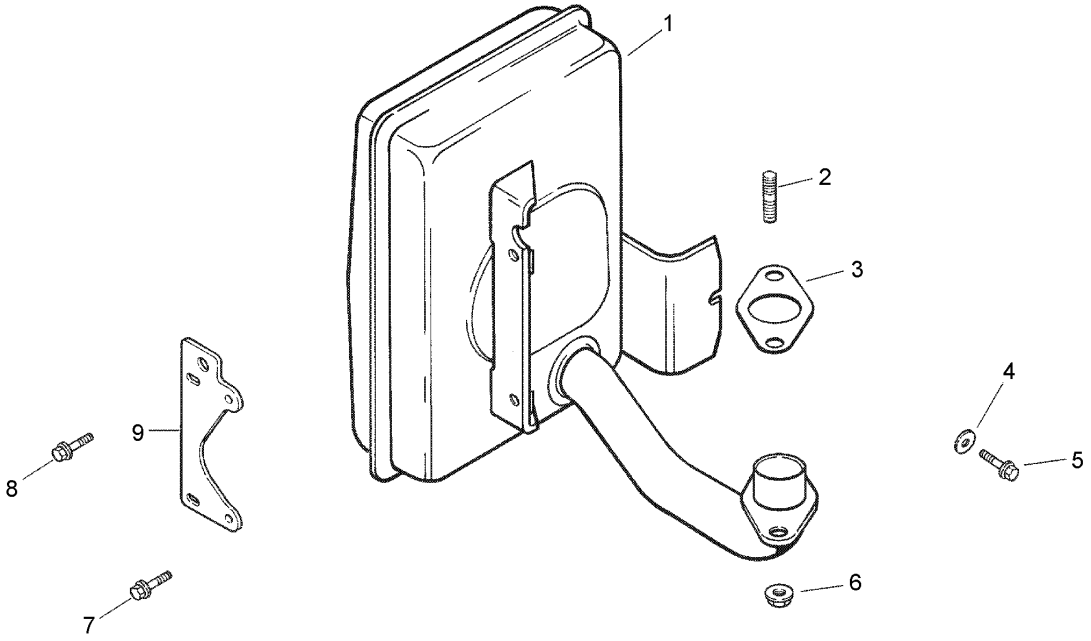

Exhaust Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description
❸1	12 068 44-S	1	Muffler
❸2	25 072 04-S	2	Stud (M8x1.25x33)
❸3	12 041 03-S	1	Gasket-Manifold, Exhaust
❸4	X-25-78-S	1	Washer-Plain (1/4in)
❸5	M-545016-S	1	Screw-HF (M5x0.8x16)
❸6	M-841080-S	2	Nut-HF (M8x1.25)
❸7	M-645016-S	2	Screw-HF (M6x1.0x16)
❸8	M-645025-S	2	Screw-HF (M6x1.0x25)
❸9	12 126 71-S	1	Bracket-Muffler
❶❸	12 112 20-S	2	Spacer
❶❸	12 522 18	1	Block-Short
❶❸	12 755 93-S	1	Gasket Set

Attachments and Accessories

For 30528 - Mid-Size ProLine Pistol Grip Hydro, 15 HP with 48in Side Discharge Mower

Product Name	Model/Part
Atomic Blade and Decal Assembly	104-8595
Weight Kit	107-4100
Sulky	30109
48in Recycler Kit	30143
Soft Bag (3 Bushel)	30198

NOTES

NOTES


TORO®