



22in Recycler[®] Lawnmower

Model No. 20012 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Engine Assembly Tecumseh Lv195ea-362003b (continued)	 12
Rear Axle and High Wheel Assembly	 4	Carburetor Assembly No. 640303 Tecumseh Lv195ea-362003B	 14
Front Axle and Transmission Assembly	 5	Recoil Starter Assembly No. 590739 Tecumseh No. Lv195ea-362003b	 15
Transmission Assembly No. 106-3955	 6	Recoil Starter Assembly No. 590702 (Optional) Tecumseh Lv195ea-362003b	 16
Engine and Blade Assembly	 7		
HP-2 Bail Handle Assembly	 8		
Rear Bag Assembly	 9		
Engine Assembly Tecumseh Lv195ea-362003b	 10		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes


- | | |
|--|-------------------------------------|
| ❶ Not serviced separately | ❷ Included in Repair Kit No. 632809 |
| ❸ Obtain parts from your local Tecumseh dealer | |

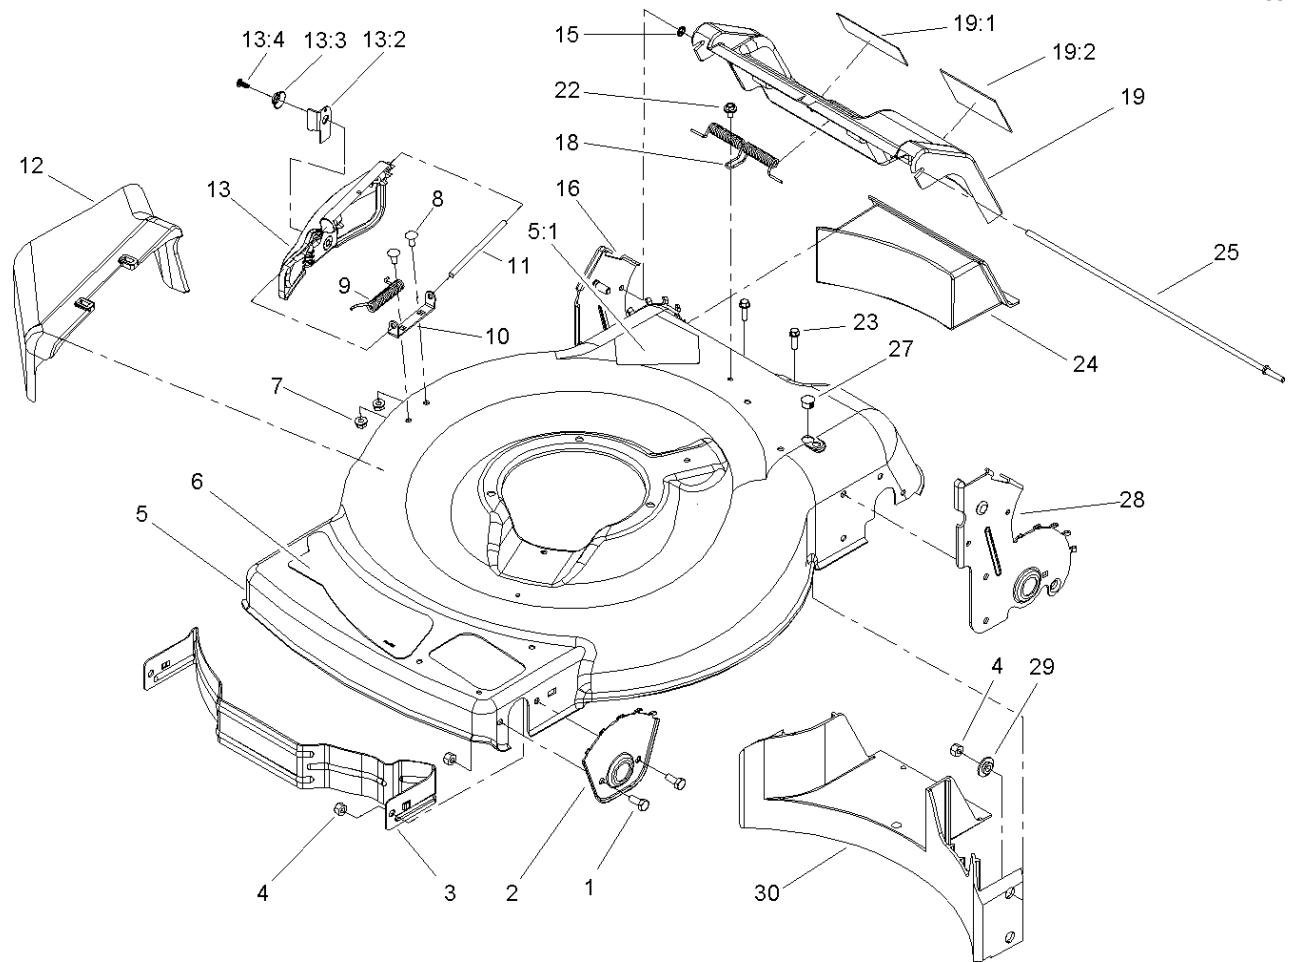

Housing Assembly


Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-Hoc, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	104-7916	1	Housing
5:1	94-8072	1	Decal-Danger, Cut Finger
6	105-1296	1	Decal-Deck
7	32128-32	2	Nut-HHF
8	3229-11	2	Screw-CARR
9	99-5293	1	Spring-Torsion
10	99-5292	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Discharge, Side
13	106-8376	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Nut-Push
16	107-0791	1	Plate-Hoc, RH
18	105-3032	1	Spring-Door, Rear
19	105-1324	1	Door
19:1	104-7909	1	Decal-Warning
19:2	104-7908	1	Decal-Warning
22	46-6810	1	Screw And Washer ASM

Ref	Part No.	Qty.	Description
23	46-8091	2	Screw-HWH
24	105-1842	1	Plug-Discharge, Rear
25	105-1827	1	Rod-Pivot, Rear Door
27	104-9369	1	Plug-Dome
28	107-0782	1	Plate-Hoc, LH
29	105-3006	4	Washer-Stepped
30	105-3047	1	Baffle-Rear

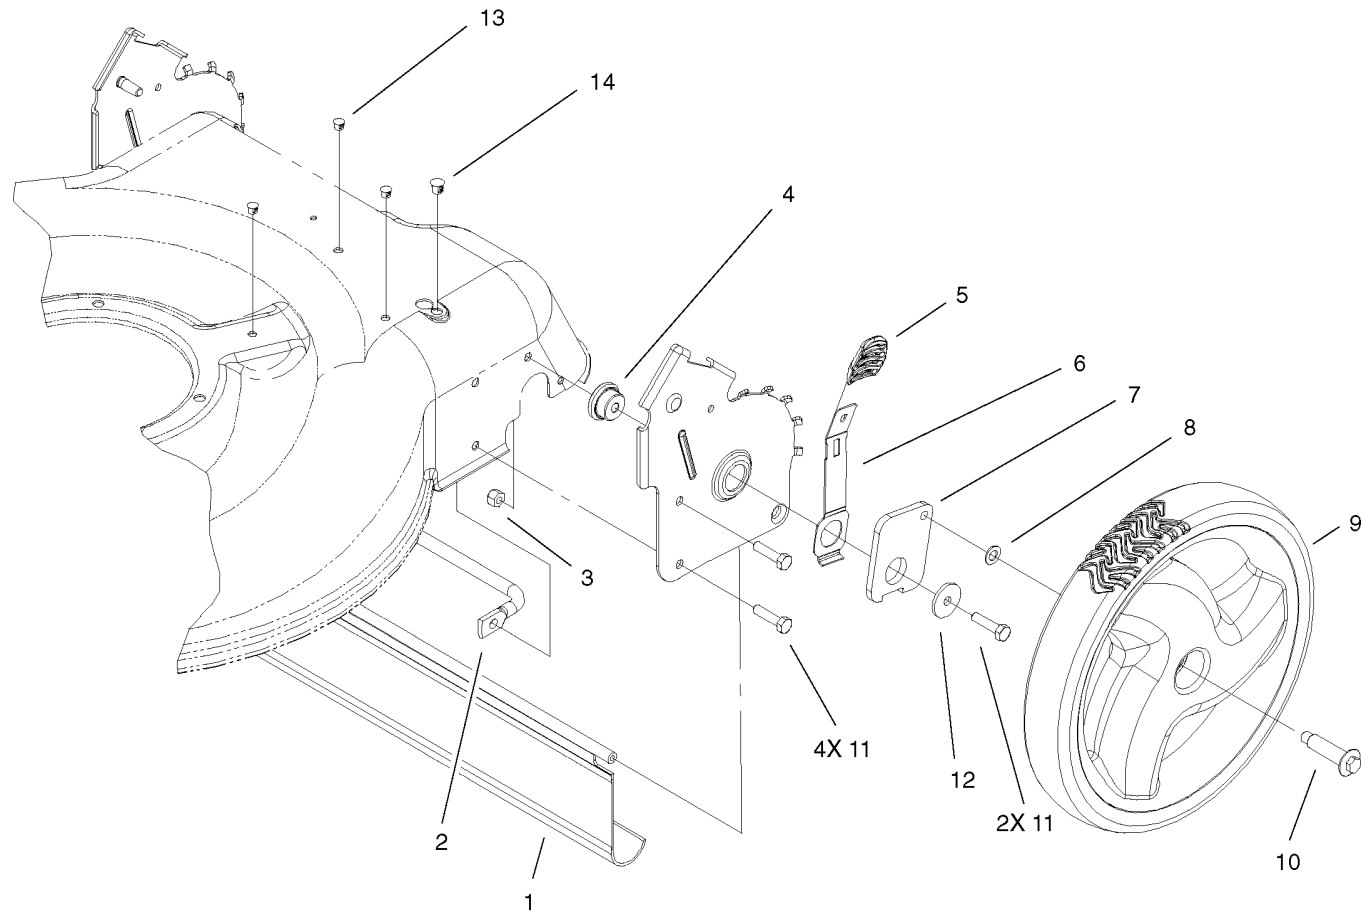

Rear Axle and High Wheel Assembly


Ref	Part No.	Qty.	Description				
1	105-1843	1	Shield-Trailing				
2	105-1811	1	Brace-HOC Plate				
3	3296-29	2	Nut-Lock, NI				
4	105-1818	2	Bushing-Mount, HOC				
5	105-3042	2	Knob-Lever, HOC				
6	105-1809	2	Arm-Spring				
7	105-1820	2	Arm-Pivot, Rear				
8	40-1940	2	Washer				
9	105-1816	2	Wheel ASM				
10	614650	2	Bolt-Shoulder				
11	322-6	6	Screw-HH				
12	105-3048	2	Washer-Flat				
13	104-9373	3	Plug-Dome				
14	104-9368	1	Plug-Dome				

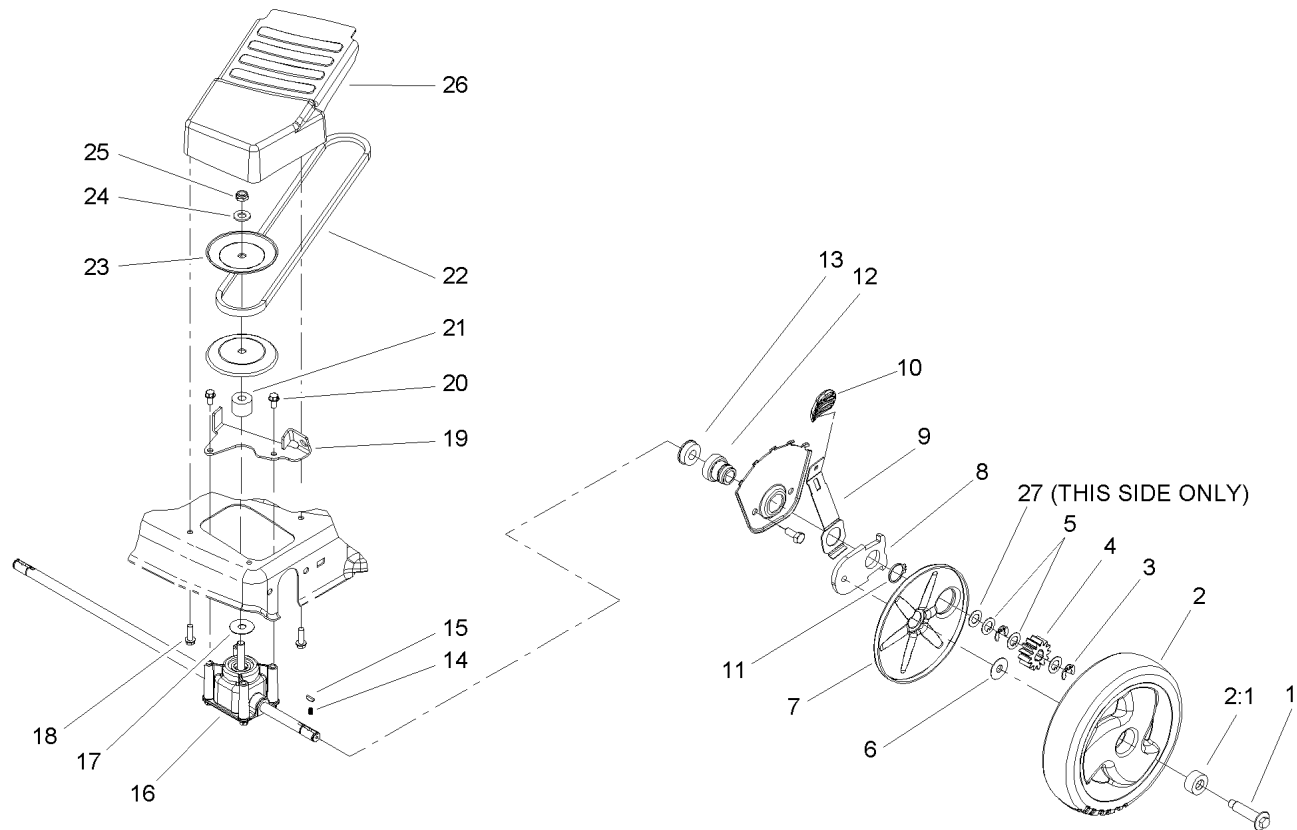

Front Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-1815	2	Wheel Gear ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	104-8670	2	Gear-Pinion, 13t
5	105-6840	6	Washer-Thrust
6	614426	2	Washer-Stepped
7	105-1838	2	Cover-Wheel
8	105-1807	2	Arm-Pivot, Front
9	105-1809	2	Arm-Spring
10	105-3042	2	Knob-Lever, HOC
11	32151-36	2	Ring-Retaining
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	106-3955	1	Fwd Transmission ASM
17	105-6814	1	Washer-Shield
18	46-8091	2	Screw-HWH
19	105-1833-03	1	Bracket-Pivot, Fwd
20	32144-4	2	Screw-HWH
21	92-5791	1	Spacer
22	91-2258	1	V-Belt
23	104-8691	2	Pulley-Half, Front

Ref	Part No.	Qty.	Description
24	3256-24	1	Washer-Flat
25	3296-5	1	Nut-Lock
26	105-1839	1	Cover-Belt, Front
27	36-4780	1	Washer

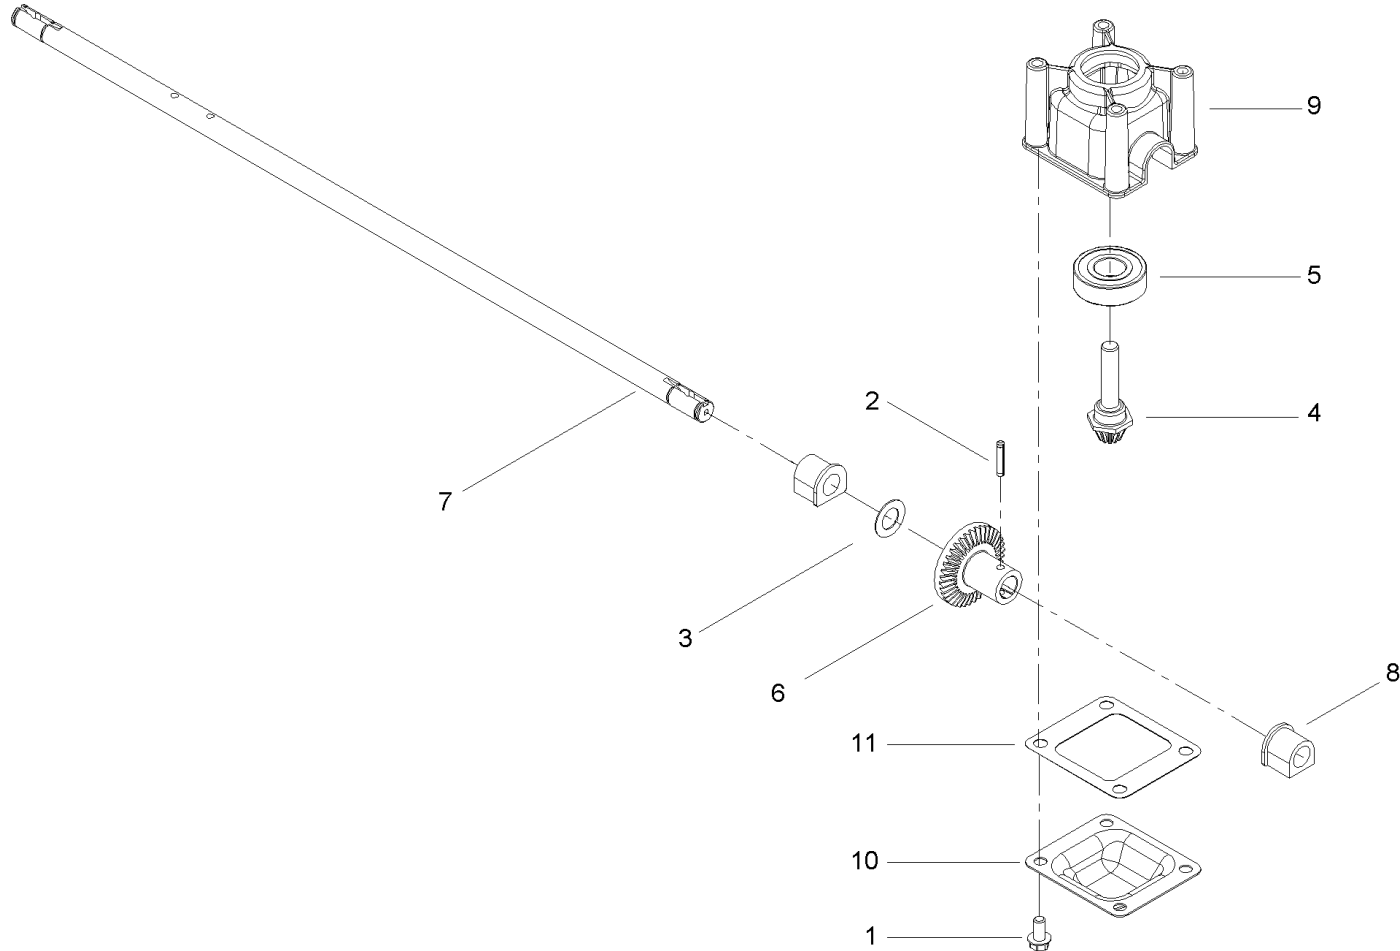


Transmission Assembly No. 106-3955

Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	3285-19	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37t				
7	106-3957	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

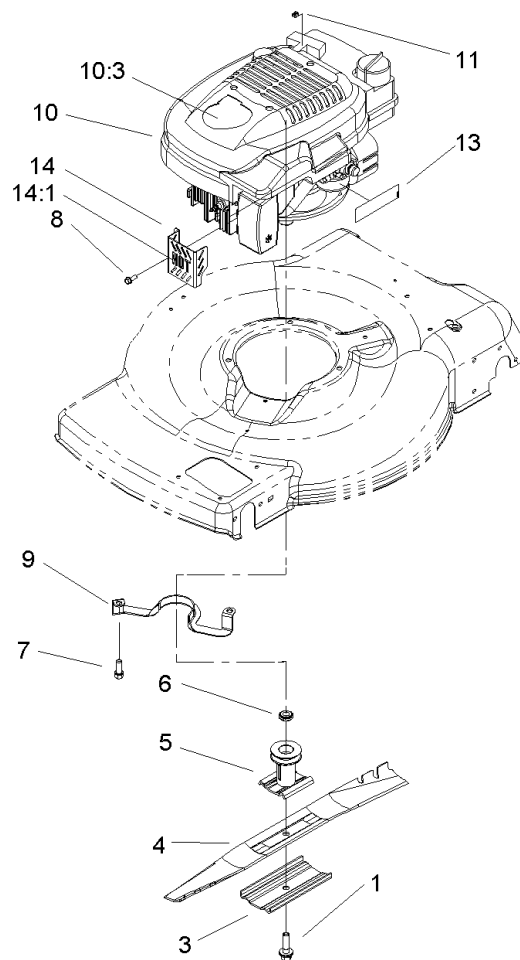

Engine and Blade Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
3	105-3029-03	1	Support-Blade				
4	104-8697-03	1	Blade-22 Inch				
5	106-3987	1	Blade Driver ASM				
6	106-3999	1	Spacer-Driver				
7	95-1726	3	Screw-Taptite				
8	32144-85	1	Screw-HWH				
9	105-3031-03	1	Guide-Belt				
10		1	Engine-Tecumseh, Lev195ea-362003b				
10:3	108-4825	1	Decal-Tec Shroud				
11	92-1701	1	Stop-Rope				
13	105-6832	1	Decal-Primer				
14	106-8387	1	Muffler Guard Assembly				
14:1	106-5517	1	Decal-Surface, Hot				

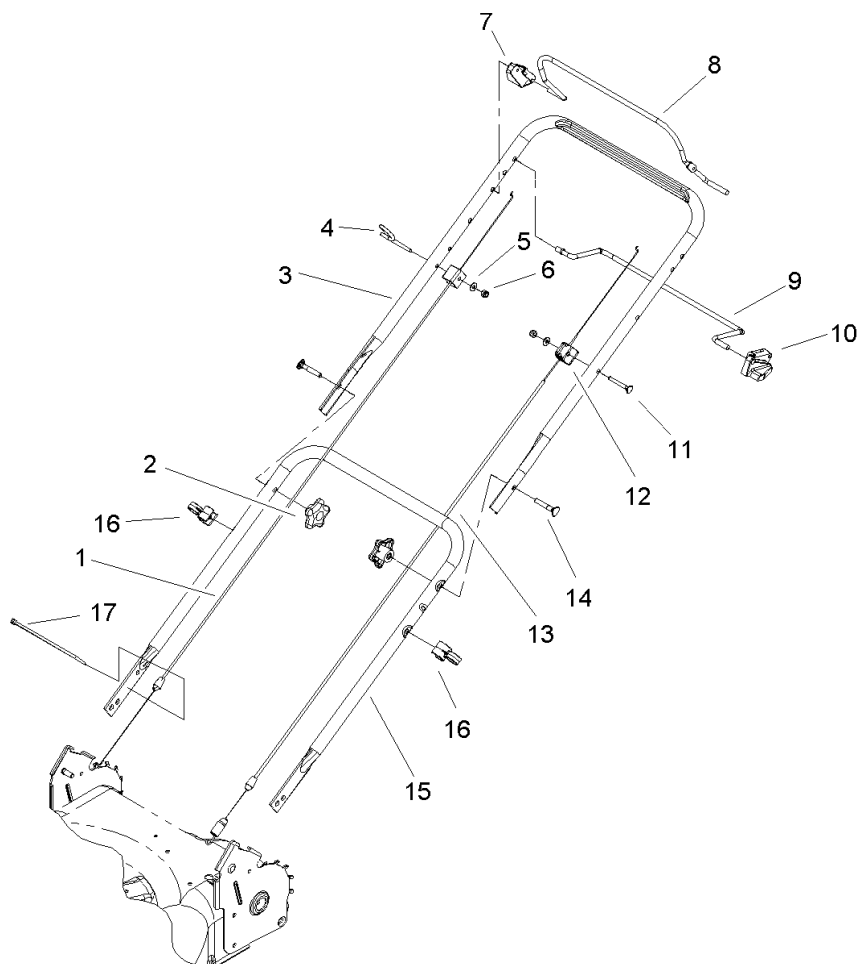


HP-2 Bail Handle Assembly

Ref	Part No.	Qty.	Description				
1	104-8677	1	Cable-Brake				
2	106-4161	2	Knob-Handle				
3	104-8680-05	1	Handle-Upper				
4	106-8330	1	Guide-Rope				
5	3256-1	2	Washer-Flat				
6	3296-73	2	Nut-Lock, NI				
7	107-0757	1	Stop-Pivot				
8	105-6800-03	1	Bail-Brake				
9	105-1837-03	1	Bail-Control				
10	104-8682	1	Stop-Pivot				
11	95-4453	1	Screw				
12	92-7729	1	Anchor-Cable, Upper				
13	105-1845	1	Cable-Traction				
14	92-2260	2	Screw-Handle				
15	107-0784-05	1	Handle-Lower				
16	106-6805	2	Guide-Cable				
17	614249	1	Strap-Tie				

9

Engine Assembly

Tecumseh Lv195ea-362003b

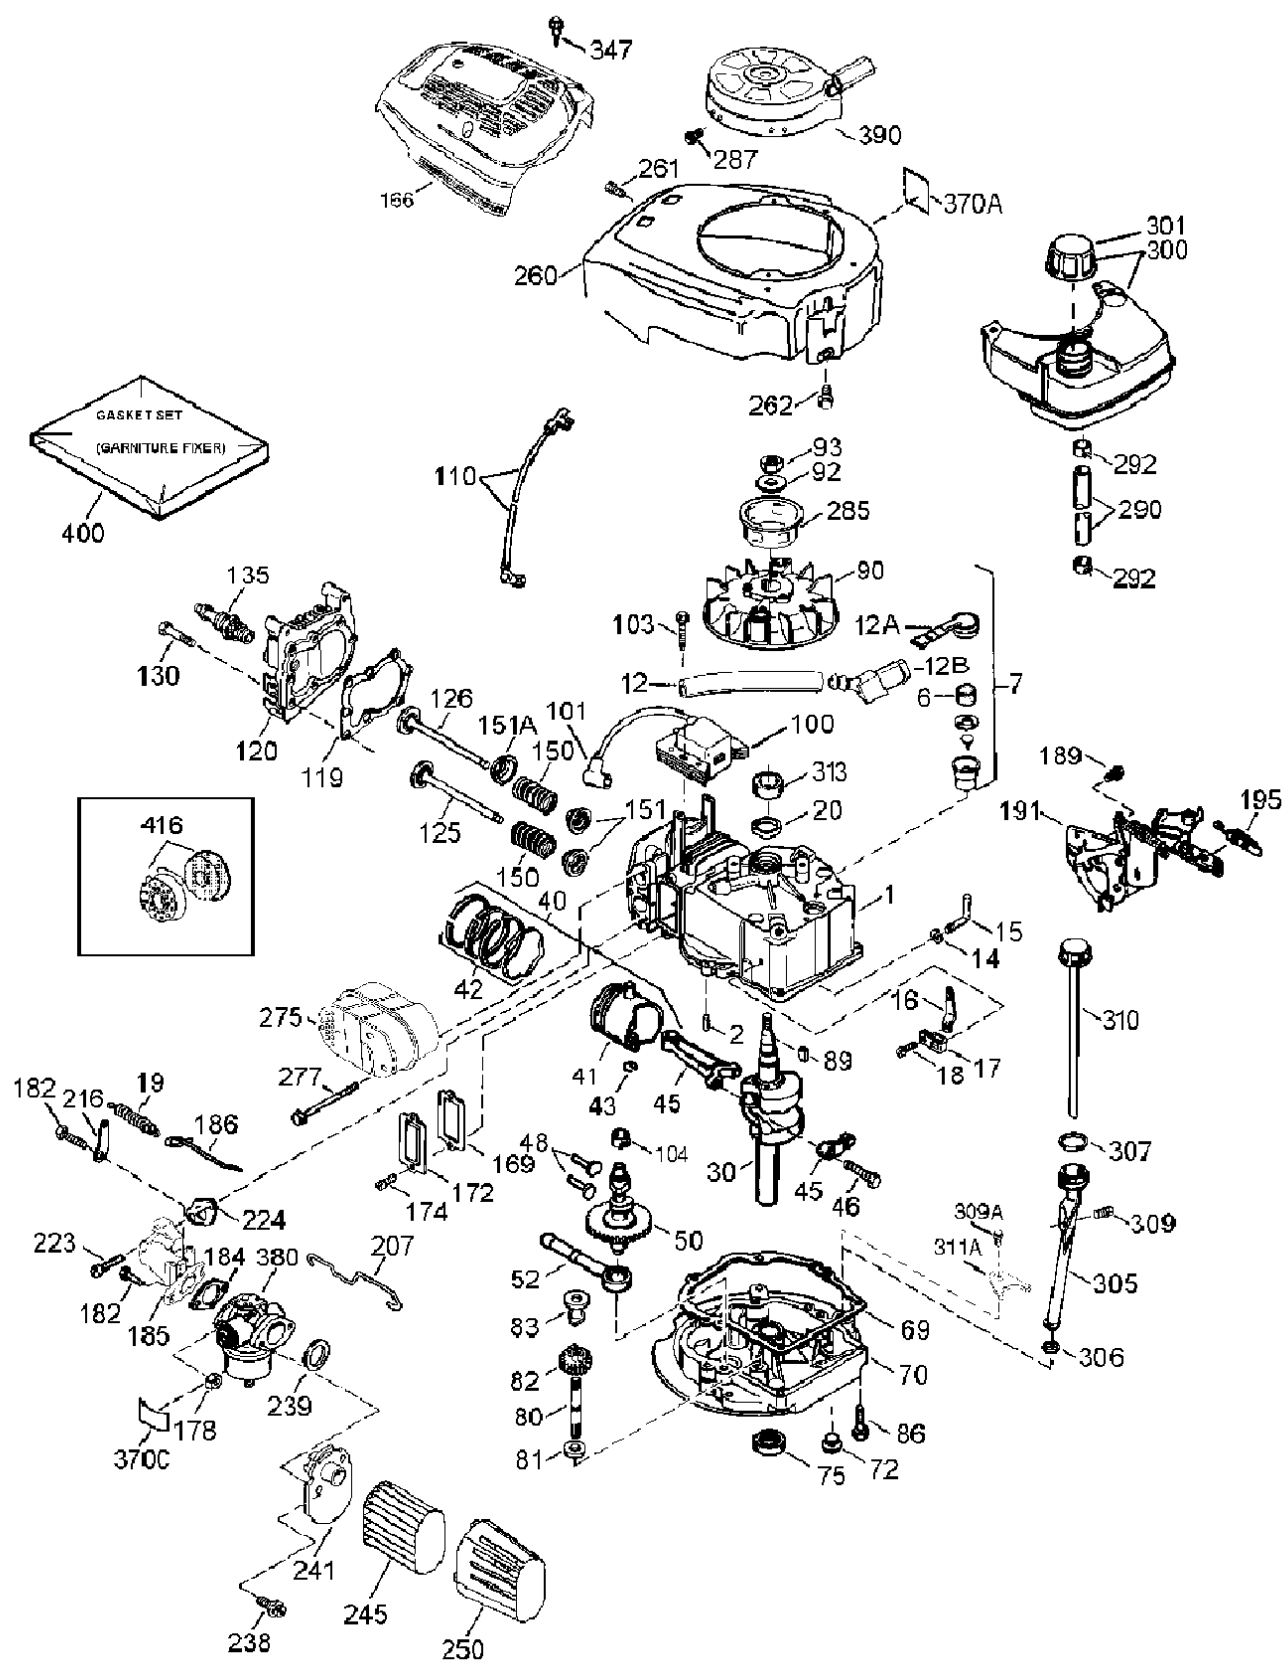


Engine Assembly

Tecumseh Lv195ea-362003b

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③1	37465	1	Cylinder (Incl. Ref. #2, 20 And 150)	③125	37288	1	Valve-Exhaust (Std.) (Incl. Ref. #151)
③2	26727	2	Pin-Dowel	③126	37289	1	Valve-Intake (Std.) (Incl. Ref. #151 And 151a)
③6	33734	1	Element-Breather	③130	6021A	8	Screw, 5/16-18 X 1-7/16in
③7	36557	1	Breather ASM (Incl. Ref. #6 And 12a)	③135	35395	1	Resistor Spark Plug (Rj19Im)
③12	36775	1	Tube-Breather	③150	31672	2	Spring-Valve
③12A	36558	1	Breather Cover And Tube (Incl. Ref. #12b)	③151	31673	2	Cap-Valve Spring
③12B	36694	1	Elbow-Breather Tube	③151A	40017	1	Seal-Intake Valve
③14	28277	1	Washer	③166	37694	1	Shroud-Engine
③15	30589	1	Governor Rod (Incl. Ref. #14)	③*169	36783	1	Gasket-Valve Cover
③16	34839A	1	Lever-Governor	③172	36784	1	Cover-Valve
③17	31335	1	Lever Clamp-Governor	③174	30200	2	Screw, 10-24 X 9/16in
③18	651018	1	Screw, T-15, 8-32 X 19/64in	③178	29752	2	Nut And Lock Washer, 1/4-28
③19	36281	1	Spring-Extension	③182	6201	2	Screw, 1/4-28 X 7/8in
③20	32600	1	Seal-Oil	③*184	26756	1	Carburetor To Intake Pipe Gasket
③30	37692	1	Crankshaft	③185	37466	1	Pipe-Intake
③40	40027	1	Piston, Pin And Ring ASM (Std.)	③186	32653	1	Link-Governor
③41	40042	1	Piston And Pin ASM (Std.) (Incl. Ref. # 43)	③189	650839	2	Screw, 1/4-20 X 3/8in
③42	40006	1	Ring Set (Std.)	③191	36559A	1	Bracket-S.e. Brake (Incl. Ref. #195)
③43	20381	2	Ring-Piston Pin Retaining	③195	610973	1	Terminal
③45	36777	1	Connecting Rod ASM (Incl. Ref. #46)	③207	34336A	1	Link-Throttle
③46	32610A	2	Bolt-Connecting Rod	③216	33086	1	Lever-Rpm Adjusting
③48	27241	2	Valve-Lifter	③223	650451	2	Screw, 1/4-20 X 1in
③50	37460	1	Camshaft (Exhaust Mcr) (Incl. Ref. #104)	③*224	36786	1	Gasket-Intake Pipe
③52	29914	1	Oil Pump ASM	③238	650932	2	Screw, 10-32 X 49/64in
③*69	37609	1	Gasket-Mounting Flange	③*239	34338	1	Gasket-Air Cleaner
③70	37608	1	Flange-Mounting (Incl. Ref. #72-83,306,309a & 311a)	③241	36919	1	Collar-Air Cleaner
③72	37614	1	Plug-Oil Drain	③245	36905	1	Filter-Air Cleaner
③75	27897	1	Seal-Oil	③250	37122	1	Cover-Air Cleaner
③80	30574A	1	Shaft-Governor	③260	37696A	1	Housing-Blower
③81	30590A	1	Washer	③261	30200	2	Screw, 10-24 X 9/16in
③82	30591	1	Governor Gear ASM (Incl. Ref. #81)	③262	650831	2	Screw, 1/4-20 X 1/2in
③83	30588A	1	Spool-Governor	③275	37498	1	Muffler
③86	650488	6	Screw, 1/4-20 X 1-1/4in	③277	650988	2	Screw, 1/4-20 X 2-9/32in
③89	611004	1	Key-Flywheel	③285	35000A	1	Cup-Starter
③90	611112	1	Flywheel	③287	650926	2	Screw, 8-32 X 21/64in
③92	650815	1	Washer-Belleville	③290	29774	1	Line-Fuel
③93	650816	1	Nut-Flywheel	③292	26460	2	Clamp-Fuel Line
③100	34443C	1	Ignition-Solid State	③300	35586A	1	Fuel Tank (Incl. Ref. #292 And 301)
③101	610118	1	Cover-Spark Plug	③301	36246	1	Cap-Fuel
③103	651007	2	Screw, Torx T-15, 10-24 X 1in	③305	35647	1	Tube-Oil Fill
③104	37480	1	Bushing-Cam	③*306	37610	1	Inoin-Ring
③110	37047	1	Wire-Ground	③307	35499	1	O Ring
③*119	36787	1	Gasket-Cylinder Head	③309	650562	1	Screw, 10-32 X 1/2in
③120	36825	1	Head-Cylinder	③309A	650783	1	Screw, 10-24 X 3/4in
③125	36780	1	Valve-Exhaust (1/32in Os) (Incl. 151)	③310	35648	1	Dipstick
				③311A	37611	1	Bracket-Hold Down
				③313	34080	1	Spacer
				③347	650898A	1	Screw, 10-32 X 27/32in

Engine Assembly


Tecumseh Lv195ea-362003b (continued)

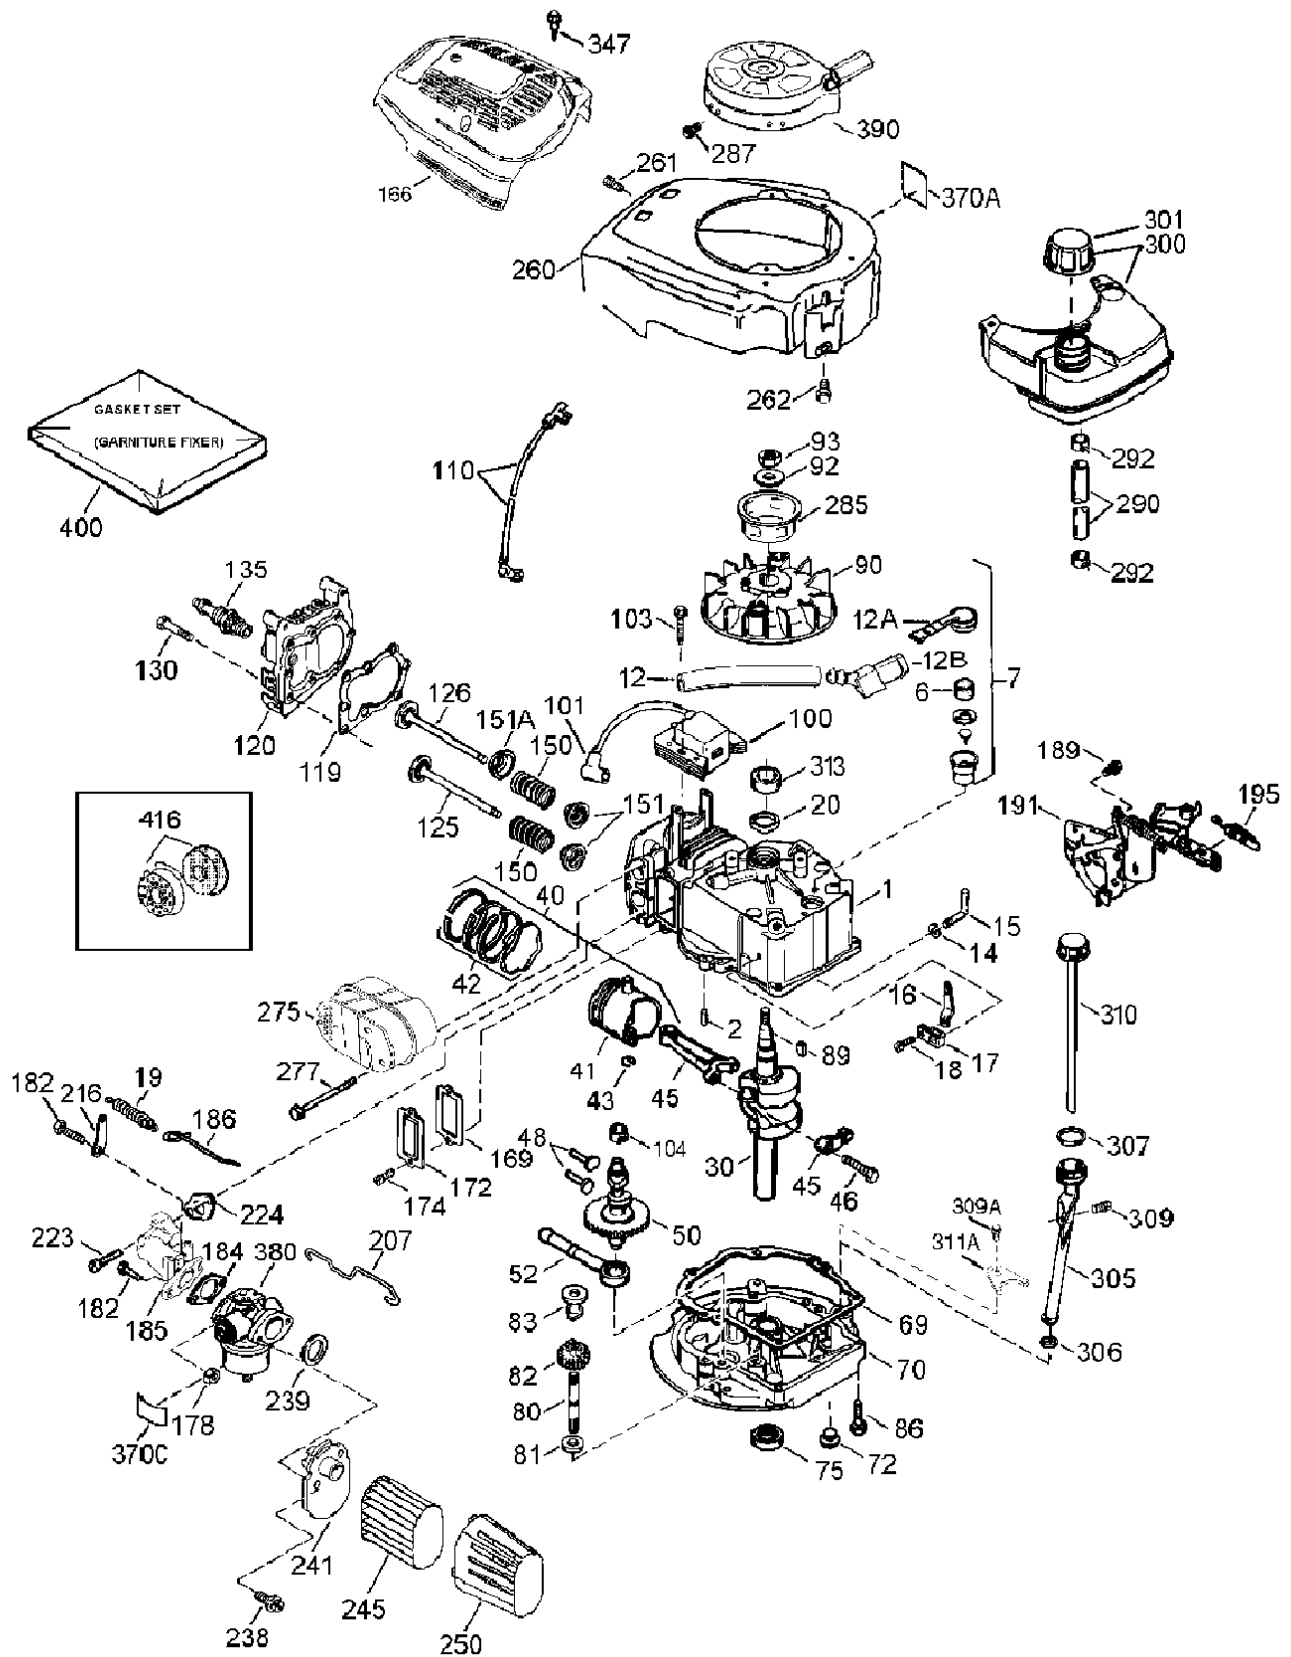

Engine Assembly


Tecumseh Lv195ea-362003b (continued)

Ref	Part No.	Qty.	Description
③370	35977	1	Decal-Warning
③370A	36261	2	Decal-Lubrication
③370C	37695	1	Decal-Primer
③380	640303	1	Carburetor (Incl. Ref. #184)
③390	590739	1	Starter-Rewind
③400	37613	1	Gasket Set
③416	37530	1	Spark Arrestor Kit (Optional)
③	750876	1	Shortblock

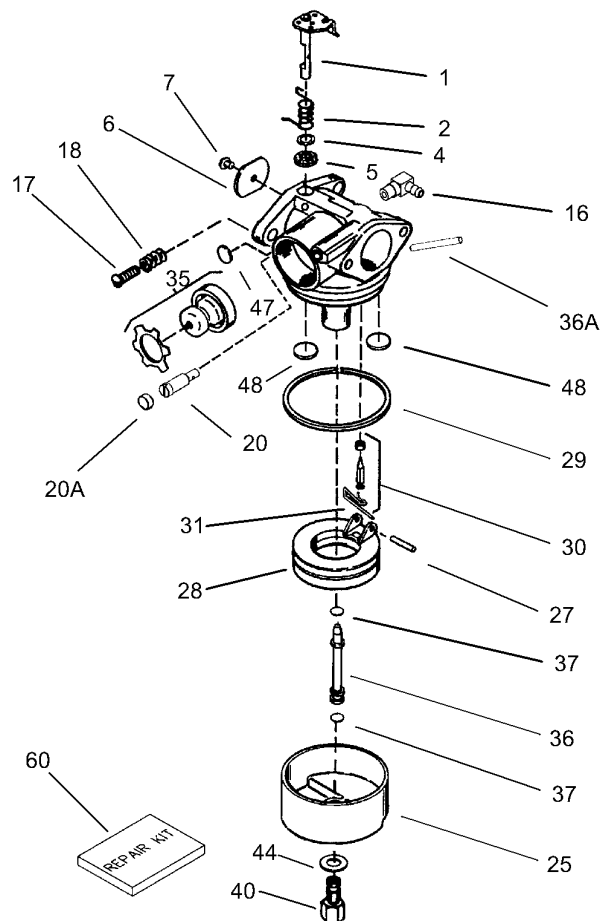


Carburetor Assembly No. 640303
Tecumseh Lv195ea-362003B

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
0	640303	1	Carburetor (Incl. Ref. #184 Of Engine Parts List)	40	640087	1	Nut-High Speed Bowl
1	631615	1	Throttle Shaft And Lever ASM	44	27110A	1	Bowl Nut Washer
2	631767	1	Spring-Return, Throttle	47	630748	1	Welch Plug, Idle Mixture Well
3	631184	1	Washer-Dust Seal	48	631027	2	Welch Plug, Vent
4	631183	1	Seal-Dust	60	632809	1	Repair Kit
5	640070	1	Shutter-Throttle				
6	650506	1	Screw-Shutter				
7	631807	1	Fitting-Fuel				
8	651025	1	Idle Speed Screw				
9	630766	1	Spring-Tension				
10	640018	1	Screw-Idle Restrictor				
11	640200	1	Cap-Idle Restrictor Screw				
12	631867	1	Bowl-Float				
13	631024	1	Shaft-Float				
14	632802	1	Float				
15	631028	1	O-Ring-Float Bowl				
16	632807	1	Inlet Needle, Seat, And Clip Asm(Incl. Ref. #31)				
17	631022	1	Clip-Spring				
18	640259	1	Primer Bulb/retainer Ring				
19	640019	1	Tube-Main Nozzle				
20	632766	1	Tube Extension-Bowl Vent				
21	632547	2	O-Ring, Main Nozzle Tube				

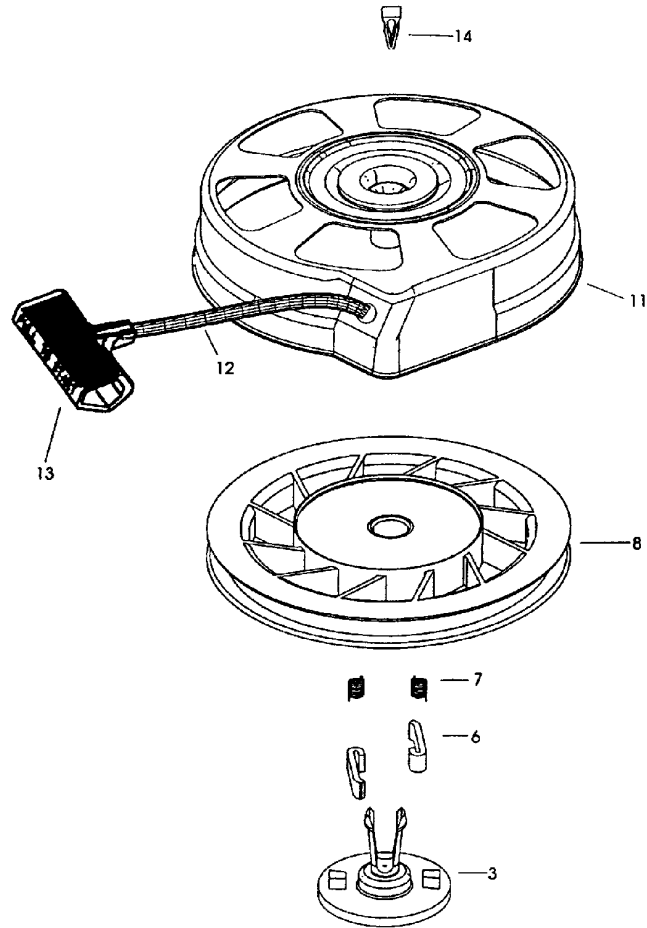

Recoil Starter Assembly No. 590739
Tecumseh No. Lv195ea-362003b

Ref	Part No.	Qty.	Description				
0	590739	1	Starter-Rewind				
3	590740	1	Retainer				
6	590616	2	Dog-Starter				
7	590617	2	Spring-Dog				
8	590618A	1	Pulley And Rewind Spring ASM				
11	590638A	1	Starter Housing ASM (40 Degree Grommet)				
12	590535	1	Rope-Starter (Length 98in X 9/64in Dia)				
13	590701	1	Handle-Starter				
14	590760	1	Clip-Spring				

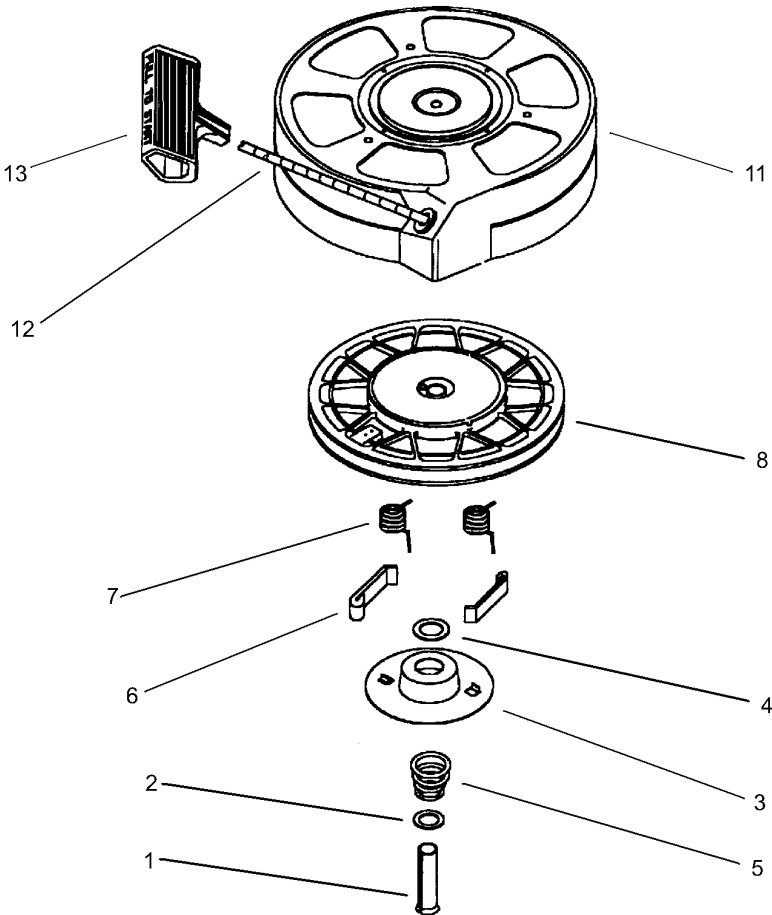

Recoil Starter Assembly No. 590702 (Optional)
Tecumseh Lv195ea-362003b

Ref	Part No.	Qty.	Description				
❶0	590702	1	Starter-Recoil				
❶1	590599A	1	Pin-Spring				
❶2	590600	1	Washer				
❶3	590696	1	Retainer				
❶4	590601	1	Washer				
❶5	590697	1	Spring-Brake				
❶6	590698	2	Dog-Starter				
❶7	590699	2	Spring-Dog				
❶8	590700	1	Pulley And Rewind Spring ASM				
❶11	590703A	1	Starter Housing ASM (40 Degree Grommet)				
❶12	590535	1	Rope-Starter (Length 98in X 9/64in Dia)				
❶13	590701	1	Handle-Starter				

NOTES

NOTES

NOTES

