



Customer Service Bulletin Commercial Business Group

Multi Pro[®] Hose Reel Kit

Date: Nov. 17, 2004

REVISED: Serial Range Changed

Model/Serial Range: **Model Number:**

41569

Serial Numbers:

230000101-240001070


Subject: Water may collect in the Hose Reel Switch Box.

Water may infiltrate the Switch Box (106-1322-03) during cleaning or periods of outside storage. Water that collects in the box has no way to drain. Eventually this could fill the Switch Box and may result in electrical malfunction.

Remove the Switch Box and drill a .250 (7mm) hole in the bottom-center of the box. Refer to the instructions below for further information.



- Remove the mounting screws and knob. (circled Items)
- Remove the cover and turn over.

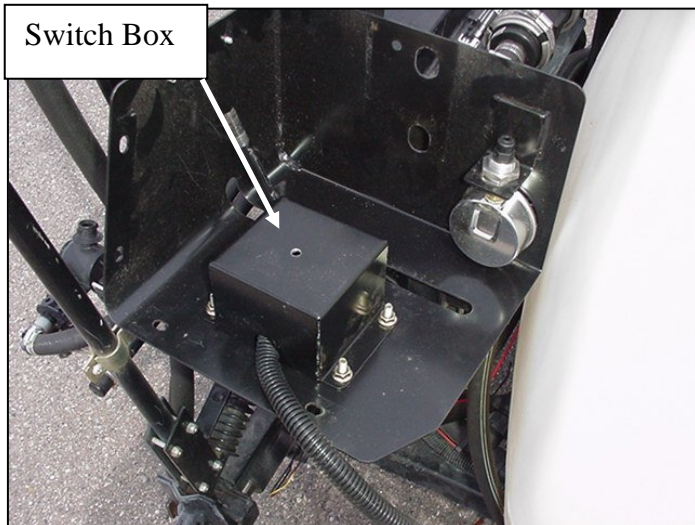

- Remove the four Switch Box retaining screws and remove the Switch Box.
- Drill a .250 (7mm) hole in the bottom-center of Switch Box as shown.

Note: Do Not Drill without removing the Switch Box or damage to the switches could result.

- Reassemble in the reverse order.