Form Number 3353-990 Rev A

ProLine Walk-Behind Mower

Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Model No. 30682 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2005
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel Tank Assembly	3
Transmission Drive Assembly	4
Drive Wheel and Brake Assembly	6
Handle and Control Assembly	8
Control Panel Decal Assembly No. 110-6906	10
Deck and Shield Assembly	11
Deflector Assembly No. 107-4140	12
Idler Arm and Caster Wheel Assembly	13
Spindle and Blade Assembly	15
Cylinder and Crankcase Assembly Kawasaki Model FH430V-AS25	16
Piston and Crankshaft Assembly Kawasaki Model FH430V-AS25	17
Valve and Camshaft Assembly Kawasaki Model FH430V-AS25	18
Lubrication Equipment Assembly Kawasaki Model FH430V-AS25	19
Cooling Equipment Assembly Kawasaki Model FH430V-AS25	20
Electric Equipment Assembly Kawasaki Model FH430V-AS25	21
Control Equipment Assembly Kawasaki Model FH430V-AS25	22
Carburetor Assembly Kawasaki Model FH430V-AS25	23
Air Filter and Muffler Assembly Kawasaki Model FH430V-AS25	24
Fuel Tank and Fuel Valve Assembly Kawasaki Model FH430V-AS25	25
Starter Assembly Kawasaki Model FH430V-AS25	26
Label Assembly Kawasaki Model FH430V-AS25	27
Attachments and Accessories List	28

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over-protection-system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head


Footnotes

❶ Not illustrated

❷ Not serviced separately

❸ Optional Equipment


❹ Obtain from your local Kawasaki dealer

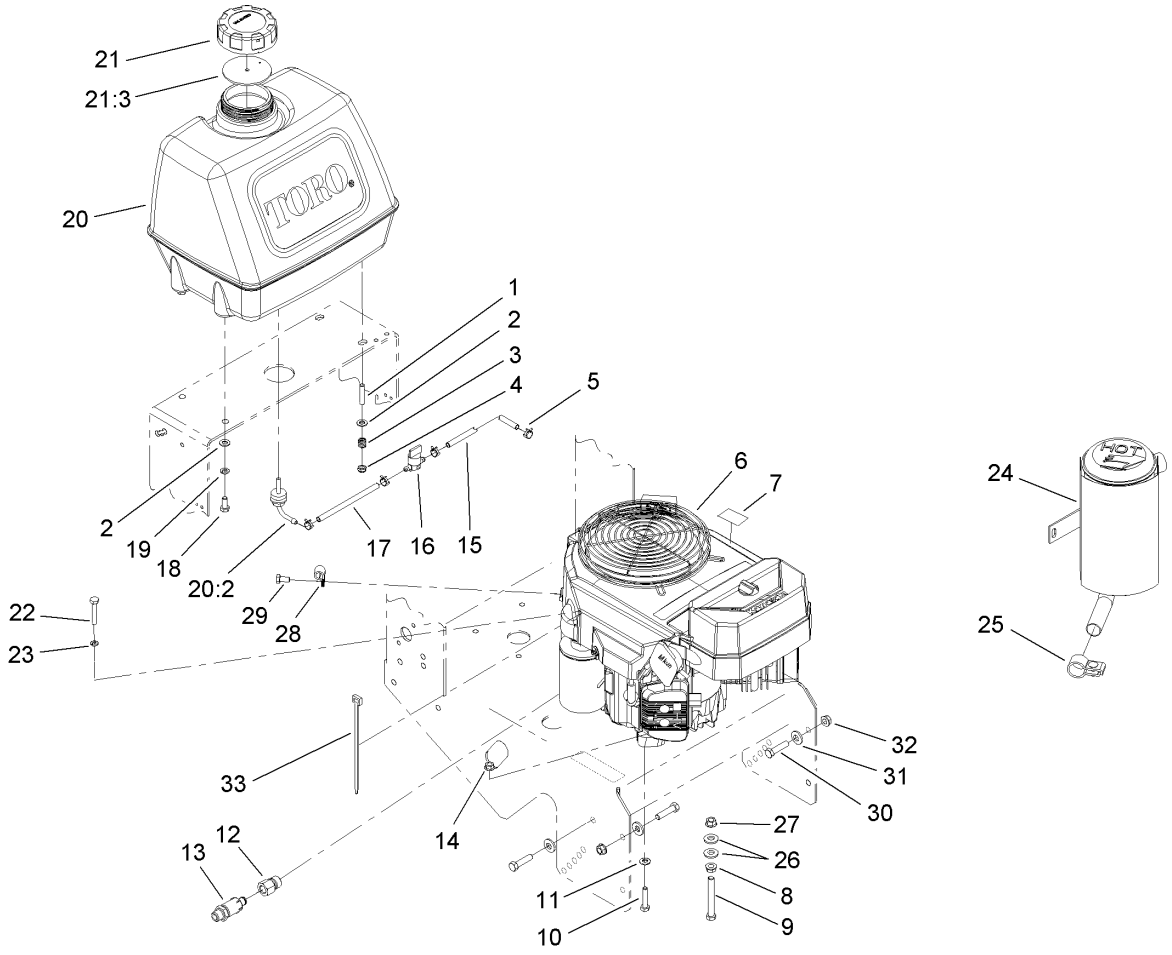

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❷❹6		1	Engine-Kawasaki, FH430V-As25
7	106-0699	1	Decal-Warning, Hot Surfaces
8	3290-357	1	Nut-HHF, Whiz
9	323-14	1	Screw-HH
10	322-7	4	Screw-HH
11	1-303334	4	Washer-Spring
12	103-1966	1	Adapter
13	92-6877	1	Valve-Drain, Oil
14	32128-20	4	Nut-HF
15	109-0293	1	Hose-Fuel
16	1-603770	1	Valve-Fuel
17	109-0306	1	Hose-Fuel
18	322-3	2	Screw-HH
19	1-805005	2	Washer-Lock
20	106-0730	1	Fuel Tank ASM
20:2	103-2605	1	Fitting-Fuel, Bulkhead
21	88-3980	1	Gas Cap ASM
21:3	88-4010	1	Gasket-Cap, Gas
22	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
23	1-805004	1	Washer-Lock
24	100-6467	1	Muffler
25	103-5465	1	Clamp-Muffler
26	98-5975	2	Washer-Belleville
27	32128-21	1	Nut-HF
28	1-413510	1	Clip-Loom
29	33114-016	1	Screw-HH
30	323-8	8	Screw-HH
31	98-5975	8	Washer-Belleville
32	3290-357	8	Nut-HHF, Whiz
33	1-303335	1	Tie-Plastic
❶99	103-1964	1	Hose-Drain, Oil

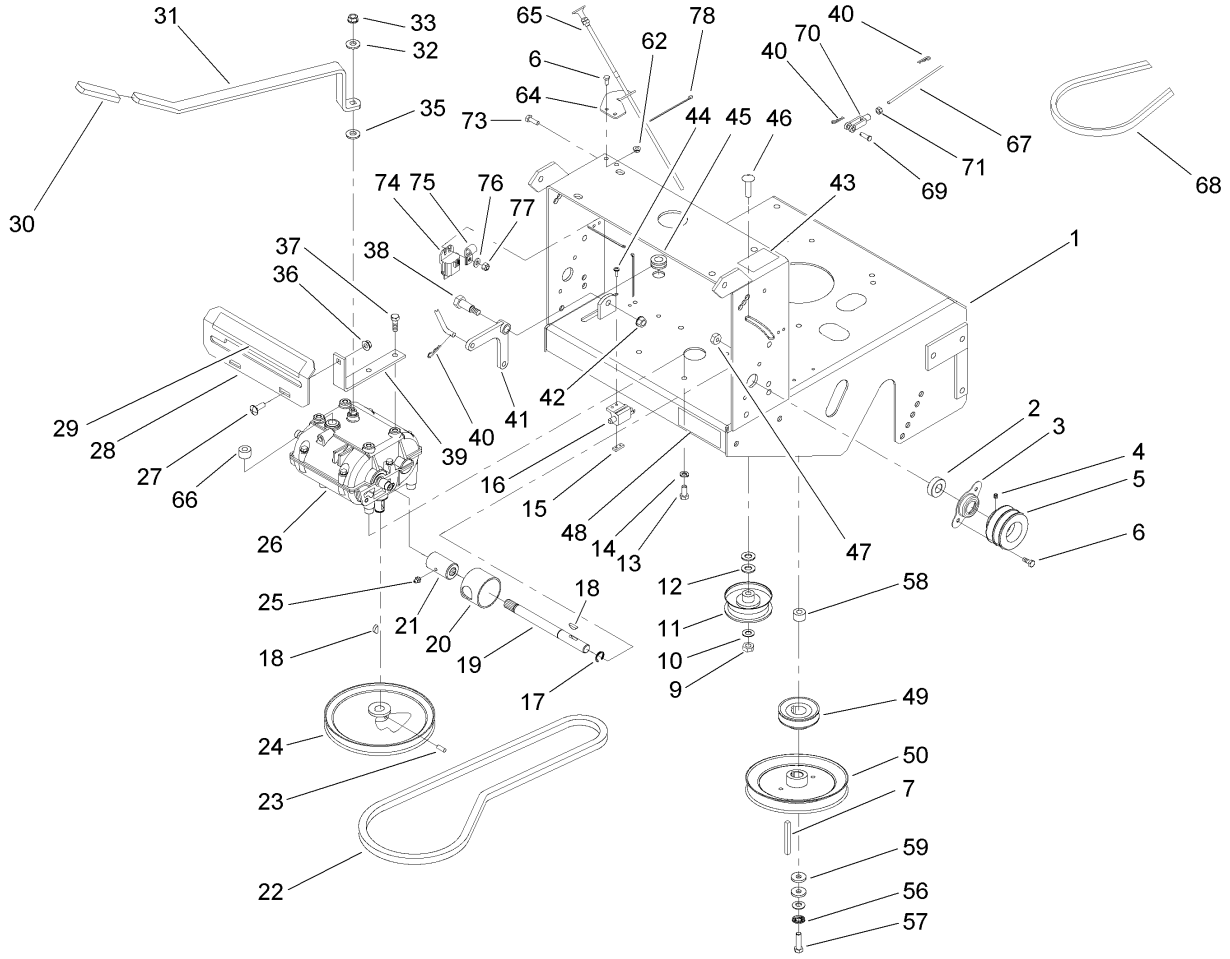

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key-Machine
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave

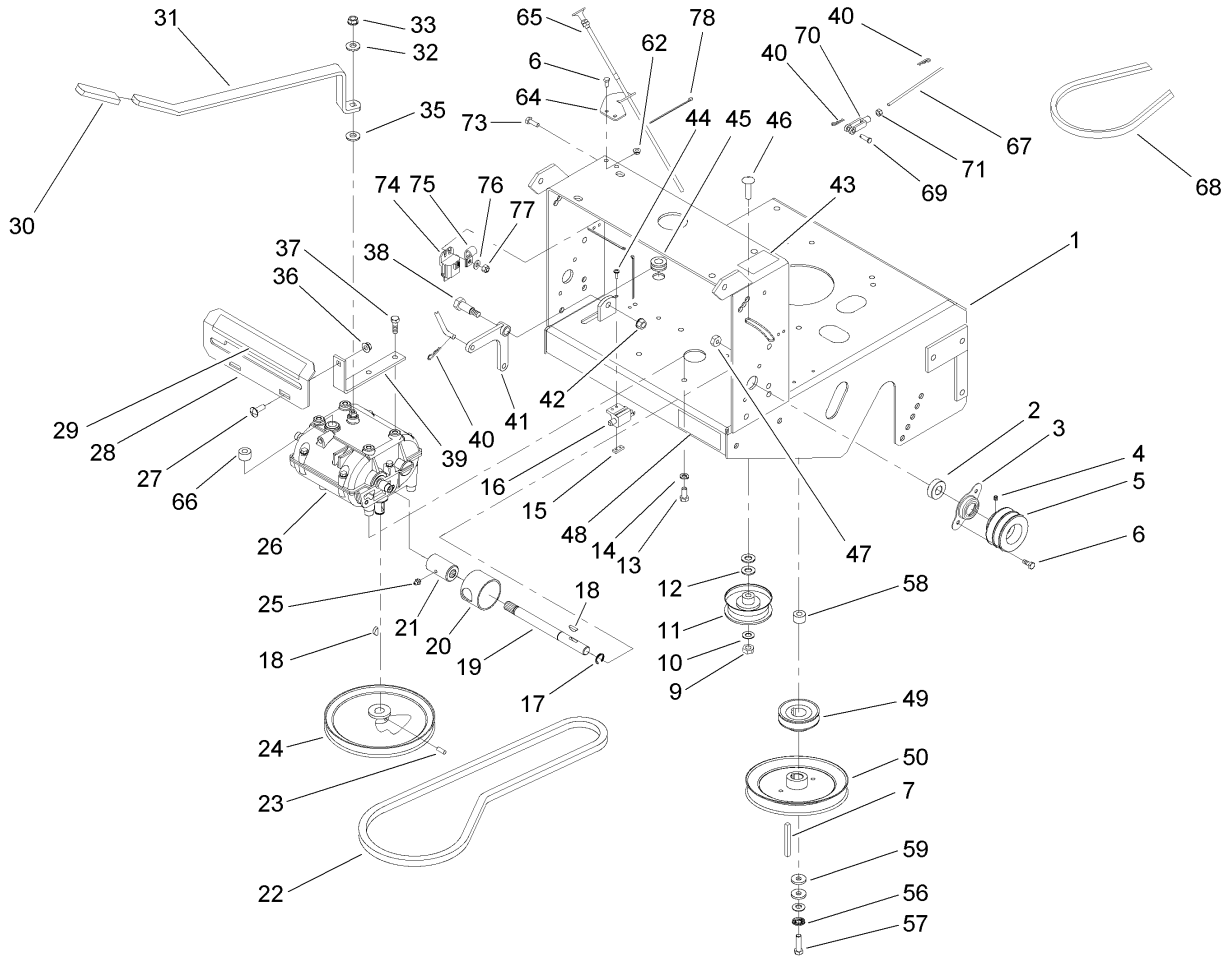

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral
67	1-323303	1	Linkage-Arm
68	1-323745	1	Belt-Blade, Drive
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
73	321-4	1	Screw-HH
74	1-323430	1	Module-Interlock
75	1-323229	1	Clip-Loom
76	3256-22	1	Washer-Flat
77	3296-42	1	Nut-Lock, NI
78	1-303335	3	Tie-Plastic

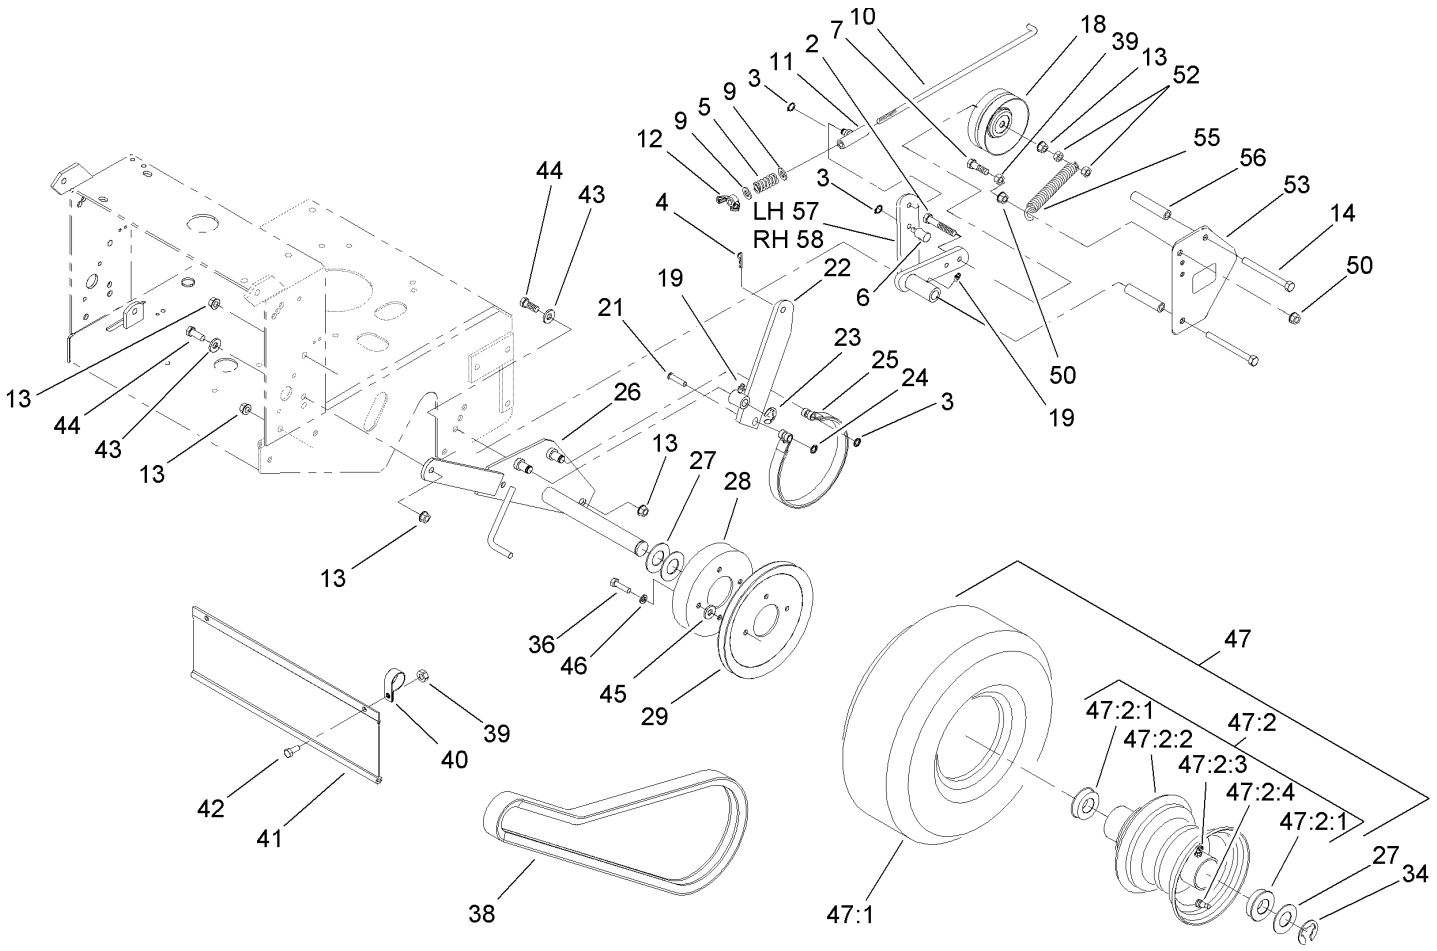

Drive Wheel and Brake Assembly


Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	2	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-39	4	Screw-HH
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322141-03	1	Axle
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive

Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock
❷47		2	Wheel And Tire ASM
47:1	1-323361	1	Tire
47:2	1-323360	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
❷47:2:2		1	Rim ASM
❷47:2:3		1	Fitting-Grease
❷47:2:4		1	Valve Stem And Cap
50	32128-20	4	Nut-HF
52	3296-39	4	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH

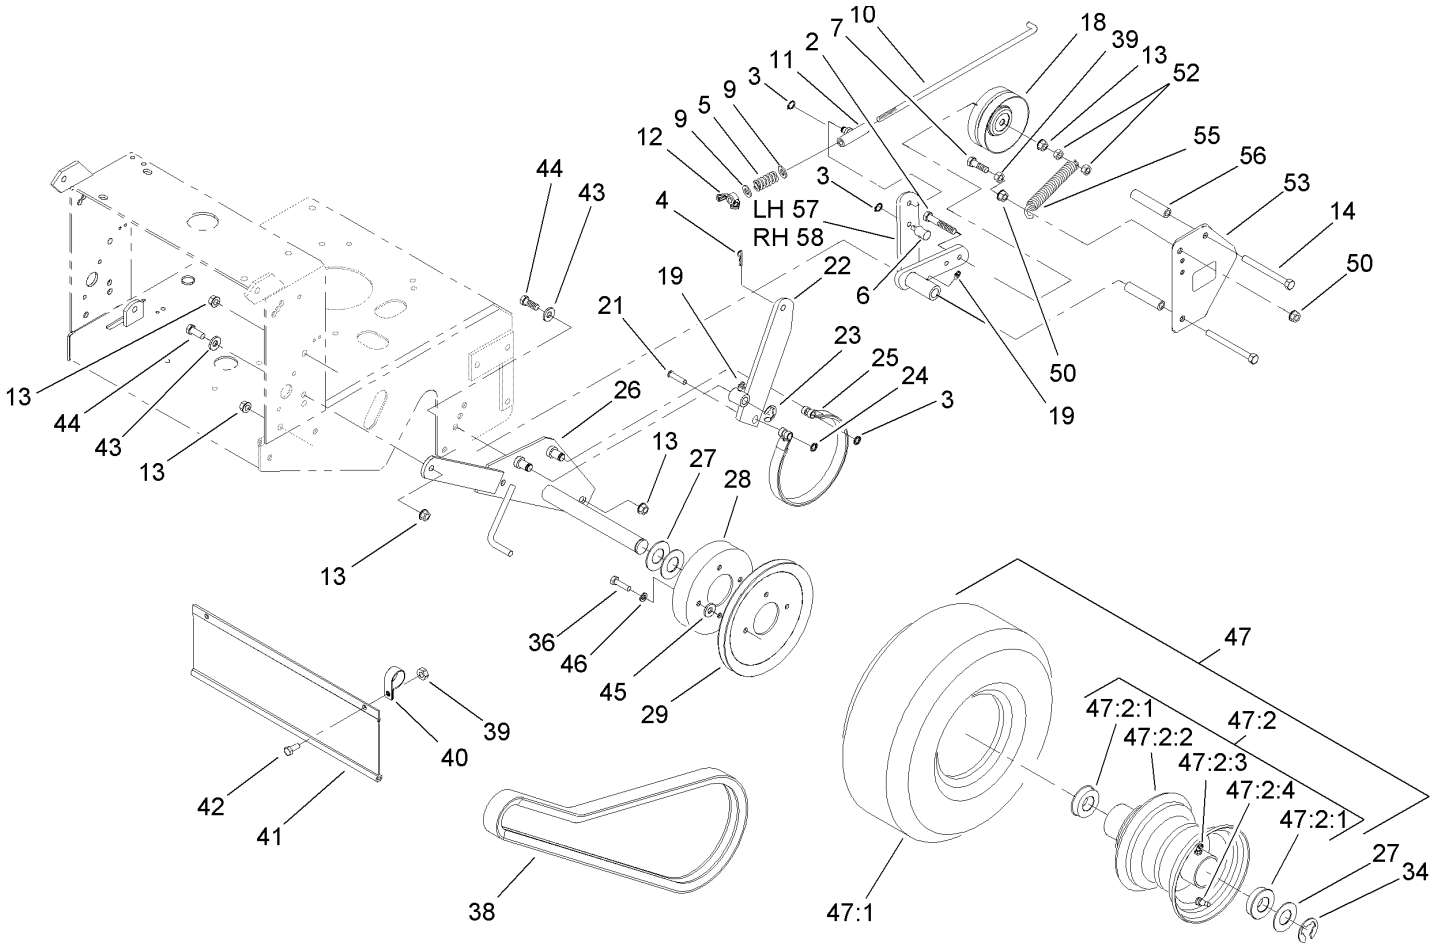

Drive Wheel and Brake Assembly (continued)


Ref	Part No.	Qty.	Description
58	103-1616-03	1	Arm-Idler, RH

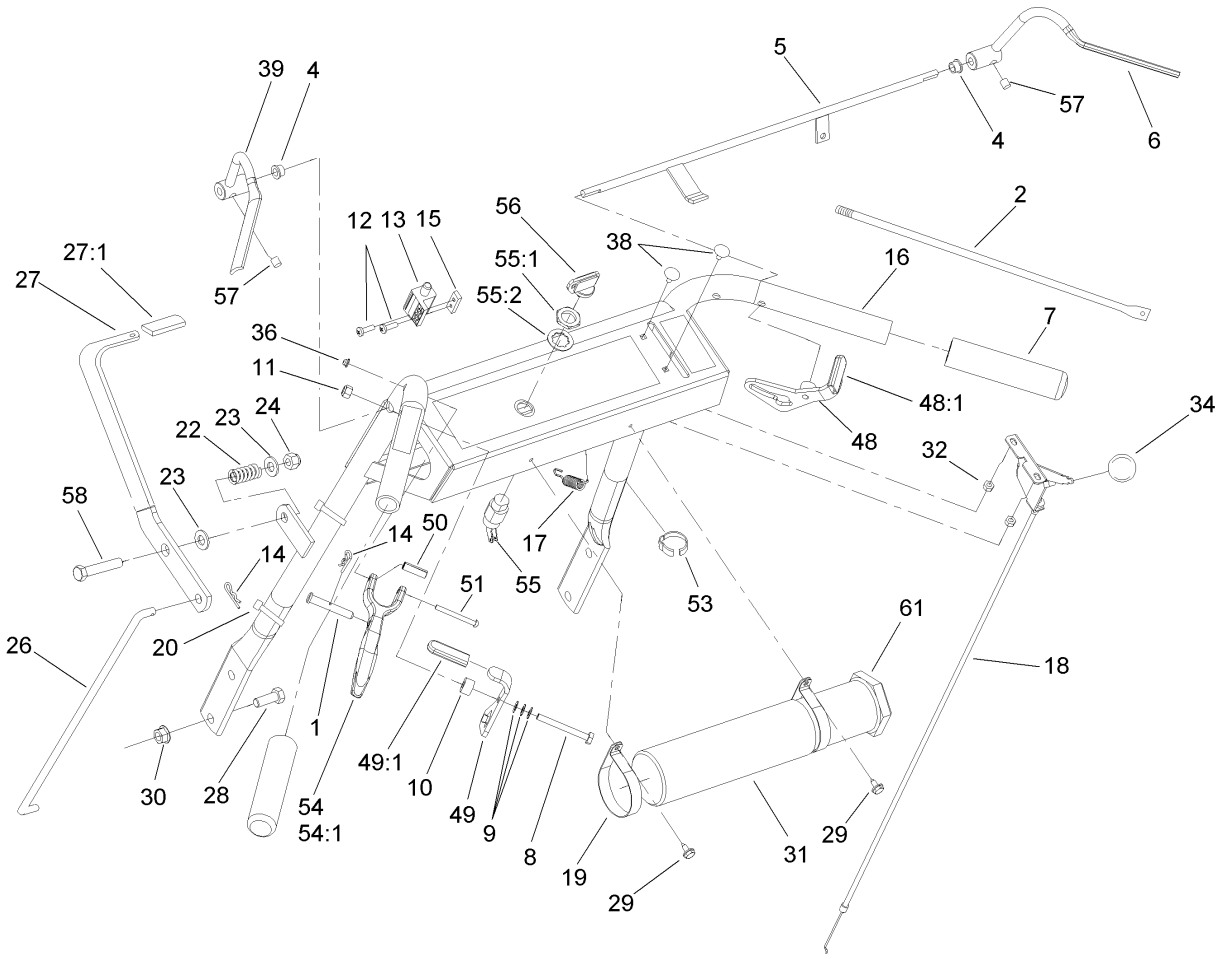

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Rod-Control, Operator Presence
6	106-5486	1	RH Opc Lever ASM
7	104-9838	2	Grip-Foam
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	2	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	3	Pin-Hair
15	1-633181	1	Plate-Tapped
16	110-6906	1	Gear Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
20	1-303287	2	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM

Ref	Part No.	Qty.	Description
27:1	1-303020	1	Grip-Lever
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	32128-21	4	Nut-HF
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	106-5485	1	LH Opc Lever ASM
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Lever, Drive
❶52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	29-5560	1	Switch-On / Off
55:1	218-461	1	Nut-HH
55:2	3254-5	1	Washer-Tooth
56	63-8360	1	Key-Ignition

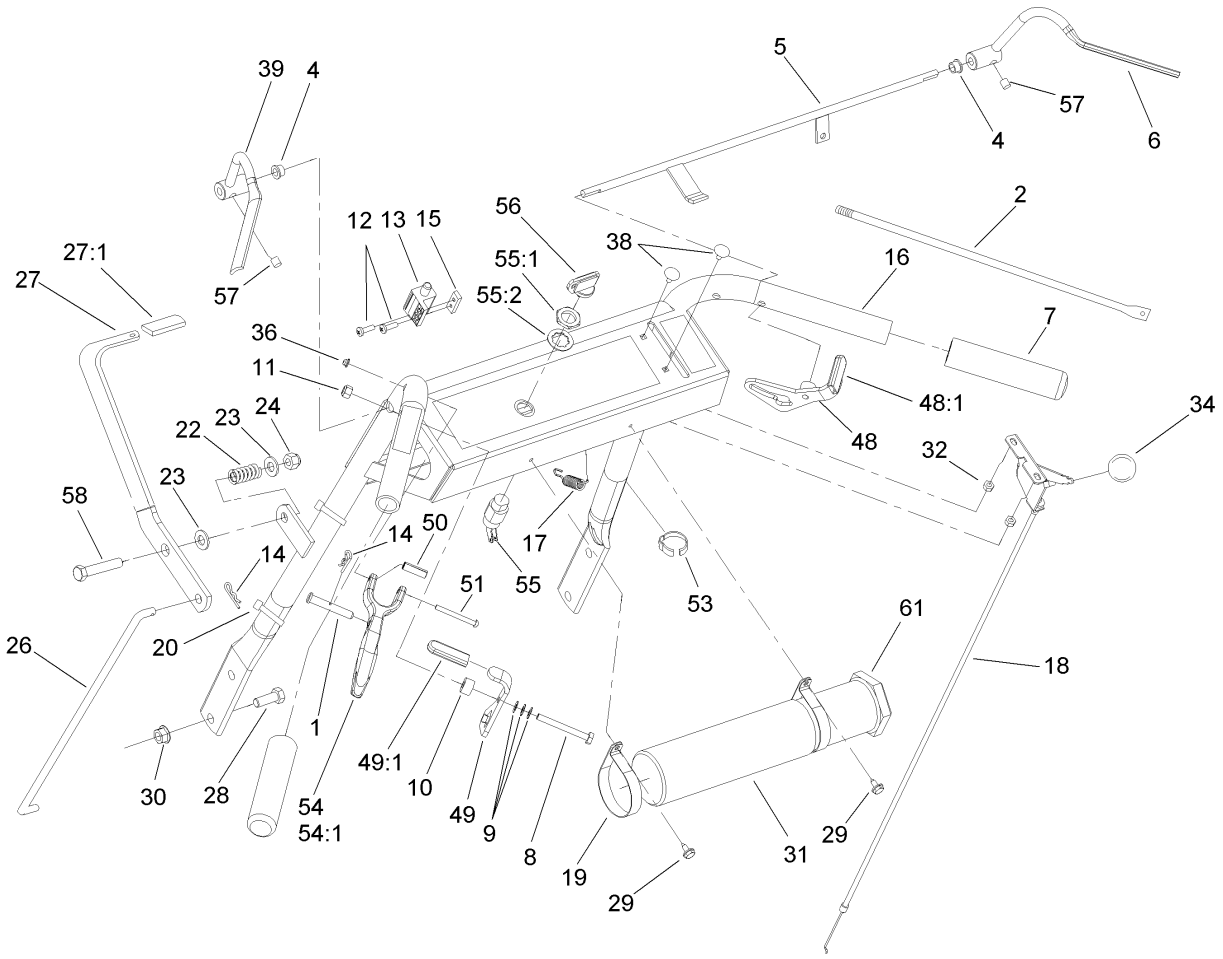


Handle and Control Assembly (continued)

Ref	Part No.	Qty.	Description
57	1-803322	2	Screw-Set
58	323-10	1	Screw-HH
61	104-7048	1	Cap-Housing

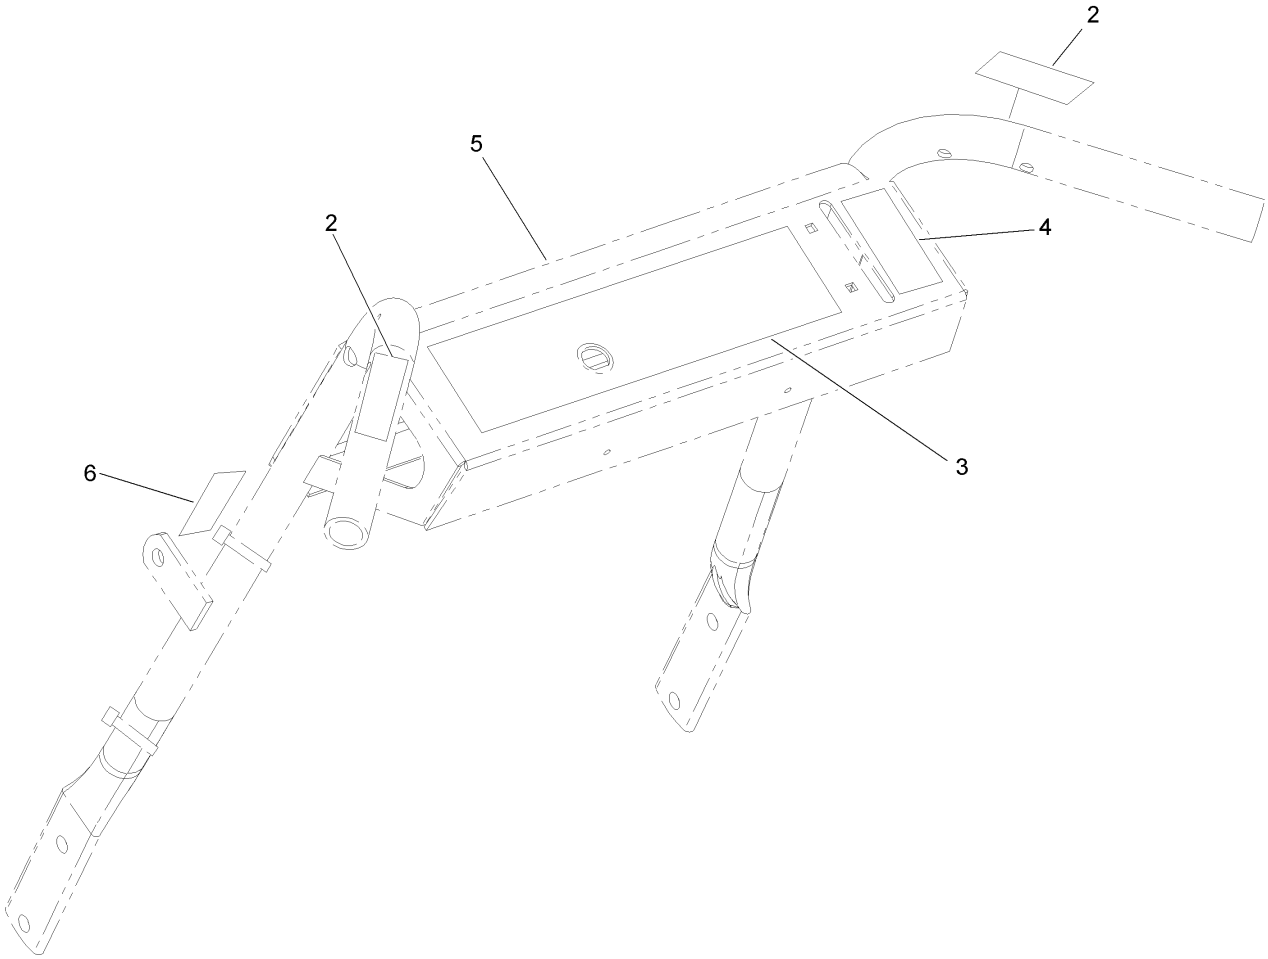


Control Panel Decal Assembly No. 110-6906

Ref	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	110-6917	1	Decal-Control Panel
6	95-5537	1	Decal-Engage, Deck

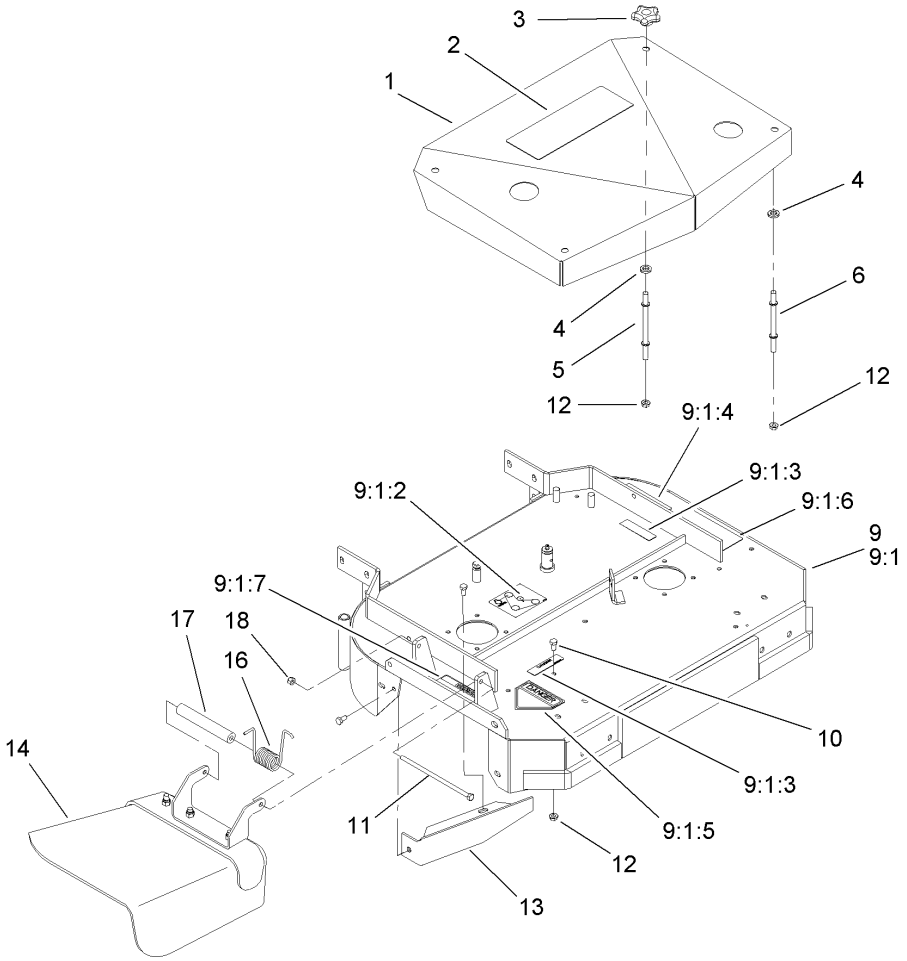


Deck and Shield Assembly

Ref	Part No.	Qty.	Description
1	1-324407	1	Shield ASM
2	106-0710	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	110-6901	1	32 Inch Deck ASM
❷9:1		1	Deck
9:1:2	98-3296	1	Decal-Routing, Belt
9:1:3	98-5954	2	Decal-Missing, Cover
9:1:4	98-5130	1	Decal-Torque, Bolt
9:1:5	43-8480	1	Decal-Danger
9:1:6	66-1340	1	Decal-Danger
9:1:7	104-8569	1	Decal-Warning
10	322-2	7	Screw-HH
11	322-50	1	Screw-HH
12	32128-20	11	Nut-HF
13	1-302189-01	1	Baffle-Dogleg
14	107-4140	1	Deflector ASM
16	104-8554	1	Spring-Torsion
17	105-4622	1	Spacer
18	3296-29	1	Nut-Lock, NI

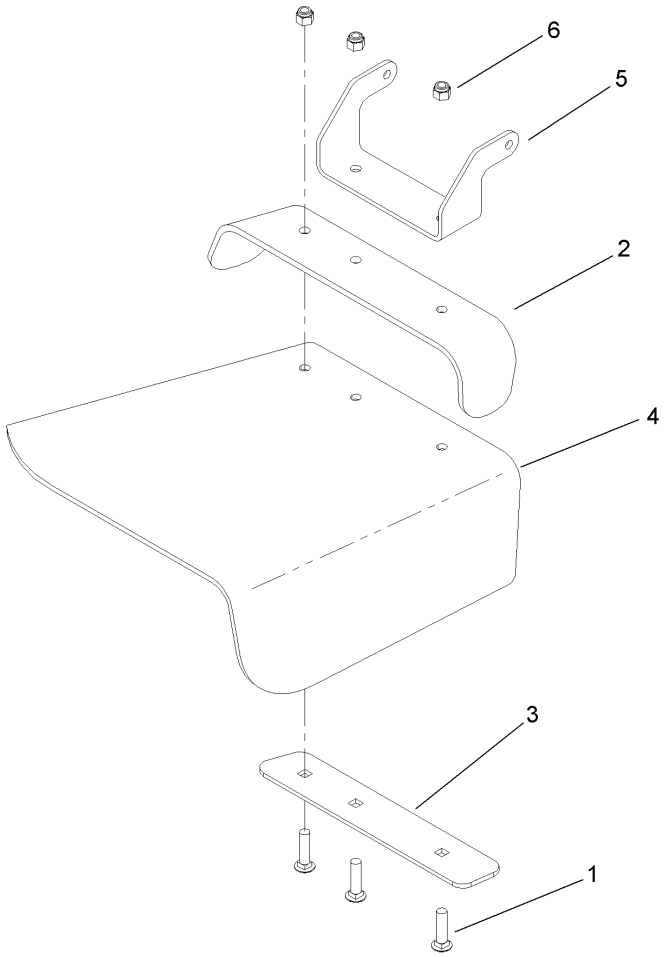

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

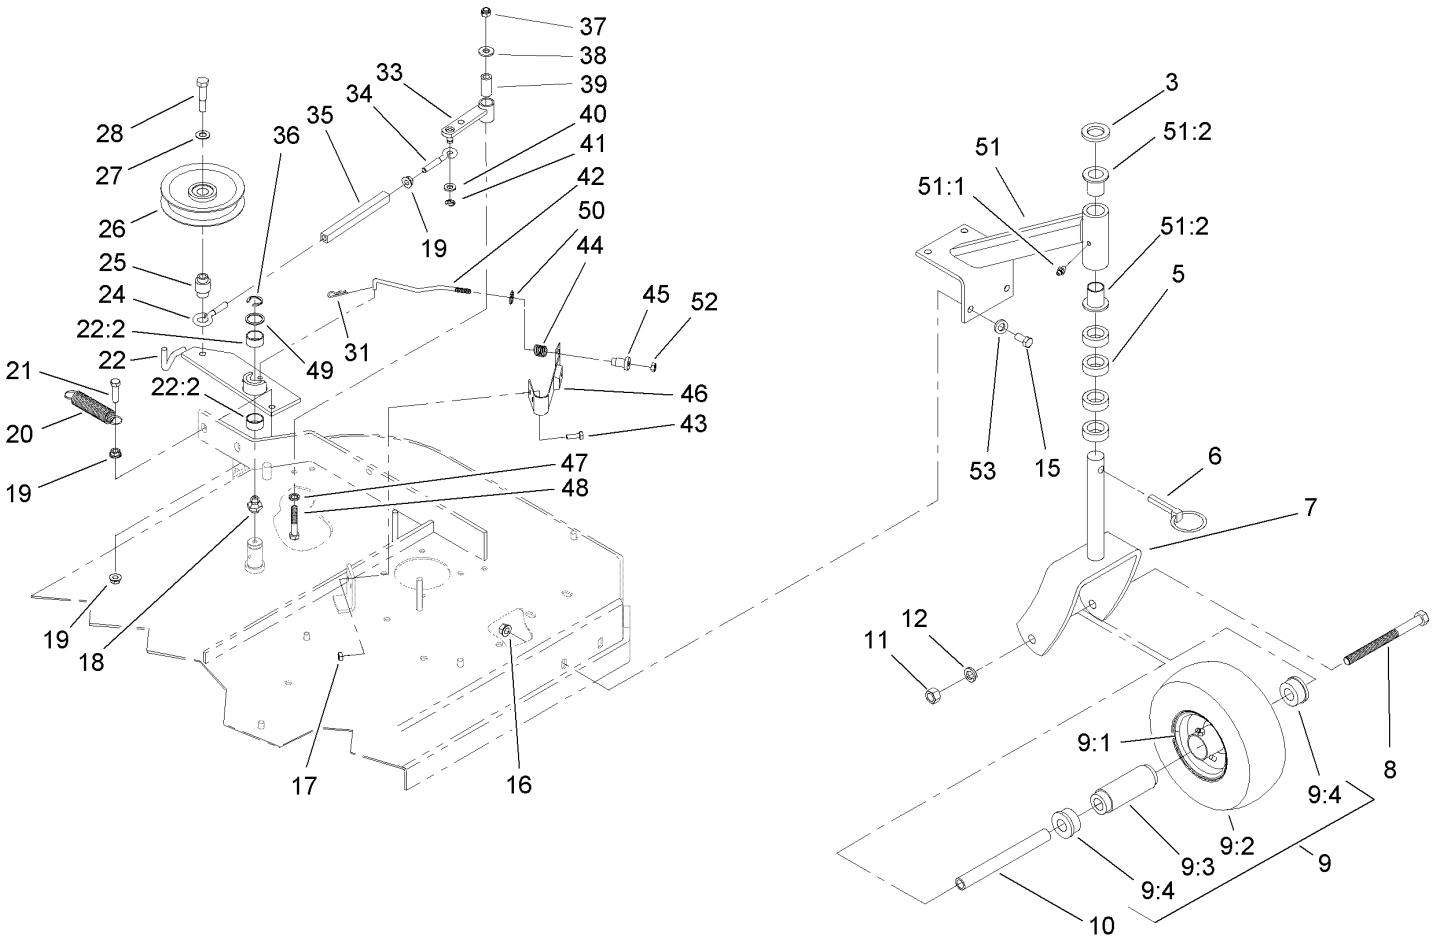

Idler Arm and Caster Wheel Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
❷9:1		1	Rim
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement

Ref	Part No.	Qty.	Description
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad / Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM
51:1	302-52	1	Fitting-Grease

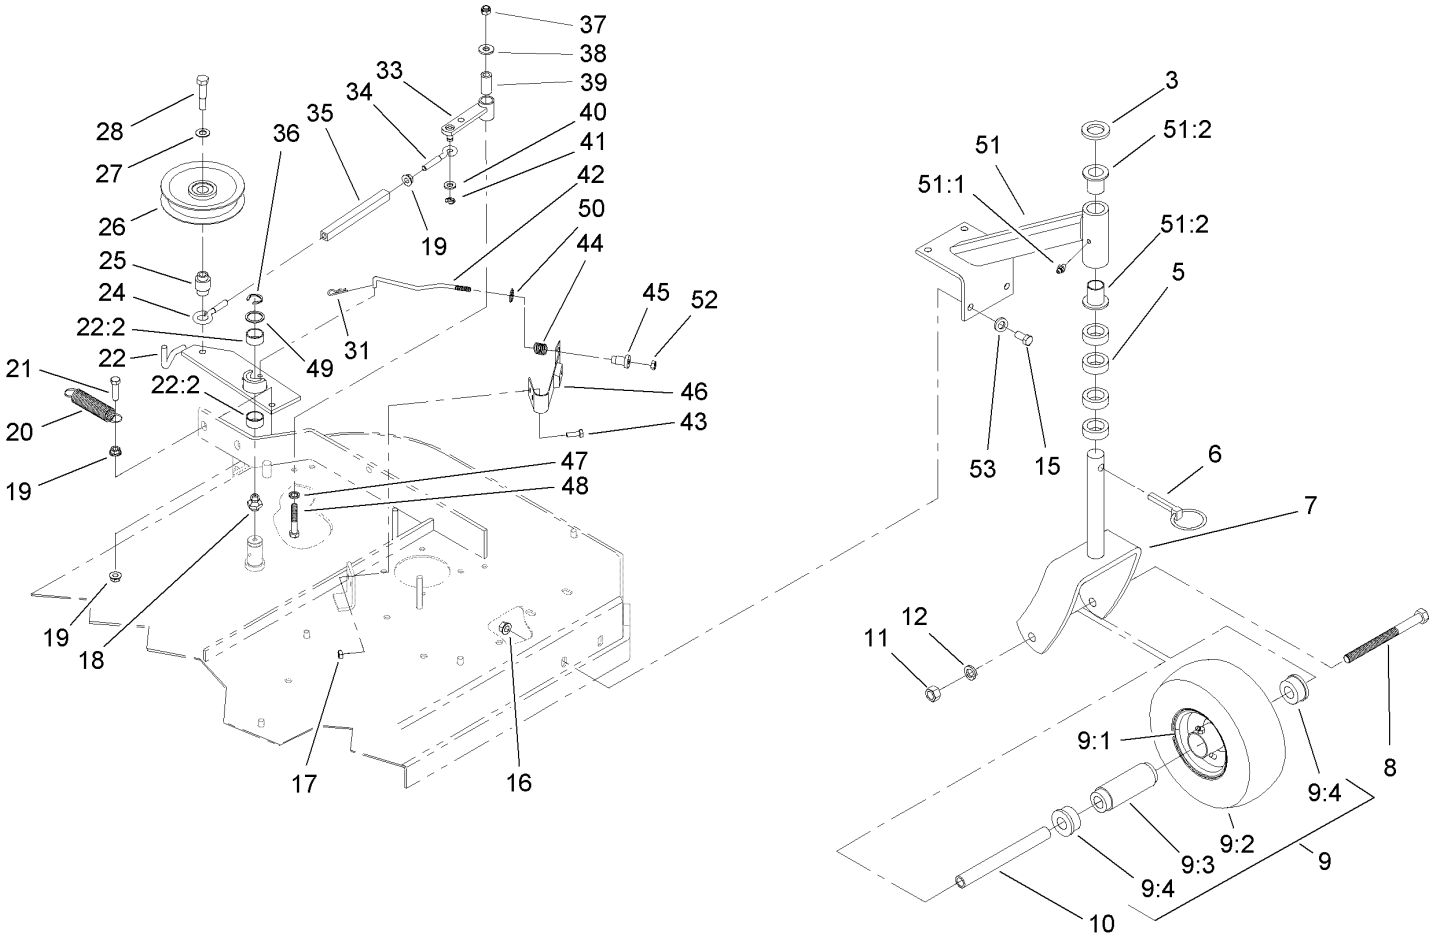


Idler Arm and Caster Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

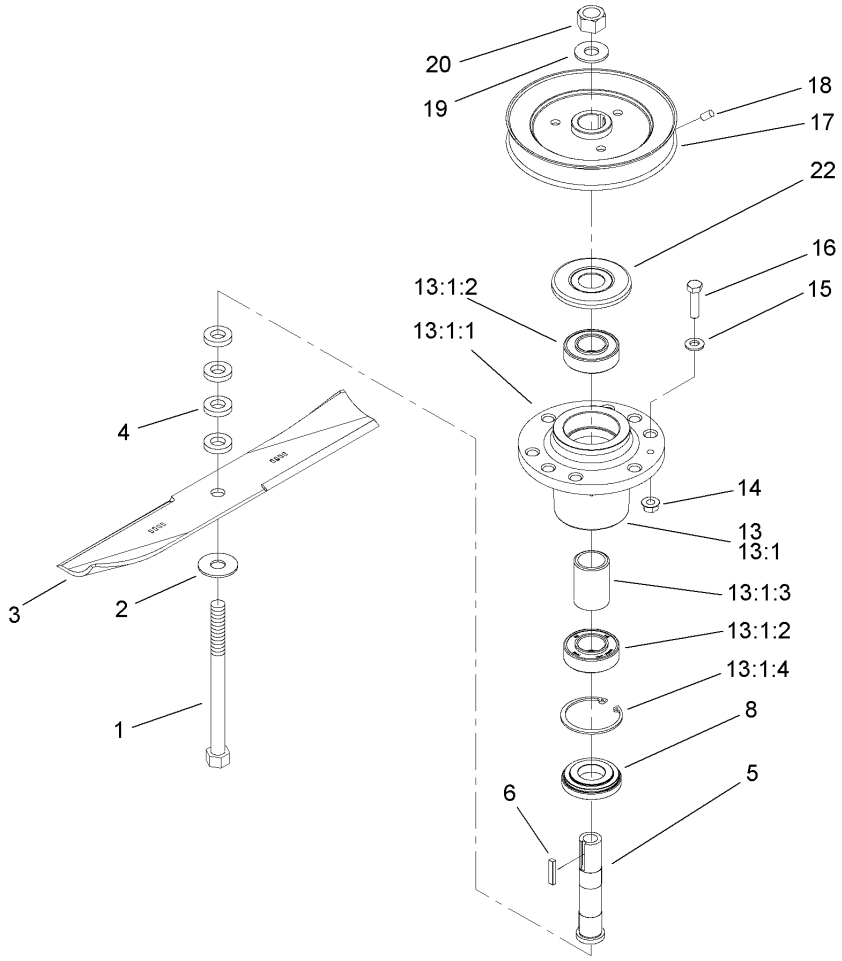

Spindle and Blade Assembly


Ref	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
3	103-2507	2	Blade-Lift, Low
❸3	103-2527	2	Blade-Notched
4	1-323539	8	Spacer-Drive, Blade
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
8	103-2535	2	Spacer-Guard, Bottom
13	107-4065	2	Cutter Housing ASM
❷13:1		1	Housing-Cutter
13:1:1	103-7975	1	Housing-Spindle
13:1:2	103-2477	2	Bearing-Ball
13:1:3	103-2534	1	Spacer-Bearing
13:1:4	32120-8	1	Ring-Snap
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex
22	103-1330	2	Guard-Bearing, Top

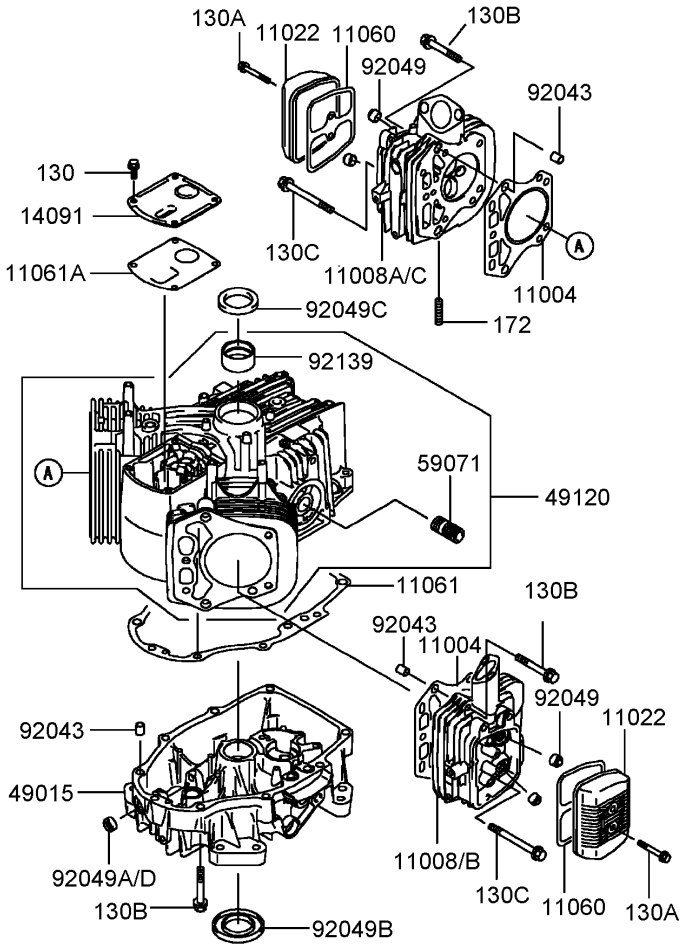

Cylinder and Crankcase Assembly
Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description
❹11004	11004-7008	1	Gasket-Head
❹11008	11008-7011	1	Head-Comp-Cylinder, No.2
❹11008A	11008-7017	1	Head-Comp-Cylinder, No.1
❹11008B	11008-7021	1	Head-Comp-Cylinder, No. 2
❹11008C	11008-7022	1	Head-Comp-Cylinder, No. 1
❹11022	11022-7003	1	Case-Rocker
❹11060	11060-7001	1	Gasket-Case, Rocker
❹11061	11061-7007	1	Gasket-Cover, Crankcase
❹11061A	11061-7008	1	Gasket-Breather
❹14091	14091-7007	1	Cover
❹49015	49015-7032	1	Cover-Crankcase
❹49120	49120-7015	1	Crankcase-Comp
❹59071	59071-2079	1	Joint
❹92043	92043-7001	1	Pin
❹92049	92049-7001	1	Seal-Oil, Rvc2 (6X11X10.2)
❹92049A	92049-7005	1	Seal-Oil, So (8X14X5 Hs)
❹92049B	92049-7015	1	Seal-Oil, Sd (35X62X8 L Hs)
❹92049C	92049-7016	1	Seal-Oil, Sd (35X48X8 R Hs)
❹92049D	92049-7019	1	Seal-Oil, So (8X14X5 Hs)
❹92139	92139-7002	1	Bushing
❹130	130B0612	1	Bolt-Flanged
❹130A	130B0640	1	Bolt-Flanged
❹130B	130T0850	1	Bolt-Flanged
❹130C	130T0875	1	Bolt-Flanged

Ref	Part No.	Qty.	Description
❹172	172G0818	1	Bolt-Stud

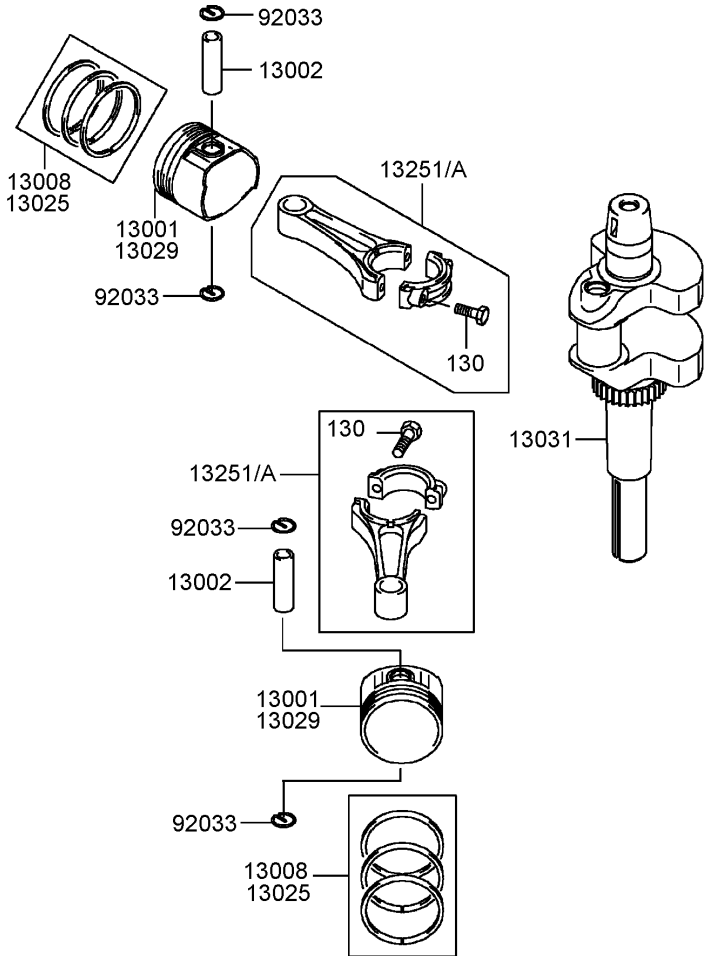


Piston and Crankshaft Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹13001	13001-7009	1	Piston-Engine
❹13002	13002-7001	1	Pin-Piston
❹13008	13008-7001	1	Ring Set-Piston
❹13025	13025-7003	1	Ring Set-Piston (L,0.50)
❹13029	13029-7005	1	Piston-Engine (L,0.50)
❹13031	13031-7033	1	Crankshaft-Comp
❹13251	13251-7007	1	Connecting Rod ASM
❹13251A	13251-7008	1	Connecting Rod ASM (U/S=0.50)
❹92033	92033-7005	1	Ring-Snap
❹130	130G0630	1	Bolt-Flanged

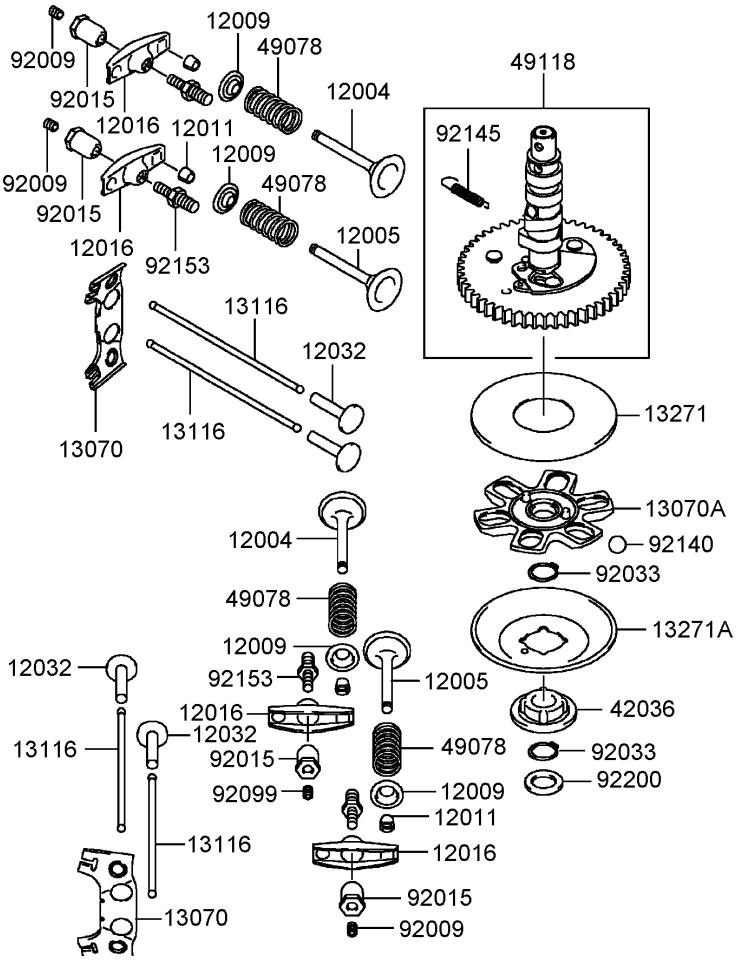


Valve and Camshaft Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹12004	12004-7003	1	Valve-Intake
❹12005	12005-7003	1	Valve-Exhaust
❹12009	12009-7001	1	Retainer-Spring, Valve
❹12011	12011-2056	1	Collet
❹12016	12016-7001	1	Arm-Rocker
❹12032	12032-7001	1	Tappet
❹13070	13070-7001	1	Guide
❹13070A	13070-7004	1	Guide
❹13116	13116-2057	1	Rod-Push
❹13271	13271-7007	1	Plate
❹13271A	13271-7021	1	Plate-Governor
❹42036	42036-7009	1	Sleeve
❹49078	49078-7001	1	Spring-Valve, Engine
❹49118	49118-7009	1	Camshaft-Comp
❹92009	92009-2341	1	Screw
❹92015	92015-2253	1	Nut
❹92033	92033-7001	1	Ring-Snap
❹92140	92140-7002	1	Ball
❹92145	92145-7001	1	Spring
❹92153	92153-7019	1	Bolt
❹92200	92200-7001	1	Washer

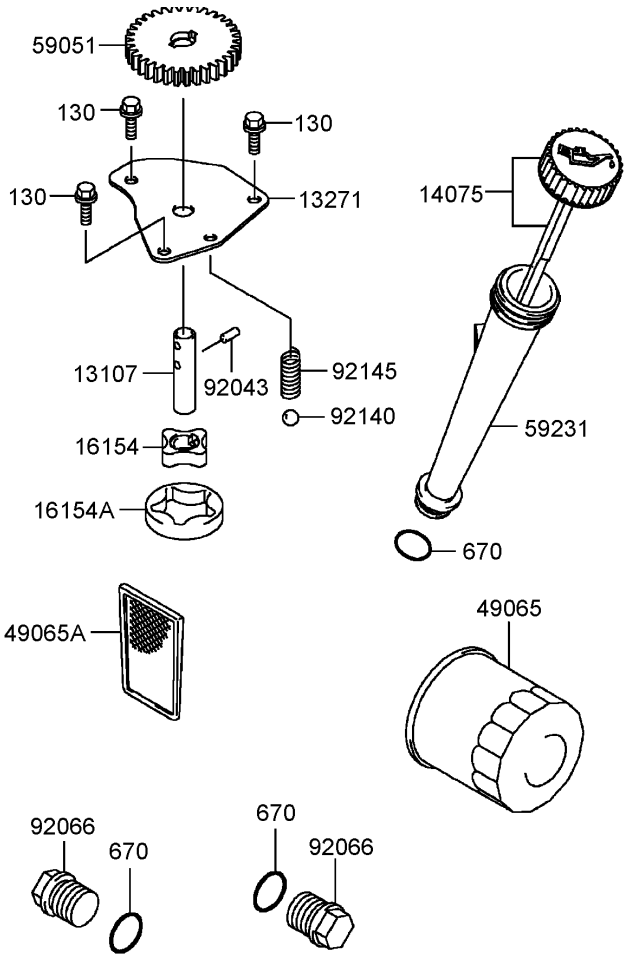


Lubrication Equipment Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹13107	13107-7009	1	Shaft
❹13271	13271-7017	1	Plate
❹14075	14075-7009	1	Cap ASM
❹16154	16154-2053	1	Rotor-Pump (In)
❹16154A	16154-2054	1	Rotor-Pump (Out)
❹49065	49065-2078	1	Filter-Oil
❹49065A	49065-7004	1	Filter-Oil
❹59051	59051-7011	1	Gear-Spur
❹59231	59231-7003	1	Filler
❹92043	92043-7003	1	Pin
❹92066	92066-7003	1	Plug
❹92140	92140-7003	1	Ball
❹92145	92145-7002	1	Spring
❹130	130B0612	1	Bolt-Flanged
❹670	670D2016	1	O-Ring (16Mm)

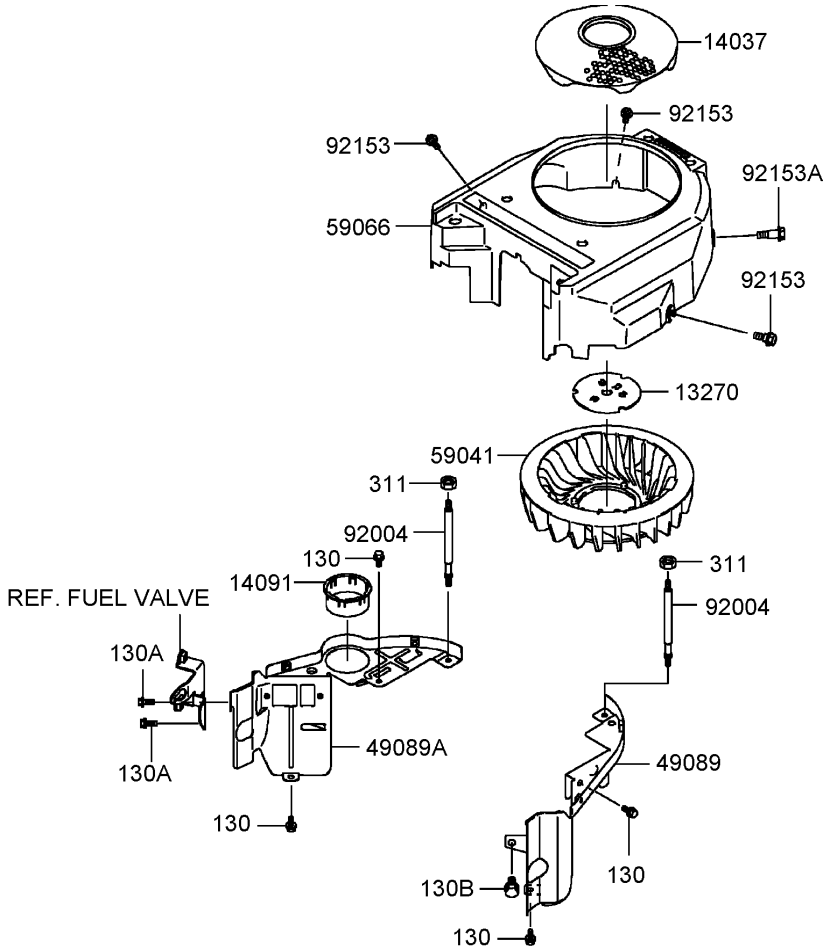


Cooling Equipment Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹13270	13270-7007	1	Plate
❹14037	14037-7021-9H	1	Screen
❹14091	14091-7009	1	Cover
❹49089	49089-7044	1	Shroud-Engine
❹49089A	49089-7045	1	Shroud-Engine
❹59041	59041-7010	1	Fan
❹59066	59066-7023	1	Housing-Fan
❹92004	92004-7007	1	Stud
❹92153	92153-7007	1	Bolt
❹92153A	92153-7008	1	Bolt
❹130	130B0612	1	Bolt-Flanged
❹130A	130B0616	1	Bolt-Flanged
❹130B	130B0816	1	Bolt-Flanged
❹311	311F0600	1	Nut-Hex

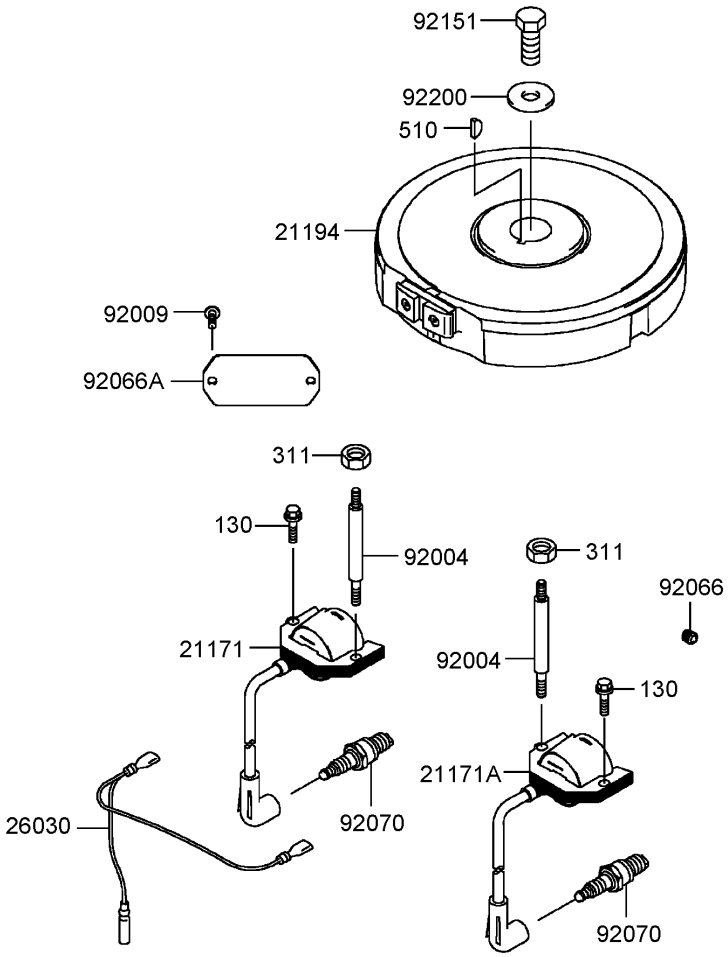


Electric Equipment Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹21171	21171-7013	1	Ignition Coil ASM
❹21171A	21171-7014	1	Ignition Coil ASM
❹21194	21194-7013	1	Flywheel-Comp
❹26030	26030-7001	1	Harness
❹92004	92004-7008	1	Stud
❹92009	92009-2308	1	Screw
❹92066	92066-7002	1	Plug
❹92066A	92066-7005	1	Plug
❹92070	92070-7003	1	Plug-Spark (Rcj8Y, Solid)
❹92151	92151-2097	1	Bolt (12X30)
❹92200	92200-7002	1	Washer
❹130	130B0620	1	Bolt-Flanged
❹311	311F0600	1	Nut-Hex
❹510	510A5100	1	Key-Woodruff

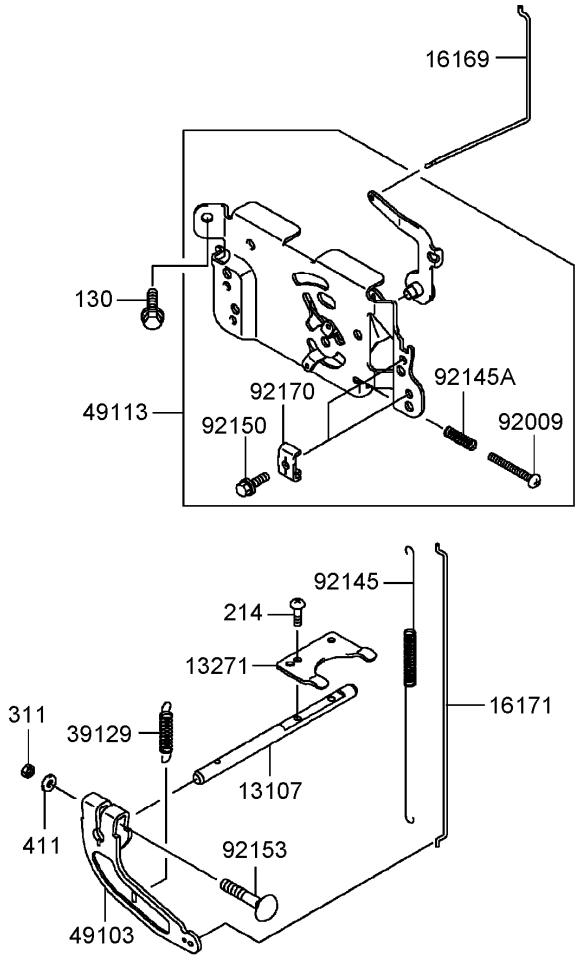

Control Equipment Assembly
Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description
❹13107	13107-7010	1	Shaft
❹13271	13271-7018	1	Plate
❹16169	16169-7012	1	Link-Choke
❹16171	16171-7007	1	Link
❹39129	39129-7003	1	Spring-Governor
❹49103	49103-7004	1	Arm-Governor
❹49113	49113-7024	1	Panel-Control
❹92009	92009-7007	1	Screw (4X35)
❹92145	92145-7003	1	Spring
❹92145A	92145-7005	1	Spring
❹92150	92150-2182	1	Bolt (5X18)
❹92153	92153-7005	1	Bolt (6X35)
❹92170	92170-7001	1	Clamp
❹130	130B0612	1	Bolt-Flanged
❹214	214B0408	1	Screw-Pan
❹311	311B0600	1	Nut-Hex
❹411	411b0600	1	Washer-Plain

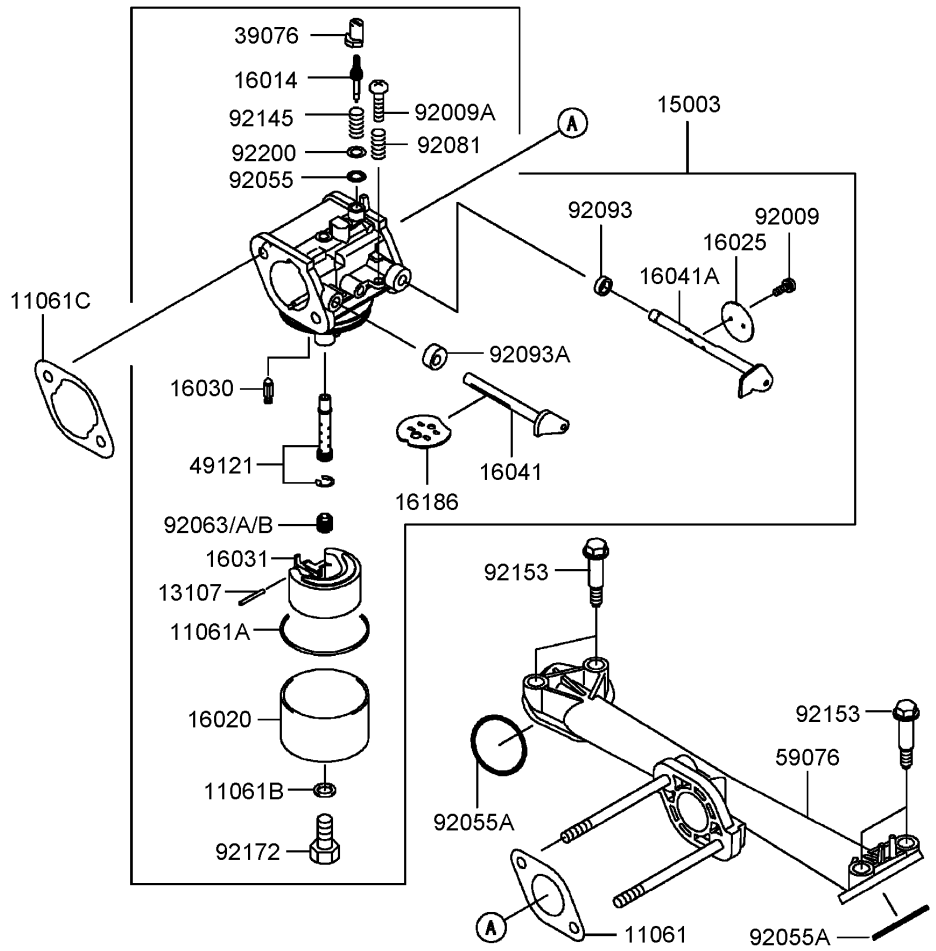

Carburetor Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹11061	11061-7004	1	Gasket-Insulator
❹11061A	11061-7009	1	Gasket-Chamber
❹11061B	11061-7010	1	Gasket-Screw
❹11061C	11061-7018	1	Gasket-Cleaner, Air
❹13107	13107-7018	1	Shaft
❹15003	15003-7061	1	Carburetor-ASM
❹16014	16014-7002	1	Screw-Pilot
❹16020	16020-7003	1	Chamber-Float
❹16025	16025-7006	1	Valve-Throttle
❹16030	16030-7003	1	Valve-Float
❹16031	16031-7002	1	Float
❹16041	16041-7016	1	Shaft-Choke, Carburetor
❹16041A	16041-7018	1	Shaft-Throttle, Carburetor
❹16186	16186-7002	1	Choke Valve ASM
❹39076	39076-7001	1	Limiter
❹49121	49121-7001	1	Nozzle-Main
❹59076	59076-7005	1	Manifold-Intake
❹92009	92009-2083	1	Screw
❹92009A	92009-2349	1	Screw
❹92055	92055-2174	1	O-Ring
❹92055A	92055-7007	1	O-Ring (Id=31)
❹92063	92063-7026	1	Jet-Main, #88
❹92063A	92063-7028	1	Jet-Main, #85
❹92063B	92063-7029	1	Jet-Main, #82


Ref	Part No.	Qty.	Description
❹92081	92081-2234	1	Spring
❹92093	92093-2100	1	Seal
❹92093A	92093-7003	1	Seal
❹92145	92145-7015	1	Spring
❹92153	92153-7009	1	Bolt
❹92172	92172-7002	1	Screw
❹92200	92200-7014	1	Washer

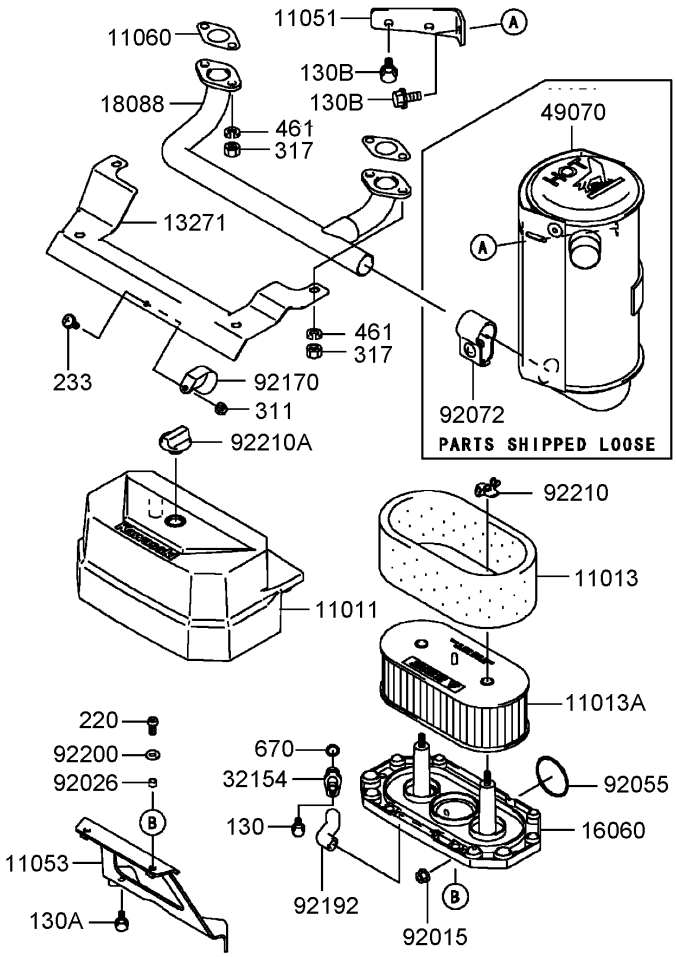

Air Filter and Muffler Assembly
Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description
❹11011	11011-7035	1	Case-Filter, Air
❹11013	11013-7025	1	Element-Airfilter
❹11013A	11013-7031	1	Element-Airfilter
❹11051	11051-7005-9H	1	Bracket
❹11053	11053-7022	1	Bracket
❹11060	11060-7021	1	Gasket-Muffler
❹13271	13271-7022	1	Plate
❹16060	16060-7016	1	Pipe-Intake
❹18088	18088-7001	1	Pipe-Exhaust
❹32154	32154-7006	1	Pipe
❹49070	49070-7015	1	Muffler
❹92015	92015-1193	1	Nut
❹92026	92026-7001	1	Spacer (6.2X7.9X5)
❹92055	92055-7015	1	Ring-O
❹92072	92072-7008	1	Band
❹92170	92170-7002	1	Clamp
❹92192	92192-7010	1	Tube
❹92200	92200-2070	1	Washer
❹92210	92210-7004	1	Nut
❹92210A	92210-7019	1	Nut
❹130	130B0610	1	Bolt-Flanged
❹130A	130B0612	1	Bolt-Flanged
❹130B	130B0816	1	Bolt-Flanged

Ref	Part No.	Qty.	Description
❹220	220B0614	1	Screw-Pan (Cross)
❹233	233B0416	1	Screw
❹311	311B0400	1	Nut-Hex
❹317	317R0800	1	Nut-Hex
❹461	461F0800	1	Washer-Spring
❹670	670B2010	1	O-Ring (10Mm)

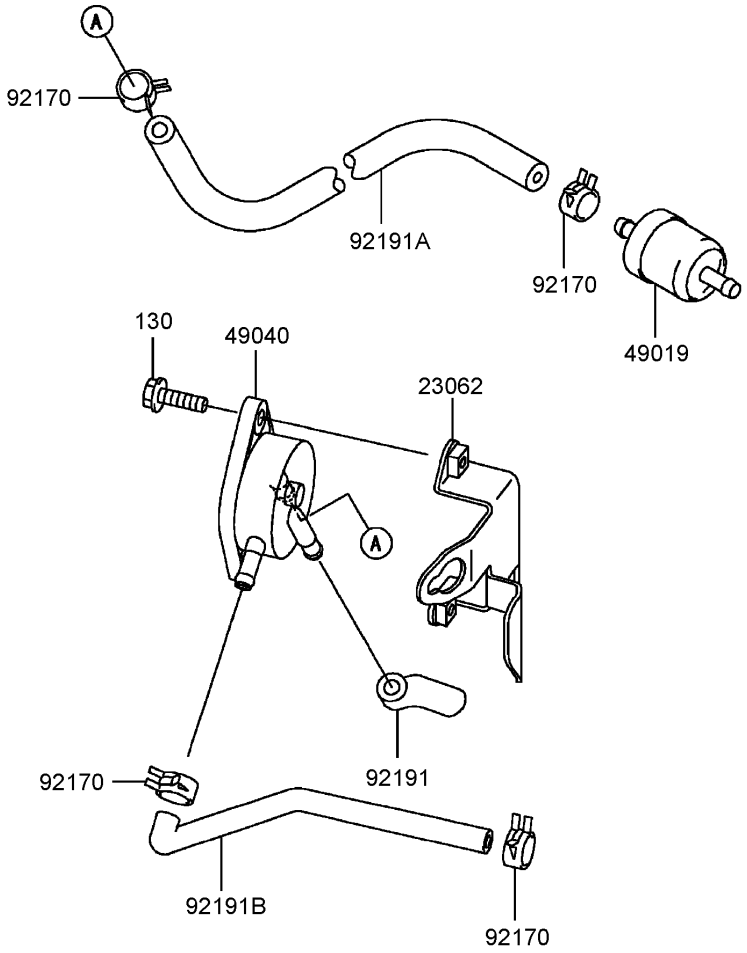


Fuel Tank and Fuel Valve Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹23062	23062-7004-9H	1	Bracket
❹49019	49019-7001	1	Filter-Fuel
❹49040	49040-7001	1	Pump-Fuel
❹92170	92170-2088	1	Clamp
❹92191	92191-7002	1	Tube
❹92191A	92191-7003	1	Tube (6.35X12.7X160)
❹92191B	92191-7004	1	Tube
❹130	130B0620	1	Bolt-Flanged

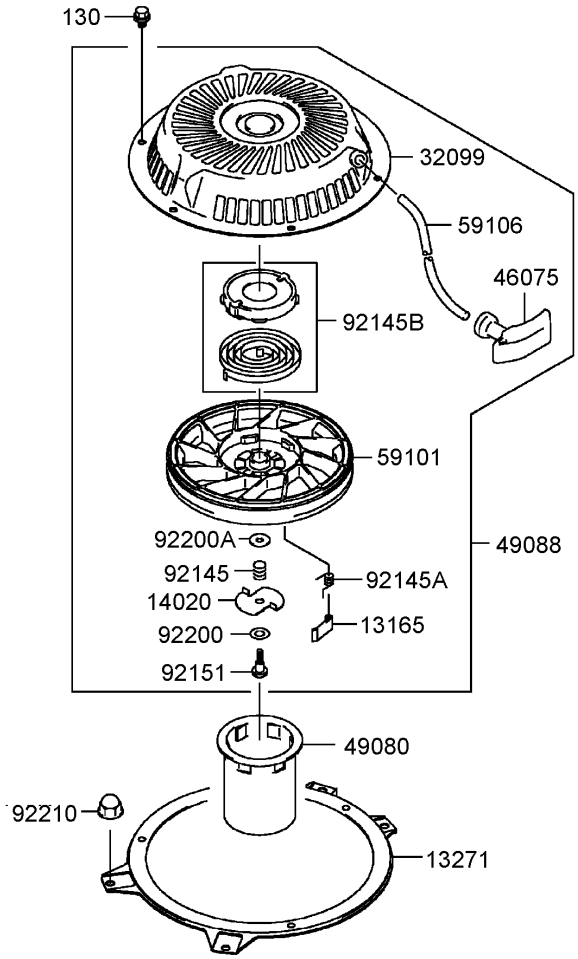

Starter Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹13165	13165-7001	1	Pawl-Starter, Recoil
❹13271	13271-7003-9H	1	Plate
❹14020	14020-7001	1	Retainer
❹32099	32099-7002	1	Case-Recoil, Starter
❹46075	46075-7001	1	Grip-Recoil, Starter
❹49080	49080-7001	1	Pulley-Starting
❹49088	49088-7013	1	Starter-Recoil
❹59101	59101-7001	1	Reel-Recoil
❹59106	59106-7001	1	Rope
❹92145	92145-7006	1	Spring
❹92145A	92145-7007	1	Spring
❹92145B	92145-7008	1	Spring
❹92151	92151-7008	1	Bolt
❹92200	92200-7004	1	Washer
❹92200A	92200-7005	1	Washer
❹92210	92210-0003	1	Nut
❹130	130B0608	1	Bolt-Flanged

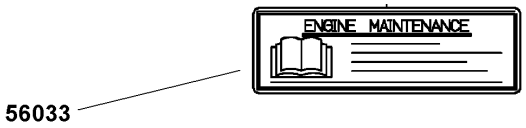

56033



56070

56080



56080A



Label Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
❹56033	56033-7001	1	Label-Manual
❹56070	56070-7001	1	Label-Warning
❹56080	56080-2077	1	Label-Brand
❹56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 30682 - ProLine Walk-Behind Mower, Fixed Deck, Pistol Grip, Gear Drive with 32in Cutting Unit

Product Name	Model/Part
Atomic Blade and Decal Assembly	104-8595
Blade-16.25 Inch (6 Pack)	108-1119
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES

NOTES

NOTES


TORO®