



ProLine Walk-Behind Mower Fixed Deck, T-Bar, Gear Drive with 32in Cutting Unit

Model No. 30692 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel Tank Assembly	 3	Cooling Equipment Assembly Kawasaki Model FH430V-AS25	 17
Transmission Drive Assembly	 4	Electric Equipment Assembly Kawasaki Model FH430V-AS25	 18
Drive Wheel and Brake Assembly	 6	Control Equipment Assembly Kawasaki Model FH430V-AS25	 19
Handle and Control Assembly	 7	Carburetor Assembly Kawasaki Model FH430V-AS25	 20
Deck and Shield Assembly	 8	Air Filter and Muffler Assembly Kawasaki Model FH430V-AS25	 21
Deflector Assembly No. 107-4140	 9	Fuel Tank and Fuel Valve Assembly Kawasaki Model FH430V-AS25	 22
Idler Arm and Caster Wheel Assembly	 10	Starter Assembly Kawasaki Model FH430V-AS25	 23
Spindle and Blade Assembly	 12	Label Assembly Kawasaki Model FH430V-AS25	 24
Cylinder and Crankcase Assembly Kawasaki Model FH430V-AS25	 13	Attachments and Accessories List	 25
Piston and Crankshaft Assembly Kawasaki Model FH430V-AS25	 14		
Valve and Camshaft Assembly Kawasaki Model FH430V-AS25	 15		
Lubrication Equipment Assembly Kawasaki Model FH430V-AS25	 16		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- ❶ Not serviced separately
- ❷ Optional Equipment
- ❸ Obtain from your local Kawasaki dealer

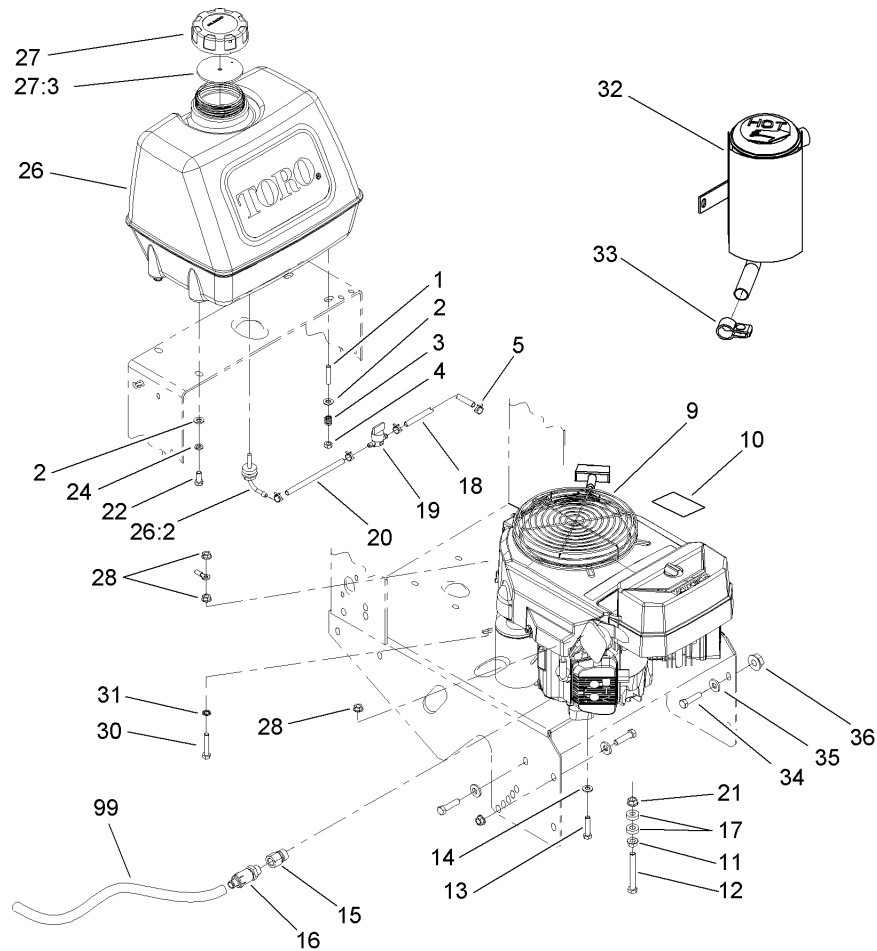

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
①9		1	Engine-Kawasaki, FH430V-As25
10	106-0699	1	Decal-Warning, Hot Surfaces
11	3290-357	1	Nut-HHF, Whiz
12	323-14	1	Screw-HH
13	322-7	3	Screw-HH
14	1-303334	3	Washer-Spring
15	103-1966	1	Adapter
16	92-6877	1	Valve-Drain, Oil
17	98-5975	2	Washer-Belleville
18	109-0293	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	109-0306	1	Hose-Fuel
21	32128-21	1	Nut-HF
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas


Ref	Part No.	Qty.	Description
28	32128-20	5	Nut-HF
30	322-9	1	Screw-HH
31	3254-2	1	Washer-Lock, Internal
32	100-6467	1	Muffler
33	103-5465	1	Clamp-Muffler
34	323-8	8	Screw-HH
35	98-5975	8	Washer-Belleville
36	3290-357	8	Nut-HHF, Whiz
99	103-1964	1	Hose-Drain, Oil

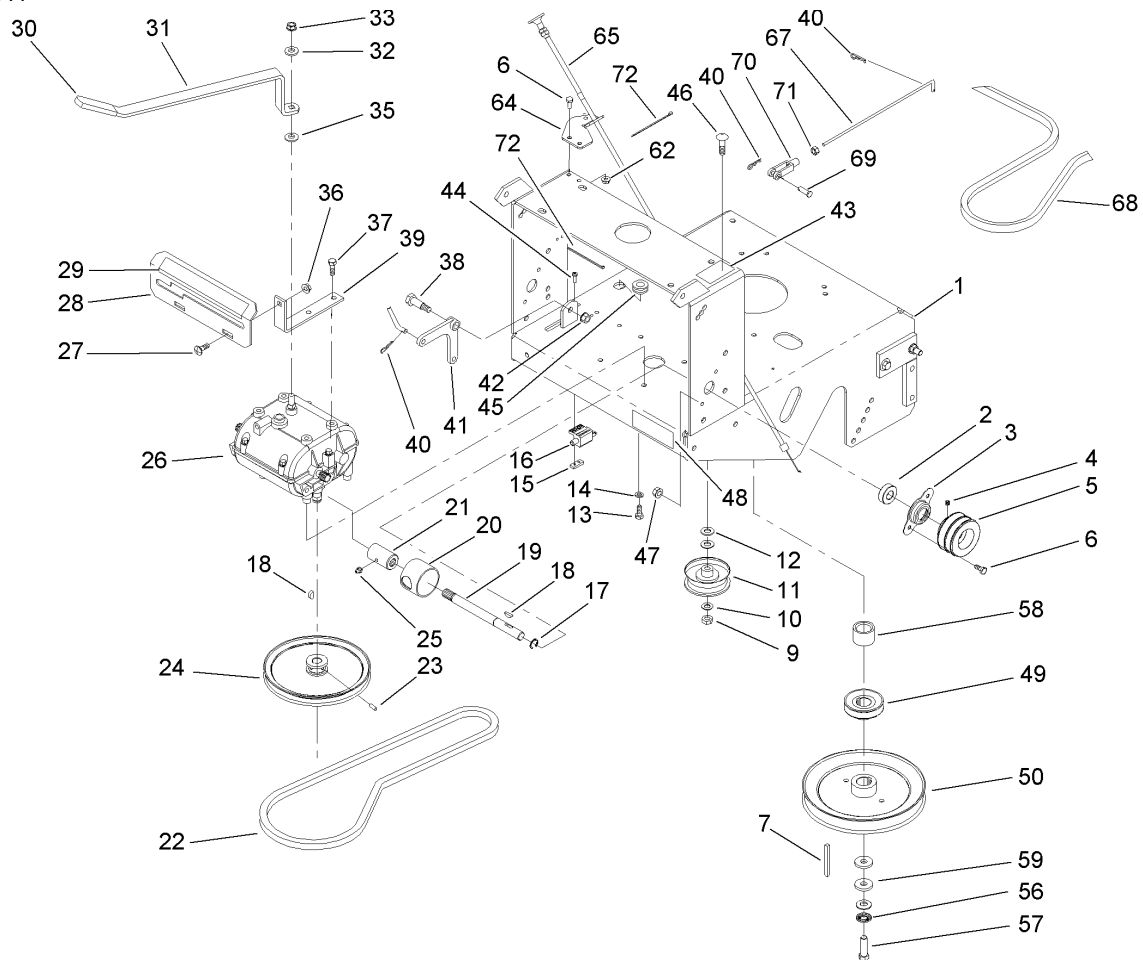

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key-Machine
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513152	1	Switch-Closed, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave

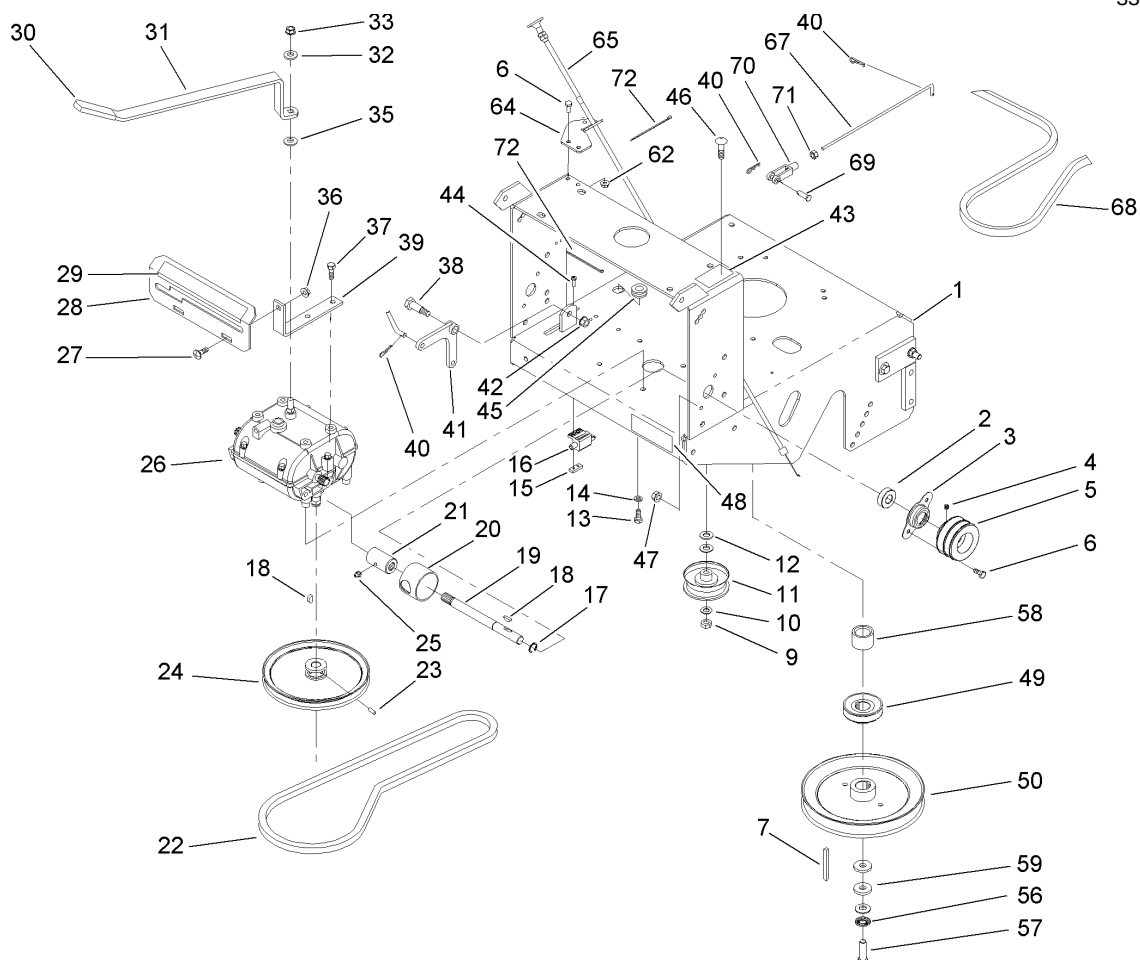

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description				
56	1-603610	2	Washer-Spring				
57	3212-6	1	Screw-HH				
58	1-633453	1	Spacer-Clutch				
59	1-373034	2	Washer				
62	32128-33	2	Nut-HF				
64	103-1797-01	1	Bracket-Cable, Choke				
65	103-1796	1	Cable-Choke				
67	1-323303	1	Linkage-Arm				
68	1-323745	1	Belt-Blade, Drive				
69	1-808280	1	Pin-Clevis				
70	1-303105	1	Yoke-Adjustable				
71	3219-2	1	Nut-Hex				
72	1-303335	2	Tie-Plastic				

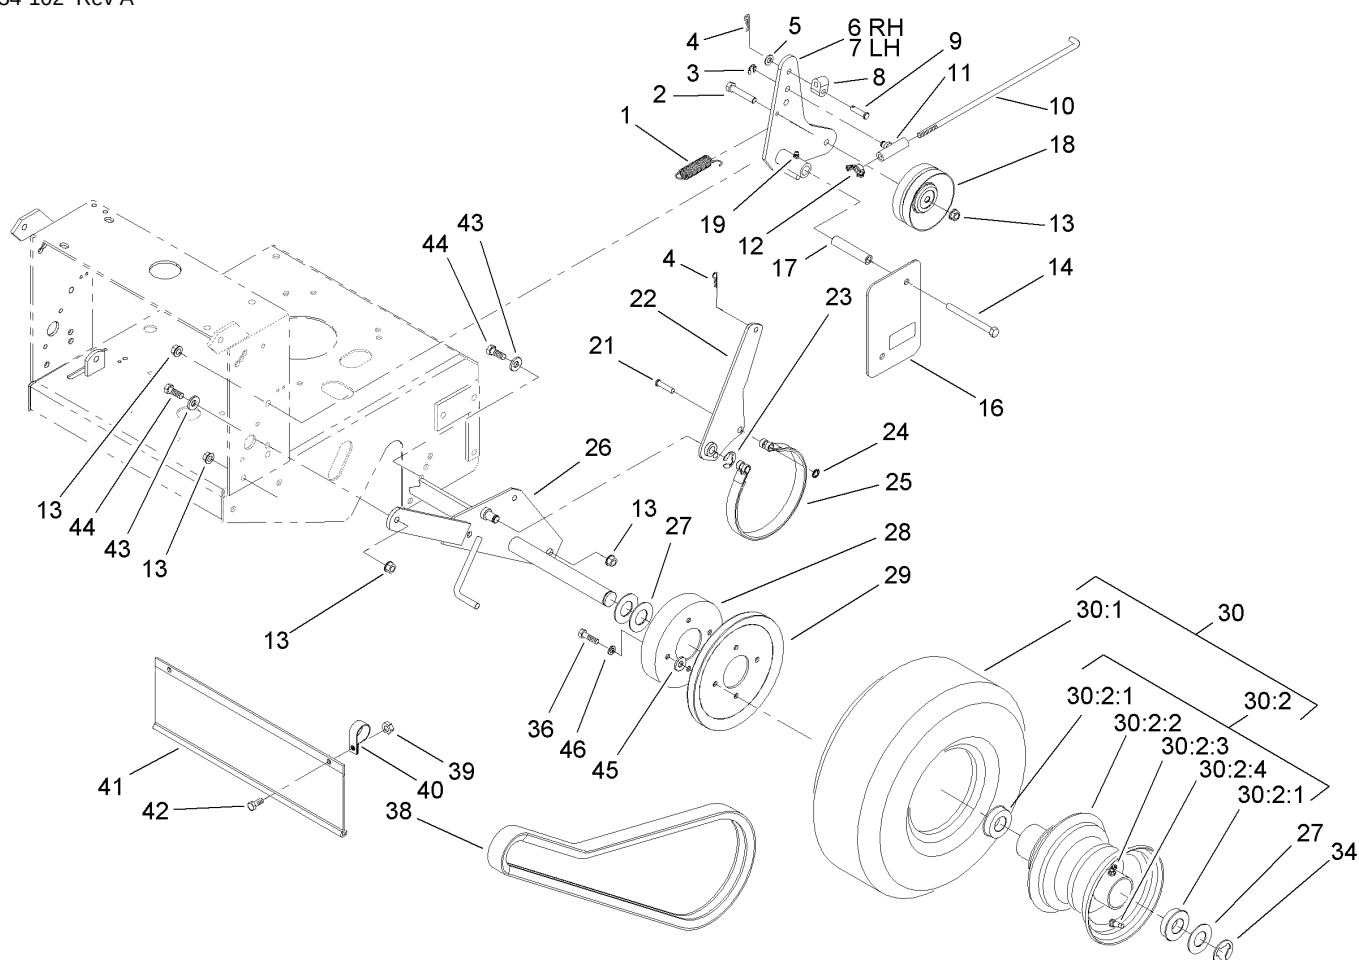

Drive Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Hair
5	3256-23	2	Washer-Flat
6	110-4925-03	1	RH Idler Arm ASM
7	110-4926-03	1	LH Idler Arm ASM
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
19	302-19	2	Fitting-Grease
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322232-03	1	Axle ASM


Ref	Part No.	Qty.	Description
27	1-523157	6	Washer-Spacer, 14GA
27	1-543436	8	Washer-Spacer, 16GA
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive
30		2	Wheel And Tire ASM
30:1	1-323361	1	Tire
30:2	1-323360	1	Wheel And Hub ASM
30:2:1	1-323329	2	Bearing-Flanged
30:2:2		1	Rim ASM
30:2:3		1	Fitting-Grease
30:2:4		1	Valve Stem And Cap
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock

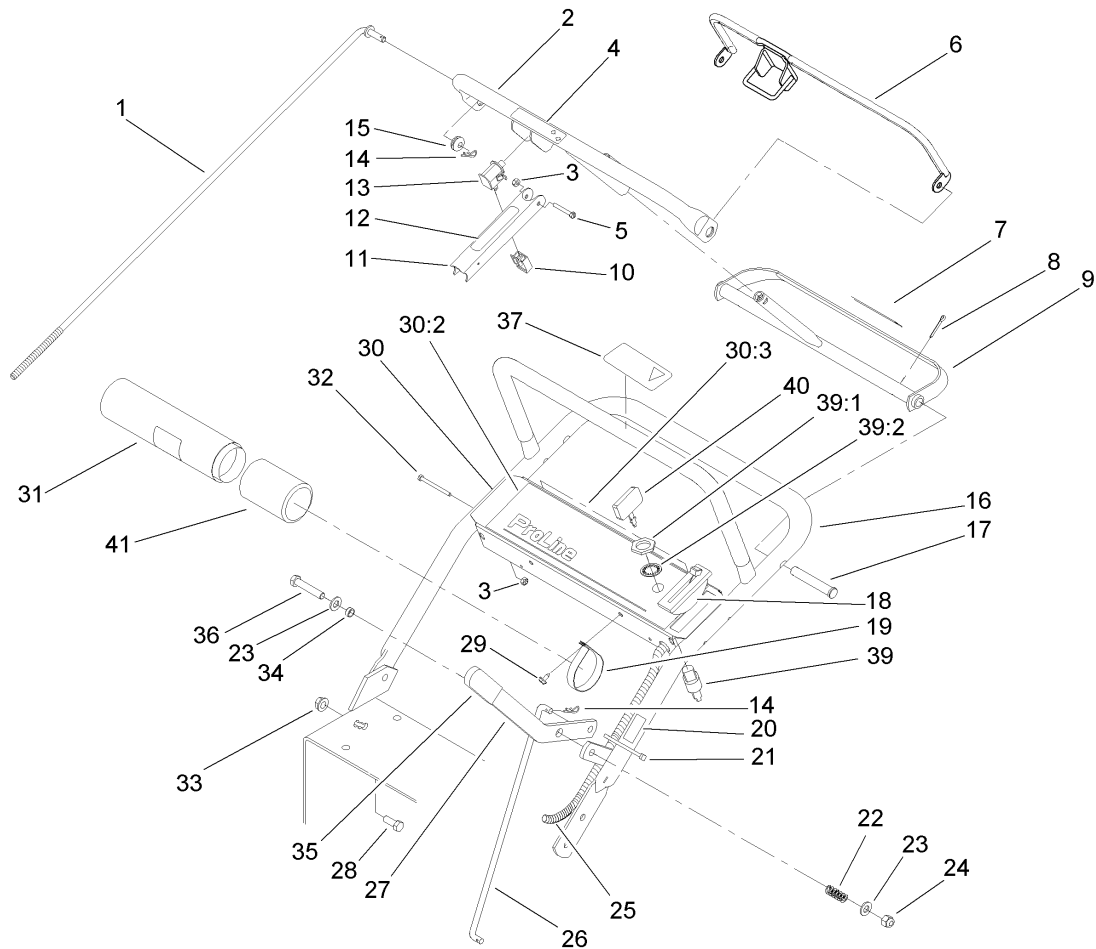

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	98-3282	2	Rod-Control
2	95-5522-03	1	Control Bar ASM
3	3296-2	5	Nut-Lock
4	82-2290	1	Decal
5	32105-1	1	Screw-SHH
6	82-7680-03	1	Bail ASM
7	82-2280	1	Decal
8	3272-11	2	Pin-Cotter
9	99-8501-03	1	Control-Pivot
10	218-595	1	Connector-Body
11	98-3261-03	1	Lever-Brake, Parking
12	98-3266	1	Decal
13	740275	1	Switch-Seat
14	1-806003	3	Pin-Hair
15	237-141	2	Grommet-Rubber
16	98-3267-03	1	Upper Handle ASM
17	283-55	2	Pin-Clevis
18	100-6450	1	Control-Throttle
19	2412-120	2	R-Clamp
20	95-5537	1	Decal-Engage, Deck
21	1-303335	1	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-24	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI

Ref	Part No.	Qty.	Description
25	106-0678	1	Harness-Wire
26	98-3279	1	Linkage-Drive, Blade
27	98-3287-03	1	Lever-Engagement, Blade
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	110-6905	1	Control Panel ASM
30:2	110-6916	1	Decal-Panel, Control
30:3	105-0884	1	Decal-Danger
31	104-7050	1	Housing-Manual
32	32105-14	4	Screw-SHH
33	32128-21	4	Nut-HF
34	99-8509	1	Spacer
35	1-303020	1	Grip-Lever
36	323-10	1	Screw-HH
37	98-4387	1	Decal-Protection, Ear
39	29-5560	1	Switch-On / Off
39:1	218-461	1	Nut-HH
39:2	3254-5	1	Washer-Tooth
40	63-8360	1	Key-Ignition
41	104-7048	1	Cap-Housing

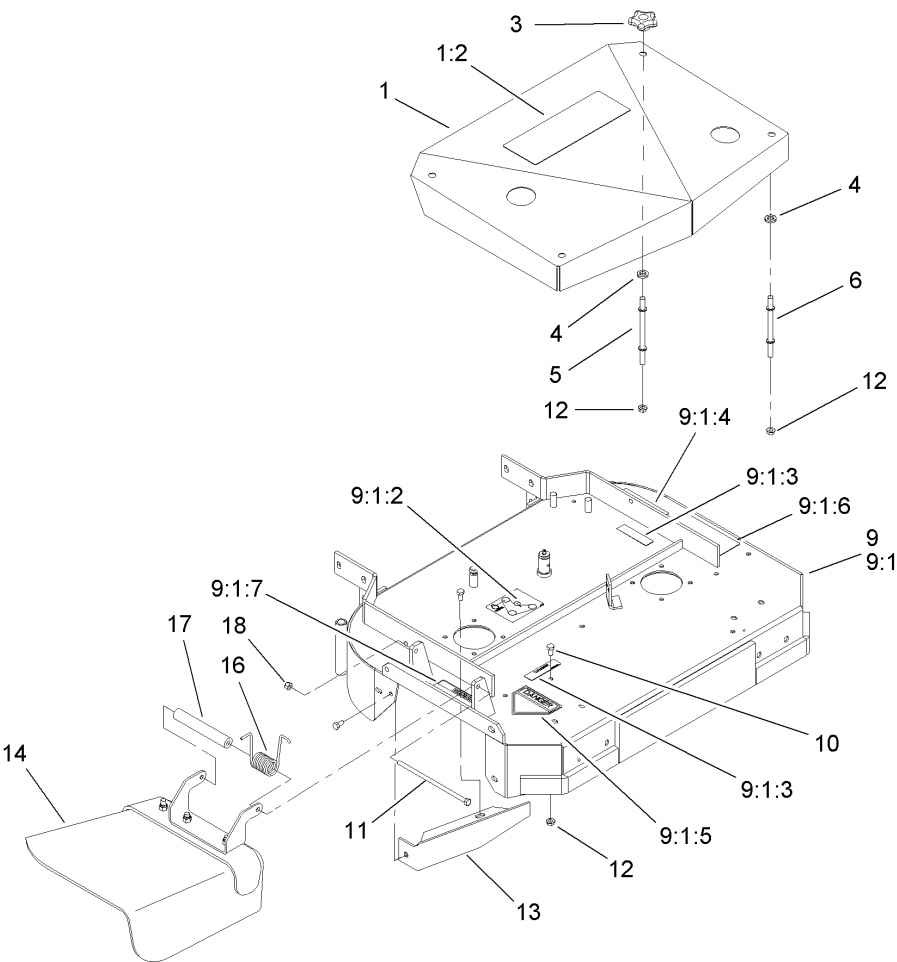

Deck and Shield Assembly

Ref	Part No.	Qty.	Description				
1	1-324407	1	Shield-Belt				
1:2	106-0710	1	Decal				
3	106-4161	4	Knob-Handle				
4	1-323417	4	Washer				
5	1-303536	2	Stud-Shield, Belt (Long)				
6	1-303537	2	Stud-Shield, Belt (Short)				
9	110-6901	1	32 Inch Deck ASM				
9:1		1	Deck				
9:1:2	98-3296	1	Decal-Routing, Belt				
9:1:3	98-5954	2	Decal-Missing, Cover				
9:1:4	98-5130	1	Decal-Torque, Bolt				
9:1:5	43-8480	1	Decal-Danger				
9:1:6	66-1340	1	Decal-Danger				
9:1:7	104-8569	1	Decal-Warning				
10	322-2	7	Screw-HH				
11	322-50	1	Screw-HH				
12	32128-20	11	Nut-HF				
13	1-302189-01	1	Baffle-Dogleg				
14	107-4140	1	Deflector ASM				
16	104-8554	1	Spring-Torsion				
17	105-4622	1	Spacer				
18	3296-29	1	Nut-Lock, NI				

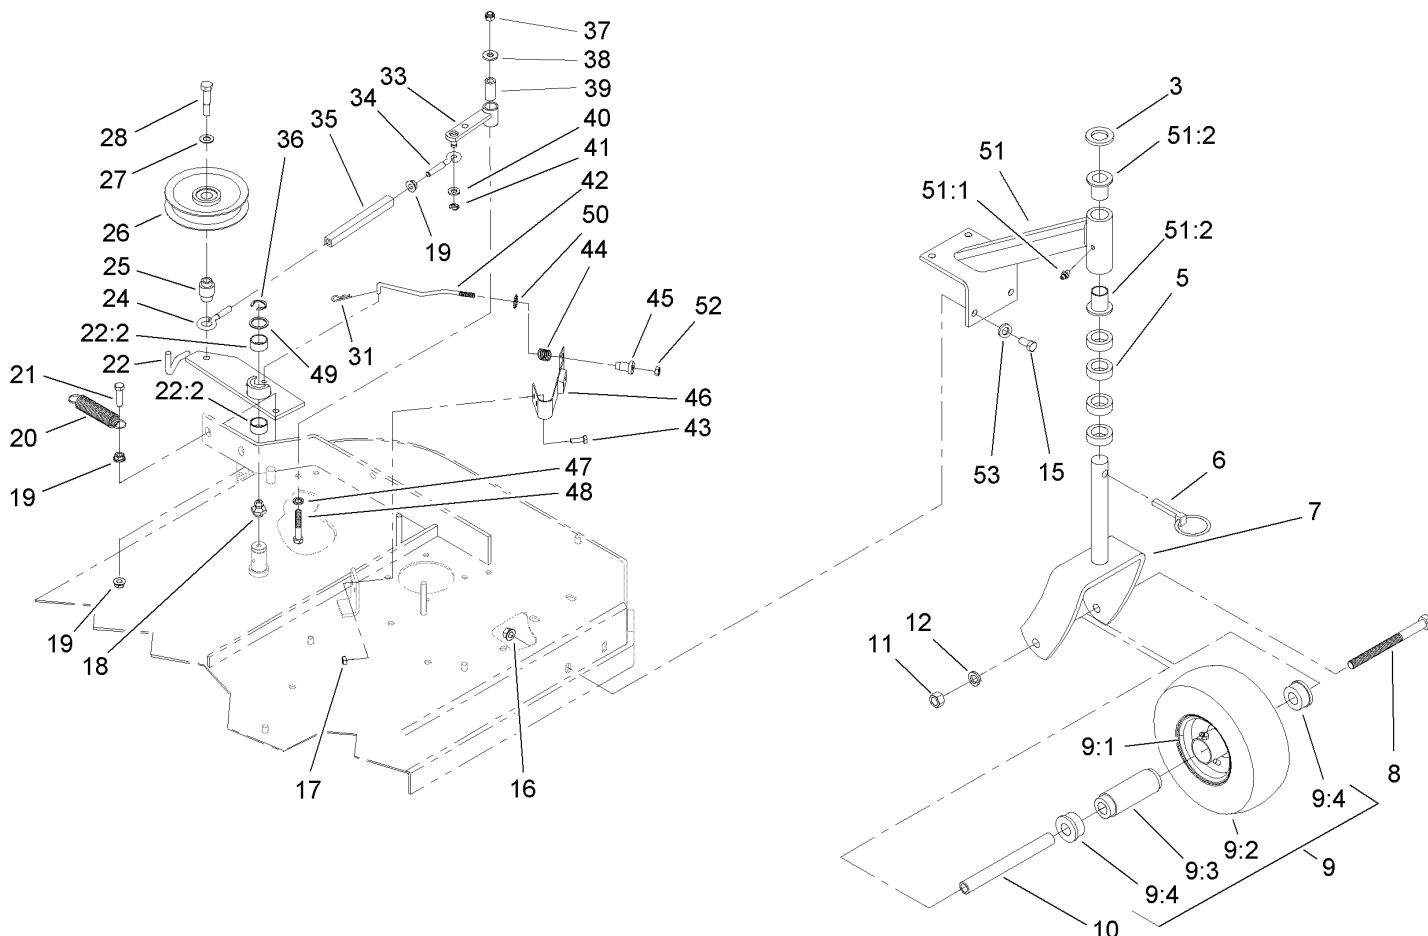


Idler Arm and Caster Wheel Assembly

Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:1		1	Rim
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement


Ref	Part No.	Qty.	Description
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad / Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM
51:1	302-52	1	Fitting-Grease



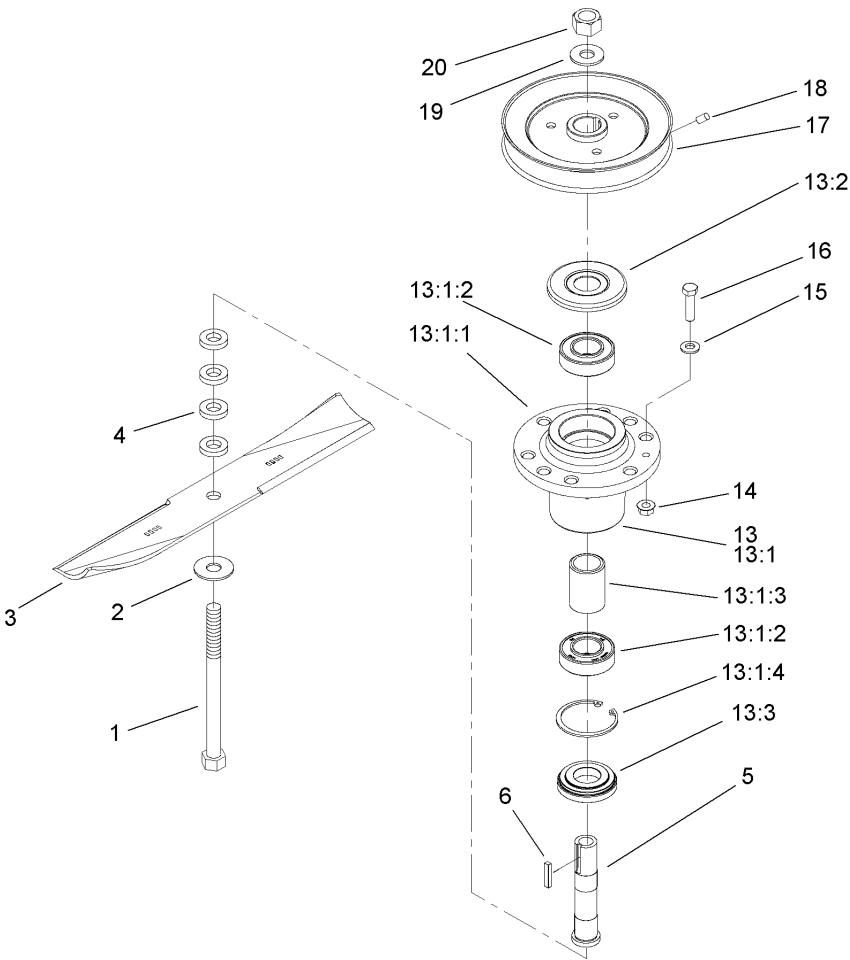


Spindle and Blade Assembly

Ref	Part No.	Qty.	Description				
1	1-800861	2	Screw-Cap, HH				
2	1-513208	2	Washer-Spring				
3	103-2507	2	Blade-Lift, Low				
23	103-2527	2	Blade-Notched				
4	1-323539	8	Spacer-Drive, Blade				
5	1-323529	2	Tube-Spindle, Short				
6	1-807267	2	Key				
13	107-4065	2	Cutter Housing ASM				
13:1		1	Housing-Cutter				
13:1:1	103-7975	1	Housing-Spindle				
13:1:2	103-2477	2	Bearing-Ball				
13:1:3	103-2534	1	Spacer-Bearing				
13:1:4	32120-8	1	Ring-Snap				
13:2	103-1330	1	Guard-Bearing, Top				
13:3	103-2535	1	Spacer-Guard, Bottom				
14	32128-20	8	Nut-HF				
15	1-303334	8	Washer-Spring				
16	322-6	8	Screw-HH				
17	1-403183	2	Sheave				
18	1-803310	2	Screw-Set				
19	1-323339	2	Washer-Retainer, Sheave				
20	3219-6	2	Nut-Hex				

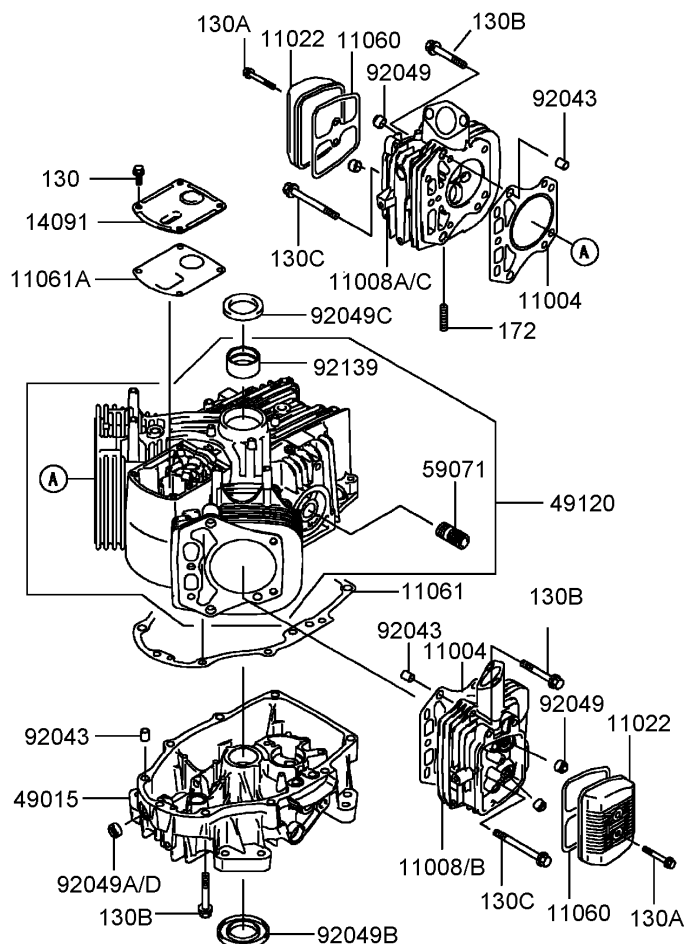


Cylinder and Crankcase Assembly Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
11004	11004-7008	1	Gasket-Head	172	172G0818	1	Bolt-Stud
11008	11008-7011	1	Head-Comp-Cylinder, No.2				
11008A	11008-7017	1	Head-Comp-Cylinder, No.1				
11008B	11008-7021	1	Head-Cylinder, No. 2				
11008C	11008-7022	1	Head-Cylinder, No. 1				
11022	11022-7003	1	Case-Rocker				
11060	11060-7001	1	Gasket-Case, Rocker				
11061	11061-7007	1	Gasket-Cover, Crankcase				
11061A	11061-7008	1	Gasket-Breather				
14091	14091-7007	1	Cover				
49015	49015-7032	1	Cover-Crankcase				
49120	49120-7015	1	Crankcase				
59071	59071-2079	1	Joint				
92043	92043-7001	1	Pin				
92049	92049-7001	1	Seal-Oil, Rvc2 (6X11X10.2)				
92049A	92049-7005	1	Seal-Oil, So (8X14X5 Hs)				
92049B	92049-7015	1	Seal-Oil, Sd (35X62X8 L Hs)				
92049C	92049-7016	1	Seal-Oil, Sd (35X48X8 R Hs)				
92049D	92049-7019	1	Seal-Oil, So (8X14X5 Hs)				
92139	92139-7002	1	Bushing				
130	130B0612	1	Bolt-Flanged				
130A	130B0640	1	Bolt-Flanged				
130B	130T0850	1	Bolt-Flanged				
130C	130T0875	1	Bolt-Flanged				

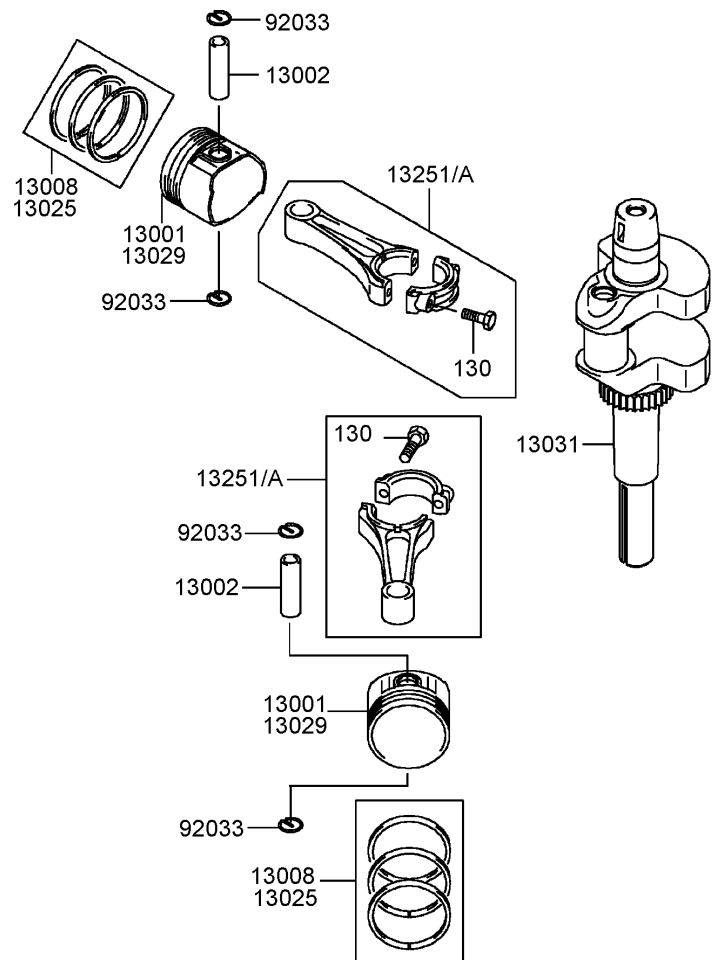


Piston and Crankshaft Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
❶13001	13001-7009	1	Piston-Engine				
❶13002	13002-7001	1	Pin-Piston				
❶13008	13008-7001	1	Ring Set-Piston				
❶13025	13025-7003	1	Ring Set-Piston (L,0.50)				
❶13029	13029-7005	1	Piston-Engine (L,0.50)				
❶13031	13031-7033	1	Crankshaft				
❶13251	13251-7007	1	Connecting Rod ASM				
❶13251A	13251-7008	1	Connecting Rod ASM (U/S=0.50)				
❶92033	92033-7005	1	Ring-Snap				
❶130	130G0630	1	Bolt-Flanged				

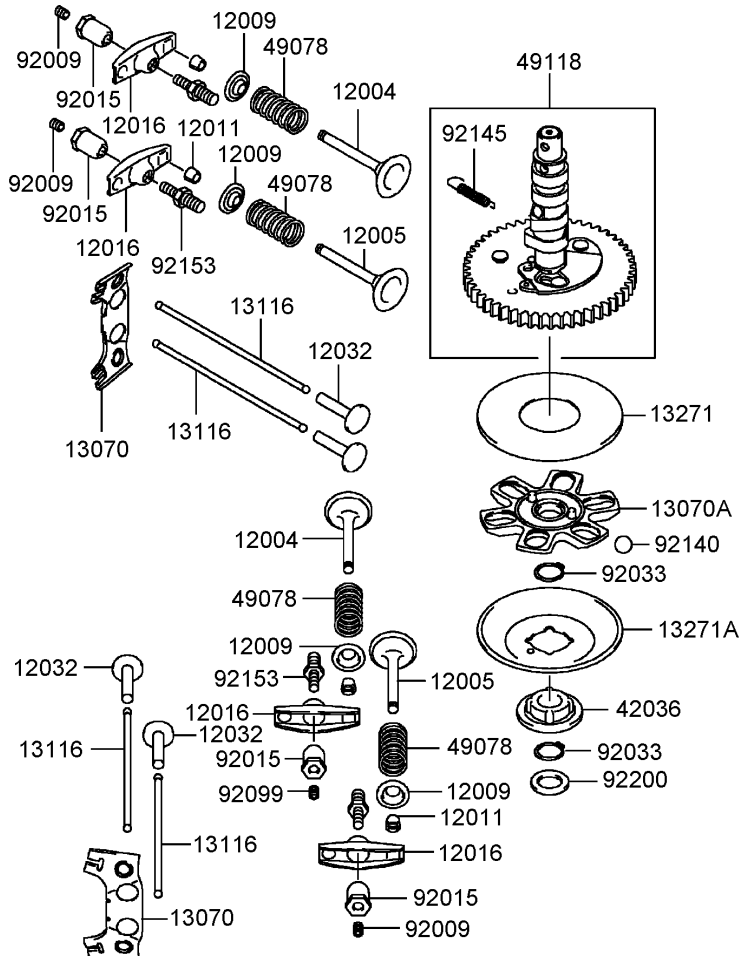

Valve and Camshaft Assembly
Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description				
❶12004	12004-7003	1	Valve-Intake				
❶12005	12005-7003	1	Valve-Exhaust				
❶12009	12009-7001	1	Retainer-Spring, Valve				
❶12011	12011-2056	1	Collet				
❶12016	12016-7001	1	Arm-Rocker				
❶12032	12032-7001	1	Tappet				
❶13070	13070-7001	1	Guide				
❶13070A	13070-7004	1	Guide				
❶13116	13116-2057	1	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036	42036-7009	1	Sleeve				
❶49078	49078-7001	1	Spring-Valve, Engine				
❶49118	49118-7009	1	Camshaft				
❶92009	92009-2341	1	Screw				
❶92015	92015-2253	1	Nut				
❶92033	92033-7001	1	Ring-Snap				
❶92140	92140-7002	1	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	1	Bolt				
❶92200	92200-7001	1	Washer				

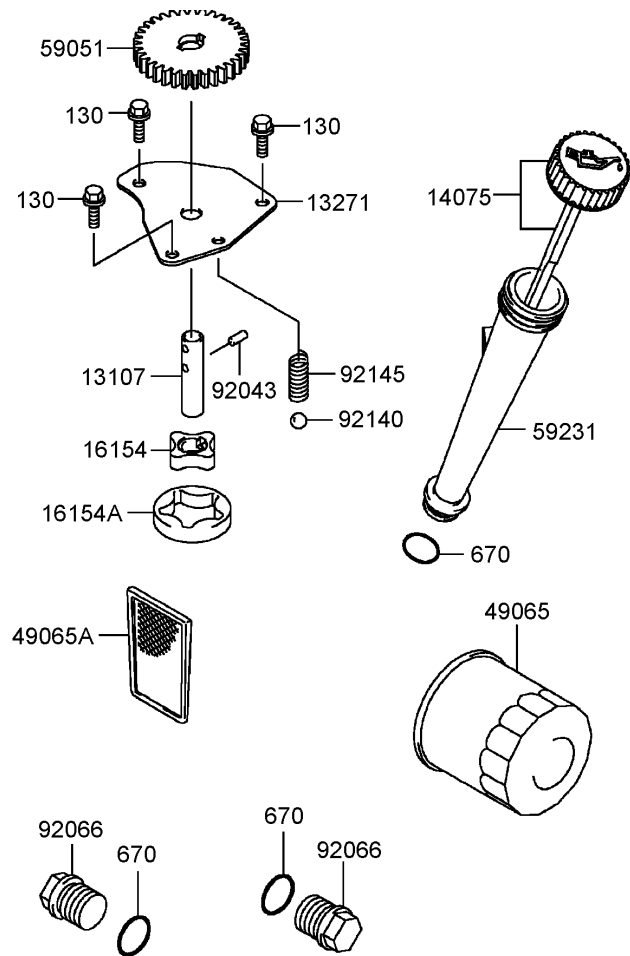

Lubrication Equipment Assembly


Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
⑤13107	13107-7009	1	Shaft				
⑤13271	13271-7017	1	Plate				
⑤14075	14075-7009	1	Cap ASM				
⑤16154	16154-2053	1	Rotor-Pump (In)				
⑤16154A	16154-2054	1	Rotor-Pump (Out)				
⑤49065	49065-2078	1	Filter-Oil				
⑤49065A	49065-7004	1	Filter-Oil				
⑤59051	59051-7011	1	Gear-Spur				
⑤59231	59231-7003	1	Filler				
⑤92043	92043-7003	1	Pin				
⑤92066	92066-7003	1	Plug				
⑤92140	92140-7003	1	Ball				
⑤92145	92145-7002	1	Spring				
⑤130	130B0612	1	Bolt-Flanged				
⑤670	670D2016	1	O-Ring (16Mm)				

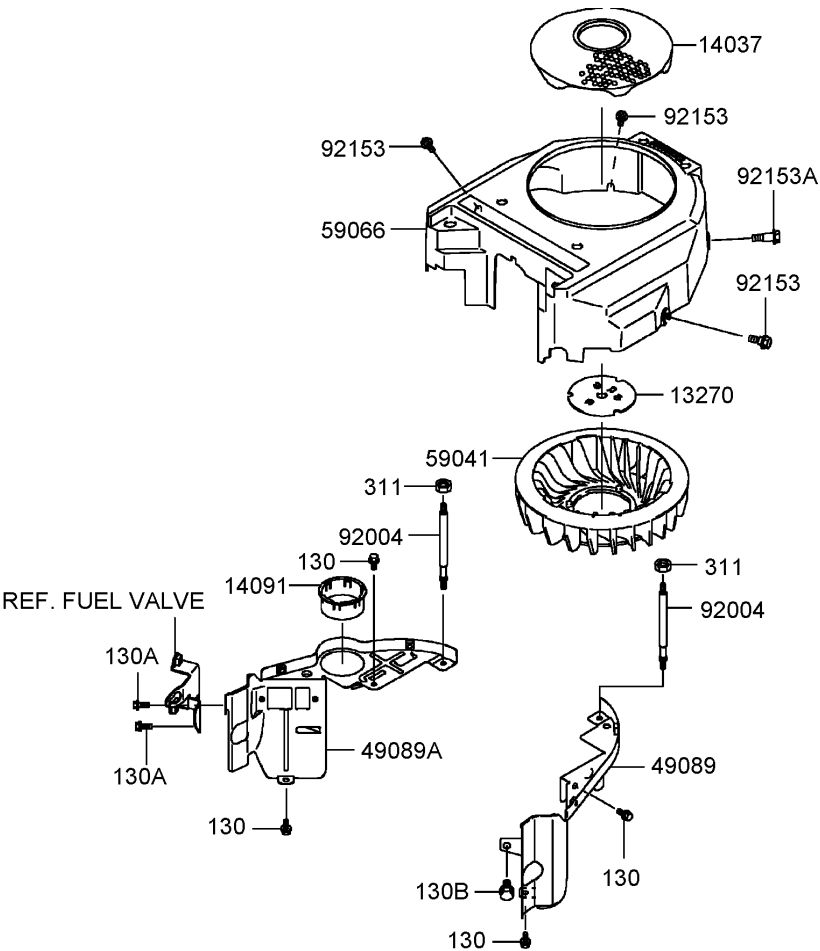

Cooling Equipment Assembly
Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7021-9H	1	Screen				
❸14091	14091-7009	1	Cover				
❸49089	49089-7044	1	Shroud-Engine				
❸49089A	49089-7045	1	Shroud-Engine				
❸59041	59041-7010	1	Fan				
❸59066	59066-7023	1	Housing-Fan				
❸92004	92004-7007	1	Stud				
❸92153	92153-7007	1	Bolt				
❸92153A	92153-7008	1	Bolt				
❸130	130B0612	1	Bolt-Flanged				
❸130A	130B0616	1	Bolt-Flanged				
❸130B	130B0816	1	Bolt-Flanged				
❸311	311F0600	1	Nut-Hex				

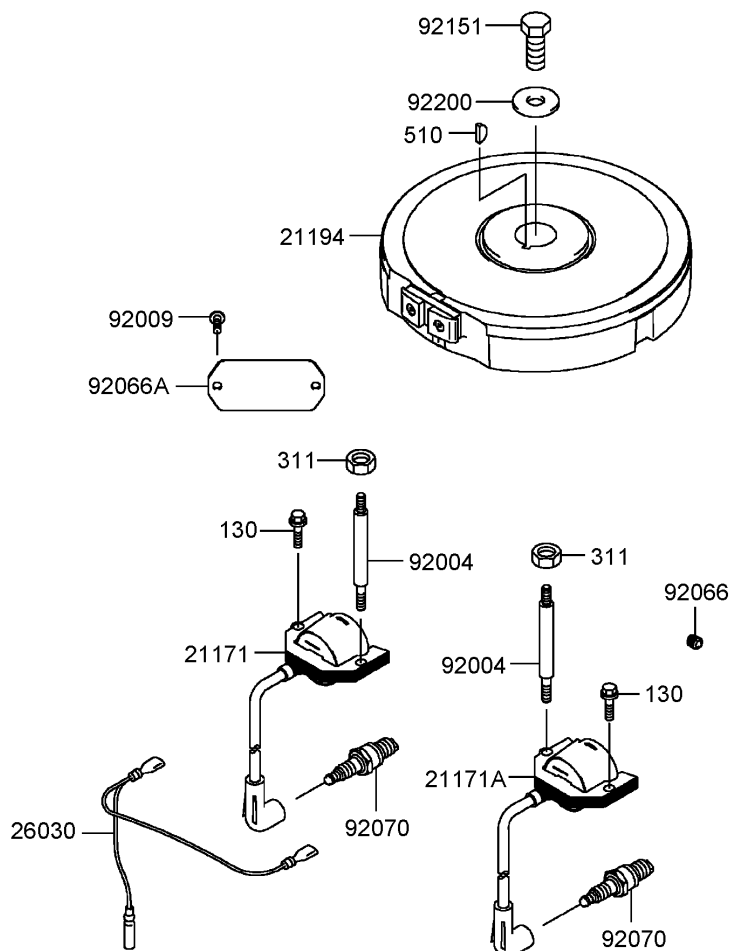

Electric Equipment Assembly Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
⑨21171	21171-7013	1	Ignition Coil ASM				
⑨21171A	21171-7014	1	Ignition Coil ASM				
⑨21194	21194-7013	1	Flywheel-Comp				
⑨26030	26030-7001	1	Harness				
⑨92004	92004-7008	1	Stud				
⑨92009	92009-2308	1	Screw				
⑨92066	92066-7002	1	Plug				
⑨92066A	92066-7005	1	Plug				
⑨92070	92070-7003	1	Plug-Spark (Rcj8Y, Solid)				
⑨92151	92151-2097	1	Bolt (12X30)				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	1	Bolt-Flanged				
⑨311	311F0600	1	Nut-Hex				
⑨510	510A5100	1	Key-Woodruff				


19

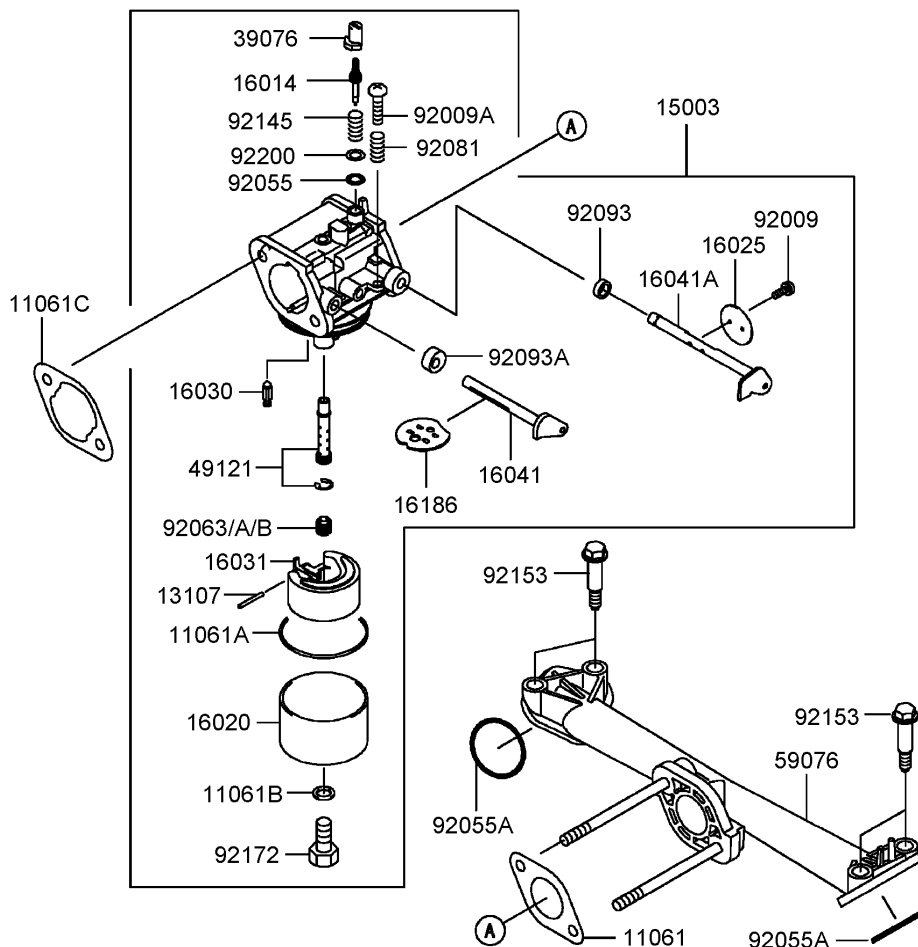

Carburetor Assembly Kawasaki Model FH430V-AS25


Ref	Part No.	Qty.	Description
①11061	11061-7004	1	Gasket-Insulator
①11061A	11061-7009	1	Gasket-Chamber
①11061B	11061-7010	1	Gasket-Screw
①11061C	11061-7018	1	Gasket-Cleaner, Air
①13107	13107-7018	1	Shaft
①15003	15003-7061	1	Carburetor ASM
①16014	16014-7002	1	Screw-Pilot
①16020	16020-7003	1	Chamber-Float
①16025	16025-7006	1	Valve-Throttle
①16030	16030-7003	1	Valve-Float
①16031	16031-7002	1	Float
①16041	16041-7016	1	Shaft-Choke, Carburetor
①16041A	16041-7018	1	Shaft-Throttle, Carburetor
①16186	16186-7002	1	Choke Valve ASM
①39076	39076-7001	1	Limiter
①49121	49121-7001	1	Nozzle-Main
①59076	59076-7005	1	Manifold-Intake
①92009	92009-2083	1	Screw
①92009A	92009-2349	1	Screw
①92055	92055-2174	1	O-Ring
①92055A	92055-7007	1	O-Ring (Id=31)
①92063	92063-7026	1	Jet-Main, No. 88
①92063A	92063-7028	1	Jet-Main, No. 85
①92063B	92063-7029	1	Jet-Main, No. 82

Ref	Part No.	Qty.	Description
①92081	92081-2234	1	Spring
①92093	92093-2100	1	Seal
①92093A	92093-7003	1	Seal
①92145	92145-7015	1	Spring
①92153	92153-7009	1	Bolt
①92172	92172-7002	1	Screw
①92200	92200-7014	1	Washer

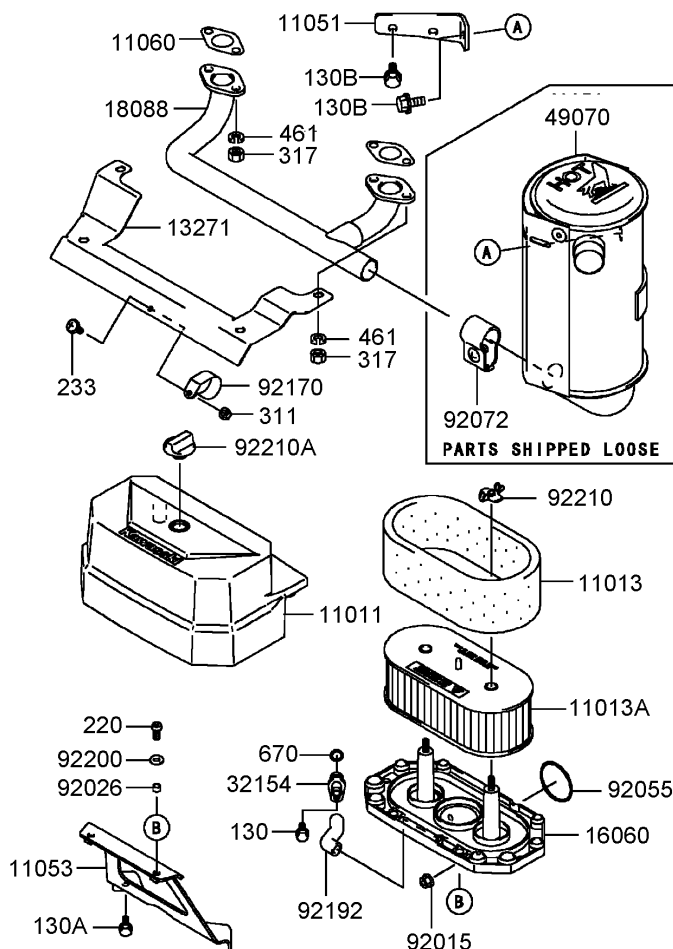



Air Filter and Muffler Assembly Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③11011	11011-7035	1	Case-Filter, Air	③220	220B0614	1	Screw-Pan (Cross)
③11013	11013-7025	1	Element-Filter, Air	③233	233B0416	1	Screw
③11013A	11013-7031	1	Element-Filter, Air	③311	311B0400	1	Nut-Hex
③11051	11051-7005-9H	1	Bracket	③317	317R0800	1	Nut-Hex
③11053	11053-7022	1	Bracket	③461	461F0800	1	Washer-Spring
③11060	11060-7021	1	Gasket-Muffler	③670	670B2010	1	O-Ring (10Mm)
③13271	13271-7022	1	Plate				
③16060	16060-7016	1	Pipe-Intake				
③18088	18088-7001	1	Pipe-Exhaust				
③32154	32154-7006	1	Pipe				
③49070	49070-7015	1	Muffler				
③92015	92015-1193	1	Nut				
③92026	92026-7001	1	Spacer (6.2X7.9X5)				
③92055	92055-7015	1	Ring-O				
③92072	92072-7008	1	Band				
③92170	92170-7002	1	Clamp				
③92192	92192-7010	1	Tube				
③92200	92200-2070	1	Washer				
③92210	92210-7004	1	Nut				
③92210A	92210-7019	1	Nut				
③130	130B0610	1	Bolt-Flanged				
③130A	130B0612	1	Bolt-Flanged				
③130B	130B0816	1	Bolt-Flanged				

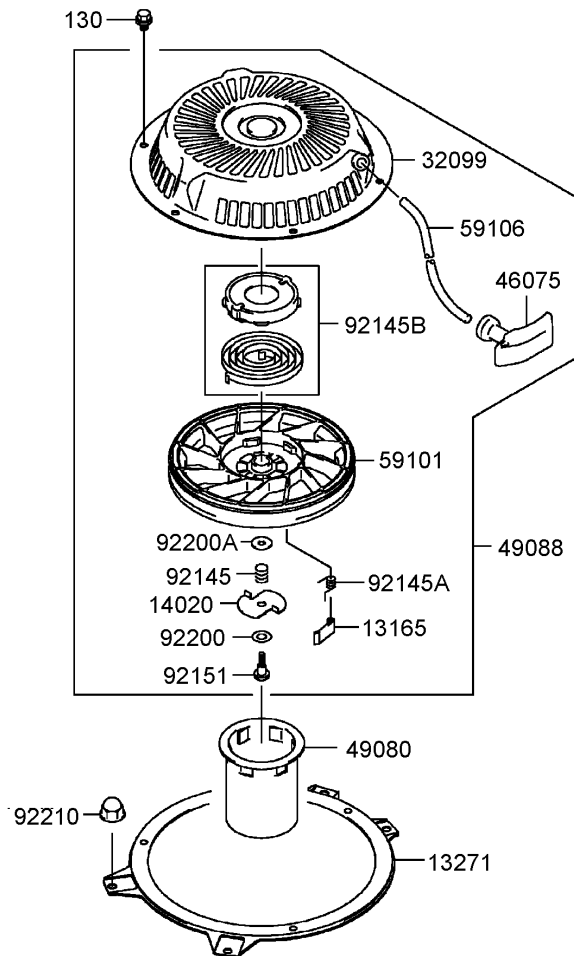

Starter Assembly
Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description				
13165	13165-7001	1	Pawl-Starter, Recoil				
13271	13271-7003-9H	1	Plate				
14020	14020-7001	1	Retainer				
32099	32099-7002	1	Case-Recoil, Starter				
46075	46075-7001	1	Grip-Recoil, Starter				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7013	1	Starter-Recoil				
59101	59101-7001	1	Reel-Recoil				
59106	59106-7001	1	Rope				
92145	92145-7006	1	Spring				
92145A	92145-7007	1	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				
92210	92210-0003	1	Nut				
130	130B0608	1	Bolt-Flanged				

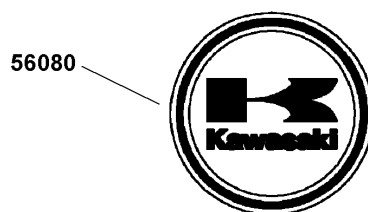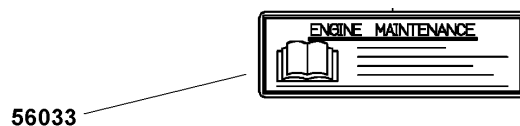

Label Assembly

Kawasaki Model FH430V-AS25

Ref	Part No.	Qty.	Description
③56033	56033-7001	1	Label-Manual
③56070	56070-7001	1	Label-Warning
③56080	56080-2077	1	Label-Brand
③56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 30692 - ProLine Walk-Behind Mower, Fixed Deck T-Bar Gear with 32in Cutting Unit

Product Name	Model/Part
Atomic Blade and Decal Assembly	104-8595
Blade-16.25 Inch (6 Pack)	108-1119
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES

NOTES

