



Mid-Size ProLine T-Bar Gear Drive 15 HP with 44in Side Discharge Mower

Model No. 30326 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine Installation Assembly	 3	Piston and Crankshaft Assembly Kawasaki	
Fuel Tank Assembly	 4	FH430V-BS28-R	 20
Lower Control Assembly	 5	Electric Equipment Assembly Kawasaki	
Transmission Drive Assembly	 6	FH430V-BS28-R	 21
Wheel Drive and Brake Assembly	 7	Valve and Camshaft Assembly Kawasaki	
Upper Handle Assembly	 8	FH430V-BS28-R	 22
Control Panel Assembly	 9	Cooling Equipment Assembly Kawasaki	
Carrier Frame Assembly	 10	FH430V-BS28-R	 24
Spindle, Pulley and Belt Assembly	 11	Control Equipment Assembly Kawasaki	
Spindle Assembly No. 106-0786	 12	FH430V-BS28-R	 26
Spindle Assembly No. 106-0784	 13	Carburetor Assembly Kawasaki FH430V-	
Deck Assembly	 14	BS28-R	 28
Deflector Assembly No. 107-4194	 15	Air Filter and Muffler Assembly Kawasaki	
Drive Belt and Tensioner Assembly	 16	FH430V-BS28-R	 30
Lubrication Equipment Assembly Kawasaki		Fuel Tank and Valve Assembly Kawasaki	
FH430V-BS28-R	 17	FH430V-BS28-R	 31
Cylinder and Crankcase Assembly Kawasaki		Starter Assembly Kawasaki FH430V-BS28-R	 32
FH430V-BS28-R	 18	Label Assembly Kawasaki FH430V-BS28-R	 34
		Attachments and Accessories List	 35

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes

- ❶ Not illustrated
- ❸ Obtain from your local Kawasaki dealer


- ❷ Not serviced separately

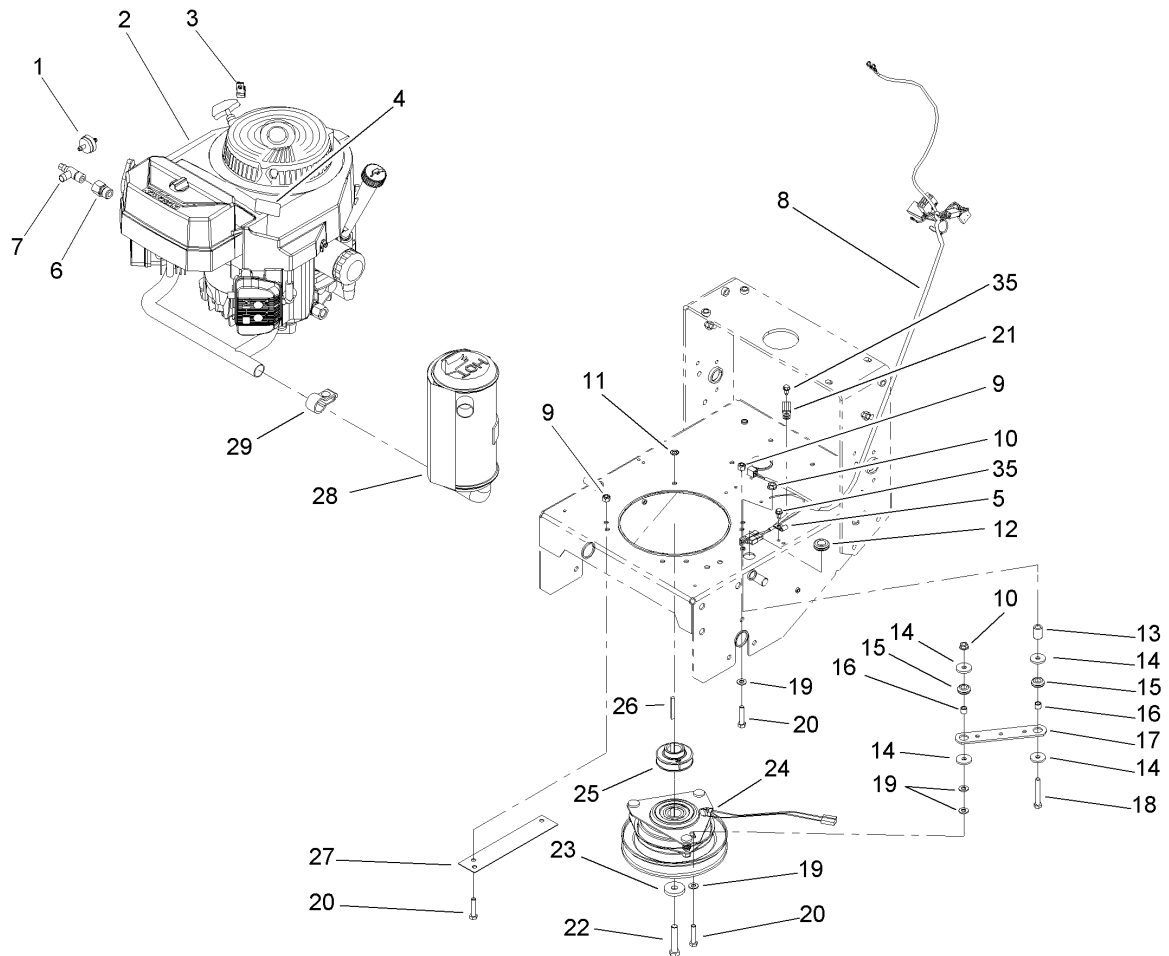

Engine Installation Assembly


Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
2		1	Engine-Kawasaki, FH430V-Bs28-R15Hp
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning, Hot Surfaces
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	103-1965	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
9	3296-29	4	Nut-Lock, NI
10	32128-20	2	Nut-HF
11	3255-8	1	Washer-Lock
12	237-124	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	5	Screw-HH
21	2412-134	1	R-Clamp
22	3212-9	1	Screw-HH
23	107-4136	1	Washer

Ref	Part No.	Qty.	Description
24	105-2635	1	Clutch / Brake
25	107-4112	1	Pulley-Drive
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
28	100-6467	1	Muffler
29	103-5465	1	Clamp-Muffler
35	12-3270	2	Screw
99	103-1964	1	Hose-Drain, Oil

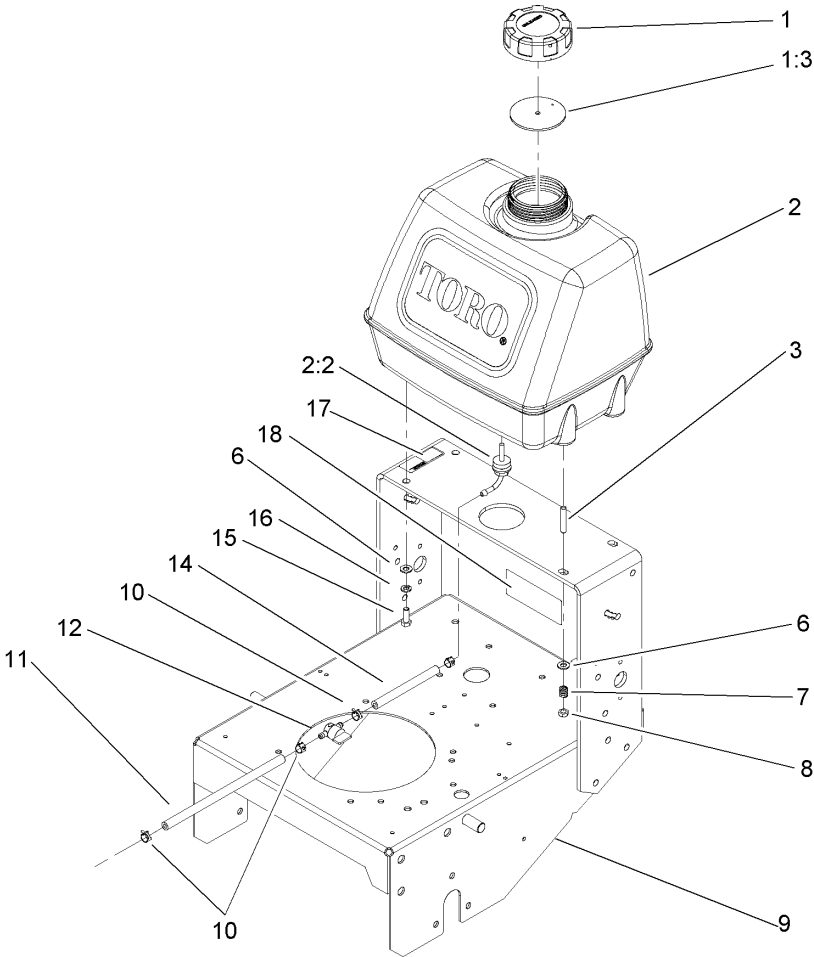


Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	106-0730	1	Fuel Tank ASM				
2:2	103-2605	1	Fitting-Fuel, Bulkhead				
3	104-8121	2	Stud-Threaded				
6	3256-23	4	Washer-Flat				
7	1-633349	2	Spring-Tank, Fuel				
8	3296-47	2	Nut-Lock, NI				
9	106-0546-01	1	Gear Frame ASM				
10	2412-98	4	Clamp				
11	110-4894	1	Hose-Fuel				
12	1-603770	1	Valve-Fuel				
14	107-0588	1	Hose-Fuel				
15	322-4	2	Screw-HH				
16	3253-4	2	Washer-Lock				
17	95-2814	1	Decal-Shut Off, Fuel				
18	98-0776	1	Decal-Caution				

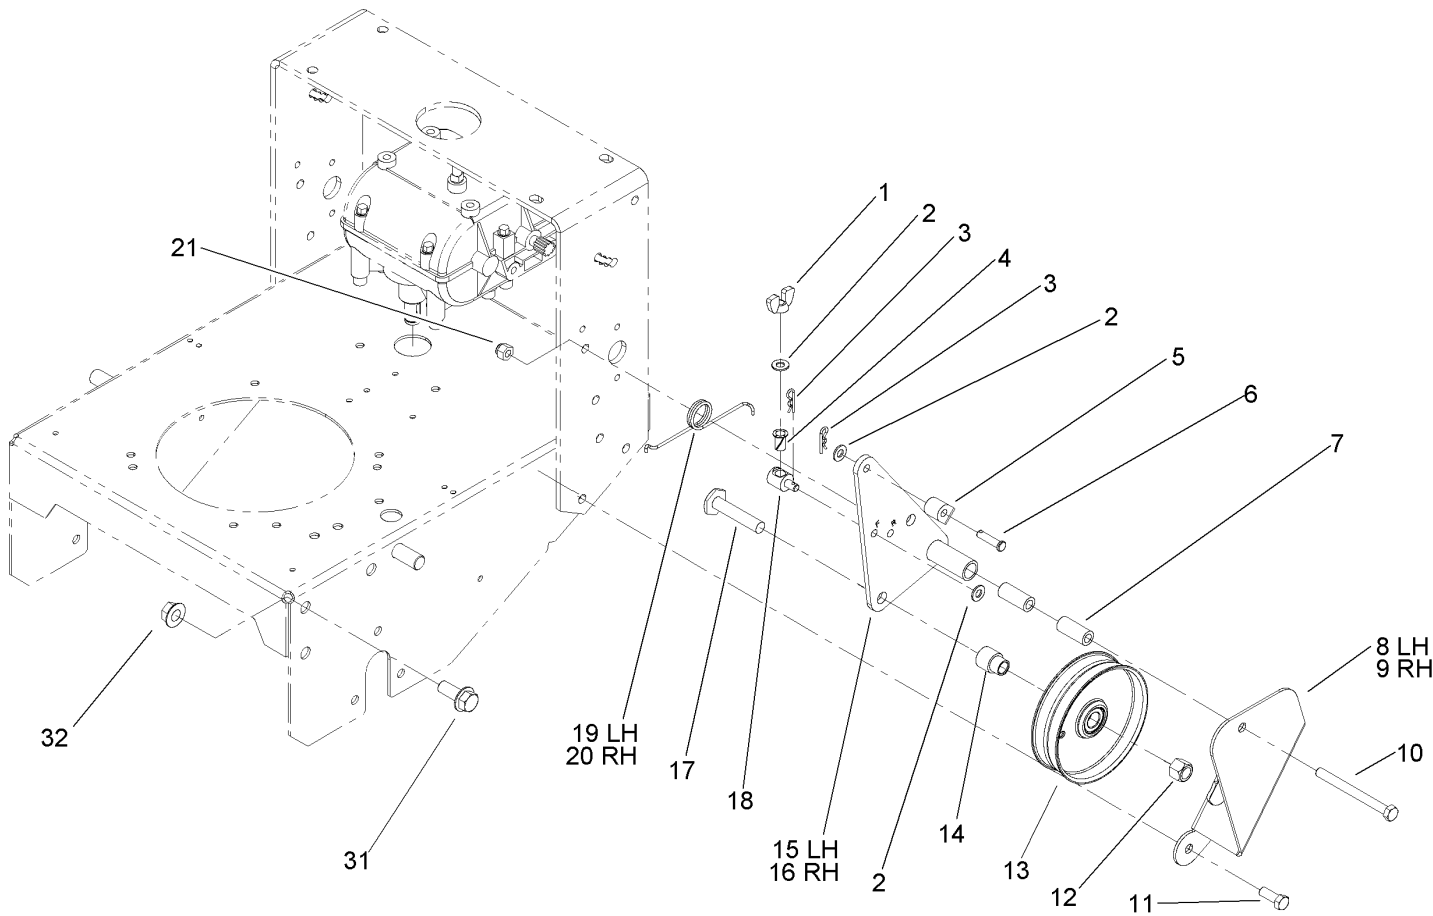

Lower Control Assembly


Ref	Part No.	Qty.	Description				
1	32103-25	2	Nut-Wing				
2	3256-23	6	Washer-Flat				
3	3290-307	4	Pin-Hair				
4	52-2890	2	Bushing-Nylon				
5	74-0521	2	Fitting-Rod				
6	283-6	2	Pin-Clevis				
7	74-0040	4	Spacer-Pivot, Idler				
8	67-6380-01	1	Bracket-Support, LH				
9	67-6370-01	1	Bracket-Support, RH				
10	323-16	2	Screw-HH				
11	323-6	4	Screw-HH				
12	3296-23	2	Nut-Lock, NI				
13	95-2800	2	Pulley-Idler				
14	95-2801	2	Spacer-Pulley				
15	74-0220-01	1	Bracket-Idler, LH				
16	74-0230-01	1	Bracket-Idler, RH				
17	51-4450	2	Screw-Leveler				
18	68-9690	2	Fitting-Rod				
19	51-4380	1	Spring-Torsion, LH				
20	51-4370	1	Spring-Torsion, RH				
21	3296-39	6	Nut-Lock, NI				
31	3234-32	6	Screw-HHF				
32	32128-23	6	Nut-HF				

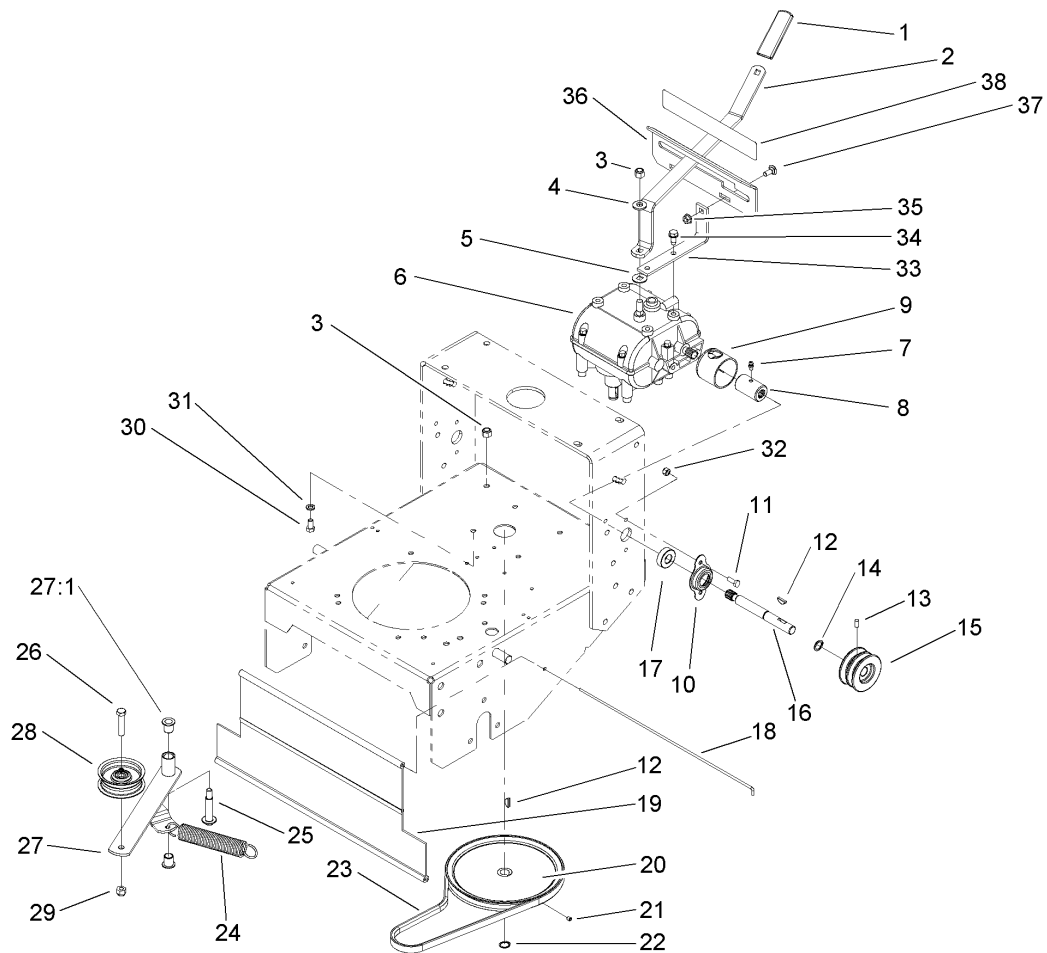

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	68-2190	1	Spring


Ref	Part No.	Qty.	Description
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI
33	1-323389-03	2	Bracket-Plate, Shift
34	9264964	4	Screw-HWH, Thread Cut
35	32128-20	2	Nut-HF
36	1-323387-03	1	Plate-Shift
37	3230-1	2	Bolt-CARR
38	98-3256	1	Decal-Speed, Ground

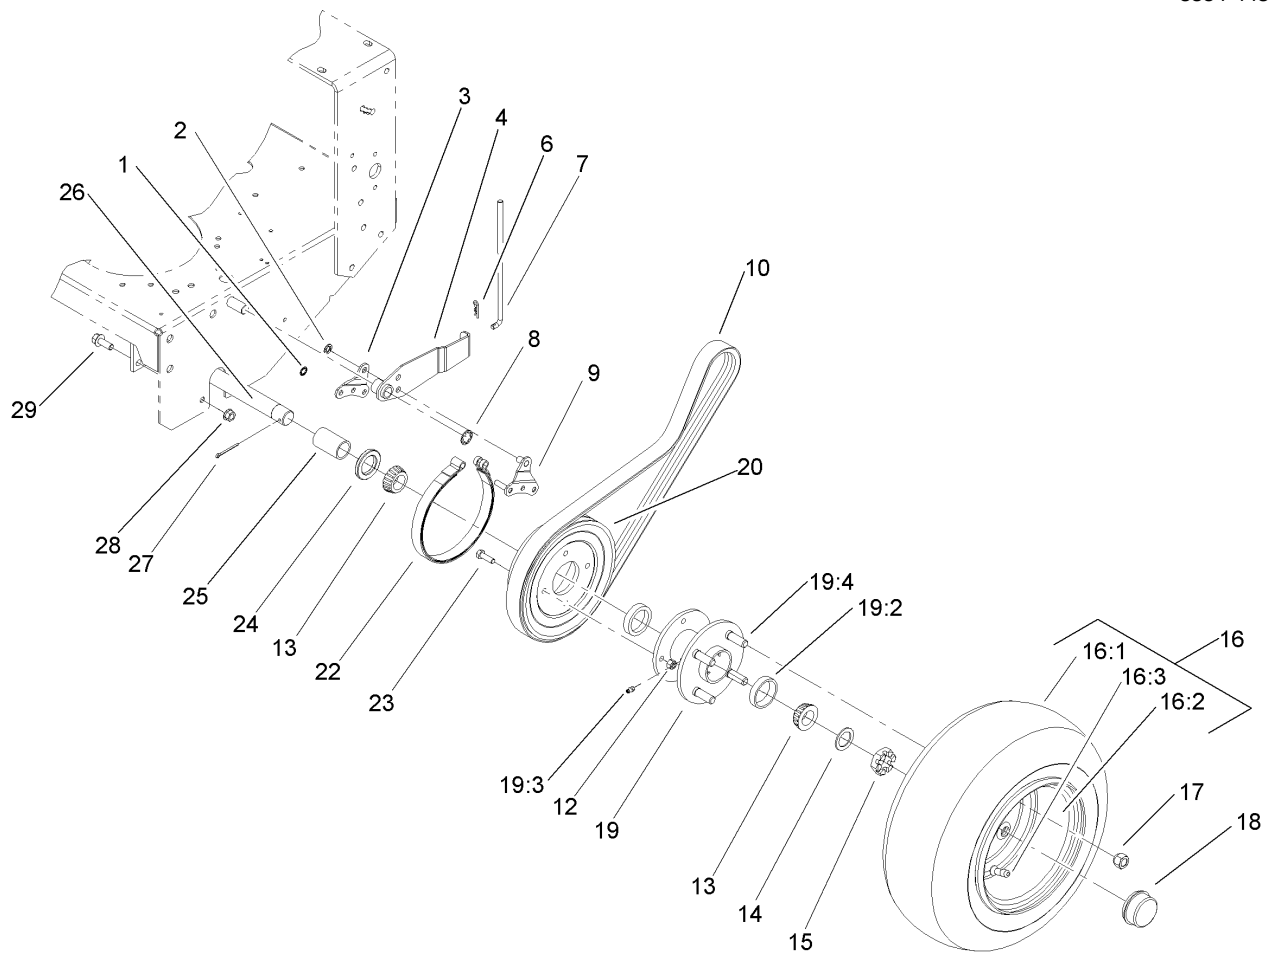

Wheel Drive and Brake Assembly


Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	106-8792	2	Plate-Link, Brake
4	106-8779-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	51-4580	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	51-4290	2	V-Belt
12	3296-29	8	Nut-Lock, NI
13	254-94	4	Bearing-Cone, Tapered
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	106-0892	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	106-0893	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	1-413333	2	Hub/Wheel ASM
19:2	254-72	2	Bearing-Cup, Tapered
19:3	302-19	1	Fitting-Grease
19:4	1-633926	4	Stud-Wheel
20	106-5544	2	Pulley-Wheel

Ref	Part No.	Qty.	Description
22	1-323262	2	Band-Brake
23	322-5	8	Screw-HH
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	104-1196-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

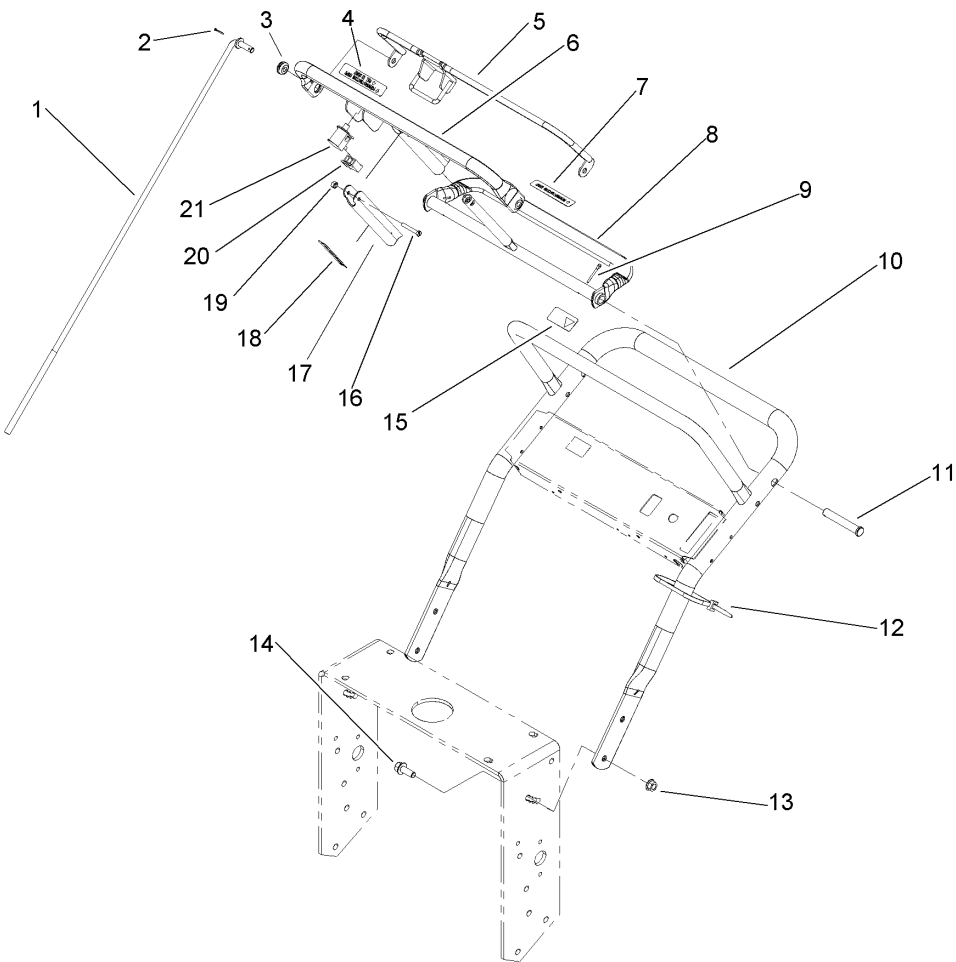


Upper Handle Assembly

Ref	Part No.	Qty.	Description				
1	105-4677	2	Rod-Control				
2	3272-4	2	Pin-Cotter				
3	237-141	2	Grommet-Rubber				
4	82-2290	1	Decal				
5	82-7680-03	1	Bail ASM				
6	82-7690-03	1	Bar-Control				
7	82-2280	1	Decal				
8	106-5477-03	1	Control Pivot ASM				
9	3272-11	2	Pin-Cotter				
10	105-3158-03	1	Upper Handle ASM				
11	283-55	2	Pin-Clevis				
12	3290-378	1	Tie-Cable				
13	32128-21	4	Nut-HF				
14	3234-11	4	Screw-HHF				
15	98-4387	1	Decal-Protection, Ear				
16	32105-1	1	Screw-SHH				
17	51-4850-03	1	Lever-Brake, Parking				
18	52-2010	1	Decal-Lever, Parking				
19	3296-2	1	Nut-Lock				
20	218-595	1	Connector-Body				
21	82-2190	1	Switch-Bail				

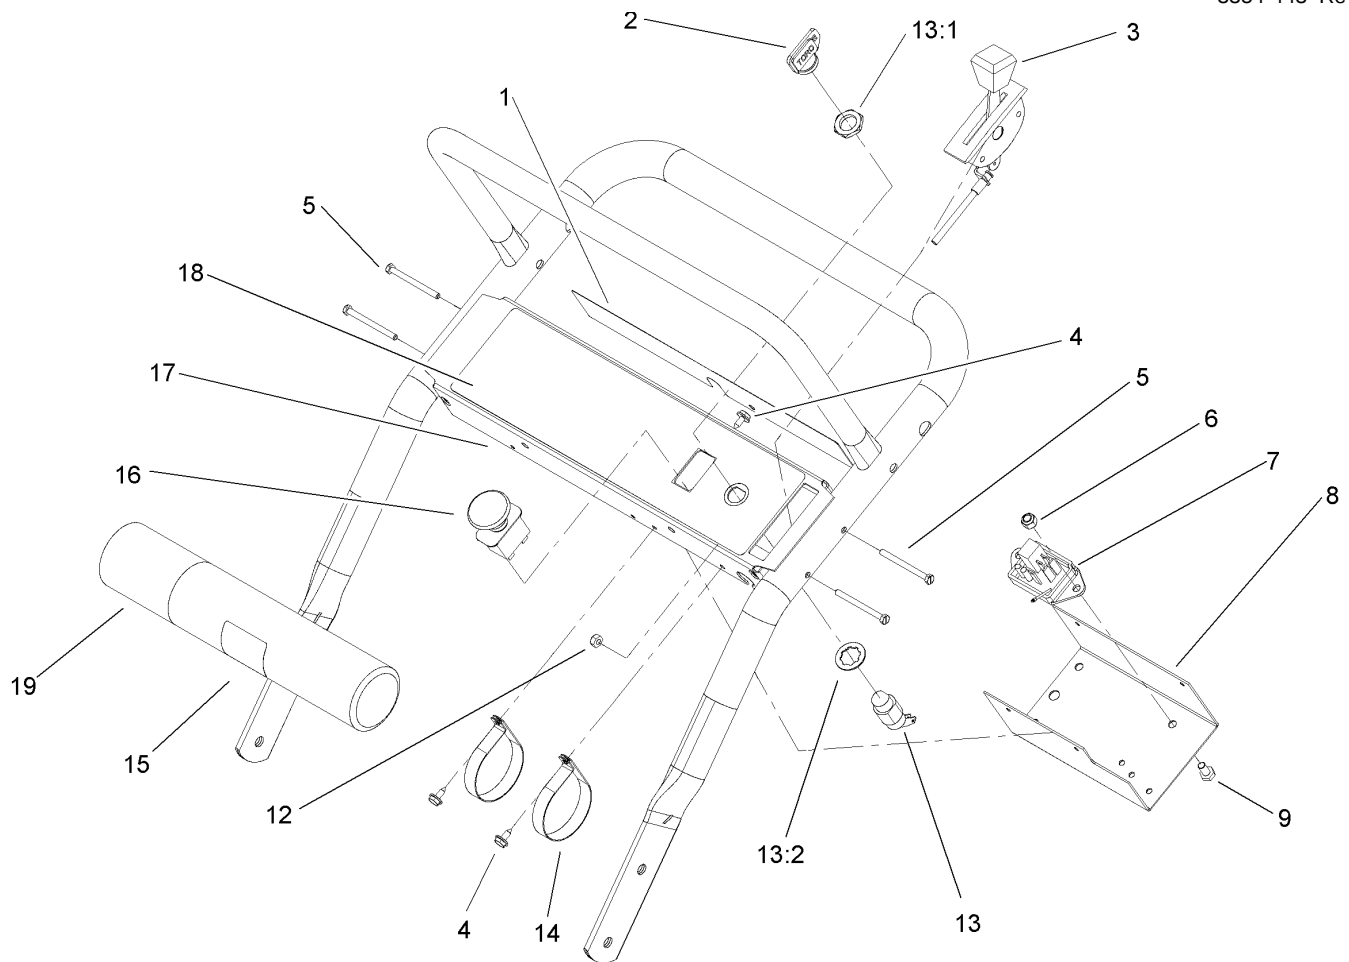


Control Panel Assembly

Ref	Part No.	Qty.	Description				
1	105-0884	1	Decal-Danger				
2	63-8360	1	Key-Ignition				
3	107-4101	1	Cable-Throttle				
4	32104-76	4	Screw				
5	32105-14	4	Screw-SHH				
6	3296-42	1	Nut-Lock, NI				
7	104-8141	1	Module-Delay				
8	93-1187-03	1	Panel-Bottom				
9	321-2	1	Screw-HH				
12	3296-2	4	Nut-Lock				
13	29-5560	1	Switch-On / Off				
13:1	218-461	1	Nut-HH				
13:2	3254-5	1	Washer-Tooth				
14	2412-120	2	R-Clamp				
15	104-7050	1	Housing-Manual				
16	104-8140	1	Switch-PTO				
17	104-8177-03	1	Panel-Control				
18	106-5499	1	Decal-Control Panel				
19	104-7048	1	Cap-Housing				

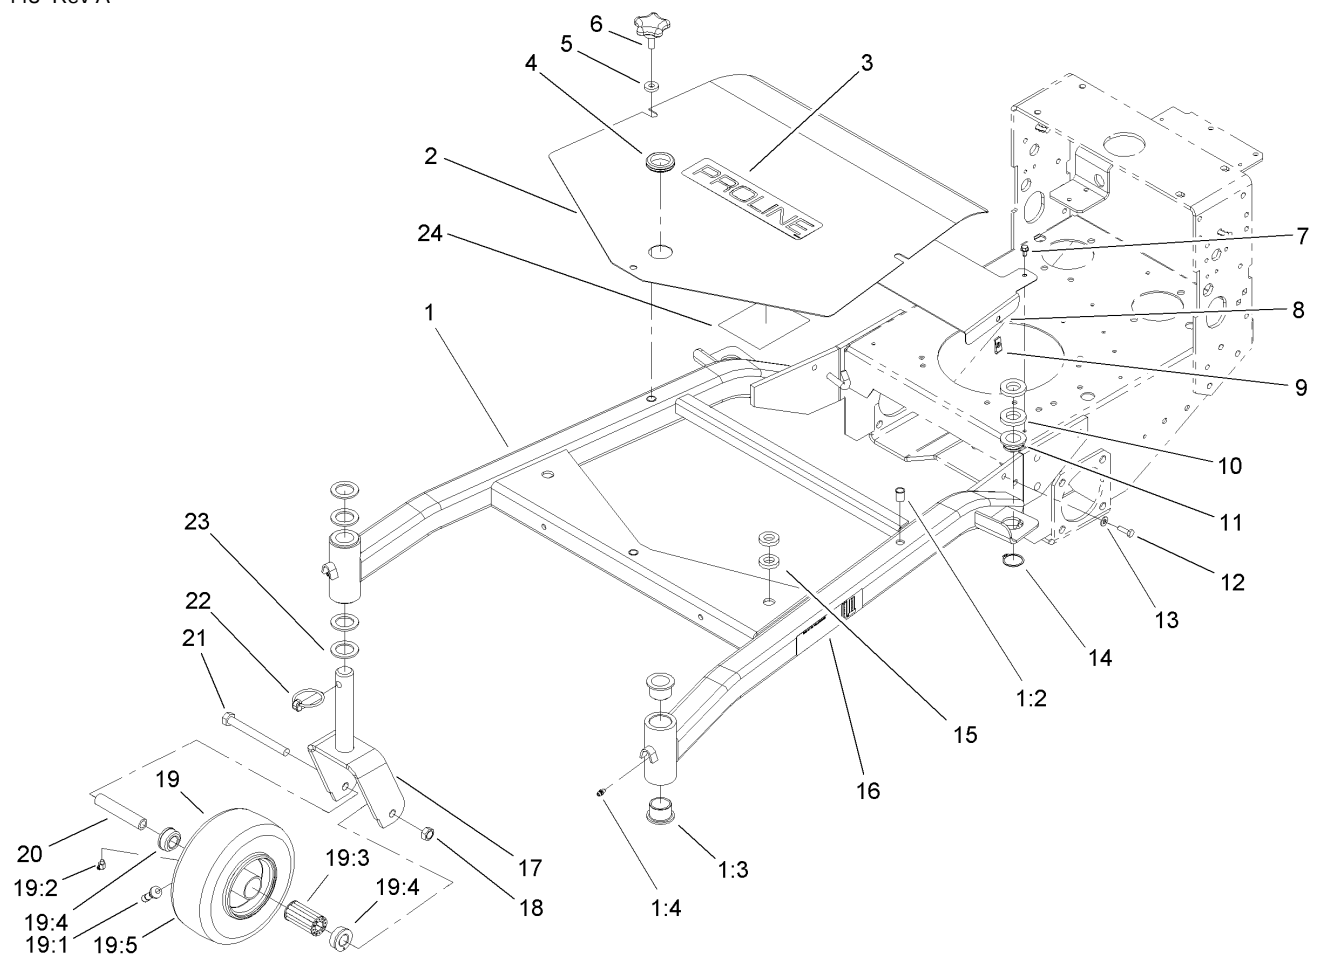

Carrier Frame Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0707	1	Carrier Frame ASM	19:3	83-4740	1	Bearing
1:2	32148-9	3	Insert-Nut	19:4	62-5580	2	Bearing-Outside
1:3	94-1291	4	Bushing	19:5	100-6452	1	Tire-Tubeless
1:4	302-5	2	Fitting-Grease	20	100-6453	2	Bushing-Spanner
2	106-0537-01	1	Cover	21	325-19	2	Screw-HH
3	106-0719	1	Decal	22	283-71	2	Pin-Lynch
4	240-3	1	Grommet-Rubber	23	3-6781	8	Washer-Thrust
5	106-0565	3	Washer-Rubber	24	106-5503	1	Decal-Service, Hydro (Tbar)
6	106-0887	3	Knob	24	106-5505	1	Decal-Service, Gear (Tbar)
7	12-3270	2	Screw	24	106-5511	1	Decal-Service, Gear (Pistol Grip)
8	105-9389-01	1	Shield-Heat	24	106-5513	1	Decal-Service, Hydro (Pistol Grip)
9	3290-199	2	Nut-Speed				
10	104-1105	4	Spacer-Support, Deck				
11	1-513336	2	Bushing-Deck				
12	321-5	2	Screw-HH				
13	3256-22	2	Washer-Flat				
14	32120-33	2	Ring-Retaining				
15	1-323539	4	Spacer-Drive, Blade				
16	106-0635	2	Decal-HOC				
17	105-3159-01	2	Castor Fork ASM				
18	32153-5	2	Nut-Lock, Side				
19	100-6451	2	Caster Wheel ASM				
19:1	232-27	1	Stem-Valve				
19:2	302-11	1	Fitting-Lube, 45 DEG				

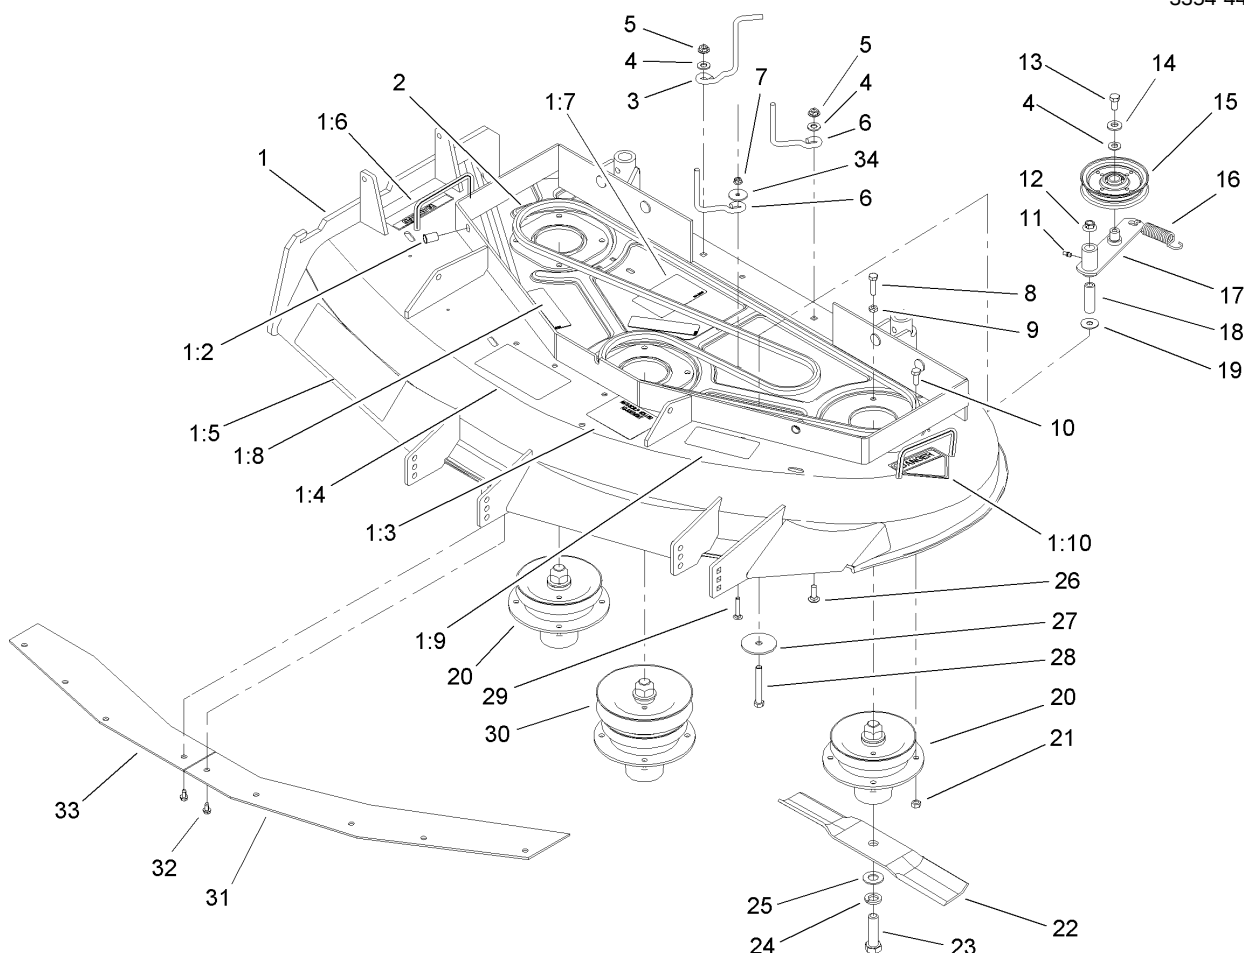


Spindle, Pulley and Belt Assembly

Ref	Part No.	Qty.	Description
1	107-4212	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	106-5532	1	Decal-Anti Scalp
1:4	66-1340	1	Decal-Danger
1:5	106-0704	1	Decal
1:6	93-1122	1	Decal-Danger
1:7	104-8186	1	Decal-Routing, Belt
1:8	67-5360	3	Decal-Danger
1:9	68-8340	1	Decal-Torque
1:10	43-8480	1	Decal-Danger
2	27-1160	1	V-Belt
3	106-5488	1	Guide-Belt
4	3256-24	3	Washer-Flat
5	32128-13	2	Nut-HF
6	52-4780	2	Rod-Belt
7	32128-10	1	Nut-Lock, HHF
8	322-6	1	Screw-HH
9	3218-2	1	Nut-Jam
10	322-4	11	Screw-HH
11	302-19	1	Fitting-Grease
12	32128-19	1	Nut-HF
13	323-4	1	Screw-HH
14	98-5975	1	Washer-Belleville
15	65-5940	1	Pulley-Idler


Ref	Part No.	Qty.	Description
16	54-2730	1	Spring-Extension
17	104-8110	1	Idler Arm ASM
18	104-8113	1	Tube-Idler
19	52-2860	1	Washer
20	106-0786	2	Spindle Housing ASM
21	32152-1	12	Nut-Lock, Cone
22	54-0010-03	3	Blade
23	51-4060	3	Screw-Blade
24	3253-8	3	Washer-Lock
25	3256-27	3	Washer-Flat
26	3230-2	2	Bolt-CARR
27	20-9530	1	Washer-End
28	323-13	1	Screw-HH
29	3229-4	1	Screw-CARR
30	106-0784	1	Spindle Housing ASM
31	100-3258-03	1	Plate-Blowout, LH
32	12-3270	9	Screw
33	100-3257-03	1	Plate-Blowout, RH
34	1-503033	1	Washer-Retainer, Pulley

12

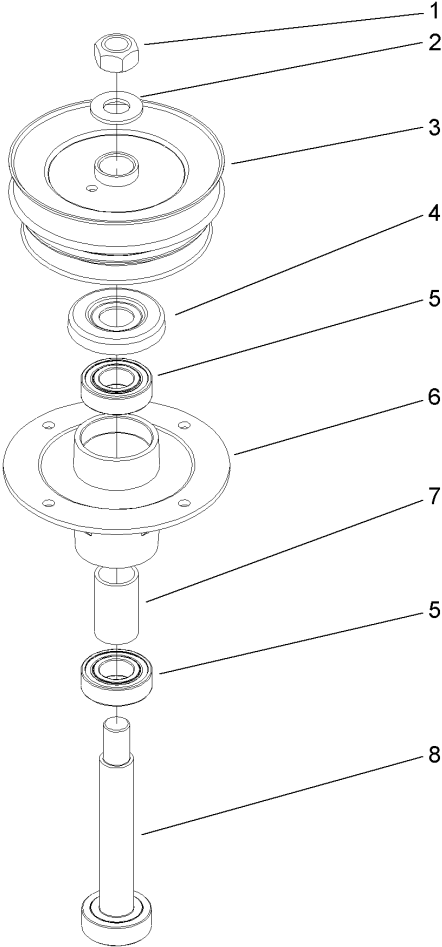


Spindle Assembly No. 106-0784

Ref	Part No.	Qty.	Description				
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1116	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0818	1	Housing-Spindle				
7	106-0794	1	Spacer-Bearing				
8	106-0779	1	Shaft-Spindle				

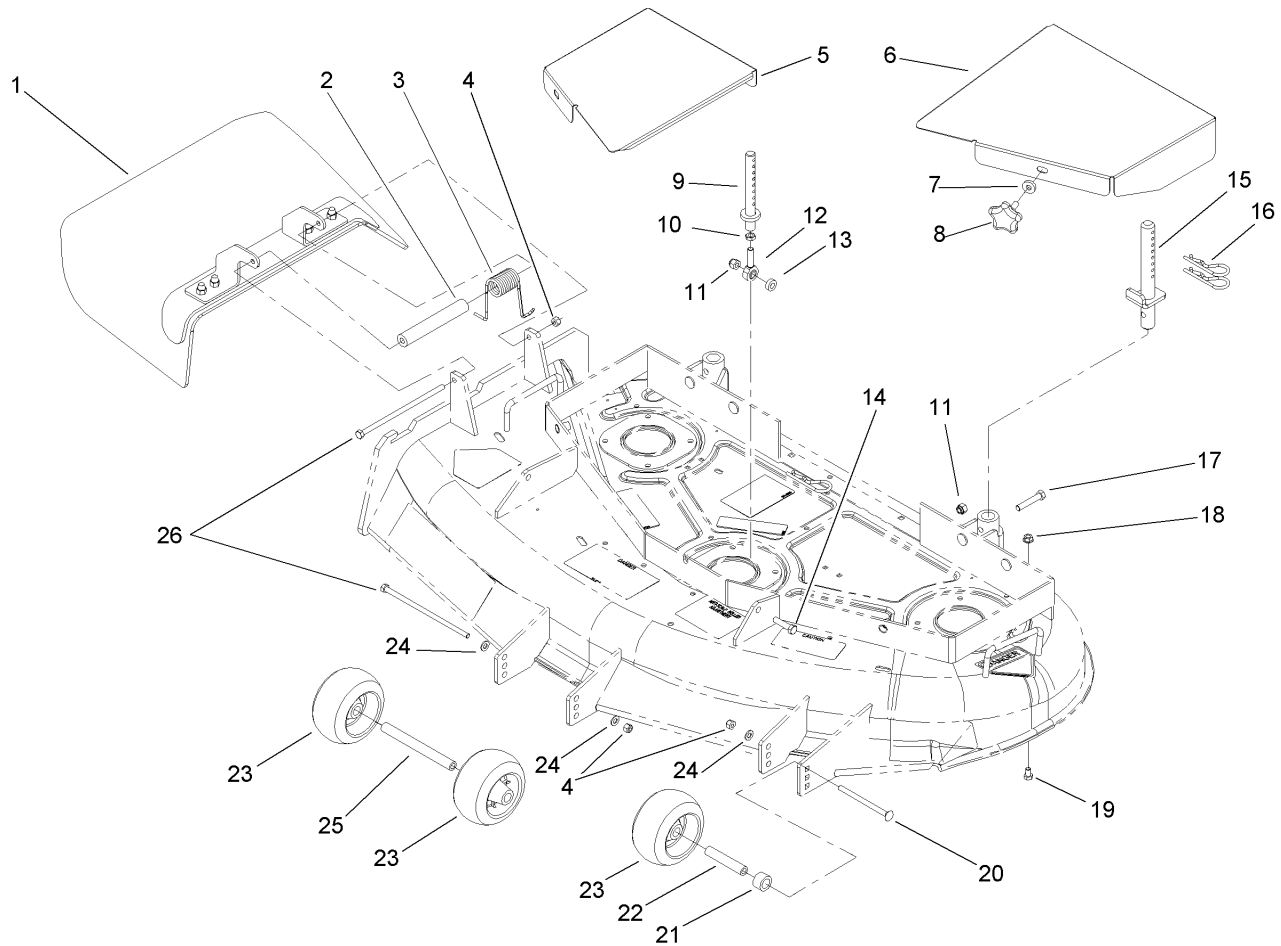


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-4194	1	Deflector ASM	25	98-5967	1	Spacer-Wheel
2	105-4622	1	Spacer	26	322-50	2	Screw-HH
3	104-8554	1	Spring-Torsion				
4	3296-29	3	Nut-Lock, NI				
5	106-3363-01	1	Cover-Belt, RH				
6	106-3362-01	1	Cover-Belt, LH				
7	106-0565	2	Washer-Rubber				
8	106-0887	2	Knob				
9	106-0684	2	Front Pin ASM				
10	3220-3	2	Nut-Hex, Jam				
11	3296-39	4	Nut-Lock, NI				
12	1-613204	2	Balljoint				
13	104-1156	2	Spacer				
14	323-8	2	Screw-HH				
15	106-3365	2	Rear Pin ASM				
16	3290-256	6	Pin-Hair				
17	323-10	2	Screw-HH				
18	32128-20	4	Nut-HF				
19	322-1	4	Screw-HH				
20	3230-30	1	Screw-CARR				
21	106-0563	1	Spacer-Wheel				
22	106-0545	1	Bushing-Roller				
23	1-603299	3	Roller-Scalp, Anti				
24	3256-23	3	Washer-Flat				

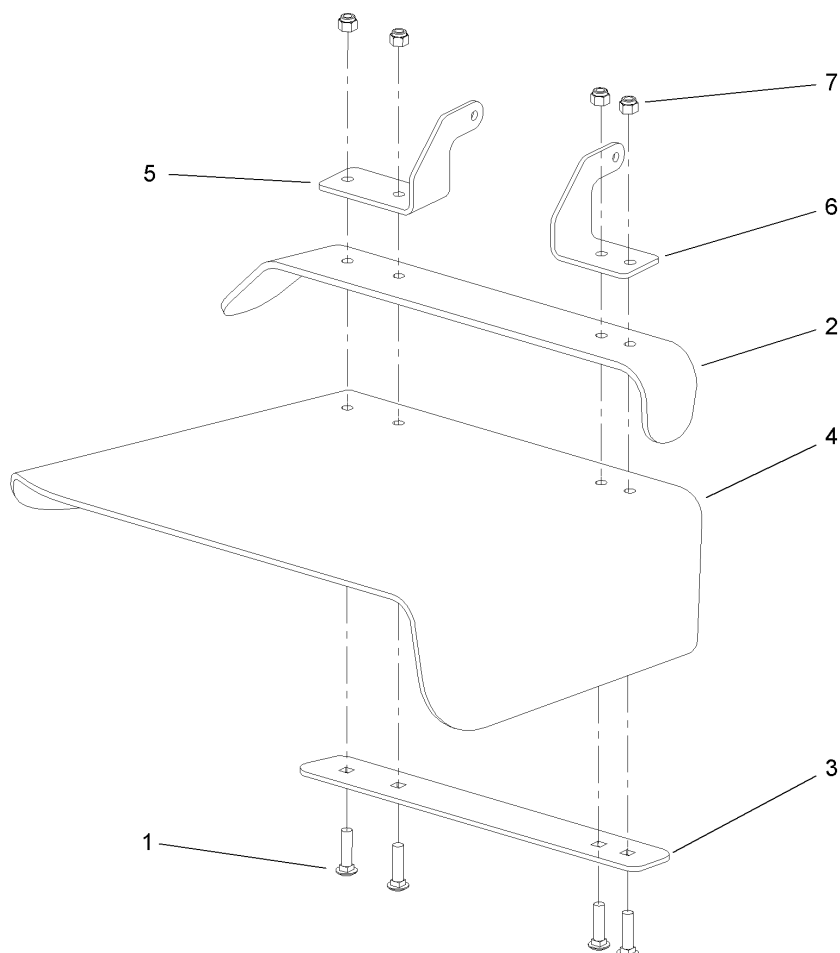


Deflector Assembly No. 107-4194

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

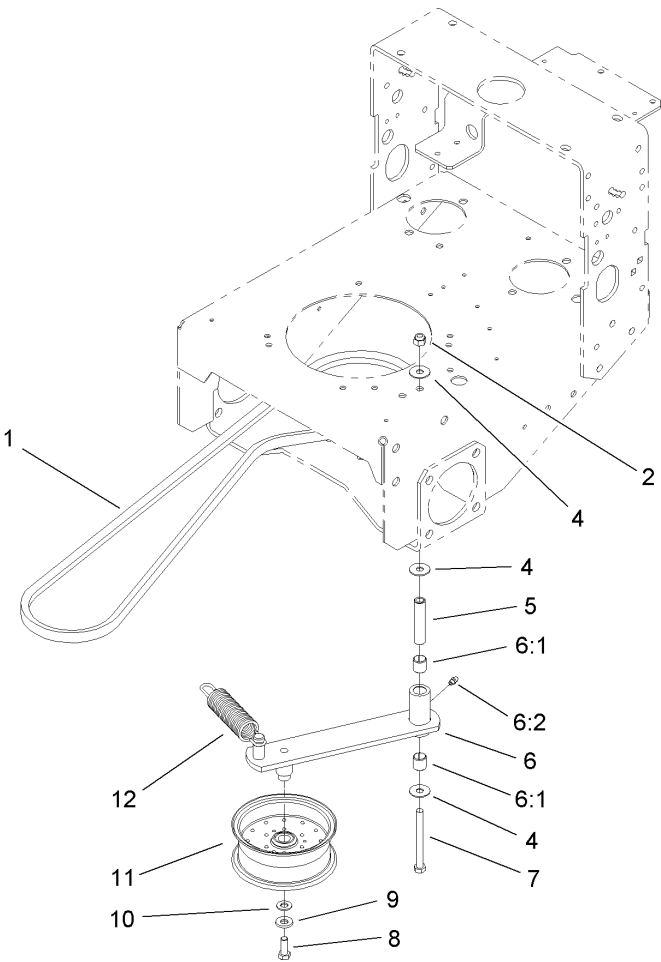

Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description				
1	104-8120	1	V-Belt, PTO				
2	3296-39	1	Nut-Lock, NI				
4	52-2860	3	Washer				
5	104-6377	1	Tube-Idler				
6	106-0734	1	Idler Arm ASM				
6:1	1-513034	2	Sleeve-Bearing				
6:2	302-5	1	Fitting-Grease				
7	323-42	1	Screw-HH				
8	323-6	1	Screw-HH				
9	98-5975	1	Washer-Belleville				
10	3256-24	1	Washer-Flat				
11	1-413099	1	Pulley-Idler				
12	105-8443	1	Spring-Extension				

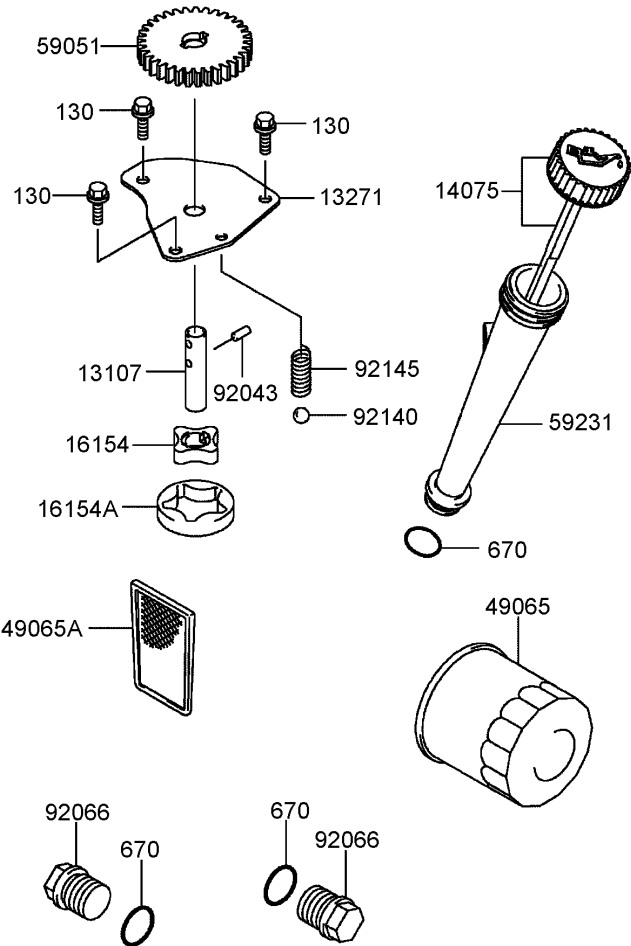


Lubrication Equipment Assembly
Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
13107	13107-7009	1	Shaft				
13271	13271-7017	1	Plate				
14075	14075-7009	1	Cap ASM				
16154	16154-2053	1	Rotor-Pump (In)				
16154A	16154-2054	1	Rotor-Pump (Out)				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7004	1	Filter-Oil				
59051	59051-7011	1	Gear-Spur				
59231	59231-7003	1	Filler				
92043	92043-7003	2	Pin				
92066	92066-7003	2	Plug				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	3	O-Ring (16Mm)				

Cylinder and Crankcase Assembly


Kawasaki FH430V-BS28-R

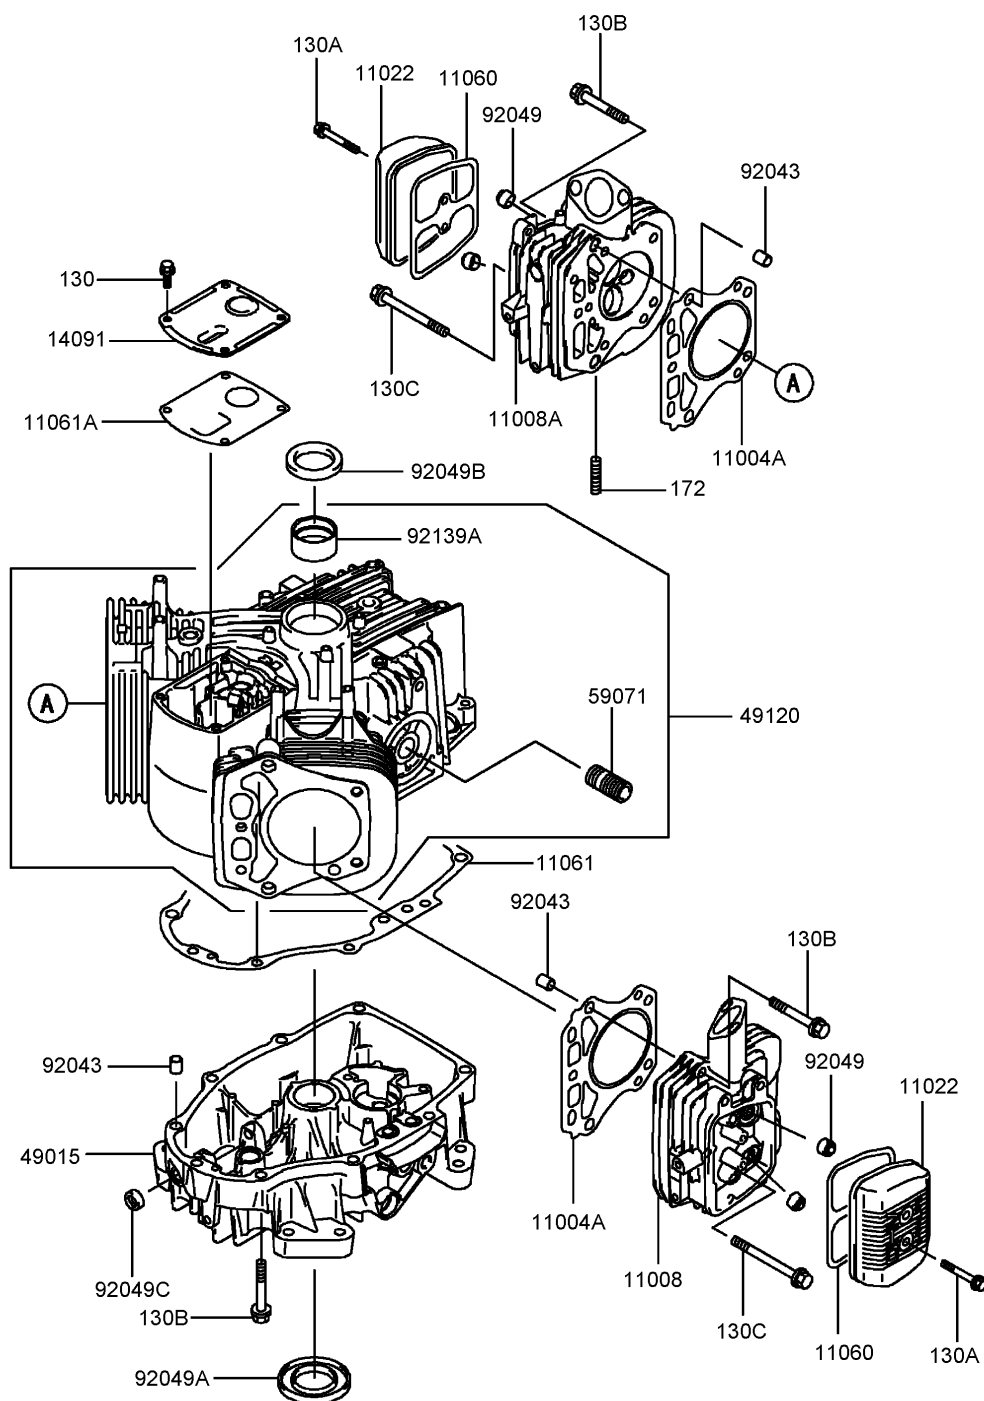

Cylinder and Crankcase Assembly


Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
⑤11004A	11004-7018	2	Gasket-Head				
⑤11008	11008-7021	1	Head-Cylinder, No. 2				
⑤11008A	11008-7022	1	Head-Cylinder, No. 1				
⑤11022	11022-7003	2	Case-Rocker				
⑤11060	11060-7001	2	Gasket-Case, Rocker				
⑤11061	11061-7007	1	Gasket-Cover, Crankcase				
⑤11061A	11061-7008	1	Gasket-Breather				
⑤14091	14091-7007	1	Cover				
⑤49015	49015-7032	1	Cover-Crankcase				
⑤49120	49120-7015	1	Crankcase				
⑤59071	59071-2079	1	Joint				
⑤92043	92043-7001	6	Pin				
⑤92049	92049-7001	4	Seal-Oil, Rvc2 (6X11X10.2)				
⑤92049A	92049-7015	1	Seal-Oil, Sd (35X62X8 L Hs)				
⑤92049B	92049-7016	1	Seal-Oil, Sd (35X48X8 R Hs)				
⑤92049C	92049-7019	1	Seal-Oil, So (8X14X5 Hs)				
⑤92139A	92139-7008	1	Bushing				
⑤130	130B0612	4	Bolt-Flanged				
⑤130A	130B0640	4	Bolt-Flanged				
⑤130B	130T0850	17	Bolt-Flanged				
⑤130C	130T0875	2	Bolt-Flanged				
⑤172	172G0818	4	Bolt-Stud				

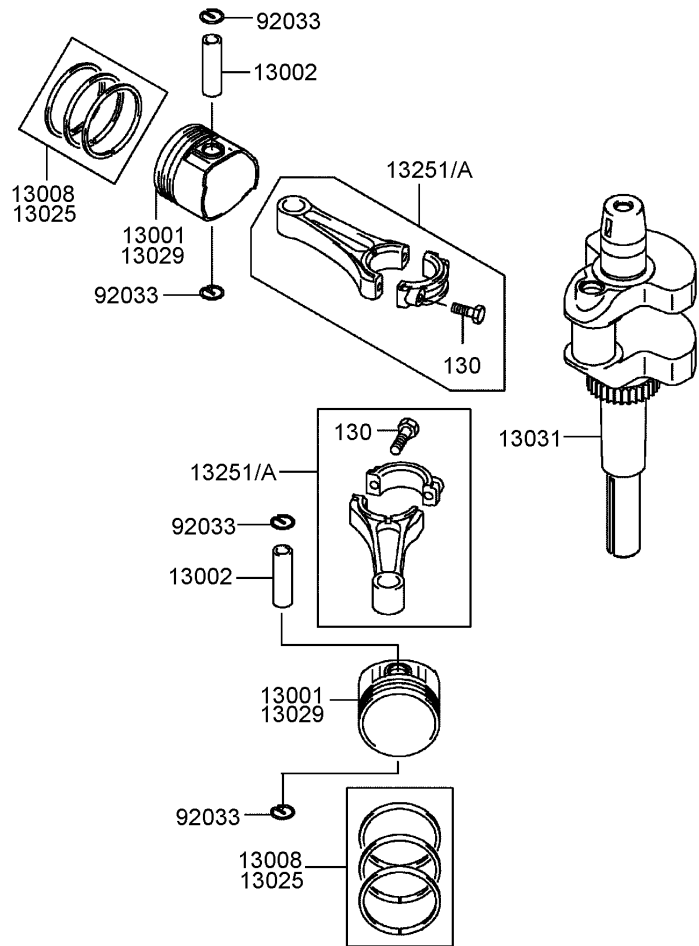

Piston and Crankshaft Assembly **Kawasaki FH430V-BS28-R**

Ref	Part No.	Qty.	Description				
13001	13001-7009	2	Piston-Engine				
13002	13002-7001	2	Pin-Piston				
13008	13008-7001	2	Ring Set-Piston				
13025	13025-7003	1	Ring Set-Piston (L,0.50)				
13029	13029-7005	1	Piston-Engine (L,0.50)				
13031	13031-7033	1	Crankshaft				
13251	13251-7007	2	Connecting Rod ASM				
13251A	13251-7008	2	Connecting Rod ASM (U/S=0.50)				
92033	92033-7005	4	Ring-Snap				
130	130G0630	4	Bolt-Flanged				

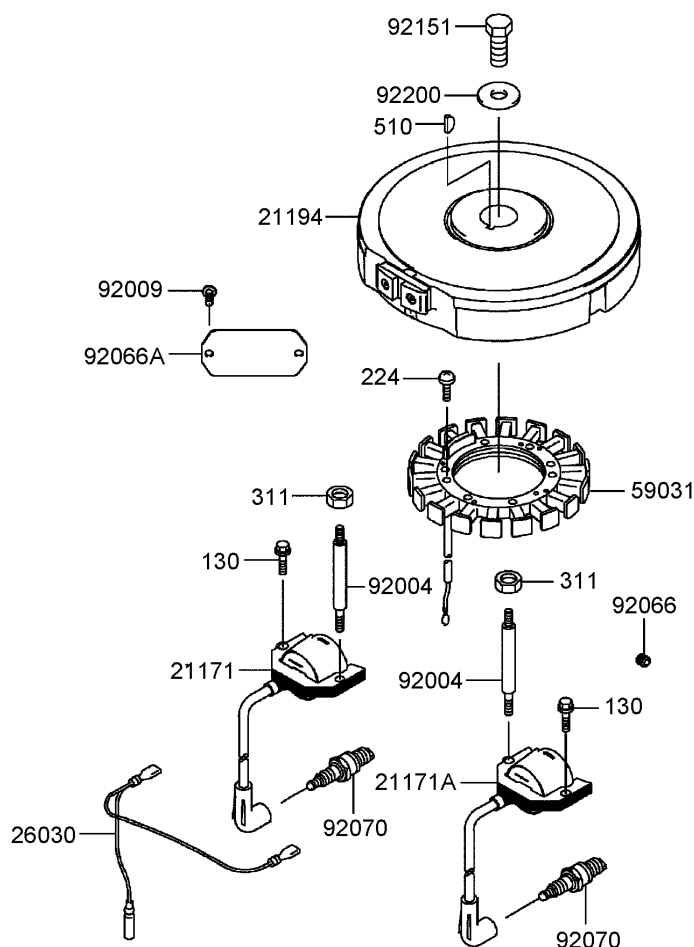


Electric Equipment Assembly

Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
③21171	21171-7013	1	Ignition Coil ASM				
③21171A	21171-7014	1	Ignition Coil ASM				
③21194	21194-7012	1	Flywheel				
③26030	26030-7001	1	Harness				
③59031	59031-7002	1	Coil-Charging				
③92004	92004-7008	2	Stud				
③92009	92009-2308	2	Screw				
③92066	92066-7002	1	Plug				
③92066A	92066-7005	1	Plug				
③92070	92070-7003	2	Plug-Spark (Rcj8Y, Solid)				
③92151	92151-2097	1	Bolt (12X30)				
③92200	92200-7002	1	Washer				
③130	130B0620	2	Bolt-Flanged				
③224	224B0520	4	Screw-Pan				
③311	311F0600	2	Nut-Hex				
③510	510A5100	1	Key-Woodruff				

Valve and Camshaft Assembly

Kawasaki FH430V-BS28-R

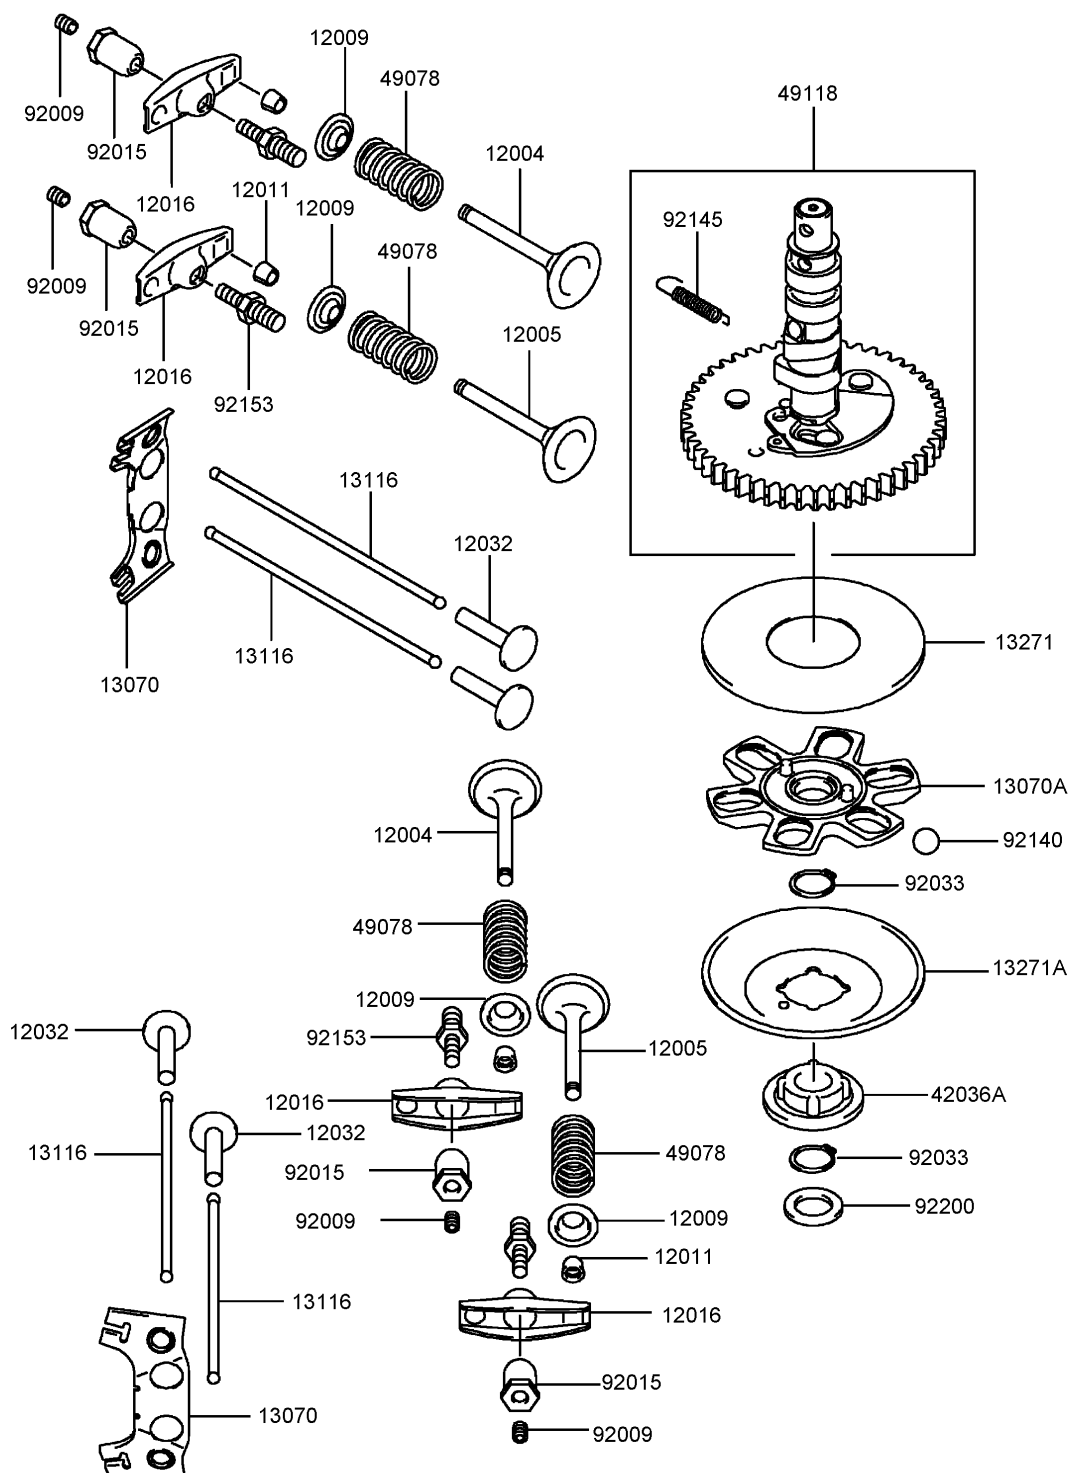


Valve and Camshaft Assembly

Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
③12004	12004-7003	2	Valve-Intake				
③12005	12005-7003	2	Valve-Exhaust				
③12009	12009-7001	4	Retainer-Spring, Valve				
③12011	12011-2056	8	Collet				
③12016	12016-7001	4	Arm-Rocker				
③12032	12032-7001	4	Tappet				
③13070	13070-7001	2	Guide				
③13070A	13070-7004	1	Guide				
③13116	13116-2057	4	Rod-Push				
③13271	13271-7007	1	Plate				
③13271A	13271-7021	1	Plate-Governor				
③42036A	42036-7010	1	Sleeve				
③49078	49078-7001	4	Spring-Valve, Engine				
③49118	49118-7009	1	Camshaft				
③92009	92009-2341	4	Screw				
③92015	92015-2253	4	Nut				
③92033	92033-7001	2	Ring-Snap				
③92140	92140-7002	6	Ball				
③92145	92145-7001	1	Spring				
③92153	92153-7019	4	Bolt				
③92200	92200-7001	1	Washer				

Cooling Equipment Assembly

Kawasaki FH430V-BS28-R

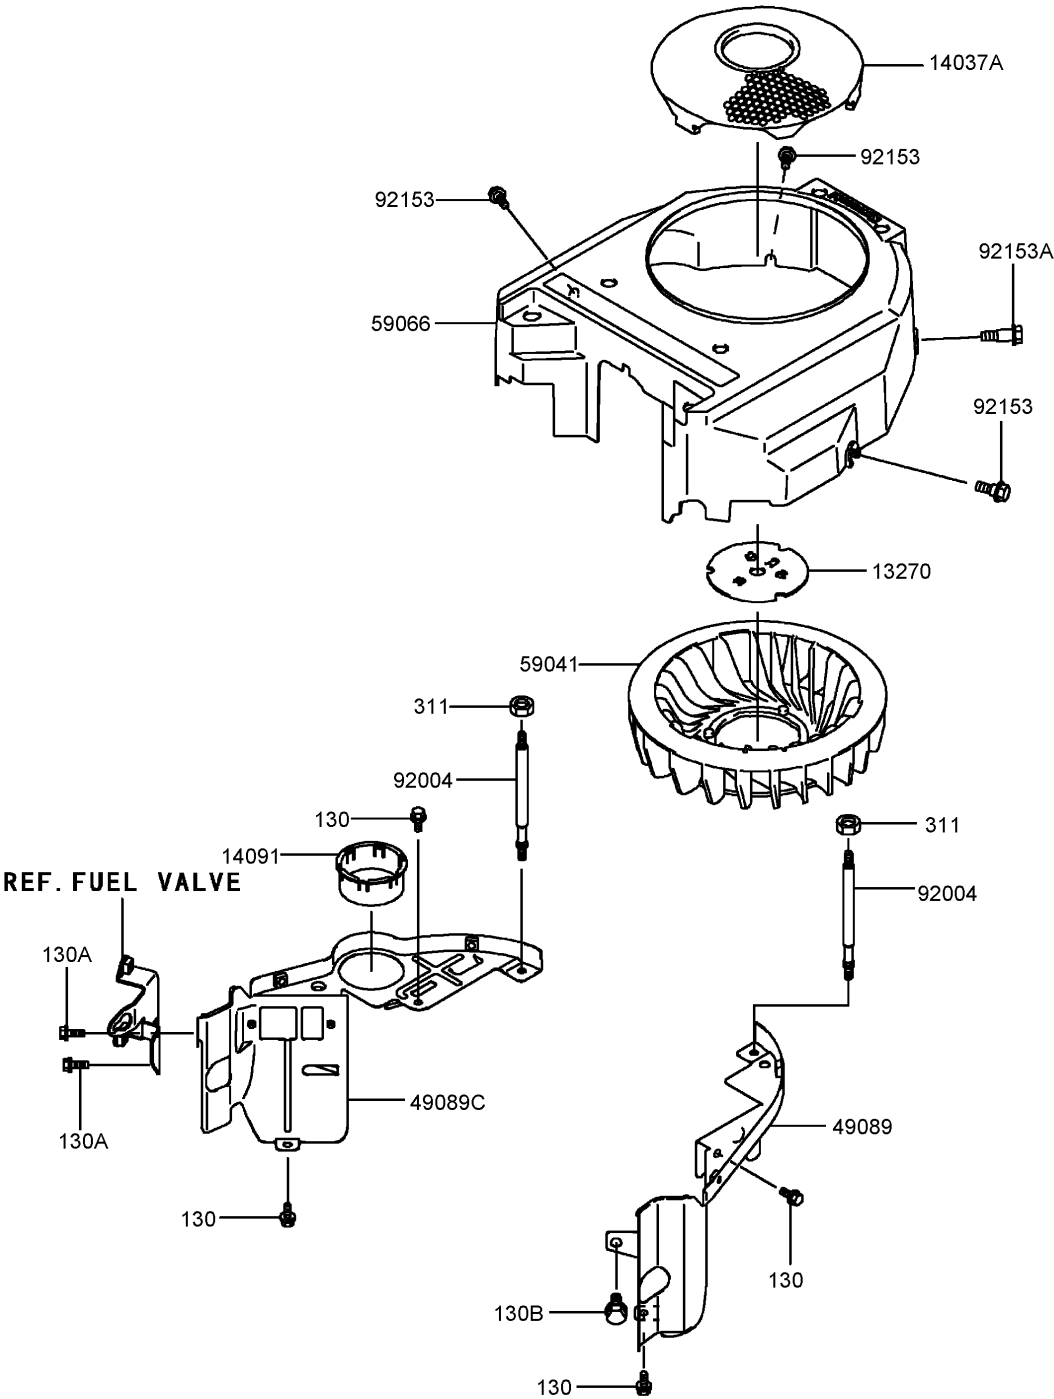


Cooling Equipment Assembly

Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
③13270	13270-7007	1	Plate				
③14037A	14037-7025-9H	1	Screen				
③14091	14091-7009	1	Cover				
③49089	49089-7044	1	Shroud-Engine				
③49089C	49089-7061	1	Shroud-Engine				
③59041	59041-7010	1	Fan				
③59066	59066-7023	1	Housing-Fan				
③92004	92004-7007	2	Stud				
③92153	92153-7007	3	Bolt				
③92153A	92153-7008	1	Bolt				
③130	130B0612	4	Bolt-Flanged				
③130A	130B0616	2	Bolt-Flanged				
③130B	130B0816	1	Bolt-Flanged				
③311	311F0600	2	Nut-Hex				

Control Equipment Assembly

Kawasaki FH430V-BS28-R

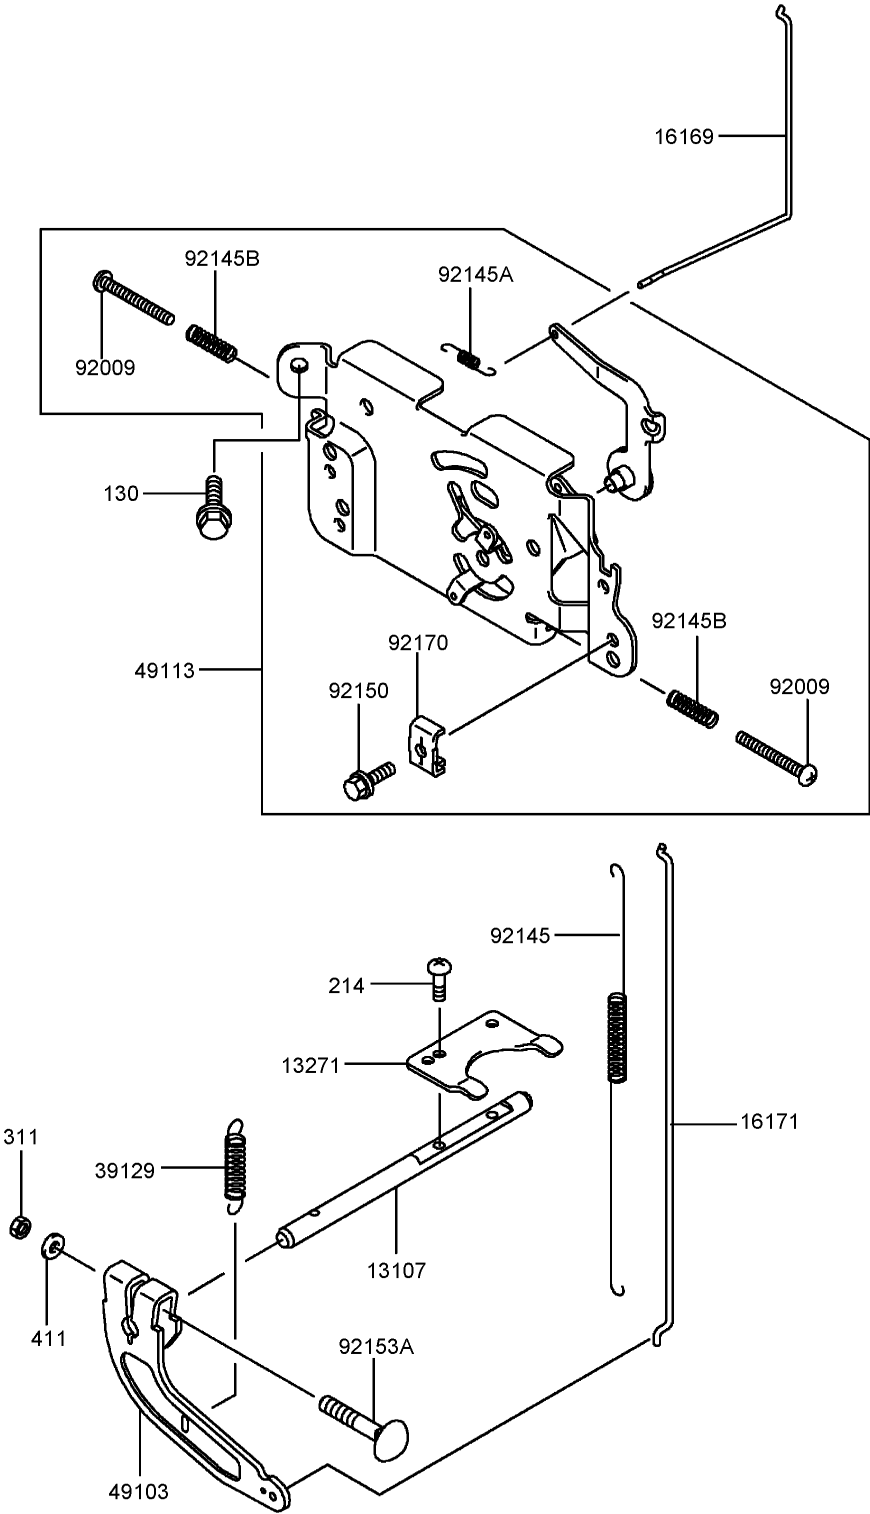


Control Equipment Assembly

Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271	13271-7018	1	Plate				
③16169	16169-7012	1	Link-Choke				
③16171	16171-7007	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7027	1	Panel-Control				
③92009	92009-7007	2	Screw (4X35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	2	Spring				
③92150	92150-2182	1	Bolt (5X18)				
③92153A	92153-7033	1	Bolt (6X35)				
③92170	92170-7001	1	Clamp				
③130	130B0612	2	Bolt-Flanged				
③214	214B0408	2	Screw-Pan				
③311	311B0600	1	Nut-Hex				
③411	411b0600	1	Washer-Plain				


Carburetor Assembly

Kawasaki FH430V-BS28-R

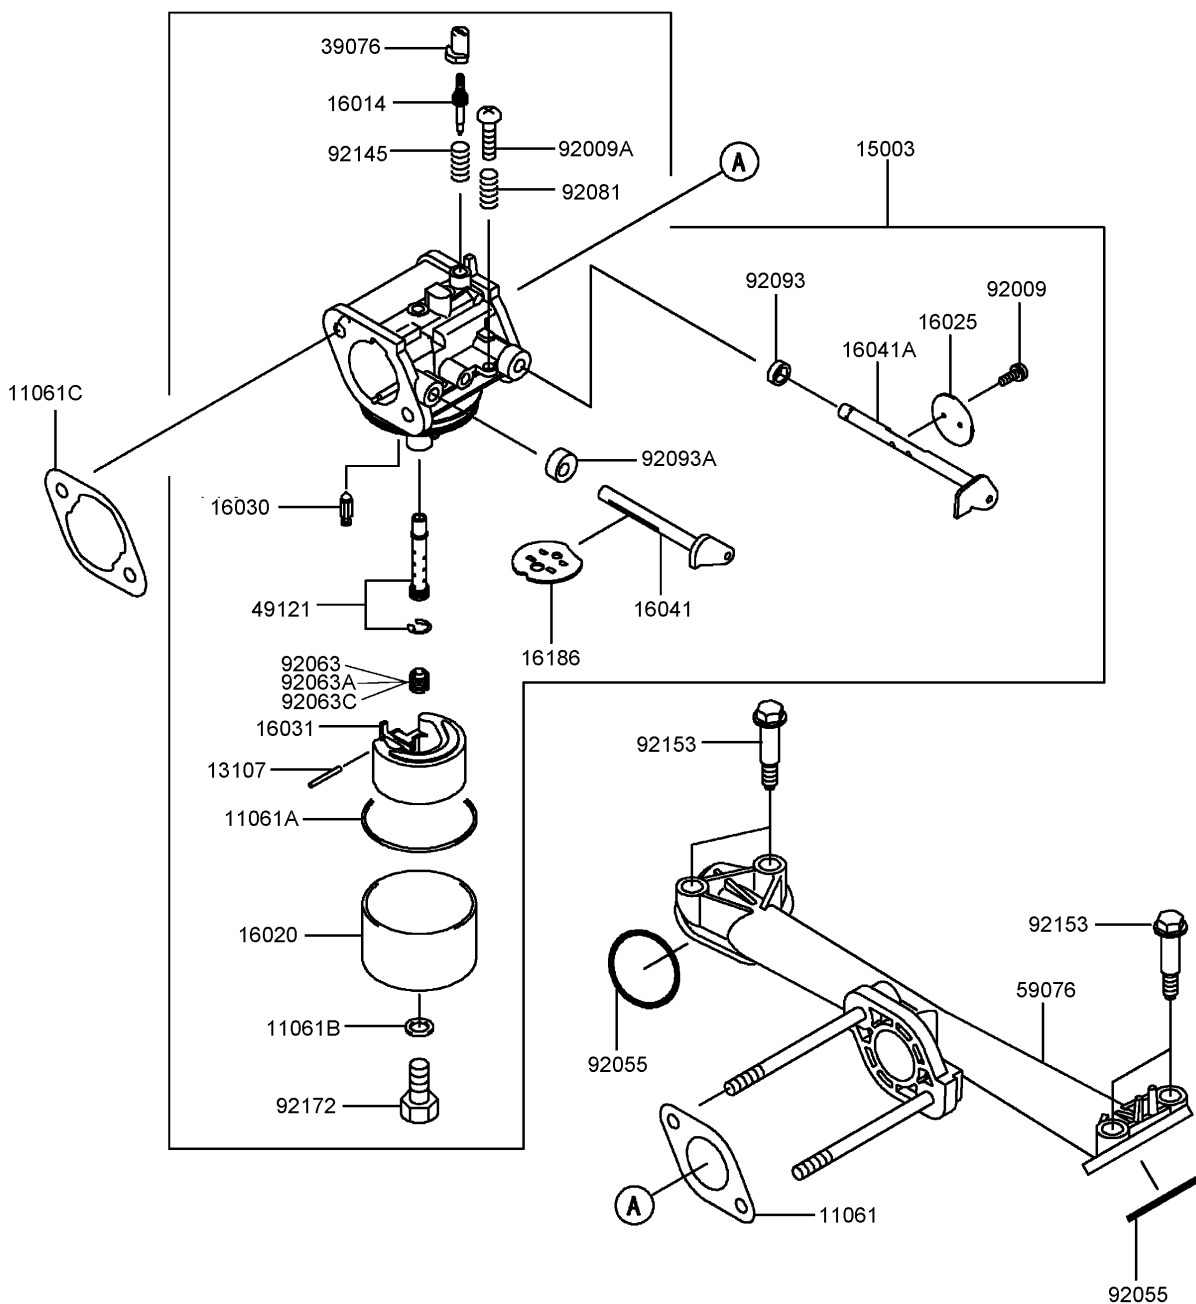

Carburetor Assembly Kawasaki FH430V-BS28-R


Ref	Part No.	Qty.	Description				
③11061	11061-7004	1	Gasket-Insulator				
③11061A	11061-7009	1	Gasket-Chamber				
③11061B	11061-7010	1	Gasket-Screw				
③11061C	11061-7018	1	Gasket-Cleaner, Air				
③13107	13107-7018	1	Shaft				
③15003	15003-7061	1	Carburetor ASM				
③16014	16014-7002	1	Screw-Pilot				
③16020	16020-7003	1	Chamber-Float				
③16025	16025-7006	1	Valve-Throttle				
③16030	16030-7003	1	Valve-Float				
③16031	16031-7002	1	Float				
③16041	16041-7016	1	Shaft-Choke, Carburetor				
③16041A	16041-7018	1	Shaft-Throttle, Carburetor				
③16186	16186-7002	1	Choke Valve ASM				
③39076	39076-7001	1	Limiter				
③49121	49121-7001	1	Nozzle-Main				
③59076	59076-7005	1	Manifold-Intake				
③92009	92009-2083	2	Screw				
③92009A	92009-2349	1	Screw				
③92055	92055-7007	2	O-Ring (Id=31)				
③92063	92063-7026	1	Jet-Main, No. 88				
③92063A	92063-7028	1	Jet-Main, No. 85				
③92063C	92063-7029	1	Jet-Main, No. 82				
③92081	92081-2234	1	Spring				
③92093	92093-2100	1	Seal				
③92093A	92093-7003	1	Seal				
③92145	92145-7015	1	Spring				
③92153	92153-7009	4	Bolt				
③92172	92172-7002	1	Screw				

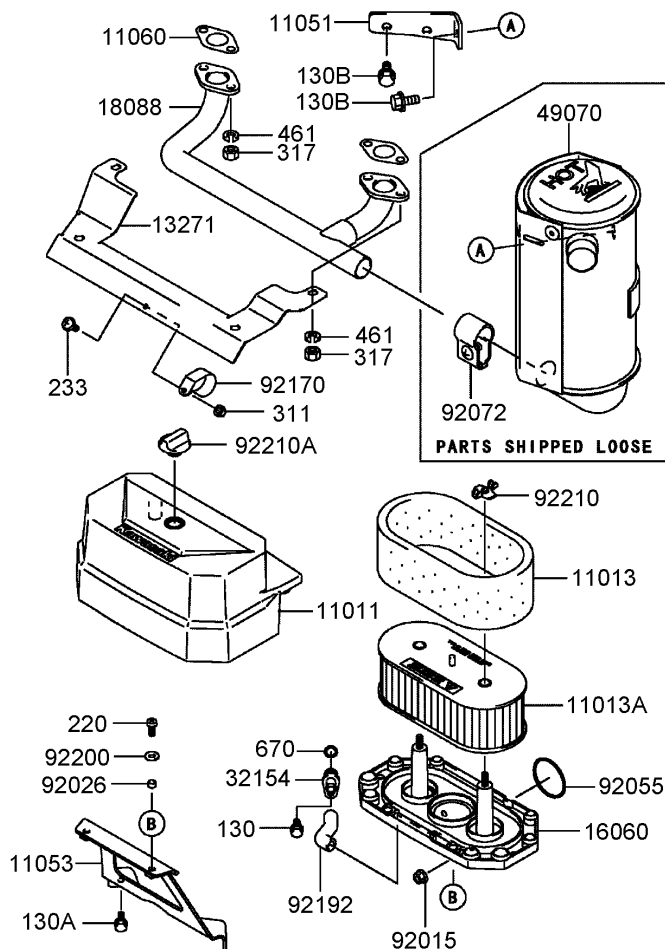

Air Filter and Muffler Assembly Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description
③11011	11011-7035	1	Case-Filter, Air
③11013	11013-7025	1	Element-Filter, Air
③11013A	11013-7031	1	Element-Filter, Air
③11051	11051-7005-9H	1	Bracket
③11053	11053-7022	1	Bracket
③11060	11060-7021	2	Gasket-Muffler
③13271	13271-7022	1	Plate
③16060	16060-7016	1	Pipe-Intake
③18088	18088-7001	1	Pipe-Exhaust
③32154	32154-7006	1	Pipe
③49070	49070-7015	1	Muffler
③92015	92015-1193	2	Nut
③92026	92026-7001	2	Spacer (6.2X7.9X5)
③92055	92055-7015	1	Ring-O
③92072	92072-7008	1	Band
③92170	92170-7002	1	Clamp
③92192	92192-7010	1	Tube
③92200	92200-2070	2	Washer
③92210	92210-7004	2	Nut
③92210A	92210-7019	1	Nut
③130	130B0610	1	Bolt-Flanged
③130A	130B0612	2	Bolt-Flanged
③130B	130B0816	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
③220	220B0614	2	Screw-Pan (Cross)
③233	233B0416	1	Screw
③311	311B0400	1	Nut-Hex
③317	317R0800	4	Nut-Hex
③461	461F0800	4	Washer-Spring
③670	670B2010	1	O-Ring (10Mm)

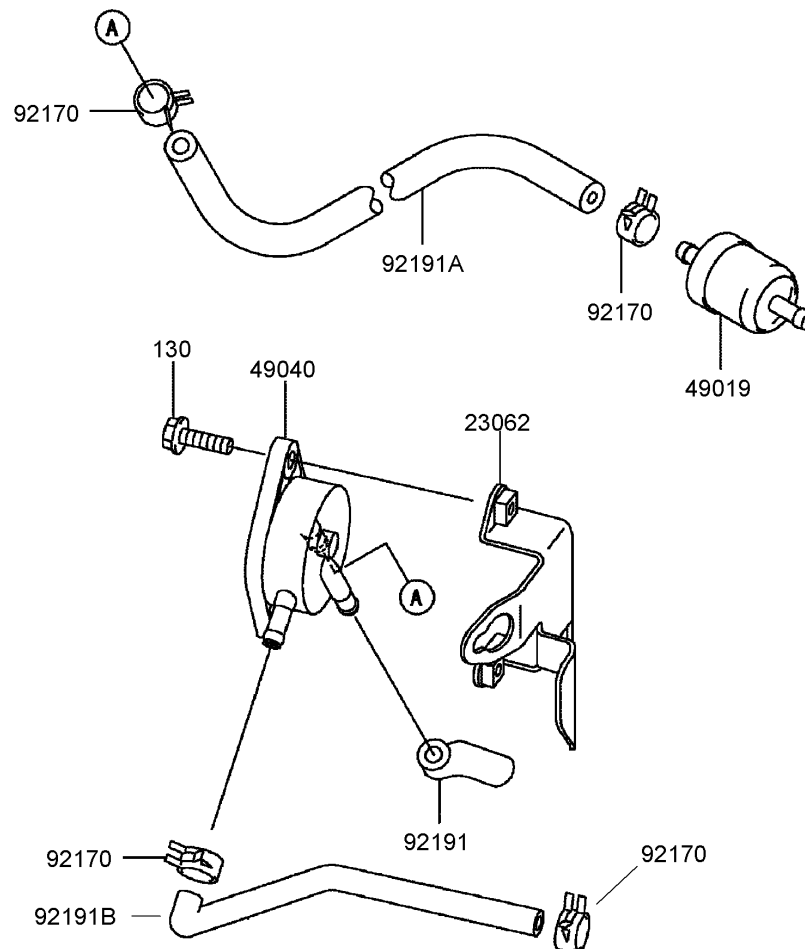


Fuel Tank and Valve Assembly Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube (6.35X12.7X160)				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged				

Starter Assembly

Kawasaki FH430V-BS28-R

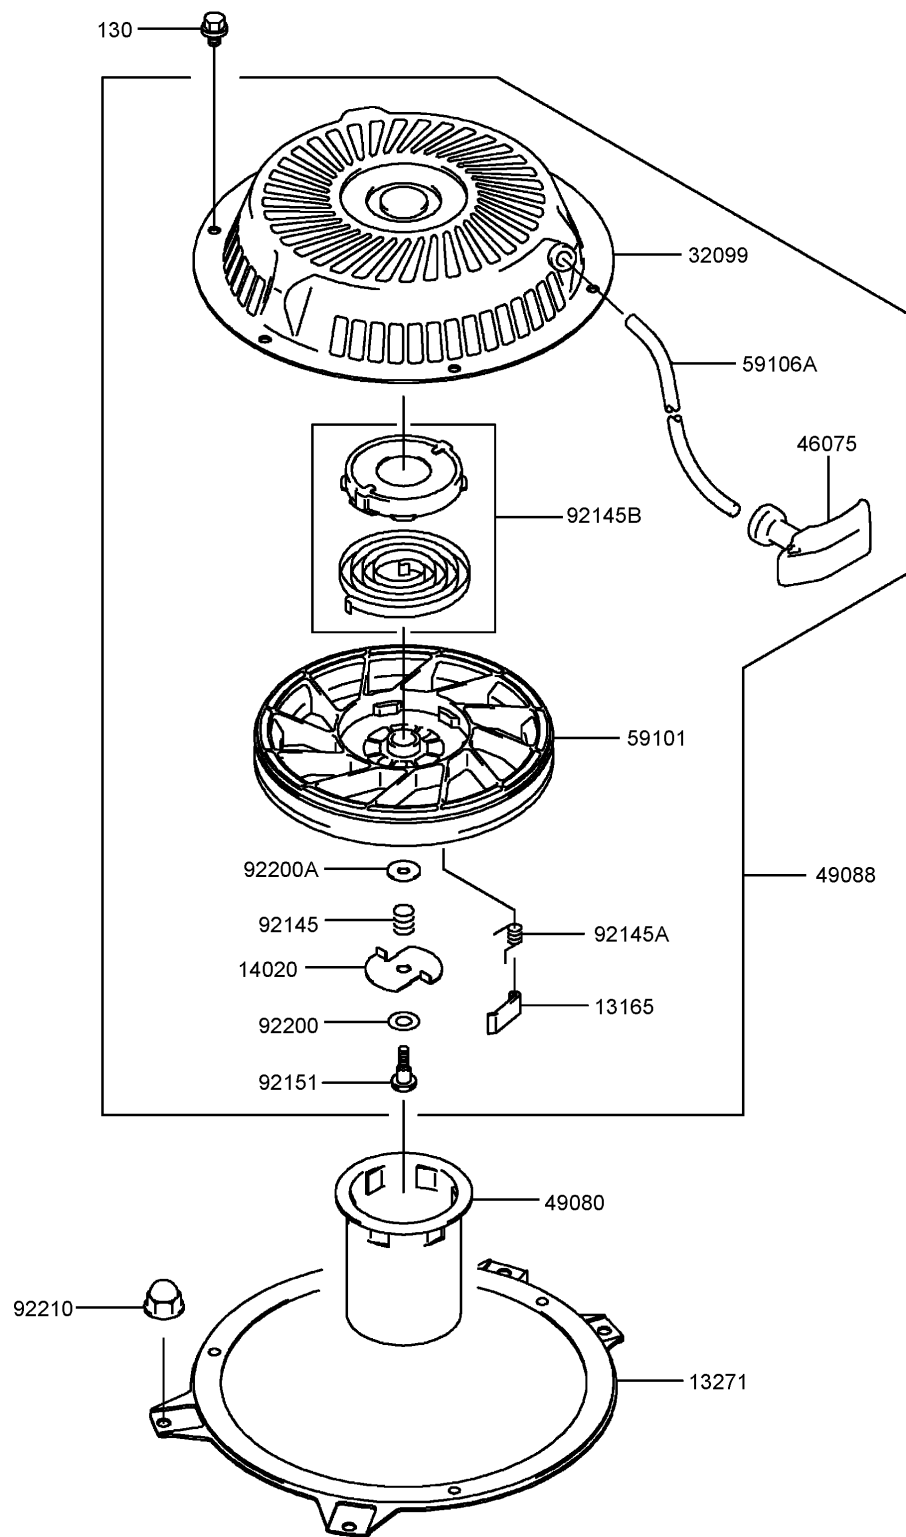

Starter Assembly Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description				
③13165	13165-7001	2	Pawl-Starter, Recoil				
③13271	13271-7003-9H	1	Plate				
③14020	14020-7001	1	Retainer				
③32099	32099-7002	1	Case-Recoil, Starter				
③46075	46075-7001	1	Grip-Recoil, Starter				
③49080	49080-7001	1	Pulley-Starting				
③49088	49088-7013	1	Starter-Recoil				
③59101	59101-7001	1	Reel-Recoil				
③59106A	59106-7005	1	Rope				
③92145	92145-7006	1	Spring				
③92145A	92145-7007	2	Spring				
③92145B	92145-7008	1	Spring				
③92151	92151-7008	1	Bolt				
③92200	92200-7004	1	Washer				
③92200A	92200-7005	1	Washer				
③92210	92210-0003	4	Nut				
③130	130B0608	3	Bolt-Flanged				



56033 -



56070



56080

56080A



Label Assembly

Kawasaki FH430V-BS28-R

Ref	Part No.	Qty.	Description
③56033	56033-7001	1	Label-Manual
③56070	56070-7001	1	Label-Warning
③56080	56080-2077	1	Label-Brand
③56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 30326 - Mid-Size ProLine T-Bar Gear, 15 HP with 44in Side Discharge Mower

Product Name	Model/Part
Atomic Blade	104-1300
Striping Kit	106-3370
Weight Kit	106-5491
Blade-Atomic, 15.5 Inch (6 Pack)	108-1116
Blade-Extra High Lift, 15.5 Inch (6 Pack)	108-1125
Soft Bag (3 Bushel)	30104
Steel Grass Catcher	30107
Tru Trak Sulky	30110
High Lift Blade	55-4940-03
Recycler Kit	59220
Recycler Blade	92-7952-03
44 Inch Mulching Kit	99-8525

