



**Mid-Size ProLine
T-Bar, Gear Drive
17 HP with 52in Side Discharge Mower**

Model No. 30342 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine Installation Assembly 3	Piston and Crankshaft Assembly Kawasaki FH541V-BS30-R 20
Fuel Tank Assembly 4	Valve and Camshaft Assembly Kawasaki FH541V-BS30-R 22
Lower Control Assembly 5	Lubrication Equipment Assembly Kawasaki FH541V-BS30-R 24
Transmission Drive Assembly 6	Cooling Equipment Assembly Kawasaki FH541V-BS30-R 26
Wheel Drive and Brake Assembly 7	Electric Equipment Assembly Kawasaki FH541V-BS30-R 28
Upper Handle Assembly 8	Control Equipment Assembly Kawasaki FH541V-BS30-R 30
Control Panel Assembly 9	Carburetor Assembly Kawasaki FH541V-BS30-R 32
Carrier Frame Assembly 10	Starter Assembly Kawasaki FH541V-BS30-R 35
Spindle, Pulley and Belt Assembly 11	Fuel Tank and Valve Assembly Kawasaki FH541V-BS30-R 34
Spindle Assembly No. 106-0787 12	Label Assembly Kawasaki FH541V-BS30-R 37
Spindle Assembly No. 106-0785 13	Attachments and Accessories List 38
Deck Assembly 14		
Deflector Assembly No. 107-4194 15		
Drive Belt and Tensioner Assembly 16		
Air Filter and Muffler Assembly Kawasaki FH541V-BS30-R 17		
Cylinder and Crankcase Assembly Kawasaki FH541V-BS30-R 18		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


- | | |
|--------------------------------------------------------------------------|----------------------------------|
| <p>❶ Not illustrated</p> <p>❷ Obtain from your local Kawasaki dealer</p> | <p>❸ Not serviced separately</p> |
|--------------------------------------------------------------------------|----------------------------------|

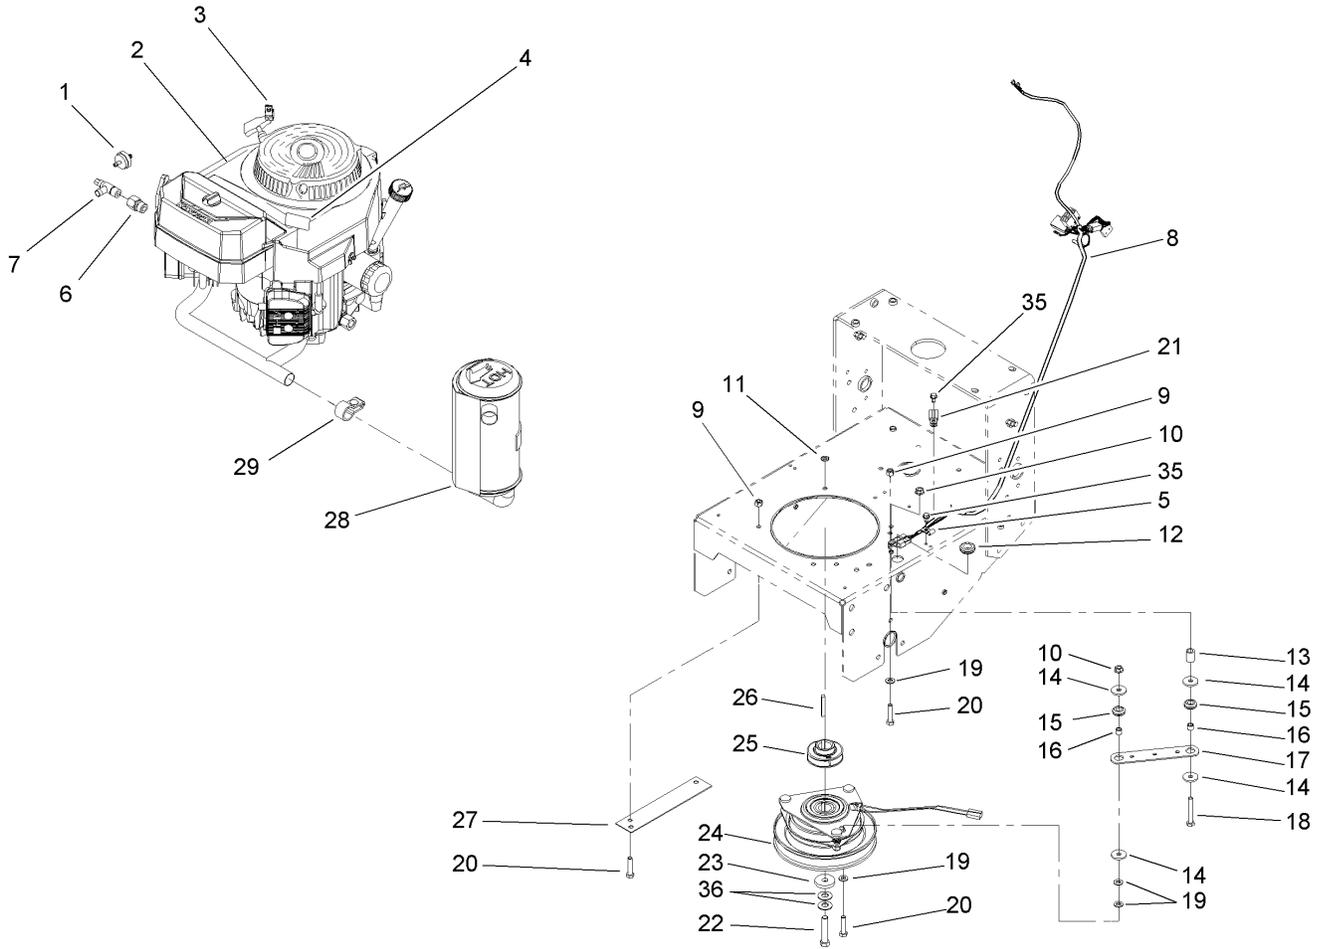

Engine Installation Assembly

Ref	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel
2		1	Engine-Kawasaki, FH541V-Bs30-R17Hp
3	2412-87	1	Clamp-Cable
4	106-0699	1	Decal-Warning, Hot Surfaces
5	2412-72	1	Clip-Closed, Insulated
6	103-1966	1	Adapter
7	103-1965	1	Valve-Drain, Oil
8	104-8137	1	Harness-Wire
9	3296-29	4	Nut-Lock, NI
10	32128-20	2	Nut-HF
11	3255-8	1	Washer-Lock
12	237-124	1	Grommet
13	104-6373	1	Tube-Retainer
14	1-613235	4	Washer
15	1-633630	2	Grommet-Brake
16	1-633545	2	Spacer
17	1-633543-03	1	Strap-Clutch, Brake
18	322-11	1	Screw-HH
19	3256-23	5	Washer-Flat
20	322-7	5	Screw-HH
21	2412-134	1	R-Clamp
22	3212-9	1	Screw-HH
23	107-4136	1	Washer


Ref	Part No.	Qty.	Description
24	105-2635	1	Clutch / Brake
25	107-4112	1	Pulley-Drive
26	608006	1	Key-Square
27	94-5847-01	1	Cover-Pulley
28	100-6467	1	Muffler
29	103-5465	1	Clamp-Muffler
35	12-3270	2	Screw
36	1-603610	2	Washer-Spring
99	103-1964	1	Hose-Drain, Oil

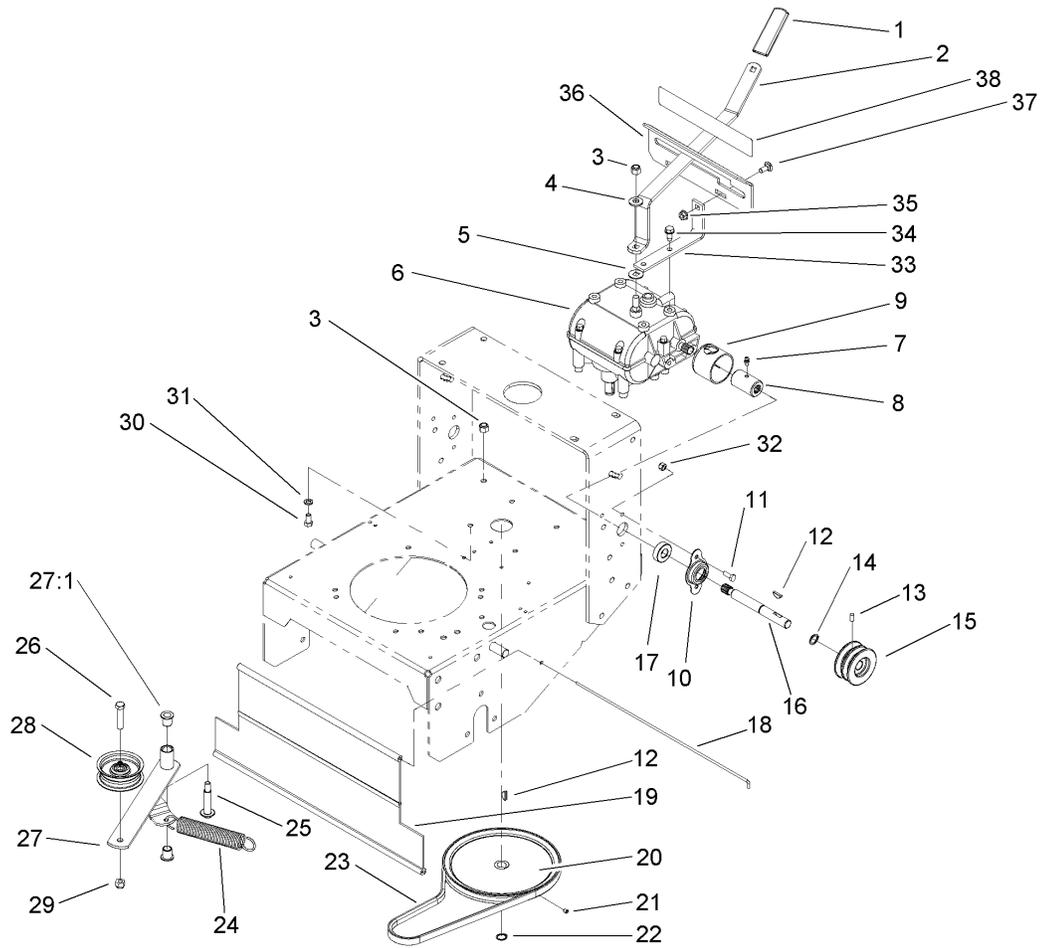

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	68-2190	1	Spring


Ref	Part No.	Qty.	Description
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI
33	1-323389-03	2	Bracket-Plate, Shift
34	9264964	4	Screw-HWH, Thread Cut
35	32128-20	2	Nut-HF
36	1-323387-03	1	Plate-Shift
37	3230-1	2	Bolt-CARR
38	98-3256	1	Decal-Speed, Ground

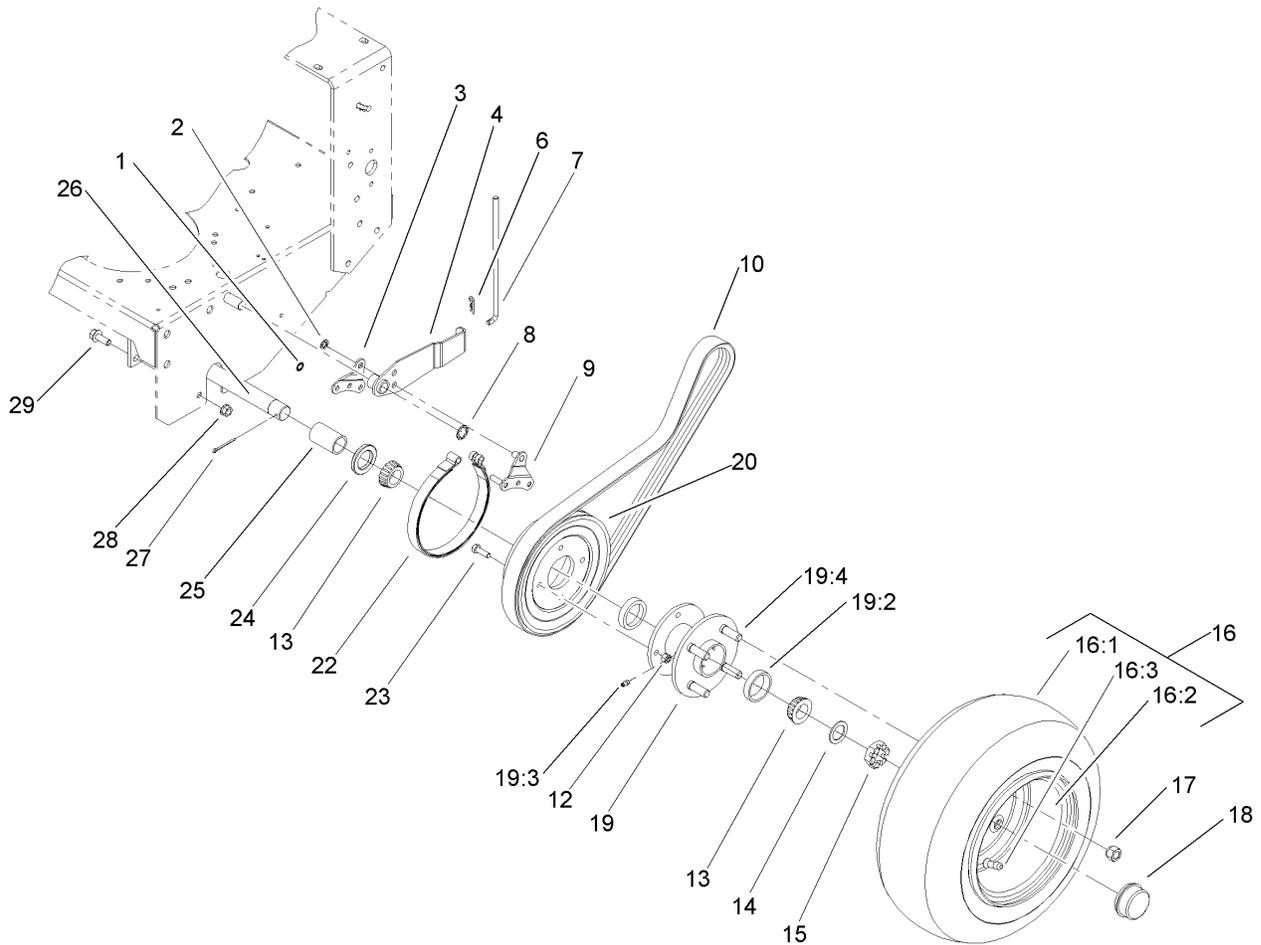

Wheel Drive and Brake Assembly


Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	106-8792	2	Plate-Link, Brake
4	106-8779-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	51-4580	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	51-4290	2	V-Belt
12	3296-29	8	Nut-Lock, NI
13	254-94	4	Bearing-Cone, Tapered
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	106-0892	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	106-0893	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	1-413333	2	Hub/Wheel ASM
19:2	254-72	2	Bearing-Cup, Tapered
19:3	302-19	1	Fitting-Grease
19:4	1-633926	4	Stud-Wheel
20	106-5544	2	Pulley-Wheel

Ref	Part No.	Qty.	Description
22	1-323262	2	Band-Brake
23	322-5	8	Screw-HH
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	104-1196-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

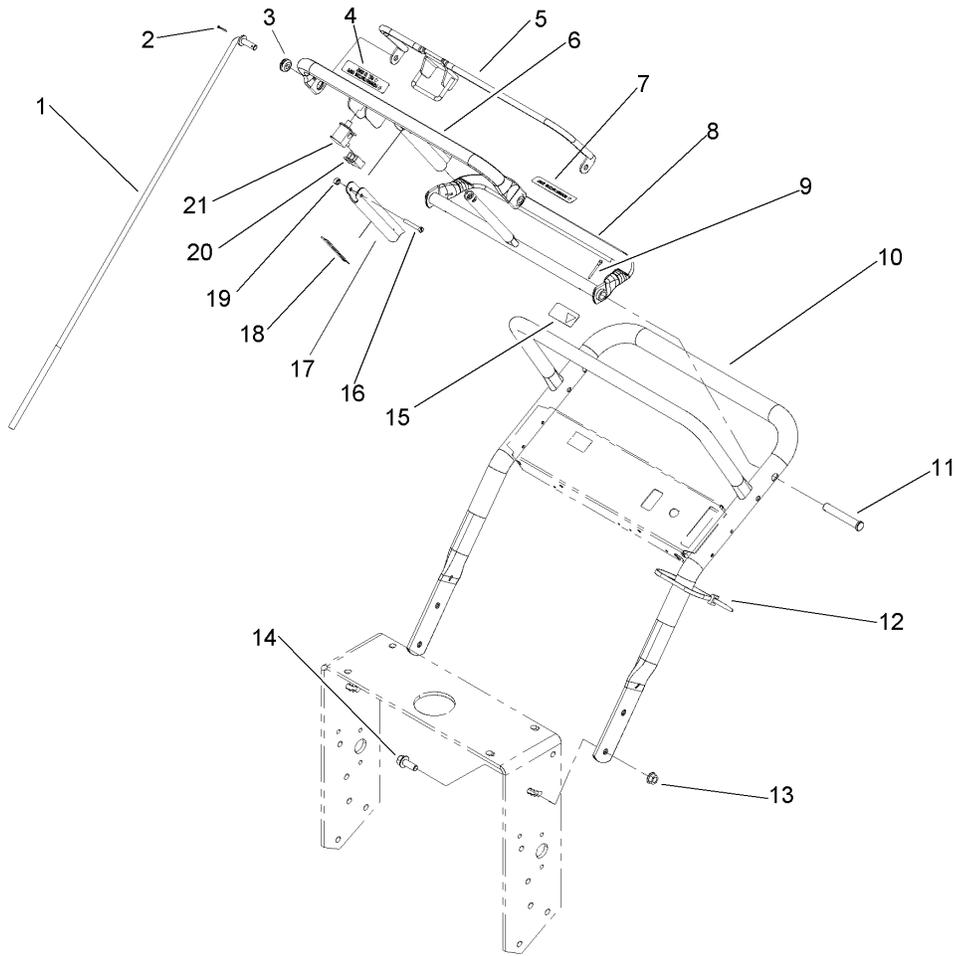

Upper Handle Assembly


Ref	Part No.	Qty.	Description				
1	105-4677	2	Rod-Control				
2	3272-4	2	Pin-Cotter				
3	237-141	2	Grommet-Rubber				
4	82-2290	1	Decal				
5	82-7680-03	1	Bail ASM				
6	82-7690-03	1	Bar-Control				
7	82-2280	1	Decal				
8	106-5477-03	1	Control Pivot ASM				
9	3272-11	2	Pin-Cotter				
10	105-3158-03	1	Upper Handle ASM				
11	283-55	2	Pin-Clevis				
12	3290-378	1	Tie-Cable				
13	32128-21	4	Nut-HF				
14	3234-11	4	Screw-HHF				
15	98-4387	1	Decal-Protection, Ear				
16	32105-1	1	Screw-SHH				
17	51-4850-03	1	Lever-Brake, Parking				
18	52-2010	1	Decal-Lever, Parking				
19	3296-2	1	Nut-Lock				
20	218-595	1	Connector-Body				
21	82-2190	1	Switch-Bail				

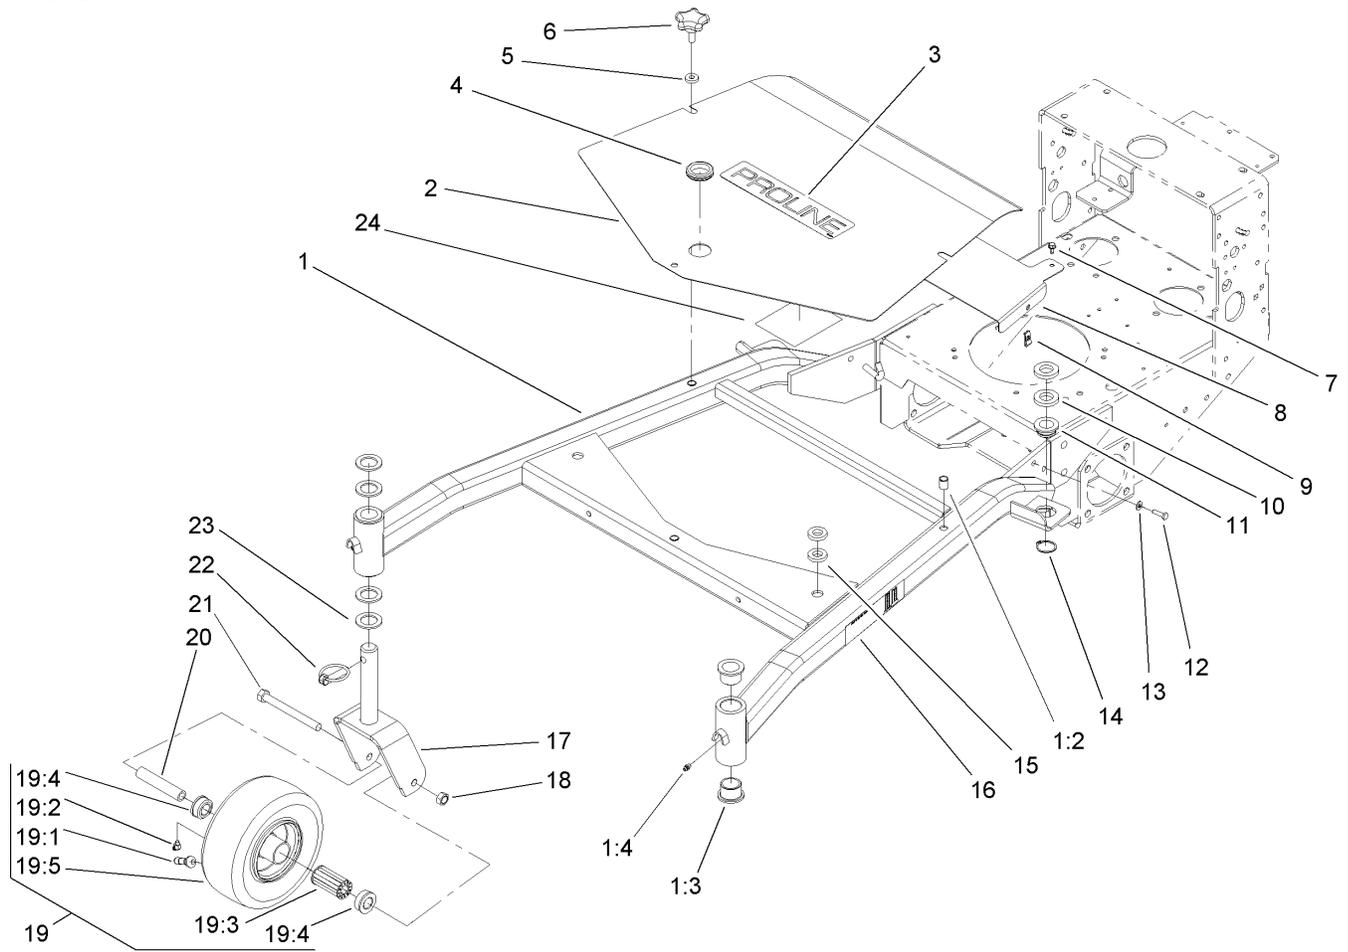

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	106-0708	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	106-3360-01	1	Cover-Frame, Carrier
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	106-0887	3	Knob
7	12-3270	2	Screw
8	106-3361-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	1-323539	4	Spacer-Drive, Blade
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	100-6451	2	Caster Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45 DEG


Ref	Part No.	Qty.	Description
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5505	1	Decal-Service, Gear (Tbar)
24	106-5503	1	Decal-Service, Hydro (Tbar)
24	106-5511	1	Decal-Service, Gear (Pistol Grip)
24	106-5513	1	Decal-Service, Hydro (Pistol Grip)

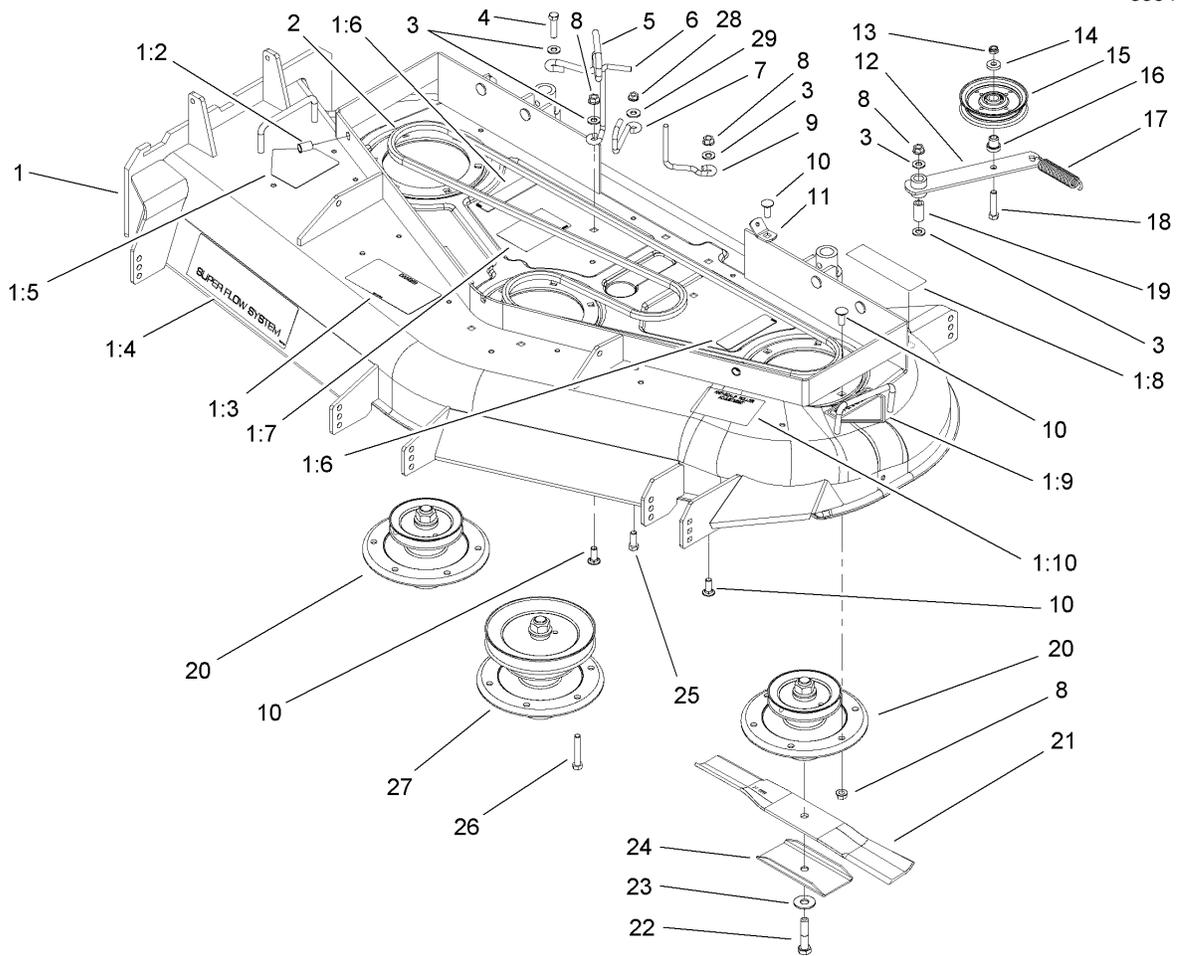

Spindle, Pulley and Belt Assembly


Ref	Part No.	Qty.	Description
1	106-0619	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	66-1340	1	Decal-Danger
1:4	106-0705	1	Decal
1:5	93-1122	1	Decal-Danger
1:6	67-5360	3	Decal-Danger
1:7	104-8186	1	Decal-Routing, Belt
1:8	68-8340	1	Decal-Torque
1:9	43-8480	1	Decal-Danger
1:10	106-5532	1	Decal-Anti Scalp
2	104-6397	1	V-Belt
3	3256-24	5	Washer-Flat
4	323-8	1	Screw-HH
5	105-0850	1	Guide-Belt
6	98-5980	1	Guide-Belt
7	104-6396	1	Guide-Belt
8	32128-21	20	Nut-HF
9	52-4780	1	Rod-Belt
10	3231-22	18	Screw-CARR
11	104-6374	1	Plate-Spring
12	104-6375	1	Idler Arm ASM
13	3296-5	1	Nut-Lock
14	7-0081	1	Washer-Flat
15	65-5940	1	Pulley-Idler

Ref	Part No.	Qty.	Description
16	104-6379	1	Bushing-Pulley
17	51-3650	1	Spring-Extension
18	3211-8	1	Screw-HH
19	51-3640	1	Sleeve
20	106-0787	2	Spindle Housing ASM
21	27-0990-03	3	Blade-18 Inch
22	44-2200	3	Screw-Blade
23	3256-6	3	Washer-Flat
24	92-9820	3	Stiffener-Blade
25	323-6	1	Screw-HH
26	323-11	1	Screw-HH
27	106-0785	1	Spindle Housing ASM
28	32128-25	1	Nut-HF
29	3256-3	1	Washer-Flat

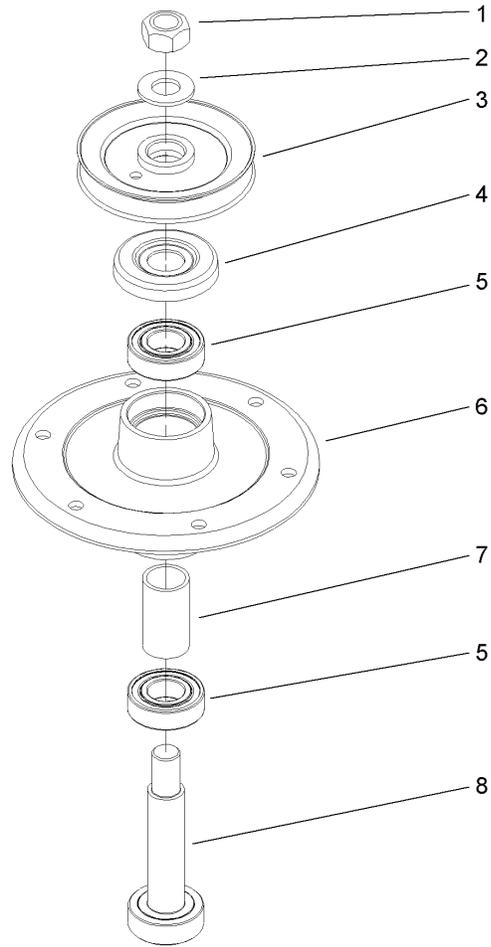


Spindle Assembly No. 106-0787

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1118	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0782	1	Shaft-Spindle

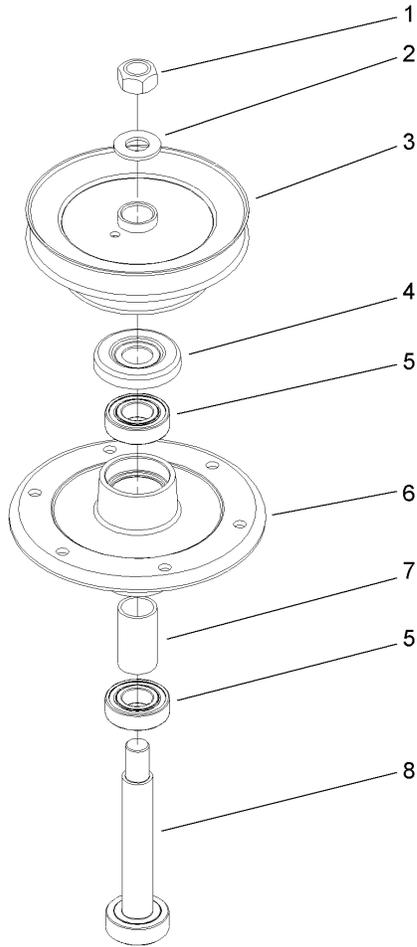

Spindle Assembly No. 106-0785


Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1117	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0781	1	Shaft-Spindle

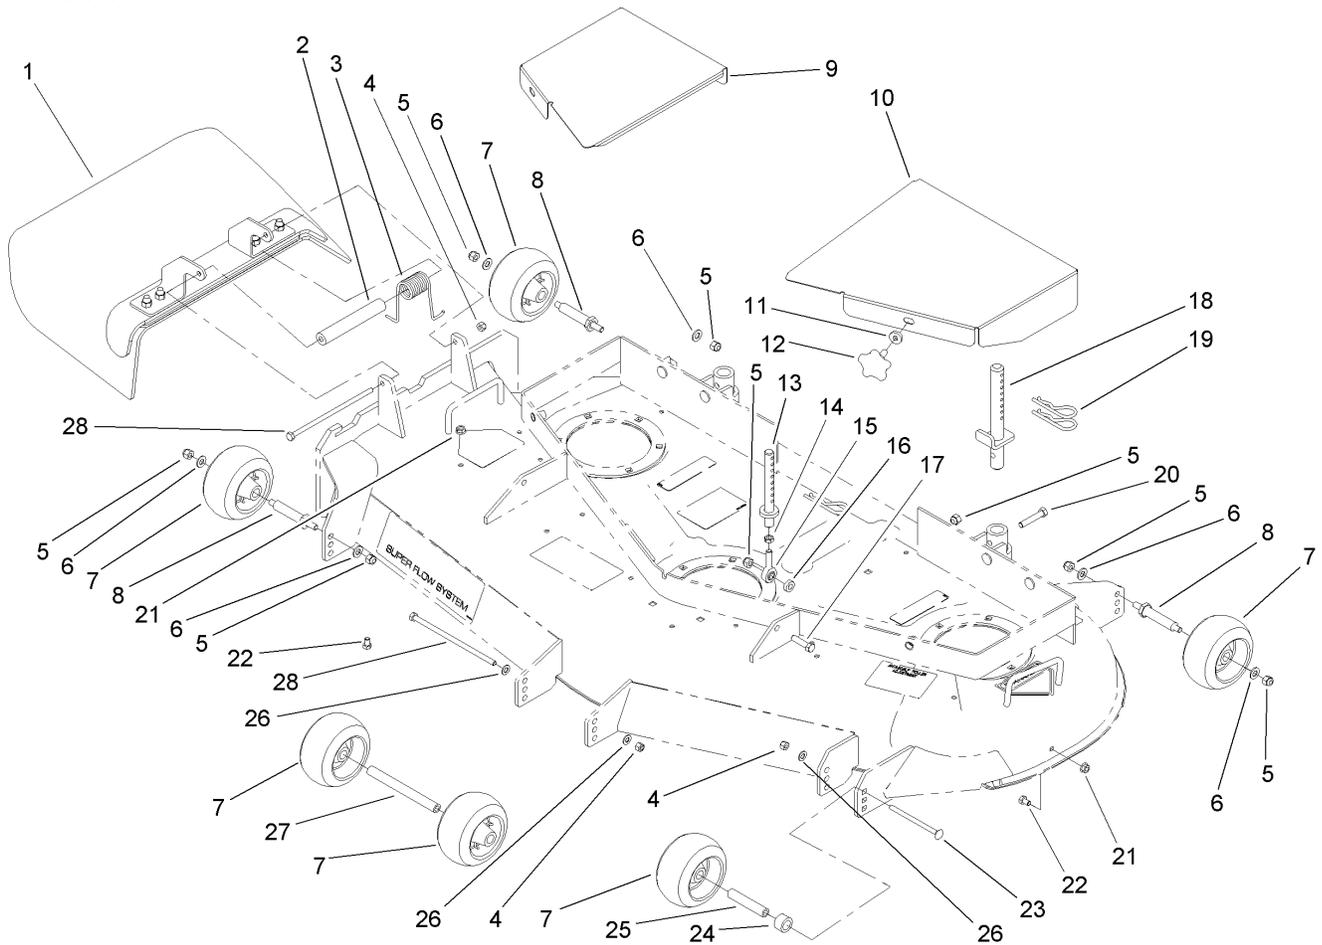

Deck Assembly

Ref	Part No.	Qty.	Description
1	107-4194	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	3296-39	10	Nut-Lock, NI
6	3256-24	6	Washer-Flat
7	1-603299	6	Roller-Scalp, Anti
8	99-2842	3	Spacer
9	106-3363-01	1	Cover-Belt, RH
10	106-3362-01	1	Cover-Belt, LH
11	106-0565	2	Washer-Rubber
12	106-0887	2	Knob
13	106-0684	2	Front Pin ASM
14	3220-3	2	Nut-Hex, Jam
15	1-613204	2	Balljoint
16	104-1156	2	Spacer
17	323-8	2	Screw-HH
18	106-3365	2	Rear Pin ASM
19	3290-256	6	Pin-Hair
20	323-10	2	Screw-HH
21	32128-20	6	Nut-HF
22	322-1	6	Screw-HH
23	3230-30	1	Screw-CARR
24	106-0563	1	Spacer-Wheel

Ref	Part No.	Qty.	Description
25	106-0545	1	Bushing-Roller
26	3256-23	3	Washer-Flat
27	98-5967	1	Spacer-Wheel
28	322-50	2	Screw-HH

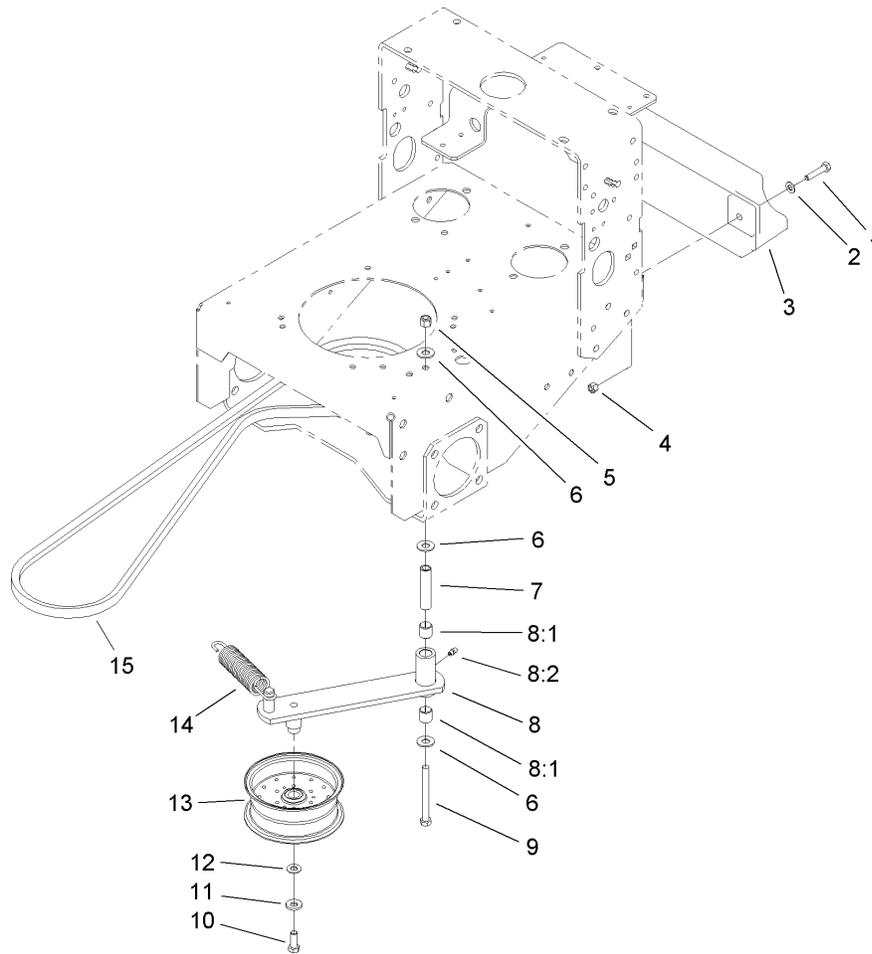


Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description
1	322-7	2	Screw-HH
2	3256-23	2	Washer-Flat
3	105-3173-01	1	Weight-Rear
4	3296-29	2	Nut-Lock, NI
5	3296-39	1	Nut-Lock, NI
6	52-2860	3	Washer
7	104-6377	1	Tube-Idler
8	106-0734	1	Idler Arm ASM
8:1	1-513034	2	Sleeve-Bearing
8:2	302-5	1	Fitting-Grease
9	323-42	1	Screw-HH
10	323-6	1	Screw-HH
11	98-5975	1	Washer-Belleville
12	3256-24	1	Washer-Flat
13	1-413099	1	Pulley-Idler
14	105-8443	1	Spring-Extension
15	106-0632	1	V-Belt

--	--	--	--


Cylinder and Crankcase Assembly Kawasaki FH541V-BS30-R

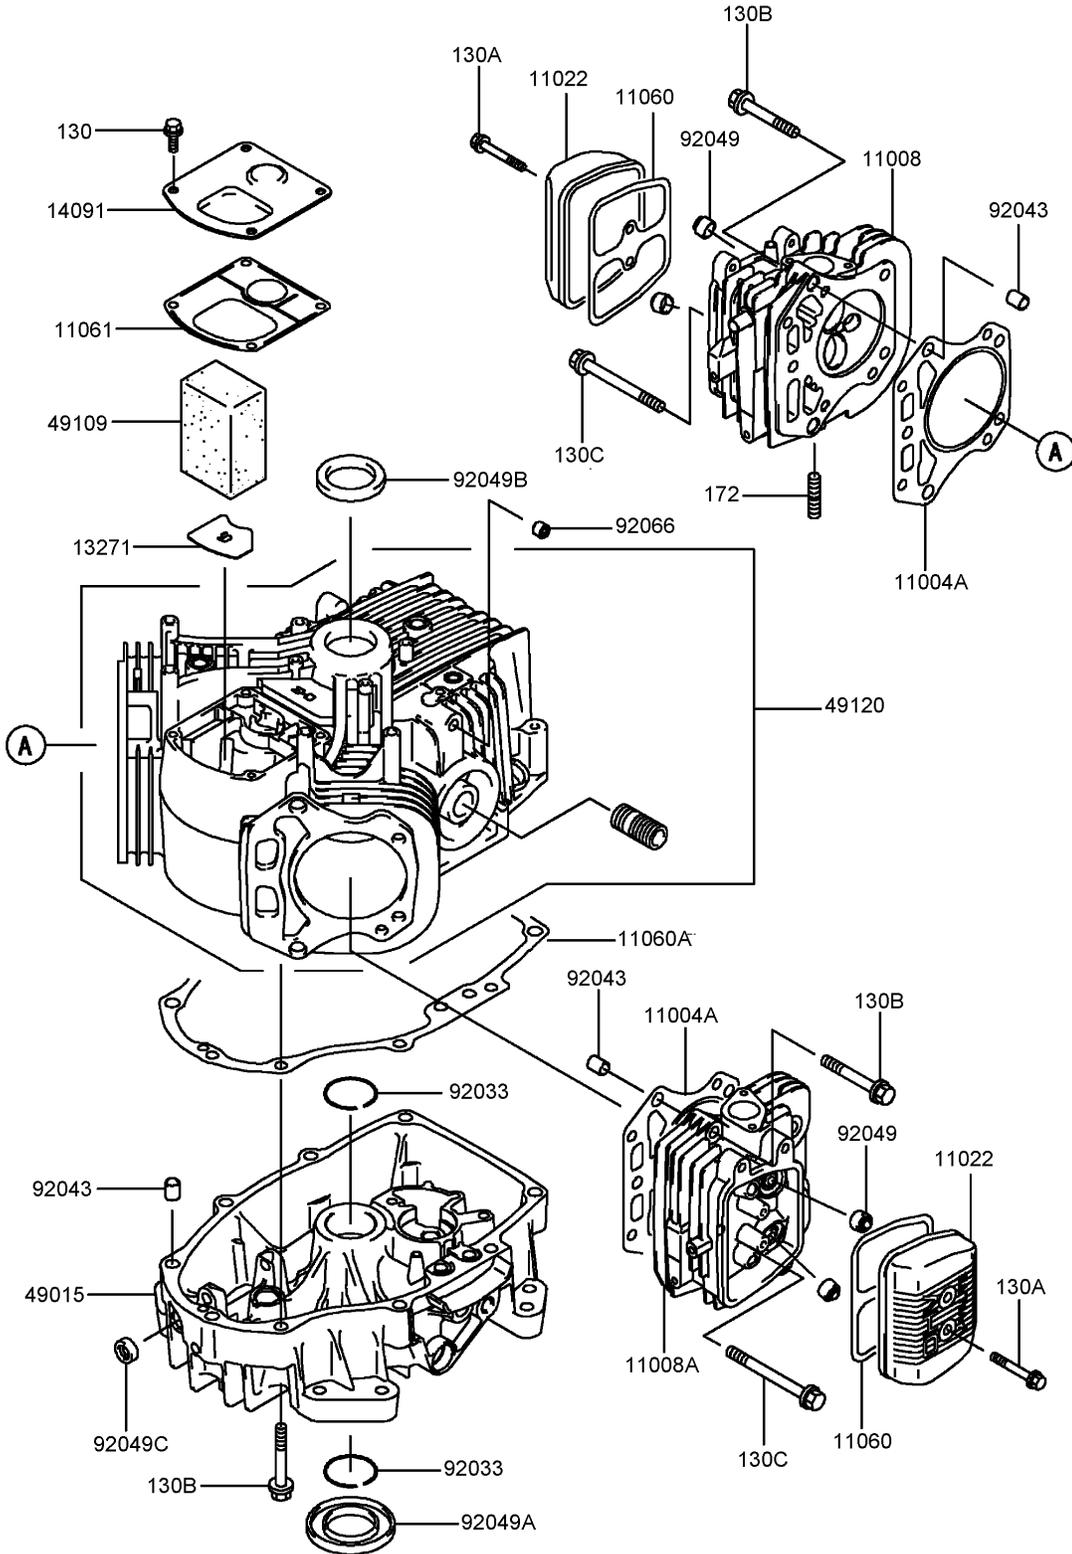

Cylinder and Crankcase Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
⑤11004A	11004-7016	2	Gasket-Head				
⑤11008	11008-6043	1	Head-Cylinder, No. 1				
⑤11008A	11008-7020	1	Head-Cylinder, No. 2				
⑤11022	11022-7003	2	Case-Rocker				
⑤11060	11060-7001	2	Gasket-Case, Rocker				
⑤11060A	11060-7008	1	Gasket-Cover, Crankcase				
⑤11061	11061-7001	1	Gasket-Breather				
⑤13271	13271-7016	1	Plate				
⑤14091	14091-7006	1	Cover				
⑤49015	49015-6253	1	Cover-Crankcase				
⑤49109	49109-7002	1	Element-Breather				
⑤49120	49120-7023	1	Crankcase				
⑤92033	92033-7003	2	Ring-Snap				
⑤92043	92043-7001	6	Pin				
⑤92049	92049-7001	4	Seal-Oil, Rvc2 (6X11X10.2)				
⑤92049A	92049-7015	1	Seal-Oil, Sd (35X62X8 L Hs)				
⑤92049B	92049-7016	1	Seal-Oil, Sd (35X48X8 R Hs)				
⑤92049C	92049-7019	1	Seal-Oil, So (8X14X5 Hs)				
⑤92066	92066-7002	1	Plug				
⑤130	130B0612	4	Bolt-Flanged				
⑤130A	130B0640	4	Bolt-Flanged				
⑤130B	130T0850	17	Bolt-Flanged				
⑤130C	130T0875	2	Bolt-Flanged				
⑤172	172G0818	4	Bolt-Stud				


Piston and Crankshaft Assembly Kawasaki FH541V-BS30-R

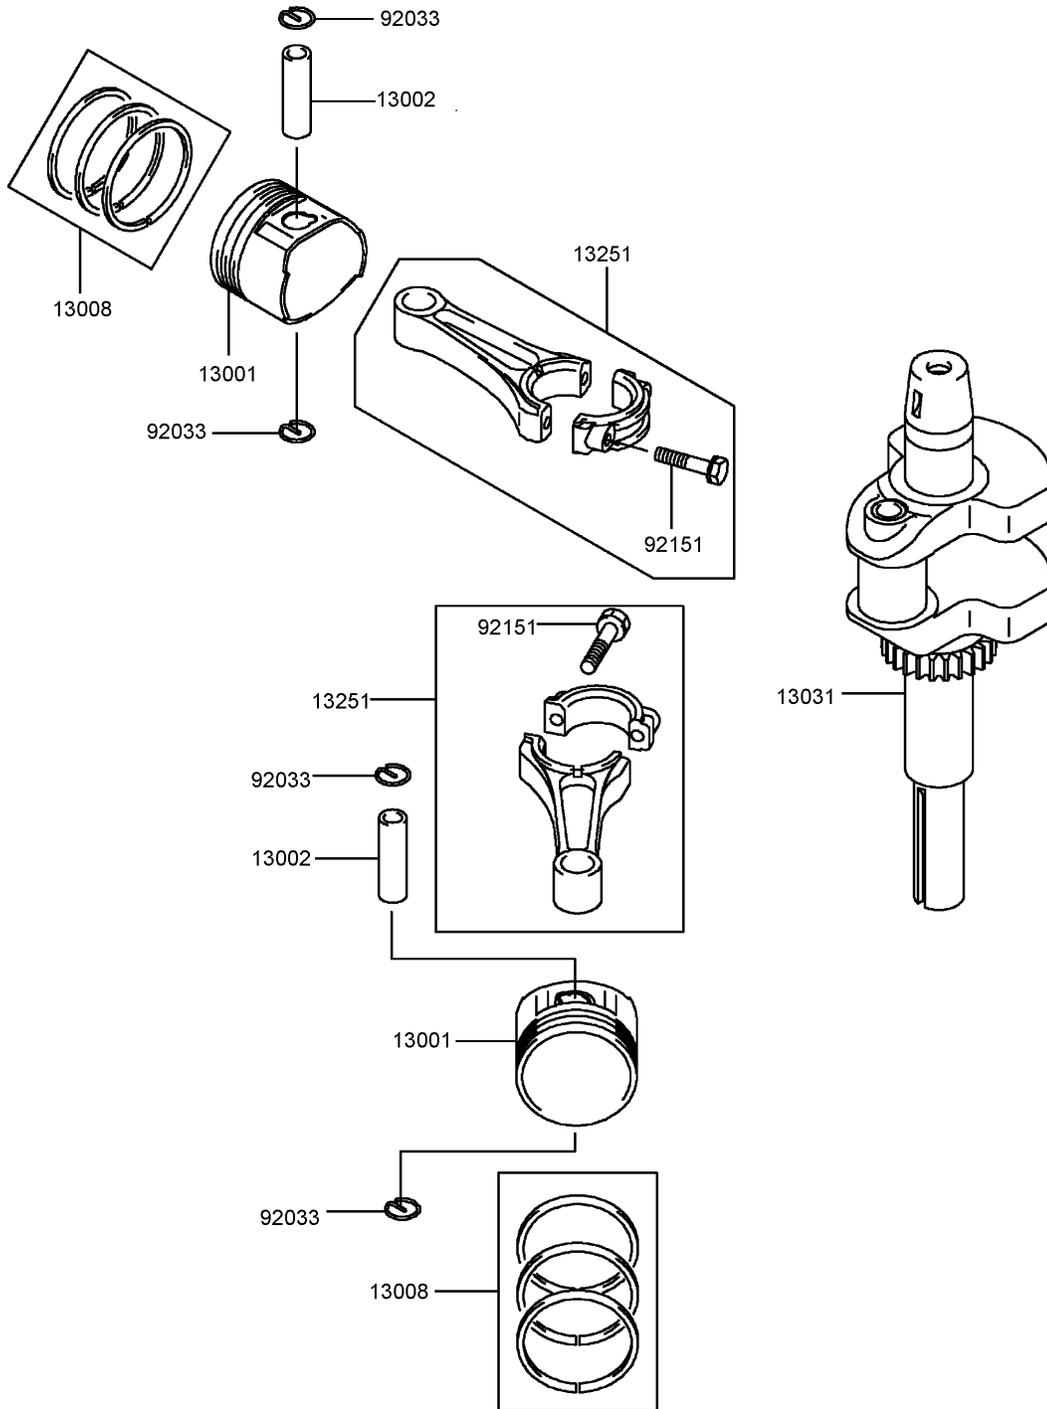

Piston and Crankshaft Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
⑤13001	13001-7010	2	Piston-Engine				
⑤13002	13002-7001	2	Pin-Piston				
⑤13008	13008-6060	2	Ring Set-Piston				
⑤13031	13031-7036	1	Crankshaft				
⑤13251	13251-7010	2	Connecting Rod ASM				
⑤92033	92033-7005	4	Ring-Snap				
⑤92151	92151-7017	4	Bolt (6X35)				


Valve and Camshaft Assembly Kawasaki FH541V-BS30-R

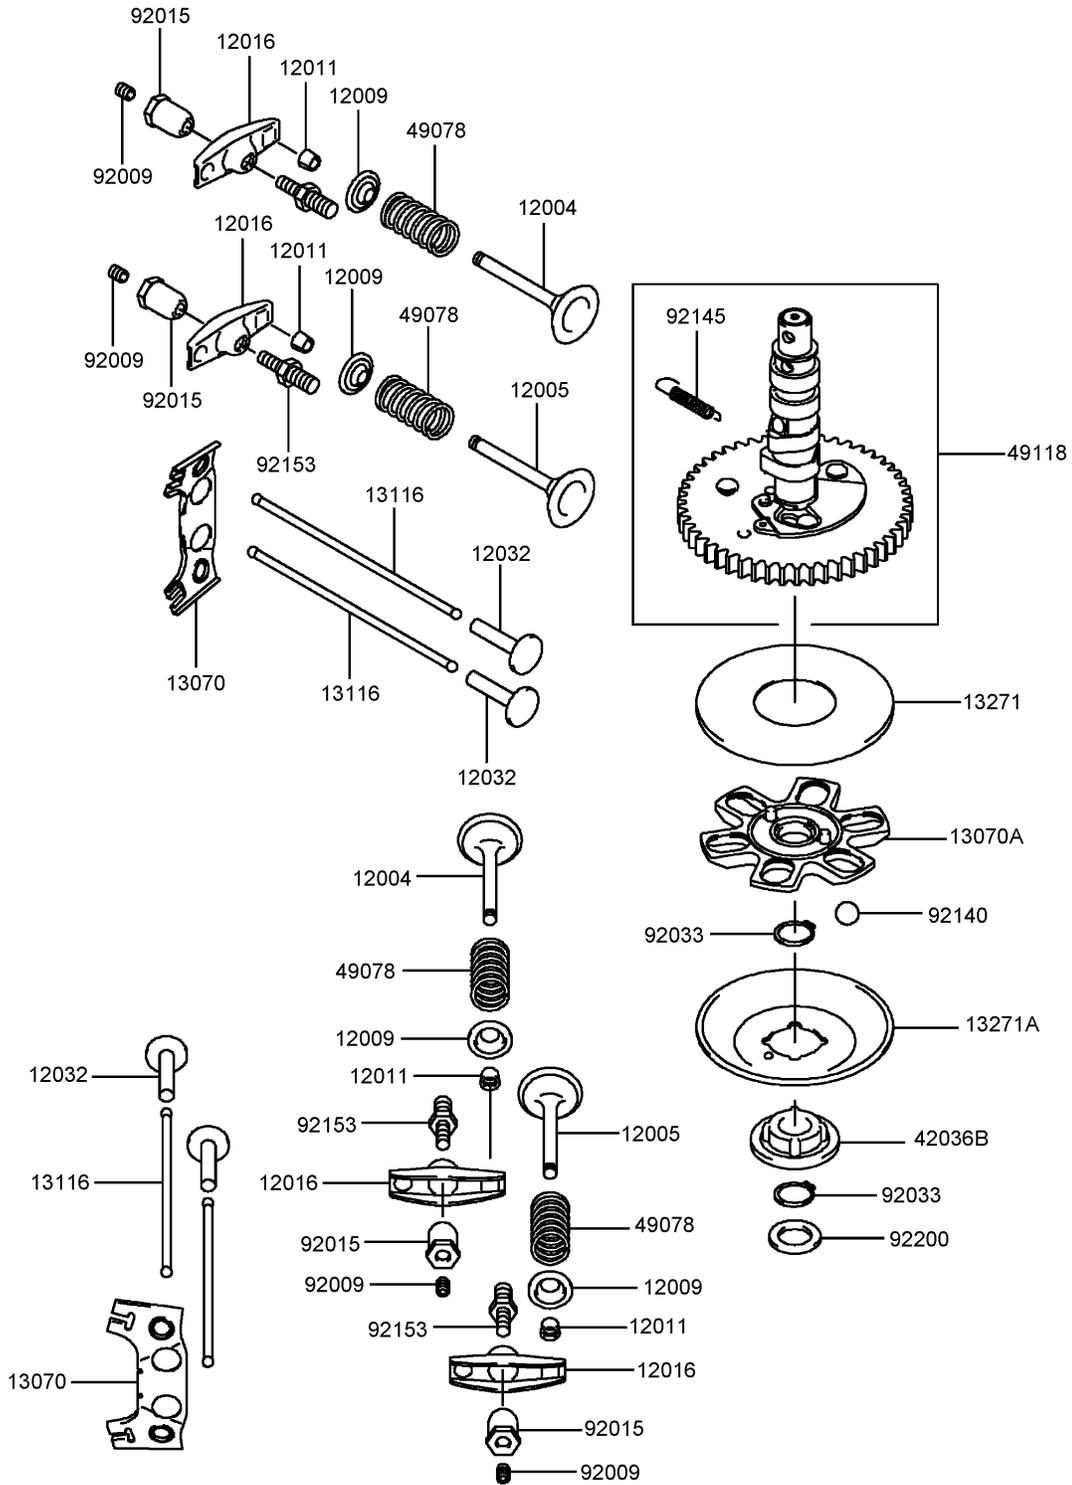

Valve and Camshaft Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
⑤12004	12004-7003	2	Valve-Intake				
⑤12005	12005-7003	2	Valve-Exhaust				
⑤12009	12009-7001	4	Retainer-Spring, Valve				
⑤12011	12011-2056	8	Collet				
⑤12016	12016-7001	4	Arm-Rocker				
⑤12032	12032-7001	4	Tappet				
⑤13070	13070-7001	2	Guide				
⑤13070A	13070-7004	1	Guide				
⑤13116	13116-2057	4	Rod-Push				
⑤13271	13271-7007	1	Plate				
⑤13271A	13271-7021	1	Plate-Governor				
⑤42036B	42036-7010	1	Sleeve				
⑤49078	49078-7001	4	Spring-Valve, Engine				
⑤49118	49118-7004	1	Camshaft				
⑤92009	92009-2341	4	Screw				
⑤92015	92015-2253	4	Nut				
⑤92033	92033-7001	2	Ring-Snap				
⑤92140	92140-7002	6	Ball				
⑤92145	92145-7001	1	Spring				
⑤92153	92153-7019	4	Bolt				
⑤92200	92200-7001	1	Washer				


Lubrication Equipment Assembly Kawasaki FH541V-BS30-R

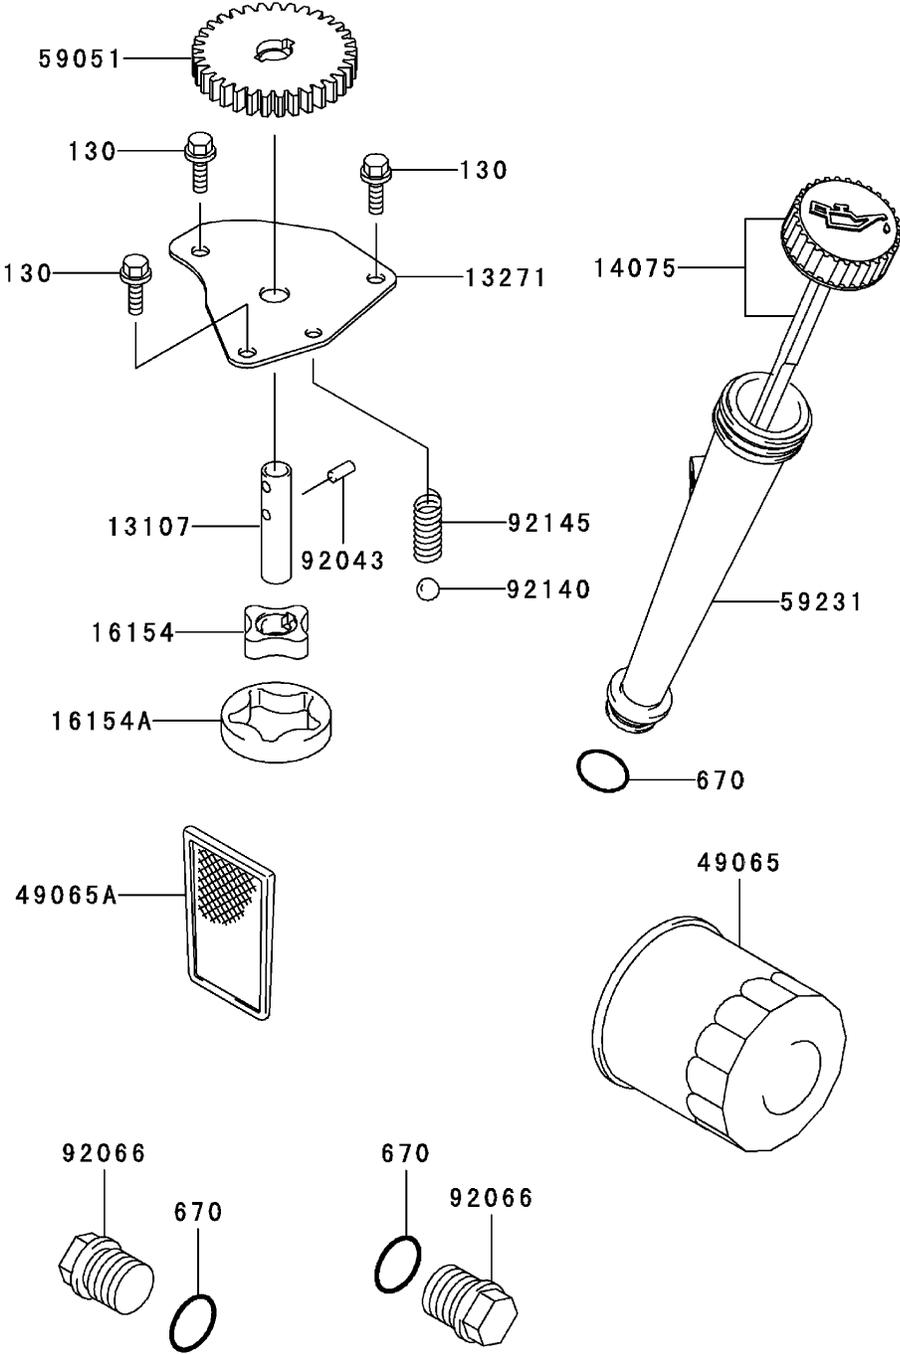

Lubrication Equipment Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
③13107	13107-7009	1	Shaft				
③13271	13271-7017	1	Plate				
③14075	14075-7009	1	Cap ASM				
③16154	16154-2053	1	Rotor-Pump (In)				
③16154A	16154-2054	1	Rotor-Pump (Out)				
③49065	49065-2078	1	Filter-Oil				
③49065A	49065-7004	1	Filter-Oil				
③59051	59051-7011	1	Gear-Spur				
③59231	59231-7005	1	Filler				
③92043	92043-7003	2	Pin				
③92066	92066-7003	2	Plug				
③92140	92140-7003	1	Ball				
③92145	92145-7002	1	Spring				
③130	130B0612	3	Bolt-Flanged				
③670	670D2016	3	O-Ring (16Mm)				


Cooling Equipment Assembly Kawasaki FH541V-BS30-R

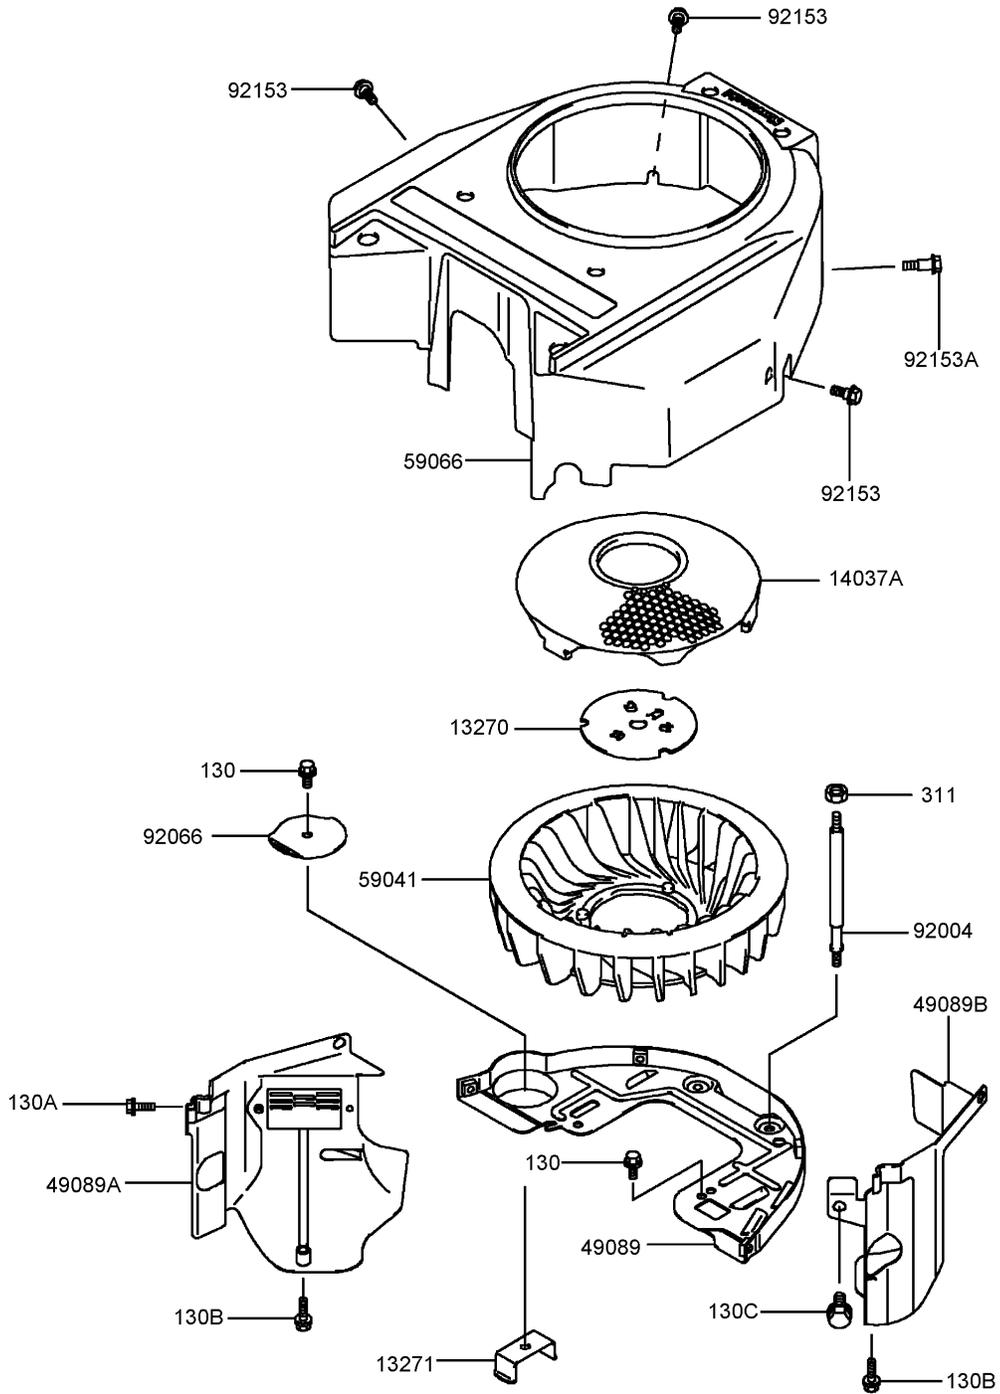

Cooling Equipment Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
③13270	13270-7007	1	Plate				
③13271	13271-7002	1	Plate				
③14037A	14037-7025-9H	1	Screen				
③49089	49089-7032	1	Shroud-Engine				
③49089A	49089-7042	1	Shroud-Engine				
③49089B	49089-7043	1	Shroud-Engine				
③59041	59041-7010	1	Fan				
③59066	59066-7024	1	Housing-Fan				
③92004	92004-7006	2	Stud				
③92066	92066-7004	1	Plug				
③92153	92153-7007	3	Bolt				
③92153A	92153-7008	1	Bolt				
③130	130B0612	3	Bolt-Flanged				
③130A	130B0616	2	Bolt-Flanged				
③130B	130B0625	2	Bolt-Flanged				
③130C	130B0816	1	Bolt-Flanged				
③311	311B0600	2	Nut-Hex				



Electric Equipment Assembly Kawasaki FH541V-BS30-R

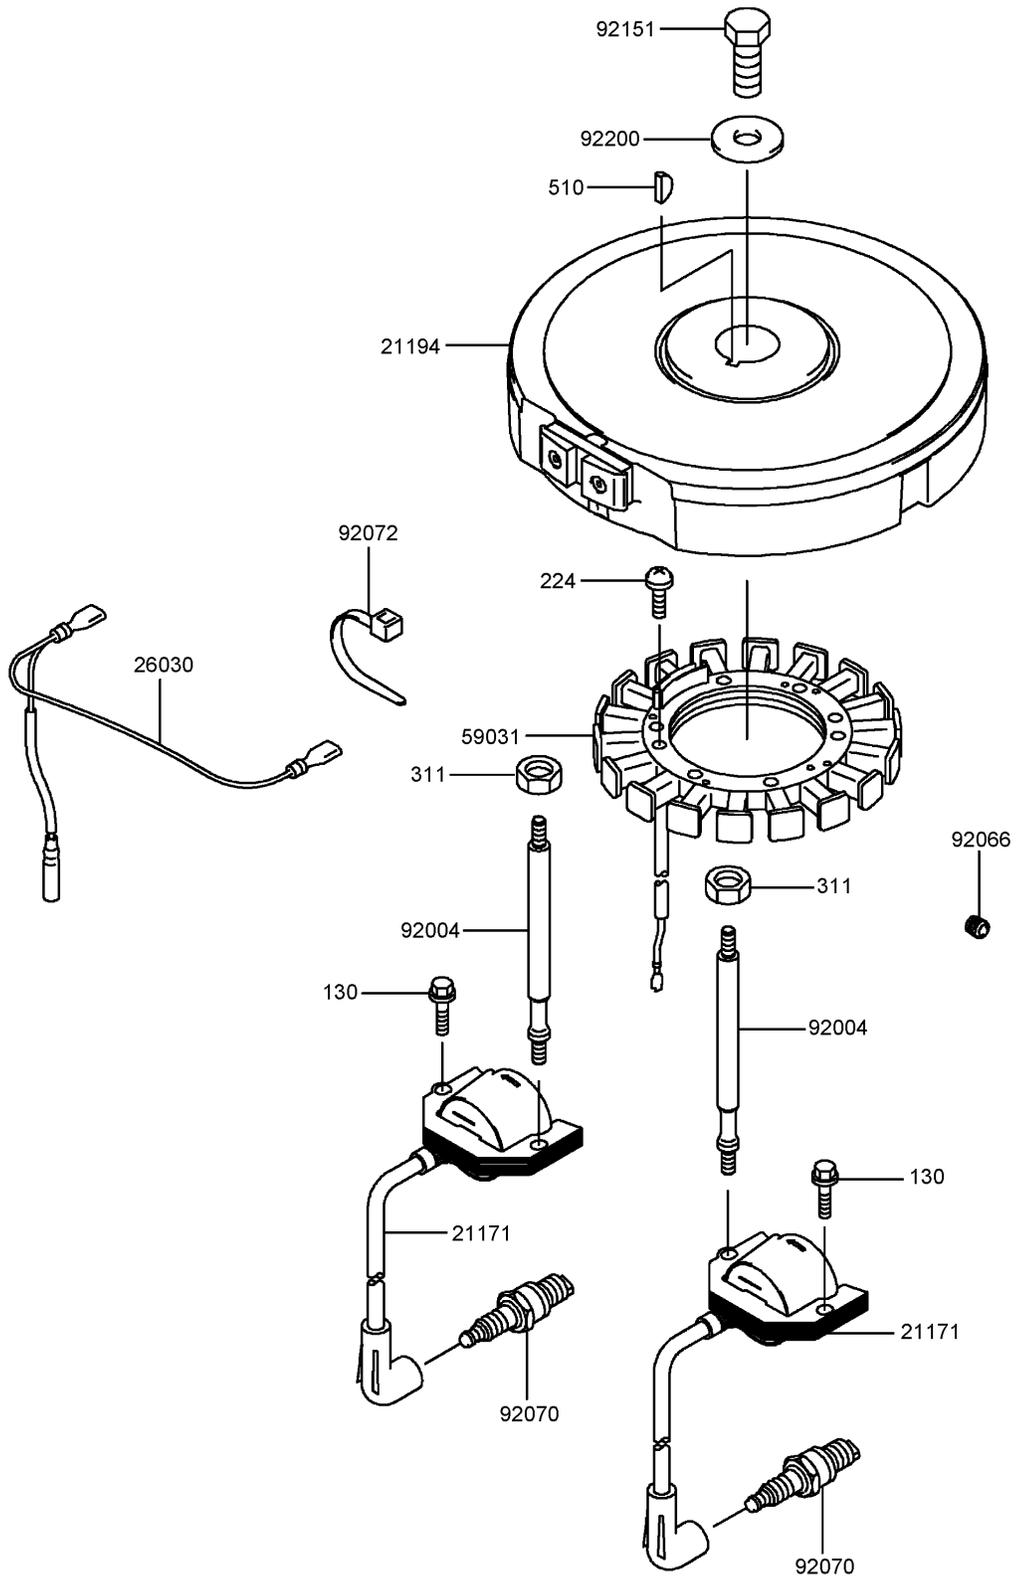

Electric Equipment Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
③21171	21171-7013	2	Ignition Coil ASM				
③21194	21194-7007	1	Flywheel-Comp				
③26030	26030-7001	1	Harness				
③59031	59031-7002	1	Coil-Charging				
③92004	92004-7009	2	Stud				
③92066	92066-7002	1	Plug				
③92070	92070-7003	2	Plug-Spark (Rcj8Y, Solid)				
③92072	92072-7003	2	Band				
③92151	92151-2097	1	Bolt (12X30)				
③92200	92200-7002	1	Washer				
③130	130B0620	2	Bolt-Flanged				
③224	224B0520	4	Screw-Pan				
③311	311B0600	2	Nut-Hex				
③510	510A5100	1	Key-Woodruff				


Control Equipment Assembly Kawasaki FH541V-BS30-R

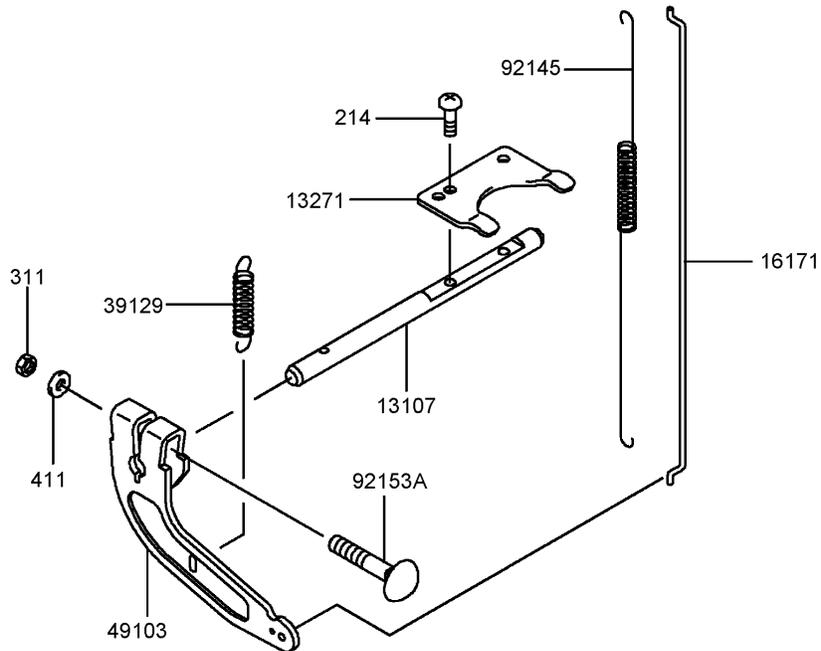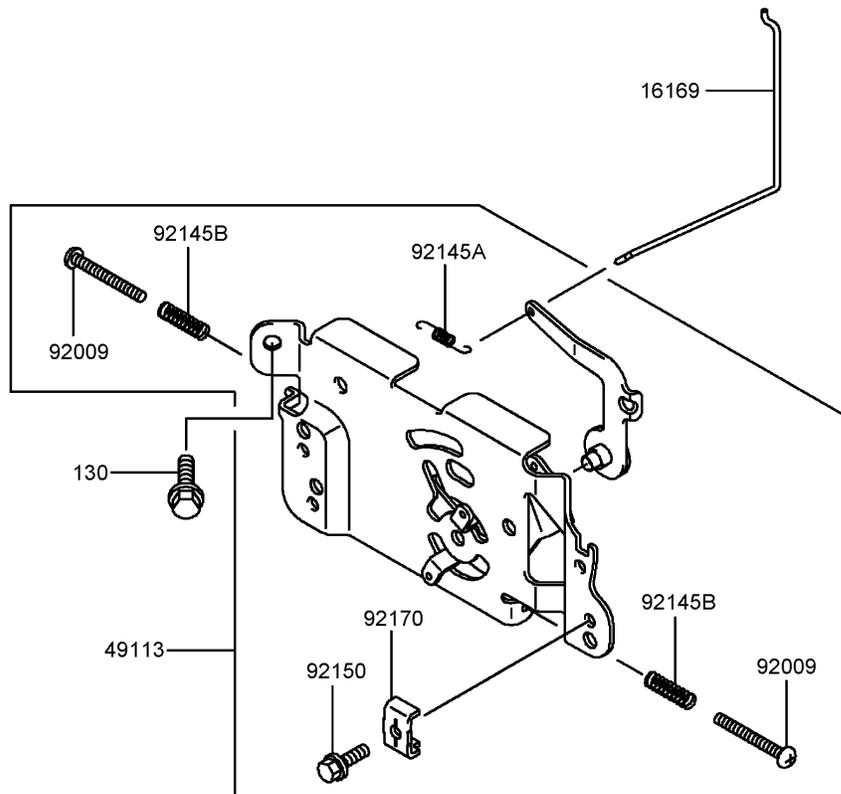

Control Equipment Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
③13107	13107-7010	1	Shaft				
③13271	13271-7018	1	Plate				
③16169	16169-7010	1	Link-Choke				
③16171	16171-7001	1	Link				
③39129	39129-7003	1	Spring-Governor				
③49103	49103-7004	1	Arm-Governor				
③49113	49113-7027	1	Panel-Control				
③92009	92009-7007	2	Screw (4X35)				
③92145	92145-7003	1	Spring				
③92145A	92145-7004	1	Spring				
③92145B	92145-7005	2	Spring				
③92150	92150-2182	1	Bolt (5X18)				
③92153A	92153-7033	1	Bolt (6X35)				
③92170	92170-7001	1	Clamp				
③130	130B0612	2	Bolt-Flanged				
③214	214B0408	2	Screw-Pan				
③311	311B0600	1	Nut-Hex				
③411	411b0600	1	Washer-Plain				

Carburetor Assembly Kawasaki FH541V-BS30-R

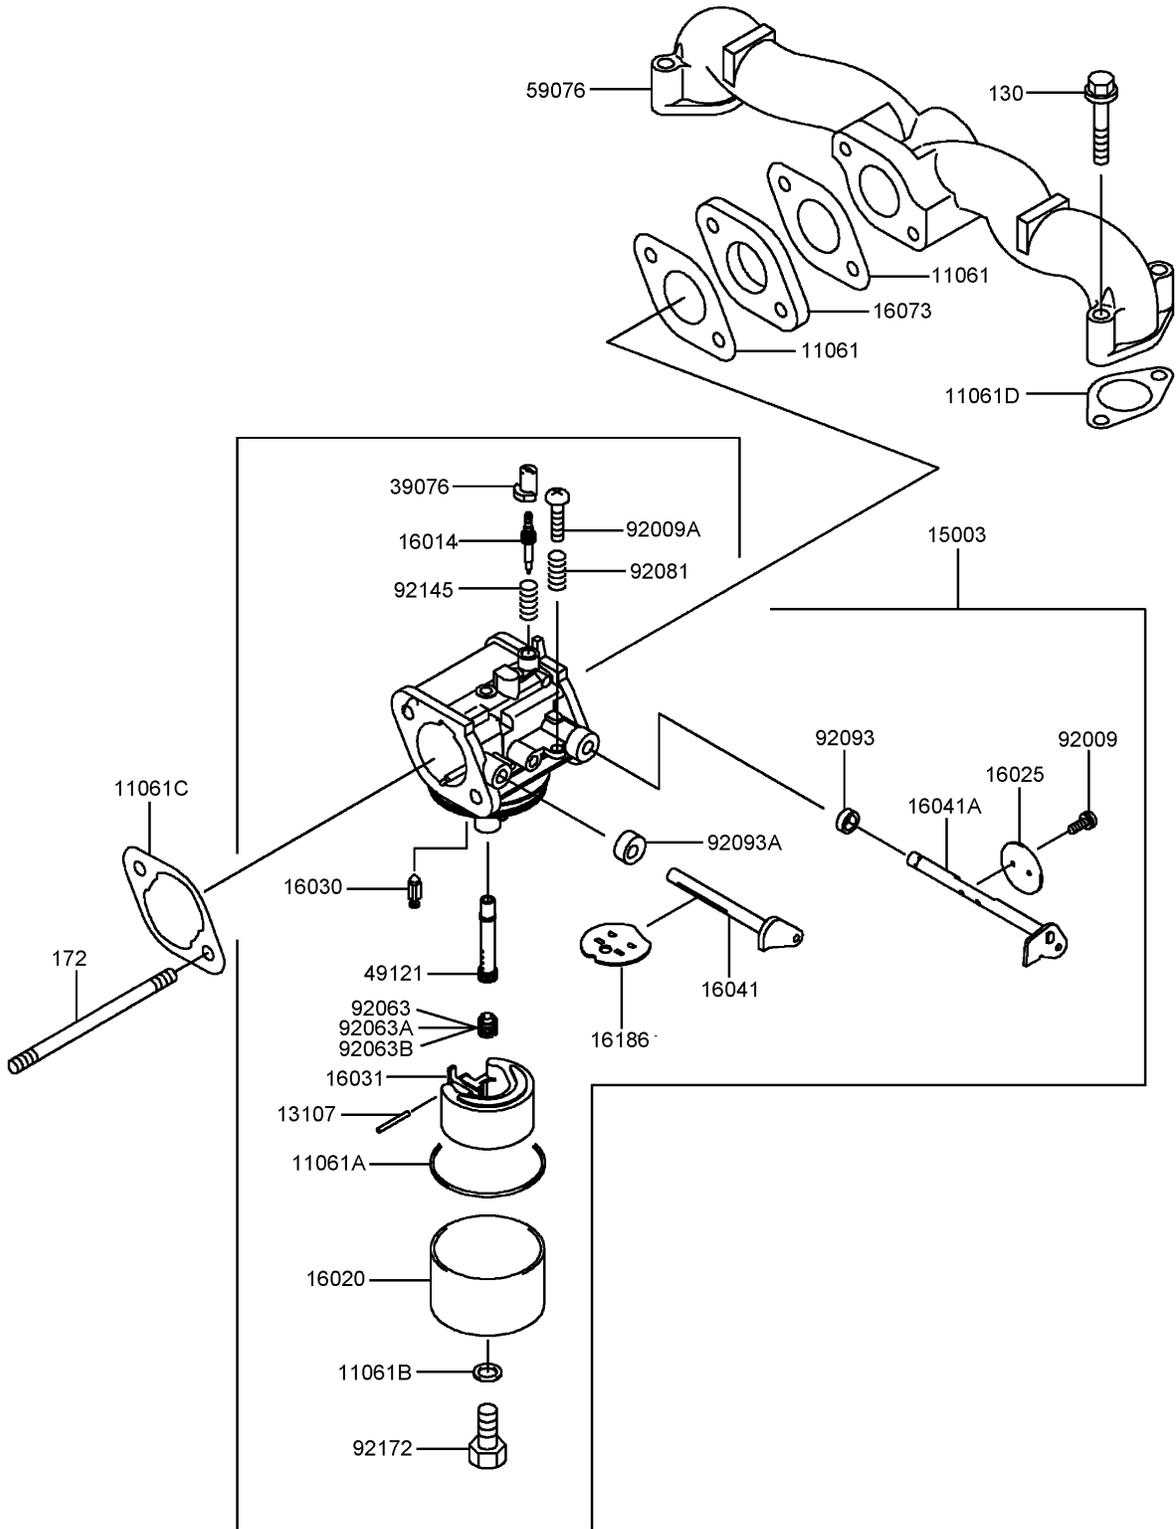


Carburetor Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
③11061	11061-7004	2	Gasket-Insulator				
③11061A	11061-7009	1	Gasket-Chamber				
③11061B	11061-7010	1	Gasket-Screw				
③11061C	11061-7018	1	Gasket-Cleaner, Air				
③11061D	11061-7019	2	Gasket				
③13107	13107-7018	1	Shaft				
③15003	15003-7107	1	Carburetor ASM				
③16014	16014-7007	1	Screw-Air, Pilot				
③16020	16020-7003	1	Chamber-Float				
③16025	16025-7006	1	Valve-Throttle				
③16030	16030-7003	1	Valve-Float				
③16031	16031-7002	1	Float				
③16041	16041-7016	1	Shaft-Choke, Carburetor				
③16041A	16041-7018	1	Shaft-Throttle, Carburetor				
③16073	16073-7007	1	Insulator				
③16186	16186-7004	1	Choke Valve ASM				
③39076	39076-7001	1	Limiter				
③49121	49121-7010	1	Nozzle-Main				
③59076	59076-7001	1	Manifold-Intake				
③92009	92009-2083	2	Screw				
③92009A	92009-2349	1	Screw				
③92063	92063-7062	1	Jet-Main, No.110				
③92063A	92063-7065	1	Jet-Main, No.112				
③92063B	92063-7066	1	Jet-Main, No.108				
③92081	92081-2234	1	Spring				
③92093	92093-2100	1	Seal				
③92093A	92093-7003	1	Seal				
③92145	92145-7015	1	Spring				
③92172	92172-7002	1	Screw				
③130	130B0635	4	Bolt-Flanged				
③172	172G0690	2	Bolt-Stud				


Starter Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
③13165	13165-7001	2	Pawl-Starter, Recoil				
③13271	13271-7003-9H	1	Plate				
③14020	14020-7001	1	Retainer				
③32099	32099-7002	1	Case-Recoil, Starter				
③46075	46075-7001	1	Grip-Recoil, Starter				
③49080	49080-7001	1	Pulley-Starting				
③49088	49088-7013	1	Starter-Recoil				
③59101	59101-7001	1	Reel-Recoil				
③59106A	59106-7005	1	Rope				
③92145	92145-7006	1	Spring				
③92145A	92145-7007	2	Spring				
③92145B	92145-7008	1	Spring				
③92151	92151-7008	1	Bolt				
③92200	92200-7004	1	Washer				
③92200A	92200-7005	1	Washer				
③92210	92210-0003	4	Nut				
③130	130B0608	3	Bolt-Flanged				

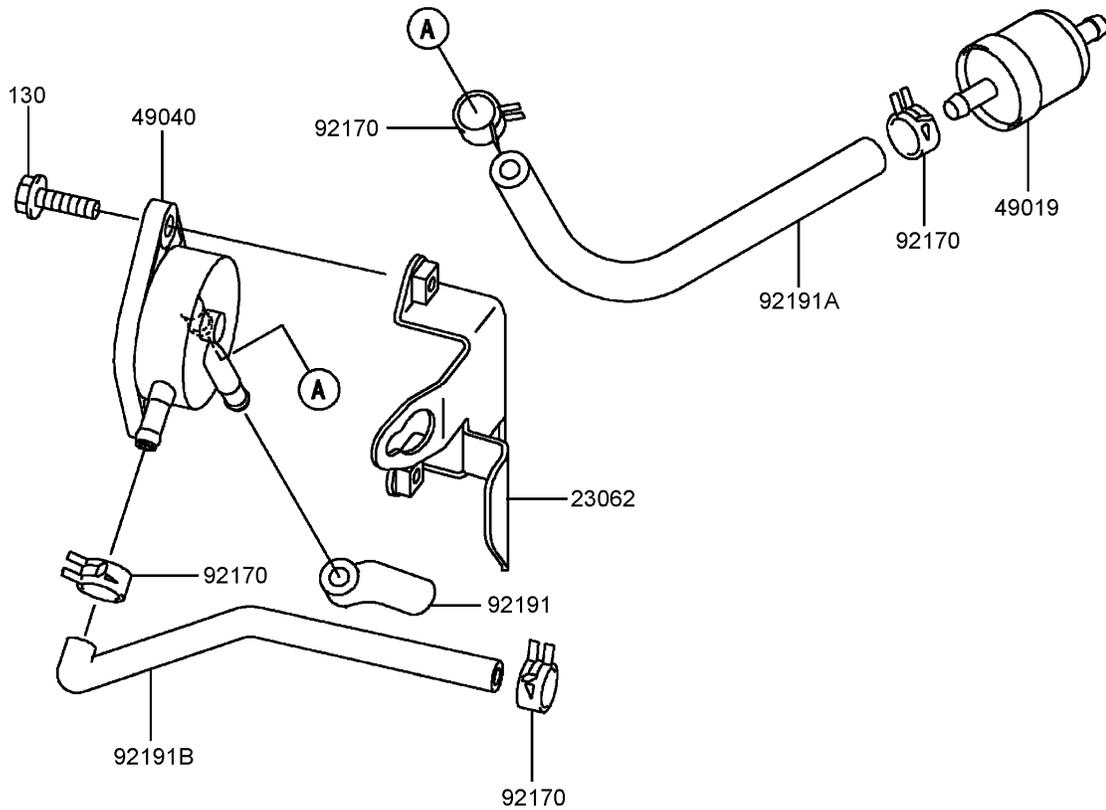

Fuel Tank and Valve Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description				
②	23062	1	Bracket				
②	49019	1	Filter-Fuel				
②	49040	1	Pump-Fuel				
④	92170	4	Clamp				
②	92191	1	Tube				
②	92191A	1	Tube (6.35X12.7X160)				
②	92191B	1	Tube				
②	130	2	Bolt-Flanged				

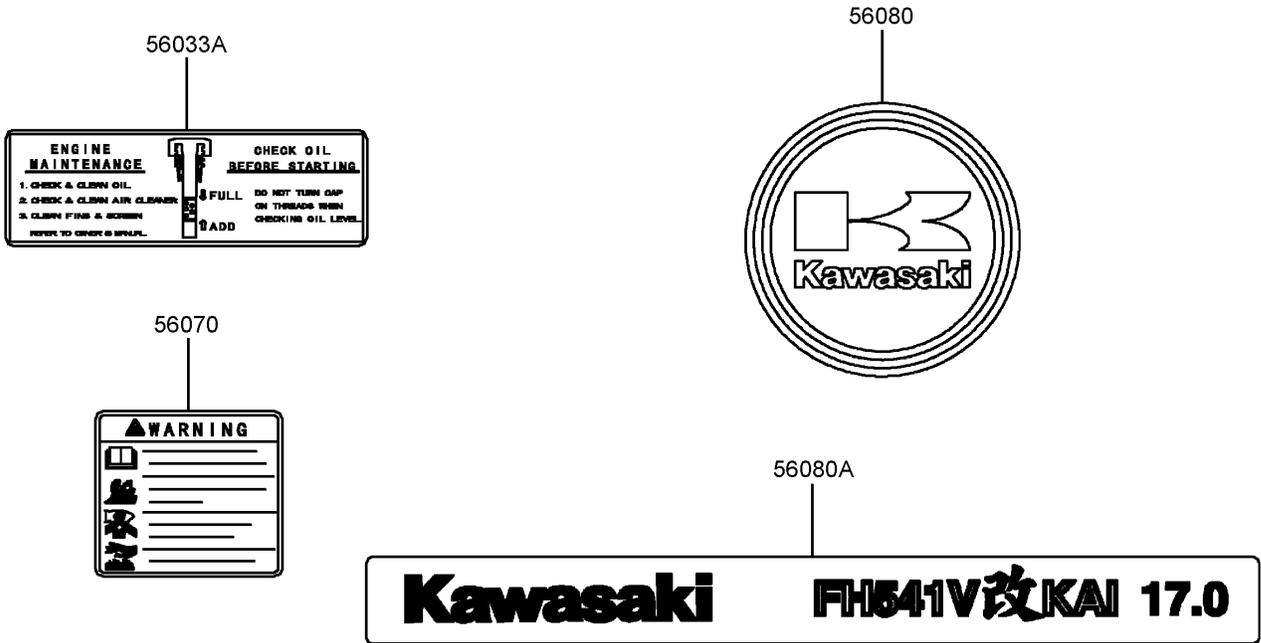

Label Assembly Kawasaki FH541V-BS30-R

Ref	Part No.	Qty.	Description	
⑤56033A	56033-7003	1	Label-Manual	
⑤56070	56070-7001	1	Label-Warning	
⑤56080	56080-2077	1	Label-Brand	
⑤56080A	56080-7023	1	Label-Brand	

Attachments and Accessories

For 30342 - Mid-Size ProLine T-Bar Gear, 17 HP with 52in Side Discharge Mower

Product Name	Model/Part
Blade-Atomic	104-1301
Striping Kit	106-3370
Weight Kit	106-5491
Blade-Recycler, 18 Inch (6-Pack)	108-1127
Soft Bag (3 Bushel)	30104
Steel Grass Catcher	30107
Tru Trak Sulky	30110
Blade	56-2390-03
Blade-Recycler	92-7961-03
52 Inch Recycler Kit	99-4586
52 Inch Mulching Kit	99-8530

NOTES

