



## 22in Recycler<sup>®</sup> Lawnmower

Model No. 20005 - 260000001 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                             | Page    | Description                                                            | Page     |
|-----------------------------------------|---------|------------------------------------------------------------------------|----------|
| Deck, Side Chute and Rear Door Assembly | ..... 3 | Engine Assembly Tecumseh Lv195ea-362003b                               | ..... 10 |
| Rear Axle Assembly                      | ..... 4 | Engine Assembly Tecumseh Lv195ea-362003b (continued)                   | ..... 12 |
| Front Axle and Transmission Assembly    | ..... 5 | Carburetor Assembly No. 640303 Tecumseh Lv195ea-362003b                | ..... 14 |
| Transmission Assembly No. 106-3955      | ..... 6 | Recoil Starter Assembly No. 590702 (Optional) Tecumseh Lv195ea-362003b | ..... 15 |
| Engine and Blade Assembly               | ..... 7 | Recoil Starter Assembly No. 590739 Tecumseh No. Lv195ea-362003b        | ..... 16 |
| Bail and Handle Assembly                | ..... 8 |                                                                        |          |
| Rear Bag Assembly                       | ..... 9 |                                                                        |          |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | INC. .... incorporated                       |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HF. .... hex flange                        | PTH. .... phillips truss head                |
| HH. .... hex head                          | PTO. .... power-take-off                     |
| HHF. .... hex head flange                  | RH. .... right hand                          |
| HHFTF. .... hex head flange thread forming | ROPS. .... roll-over-protection-system       |
| HJ. .... hex jam                           | SFH. .... slotted fillister head             |
| HLH. .... hex lag head                     | SHH. .... slotted hex head                   |
| HOC. .... height-of-cut                    | SHWH. .... slotted hex washer head           |
| HSBH. .... hex socket button head          | SPH. .... slotted pan head                   |
| HSFH. .... hex socket flat head            | SQH. .... square head                        |
| HS. .... hex socket head                   | SRH. .... slotted round head                 |
| HWH. .... hex washer head                  | STD. .... standard                           |
| HWHTF. .... hex washer head thread forming | TAP. .... self tapping                       |
| HYD. .... hydraulic                        | TTH. .... torx truss head                    |

## Footnotes


- |                                     |                                          |
|-------------------------------------|------------------------------------------|
| ❶ Not illustrated                   | ❷ Not serviced separately                |
| ❸ Included in Repair Kit No. 632809 | ❹ Obtain from your local Tecumseh dealer |

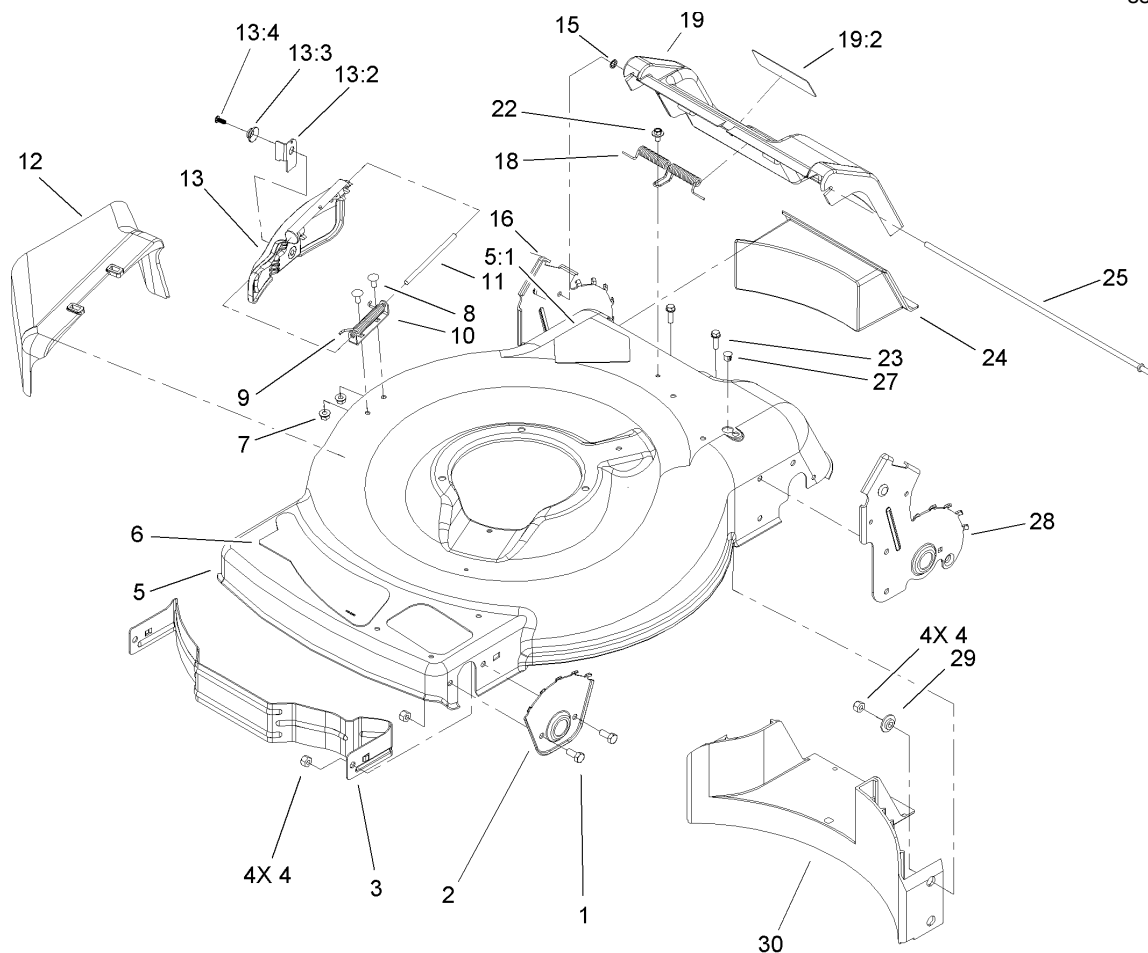

## Deck, Side Chute and Rear Door Assembly


| Ref  | Part No.    | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 322-3       | 4    | Screw-HH              |
| 2    | 105-1808-03 | 2    | Plate-HOC, Front      |
| 3    | 104-8694-03 | 1    | Baffle-Front          |
| 4    | 3296-29     | 8    | Nut-Lock, NI          |
| 5    | 104-7915    | 1    | Housing               |
| 5:1  | 105-6838    | 1    | Decal-Danger          |
| 6    | 105-1296    | 1    | Decal-Deck            |
| 7    | 32128-32    | 2    | Nut-HHF               |
| 8    | 3229-11     | 2    | Screw-CARR            |
| 9    | 99-5293     | 1    | Spring-Torsion        |
| 10   | 99-5292     | 1    | Bracket-Cover         |
| 11   | 99-5291     | 1    | Rod-Cover             |
| 12   | 105-3028    | 1    | Chute-Discharge, Side |
| 13   | 106-8376    | 1    | Discharge Door ASM    |
| 13:2 | 107-0795    | 1    | Latch-Door            |
| 13:3 | 107-7456    | 1    | Cap-Door              |
| 13:4 | 107-7461    | 1    | Screw-Plastite        |
| 15   | 32112-6     | 1    | Nut-Push              |
| 16   | 107-0790    | 1    | RH Rear HOC Plate ASM |
| 18   | 105-3032    | 1    | Spring-Door, Rear     |
| 19   | 105-1323    | 1    | Rear Door ASM         |
| 19:2 | 105-1295    | 1    | Decal-Warning         |
| 22   | 46-6810     | 1    | Screw And Washer ASM  |
| 23   | 46-8091     | 2    | Screw-HWH             |

| Ref | Part No. | Qty. | Description           |
|-----|----------|------|-----------------------|
| 24  | 105-1842 | 1    | Plug-Discharge, Rear  |
| 25  | 105-1827 | 1    | Rod-Pivot, Rear Door  |
| 27  | 104-9369 | 1    | Plug-Dome             |
| 28  | 107-0783 | 1    | LH Rear HOC Plate ASM |
| 29  | 105-3006 | 4    | Washer-Stepped        |
| 30  | 105-3047 | 1    | Baffle-Rear           |

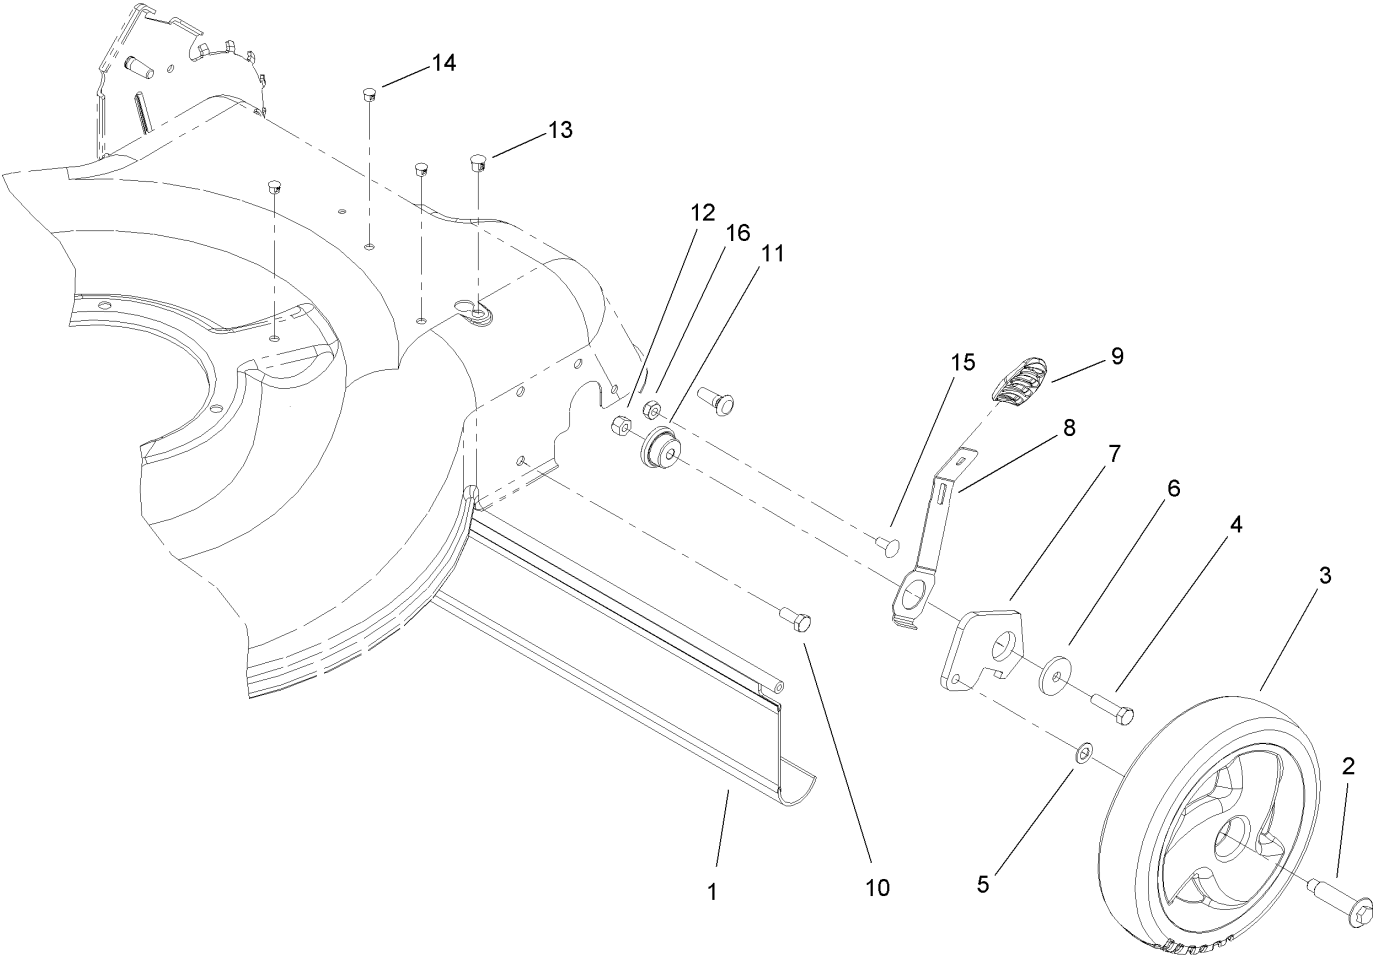


Rear Axle Assembly

| Ref | Part No. | Qty. | Description        |  |  |  |  |
|-----|----------|------|--------------------|--|--|--|--|
| 1   | 105-1843 | 1    | Shield-Trailing    |  |  |  |  |
| 2   | 614650   | 2    | Bolt-Shoulder      |  |  |  |  |
| 3   | 105-1814 | 2    | Wheel ASM          |  |  |  |  |
| 4   | 322-6    | 2    | Screw-HH           |  |  |  |  |
| 5   | 40-1940  | 2    | Washer             |  |  |  |  |
| 6   | 105-3048 | 2    | Washer-Flat        |  |  |  |  |
| 7   | 105-1819 | 2    | Arm-Pivot, Rear    |  |  |  |  |
| 8   | 105-1809 | 2    | Arm-Spring         |  |  |  |  |
| 9   | 105-3042 | 2    | Knob-Lever, HOC    |  |  |  |  |
| 10  | 322-3    | 4    | Screw-HH           |  |  |  |  |
| 11  | 105-1818 | 2    | Bushing-Mount, HOC |  |  |  |  |
| 12  | 3296-29  | 2    | Nut-Lock, NI       |  |  |  |  |
| 13  | 104-9368 | 1    | Plug-Dome          |  |  |  |  |
| 14  | 104-9373 | 3    | Plug-Dome          |  |  |  |  |
| 15  | 3229-11  | 2    | Screw-CARR         |  |  |  |  |
| 16  | 3296-16  | 2    | Nut-Lock, NI       |  |  |  |  |

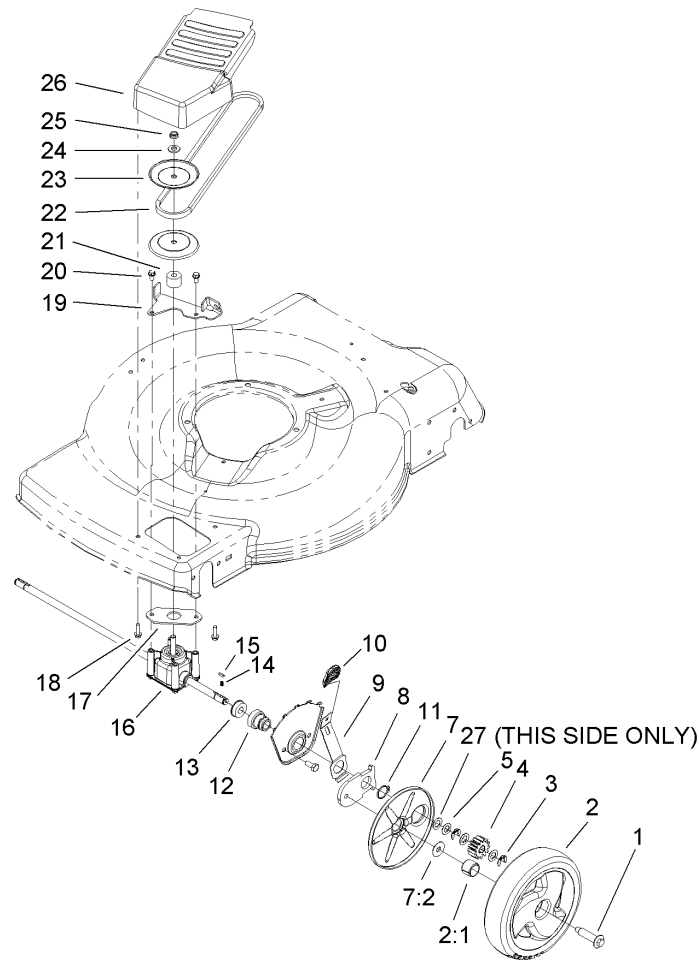


## Front Axle and Transmission Assembly

| Ref     | Part No.    | Qty. | Description           | Ref | Part No. | Qty. | Description        |
|---------|-------------|------|-----------------------|-----|----------|------|--------------------|
| 1       | 614650      | 2    | Bolt-Shoulder         | 23  | 104-8691 | 2    | Pulley-Half, Front |
| 2       | 105-1815    | 2    | Wheel Gear ASM        | 24  | 3256-24  | 1    | Washer-Flat        |
| 2:1     | 27-6250     | 2    | Bushing               | 25  | 3296-5   | 1    | Nut-Lock           |
| 3       | 65-2720     | 4    | Klipring-Locking      | 26  | 105-1839 | 1    | Cover-Belt, Front  |
| 4       | 104-8670    | 2    | Gear-Pinion, 13T      | 27  | 36-4780  | 1    | Washer             |
| 5       | 105-6840    | 6    | Washer-Thrust         |     |          |      |                    |
| 7       | 108-3794    | 2    | Cover-Wheel           |     |          |      |                    |
| 1 2 7:1 |             | 1    | Cover                 |     |          |      |                    |
| 7:2     | 614426      | 1    | Washer-Stepped        |     |          |      |                    |
| 8       | 105-1807    | 2    | Arm-Pivot, Front      |     |          |      |                    |
| 9       | 105-1809    | 2    | Arm-Spring            |     |          |      |                    |
| 10      | 105-3042    | 2    | Knob-Lever, HOC       |     |          |      |                    |
| 11      | 32151-36    | 2    | Ring-Retaining        |     |          |      |                    |
| 12      | 104-8698    | 2    | Retainer-Bearing, HOC |     |          |      |                    |
| 13      | 104-8699    | 2    | Bearing-Ball          |     |          |      |                    |
| 14      | 39-9650     | 2    | Spring-Compression    |     |          |      |                    |
| 15      | 612066      | 2    | Key                   |     |          |      |                    |
| 16      | 106-3955    | 1    | Transmission ASM      |     |          |      |                    |
| 17      | 108-9756    | 1    | Gasket-Gearbox        |     |          |      |                    |
| 18      | 46-8091     | 2    | Screw-HWH             |     |          |      |                    |
| 19      | 105-1833-03 | 1    | Bracket-Pivot, Fwd    |     |          |      |                    |
| 20      | 32144-4     | 2    | Screw-HWH             |     |          |      |                    |
| 21      | 92-5791     | 1    | Spacer                |     |          |      |                    |
| 22      | 91-2258     | 1    | V-Belt                |     |          |      |                    |

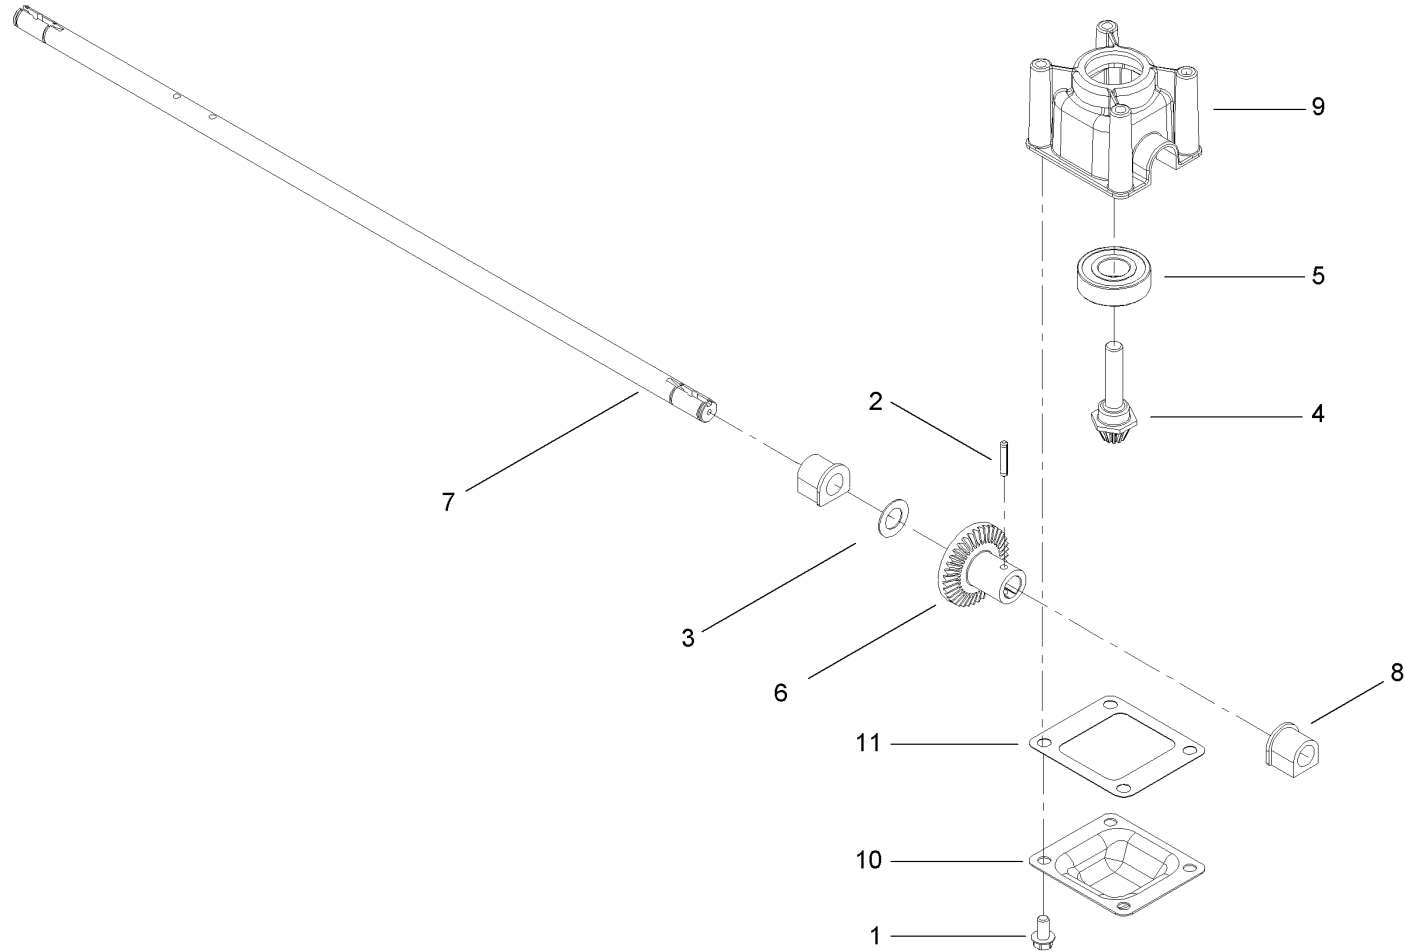


**Transmission Assembly No. 106-3955**

| Ref | Part No.    | Qty. | Description           |  |  |  |  |
|-----|-------------|------|-----------------------|--|--|--|--|
| 1   | 32144-4     | 4    | Screw-HWH             |  |  |  |  |
| 2   | 3285-19     | 1    | Pin-Groove            |  |  |  |  |
| 3   | 36-4780     | 1    | Washer                |  |  |  |  |
| 4   | 92-5790     | 1    | Pinion                |  |  |  |  |
| 5   | 100-1048    | 1    | Bearing-Ball          |  |  |  |  |
| 6   | 104-8671    | 1    | Gear-Bevel, 37T       |  |  |  |  |
| 7   | 106-3957    | 1    | Shaft-Output          |  |  |  |  |
| 8   | 104-8673    | 2    | Bushing-Shaft, Output |  |  |  |  |
| 9   | 104-8674    | 1    | Gearcase-Upper        |  |  |  |  |
| 10  | 104-8675-03 | 1    | Cover-Gearcase        |  |  |  |  |
| 11  | 105-6839    | 1    | Gasket-Gearcase       |  |  |  |  |

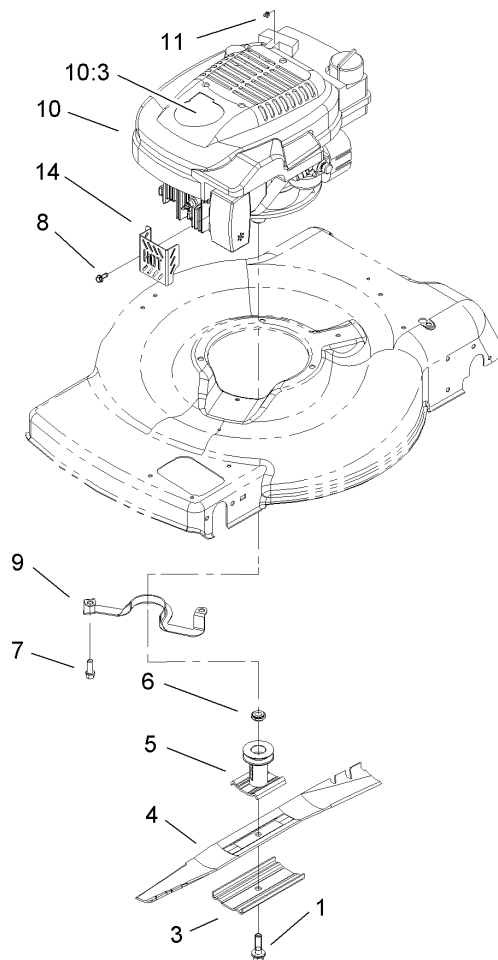

## Engine and Blade Assembly

| Ref    | Part No.    | Qty. | Description                       |  |  |  |  |
|--------|-------------|------|-----------------------------------|--|--|--|--|
| 1      | 105-8579    | 1    | Bolt-Blade                        |  |  |  |  |
| 3      | 108-3766-03 | 1    | Support-Blade                     |  |  |  |  |
| 4      | 104-8697-03 | 1    | Blade-22In                        |  |  |  |  |
| 5      | 106-3987    | 1    | Blade Driver ASM                  |  |  |  |  |
| 6      | 106-3999    | 1    | Spacer-Driver                     |  |  |  |  |
| 7      | 95-1726     | 3    | Screw-Taptite                     |  |  |  |  |
| 8      | 32144-85    | 1    | Screw-HWH                         |  |  |  |  |
| 9      | 105-3031-03 | 1    | Guide-Belt                        |  |  |  |  |
| 2 4 10 |             | 1    | Engine-Tecumseh, Lev195Ea-362003B |  |  |  |  |
| 10:3   | 108-8109    | 1    | Decal-Shroud,Tec                  |  |  |  |  |
| 11     | 92-1701     | 1    | Stop-Rope                         |  |  |  |  |
| 14     | 106-8346-03 | 1    | Guard-Muffler                     |  |  |  |  |

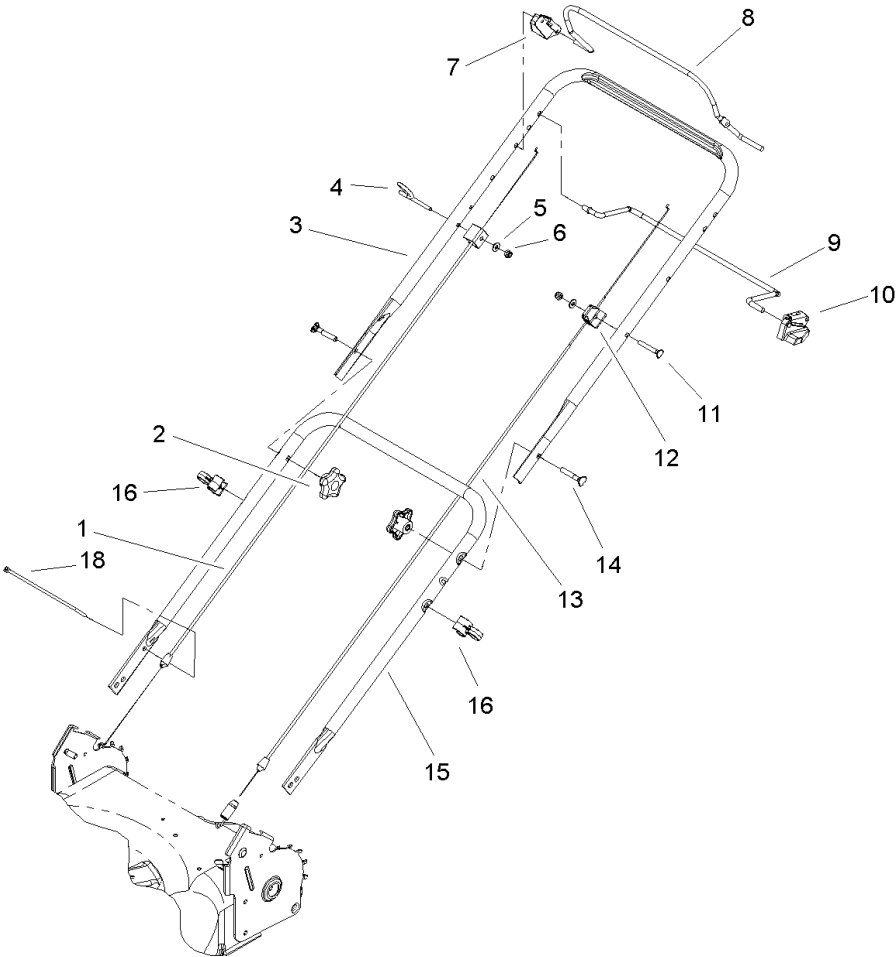

Bail and Handle Assembly


| Ref | Part No.    | Qty. | Description         |  |  |  |  |
|-----|-------------|------|---------------------|--|--|--|--|
| 1   | 104-8677    | 1    | Cable-Brake         |  |  |  |  |
| 2   | 106-4161    | 2    | Knob-Handle         |  |  |  |  |
| 3   | 104-8680-05 | 1    | Handle-Upper        |  |  |  |  |
| 4   | 106-8330    | 1    | Guide-Rope          |  |  |  |  |
| 5   | 3256-1      | 2    | Washer-Flat         |  |  |  |  |
| 6   | 3296-73     | 2    | Nut-Lock, NI        |  |  |  |  |
| 7   | 107-0757    | 1    | Stop-Pivot          |  |  |  |  |
| 8   | 105-6800-03 | 1    | Bail-Brake          |  |  |  |  |
| 9   | 105-1837-03 | 1    | Bail-Control        |  |  |  |  |
| 10  | 104-8682    | 1    | Stop-Pivot          |  |  |  |  |
| 11  | 95-4453     | 1    | Screw               |  |  |  |  |
| 12  | 92-7729     | 1    | Anchor-Cable, Upper |  |  |  |  |
| 13  | 105-1845    | 1    | Cable-Traction      |  |  |  |  |
| 14  | 92-2260     | 2    | Screw-Handle        |  |  |  |  |
| 15  | 107-0784-05 | 1    | Handle-Lower        |  |  |  |  |
| 16  | 106-6805    | 2    | Guide-Cable         |  |  |  |  |
| 18  | 614249      | 1    | Strap-Tie           |  |  |  |  |



|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

# Engine Assembly

## Tecumseh Lv195ea-362003b

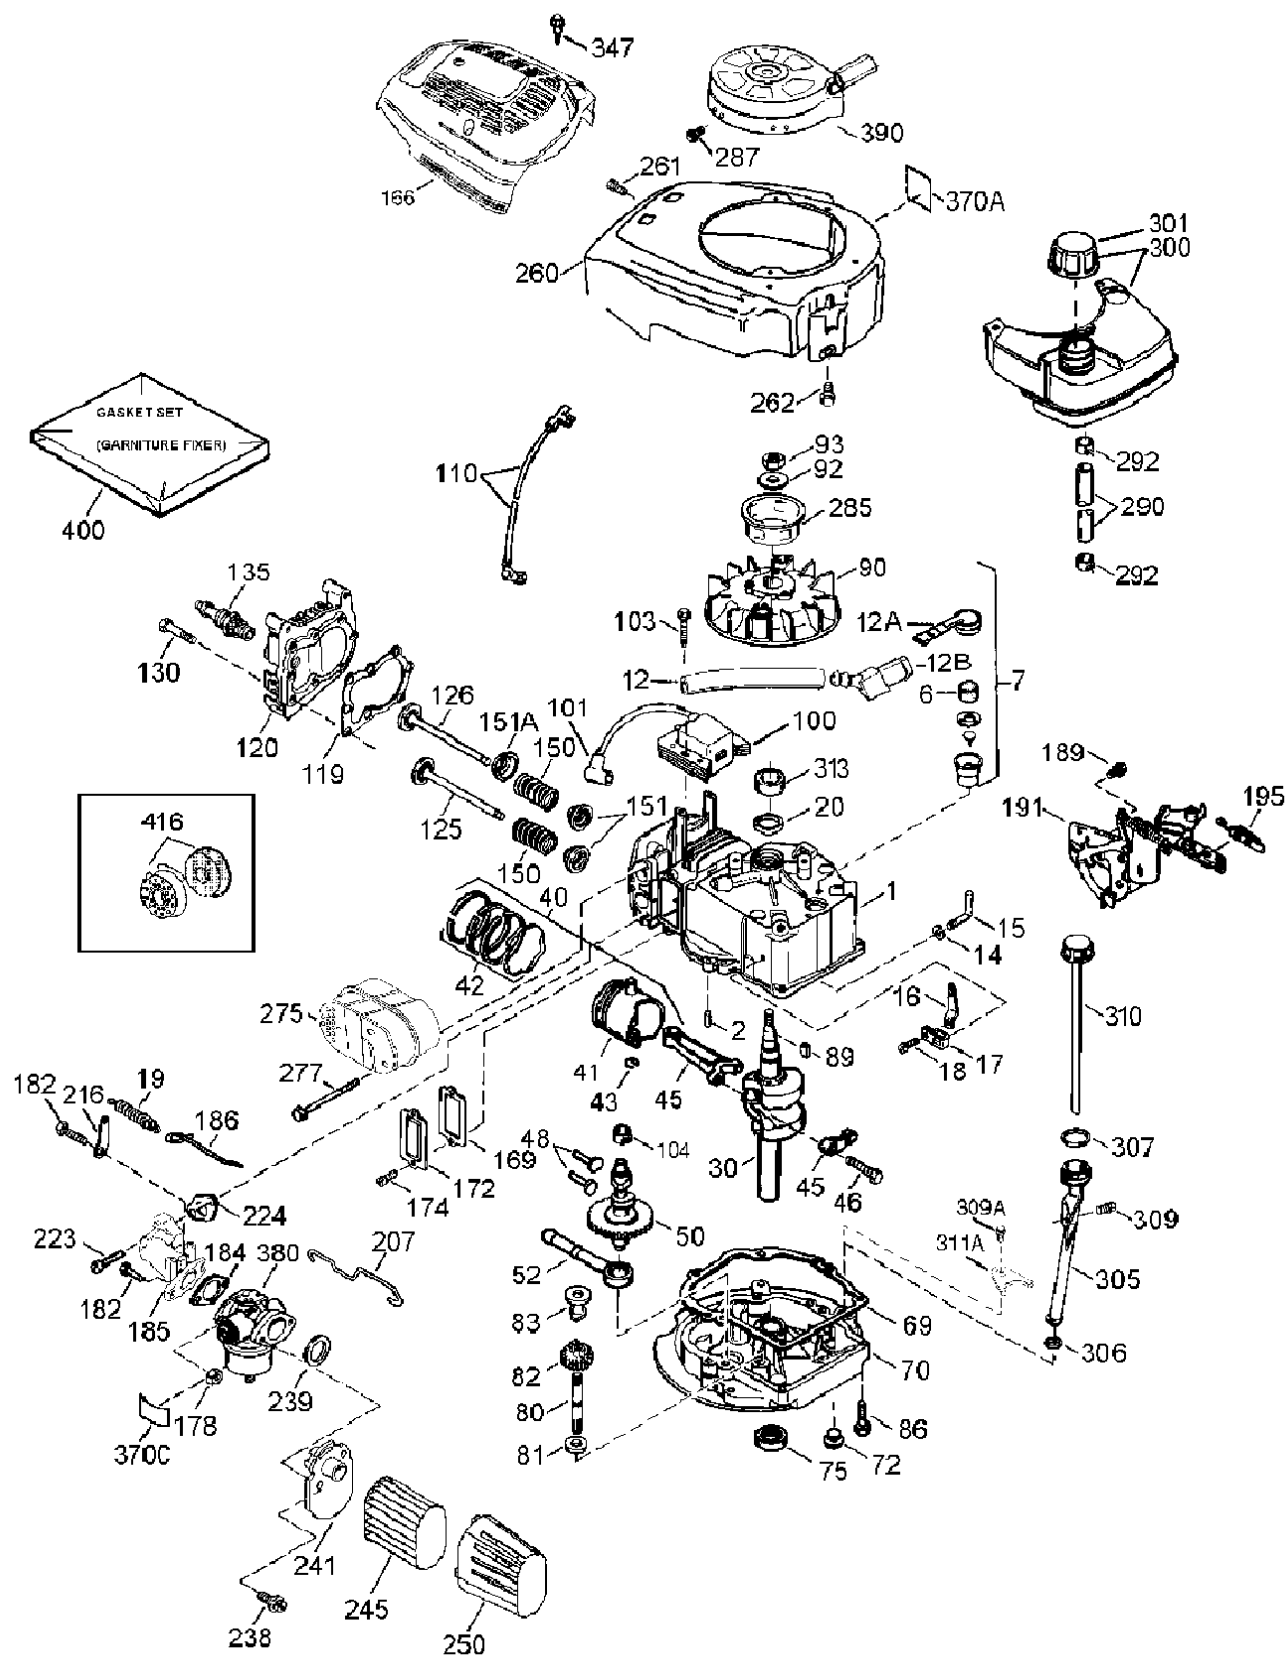


# Engine Assembly

## Tecumseh Lv195ea-362003b

| Ref   | Part No. | Qty. | Description                                         | Ref   | Part No. | Qty. | Description                                    |
|-------|----------|------|-----------------------------------------------------|-------|----------|------|------------------------------------------------|
| 41    | 37465    | 1    | Cylinder                                            | 4125  | 37288    | 1    | Valve-Exhaust (STD.) (Incl. Ref. #151)         |
| 42    | 26727    | 2    | Pin-Dowel                                           | 4126  | 37289    | 1    | Valve-Intake (STD.) (Incl. Ref. #151 And 151A) |
| 46    | 33734    | 1    | Element-Breather                                    | 4130  | 6021A    | 8    | Screw (5/16-18 X 1-7/16In)                     |
| 47    | 36557    | 1    | Breather ASM (Incl. Ref. #6 And 12A)                | 4135  | 35395    | 1    | Spark Plug-Resistor (Rj19Lm)                   |
| 412   | 36775    | 1    | Tube-Breather                                       | 4150  | 31672    | 2    | Spring-Valve                                   |
| 412A  | 36558    | 1    | Breather Cover And Tube (Incl. Ref. #12B)           | 4151  | 31673    | 2    | Cap-Spring, Valve                              |
| 412B  | 36694    | 1    | Elbow-Tube, Breather                                | 4151A | 40017    | 1    | Seal-Valve, Intake                             |
| 414   | 28277    | 1    | Washer                                              | 4166  | 37694    | 1    | Shroud-Engine                                  |
| 415   | 30589    | 1    | Governor Rod (Incl. Ref. #14)                       | 4*169 | 36783    | 1    | Gasket-Cover, Valve                            |
| 416   | 34839A   | 1    | Lever-Governor                                      | 4172  | 36784    | 1    | Cover-Valve                                    |
| 417   | 31335    | 1    | Clamp-Lever, Governor                               | 4174  | 30200    | 2    | Screw (10-24 X 9/16In)                         |
| 418   | 651018   | 1    | Screw                                               | 4178  | 29752    | 2    | Nut And Lock Washer ASM                        |
| 419   | 36281    | 1    | Spring-Extension                                    | 4182  | 6201     | 2    | Screw (1/4-28 X 7/8In)                         |
| 420   | 32600    | 1    | Seal-Oil                                            | 4*184 | 26756    | 1    | Gasket-Carburetor To Intake Pipe               |
| 430   | 37692    | 1    | Crankshaft                                          | 4185  | 37466    | 1    | Pipe-Intake                                    |
| 440   | 40027    | 1    | Piston Pin And Ring Set (STD)                       | 4186  | 32653    | 1    | Link-Governor                                  |
| 441   | 40042    | 1    | Piston And Pin ASM (STD.) (Incl. Ref. # 43)         | 4189  | 650839   | 2    | Screw (1/4-20 X 3/8In)                         |
| 442   | 40006    | 1    | Ring Set (STD)                                      | 4191  | 36559A   | 1    | Bracket-S.E. Brake (Incl. Ref. #195)           |
| 443   | 20381    | 2    | Ring-Retaining                                      | 4195  | 610973   | 1    | Terminal                                       |
| 445   | 36777    | 1    | Connecting Rod ASM (Incl. Ref. #46)                 | 4207  | 34336A   | 1    | Link-Throttle                                  |
| 446   | 32610A   | 2    | Bolt-Rod, Connecting                                | 4216  | 33086    | 1    | Lever-Adjusting, R.P.M.                        |
| 448   | 27241    | 2    | Lifter-Valve                                        | 4223  | 650451   | 2    | Screw (1/4-20 X 1In)                           |
| 450   | 37460    | 1    | Camshaft (Exhaust Mcr) (Incl. Ref. #104)            | 4*224 | 36786    | 1    | Gasket-Pipe, Intake                            |
| 452   | 29914    | 1    | Oil Pump ASM                                        | 4238  | 650932   | 2    | Screw (10-32 X 49/64In)                        |
| 4*69  | 37609    | 1    | Gasket-Flange, Mounting                             | 4*239 | 34338    | 1    | Gasket-Cleaner, Air                            |
| 470   | 37608    | 1    | Flange-Mounting (Incl. Ref. #72-83,306,309A & 311A) | 4241  | 36919    | 1    | Collar-Cleaner, Air                            |
| 472   | 37614    | 1    | Plug-Drain, Oil                                     | 4245  | 36905    | 1    | Filter-Cleaner, Air                            |
| 475   | 27897    | 1    | Seal-Oil                                            | 4250  | 37122    | 1    | Cover-Cleaner, Air                             |
| 480   | 30574A   | 1    | Shaft-Governor                                      | 4260  | 37696A   | 1    | Housing-Blower                                 |
| 481   | 30590A   | 1    | Washer                                              | 4261  | 30200    | 2    | Screw (10-24 X 9/16In)                         |
| 482   | 30591    | 1    | Governor Gear ASM (Incl. Ref. #81)                  | 4262  | 650831   | 2    | Screw (1/4-20 X 1/2In)                         |
| 483   | 30588A   | 1    | Spool-Governor                                      | 4275  | 37498    | 1    | Muffler                                        |
| 486   | 650488   | 6    | Screw (1/4-20 X 1-1/4In)                            | 4277  | 650988   | 2    | Screw (1/4-20 X 2-9/32In)                      |
| 489   | 611004   | 1    | Key-Flywheel                                        | 4285  | 35000A   | 1    | Cup-Starter                                    |
| 490   | 611112   | 1    | Flywheel                                            | 4287  | 650926   | 2    | Screw (8-32 X 21/64In)                         |
| 492   | 650815   | 1    | Washer-Belleville                                   | 4290  | 29774    | 1    | Line-Fuel                                      |
| 493   | 650816   | 1    | Nut-Flywheel                                        | 4292  | 26460    | 2    | Clamp-Line, Fuel                               |
| 4100  | 34443C   | 1    | Ignition-Solid State                                | 4300  | 35586A   | 1    | Fuel Tank (Incl. Ref. #292 And 301)            |
| 4101  | 610118   | 1    | Cover-Plug, Spark                                   | 4301  | 36246    | 1    | Cap-Fuel                                       |
| 4103  | 651007   | 2    | Screw                                               | 4305  | 35647    | 1    | Tube-Fill, Oil                                 |
| 4104  | 37480    | 1    | Bushing-Cam                                         | 4*306 | 37610    | 1    | O-Ring                                         |
| 4110  | 37047    | 1    | Wire-Ground                                         | 4307  | 35499    | 1    | O-Ring                                         |
| 4*119 | 36787    | 1    | Gasket-Cylinder Head                                | 4309  | 650562   | 1    | Screw (10-32 X 1/2In)                          |
| 4120  | 36825    | 1    | Head-Cylinder                                       | 4309A | 650783   | 1    | Screw (10-24 X 3/4In)                          |
| 4125  | 36780    | 1    | Valve-Exhaust (1/32In Os) (Incl. 151)               | 4310  | 35648    | 1    | Dipstick                                       |
|       |          |      |                                                     | 4311A | 37611    | 1    | Bracket-Down, Hold                             |
|       |          |      |                                                     | 4313  | 34080    | 1    | Spacer                                         |
|       |          |      |                                                     | 4347  | 650898A  | 1    | Screw (10-32 X 27/32In)                        |

# Engine Assembly


## Tecumseh Lv195ea-362003b (continued)

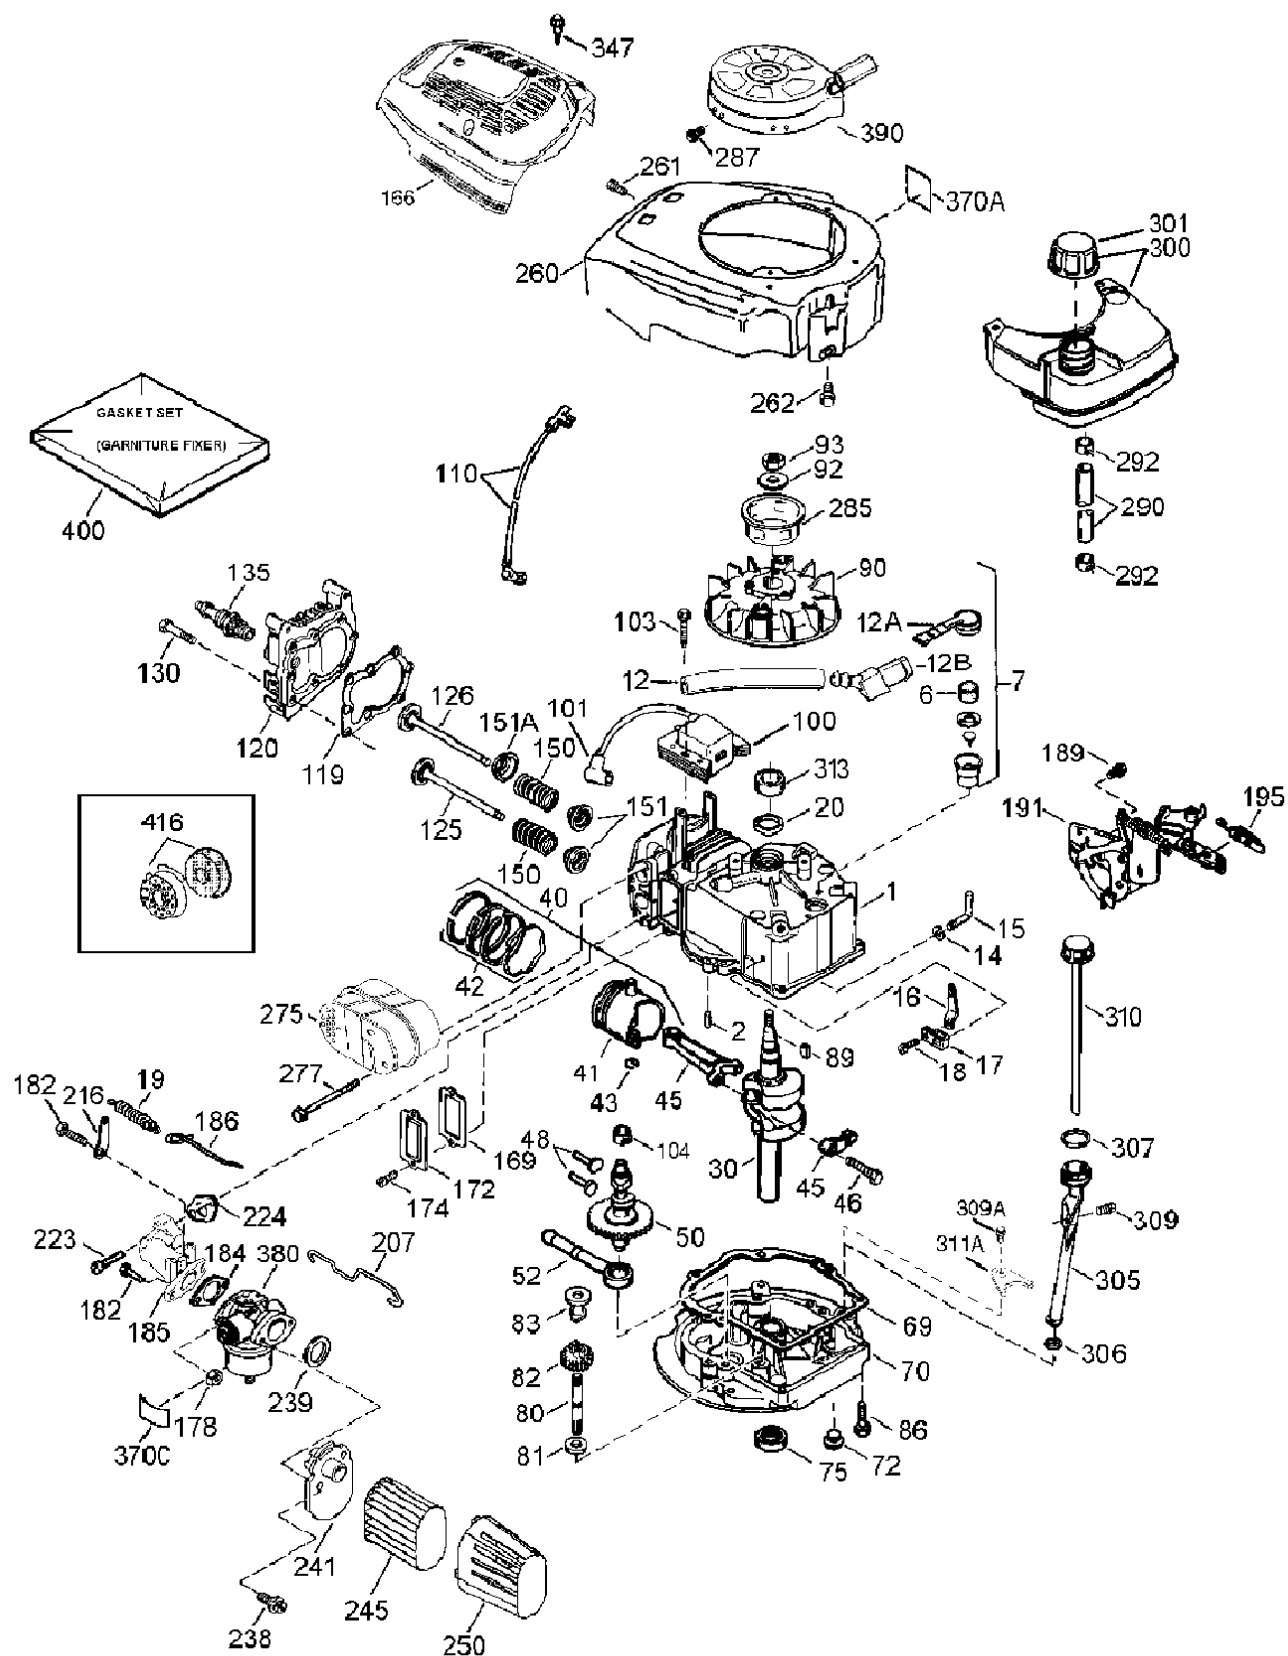

## Engine Assembly


### Tecumseh Lv195ea-362003b (continued)

| Ref   | Part No. | Qty. | Description                   |
|-------|----------|------|-------------------------------|
| ④370  | 35977    | 1    | Decal-Warning                 |
| ④370A | 36261    | 2    | Decal-Lubrication             |
| ④370C | 37695    | 1    | Decal-Primer                  |
| ④380  | 640303   | 1    | Carburetor (Incl. Ref. #184)  |
| ④390  | 590739   | 1    | Starter-Rewind                |
| ④400  | 37613    | 1    | Gasket Set                    |
| ④416  | 37530    | 1    | Spark Arrestor Kit (Optional) |
| ④     | 750876   | 1    | Shortblock                    |

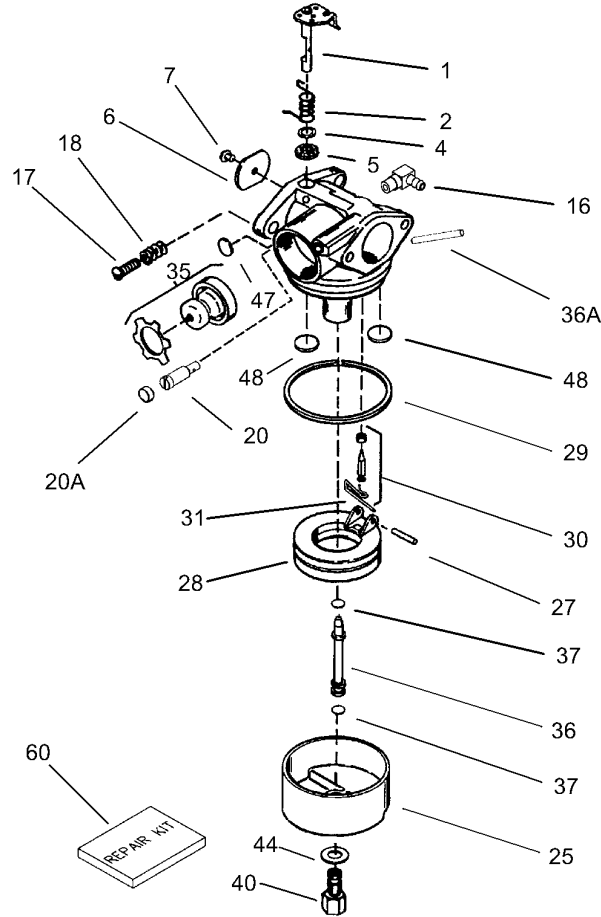


**Carburetor Assembly No. 640303**  
**Tecumseh Lv195ea-362003b**

| Ref  | Part No. | Qty. | Description                                       | Ref | Part No. | Qty. | Description                   |
|------|----------|------|---------------------------------------------------|-----|----------|------|-------------------------------|
| 40   | 640303   | 1    | Carburetor (Incl. Ref. #184 Of Engine Parts List) | 40  | 640087   | 1    | Nut-High Speed Bowl           |
| 41   | 631615   | 1    | Throttle Shaft And Lever ASM                      | 44  | 27110A   | 1    | Washer-Nut, Bowl              |
| 42   | 631767   | 1    | Spring-Return, Throttle                           | 47  | 630748   | 1    | Plug-Welch, Idle Mixture Well |
| 44   | 631184   | 1    | Washer-Seal, Dust                                 | 48  | 631027   | 2    | Plug-Welch, Atmospheric Vent  |
| 45   | 631183   | 1    | Seal-Dust, Throttle                               | 60  | 632809   | 1    | Repair Kit                    |
| 46   | 640070   | 1    | Shutter-Throttle                                  |     |          |      |                               |
| 47   | 650506   | 1    | Screw-Shutter                                     |     |          |      |                               |
| 416  | 631807   | 1    | Fitting-Fuel                                      |     |          |      |                               |
| 417  | 651025   | 1    | Screw-Throttle Crack And Idle Speed               |     |          |      |                               |
| 418  | 630766   | 1    | Spring-Tension                                    |     |          |      |                               |
| 420  | 640018   | 1    | Screw-Idle Restrictor                             |     |          |      |                               |
| 420A | 640200   | 1    | Cap-Screw, Idle Restrictor                        |     |          |      |                               |
| 425  | 631867   | 1    | Bowl-Float                                        |     |          |      |                               |
| 427  | 631024   | 1    | Shaft-Float                                       |     |          |      |                               |
| 428  | 632802   | 1    | Float                                             |     |          |      |                               |
| 429  | 631028   | 1    | O Ring-Bowl, Float                                |     |          |      |                               |
| 430  | 632807   | 1    | Inlet Needle, Seat, And Clip ASM (Incl. Ref. #31) |     |          |      |                               |
| 431  | 631022   | 1    | Clip-Spring                                       |     |          |      |                               |
| 435  | 640259   | 1    | Primer Bulb/Retainer Ring                         |     |          |      |                               |
| 436  | 640019   | 1    | Tube-Main Nozzle                                  |     |          |      |                               |
| 436A | 632766   | 1    | Tube-Carburetor                                   |     |          |      |                               |
| 437  | 632547   | 2    | O Ring-Nozzle Tube, Main                          |     |          |      |                               |

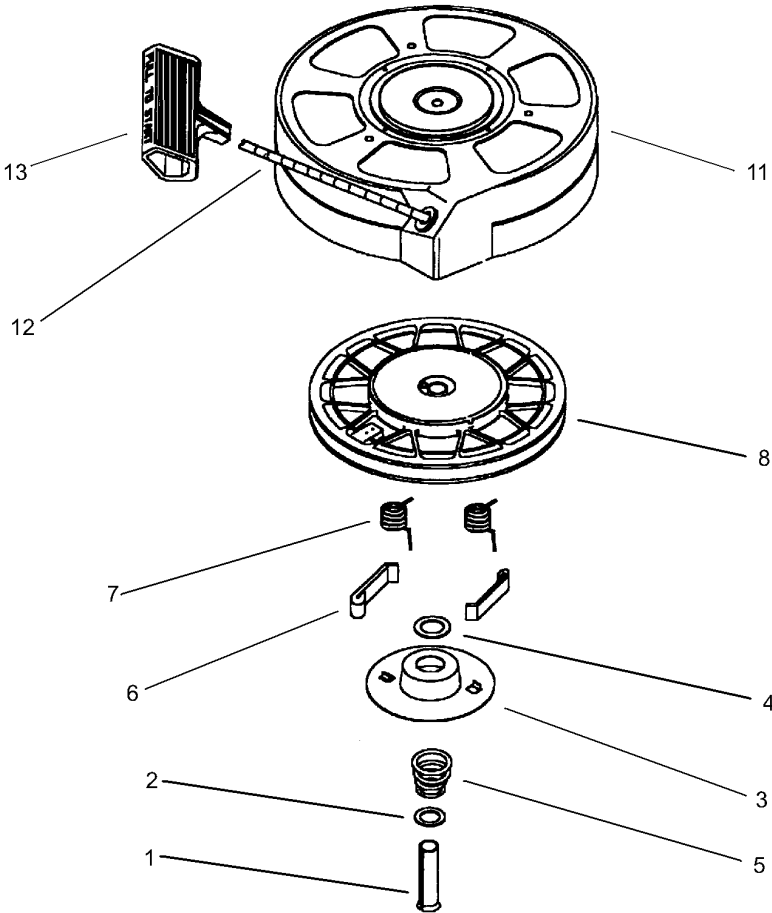

**Recoil Starter Assembly No. 590702 (Optional)**  
**Tecumseh Lv195ea-362003b**

| Ref | Part No. | Qty. | Description                           |  |  |  |  |
|-----|----------|------|---------------------------------------|--|--|--|--|
| ④0  | 590702   | 1    | Starter-Recoil                        |  |  |  |  |
| ④1  | 590599A  | 1    | Spring Pin ASM                        |  |  |  |  |
| ④2  | 590600   | 1    | Washer                                |  |  |  |  |
| ④3  | 590696   | 1    | Retainer                              |  |  |  |  |
| ④4  | 590601   | 1    | Washer                                |  |  |  |  |
| ④5  | 590697   | 1    | Spring-Brake                          |  |  |  |  |
| ④6  | 590698   | 2    | Dog-Starter                           |  |  |  |  |
| ④7  | 590699   | 2    | Spring-Dog                            |  |  |  |  |
| ④8  | 590700   | 1    | Pulley And Rewind Spring ASM          |  |  |  |  |
| ④11 | 590703A  | 1    | Starter Housing ASM                   |  |  |  |  |
| ④12 | 590535   | 1    | Rope-Starter (98In X 9/64In Diameter) |  |  |  |  |
| ④13 | 590701   | 1    | Handle-Starter                        |  |  |  |  |

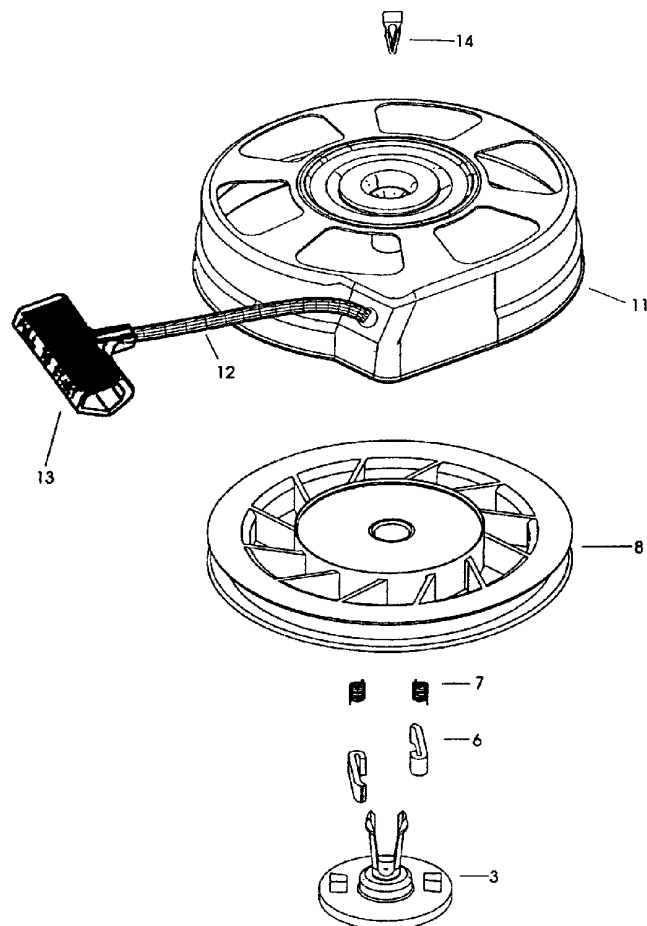

**Recoil Starter Assembly No. 590739**  
**Tecumseh No. Lv195ea-362003b**

| Ref | Part No. | Qty. | Description                           |  |  |  |  |
|-----|----------|------|---------------------------------------|--|--|--|--|
| 40  | 590739   | 1    | Starter-Rewind                        |  |  |  |  |
| 43  | 590740   | 1    | Retainer                              |  |  |  |  |
| 46  | 590616   | 2    | Dog-Starter                           |  |  |  |  |
| 47  | 590617   | 2    | Spring-Dog                            |  |  |  |  |
| 48  | 590618A  | 1    | Pulley And Rewind Spring ASM          |  |  |  |  |
| 411 | 590638A  | 1    | Starter Housing ASM                   |  |  |  |  |
| 412 | 590535   | 1    | Rope-Starter (98In X 9/64In Diameter) |  |  |  |  |
| 413 | 590701   | 1    | Handle-Starter                        |  |  |  |  |
| 414 | 590760   | 1    | Clip-Spring                           |  |  |  |  |

## NOTES

## NOTES

## NOTES

