



Commercial Side-Discharge Lawnmower

Model No. 22242 - 260000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Air Cleaner Assembly Briggs and Stratton	
Engine, Blade and Fuel Tank Assembly	 4	12W802-1701-B1	 10
Handle Assembly	 5	Governor Assembly Briggs and Stratton	
Cylinder Assembly Briggs and Stratton		12W802-1701-B1	 11
12W802-1701-B1	 6	Muffler and Fuel Tank Assembly Briggs and	
Crankshaft Assembly Briggs and Stratton		Stratton 12W802-1701-B1	 12
12W802-1701-B1	 7	Blower Housing Assembly Briggs and Stratton	
Crankcase Assembly Briggs and Stratton		12W802-1701-B1	 13
12W802-1701-B1	 8	Starter Assembly Briggs and Stratton 12W802-	
Carburetor Assembly Briggs and Stratton		1701-B1	 14
12W802-1701-B1	 9	358 Engine Gasket Set Assembly Briggs and	
		Stratton 12W802-1701-B1	 15
		121 Carburetor Overhaul Kit and 977	
		Carburetor Gasket Set Briggs and Stratton	 16
		12W802-1701-B1	

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread
GA. gauge	forming
HD. heavy-duty	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over protection system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread	TAP. self tapping
forming	TTH. torx truss head

Footnotes

- | | |
|---|--|
| ❶ Obtain from your local Briggs & Stratton dealer | ❷ Included in Carburetor Overhaul Kit (Ref. No. 121) |
| ❸ Included in Engine Gasket Set (Ref. No. 358) | ❹ Included in Carburetor Gasket Set (Ref. No. 977) |




Ref	Part No.	Qty.	Description				
1	603567	4	Bolt				
2	683464	2	Wheel/Tire ASM				
3	610646	4	Bolt				
4	153444	4	Spring Arm ASM				
5	608834	4	Washer				
7	93-7368	1	Shield-Trailing				
8	321-3	2	Screw-HH				
9	93-7693	2	Clamp-Shield				
10	98-8332	1	Knob				
11	95-7052	1	Plate-Opening, Chute				
12	43-8480	1	Decal-Danger				
13	614677	2	Screw-Sems				
14	94-1610	3	Nut-Clip				
15	108-9332	1	Housing ASM				
16	3296-56	2	Nut-Lock, NI				
17	93-7250	1	Decal-Warning				
18	608175	1	Bar-Toe				
19	46-6811	2	Screw-HWH				
20	3296-39	4	Nut-Lock, NI				
21	608833-03	4	Bracket-Height, Wheel				
22	684159	2	Wheel And Tire ASM				
23	108-9368-02	1	Spacer-Engine				
24	92-1648	3	Screw-Mount, Engine				

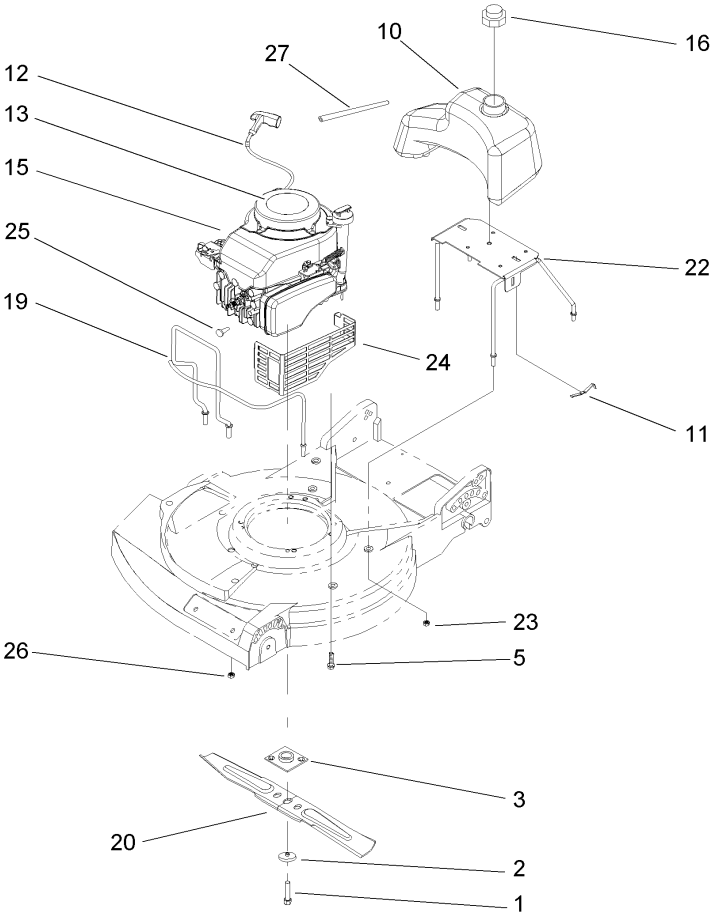


Engine, Blade and Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	105-8579	1	Bolt-Blade				
2	92-8626	1	Spacer-Blade				
3	100-2899	1	Plate And Collar ASM				
5	92-1648	3	Screw-Mount, Engine				
10	98-4497	1	Tank-Fuel				
11	609830	2	Spring				
12	92-1701	1	Stop-Rope				
13	108-9334	1	Decal-Recoil				
15		1	Engine-Briggs And Stratton, 12W802-1701-B1				
16	108-9381	1	Gas Cap ASM				
19	108-7470	1	Guard-Muffler				
20	612543	1	Blade				
20	612543-03	1	Blade-20.88 Inch				
22	98-4458-03	1	Tank Bracket ASM				
23	3296-29	5	Nut-Lock, NI				
24	104-7577-03	1	Shield-Muffler				
25	32144-1	3	Screw-Taptite				
26	3296-39	2	Nut-Lock, NI				
27	110-1824	1	Gas-Line				

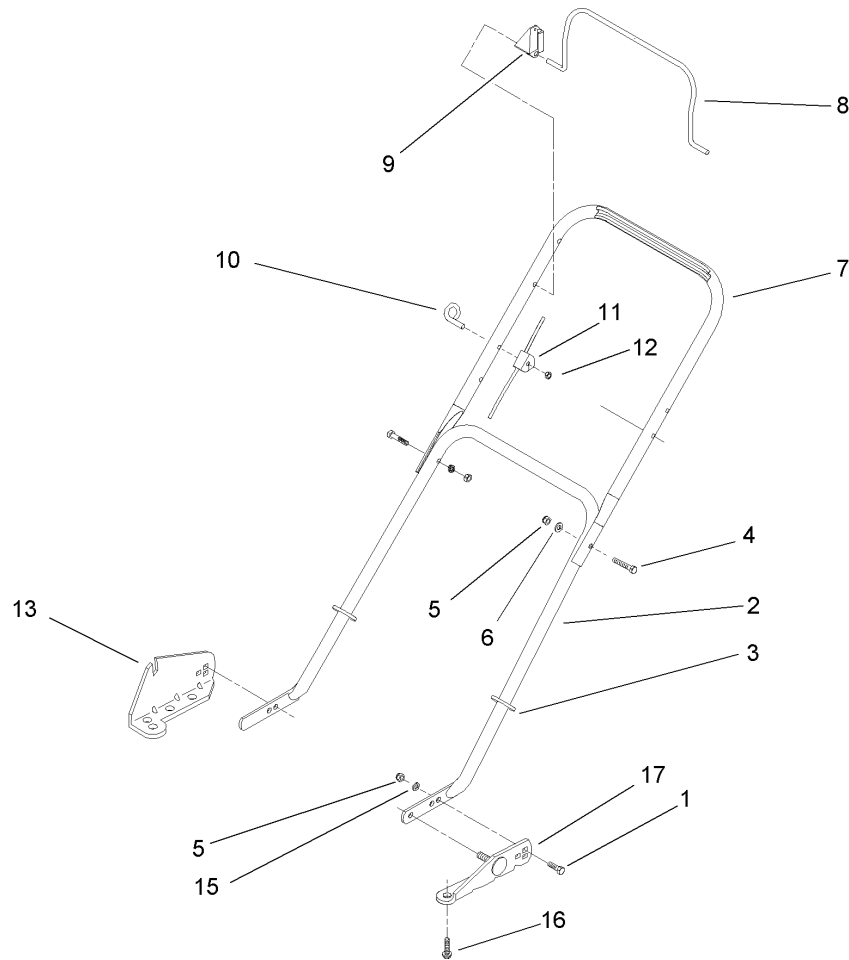

Handle Assembly

Ref	Part No.	Qty.	Description				
1	3230-29	2	Screw-CARR				
2	92-2920-05	1	Handle-Section, Lower				
3	614249	2	Strap-Tie				
4	322-9	2	Screw-HH				
5	3296-29	4	Nut-Lock, NI				
6	609739	2	Washer-Curved				
7	100-2897-05	1	Handle-Upper				
8	100-1174	1	Bail Control Lever ASM				
9	107-0757	1	Stop-Pivot				
10	106-8330	1	Guide-Rope				
11	100-5989	1	Brake Cable ASM				
12	3296-73	1	Nut-Lock, NI				
13	684057-03	1	RH Bracket And Pin ASM				
15	3256-23	2	Washer-Flat				
16	607188	4	Screw				
17	684058-03	1	LH Bracket And Pin ASM				

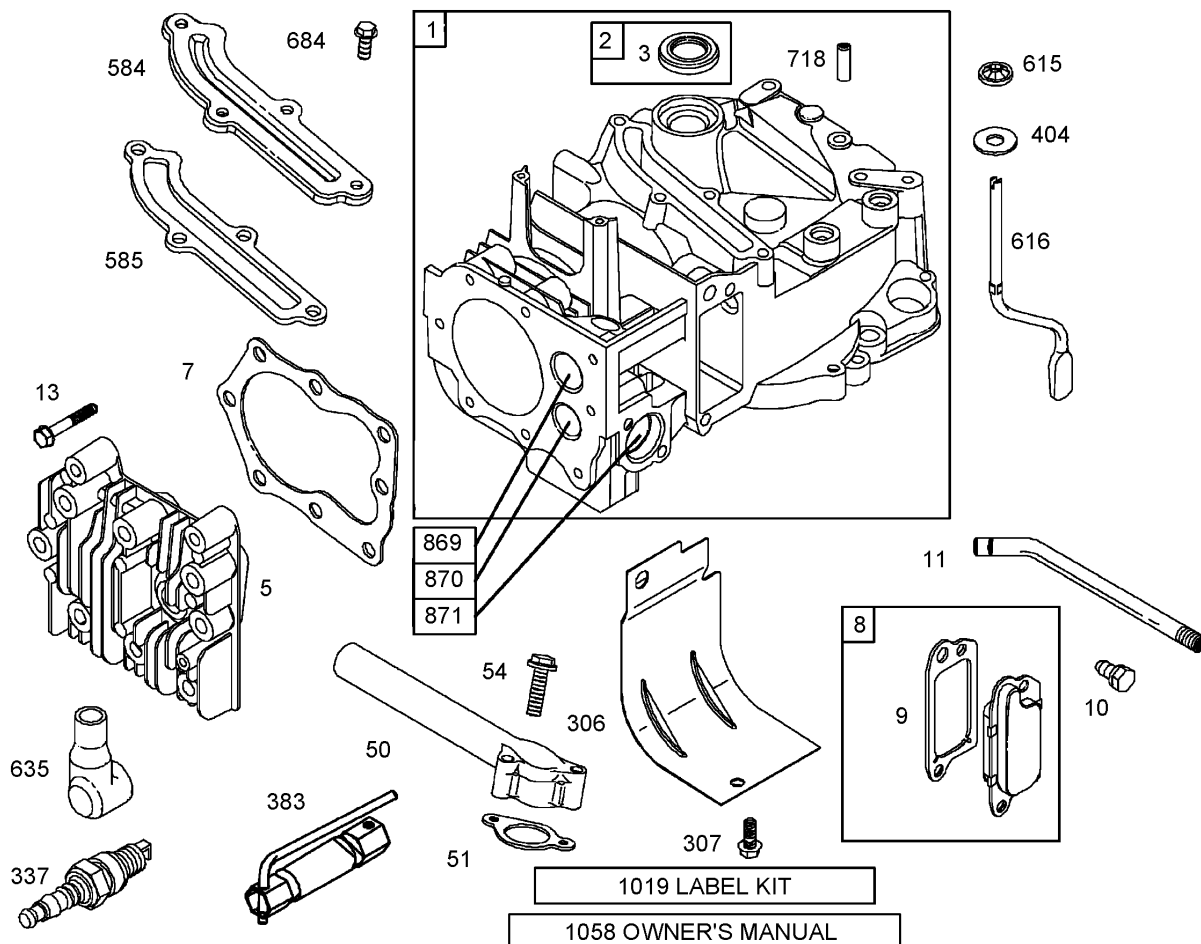


Cylinder Assembly

Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description
❶1	697324	1	Cylinder ASM
❷2	399269	1	Bushing/Seal Kit
❸3	299819	1	Seal-Oil
❹5	691160	1	Head-Cylinder
❺7	692249	1	Gasket-Head, Cylinder
❻8	695250	1	Breather ASM
❼9	696125	1	Gasket-Breather
❽10	691125	1	Screw
❾11	691781	1	Tube-Breather
❿13	690912	1	Screw
⓫50	497465	1	Manifold-Intake
⓬51	272199	1	Gasket-Intake
⓭54	691650	1	Screw
⓮306	690450	1	Shield-Cylinder
⓯307	690345	1	Screw
⓰337	697451	1	Plug-Spark
⓱383	89838	1	Wrench-Plug, Spark
⓲404	690272	1	Washer
⓳584	697734	1	Cover-Passage, Breather
⓴585	691879	1	Gasket-Passage, Breather
⓵615	690340	1	Retainer-Shaft, Governor
⓶616	698801	1	Crank-Governor
⓷635	66538	1	Boot-Plug, Spark
⓸684	690345	1	Screw

Ref	Part No.	Qty.	Description
❶718	690959	1	Pin-Locating
❷869	691155	1	Seat-Valve (Intake)
❸870	690380	1	Seat-Valve (Exhaust)
❹871	262001	1	Bushing-Guide (Exhaust)
❺871	63709	1	Bushing-Guide (Intake)
❽1019	494256	1	Label Kit
❾1058	275177	1	Manual-Owner's

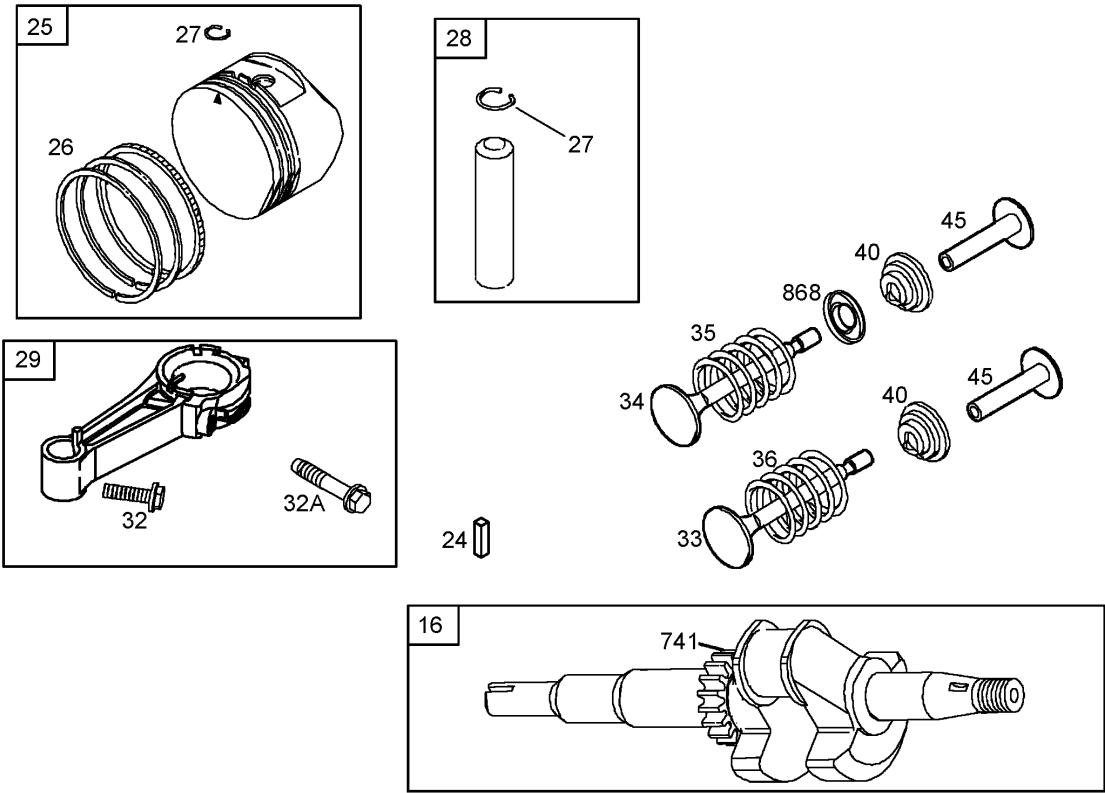


Crankshaft Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
❶16	694079	1	Crankshaft				
❶24	222698	1	Key				
❶25	791096	1	Piston ASM				
❶25	691325	1	Spline-Starter				
❶26	791098	1	Ring Set				
❶26	691324	1	Cover-Cleaner, Air				
❶27	691866	1	Lock-Pin, Piston				
❶28	499423	1	Pin-Piston (Standard)				
❶28	298908	1	Pin-Piston (.005 Undersize)				
❶29	499424	1	Rod-Connecting (Standard)				
❶32	691664	1	Screw				
❶32A	695759	1	Screw				
❶33	262651	1	Valve-Exhaust				
❶34	262652	1	Valve-Intake				
❶35	691270	1	Spring-Valve				
❶36	691270	1	Spring-Valve				
❶40	692194	1	Retainer-Valve				
❶45	690548	1	Tappet-Valve				
❶741	790345	1	Gear-Timing				
❶868	697338	1	Seal-Valve				

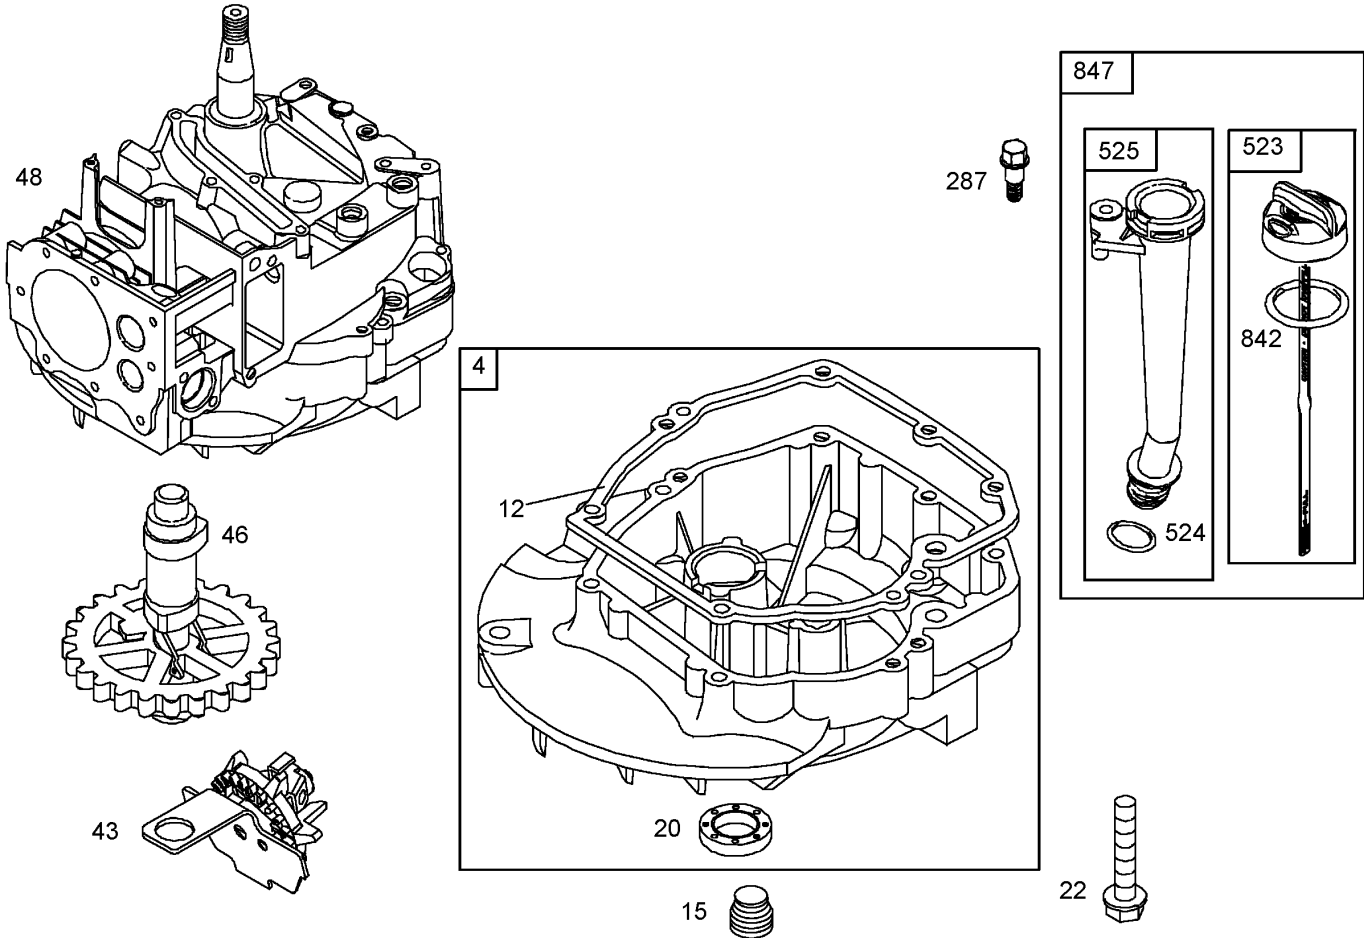


Crankcase Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
14	493279	1	Sump-Engine				
112	692232	1	Gasket-Crankcase (.015 Thick, Standard)				
15	691680	1	Plug-Drain, Oil				
120	399781	1	Seal-Oil				
122	691092	1	Screw (Engine Sump)				
143	691997	1	Slinger-Governor/Oil				
146	691449	1	Camshaft				
148	694810	1	Short Block				
1287	690940	1	Screw				
1523	499621	1	Dipstick				
11524	692296	1	Seal-O Ring				
1525	495265	1	Tube-Dipstick				
11842	691031	1	Seal-O Ring				
1847	692047	1	Dipstick/Tube ASM				

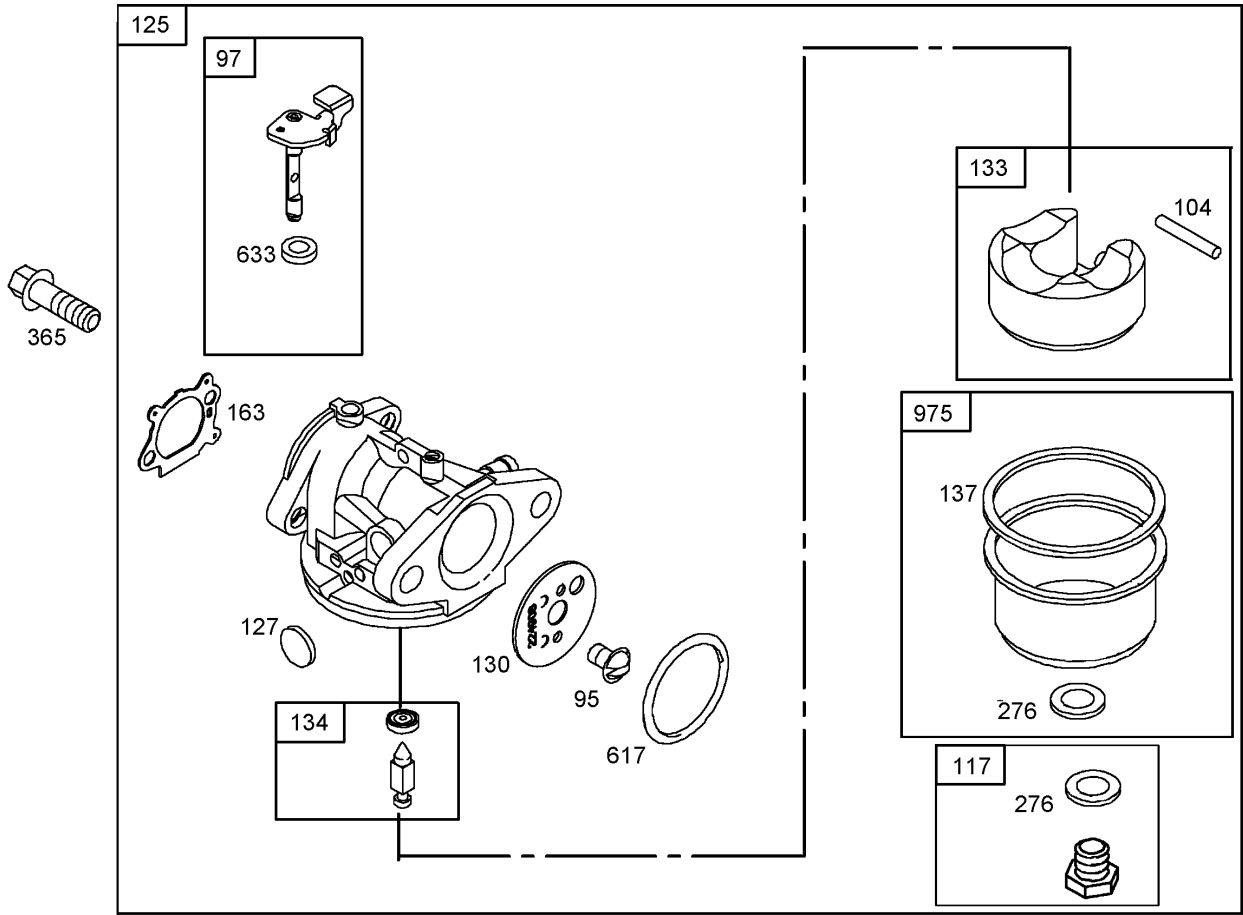


Carburetor Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
① 95	691636	1	Screw				
① 97	493267	1	Shaft And Lever				
① ② 104	691242	1	Pin-Hinge, Float				
① 117	497466	1	Main Jet (High Altitude)				
① 125	498254	1	Carburetor				
① ② 127	694468	1	Plug-Welch				
① 130	691203	1	Valve-Throttle				
① 133	398187	1	Float-Carburetor				
① ② 134	398188	1	Needle/Seat Kit				
① ② 137	693981	1	Gasket-Bowl, Float				
④							
① ② 163	272653	1	Gasket-Air Cleaner				
④							
① ② 276	271716	1	Washer-Sealing				
④							
① 365	692524	1	Screw				
① ② 617	270344	1	Seal-O Ring				
④							
① ② 633	691321	1	Seal-Shaft, Choke/Throttle				
④							
① 975	493640	1	Bowl-Float				

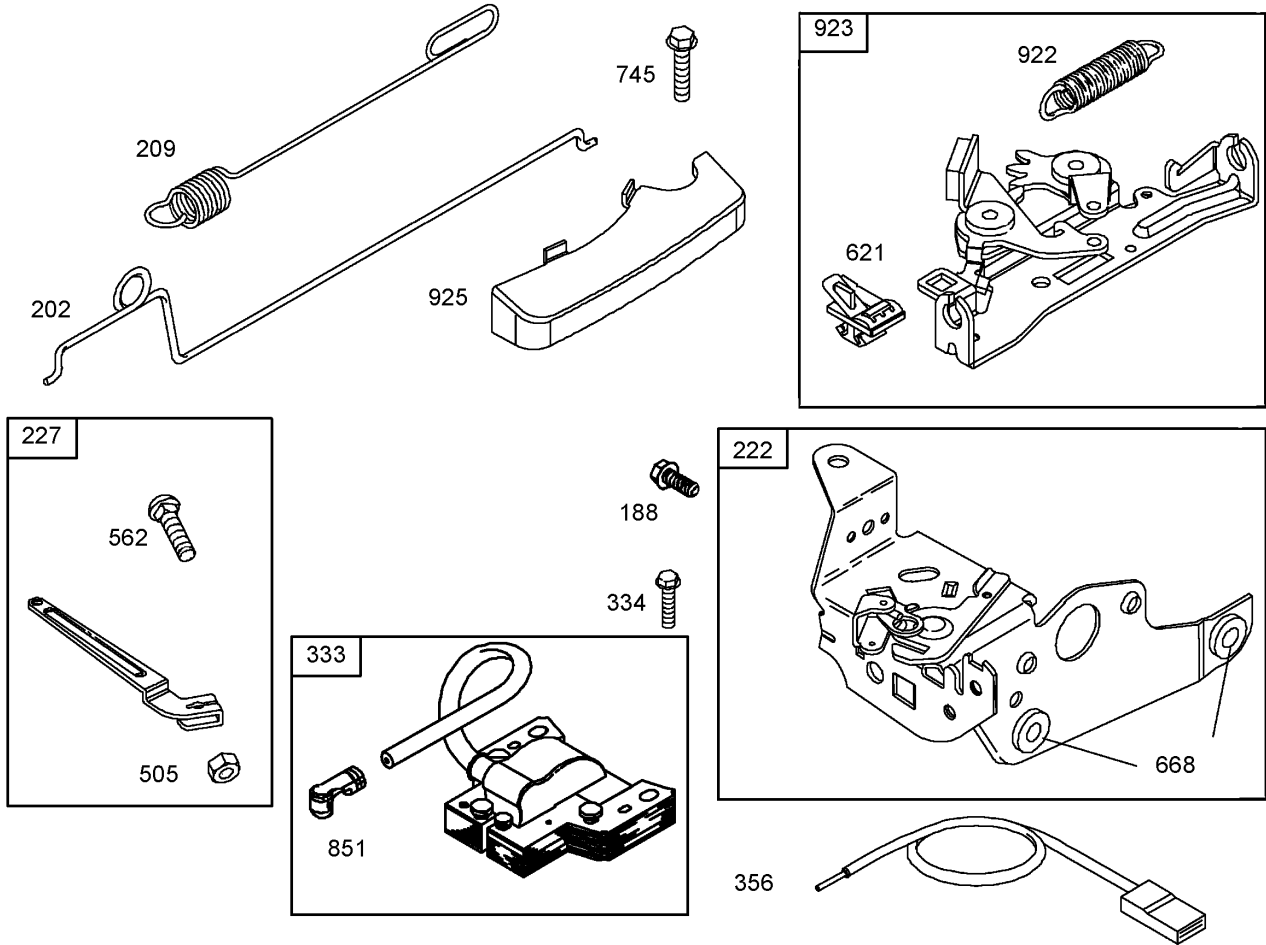


Governor Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
❶188	690877	1	Screw (Control Bracket)				
❶202	691829	1	Link-Governor, Mechanical				
❶209	691292	1	Spring-Governor				
❶222	698163	1	Bracket-Control				
❶227	690783	1	Lever-Control, Governor				
❶333	802574	1	Armature-Magneto				
❶334	691061	1	Screw				
❶356	692390	1	Wire-Stop				
❶505	691251	1	Nut				
❶562	691119	1	Screw				
❶621	692310	1	Switch-Stop				
❶❷668	493823	1	Spacer				
❶745	691648	1	Screw (Brake)				
❶851	493880	1	Terminal-Spark Plug				
❶922	691831	1	Spring-Brake				
❶923	691994	1	Brake ASM				
❶925	690595	1	Cover-Linkage				

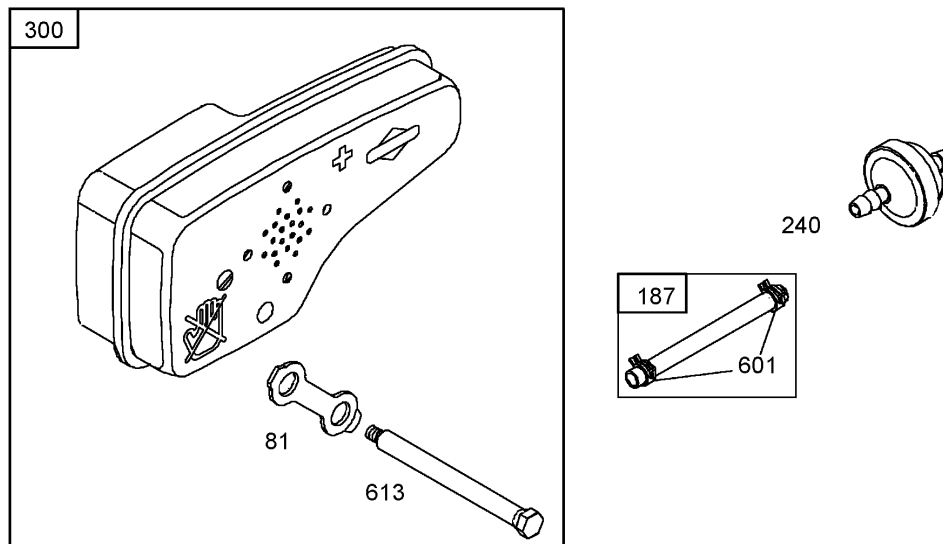

Muffler and Fuel Tank Assembly Briggs and Stratton 12W802-1701-B1


Ref	Part No.	Qty.	Description				
①81	691740	1	Lock-Screw, Muffler				
①187	691050	1	Line-Fuel (Cut To Required Length)				
①240	298090	1	Filter				
①300	692038	1	Muffler				
①601	95162	1	Clamp-Hose				
①613	691340	1	Screw				

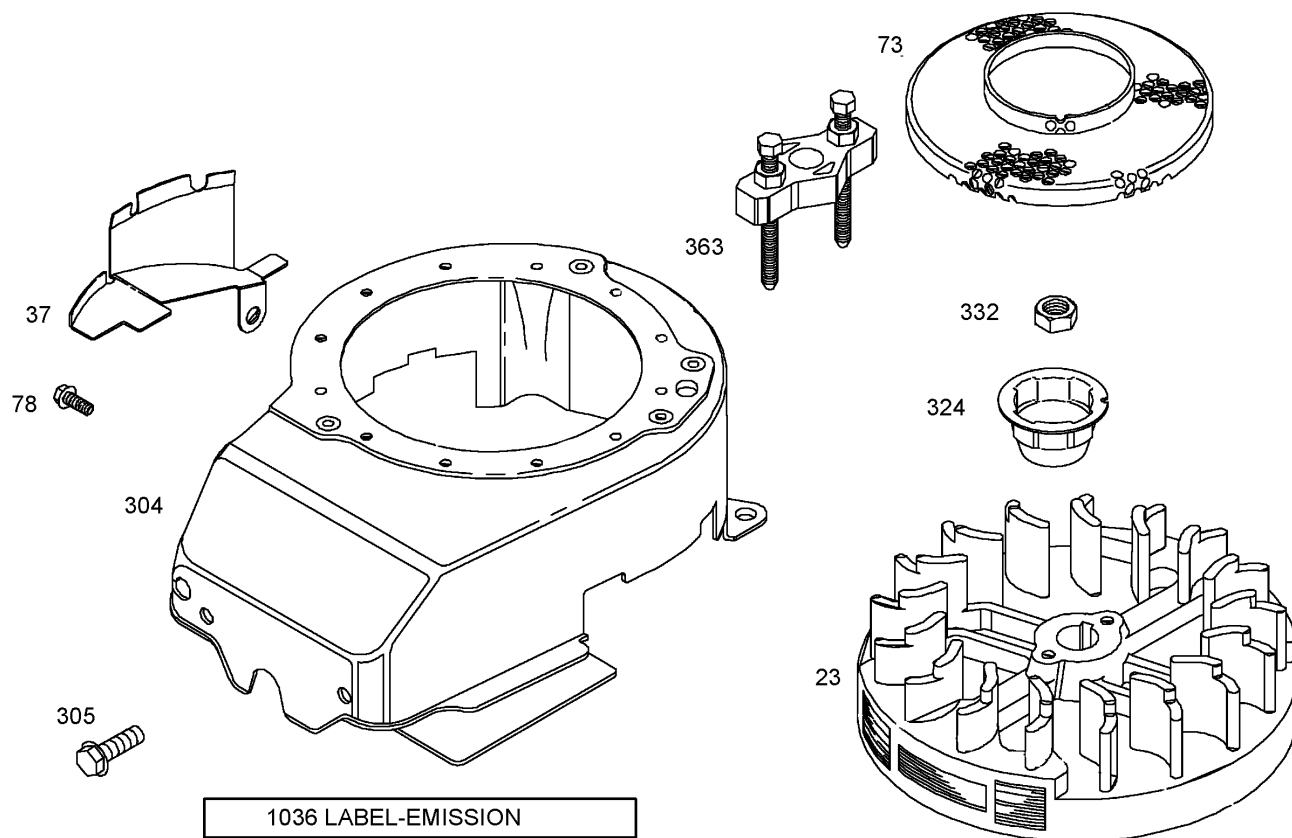

Blower Housing Assembly


Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description
①23	692315	1	Flywheel
①37	694086	1	Guard-Flywheel
①73	691222	1	Screen-Rotating
①78	691108	1	Screw (Flywheel Guard)
①304	493293	1	Housing-Blower
①305	691108	1	Screw
①324	695161	1	Cup/Screen ASM
①332	690662	1	Nut
①363	19069	1	Puller-Flywheel
①1036	790412	1	Label-Emission

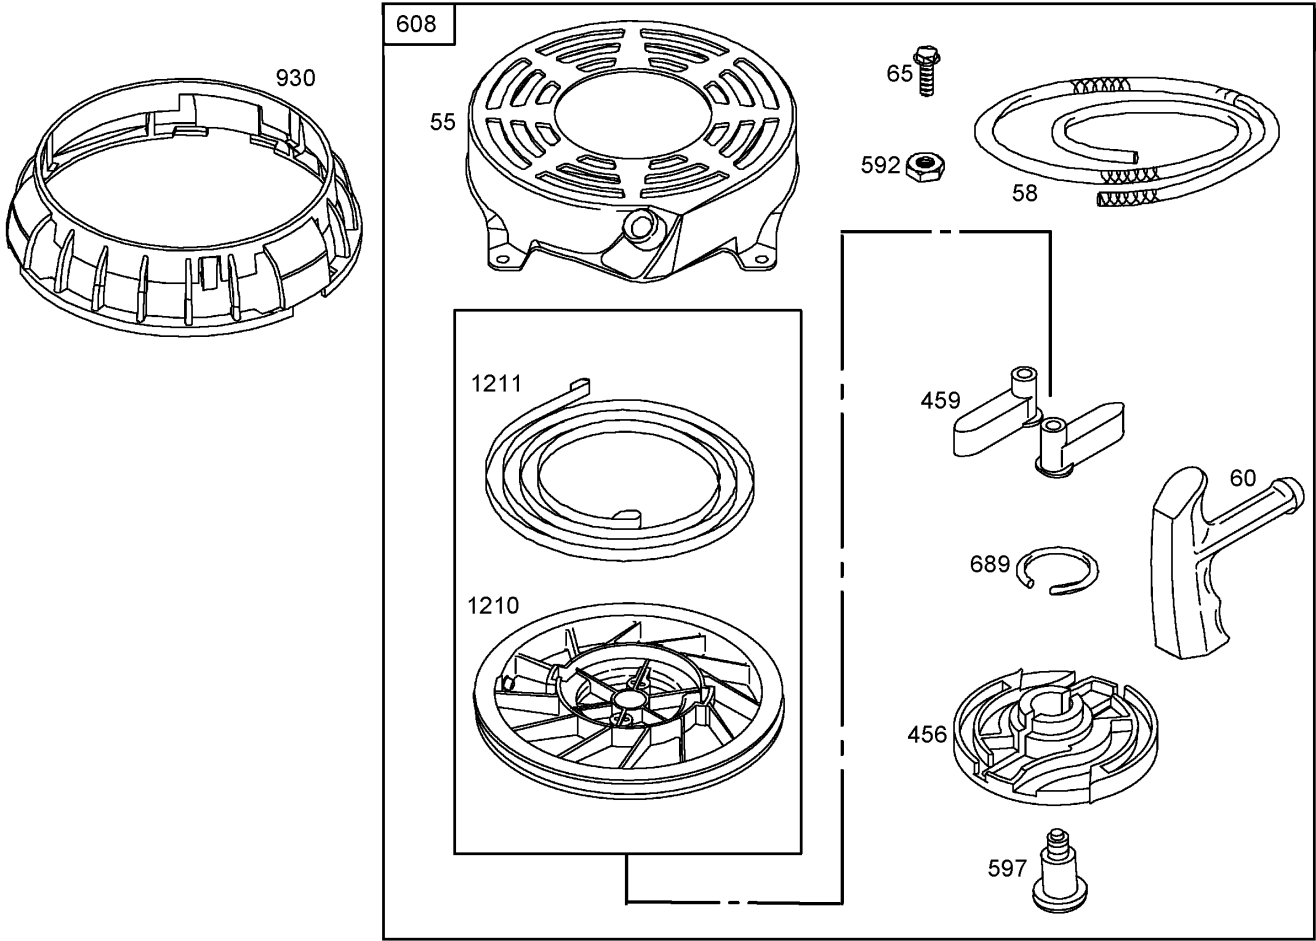



Starter Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
❶55	691421	1	Housing-Starter, Rewind				
❶58	697316	1	Rope-Starter (Cut To Required Length)				
❶60	281434	1	Grip-Rope, Starter				
❶65	690837	1	Screw				
❶456	692299	1	Plate-Friction, Pawl				
❶459	281505	1	Ratchet-Pawl				
❶592	690800	1	Nut				
❶597	691696	1	Screw				
❶608	497680	1	Starter-Rewind				
❶689	691855	1	Spring-Friction				
❶930	791454	1	Guard-Rewind				
❶1210	498144	1	Pulley/Spring ASM (Pulley)				
❶1211	498144	1	Pulley/Spring ASM (Spring)				

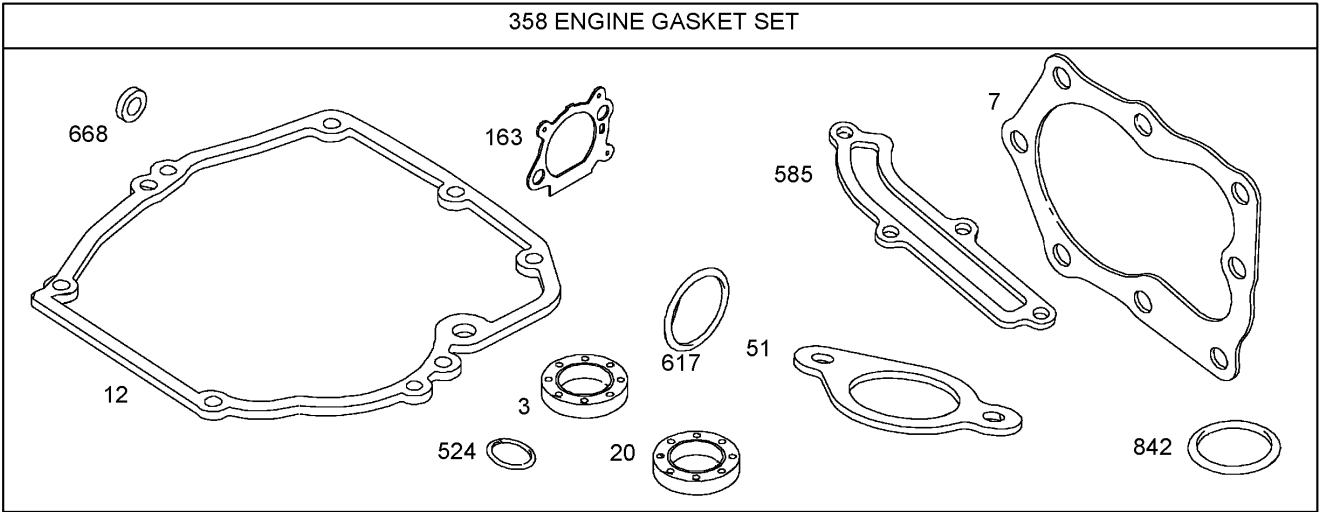

358 Engine Gasket Set Assembly
Briggs and Stratton 12W802-1701-B1

Ref	Part No.	Qty.	Description				
❶3	299819	1	Seal-Oil (Magneto Side)				
❶7	692249	1	Gasket-Head, Cylinder				
❶12	692232	1	Gasket-Crankcase (.015 Thick, STD)				
❶20	399781	1	Seal-Oil (PTO Side)				
❶51	272199	1	Gasket-Intake				
❶❷163	272653	1	Gasket-Air Cleaner				
❷4							
❶358	497316	1	Engine Gasket Set				
❶524	692296	1	Seal-O Ring (Dipstick Tube)				
❶585	691879	1	Gasket-Passage, Breather				
❶❷617	270344	1	Seal-O Ring (Intake Manifold)				
❷4							
❶668	493823	1	Spacer				
❶842	691031	1	Seal-O Ring (Dipstick)				

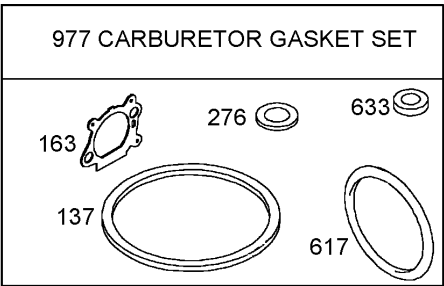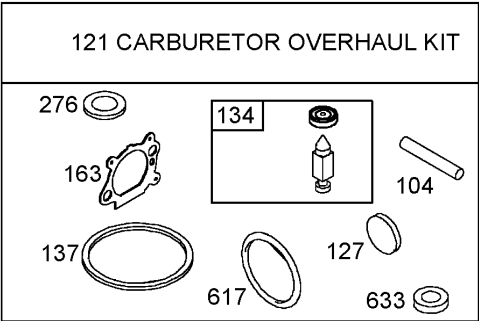

**121 Carburetor Overhaul Kit and 977 Carburetor Gasket Set
Briggs and Stratton 12W802-1701-B1**

Ref	Part No.	Qty.	Description				
❶104	691242	1	Pin-Hinge, Float				
❶121	498260	1	Carburetor Overhaul Kit				
❶127	694468	1	Plug-Welch				
❶134	398188	1	Needle/Seat Kit				
❶137	693981	1	Gasket-Bowl, Float				
❶❷163	272653	1	Gasket-Air Cleaner				
❶276	271716	1	Washer-Sealing				
❶❷617	270344	1	Seal-O Ring (Intake Manifold)				
❶633	691321	1	Seal-Shaft, Choke/Throttle				
❶977	498261	1	Carburetor Gasket Set				

NOTES

NOTES

NOTES

