


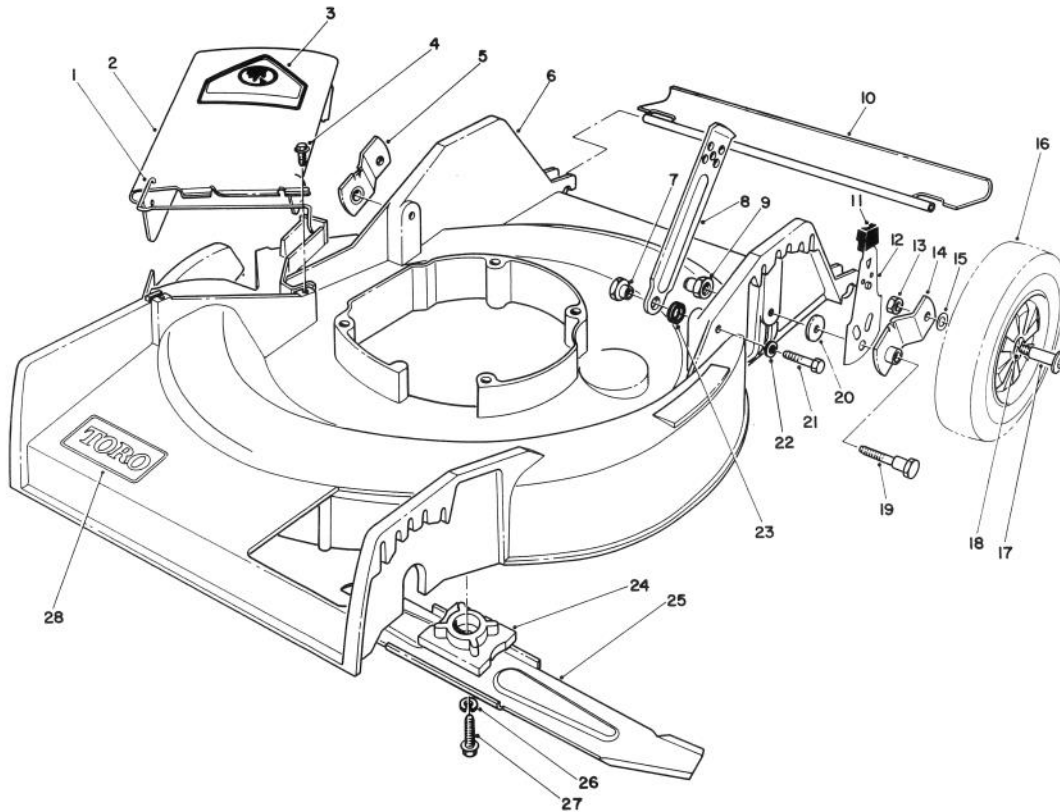


MODEL NO 16785-1000001 &amp; UP

**PARTS  
CATALOG**
**21" S.P. SIDE DISCHARGE**


C-0483

## HOUSING ASSEMBLY

| Ref. No. | Part No. | Description                      | No. Used | Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|----------------------------------|----------|----------|----------|-------------------------------------------|----------|
| 1        | 20-2640  | Spring - Hinge                   | 1        | 15       | 40-1940  | Washer - Wheel Bolt                       | 2        |
| 2        | 13-4049  | Deflector<br>(Incl. Ref. #1 & 3) | 1        | 16       | 27-6200  | Wheel & Tire Assembly<br>(Incl. Ref. #18) | 2        |
| 3        | 39-5770  | Decal - Danger                   | 1        | 17       | 27-6230  | Bolt - Wheel                              | 2        |
| 4        | 46-6811  | Screw w/Washer                   | 2        | 18       | 27-6250  | Bushing                                   | 4        |
| 5        | 20-2130  | Pivot Arm Assembly "B"           | 1        | 19       | 3-0655   | Screw - Pivot                             | 2        |
| 6        | 13-3489  | Housing - 21"                    | 1        | 20       | 33-0390  | Washer - Pivot                            | 2        |
| 7        | 27-6520  | Nut - Shoulder                   | 2        | 21       | 322-7    | Hex Hd. Capscrew                          | 2        |
| 8        | 82-7620  | Latch - Handle                   | 2        | 22       | 3253-4   | Lockwasher                                | 2        |
| 9        | 12-2080  | Nut - Shoulder                   | 2        | 23       | 3-3287   | Spacer - Handle Latch                     | 2        |
| 10       | 66-5990  | Shield - Rear                    | 1        | 24       | 49-7900  | Retainer - Blade                          | 1        |
| 11       | 25-7740  | Knob - Spring Arm                | 2        | 25       | 20-2720  | Blade - 21"                               | 1        |
| 12       | 66-6030  | Spring Arm Assembly              | 2        | 26       | 3253-22  | Lockwasher                                | 1        |
| 13       | 52-3620  | Locknut                          | 2        | 27       | 26-0671  | Blade - Screw                             | 1        |
| 14       | 20-2140  | Pivot Arm Assembly "A"           | 1        | 28       | 70-2200  | Decal - Toro                              | 1        |

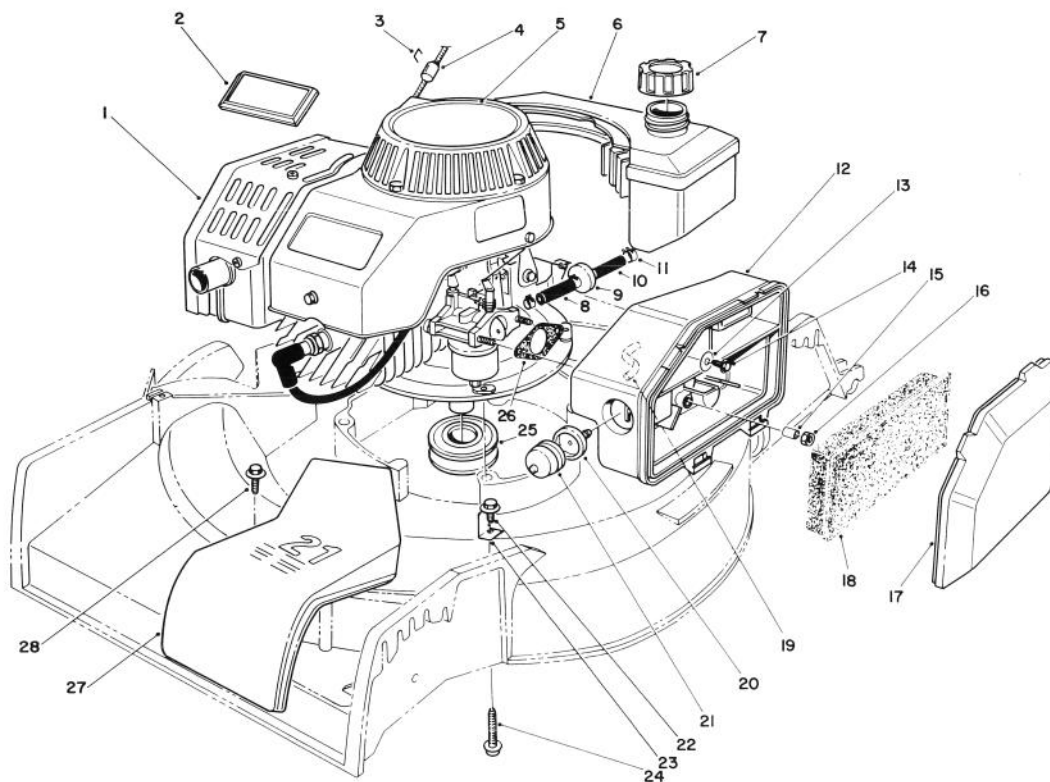

C-0263


## ENGINE ASSEMBLY

| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 1        | 51-0413  | Engine (Complete)  | 1        |
| 2        | 46-8290  | Plate - Toro Logo  | 1        |
| †3       |          | Staple             | 1        |
| 4        | 47-2480  | Stop - Rope        | 1        |
| 5        | 66-0510  | Decal - Recoil     | 1        |
| 6        | 81-0162  | Fuel Tank Assembly | 1        |
| 7        | 55-3575  | Gas Cap Assembly   | 1        |
| 8        | 51-3216  | Line - Fuel        | 1        |
| 9        | 56-6360  | Filter - Fuel      | 1        |
| 10       | 51-3215  | Line - Fuel        | 1        |
| 11       | 2412-95  | Clamp - Fuel Line  | 4        |
| 12       | 63-9330  | Air Cleaner        | 1        |
| 13       | 3256-16  | Washer - Flat      | 1        |
| 14       | 51-2690  | Screw - Washer Hd. | 1        |
| 15       | 62-3980  | Sleeve             | 2        |

| Ref. No. | Part No. | Description                           | No. Used |
|----------|----------|---------------------------------------|----------|
| 16       | 50-7180  | Locknut                               | 2        |
| 17       | 63-9340  | Cover - Air Cleaner                   | 1        |
| 18       | 63-9380  | Foam Element - Air Cleaner            | 1        |
| 19       | 44-3172  | Hose - Primer                         | 1        |
| 20       | 44-2750  | Body - Primer                         | 1        |
| 21       | 66-7460  | Bulb - Primer                         | 1        |
| 22       | 32144-70 | Screw - Thread Forming                | 1        |
| 23       | 70-8080  | Belt Guide                            | 1        |
| 24       | 66-9302  | Hex Hd. Capscrew                      | 3        |
| 25       | 46-7910  | Pulley - Driver                       | 1        |
| 26       | 81-0090  | Gasket - Air Cleaner                  | 1        |
| 27       | 46-4780  | Cover - Belt                          | 1        |
| 28       | 12-5450  | Screw - Thread Forming                | 2        |
| *        | 56-2530  | Fuel Filter Kit<br>(Incl. Ref. #8-11) | 1        |

†Obtain Locally


\*Not Illustrated

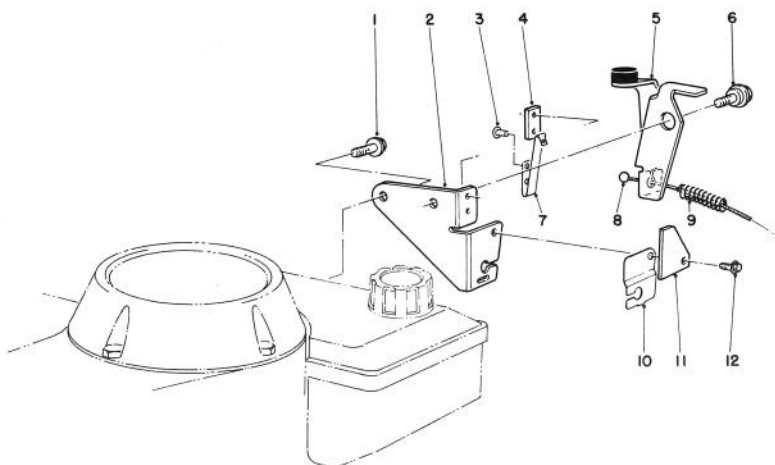

C-0185

## BRAKE ASSEMBLY

| Ref. No. | Part No. | Description              | No. Used | Ref. No. | Part No. | Description                                      | No. Used |
|----------|----------|--------------------------|----------|----------|----------|--------------------------------------------------|----------|
| 1        | 46-0790  | Screw - Self Tapping     | 1        | 8        | 56-6093  | Cable - Brake                                    | 1        |
| 2        | 53-4620  | Plate - Mounting         | 1        | 9        | 66-5370  | Spring - Compression                             | 1        |
| 3        | 3290-459 | Rivet                    | 2        | 10       | 53-4610  | Clamp - Cable                                    | 1        |
| 4        | 77-5260  | Strap - Insulation       | 1        | 11       | 53-4690  | Stop - Ground Strap                              | 1        |
| 5        | 66-5380  | Brake Plate Assembly     | 1        | 12       | 12-5450  | Screw - Self Tapping                             | 1        |
| 6        | 56-6190  | Screw - Shoulder, Metric | 1        | *        | 12-4599  | Mounting Plate Assembly<br>(Incl. Ref. #2-4 & 7) | 1        |
| 7        | 60-9010  | Strap - Ground           | 1        |          |          |                                                  |          |

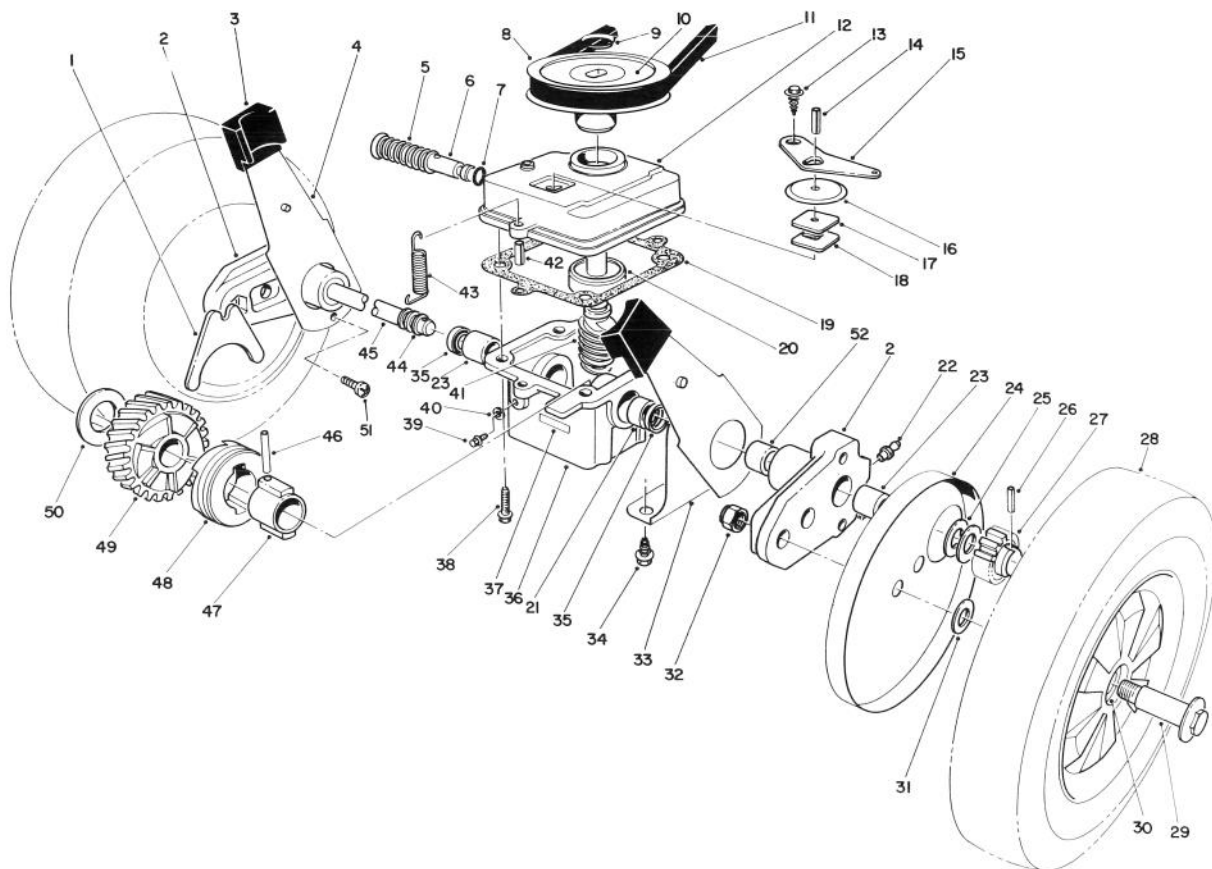


C-0260

## GEAR CASE ASSEMBLY

| Ref. No. | Part No.  | Description                              | No. Used |
|----------|-----------|------------------------------------------|----------|
| 1        | 5-3247    | Fork - Shifter                           | 1        |
| 2        | 66-6001   | Arm - Pivot<br>(Incl. Ref. #22, 23 & 52) | 2        |
| 3        | 25-7740   | Knob - Arm                               | 2        |
| 4        | 67-9370   | Spring Arm Assembly                      | 2        |
| 5        | 3-0731    | Spring                                   | 1        |
| 6        | 46-8240   | Rod - Shifter                            | 1        |
| 7        | 237-137   | "O" Ring                                 | 1        |
| 8        | 18-9760   | Pulley                                   | 1        |
| 9        | 3290-346  | Retainer - Push On                       | 1        |
| 10       | 33-2450   | Decal - Caution                          | 1        |
| 11       | 5-4505    | V-Belt                                   | 1        |
| 12       | 39-1101   | Cover - Gear Case                        | 1        |
| 13       | 32140-64  | Screw - Self Tapping                     | 1        |
| 14       | 32121-114 | Roll Pin                                 | 1        |
| 15       | 5-3252    | Arm - Shifter                            | 1        |
| 16       | 52-7380   | Dust Cover - Transmission                | 1        |
| 17       | 52-7370   | Filter - Dust                            | 1        |
| 18       | 3-0681    | Plate - Latch                            | 1        |
| 19       | 36-1000   | Gasket - Gear Case                       | 1        |
| 20       | 47-7250   | Ball Bearing                             | 1        |
| 21       | 47-2890   | Bushing                                  | 1        |
| 22       | 302-56    | Fitting - Grease                         | 2        |

| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| 23       | 47-2900  | Bushing                                       | 3        |
| 24       | 36-5630  | Cover - Wheel                                 | 2        |
| 25       | 46-6510  | Washer - Thrust                               | 4        |
| 26       | 32121-98 | Pin - Coil                                    | 2        |
| 27       | 46-6520  | Gear - Pinion                                 | 2        |
| 28       | 11-1419  | Wheel, Tire, & Gear Ass'y<br>(Incl. Ref. #30) | 2        |
| 29       | 27-6230  | Bolt - Wheel                                  | 2        |
| 30       | 27-6250  | Bushing - Wheel                               | 4        |
| 31       | 40-1940  | Washer - Wheel Bolt                           | 2        |
| 32       | 52-3620  | Locknut                                       | 2        |
| 33       | 68-9000  | Cap - End                                     | 2        |
| 34       | 32144-70 | Screw - Self Tapping                          | 4        |
| 35       | 47-6730  | Seal - Oil                                    | 2        |
| 36       | 8-0479   | Gear Case<br>(Incl. Ref. #21, 23, & 35)       | 1        |
| 37       | 40-4755  | Decal                                         | 1        |
| 38       | 11-9760  | Screw                                         | 4        |
| 39       | 28-1550  | Screw - Nylon                                 | 1        |
| 40       | 46-9640  | Gasket                                        | 1        |
| 41       | 8-5679   | Worm Shaft & Gear<br>(Incl. Ref. #49)         | 1        |
| 42       | 32121-1  | Pin - Roll                                    | 2        |

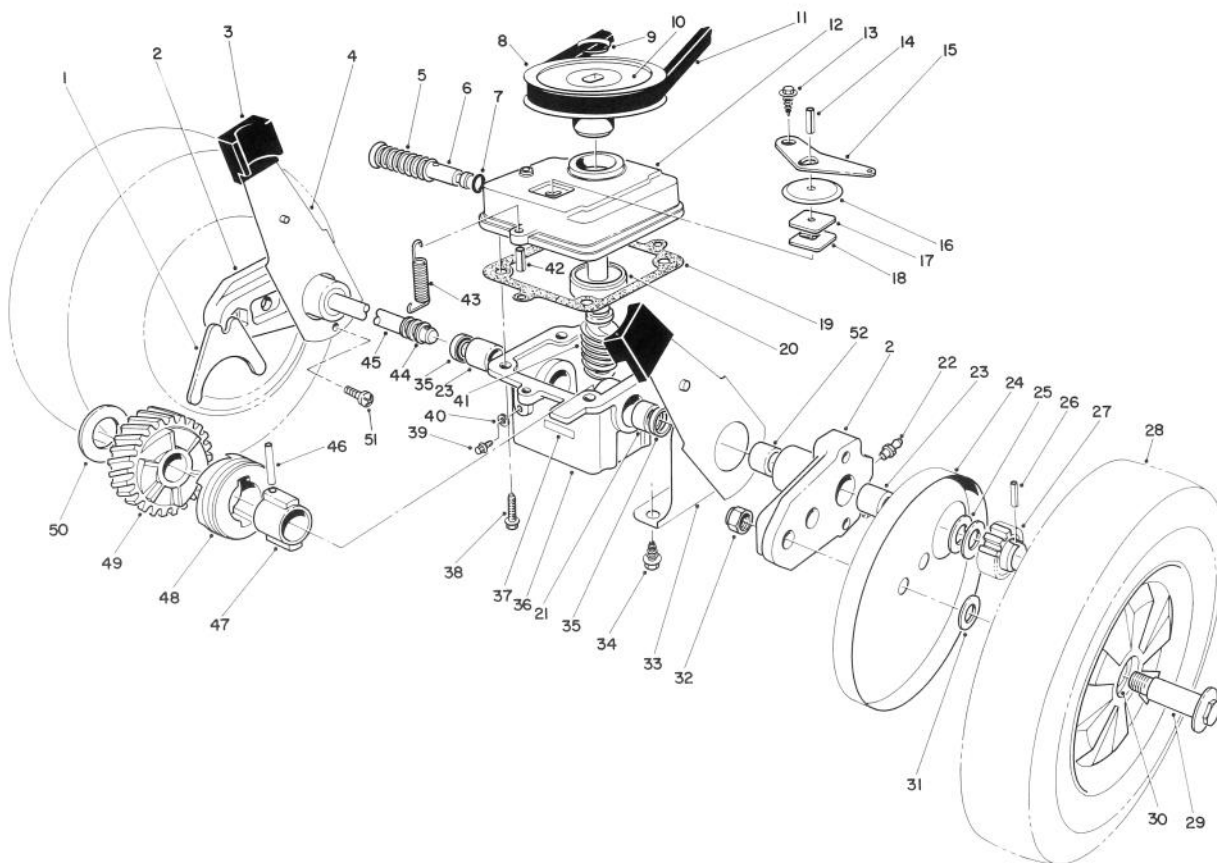


C-0260

## GEAR CASE ASSEMBLY (Continued)

| Ref. No. | Part No. | Description           | No. Used | Ref. No. | Part No. | Description                | No. Used |
|----------|----------|-----------------------|----------|----------|----------|----------------------------|----------|
| 43       | 17-4490  | Spring - Belt Tension | 1        | 50       | 3-0724   | Washer - Thrust            | 1        |
| 44       | 24-7920  | Cover - Drive Shaft   | 1        | 51       | 63-8590  | Screw - Button Hd.         | 2        |
| 45       | 66-6020  | Shaft - Drive         | 1        | 52       | 70-9760  | Bushing                    | 2        |
| 46       | 32121-88 | Pin - Coil            | 1        | *        | 13-3479  | Gear Case Assy. (Complete) | 1        |
| 47       | 3-0721   | Sleeve                | 1        | *        | 27-0490  | Bearing & Shaft Tool       | 1        |
| 48       | 19-5660  | Jaw - Clutch          | 1        | ‡*       | 39-9640  | Metric Bearing Tool        | 1        |
| 49       |          | Helical Gear          | 1        | *        | 27-0460  | Tool Bushing               | 1        |

\*Not Illustrated

‡Use with 27-0490 Bearing & Shaft Tool

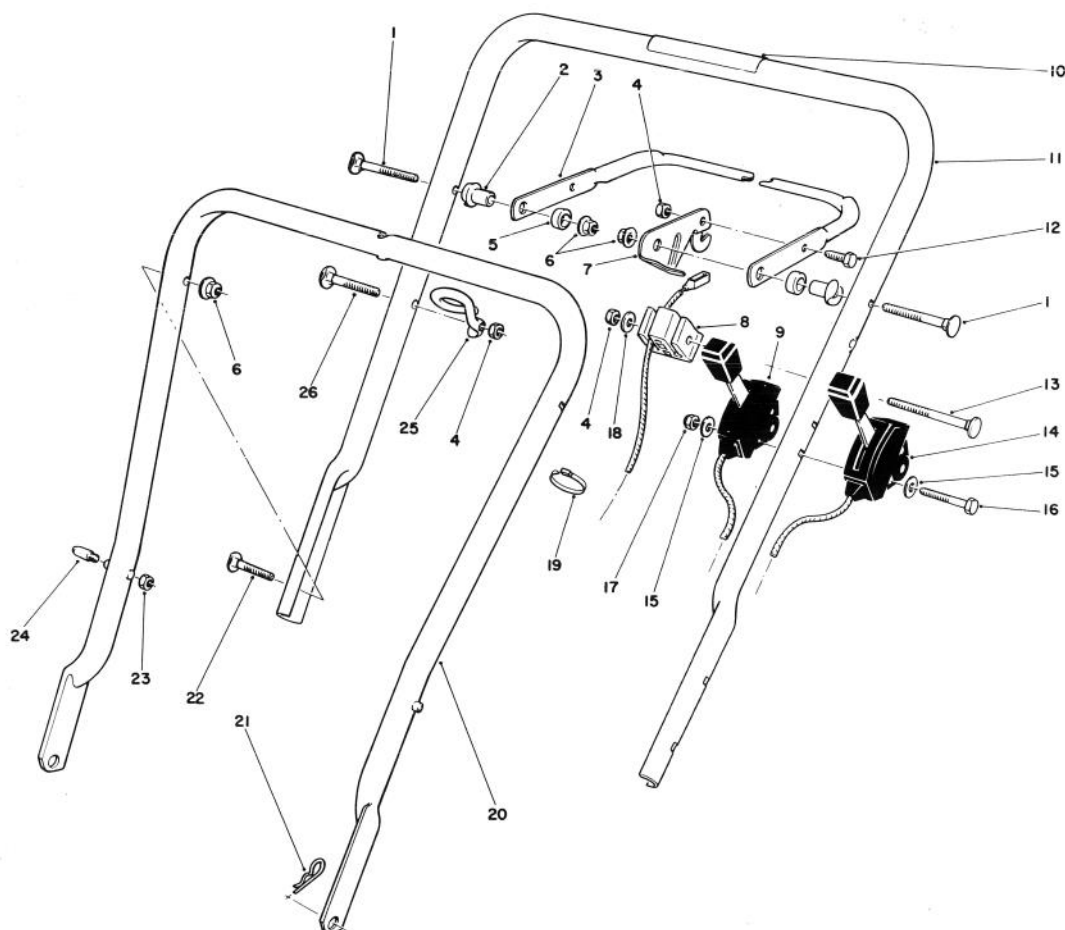

C-0264


## HANDLE ASSEMBLY

| Ref. No. | Part No. | Description                                                                       | No. Used |
|----------|----------|-----------------------------------------------------------------------------------|----------|
| 1        | 17-9421  | Screw - Handle                                                                    | 2        |
| 2        | 49-1630  | Support - Spacer                                                                  | 2        |
| 3        | 71-3080  | Bar - Control                                                                     | 1        |
| 4        | 3296-42  | Nut - Lock                                                                        | 3        |
| 5        | 256-276  | Spacer - Nylon                                                                    | 2        |
| 6        | 3296-58  | Nut - Flange Lock                                                                 | 4        |
| 7        | 66-5350  | Lever - Control                                                                   | 1        |
| 8        | 46-6980  | Support - Cable                                                                   | 1        |
| 9        | 49-4197  | Control - Throttle<br>(Bend Type #2)<br>(Sheath Lg. 38 1/4")<br>(Wire Lg. 2 1/4") | 1        |
| 10       | 56-6280  | Decal - Warning                                                                   | 1        |
| 11       | 12-5669  | Handle - Upper<br>(Incl Ref #10)                                                  | 1        |
| 12       | 321-3    | Capscrew                                                                          | 1        |
| 13       | 46-6434  | Screw - Handle                                                                    | 1        |

| Ref. No. | Part No. | Description                                                                   | No. Used |
|----------|----------|-------------------------------------------------------------------------------|----------|
| 14       | 46-6884  | Control - Traction<br>(Bend Type #3)<br>(Sheath Lg. 49")<br>(Wire Lg. 2 1/2") | 1        |
| 15       | 3256-14  | Washer - Flat                                                                 | 4        |
| 16       | 32105-14 | Capscrew                                                                      | 2        |
| 17       | 3296-2   | Nut - Lock                                                                    | 2        |
| 18       | 3256-22  | Washer - Flat                                                                 | 1        |
| 19       | 3290-378 | Cable Tie                                                                     | 1        |
| 20       | 49-1690  | Lower Handle Assembly                                                         | 1        |
| 21       | 3290-255 | Pin - Cotter Hair                                                             | 2        |
| 22       | 17-9424  | Screw - Handle                                                                | 2        |
| †23      | 3296-47  | Nut - Lock                                                                    | 2        |
| †24      | 49-2750  | Pin - Handle                                                                  | 2        |
| 25       | 46-8080  | Guide - Rope                                                                  | 1        |
| 26       | 46-6433  | Screw - Handle                                                                | 1        |
| *        | 14-2439  | Loose Parts                                                                   | 1        |

†Service Replacement Part


\*Not Illustrated

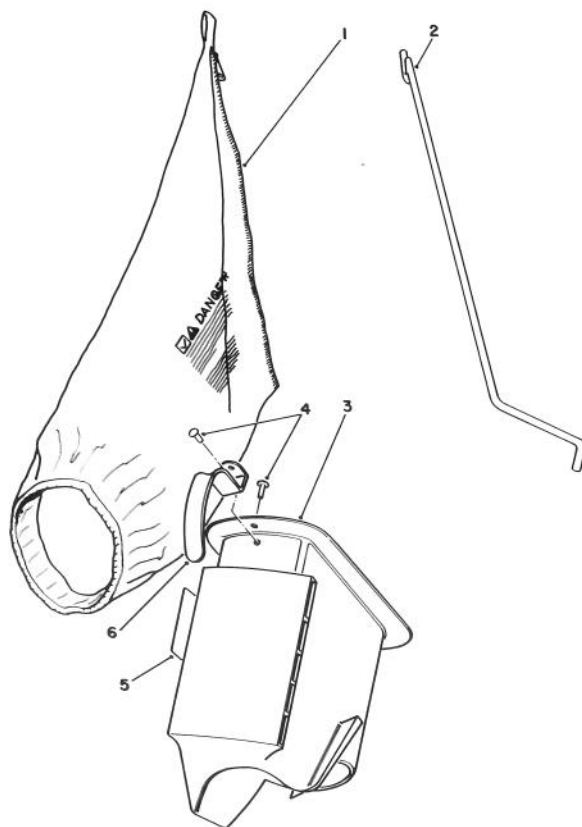

C-0187

## BAGGING KIT NO. 47-6510 (Optional)

| Ref. No. | Part No. | Description                      | No. Used | Ref. No. | Part No. | Description       | No. Used |
|----------|----------|----------------------------------|----------|----------|----------|-------------------|----------|
| 1        | 6-0929   | Grass Bag                        | 1        | 4        | 3295-26  | Rivet             | 2        |
| 2        | 47-5830  | Bag Rod                          | 1        | 5        | 36-5230  | Decal - Bag Chute | 1        |
| 3        | 6-1089   | Grass Chute<br>(Incl Ref #4 & 6) | 1        | 6        | 20-4650  | Handle Chute      | 1        |

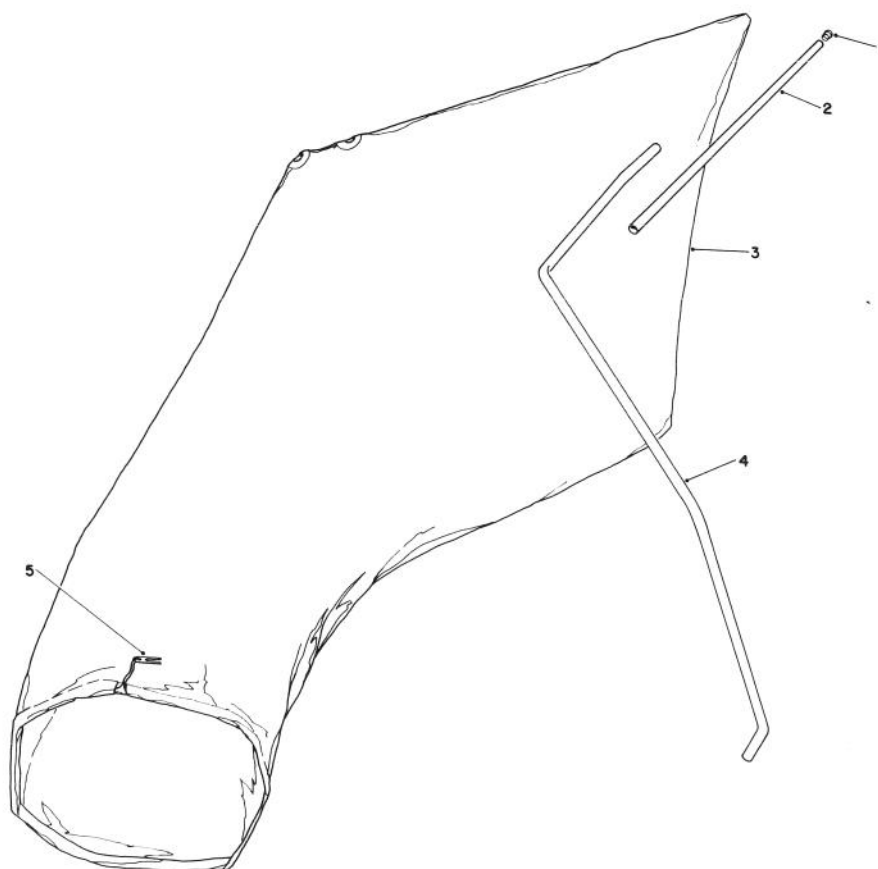


## GIANT BAGGING KIT NO. 29-9750 (Optional)

C-0186

| Ref. No. | Part No. | Description         | No. Used |
|----------|----------|---------------------|----------|
| 1        | 2410-29  | Cap                 | 1        |
| 2        | 29-7000  | Tube 25"            | 1        |
| 3        | 8-4719   | Bag (Incl. Ref. #5) | 1        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 4        | 22-4820  | Hanger - Rod         | 1        |
| 5        | 3-2781   | Fasteners - Bag Cord | 1        |

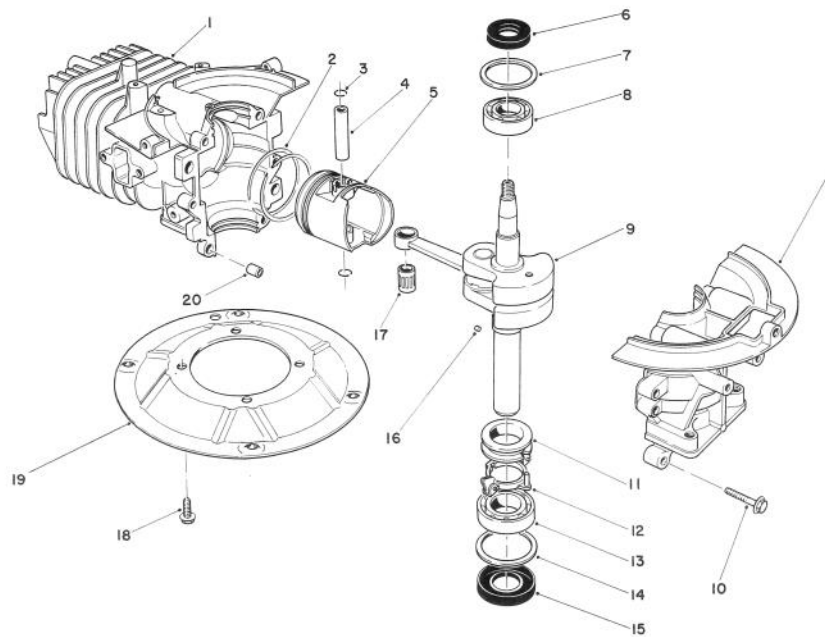


## CRANK SHAFT ASSEMBLY (Model No. 47PL0-1)

C-0190

| Ref. No. | Part No. | Description                        | No. Used | Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------------------|----------|----------|----------|------------------------|----------|
| 1        | 81-2800  | Crankcase/Cylinder Ass'y           | 1        | 11       | 81-0770  | Spacer - Governor      | 1        |
| 2        | 81-0590  | Ring Set                           | 1        | 12       | 81-0750  | Bracket - Governor Arm | 1        |
| 3        | 81-0620  | Circlip                            | 2        | 13       | 81-0700  | Bearing - Lower (25mm) | 1        |
| 4        | 81-0600  | Pin - Wrist                        | 1        | 14       | 81-0730  | Thrust Washer - Lower  | 1        |
| 5        | 81-0580  | Piston (58mm)                      | 1        | 15       | 81-0740  | Oil Seal - Lower       | 1        |
| 6        | 81-0720  | Oil Seal - Upper                   | 1        | 16       | 81-0760  | Pin - Crankshaft       | 1        |
| 7        | 81-0710  | Thrust Washer - Upper              | 1        | 17       | 81-0610  | Bearing - Wrist Pin    | 1        |
| 8        | 81-0690  | Bearing - Upper (20mm)             | 1        | 18       | 81-0570  | Bolt (20mm Lg.)        | 4        |
| 9        | 81-4600  | Crankshaft/Connecting Rod Assembly | 1        | 19       | 81-0560  | Plate - Mounting       | 1        |
| 10       | 81-0540  | Bolt (30mm Lg.)                    | 6        | 20       | 81-0520  | Pin - Crankcase        | 2        |
|          |          |                                    |          | *        | 12-7699  | Short Block Assembly   | 1        |

\*Not Illustrated

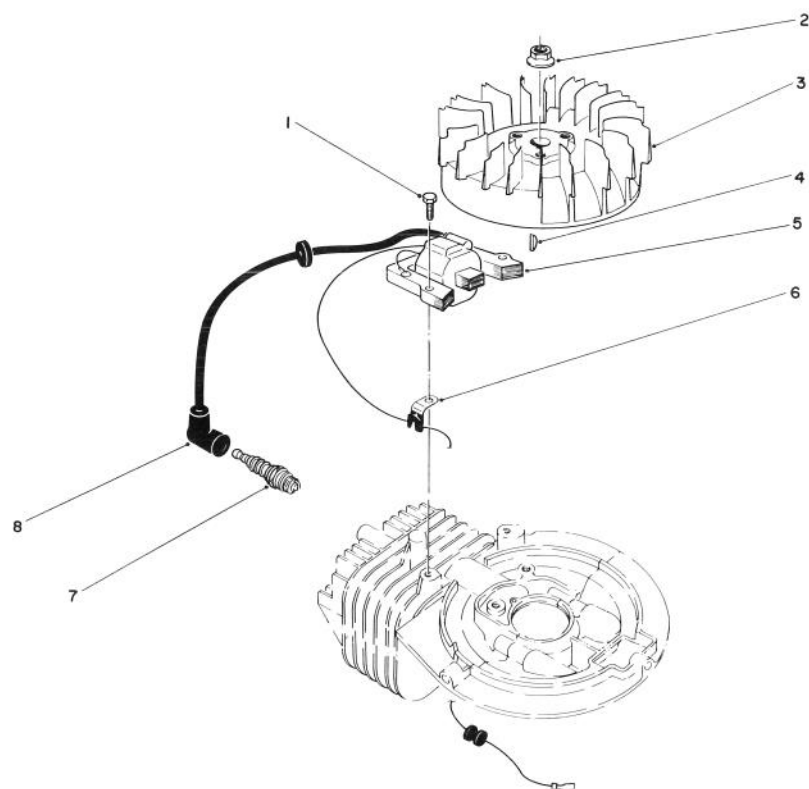


C-0176

## IGNITION ASSEMBLY (Model No. 47PL0-1)

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 1        | 81-5680  | Capscrew - Hex Hd.     | 2        |
| 2        | 81-1330  | Nut                    | 1        |
| 3        | 81-2810  | Flywheel - Magneto     | 1        |
| 4        | 81-2370  | Key - Flywheel         | 1        |
| 5        | 81-2820  | Coil/Ignition Assembly | 1        |

| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 6        | 81-1480  | Clamp              | 1        |
| 7        | 81-0181  | Spark Plug         | 1        |
| 8        | 81-1500  | Cover - Spark Plug | 1        |
| *        | 41-7650  | Puller - Flywheel  | 1        |

\*Not Illustrated

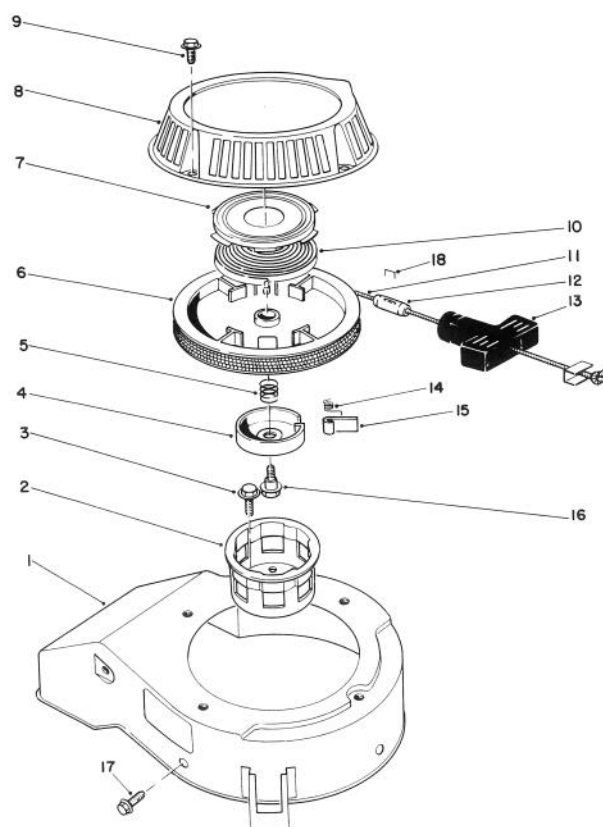


C-0178

## RECOIL ASSEMBLY (Model No. 47PL0-1)

| Ref. No. | Part No. | Description                  | No. Used | Ref. No. | Part No. | Description                           | No. Used |
|----------|----------|------------------------------|----------|----------|----------|---------------------------------------|----------|
| 1        | 81-2070  | Cover - Cooling Fan          | 1        | 13       | 81-1630  | Handle - Recoil                       | 1        |
| 2        | 81-1290  | Pulley - Starter Cup         | 1        | 14       | 81-1220  | Spring - Dog                          | 1        |
| 3        | 81-1300  | Bolt (16mm Lg.)              | 3        | 15       | 81-1230  | Dog                                   | 1        |
| 4        | 81-1250  | Retainer - Dog               | 1        | 16       | 81-1260  | Bolt - Shoulder                       | 1        |
| 5        | 81-1240  | Spring - Compression         | 1        | 17       | 81-1170  | Bolt - Self Tapping (15mm Lg.)        | 3        |
| 6        | 81-1210  | Reel - Rope Pulley           | 1        | †18      |          | Staple                                | 1        |
| 7        |          | Retainer Cup - Recoil Spring | 1        | *        | 81-2040  | Starter Assembly (Incl. Ref. #4-16)   | 1        |
| 8        | 81-2090  | Case - Recoil                | 1        | *        | 81-2300  | Spring & Retainer (Incl. Ref. #6 & 9) | 1        |
| 9        | 81-1280  | Bolt                         | 4        |          |          |                                       |          |
| 10       |          | Spring - Recoil              | 1        |          |          |                                       |          |
| 11       | 81-1270  | Rope                         | 1        |          |          |                                       |          |
| 12       | 81-3980  | Stop - Recoil                | 1        |          |          |                                       |          |

\*Not Illustrated


†Obtain Locally

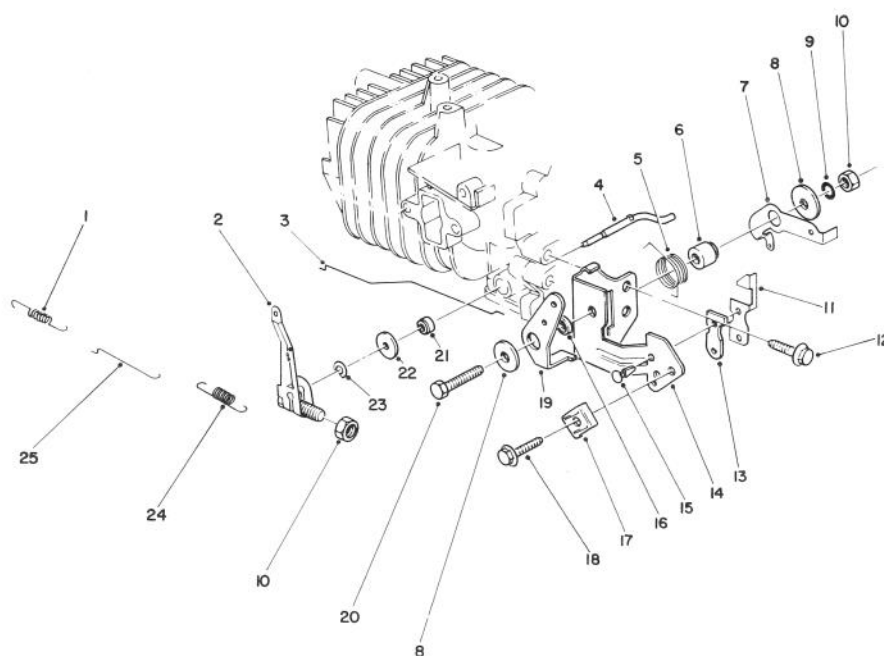

C-0192

## GOVERNOR ASSEMBLY (Model No. 47PL0-1)

| Ref. No. | Part No. | Description                    | No. Used | Ref. No. | Part No. | Description                   | No. Used |
|----------|----------|--------------------------------|----------|----------|----------|-------------------------------|----------|
| 1        | 81-0920  | Spring - Carburetor Rod        | 1        | 13       | 81-1830  | Insulator - Kill Switch       | 1        |
| 2        | 81-5420  | Governor Arm/Bolt Ass'y        | 1        | 14       | 81-2420  | Bracket - Throttle Control    | 1        |
| 3        | 81-5410  | Rod - Choke                    | 1        | 15       | 81-1850  | Rivet - Kill Switch           | 2        |
| 4        | 81-2880  | Shaft - Governor               | 1        | 16       | 81-2470  | Spacer - Choke Control Lever  | 1        |
| 5        | 81-2460  | Spring - Choke Control Lever   | 1        | 17       | 81-2430  | Clamp - Cable                 | 1        |
| 6        | 81-1770  | Spacer - Governor Spring Lever | 1        | 18       | 50-0130  | Bolt - Cable Clamp            | 1        |
| 7        | 81-2850  | Lever - Governor Spring        | 1        | 19       | 81-1710  | Lever - Choke Control         | 1        |
| 8        | 81-1750  | Washer - Choke Control Lever   | 2        | 20       | 81-1730  | Bolt - Throttle Control Brkt. | 1        |
| 9        | 81-1450  | Washer - Lock                  | 1        | 21       | 81-0850  | Oil Seal - Governor Shaft     | 1        |
| 10       | 81-0900  | Nut                            | 2        | 22       | 81-0860  | Washer                        | 1        |
| 11       | 81-1840  | Terminal - Kill Switch         | 1        | 23       | 81-0870  | E-Ring                        | 1        |
| 12       | 81-1170  | Bolt - Self Tapping (15mm Lg.) | 1        | 24       | 81-2830  | Spring - Governor             | 1        |
|          |          |                                |          | 25       | 81-0910  | Rod - Carburetor              | 1        |

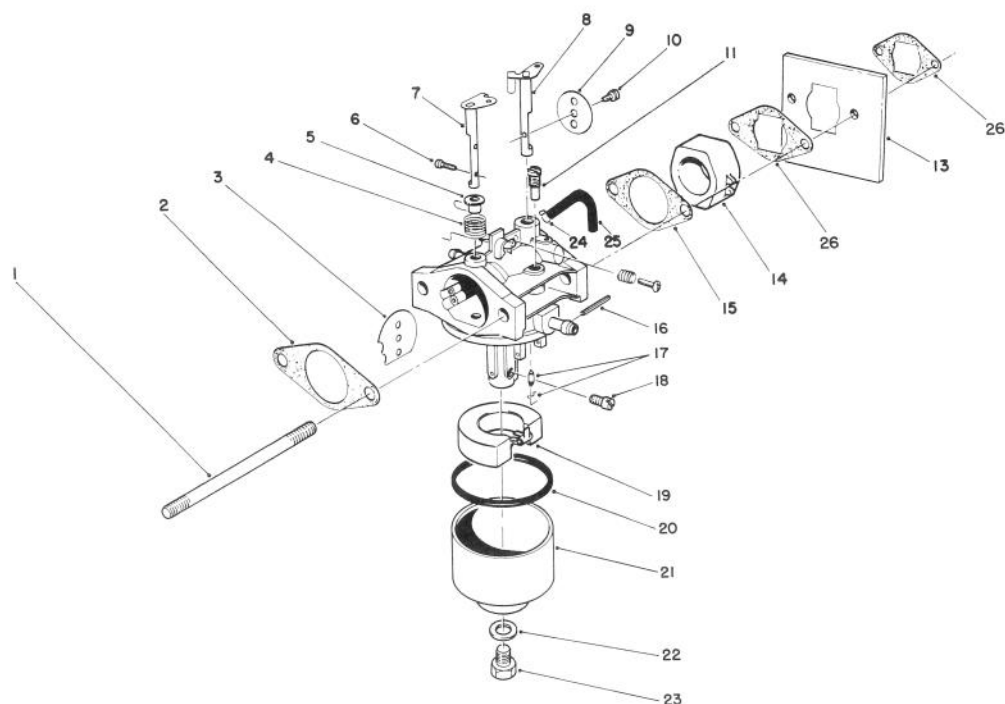


C-0191

## CARBURETOR ASSEMBLY (Model No. 47PL0-1)

| Ref. No. | Part No. | Description              | No. Used | Ref. No. | Part No. | Description                                         | No. Used |
|----------|----------|--------------------------|----------|----------|----------|-----------------------------------------------------|----------|
| 1        | 81-5450  | Stud Bolt - Carburetor   | 2        | 18       | 81-1060  | Jet - Main (#75)                                    | 1        |
| 2        | 81-0090  | Gasket                   | 2        | *        | 81-2340  | Jet - Main (#72.5) High Alt., Above 6000 (Optional) | 1        |
| 3        | 81-0240  | Valve - Choke            | 1        | 19       | 81-0970  | Float                                               | 1        |
| 4        | 81-0230  | Spring - Choke           | 1        | 20       | 81-1010  | Gasket - Float Bowl                                 | 1        |
| 5        | 81-0220  | Bushing - Choke Valve    | 1        | 21       | 81-5660  | Bowl - Float                                        | 1        |
| 6        | 81-2160  | Screw                    | 2        | 22       | 81-1020  | Gasket - Bowl Screw                                 | 1        |
| 7        | 81-1950  | Shaft - Choke            | 1        | 23       | 81-5670  | Screw - Bowl                                        | 1        |
| 8        | 81-0250  | Shaft - Throttle         | 1        | *        | 12-6379  | Carburetor Kit (Incl. Ref. #2, 15, 17, 20, & 22)    | 1        |
| 9        | 81-0260  | Valve - Throttle         | 1        | *        | 81-5430  | Carburetor Assembly - Complete                      | 1        |
| 10       | 81-0270  | Screw - Throttle Valve   | 1        | 24       | 81-5460  | Clamp - Vent Tube                                   | 1        |
| 11       | 81-1030  | Jet - Pilot (#40)        | 1        | 25       | 81-5470  | Tube - Vent                                         | 1        |
| 13       | 81-5490  | Shield - Carburetor      | 1        | 26       | 81-2320  | Gasket                                              | 2        |
| 14       | 81-5440  | Insulator - Carburetor   | 1        |          |          |                                                     |          |
| 15       | 81-0780  | Gasket                   | 1        |          |          |                                                     |          |
| 16       | 81-5600  | Pin                      | 1        |          |          |                                                     |          |
| 17       | 81-4910  | Needle Valve/Spring Wire | 1        |          |          |                                                     |          |

\*Not Illustrated

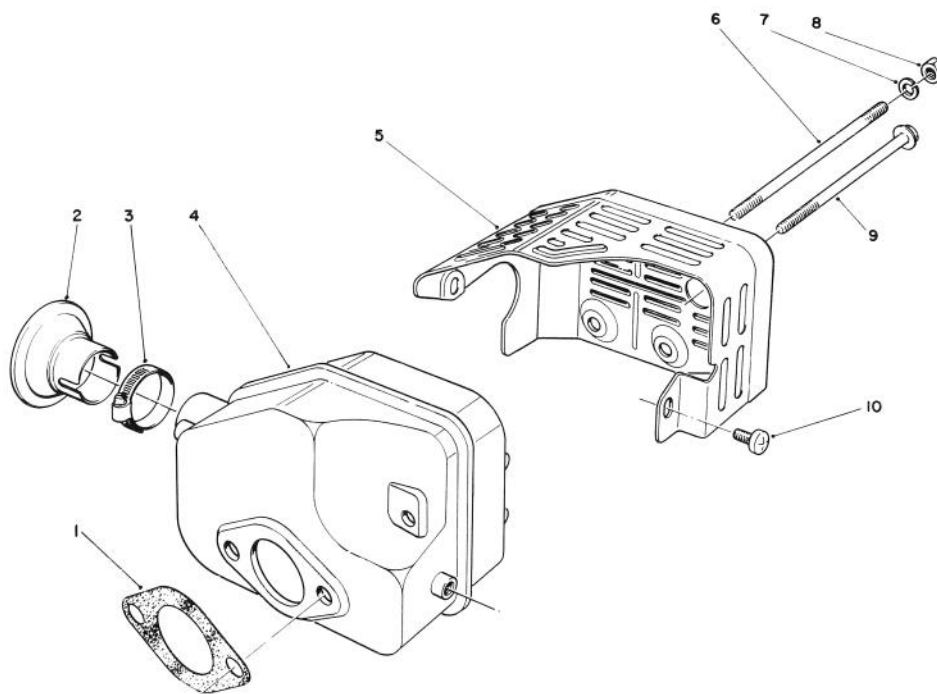

## MUFFLER ASSEMBLY (Model No. 47PL0-1)

T-0667

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 1        | 81-1080  | Gasket - Muffler | 1        |
| *2       | 81-0200  | Spark Arrester   | 1        |
| †3       |          | Clamp            | 1        |
| 4        | 81-5690  | Muffler          | 1        |
| 5        | 81-2450  | Cover - Muffler  | 1        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 6        | 81-1100  | Bolt                 | 2        |
| 7        | 81-1120  | Washer - Lock        | 2        |
| 8        | 81-1110  | Nut                  | 2        |
| 9        | 81-1150  | Bolt - Self Tapping  | 1        |
| 10       | 81-1140  | Screw - Phillips Hd. | 2        |

\*Optional Equipment

†Obtain Locally

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

### MODEL AND SERIAL NUMBERS

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the lawnmower.
2. Part number, description, and the quantity of part(s) desired.

**NOTE:** Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

[illegible]

Litho in U.S.A.  
15

## MAINTENANCE RECORD

[illegible]