Form Number 3356-575 Rev A

NEW HOLLAND

G4030 Zero-Turn-Radius Mower

Model No. 725058066 - T07ZV0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© CNH America LLC - 2007
All Rights Reserved

Contents

Description	Page
Frame Assembly	3
Deck Lift and Seat Support Assembly	4
Seat Assembly	5
Control Assembly	6
Hydro Drive Assembly	7
RH Hydro No. 110-6771 Assembly	8
LH Hydro No. 110-6770 Assembly	9
Engine and Clutch Assembly	10
Styling and Fuel System Assembly	11
50 Inch Deck Assembly	12
50 Inch Deck Decal Assembly	13
50 Inch Deck Spindle and Belt Drive Assembly	14
Electrical Assembly	15
Crankshaft Assembly Kohler SV720-0029	16
Crankscase Assembly Kohler SV720-0029	17
Oil Pan and Lubrication Assembly Kohler SV720-0029	18
Head, Valve and Breather Assembly Kohler SV720-0029	19
Ignition and Electrical Assembly Kohler SV720-0029	20
Blower Housing Assembly Kohler SV720-0029	21
Starter Assembly Kohler SV720-0029	22
Fuel System Assembly Kohler SV720-0029	23
Engine Control Assembly Kohler SV720-0029	24
Air Intake and Filtration Assembly Kohler SV720-0029	25
Exhaust Stud, Gasket and Decal Assembly Kohler SV720-0029	26
Attachments and Accessories List	27

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head

Footnotes

❶ Not illustrated

❷ Not serviced separately


❸ Obtain from your local Kohler dealer

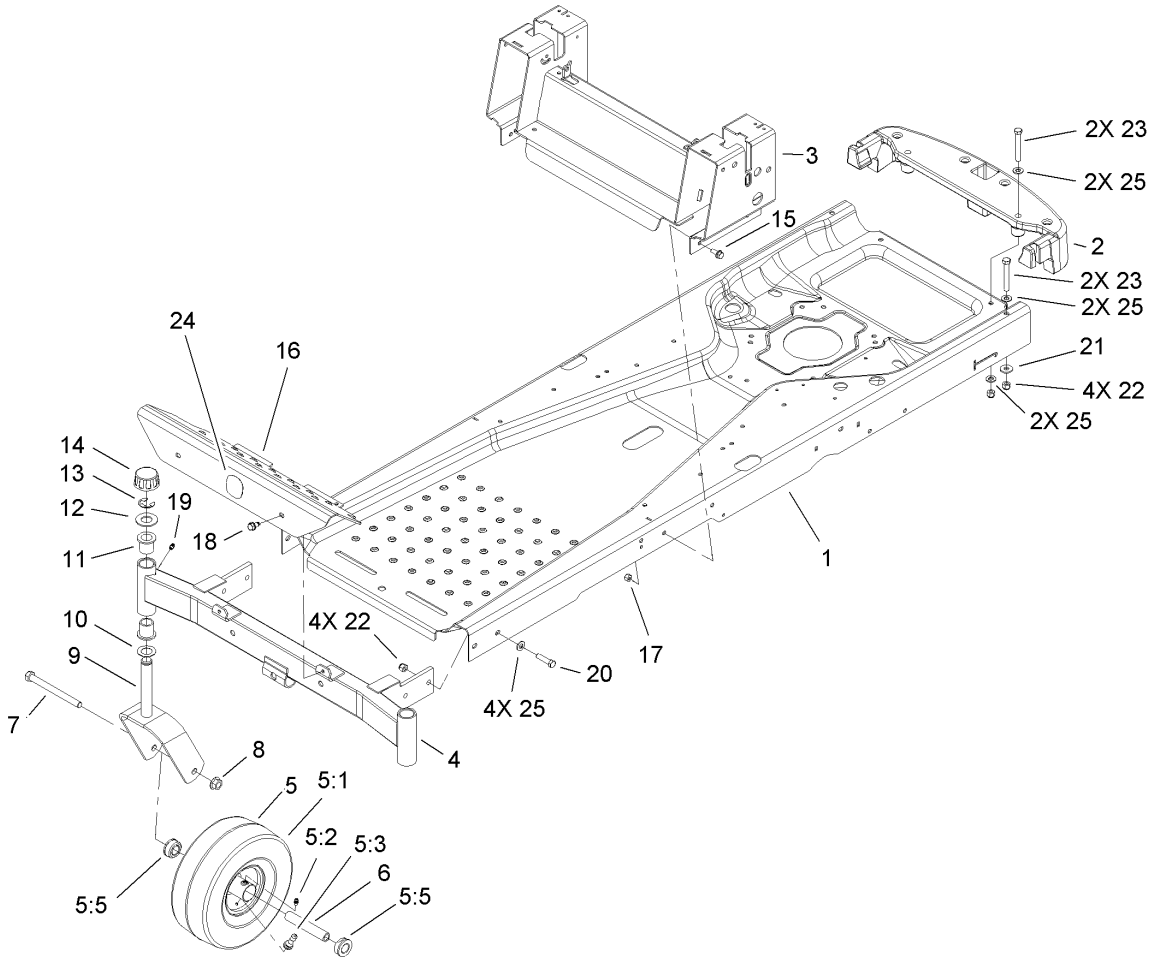

Frame Assembly

Ref	Part No.	Qty.	Description
1	110-6780-04	1	Frame
2	110-6899-03	1	Bumper-Rear
3	110-6872-03	1	Seat Control ASM
4	108-7882-04	1	Front Axle ASM
5	112-9790	2	Castor Wheel ASM
5:1	110-6791	1	Tire-Smooth
5:2	302-5	1	Fitting-Grease
5:3	232-27	1	Stem-Valve
5:5	114-1640	2	Bearing-Outside
❶5:99	93-4244	1	Tube-Inner (W/Valve)
6	104-3667	2	Spanner-Wheel
7	325-22	2	Screw-HH
8	32128-23	2	Nut-HF
9	108-7851-04	2	Caster Fork ASM
10	110-6767	2	Washer-Thrust
11	1-303514	4	Bearing-Flanged
12	104-8076	2	Washer
13	32151-103	2	Ring-Snap
14	61-9780	2	Cap-Hub
15	3234-47	7	Screw-HHF
16	108-7855-03	1	Footrest
17	3296-29	7	Nut-Lock, NI
18	32104-32	2	Screw-HWH
19	302-5	2	Fitting-Grease


Ref	Part No.	Qty.	Description
20	323-8	4	Screw-HH
21	80-6990	2	Washer-Hardened
22	3296-39	8	Nut-Lock, NI
23	323-13	4	Screw-HH
24	114-1611	1	Emblem-Logo
25	3256-24	10	Washer-Flat

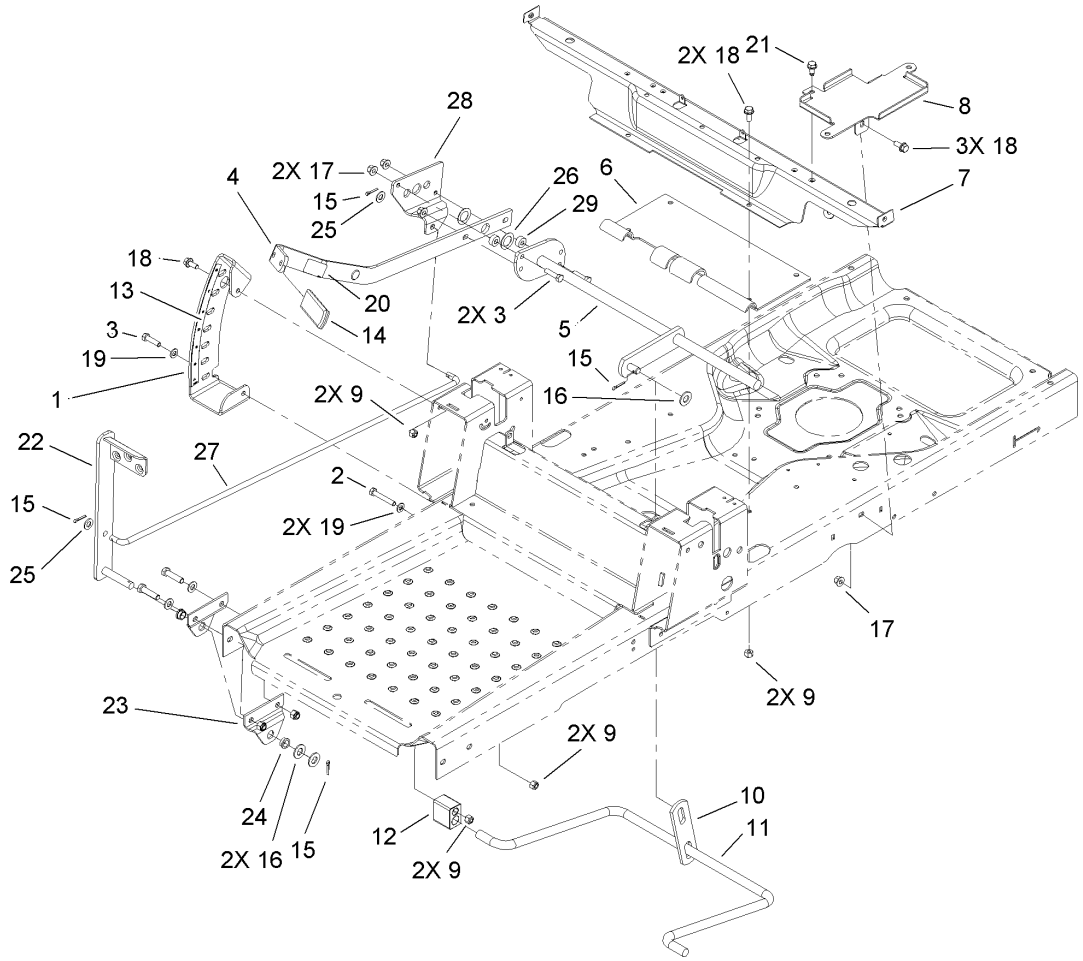

Deck Lift and Seat Support Assembly


Ref	Part No.	Qty.	Description
1	112-4027-03	1	Sector-HOC
2	322-10	2	Screw-HH
3	322-6	3	Screw-HH
4	112-3960-03	1	Lift Arm ASM
5	108-7841-03	1	Lift Lever ASM
6	110-6800-03	1	Plate-Lift
7	110-6805-03	1	Bracket-Seat/Pods
8	110-1937-03	1	Tray-Battery
9	3296-29	8	Nut-Lock, NI
10	108-7840	1	Link-Lift
11	108-7839	1	Arm-Lift, Rear
12	108-7845	2	Block-Pivot
13	112-9802	1	Decal-HOC
14	105-3450	1	Grip-Lever, Lift
15	3272-10	4	Pin-Cotter
16	3256-26	3	Washer-Flat
17	3296-58	3	Nut-Lock, NI
18	3234-47	6	Screw-HHF
19	3256-23	3	Washer-Flat
20	106-8743	1	Decal
21	32104-32	1	Screw-HWH
22	112-4018-03	1	Pedal ASM
23	112-3954-03	2	Bracket-Footlift
24	256-156	2	Bushing-Flange

Ref	Part No.	Qty.	Description
25	3256-24	2	Washer-Flat
26	3-6498	2	Washer-Thrust
27	112-3958	1	Rod-Lift
28	112-3959	1	Plate-Footlift
29	112-3961	2	Spacer

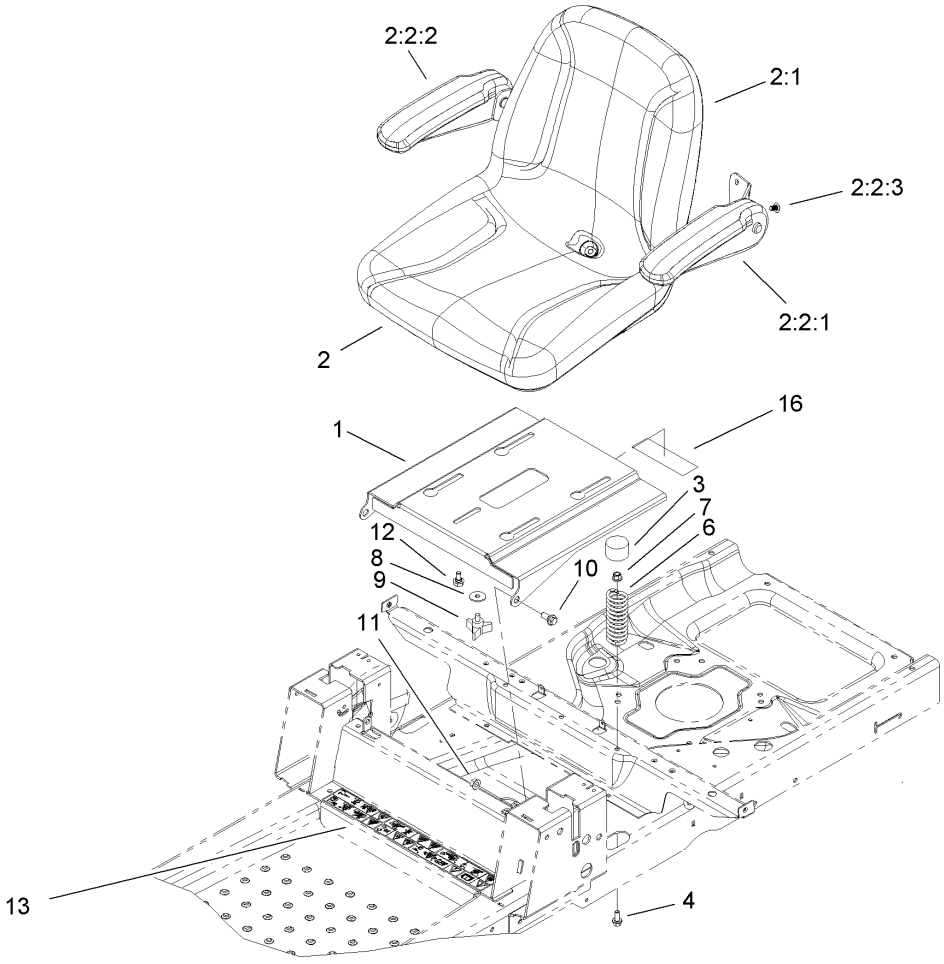

Seat Assembly


Ref	Part No.	Qty.	Description
1	110-6679-03	1	Base-Seat
2	110-6777	1	Seat-18 Inch
2:1	110-6773	1	Seat-18 Inch
❶❷2:2		1	Armrest Kit
2:2:1	110-6569	1	LH Armrest Kit
2:2:2	110-6570	1	RH Armrest Kit
2:2:3	108-6179	6	Screw-HSBH
3	701178	2	Cap-Protector
4	3234-47	2	Screw-HHF
6	92-7054	2	Spring-Compression
7	3296-58	2	Nut-Lock, NI
8	5-4460	1	Washer-Pivot
9	92-9674	1	Knob
10	94-7582	2	Bolt-Shoulder
11	32128-21	2	Nut-HF
12	37-8771	4	Bolt-Shoulder
13	110-6825	1	Decal-Danger
16	106-8717	1	Decal-Service

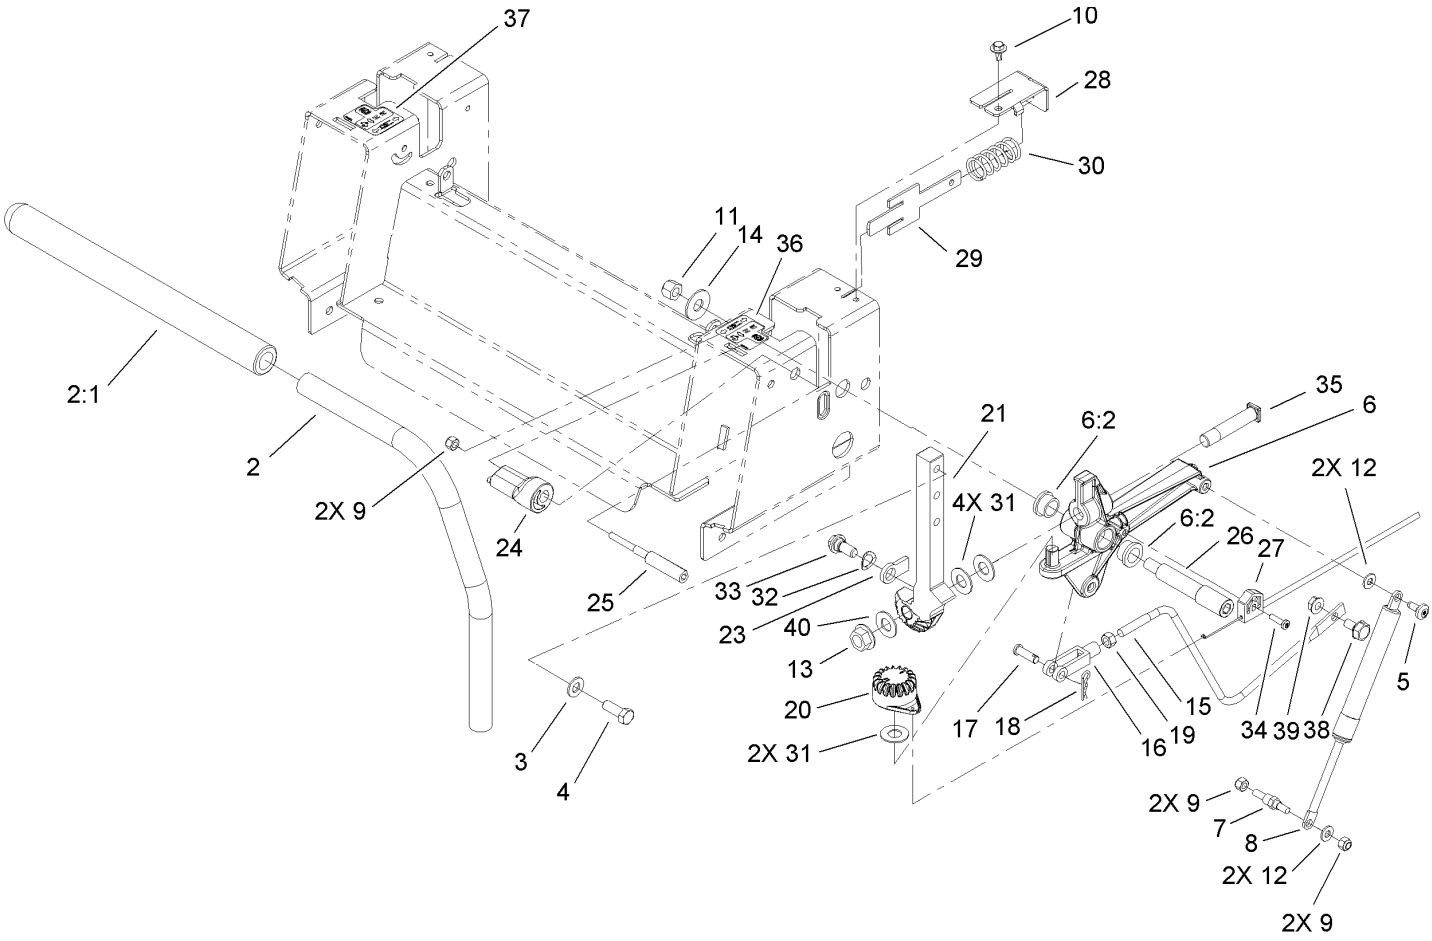

Control Assembly

Ref	Part No.	Qty.	Description
❶1	110-6814	1	RH Handle ASM
❶1:1	108-6187	1	Grip
2	110-6815	1	LH Handle ASM
2:1	108-6187	1	Grip
3	3256-24	4	Washer-Flat
4	323-6	4	Screw-HH
5	112-4004	2	Screw-Shoulder
6	110-6828	2	Activator Arm ASM
6:2	105-3455	2	Bushing
7	110-6810	2	Stud-Damper
8	103-2913	2	Damper-Control, Motion
9	3296-42	6	Nut-Lock, NI
10	46-8560	2	Screw-HHF
11	3296-48	2	Nut-Lock, NI
12	3256-22	4	Washer-Flat
13	32128-23	2	Nut-HF
14	3256-5	2	Washer-Flat
15	110-6693	2	Link-Hydro
16	1-303105	2	Yoke-Adjustable
17	1-808280	2	Pin-Clevis
18	1-806003	2	Pin-Hair
19	3220-2	2	Nut-Jam
20	110-6845	2	Gear-Control
21	110-6783	1	Arm-Actuator, LH


Ref	Part No.	Qty.	Description
❶22	110-6782	1	Arm-Actuator, RH
23	110-6856	2	Tab-Stop
24	110-6873	2	Eccentric
25	110-6874	2	Screw-Eccentric
26	110-6875	2	Bolt-Shoulder
27	110-6858	2	Cable-Brake, Parking
28	110-6751	2	Bracket-Return
29	110-6750	2	Plate-Return
30	110-6752	2	Spring
31	110-6894	6	Washer-Pivot
32	3290-221	2	Washer-Spring
33	94-7582	2	Bolt-Shoulder
34	110-0863	2	Screw-Torx
35	110-6784	2	Bolt-Shoulder
36	112-9754	1	Decal-Lever, Control (LH)
37	112-9755	1	Decal-Lever, Control (RH)
38	37-8771	2	Bolt-Shoulder
39	3296-58	2	Nut-Lock, NI
40	112-9771	2	Washer-Teflon

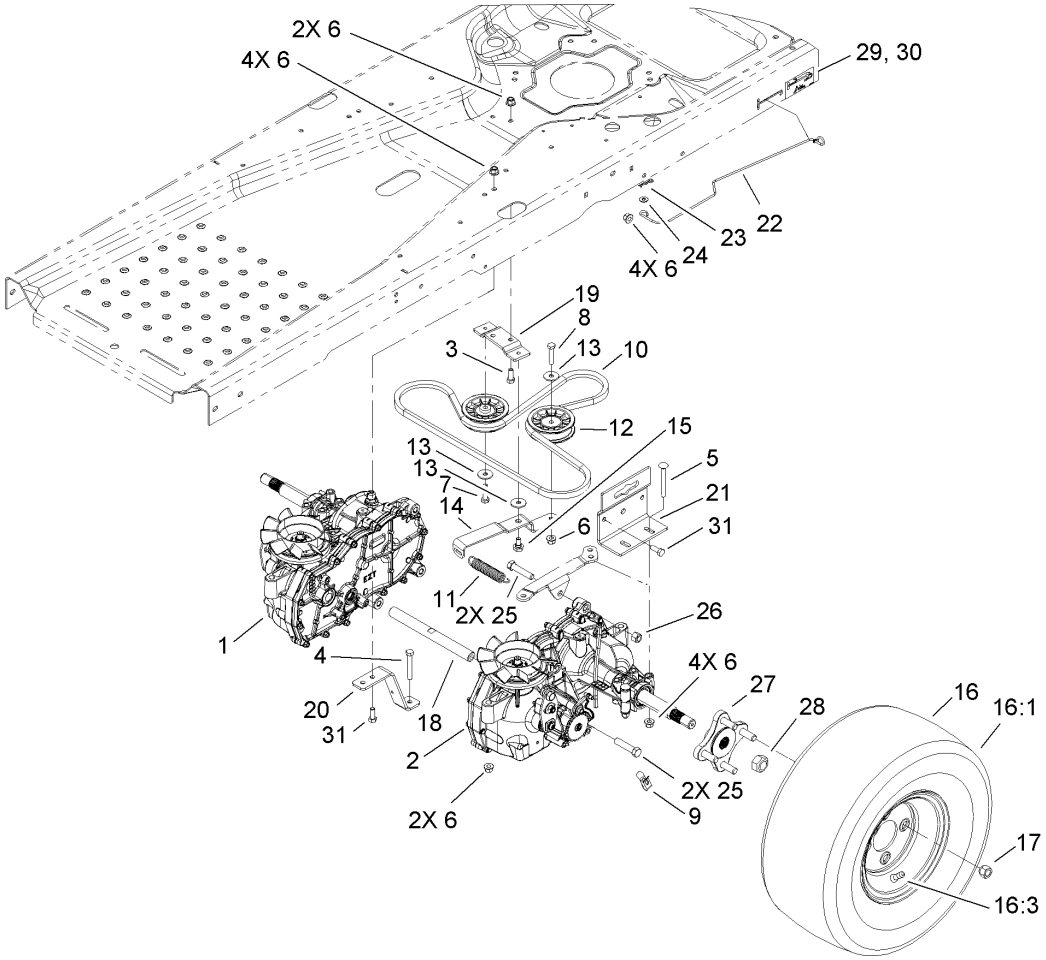

Hydro Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6771	1	Hydro-RH
2	110-6770	1	Hydro-LH
3	322-4	2	Screw-HH
4	322-11	2	Screw-HH
5	3230-9	4	Screw-CARR
6	3296-58	17	Nut-Lock, NI
7	322-6	1	Screw-HH
8	322-7	1	Screw-HH
9	110-6677	2	Clip-Spring
10	110-6774	1	V-Belt
11	63-1590	1	Spring-Idler
12	110-6775	2	Pulley-Idler
13	5-4460	3	Washer-Pivot
14	110-1925	1	Arm-Idler
15	37-8771	1	Bolt-Shoulder
16	112-9792	2	Wheel And Tire ASM
16:1	110-6887	1	Tire
16:3	232-27	1	Stem-Valve
❶16:99	232-37	1	Tube
17	242-50	8	Nut-Lug
18	110-6807	1	Shaft-Cross
19	110-1926	1	Plate-Pivot
20	110-6806-03	2	Strap-Torque
21	110-6878-03	2	Support-Hydro


Ref	Part No.	Qty.	Description
22	110-6787	2	Rod-Bypass
23	1-806003	2	Pin-Hair
24	3256-22	2	Washer-Flat
25	324-8	4	Screw-HH
26	3296-48	2	Nut-Lock, NI
27	112-3979	2	Hub ASM
28	112-3982	2	Nut-Lock
29	110-6680	1	Decal-Transport, LH
30	110-6690	1	Decal-Transport, RH
31	3234-47	8	Screw-HHF

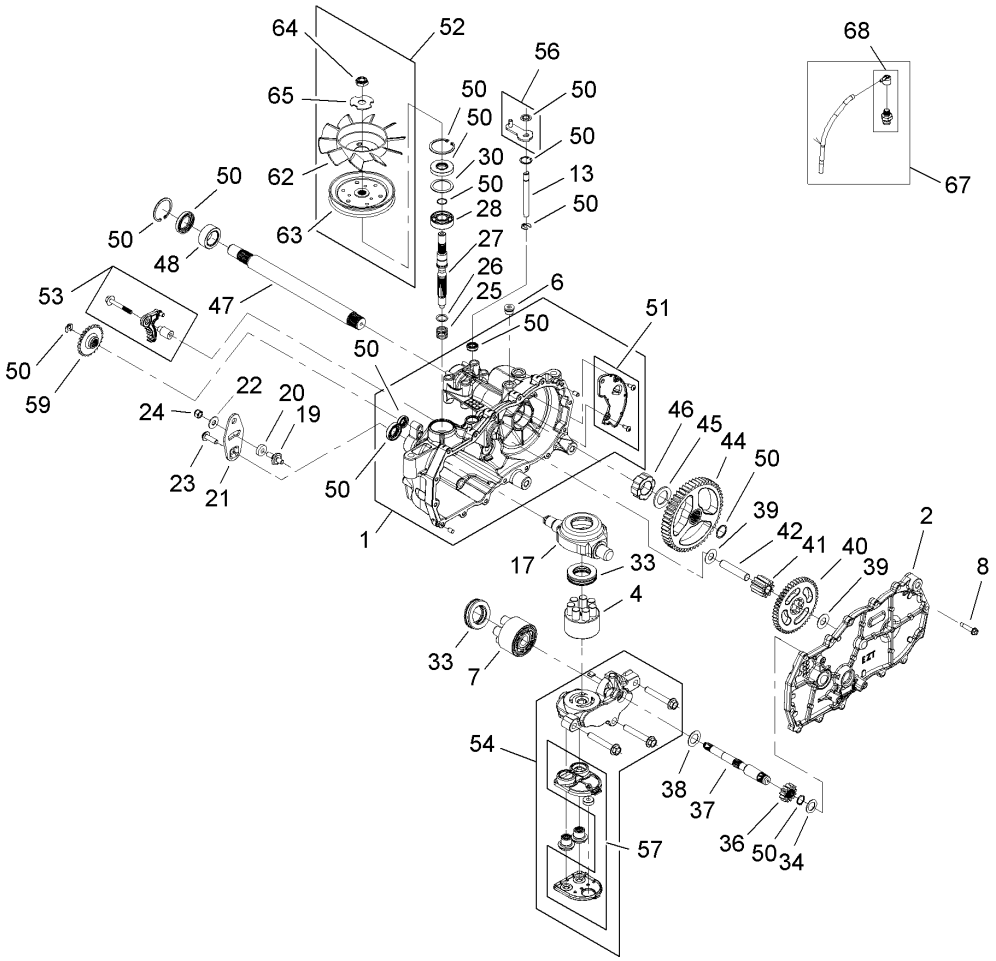

RH Hydro No. 110-6771 Assembly

Ref	Part No.	Qty.	Description
1	114-1630	1	RH Main Housing ASM
2	114-1631	1	RH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor


Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8697	1	RH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9861	1	RH Center Section Filter Kit
❶55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

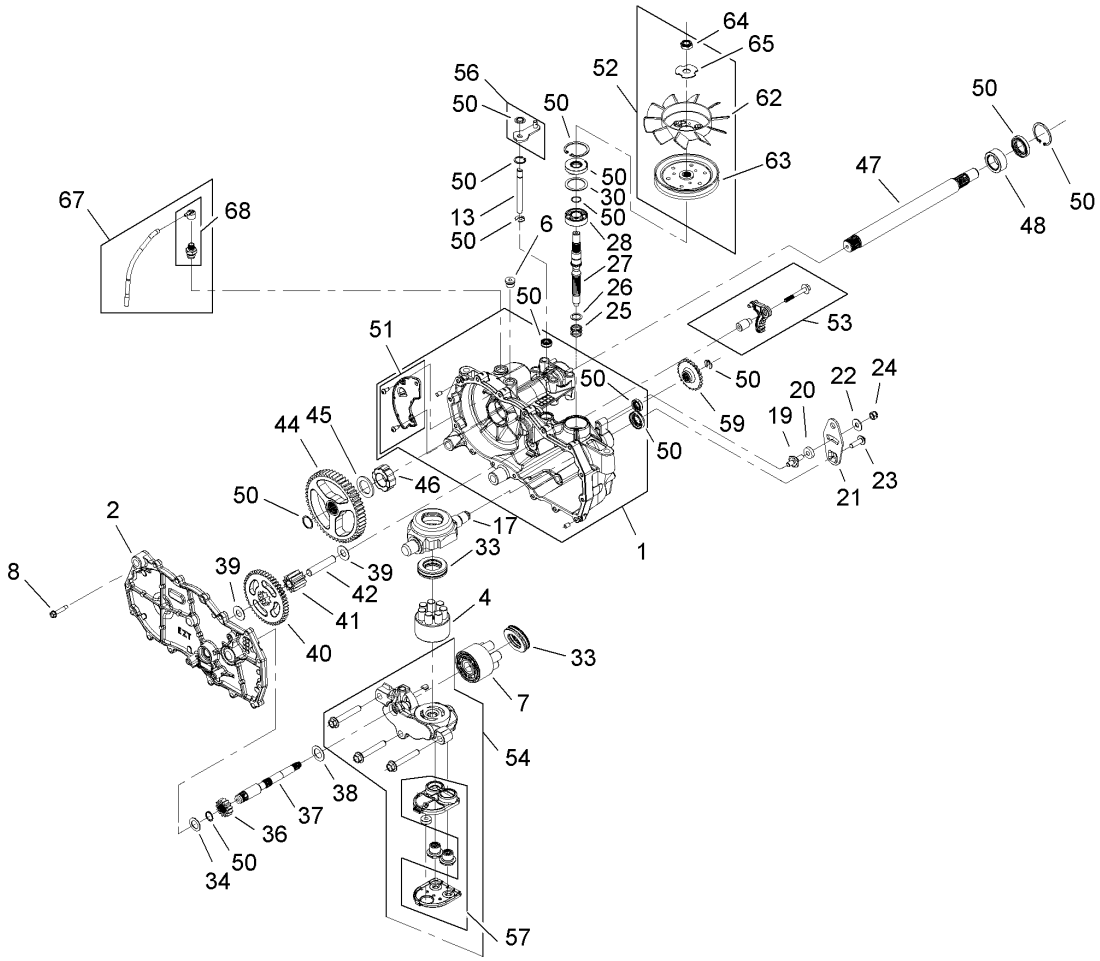

LH Hydro No. 110-6770 Assembly


Ref	Part No.	Qty.	Description
1	114-1636	1	LH Main Housing ASM
2	114-1637	1	LH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor

Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8687	1	LH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9862	1	LH Center Section Filter Kit
❶55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

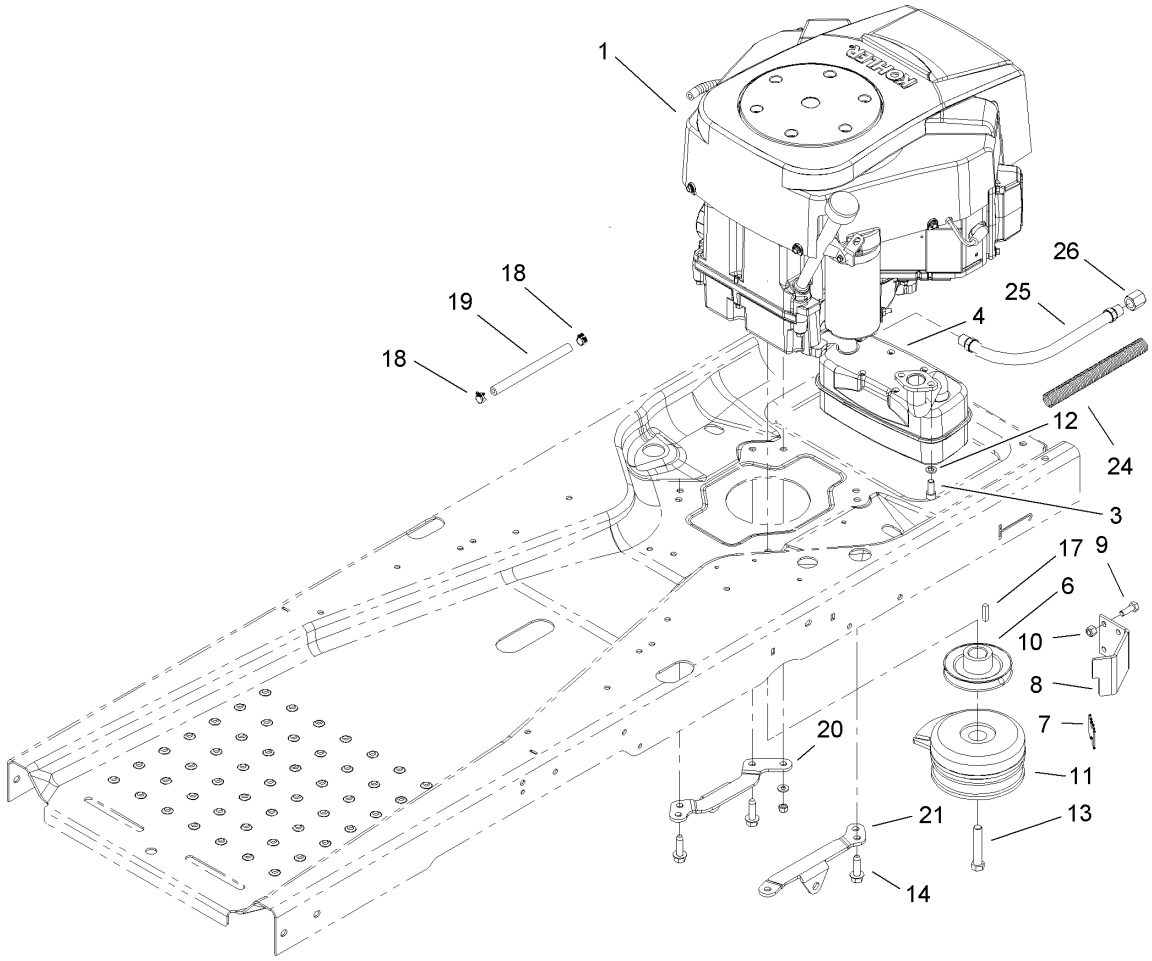

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
❷❸1		1	Engine-Kohler, Sv720-0029
3	3274-10	4	Screw-HSH
4	108-7875	1	Muffler
6	110-6758	1	Pulley-Engine
7	112-3974	1	Bumper
8	110-6896	1	Stop-Clutch
9	322-4	2	Screw-HH
10	3296-29	2	Nut-Lock, NI
11	110-6766	1	Clutch-Electric, PTO
12	3253-4	4	Washer-Lock
13	3212-11	1	Screw-HH
14	32144-109	4	Screw
17	5-7280	1	Key
18	2412-98	2	Clamp
19	107-0589	1	Hose-Fuel
20	110-6798	1	Support-Hydro, RH
21	110-6799	1	Support-Hydro, LH
24	112-9849	1	Tubing-Convoluted
25	82-4201	1	HYD Hose ASM
26	288-10	1	Cap-Pipe

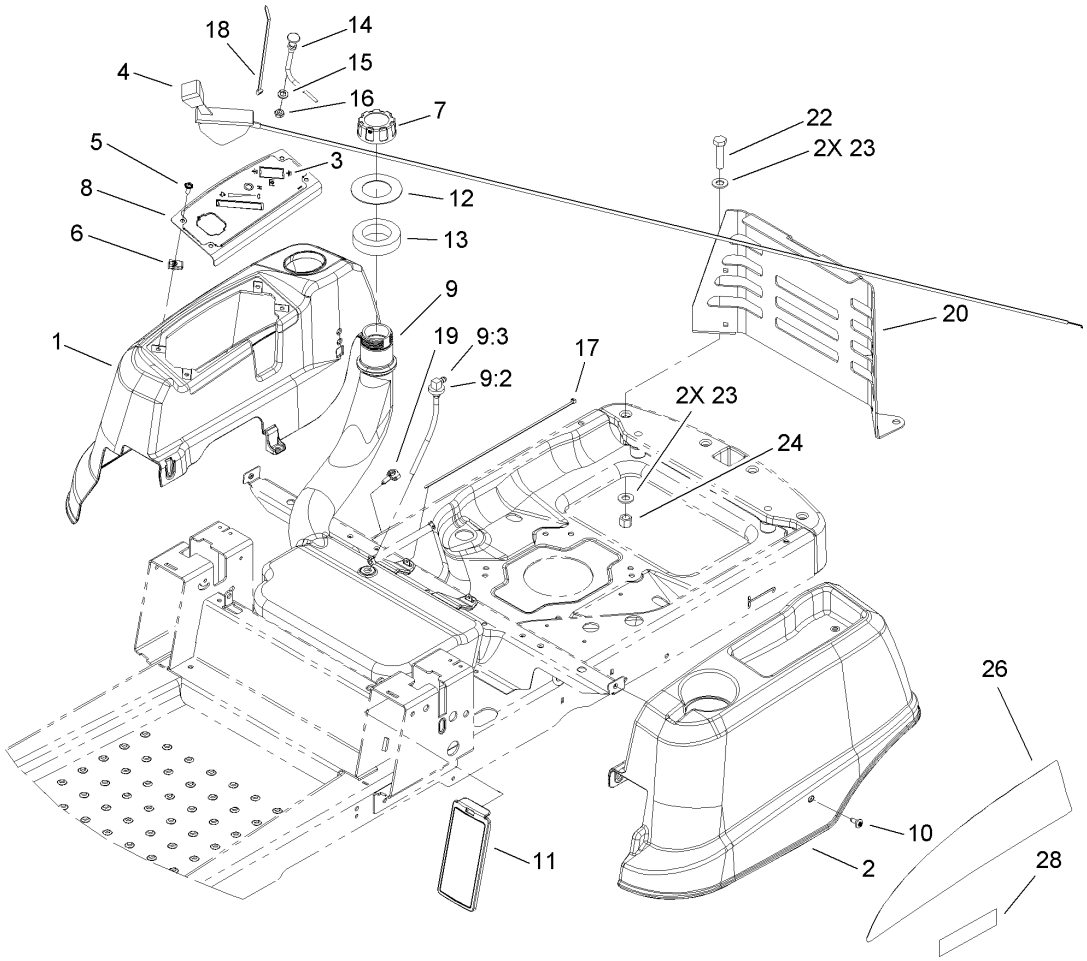

Styling and Fuel System Assembly

Ref	Part No.	Qty.	Description
1	112-9773	1	Pod-RH
2	112-9772	1	Pod-LH
3	112-9789	1	Decal-Control Panel, Cnh
4	112-9800	1	Cable-Throttle
5	3258-166	4	Screw-PRH
6	107069	4	Clip
7	93-7198	1	Gas Cap ASM
8	110-1927-03	1	Panel-Control
9	110-6890	1	Fuel Tank ASM
9:2	46-6560	1	Bushing
9:3	95-3970	1	Fitting-90 Degree
10	112-4004	6	Screw-Shoulder
11	110-6786	2	Cover-Control
12	112-9760	1	Washer-Rubber
13	55-9310	1	Seal-Foam
14	110-6754	1	Cable-Choke
15	3253-21	1	Washer-Lock
16	3220-3	1	Nut-HJ
17	100-9064	1	Tie-Cable
18	614249	1	Strap-Tie
19	32180-037	1	Clip-Harness
20	110-6685-03	1	Support-Cover, Rear
22	325-8	2	Screw-HH
23	3256-26	4	Washer-Flat


Ref	Part No.	Qty.	Description
24	3296-23	2	Nut-Lock, NI
26	114-1612	1	Decal-Pod, LH
❶27	114-1613 1	1	Decal-Pod, RH
28	114-1616	2	Decal-Cnh

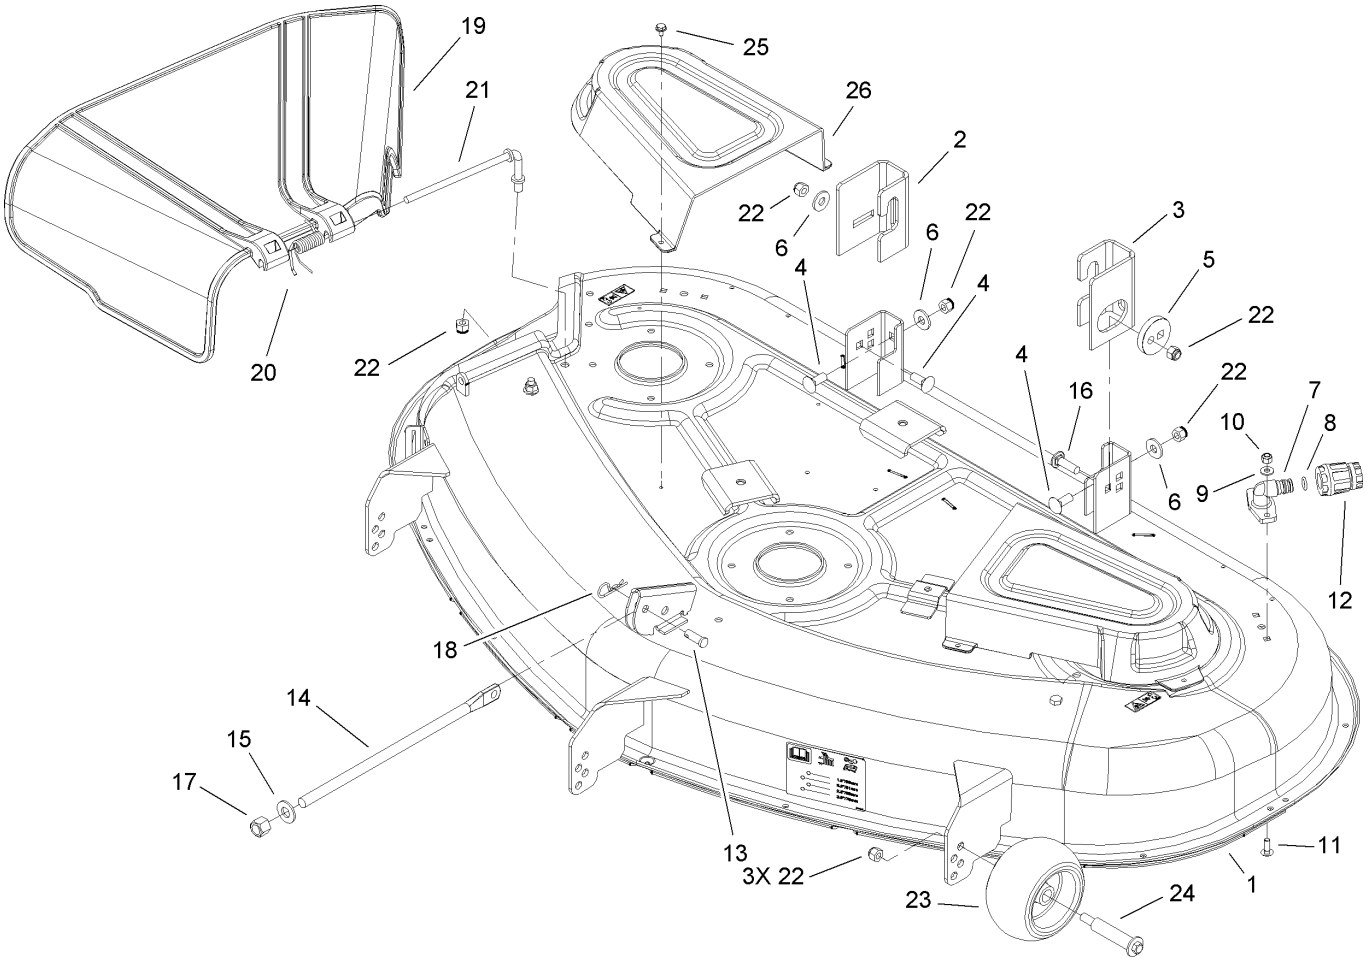

50 Inch Deck Assembly


Ref	Part No.	Qty.	Description
1	112-9798	1	50 Inch Deck ASM
2	108-7836	1	Bracket-Hanger, Right Rear
3	108-7838	1	Bracket-Hanger, Left Rear
4	3231-2	3	Screw-CARR
5	112-3980	1	Eccentric
6	80-6990	3	Washer-Hardened
7	95-2747	2	Fitting-Washout
8	46-6290	2	O-Ring
9	3256-22	4	Washer-Flat
10	3296-42	4	Nut-Lock, NI
11	3229-1	4	Screw-CARR
12	95-3270	1	Connector-Hose
13	1-808284	1	Pin-Clevis
14	108-7847	1	Rod-Lift
15	87-7270	1	Washer-Thrust
16	3231-28	1	Screw-CARR
17	3296-23	1	Nut-Lock, NI
18	9335054	1	Pin-Hair
19	108-7895	1	Deflector-50 Inch
20	110-6694	1	Spring-Torsion
21	112-3950	1	Rod-Pivot
22	3296-39	8	Nut-Lock, NI
23	1-603299	3	Roller-Scalp, Anti
24	112-3977	3	Bolt-Shoulder

Ref	Part No.	Qty.	Description
25	32104-76	6	Screw
26	108-7890	2	Cover-Belt

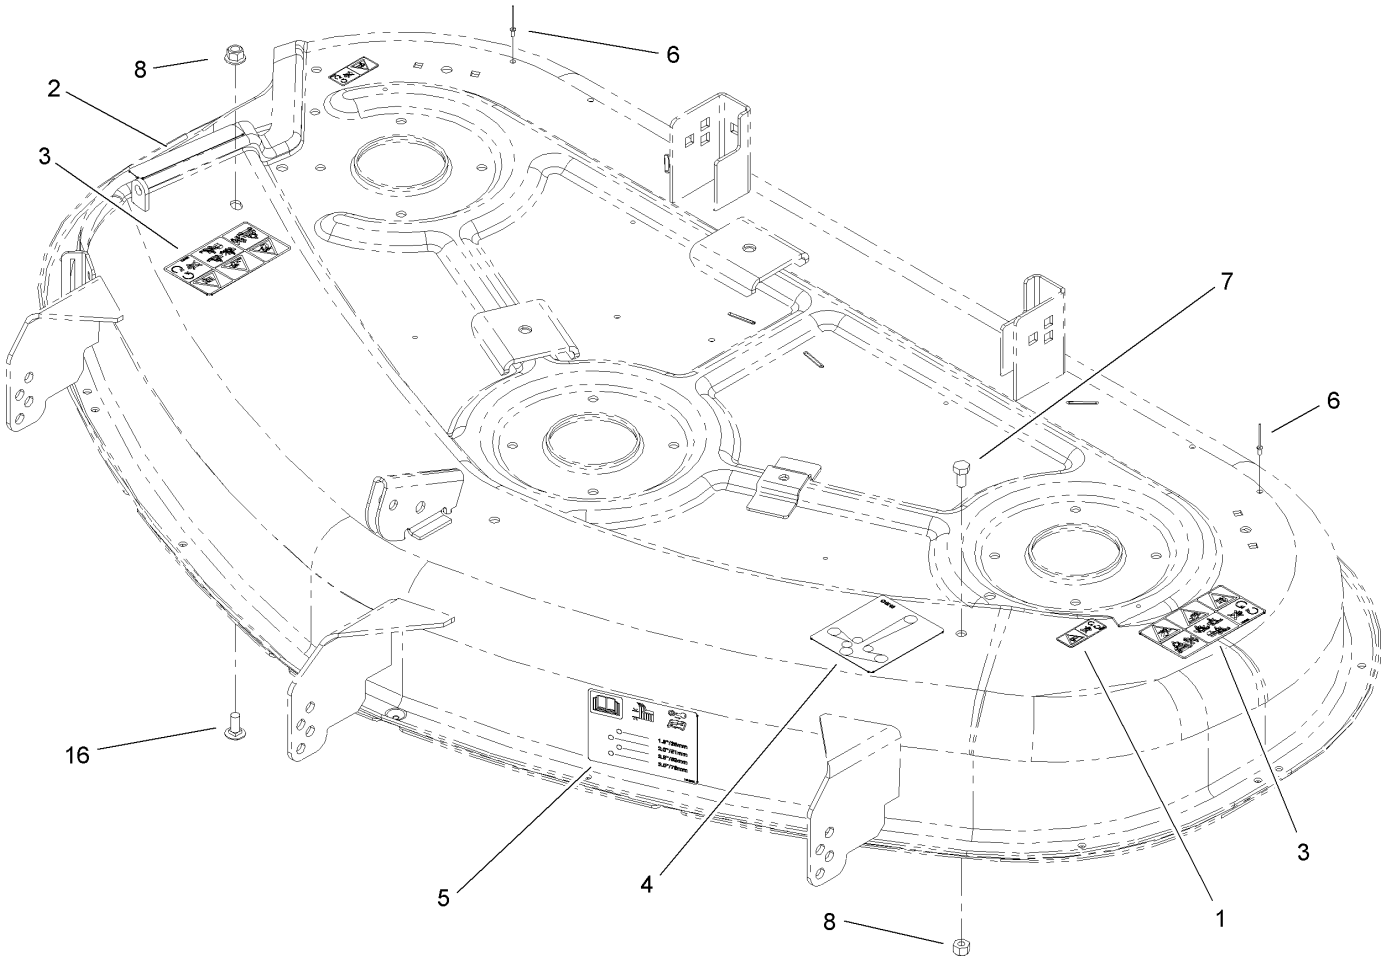

50 Inch Deck Decal Assembly


Ref	Part No.	Qty.	Description
1	114-1606	2	Decal-Danger, Pulley
2	93-7009	1	Decal-Danger
3	110-6691	2	Decal-Danger
4	99-3943	1	Decal-Routing, Belt
5	112-9840	1	Decal-Anti Scalp
6	3290-282	2	Rivet-Pop
7	322-2	1	Screw-HH
8	3296-58	2	Nut-Lock, NI
16	3230-23	1	Screw-CARR

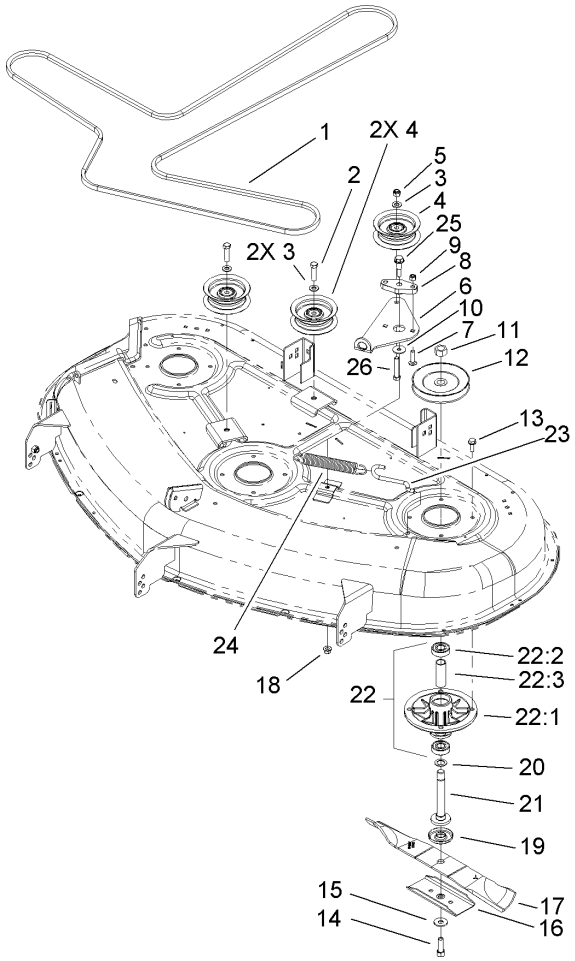

50 Inch Deck Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6892	1	V-Belt
2	323-8	2	Screw-HH
3	3256-24	3	Washer-Flat
4	106-2175	3	Pulley-Idler, Flat
5	3296-39	1	Nut-Lock, NI
6	110-6867-03	1	Arm-Idler
7	3230-3	2	Screw-CARR
8	108-7881	1	Bushing-Pivot
9	3296-29	2	Nut-Lock, NI
10	5-4460	1	Washer-Pivot
11	3219-6	3	Nut-Hex
12	110-6865	3	Pulley
13	32144-41	12	Screw-Taptite
14	26-0671	3	Screw-Blade
15	3290-465	3	Washer-Belleville
16	106-2248-03	3	Stiffener-Blade
17	110-6837-03	3	Blade-17.5 Inch, High Lift
18	3296-58	1	Nut-Lock, NI
19	80-4360	3	Shield-Bearing
20	80-4380	3	Spacer
21	110-6866	3	Shaft-Spindle
❷22		3	Spindle ASM
22:1	88-4510	1	Housing-Spindle
22:2	100-1048	2	Bearing-Ball


Ref	Part No.	Qty.	Description
22:3	62-3661	1	Spacer-Bearing
23	112-3973	1	Hook-Return, Spring
24	1-603414	1	Spring-Extension
25	110-6897	1	Bolt-Shoulder
26	323-10	1	Screw-HH

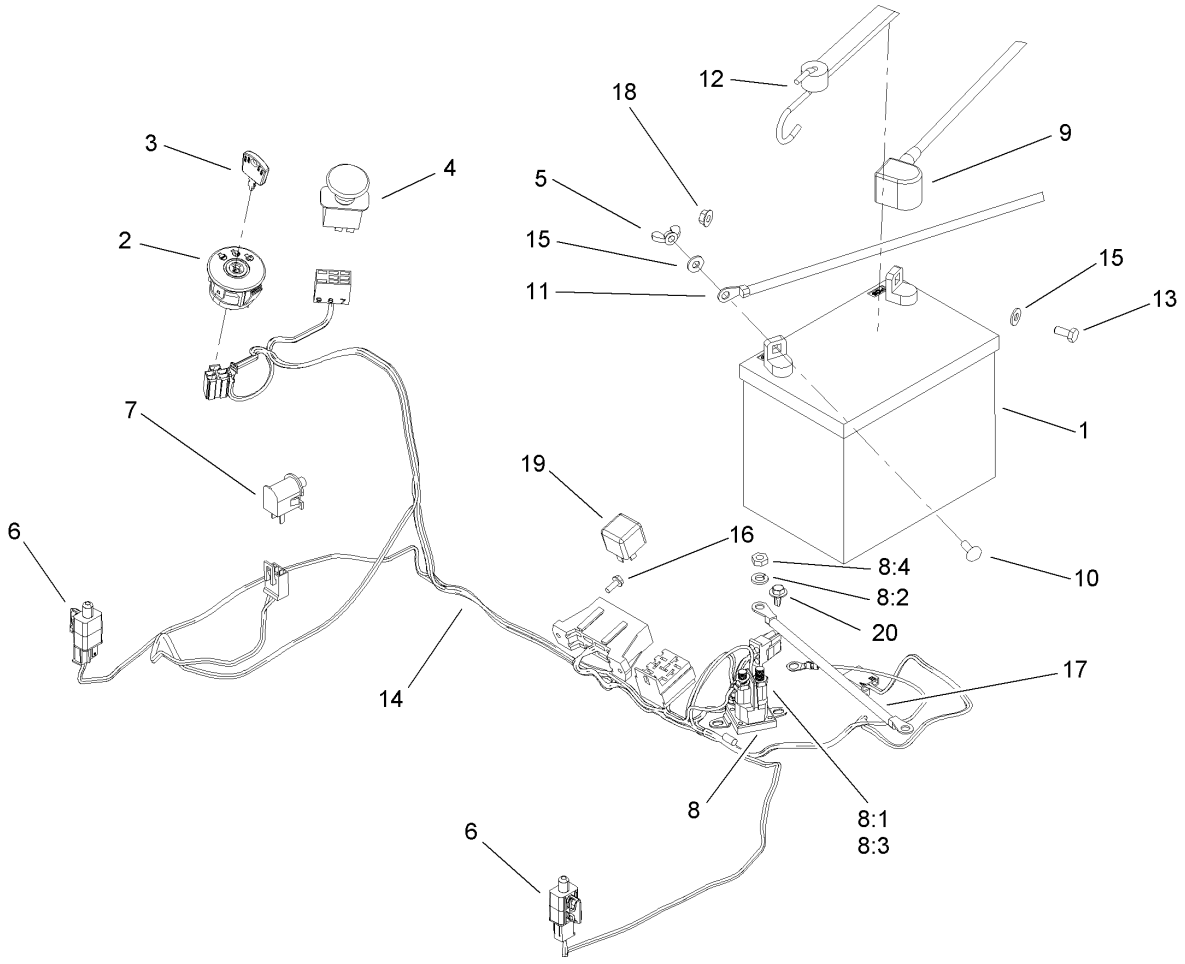

Electrical Assembly


Ref	Part No.	Qty.	Description
1	104-2493	1	Battery
2	110-6764	1	Switch-Ignition
3	700918	1	Key
4	93-9999	1	Switch-PTO
5	32103-22	1	Nut-Wing
6	110-6765	2	Switch-Single Pole No
7	82-2190	1	Switch-Bail
8	1-513075	1	Switch-Solenoid
8:1	3253-17	2	Washer-Lock
8:2	3253-4	2	Washer-Lock
8:3	3219-14	2	Nut-Hex
8:4	3220-2	2	Nut-Jam
9	110-6794	1	Cable-Battery, Red
10	3229-1	1	Screw-CARR
11	110-6793	1	Cable-Battery, Black
12	104-2466	1	Holddown-Battery
13	321-3	1	Screw-HH
14	110-1923	1	Harness-Wire
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	110-6792	1	Cable-Battery, Red
18	32128-33	2	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF

Ref	Part No.	Qty.	Description
❶24	614249	1	Strap-Tie

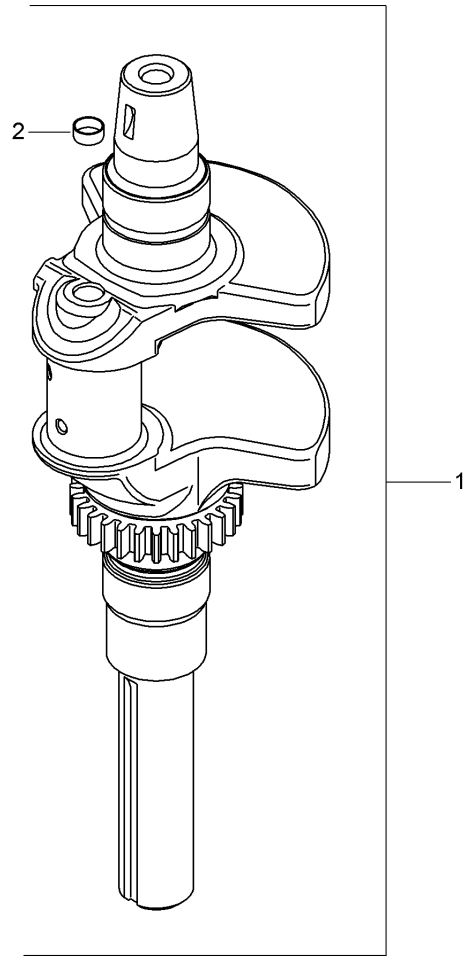

Crankshaft Assembly
Kohler SV720-0029


Ref	Part No.	Qty.	Description
❸1	32 014 04-S	1	Crankshaft ASM (Includes 2)
❸2	52 139 09-S	1	Plug-Cup

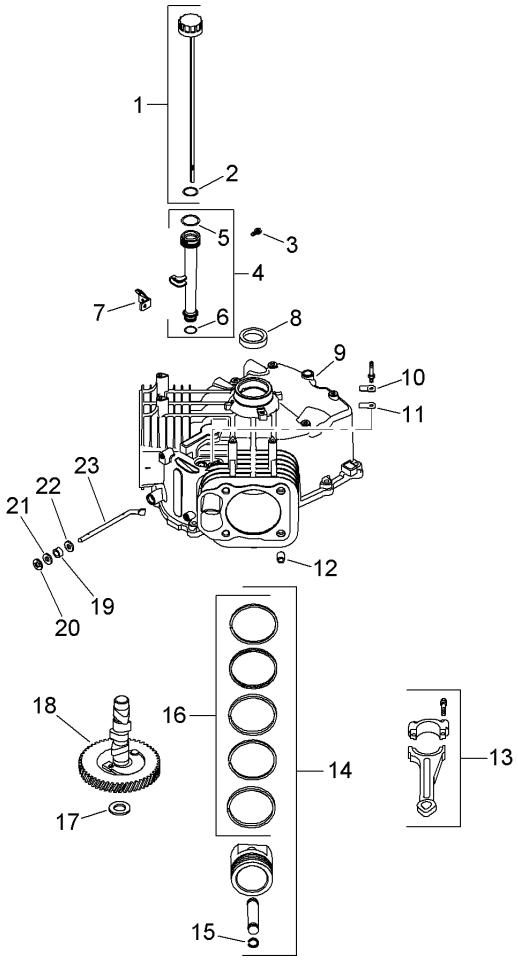

Crankscase Assembly
Kohler SV720-0029


Ref	Part No.	Qty.	Description
❸1	24 038 04-S	1	Dipstick ASM (Includes 2)
❸2	25 153 02-S	1	O-Ring
❸3	M-545013-S	1	Screw-Flange, Hex (M5X0.8X13)
❸4	12 123 04-S	1	Oil Fill Tube ASM (Includes 5, 6)
❸5	12 153 02-S	1	O Ring-Upper Oil Fill Tube
❸6	12 153 01-S	1	O-Ring-Lower Oil Fill Tube
❸7	24 126 19-S	1	Bracket-Oil Fill Tube
❸8	24 032 01-S	1	Seal-Oil
❸9		1	Crankcase (Use: Short Block 32 522 03)
❸10	24 018 04-S	1	Retainer-Breather Reed
❸11	12 402 02-S	1	Reed-Breather
❸12	24 380 16-S	6	Pin-Locating
❸13	24 067 16-S	2	Rod-Connecting (STD)
❸14	32 874 06-S	2	Piston W/Ring Set (STD) (Includes 15, 16)
❸14	32 874 09-S	1	Piston W/Ring Set Kit (.08)
❸14	32 874 08-S	1	Piston W/Ring Set Kit (.25)
❸15	24 018 01-S	4	Retainer-Piston, Pin
❸16	24 108 11-S	2	Ring Set (STD And .08)
❸16	24 108 06-S	1	Ring Set (.25)
❸17	12 422 07-S	1	Shim-Camshaft (White .028)
❸17	12 422 08-S	1	Shim-Camshaft (Blue .03)
❸17	12 422 09-S	1	Shim-Camshaft (Red .032)

Ref	Part No.	Qty.	Description
❸17	12 422 10-S	1	Shim-Camshaft (Yellow .034)
❸17	12 422 11-S	1	Shim-Camshaft (Green .036)
❸17	12 422 12-S	1	Shim-Camshaft (Gray .038)
❸17	12 422 13-S	1	Shim-Camshaft (Black .04)
❸18	32 012 01-S	1	Camshaft Kit (Includes 25, 357 15-S)
❸19	28 032 09-S	1	Seal-Shaft, Cross Governor
❸20	24 018 09-S	1	Ring-Retainer
❸21	M-931010-S	1	Washer-Flat (8 Mm)
❸22	24 468 15-S	1	Washer-Flat (1/4)
❸23	24 144 38-S	1	Shaft-Cross, Governor
❶❸	25 357 14-S	1	Lubricant, Camshaft

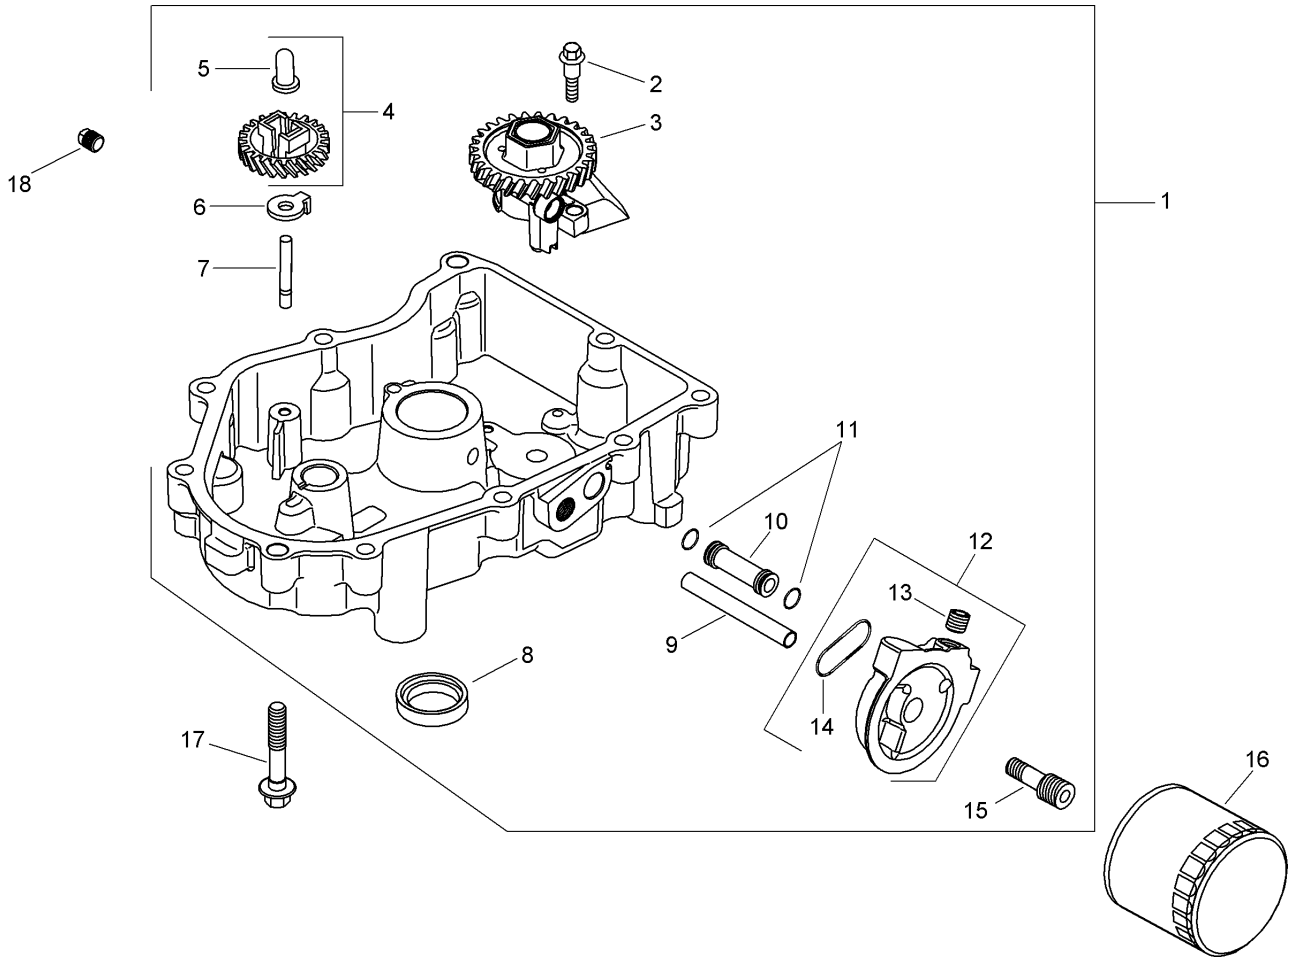

Oil Pan and Lubrication Assembly
Kohler SV720-0029


Ref	Part No.	Qty.	Description
❸1	32 199 02-S	1	Oil Pan ASM (Includes 2-15)
❸2	32 086 01-S	2	Screw-Hex Flange Thread Forming (Shoulder)
❸3	32 393 10-S	1	Oil Pump ASM
❸4	24 043 12-S	1	Governor Gear Kit W/Pin (Includes 5)
❸5	12 380 01-S	1	Pin-Regulating, Governor
❸6	24 448 02-S	1	Tab-Locking
❸7	12 144 02-S	1	Shaft-Gear, Governor
❸8	52 032 08-S	1	Seal-Oil (PTO End)
❸9	32 123 01-S	1	Tube-Oil Feed (Filter To Oil Pan)
❸10	32 123 03-S	1	Tube-Oil Feed (Oil Pan To Filter)
❸11	24 153 01-S	2	O-Ring, Oil Pick-Up
❸12	32 029 07-S	1	Adapter-Filter, Oil (Includes 13, 14)
❸13	25 139 60-S	1	Plug-Hex, Countersunk (1/8)
❸14	32 153 04-S	1	O-Ring, Oil Filter Adapter
❸15	32 136 03-S	1	Nipple-Oil Filter
❸16	12 050 01-S	1	Filter-Oil
❸17	24 086 17-S	10	Screw-HF (M8X1.25X45)
❸18	25 139 57-S	1	Plug-Square Head Solid (3/8)

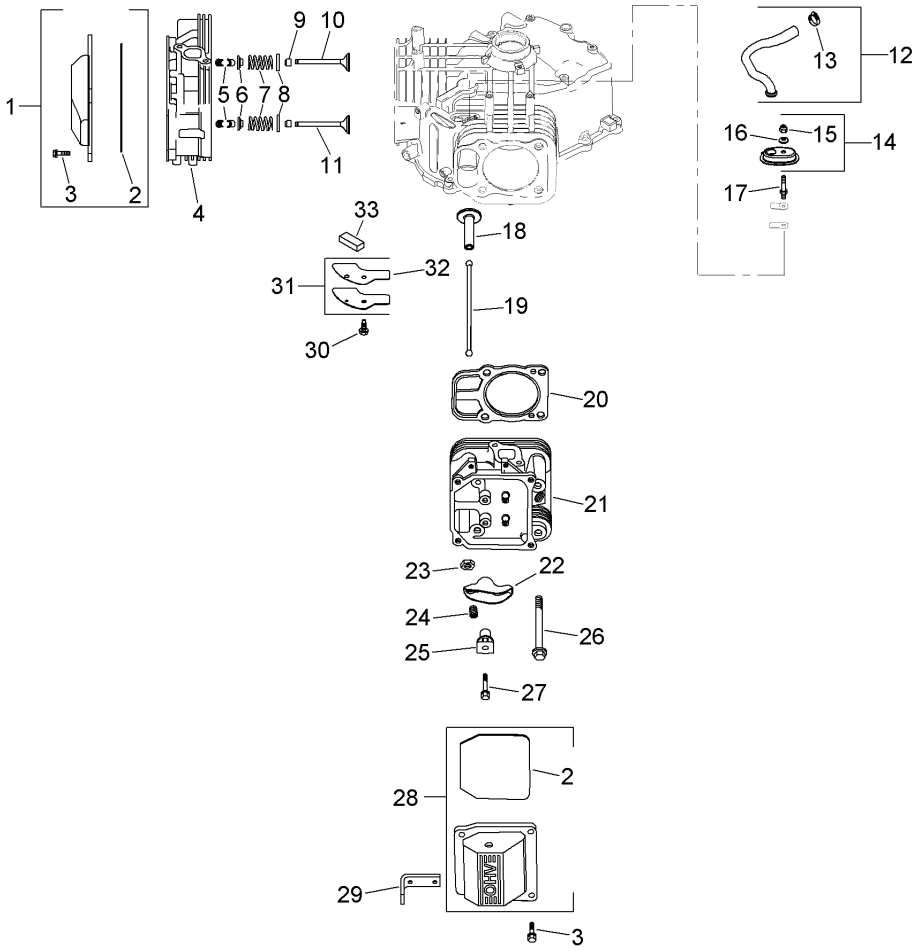

Head, Valve and Breather Assembly
Kohler SV720-0029


Ref	Part No.	Qty.	Description
❸1	24 755 141-S	1	Plain Rocker Cover ASM (Includes 2, 3 (Qty 4))
❸2	24 153 28-S	2	O-Ring, Valve Cover
❸3	M-651030-S	8	Screw-Hex Flange (M6X1.0X30)
❸4	32 318 01-S	1	Head ASM, No.1 Cylinder (Includes 26 (Qty 4) And Head Gasket)
❸5	12 755 03-S	8	Retainer Kit
❸6	12 173 01-S	4	Cap-Spring, Valve
❸7	24 089 02-S	4	Spring-Valve
❸8	235011-S	4	Retainer-Spring
❸9	66 032 05-S	2	Seal-Stem, Valve
❸10	24 017 01-S	2	Valve-Intake (Standard)
❸11	24 016 01-S	2	Valve-Exhaust (Standard)
❸12	32 326 04-S	1	Hose-Breather (Includes 13)
❸13	25 237 14-S	4	Clamp-Hose
❸14	32 081 02-S	1	Housing-Breather (Includes 15,16)
❸15	M-547050-S	1	Nut-Hex, Lock (M5X0.8)
❸16	32 468 01-S	1	Washer-Sealing
❸17	32 072 02-S	1	Stud-Breather Cover
❸18	32 019 01-S	4	Tappet
❸19	32 411 02-S	4	Rod-Push

Ref	Part No.	Qty.	Description
❸20	24 841 03-S	2	Cylinder Head Gasket Kit (Includes head Mounting Hardware And 24 041 49-S, 24 153 27-S)
❸21	32 318 02-S	1	Head ASM (No.2 Cylinder) (Includes 26 (Qty4) And Head Gasket)
❸22	32 186 02-S	4	Arm-Rocker
❸23	32 100 04-S	4	Nut-Hex (M10X0.75)
❸24	32 086 03-S	4	Screw-Set
❸25	24 599 02-S	4	Arm-Rocker, Pivot
❸26	12 086 16-S	8	Screw-Hex Flange (M10X1.5X90)
❸27	32 086 04-S	4	Screw-Hex Flange (M6X1.0X45)
❸28	32 096 06-S	1	Breather Valve Cover ASM (Includes 2)
❸29	24 445 01-S	1	Strap-Lifting
❸30	M-645016-S	1	Screw-HHFTF (M6X1.0X16)
❸31	32 096 04-S	1	Breather Cover ASM
❸32	32 041 01-S	1	Gasket-Cover, Breather
❸33	32 050 01-S	1	Filter-Breather
❶❸	24 041 49-S	1	Gasket-Cover, Breather
❶❸	24 153 27-S	1	O-Ring, Intake Port

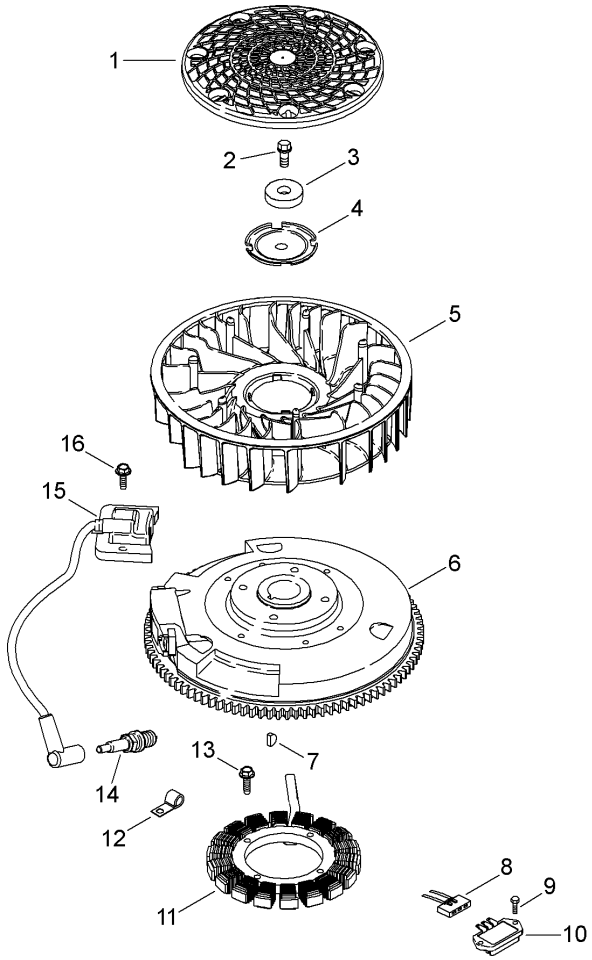


Ignition and Electrical Assembly
Kohler SV720-0029

Ref	Part No.	Qty.	Description
❸1	32 162 03-S	1	Screen-Grass
❸2	12 086 14-S	1	Screw-Hex, Flange (M10X1.5X45)
❸3	12 468 03-S	1	Washer-Flat (3/8)
❸4	20 146 02-S	1	Plate-Fan Mounting
❸5	32 157 01-S	1	Fan
❸6	32 025 08-S	1	Flywheel
❸7	X-42-15-S	1	Key (3/16 X 5/8)
❸8	236602-S	1	Connector (3 Contact)
❸9	M-551016-S	2	Screw-Heavy Hex Flange (M5X0.8X16)
❸10	41 403 09-S	1	Rectifier-Regulator
❸11	237878-S	1	Stator Kit (15 Amp)
❸12	235173-S	1	Clip-Cable
❸13	M-548025-S	2	Screw-HHFTF (M5X0.8X25)
❸14	25 132 14-S	2	Spark Plug (R F I)
❸15	25 584 01-S	2	Module-Ignition, R F I
❸16	M-561025-S	4	Screw-Socket, Hex (M5X0.8X25)
❶❸	25 454 03-S	2	Tie-Wire
❶❸	32 176 04-S	1	Harness-Wiring

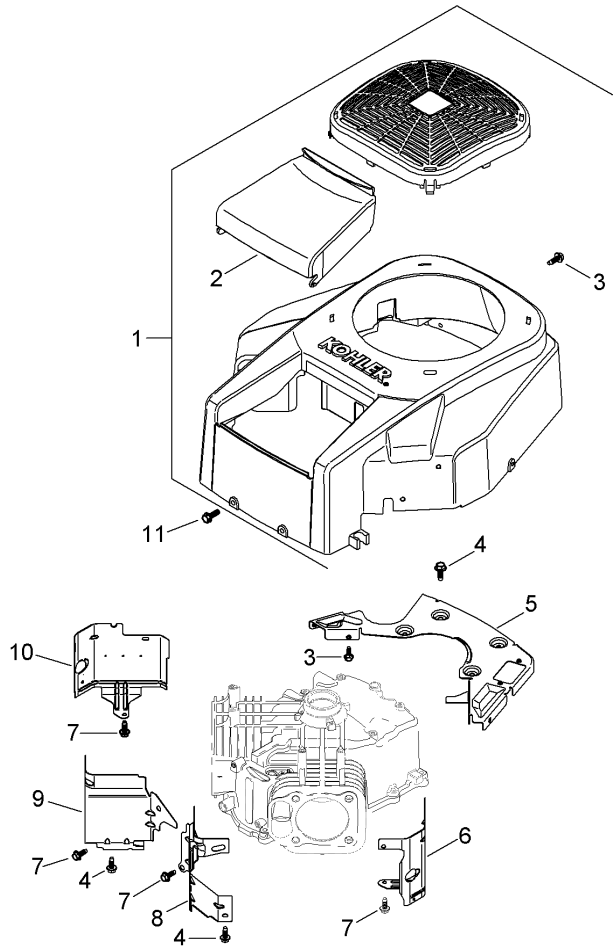


Blower Housing Assembly
Kohler SV720-0029

Ref	Part No.	Qty.	Description
❸1	32 027 08-S	1	Blower Housing ASM (Fixed Guard) (Includes 2, 3)
❸2	32 096 08-S	1	Cover-Cleaner, Air
❸3	M-545016-S	6	Screw-HHFTF (M5X0.8X16)
❸4	M-645016-S	6	Screw-HHFTF (M6X1.0X16)
❸5	32 146 05-S	1	Plate-Backing W/Rectifier-Regulator Opening
❸6	32 063 05-S	1	Baffle-Cylinder Barrel (No.2 Side)
❸7	M-545010-S	5	Screw-HHFTF (M5X0.8X10)
❸8	32 063 02-S	1	Baffle-Valley (No.2 Side)
❸9	32 063 03-S	1	Baffle-Valley (No.1 Side)
❸10	32 063 06-S	1	Baffle-Cylinder Barrel (No.1 Side)
❸11	24 086 12-S	2	Screw-Hex Cap (M6X1.7X18)
❶❸	32 113 11-S	1	Decal-Guard, Fixed

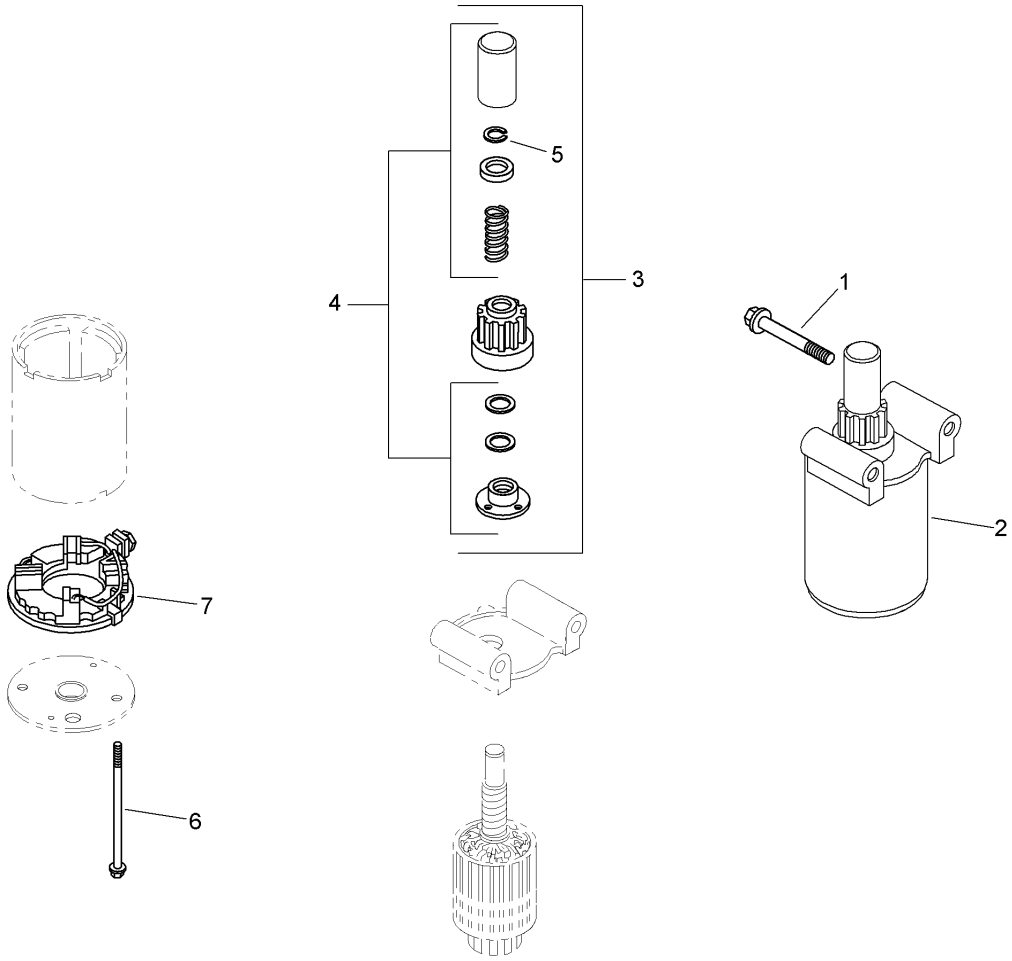


Starter Assembly
Kohler SV720-0029

Ref	Part No.	Qty.	Description
❸1	M-839080-S	2	Screw-Hex, Flange (M8X1.25X70)
❸2	32 098 01-S	1	Starter ASM (Includes 3-7)
❸3	12 755 39-S	1	Drive Kit (Includes 4, 5)
❸4	12 755 38-S	1	Drive Parts Kit (Includes 5)
❸5	32 141 01-S	1	Ring-Retaining
❸6	32 211 01-S	2	Bolt-Thru
❸7	12 243 04-S	1	Cap-End, Commutator

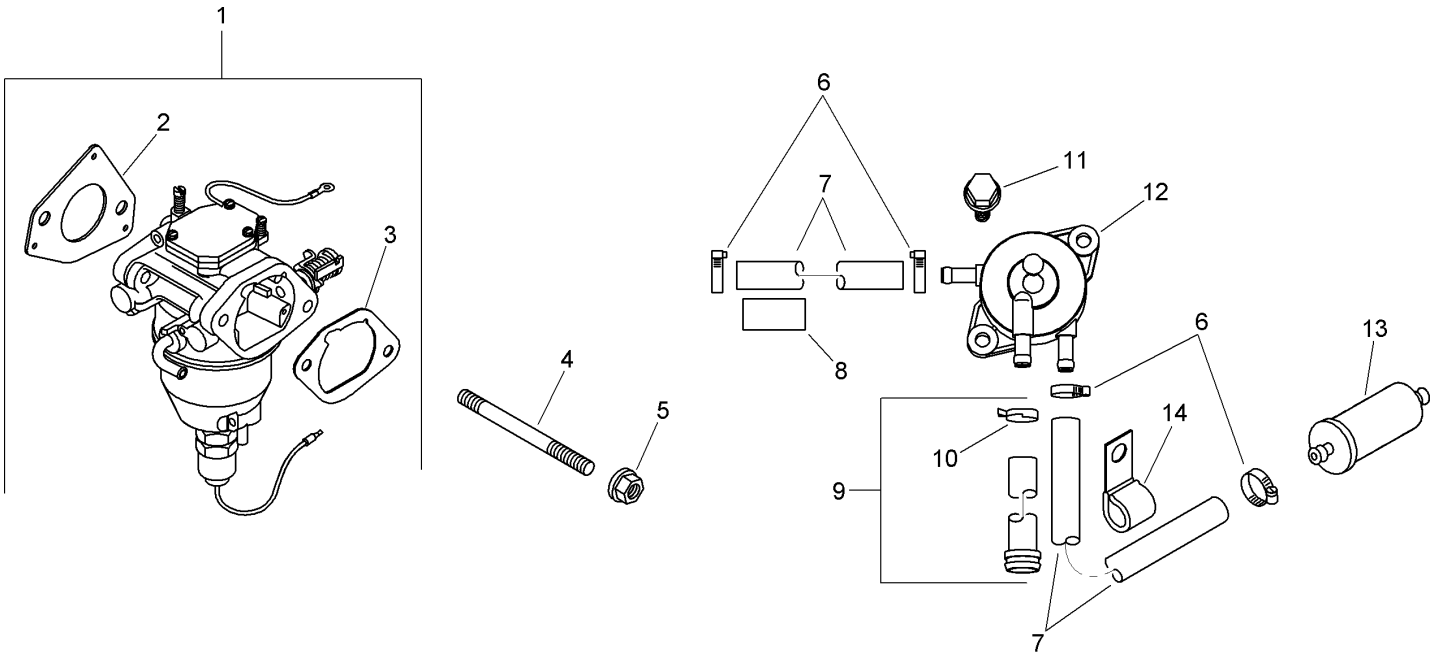

Fuel System Assembly
Kohler SV720-0029


Ref	Part No.	Qty.	Description
❸1	32 853 05-S	1	Carburetor Kit W/Gaskets (Includes 2, 3)
❸2	24 041 52-S	1	Gasket-Carburetor
❸3	24 041 14-S	1	Gasket-Base, Air Cleaner
❸4	M-629105-S	2	Stud-Carburetor
❸5	M-641060-S	2	Nut-Hex, Flange (M6X1.0)
❸6	25 237 14-S	4	Clamp-Hose
❸7	25 111 34-S	2	Line-Fuel (24 Inch, Cut to needed Length)
❸8	25 431 10-S	1	Sleeve-Anti-Abrasion
❸9	32 326 02-S	1	Fuel Pump Hose ASM W/Clamp (Includes 10)
❸10	25 237 01-S	1	Clamp-Hose
❸11	24 086 12-S	2	Screw-Hex Cap (M6X1.7X18)
❸12	24 393 16-S	1	Pump-Pulse, Fuel
❸13	25 050 22-S	1	Filter-Fuel
❸14	47 154 01-S	1	Clip-Cable
❶❸	24 757 18-S	1	Overhaul Kit W/Gaskets (Includes 2, 3 And float kit)
❶❸	24 757 19-S	1	Choke Service Repair Kit (Includes 2, 3)
❶❸	24 757 20-S	1	Gasket Service Repair Kit (Includes 2, 3)
❶❸	24 757 22-S	1	Solenoid Valve Service Repair Kit (Includes 2, 3)

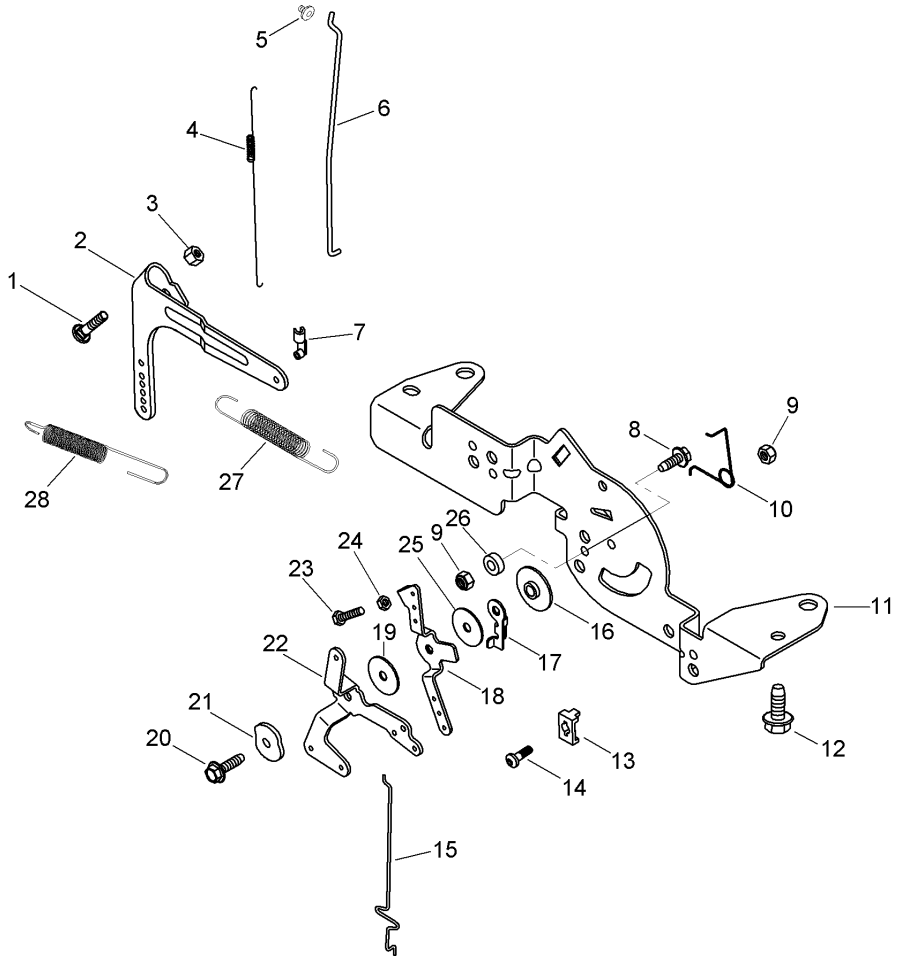

Engine Control Assembly
Kohler SV720-0029


Ref	Part No.	Qty.	Description
❸1	24 211 03-S	1	Bolt-Square Neck, Round Head
❸2	24 090 33-S	1	Lever-Governor
❸3	M-641060-S	1	Nut-Hex, Flange (M6X1.0)
❸4	24 089 01-S	1	Spring-Linkage
❸5	25 158 08-S	1	Bushing-Retaining, Linkage
❸6	24 079 04-S	1	Linkage-Throttle
❸7	25 158 11-S	1	Bushing-Linkage, Throttle
❸8	M-545016-S	1	Screw-HHFTF (M5X0.8X16)
❸9	M-547050-S	2	Nut-Hex, Lock (M5X0.8)
❸10	24 089 03-S	1	Spring-Return, Choke
❸11	24 126 161-S	1	Bracket-Control
❸12	M-645016-S	4	Screw-HHFTF (M6X1.0X16)
❸13	12 237 01-S	2	Clamp-Cable
❸14	24 086 43-S	2	Screw-Lbd Thd Frm (M5X0.8X16)
❸15	24 079 22-S	1	Linkage-Choke
❸16	24 112 27-S	1	Spacer-Control
❸17	24 090 47-S	1	Lever-Actuator, Throttle
❸18	24 090 13-S	1	Lever-Control, Throttle
❸19	24 468 01-S	1	Washer-Flat (5.5 Mm)
❸20	M-545020-S	1	Screw-HHFTF (M5X0.8X20)
❸21	41 468 03-S	1	Washer-Spring (1/4)
❸22	24 090 05-S	1	Lever-Choke
❸23	M-403025-S	1	Screw-Hex Head Cap (M4X0.7X25)

Ref	Part No.	Qty.	Description
❸24	M-446030-S	1	Nut-Hex (M4X0.7)
❸25	24 468 20-S	1	Washer-Flat (5 Mm)
❸26	24 112 24-S	1	Control Spacer ASM
❸27	24 089 55-S	1	Spring-Governor
❸28	24 089 18-S	1	Spring-Governor

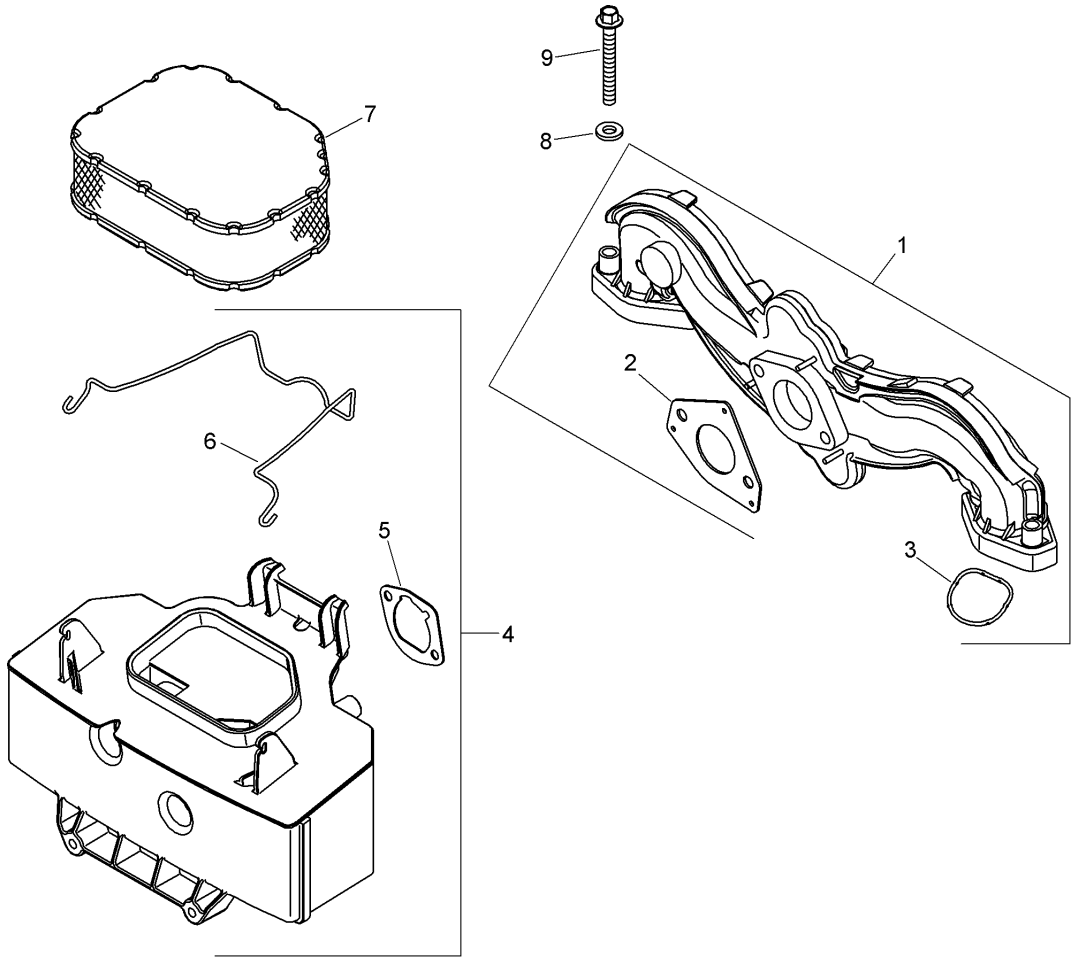

Air Intake and Filtration Assembly
Kohler SV720-0029

Ref	Part No.	Qty.	Description
❸1	24 164 51-S	1	Manifold-Intake (Includes 2, 3)
❸2	24 041 52-S	1	Gasket-Carburetor
❸3	24 153 27-S	2	O-Ring, Intake Port
❸4	32 094 04-S	1	Air Cleaner Base ASM (Includes 5, 6)
❸5	24 041 14-S	1	Gasket-Base, Air Cleaner
❸6	32 344 02-S	1	Latch-Element, Air Cleaner
❸7	32 083 03-S	1	Element-Cleaner, Air
❸8	X-25-63-S	1	Washer-Plain (1/4)
❸9	M-651040-S	4	Screw-Hex Flange (M6X1.0X40)

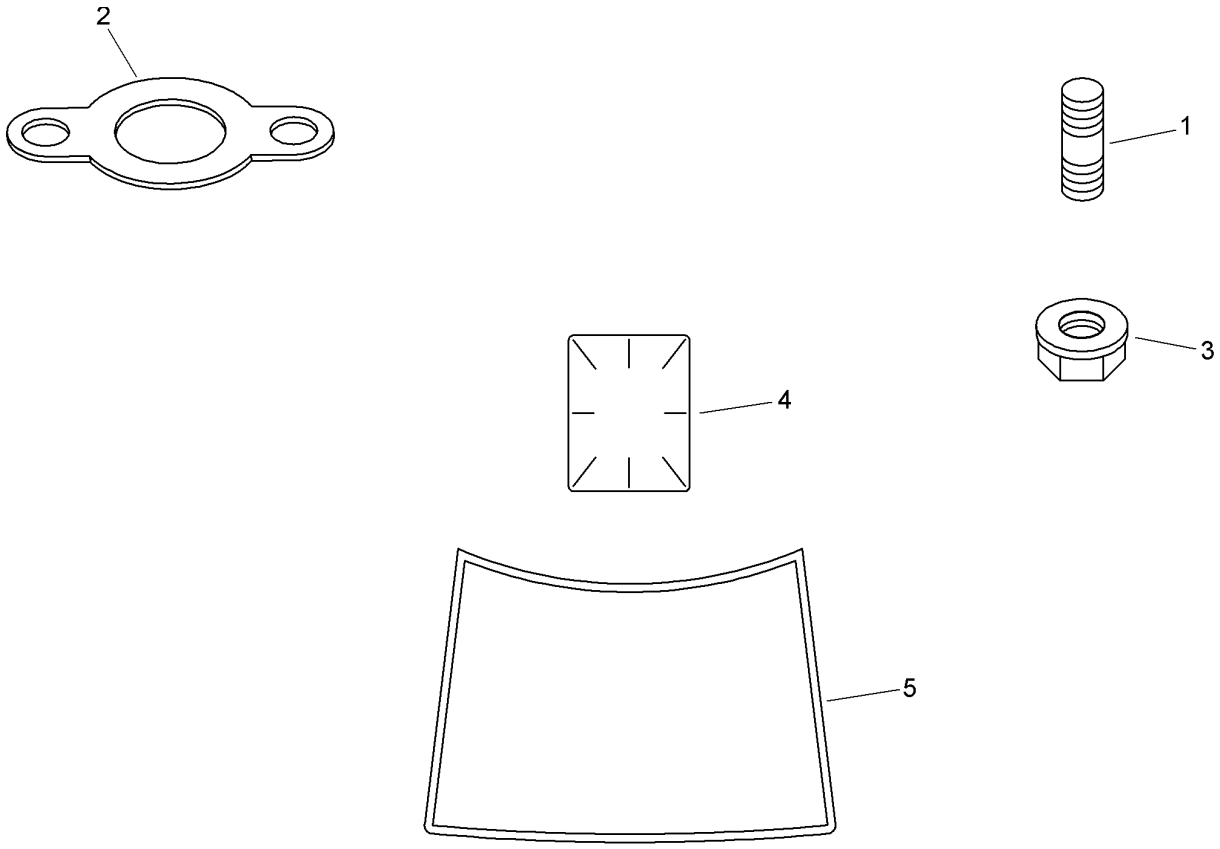

Artwork is representative
Actual labels may differ depending on model and specification number

Exhaust Stud, Gasket and Decal Assembly
Kohler SV720-0029

Ref	Part No.	Qty.	Description
❸1	25 072 04-S	4	Stud (M8X1.25X33)
❸2	24 041 49-S	2	Gasket-Manifold, Exhaust
❸3	M-841080-S	4	Nut-Hex, Flange (M8X1.25)
❸4	25 113 39-S	1	Decal-Clear Laminate
❸5	32 113 07-S	1	Decal-23 H P
❶❸	32 522 03	1	Short Block (S V 710-740)
❶❸	32 755 01-S	1	Overhaul Kit

Attachments and Accessories

For 725058066 - G4030 Zero-Turn-Radius Mower

Product Name	Model/Part
50in Mulching Kit	110-6744
Hour Meter Kit	112-9763
Deck Ring Kit	114-1608
Engine Cover Kit	79314
Floor Mat Kit	79315
42in and 50in Twin Bagger	99324


NEW HOLLAND