



NEW HOLLAND ..

G4030 Zero-Turn-Radius Mower

Model No. 725058066 - T07ZV0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Oil Pan and Lubrication Assembly Kohler SV720-0029	 18
Deck Lift and Seat Support Assembly	 4	Head, Valve and Breather Assembly Kohler SV720-0029	 19
Seat Assembly	 5	Ignition and Electrical Assembly Kohler SV720-0029	 20
Control Assembly	 6	Blower Housing Assembly Kohler SV720-0029	 21
Hydro Drive Assembly	 7	Starter Assembly Kohler SV720-0029	 22
RH Hydro No. 110-6771 Assembly	 8	Fuel System Assembly Kohler SV720-0029	 23
LH Hydro No. 110-6770 Assembly	 9	Engine Control Assembly Kohler SV720-0029	 24
Engine and Clutch Assembly	 10	Air Intake and Filtration Assembly Kohler SV720-0029	 25
Styling and Fuel System Assembly	 11	Exhaust Stud, Gasket and Decal Assembly Kohler SV720-0029	 26
50 Inch Deck Assembly	 12	Attachments and Accessories List	 27
50 Inch Deck Decal Assembly	 13		
50 Inch Deck Spindle and Belt Drive Assembly	 14		
Electrical Assembly	 15		
Crankshaft Assembly Kohler SV720-0029	 16		
Crankcase Assembly Kohler SV720-0029	 17		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Kohler dealer

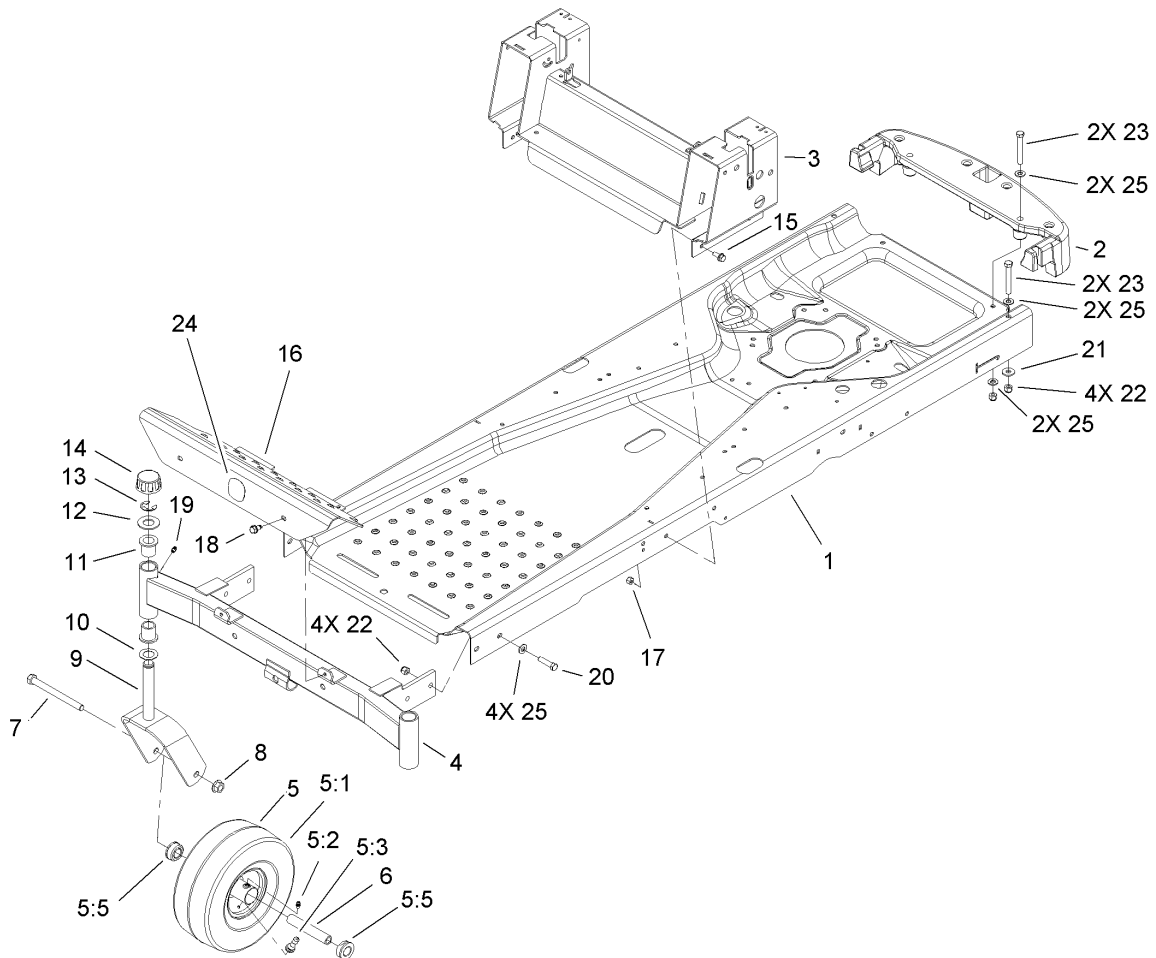

Frame Assembly


Ref	Part No.	Qty.	Description
1	110-6780-04	1	Frame
2	110-6899-03	1	Bumper-Rear
3	110-6872-03	1	Seat Control ASM
4	108-7882-04	1	Front Axle ASM
5	112-9790	2	Castor Wheel ASM
5:1	110-6791	1	Tire-Smooth
5:2	302-5	1	Fitting-Grease
5:3	232-27	1	Stem-Valve
5:5	114-1640	2	Bearing-Outside
5:99	93-4244	1	Tube-Inner (W/Valve)
6	104-3667	2	Spanner-Wheel
7	325-22	2	Screw-HH
8	32128-23	2	Nut-HF
9	108-7851-04	2	Caster Fork ASM
10	110-6767	2	Washer-Thrust
11	1-303514	4	Bearing-Flanged
12	104-8076	2	Washer
13	32151-103	2	Ring-Snap
14	61-9780	2	Cap-Hub
15	3234-47	7	Screw-HHF
16	108-7855-03	1	Footrest
17	3296-29	7	Nut-Lock, NI
18	32104-32	2	Screw-HWH
19	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
20	323-8	4	Screw-HH
21	80-6990	2	Washer-Hardened
22	3296-39	8	Nut-Lock, NI
23	323-13	4	Screw-HH
24	114-1611	1	Emblem-Logo
25	3256-24	10	Washer-Flat

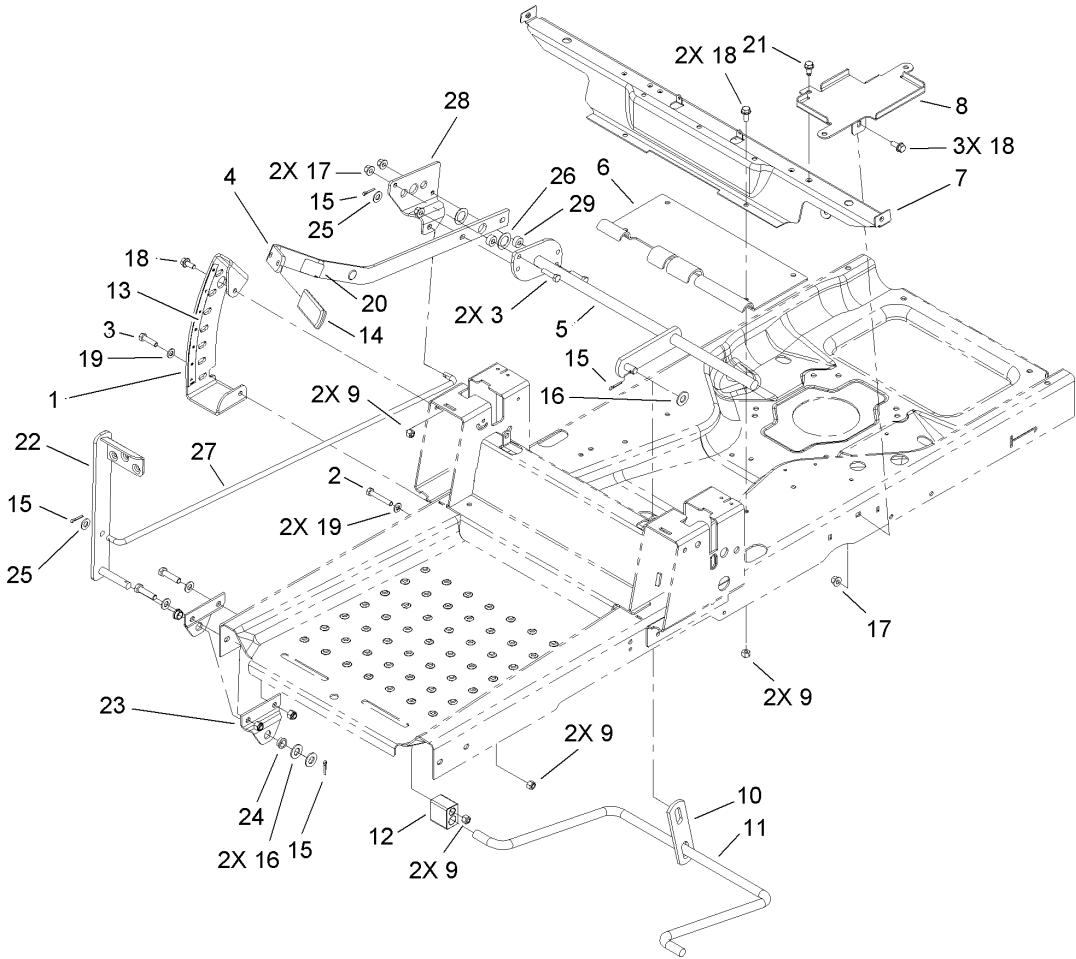


Deck Lift and Seat Support Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-4027-03	1	Sector-HOC	25	3256-24	2	Washer-Flat
2	322-10	2	Screw-HH	26	3-6498	2	Washer-Thrust
3	322-6	3	Screw-HH	27	112-3958	1	Rod-Lift
4	112-3960-03	1	Lift Arm ASM	28	112-3959	1	Plate-Footlift
5	108-7841-03	1	Lift Lever ASM	29	112-3961	2	Spacer
6	110-6800-03	1	Plate-Lift				
7	110-6805-03	1	Bracket-Seat/Pods				
8	110-1937-03	1	Tray-Battery				
9	3296-29	8	Nut-Lock, NI				
10	108-7840	1	Link-Lift				
11	108-7839	1	Arm-Lift, Rear				
12	108-7845	2	Block-Pivot				
13	112-9802	1	Decal-HOC				
14	105-3450	1	Grip-Lever, Lift				
15	3272-10	4	Pin-Cotter				
16	3256-26	3	Washer-Flat				
17	3296-58	3	Nut-Lock, NI				
18	3234-47	6	Screw-HHF				
19	3256-23	3	Washer-Flat				
20	106-8743	1	Decal				
21	32104-32	1	Screw-HWH				
22	112-4018-03	1	Pedal ASM				
23	112-3954-03	2	Bracket-Footlift				
24	256-156	2	Bushing-Flange				

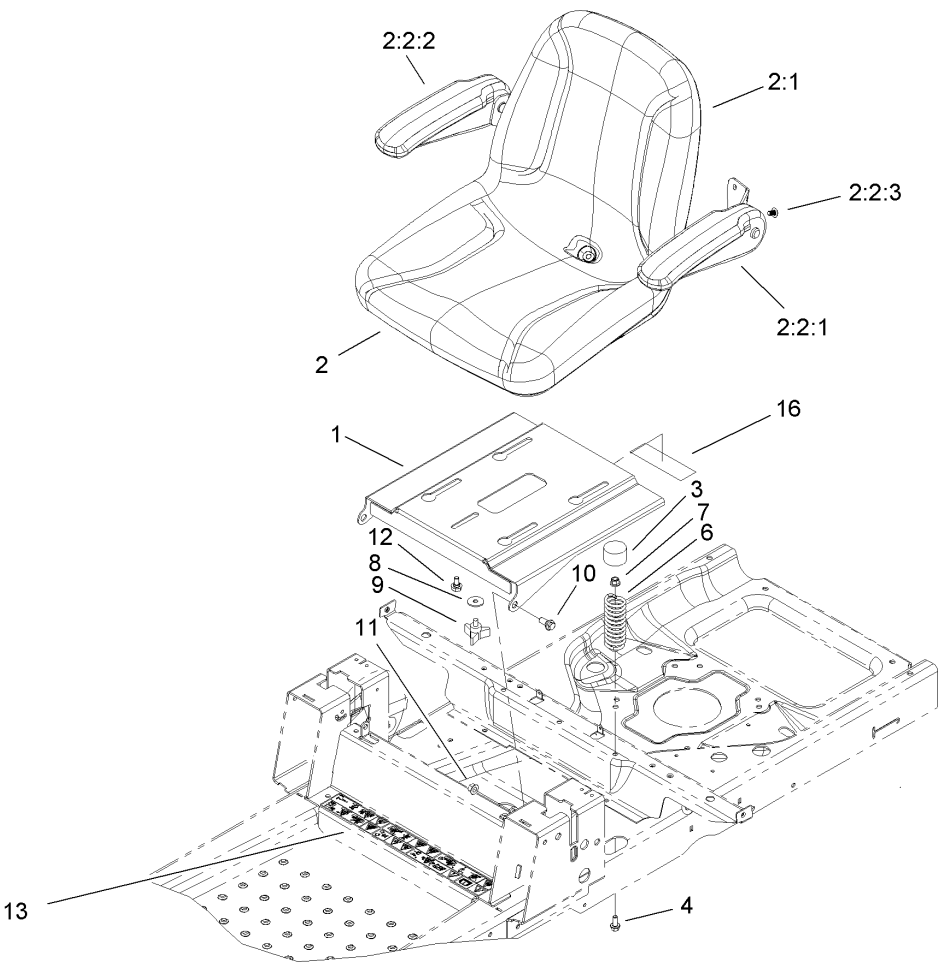

Seat Assembly


Ref	Part No.	Qty.	Description				
1	110-6679-03	1	Base-Seat				
2	110-6777	1	Seat-18 Inch				
2:1	110-6773	1	Seat-18 Inch				
1 2 2:2		1	Armrest Kit				
2:2:1	110-6569	1	LH Armrest Kit				
2:2:2	110-6570	1	RH Armrest Kit				
2:2:3	108-6179	6	Screw-HSBH				
3	701178	2	Cap-Protector				
4	3234-47	2	Screw-HHF				
6	92-7054	2	Spring-Compression				
7	3296-58	2	Nut-Lock, NI				
8	5-4460	1	Washer-Pivot				
9	92-9674	1	Knob				
10	94-7582	2	Bolt-Shoulder				
11	32128-21	2	Nut-HF				
12	37-8771	4	Bolt-Shoulder				
13	110-6825	1	Decal-Danger				
16	106-8717	1	Decal-Service				

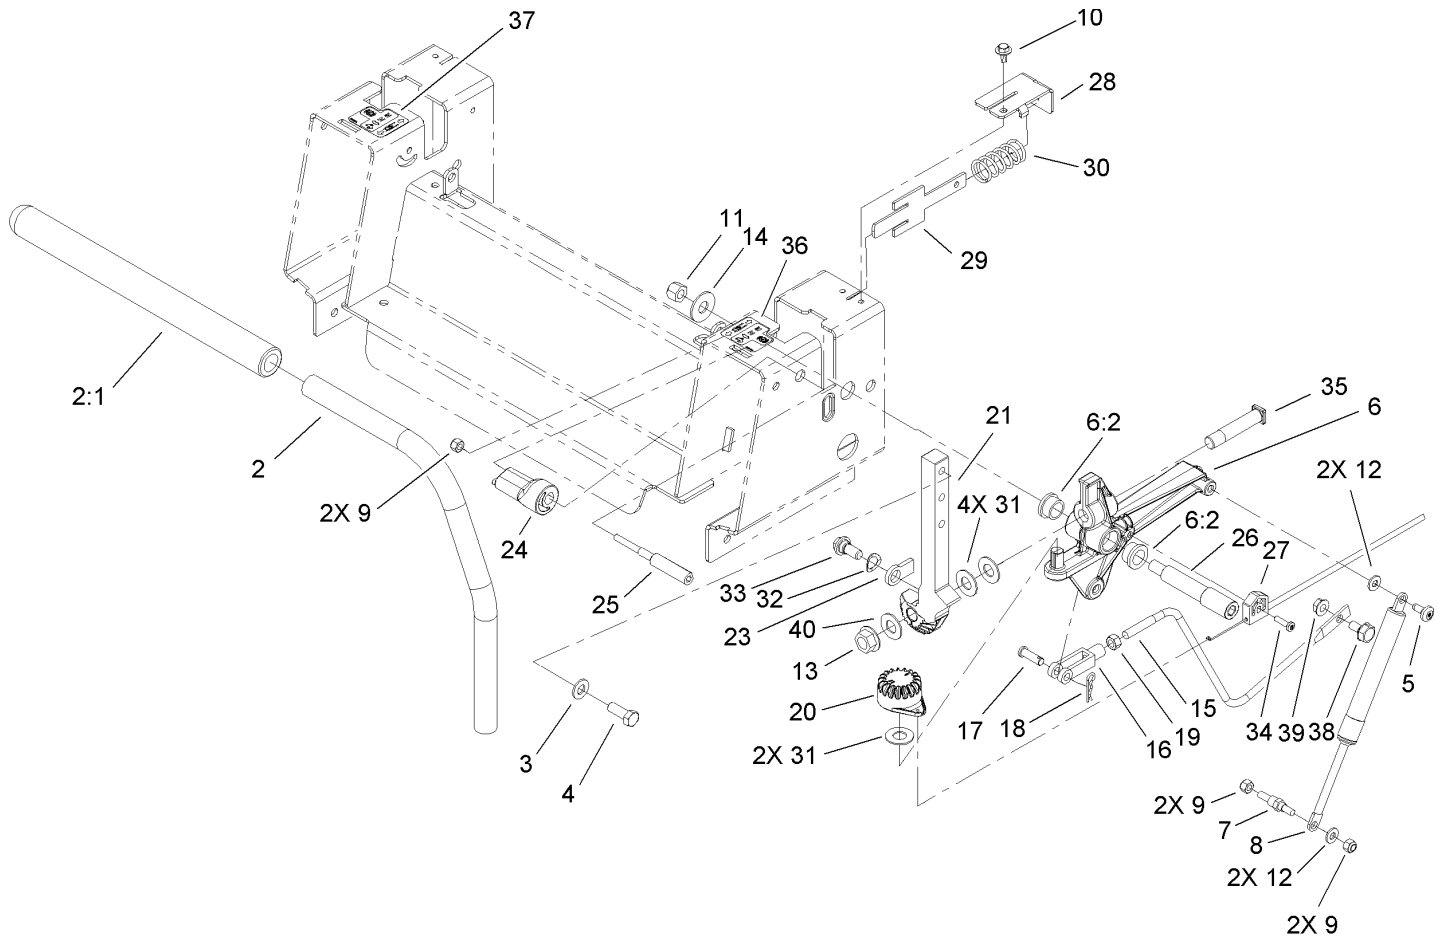

Control Assembly

Ref	Part No.	Qty.	Description
❶1	110-6814	1	RH Handle ASM
❶1:1	108-6187	1	Grip
2	110-6815	1	LH Handle ASM
2:1	108-6187	1	Grip
3	3256-24	4	Washer-Flat
4	323-6	4	Screw-HH
5	112-4004	2	Screw-Shoulder
6	110-6828	2	Activator Arm ASM
6:2	105-3455	2	Bushing
7	110-6810	2	Stud-Damper
8	103-2913	2	Damper-Control, Motion
9	3296-42	6	Nut-Lock, NI
10	46-8560	2	Screw-HHF
11	3296-48	2	Nut-Lock, NI
12	3256-22	4	Washer-Flat
13	32128-23	2	Nut-HF
14	3256-5	2	Washer-Flat
15	110-6693	2	Link-Hydro
16	1-303105	2	Yoke-Adjustable
17	1-808280	2	Pin-Clevis
18	1-806003	2	Pin-Hair
19	3220-2	2	Nut-Jam
20	110-6845	2	Gear-Control
21	110-6783	1	Arm-Actuator, LH


Ref	Part No.	Qty.	Description
❶22	110-6782	1	Arm-Actuator, RH
23	110-6856	2	Tab-Stop
24	110-6873	2	Eccentric
25	110-6874	2	Screw-Eccentric
26	110-6875	2	Bolt-Shoulder
27	110-6858	2	Cable-Brake, Parking
28	110-6751	2	Bracket-Return
29	110-6750	2	Plate-Return
30	110-6752	2	Spring
31	110-6894	6	Washer-Pivot
32	3290-221	2	Washer-Spring
33	94-7582	2	Bolt-Shoulder
34	110-0863	2	Screw-Torx
35	110-6784	2	Bolt-Shoulder
36	112-9754	1	Decal-Lever, Control (LH)
37	112-9755	1	Decal-Lever, Control (RH)
38	37-8771	2	Bolt-Shoulder
39	3296-58	2	Nut-Lock, NI
40	112-9771	2	Washer-Teflon

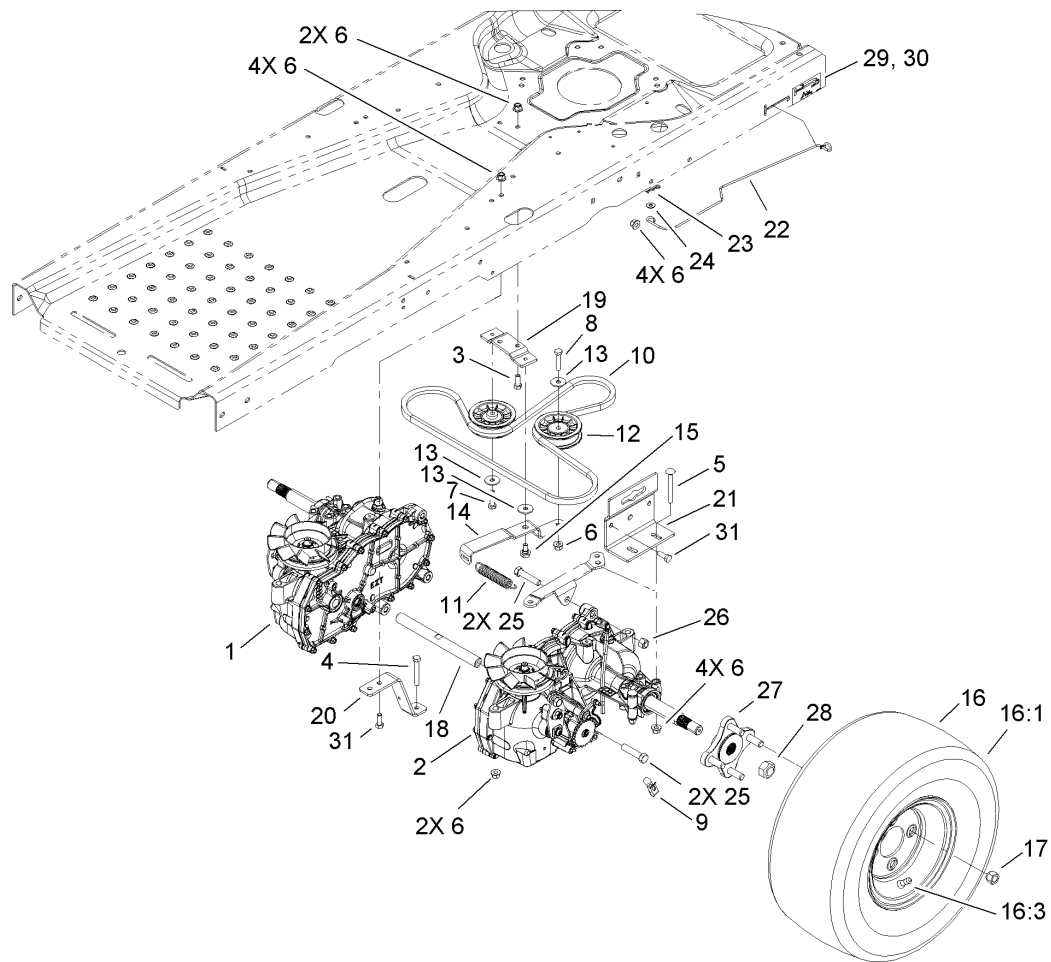

Hydro Drive Assembly


Ref	Part No.	Qty.	Description
1	110-6771	1	Hydro-RH
2	110-6770	1	Hydro-LH
3	322-4	2	Screw-HH
4	322-11	2	Screw-HH
5	3230-9	4	Screw-CARR
6	3296-58	17	Nut-Lock, NI
7	322-6	1	Screw-HH
8	322-7	1	Screw-HH
9	110-6677	2	Clip-Spring
10	110-6774	1	V-Belt
11	63-1590	1	Spring-Idler
12	110-6775	2	Pulley-Idler
13	5-4460	3	Washer-Pivot
14	110-1925	1	Arm-Idler
15	37-8771	1	Bolt-Shoulder
16	112-9792	2	Wheel And Tire ASM
16:1	110-6887	1	Tire
16:3	232-27	1	Stem-Valve
●16:99	232-37	1	Tube
17	242-50	8	Nut-Lug
18	110-6807	1	Shaft-Cross
19	110-1926	1	Plate-Pivot
20	110-6806-03	2	Strap-Torque
21	110-6878-03	2	Support-Hydro

Ref	Part No.	Qty.	Description
22	110-6787	2	Rod-Bypass
23	1-806003	2	Pin-Hair
24	3256-22	2	Washer-Flat
25	324-8	4	Screw-HH
26	3296-48	2	Nut-Lock, NI
27	112-3979	2	Hub ASM
28	112-3982	2	Nut-Lock
29	110-6680	1	Decal-Transport, LH
30	110-6690	1	Decal-Transport, RH
31	3234-47	8	Screw-HHF

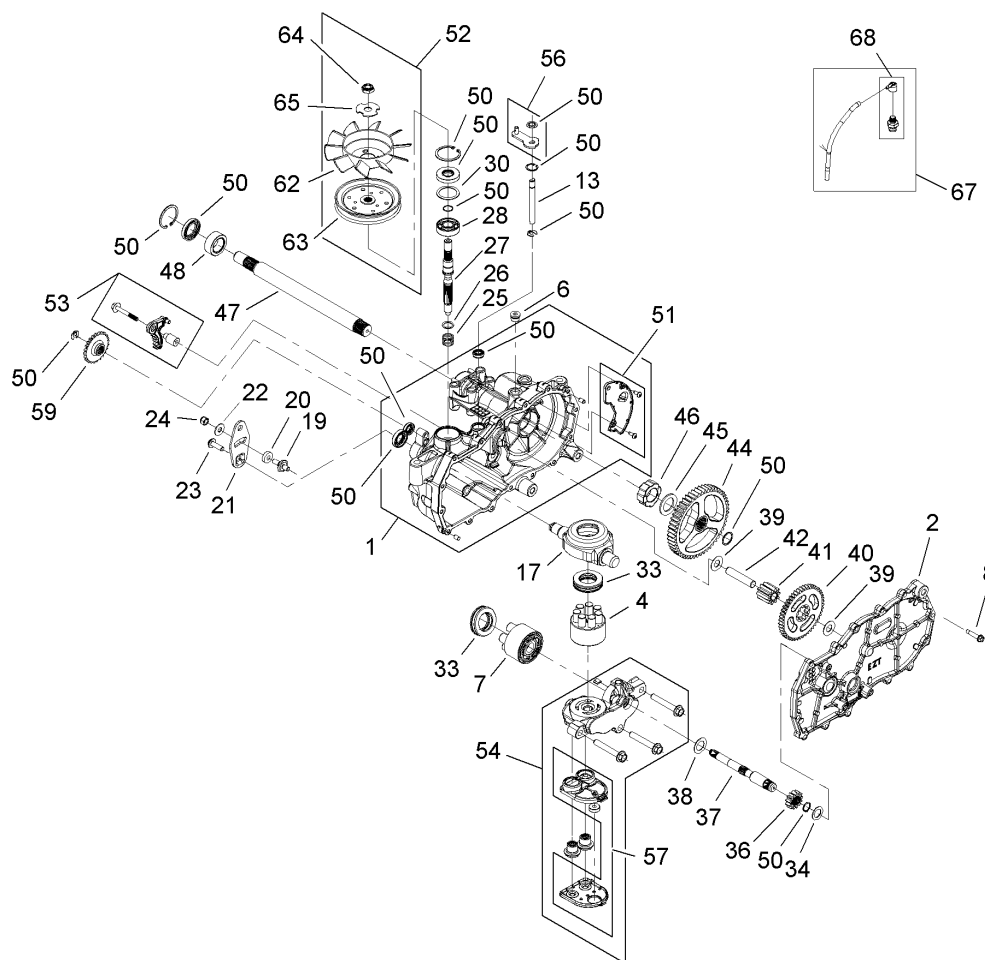

RH Hydro No. 110-6771 Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	114-1630	1	RH Main Housing ASM	39	94-1933	2	Washer
2	114-1631	1	RH Side ASM	40	104-5317	1	Gear
4	110-8561	1	Pump Block ASM	41	104-5318	1	Gear-Jackshaft, 10T
6	112-9850	1	Plug	42	104-5329	1	Pin-Jackshaft
7	103-2666	1	Cylinder Block Kit	44	112-9855	1	Gear-52T Bull
8	104-5305	16	Screw-HHF	45	112-9856	1	Washer
13	106-8678	1	Rod-Bypass	46	112-9857	1	Bearing-Sleeve
17	104-5304	1	Swashplate-Trunnion	47	112-9858	1	Shaft-Axle
19	104-2116	1	Stud	48	112-9859	1	Bushing-Axle
20	112-9853	1	Puck-Friction	50	106-8686	1	Seal Kit
21	106-8747	1	Arm-Control	51	106-8697	1	RH Expansion Plate Kit
22	5-4460	1	Washer-Pivot	52	106-8698	1	Fan Pulley Kit
23	107-2488	1	Screw	53	114-1633	1	Brake Arm Kit
24	105-1872	1	Nut	54	112-9861	1	RH Center Section Filter Kit
25	94-1936	1	Spring-Block	55	112-9863	1	Tube-Sealant
26	94-1937	1	Washer-Block, Thrust	56	107-2489	1	Bypass Arm Kit
27	104-5306	1	Shaft-Input	57	114-1634	1	Filter Kit
28	104-5311	1	Bearing-Ball	59	106-8694	1	Disc-Brake, Cog
30	104-5308	1	Spacer	62	110-8566	1	Fan-6 Inch, 10 Blade
33	94-6922	2	Bearing-Thrust	63	104-1754	1	Pulley
34	104-5339	1	Washer-Flat	64	105-1875	1	Nut-Lock
36	104-5316	1	Gear-Pinnion, 13T	65	107-9122	1	Washer-Slotted
37	114-1632	1	Shaft, Motor	67	112-9866	1	Breather Kit
38	104-5360	1	Washer-Shaft, Motor	68	114-1635	1	Breather ASM

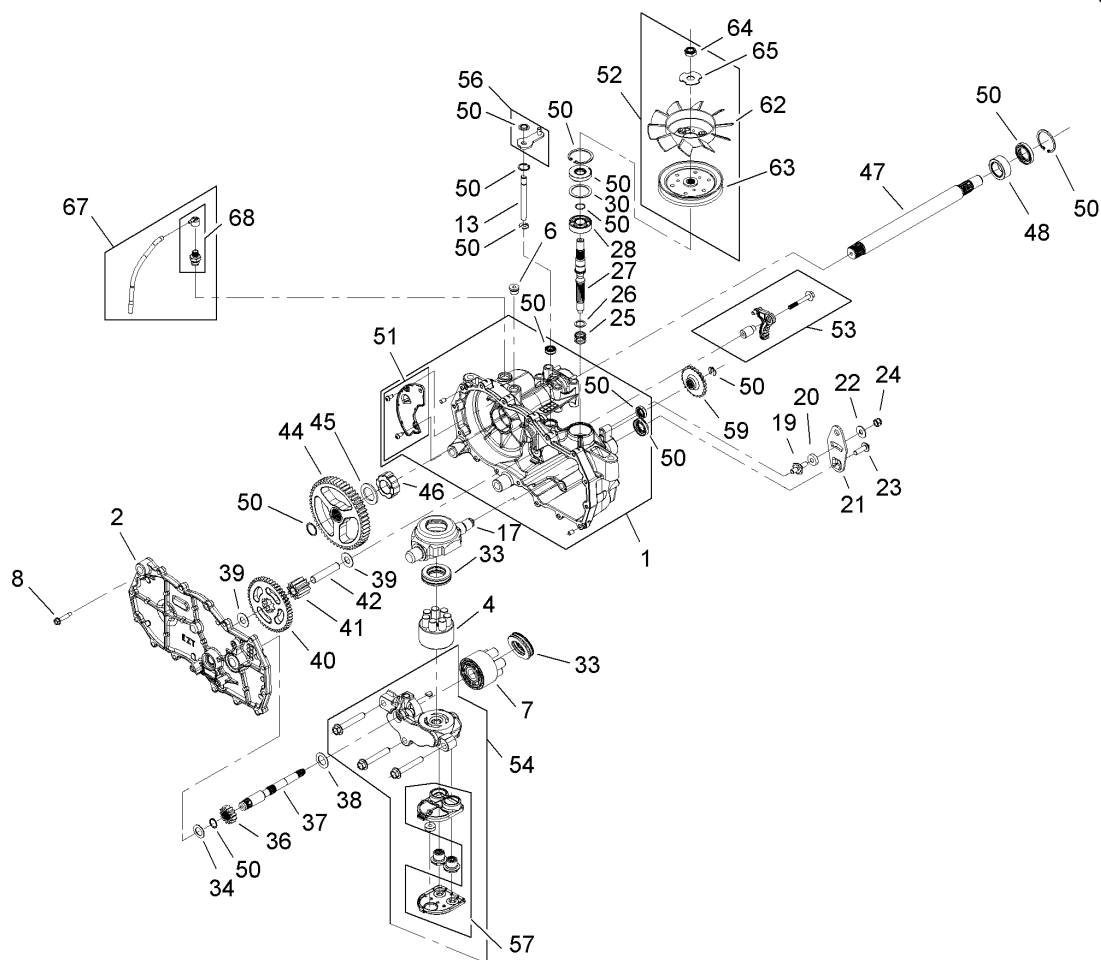

LH Hydro No. 110-6770 Assembly


Ref	Part No.	Qty.	Description
1	114-1636	1	LH Main Housing ASM
2	114-1637	1	LH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor

Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8687	1	LH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9862	1	LH Center Section Filter Kit
55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

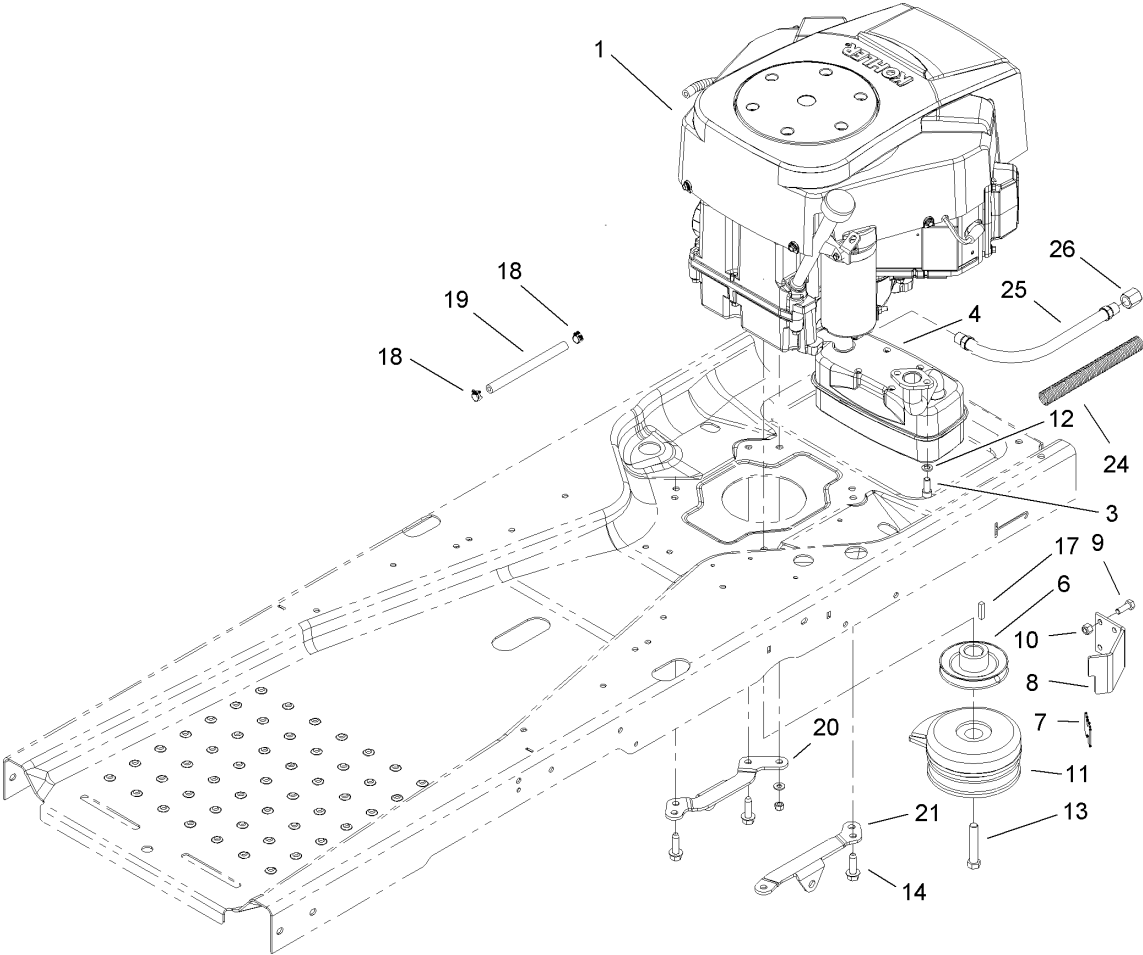

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description				
1		1	Engine-Kohler, Sv720-0029				
3	3274-10	4	Screw-HSH				
4	108-7875	1	Muffler				
6	110-6758	1	Pulley-Engine				
7	112-3974	1	Bumper				
8	110-6896	1	Stop-Clutch				
9	322-4	2	Screw-HH				
10	3296-29	2	Nut-Lock, NI				
11	110-6766	1	Clutch-Electric, PTO				
12	3253-4	4	Washer-Lock				
13	3212-11	1	Screw-HH				
14	32144-109	4	Screw				
17	5-7280	1	Key				
18	2412-98	2	Clamp				
19	107-0589	1	Hose-Fuel				
20	110-6798	1	Support-Hydro, RH				
21	110-6799	1	Support-Hydro, LH				
24	112-9849	1	Tubing-Convolute				
25	82-4201	1	HYD Hose ASM				
26	288-10	1	Cap-Pipe				

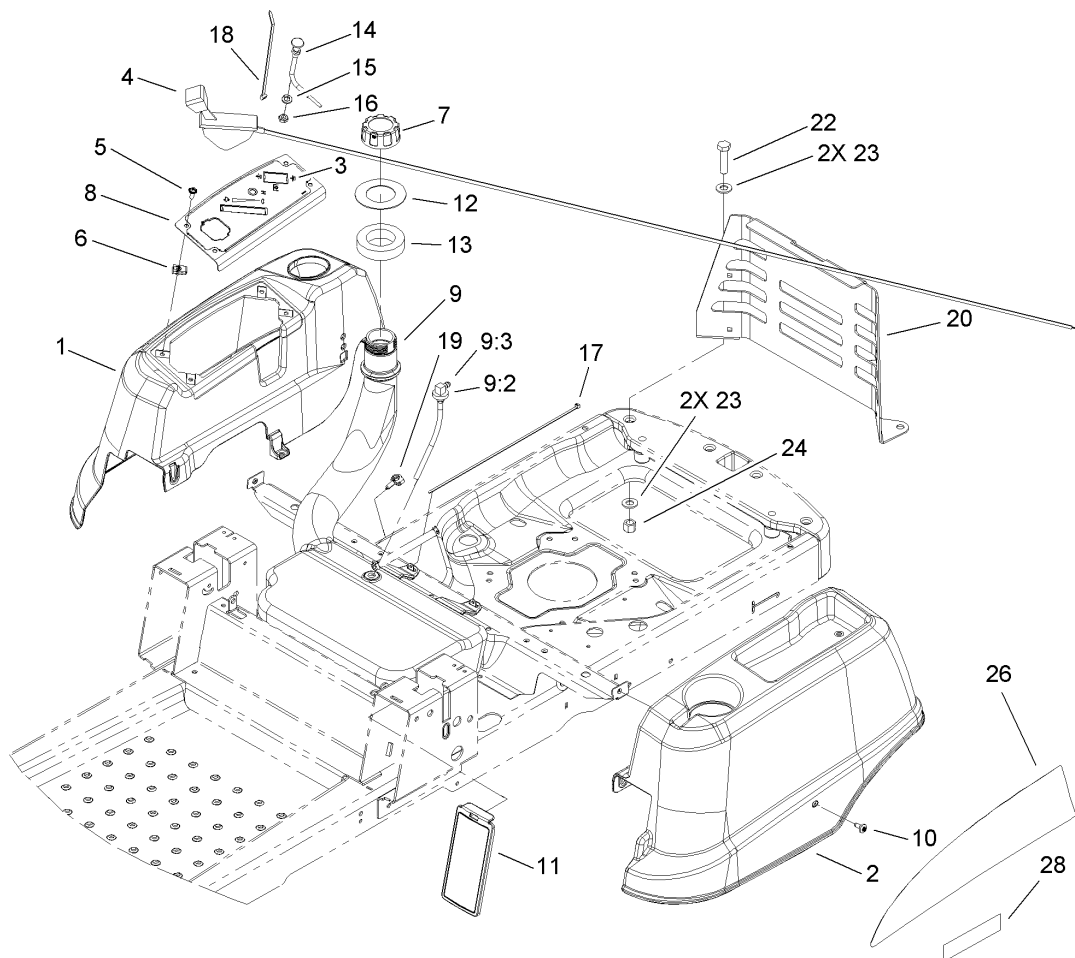

Styling and Fuel System Assembly


Ref	Part No.	Qty.	Description
1	112-9773	1	Pod-RH
2	112-9772	1	Pod-LH
3	112-9789	1	Decal-Control Panel, Cnh
4	112-9800	1	Cable-Throttle
5	3258-166	4	Screw-PRH
6	107069	4	Clip
7	93-7198	1	Gas Cap ASM
8	110-1927-03	1	Panel-Control
9	110-6890	1	Fuel Tank ASM
9:2	46-6560	1	Bushing
9:3	95-3970	1	Fitting-90 Degree
10	112-4004	6	Screw-Shoulder
11	110-6786	2	Cover-Control
12	112-9760	1	Washer-Rubber
13	55-9310	1	Seal-Foam
14	110-6754	1	Cable-Choke
15	3253-21	1	Washer-Lock
16	3220-3	1	Nut-HJ
17	100-9064	1	Tie-Cable
18	614249	1	Strap-Tie
19	32180-037	1	Clip-Harness
20	110-6685-03	1	Support-Cover, Rear
22	325-8	2	Screw-HH
23	3256-26	4	Washer-Flat

Ref	Part No.	Qty.	Description
24	3296-23	2	Nut-Lock, NI
26	114-1612	1	Decal-Pod, LH
27	114-1613	1	Decal-Pod, RH
28	114-1616	2	Decal-Cnh

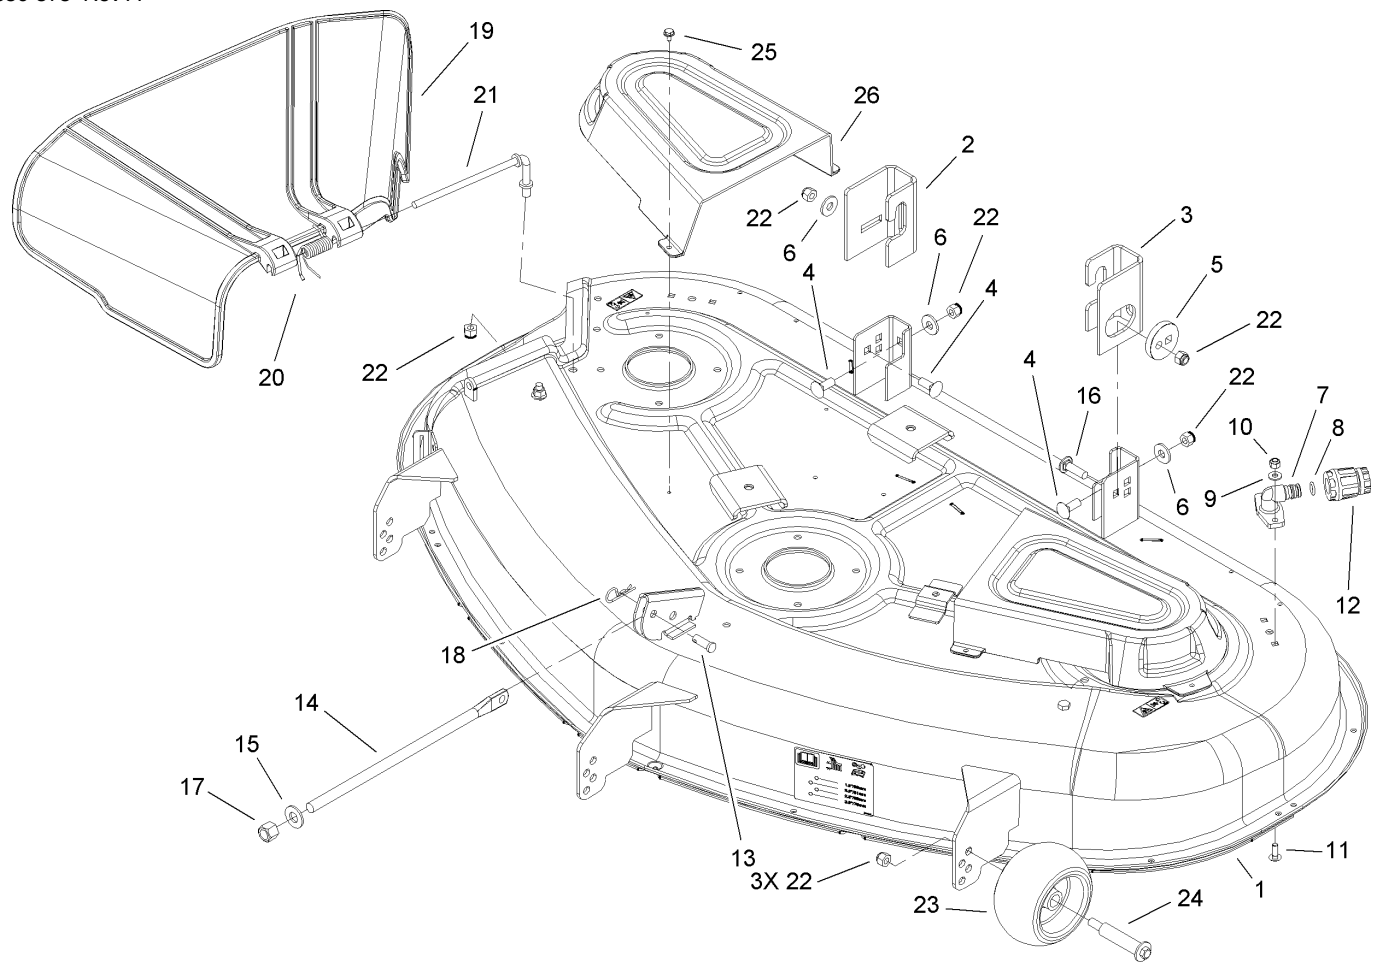

50 Inch Deck Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	112-9798	1	50 Inch Deck ASM	25	32104-76	6	Screw
2	108-7836	1	Bracket-Hanger, Right Rear	26	108-7890	2	Cover-Belt
3	108-7838	1	Bracket-Hanger, Left Rear				
4	3231-2	3	Screw-CARR				
5	112-3980	1	Eccentric				
6	80-6990	3	Washer-Hardened				
7	95-2747	2	Fitting-Washout				
8	46-6290	2	O-Ring				
9	3256-22	4	Washer-Flat				
10	3296-42	4	Nut-Lock, NI				
11	3229-1	4	Screw-CARR				
12	95-3270	1	Connector-Hose				
13	1-808284	1	Pin-Clevis				
14	108-7847	1	Rod-Lift				
15	87-7270	1	Washer-Thrust				
16	3231-28	1	Screw-CARR				
17	3296-23	1	Nut-Lock, NI				
18	9335054	1	Pin-Hair				
19	108-7895	1	Deflector-50 Inch				
20	110-6694	1	Spring-Torsion				
21	112-3950	1	Rod-Pivot				
22	3296-39	8	Nut-Lock, NI				
23	1-603299	3	Roller-Scalp, Anti				
24	112-3977	3	Bolt-Shoulder				

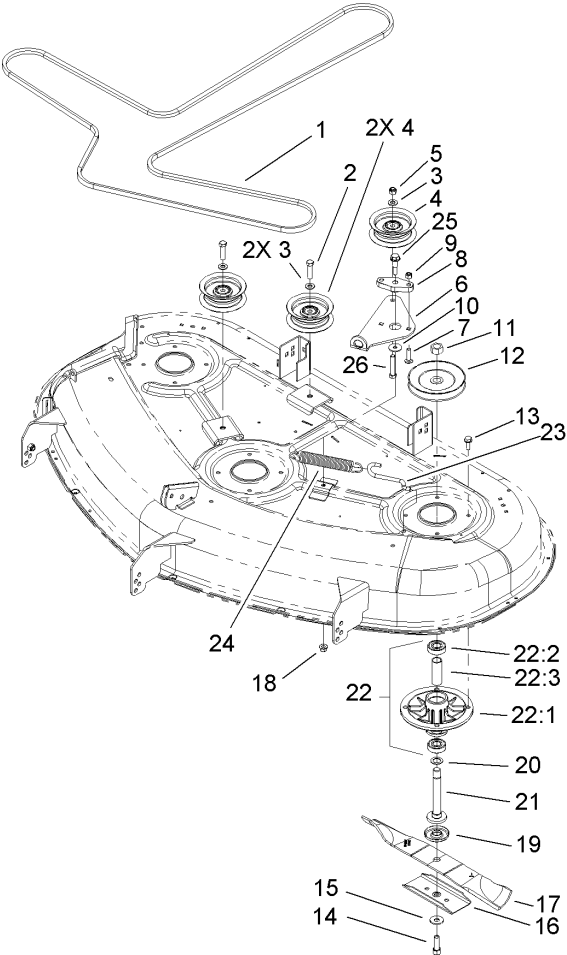

50 Inch Deck Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6892	1	V-Belt
2	323-8	2	Screw-HH
3	3256-24	3	Washer-Flat
4	106-2175	3	Pulley-Idler, Flat
5	3296-39	1	Nut-Lock, NI
6	110-6867-03	1	Arm-Idler
7	3230-3	2	Screw-CARR
8	108-7881	1	Bushing-Pivot
9	3296-29	2	Nut-Lock, NI
10	5-4460	1	Washer-Pivot
11	3219-6	3	Nut-Hex
12	110-6865	3	Pulley
13	32144-41	12	Screw-Taptite
14	26-0671	3	Screw-Blade
15	3290-465	3	Washer-Belleville
16	106-2248-03	3	Stiffener-Blade
17	110-6837-03	3	Blade-17.5 Inch, High Lift
18	3296-58	1	Nut-Lock, NI
19	80-4360	3	Shield-Bearing
20	80-4380	3	Spacer
21	110-6866	3	Shaft-Spindle
22		3	Spindle ASM
22:1	88-4510	1	Housing-Spindle
22:2	100-1048	2	Bearing-Ball


Ref	Part No.	Qty.	Description
22:3	62-3661	1	Spacer-Bearing
23	112-3973	1	Hook-Return, Spring
24	1-603414	1	Spring-Extension
25	110-6897	1	Bolt-Shoulder
26	323-10	1	Screw-HH

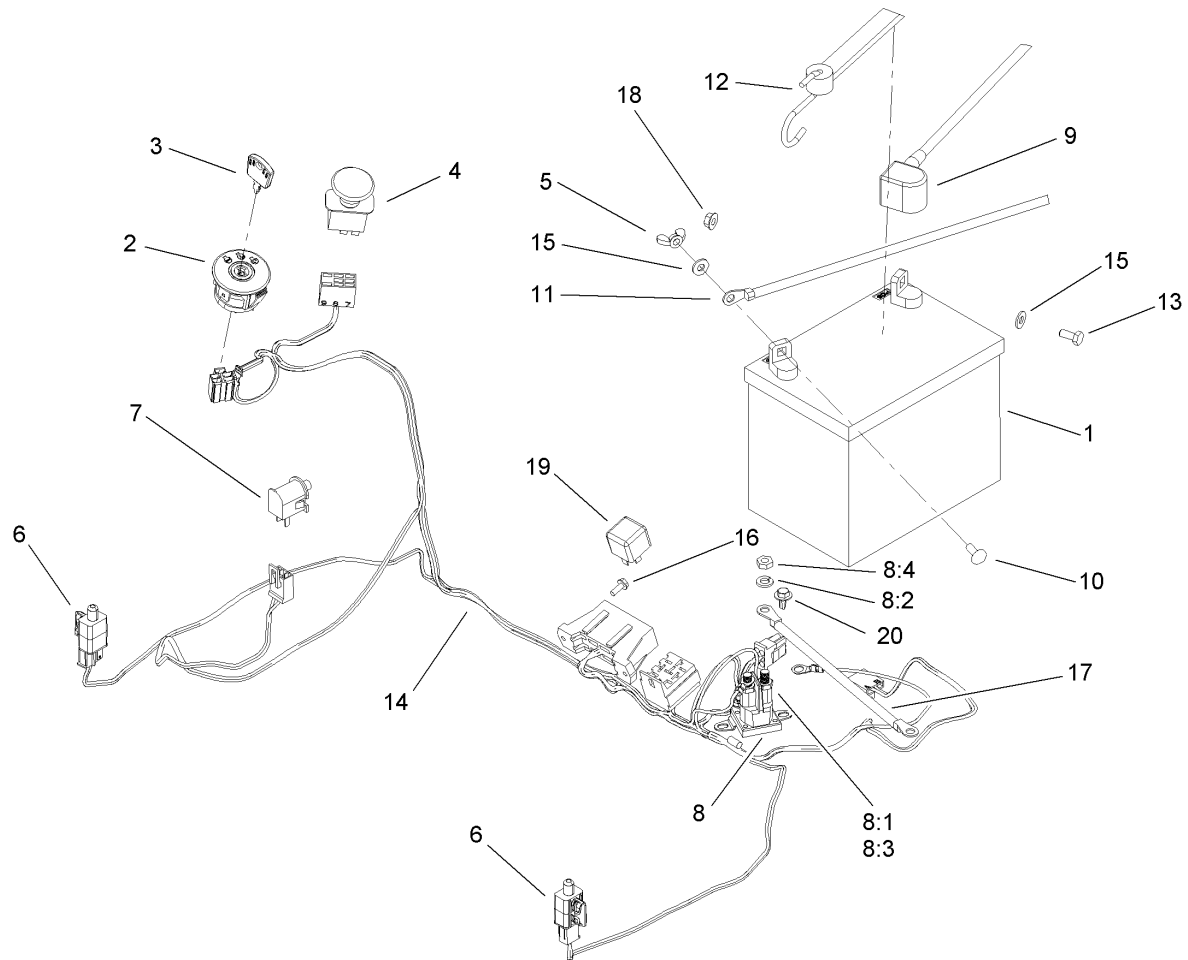

Electrical Assembly


Ref	Part No.	Qty.	Description
1	104-2493	1	Battery
2	110-6764	1	Switch-Ignition
3	700918	1	Key
4	93-9999	1	Switch-PTO
5	32103-22	1	Nut-Wing
6	110-6765	2	Switch-Single Pole No
7	82-2190	1	Switch-Bail
8	1-513075	1	Switch-Solenoid
8:1	3253-17	2	Washer-Lock
8:2	3253-4	2	Washer-Lock
8:3	3219-14	2	Nut-Hex
8:4	3220-2	2	Nut-Jam
9	110-6794	1	Cable-Battery, Red
10	3229-1	1	Screw-CARR
11	110-6793	1	Cable-Battery, Black
12	104-2466	1	Holddown-Battery
13	321-3	1	Screw-HH
14	110-1923	1	Harness-Wire
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	110-6792	1	Cable-Battery, Red
18	32128-33	2	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF

Ref	Part No.	Qty.	Description
24	614249	1	Strap-Tie

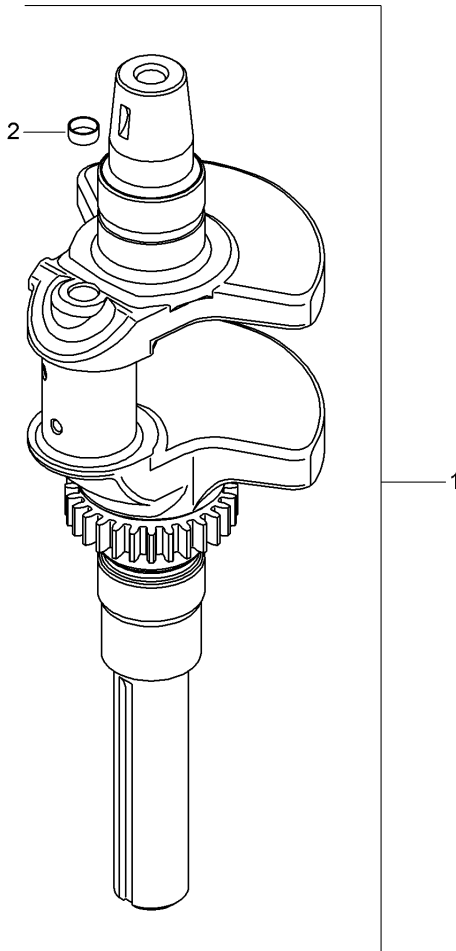


Crankshaft Assembly Kohler SV720-0029

Ref	Part No.	Qty.	Description
❶1	32 014 04-S	1	Crankshaft ASM (Includes 2)
❷2	52 139 09-S	1	Plug-Cup

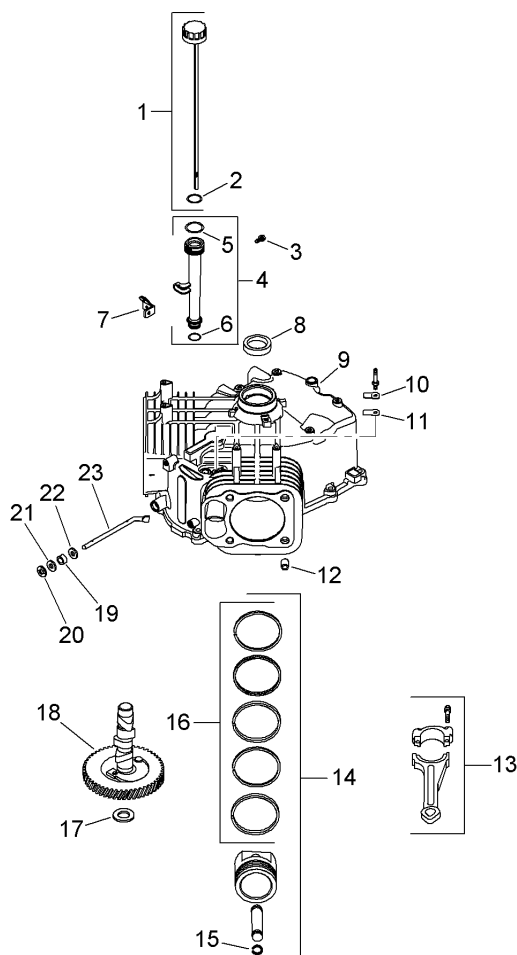

Crankcase Assembly Kohler SV720-0029


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	24 038 04-S	1	Dipstick ASM (Includes 2)	❶17	12 422 10-S	1	Shim-Camshaft (Yellow .034)
❶2	25 153 02-S	1	O-Ring	❶17	12 422 11-S	1	Shim-Camshaft (Green .036)
❶3	M-545013-S	1	Screw-Flange, Hex (M5X0.8X13)	❶17	12 422 12-S	1	Shim-Camshaft (Gray .038)
❶4	12 123 04-S	1	Oil Fill Tube ASM (Includes 5, 6)	❶17	12 422 13-S	1	Shim-Camshaft (Black .04)
❶5	12 153 02-S	1	O Ring-Upper Oil Fill Tube	❶18	32 012 01-S	1	Camshaft Kit (Includes 25, 357 15-S)
❶6	12 153 01-S	1	O-Ring-Lower Oil Fill Tube	❶19	28 032 09-S	1	Seal-Shaft, Cross Governor
❶7	24 126 19-S	1	Bracket-Oil Fill Tube	❶20	24 018 09-S	1	Ring-Retainer
❶8	24 032 01-S	1	Seal-Oil	❶21	M-931010-S	1	Washer-Flat (8 Mm)
❶9		1	Crankcase (Use: Short Block 32 522 03)	❶22	24 468 15-S	1	Washer-Flat (1/4)
❶10	24 018 04-S	1	Retainer-Breather Reed	❶23	24 144 38-S	1	Shaft-Cross, Governor
❶11	12 402 02-S	1	Reed-Breather	❶❶	25 357 14-S	1	Lubricant, Camshaft
❶12	24 380 16-S	6	Pin-Locating				
❶13	24 067 16-S	2	Rod-Connecting (STD)				
❶14	32 874 06-S	2	Piston W/Ring Set (STD) (Includes 15, 16)				
❶14	32 874 09-S	1	Piston W/Ring Set Kit (.08)				
❶14	32 874 08-S	1	Piston W/Ring Set Kit (.25)				
❶15	24 018 01-S	4	Retainer-Piston, Pin				
❶16	24 108 11-S	2	Ring Set (STD And .08)				
❶16	24 108 06-S	1	Ring Set (.25)				
❶17	12 422 07-S	1	Shim-Camshaft (White .028)				
❶17	12 422 08-S	1	Shim-Camshaft (Blue .03)				
❶17	12 422 09-S	1	Shim-Camshaft (Red .032)				

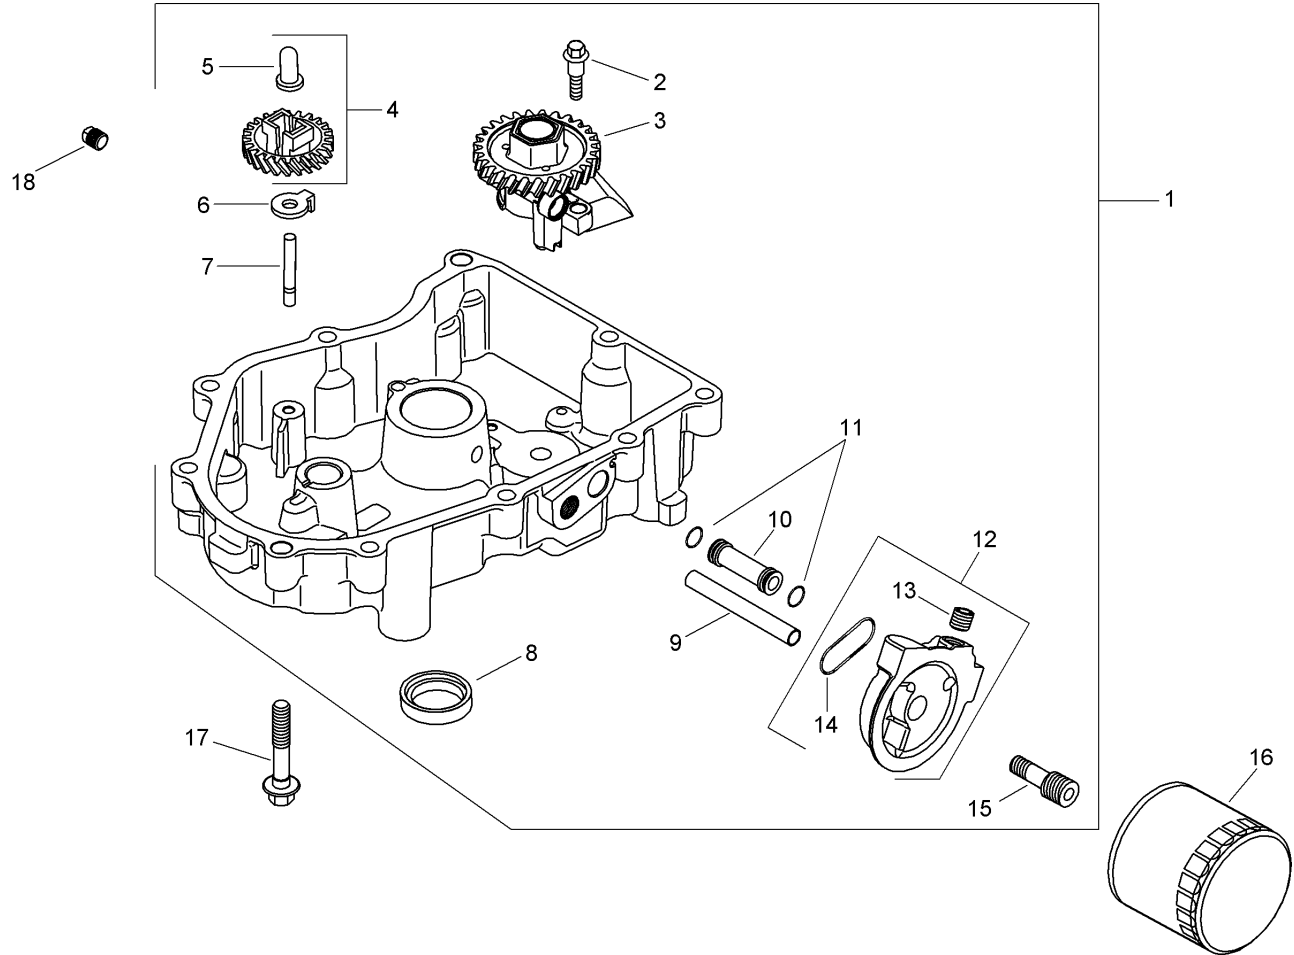

Oil Pan and Lubrication Assembly


Kohler SV720-0029

Ref	Part No.	Qty.	Description				
❶1	32 199 02-S	1	Oil Pan ASM (Includes 2-15)				
❷2	32 086 01-S	2	Screw-Hex Flange Thread Forming (Shoulder)				
❸3	32 393 10-S	1	Oil Pump ASM				
❹4	24 043 12-S	1	Governor Gear Kit W/Pin (Includes 5)				
❺5	12 380 01-S	1	Pin-Regulating, Governor				
❻6	24 448 02-S	1	Tab-Locking				
❼7	12 144 02-S	1	Shaft-Gear, Governor				
❽8	52 032 08-S	1	Seal-Oil (PTO End)				
❾9	32 123 01-S	1	Tube-Oil Feed (Filter To Oil Pan)				
❿10	32 123 03-S	1	Tube-Oil Feed (Oil Pan To Filter)				
❾11	24 153 01-S	2	O-Ring, Oil Pick-Up				
❿12	32 029 07-S	1	Adapter-Filter, Oil (Includes 13, 14)				
❿13	25 139 60-S	1	Plug-Hex, Countersunk (1/8)				
❿14	32 153 04-S	1	O-Ring, Oil Filter Adapter				
❿15	32 136 03-S	1	Nipple-Oil Filter				
❿16	12 050 01-S	1	Filter-Oil				
❿17	24 086 17-S	10	Screw-HF (M8X1.25X45)				
❿18	25 139 57-S	1	Plug-Square Head Solid (3/8)				

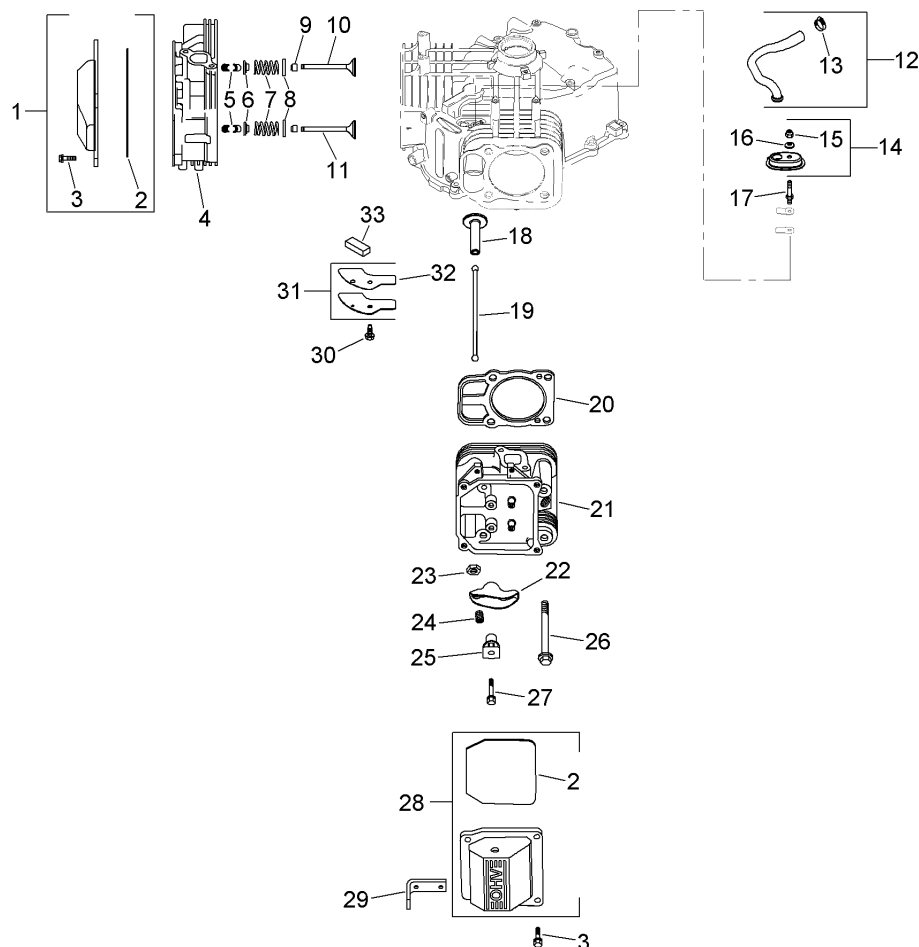


Head, Valve and Breather Assembly Kohler SV720-0029

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	24 755 141-S	1	Plain Rocker Cover ASM (Includes 2, 3 (Qty 4))	❶20	24 841 03-S	2	Cylinder Head Gasket Kit (Includes head Mounting Hardware And 24 041 49-S, 24 153 27-S)
❶2	24 153 28-S	2	O-Ring, Valve Cover	❶21	32 318 02-S	1	Head ASM (No.2 Cylinder) (Includes 26 (Qty4) And Head Gasket)
❶3	M-651030-S	8	Screw-Hex Flange (M6X1.0X30)	❶22	32 186 02-S	4	Arm-Rocker
❶4	32 318 01-S	1	Head ASM, No.1 Cylinder (Includes 26 (Qty 4) And Head Gasket)	❶23	32 100 04-S	4	Nut-Hex (M10X0.75)
❶5	12 755 03-S	8	Retainer Kit	❶24	32 086 03-S	4	Screw-Set
❶6	12 173 01-S	4	Cap-Spring, Valve	❶25	24 599 02-S	4	Arm-Rocker, Pivot
❶7	24 089 02-S	4	Spring-Valve	❶26	12 086 16-S	8	Screw-Hex Flange (M10X1.5X90)
❶8	235011-S	4	Retainer-Spring	❶27	32 086 04-S	4	Screw-Hex Flange (M6X1.0X45)
❶9	66 032 05-S	2	Seal-Stem, Valve	❶28	32 096 06-S	1	Breather Valve Cover ASM (Includes 2)
❶10	24 017 01-S	2	Valve-Intake (Standard)	❶29	24 445 01-S	1	Strap-Lifting
❶11	24 016 01-S	2	Valve-Exhaust (Standard)	❶30	M-645016-S	1	Screw-HHFTF (M6X1.0X16)
❶12	32 326 04-S	1	Hose-Breather (Includes 13)	❶31	32 096 04-S	1	Breather Cover ASM
❶13	25 237 14-S	4	Clamp-Hose	❶32	32 041 01-S	1	Gasket-Cover, Breather
❶14	32 081 02-S	1	Housing-Breather (Includes 15,16)	❶33	32 050 01-S	1	Filter-Breather
❶15	M-547050-S	1	Nut-Hex, Lock (M5X0.8)	❶❶	24 041 49-S	1	Gasket-Cover, Breather
❶16	32 468 01-S	1	Washer-Sealing	❶❶	24 153 27-S	1	O-Ring, Intake Port
❶17	32 072 02-S	1	Stud-Breather Cover				
❶18	32 019 01-S	4	Tappet				
❶19	32 411 02-S	4	Rod-Push				

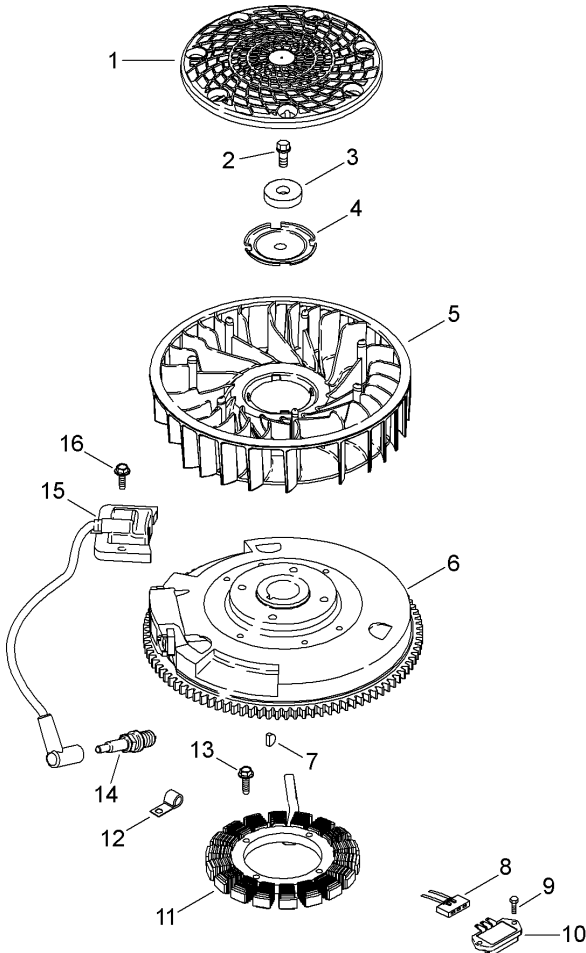


Ignition and Electrical Assembly
Kohler SV720-0029

Ref	Part No.	Qty.	Description				
❶1	32 162 03-S	1	Screen-Grass				
❷2	12 086 14-S	1	Screw-Hex, Flange (M10X1.5X45)				
❸3	12 468 03-S	1	Washer-Flat (3/8)				
❹4	20 146 02-S	1	Plate-Fan Mounting				
❺5	32 157 01-S	1	Fan				
❻6	32 025 08-S	1	Flywheel				
❼7	X-42-15-S	1	Key (3/16 X 5/8)				
❽8	236602-S	1	Connector (3 Contact)				
❾9	M-551016-S	2	Screw-Heavy Hex Flange (M5X0.8X16)				
❿10	41 403 09-S	1	Rectifier-Regulator				
❶❶11	237878-S	1	Stator Kit (15 Amp)				
❶❷12	235173-S	1	Clip-Cable				
❶❸13	M-548025-S	2	Screw-HHFTF (M5X0.8X25)				
❶❹14	25 132 14-S	2	Spark Plug (R F I)				
❶❺15	25 584 01-S	2	Module-Ignition, R F I				
❶❻16	M-561025-S	4	Screw-Socket, Hex (M5X0.8X25)				
❶❷❶	25 454 03-S	2	Tie-Wire				
❶❷❷	32 176 04-S	1	Harness-Wiring				

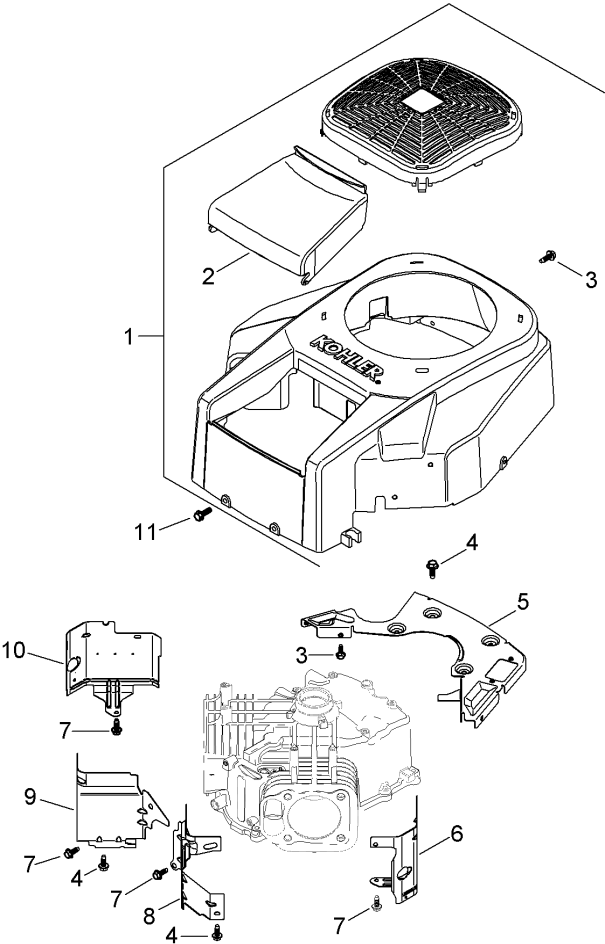


Blower Housing Assembly
Kohler SV720-0029

Ref	Part No.	Qty.	Description				
❸1	32 027 08-S	1	Blower Housing ASM (Fixed Guard) (Includes 2, 3)				
❸2	32 096 08-S	1	Cover-Cleaner, Air				
❸3	M-545016-S	6	Screw-HHFTF (M5X0.8X16)				
❸4	M-645016-S	6	Screw-HHFTF (M6X1.0X16)				
❸5	32 146 05-S	1	Plate-Backing W/Rectifier-Regulator Opening				
❸6	32 063 05-S	1	Baffle-Cylinder Barrel (No.2 Side)				
❸7	M-545010-S	5	Screw-HHFTF (M5X0.8X10)				
❸8	32 063 02-S	1	Baffle-Valley (No.2 Side)				
❸9	32 063 03-S	1	Baffle-Valley (No.1 Side)				
❸10	32 063 06-S	1	Baffle-Cylinder Barrel (No.1 Side)				
❸11	24 086 12-S	2	Screw-Hex Cap (M6X1.7X18)				
❶❸	32 113 11-S	1	Decal-Guard, Fixed				

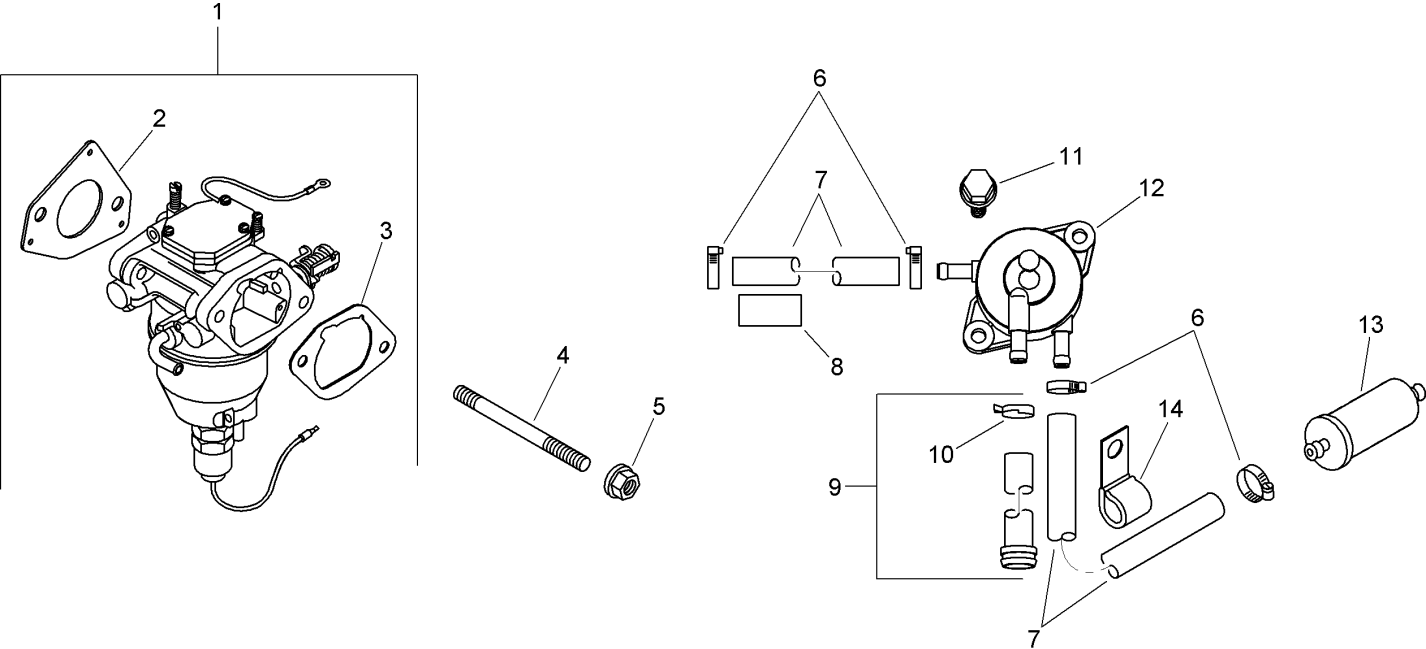

Fuel System Assembly
Kohler SV720-0029


Ref	Part No.	Qty.	Description				
❶1	32 853 05-S	1	Carburetor Kit W/Gaskets (Includes 2, 3)				
❶2	24 041 52-S	1	Gasket-Carburetor				
❶3	24 041 14-S	1	Gasket-Base, Air Cleaner				
❶4	M-629105-S	2	Stud-Carburetor				
❶5	M-641060-S	2	Nut-Hex, Flange (M6X1.0)				
❶6	25 237 14-S	4	Clamp-Hose				
❶7	25 111 34-S	2	Line-Fuel (24 Inch, Cut to needed Length)				
❶8	25 431 10-S	1	Sleeve-Anti-Abrasion				
❶9	32 326 02-S	1	Fuel Pump Hose ASM W/Clamp (Includes 10)				
❶10	25 237 01-S	1	Clamp-Hose				
❶11	24 086 12-S	2	Screw-Hex Cap (M6X1.7X18)				
❶12	24 393 16-S	1	Pump-Pulse, Fuel				
❶13	25 050 22-S	1	Filter-Fuel				
❶14	47 154 01-S	1	Clip-Cable				
❶❶	24 757 18-S	1	Overhaul Kit W/Gaskets (Includes 2, 3 And float kit)				
❶❶	24 757 19-S	1	Choke Service Repair Kit (Includes 2, 3)				
❶❶	24 757 20-S	1	Gasket Service Repair Kit (Includes 2, 3)				
❶❶	24 757 22-S	1	Solenoid Valve Service Repair Kit (Includes 2, 3)				

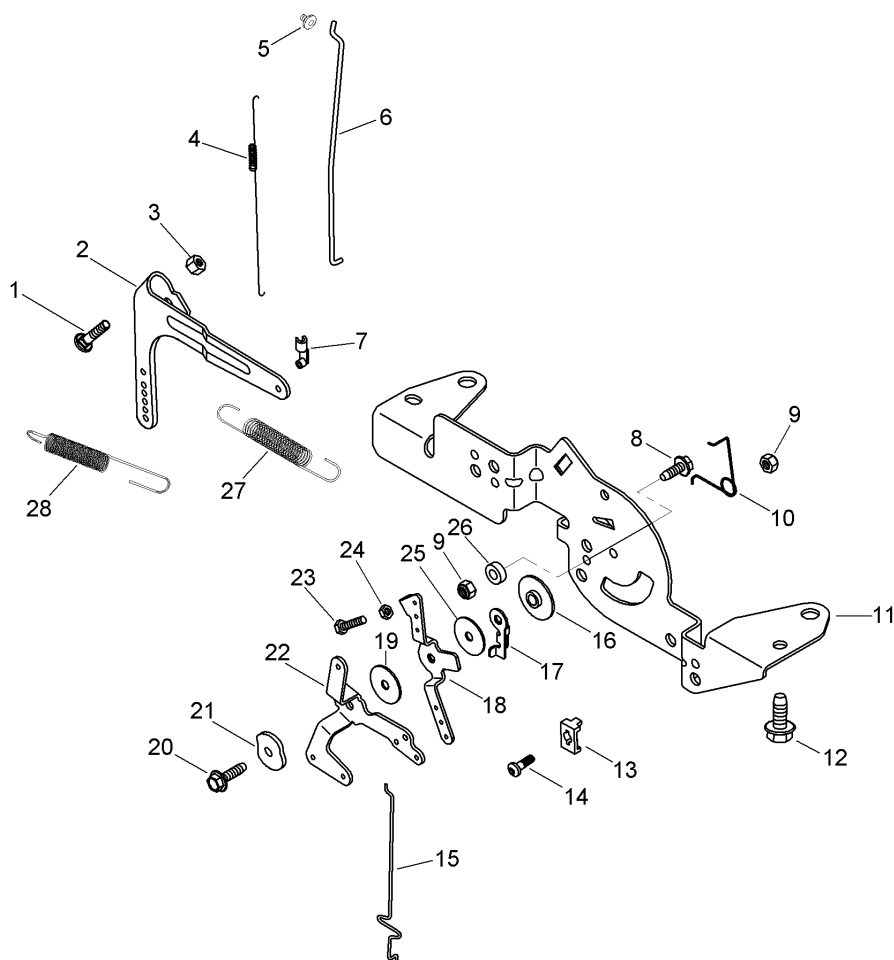

Engine Control Assembly Kohler SV720-0029






Ref	Part No.	Qty.	Description
❶1	24 211 03-S	1	Bolt-Square Neck, Round Head
❶2	24 090 33-S	1	Lever-Governor
❶3	M-641060-S	1	Nut-Hex, Flange (M6X1.0)
❶4	24 089 01-S	1	Spring-Linkage
❶5	25 158 08-S	1	Bushing-Retaining, Linkage
❶6	24 079 04-S	1	Linkage-Throttle
❶7	25 158 11-S	1	Bushing-Linkage, Throttle
❶8	M-545016-S	1	Screw-HHFTF (M5X0.8X16)
❶9	M-547050-S	2	Nut-Hex, Lock (M5X0.8)
❶10	24 089 03-S	1	Spring-Return, Choke
❶11	24 126 161-S	1	Bracket-Control
❶12	M-645016-S	4	Screw-HHFTF (M6X1.0X16)
❶13	12 237 01-S	2	Clamp-Cable
❶14	24 086 43-S	2	Screw-Lbd Thd Frm (M5X0.8X16)
❶15	24 079 22-S	1	Linkage-Choke
❶16	24 112 27-S	1	Spacer-Control
❶17	24 090 47-S	1	Lever-Actuator, Throttle
❶18	24 090 13-S	1	Lever-Control, Throttle
❶19	24 468 01-S	1	Washer-Flat (5.5 Mm)
❶20	M-545020-S	1	Screw-HHFTF (M5X0.8X20)
❶21	41 468 03-S	1	Washer-Spring (1/4)
❶22	24 090 05-S	1	Lever-Choke
❶23	M-403025-S	1	Screw-Hex Head Cap (M4X0.7X25)

Ref	Part No.	Qty.	Description
❶24	M-446030-S	1	Nut-Hex (M4X0.7)
❶25	24 468 20-S	1	Washer-Flat (5 Mm)
❶26	24 112 24-S	1	Control Spacer ASM
❶27	24 089 55-S	1	Spring-Governor
❶28	24 089 18-S	1	Spring-Governor

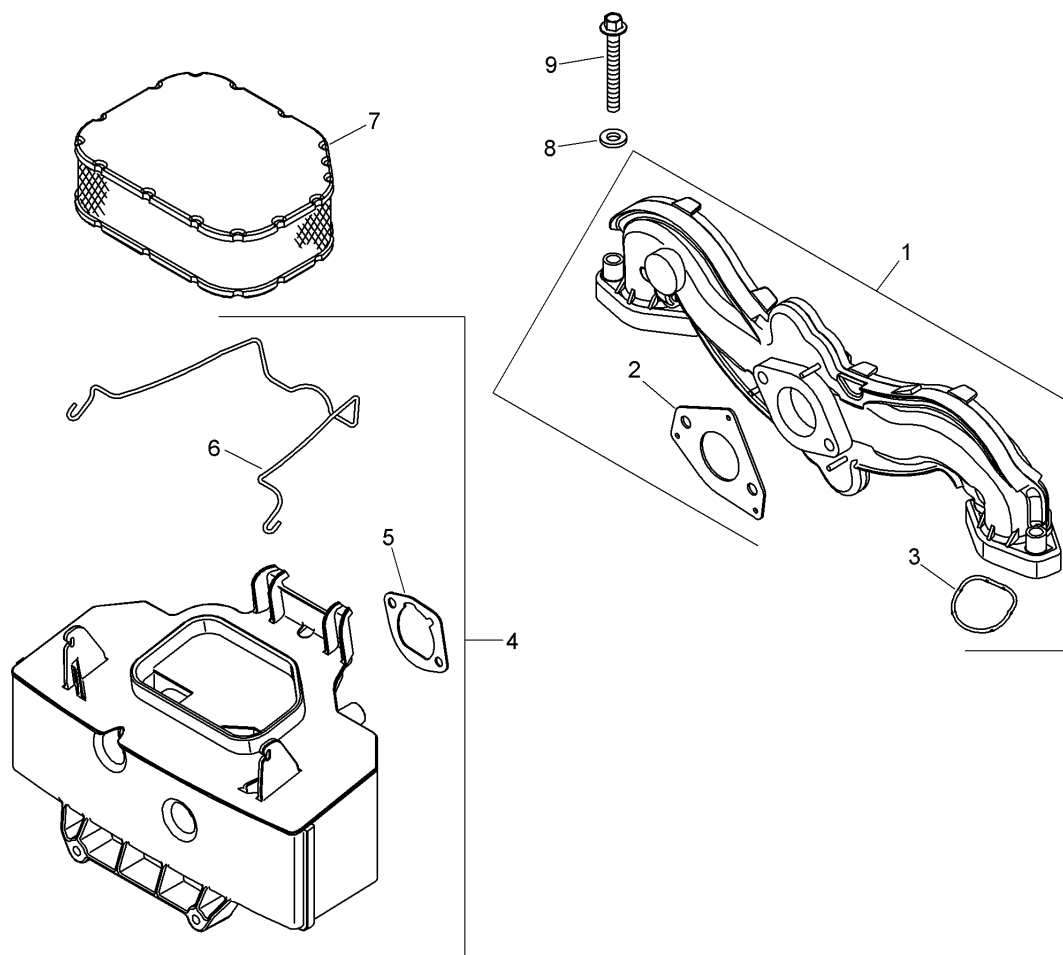

Air Intake and Filtration Assembly Kohler SV720-0029

Ref	Part No.	Qty.	Description
❸1	24 164 51-S	1	Manifold-Intake (Includes 2, 3)
❸2	24 041 52-S	1	Gasket-Carburetor
❸3	24 153 27-S	2	O-Ring, Intake Port
❸4	32 094 04-S	1	Air Cleaner Base ASM (Includes 5, 6)
❸5	24 041 14-S	1	Gasket-Base, Air Cleaner
❸6	32 344 02-S	1	Latch-Element, Air Cleaner
❸7	32 083 03-S	1	Element-Cleaner, Air
❸8	X-25-63-S	1	Washer-Plain (1/4)
❸9	M-651040-S	4	Screw-Hex Flange (M6X1.0X40)

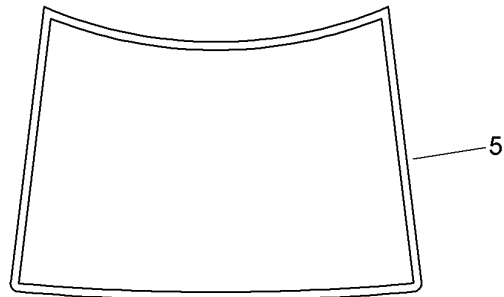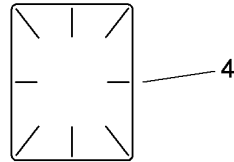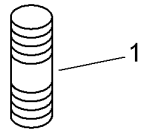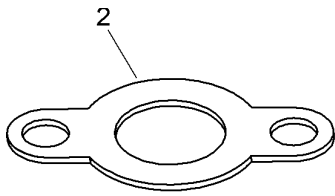

Artwork is representative

Actual labels may differ depending on model and specification number

Exhaust Stud, Gasket and Decal Assembly Kohler SV720-0029

Ref	Part No.	Qty.	Description				
③1	25 072 04-S	4	Stud (M8X1.25X33)				
③2	24 041 49-S	2	Gasket-Manifold, Exhaust				
③3	M-841080-S	4	Nut-Hex, Flange (M8X1.25)				
③4	25 113 39-S	1	Decal-Clear Laminate				
③5	32 113 07-S	1	Decal-23 H P				
①③	32 522 03	1	Short Block (S V 710-740)				
①③	32 755 01-S	1	Overhaul Kit				

Attachments and Accessories

For 725058066 - G4030 Zero-Turn-Radius Mower

Product Name	Model/Part
50in Mulching Kit	110-6744
Hour Meter Kit	112-9763
Deck Ring Kit	114-1608
Engine Cover Kit	79314
Floor Mat Kit	79315
42in and 50in Twin Bagger	99324



NEW HOLLAND ..