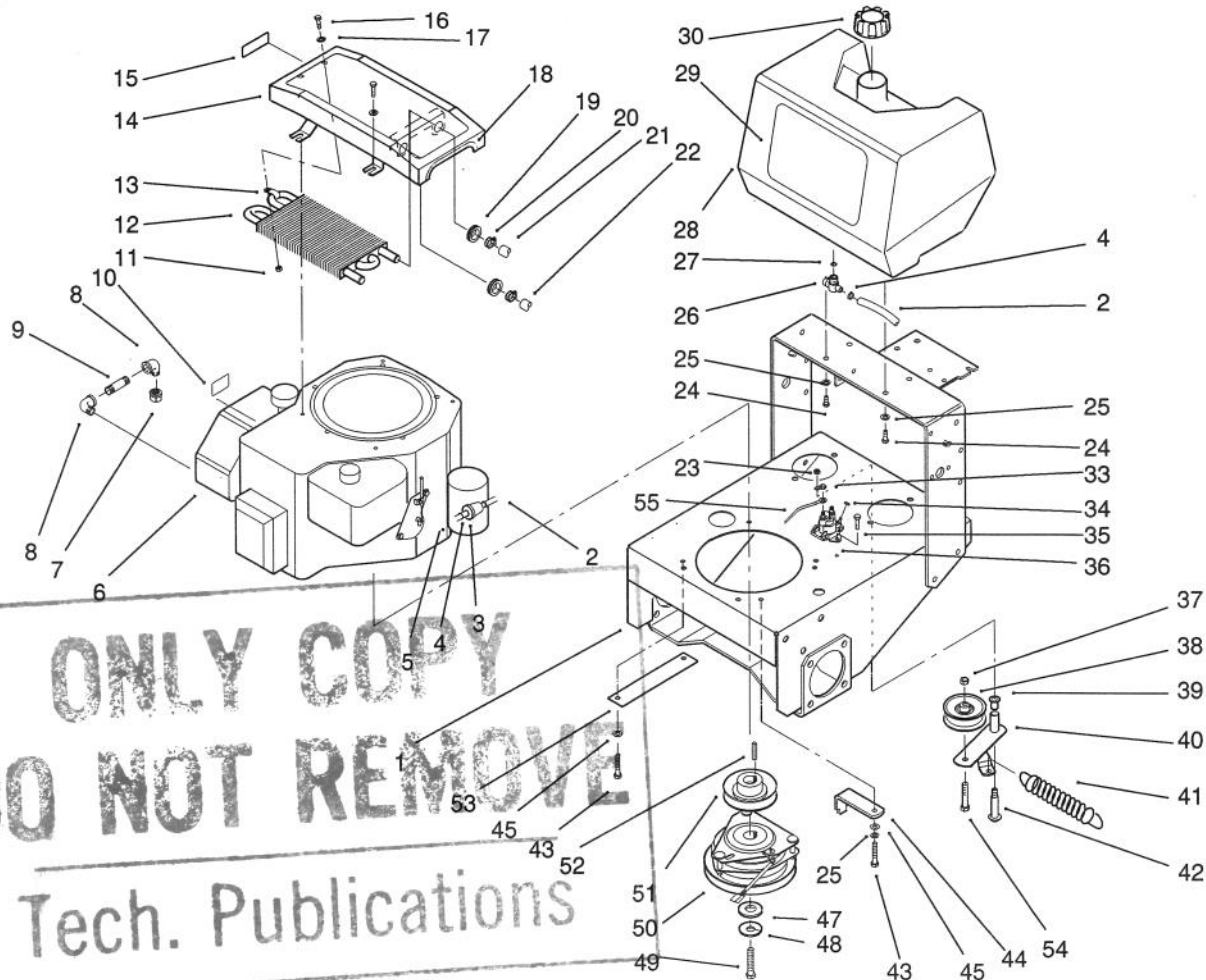


TORO®

MODEL NO. 30185-10001 & UP


**PARTS
CATALOG****PROLINE 185 MID SIZE MOWER
HYDRO**

C-0733

FRAME, ENGINE, FUEL TANK, CLUTCH & COOLER ASS'Y

Ref. No.	Part No.	Description	No. Used
1	82-3900	Frame	1
2	47-2982	Hose - Fuel	1
3	56-6360	Filter - Fuel	1
4	2412-98	Clamp - Fuel Line	4
5	47-2964	Hose - Fuel	1
6		Engine - 14 H.P. Kohler	1
7	288-4	Cap - Pipe	1
8	74-0950	Elbow - Pipe	2
9	289-51	Nipple - Pipe	1
10	63-8440	Decal - Hot	1
11	3296-42	Nut - Lock	2
12	82-4220	Cooler - Oil	1
13	2412-134	"R" Clamp	1
14	82-4500	Mount - Cooler	1
15	74-0490	Decal - Fuel Line Shut Off	1

Ref. No.	Part No.	Description	No. Used
16	321-39	Screw - Hex. Hd.	6
17	3256-1	Washer - Flat	6
18	29-0642	Trim	1
19	240-9	Grommet	2
20	2412-136	Clamp - Hose	2
21	82-4193	Hose - Hyd.	1
22	82-4192	Hose - Hyd.	1
23	3296-6	Nut - Keps	1
24	322-3	Screw - Hex. Hd.	4
25	3253-4	Washer - Lock	8
26	74-0510	Valve - Fuel Shut Off	1
27	237-7	"O" Ring	1
28	82-8440	Tank - Fuel	1
29	82-2370	Decal - Toro	1
30	55-3570	Cap - Fuel Tank	1

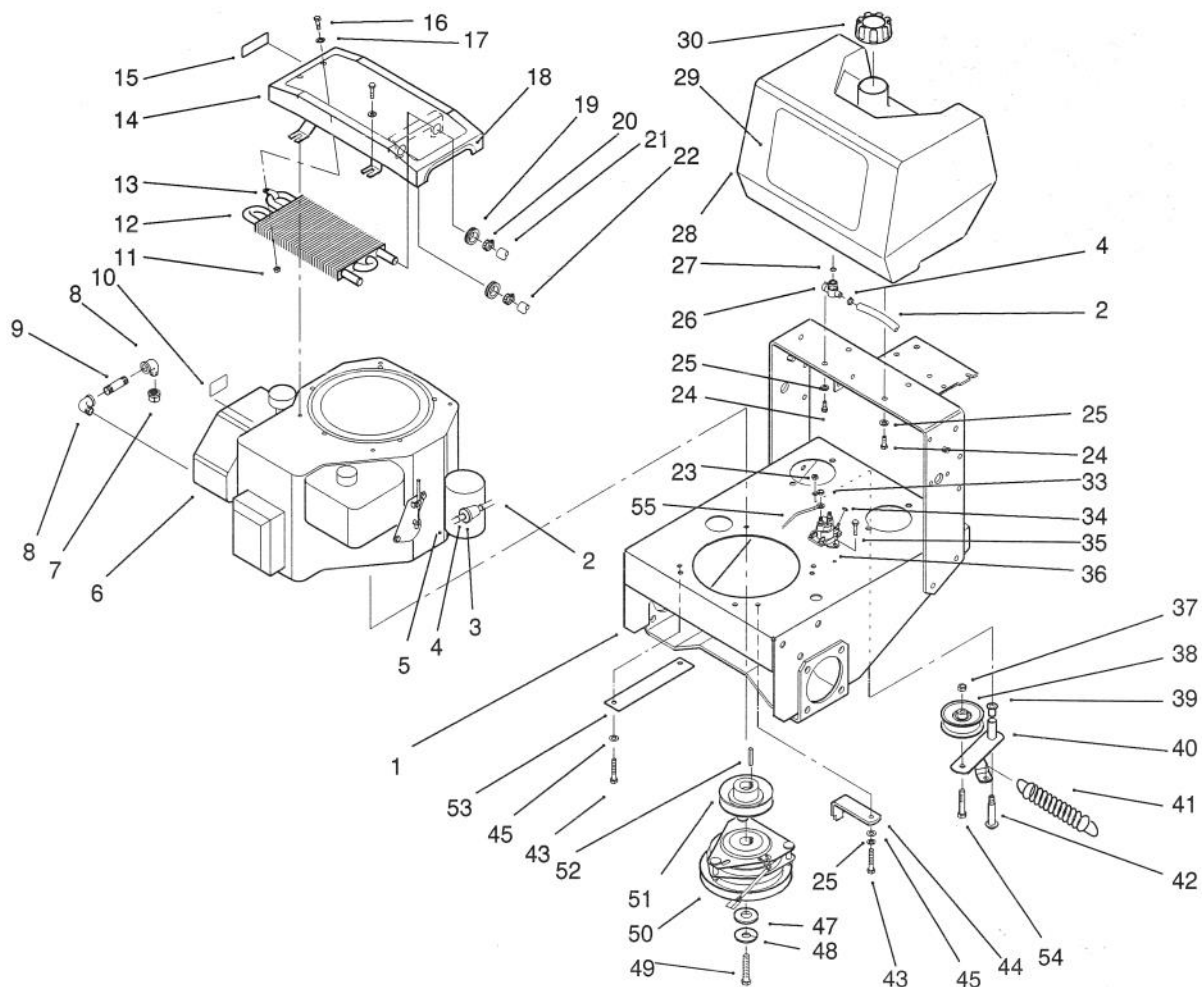


C-0733

FRAME, ENGINE, FUEL TANK, CLUTCH & COOLER ASS'Y

Ref. No.	Part No.	Description	No. Used
33	32149-2	Screw - Keps	2
34	32149-8	Screw - Keps	1
35	32144-4	Screw	2
36	44-9380	Solenoid	1
37	3396-39	Nut	1
38	62-4540	Pulley - Idler	1
39	256-156	Bushing	1
40	82-3950	Idler Assembly	1
41	68-2190	Spring	1
42	27-6230	Bolt - Wheel	1
43	57-6380	Screw	4


Ref. No.	Part No.	Description	No. Used
44	51-4540	Retainer - Clutch	1
45	3256-23	Washer - Flat	4
47	44-8160	Washer - Clutch	1
48	3253-22	Washer Lock	1
49	57-6360	Screw - Hex. Hd.	1
50	54-3200	Clutch Assembly	1
51	44-5940	Pulley - Clutch	1
52	5-1336	Key	1
53	74-0930	Guard - Pulley	1
54	323-8	Screw - Hex. Hd.	1
55	28-3891	Wire Assembly - Starter	1

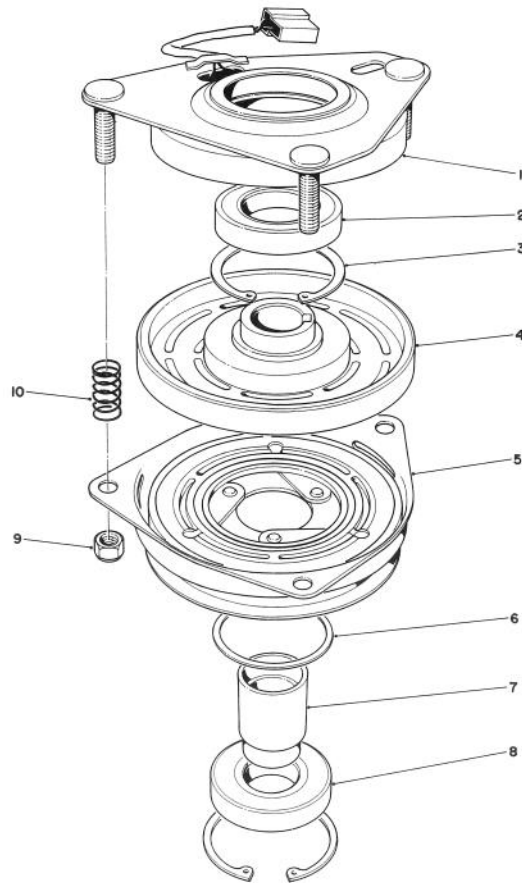

T-0080

CLUTCH ASSEMBLY NO. 54-3200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Ass'y (Incl. Ref. # 2 & 3)	1	6	44-8330	Spacer - Pulley Bearing	1
2	251-292	Bearing - Field	1	7	44-8340	Collar - Bearing	1
3	44-8310	Ring - Retaining	2	8	251-291	Bearing - Pulley	1
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. # 1)	1	9	3296-5	Nut - Lock	3
5	55-7410	Armature & Pulley Assembly (Incl. Ref. # 3, 6, 7, & 8)	1	10	44-8320	Spring	3

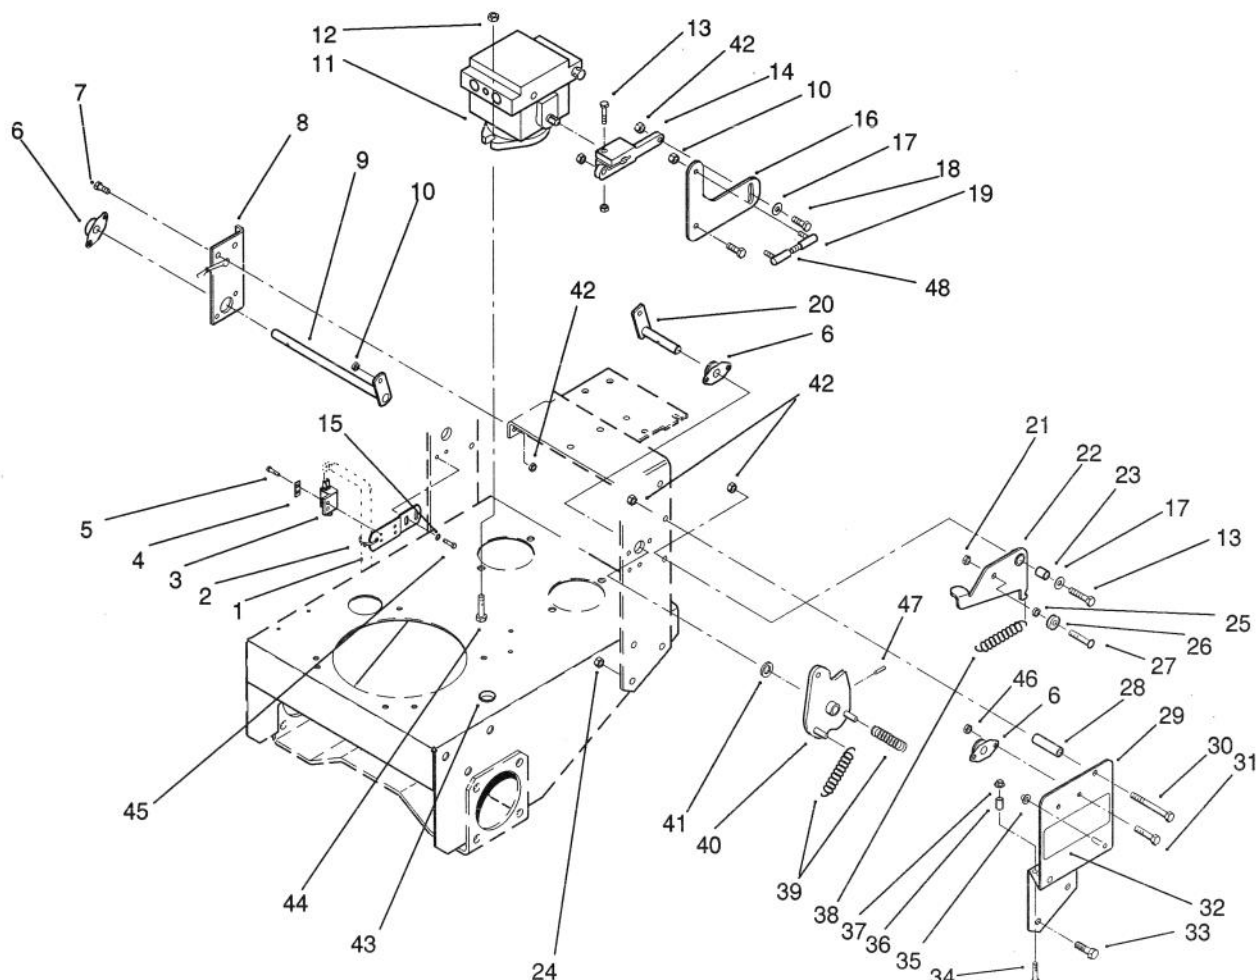


C-0734

HYDRAULIC PUMP & LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-4580	Bracket - Neutral	2
2	3290-378	Tie - Cable	3
3	65-7410	Switch Assembly	2
4	82-4570	Plate - Switch	2
5	32144-1	Screw - Hex. Hd.	4
6	82-4130	Bearing Assembly	4
7	322-4	Screw - Hex. Hd.	2
8	82-4210	Bracket Assembly	1
9	82-4290	Lever Assembly R.H.	1
10	3296-13	Nut - Lock	4
11	82-8220	Pump Assembly - Hydraulic	2
12	32128-42	Nut - Lock	4
13	322-7	Screw - Hex. Hd.	4
14	82-3790	Arm - Pump Control	2
15	3256-1	Washer	4
16	82-4230	Arm - Follower	2
17	3256-2	Washer - Flat	4
18	322-5	Screw - Hex. Hd.	4
19	2411-24	Joint - Ball	4
20	82-4270	Lever Assembly - L.H.	1
21	3296-47	Nut - Lock	2
22	82-4330	Detent Arm Assembly L.H.	1
*	82-4340	Detent Arm Assembly R.H.	1
23	82-4370	Bushing	2
24	3296-39	Screw - Hex. Hd.	6
25	82-4240	Spacer	2

Ref. No.	Part No.	Description	No. Used
26	251-259	Bearing - Ball	2
27	3274-32	Screw - Hex. Hd.	2
28	82-3920	Stop - Reverse	2
29	82-4090	Bracket Assembly L.H.	1
*	82-4070	Bracket Assembly R.H.	1
30	322-14	Screw - Hex. Hd.	2
31	321-4	Screw - Hex. Hd.	8
32	82-4600	Decal - Hydro Drive	2
33	323-6	Screw - Hex. Hd.	6
34	321-8	Screw - Hex. Hd.	2
35	32112-11	Nut - Push On	4
36	80-0650	Spacer	2
37	32128-10	Nut - Lock	2
38	82-4160	Spring	2
39	82-4150	Spring	4
40	82-4030	Pivot Assembly L.H.	1
*	82-4040	Pivot Assembly R.H.	1
41	257-5	Washer - Thrust	2
42	3296-29	Nut - Lock	12
43	237-124	Grommet	1
44	324-5	Screw - Hex. Hd.	4
45	32144-4	Screw - Hex. Hd.	4
46	3296-42	Nut - Lock	8
47	32121-4	Pin - Roll	2
48	82-4120	Rod	2

* Not Illustrated

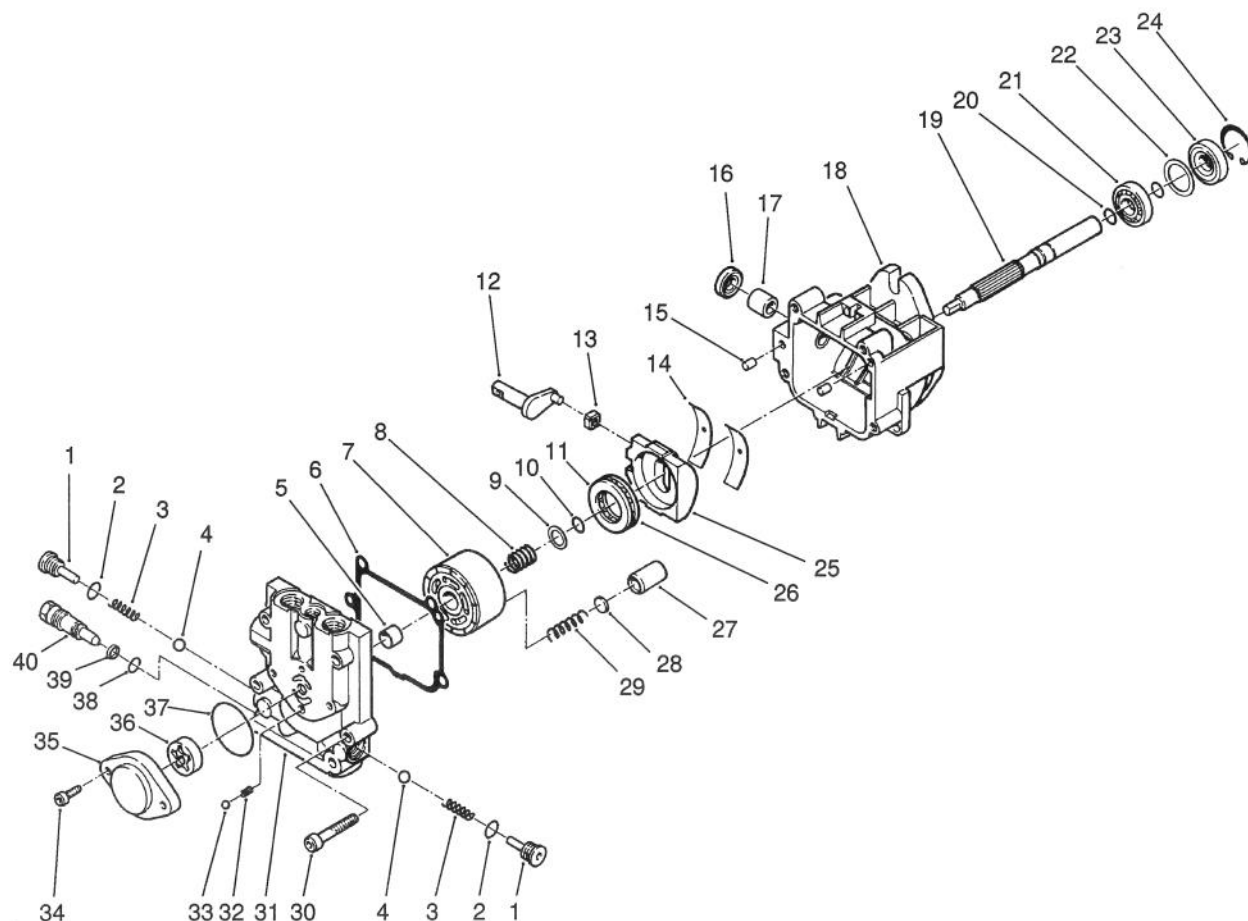


T-1236

HYDRAULIC PUMP ASSEMBLY NO. 82-8220

Ref. No.	Part No.	Description	No. Used
1	80-6120	Check Valve Kit (Incl. Ref. #2-4)	1
2		Seal - O-Ring	2
3		Spring	2
4		Ball	2
5		Journal - Bearing	1
6		Gasket - End Cap	1
7		Cylinder Block Kit (Incl. Ref. #8-10 & 27-29)	1
8		Spring	1
9		Washer	1
10		Ring - Retaining	1
11		Plate - Thrust	1
12		Arm - Trunion	1
13		Guide - Slot	1
14		Cradle - Bearing	2
15		Pin	2
16		Seal - Lip	1
17		Journal - Bearing	1
18		Housing - Assembly (Incl. Ref. #16 & 17)	1
19		Shaft	1
20		Ring - Retaining	2
21		Bearing - Ball	1
22		Spacer	1

Ref. No.	Part No.	Description	No. Used
23		Seal - Lip	1
24		Ring - Retaining	1
25		Swashplate Assembly	1
26		Roller - Thrust	1
27		Piston	5
28		Washer - Thrust	5
29		Spring - Piston	5
30		Screw	4
31		End Cap Assembly (Incl. Ref. #5)	1
32		Ball	1
33		Spring	1
34		Screw	2
35		Housing - Charge Pump	1
36		Gerotor Assembly	1
37		Seal - O-Ring	1
38		Seal - O-Ring	1
39		Ring - Back-Up	1
40		Valve - Bypass	1
*	80-6110	Charge Relief Valve Kit (Incl. Ref. #32-33)	1
*	80-6130	Overhaul Seal Kit (Incl. Ref. #6, 10, 16, 20, 23 & 37-39)	1

*Not Illustrated

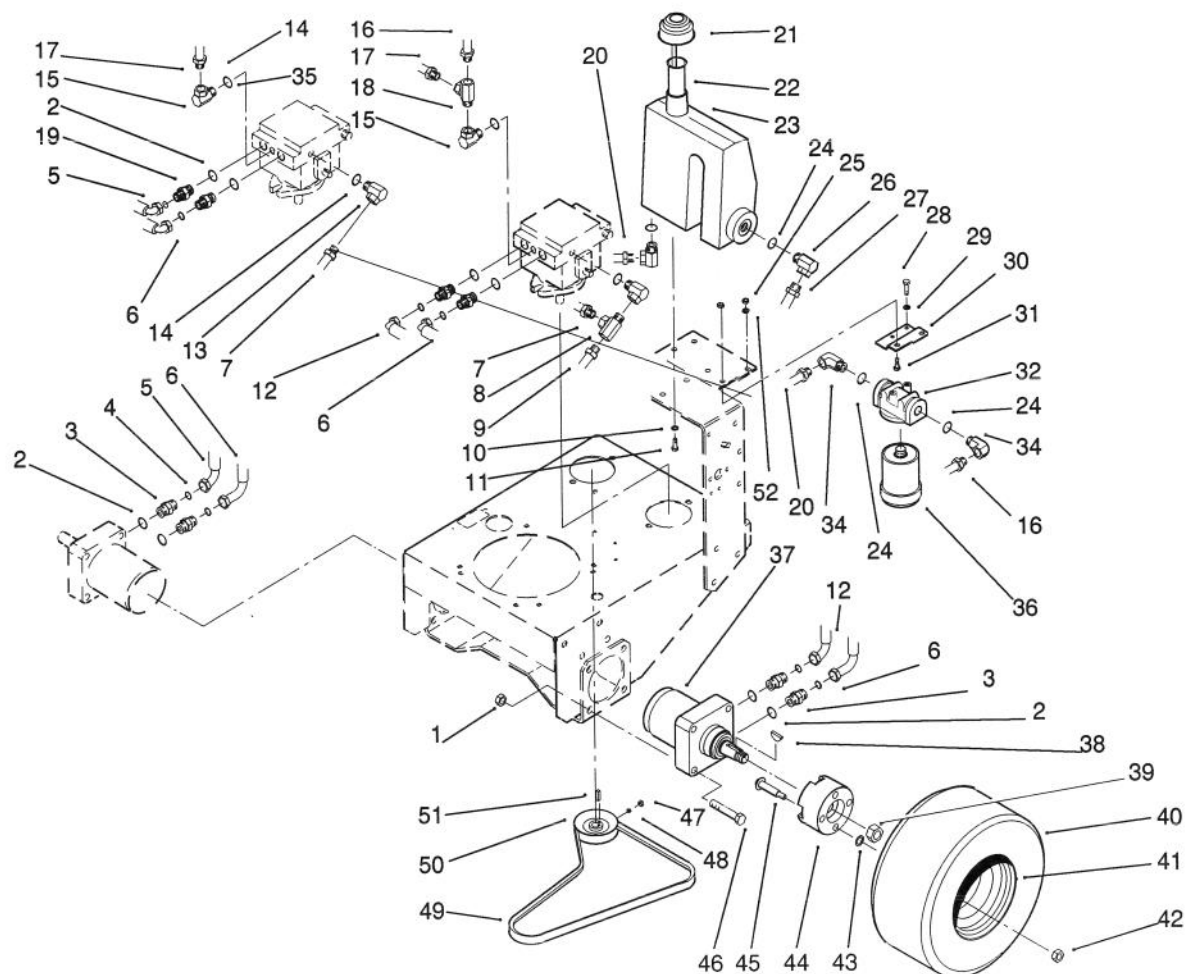


C-0735

WHEEL ASSEMBLY & HYDRAULIC COMPONENTS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3296-23	Nut	8	27	82-4193	Hose - Hyd.	1
2	340-80	"O"Ring	A/R	28	321-3	Screw	2
3	340-6	Fitting - Hyd.	4	29	3253-3	Washer - Lock	2
4	237302	"O"Ring	A/R	30	82-4140	Bracket - Filter	1
5	82-4540	Hose - Hyd.	2	31	322-3	Screw	2
6	82-4550	Hose - Hyd.	1	32	54-0100	Head Assembly - Filter	1
7	82-4201	Hose - Hyd.	1	34	354-117	Fitting -Hyd.	2
8	2815-15	Fitting - Hyd.	1	35	237-78	"O"Ring	A/R
9	82-4192	Hose - Hyd.	1	36	67-8110	Filter - Oil	1
10	3253-4	Washer - Lock	3	37	82-8230	Motor - Wheel	2
11	322-3	Screw	3	38	3257-8	Key - Woodruff	2
12	82-4560	Hose - Hyd.	1	39		Nut (Incl. w/Motor)	2
13	354-115	Fitting - Hyd.	2	40	231-111	Tire	2
14	237-42	"O"Ring	A/R	41	242-87	Wheel	2
15	354-116	Fitting - Hyd.	2	42	242-50	Nut - Lug	8
16	82-4180	Hose - Hyd.	1	43	32112-17	Nut - Push On	8
17	82-4170	Hose - Hyd.	1	44	82-3830	Hub - Wheel	2
18	2815-16	Fitting - Hyd.	1	45	3213-8	Screw - Hex. Hd.	8
19	340-4	Fitting Hyd.	4	46	325-11	Screw	8
20	82-4200	Hose - Hyd.	1	47	3218-1	Nut	4
21	76-0200	Cap Assembly - Oil	1	48	3245-5	Screw - Set	4
22	29-0590	Screen - Filler	1	49	82-4110	"V"Belt	1
23	82-3910	Reservoir - Oil	1	50	82-4380	Pulley - Pump	2
24	237-79	"O"Ring	A/R	51	80-6090	Key	2
25	3296-29	Nut	2	52	3256-2	Washer	1
26	354-118	Fitting - Hyd.	2	*	232-37	Valve stem	2

*Not Illustrated

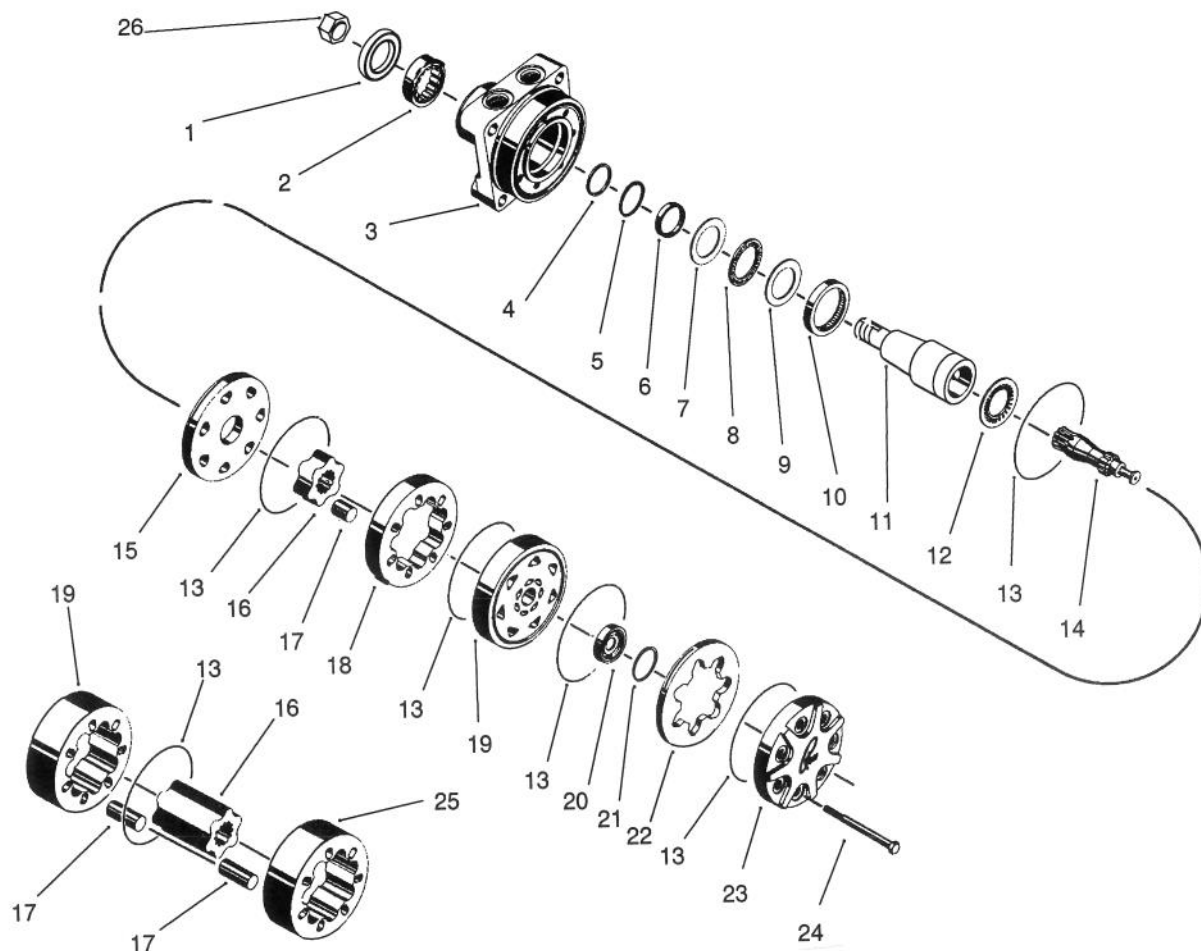


C-0737

TRACTION DRIVE MOTOR (Torqumotor)

Ref. No.	Part No.	Description	No. Used
1		Seal	1
2		Bearing	1
3		Housing	1
4		Washer - Back Up	1
5		Washer - Back Up	1
6		Seal	1
7		Washer - Thrust	1
8		Bearing - Thrust	1
9		Washer - Thrust	1
10		Bearing - Inner	1
11		Coupling - Shaft	1
12		Bearing - Thrust	1
13		"O"Ring	5
14		Link - Drive	1

Ref. No.	Part No.	Description	No. Used
15		Plate Wear	1
16		Rotor	1
17		Vane	7
18		Stator	
19		Manifold	1
20		Commutator	1
21		Seal - Commutator	1
22		Commutator - Ring	1
23		Cover - End	1
24		Bolt - Special	A/R
25		Stator Half	
26		Nut	1
*	SK000090	Kit - Seal (Incl. Ref. #1,4,6,13 & 20)	1

*Not Illustrated

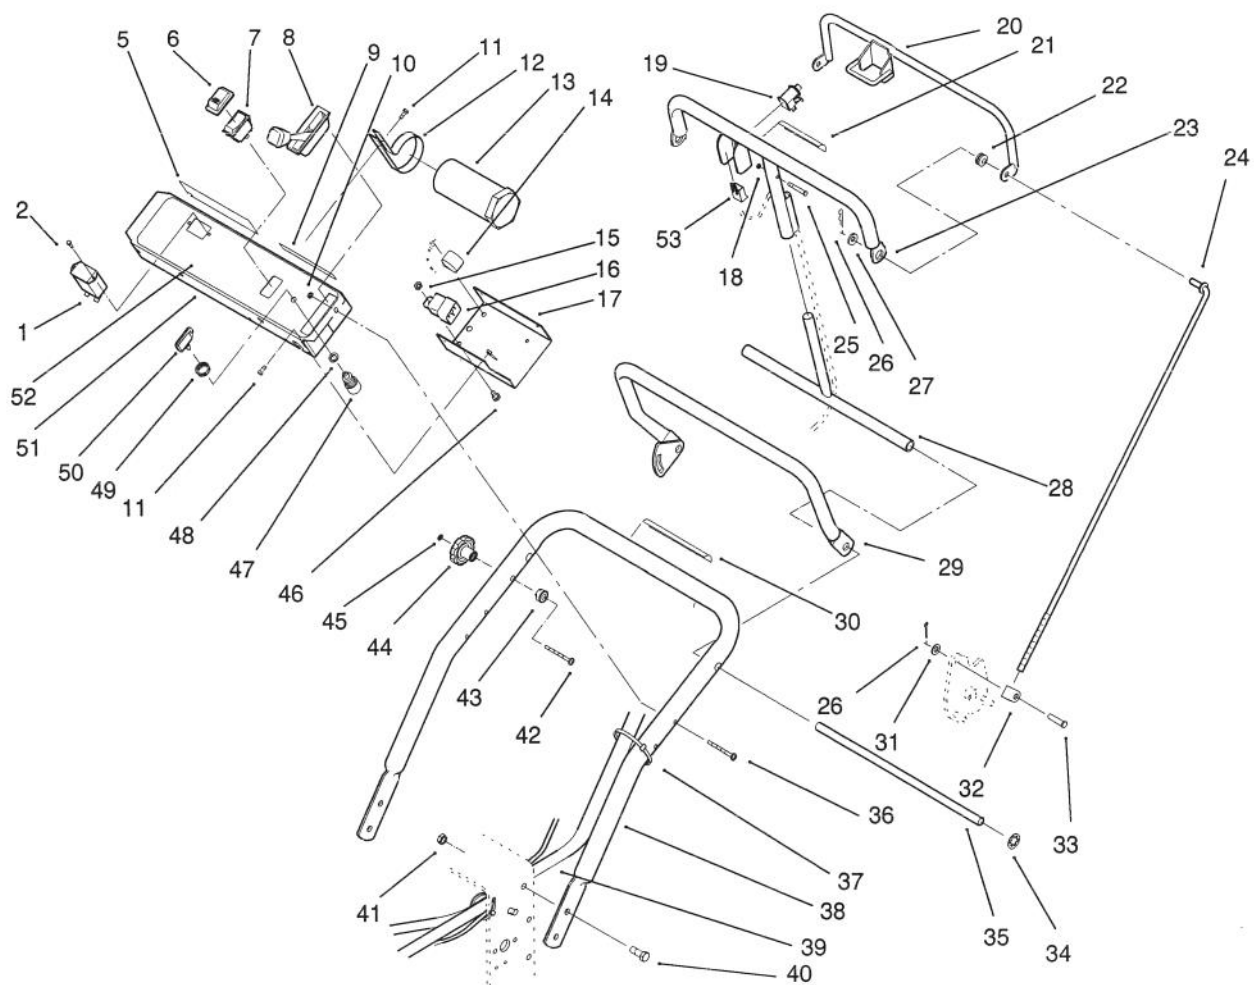


C-0769

HANDLE / CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	75-6820	Meter - Hour	1
2	32144-18	Screw - Hex. Hd.	2
5	71-1280	Decal - Danger	1
6	82-3820	Boot - Switch	1
7	82-2300	Switch - Clutch	1
8	74-0630	Control - Throttle	1
9	65-3090	Decal - Instructions	1
10	3296-2	Nut - Lock	4
11	32104-76	Screw	4
12	2412-120	"R"Clamp	2
13	74-0720	Tube - Manual	1
14	82-3850	Module	1
15	3296-42	Nut - Lock	2
16	63-7590	Relay	1
17	57-5811	Panel - Bottom	1
18	3296-2	Nut	1
19	82-2190	Switch - Bail	1
20	82-7680	Bail Assembly	1
21	82-2610	Decal - Control Bar	1
22	237-141	Grommet	2
23	82-7690	Control Bar Assembly	1
24	82-7631	Rod - Control	2
25	32105-1	Screw - Hex. Hd.	1
26	3290-307	Pin - Cotter	4
27	3256-24	Washer - Flat	2
28	82-3940	Pivot Control Assembly	1

Ref. No.	Part No.	Description	No. Used
29	82-4300	Handle Assembly	1
30	82-4590	Decal - Caution	1
31	3256-23	Washer - Flat	2
32	74-0521	Fitting - Rod	2
33	283-6	Pin - Clevis	2
34	32151-80	Ring - Push On	2
35	74-0470	Rod - Pivot	1
36	32105-14	Screw - Hex. Hd.	4
37	3290-378	Tie - Cable	2
38	67-6451	Handle - Upper	1
39	82-4511	Wire Harness (Ref.)	1
40	3234-11	Screw - Hex. hd.	4
41	32128-21	Nut - Lock	4
42	3290-26	Bolt Carriage	1
43	82-3840	Spacer - Latch	1
44	19-4050	Knob - Handle	1
45	32112-18	Retainer - Bolt	1
46	321-2	Screw - Hex. hd.	2
47	23-0660	Switch - Ignition	1
48	3234-5	Washer - Lock	1
49	218-461	Nut	1
50	63-8360	Key	1
51	82-7721	Panel - Control	1
52	82-2181	Decal - Control Panel	1
53	218-595	Body	1

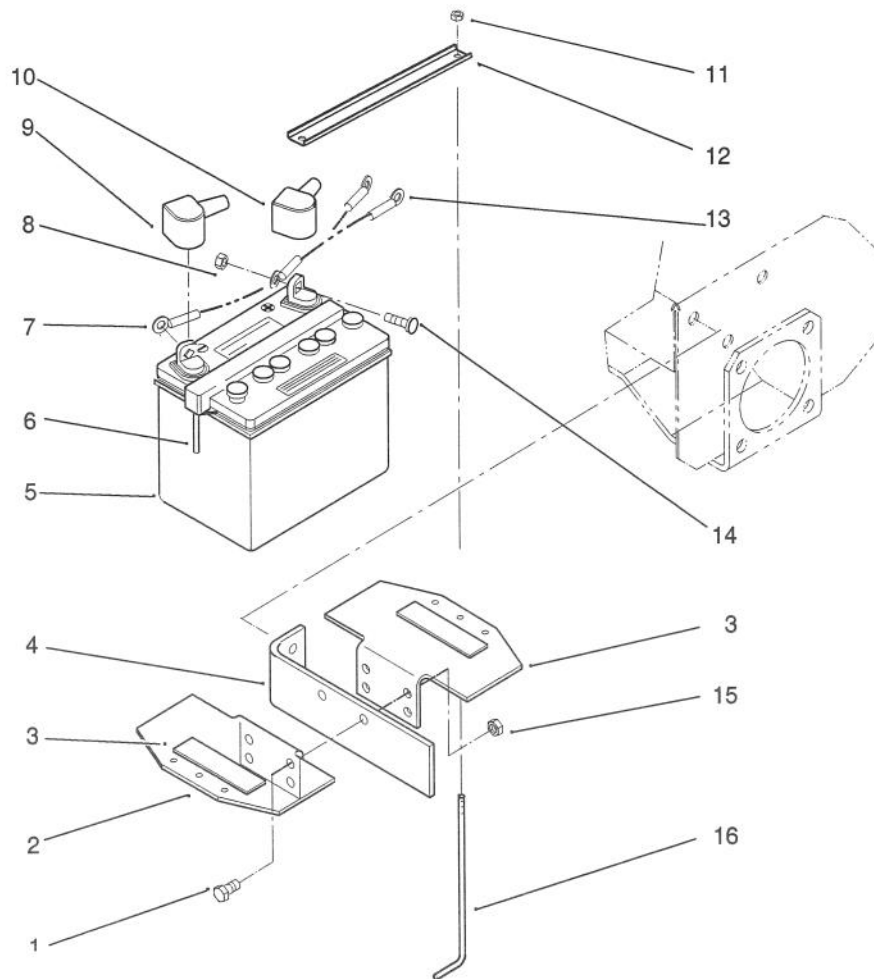


C-0726

BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-9	Screw - Hex. Hd.	2
2	83-4830	Holder - Battery	2
3	51-4210	Pad - Battery Mount	2
4		Frame - Carrier (Ref.)	
5	49-7030	Battery	1
6	68-3810	Tube -Vent	1
7	54-3093	Cable - Battery	1
8	32149-1	Nut	2

Ref. No.	Part No.	Description	No. Used
9	7470980	Boot - Terminal	1
10	77-0981	Boot - Terminal	1
11	3296-42	Nut - Lock	2
12	54-2950	Strap - Battery	1
13	28-3893	Cable - Battery	1
14	3230-1	Bolt - Carriage	2
15	3296-39	Nut - Lock	2
16	12-5950	Rod - Battery Support	2

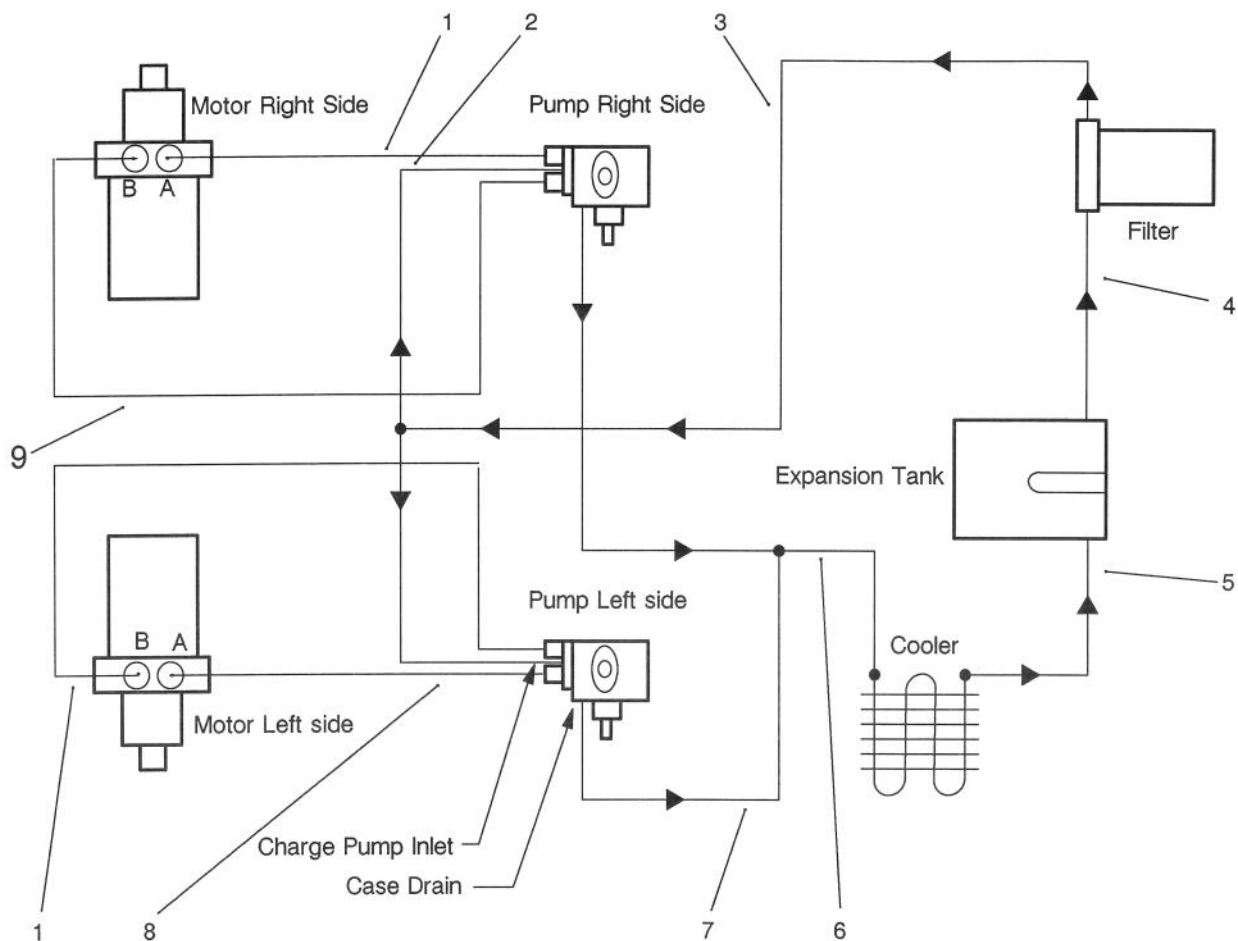


C-0708


HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-4550	Hose Assembly	2	6	82-4192	Hose Assembly	1
2	82-4170	Hose Assembly	1	7	82-4201	Hose Assembly	1
3	82-4180	Hose Assembly	1	8	82-4560	Hose Assembly	1
4	82-4200	Hose Assembly	1	9	82-4540	Hose Assembly	1
5	82-4193	Hose Assembly	1				

Group 1

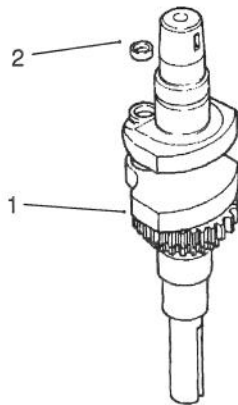

Group 3

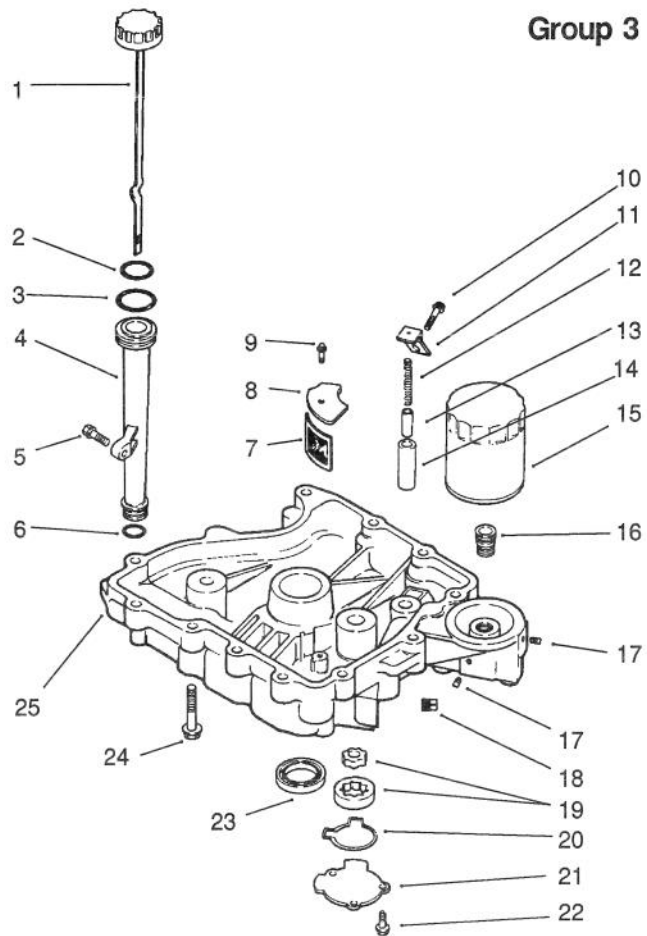


C-0770

ENGINE KOHLER MODEL NO. CV14 S-1429

Ref. No.	Part No.	Description	No. Used
1	12 014 02	Crankshaft Group 1	1
2	12 139 0	Crankshaft Assembly Plug	1
Oil Pan / Lubrication Group 3			
1	12 038 01	Dipstick Assembly	1
2	12 153 01	"O"Ring - Dipstick	1
3	12 153 02	"O"Ring - Upper Tube	1
4	12 123 04	Tube - Oil Fill	1
5	SM-0545020	Screw - Oil Fill Tube	1
6	12 153 01	"O"Ring - Lower Tube	2
7	12 162 02	Screen - Oil Pick Up	1
8	12 096 03	Cover - Oil Screen	1
9	SM-0545016	Screw	1
10	SM-1039025	Screw	1
11	12 126 02	Bracket - Oil Pump Relief Valve	1

Ref. No.	Part No.	Description	No. Used
12	12 089 03	Spring - Oil Pump Relief Valve	1
13	12 462 01	Piston - Oil Pump Relief Valve	1
14	12 208 01	Body - Oil Pump Relief Valve	1
15	52 050 02	Filter - Oil	1
16	12 136 01	Adapter - Oil Filter	1
17	X-75-1	Plug - 1/8 N.P.T.F.	2
18	X-75-10	Plug - 3 /8 N.P.T.F.	2
19	12 393 01	Pump -Oil Assembly	1
20	12 032 04	"O"Ring - Pump Cover	1
21	12 096 02	Cover - Oil Pump	1
22	SM-0545016	Screw	3
23	12 032 03	Seal - Oil (P.T.O.End)	1
24	SM-0839045	Screw - Oil Pan	11
25	12 199 09	Pan - Oil	1

Group 2

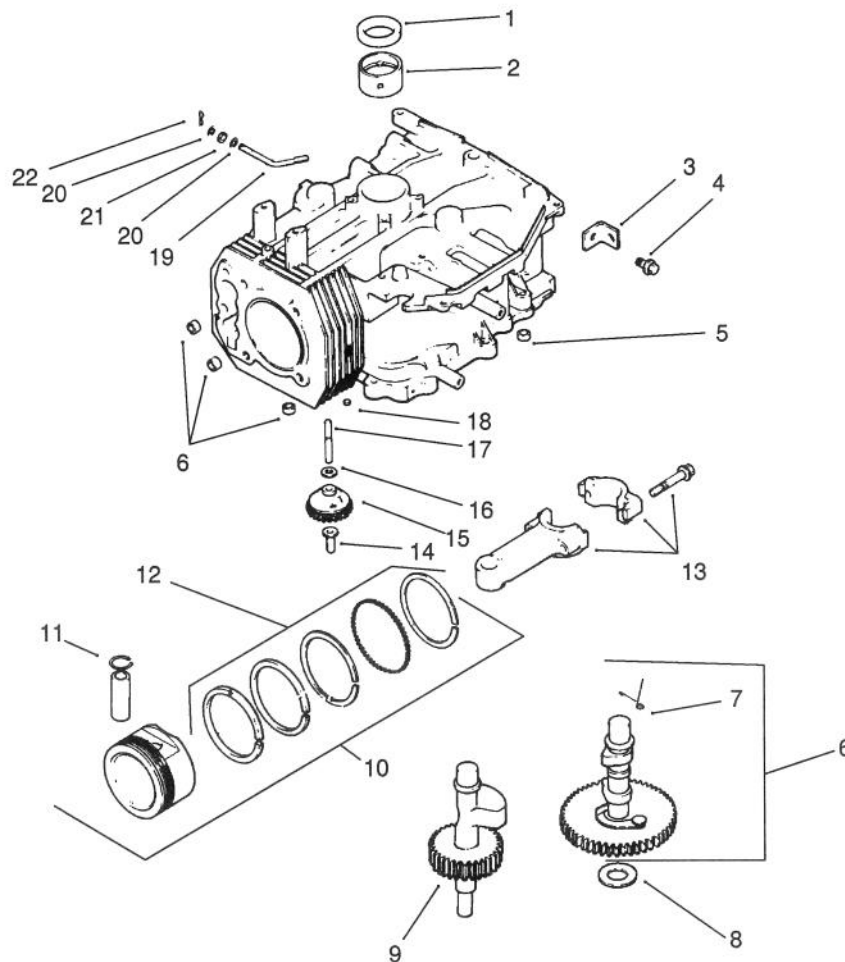


C-0771

ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		Crankcase Group 2		10	12 847 01	Piston W/Ring Set (Std.)	1
1	12 032 03	Seal - Crankshaft	1	*	12 847 02	Piston W/Ring Set (.25)	1
2	12 030 01	Bearing - Crankshaft Flywheel End (Std.)	1	*	12 847 03	Piston W/Ring Set (.50)	1
*	12 030 02	Bearing - Crankshaft (.25)	1	11	12 018 02	Retainer - Piston Pin	2
*	12 030 03	Bearing - Crankshaft (.50)	1	12	12 108 01	Ring Set (Std.)	1
3	12 445 02	Strap - Lifting	1	*	12 108 02	Ring Set (.25)	1
4	SM-0839025	Screw - Lifting Strap	1	*	12 108 03	Ring Set (.50)	1
5	12 380 03	Dowel - Locating	4	13	12 067 01	Connecting Rod (Std.)	1
6	12 010 01	Camshaft Assembly	1	*	12 067 02	Connecting Rod (.25)	1
7	12 089 18	Spring - Actuating	1	14	12 380 01	Pin - Governor Regulating	1
8	12 422 08	Shim - Camshaft	1	15	12 043 05	Gear - Governor Assembly	1
*	12 422 02	Shim - Camshaft	A/R	16	SM-0631005	Washer - Governor Gear	1
*	12 422 10	Shim - Camshaft	A/R	17	12 144 02	Shaft - Governor Gear	1
*	12 422 11	Shim - Camshaft	A/R	18	52 139 09	Plug - Cap	1
*	12 422 12	Shim - Camshaft	A/R	19	12 144 01	Shaft - Governor Cross	1
*	12 422 06	Shim - Camshaft	A/R	20	SM-0631015	Washer - Governor Shaft	1
*	12 422 07	Shim - Camshaft	A/R	21	12 032 01	Seal - Cross Shaft	1
9	12 422 04	Shaft - Balance	1	22	12 380 04	Pin - Governor Hitch	1
				*	12 522 01	Short Block	1

*Not Illustrated

Group 4

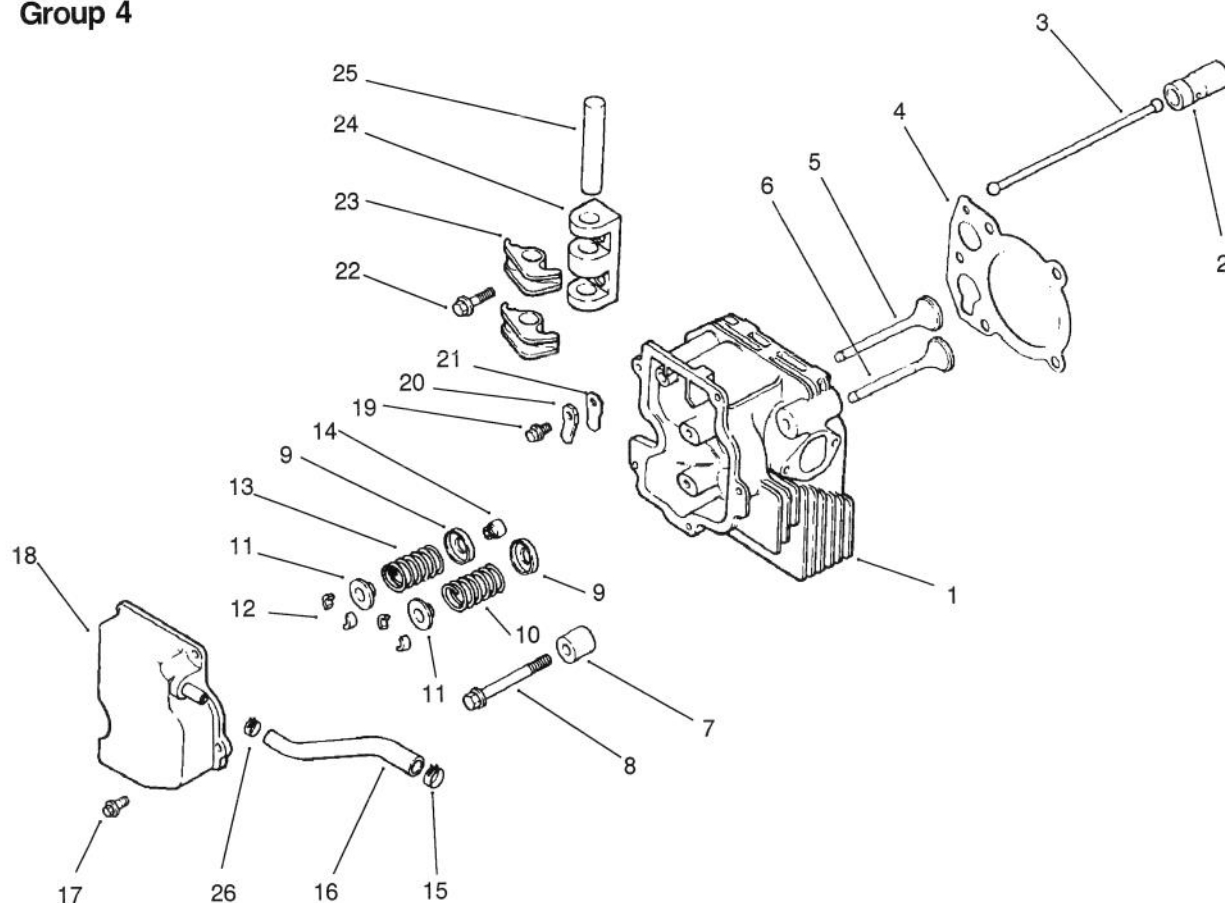


C-0772

ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used
		Cylinder Head / Valve / Breather - Group 4	
1	12 318 01	Cylinder Head	1
*	12 755 02	Kit Cylinder Head	1
2	12 351 01	Lifter - Valve	2
3	12 441 01	Rod - Push	2
4	12 041 04	Gasket - Cylinder Head	1
5	12 017 01	Valve - Intake (Std.)	1
	12 017 02	Valve - Intake (.25)	1
6	12 016 01	Valve - Exhaust (Std)	1
	12 016 02	Valve - Exhaust (.25)	1
	12 112 04	Spacer - Head Bolt	1
8	SM-1040080	Screw - Cylinder Head	5
9	52 018 01	Retainer - Spring	2
10	12 089 15	Spring - Valve, Exhaust	1
11	12 173 01	Cap - Valve Spring	2

Ref. No.	Part No.	Description	No. Used
12	12 755 03	Kit - Retainer	2
13	12 089 13	Spring - Valve, Intake	1
14	12 032 02	Seal - Valve Stem	1
15	X-426-9	Clamp - Hose	2
16	12 326 03	Hose - Breather	1
17	SM-0645020	Screw - Valve Cover	3
18	12 096 07	Cover - Valve W/Nipple	1
19	SM-0545010	Screw - Breather Reed	1
20	12 018 01	Retainer - Breather Reed	1
21	12 402 01	Reed - Breather	1
22	SM-0642025	Screw - Rocker Bridge	2
23	12 189 01	Arm - Rocker	2
24	12 126 05	Bridge - Rocker Arm	1
25	12 144 03	Shaft - Rocker Arm	1
26	X-426-3	Clamp - Hose	1

Group 5

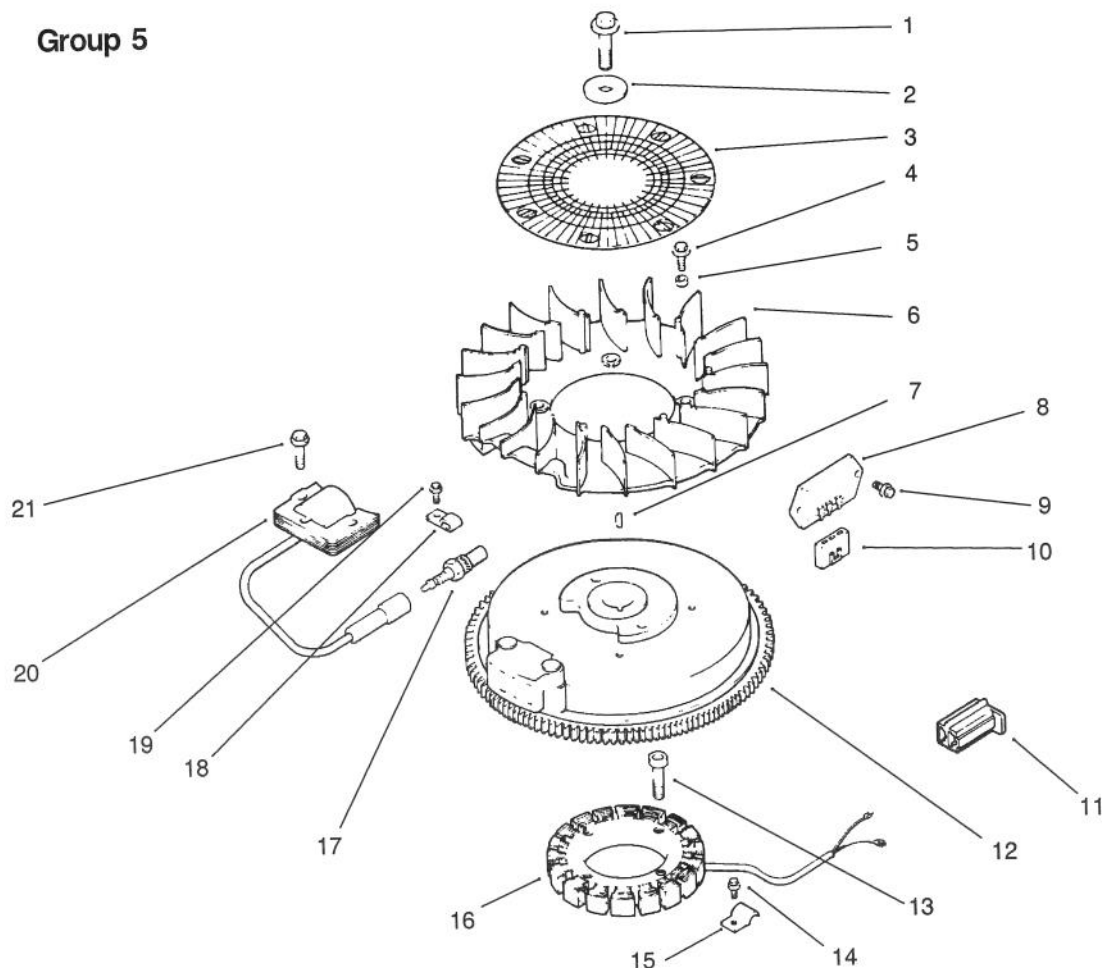


C-0773

ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		Ignition / Electrical Group 5					
1	M-1040045	Screw - Flywheel	1	12	12 025 08	Flywheel Assembly	1
2	12 468 03	Washer - Flywheel	1	13	M-0548025	Screw - Stator	4
3	12 162 01	Screen - Grass	1	14	SM-0545010	Screw - Stator Harness	1
4	SM-0651016	Screw - Fan	4	15	12 154 02	Clip - Stator Harness	1
5	12 112 01	Spacer - Fan	4	16	41 085 07	Stator - 15 Amp.	1
6	12 157 02	Fan	1	17	12 132 02	Spark Plug	1
7	X-42-15	Key	1	18	X-728-1	Clip - Kill Lead	1
8	12 403 09	Rectifier - Unregulator	1	19	SM-0545010	Screw - Lead Clip	1
9	M-0651016	Screw - Regulator	2	20	12 584 01	Module - Ignition	1
10	236602	Connector - Regulator	1	21	SM-0545020	Screw - Ignition Module	2
11	41 155 03	Connector	1	*	25 518 05	Lead - Black, Rectifier to Connector(5"-14 Gauge	1
				*	12 518 01	Lead - White, Ground to Kill	1

* Not Illustrated.

Group 6

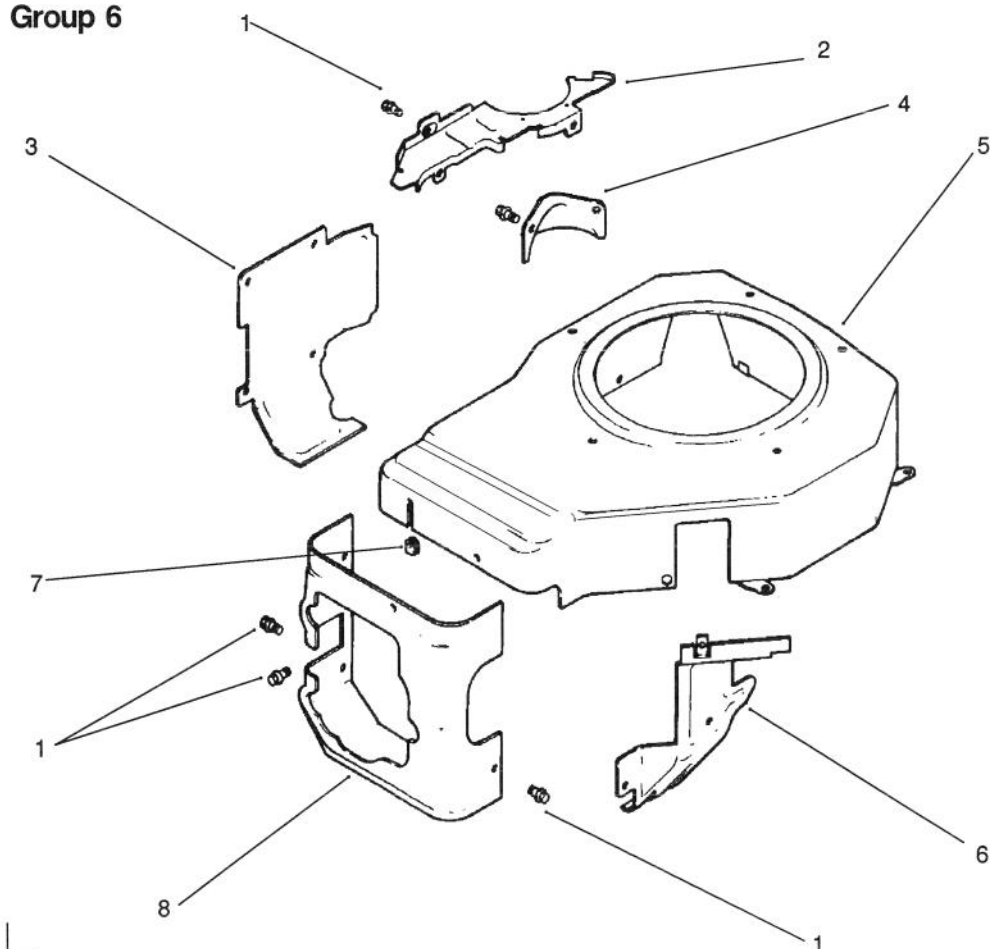

C-0774


ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used
		Blower Housing & Baffle Group 6	
1	SM-0545010	Screw	14
2	12 146 07	Plate - Blower Housing	1
3	12 063 01	Baffle - Cylinder Barrel	1
4	12 096 01	Cover - Starter	1

Ref. No.	Part No.	Description	No. Used
5	12 027 09	Cover - Housing	1
6	12 063 05	Baffle - Carburetor	1
7	12 313 03	Grommet	1
8	12 063 03	Baffle - Cylinder Head	1
*	133 14	Decal - H.P.	1

* Not Illustrated.

Group 7

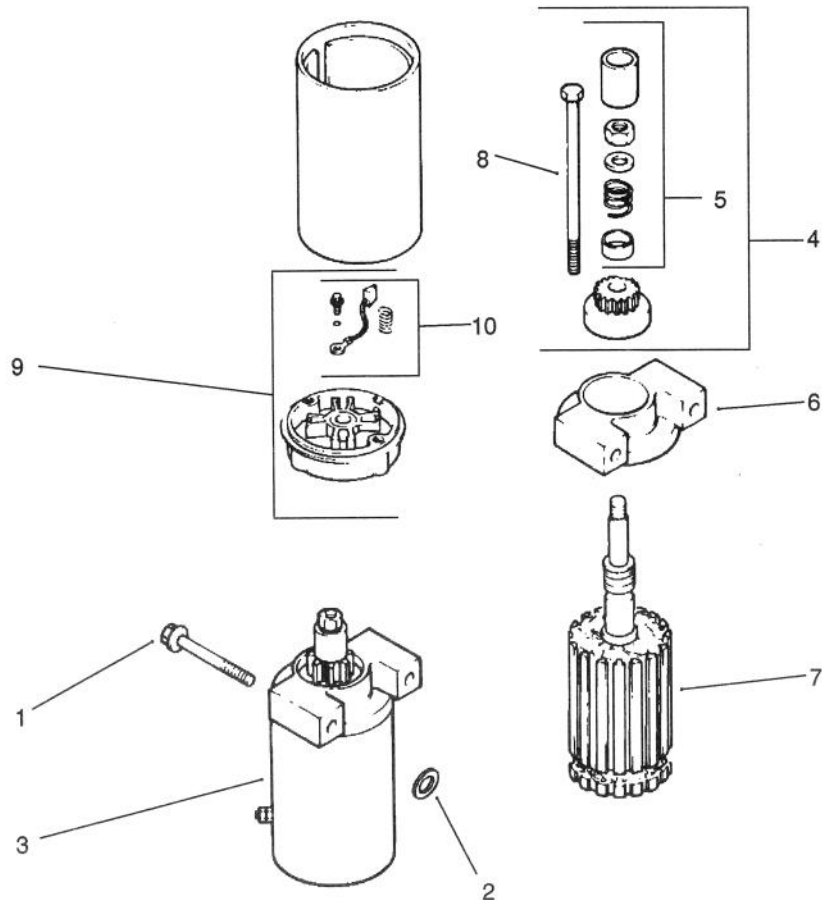


C-0776

ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		Starting System Group 7		6	12 277 01	Cap - Drive End	1
1	SM-0839065	Screw	5	7	12 170 02	Armature	1
2	12 468 01	Washer	2	8	12 086 02	Screw - Flange	1
3	12 098 06	Starter (Incl. Ref.#4-10)	1	9	12 243 -03	Cap - Commutator End	1
4	12 755 12	Kit - Drive (Incl. Ref.#5)	1	10	52 755 15	Kit - Brush	1
5	12 755 06	Kit	1	*	52 357 01	Lubricant	1

* Not Illustrated.

Group 8

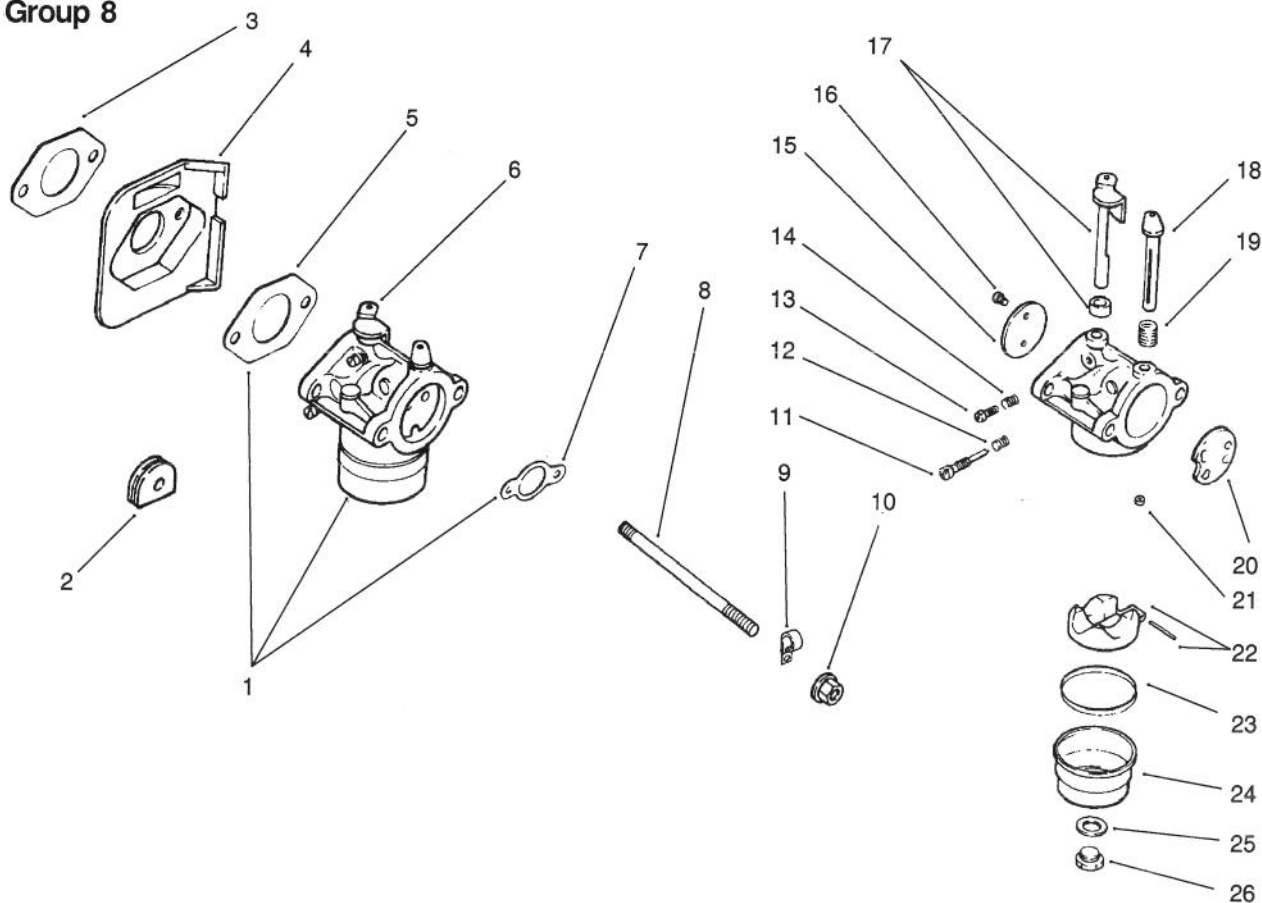

C-0781


ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used
Fuel System Group 8			
1	12 853 01	Kit - Carburetor	1
2	12 313 01	Grommet	1
3	12 041 01	Gasket - Air Cleaner	1
4	12 265 01	Deflector - Heat	1
5	12 053 01	Carburetor Assembly(Ref.)	1
6	12 041 01	Gasket - Carburetor	1
7	12 041 02	Gasket - Air Cleaner	1
8	M-0629122	Stud - Carburetor	2
9	48 154 01	Clip - Cable	1
10	SM-0641060	Nut - Carburetor	2
11	12 368 01	Needle - Idle	1
12	12 089 09	Spring - Idle	1
13	12 086 04	Screw - Idle	1


Ref. No.	Part No.	Description	No. Used
14	12 089 09	Spring -Idle	1
15	12 146 03	Plate - Throttle	1
16	25 086 27	Screw - Throttle Plate	2
17	12 144 09	Shaft Assembly-Throttle	1
18	12 144 08	Shaft - Choke	1
19	12 089 10	Spring - Choke Return	1
20	12 146 02	Plate - Choke	1
21	12 337 01	Jet - Main	1
22	12 757 02	Kit - Float	1
23	12 041 05	Gasket - Bowl	1
24	12 104 01	Bowl - Fuel	1
25	12 041 06	Gasket - Bowl	1
26	12 086 05	Screw - Bowl	1
*	12 757 01	Kit - Carburetor Repair	1
*	12 755 09	Kit - Kit High Altitude Jet	1

* Not Illustrated.

Group 9

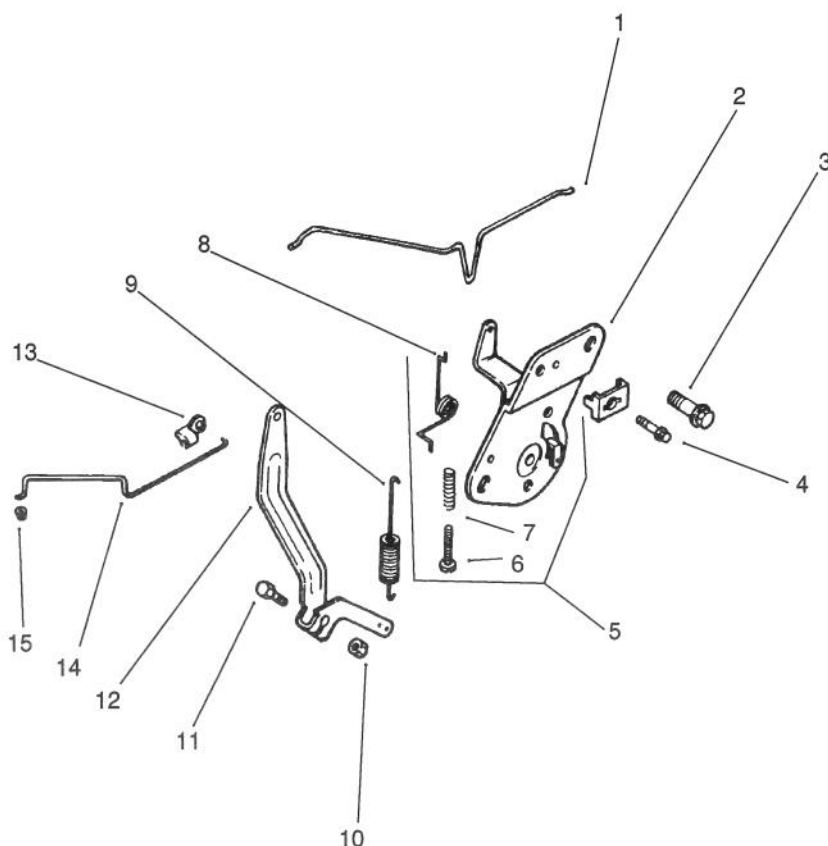

Group 10

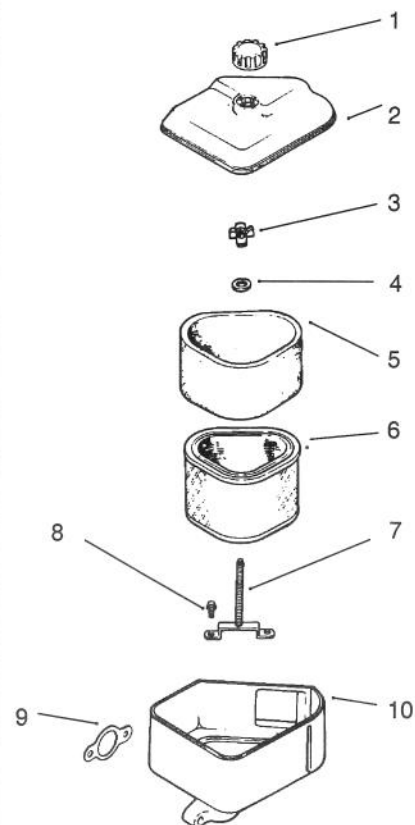

C-0775


ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used
Engine Control Group 9			
1	12 079 03	Linkage - Choke	1
2	12 237 01	Clamp - Cable	1
3	SM-0645020	Screw - Hex. Hd.	2
4	SM-0545016	Screw - Cable Clamp	1
5	12 536 01	Control - Speed (Incl. Ref.#6-8)	1
6	SM-0443025	Screw	1
7	12 089 11	Spring	1
8	12 089 04	Spring - Choke	1
9	12 089 20	Spring - Governor	1
10	SM-0641060	Nut - Governor	1
11	SM-0642025	Screw - Governor	1
12	12 090 05	Lever - Governor	1
13	25 158 09	Bushing - Black Retainer	1

Ref. No.	Part No.	Description	No. Used
14	12 079 01	Linkage - Throttle	1
15	25 158 08	Bushing - Natural, Linkage	1
AIR Intake / Filtration Group 10			
1	12 341 01	Knob - Air Cleaner Cover	1
2	12 096 06	Cover - Air Cleaner	1
3	12 100 01	Nut - Wing	1
4	X-25-63	Washer - Flat	1
5	12 083 08	Precleaner - Element	1
6	12 083 05	Element - Air Cleaner	1
7	12 072 03	Stud - Mounting Plate	1
8	12 086 01	Screw - Mounting Plate	1
9	12 041 02	Gasket - Air Cleaner	1
10	12 094 01	Base - Air Cleaner	1
*	12 113 04	Decal - Air Cleaner	1

* Not Illustrated.

Group 11

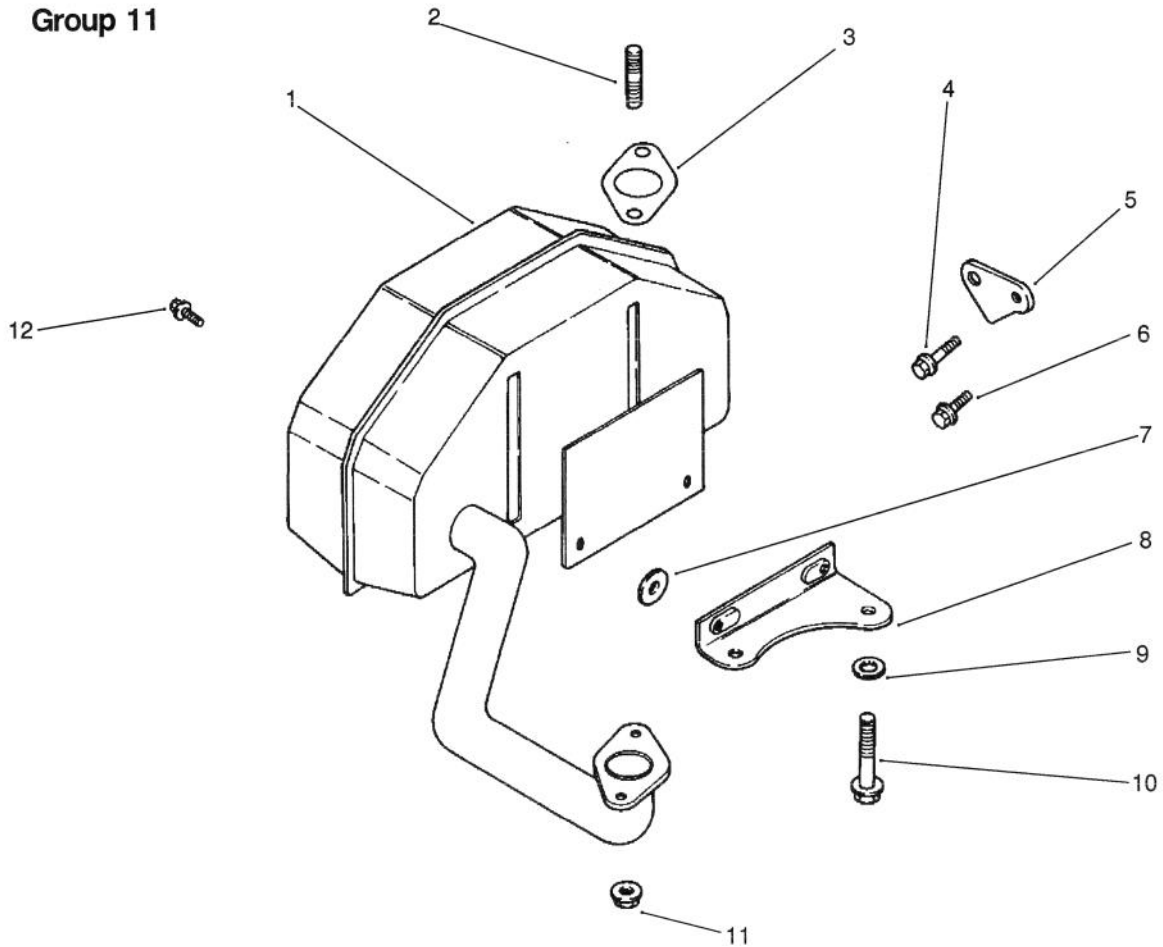

C-0782

ENGINE KOHLER MODEL NO. CV14 S-1429(Continued)

Ref. No.	Part No.	Description	No. Used
Exhaust Group 11			
1	12 068 03	Muffler	1
2	M-0829036	Stud - Exhaust Manifold	2
3	12 041 03	Gasket - Exhaust	1
4	SM-0645025	Screw - Lifting Strap	1
5	12 445 01	Strap - Lifting	1

Ref. No.	Part No.	Description	No. Used
6	SM-0645020	Screw - Valve Cover	1
7	X-25-52	Washer - Flat	1
8	12 126 39	Bracket - Muffler	1
9	12 468 01	Washer - Flat	1
10	M-0840050	Screw	1
11	SM-0841080	Nut - Muffler	2
12	M-0650012	Screw	2
*	12 755 01	Gasket Set	1

* Not Illustrated.

AL-910603