



22in Recycler[®] Lawn Mower

Model No. 20075 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Side Chute and Rear Door Assembly	 3	Engine Assembly No. 1 Tecumseh LV195EA-362085D	 12
Housing Assembly No. 112-8854	 4	Engine Assembly No. 2 Tecumseh LV195EA-362085D	 14
Front Axle Assembly	 5	Carburetor Assembly No. 640350 Tecumseh LV195EA-362085D	 16
Rear Axle and Transmission Assembly	 6	Recoil Starter Assembly No. 590702 Tecumseh LV195EA-LV195EA-362085D	 17
Transmission Assembly No. 106-3956	 7	Attachments and Accessories List	 18
Engine Assembly	 8		
Handle Assembly	 9		
Electrical Assembly	 10		
Rear Bag Assembly	 11		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|--|----------------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain from your local Tecumseh dealer | ❹ Included in Repair Kit 632760B |

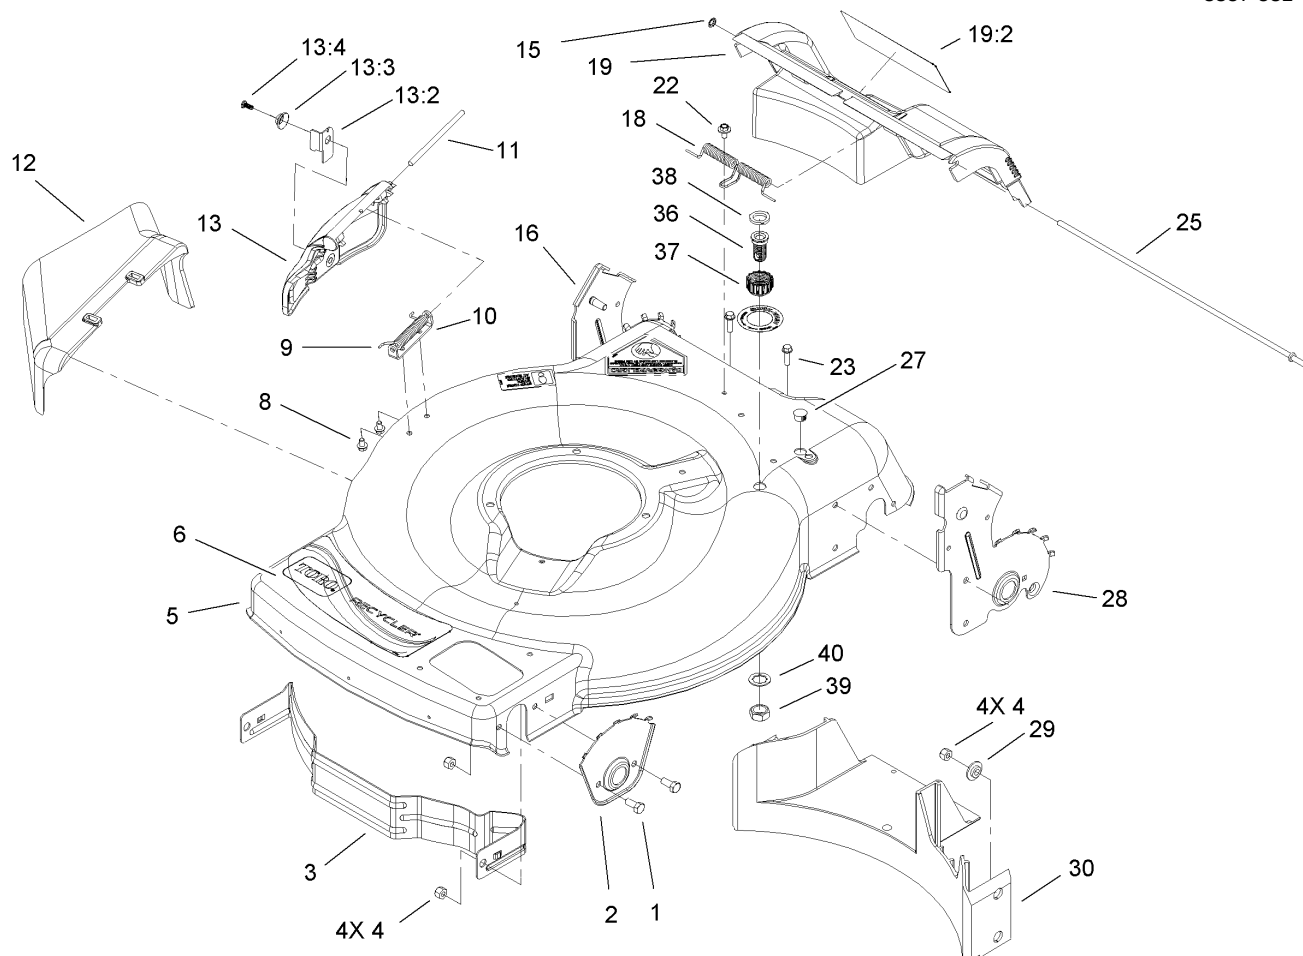


Deck, Side Chute and Rear Door Assembly

Ref	Part No.	Qty.	Description
1	322-3	4	Screw-HH
2	105-1808-03	2	Plate-HOC, Front
3	104-8694-03	1	Baffle-Front
4	3296-29	8	Nut-Lock, NI
5	112-8854	1	BBC Housing ASM
6	114-0321	1	Decal-Deck
8	99-8445	2	Screw-HWH
9	99-5293	1	Spring-Torsion
10	112-6416	1	Bracket-Cover
11	99-5291	1	Rod-Cover
12	105-3028	1	Chute-Discharge, Side
13	106-8376	1	Discharge Door ASM
13:2	107-0795	1	Latch-Door
13:3	107-7456	1	Cap-Door
13:4	107-7461	1	Screw-Plastite
15	32112-6	1	Nut-Push
16	112-6441	1	8 Inch RH Height-Of-Cut Plate ASM
18	105-3032	1	Spring-Door, Rear
19	112-8864	1	Rear Door ASM
19:2	105-1295	1	Decal-Warning
22	46-6810	1	Screw And Washer ASM
23	46-8091	2	Screw-HWH
25	105-1827	1	Rod-Pivot, Rear Door

Ref	Part No.	Qty.	Description
27	104-9369	1	Plug-Dome
28	112-6443	1	8 Inch LH Height-Of-Cut Plate ASM
29	105-3006	4	Washer-Stepped
30	105-1834	1	Baffle-Rear
36	112-6400	1	Port-Washout
37	112-6401	1	Coupling-Hose, Washout Port
38	112-6438	1	Washer-Seal, Washout Port
39	3218-6	1	Nut-Jam
40	3254-5	1	Washer-Tooth

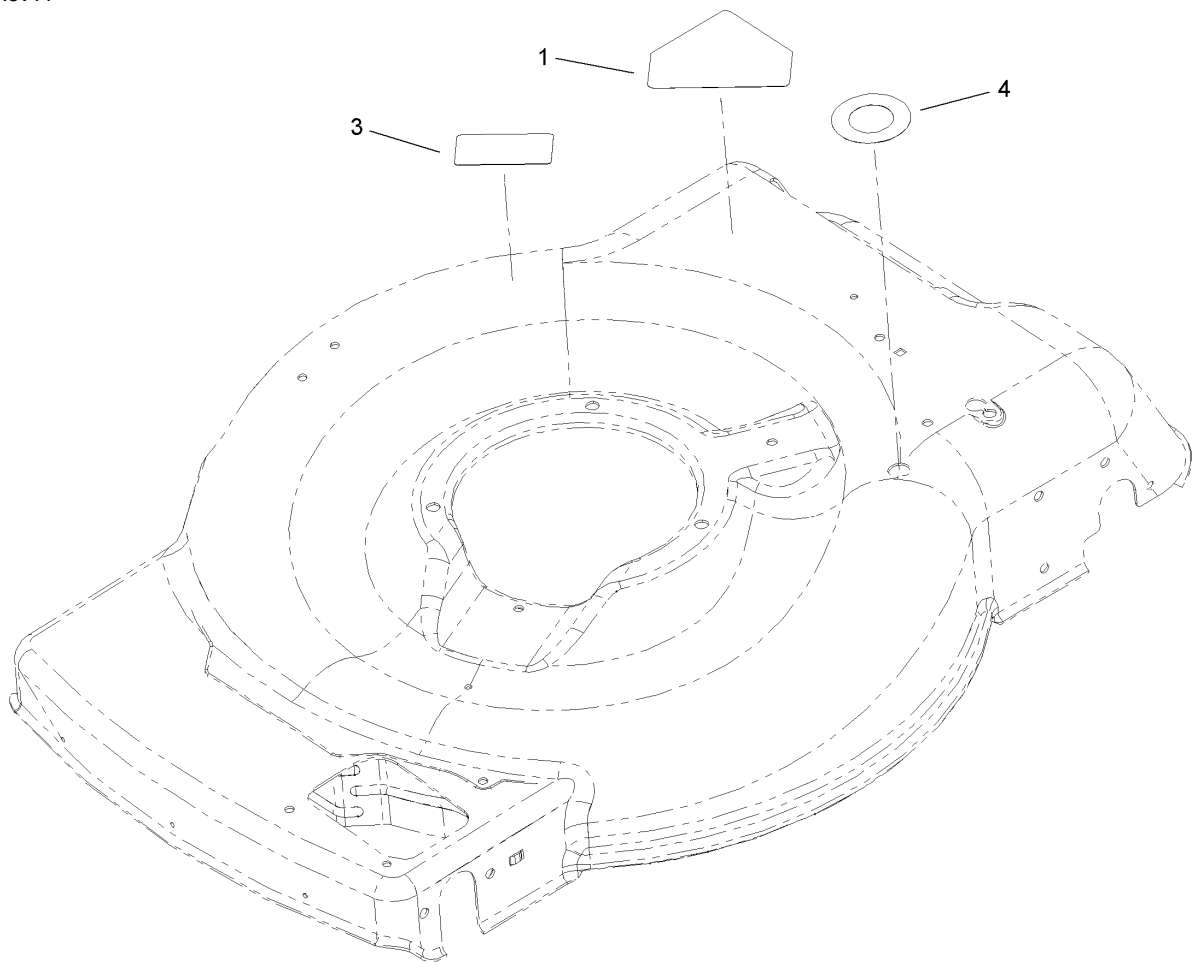
**Housing Assembly No. 112-8854**

Ref	Part No.	Qty.	Description
1	94-8072	1	Decal-Danger
3	108-8117	1	Decal-Placement, Foot
4	112-8867	1	Decal-Washout Port, Trilingual

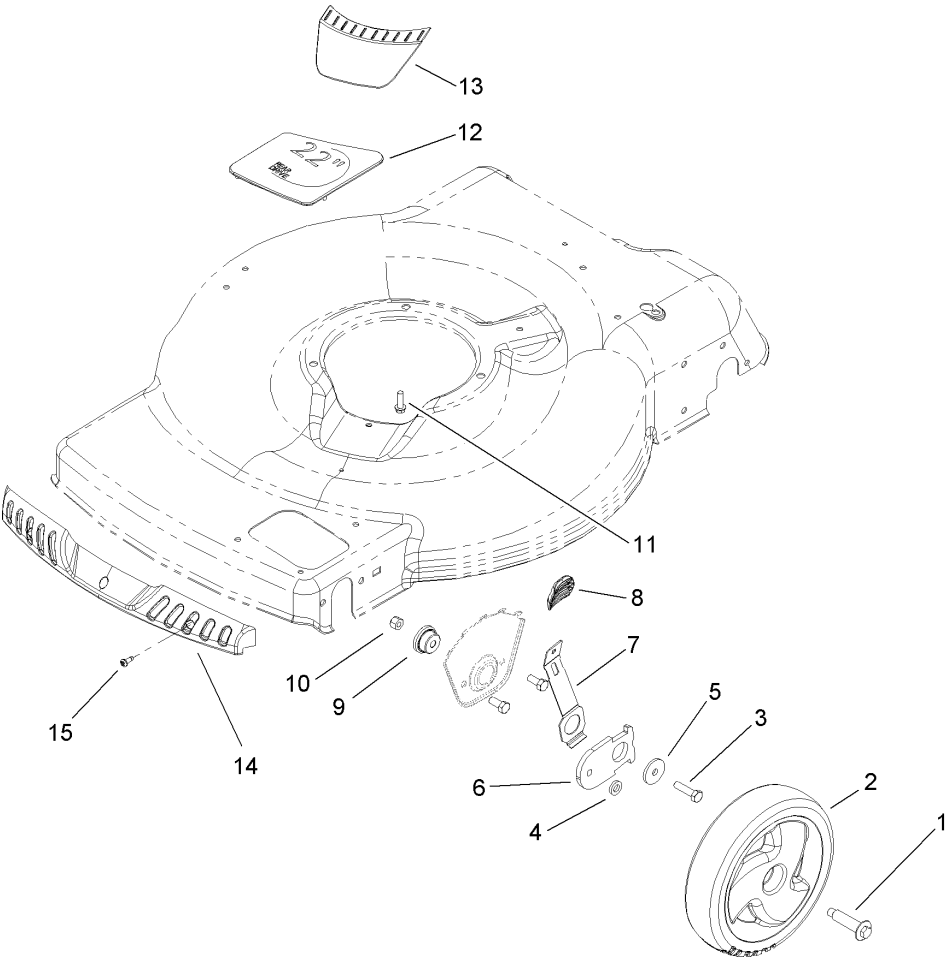

Front Axle Assembly


Ref	Part No.	Qty.	Description				
1	614650	2	Bolt-Shoulder				
2	105-1814	2	Wheel ASM				
3	322-6	2	Screw-HH				
4	110-7466	2	Washer-Bolt, Wheel				
5	105-3048	2	Washer-Flat				
6	105-1807	2	Arm-Pivot, Front				
7	105-1809	2	Arm-Spring				
8	105-3042	2	Knob-Lever, HOC				
9	105-1818	2	Bushing-Mount, HOC				
10	3296-29	2	Nut-Lock, NI				
11	46-8091	1	Screw-HWH				
12	105-3004	1	Cover-Cutout				
13	105-3005	1	Cover-Belt Opening				
14	104-9359	1	Bumper-Mower				
15	105-6849	3	Screw-Thread Forming				

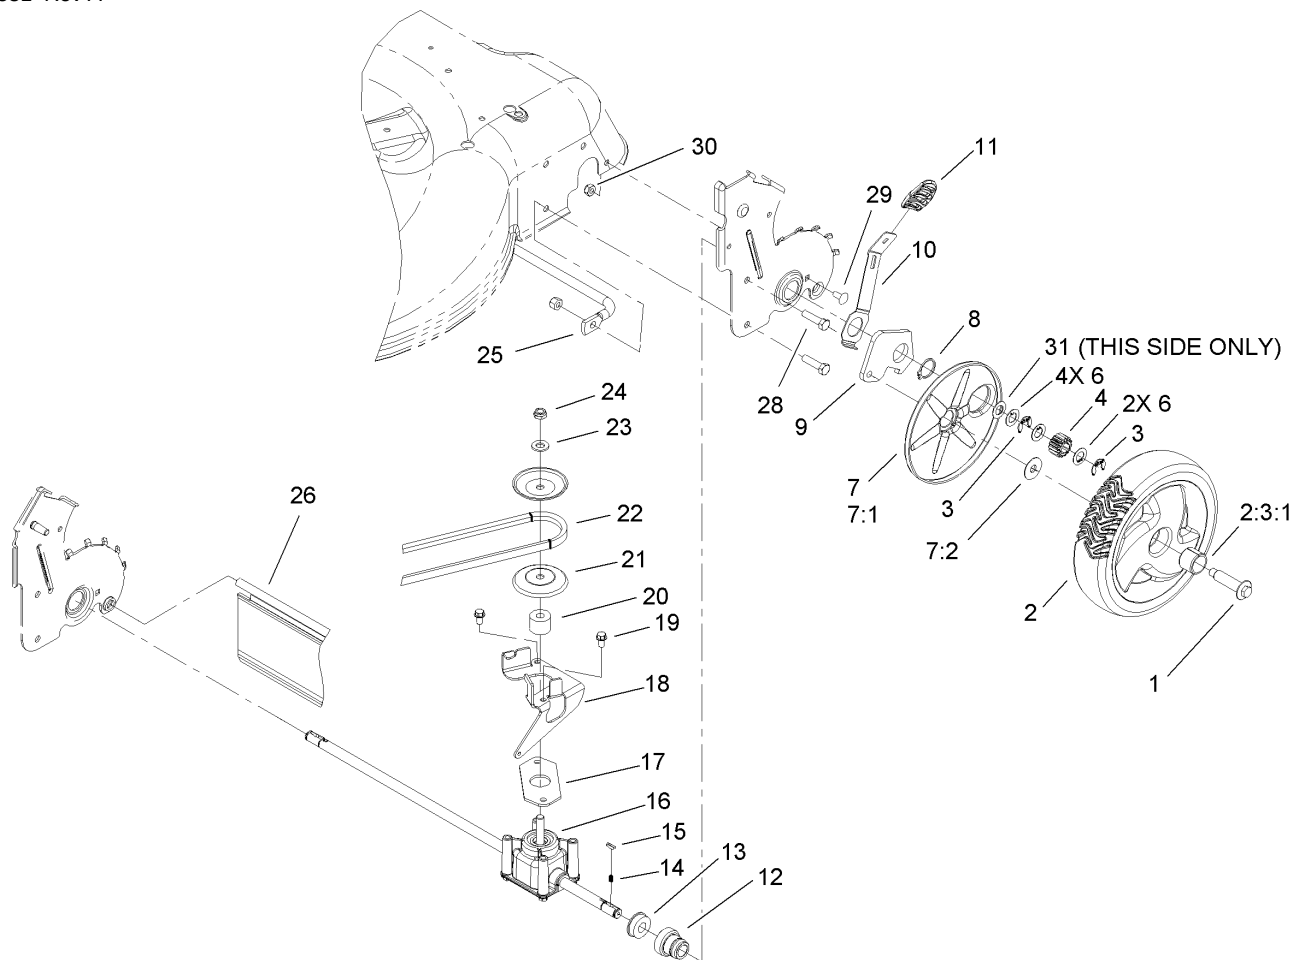

Rear Axle and Transmission Assembly


Ref	Part No.	Qty.	Description
1	614650	2	Bolt-Shoulder
2	105-3036	2	Wheel Gear ASM
1 2:3		1	Wheel ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Klipring-Locking
4	105-3040	2	Gear-Pinion, 15T
6	105-6840	6	Washer-Thrust
7	110-1792	2	Wheel Cover ASM
7:1		1	Cover-Wheel
7:2	614426	1	Washer-Stepped
8	32151-36	2	Ring-Retaining
9	105-1819	2	Arm-Pivot, Rear
10	105-1809	2	Arm-Spring
11	105-3042	2	Knob-Lever, HOC
12	104-8698	2	Retainer-Bearing, HOC
13	104-8699	2	Bearing-Ball
14	39-9650	2	Spring-Compression
15	612066	2	Key
16	106-3956	1	Transmission ASM
17	108-9756	1	Gasket-Gearbox
18	106-6809-03	1	Bracket-Pivot
19	32144-4	2	Screw-HWH
20	92-5791	1	Spacer
21	100-1176	2	Pulley-Half

Ref	Part No.	Qty.	Description
22	91-2258	1	V-Belt
23	3256-24	1	Washer-Flat
24	3296-5	1	Nut-Lock
25	105-1811	1	Brace-Plate, HOC
26	114-1585	1	Shield-Trailing
28	322-6	4	Screw-HH
29	3229-11	2	Screw-CARR
30	3296-16	2	Nut-Lock, NI
31	36-4780	1	Washer

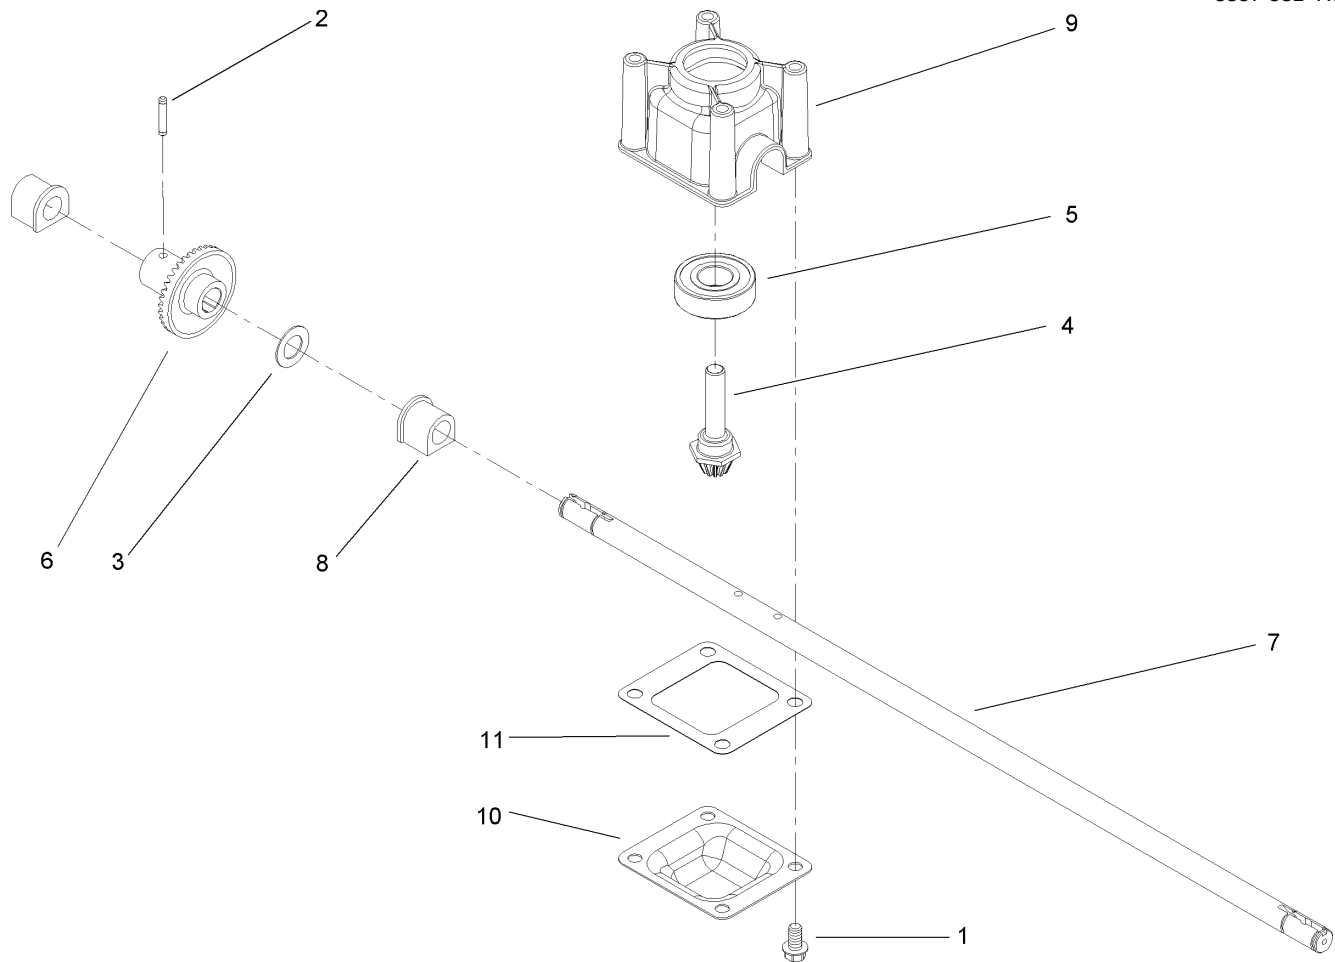

Transmission Assembly No. 106-3956


Ref	Part No.	Qty.	Description				
1	32144-4	4	Screw-HWH				
2	105-6817	1	Pin-Groove				
3	36-4780	1	Washer				
4	92-5790	1	Pinion				
5	100-1048	1	Bearing-Ball				
6	104-8671	1	Gear-Bevel, 37T				
7	106-3957	1	Shaft-Output				
8	104-8673	2	Bushing-Shaft, Output				
9	104-8674	1	Gearcase-Upper				
10	104-8675-03	1	Cover-Gearcase				
11	105-6839	1	Gasket-Gearcase				

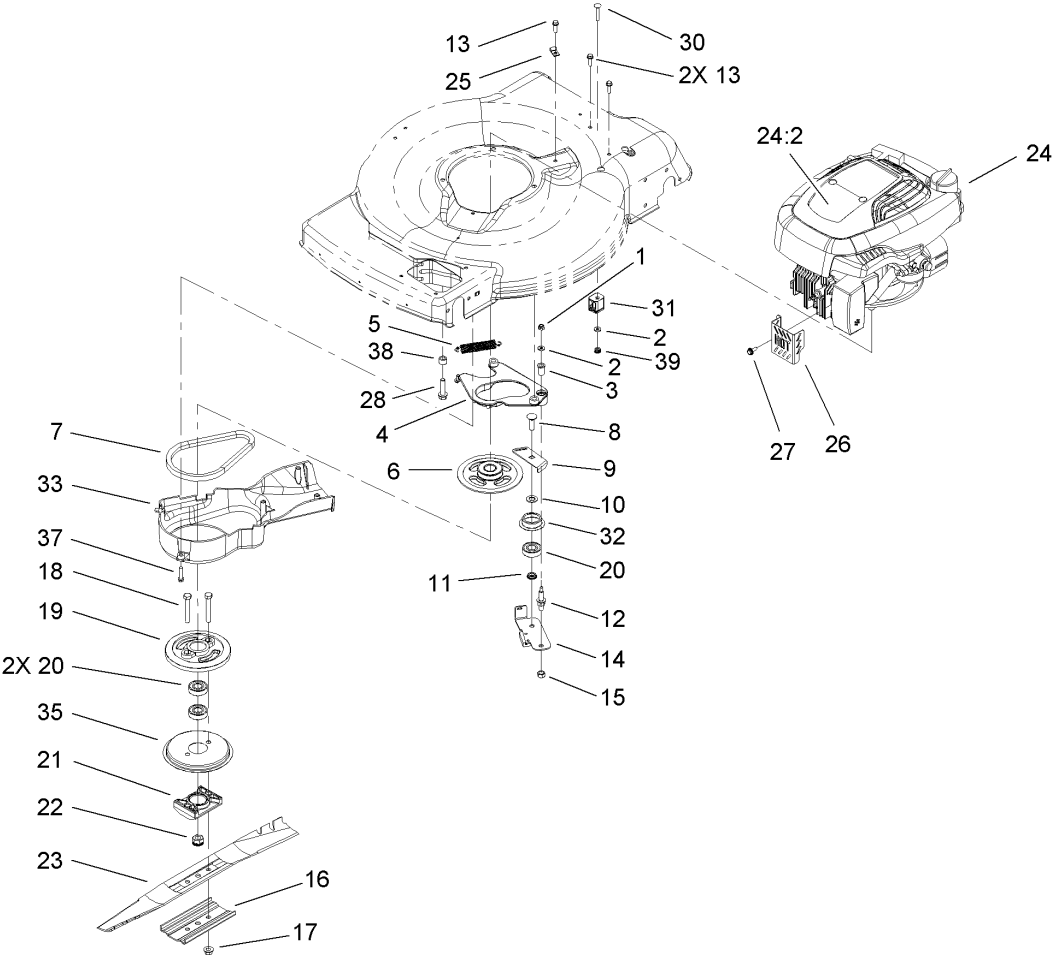

Engine Assembly


Ref	Part No.	Qty.	Description
1	3296-73	1	Nut-Lock, NI
2	3256-16	2	Washer-Flat
3	107-0797	1	Bushing
4	108-9341	1	Plate-Anchor
5	108-3792	1	Spring-Tension, Brake
6	110-7456	1	Pulley-BBC
7	110-1790	1	Belt-BBC
8	3231-25	1	Screw-CARR
9	107-7471	1	Plate-Guide
10	605256	1	Washer
11	107-0758	1	Spacer-Bearing
12	107-0759	1	Bolt-Shoulder
13	46-8091	3	Screw-HWH
14	107-7477	1	Brake Arm ASM
15	603773	2	Nut
16	108-3766-03	1	Support-Blade
17	54-9190	2	Nut-Lock
18	3211-42	2	Screw-HH
19	107-0754	1	Drum
20	100-1048	3	Bearing-Ball
21	107-7487	1	Support-Blade
22	108-9342	1	Nut-Hex
23	108-9764-03	1	Blade-22 Inch

Ref	Part No.	Qty.	Description
24		1	Engine-Tecumseh, Lv195Ea-362085D
24:2	112-8874	1	Decal-Shroud, Engine
25	2412-72	1	Clip-Closed, Insulated
26	106-8346-03	1	Guard-Muffler
27	32144-85	3	Screw-HWH
28	32144-102	3	Screw-HWH
30	3229-4	1	Screw-CARR
31	106-6801	1	Anchor-Cable, BBC
32	108-3790	1	Retainer-Belt
33	107-0798	1	Cover-BBC
35	108-3787	1	Disc
37	46-8092	1	Screw-Plastite
38	100-6447	1	Tube-Spacer
39	3296-56	1	Nut-Lock, NI

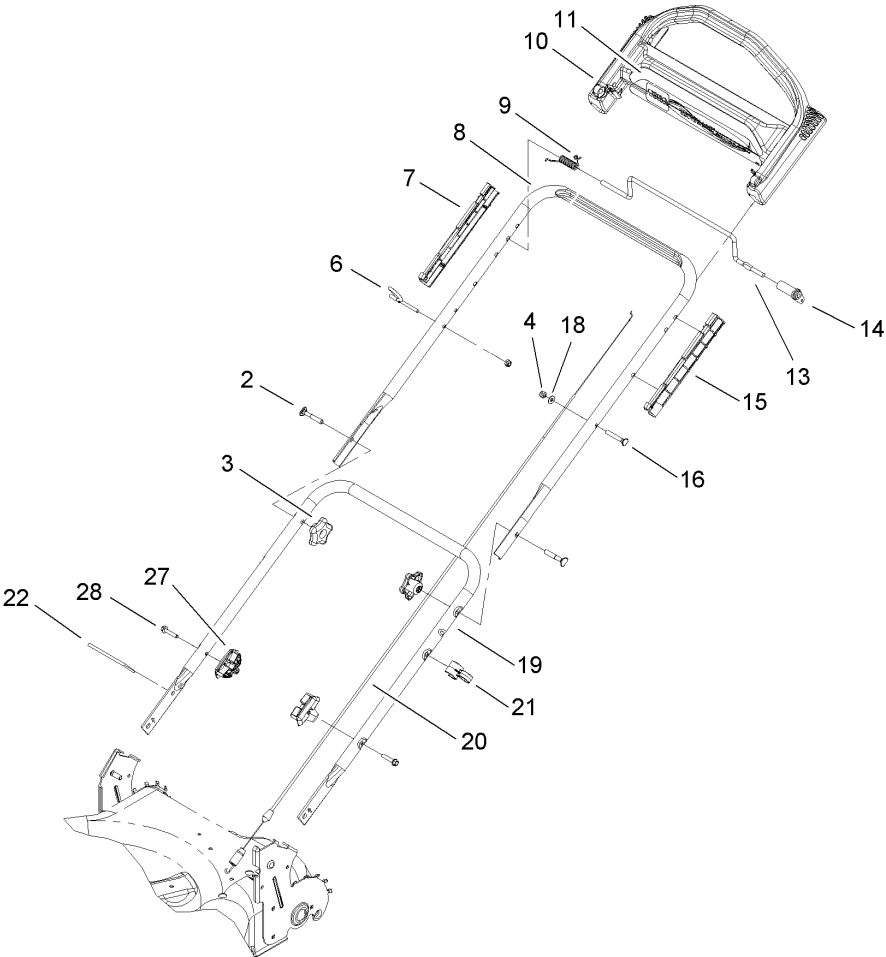

Handle Assembly

Ref	Part No.	Qty.	Description				
2	112-8876	2	Screw-Handle				
3	108-8162	2	Knob-Locking				
4	3296-73	2	Nut-Lock, NI				
6	86-9671	1	Guide-Rope				
7	105-6841	2	Guide-RH				
8	104-8680-05	1	Handle-Upper				
9	104-8690	1	Spring-Torsion				
10	104-8678	1	Handle-Control				
11	114-0338	1	Decal-Personal Pace				
13	99-1588	1	Bar-Control, Traction				
14	99-1589	1	Lever-Traction				
15	105-6842	2	Guide-LH				
16	321-50	1	Screw-HH				
18	3256-1	1	Washer-Flat				
19	112-6440-05	1	Handle-Lower				
20	105-1844	1	Cable-Traction				
21	106-6805	1	Guide-Cable				
22	614249	1	Strap-Tie				
27	108-9788	2	Anchor-Bag				
28	32144-110	2	Screw-HWH				

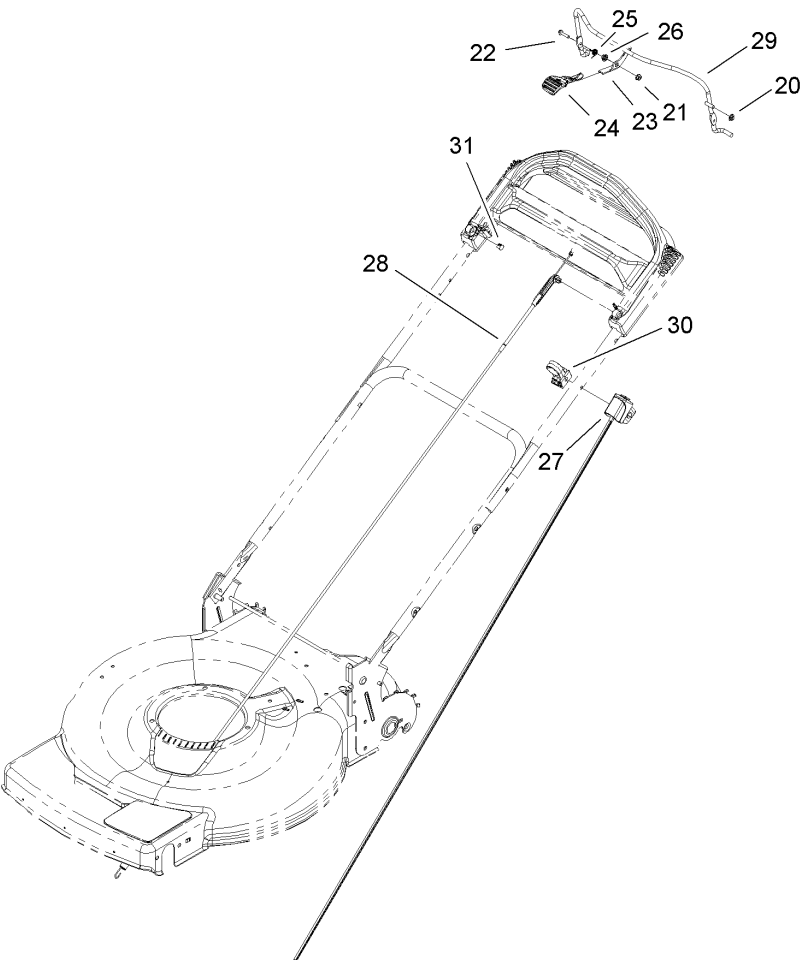


Electrical Assembly

Ref	Part No.	Qty.	Description				
20	3290-337	1	Nut-Speed				
21	32128-17	1	Nut-Lock, Flange				
22	106-9169	1	Screw				
23	106-6802	1	Lever				
24	112-8884	1	Knob-BBC				
25	107-7462	1	Spring-Torsion				
26	107-7463	1	Spacer				
27	108-3785	1	Switch Housing ASM				
28	107-0799	1	Cable ASM				
29	108-3788	1	Bail-Brake				
30	99-5239	1	Anchor-Cable				
31	104-9368	1	Plug-Dome				

Engine Assembly No. 1

Tecumseh LV195EA-362085D

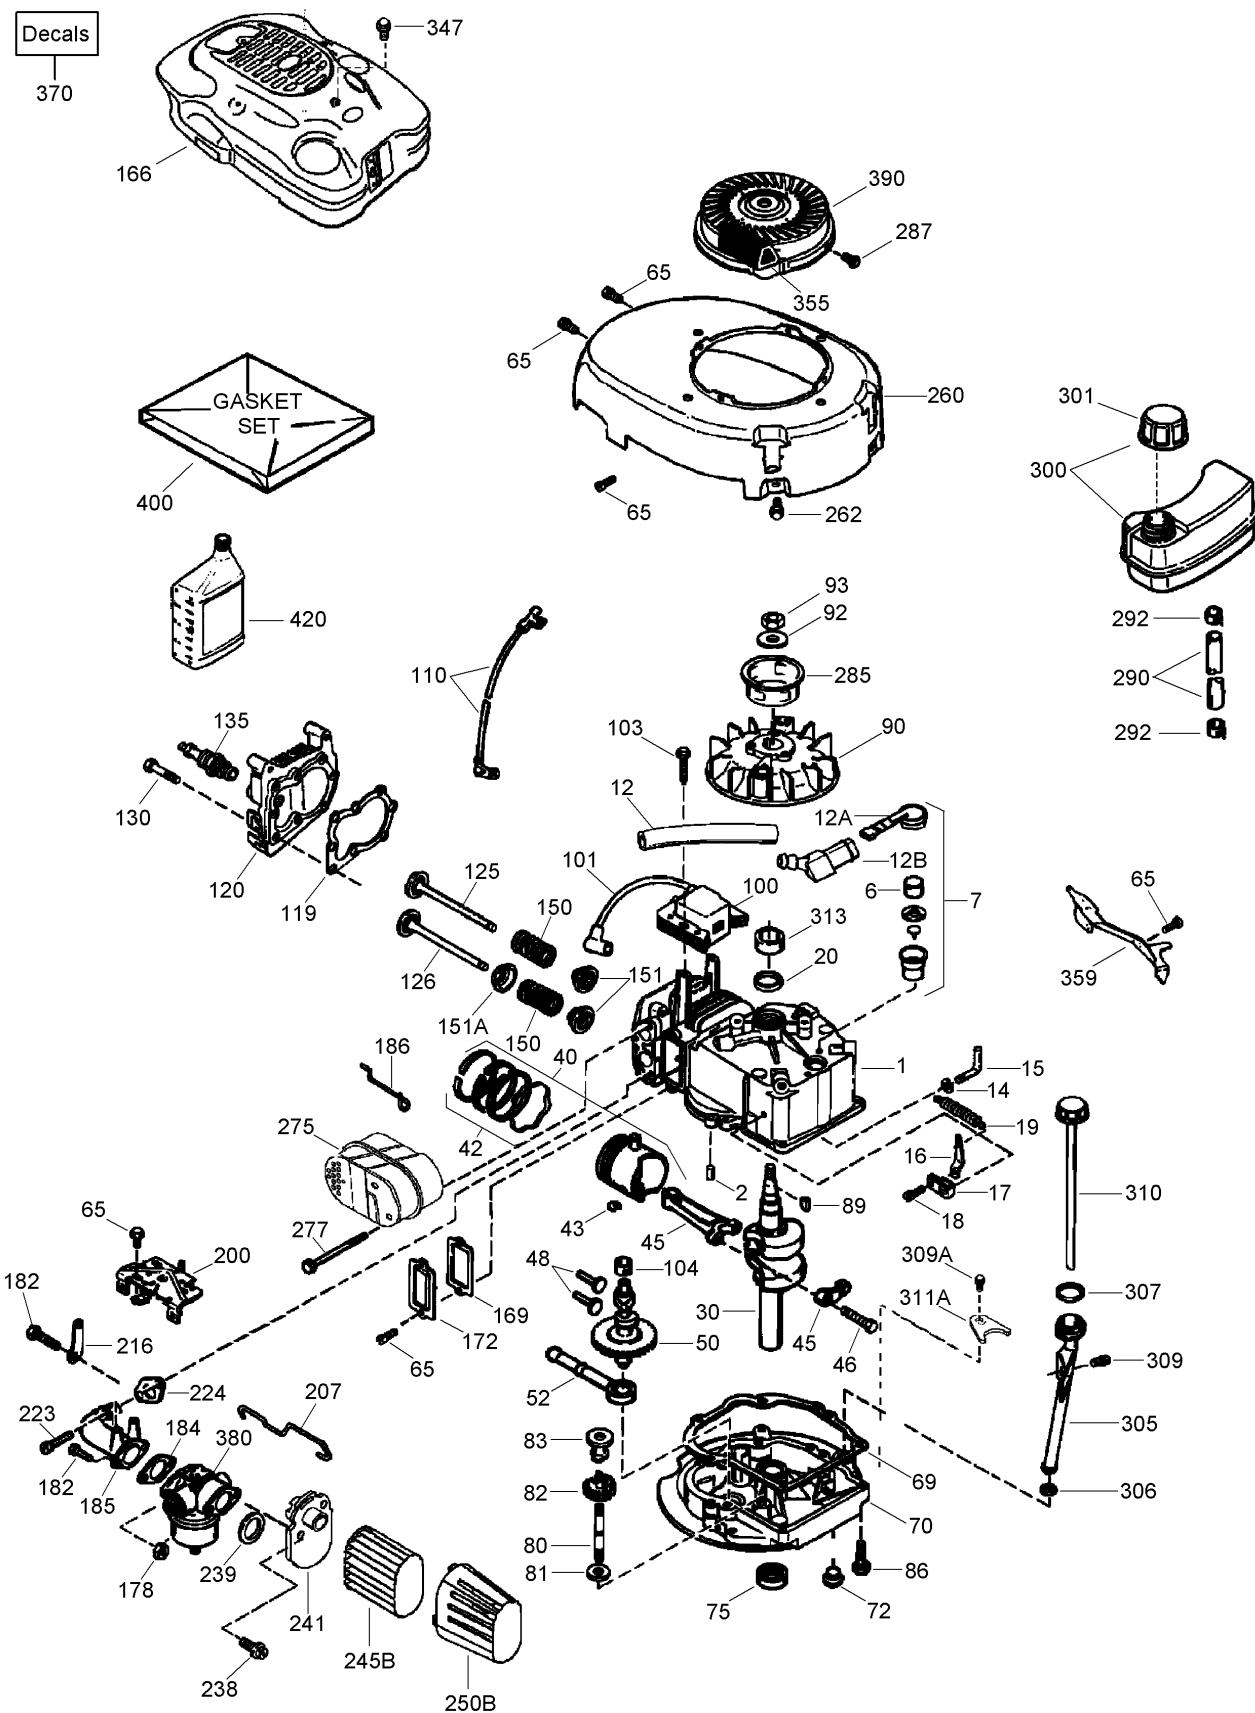


Engine Assembly No. 1

Tecumseh LV195EA-362085D

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③1	37465	1	Cylinder ASM (Includes 2, 20)	③126	37289	1	Valve-Intake (STD) (Includes 151)
③2	26727	2	Pin-Dowel	③130	6021A	8	Screw (5/16-18X1-1/2)
③6	33734	1	Element-Breather				
③7	36557	1	Breather ASM (Includes 6, 12A)				
③12	37944	1	Tube-Breather				
③12A	36558	1	Breather Cover And Tube ASM				
③12B	36694	1	Elbow-Tube, Breather				
③14	28277	1	Washer-Flat				
③15	30589	1	Governor Rod ASM (Includes 14)				
③16	34839A	1	Lever-Governor				
③17	31335	1	Clamp-Lever, Governor				
③18	651018	1	Screw (T-15, 8-32 X 19/64)				
③19	36281	1	Spring-Extension				
③20	32600	1	Seal-Oil				
③30	38001	1	Crankshaft				
③40	40045	1	Piston, Pin And Ring Set (.010 Os) (Includes 42)				
③40	40044	1	Piston, Pin And Ring Set (STD) (Includes 42)				
③42	40007	1	Ring Set (.010 O S)				
③42	40006	1	Ring Set (STD)				
③43	20381	2	Ring-Retaining, Piston Pin				
③45	36777	1	Connecting Rod ASM (Includes 46)				
③46	32610A	2	Bolt-Rod, Connecting				
③48	27241	2	Lifter-Valve				
③50	37460	1	Camshaft ASM (Exhaust Mcr) (Includes 104)				
③52	29914	1	Oil Pump ASM				
③65	30200	6	Screw (10-24 X 9/16)				
③69	37609	1	Gasket-Flange, Mounting				
③70	37608A	1	Mounting Flange ASM (Includes 72-83, 306, 309A, 311A)				
③72	37614	1	Plug-Drain, Oil (Flush Mount)				
③75	27897	1	Seal-Oil				
③80	30574A	1	Shaft-Governor				
③81	30590A	1	Washer				
③82	30591	1	Governor Gear ASM (Includes 81)				
③83	30588A	1	Spool-Governor				
③86	650488	6	Screw (1/4-20 X 1-1/4)				
③89	611298	1	Key-Flywheel				
③90	611213	1	Flywheel (Cast-Iron) (No Ring-Gear)				
③92	650815	1	Washer-Belleville				
③93	650816	1	Nut-Flywheel				
③100	34443C	1	Ignition-Solid State				
③101	611289	1	Cover-Spark Plug				
③103	651007	2	Screw (T-15, 10-24 X 15/16)				
③104	37480	1	Bushing-Cam				
③110	611227	1	Wire-Ground				
③119	37796	1	Gasket-Head, Cylinder				
③120	37714	1	Head-Cylinder				
③125	37288	1	Valve-Exhaust (STD) (Includes 151)				

Engine Assembly No. 2


Tecumseh LV195EA-362085D

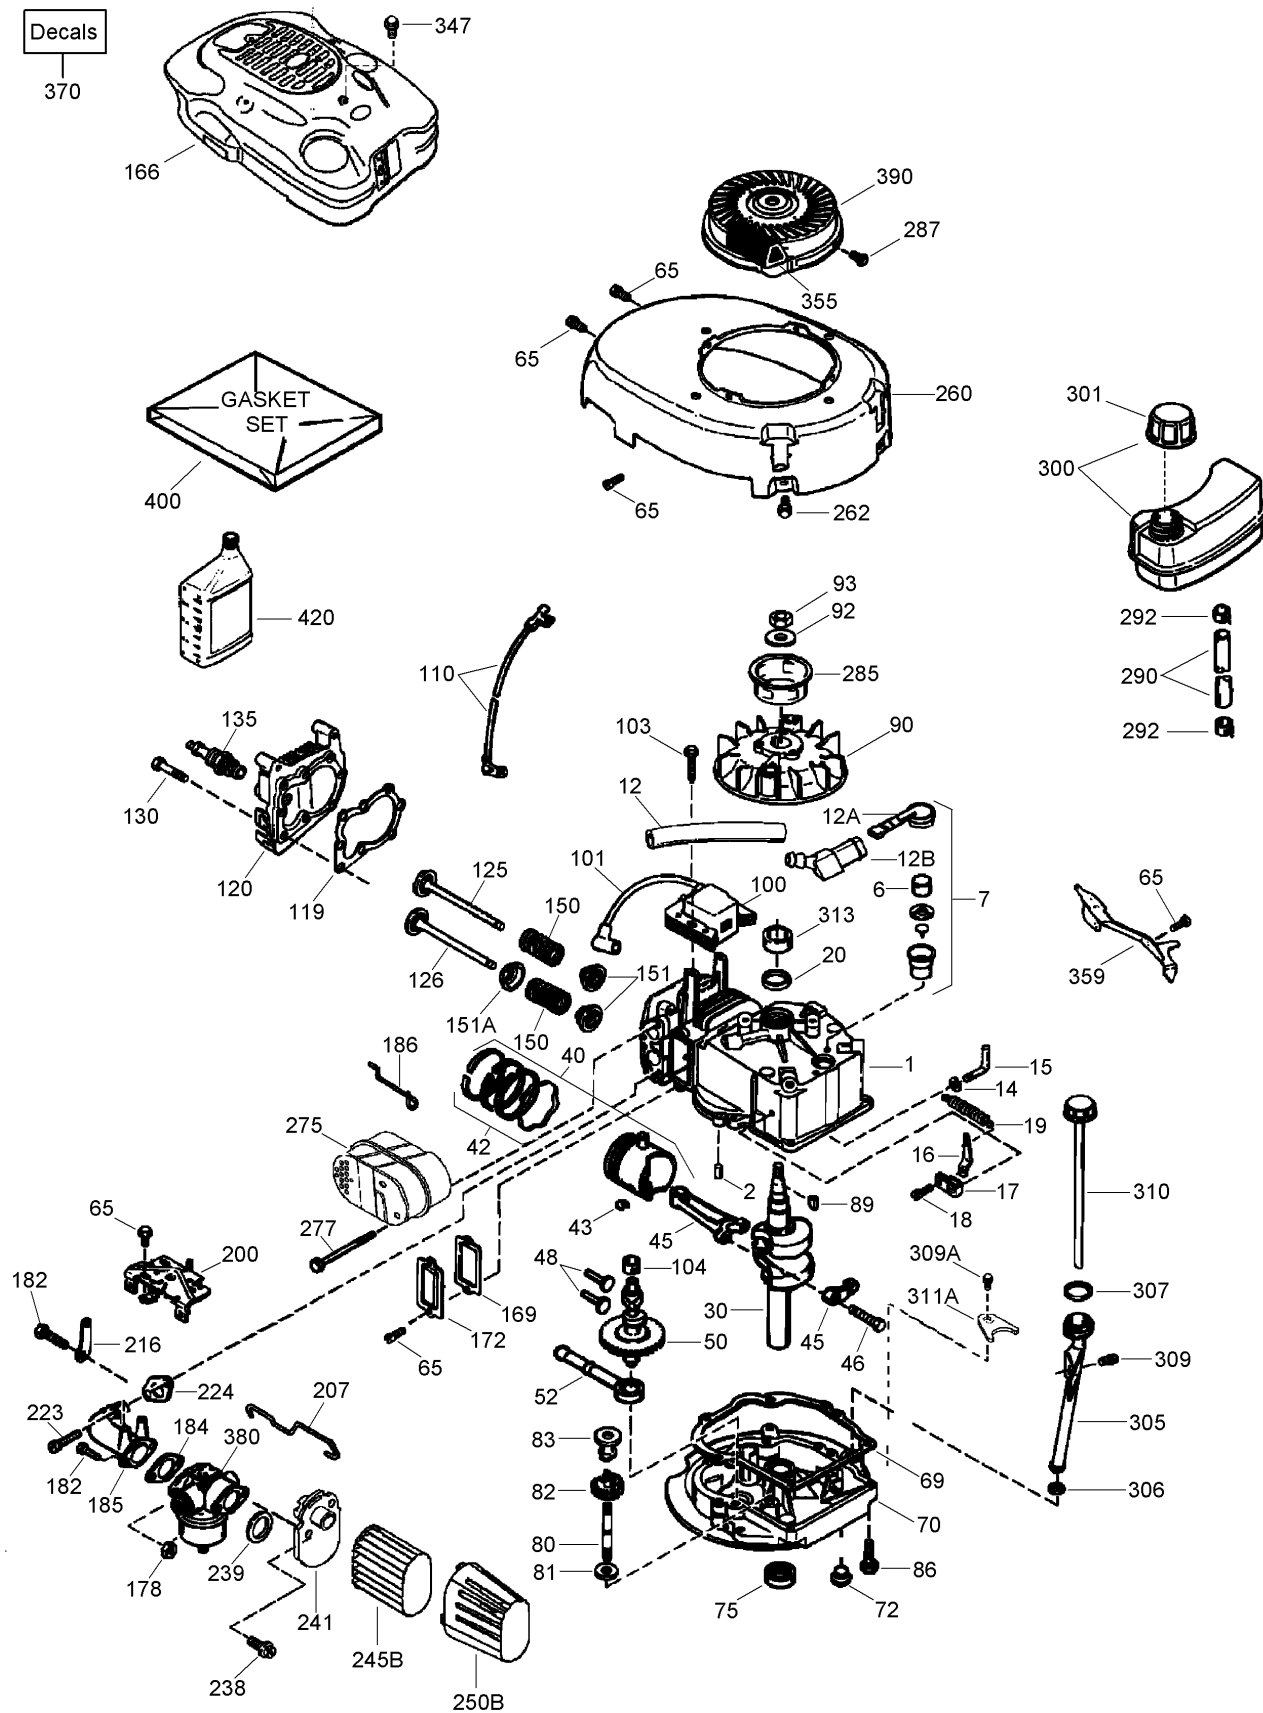

Engine Assembly No. 2

Tecumseh LV195EA-362085D


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③135	35395	1	Spark Plug-Resistor (R J19 L M)	①③999	730277	1	Summer Maintenance Kit (Includes Sae 30 Oil)
③150	31672	2	Spring-Valve				
③151	31673	2	Cap-Valve, Spring				
③151A	40017	1	Seal-Valve, Intake				
③166	38019	1	Engine Shroud				
③169	36783	1	Gasket-Cover, Valve				
③172	36784	1	Cover-Valve				
③178	29752	2	Nut And Lock Washer (1/4-28)				
③182	6201	2	Screw (1/4-28 X 7/8)				
③184	26756	1	Gasket-Carburetor To Intake Pipe				
③185	37466	1	Pipe-Intake				
③186	32653	1	Link-Governor				
③200	37876	1	Bracket-Control				
③207	34336A	1	Link-Throttle				
③216	33086	1	Lever-Adjusting, R P M				
③223	650451	2	Screw (1/4-20 X 1)				
③224	36786	1	Gasket-Pipe, Intake				
③238	650932	2	Screw (10-32 X 49/64)				
③239	34338	1	Gasket-Air Cleaner				
③241	36919	1	Collar-Air Cleaner				
③245B	36905	1	Filter-Air Cleaner (Paper)				
③250B	37122	1	Cover-Air Cleaner				
③260	37696A	1	Housing-Blower				
③262	650831	2	Screw (1/4-20 X 1/2)				
③275	37498	1	Muffler				
③277	650988	2	Screw (1/4-20 X 2-9/32)				
③285	35000A	1	Cup-Starter				
③287	650926	2	Screw (8-32 X 21/64)				
③290	37962	1	Line-Fuel, Low Permeation (8.62)				
③292	26460	2	Clamp-Line, Fuel				
③300	37947	1	Fuel Tank ASM (Includes 292, 301)				
③301	37844	1	Cap-Fuel (Black) (1-1/2 I D)				
③305	35647A	1	Tube-Fill, Oil				
③306	37610	1	O-Ring				
③307	35499	1	O-Ring				
③309	650562	1	Screw (10-32 X 1/2)				
③309A	650783	1	Screw (10-24 X 3/4)				
③310	35648	1	Dipstick				
③311A	37611	1	Bracket-Holddown				
③313	34080	1	Spacer				
③347	650898A	4	Screw (10-32 X 27/32)				
③355	590701	1	Handle-Starter (STD)				
③359	37081	1	Blower Housing Guard				
③370	37695	1	Decal-Primer				
③370	35977	1	Decal-Warning				
③380	640350	1	Carburetor (Includes 184)				
③390	590702	1	Starter-Recoil				
③400	37613A	1	Gasket Set				
③420	730225A	1	Oil-Engine, Sae 30 (4-Cycle)				
①③0	750891	1	Short Block Replacement				

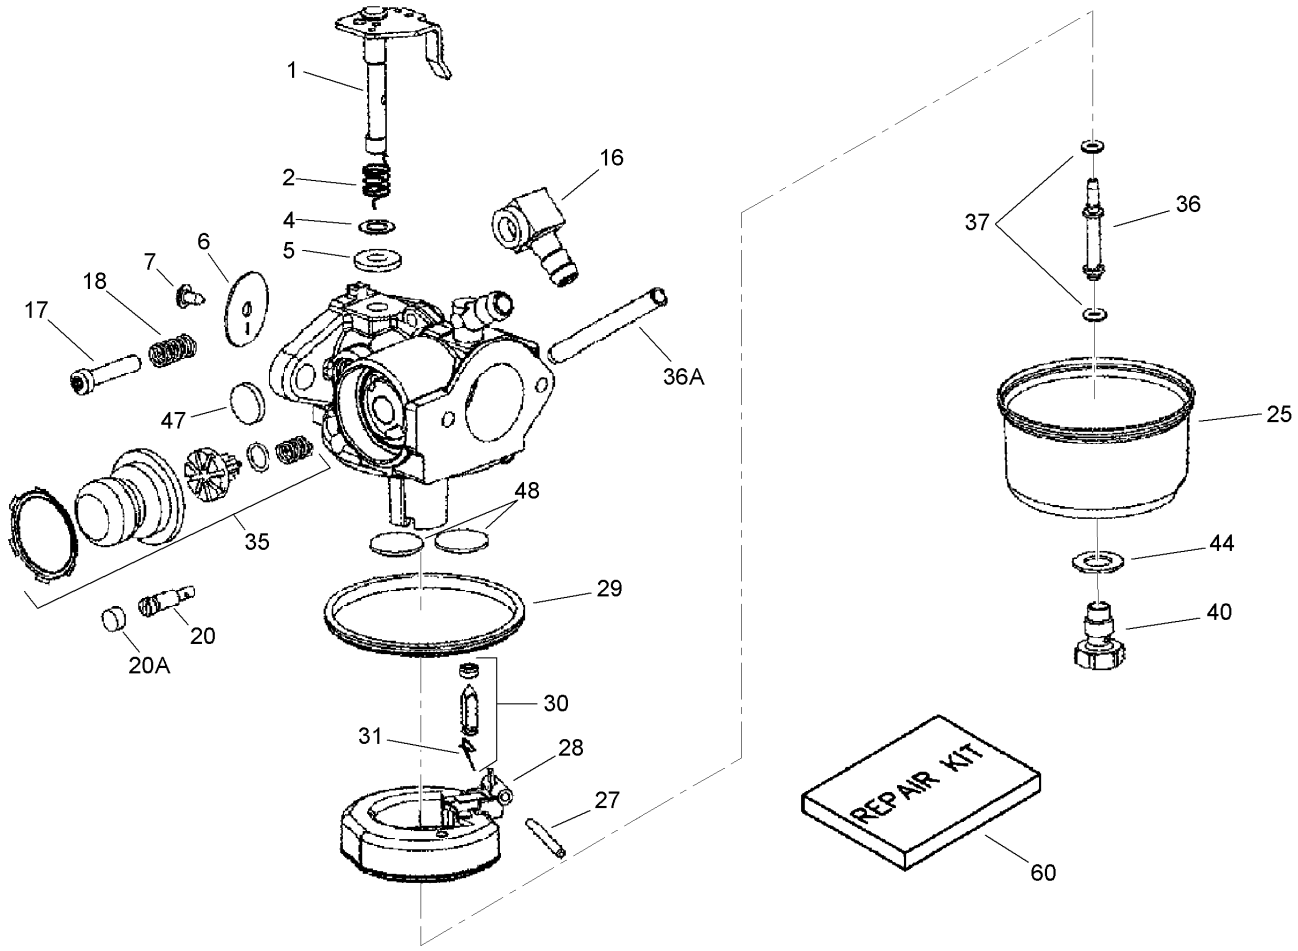




Carburetor Assembly No. 640350
Tecumseh LV195EA-362085D

Ref	Part No.	Qty.	Description
30	640350	1	Carburetor ASM
31	631615	1	Throttle Shaft And Lever ASM
32	631767	1	Spring-Return, Throttle
344	631184	1	Washer-Seal, Dust
345	631183	1	Seal-Dust, Throttle
36	640070	1	Shutter-Throttle
347	650506	1	Screw-Shutter
316	631807	1	Fitting-Fuel
317	651025	1	Screw-Throttle Crack/Idle Speed
318	630766	1	Spring-Tension
320	640016	1	Screw-Restrictor, Idle
320A	640200	1	Cap-Screw, Restrictor Idle
325	631867	1	Bowl-Float (No Drain)
3427	631024	1	Shaft-Float
328	632802	1	Float (Plastic)
3429	631028	1	O-Ring-Bowl, Float
3430	631021A	1	Inlet Needle, Seat And Clip ASM (Includes 31)
331	631022	1	Clip-Spring
335	640351	1	Primer Bulb/Valve Repair Kit
336	640080	1	Tube-Nozzle, Main
336A	632766	1	Tube-Carburetor
3437	632547	2	O-Ring-Nozzle Tube, Main
340	640030	1	Nut-Bowl, High Speed

Ref	Part No.	Qty.	Description
3444	27110A	1	Washer-Nut, Bowl
3447	630748	1	Plug-Welch, Idle Mixture Well
3448	631027	2	Plug-Welch, Atmospheric Vent
360	632760B	1	Repair Kit

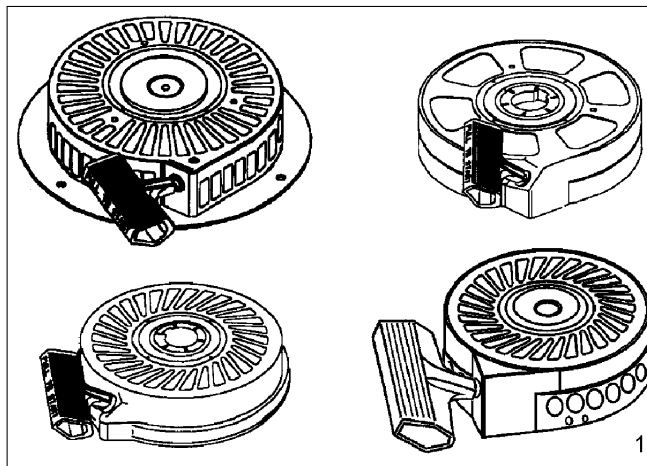

This illustration may not depict actual equipment and is for reference purposes only

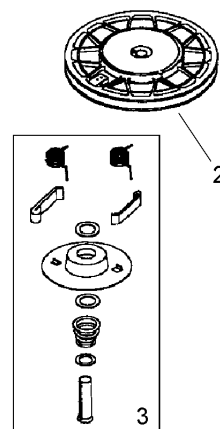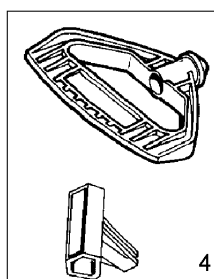

Recoil Starter Assembly No. 590702
Tecumseh LV195EA-LV195EA-362085D

Ref	Part No.	Qty.	Description
③1	590702	1	Starter-Recoil
③2	590700	1	Pulley And Rewind Spring ASM
③3	590774	1	Repair Kit
③4	590701	1	Handle-Starter
③5	590535	1	98 Starter Rope (Cut To Length)

Attachments and Accessories

For 20075 - 22in Recycler Lawn Mower

Product Name	Model/Part
Traction Assist Handle Kit	108-8120
Tuneup Kit	20235
Replacement Bag	59303
Bagger Kit	59304
22 Inch Blade Kit	59534

NOTES

