



Z441 Z Master[®]

With 52in TURBO FORCE[®] Side Discharge Mower

Model No. 74442 - 270002001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	 3	Deck Connection Assembly	 18
Caster Wheel Assembly No. 110-5745	 4	Deck Assembly	 19
Height-of-Cut-Assembly	 5	Idler Assembly	 21
Main Frame Assembly	 6	Spindle Assembly No. 107-8504	 22
Fuel System Assembly	 7	Deck Decal Assembly No. 107-1669	 23
Parking Brake Assembly	 8	Rubber Deflector Assembly No. 108-2792	 24
Motion Control Assembly	 10	Electrical System Assembly	 25
RH Motion Control Assembly No.109-3911	 11	Seat and Bracket Assembly	 26
LH Motion Control Assembly No. 109-3912	 12	Seat Assembly No. 110-0446	 27
Hydraulic System Assembly	 13	Roll-Over Protection System Assembly	 28
Hydraulic Pump Assembly No. 103-1942	 15	Roll-Over Protection System Assembly No. 107-8093	 29
Pump Idler and Belt Assembly	 16	Attachments and Accessories List	 30
Engine, Clutch and Muffler Assembly	 17		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|----------------------|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Optional Equipment | ❹ Obtain from your local Kawasaki dealer |

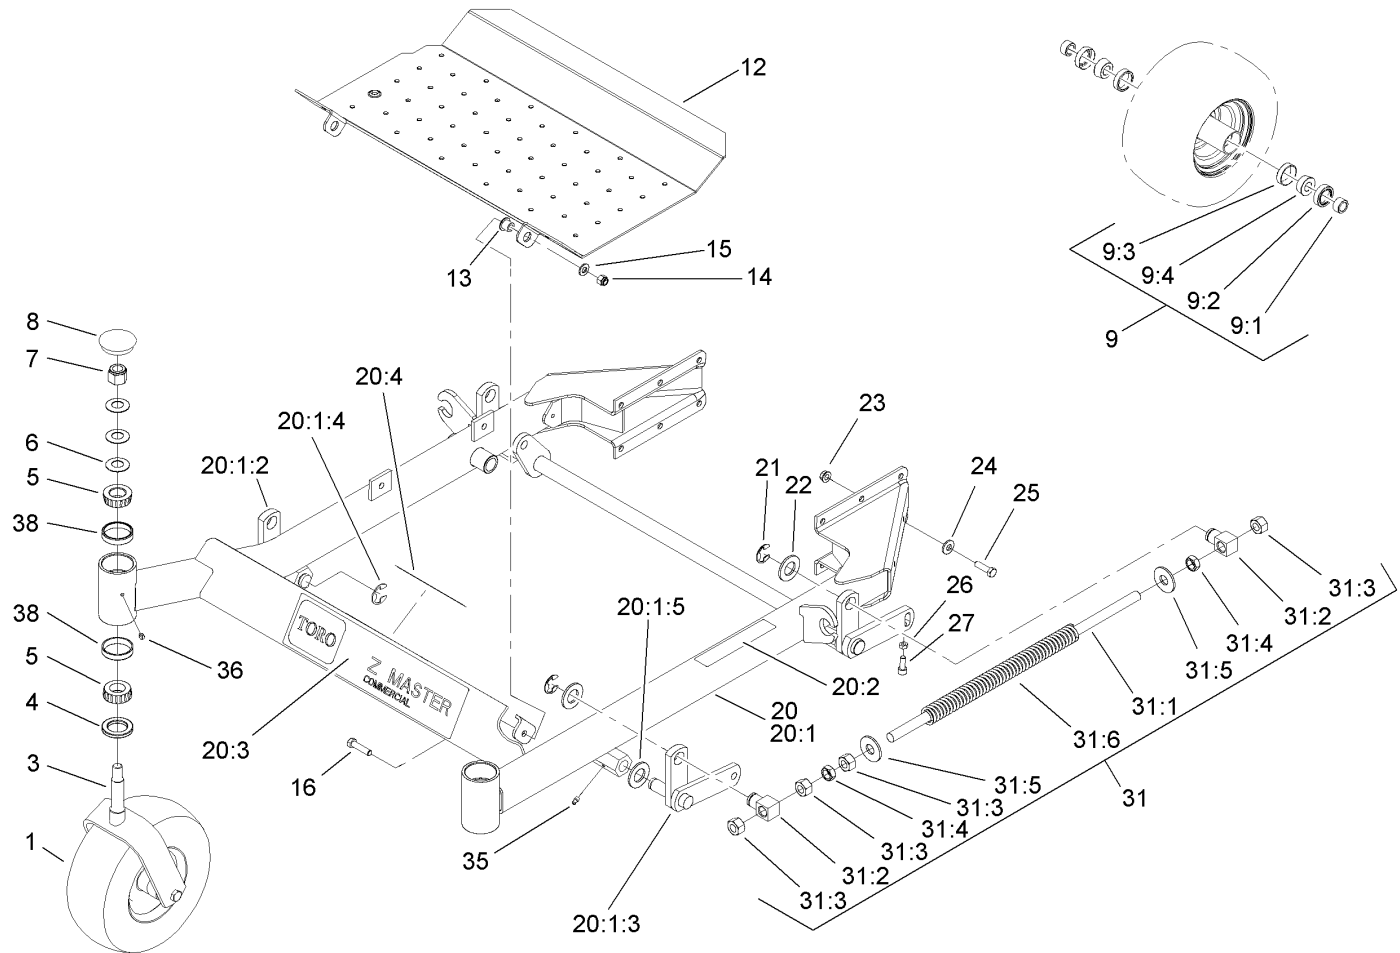

Front Frame Assembly


Ref	Part No.	Qty.	Description
1	110-5745	2	Semi Pnuematic Wheel ASM
3	1-632511-01	2	Caster
4	1-543511	2	Seal-Grease
5	254-94	4	Bearing-Cone, Tapered
6	1-633508	6	Washer-Bellville
7	3296-51	2	Nut-Lock, NI
8	103-4882	2	Cap-Grease
9	110-8837	1	Caster Wheel Bearing Kit
9:1	1-633581	2	Spacer-Bearing
9:2	1-633580	2	Seal-Bearing
9:3	1-633584	2	Bearing-Cup
9:4	1-633585	2	Bearing-Cone, Taper
12	108-5007-03	1	Floor Pan
13	86-2180	2	Bushing-Flange
14	3296-39	2	Nut-Lock, NI
15	3256-24	2	Washer-Flat
16	323-8	2	Screw-HH
20	108-5022	1	Front Frame ASM
20:1		1	Frame-Front
20:1:2	99-3872	1	RH Lift Arm ASM
20:1:3	99-3871	1	LH Lift Arm ASM
20:1:4	32151-103	2	Ring-Snap
20:1:5	3256-29	2	Washer-Flat
20:2	1-633818	1	Decal-Warning

Ref	Part No.	Qty.	Description
20:3	106-7451	1	Decal
20:4	107-2112	1	Decal-Warning
21	32151-103	4	Ring-Snap
22	3256-29	4	Washer-Flat
23	3290-357	12	Nut-HHF, Whiz
24	98-5975	12	Washer-Belleville
25	323-7	12	Screw-HH
26	3218-2	2	Nut-Jam
27	3274-18	2	Screw-HSH
31	1-634439	2	Front Frame Spring ASM
31:1	1-633096	1	Rod-Lift, Deck
31:2	1-633441	2	Swivel-Deck Mount, Rear
31:3	3217-11	4	Nut-Hex
31:4	3218-6	2	Nut-Jam
31:5	3256-7	2	Washer-Flat
31:6	1-633064	1	Spring-Support, Deck
35	302-19	4	Fitting-Grease
36	1-811010	2	Plug
38	254-72	4	Bearing-Cup, Tapered

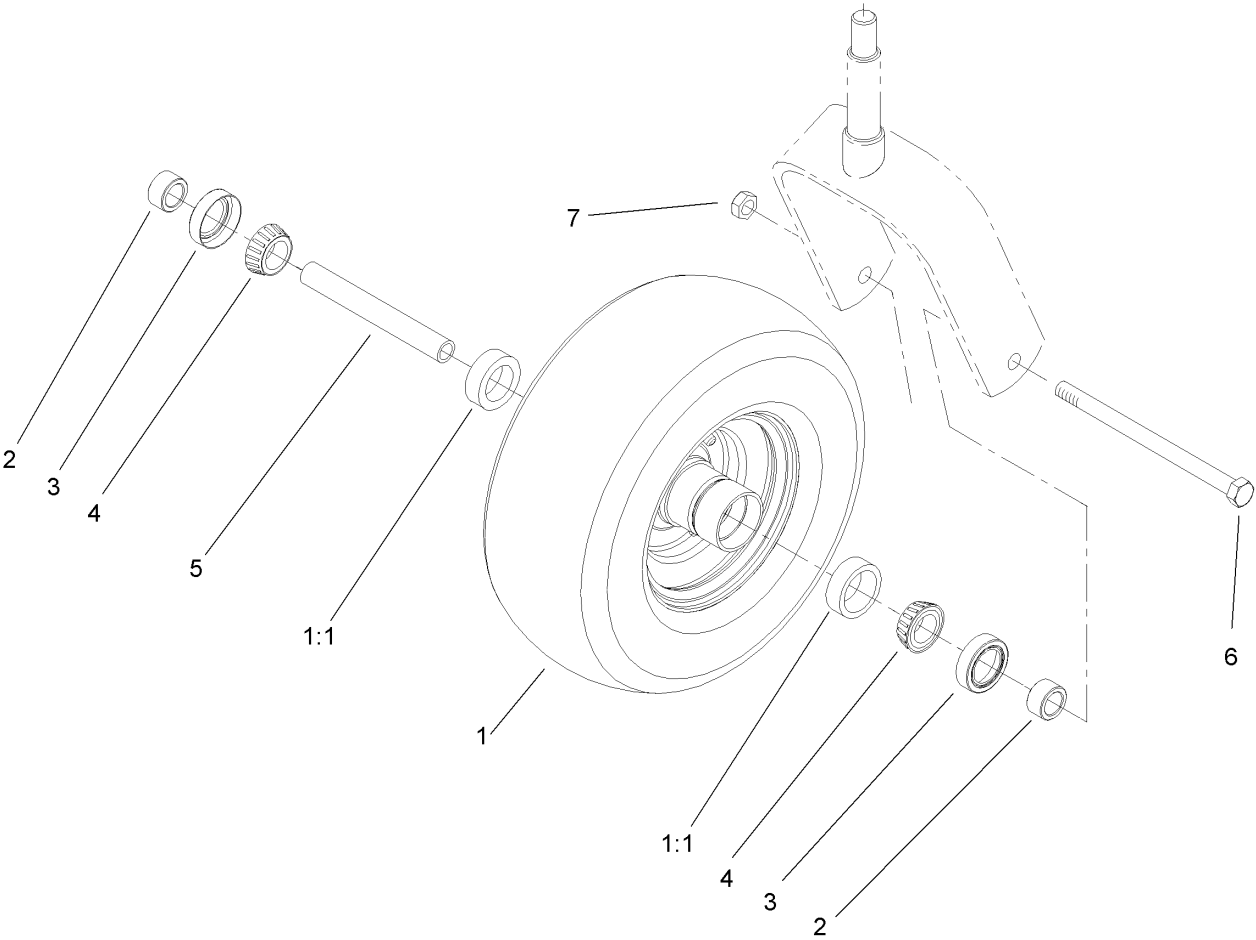

Caster Wheel Assembly No. 110-5745


Ref	Part No.	Qty.	Description				
1	110-5743	1	Wheel And Tire ASM (Semi-Pneumatic)				
1:1	1-633584	1	Bearing-Cup				
2	1-633581	2	Spacer-Bearing				
3	1-633580	2	Seal-Bearing				
4	1-633585	2	Bearing-Cone, Taper				
5	1-633579	1	Spacer-Caster, Front				
6	325-36	1	Screw-HH				
7	3296-45	1	Nut-Lock, NI				

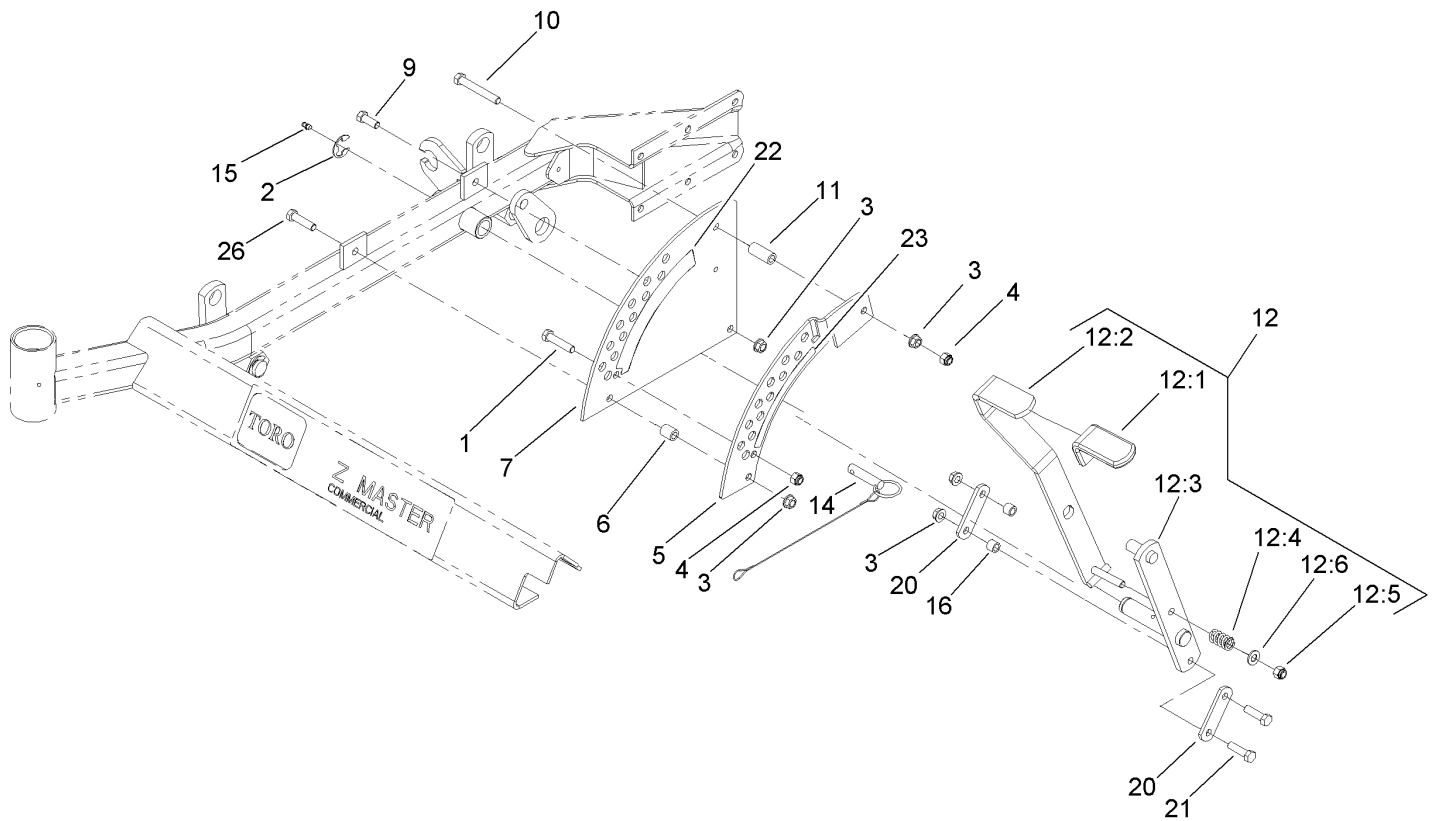

Height-of-Cut-Assembly


Ref	Part No.	Qty.	Description
1	323-9	1	Screw-HH
2	32151-103	1	Ring-Snap
3	3290-357	5	Nut-HHF, Whiz
4	3296-39	2	Nut-Lock, NI
5	108-7755-01	1	Plate-Lift, Deck
6	1-633080	1	Bushing-Lever, Lift
7	1-653230-01	1	Plate-Lift, Deck
9	323-6	1	Screw-HH
10	323-13	1	Screw-HH
11	1-633082	1	Bushing-Lever, Lift
12	110-5870	1	Deck Lift Handle ASM
12:1	1-633295	1	Grip-Lever, Lift
12:2	103-2078	1	Handle-Lift
12:3	106-6598	1	Lift Arm ASM
12:4	1-633325	1	Spring-Compression
12:5	3296-39	1	Nut-Lock, NI
12:6	3256-24	1	Washer-Flat
14	106-9951	1	Hitch Pin ASM
15	302-19	1	Fitting-Grease
16	103-1918	2	Bushing
20	1-633068	2	Arm-Lift, Deck
21	323-29	2	Screw-HH
22	108-1051	1	Decal-Deck Height, Outer
23	108-1050	1	Decal-Deck Height, Inner

Ref	Part No.	Qty.	Description
26	323-8	1	Screw-HH

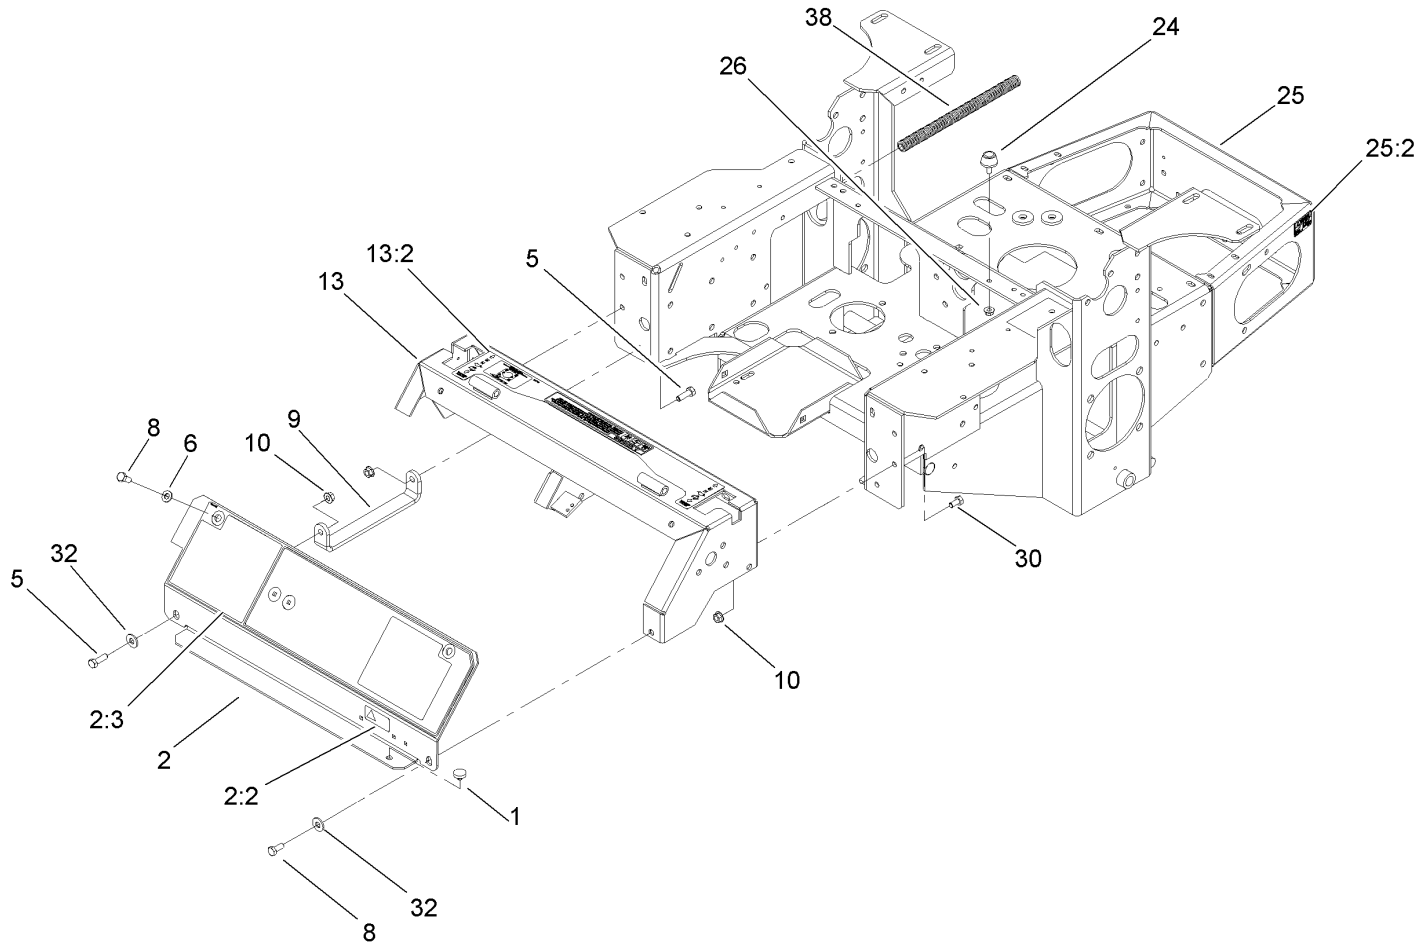

Main Frame Assembly


Ref	Part No.	Qty.	Description				
1	1-513658	2	Bumper				
2	108-1864	1	Panel ASM				
2:2	98-4387	1	Decal-Protection, Ear				
2:3	107-8445	1	Decal-Cover, Panel				
5	322-5	2	Screw-HH				
6	3256-23	2	Washer-Flat				
8	322-3	3	Screw-HH				
9	103-7935-03	1	Bracket-Panel, Instrument				
10	32128-20	6	Nut-HF				
13	108-5997	1	Console ASM				
13:2	108-5995	1	Decal-Warning				
24	109-2365	2	Bumper-Rubber (W/Stud)				
25	112-9007	1	Main Frame ASM				
25:2	65-2690	2	Decal-Surface, Hot				
26	32128-33	2	Nut-HF				
30	322-2	4	Screw-HH				
32	3256-3	2	Washer-Flat				
38	24-7922	2	Cover-Shaft, Drive				

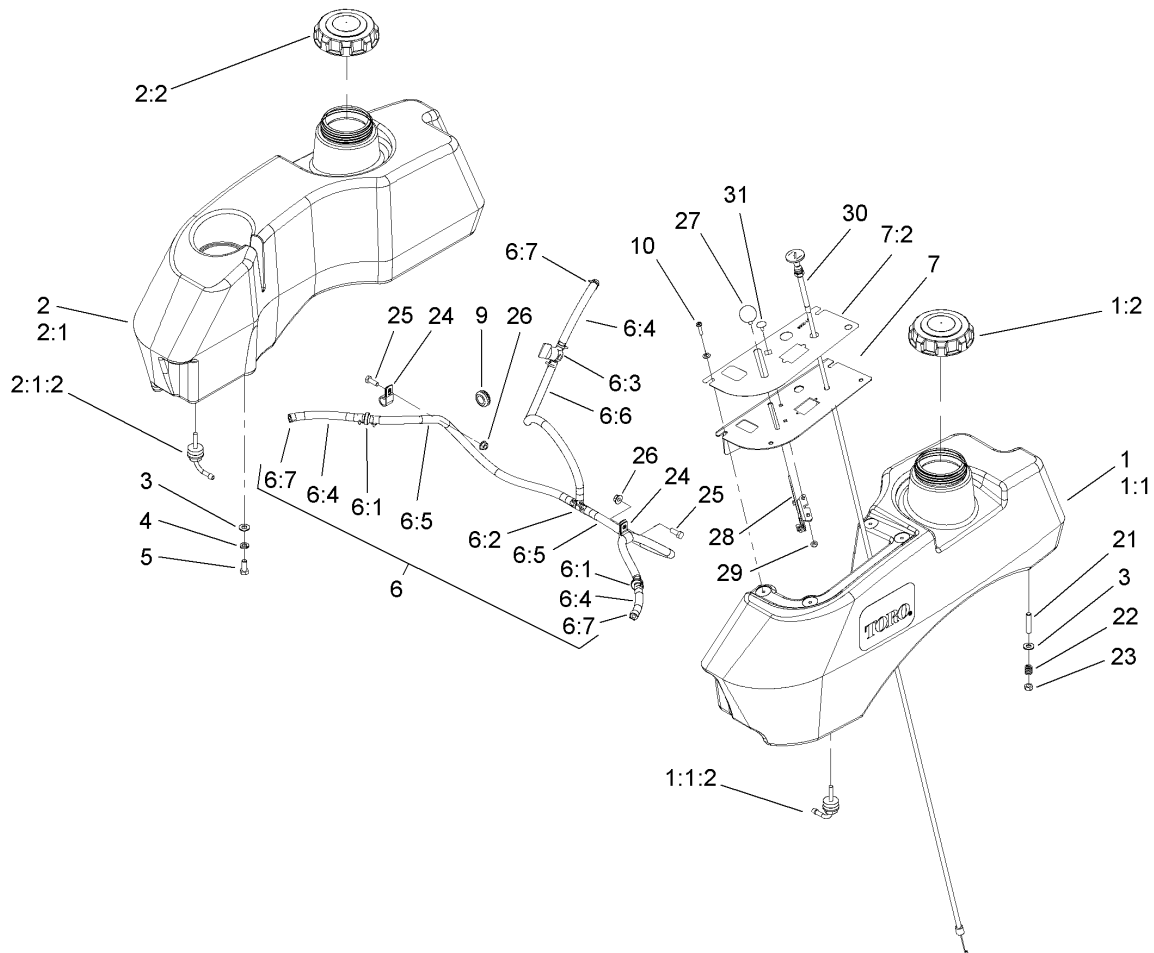

Fuel System Assembly

Ref	Part No.	Qty.	Description
1	110-4165	1	LH Fuel Tank Service Kit
2	105-3639	1	RH Fuel Tank Service Kit
2:1	103-2605	1	Fitting-Fuel, Bulkhead
2:1:2	103-2605	1	Fitting-Fuel, Bulkhead
2:2	109-0346	1	Cap-Fuel, Gas
2:2:1	109-0346	1	Cap-Fuel, Gas
2:2:2	109-0346	1	Cap-Fuel, Gas
3	3256-23	8	Washer-Flat
4	1-805005	4	Washer-Lock
5	322-3	4	Screw-HH
6	1-303077	12	Fuel Line ASM
6:1	99-5000	2	Valve-Check, Fuel
6:2	99-5005	1	Fitting-Tee, Barbed
6:3	1-603770	1	Valve-Fuel
6:4	109-0678	3	Hose-Fuel
6:5	110-5701	2	Hose-Fuel
6:6	109-0297	1	Hose-Fuel
6:7	1-303077	12	Clamp
7	107-2149	1	Control Panel ASM
7:2	110-0439	1	Decal-Panel, Control
9	1-543296	2	Grommet
10	109-2661	4	Screw-PPH
21	1-633023	4	Stud

Ref	Part No.	Qty.	Description
22	1-633349	4	Spring-Tank, Fuel
23	3296-47	4	Nut-Lock, NI
24	1-513762	2	Clip-Loom
25	321-4	2	Screw-HH
26	32128-33	2	Nut-HF
27	1-513592	1	Knob-Ball
28	1-633696	1	Throttle Cable ASM
29	3296-2	2	Nut-Lock
30	106-9962	1	Control-Choke, Push / Pull
31	1-807513	2	Bolt-CARR

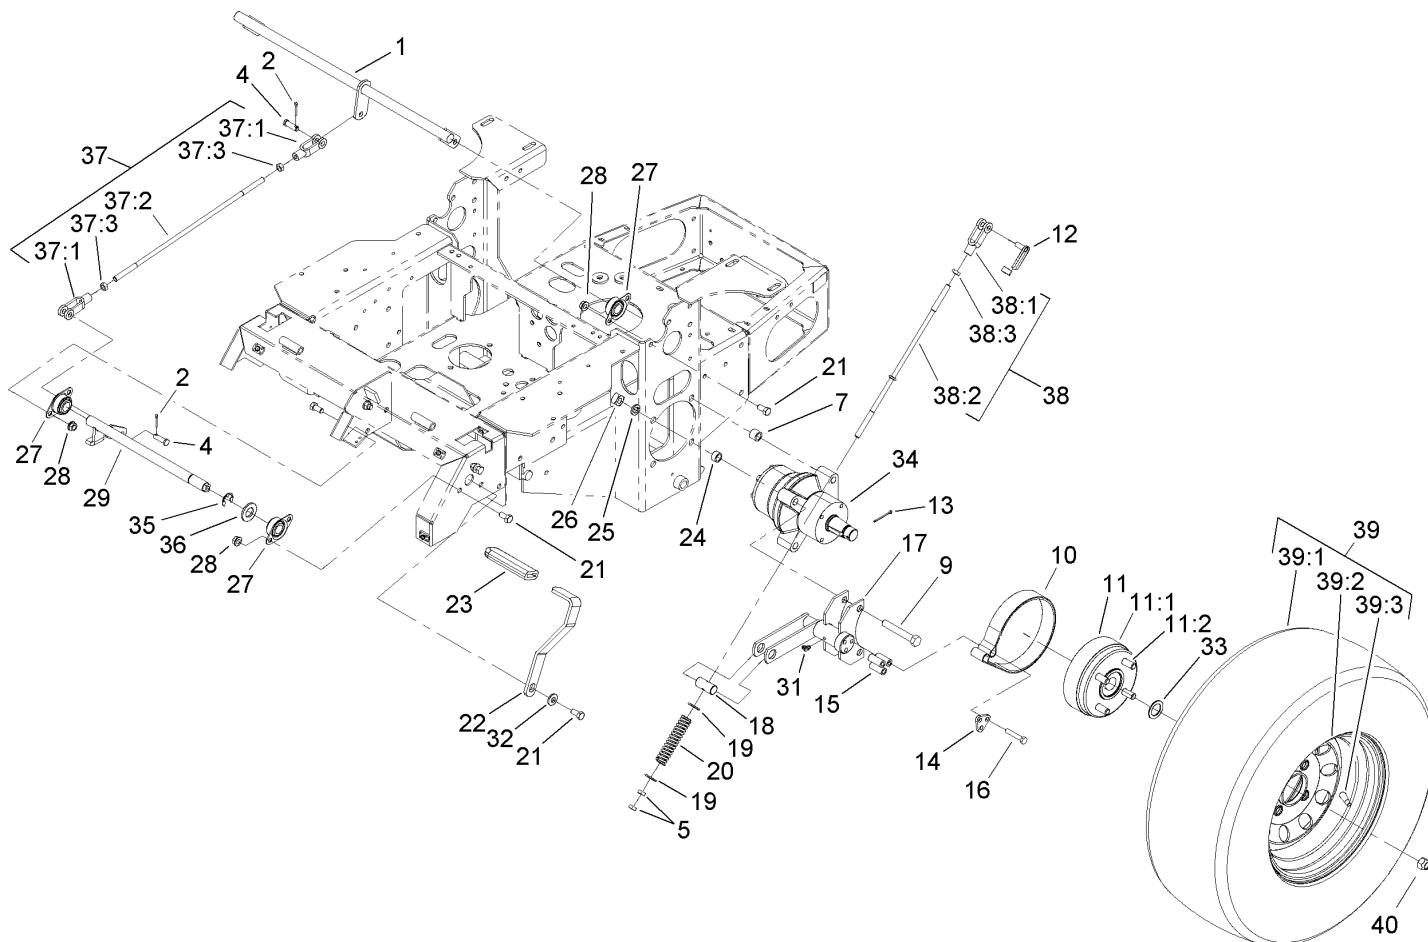


Parking Brake Assembly

Ref	Part No.	Qty.	Description
1	1-652073-03	1	Crank-Brake, Park
2	3272-10	2	Pin-Cotter
4	1-808285	2	Pin-Clevis
5	3219-3	4	Nut-Hex
7	1-653068	4	Spacer-Wheel
9	325-13	8	Screw-HH
10	103-0355	2	Band-Brake
11		2	Hub And Wheel ASM
11:1	103-0589	1	Wheel Hub ASM
11:2	1-633926	4	Stud-Wheel
12	103-2399	2	Pin-Spring, Clevis
13	1-806800	2	Pin-Cotter
14	103-0374	2	Retainer-Band, Brake
15	103-0384	6	Spacer
16	322-9	6	Screw-HH
17	103-0352-03	2	Bracket-Brake
18	1-633144	2	Pin-Trunion
19	3256-4	4	Washer-Flat
20	1-633454	2	Spring-Brake
21	323-4	9	Screw-HH
22	1-653074-03	1	Handle-Brake, Park
23	1-633268	1	Grip-Lever, Brake
24	1-653069	4	Spacer-Wheel
25	3253-7	8	Washer-Lock

Ref	Part No.	Qty.	Description
26	103-0131	8	Nut-Square
27	1-633102	4	Bearing-Flange, Side
28	3290-357	8	Nut-HHF, Whiz
29	103-3116	1	Shaft-Brake, Parking
31	1481	2	Fitting-Grease
32	98-5975	1	Washer-Belleville
33	1-523157	2	Washer-Spacer
34	103-5333	2	Motor-Wheel
●34:1	109-5965	1	Wheel Motor Seal Kit
●34:2	109-5966	1	Wheel Motor Seal Kit
35	32151-48	1	E-Ring
36	3256-28	1	Washer-Flat
37	103-4328	1	Brake Rod ASM
37:1	1-633131	2	Yoke-Linkage, Brake
37:2	1-653061	1	Linkage-Handle, Brake
37:3	3219-3	2	Nut-Hex
38	103-4329	2	Brake Rod ASM
38:1	1-633131	1	Yoke-Linkage, Brake
38:2	103-0356	1	Rod-Brake
38:3	3219-3	1	Nut-Hex
39	1-653159	2	Wheel And Tire ASM
39:1	1-653160	1	Tire
39:2	1-653161	1	Wheel
39:3	232-27	1	Stem-Valve




Ref	Part No.	Qty.	Description
40	242-50	8	Nut-Lug

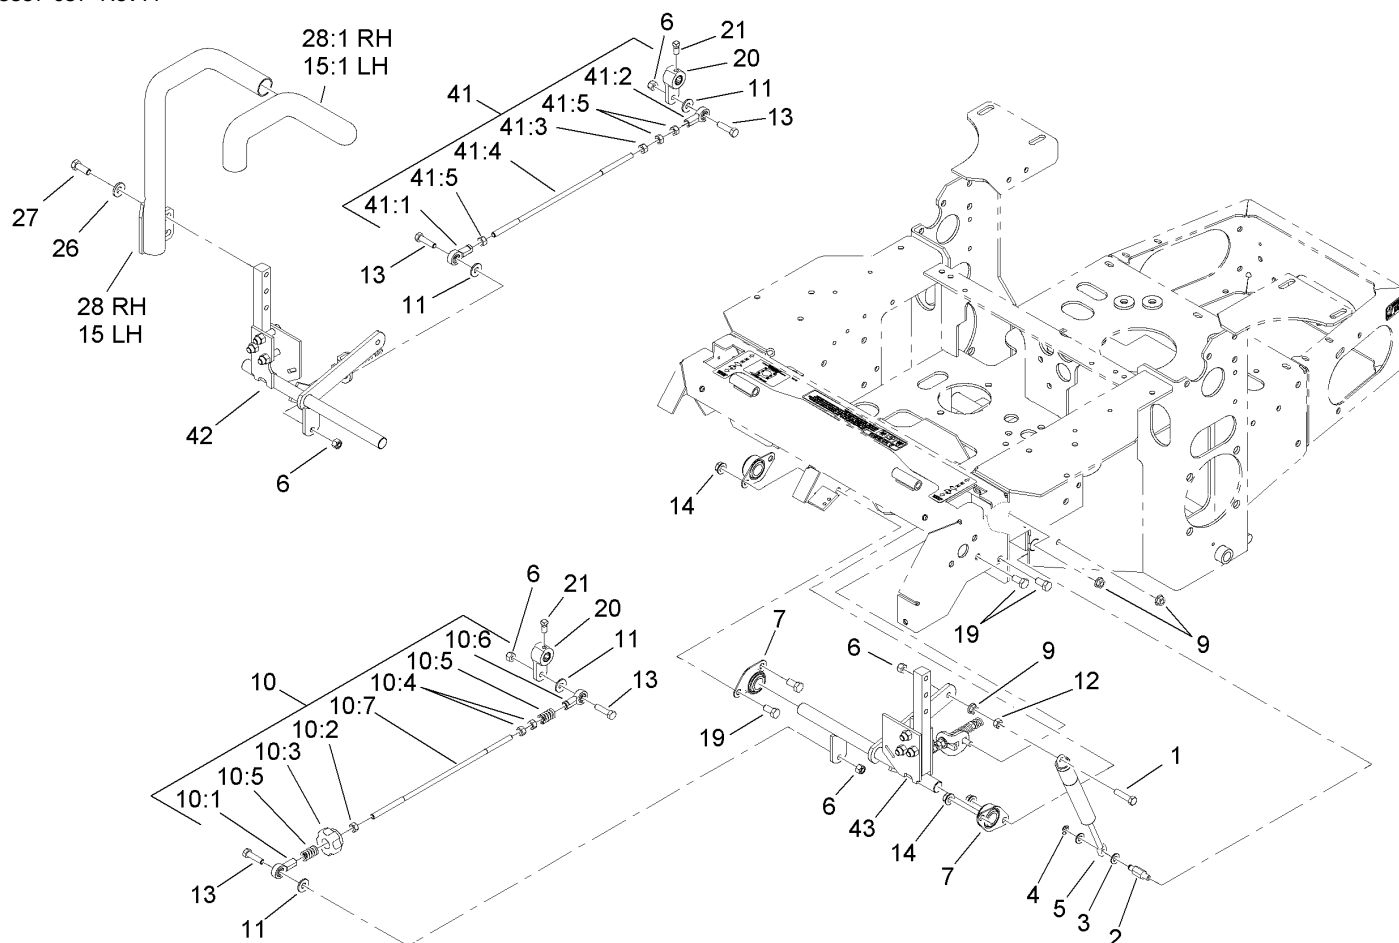

Motion Control Assembly


Ref	Part No.	Qty.	Description
1	1-403180	2	Screw-HH
2	103-4101	2	Pin-Damper
3	3256-23	4	Washer-Flat
4	32120-35	2	Ring-Retaining, EXT
5	109-2339	2	Damper-Control, Motion
6	3296-29	6	Nut-Lock, NI
7	1-633102	4	Bearing-Flange, Side
9	32128-20	10	Nut-HF
10	103-4326	1	Tracking Rod ASM
10:1	1-543017	1	Balljoint-RH
10:2	3219-2	1	Nut-Hex
10:3	103-3060	1	Knob-Tracking
10:4	1-804524	2	Nut
10:5	1-323245	2	Spring-Compression
10:6	1-633152	1	Balljoint-LH
10:7	103-3066	1	Link-Rod, Tracking
11	3256-3	4	Washer-Flat
12	3217-6	2	Nut-Hex
13	322-6	4	Screw-HH
14	3290-357	6	Nut-HHF, Whiz
15	108-7238	1	LH Lever ASM
15:1	106-9987	1	Grip-Control, Motion
19	323-4	6	Screw-HH
20	103-3717	2	Arm-Control

Ref	Part No.	Qty.	Description
21	1-803022	2	Screw-Set
26	98-5975	4	Washer-Belleville
27	323-6	4	Screw-HH
28	108-7237	1	RH Lever ASM
28:1	106-9987	1	Grip-Control, Motion
41	103-4327	1	Tracking ASM
41:1	1-543017	1	Balljoint-RH
41:2	1-633152	1	Balljoint-LH
41:3	1-804524	1	Nut
41:4	103-3066	1	Link-Rod, Tracking
41:5	3219-2	3	Nut-Hex
42	109-3911	1	RH Motion Control ASM
43	109-3912	1	LH Motion Control ASM

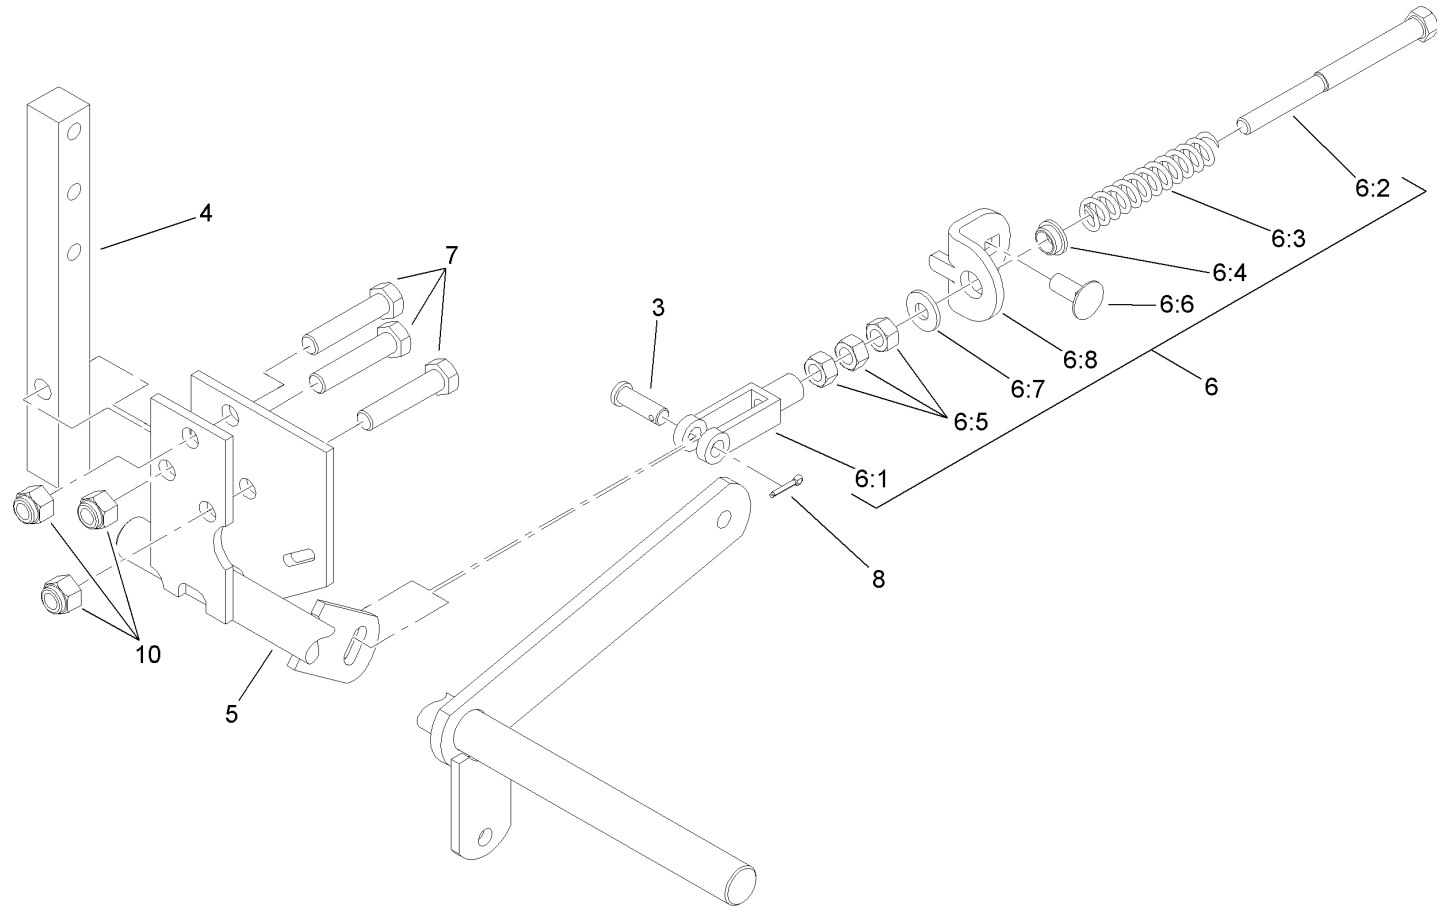


RH Motion Control Assembly No.109-3911

Ref	Part No.	Qty.	Description				
3	1-808280	1	Pin-Clevis				
4	103-0407	1	Arm-Shaft, Control				
5	103-4773	1	Control-Motion, RH				
6	109-3903	1	Neutral Return ASM				
6:1	1-303105	1	Yoke-Adjustable				
6:2	1-603737	1	Bolt-Return, Neutral				
6:3	1-603807	1	Spring-Return, Neutral				
6:4	109-3769	1	Bushing-Nylon, Flanged				
6:5	3219-2	3	Nut-Hex				
6:6	3230-23	1	Screw-CARR				
6:7	3256-2	1	Washer-Flat				
6:8	109-3908	1	Tab-Adjustment				
7	323-9	3	Screw-HH				
8	3272-5	1	Pin-Cotter				
10	3296-39	3	Nut-Lock, NI				

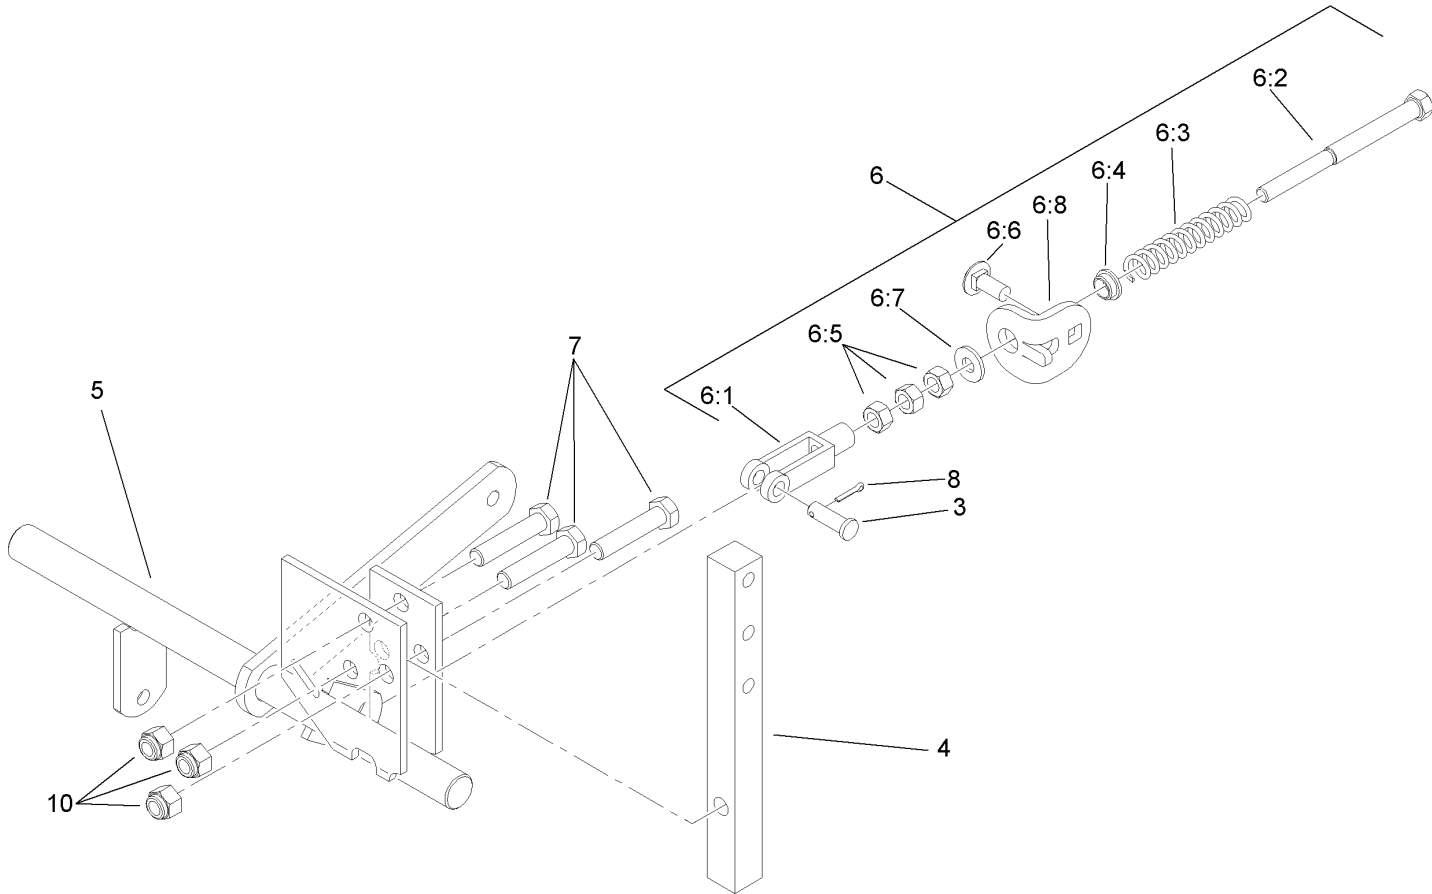

LH Motion Control Assembly No. 109-3912


Ref	Part No.	Qty.	Description				
3	1-808280	1	Pin-Clevis				
4	103-0407	1	Arm-Shaft, Control				
5	103-4774	1	Control-Motion, LH				
6	109-3903	1	Neutral Return ASM				
6:1	1-303105	1	Yoke-Adjustable				
6:2	1-603737	1	Bolt-Return, Neutral				
6:3	1-603807	1	Spring-Return, Neutral				
6:4	109-3769	1	Bushing-Nylon, Flanged				
6:5	3219-2	3	Nut-Hex				
6:6	3230-23	1	Screw-CARR				
6:7	3256-2	1	Washer-Flat				
6:8	109-3908	1	Tab-Adjustment				
7	323-9	3	Screw-HH				
8	3272-5	1	Pin-Cotter				
10	3296-39	3	Nut-Lock, NI				

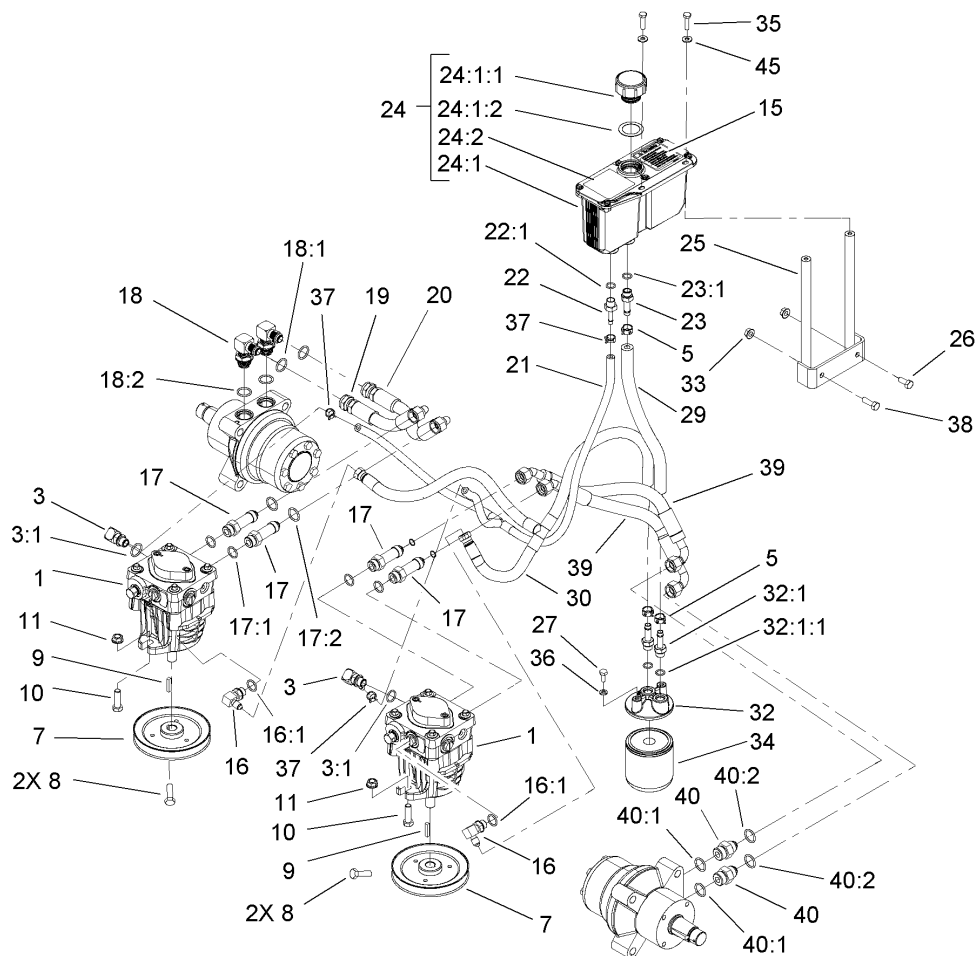

Hydraulic System Assembly


Ref	Part No.	Qty.	Description
1	103-1942	2	Pump-HYD
3	103-1799	2	Elbow-90 DEG
3:1	237-42	1	O-Ring
5	103-1988	3	Clamp-Hose
7	1-653156	2	Pulley
8	1-803050	4	Screw-Set
9	1-807272	2	Key
10	323-7	4	Screw-HH
11	3290-357	4	Nut-HHF, Whiz
15	103-2644	1	Decal-Exhaust
16	103-1802	2	Fitting-HYD, 90 DEG
16:1	1-603921	1	O-Ring
17	103-1940	4	Adapter-HYD, Straight
17:1	237-79	1	O-Ring
17:2	1-603992	1	O-Ring
18	1-633605	2	Fitting-HYD, 90 DEG
18:1	1-603992	1	O-Ring
18:2	237-80	1	O-Ring
19	1-653186	1	Hose-Front
20	1-653187	1	Hose-Rear, RH
21	103-2357	1	HYD Hose ASM
22	103-1801	1	Adapter-Straight
22:1	237-42	1	O-Ring
23	103-1912	1	Adapter-Straight

Ref	Part No.	Qty.	Description
23:1	237-42	1	O-Ring
24	103-1947	1	HYD Reservoir ASM
24:1		1	Reservoir-HYD
24:1:1	103-1948	1	Cap-Reservoir, HYD
24:1:2	103-1949	1	Gasket-Cap
24:2	1-523552	1	Decal-Tank, HYD
25	103-3071-03	1	Stand-Reservoir
26	322-3	1	Screw-HH
27	321-3	2	Screw-HH
29	103-3077	1	HYD Hose ASM
30	103-2930	1	HYD Hose ASM
32	103-2889	1	Filter Head ASM
32:1	103-1912	2	Adapter-Straight
32:1:1	237-42	1	O-Ring
33	32128-20	2	Nut-HF
34	1-633750	1	Filter-Oil, HYD
34	1-633752	1	Filter-HYD, Winter
35	321-6	2	Screw-HH
36	1-805004	2	Washer-Lock
37	103-1716	3	Clamp-Hose
38	322-5	1	Screw-HH
39	103-3809	2	Hose-LH
40	1-603991	2	Fitting-Straight
40:1	237-80	1	O-Ring

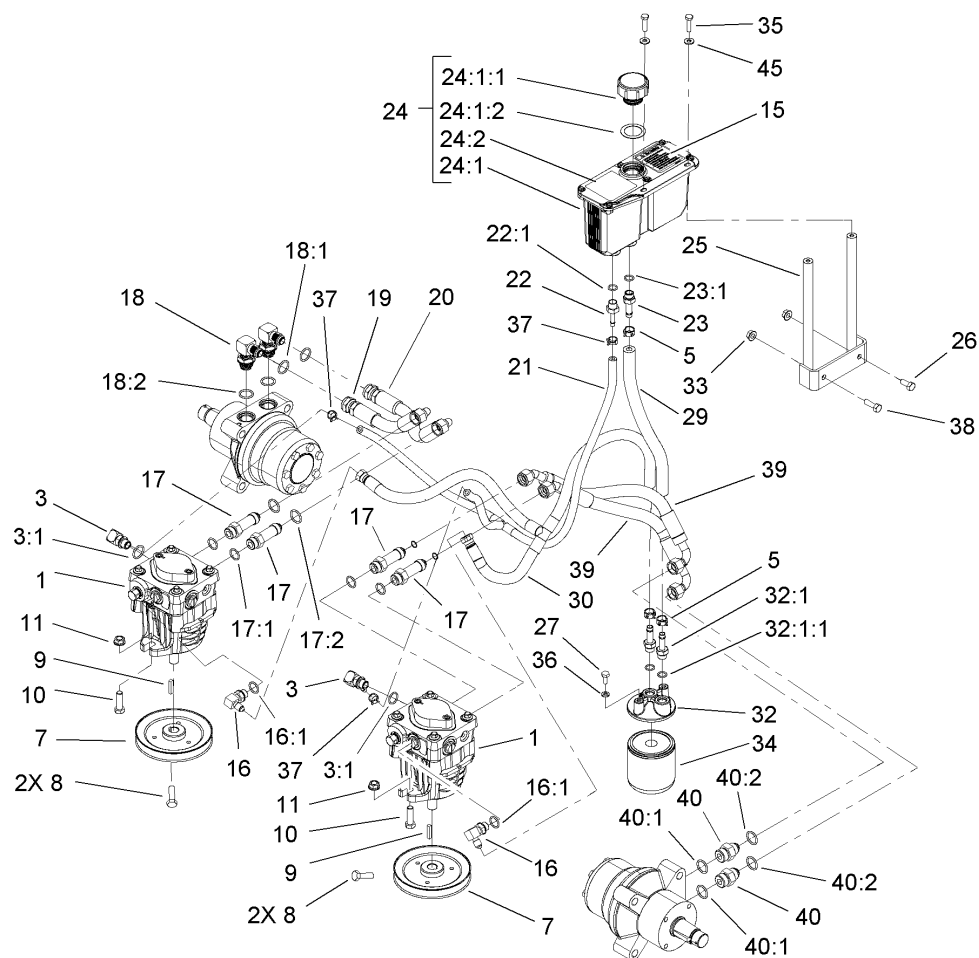


Hydraulic System Assembly (continued)

Ref	Part No.	Qty.	Description
40:2	1-603992	1	O-Ring
45	3256-22	2	Washer-Flat

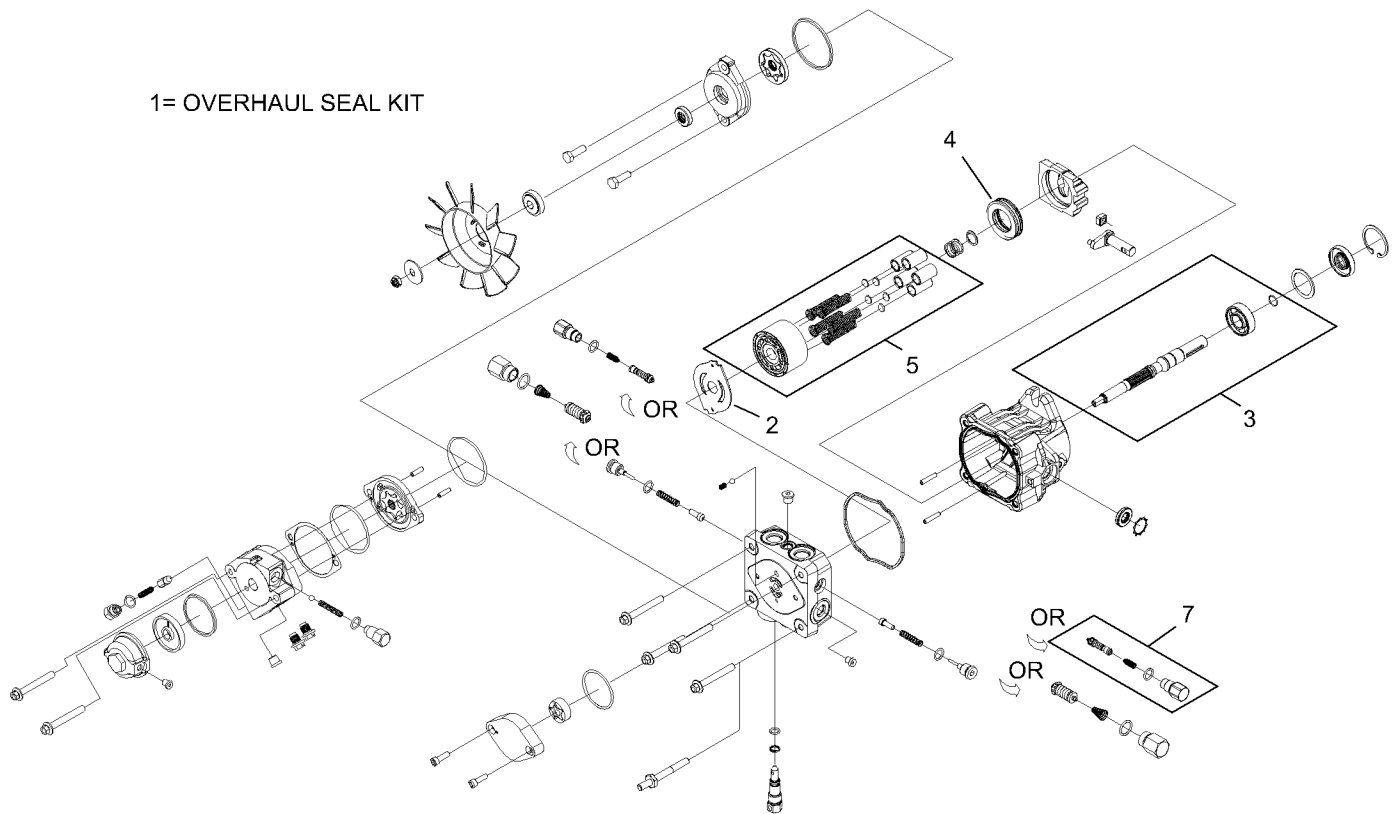


Hydraulic Pump Assembly No. 103-1942

Ref	Part No.	Qty.	Description				
1	105-6184	1	Overhaul Seal Kit				
2	105-6185	1	Plate-Valve				
3	103-2664	1	Input Shaft Kit				
4	94-6922	1	Bearing-Thrust				
5	103-2666	1	Cylinder Block Kit				
7	106-2053	1	Shock Valve Kit				

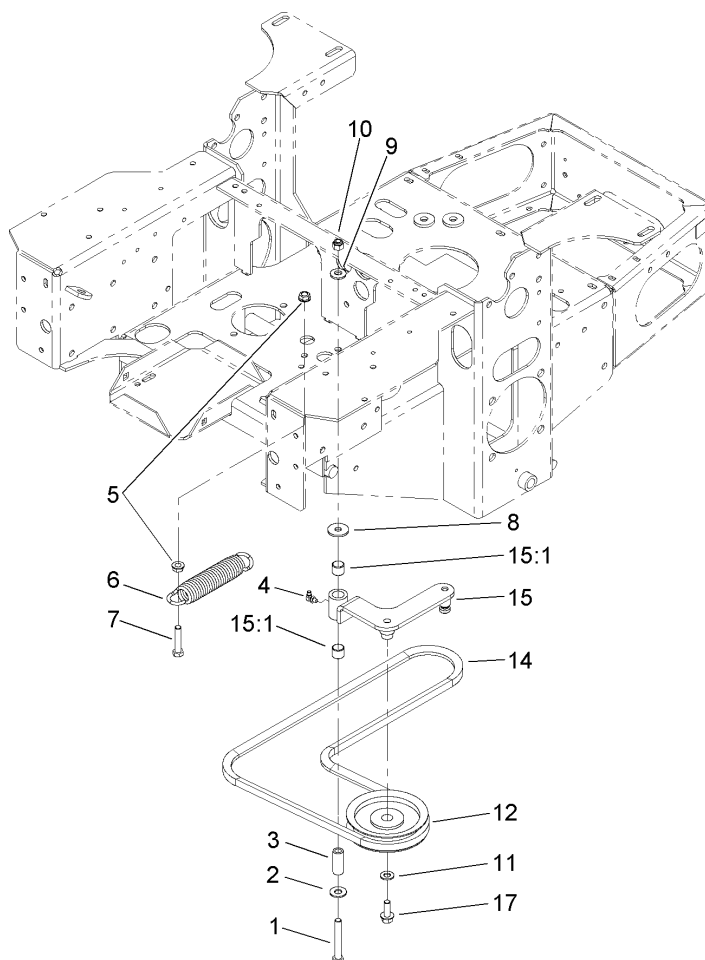

Pump Idler and Belt Assembly


Ref	Part No.	Qty.	Description				
1	323-13	1	Screw-HH				
2	3256-4	1	Washer-Flat				
3	1-603044	1	Bushing				
4	302-40	1	Fitting-Grease				
5	3290-357	2	Nut-HHF, Whiz				
6	103-4480	1	Spring-Extension				
7	323-9	1	Screw-HH				
8	63-8410	1	Washer				
9	98-5975	1	Washer-Belleville				
10	3296-39	1	Nut-Lock, NI				
11	3256-24	1	Washer-Flat				
12	1-603843	1	Pulley-Idler				
14	107-3960	1	Belt				
15	103-4482	1	Idler Arm ASM				
15:1	103-4681	2	Sleeve-Bearing				
17	3234-11	1	Screw-HHF				

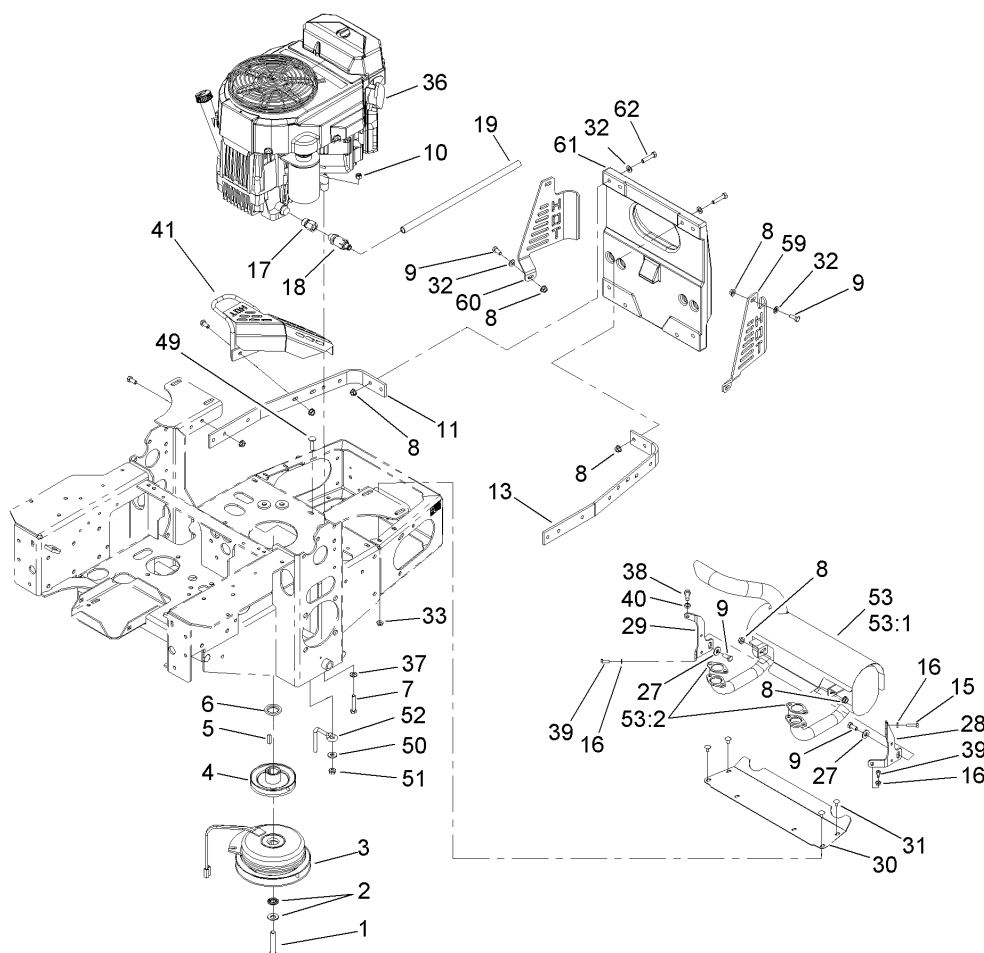

Engine, Clutch and Muffler Assembly


Ref	Part No.	Qty.	Description
1	3212-12	1	Screw-HH
2	1-603610	2	Washer-Spring
3	109-2916	1	Clutch
4	103-3913	1	Pulley
5	1-807259	1	Key
6	103-2308	1	Spacer-Crankshaft
7	322-9	4	Screw-HH
8	32128-20	29	Nut-HF
9	322-3	15	Screw-HH
10	3296-29	4	Nut-Lock, NI
11	103-3078-03	1	Strap-Guard, RH
13	103-3164-03	1	Strap-Guard, LH
15	33113-025	1	Screw-HH
16	1-805004	3	Washer-Lock
17	103-1966	1	Adapter
18	92-6877	1	Valve-Drain, Oil
19	106-7022	1	Tube-Drain, Oil
27	3256-3	3	Washer-Flat
28	103-2993-03	1	Bracket-Muffler, LH
29	103-2994-03	1	Bracket-Muffler, RH
30	103-2740-03	1	Deflector-Short
31	3229-10	4	Screw-CARR
32	3256-23	12	Washer-Flat
33	32128-33	4	Nut-HF

Ref	Part No.	Qty.	Description
36		1	Engine-Kawasaki, FH641V-As19
37	1-303334	4	Washer-Spring
38	33114-025	1	Screw-HH
39	33113-016	2	Screw-HH
40	1-805005	1	Washer-Lock
41	103-3218-03	1	Guard-Tailpipe
49	3230-3	1	Screw-CARR
50	3256-3	1	Washer-Flat
51	32128-20	1	Nut-HF
52	108-1058	1	Rod-Belt
53	103-3427	1	Muffler Kit
53:1	103-2761	1	Muffler
53:2	1-653313	2	Gasket-Exhaust
59	103-3287-03	1	Guard-Muffler, LH
60	103-3288-03	1	Guard-Muffler, RH
61	107-8421-03	1	Weight-Notched, 60 Lb
62	322-7	8	Screw-HH

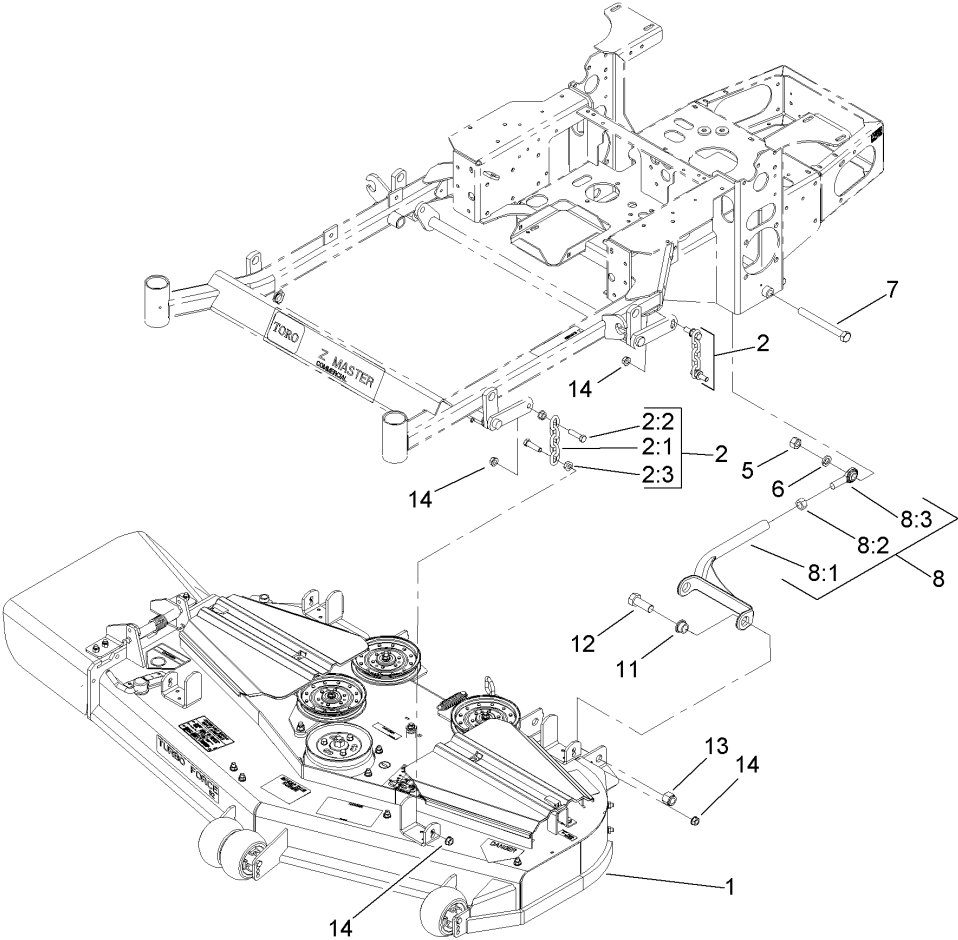


Deck Connection Assembly

Ref	Part No.	Qty.	Description				
1	107-1670	1	Deck ASM				
2	103-9792	4	Deck Chain ASM				
2:1	1-633447	1	Chain-Lift, Deck				
2:2	103-1898	2	Screw-HH				
2:3	32128-37	2	Nut-HF				
5	3217-11	2	Nut-Hex				
6	3253-8	2	Washer-Lock				
7	1-800344	2	Screw				
8	108-7768	2	Strut ASM				
8:1	108-7753-03	1	Strut-Deck				
8:2	3219-6	1	Nut-Hex				
8:3	1-633029	1	Balljoint-Spherical				
11	93-2877	4	Bushing				
12	328-24	4	Screw-HH				
13	3296-51	4	Nut-Lock, NI				
14	32128-37	8	Nut-HF				

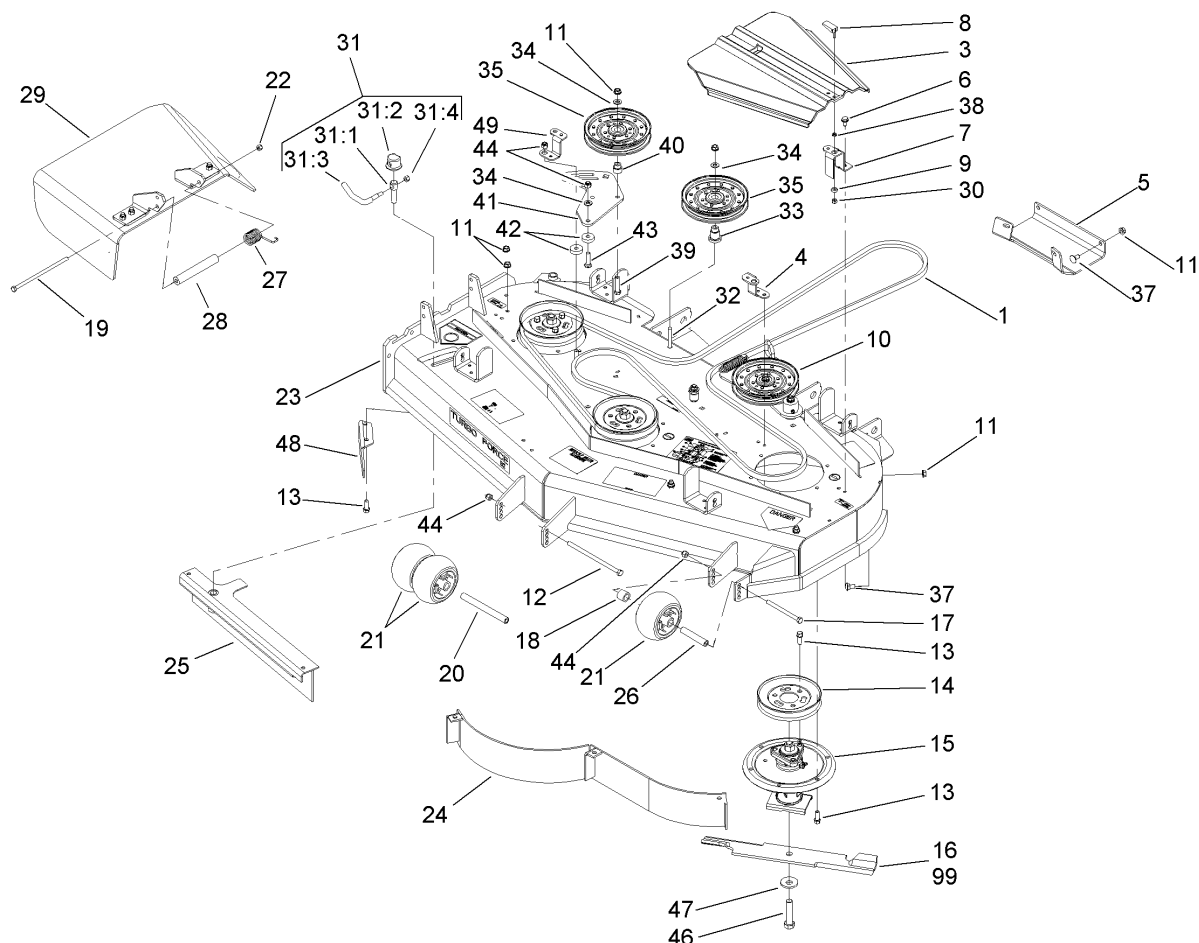


Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-7369	1	Belt-V	26	98-7912	1	Tube-Spanner
3	107-8536	2	Cover-Belt	27	108-4052	1	Spring-Torsion
4	108-2177-01	1	Bracket-Cover, Tall	28	105-4622	1	Spacer
5	106-7358-01	1	Plate-Skid	29	108-2792	1	Rubber Deflector ASM
6	32144-70	3	Screw-HWHTF	30	1-804254	2	Nut
7	108-4121-01	2	Bracket-Cover	31	107-1664	1	Lever ASM
8	106-6777	2	Handle-Latch, Swell	31:1	106-3239	1	Screw-Lock
9	106-6778	2	Bushing-Latch, Swell	31:2	107-1644	1	Cap-Lock
10		1	Spring Idler ASM	31:3	106-3241	1	Lever-Lock
11	3290-357	36	Nut-HHF, Whiz	31:4	3296-29	1	Nut-Lock, NI
12	323-28	1	Screw-HH	32	3231-31	1	Screw-CARR
13	92-1624	33	Screw	33	106-3214	1	Mount-Pulley
14	107-1683	3	Pulley	34	3256-24	3	Washer-Flat
15	107-8504	3	Spindle ASM	35	1-633109	2	Idler-Flat
16	105-7781-03	3	Blade-Hi Flow	37	3231-1	10	Screw-CARR
17	323-23	1	Screw-HH	38	99-3058	2	Washer
18	98-7913	1	Tube-Spacer	39	323-9	1	Screw-HH
19	322-50	1	Screw-HH	40	1-603496	1	Bushing-Idler
20	98-5967	1	Spacer-Wheel	41	107-8516-01	1	Plate-Idler
21	1-603299	3	Roller-Scalp, Anti	42	105-7788	2	Spacer
22	3296-29	1	Nut-Lock, NI	43	3231-4	2	Screw-CARR
23	107-1669	1	Deck ASM	44	3296-39	6	Nut-Lock, NI
24	105-7754-01	1	Baffle ASM	46	103-0862	3	Screw-Cap
25	105-7755-01	1	Baffle ASM	47	103-0865	3	Washer-Blade Bolt, Heavy

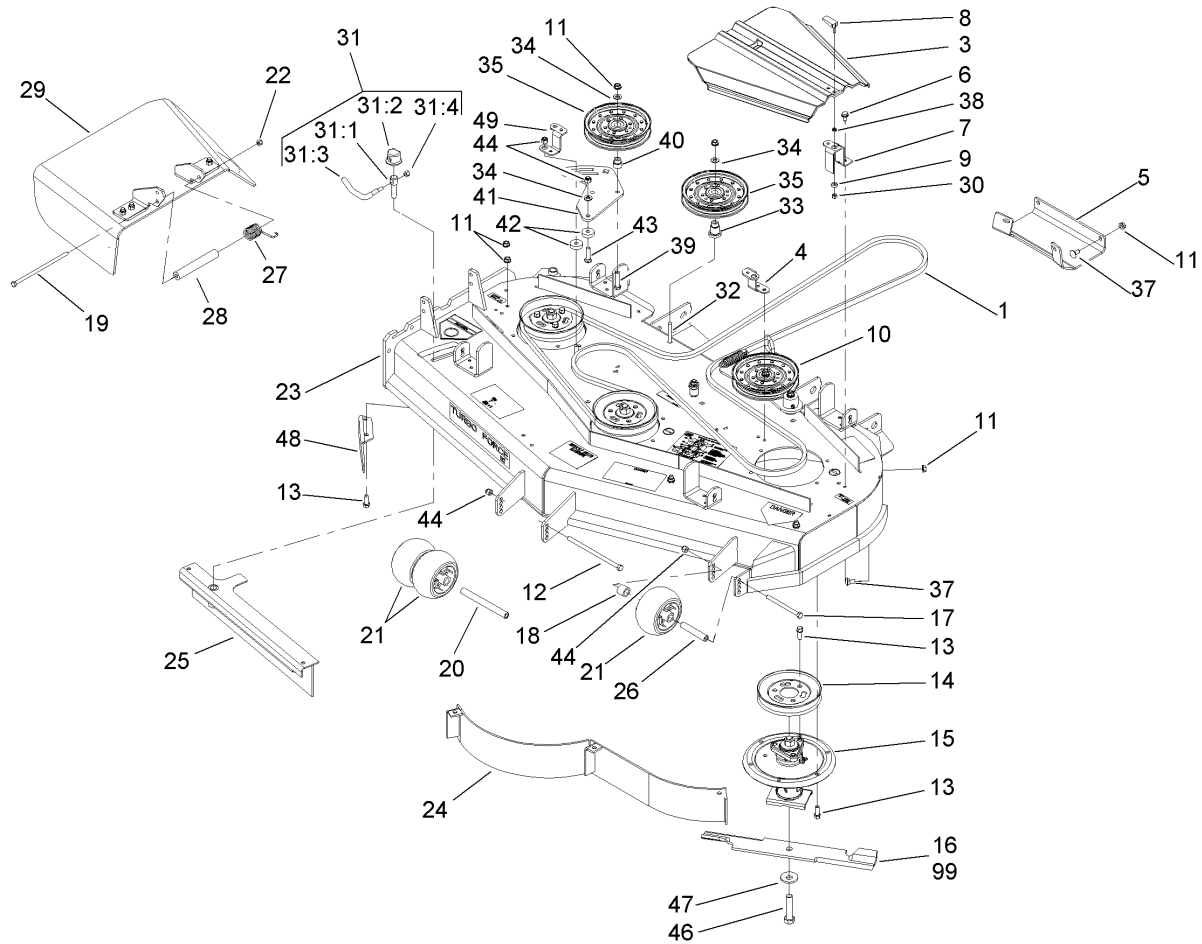


Deck Assembly (continued)

Ref	Part No.	Qty.	Description				
48	106-3216-01	1	Baffle-Discharge				
49	108-2178-01	1	Bracket-Cover, Short				
999	105-7796-03	3	Blade-Atomic				
999	105-7795-03	3	Blade-Low Flow				
999	105-7794-03	3	Blade-Med Flow				
999	105-7779-03	3	Blade-Recycler				

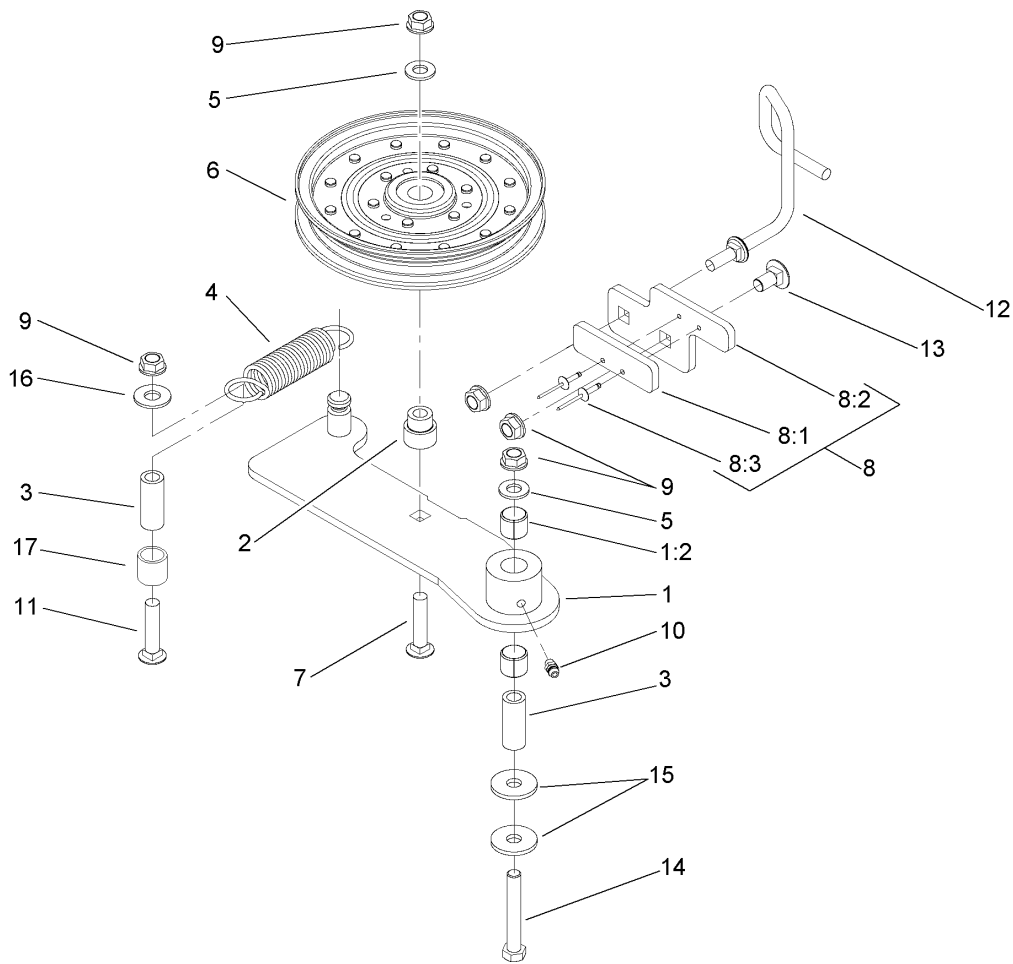


Idler Assembly

Ref	Part No.	Qty.	Description				
1	108-4062	1	Idler Arm ASM				
1:2	103-4681	2	Sleeve-Bearing				
2	1-603496	1	Bushing-Idler				
3	1-603044	2	Bushing				
4	108-4056	1	Spring-Extension				
5	3256-24	2	Washer-Flat				
6	1-633109	1	Idler-Flat				
7	3231-6	1	Screw-CARR				
8		1	Stop Pad ASM				
8:1	106-3229	1	Pad-Bumper				
8:2	107-1697-01	1	Plate-Stop				
8:3	3269-24	2	Rivet				
9	3290-357	5	Nut-HHF, Whiz				
10	302-5	1	Fitting-Grease				
11	3231-31	1	Screw-CARR				
12	108-4072	1	Guide-Belt				
13	3231-1	1	Screw-CARR				
14	323-12	1	Screw-HH				
15	2844	2	Washer				
16	3256-4	1	Washer-Flat				
17	108-4063	1	Spacer-Rubber				

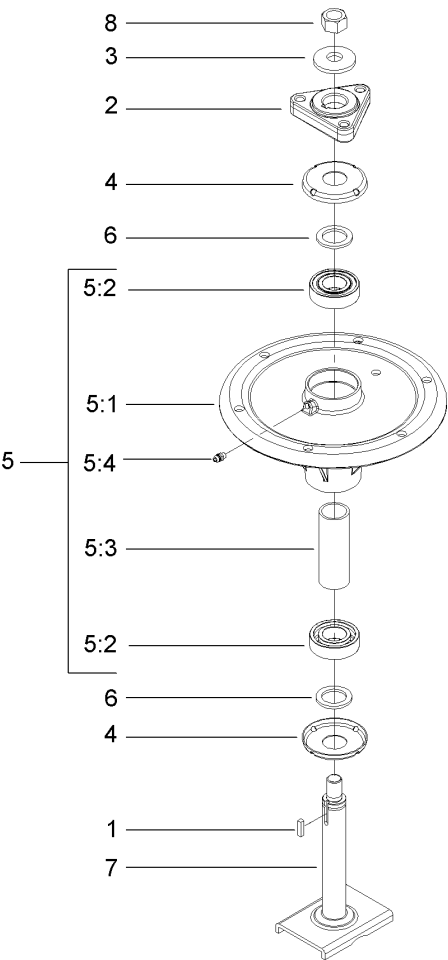


Spindle Assembly No. 107-8504

Ref	Part No.	Qty.	Description				
1	10-8040	1	Key-Square				
2	106-3277	1	Hub-Pulley				
3	103-0865	1	Washer-Blade Bolt, Heavy				
4	106-3204	2	Shield-Bearing				
5		1	Spindle Bearing ASM				
5:1	106-3211	1	Housing-Spindle				
5:2	113514	2	Bearing-Ball				
5:3	107-8502	1	Spacer-Bearing				
5:4	302-5	1	Fitting-Grease				
6	3-8514	2	Washer-Thrust				
7	107-8501	1	Spindle ASM				
8	3219-6	1	Nut-Hex				

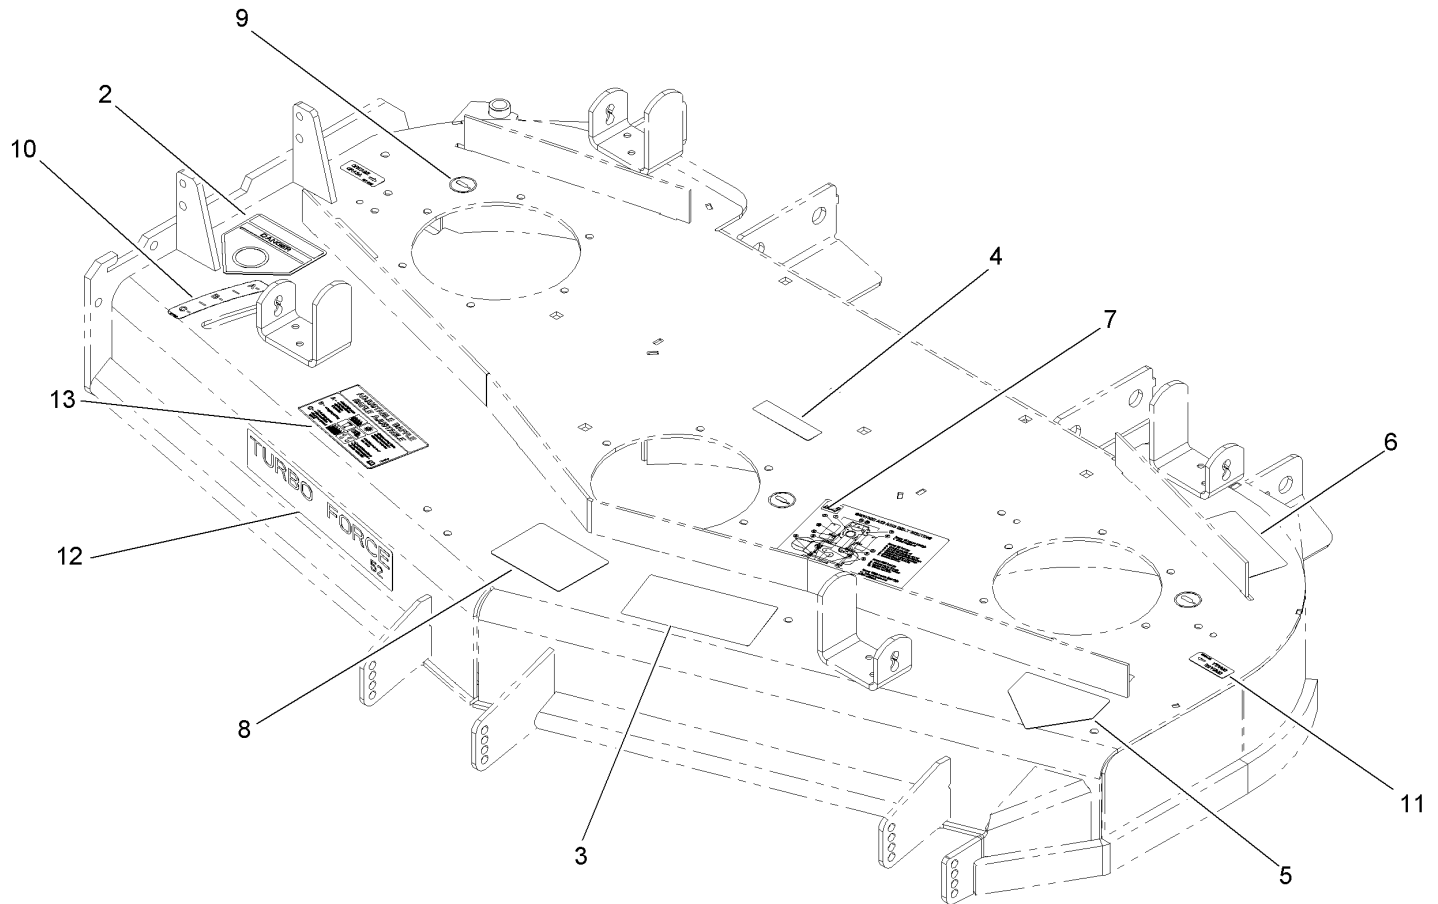


Deck Decal Assembly No. 107-1669

Ref	Part No.	Qty.	Description				
2	54-9220	1	Decal-Danger				
3	66-1340	1	Decal-Danger				
4	98-5954	3	Decal-Cover, Missing				
5	1-403005	1	Decal-Danger				
6	68-8340	1	Decal-Torque				
7	107-1687	1	Decal-Aid, Service				
8	105-7798	1	Decal-Scalp, Anti				
9	58-6520	3	Decal-Grease				
10	110-2067	1	Decal-Setting, Baffle				
11	107-1613	2	Decal-Grease				
12	107-1618	1	Decal				
13	110-2068	1	Decal-Adjustment, Baffle				

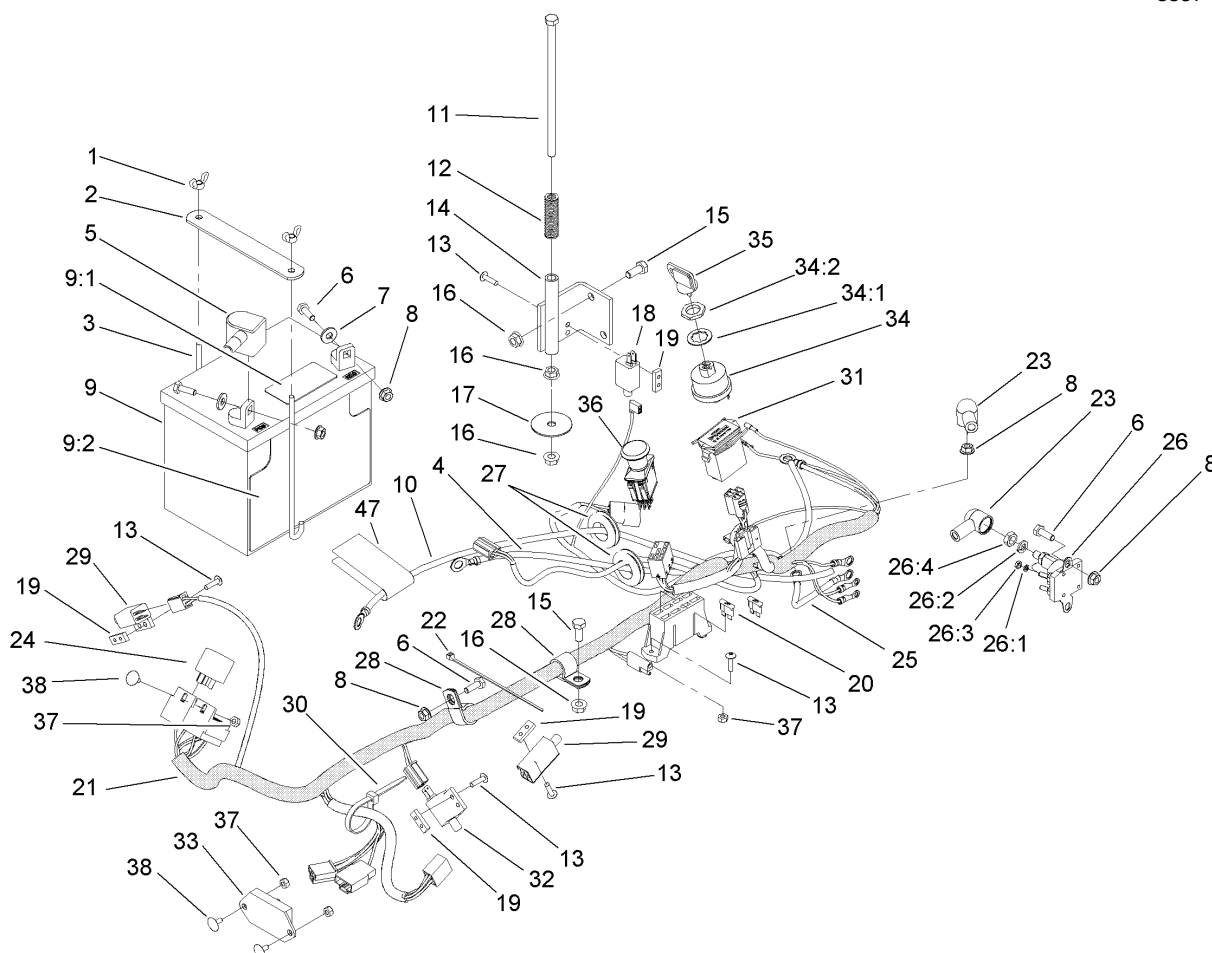


Electrical System Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-543792	2	Wingnut	23	1-543393	3	Insulator-Solenoid
2	107-9277-03	1	Strap-Holddown, Battery	24	1-643275	2	Relay
3	1-633651	2	Bolt-Holddown	25	1-633306	1	Cable-Starter, Positive
4	103-0705	1	Cable-Ground, Negative	26	1-513075	1	Switch-Solenoid
5	1-543391	1	Insulator-Battery	26:1	3253-17	2	Washer-Lock
6	321-4	5	Screw-HH	26:2	3253-4	2	Washer-Lock
7	3256-2	2	Washer-Flat	26:3	3219-14	2	Nut-Hex
8	32128-33	6	Nut-HF	26:4	3220-2	2	Nut-Jam
9	105-1692	1	Battery	27	1-543286	2	Grommet
9:1	104-4163	1	Decal-Battery	28	1-633396	2	Clip-Loom
9:2	104-4164	1	Decal-Battery	29	1-513051	2	Switch-Open, Normally
10	103-0707	1	Cable-Battery, Positive	30	1-303335	4	Tie-Plastic
11	1-800282	1	Screw-HH	31	1-513374	1	Meter-Hour
12	1-523415	1	Spring-Switch, Seat	32	1-633111	1	Switch
13	1-803075	10	Screw-Head, Truss	33	100-6186	1	Module-Delay, Seat
14	1-652072-03	1	Bracket-Switch, Seat	34	104-2541	1	Switch-Key
15	322-3	3	Screw-HH	34:1	218-461	1	Nut-HH
16	32128-20	5	Nut-HF	34:2	3254-5	1	Washer-Tooth
17	1-653036	1	Washer	35	63-8360	2	Key-Ignition
18	1-513152	1	Switch-Closed, Normally	36	103-5221	1	Switch-PTO
19	1-633181	4	Plate-Tapped	37	3296-2	6	Nut-Lock
20	1-816001	2	Fuse-Blade Type, 20 Amp	38	1-807513	4	Bolt-CARR
21	110-0318	1	Harness-Electrical	47	107-9309	1	Decal-Instructions, Charging
22	1-303287	3	Tie-Plastic				

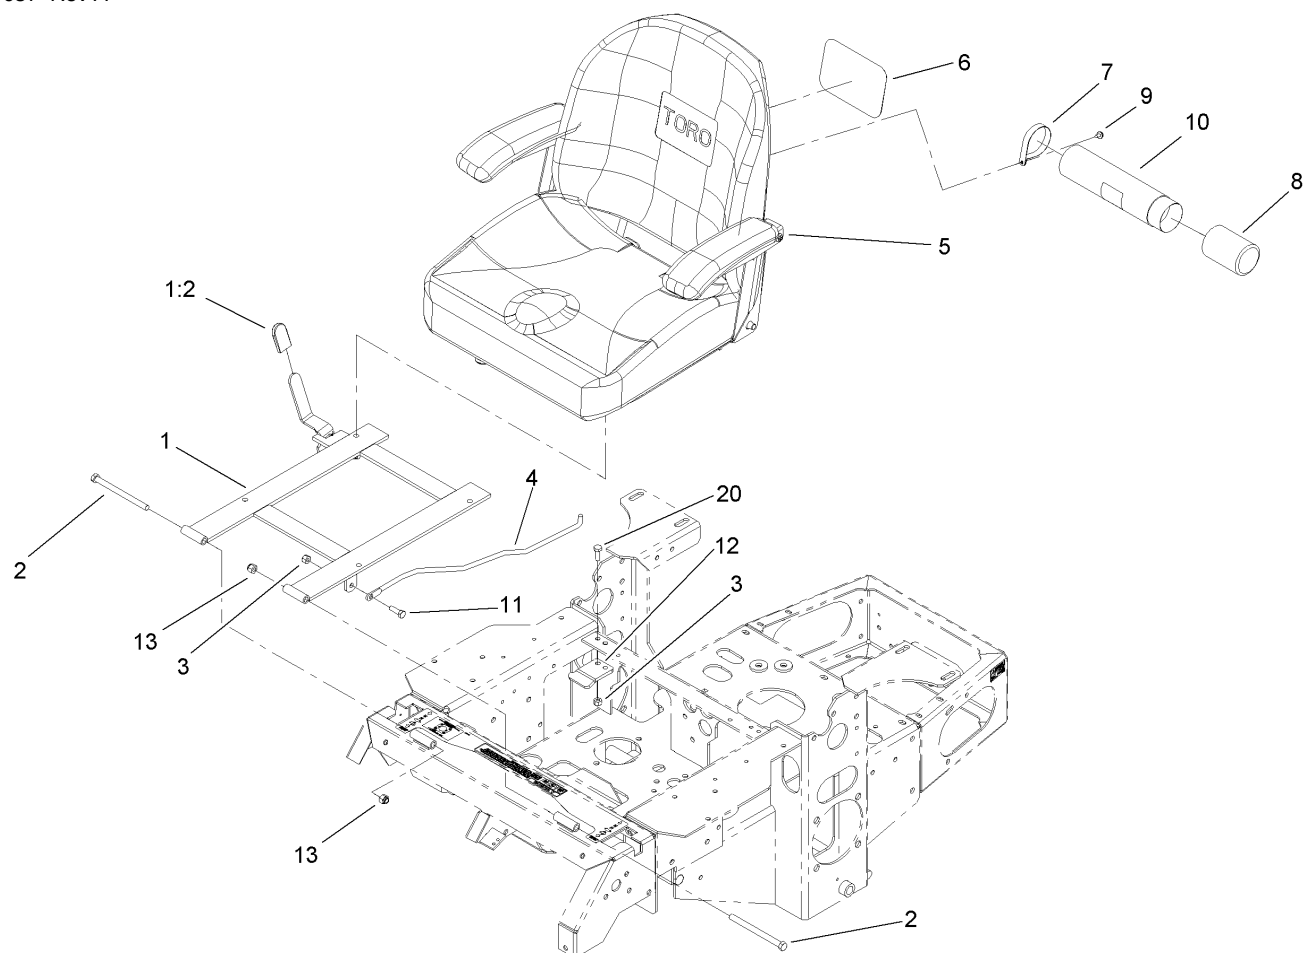


Seat and Bracket Assembly

Ref	Part No.	Qty.	Description				
1	110-5850	1	Seat Frame And Latch ASM				
1:2	103-4434	1	Grip-Lever				
2	323-39	2	Screw-HH				
3	3296-29	3	Nut-Lock, NI				
4	103-1731	1	Rod-Retainer, Seat				
5	110-0446	1	Seat ASM				
6	99-4693	1	Decal				
7	2412-120	2	R-Clamp				
8	104-7048	1	Cap-Housing				
9	32104-76	2	Screw				
10	104-7050	1	Housing-Manual				
11	322-5	1	Screw-HH				
12	103-5961	1	Catch-Latch, Seat				
13	3296-39	2	Nut-Lock, NI				
20	322-4	2	Screw-HH				

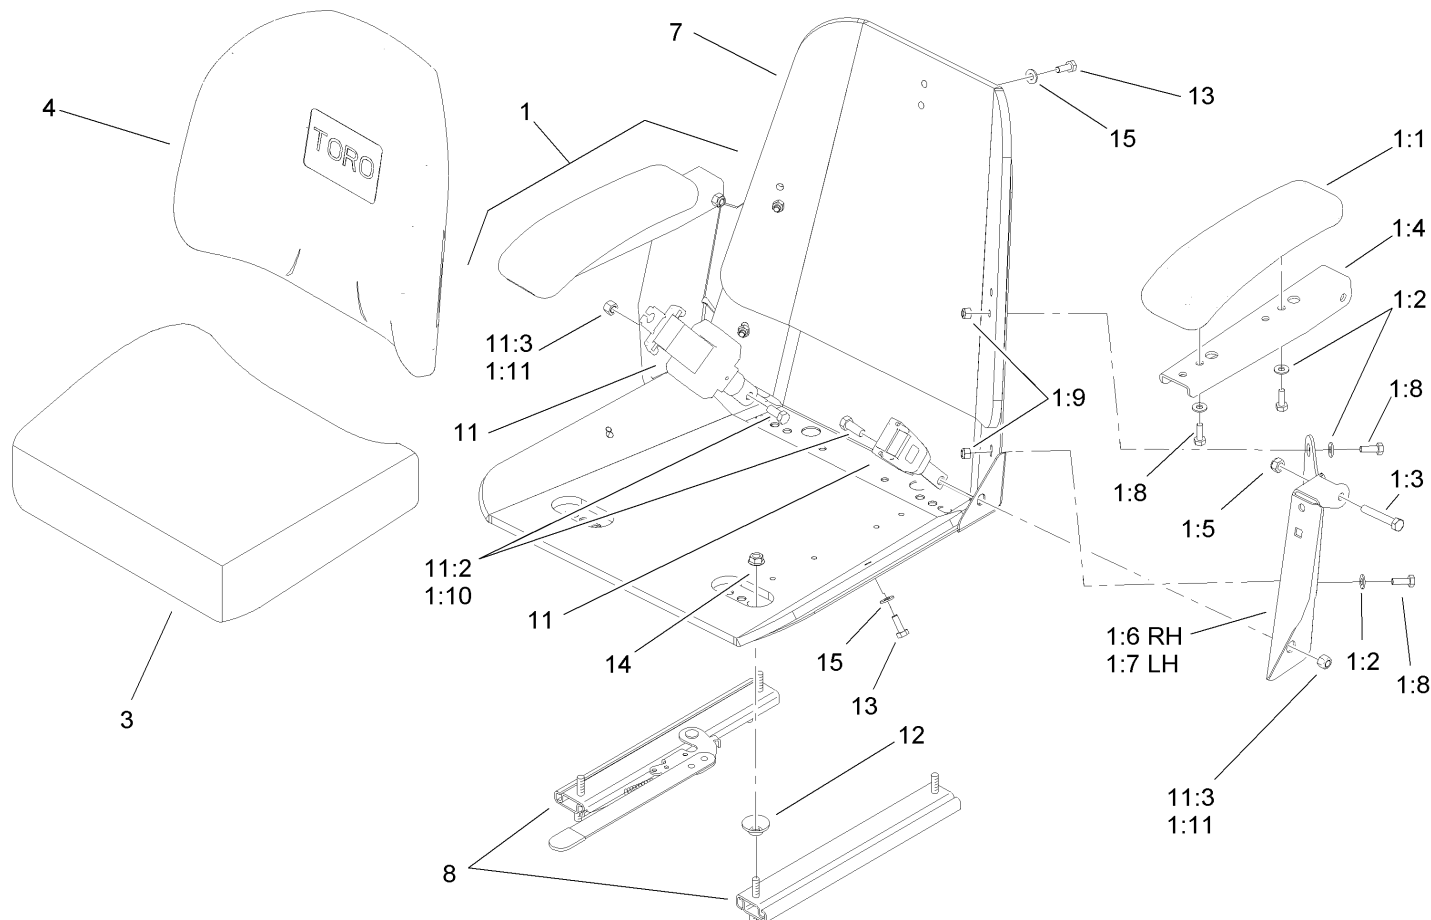


Seat Assembly No. 110-0446

Ref	Part No.	Qty.	Description
1	110-5719	1	Armrest Kit
1:1	110-4163	2	Cushion-Rest, Arm
1:2	3256-22	4	Washer-Flat
1:3	322-10	2	Screw-HH
1:4	105-3623	2	Channel-Armrest
1:5	32153-3	2	Nut-Hex, Side Deform
1:6	105-3621	1	Bracket-Armrest, RH
1:7	105-3622	1	Bracket-Armrest, LH
1:8	321-30	8	Screw-HH
1:9	3296-42	4	Nut-Lock, NI
1:10	325-2	2	Screw-HH
1:11	3296-23	2	Nut-Lock, NI
3	110-4162	1	Cushion-Seat, Bottom
4	110-0447	1	Cusion-Seat, Back
7	1-633859	1	Frame-Seat
8	1-643255	1	Track-Seat
11	110-0883	1	Retractable Seatbelt Kit
11:2	3212-4	2	Screw-HH
11:3	3296-7	2	Nut-Lock
12	1-543401	4	Spacer-Track
13	321-30	5	Screw-HH
14	32128-20	4	Nut-HF
15	3256-22	5	Washer-Flat

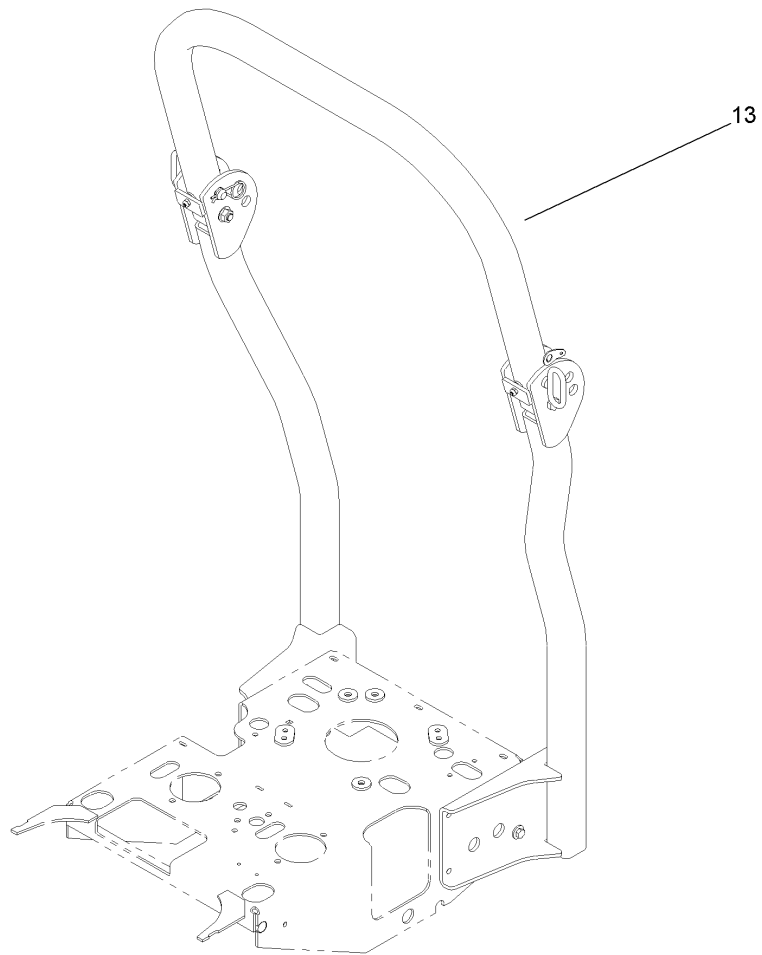

Roll-Over Protection System Assembly

Ref	Part No.	Qty.	Description
13	107-8093	1	ROPS ASM

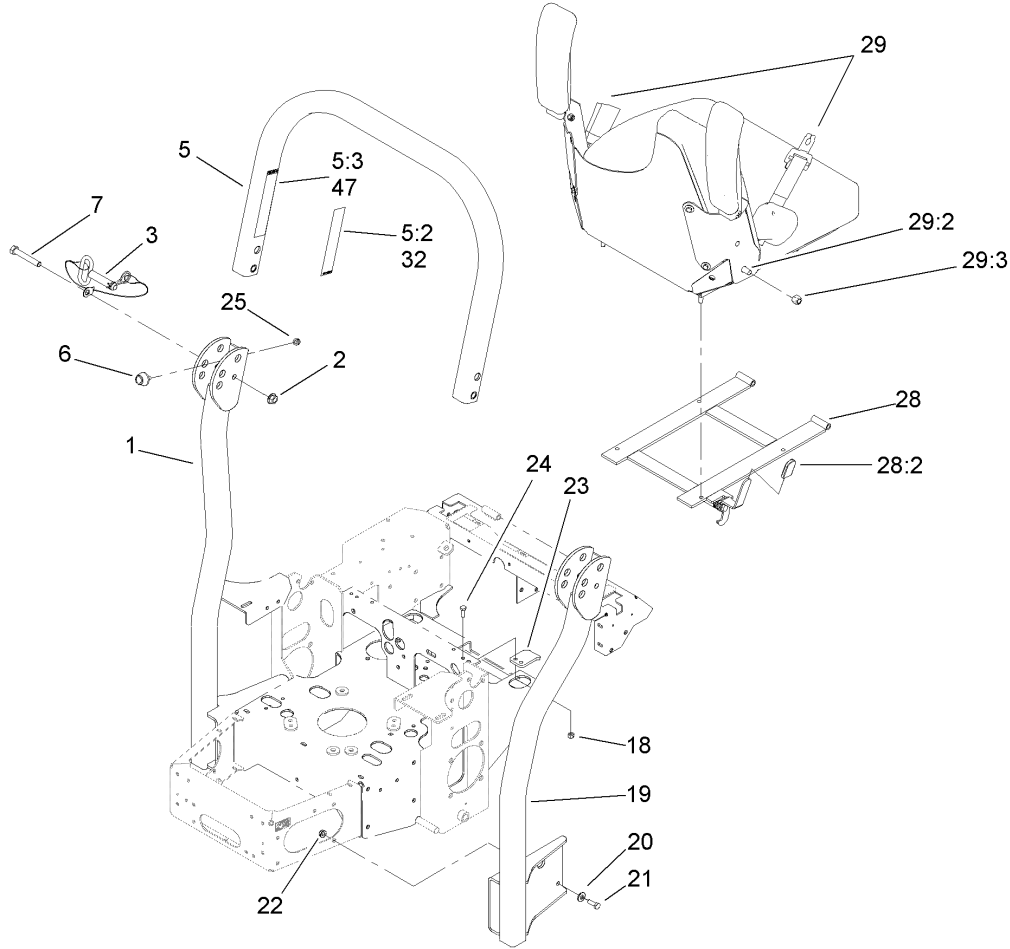

Roll-Over Protection System Assembly No. 107-8093

Ref	Part No.	Qty.	Description				
②1		1	LH Tube Support ASM				
2	32128-23	2	Nut-HF				
3	103-4553	2	ROPS Fold Pin ASM				
②5		1	Upper Tube ASM				
5:2	107-2100	1	Decal				
5:3	107-2102	1	Decal-Warning, Folding ROPS				
6	109-2365	2	Bumper-Rubber (W/Stud)				
7	325-13	2	Screw-HH				
18	3296-29	2	Nut-Lock, NI				
②19		1	RH Tube Support ASM				
20	98-5975	8	Washer-Belleville				
21	323-6	8	Screw-HH				
22	3290-357	8	Nut-HHF, Whiz				
23	107-3059	1	Catch-Latch, Seat				
24	322-4	2	Screw-HH				
25	3296-73	2	Nut-Lock, NI				
28	110-5850	1	Seat Frame And Latch ASM				
28:2	103-4434	1	Grip-Lever				
29	110-0883	1	Retractable Seatbelt Kit				
29:2	3212-4	2	Screw-HH				
29:3	3296-7	2	Nut-Lock				
32	107-3069	1	Decal-Warning, Folding ROPS (Ce)				
47	107-2102	1	Decal-Warning, Folding ROPS				

Attachments and Accessories

For 74442 - Z441 Z Master, With 52in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Blade-Recycler, 18 Inch	105-7779-03
Blade-Hi Flow, 18 Inch	105-7781-03
Blade-Med Flow, 18 Inch	105-7794-03
Blade-Low Flow, 18 Inch	105-7795-03
Blade-Atomic, 18 Inch	105-7796-03
Deck Lift Assist Kit	106-9749
52 Inch Recycler Kit	107-1610
Striping Kit	107-1630
Deluxe Suspension Seat	107-1891
Suspension Kit for Standard Seat	107-1892
Z Stand Kit	107-8599
Blade-Hi-Flow, 18 Inch (6 Pack)	108-1117
Blade-Atomic, 18 Inch (6 Pack)	108-1118
Mower Deck Lift Assist Kit	108-4090
Blade-Lo-Flow, 18 Inch (6 Pack)	110-0406
Blade-Recycler, 18 Inch (6 Pack)	110-0408
Blade-Med-Flow, 18 Inch (6 Pack)	110-0409
Sunshade-Bimini	110-5726
Discharge Side Anti-Scalp Roller Kit	112-1792
Channel Reinforcement Kit	112-8673
DFS Vac Collection System	78510
Twin Bag Assembly	78532
Blower and Drive Kit	78537
Hitch Kit	99-8924

NOTES

