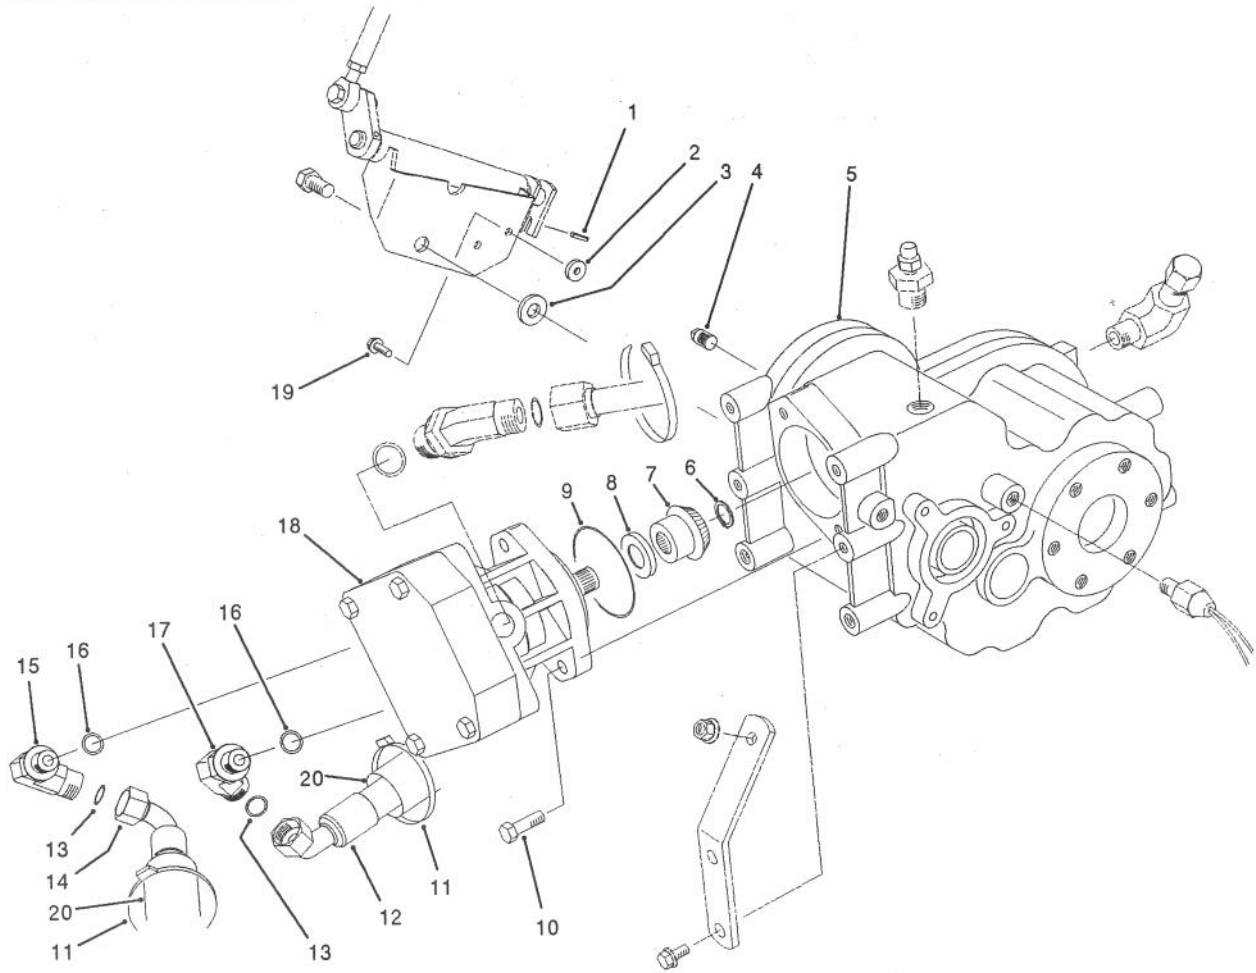


TORO®

PART NO. 84-0100

**PARTS
CATALOG****NOISE REDUCTION KIT
FOR REELMASTER® 335D TRACTION UNIT**


T-1330

FRONT TRANSAXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32121-24	Pin - Roll	1
2	73-3580	Washer	2
3	65-6390	Washer - Thrust	1
4	76-6040	Plug - Pipe	1
5	82-4930	Front Transaxle Assembly (Incl. Ref. #4 & 7)	1
6	32151-62	Ring - Retaining	1
7		Gear - Spiral Bevel	1
8	82-5380	Shim - Pinion .045"	A/R
*	82-5390	Shim - Pinion .038"	A/R
*	82-5400	Shim - Pinion .052"	A/R
9	237-167	Seal - O-Ring	1
10	323-7	Screw - Cap Hex. Hd.	2
11	3290-378	Tie - Cable	2

Ref. No.	Part No.	Description	No. Used
12	82-5060	Hose - Hydraulic (Model No. 03600 Only)	1
*	82-3270	Hose - Hydraulic (Model No. 03601 Only)	1
13	237-65	Seal - O-Ring	2
14	82-5150	Hose - Hydraulic (L.H. Traction)	1
15	340-153	Fitting - Hydraulic 90° (Incl. Ref. #13 & 16)	1
16	237-79	Seal - O-Ring	2
17	340-55	Fitting - Hydraulic 45° (Incl. Ref. #13 & 16)	1
18	77-4090	Hydraulic Motor Assembly	1
19	3234-4	Screw - Hex. Flange Hd.	2
20	56-7982	Sleeve - Protective	2

*Not Illustrated

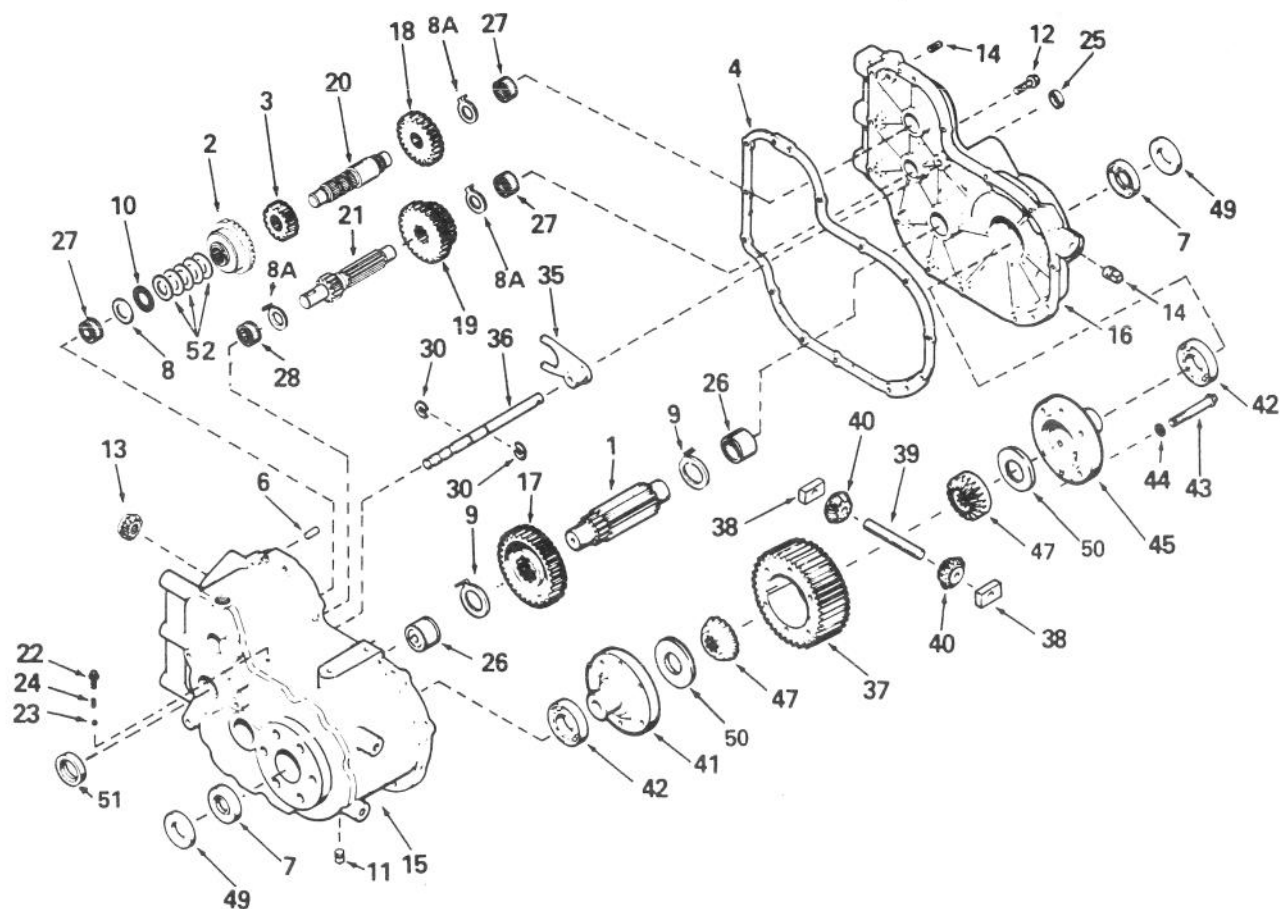


T-1008

TRANSAXLE ASSEMBLY NO. 82-4930

Ref. No.	Part No.	Description	No. Used
1	76-5610	Pinion - Output	1
2	76-5630	Gear - Spiral Bevel	1
3	76-5630	Gear - Spur	1
4	76-5640	Gasket	1
6	76-5660	Pin-Dowel	2
7	76-5670	Seal-Oil	2
8	76-5680	Washer - Thrust	1
8A	76-5650	Washer - Thrust	3
9	76-5690	Washer - Thrust	2
10	76-5700	Bearing-Thrust	1
11	76-5710	Plug-Magnetic - Drain	1
12	76-5720	Screw - Hex Hd.	13
13	76-5720	Pinion - Spiral Bevel	1
14	76-6040	Plug - Pipe	2
15	76-5750	Case Assembly (Incl. Ref. #26-28)	1
16	76-5760	Cover Assembly (Incl. Ref. #26-27)	1
17	76-5770	Gear - Output	1
18	76-5780	Gear - Spur	1
19	76-5790	Gear - Cluster	1
20	76-5800	Shaft - Counter	1
21	76-5810	Shaft & Gear - Shifter	1
22	76-5820	Screw - Hex Flanged Hd.	1
23	76-5830	Ball - Steel	1
24	76-5840	Spring - Shifter Fork	1
25	76-5850	Seal - Oil	1

Ref. No.	Part No.	Description	No. Used
26	76-5860	Bearing - Needle	2
27	76-5870	Bearing - Needle	3
28	76-5880	Bearing - Needle	1
30	76-5890	Ring - Retaining	2
35	76-5900	Fork - Shift	1
36	76-5910	Rod - Shift (High-Low)	1
37	76-5920	Gear - Ring	1
38	76-5930	Block - Drive	2
39	76-5940	Pin - Drive	1
40	76-5950	Pinion - Bevel	2
41	76-5960	Carrier (Incl. Ref. #50)	1
42	76-5970	Bearing - Ball	2
43	76-5980	Screw - Hex Flanged Hd.	6
44	3253-21	Washer - Lock	6
45	76-5990	Carrier - Differential	1
47	76-6000	Gear - Bevel	2
49	76-6010	Spacer	2
50	76-6020	Washer - Thrust	2
51	76-6030	Seal - Oil	1
52	76-5680	Shim - Orange	A/R
*	76-5740	Shim - White	A/R
*	84-0090	Shim - Blue	A/R
*	84-0130	Shim - Pink	A/R
*	84-0140	Shim - Brown	A/R
*	84-0080	Spiral Gear Set (Matched) (Incl. Ref. #2 & 13)	1

*Not Illustrated

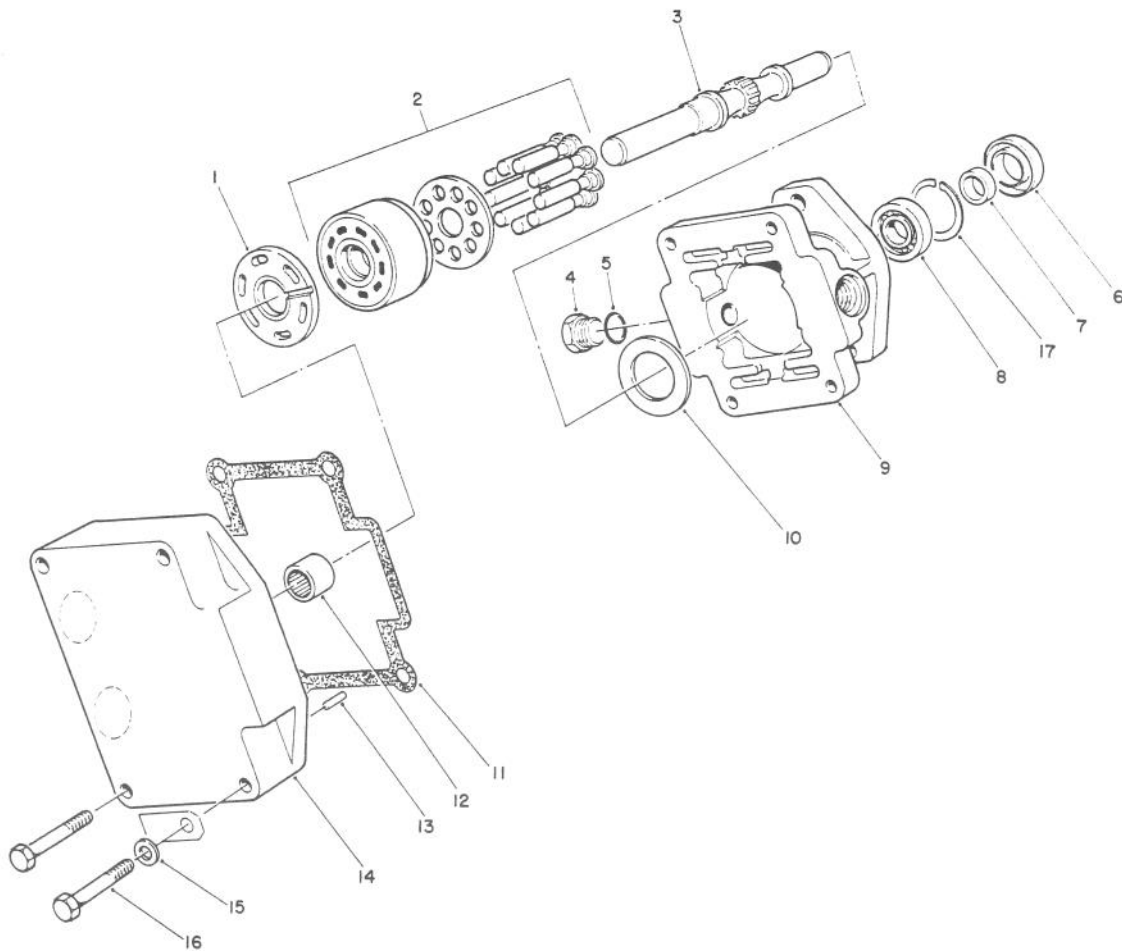


T-1040

HYDRAULIC MOTOR NO. 77-4090

Ref. No.	Part No.	Description	No. Used
1	28-3380	Plate - Valve	1
2	48-1800	Cylinder Block Kit	1
3	84-0030	Shaft Assembly (Incl. Ref. #7 & 8)	1
4	74-9450	Plug	1
5	237-65	Seal - O-Ring	1
6	74-9480	Seal - Lip	1
7		Sleeve	1
8		Bearing - Roller	1

Ref. No.	Part No.	Description	No. Used
9	82-4990	Housing - Fixed	1
10	25-2380	Plate - Thrust	1
11	74-9440	Gasket	1
12	77-3640	Bearing	1
13	25-2430	Pin - Straight	1
14	74-9430	Cap - End	1
15	74-9510	Washer - Flat	1
16	74-9500	Screw - Cap Hex. Hd.	4
17	82-4970	Ring - Retaining	1

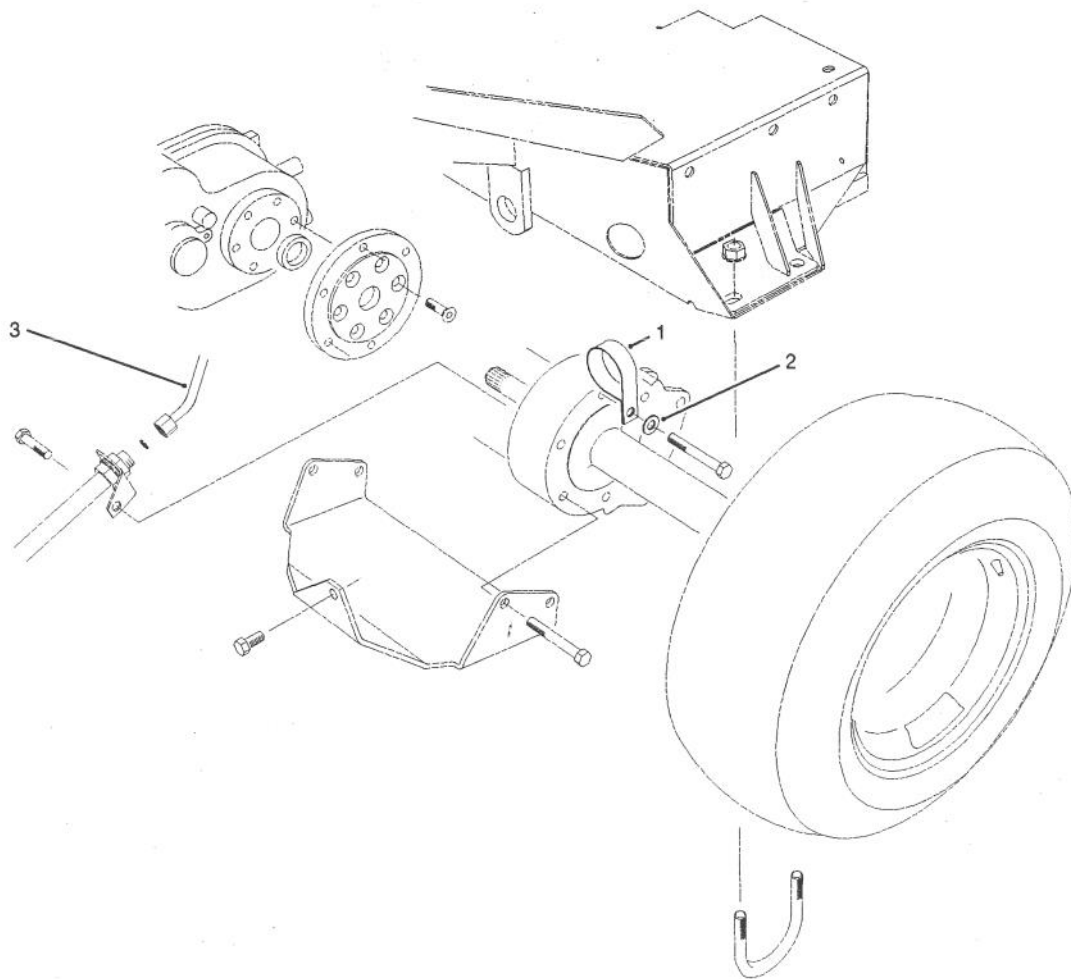


T-1331

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2412-102	Clamp - R	1
2	3256-26	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
3	82-5330	Tube - Hydraulic (L.H. Reel)	1
*	82-5210	Hose - Hydraulic (R.H. Reel)	1

*Not Illustrated

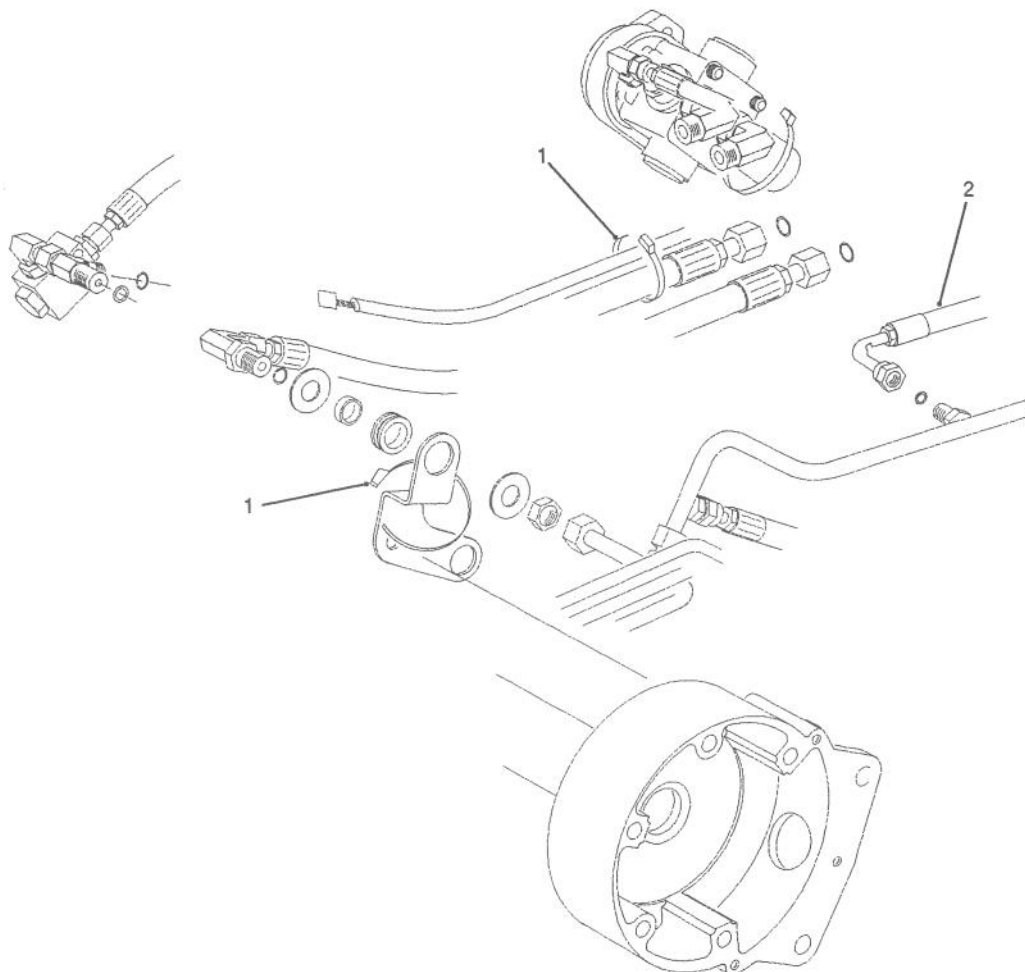


T-1332

REEL PLUMBING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-378	Tie - Cable	2


Ref. No.	Part No.	Description	No. Used
2	82-5070	Hose - Hydraulic	1

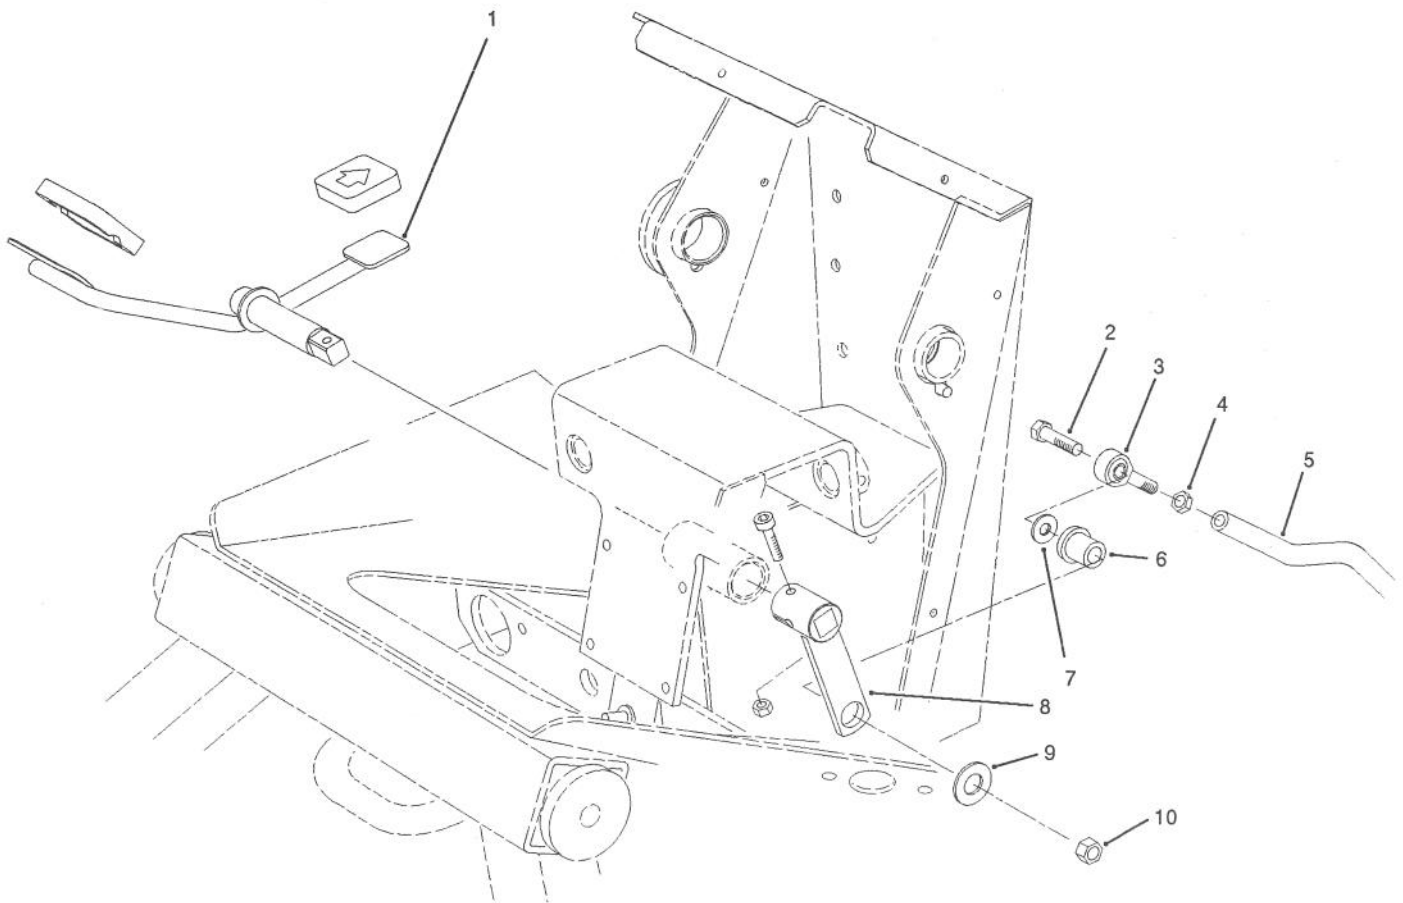

T-1333

TRACTION PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	82-5190	Shaft - Traction Pedal	1	6	63-9751	Mount - Linkage Rod	1
2	323-9	Screw - Cap Hex. Hd.	1	7	3256-3	Washer - Flat	1
3	2411-36	Eye - Rod	1	8	82-5030	Arm - Traction Linkage	1
4	3220-3	Nut - Jam	1	9	63-8410	Washer	1
5	82-5290	Rod - Traction Linkage	1	10	3296-59	Nut - Lock	1

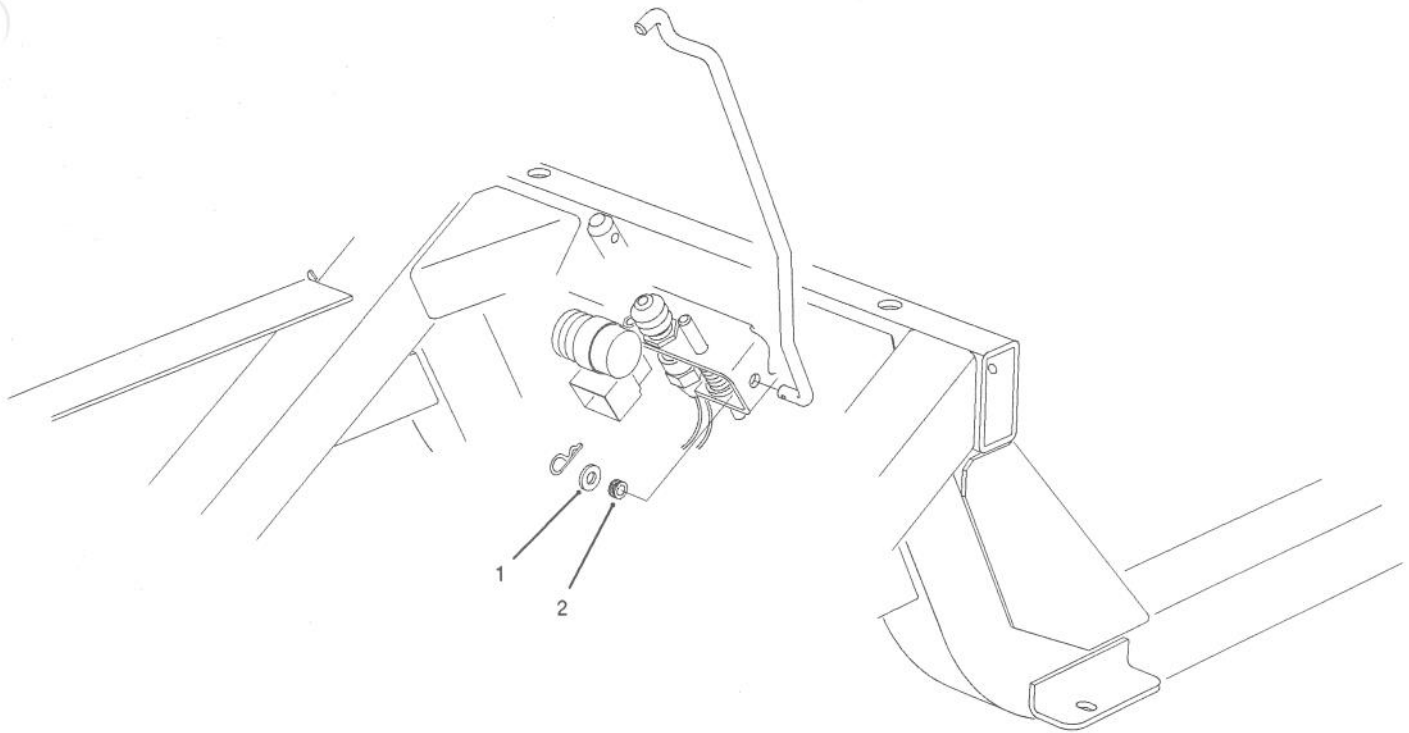


T-1334

SEAT PROP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3256-3	Washer	1

Ref. No.	Part No.	Description	No. Used
2	237-136	Grommet	1

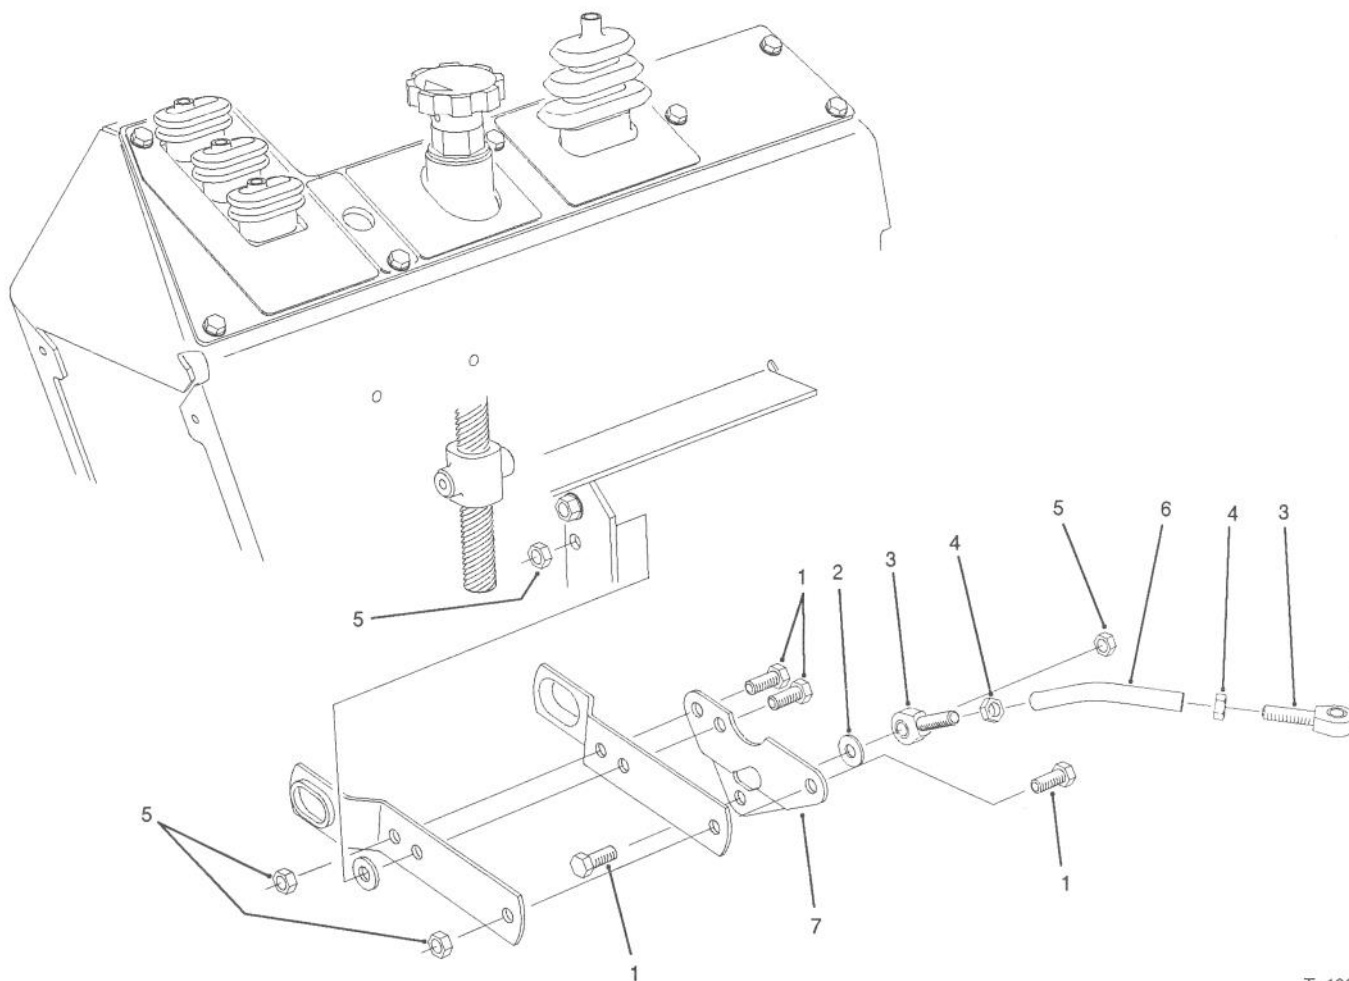


T-1335

REEL SPEED LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-6	Screw - Cap Hex. Hd.	4
2	3256-3	Washer - Flat	1
3	2411-36	Eye - Rod	2
4	3220-3	Nut - Jam	2

Ref. No.	Part No.	Description	No. Used
5	3296-59	Nut - Lock	4
6	82-5160	Rod - Reel Lever	1
7	82-5250	Plate - Adapter	1

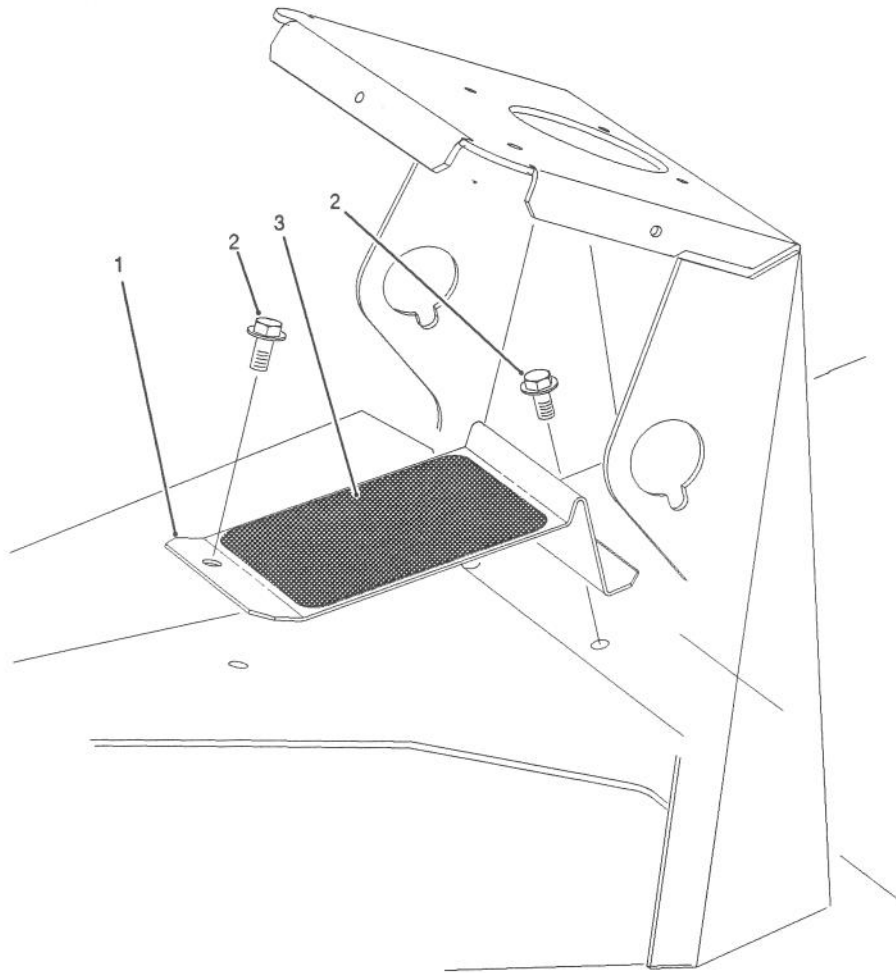


T-1336

FOOT REST ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5300	Support - Heel	1
2	32144-11	Screw	2

Ref. No.	Part No.	Description	No. Used
3	76-7040	Pad - Foot	1

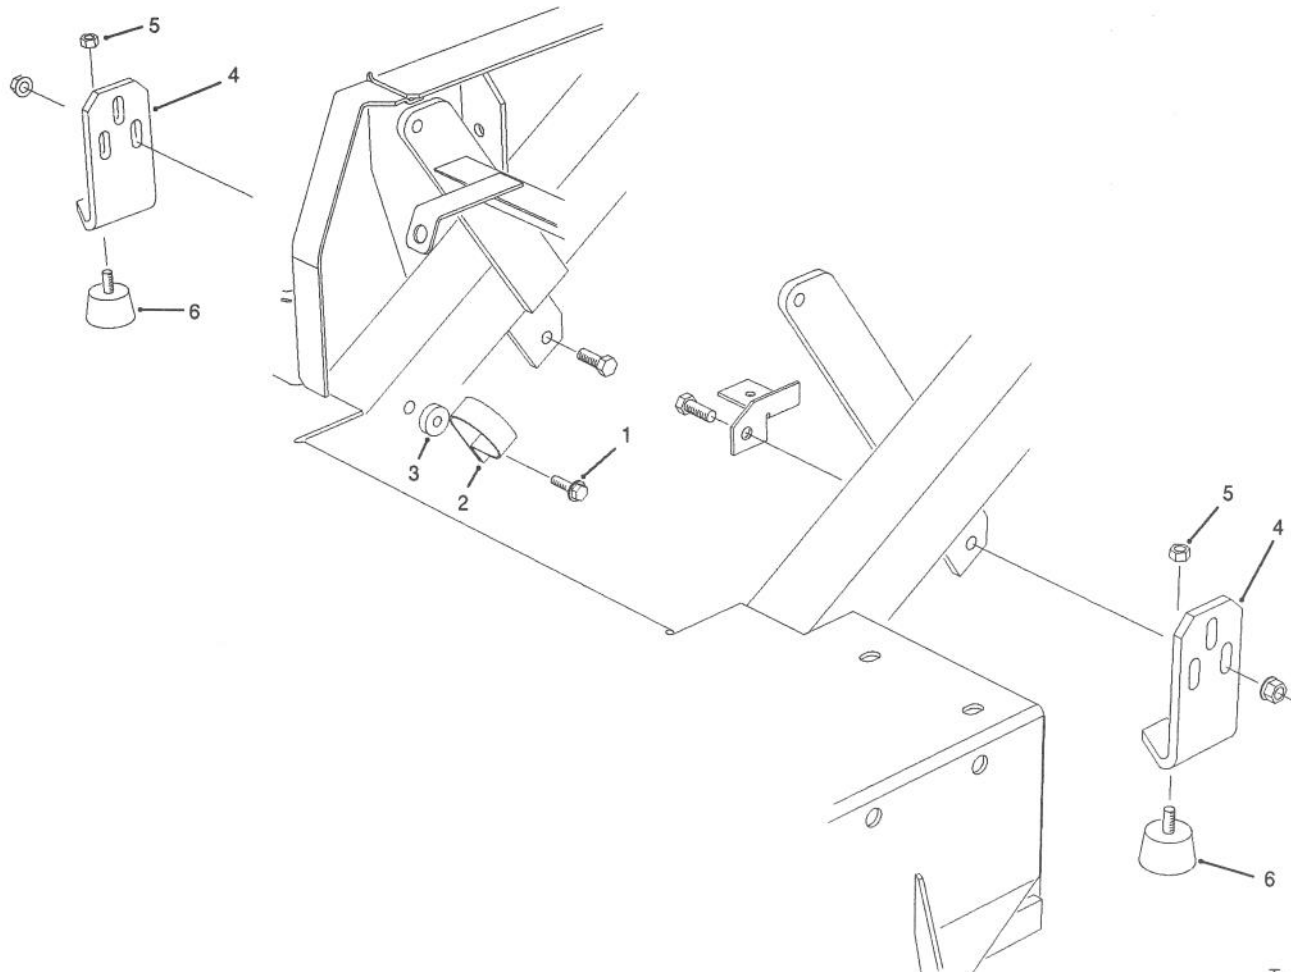


T-1337

FRONT HYDRAULIC PLUMBING SUPPORT & LIFT ARM STABILIZER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-26	Screw - Cap Hex. Hd.	2
2	2412-126	Clamp - R	2
3	77-4060	Spacer	2
4	84-0660	Bracket - Stabilizer	2

Ref. No.	Part No.	Description	No. Used
5	32128-20	Nut - Lock	2
6	68-3270	Bumper - Rubber	2
*	84-0160	Plate - Spacer (Welded to Frame)	1


*Not Illustrated

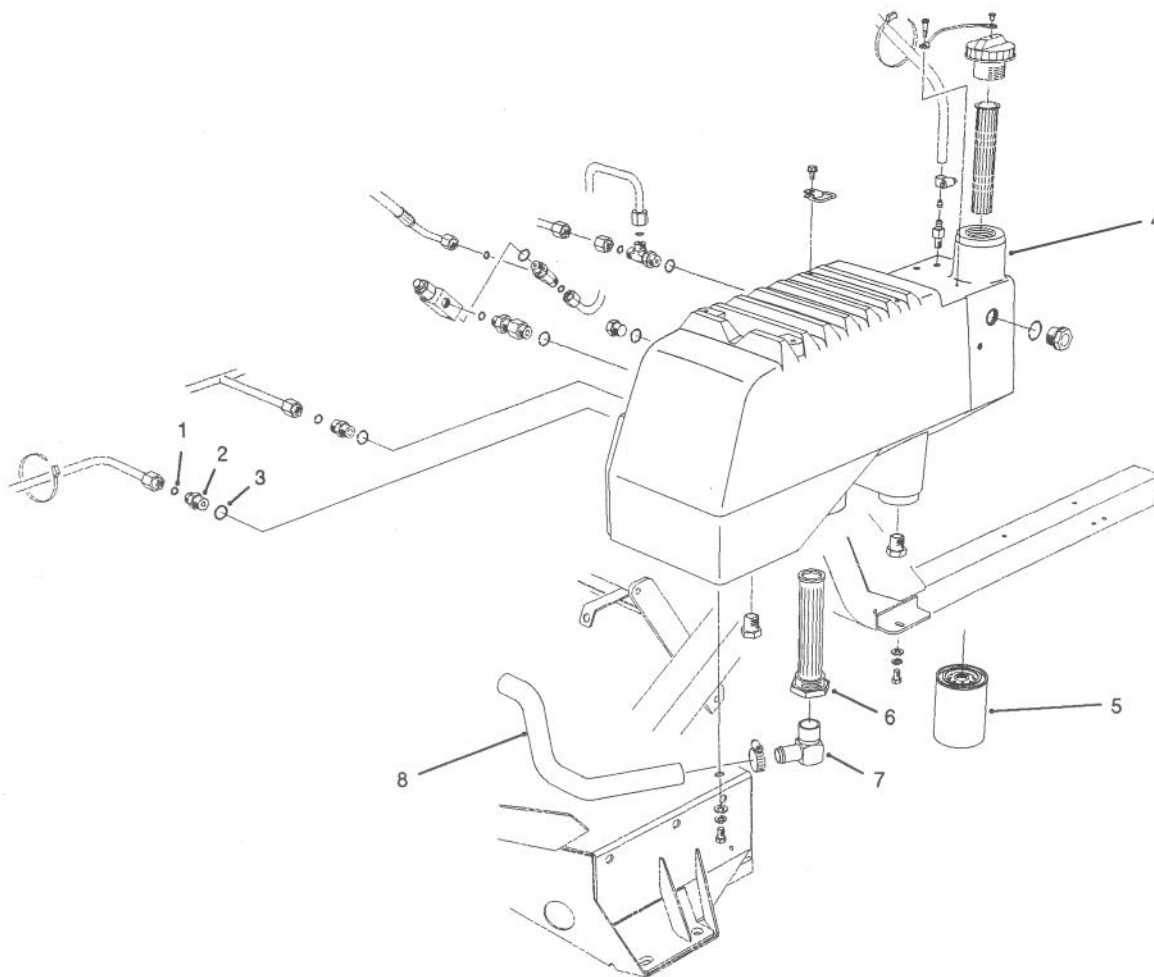

T-1338

HYDRAULIC RESERVOIR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	237-30	Seal - O-Ring	1	5	76-6490	Element - Hydraulic Filter	1
2	340-6	Fitting - Hydraulic Straight (Incl. Ref. #1 & 3)	1	6	75-0550	Strainer - Tank	1
3	237-79	Seal - O-Ring	1	7	354-87	Fitting - Hydraulic 90°	1
4	82-3700	Reservoir - Hydraulic	1	8	82-5110	Hose - Suction	1

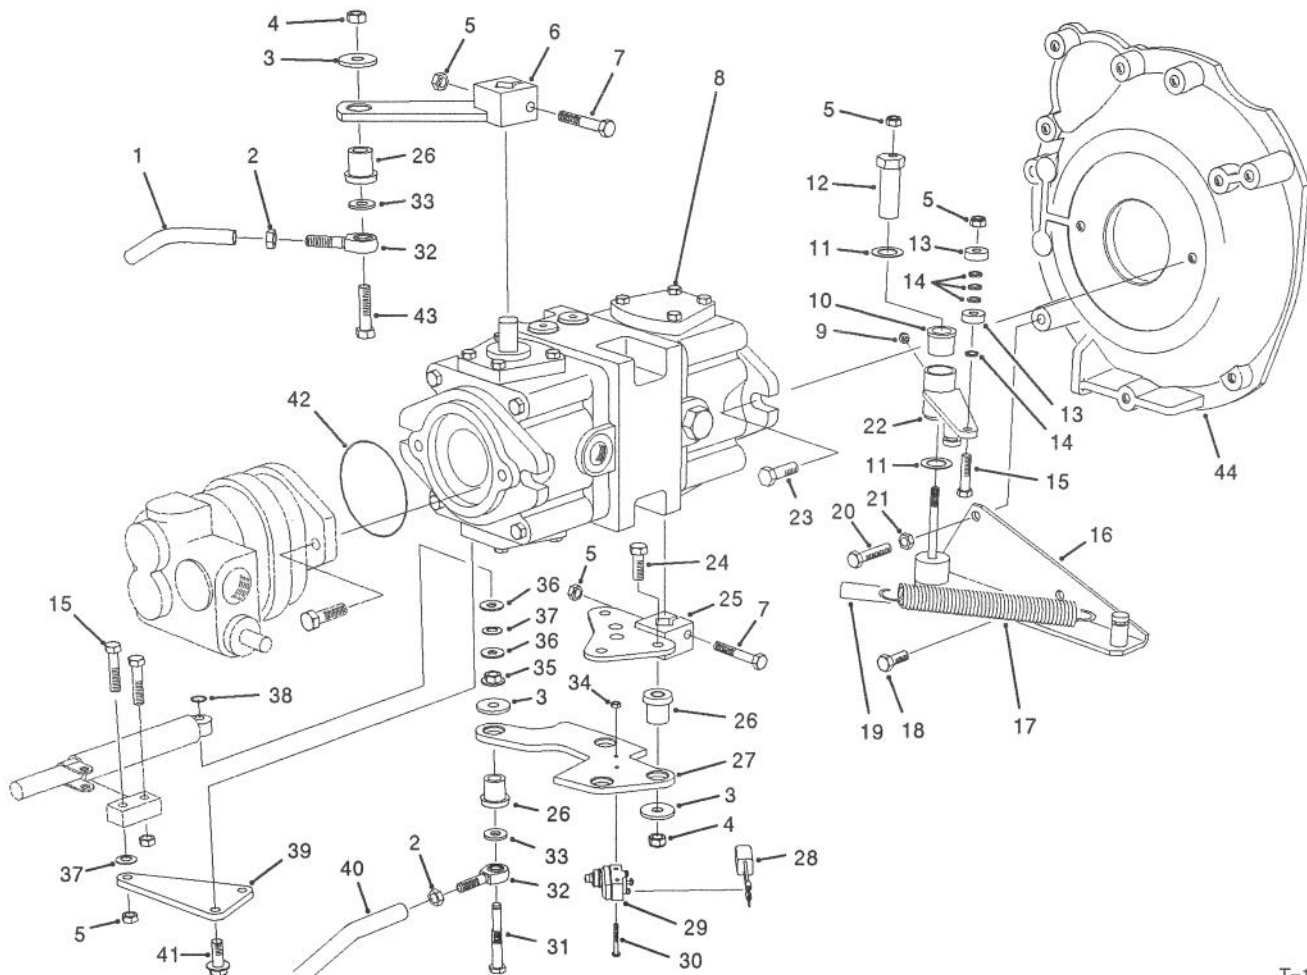


T-1339

HYDRAULIC PUMP INSTALLATION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5160	Rod - Reel Lever	1
2	3220-3	Nut - Jam	2
3	63-8410	Washer	5
4	3296-59	Nut - Lock	4
5	3296-29	Nut - Lock	5
6	82-5130	Lever - Reel	1
7	322-10	Screw - Cap Hex. Hd.	2
8	82-5100	Tandem Pump Assembly	1
9	302-5	Fitting - Grease	1
10	256-113	Bushing - Flange	2
11	3-6498	Washer	2
12	76-8640	Stud - Traction	1
13	251-259	Bearing - Ball	2
14	75-5470	Washer	4
15	322-7	Screw - Cap Hex. Hd.	2
16	82-5270	Bracket - Spring	1
17	76-9430	Spring - Extension	1
18	323-6	Screw - Cap Hex. Hd.	1
19	74-9120	Hose	1
20	32105-4	Screw - Hex. Hd.	1
21	3217-7	Nut - Hex.	1
22	75-4090	Neutral Switch Assembly (Incl. Ref. #9 & 10)	1


Ref. No.	Part No.	Description	No. Used
23	82-5050	Screw - Cap Hex. Hd.	2
24	323-29	Screw - Cap Hex. Hd.	3
25	82-5180	Control - Pump	1
26	63-9751	Mount - Rubber	5
27	82-5170	Plate - Pump Control	1
28	72-3790	Wire - Neutral Switch	1
29	29-6163	Switch - Micro	1
30	3249-11	Screw - Round Hd.	2
31	82-5280	Shaft - Pivot	1
32	2411-36	Eye - Rod	2
33	3256-3	Washer - Flat	2
34	3296-9	Nut - Lock	2
35	3290-357	Nut - Flange Lock	1
36	3256-71	Washer - Flat	2
37	3290-477	Washer - Curved	2
38	32151-73	Ring - Clip	1
39	82-5240	Plate - Pivot	1
40	82-5290	Rod - Traction Control	1
41	32144-26	Screw - Hex. Flange Hd.	2
42	237-161	Seal - O-Ring	1
43	323-9	Screw - Cap Hex. Hd.	1
44	82-5120	Plate - Adapter	1

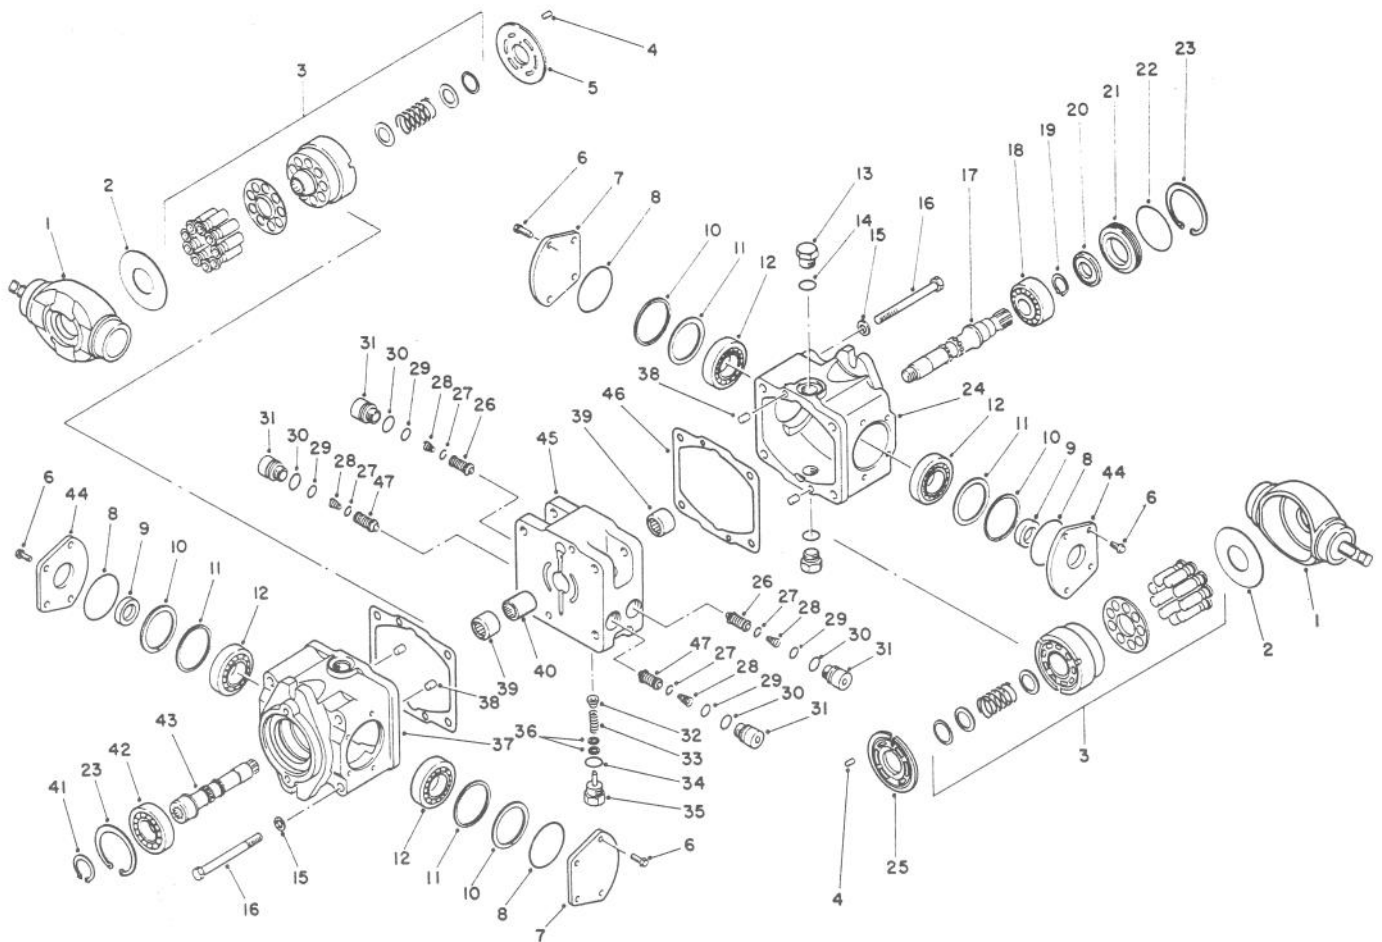

T-1314

TANDEM PUMP ASSEMBLY NO. 82-5100

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	84-0250	Swash Plate - Variable	2	24	84-0240	Housing - Pump	1
2	75-0400	Plate - Thrust	2	25	84-0280	Plate - Valve R.H.	1
3	75-0470	Cylinder Block Kit	2	26	84-0540	Valve - Screw 345 BAR	2
4	75-0510	Pin	2	27	84-0550	Ring - Retaining	4
5	84-0290	Plate - Valve L.H.	1	28	75-0140	Spring - Conical	4
6	84-0460	Screw	16	29	75-0240	Seal - O-Ring	4
7	84-0440	Cover - Trunnion	2	30	84-0560	Seal - O-Ring	4
8	84-0430	Seal - O-Ring	4	31	84-0520	Plug - Special	4
9	84-0470	Seal - Lip	2	32	84-0480	Poppet - Charge Relief	1
10	84-0270	Spacer - Trunnion	4	33	84-0490	Spring - Compression	1
11	84-0570	Shim - Trunnion	4	34	28-3570	Seal - O-Ring	1
12	84-0260	Bearing - Roller	4	35	84-0500	Charge Relief Plug Assy.	1
13	353-551	Plug Assembly (Incl. Ref. #14)	2	36	84-0580	Shim - Charge Relief	1
14	237-80	Seal - O-Ring	2	37	84-0340	Housing - Pump	1
15	84-0360	Washer	8	38	75-0480	Pin	4
16	84-0330	Screw - Cap Hex. Hd.	8	39	75-0500	Bearing - Needle	2
17	84-0300	Shaft - Pump	1	40	84-0230	Coupling	1
18	84-0310	Bearing - Ball	1	41	84-0390	Ring - Retaining	1
19	84-0320	Ring - Retaining	1	42	84-0370	Bearing - Ball	1
20	84-0400	Seal - Lip	1	43	84-0350	Shaft - Pump	1
21	84-0410	Carrier - Seal	1	44	84-0450	Cover - Trunnion	2
22	28-3520	Seal - O-Ring	1	45	84-0220	Body - Center	1
23	84-0380	Ring - Retaining Internal	2	46	84-0210	Gasket - End Cap	2
				47	75-0300	Valve - Screw 175 BAR	2

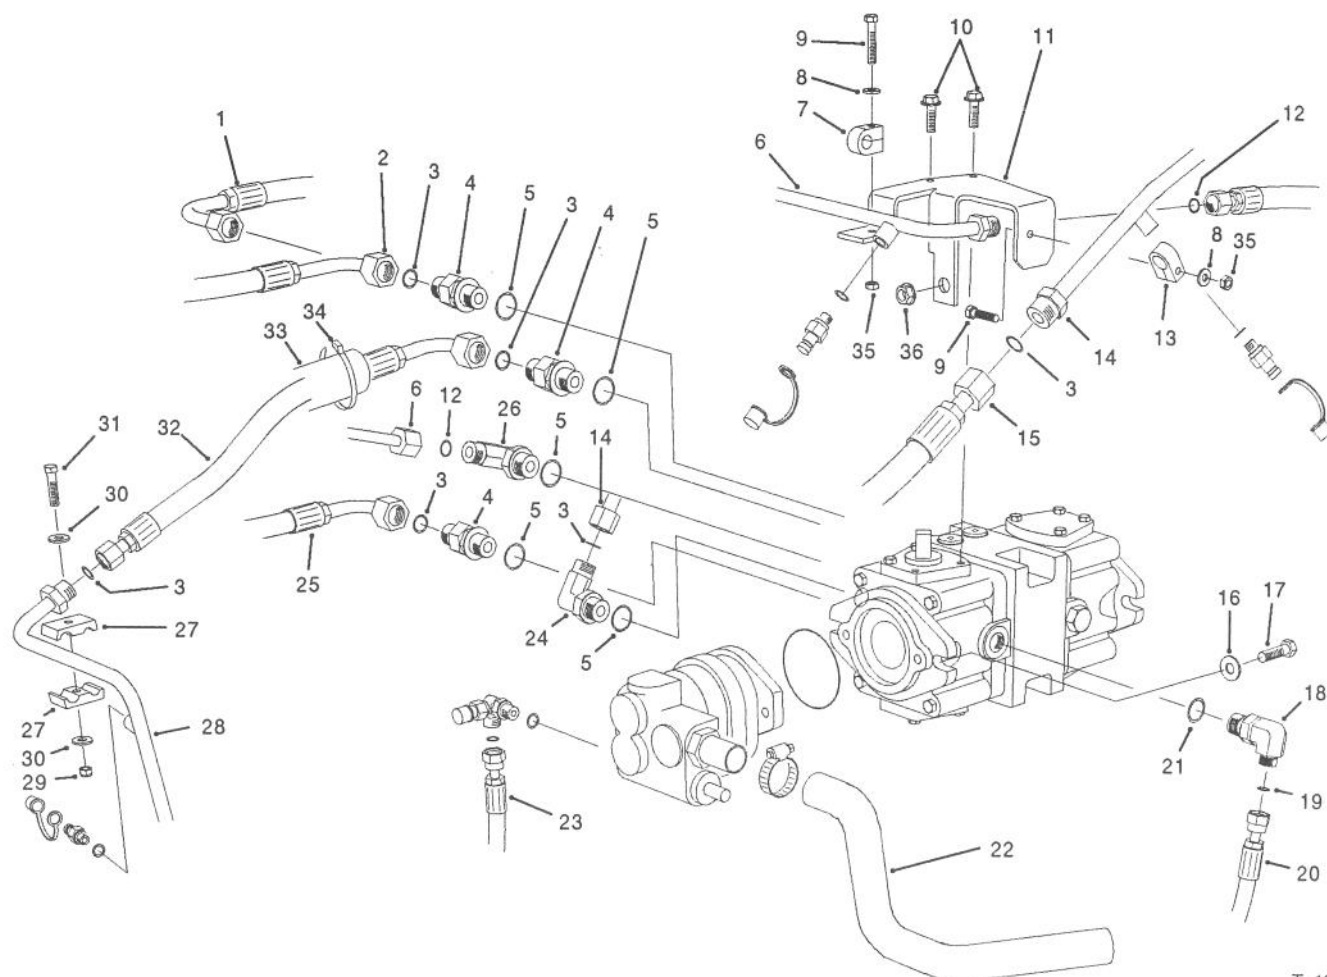


T-1340

HYDRAULIC PUMP FITTINGS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5090	Hose - Hydraulic (Model No. 30601 Only)	1
2	82-5060	Hose - Hydraulic (Model No. 30600 Only)	1
3	237-65	Seal - O-Ring	6
4	340-7	Fitting - Hydraulic Straight (Incl. Ref. #3 & 5)	3
5	237-80	Seal - O-Ring	5
6	82-5320	Hydraulic Tube Assembly (Incl. Ref. #12)	1
7	82-5360	Clamp - Tube	1
8	3256-22	Washer	2
9	321-9	Screw - Cap Hex. Hd.	2
10	32144-26	Screw - Hex. Flange Hd.	2
11	82-5340	Bracket - Pump	1
12	237-30	Seal - O-Ring	2
13	82-5361	Clamp - Tube	1
14	82-5310	Hydraulic Tube Assembly (Incl. Ref. #3)	1
15	82-5150	Hose - Hydraulic	1
16	3256-4	Washer - Flat	1
17	324-6	Screw - Cap Hex. Hd.	1
18	340-130	Fitting - Hydraulic 90° (Incl. Ref. #19 & 21)	1

Ref. No.	Part No.	Description	No. Used
19	237-22	Seal - O-Ring	1
20	82-5070	Hose - Hydraulic	1
21	237-78	Seal - O-Ring	1
22	82-5110	Hose - Suction	1
23	82-5080	Hose - Hydraulic	1
24	340-17	Fitting - Hydraulic 90° (Incl. Ref. #3 & 5)	1
25	82-5210	Hose - Hydraulic	1
26	340-105	Fitting - Hydraulic 90° (Incl. Ref. #5 & 12)	1
27	56-7977	Clamp - Tube	2
28	82-5330	Hydraulic Tube Assembly (Incl. Ref. #3)	1
29	3296-29	Nut - Lock	1
30	3256-3	Washer - Flat	2
31	322-7	Screw - Cap Hex. Hd.	1
32	82-5350	Hose - Hydraulic	1
33	56-7982	Sleeve - Protective	1
34	3290-378	Tie - Cable	2
35	3296-42	Nut - Lock	2
36	32128-37	Nut - Flange Lock	1

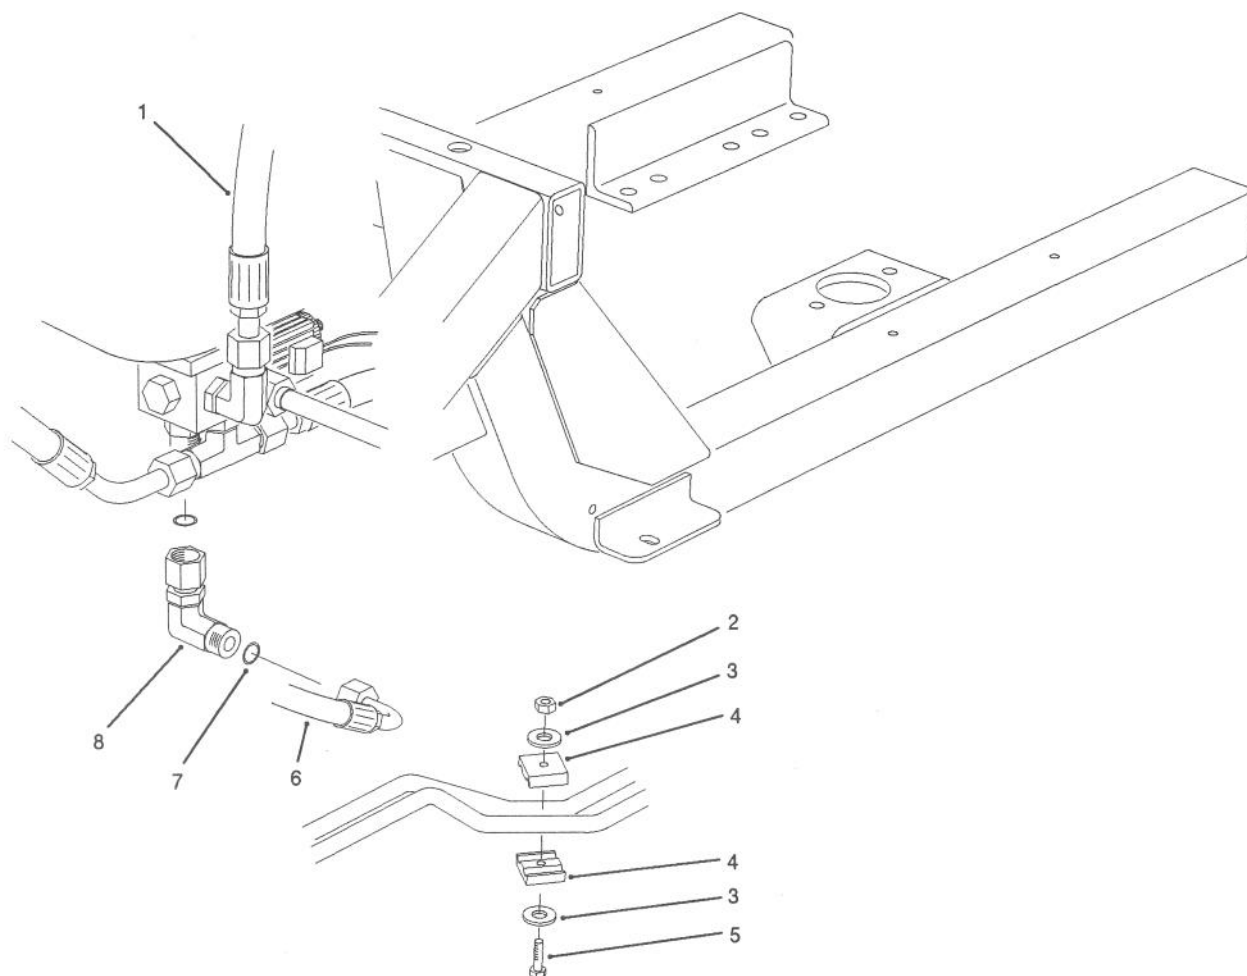

T-1341

REAR HYDRAULIC PLUMBING SUPPORT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	82-5090	Hose - Hydraulic	1
2	3296-42	Nut - Lock	1
3	3256-22	Washer - Flat	2
4	56-7973	Clamp - Hose	2
5	321-8	Screw - Cap Hex. Hd.	1

Ref. No.	Part No.	Description	No. Used
6	82-3270	Hose - Hydraulic	1
7	237-65	Seal - O-Ring	1
8	340-160	Fitting - Hydraulic (Model No. 03601 Only) (Incl. Ref. #7)	1

PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-6498	Washer	12 11 2	76-5900	Fork - Shift	2 35 1
25-2380	Plate - Thrust	3 10 1	76-5910	Rod - Shift (High-Low)	2 36 1
25-2430	Pin - Straight	3 13 1	76-5920	Gear - Ring	2 37 1
28-3380	Plate - Valve	3 1 1	76-5930	Block - Drive	2 38 2
28-3520	Seal - O-Ring	13 22 1	76-5940	Pin - Drive	2 39 1
28-3570	Seal - O-Ring	13 34 1	76-5950	Pinion - Bevel	2 40 2
29-6163	Switch - Micro	12 29 1	76-5960	Carrier	2 41 1
48-1800	Cylinder Block Kit	3 2 1	76-5970	Bearing - Ball	2 42 2
56-7973	Clamp - Hose	15 4 2	76-5980	Screw - Hex Flanged Hd.	2 43 6
56-7977	Clamp - Tube	14 27 2	76-5990	Carrier - Differential	2 45 1
56-7982	Sleeve - Protective	1 20 2	76-6000	Gear - Bevel	2 47 2
56-7982	Sleeve - Protective	14 33 1	76-6010	Spacer	2 49 2
63-8410	Washer	6 9 1	76-6020	Washer - Thrust	2 50 2
63-8410	Washer	12 3 5	76-6030	Seal - Oil	2 51 1
63-9751	Mount - Linkage Rod	6 6 1	76-6040	Plug - Pipe	1 4 1
63-9751	Mount - Rubber	12 26 5	76-6040	Plug - Pipe	2 14 2
65-6390	Washer - Thrust	1 3 1	76-6490	Element - Hydraulic Filter	11 5 1
68-3270	Bumper - Rubber	10 6 2	76-7040	Pad - Foot	9 3 1
72-3790	Wire - Neutral Switch	12 28 1	76-8640	Stud - Traction	12 12 1
73-3580	Washer	1 2 2	76-9430	Spring - Extension	12 17 1
74-9120	Hose	12 19 1	77-3640	Bearing	3 12 1
74-9430	Cap - End	3 14 1	77-4060	Spacer	10 3 2
74-9440	Gasket	3 11 1	77-4090	Hydraulic Motor Assembly	1 18 1
74-9450	Plug	3 4 1	82-3270	Hose - Hydraulic	1 * 1
74-9480	Seal - Lip	3 6 1	82-3270	Hose - Hydraulic	15 6 1
74-9500	Screw - Cap Hex. Hd.	3 16 4	82-3700	Reservoir - Hydraulic	11 4 1
74-9510	Washer - Flat	3 15 1	82-4930	Front Transaxle Assembly	1 5 1
75-0140	Spring - Conical	13 28 4	82-4970	Ring - Retaining	3 17 1
75-0240	Seal - O-Ring	13 29 4	82-4990	Housing - Fixed	3 9 1
75-0300	Valve - Screw 175 BAR	13 47 2	82-5030	Arm - Traction Linkage	6 8 1
75-0400	Plate - Thrust	13 2 2	82-5050	Screw - Cap Hex. Hd.	12 23 2
75-0470	Cylinder Block Kit	13 3 2	82-5060	Hose - Hydraulic	1 12 1
75-0480	Pin	13 38 4	82-5060	Hose - Hydraulic	14 2 1
75-0500	Bearing - Needle	13 39 2	82-5070	Hose - Hydraulic	5 2 1
75-0510	Pin	13 4 2	82-5070	Hose - Hydraulic	14 20 1
75-0550	Strainer - Tank	11 6 1	82-5080	Hose - Hydraulic	14 23 1
75-4090	Neutral Switch Assembly	12 22 1	82-5090	Hose - Hydraulic	14 1 1
75-5470	Washer	12 14 4	82-5090	Hose - Hydraulic	15 1 1
76-5610	Pinion - Output	2 1 1	82-5100	Tandem Pump Assembly	12 8 1
76-5630	Gear - Spur	2 3 1	82-5110	Hose - Suction	11 8 1
76-5640	Gasket	2 4 1	82-5110	Hose - Suction	14 22 1
76-5650	Washer - Thrust	2 8A 3	82-5120	Plate - Adapter	12 44 1
76-5660	Pin-Dowel	2 6 2	82-5130	Lever - Reel	12 6 1
76-5670	Seal-Oil	2 7 2	82-5150	Hose - Hydraulic	1 14 1
76-5680	Shim - Orange	2 52 A/R	82-5150	Hose - Hydraulic	14 15 1
76-5680	Washer - Thrust	2 8 1	82-5160	Rod - Reel Lever	8 6 1
76-5690	Washer - Thrust	2 9 2	82-5160	Rod - Reel Lever	12 1 1
76-5700	Bearing-Thrust	2 10 1	82-5170	Plate - Pump Control	12 27 1
76-5710	Plug-Magnetic - Drain	2 11 1	82-5180	Control - Pump	12 25 1
76-5720	Screw - Hex Hd.	2 12 13	82-5190	Shaft - Traction Pedal	6 1 1
76-5740	Shim - White	2 * A/R	82-5210	Hose - Hydraulic	4 * 1
76-5750	Case Assembly	2 15 1	82-5210	Hose - Hydraulic	14 25 1
76-5760	Cover Assembly	2 16 1	82-5240	Plate - Pivot	12 39 1
76-5770	Gear - Output	2 17 1	82-5250	Plate - Adapter	8 7 1
76-5780	Gear - Spur	2 18 1	82-5270	Bracket - Spring	12 16 1
76-5790	Gear - Cluster	2 19 1	82-5280	Shaft - Pivot	12 31 1
76-5800	Shaft - Counter	2 20 1	82-5290	Rod - Traction Control	12 40 1
76-5810	Shaft & Gear - Shifter	2 21 1	82-5290	Rod - Traction Linkage	6 5 1
76-5820	Screw - Hex Flanged Hd.	2 22 1	82-5300	Support - Heel	9 1 1
76-5830	Ball - Steel	2 23 1	82-5310	Hydraulic Tube Assembly	14 14 1
76-5840	Spring - Shifter Fork	2 24 1	82-5320	Hydraulic Tube Assembly	14 6 1
76-5850	Seal - Oil	2 25 1	82-5330	Hydraulic Tube Assembly	14 28 1
76-5860	Bearing - Needle	2 26 2	82-5330	Tube - Hydraulic	4 3 1
76-5870	Bearing - Needle	2 27 3	82-5340	Bracket - Pump	14 11 1
76-5880	Bearing - Needle	2 28 1	82-5350	Hose - Hydraulic	14 32 1
76-5890	Ring - Retaining	2 30 2	82-5360	Clamp - Tube	14 7 1

*Not Illustrated

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
82-5361	Clamp - Tube	14	13	1	251-259	Bearing - Ball	12	13	2
82-5380	Shim - Pinion .045"	1	8	A/R	256-113	Bushing - Flange	12	10	2
82-5390	Shim - Pinion .038"	1	*	A/R	302-5	Fitting - Grease	12	9	1
82-5400	Shim - Pinion .052"	1	*	A/R	321-8	Screw - Cap Hex. Hd.	15	5	1
84-0030	Shaft Assembly	3	3	1	321-9	Screw - Cap Hex. Hd.	14	9	2
84-0080	Spiral Gear Set (Matched)	2	*	1	322-7	Screw - Cap Hex. Hd.	12	15	2
84-0090	Shim - Blue	2	*	A/R	322-7	Screw - Cap Hex. Hd.	14	31	1
84-0130	Shim - Pink	2	*	A/R	322-10	Screw - Cap Hex. Hd.	12	7	2
84-0140	Shim - Brown	2	*	A/R	323-6	Screw - Cap Hex. Hd.	8	1	4
84-0160	Plate - Spacer	10	*	1	323-6	Screw - Cap Hex. Hd.	12	18	1
84-0210	Gasket - End Cap	13	46	2	323-7	Screw - Cap Hex. Hd.	1	10	2
84-0220	Body - Center	13	45	1	323-9	Screw - Cap Hex. Hd.	6	2	1
84-0230	Coupling	13	40	1	323-9	Screw - Cap Hex. Hd.	12	43	1
84-0240	Housing - Pump	13	24	1	323-29	Screw - Cap Hex. Hd.	12	24	3
84-0250	Swash Plate - Variable	13	1	2	324-6	Screw - Cap Hex. Hd.	14	17	1
84-0260	Bearing - Roller	13	12	4	3217-7	Nut - Hex.	12	21	1
84-0270	Spacer - Trunnion	13	10	4	3220-3	Nut - Jam	6	4	1
84-0280	Plate - Valve R.H.	13	25	1	3220-3	Nut - Jam	8	4	2
84-0290	Plate - Valve L.H.	13	5	1	3220-3	Nut - Jam	12	2	2
84-0300	Shaft - Pump	13	17	1	3234-4	Screw - Hex. Flange Hd.	1	19	2
84-0310	Bearing - Ball	13	18	1	3249-11	Screw - Round Hd.	12	30	2
84-0320	Ring - Retaining	13	19	1	3253-21	Washer - Lock	2	44	6
84-0330	Screw - Cap Hex. Hd.	13	16	8	3256-3	Washer	7	1	1
84-0340	Housing - Pump	13	37	1	3256-3	Washer - Flat	6	7	1
84-0350	Shaft - Pump	13	43	1	3256-3	Washer - Flat	8	2	1
84-0360	Washer	13	15	8	3256-3	Washer - Flat	12	33	2
84-0370	Bearing - Ball	13	42	1	3256-3	Washer - Flat	14	30	2
84-0380	Ring - Retaining Internal	13	23	2	3256-4	Washer - Flat	14	16	1
84-0390	Ring - Retaining	13	41	1	3256-22	Washer	14	8	2
84-0400	Seal - Lip	13	20	1	3256-22	Washer - Flat	15	3	2
84-0410	Carrier - Seal	13	21	1	3256-26	Washer - Flat	4	2	1
84-0430	Seal - O-Ring	13	8	4	3256-71	Washer - Flat	12	36	2
84-0440	Cover - Trunnion	13	7	2	3290-357	Nut - Flange Lock	12	35	1
84-0450	Cover - Trunnion	13	44	2	3290-378	Tie - Cable	1	11	2
84-0460	Screw	13	6	16	3290-378	Tie - Cable	5	1	2
84-0470	Seal - Lip	13	9	2	3290-378	Tie - Cable	14	34	2
84-0480	Poppet - Charge Relief	13	32	1	3290-477	Washer - Curved	12	37	2
84-0490	Spring - Compression	13	33	1	3296-9	Nut - Lock	12	34	2
84-0500	Charge Relief Plug Assy.	13	35	1	3296-29	Nut - Lock	12	5	5
84-0520	Plug - Special	13	31	4	3296-29	Nut - Lock	14	29	1
84-0540	Valve - Screw 345 BAR	13	26	2	3296-42	Nut - Lock	14	35	2
84-0550	Ring - Retaining	13	27	4	3296-42	Nut - Lock	15	2	1
84-0560	Seal - O-Ring	13	30	4	3296-59	Nut - Lock	6	10	1
84-0570	Shim - Trunnion	13	11	4	3296-59	Nut - Lock	8	5	4
84-0580	Shim - Charge Relief	13	36	1	3296-59	Nut - Lock	12	4	4
84-0660	Bracket - Stabilizer	10	4	2	32105-4	Screw - Hex. Hd.	12	20	1
237-22	Seal - O-Ring	14	19	1	32121-24	Pin - Roll	1	1	1
237-30	Seal - O-Ring	11	1	1	32128-20	Nut - Lock	10	5	2
237-30	Seal - O-Ring	14	12	2	32128-37	Nut - Flange Lock	14	36	1
237-65	Seal - O-Ring	1	13	2	32144-11	Screw	9	2	2
237-65	Seal - O-Ring	3	5	1	32144-26	Screw - Cap Hex. Hd.	10	1	2
237-65	Seal - O-Ring	14	3	6	32144-26	Screw - Hex. Flange Hd.	12	41	2
237-65	Seal - O-Ring	15	7	1	32144-26	Screw - Hex. Flange Hd.	14	10	2
237-78	Seal - O-Ring	14	21	1	32151-62	Ring - Retaining	1	6	1
237-79	Seal - O-Ring	1	16	2	32151-73	Ring - Clip	12	38	1
237-79	Seal - O-Ring	11	3	1	340-6	Fitting - Hydraulic Straight	11	2	1
237-80	Seal - O-Ring	13	14	2	340-7	Fitting - Hydraulic Straight	14	4	3
237-80	Seal - O-Ring	14	5	5	340-17	Fitting - Hydraulic 90°	14	24	1
237-136	Grommet	7	2	1	340-55	Fitting - Hydraulic 45°	1	17	1
237-161	Seal - O-Ring	12	42	1	340-105	Fitting - Hydraulic 90°	14	26	1
237-167	Seal - O-Ring	1	9	1	340-130	Fitting - Hydraulic 90°	14	18	1
2411-36	Eye - Rod	6	3	1	340-153	Fitting - Hydraulic 90°	1	15	1
2411-36	Eye - Rod	8	3	2	340-160	Fitting - Hydraulic	15	8	1
2411-36	Eye - Rod	12	32	2	353-551	Plug Assembly	13	13	2
2412-102	Clamp - R	4	1	1	354-87	Fitting - Hydraulic 90°	11	7	1
2412-126	Clamp - R	10	2	2					

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Reelmaster 335D has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Reelmaster 335-D, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the Reelmaster 335-D.
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page
Front Transaxle Assembly	1
Transaxle Assembly No. 82-4930	2
Hydraulic Motor Assembly No. 77-4090	3
Front Axle Assembly	4
Reel Plumbing Assembly	5
Traction Pedal Assembly	6
Seat Prop Assembly	7
Reel Speed Linkage Assembly	8
Foot Rest Assembly	9

Description	Page
Front Hydraulic Plumbing Support & Lift Arm Stabilizer Assembly	10
Hydraulic Reservoir Assembly	11
Hydraulic Pump Installation Assembly	12
Tandem Pump Assembly No. 82-5100	13
Hydraulic Pump Fittings Assembly	14
Rear Hydraulic Plumbing Support Assembly . . .	15
Part Number Index	16-17

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]