Form Number 3356-679 Rev B

# Commercial Walk-Behind Mower

## Fixed Deck Pistol Grip Hydro with 40in TURBO FORCE® Cutting Unit

**Model No. 30986 - 270000001 and up.**

# Parts Catalog

**Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

# Contents


| Description | Page |
|---|---|
| Engine and Fuel Tank Assembly | 3 |
| Drive Assembly | 4 |
| Parking Brake Assembly | 6 |
| Frame and Wheel Assembly | 7 |
| Hydraulic Assembly | 8 |
| Pivot and Linkage Assembly | 10 |
| Handle and Control Assembly | 11 |
| Control Handle Assembly No. 110-6907 | 13 |
| Deck Assembly | 14 |
| Deck Assembly No. 110-4908 | 15 |
| Deflector Assembly No. 110-0790 | 16 |
| Sheave, Spindle and Blade Assembly | 17 |
| Idler Assembly | 18 |
| Caster Assembly | 19 |
| Cylinder and Crankcase Assembly Kawasaki FH430V-CS25 | 20 |
| Piston and Crankshaft Assembly Kawasaki FH430V-CS25 | 21 |
| Valve and Camshaft Assembly Kawasaki FH430V-CS25 | 22 |
| Lubrication Equipment Assembly Kawasaki FH430V-CS25 | 23 |
| Cooling Equipment Assembly Kawasaki FH430V-CS25 | 24 |
| Electric Equipment Assembly Kawasaki FH430V-CS25 | 25 |
| Control Equipment Assembly Kawasaki FH430V-CS25 | 26 |
| Carburetor Assembly Kawasaki FH430V-CS25 | 27 |
| Air Filter and Muffler Assembly Kawasaki FH430V-CS25 | 28 |
| Fuel Tank and Valve Assembly Kawasaki FH430V-CS25 | 29 |
| Starter Assembly Kawasaki FH430V-CS25 | 30 |
| Label Assembly Kawasaki FH430V-CS25 | 31 |
| Attachments and Accessories List | 32 |


# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


| | |
|---|---|
| AR | as required |
| ASM | assembly |
| BBC | blade brake clutch |
| CARR | carriage |
| DEG | degrees |
| EXT | external |
| FH | flat head |
| GA | gauge |
| HD | heavy-duty |
| HF | hex flange |
| HH | hex head |
| HHF | hex head flange |
| HHFTF | hex head flange thread forming |
| HJ | hex jam |
| HLH | hex lag head |
| HOC | height-of-cut |
| HSBH | hex socket button head |
| HSFH | hex socket flat head |
| HSH | hex socket head |
| HWH | hex washer head |
| HWHTF | hex washer head thread forming |
| HYD | hydraulic |
| LH | left hand |
| NI | nylon insert |
| NPTF | national pipe thread fine |
| PFH | phillips flat head |
| PPH | phillips pan head |
| PPHTF | phillips pan head thread forming |
| PRH | phillips round head |
| PTH | phillips truss head |
| PTO | power-take-off |
| RH | right hand |
| ROPS | roll-over protection system |
| SFH | slotted fillister head |
| SHH | slotted hex head |
| SHWH | slotted hex washer head |
| SPH | slotted pan head |
| SQH | square head |
| SRH | slotted round head |
| STD | standard |
| TAP | self tapping |
| TTH | torx truss head |

# Footnotes

❶ Not illustrated

❷ Not serviced separately


❸ Obtain from your local Kawasaki dealer

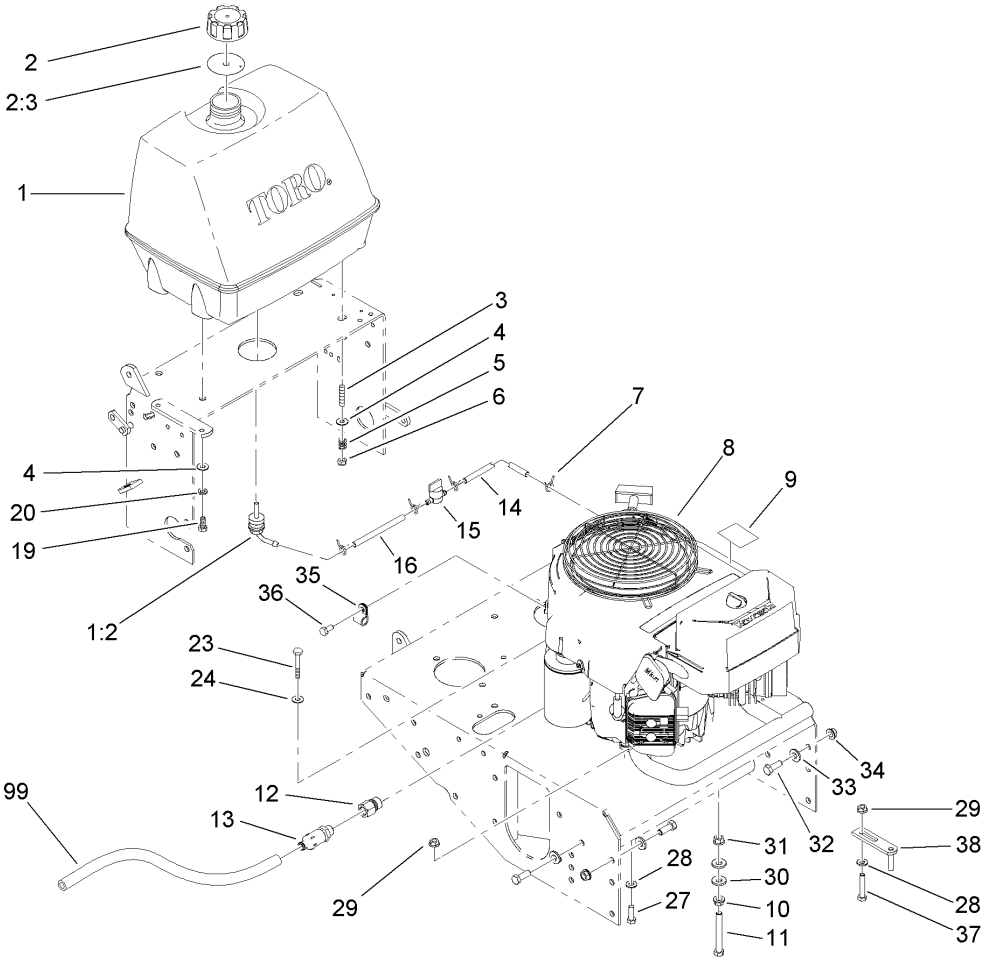


# Engine and Fuel Tank Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 106-0730 | 1 | Fuel Tank ASM |
| 1:2 | 103-2605 | 1 | Fitting-Fuel, Bulkhead |
| 2 | 88-3980 | 1 | Gas Cap ASM |
| 2:3 | 88-4010 | 1 | Gasket-Cap, Gas |
| 3 | 1-633023 | 2 | Stud |
| 4 | 3256-23 | 4 | Washer-Flat |
| 5 | 1-633349 | 2 | Spring-Tank, Fuel |
| 6 | 3296-47 | 2 | Nut-Lock, NI |
| 7 | 1-303077 | 4 | Clamp |
| ❷❸8 | | 1 | Engine-Kawasaki, FH430V-Cs25 |
| 9 | 106-0699 | 1 | Decal-Warning |
| 10 | 3290-357 | 1 | Nut-HHF, Whiz |
| 11 | 323-14 | 1 | Screw-HH |
| 12 | 103-1966 | 1 | Adapter |
| 13 | 92-6877 | 1 | Valve-Drain, Oil |
| 14 | 109-0293 | 1 | Hose-Fuel |
| 15 | 1-603770 | 1 | Valve-Fuel |
| 16 | 109-0306 | 1 | Hose-Fuel |
| 19 | 322-3 | 2 | Screw-HH |
| 20 | 1-805005 | 2 | Washer-Lock |
| 23 | 33113-016 | 1 | Screw-HH |
| 24 | 1-805004 | 1 | Washer-Lock |
| 27 | 322-7 | 3 | Screw-HH |
| 28 | 1-303334 | 4 | Washer-Spring |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 29 | 32128-20 | 4 | Nut-HF |
| 30 | 98-5975 | 2 | Washer-Belleville |
| 31 | 32128-21 | 1 | Nut-HF |
| 32 | 323-6 | 8 | Screw-HH |
| 33 | 98-5975 | 8 | Washer-Belleville |
| 34 | 3290-357 | 8 | Nut-HHF, Whiz |
| 35 | 1-413510 | 1 | Clip-Loom |
| 36 | 33114-016 | 1 | Screw-HH |
| 37 | 322-9 | 1 | Screw-HH |
| 38 | 1-322110 | 1 | Guide-Belt |
| 99 | 103-1964 | 1 | Hose-Drain, Oil |

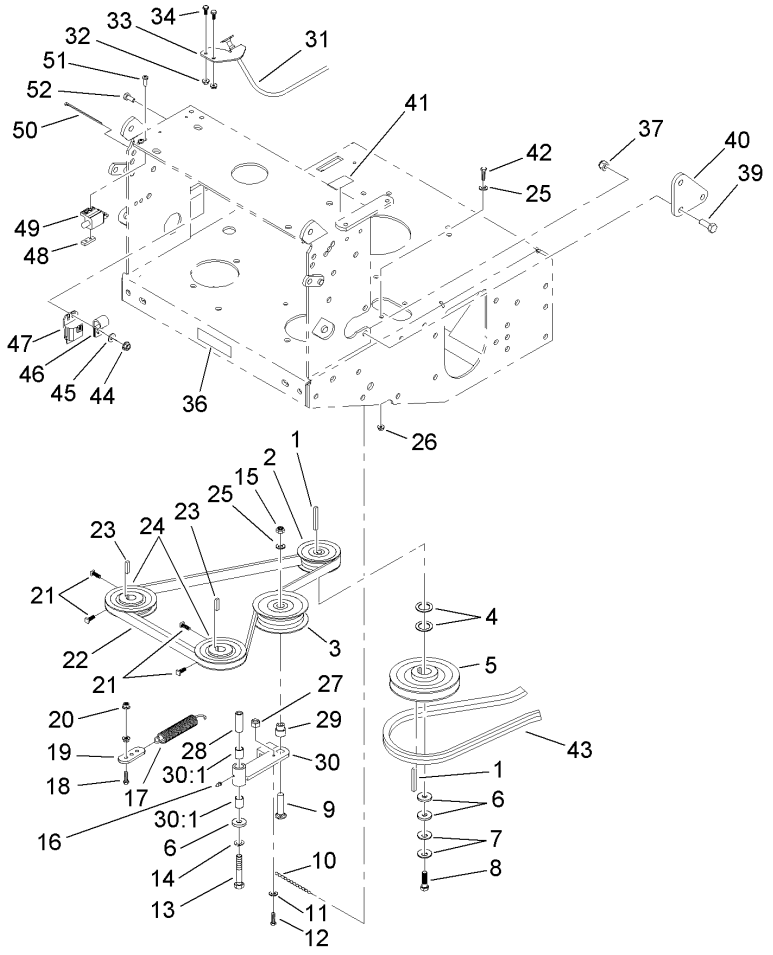


# Drive Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 1-807259 | 2 | Key |
| 2 | 1-653035 | 1 | Pulley |
| 3 | 1-603843 | 1 | Pulley-Idler |
| 4 | 1-523157 | 2 | Washer-Spacer |
| 5 | 110-0504 | 1 | Pulley Assembly |
| 6 | 1-373034 | 3 | Washer |
| 7 | 1-603610 | 2 | Washer-Spring |
| 8 | 3212-6 | 1 | Screw-HH |
| 9 | 3231-29 | 1 | Screw-CARR |
| 10 | 1-323365 | 1 | Chain-Link, Twist |
| 11 | 3256-14 | 1 | Washer-Flat |
| 12 | 1-809069 | 1 | Screw-HSH |
| 13 | 323-12 | 1 | Screw-HH |
| 14 | 1-373034 | 1 | Washer |
| 15 | 32128-21 | 1 | Nut-HF |
| 16 | 302-19 | 1 | Fitting-Grease |
| 17 | 1-603402 | 1 | Spring-Extension |
| 18 | 322-5 | 1 | Screw-HH |
| 19 | 1-603801 | 1 | Anchor-Spring |
| 20 | 32128-20 | 2 | Nut-HF |
| 21 | 1-803050 | 4 | Screw-Set |
| 22 | 106-2740 | 1 | V-Belt |
| 23 | 1-807272 | 2 | Key |
| 24 | 1-413010 | 2 | Sheave ASM |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 25 | 3256-24 | 2 | Washer-Flat |
| 26 | 3290-357 | 1 | Nut-HHF, Whiz |
| 27 | 3296-2 | 1 | Nut-Lock |
| 28 | 1-603044 | 1 | Bushing |
| 29 | 1-603496 | 1 | Bushing-Idler |
| 30 | 1-602521 | 1 | Idler Arm ASM |
| 30:1 | 103-4681 | 2 | Sleeve-Bearing |
| 31 | 103-1796 | 1 | Cable-Choke |
| 32 | 32128-33 | 2 | Nut-HF |
| 33 | 103-1797-01 | 1 | Bracket-Cable, Choke |
| 34 | 321-3 | 2 | Screw-HH |
| 36 | 98-0776 | 1 | Decal-Caution |
| 37 | 3296-39 | 2 | Nut-Lock, NI |
| 39 | 323-6 | 2 | Screw-HH |
| 40 | 1-413497 | 1 | Bellcrank |
| 41 | 95-2814 | 1 | Decal-Shut Off, Fuel |
| 42 | 323-7 | 1 | Screw-HH |
| 43 | 110-0749 | 1 | Belt-V |
| 44 | 3296-42 | 1 | Nut-Lock, NI |
| 45 | 3256-22 | 1 | Washer-Flat |
| 46 | 1-603727 | 1 | Clip-Loom |
| 47 | 1-323430 | 1 | Module-Interlock |
| 48 | 1-633181 | 1 | Plate-Tapped |
| 49 | 1-513051 | 1 | Switch-Open, Normally |

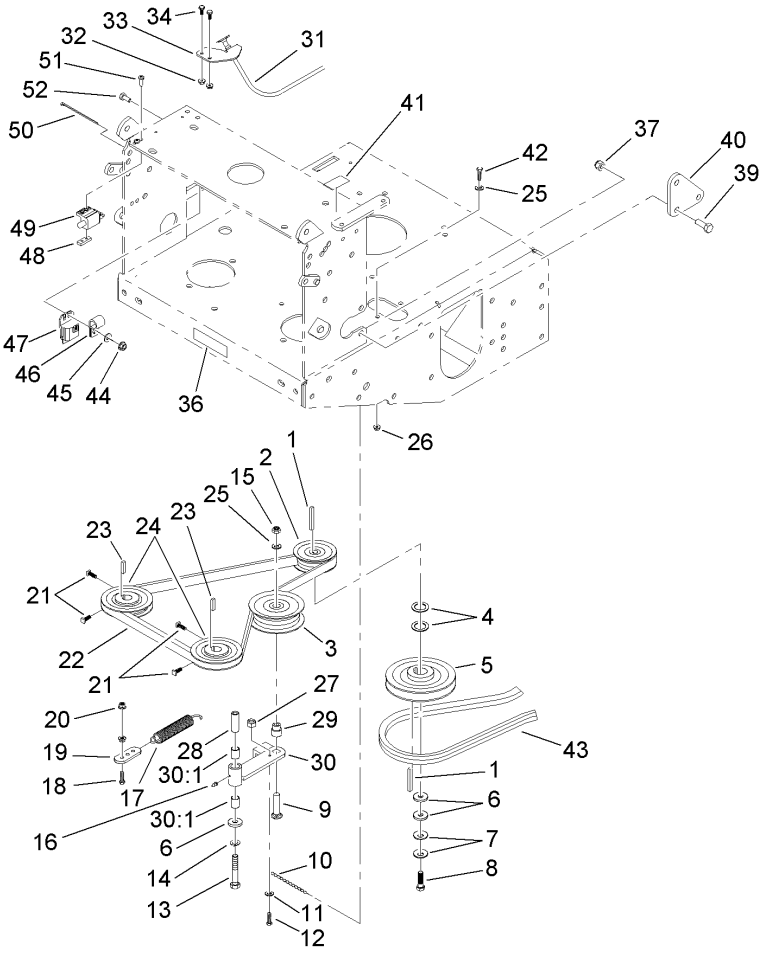


# Drive Assembly (continued)


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 50 | 1-303287 | 1 | Tie-Plastic |
| 51 | 3290-500 | 2 | Screw-PPH |
| 52 | 321-4 | 1 | Screw-HH |

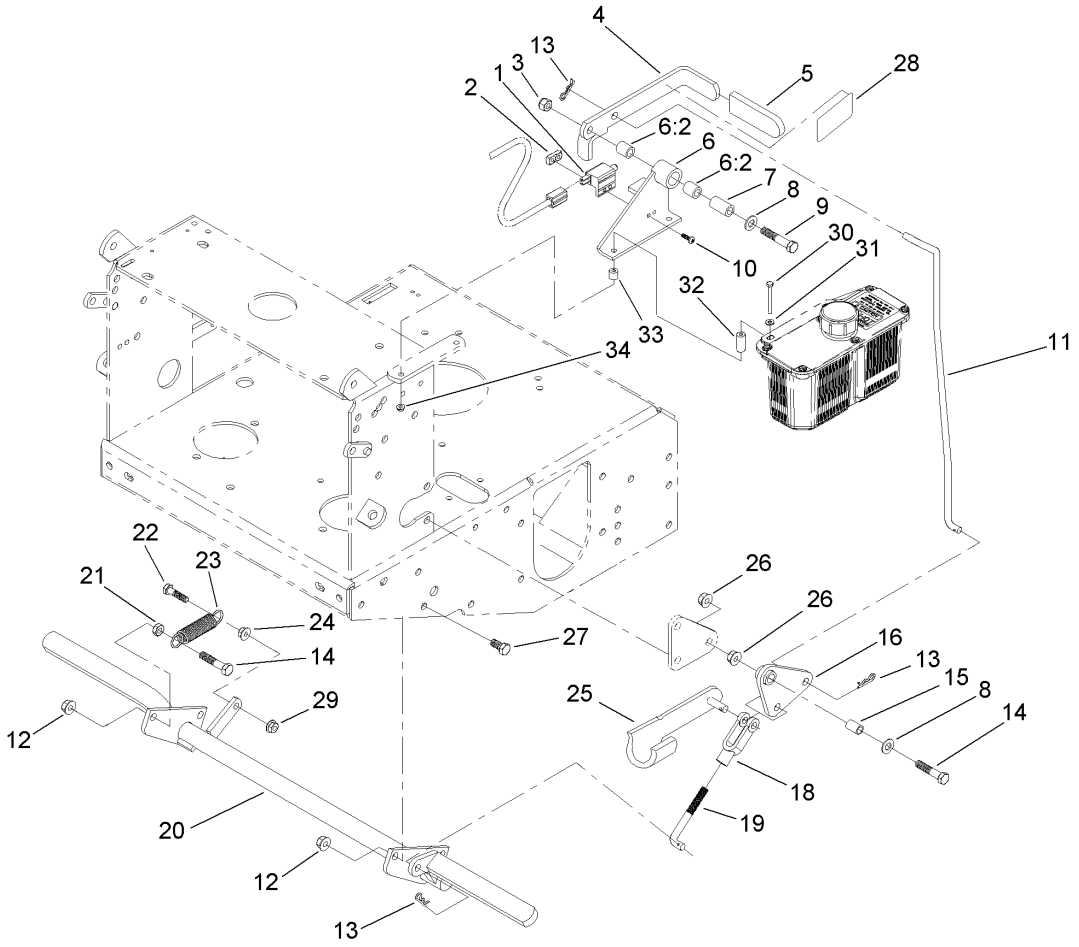


# Parking Brake Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 1-513051 | 1 | Switch-Open, Normally |
| 2 | 1-633181 | 1 | Plate-Tapped |
| 3 | 3296-39 | 1 | Nut-Lock, NI |
| 4 | 1-412501-03 | 1 | Lever-Parkbrake |
| 5 | 1-303020 | 1 | Grip-Lever |
| 6 | 1-414504 | 1 | Bracket ASM |
| 6:2 | 1-413347 | 2 | Sleeve-Bushing |
| 7 | 1-413344 | 1 | Bushing-Pivot |
| 8 | 3256-24 | 2 | Washer-Flat |
| 9 | 323-10 | 1 | Screw-HH |
| 10 | 3290-500 | 2 | Screw-PPH |
| 11 | 1-413496 | 1 | Linkage-Upper |
| 12 | 3296-39 | 4 | Nut-Lock, NI |
| 13 | 1-806003 | 3 | Pin-Hair |
| 14 | 323-9 | 2 | Screw-HH |
| 15 | 1-303548 | 1 | Bushing-Plastic |
| 16 | 1-414508 | 1 | Bellcrank ASM |
| 18 | 1-633131 | 1 | Yoke-Linkage, Brake |
| 19 | 1-413489 | 1 | Linkage-Lower |
| 20 | 103-2085-03 | 1 | Brake ASM |
| 21 | 3218-3 | 1 | Nut-Jam |
| 22 | 322-6 | 1 | Screw-HH |
| 23 | 1-323161 | 1 | Spring-Idler |
| 24 | 32128-20 | 1 | Nut-HF |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 25 | 103-2399 | 1 | Pin-Spring, Clevis |
| 26 | 32128-21 | 2 | Nut-HF |
| 27 | 323-6 | 3 | Screw-HH |
| 28 | 103-2103 | 1 | Decal-Brake, Park |
| 29 | 3296-29 | 1 | Nut-Lock, NI |
| 30 | 321-23 | 2 | Screw-HH |
| 31 | 3256-22 | 2 | Washer-Flat |
| 32 | 103-2191 | 2 | Spacer |
| 33 | 1-323549 | 2 | Spacer |
| 34 | 32128-33 | 2 | Nut-HF |

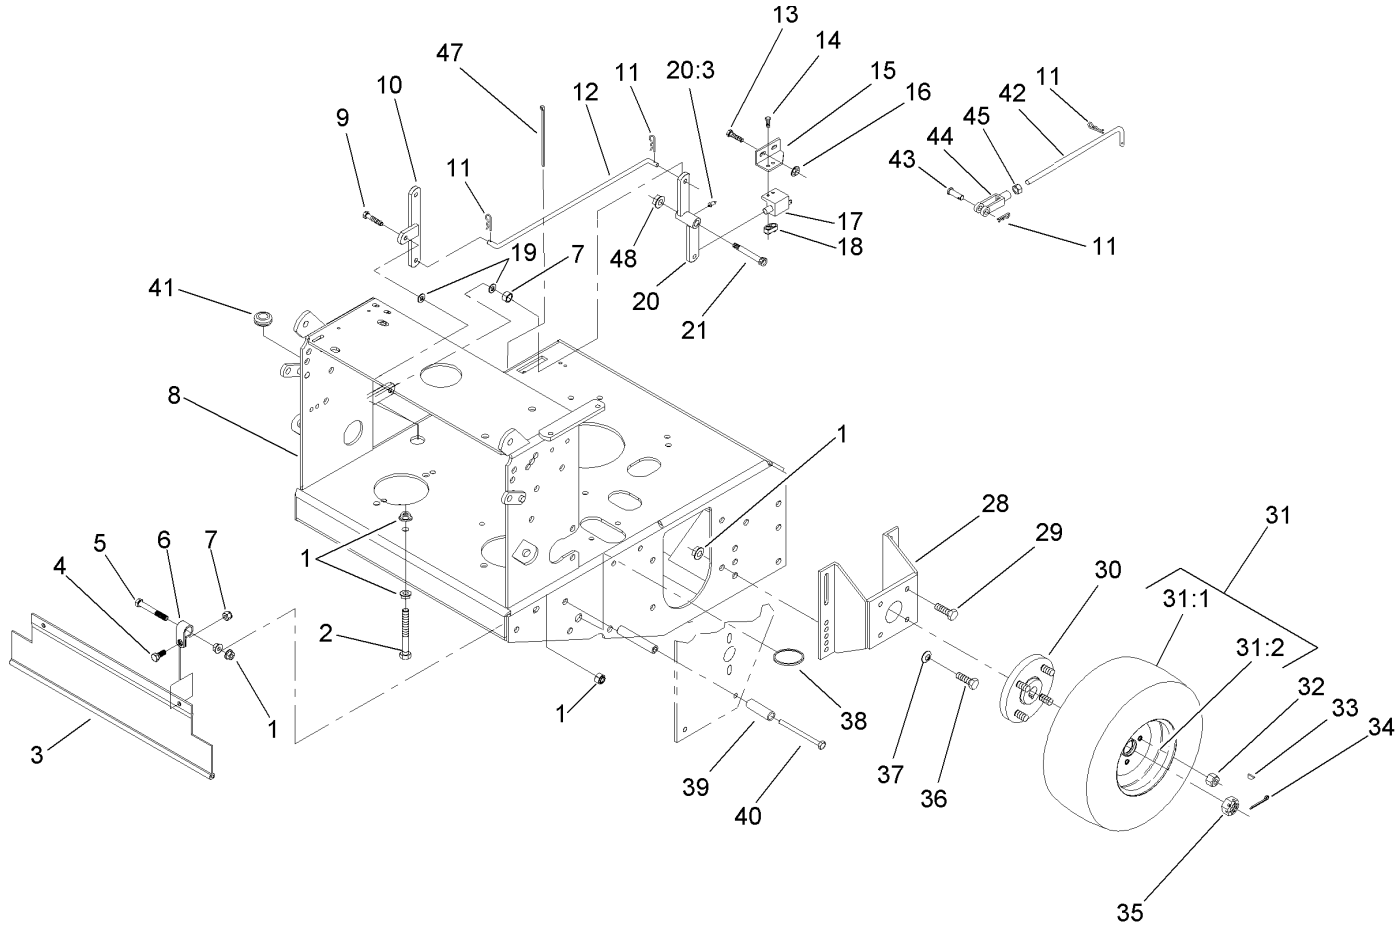


# Frame and Wheel Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3290-357 | 15 | Nut-HHF, Whiz |
| 2 | 323-11 | 1 | Screw-HH |
| 3 | 103-2056 | 1 | Shield-Drag |
| 4 | 322-3 | 2 | Screw-HH |
| 5 | 323-13 | 2 | Screw-HH |
| 6 | 1-413510 | 2 | Clip-Loom |
| 7 | 3296-29 | 3 | Nut-Lock, NI |
| 8 | 110-6915-01 | 1 | Hydro Frame ASM |
| 9 | 322-6 | 1 | Screw-HH |
| 10 | 1-322090-01 | 1 | Bellcrank ASM |
| 11 | 1-806003 | 4 | Pin-Hair |
| 12 | 1-323172 | 1 | Linkage-Engage, Blade |
| 13 | 321-3 | 2 | Screw-HH |
| 14 | 3290-500 | 2 | Screw-PPH |
| 15 | 1-323213 | 1 | Bracket-Switch, Blade |
| 16 | 32128-33 | 2 | Nut-HF |
| 17 | 1-513051 | 1 | Switch-Open, Normally |
| 18 | 1-633181 | 1 | Plate-Tapped |
| 19 | 3256-23 | 2 | Washer-Flat |
| 20 | 1-322108 | 1 | Bellcrank ASM |
| 20:3 | 302-40 | 1 | Fitting-Grease |
| 21 | 1-809062 | 1 | Screw |
| 28 | 103-2289-01 | 2 | Mount-Motor |
| 29 | 3234-12 | 8 | Screw-HHF |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 30 | 1-602997 | 2 | Hub W/Studs |
| 31 | 1-413473 | 2 | Wheel And Tire ASM |
| 31:1 | 1-413474 | 1 | Tire-Turfmaster |
| 31:2 | 1-603715 | 1 | Wheel-Rim |
| 32 | 242-50 | 8 | Nut-Lug |
| 33 | 1-807019 | 2 | Key-Woodruff |
| 34 | 1-806800 | 2 | Pin-Cotter |
| 35 | 32136-5 | 2 | Nut-Hex, Slotted |
| 36 | 323-6 | 8 | Screw-HH |
| 37 | 98-5975 | 8 | Washer-Belleville |
| 38 | 1-323366 | 1 | Ring-Split |
| 39 | 105-4820 | 1 | Spacer-Short |
| 40 | 323-23 | 1 | Screw-HH |
| 41 | 1-543296 | 1 | Grommet |
| 42 | 1-323174 | 1 | Arm-Linkage, Assist |
| 43 | 1-808280 | 1 | Pin-Clevis |
| 44 | 1-303105 | 1 | Yoke-Adjustable |
| 45 | 3219-2 | 1 | Nut-Hex |
| 47 | 1-303287 | 2 | Tie-Plastic |
| 48 | 32128-21 | 1 | Nut-HF |

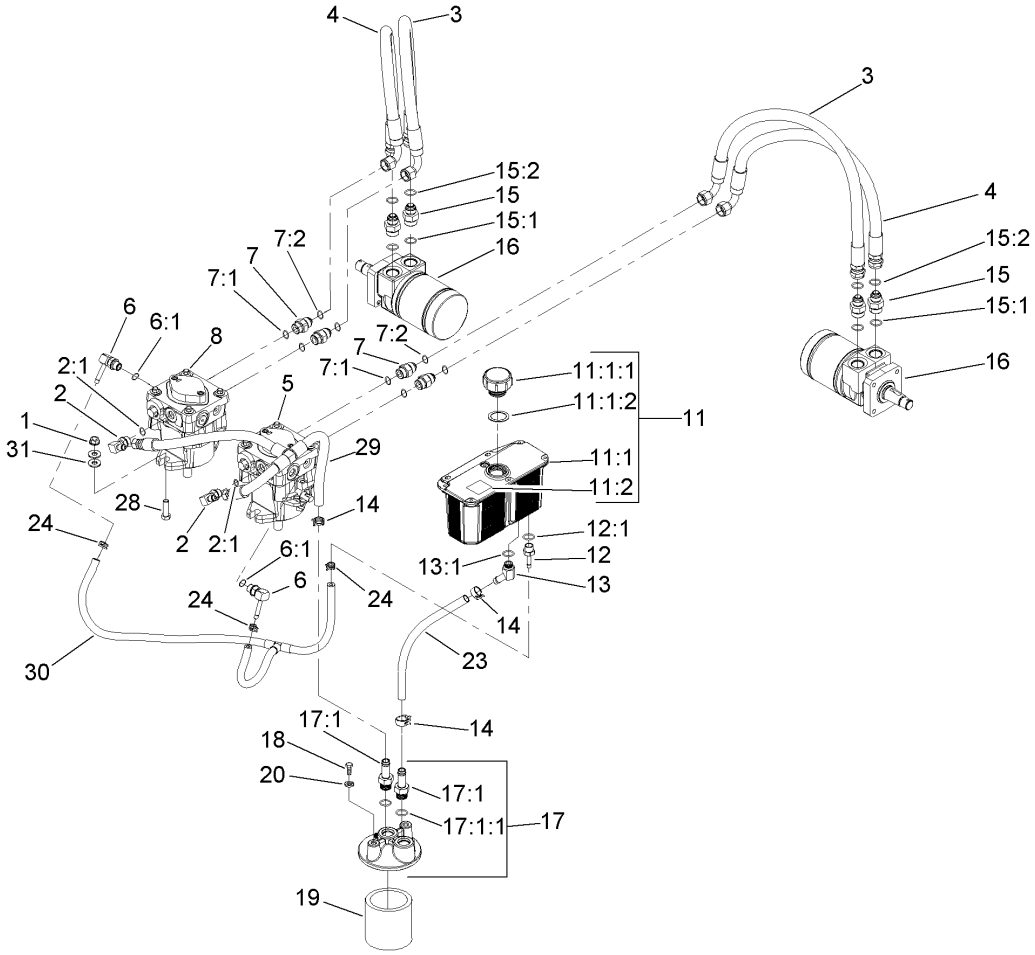


# Hydraulic Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3290-357 | 4 | Nut-HHF, Whiz |
| 2 | 103-1802 | 2 | Fitting-HYD, 90 DEG |
| 2:1 | 1-603921 | 1 | O-Ring |
| 3 | 1-323241 | 2 | Hose-Pressure, High |
| 4 | 1-613034 | 2 | Hose-Pressure, High |
| 5 | 109-4987 | 1 | Pump-HYD |
| ❶5:1 | 103-2664 | 1 | Input Shaft Kit |
| ❶5:2 | 94-6922 | 1 | Bearing-Thrust |
| ❶5:3 | 103-2666 | 1 | Cylinder Block Kit |
| ❶5:4 | 105-6185 | 1 | Plate-Valve |
| ❶5:5 | 105-6184 | 1 | Overhaul Seal Kit |
| 6 | 103-1799 | 2 | Elbow-90 DEG |
| 6:1 | 237-42 | 1 | O-Ring |
| 7 | 1-603990 | 4 | Fitting-Straight |
| 7:1 | 1-603920 | 1 | O-Ring |
| 7:2 | 1-603992 | 1 | O-Ring |
| 8 | 109-4988 | 1 | Pump-HYD |
| ❶8:1 | 103-2664 | 1 | Input Shaft Kit |
| ❶8:2 | 94-6922 | 1 | Bearing-Thrust |
| ❶8:3 | 103-2666 | 1 | Cylinder Block Kit |
| ❶8:4 | 105-6185 | 1 | Plate-Valve |
| ❶8:5 | 105-6184 | 1 | Overhaul Seal Kit |
| 11 | 103-1947 | 1 | HYD Reservoir ASM |
| ❷11:1 | | 1 | Reservoir-HYD |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 11:1:1 | 103-1948 | 1 | Cap-Reservoir, HYD |
| 11:1:2 | 103-1949 | 1 | Gasket-Cap |
| 11:2 | 1-523552 | 1 | Decal-Tank, HYD |
| 12 | 103-1801 | 1 | Adapter-Straight |
| 12:1 | 237-42 | 1 | O-Ring |
| 13 | 103-1807 | 1 | Elbow-45 DEG |
| 13:1 | 237-42 | 1 | O-Ring |
| 14 | 103-1988 | 3 | Clamp-Hose |
| 15 | 1-603991 | 4 | Fitting-Straight |
| 15:1 | 237-80 | 1 | O-Ring |
| 15:2 | 1-603992 | 1 | O-Ring |
| 16 | 1-603718 | 2 | Motor-Wheel |
| ❶16:1 | 1-000119 | 1 | Seal Kit |
| 17 | 103-2889 | 1 | Filter Head ASM |
| 17:1 | 103-1912 | 2 | Adapter-Straight |
| 17:1:1 | 237-42 | 1 | O-Ring |
| 18 | 321-3 | 2 | Screw-HH |
| 19 | 1-633750 | 1 | Filter-Oil, HYD |
| 20 | 1-805004 | 2 | Washer-Lock |
| 23 | 103-2959 | 1 | Hose-Charge |
| 24 | 103-1716 | 3 | Clamp-Hose |
| 28 | 323-7 | 4 | Screw-HH |
| 29 | 103-3914 | 1 | Charge Hose ASM |
| 30 | 103-4019 | 1 | Case Drain Hose ASM |

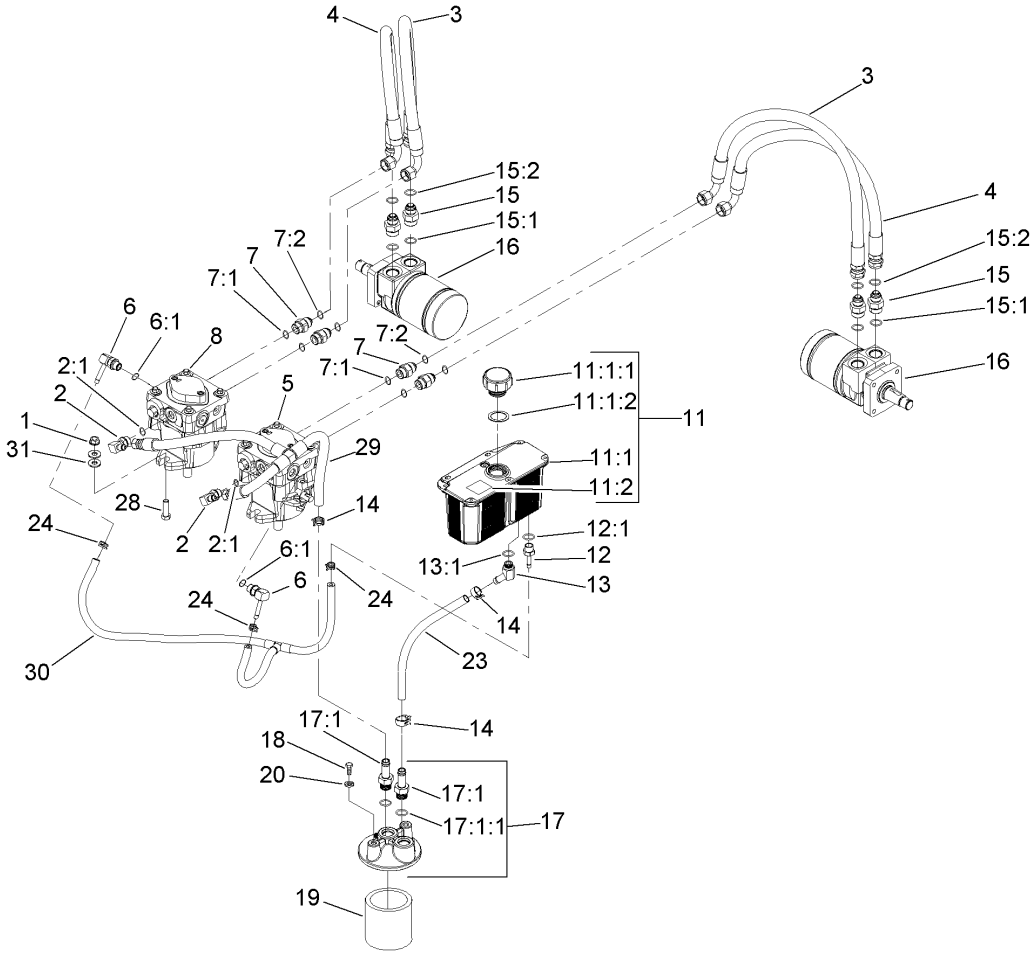


# Hydraulic Assembly (continued)


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 31 | 3256-3 | 8 | Washer-Flat |

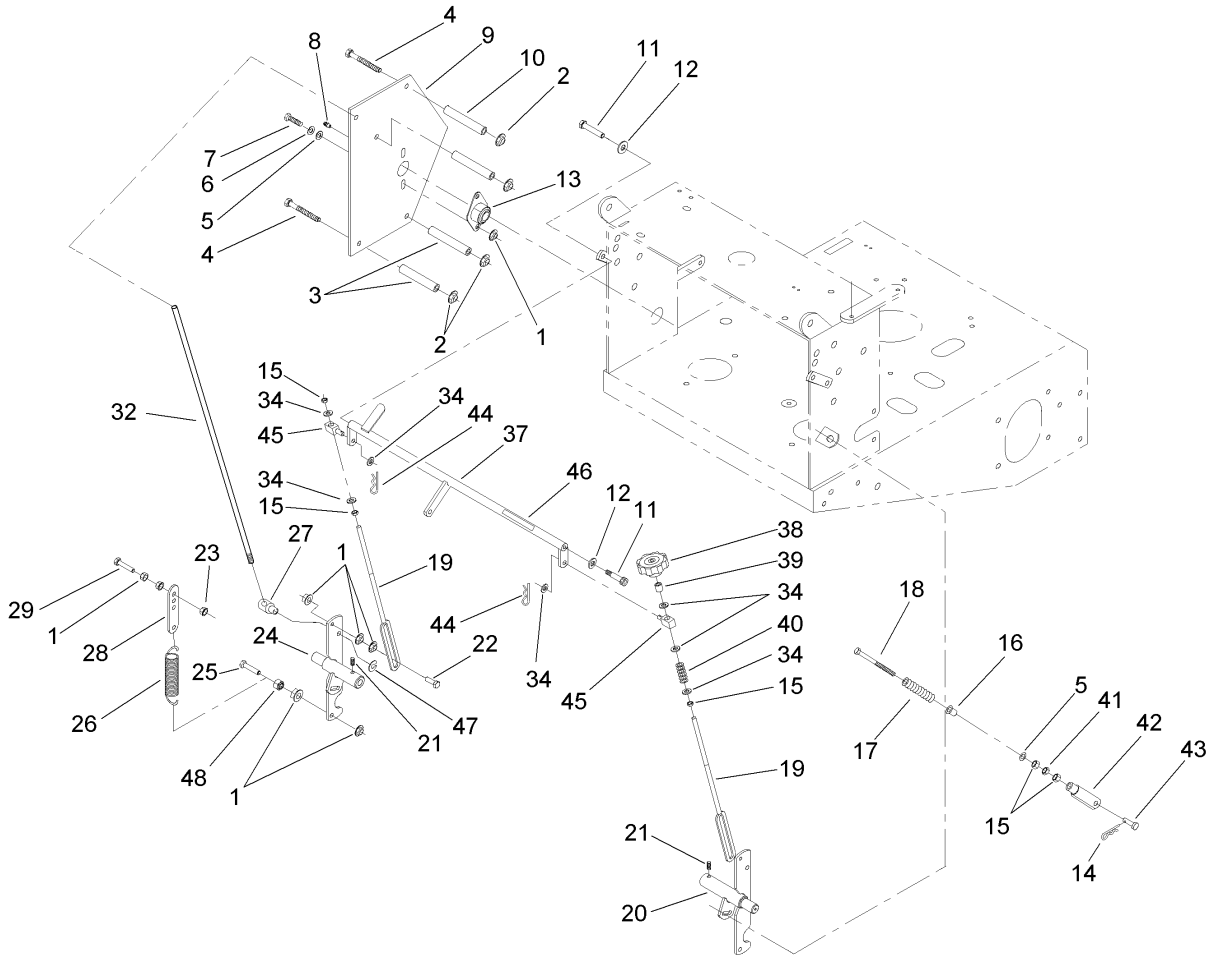


# Pivot and Linkage Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 32128-20 | 18 | Nut-HF |
| 2 | 3290-357 | 7 | Nut-HHF, Whiz |
| 3 | 1-323197-01 | 4 | Spacer-Shield |
| 4 | 323-16 | 7 | Screw-HH |
| 5 | 3256-2 | 6 | Washer-Flat |
| 6 | 1-805005 | 4 | Washer-Lock |
| 7 | 322-3 | 4 | Screw-HH |
| 8 | 302-19 | 2 | Fitting-Grease |
| 9 | 110-4897-01 | 2 | Shield-Control, Hydro |
| 10 | 1-323195-01 | 4 | Spacer-Shield |
| 11 | 1-809056 | 2 | Screw |
| 12 | 3256-24 | 2 | Washer-Flat |
| 13 | 1-633102 | 2 | Bearing-Flange, Side |
| 14 | 1-806003 | 2 | Pin-Hair |
| 15 | 3219-2 | 7 | Nut-Hex |
| 16 | 109-3769 | 2 | Bushing-Nylon, Flanged |
| 17 | 1-603807 | 2 | Spring-Return, Neutral |
| 18 | 1-603737 | 2 | Bolt-Return, Neutral |
| 19 | 1-413350 | 2 | Link-Control, Speed |
| 20 | 103-4796-01 | 1 | Shaft-Control, RH |
| 21 | 1-803022 | 2 | Screw-Set |
| 22 | 1-403180 | 2 | Screw-HH |
| 23 | 3296-29 | 2 | Nut-Lock, NI |
| 24 | 103-1190-01 | 1 | Shaft-Control, LH |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 25 | 322-6 | 2 | Screw-HH |
| 26 | 1-603693 | 2 | Spring-Extension |
| 27 | 103-1235 | 2 | Swivel-Lever, Drive |
| 28 | 1-613089 | 2 | Tab-Spring, Extension |
| 29 | 1-800016 | 2 | Bolt-TAP, HH |
| 32 | 1-413219 | 2 | Rod-Lever, Drive |
| 34 | 3256-23 | 7 | Washer-Flat |
| 37 | 1-412203-01 | 1 | Crank-Control, Speed |
| 38 | 1-413151 | 1 | Knob-Tracking |
| 39 | 1-603903 | 1 | Spacer |
| 40 | 1-323245 | 1 | Spring-Compression |
| 41 | 3220-2 | 2 | Nut-Jam |
| 42 | 1-303105 | 2 | Yoke-Adjustable |
| 43 | 1-808280 | 2 | Pin-Clevis |
| 44 | 3272-5 | 2 | Pin-Cotter |
| 45 | 1-603676 | 2 | Swivel-Adjustable, Short |
| 46 | 105-4109 | 1 | Decal-Tracking |
| 47 | 32151-47 | 2 | Ring-Retaining |
| 48 | 3218-2 | 2 | Nut-Jam |

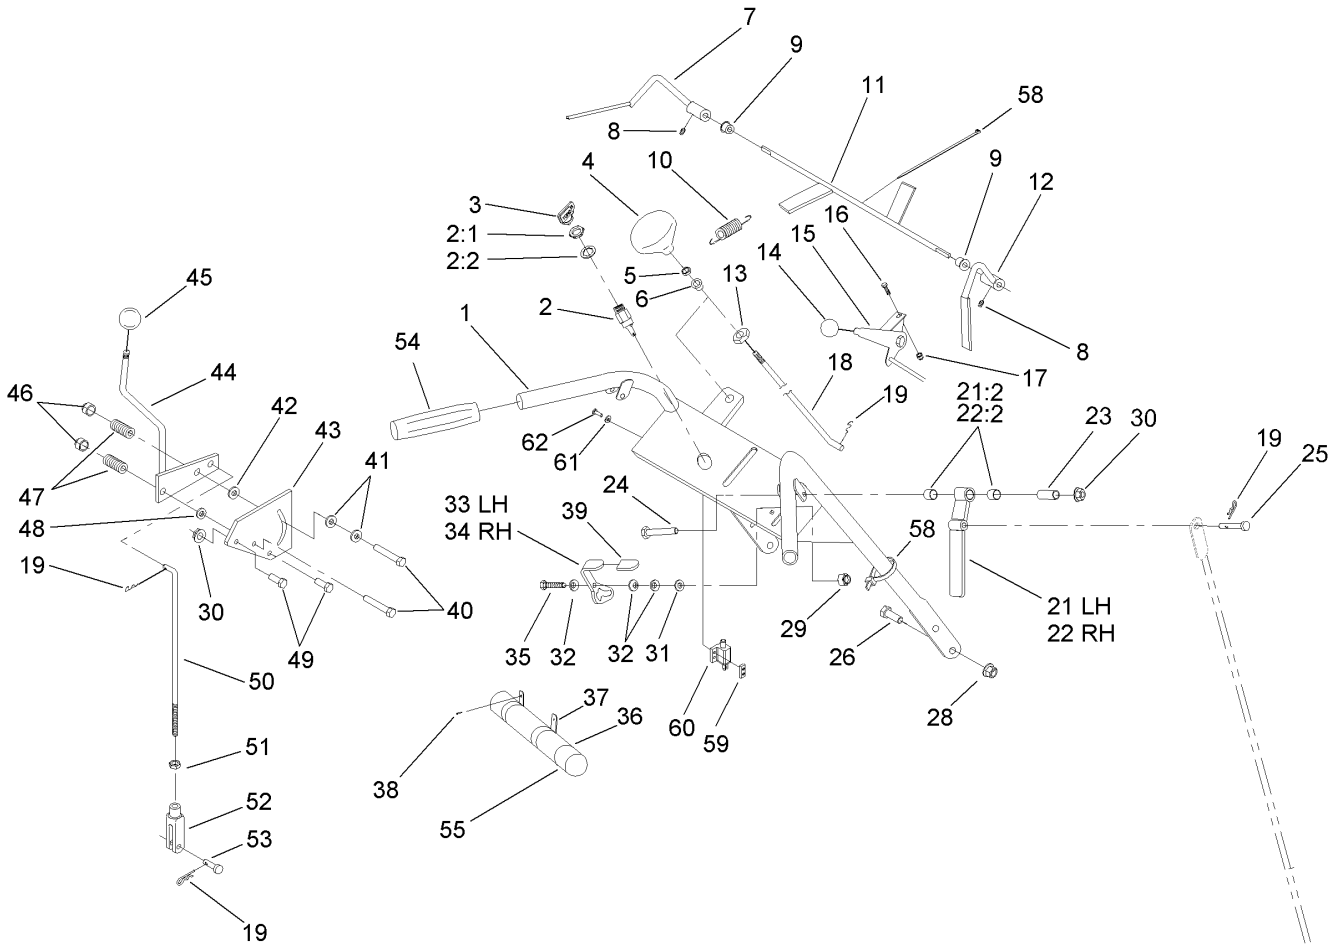


# Handle and Control Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 110-6907 | 1 | Hydro Handle ASM |
| 2 | 29-5560 | 1 | Switch-On / Off |
| 2:1 | 218-461 | 1 | Nut-HH |
| 2:2 | 3254-5 | 1 | Washer-Tooth |
| 3 | 63-8360 | 1 | Key-Ignition |
| 4 | 1-323134 | 1 | Knob-Push / Pull |
| 5 | 3218-2 | 1 | Nut-Jam |
| 6 | 1-323143 | 1 | Bearing-Nylon |
| 7 | 106-5485 | 1 | LH Operator Presence Control Lever ASM |
| 8 | 1-803322 | 2 | Screw-Set |
| 9 | 1-303365 | 2 | Bushing-Nylon |
| 10 | 1-303363 | 1 | Spring-Extension |
| 11 | 106-2717-03 | 1 | Rod-Control, Operator Presence |
| 12 | 106-5486 | 1 | RH Operator Presence Control Lever ASM |
| 13 | 1-323142 | 1 | Nut-Push |
| 14 | 1-513592 | 1 | Knob-Ball |
| 15 | 1-633696 | 1 | Throttle Cable ASM |
| 16 | 1-807513 | 2 | Bolt-CARR |
| 17 | 3296-2 | 2 | Nut-Lock |
| 18 | 1-323181 | 1 | Linkage-Blade |
| 19 | 1-806003 | 5 | Pin-Hair |
| 21 | 103-0218 | 1 | LH Drive Lever ASM |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 21:2 | 1-413152 | 2 | Sleeve-Bushing |
| 22 | 103-0219 | 1 | RH Drive Lever ASM |
| 22:2 | 1-413152 | 2 | Sleeve-Bushing |
| 23 | 1-603749 | 2 | Bushing-Lever, Drive |
| 24 | 321-9 | 2 | Screw-HH |
| 25 | 1-613055 | 2 | Pin-Clevis |
| 26 | 3234-11 | 4 | Screw-HHF |
| 28 | 32128-21 | 4 | Nut-HF |
| 29 | 3296-42 | 2 | Nut-Lock, NI |
| 30 | 32128-33 | 4 | Nut-HF |
| 31 | 3256-2 | 2 | Washer-Flat |
| 32 | 1-303435 | 6 | Washer-Spring |
| 33 | 1-612167 | 1 | LH Grip / Latch ASM |
| 34 | 1-612168 | 1 | RH Grip / Latch ASM |
| 35 | 321-10 | 2 | Screw-HH |
| 36 | 104-7050 | 1 | Housing-Manual |
| 37 | 2412-120 | 2 | R-Clamp |
| 38 | 32104-76 | 2 | Screw |
| 39 | 1-303019 | 2 | Grip-Latch |
| 40 | 322-10 | 2 | Screw-HH |
| 41 | 1-603716 | 1 | Washer-Friction |
| 42 | 1-323244 | 2 | Washer-Friction |
| 43 | 1-603730 | 1 | Plate-Lever, Shifter |
| 44 | 106-2748 | 1 | Lever-Shift |

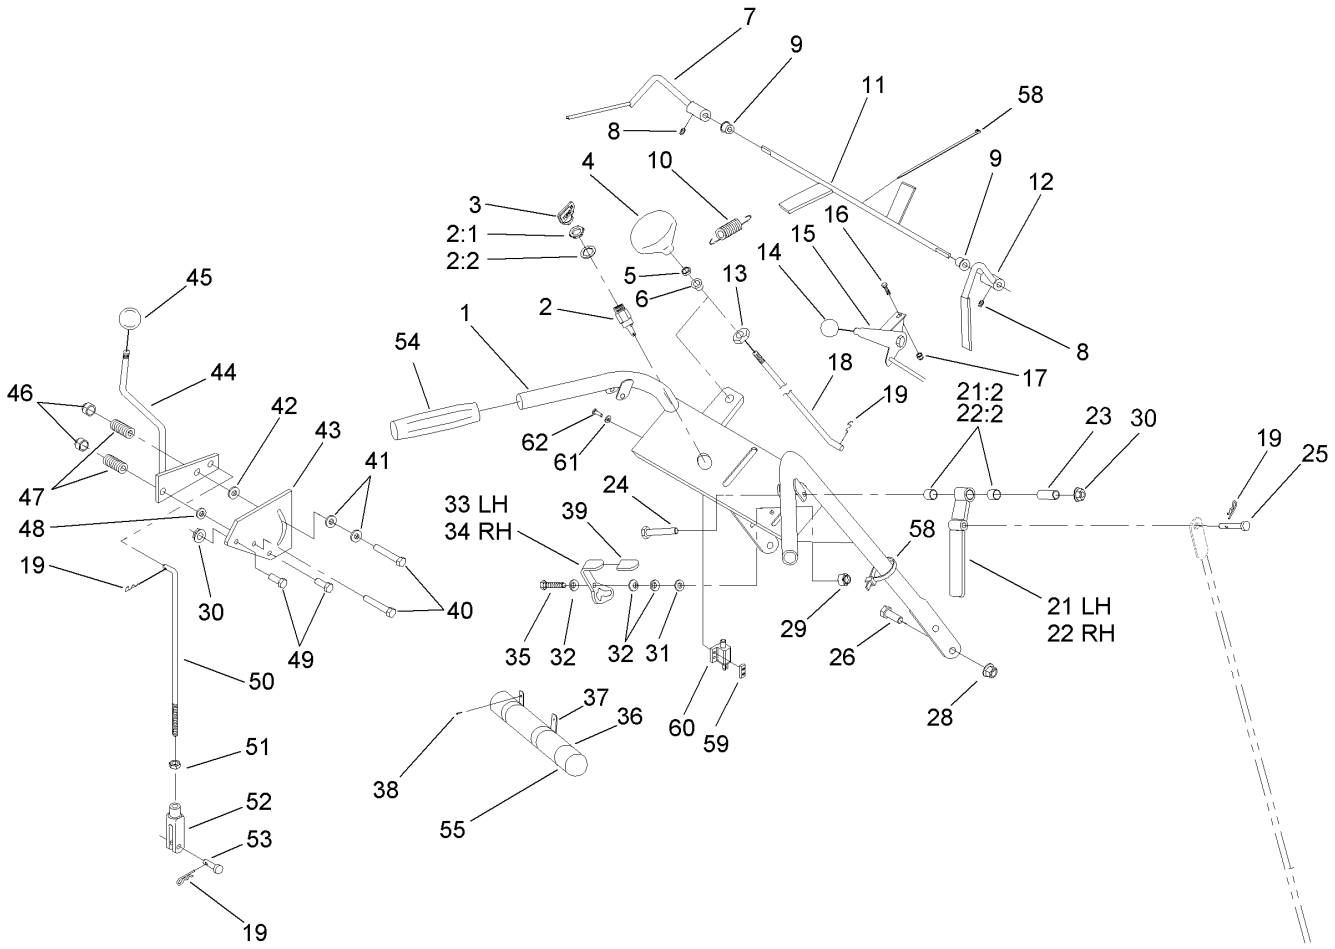



# Handle and Control Assembly (continued)

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 45 | 1-603175 | 1 | Knob-Ball |
| 46 | 3296-29 | 2 | Nut-Lock, NI |
| 47 | 1-323245 | 2 | Spring-Compression |
| 48 | 3256-23 | 1 | Washer-Flat |
| 49 | 321-3 | 2 | Screw-HH |
| 50 | 1-323522 | 1 | Rod-Control, Speed |
| 51 | 3220-2 | 1 | Nut-Jam |
| 52 | 1-303105 | 1 | Yoke-Adjustable |
| 53 | 1-808280 | 1 | Pin-Clevis |
| 54 | 104-9838 | 2 | Grip-Foam |
| 55 | 104-7048 | 1 | Cap-Housing |
| 58 | 1-303287 | 3 | Tie-Plastic |
| 59 | 1-633181 | 1 | Plate-Tapped |
| 60 | 1-513051 | 1 | Switch-Open, Normally |
| 61 | 3256-14 | 2 | Washer-Flat |
| 62 | 3290-500 | 2 | Screw-PPH |
| ❶63 | 103-2007 | 1 | Harness-Wiring |

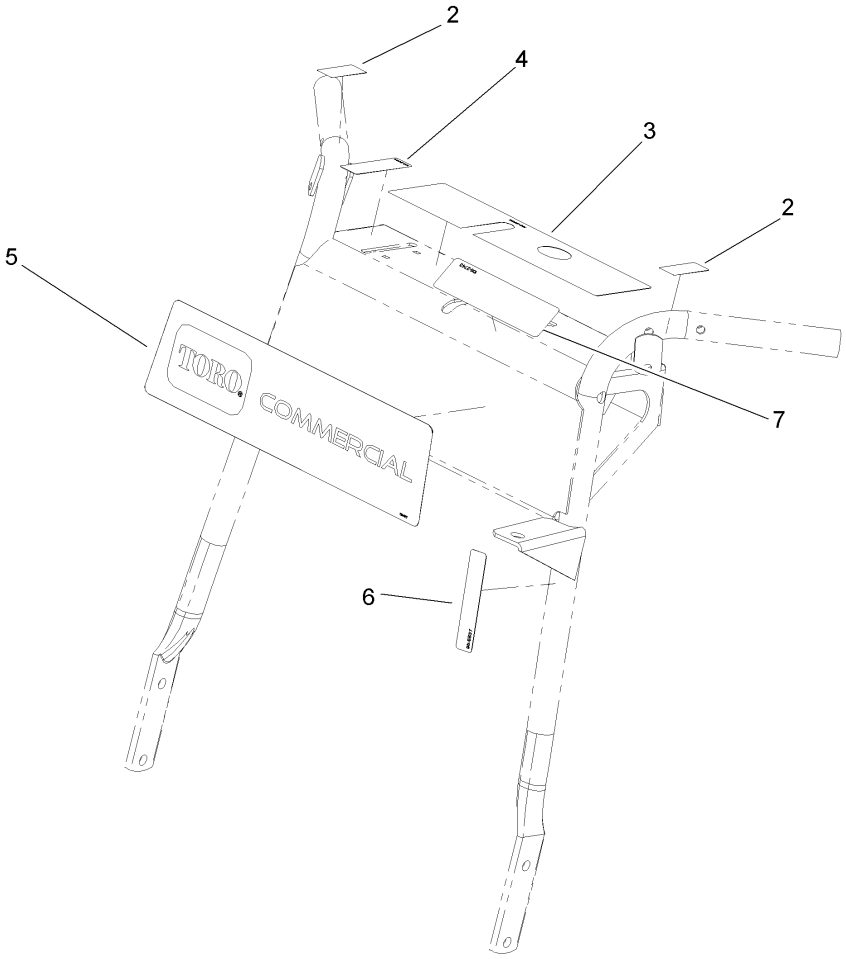


# Control Handle Assembly No. 110-6907


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 2 | 105-4110 | 2 | Decal-Lock, Neutral |
| 3 | 106-2738 | 1 | Decal-Warning |
| 4 | 106-2733 | 1 | Decal-Throttle |
| 5 | 110-6917 | 1 | Decal |
| 6 | 95-5537 | 1 | Decal-Engage, Deck |
| 7 | 106-2743 | 1 | Decal-Caution, Brake |

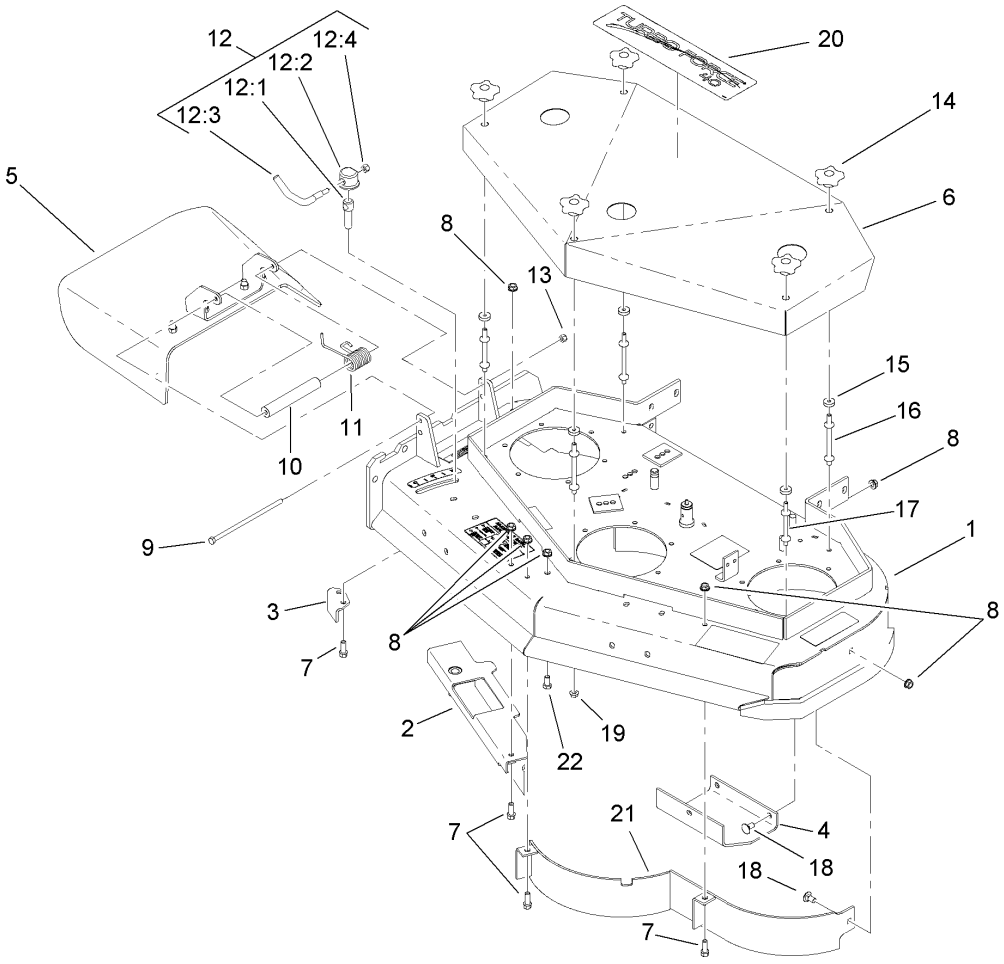


# Deck Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 110-4908 | 1 | Deck ASM |
| 2 | 110-0795-03 | 1 | Baffle Adjust ASM |
| 3 | 108-7273-01 | 1 | Baffle-Discharge |
| 4 | 108-7282-01 | 1 | Plate-Skid |
| 5 | 110-0790 | 1 | Deflector ASM |
| 6 | 110-2034-01 | 1 | Cover-Deck |
| 7 | 92-1624 | 5 | Screw |
| 8 | 3290-357 | 12 | Nut-HHF, Whiz |
| 9 | 322-50 | 1 | Screw-HH |
| 10 | 105-4622 | 1 | Spacer |
| 11 | 104-8554 | 1 | Spring-Torsion |
| 12 | 107-1664 | 1 | Lever ASM |
| 12:1 | 106-3239 | 1 | Screw-Lock |
| 12:2 | 107-1644 | 1 | Cap-Lock |
| 12:3 | 106-3241 | 1 | Lever-Lock |
| 12:4 | 3296-29 | 1 | Nut-Lock, NI |
| 13 | 3296-29 | 1 | Nut-Lock, NI |
| 14 | 106-4161 | 5 | Knob-Handle |
| 15 | 1-323417 | 5 | Washer |
| 16 | 1-303536 | 3 | Stud-Shield, Belt (Long) |
| 17 | 1-303537 | 2 | Stud-Shield, Belt (Short) |
| 18 | 3231-1 | 4 | Screw-CARR |
| 19 | 32128-20 | 5 | Nut-HF |
| 20 | 110-6919 | 1 | Decal |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 21 | 110-6910-03 | 1 | Baffle ASM |
| 22 | 323-4 | 3 | Screw-HH |

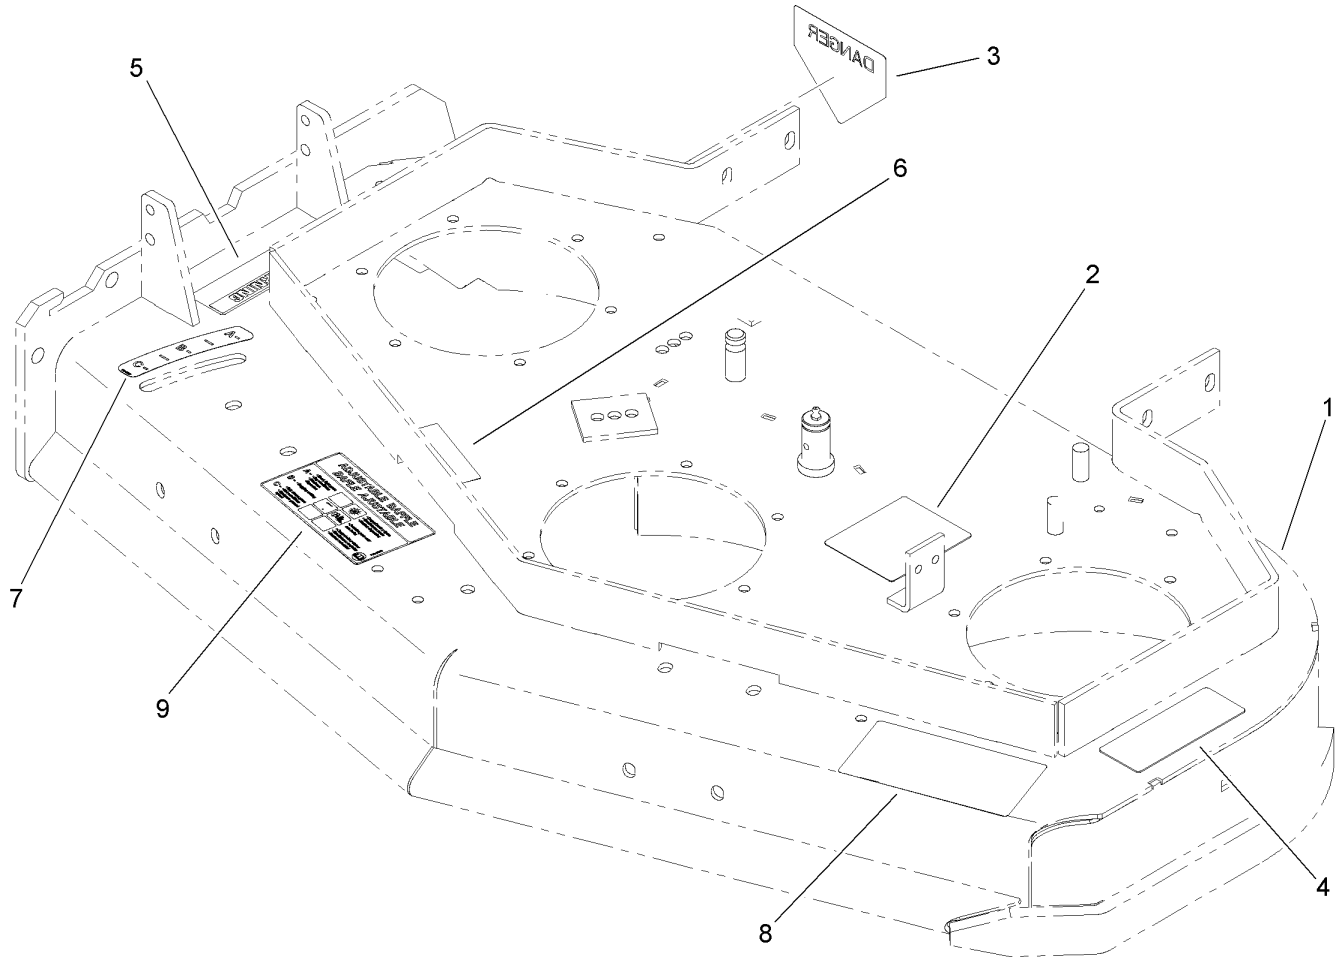



# Deck Assembly No. 110-4908

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❷1 | | 1 | 40 Inch Deck ASM |
| 2 | 99-3943 | 1 | Decal-Routing, Belt |
| 3 | 43-8480 | 1 | Decal-Danger |
| 4 | 98-5130 | 1 | Decal-Torque, Bolt |
| 5 | 104-8569 | 1 | Decal-Warning |
| 6 | 98-5954 | 2 | Decal-Cover, Missing |
| 7 | 110-2067 | 1 | Decal-Setting, Baffle |
| 8 | 66-1340 | 1 | Decal-Danger |
| 9 | 110-2068 | 1 | Decal-Adjustment, Baffle |

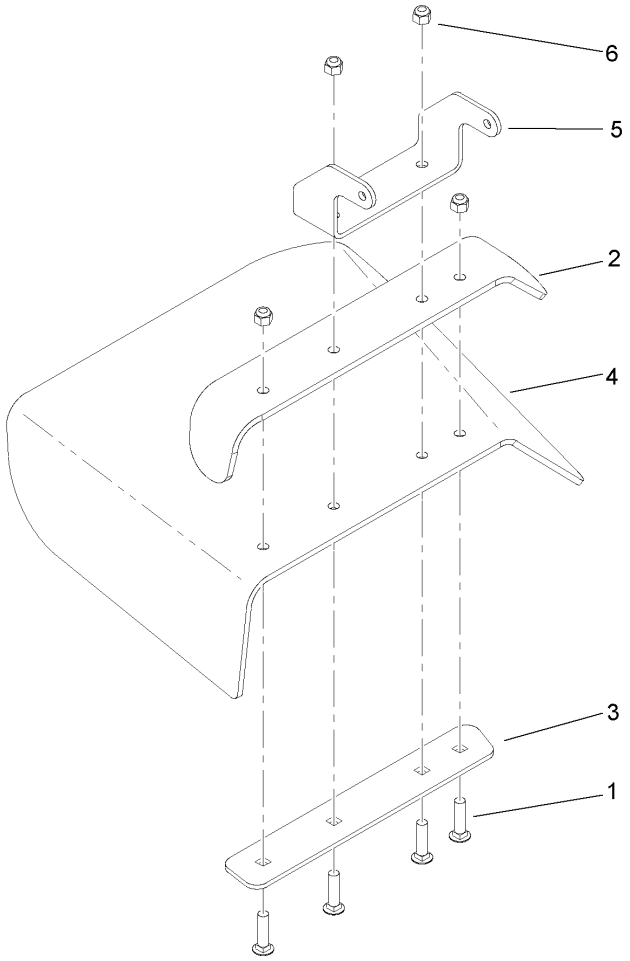


# Deflector Assembly No. 110-0790


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 3231-4 | 4 | Screw-CARR |
| 2 | 110-0792-01 | 1 | Deflector |
| 3 | 110-0793-03 | 1 | Strap-Discharge |
| 4 | 110-0791 | 1 | Deflector-Rubber |
| 5 | 107-4164-01 | 1 | Bracket-Mounting, Deflector |
| 6 | 3296-39 | 4 | Nut-Lock, NI |

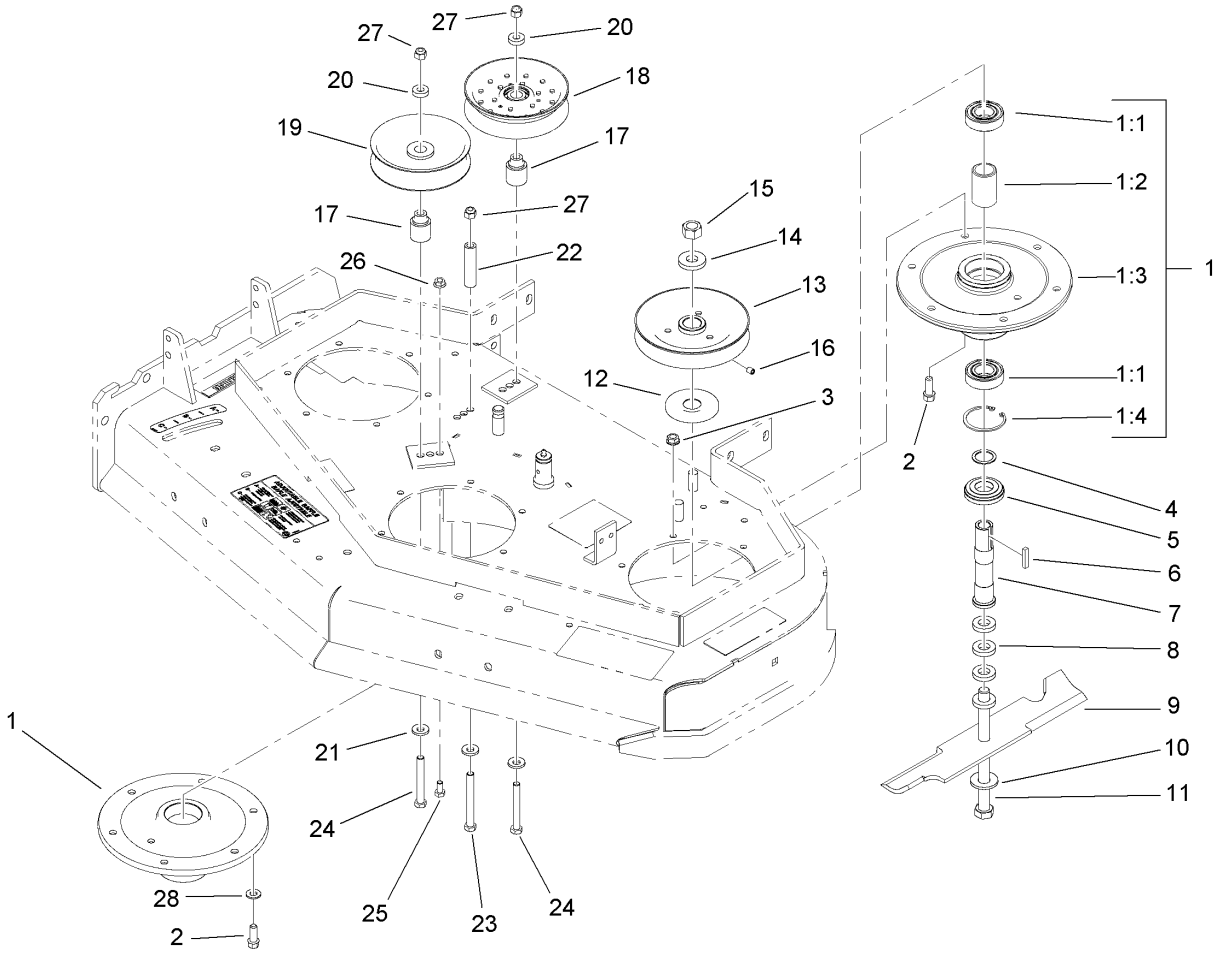


# Sheave, Spindle and Blade Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 108-6697 | 3 | Spindle Housing ASM |
| 1:1 | 110-2118 | 2 | Bearing |
| 1:2 | 110-2116 | 1 | Spacer-Bearing |
| 1:3 | 108-6694 | 1 | Housing-Spindle |
| 1:4 | 32120-8 | 1 | Ring-Snap |
| 2 | 92-1624 | 18 | Screw |
| 3 | 3290-357 | 18 | Nut-HHF, Whiz |
| 4 | 110-4888 | 3 | Washer-Spacer |
| 5 | 103-2535 | 3 | Spacer-Guard, Bottom |
| 6 | 1-807267 | 3 | Key |
| 7 | 1-323529 | 3 | Tube-Spindle, Short |
| 8 | 1-323539 | 12 | Spacer |
| 9 | 108-4081-03 | 3 | Blade-Rotary, 14 Inch (High Sail) |
| 10 | 1-513208 | 3 | Washer-Spring |
| 11 | 1-800861 | 3 | Screw-Cap, HH |
| 12 | 103-1330 | 3 | Guard-Bearing, Top |
| 13 | 1-403183 | 3 | Sheave |
| 14 | 1-323339 | 3 | Washer-Retainer, Sheave |
| 15 | 3219-6 | 3 | Nut-Hex |
| 16 | 1-803310 | 3 | Screw-Set |
| 17 | 1-403184 | 2 | Bushing-Idler |
| 18 | 1-403186 | 1 | Idler-Pulley, Flat |
| 19 | 1-613098 | 1 | Pulley-Idler |
| 20 | 5-0652 | 2 | Spacer |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 21 | 98-5975 | 3 | Washer-Belleville |
| 22 | 1-403188 | 1 | Spacer |
| 23 | 323-15 | 1 | Screw-HH |
| 24 | 323-14 | 2 | Screw-HH |
| 25 | 322-2 | 1 | Screw-HH |
| 26 | 32128-20 | 1 | Nut-HF |
| 27 | 3296-39 | 3 | Nut-Lock, NI |
| 28 | 3256-24 | 1 | Washer-Flat |

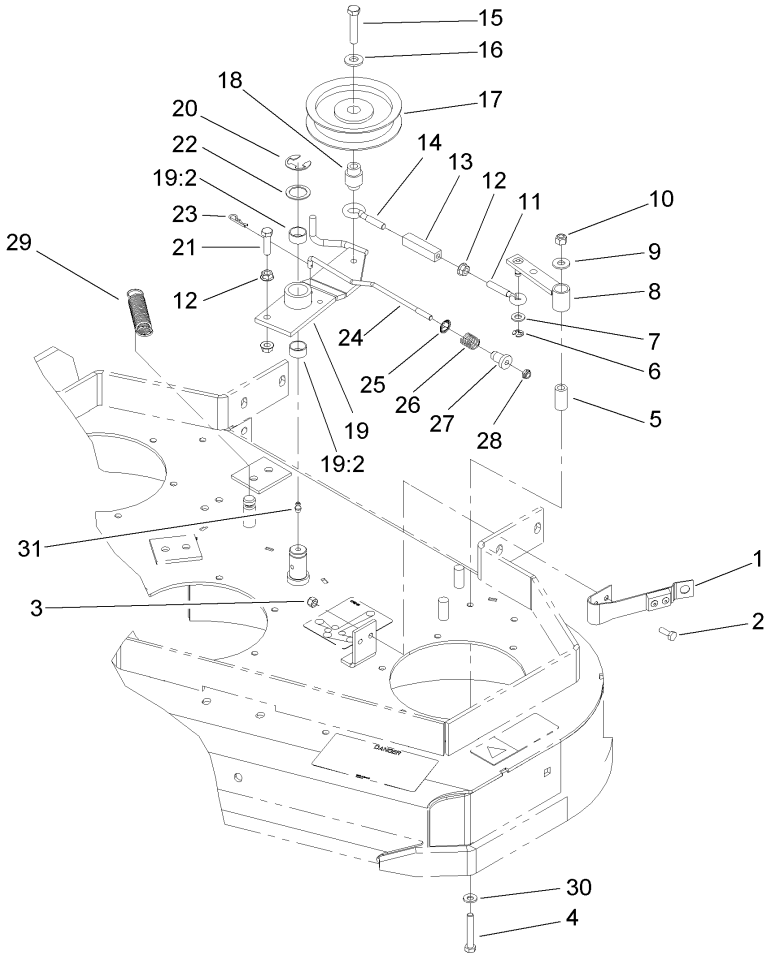


# Idler Assembly


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 1-324372 | 1 | Pad And Spring ASM |
| 2 | 321-4 | 2 | Screw-HH |
| 3 | 3296-42 | 2 | Nut-Lock, NI |
| 4 | 322-10 | 1 | Screw-HH |
| 5 | 1-403179 | 1 | Tube-Pivot |
| 6 | 32120-35 | 1 | Ring-Retaining, EXT |
| 7 | 3256-23 | 1 | Washer-Flat |
| 8 | 1-322235 | 1 | Arm-Assist |
| 9 | 3256-3 | 1 | Washer-Flat |
| 10 | 3296-29 | 1 | Nut-Lock, NI |
| 11 | 1-303238 | 1 | Eyebolt-Thread, RH |
| 12 | 32128-20 | 3 | Nut-HF |
| 13 | 1-303236 | 1 | Body-Turnbuckle |
| 14 | 1-303348 | 1 | Eyebolt-Thread, LH |
| 15 | 702809 | 1 | Screw-Cap |
| 16 | 98-5975 | 1 | Washer-Belleville |
| 17 | 1-603843 | 1 | Pulley-Idler |
| 18 | 1-303434 | 1 | Bushing-Engagement |
| 19 | 103-3600 | 1 | Idler Arm ASM |
| 19:2 | 1-323729 | 2 | Sleeve-Bearing |
| 20 | 32151-103 | 1 | Ring-Snap |
| 21 | 322-6 | 1 | Screw-HH |
| 22 | 1-303352 | 1 | Washer-Spindle |
| 23 | 1-806003 | 3 | Pin-Hair |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 24 | 110-2051 | 1 | Rod-Brake |
| 25 | 1-323748 | 1 | Ring-Push On |
| 26 | 1-323747 | 1 | Spring-Compression |
| 27 | 1-323746 | 1 | Spacer-Flanged |
| 28 | 3296-56 | 1 | Nut-Lock, NI |
| 29 | 1-323071 | 1 | Spring-Extension |
| 30 | 1-303334 | 1 | Washer-Spring |
| 31 | 302-19 | 2 | Fitting-Grease |

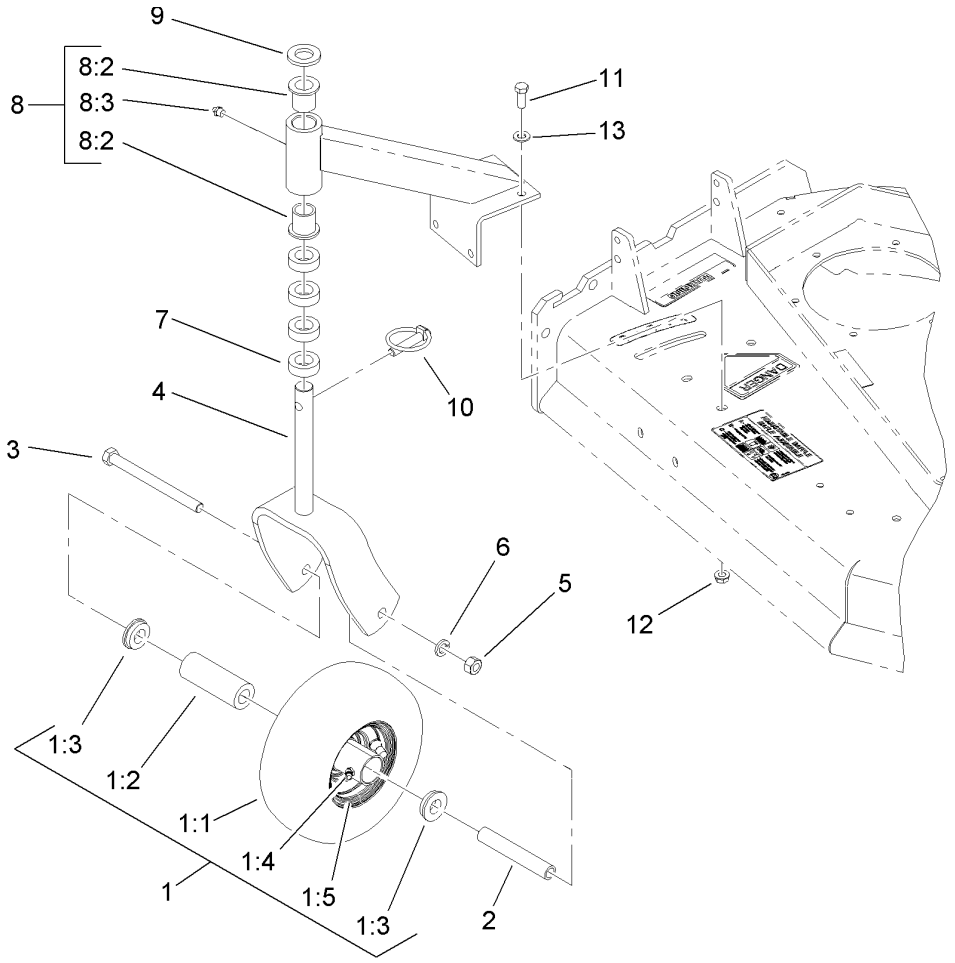



# Caster Assembly

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| 1 | 110-5023 | 2 | Wheel And Tire ASM |
| ❷1:1 | | 1 | Tire |
| 1:2 | 1-513809 | 1 | Bearing |
| 1:3 | 1-513810 | 2 | Bushing |
| 1:4 | 302-61 | 1 | Zerk |
| ❷1:5 | | 1 | Wheel |
| 2 | 1-513547 | 2 | Spacer |
| 3 | 325-20 | 2 | Screw-HH |
| 4 | 1-322145-01 | 2 | Fork |
| 5 | 3217-9 | 2 | Nut-HH |
| 6 | 3253-7 | 2 | Washer-Lock |
| 7 | 1-303314 | 8 | Spacer-Caster |
| 8 | 110-2130 | 2 | Support ASM |
| 8:2 | 1-303514 | 2 | Bearing-Flanged |
| 8:3 | 302-52 | 1 | Fitting-Grease |
| 9 | 1-513338 | 2 | Washer-Flat |
| 10 | 1-809020 | 2 | Pin |
| 11 | 323-6 | 8 | Screw-HH |
| 12 | 3290-357 | 8 | Nut-HHF, Whiz |
| 13 | 3256-24 | 8 | Washer-Flat |

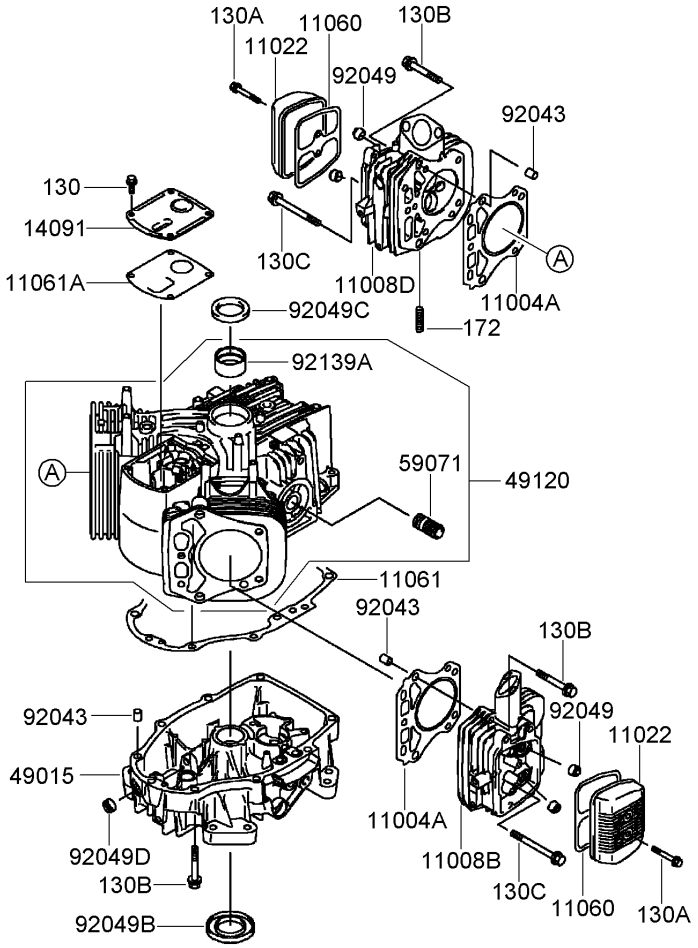



# Cylinder and Crankcase Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸11004A | 11004-7018 | 2 | Gasket-Head |
| ❸11008B | 11008-7021 | 1 | Head-Cylinder, No. 2 |
| ❸11008D | 11008-7022 | 1 | Head-Cylinder, No. 1 |
| ❸11022 | 11022-7003 | 2 | Case-Rocker |
| ❸11060 | 11060-7001 | 2 | Gasket-Case, Rocker |
| ❸11061 | 11061-7007 | 1 | Gasket-Cover, Crankcase |
| ❸11061A | 11061-7008 | 1 | Gasket-Breather |
| ❸14091 | 14091-7007 | 1 | Cover |
| ❸49015 | 49015-7032 | 1 | Cover-Crankcase |
| ❸49120 | 49120-7015 | 1 | Crankcase |
| ❸59071 | 59071-2079 | 1 | Joint |
| ❸92043 | 92043-7001 | 6 | Pin |
| ❸92049 | 92049-7001 | 4 | Seal-Oil, R V C2 (6X11X10.2) |
| ❸92049B | 92049-7015 | 1 | Seal-Oil, S D (35X62X8 L HSH) |
| ❸92049C | 92049-7016 | 1 | Seal-Oil, S D (35X48X8 R HSH) |
| ❸92049D | 92049-7019 | 1 | Seal-Oil, S O (8X14X5 HSH) |
| ❸92139A | 92139-7008 | 1 | Bushing |
| ❸130 | 130B0612 | 4 | Bolt-Flanged (6X12) |
| ❸130A | 130B0640 | 4 | Bolt-Flanged (6X40) |
| ❸130B | 130T0850 | 17 | Bolt-Flanged (8X50) |
| ❸130C | 130T0875 | 2 | Bolt-Flanged (8X75) |
| ❸172 | 172G0818 | 4 | Bolt-Stud (8X18) |

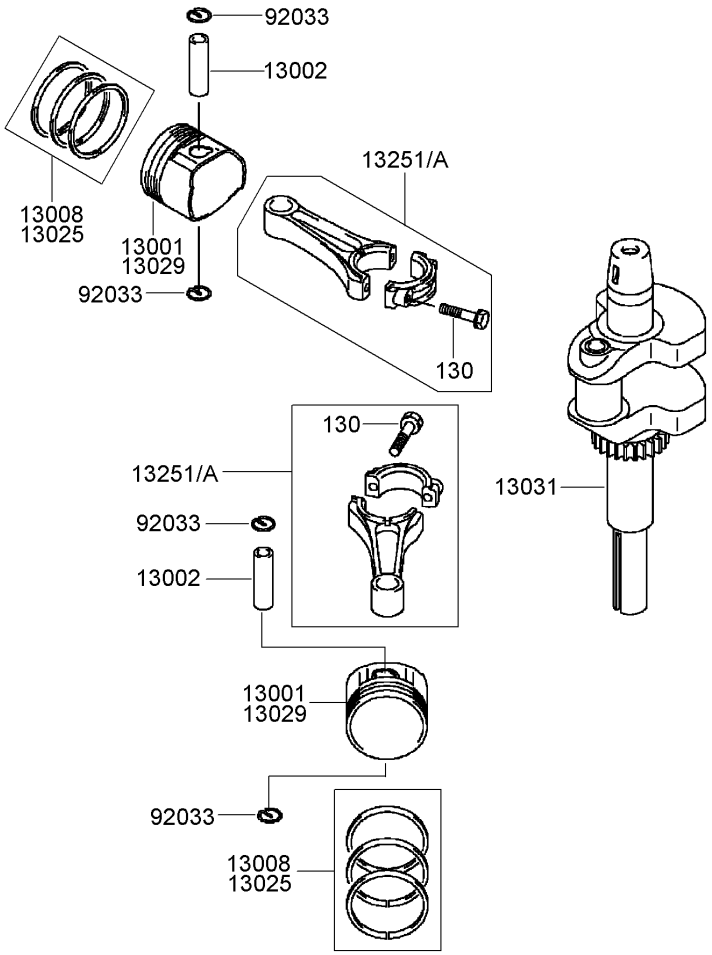



# Piston and Crankshaft Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸13001 | 13001-7009 | 2 | Piston-Engine |
| ❸13002 | 13002-7001 | 2 | Pin-Piston |
| ❸13008 | 13008-7001 | 2 | Ring Set-Piston |
| ❸13025 | 13025-7003 | 1 | Ring Set-Piston (L 0.50) |
| ❸13029 | 13029-7005 | 1 | Piston-Engine (L 0.50) |
| ❸13031 | 13031-7033 | 1 | Crankshaft |
| ❸13251 | 13251-7007 | 2 | Connecting Rod ASM |
| ❸13251A | 13251-7008 | 2 | Connecting Rod ASM (0.50) |
| ❸92033 | 92033-7005 | 4 | Ring-Snap |
| ❸130 | 130G0630 | 4 | Bolt-Flanged (6X30) |

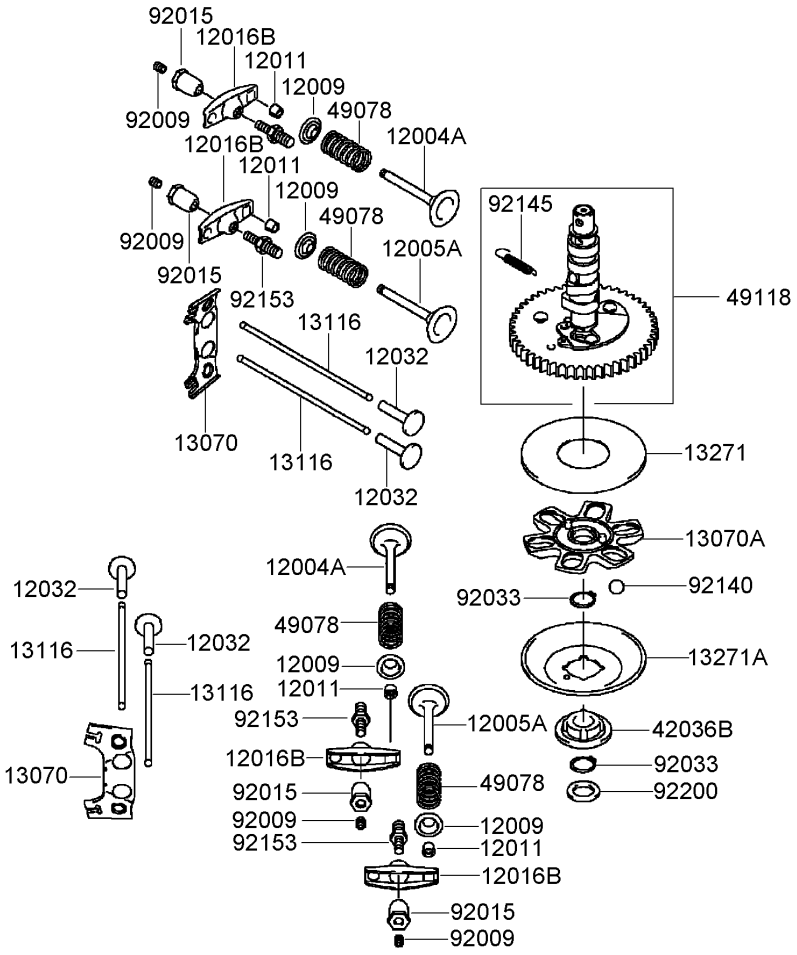



# Valve and Camshaft Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸12004A | 12004-7005 | 2 | Valve-Intake |
| ❸12005A | 12005-7006 | 2 | Valve-Exhaust |
| ❸12009 | 12009-7001 | 4 | Retainer-Spring, Valve |
| ❸12011 | 12011-2056 | 8 | Collet |
| ❸12016B | 12016-7008 | 4 | Arm-Rocker |
| ❸12032 | 12032-7001 | 4 | Tappet |
| ❸13070 | 13070-7001 | 2 | Guide |
| ❸13070A | 13070-7004 | 1 | Guide |
| ❸13116 | 13116-2057 | 4 | Rod-Push |
| ❸13271 | 13271-7007 | 1 | Plate |
| ❸13271A | 13271-7021 | 1 | Plate-Governor |
| ❸42036B | 42036-7010 | 1 | Sleeve |
| ❸49078 | 49078-7001 | 4 | Spring-Valve, Engine |
| ❸49118 | 49118-7009 | 1 | Camshaft |
| ❸92009 | 92009-2341 | 4 | Screw |
| ❸92015 | 92015-2253 | 4 | Nut |
| ❸92033 | 92033-7001 | 2 | Ring-Snap |
| ❸92140 | 92140-7002 | 6 | Ball |
| ❸92145 | 92145-7001 | 1 | Spring |
| ❸92153 | 92153-7019 | 4 | Bolt |
| ❸92200 | 92200-7001 | 1 | Washer |

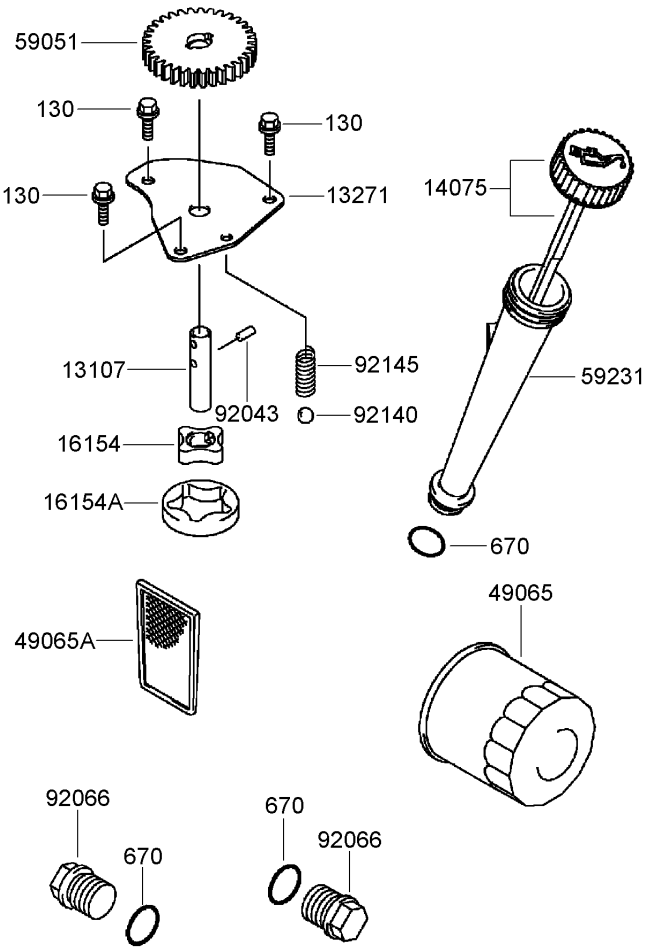



# Lubrication Equipment Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸13107 | 13107-7009 | 1 | Shaft |
| ❸13271 | 13271-7017 | 1 | Plate |
| ❸14075 | 14075-7009 | 1 | Cap ASM |
| ❸16154 | 16154-2053 | 1 | Rotor-Pump (In) |
| ❸16154A | 16154-2054 | 1 | Rotor-Pump (Out) |
| ❸49065 | 49065-2078 | 1 | Filter-Oil |
| ❸49065A | 49065-7004 | 1 | Filter-Oil |
| ❸59051 | 59051-7011 | 1 | Gear-Spur |
| ❸59231 | 59231-7003 | 1 | Filler |
| ❸92043 | 92043-7003 | 2 | Pin |
| ❸92066 | 92066-7003 | 2 | Plug |
| ❸92140 | 92140-7003 | 1 | Ball |
| ❸92145 | 92145-7002 | 1 | Spring |
| ❸130 | 130B0612 | 3 | Bolt-Flanged (6X12) |
| ❸670 | 670D2016 | 3 | O-Ring (16Mm) |

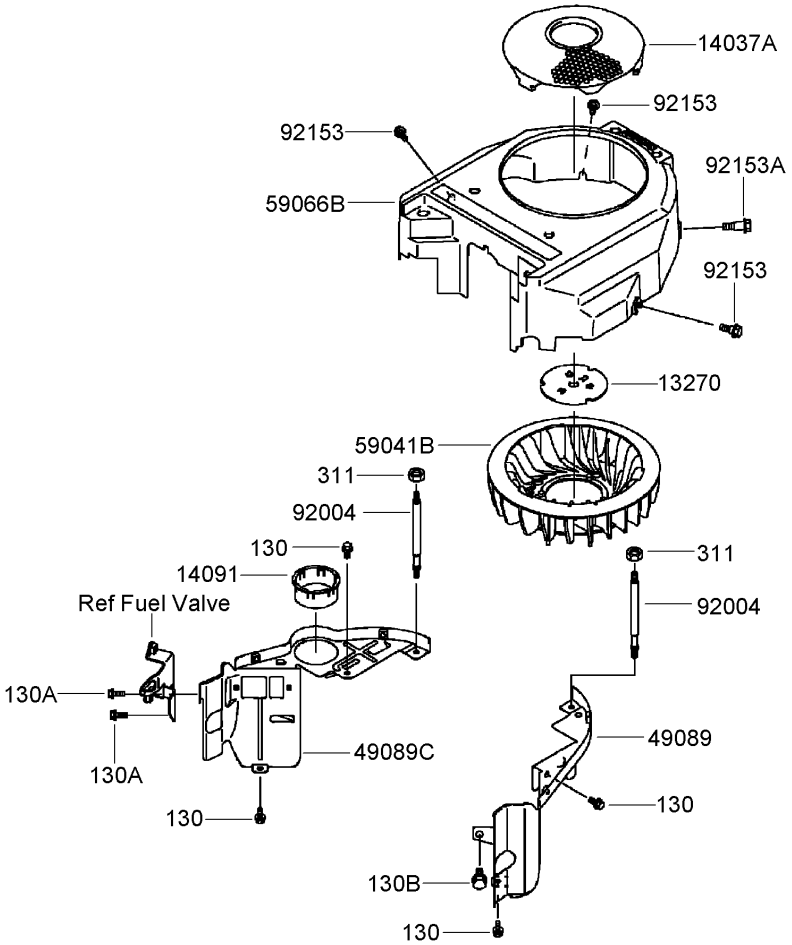



# Cooling Equipment Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸13270 | 13270-7007 | 1 | Plate |
| ❸14037A | 14037-7025-9H | 1 | Screen |
| ❸14091 | 14091-7009 | 1 | Cover |
| ❸49089 | 49089-7044 | 1 | Shroud-Engine |
| ❸49089C | 49089-7061 | 1 | Shroud-Engine |
| ❸59041B | 59041-7012 | 1 | Fan |
| ❸59066B | 59066-7036 | 1 | Housing-Fan |
| ❸92004 | 92004-7007 | 2 | Stud |
| ❸92153 | 92153-7007 | 3 | Bolt |
| ❸92153A | 92153-7008 | 1 | Bolt |
| ❸130 | 130B0612 | 4 | Bolt-Flanged (6X12) |
| ❸130A | 130B0616 | 2 | Bolt-Flanged (6X16) |
| ❸130B | 130B0816 | 1 | Bolt-Flanged (8X16) |
| ❸311 | 311F0600 | 2 | Nut-Hex (6Mm) |

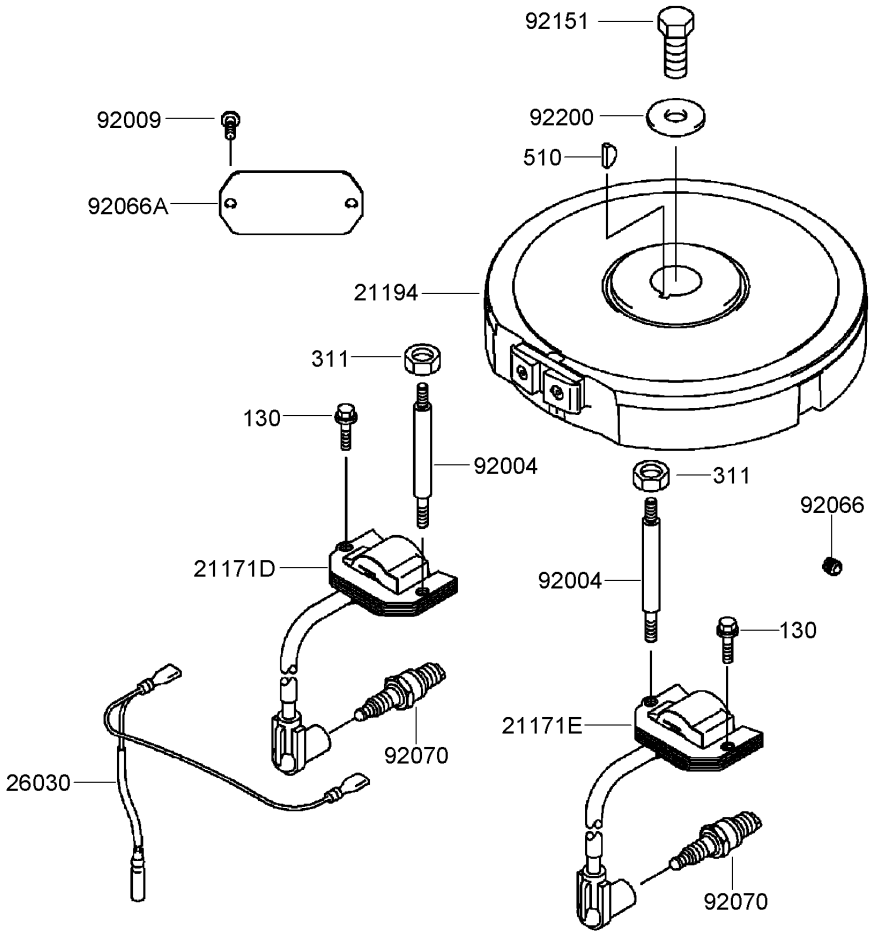



# Electric Equipment Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸21171D | 21171-7026 | 1 | Coil-Assy-Ignition |
| ❸21171E | 21171-7027 | 1 | Coil-Assy-Ignition |
| ❸21194 | 21194-7013 | 1 | Flywheel |
| ❸26030 | 26030-7001 | 1 | Harness |
| ❸92004 | 92004-7008 | 2 | Stud |
| ❸92009 | 92009-2308 | 2 | Screw |
| ❸92066 | 92066-7002 | 1 | Plug |
| ❸92066A | 92066-7005 | 1 | Plug |
| ❸92070 | 92070-7003 | 2 | Plug-Spark (R C J 8 Y, Solid) |
| ❸92151 | 92151-2097 | 1 | Bolt (12X30) |
| ❸92200 | 92200-7002 | 1 | Washer |
| ❸130 | 130B0620 | 2 | Bolt-Flanged (6X20) |
| ❸311 | 311F0600 | 2 | Nut-Hex (6Mm) |
| ❸510 | 510A5100 | 1 | Key-Woodruff |

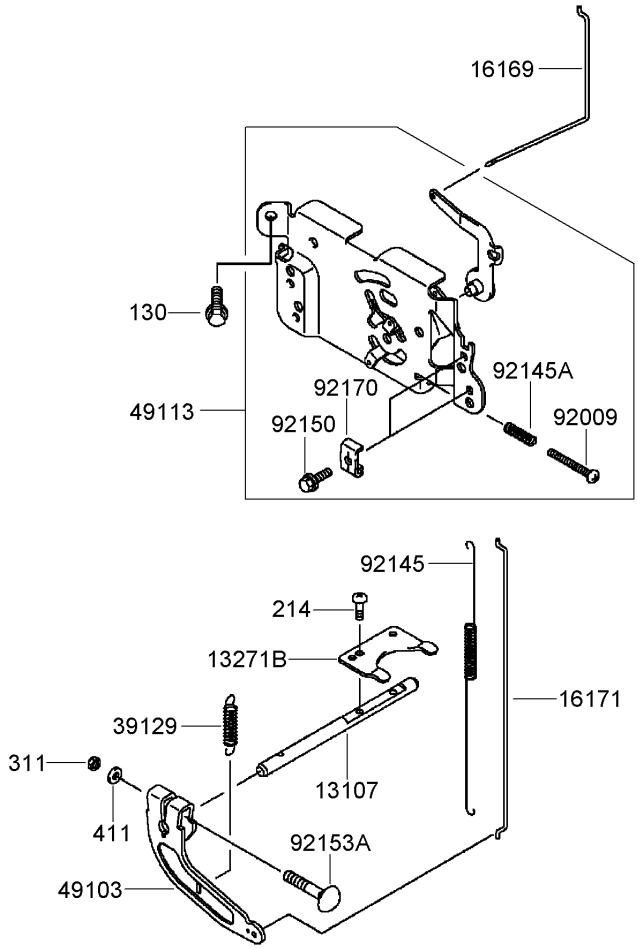


# Control Equipment Assembly
# Kawasaki FH430V-CS25


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸13107 | 13107-7010 | 1 | Shaft |
| ❸13271B | 13271-7032 | 1 | Plate |
| ❸16169 | 16169-7012 | 1 | Link-Choke |
| ❸16171 | 16171-7007 | 1 | Link |
| ❸39129 | 39129-7003 | 1 | Spring-Governor |
| ❸49103 | 49103-7004 | 1 | Arm-Governor |
| ❸49113 | 49113-7024 | 1 | Panel-Control |
| ❸92009 | 92009-7007 | 1 | Screw (4X35) |
| ❸92145 | 92145-7003 | 1 | Spring |
| ❸92145A | 92145-7005 | 1 | Spring |
| ❸92150 | 92150-2182 | 2 | Bolt (5X18) |
| ❸92153A | 92153-7033 | 1 | Bolt (6X35) |
| ❸92170 | 92170-7001 | 2 | Clamp |
| ❸130 | 130B0612 | 2 | Bolt-Flanged (6X12) |
| ❸214 | 214B0408 | 2 | Screw-Pan (4X8) |
| ❸311 | 311B0600 | 1 | Nut-Hex (6Mm) |
| ❸411 | 411B0600 | 1 | Washer-Plain (6Mm) |

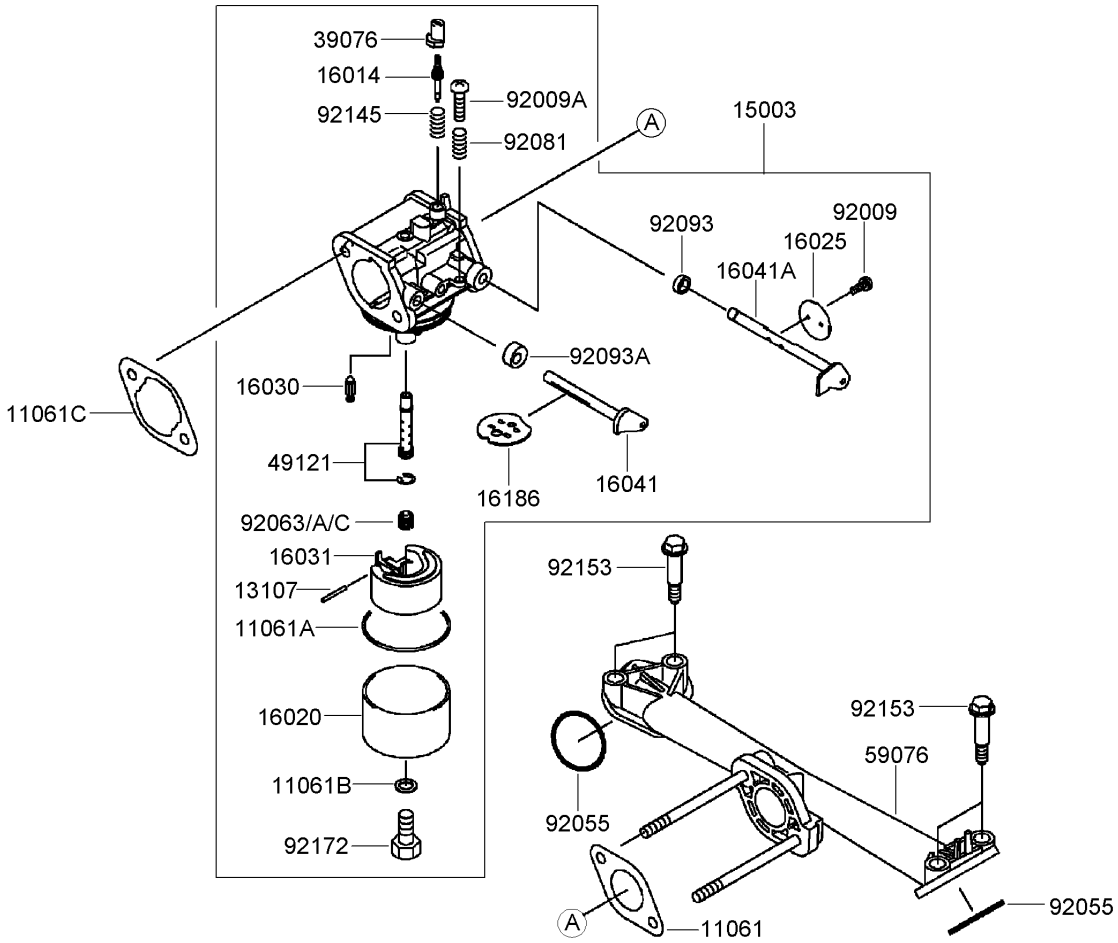


# Carburetor Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸11061 | 11061-7004 | 1 | Gasket-Insulator |
| ❸11061A | 11061-7009 | 1 | Gasket-Chamber |
| ❸11061B | 11061-7010 | 1 | Gasket-Screw |
| ❸11061C | 11061-7018 | 1 | Gasket-Cleaner, Air |
| ❸13107 | 13107-7018 | 1 | Shaft |
| ❸15003 | 15003-7061 | 1 | Carburetor ASM |
| ❸16014 | 16014-7002 | 1 | Screw-Pilot |
| ❸16020 | 16020-7003 | 1 | Chamber-Float |
| ❸16025 | 16025-7006 | 1 | Valve-Throttle |
| ❸16030 | 16030-7003 | 1 | Valve-Float |
| ❸16031 | 16031-7002 | 1 | Float |
| ❸16041 | 16041-7016 | 1 | Shaft-Choke, Carburetor |
| ❸16041A | 16041-7018 | 1 | Shaft-Throttle, Carburetor |
| ❸16186 | 16186-7002 | 1 | Choke Valve ASM |
| ❸39076 | 39076-7001 | 1 | Limiter |
| ❸49121 | 49121-7001 | 1 | Nozzle-Main |
| ❸59076 | 59076-7005 | 1 | Manifold-Intake |
| ❸92009 | 92009-2083 | 2 | Screw |
| ❸92009A | 92009-2349 | 1 | Screw |
| ❸92055 | 92055-7007 | 2 | O-Ring (I D 31) |
| ❸92063 | 92063-7026 | 1 | Jet-Main, No. 88 |
| ❸92063A | 92063-7028 | 1 | Jet-Main, No. 85 |
| ❸92063C | 92063-7029 | 1 | Jet-Main, No. 82 |
| ❸92081 | 92081-2234 | 1 | Spring |


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸92093 | 92093-2100 | 1 | Seal |
| ❸92093A | 92093-7003 | 1 | Seal |
| ❸92145 | 92145-7015 | 1 | Spring |
| ❸92153 | 92153-7009 | 4 | Bolt |
| ❸92172 | 92172-7002 | 1 | Screw |

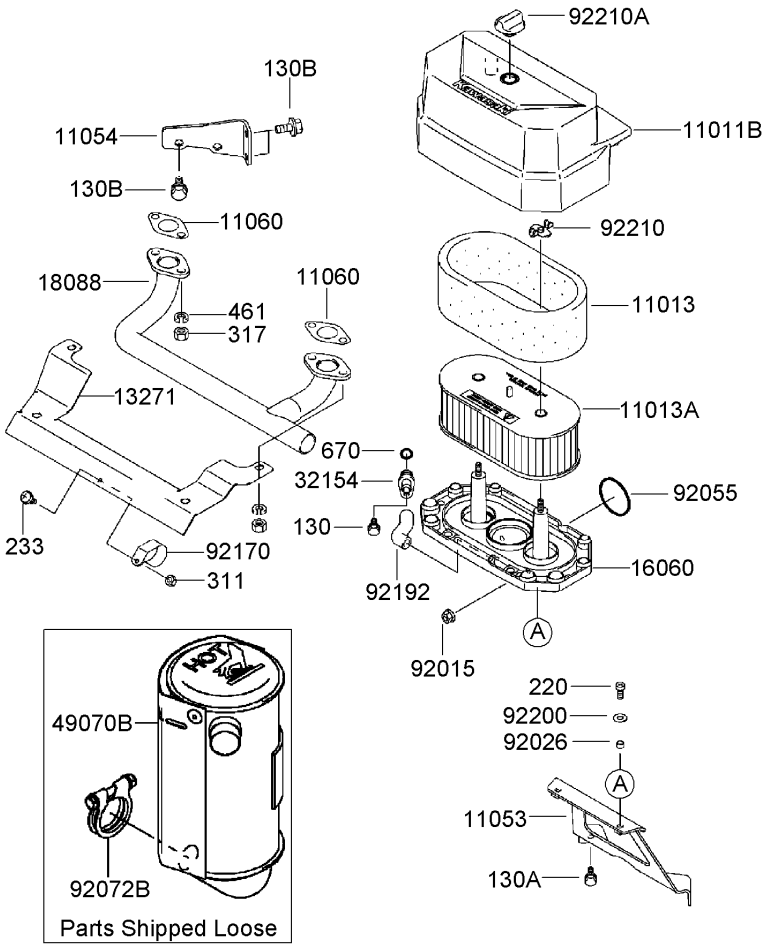


# Air Filter and Muffler Assembly
# Kawasaki FH430V-CS25


| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸11011B | 11011-7045 | 1 | Case-Filter, Air |
| ❸11013 | 11013-7025 | 1 | Element-Filter, Air |
| ❸11013A | 11013-7031 | 1 | Element-Filter, Air |
| ❸11053 | 11053-7022 | 1 | Bracket |
| ❸11054 | 11054-7002-9H | 1 | Bracket |
| ❸11060 | 11060-7021 | 2 | Gasket-Muffler |
| ❸13271 | 13271-7022 | 1 | Plate |
| ❸16060 | 16060-7016 | 1 | Pipe-Intake |
| ❸18088 | 18088-7001 | 1 | Pipe-Exhaust |
| ❸32154 | 32154-7006 | 1 | Pipe |
| ❸49070B | 49070-7021 | 1 | Muffler |
| ❸92015 | 92015-1193 | 2 | Nut |
| ❸92026 | 92026-7001 | 2 | Spacer (6.2X7.9X5) |
| ❸92055 | 92055-7015 | 1 | O-Ring |
| ❸92072B | 92072-7012 | 1 | Band |
| ❸92170 | 92170-7002 | 1 | Clamp |
| ❸92192 | 92192-7010 | 1 | Tube |
| ❸92200 | 92200-2070 | 2 | Washer |
| ❸92210 | 92210-7004 | 2 | Nut |
| ❸92210A | 92210-7019 | 1 | Nut |
| ❸130 | 130B0610 | 1 | Bolt-Flanged (6X10) |
| ❸130A | 130B0612 | 2 | Bolt-Flanged (6X12) |
| ❸130B | 130B0816 | 3 | Bolt-Flanged (8X16) |

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸220 | 220B0614 | 2 | Screw-Pan (Cross) (6X14) |
| ❸233 | 233B0416 | 1 | Screw (4X16) |
| ❸311 | 311B0400 | 1 | Nut-Hex (4Mm) |
| ❸317 | 317R0800 | 4 | Nut-Hex (8Mm) |
| ❸461 | 461F0800 | 4 | Washer-Spring (8Mm) |
| ❸670 | 670B2010 | 1 | O-Ring (10Mm) |

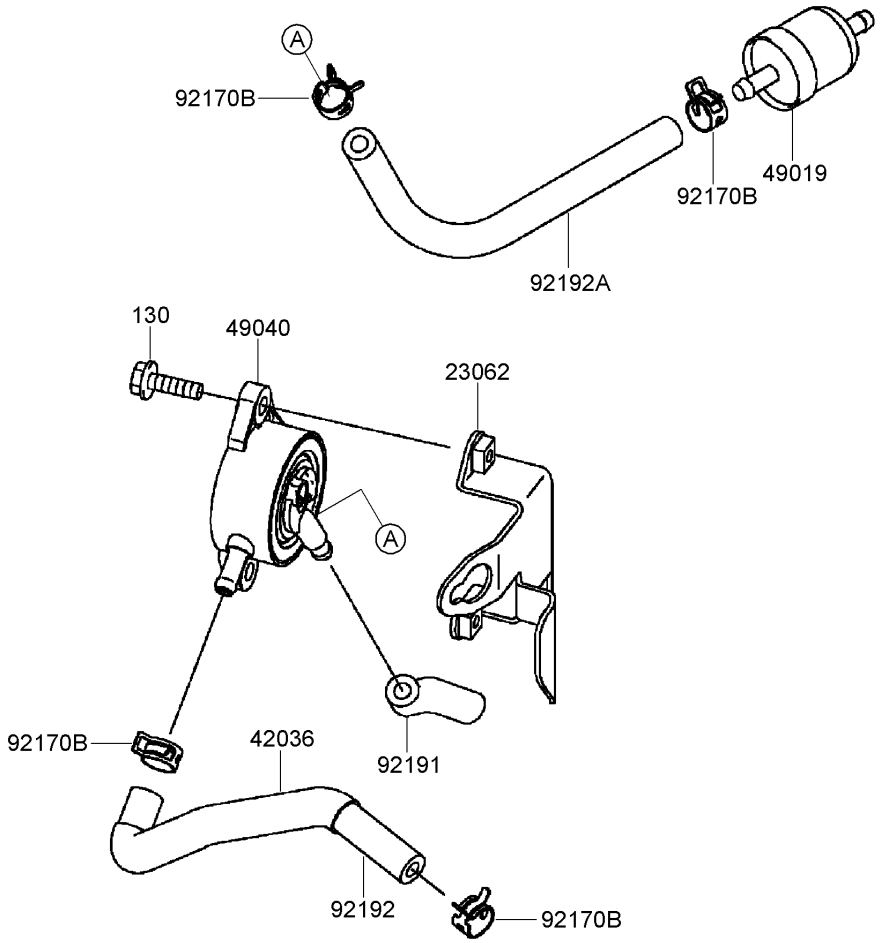


# Fuel Tank and Valve Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸23062 | 23062-7004-9H | 1 | Bracket |
| ❸42036 | 42036-7012 | 1 | Sleeve |
| ❸49019 | 49019-7001 | 1 | Filter-Fuel |
| ❸49040 | 49040-7001 | 1 | Pump-Fuel |
| ❸92170B | 92170-2088 | 4 | Clamp |
| ❸92191 | 92191-7002 | 1 | Tube |
| ❸92192 | 92192-7035 | 1 | Tube (6.35X12.7X170) |
| ❸92192A | 92192-7037 | 1 | Tube (6.35X12.7X160) |
| ❸130 | 130B0620 | 2 | Bolt-Flanged (6X20) |

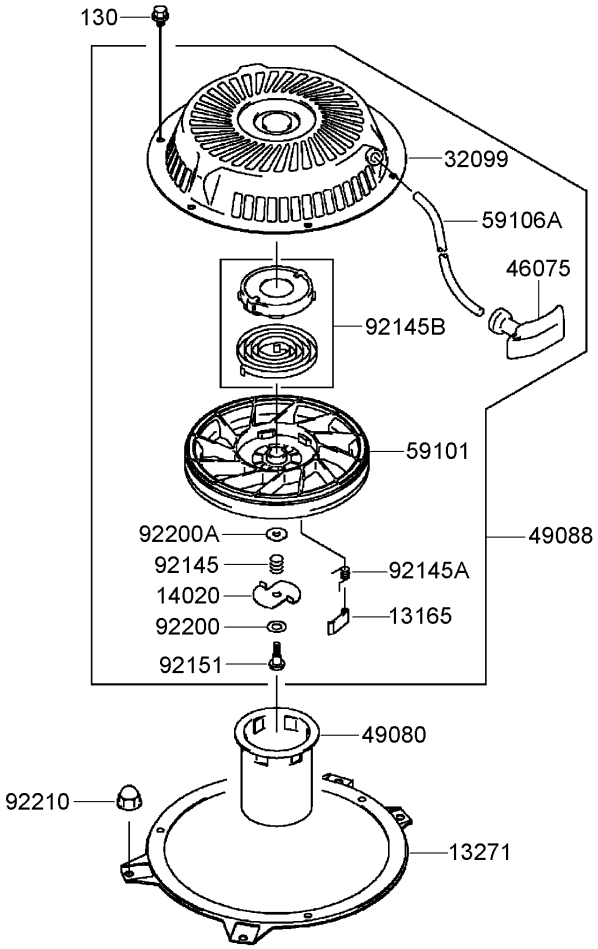


# Starter Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸13165 | 13165-7001 | 2 | Pawl-Starter, Recoil |
| ❸13271 | 13271-7003-9H | 1 | Plate |
| ❸14020 | 14020-7001 | 1 | Retainer |
| ❸32099 | 32099-7002 | 1 | Case-Starter, Recoil |
| ❸46075 | 46075-7001 | 1 | Grip-Starter, Recoil |
| ❸49080 | 49080-7001 | 1 | Pulley-Starting |
| ❸49088 | 49088-7013 | 1 | Starter-Recoil |
| ❸59101 | 59101-7001 | 1 | Reel-Starter, Recoil |
| ❸59106A | 59106-7005 | 1 | Rope |
| ❸92145 | 92145-7006 | 1 | Spring |
| ❸92145A | 92145-7007 | 2 | Spring |
| ❸92145B | 92145-7008 | 1 | Spring |
| ❸92151 | 92151-7008 | 1 | Bolt |
| ❸92200 | 92200-7004 | 1 | Washer |
| ❸92200A | 92200-7005 | 1 | Washer |
| ❸92210 | 92210-0003 | 4 | Nut |
| ❸130 | 130B0608 | 3 | Bolt-Flanged (6X8) |

56033




56070




56080




56080A




# Label Assembly
# Kawasaki FH430V-CS25

| Ref | Part No. | Qty. | Description |
|---|---|---|---|
| ❸56033 | 56033-7001 | 1 | Label-Manual |
| ❸56070 | 56070-7001 | 1 | Label-Warning |
| ❸56080 | 56080-2077 | 1 | Label-Brand |
| ❸56080A | 56080-7024 | 1 | Label-Brand |

# Attachments and Accessories

## For 30986 - Commercial Walk-Behind Mower, Fixed Deck Pistol Grip Hydro with 40in TURBO FORCE Cutting Unit

| Product Name | Model/Part |
|---|---|
| Blade-Rotary, 14 Inch (Recycling) | 108-4089-03 |
| Blade-Rotary, 14 Inch (Mid Flow) | 108-4110-03 |
| Blade-Rotary, 14 Inch (Low Flow) | 108-4111-03 |
| Blade-Rotary, 14 Inch (Atomic) | 108-4112-03 |
| 40 Inch Bagger Enhancement Kit | 110-2025 |
| 40 Inch Recycler Kit | 110-2070 |
| Weight Kit | 110-2085 |
| Plate Kit | 110-6902 |
| Soft Bag (3 Bushel) | 30104 |
| Sulky | 30109 |

# NOTES

# NOTES

# NOTES


TORO®