Form Number 3356-684 Rev B

ProLine Walk-Behind Mower

Fixed Deck T-Bar Gear with 32in Cutting Unit

Model No. 30692 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2007
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel Tank Assembly	3
Transmission Drive Assembly	4
Drive Wheel and Brake Assembly	6
Handle and Control Assembly	7
Deck and Shield Assembly	8
Deck Assembly No. 110-6901	9
Deflector Assembly No. 107-4140	10
Idler Arm and Caster Wheel Assembly	11
Spindle and Blade Assembly	13
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	14
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	15
Valve and Camshaft Assembly Kawasaki FH430V-CS25	16
Lubrication Equipment Assembly Kawasaki FH430V-CS25	17
Cooling Equipment Assembly Kawasaki FH430V-CS25	18
Electric Equipment Assembly Kawasaki FH430V-CS25	19
Control Equipment Assembly Kawasaki FH430V-CS25	20
Carburetor Assembly Kawasaki FH430V-CS25	21
Air Filter and Muffler Assembly Kawasaki FH430V-CS25	22
Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	23
Starter Assembly Kawasaki FH430V-CS25	24
Label Assembly Kawasaki FH430V-CS25	25
Attachments and Accessories List	26

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
BBC	blade brake clutch
CARR	carriage
DEG	degrees
EXT	external
FH	flat head
GA	gauge
HD	heavy-duty
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
LH	left hand
NI	nylon insert
NPTF	national pipe thread fine
PFH	phillips flat head
PPH	phillips pan head
PPHTF	phillips pan head thread forming
PRH	phillips round head
PTH	phillips truss head
PTO	power-take-off
RH	right hand
ROPS	roll-over protection system
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head


Footnotes

❶ Not serviced separately

❷ Optional Equipment

❸ Obtain parts from Peerless Transmissions (model 700-070A)


❹ Obtain from your local Kawasaki dealer

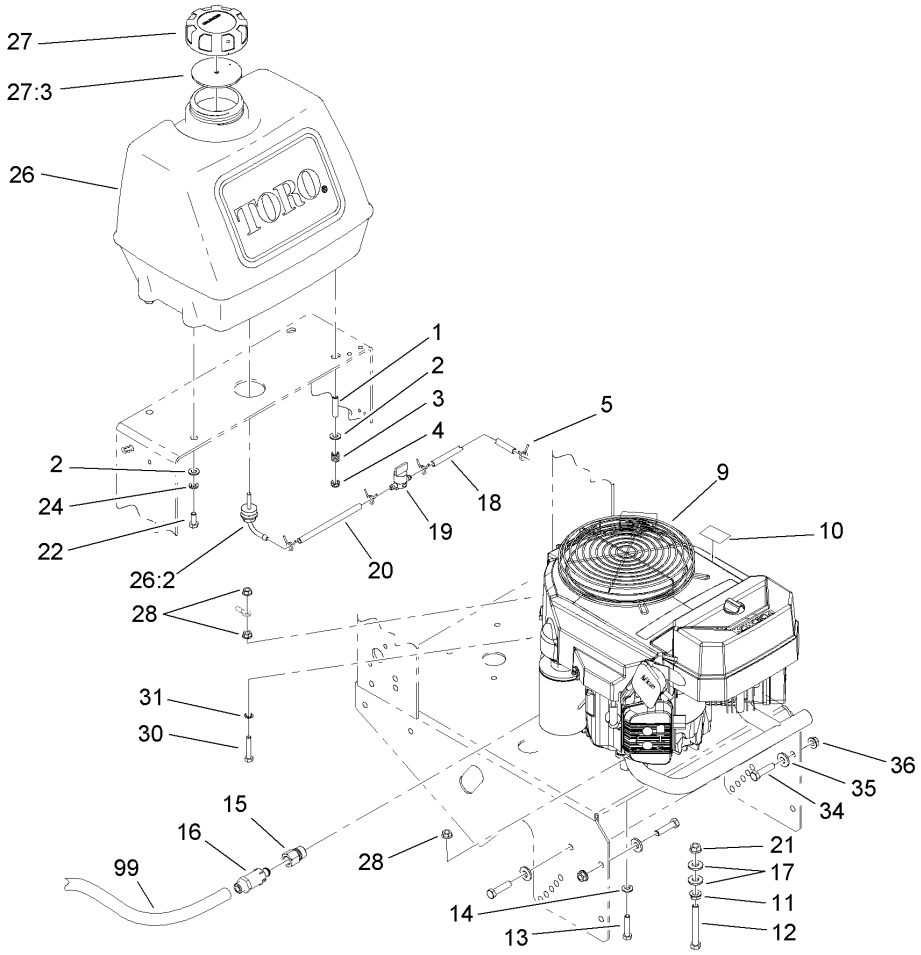

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❶❹9		1	Engine-Kawasaki, FH430V-Cs25
10	106-0699	1	Decal-Warning
11	3290-357	1	Nut-HHF, Whiz
12	323-14	1	Screw-HH
13	322-7	3	Screw-HH
14	1-303334	3	Washer-Spring
15	103-1966	1	Adapter
16	92-6877	1	Valve-Drain, Oil
17	98-5975	2	Washer-Belleville
18	109-0293	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	109-0306	1	Hose-Fuel
21	32128-21	1	Nut-HF
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas


Ref	Part No.	Qty.	Description
28	32128-20	5	Nut-HF
30	322-9	1	Screw-HH
31	3254-2	1	Washer-Lock, Internal
34	323-8	8	Screw-HH
35	98-5975	8	Washer-Belleville
36	3290-357	8	Nut-HHF, Whiz
99	103-1964	1	Hose-Drain, Oil

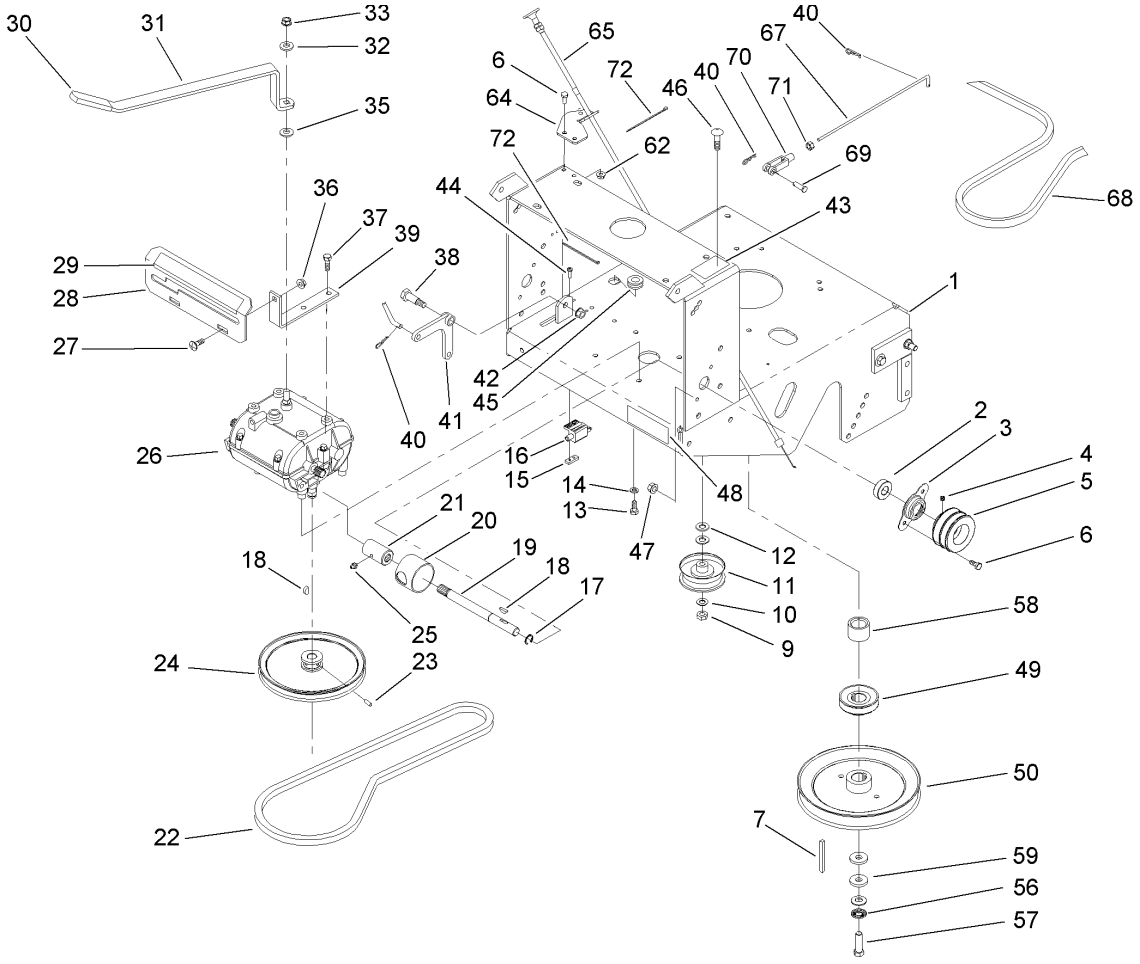

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513152	1	Switch-Closed, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
❸26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave

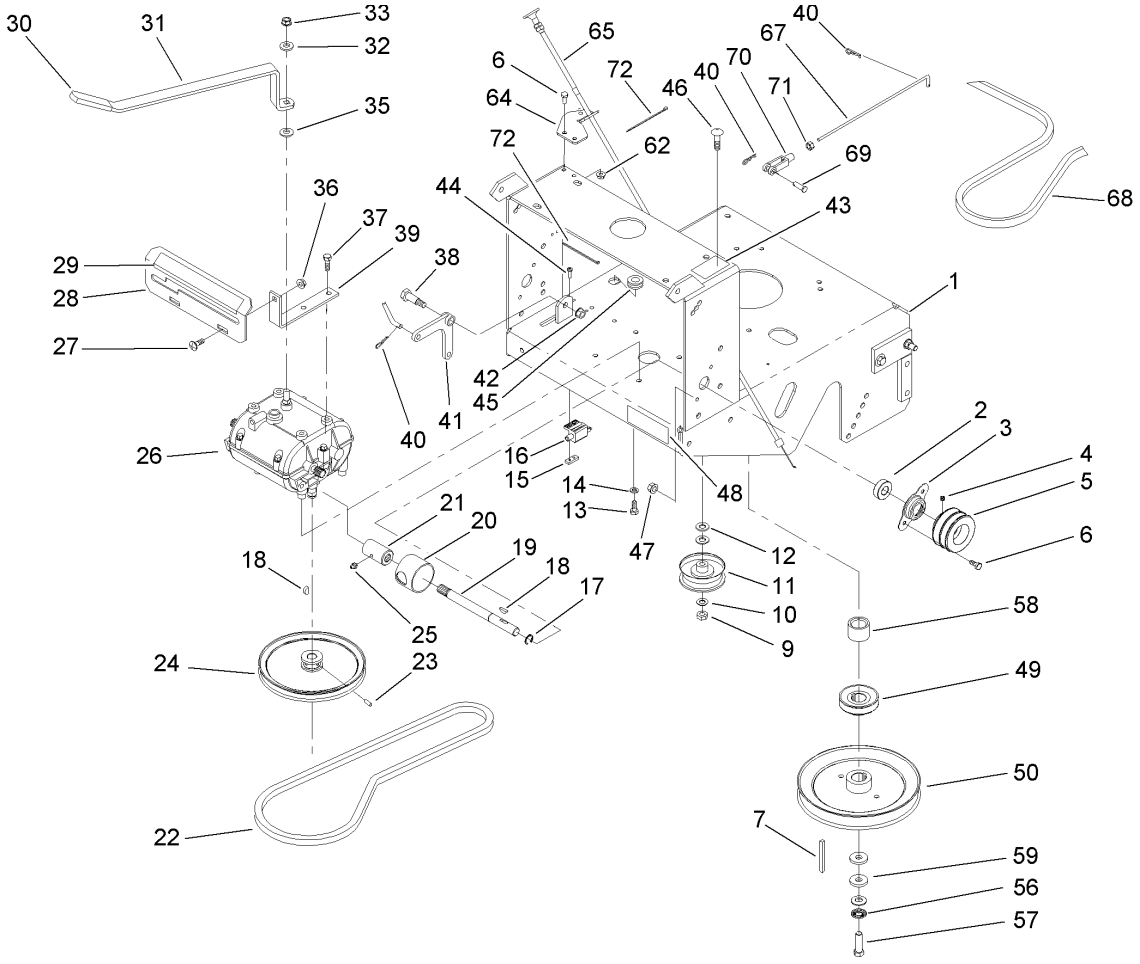

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
67	1-323303	1	Linkage-Arm
68	1-323745	1	Belt-Blade, Drive
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
72	1-303335	2	Tie-Plastic

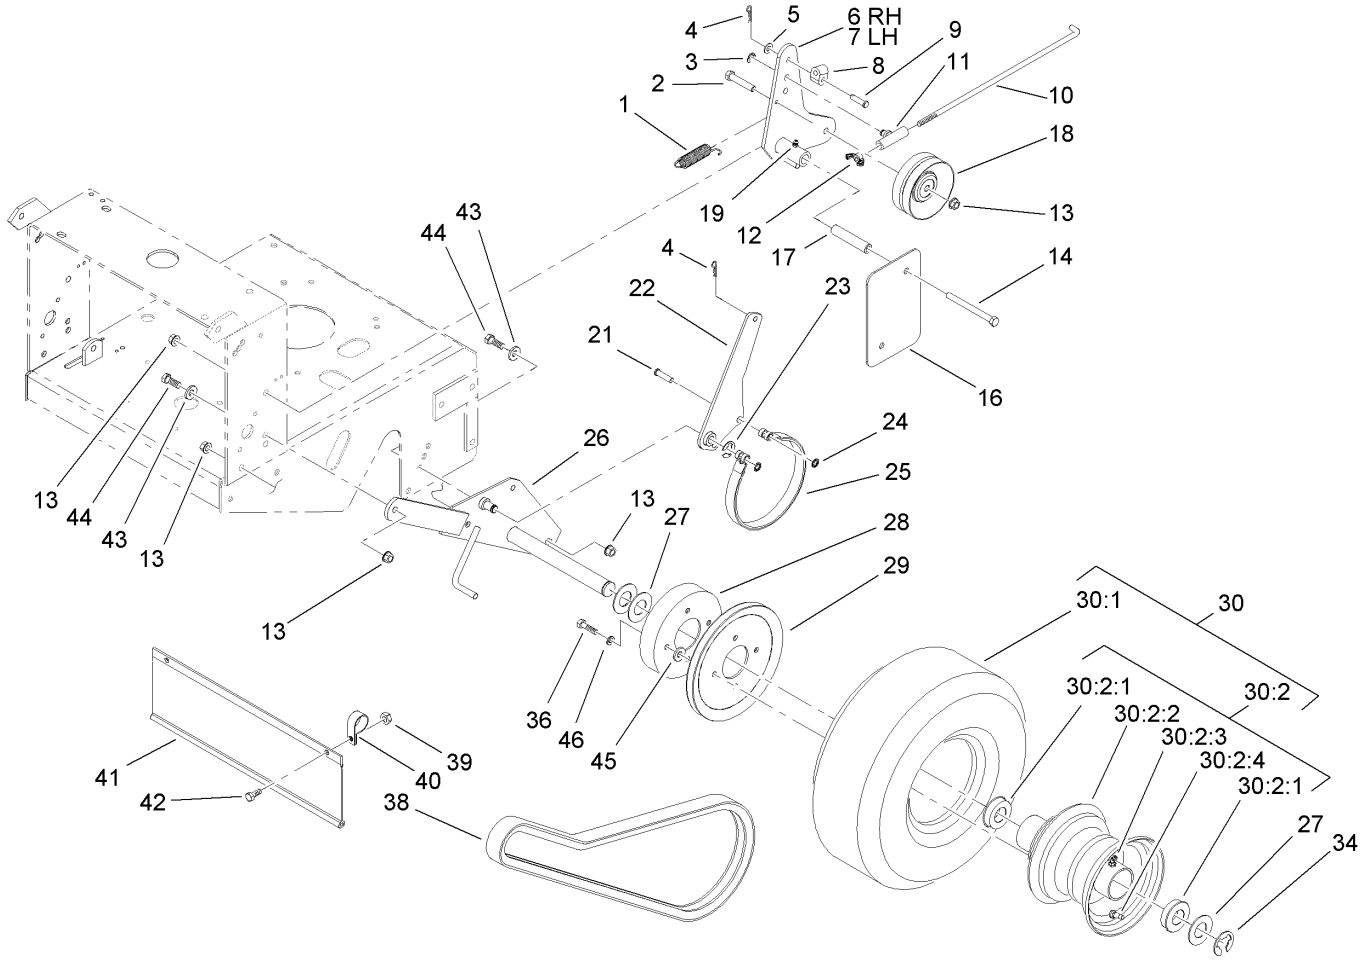

Drive Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Hair
5	3256-23	2	Washer-Flat
6	110-4925-03	1	RH Idler Arm ASM
7	110-4926-03	1	LH Idler Arm ASM
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
19	302-19	2	Fitting-Grease
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322232-03	1	Axle ASM


Ref	Part No.	Qty.	Description
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer, 18 GA
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive
30	1-323346	2	Wheel And Tire ASM
30:1	1-323361	1	Tire
30:2	1-323360	1	Wheel And Hub ASM
30:2:1	1-323329	2	Bearing-Flanged
❶30:2:2		1	Rim ASM
❶30:2:3		1	Fitting-Grease
❶30:2:4		1	Valve Stem And Cap
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock

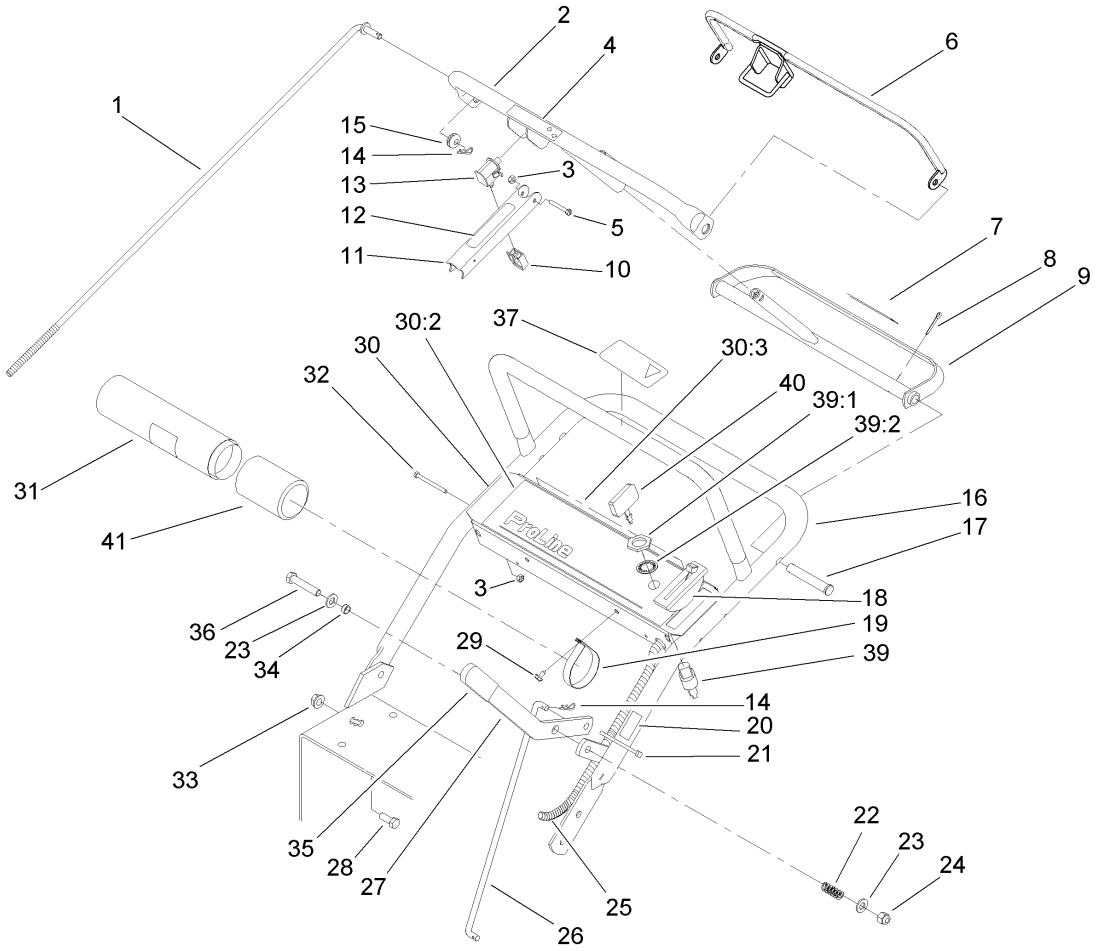

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	98-3282	2	Rod-Control
2	95-5522-03	1	Control Bar ASM
3	3296-2	5	Nut-Lock
4	82-2290	1	Decal
5	32105-1	1	Screw-SHH
6	82-7680-03	1	Bail ASM
7	82-2280	1	Decal
8	3272-11	2	Pin-Cotter
9	99-8501-03	1	Control-Pivot
10	218-595	1	Connector-Body
11	98-3261-03	1	Lever-Brake, Parking
12	98-3266	1	Decal
13	740275	1	Switch-Seat
14	1-806003	3	Pin-Hair
15	237-141	2	Grommet-Rubber
16	98-3267-03	1	Upper Handle ASM
17	283-55	2	Pin-Clevis
18	100-6450	1	Control-Throttle
19	2412-120	2	R-Clamp
20	95-5537	1	Decal-Engage, Deck
21	1-303335	1	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-24	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI

Ref	Part No.	Qty.	Description
25	106-0678	1	Harness-Wire
26	98-3279	1	Linkage-Drive, Blade
27	98-3287-03	1	Lever-Engagement, Blade
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	110-6905	1	Control Panel ASM
30:2	110-6916	1	Decal-Panel, Control
30:3	105-0884	1	Decal-Danger
31	104-7050	1	Housing-Manual
32	32105-14	4	Screw-SHH
33	32128-21	4	Nut-HF
34	99-8509	1	Spacer
35	1-303020	1	Grip-Lever
36	323-10	1	Screw-HH
37	98-4387	1	Decal-Protection, Ear
39	29-5560	1	Switch-On / Off
39:1	218-461	1	Nut-HH
39:2	3254-5	1	Washer-Tooth
40	63-8360	1	Key-Ignition
41	104-7048	1	Cap-Housing

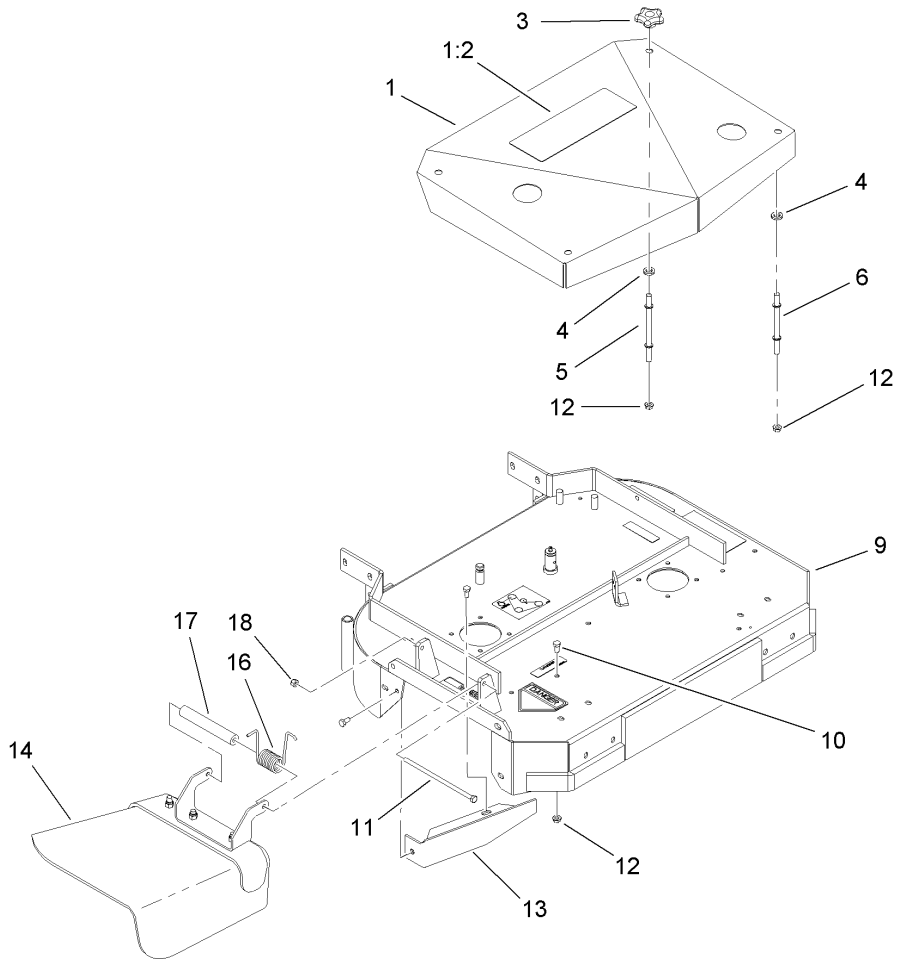


Deck and Shield Assembly

Ref	Part No.	Qty.	Description
1	1-324407	1	Shield-Belt
1:2	106-0710	1	Decal
3	106-4161	4	Knob-Handle
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	110-6901	1	32 Inch Deck ASM
10	322-2	7	Screw-HH
11	322-50	1	Screw-HH
12	32128-20	11	Nut-HF
13	1-302189-01	1	Baffle-Dogleg
14	107-4140	1	Deflector ASM
16	104-8554	1	Spring-Torsion
17	105-4622	1	Spacer
18	3296-29	1	Nut-Lock, NI

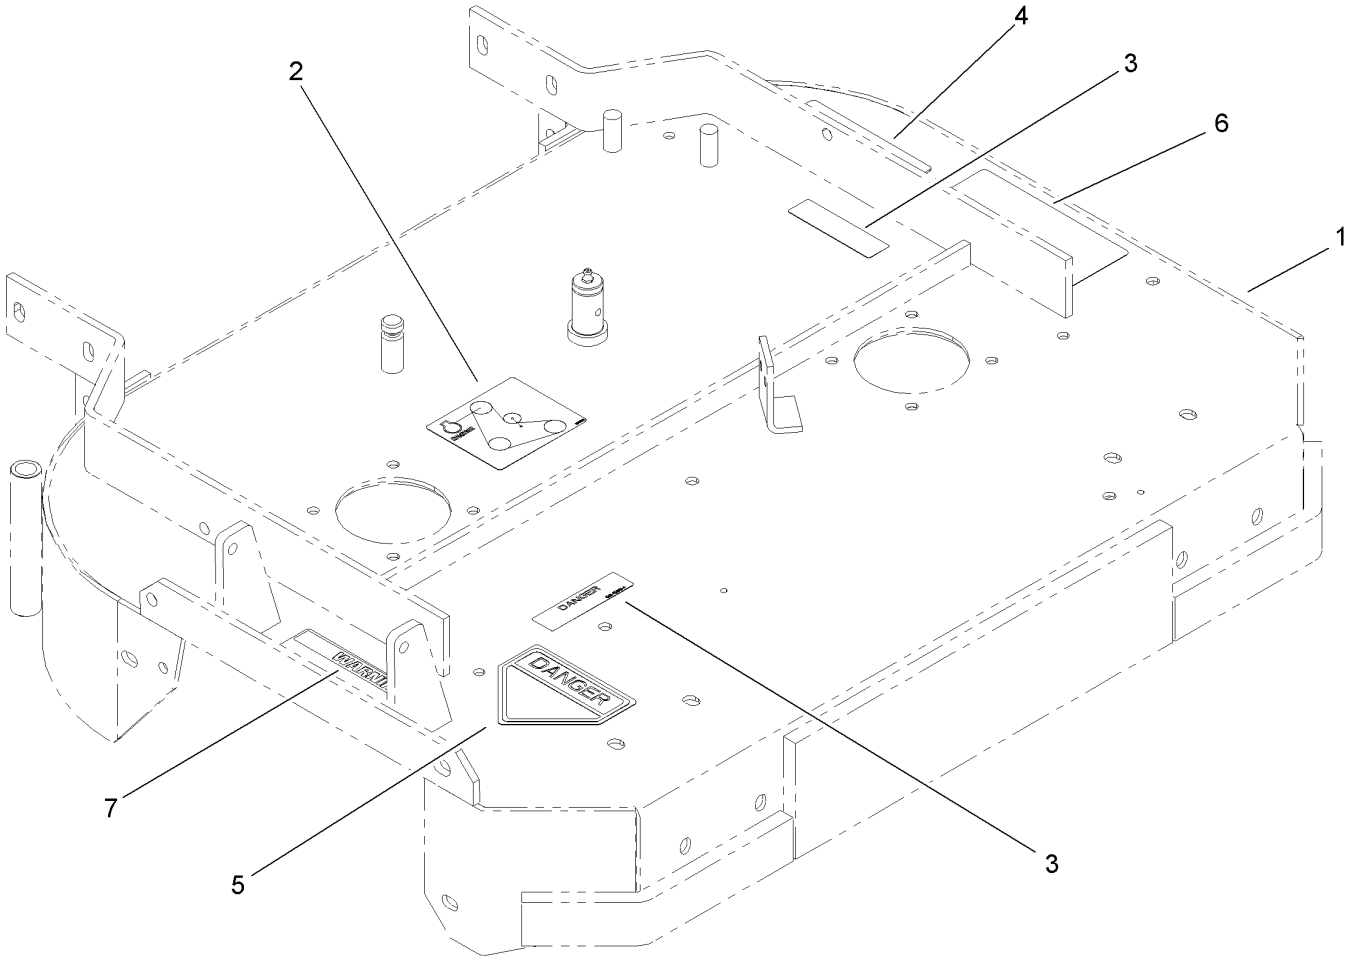


Deck Assembly No. 110-6901

Ref	Part No.	Qty.	Description
❶1		1	Deck
2	98-3296	1	Decal-Routing, Belt
3	98-5954	2	Decal-Cover, Missing
4	98-5130	1	Decal-Torque, Bolt
5	43-8480	1	Decal-Danger
6	66-1340	1	Decal-Danger
7	104-8569	1	Decal-Warning

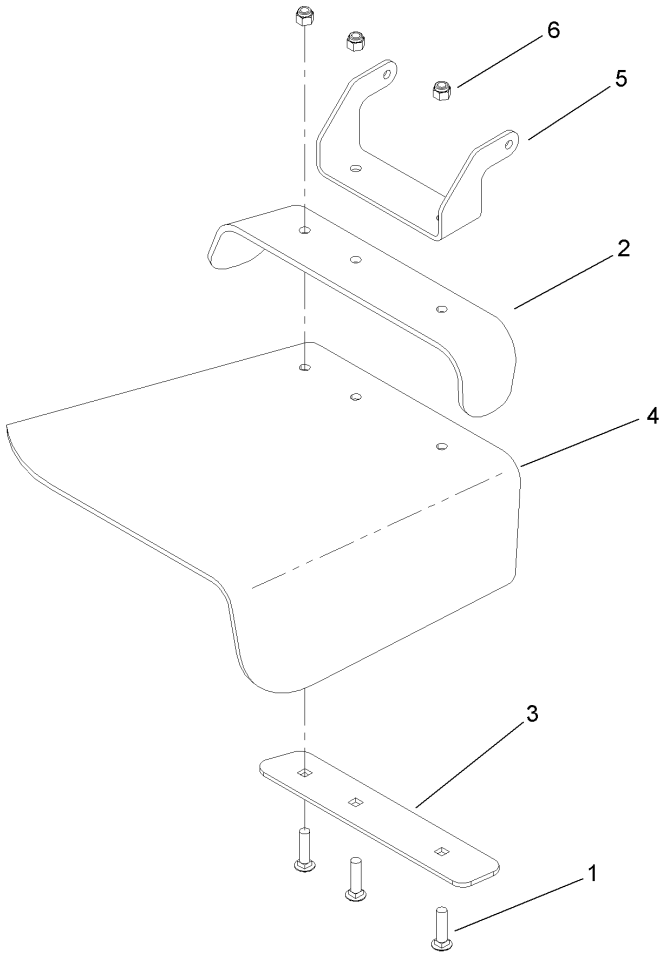

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

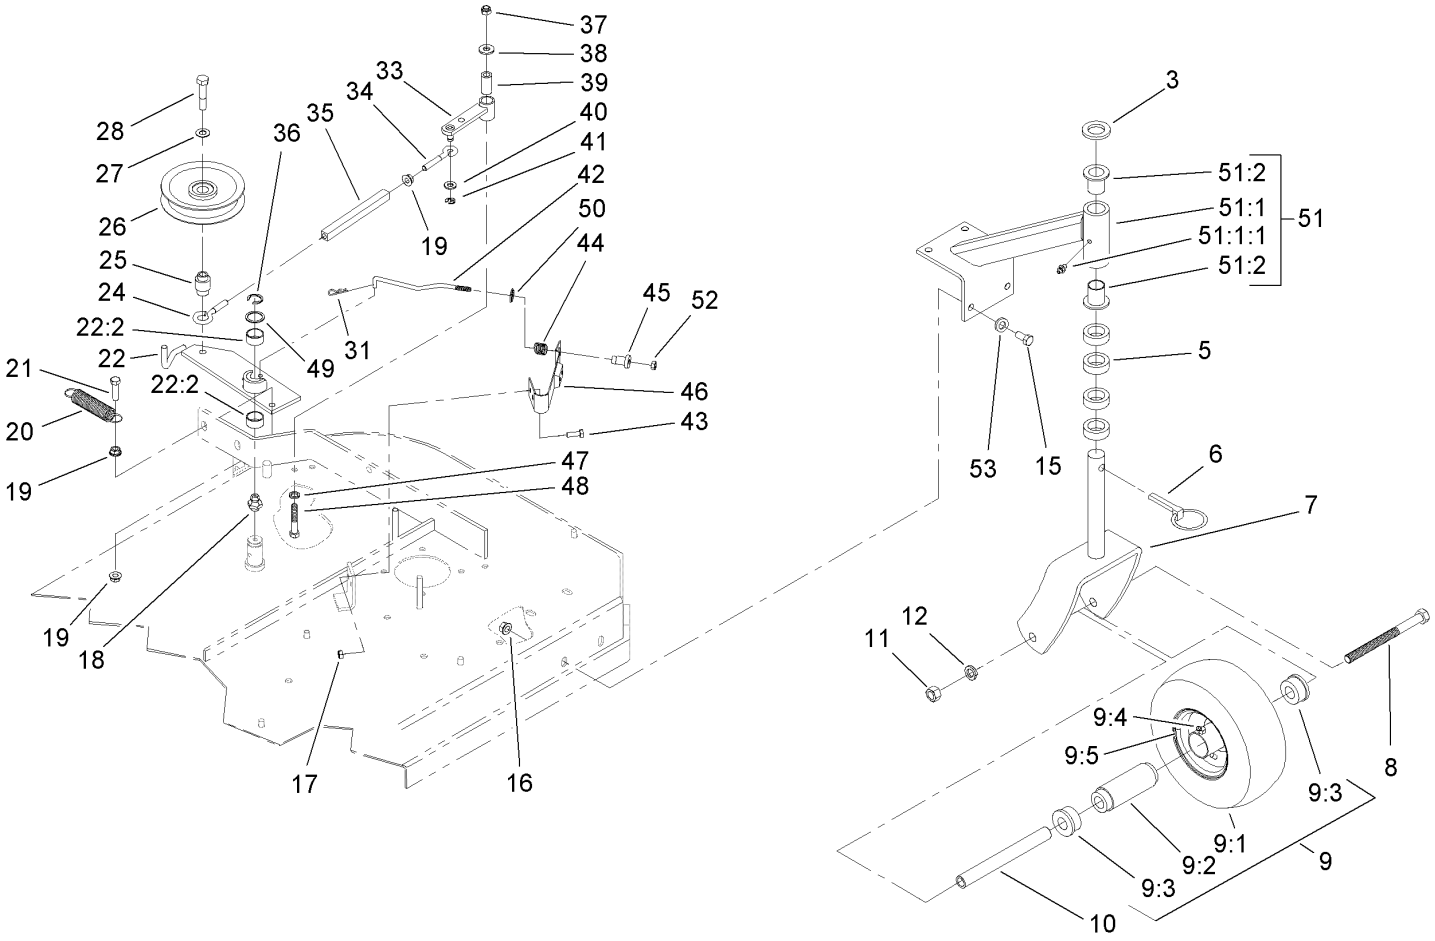

Idler Arm and Caster Wheel Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	110-5023	2	Wheel And Tire ASM
❶9:1		1	Tire
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Zerk
❶9:5		1	Wheel
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH

Ref	Part No.	Qty.	Description
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM

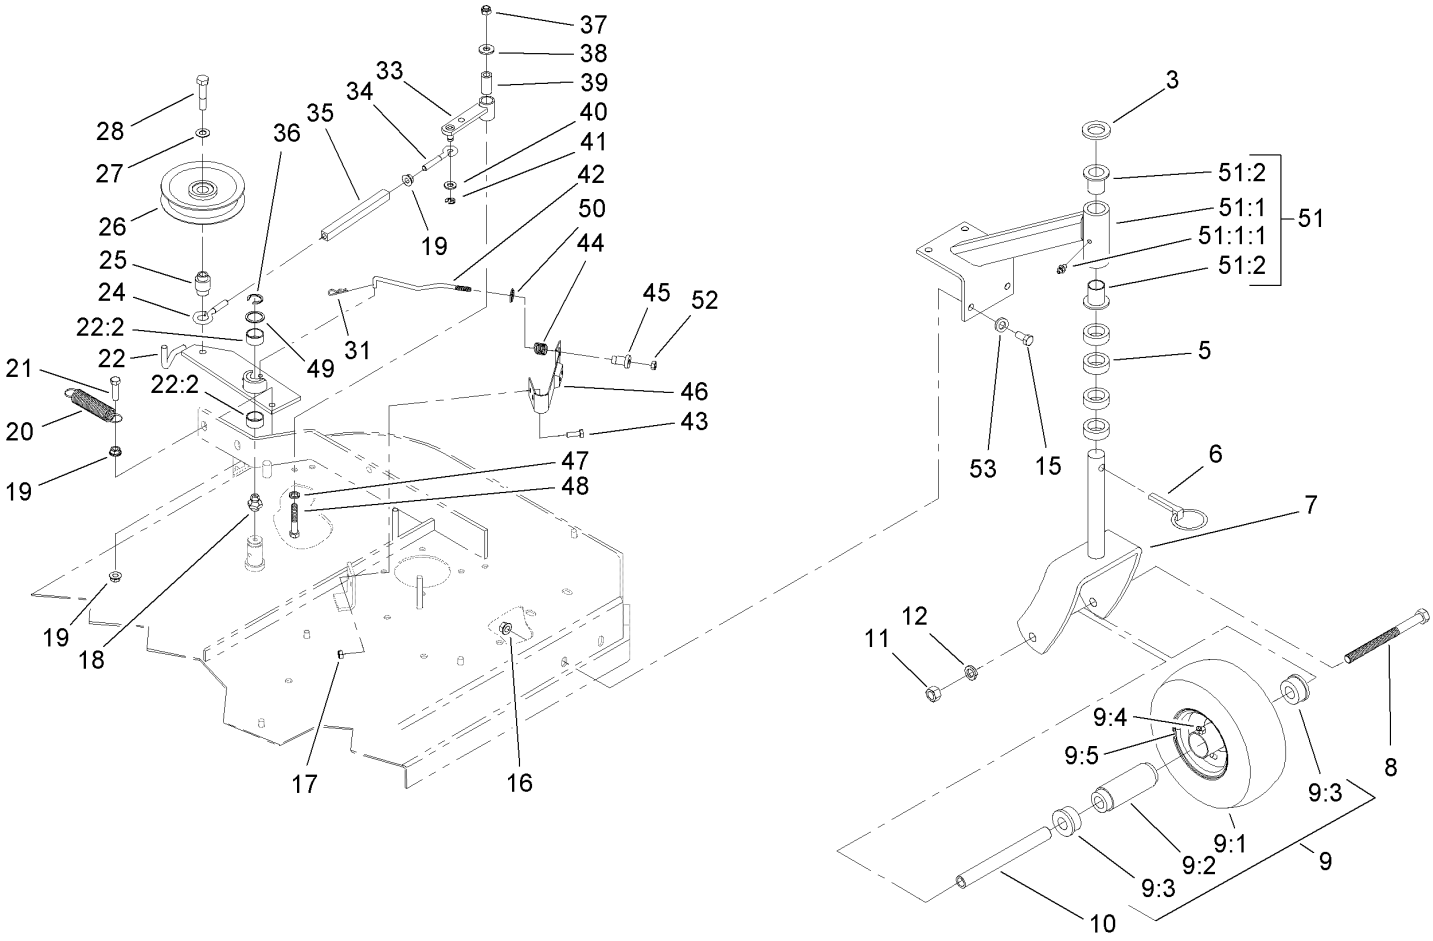


Idler Arm and Caster Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
❶51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

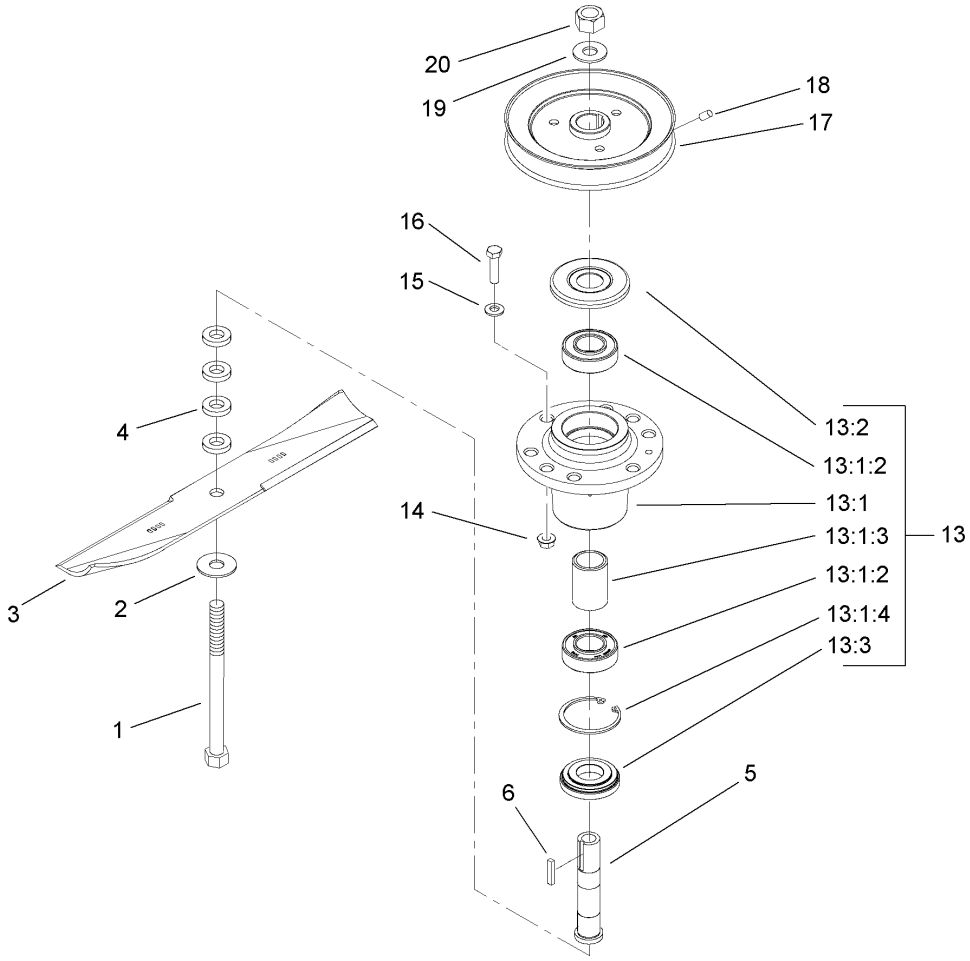


Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
❷3	103-2527	2	Blade-Notched
3	103-2507	2	Blade-Lift, Low
4	1-323539	8	Spacer
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
13	107-4065	2	Cutter Housing ASM
❶13:1		1	Housing-Cutter
13:1:2	103-2477	2	Bearing-Ball
13:1:3	103-2534	1	Spacer-Bearing
13:1:4	32120-8	1	Ring-Snap
13:2	103-1330	1	Guard-Bearing, Top
13:3	103-2535	1	Spacer-Guard, Bottom
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex

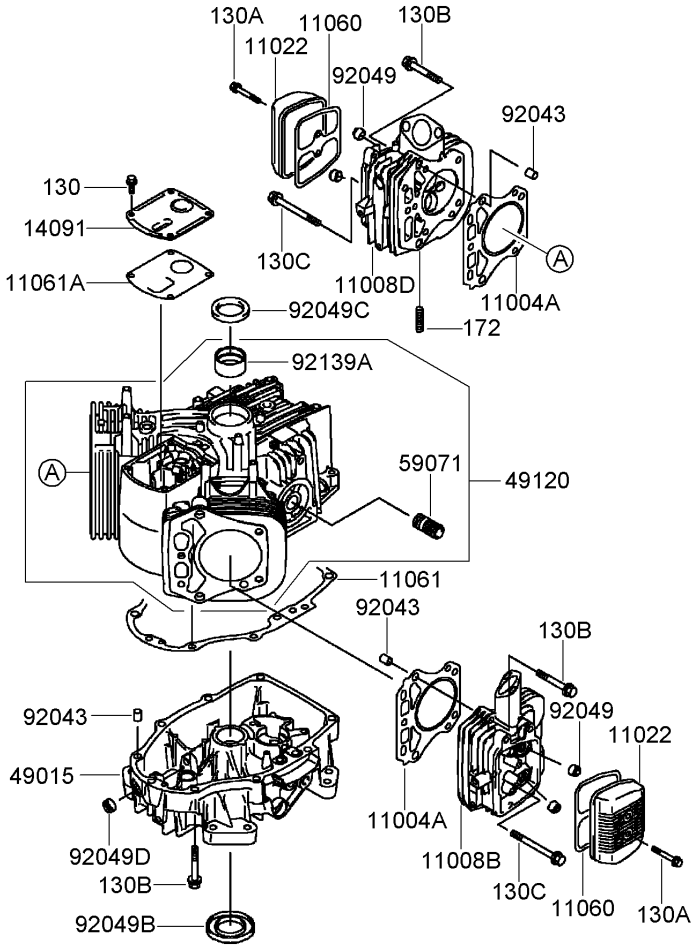


Cylinder and Crankcase Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹11004A	11004-7018	2	Gasket-Head
❹11008B	11008-7021	1	Head-Cylinder, No. 2
❹11008D	11008-7022	1	Head-Cylinder, No. 1
❹11022	11022-7003	2	Case-Rocker
❹11060	11060-7001	2	Gasket-Case, Rocker
❹11061	11061-7007	1	Gasket-Cover, Crankcase
❹11061A	11061-7008	1	Gasket-Breather
❹14091	14091-7007	1	Cover
❹49015	49015-7032	1	Cover-Crankcase
❹49120	49120-7015	1	Crankcase
❹59071	59071-2079	1	Joint
❹92043	92043-7001	6	Pin
❹92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❹92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❹92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❹92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❹92139A	92139-7008	1	Bushing
❹130	130B0612	4	Bolt-Flanged (6X12)
❹130A	130B0640	4	Bolt-Flanged (6X40)
❹130B	130T0850	17	Bolt-Flanged (8X50)
❹130C	130T0875	2	Bolt-Flanged (8X75)
❹172	172G0818	4	Bolt-Stud (8X18)

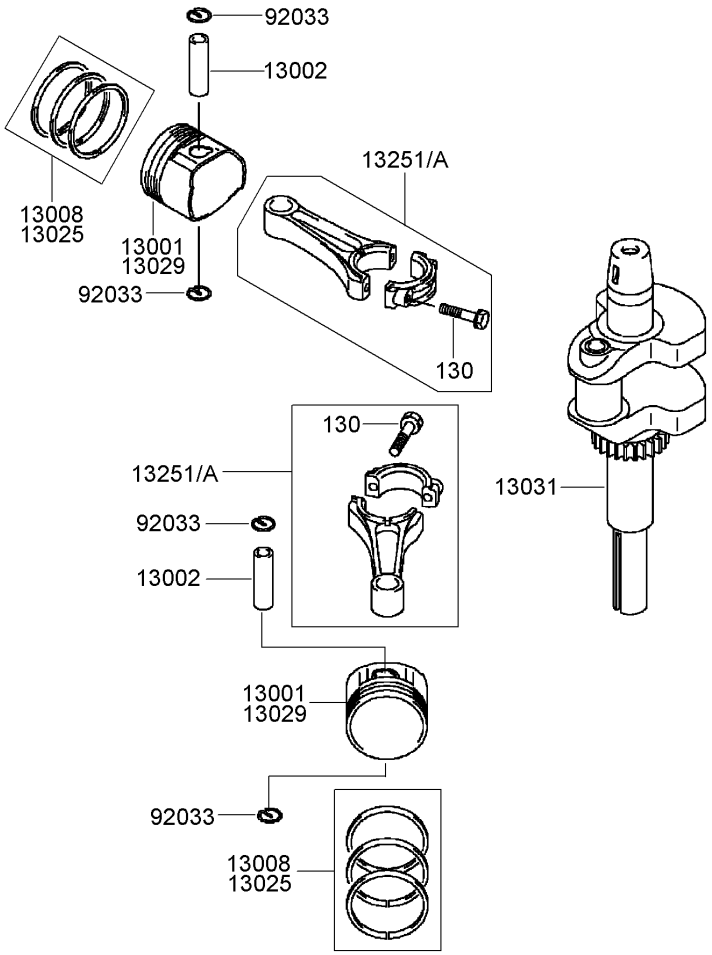


Piston and Crankshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13001	13001-7009	2	Piston-Engine
❹13002	13002-7001	2	Pin-Piston
❹13008	13008-7001	2	Ring Set-Piston
❹13025	13025-7003	1	Ring Set-Piston (L 0.50)
❹13029	13029-7005	1	Piston-Engine (L 0.50)
❹13031	13031-7033	1	Crankshaft
❹13251	13251-7007	2	Connecting Rod ASM
❹13251A	13251-7008	2	Connecting Rod ASM (0.50)
❹92033	92033-7005	4	Ring-Snap
❹130	130G0630	4	Bolt-Flanged (6X30)

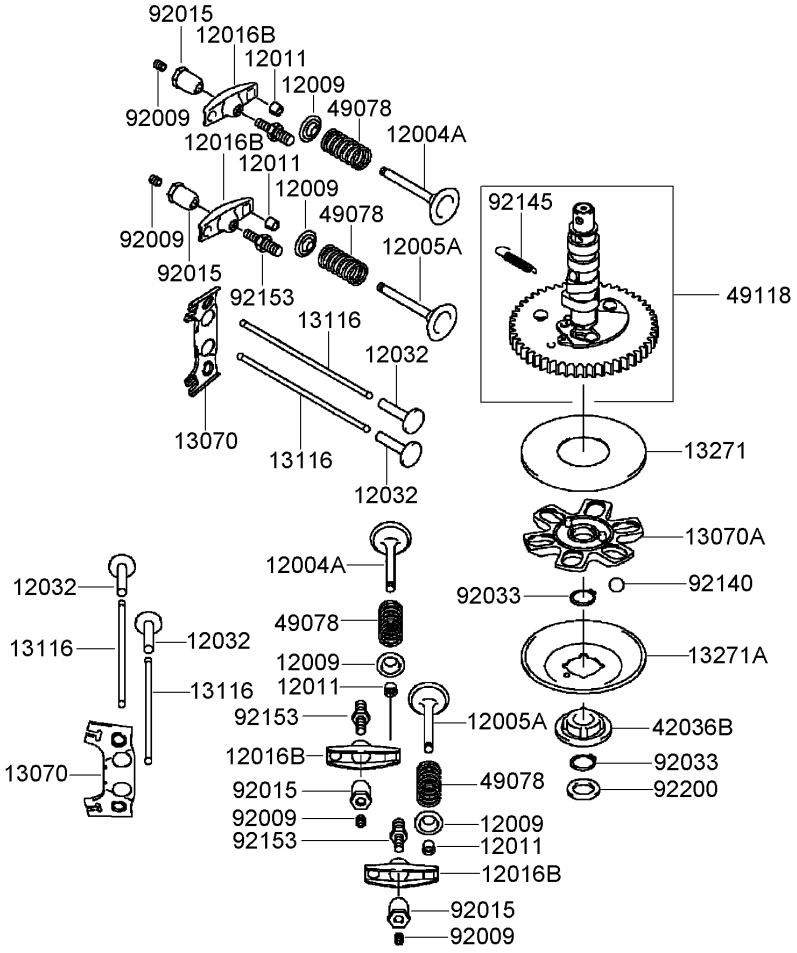


Valve and Camshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹12004A	12004-7005	2	Valve-Intake
❹12005A	12005-7006	2	Valve-Exhaust
❹12009	12009-7001	4	Retainer-Spring, Valve
❹12011	12011-2056	8	Collet
❹12016B	12016-7008	4	Arm-Rocker
❹12032	12032-7001	4	Tappet
❹13070	13070-7001	2	Guide
❹13070A	13070-7004	1	Guide
❹13116	13116-2057	4	Rod-Push
❹13271	13271-7007	1	Plate
❹13271A	13271-7021	1	Plate-Governor
❹42036B	42036-7010	1	Sleeve
❹49078	49078-7001	4	Spring-Valve, Engine
❹49118	49118-7009	1	Camshaft
❹92009	92009-2341	4	Screw
❹92015	92015-2253	4	Nut
❹92033	92033-7001	2	Ring-Snap
❹92140	92140-7002	6	Ball
❹92145	92145-7001	1	Spring
❹92153	92153-7019	4	Bolt
❹92200	92200-7001	1	Washer

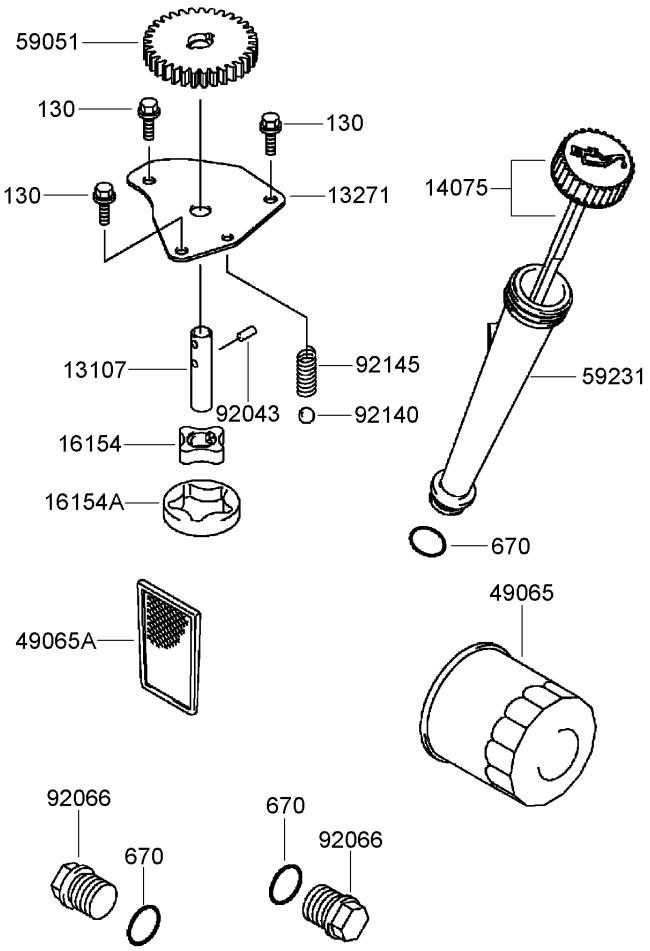


Lubrication Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13107	13107-7009	1	Shaft
❹13271	13271-7017	1	Plate
❹14075	14075-7009	1	Cap ASM
❹16154	16154-2053	1	Rotor-Pump (In)
❹16154A	16154-2054	1	Rotor-Pump (Out)
❹49065	49065-2078	1	Filter-Oil
❹49065A	49065-7004	1	Filter-Oil
❹59051	59051-7011	1	Gear-Spur
❹59231	59231-7003	1	Filler
❹92043	92043-7003	2	Pin
❹92066	92066-7003	2	Plug
❹92140	92140-7003	1	Ball
❹92145	92145-7002	1	Spring
❹130	130B0612	3	Bolt-Flanged (6X12)
❹670	670D2016	3	O-Ring (16Mm)

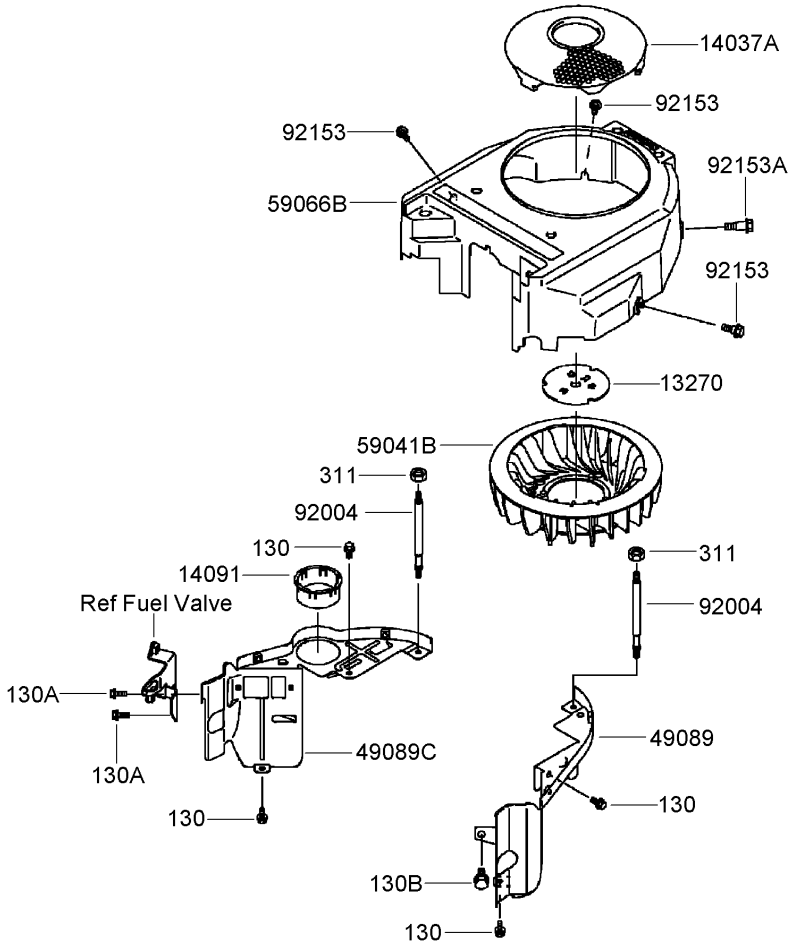


Cooling Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13270	13270-7007	1	Plate
❹14037A	14037-7025-9H	1	Screen
❹14091	14091-7009	1	Cover
❹49089	49089-7044	1	Shroud-Engine
❹49089C	49089-7061	1	Shroud-Engine
❹59041B	59041-7012	1	Fan
❹59066B	59066-7036	1	Housing-Fan
❹92004	92004-7007	2	Stud
❹92153	92153-7007	3	Bolt
❹92153A	92153-7008	1	Bolt
❹130	130B0612	4	Bolt-Flanged (6X12)
❹130A	130B0616	2	Bolt-Flanged (6X16)
❹130B	130B0816	1	Bolt-Flanged (8X16)
❹311	311F0600	2	Nut-Hex (6Mm)

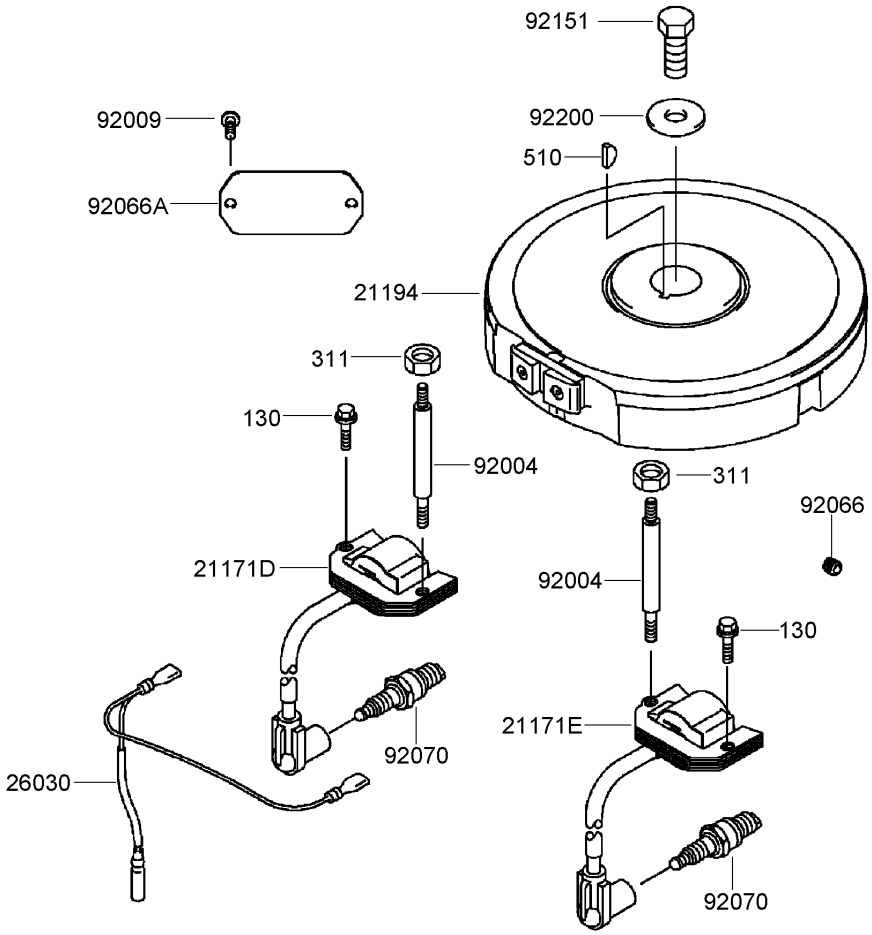


Electric Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹21171D	21171-7026	1	Coil-Assy-Ignition
❹21171E	21171-7027	1	Coil-Assy-Ignition
❹21194	21194-7013	1	Flywheel
❹26030	26030-7001	1	Harness
❹92004	92004-7008	2	Stud
❹92009	92009-2308	2	Screw
❹92066	92066-7002	1	Plug
❹92066A	92066-7005	1	Plug
❹92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)
❹92151	92151-2097	1	Bolt (12X30)
❹92200	92200-7002	1	Washer
❹130	130B0620	2	Bolt-Flanged (6X20)
❹311	311F0600	2	Nut-Hex (6Mm)
❹510	510A5100	1	Key-Woodruff

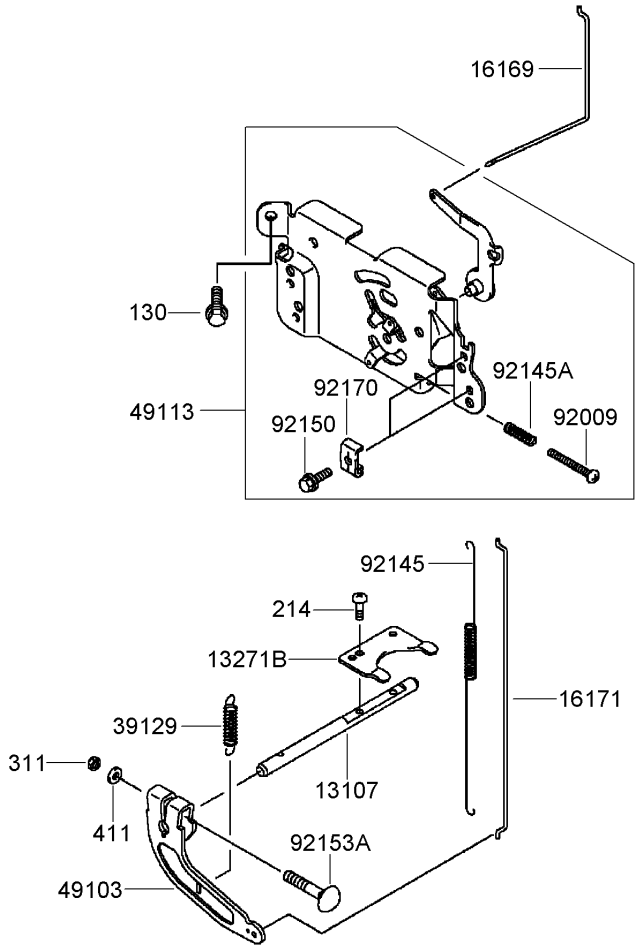

Control Equipment Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❹13107	13107-7010	1	Shaft
❹13271B	13271-7032	1	Plate
❹16169	16169-7012	1	Link-Choke
❹16171	16171-7007	1	Link
❹39129	39129-7003	1	Spring-Governor
❹49103	49103-7004	1	Arm-Governor
❹49113	49113-7024	1	Panel-Control
❹92009	92009-7007	1	Screw (4X35)
❹92145	92145-7003	1	Spring
❹92145A	92145-7005	1	Spring
❹92150	92150-2182	2	Bolt (5X18)
❹92153A	92153-7033	1	Bolt (6X35)
❹92170	92170-7001	2	Clamp
❹130	130B0612	2	Bolt-Flanged (6X12)
❹214	214B0408	2	Screw-Pan (4X8)
❹311	311B0600	1	Nut-Hex (6Mm)
❹411	411B0600	1	Washer-Plain (6Mm)

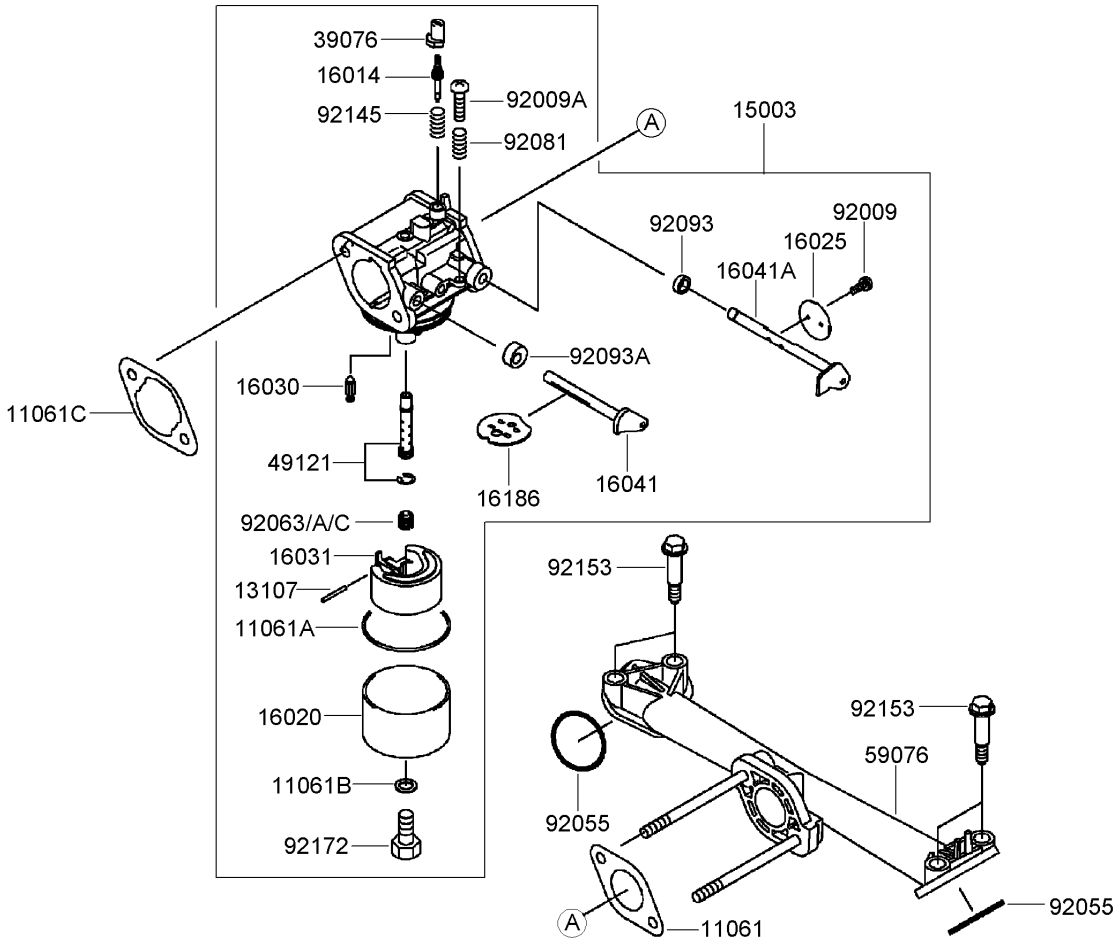

Carburetor Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹11061	11061-7004	1	Gasket-Insulator
❹11061A	11061-7009	1	Gasket-Chamber
❹11061B	11061-7010	1	Gasket-Screw
❹11061C	11061-7018	1	Gasket-Cleaner, Air
❹13107	13107-7018	1	Shaft
❹15003	15003-7061	1	Carburetor ASM
❹16014	16014-7002	1	Screw-Pilot
❹16020	16020-7003	1	Chamber-Float
❹16025	16025-7006	1	Valve-Throttle
❹16030	16030-7003	1	Valve-Float
❹16031	16031-7002	1	Float
❹16041	16041-7016	1	Shaft-Choke, Carburetor
❹16041A	16041-7018	1	Shaft-Throttle, Carburetor
❹16186	16186-7002	1	Choke Valve ASM
❹39076	39076-7001	1	Limiter
❹49121	49121-7001	1	Nozzle-Main
❹59076	59076-7005	1	Manifold-Intake
❹92009	92009-2083	2	Screw
❹92009A	92009-2349	1	Screw
❹92055	92055-7007	2	O-Ring (I D 31)
❹92063	92063-7026	1	Jet-Main, No. 88
❹92063A	92063-7028	1	Jet-Main, No. 85
❹92063C	92063-7029	1	Jet-Main, No. 82
❹92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
❹92093	92093-2100	1	Seal
❹92093A	92093-7003	1	Seal
❹92145	92145-7015	1	Spring
❹92153	92153-7009	4	Bolt
❹92172	92172-7002	1	Screw

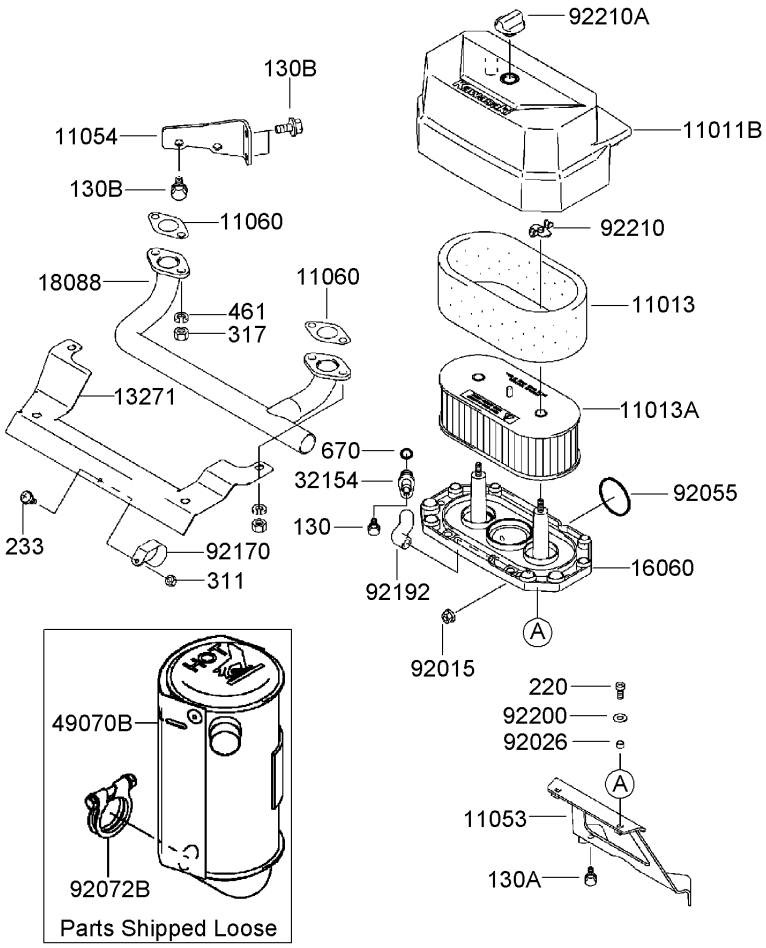

Air Filter and Muffler Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
❹11011B	11011-7045	1	Case-Filter, Air
❹11013	11013-7025	1	Element-Filter, Air
❹11013A	11013-7031	1	Element-Filter, Air
❹11053	11053-7022	1	Bracket
❹11054	11054-7002-9H	1	Bracket
❹11060	11060-7021	2	Gasket-Muffler
❹13271	13271-7022	1	Plate
❹16060	16060-7016	1	Pipe-Intake
❹18088	18088-7001	1	Pipe-Exhaust
❹32154	32154-7006	1	Pipe
❹49070B	49070-7021	1	Muffler
❹92015	92015-1193	2	Nut
❹92026	92026-7001	2	Spacer (6.2X7.9X5)
❹92055	92055-7015	1	O-Ring
❹92072B	92072-7012	1	Band
❹92170	92170-7002	1	Clamp
❹92192	92192-7010	1	Tube
❹92200	92200-2070	2	Washer
❹92210	92210-7004	2	Nut
❹92210A	92210-7019	1	Nut
❹130	130B0610	1	Bolt-Flanged (6X10)
❹130A	130B0612	2	Bolt-Flanged (6X12)
❹130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
❹220	220B0614	2	Screw-Pan (Cross) (6X14)
❹233	233B0416	1	Screw (4X16)
❹311	311B0400	1	Nut-Hex (4Mm)
❹317	317R0800	4	Nut-Hex (8Mm)
❹461	461F0800	4	Washer-Spring (8Mm)
❹670	670B2010	1	O-Ring (10Mm)

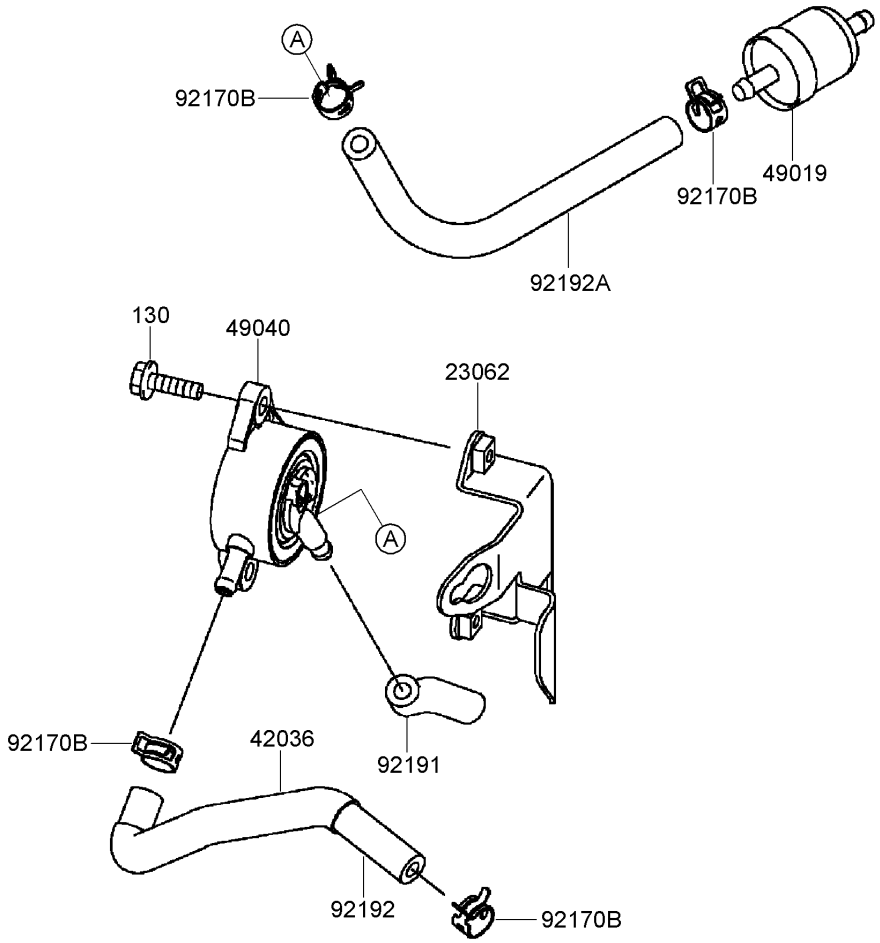

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹23062	23062-7004-9H	1	Bracket
❹42036	42036-7012	1	Sleeve
❹49019	49019-7001	1	Filter-Fuel
❹49040	49040-7001	1	Pump-Fuel
❹92170B	92170-2088	4	Clamp
❹92191	92191-7002	1	Tube
❹92192	92192-7035	1	Tube (6.35X12.7X170)
❹92192A	92192-7037	1	Tube (6.35X12.7X160)
❹130	130B0620	2	Bolt-Flanged (6X20)

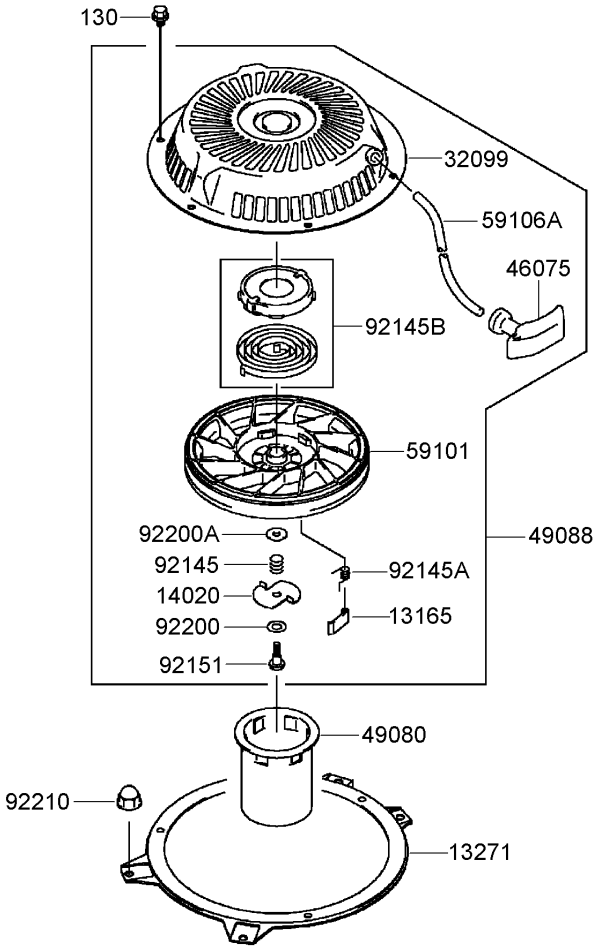

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹13165	13165-7001	2	Pawl-Starter, Recoil
❹13271	13271-7003-9H	1	Plate
❹14020	14020-7001	1	Retainer
❹32099	32099-7002	1	Case-Starter, Recoil
❹46075	46075-7001	1	Grip-Starter, Recoil
❹49080	49080-7001	1	Pulley-Starting
❹49088	49088-7013	1	Starter-Recoil
❹59101	59101-7001	1	Reel-Starter, Recoil
❹59106A	59106-7005	1	Rope
❹92145	92145-7006	1	Spring
❹92145A	92145-7007	2	Spring
❹92145B	92145-7008	1	Spring
❹92151	92151-7008	1	Bolt
❹92200	92200-7004	1	Washer
❹92200A	92200-7005	1	Washer
❹92210	92210-0003	4	Nut
❹130	130B0608	3	Bolt-Flanged (6X8)

56033



56070



56080



56080A



Label Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
❹56033	56033-7001	1	Label-Manual
❹56070	56070-7001	1	Label-Warning
❹56080	56080-2077	1	Label-Brand
❹56080A	56080-7024	1	Label-Brand

Attachments and Accessories

For 30692 - ProLine Walk-Behind Mower, Fixed Deck T-Bar Gear with 32in Cutting Unit

Product Name	Model/Part
Atomic Blade and Decal Assembly	104-8595
Blade-16.25 Inch (6 Pack)	108-1119
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES


TORO®