



ProLine Walk-Behind Mower Fixed Deck T-Bar Gear with 32in Cutting Unit

Model No. 30692 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel Tank Assembly	 3	Lubrication Equipment Assembly Kawasaki FH430V-CS25	 17
Transmission Drive Assembly	 4	Cooling Equipment Assembly Kawasaki FH430V-CS25	 18
Drive Wheel and Brake Assembly	 6	Electric Equipment Assembly Kawasaki FH430V-CS25	 19
Handle and Control Assembly	 7	Control Equipment Assembly Kawasaki FH430V-CS25	 20
Deck and Shield Assembly	 8	Carburetor Assembly Kawasaki FH430V-CS25	 21
Deck Assembly No. 110-6901	 9	Air Filter and Muffler Assembly Kawasaki FH430V-CS25	 22
Deflector Assembly No. 107-4140	 10	Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	 23
Idle Arm and Caster Wheel Assembly	 11	Starter Assembly Kawasaki FH430V-CS25	 24
Spindle and Blade Assembly	 13	Label Assembly Kawasaki FH430V-CS25	 25
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	 14	Attachments and Accessories List	 26
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	 15		
Valve and Camshaft Assembly Kawasaki FH430V-CS25	 16		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not serviced separately | ❷ Optional Equipment |
| ❸ Obtain parts from Peerless Transmissions (model 700-070A) | ❹ Obtain from your local Kawasaki dealer |

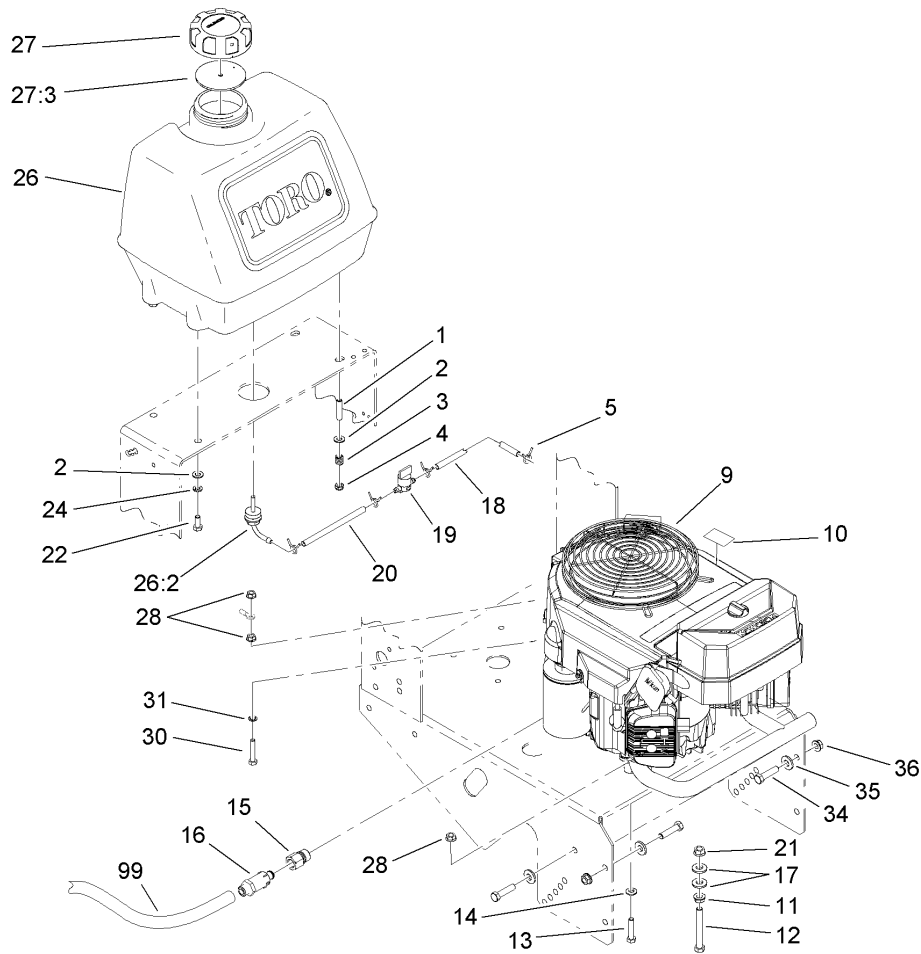

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
1 4 9			
1	Engine-Kawasaki, FH430V-Cs25	1	Engine-Kawasaki, FH430V-Cs25
10	106-0699	1	Decal-Warning
11	3290-357	1	Nut-HHF, Whiz
12	323-14	1	Screw-HH
13	322-7	3	Screw-HH
14	1-303334	3	Washer-Spring
15	103-1966	1	Adapter
16	92-6877	1	Valve-Drain, Oil
17	98-5975	2	Washer-Belleville
18	109-0293	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	109-0306	1	Hose-Fuel
21	32128-21	1	Nut-HF
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas


Ref	Part No.	Qty.	Description
28	32128-20	5	Nut-HF
30	322-9	1	Screw-HH
31	3254-2	1	Washer-Lock, Internal
34	323-8	8	Screw-HH
35	98-5975	8	Washer-Belleville
36	3290-357	8	Nut-HHF, Whiz
99	103-1964	1	Hose-Drain, Oil

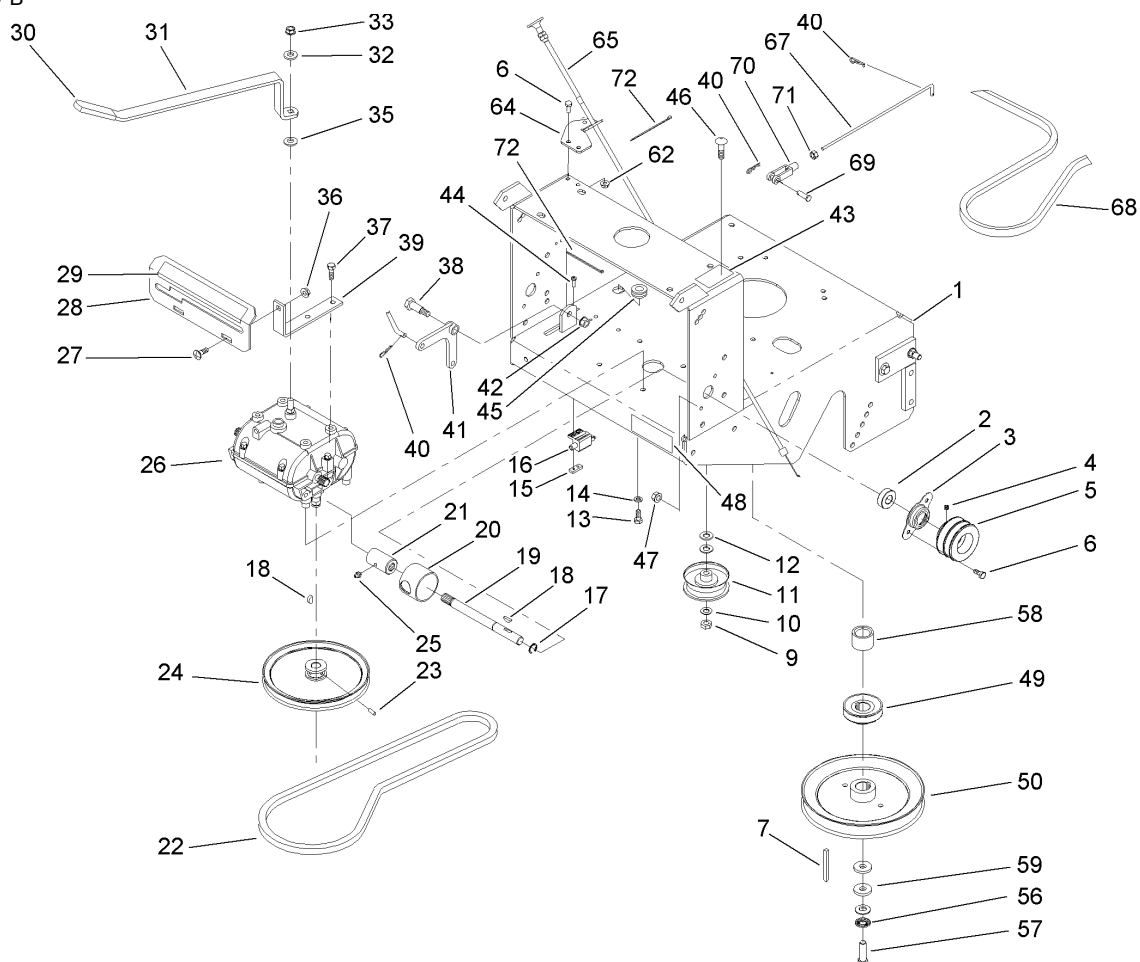

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513152	1	Switch-Closed, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave

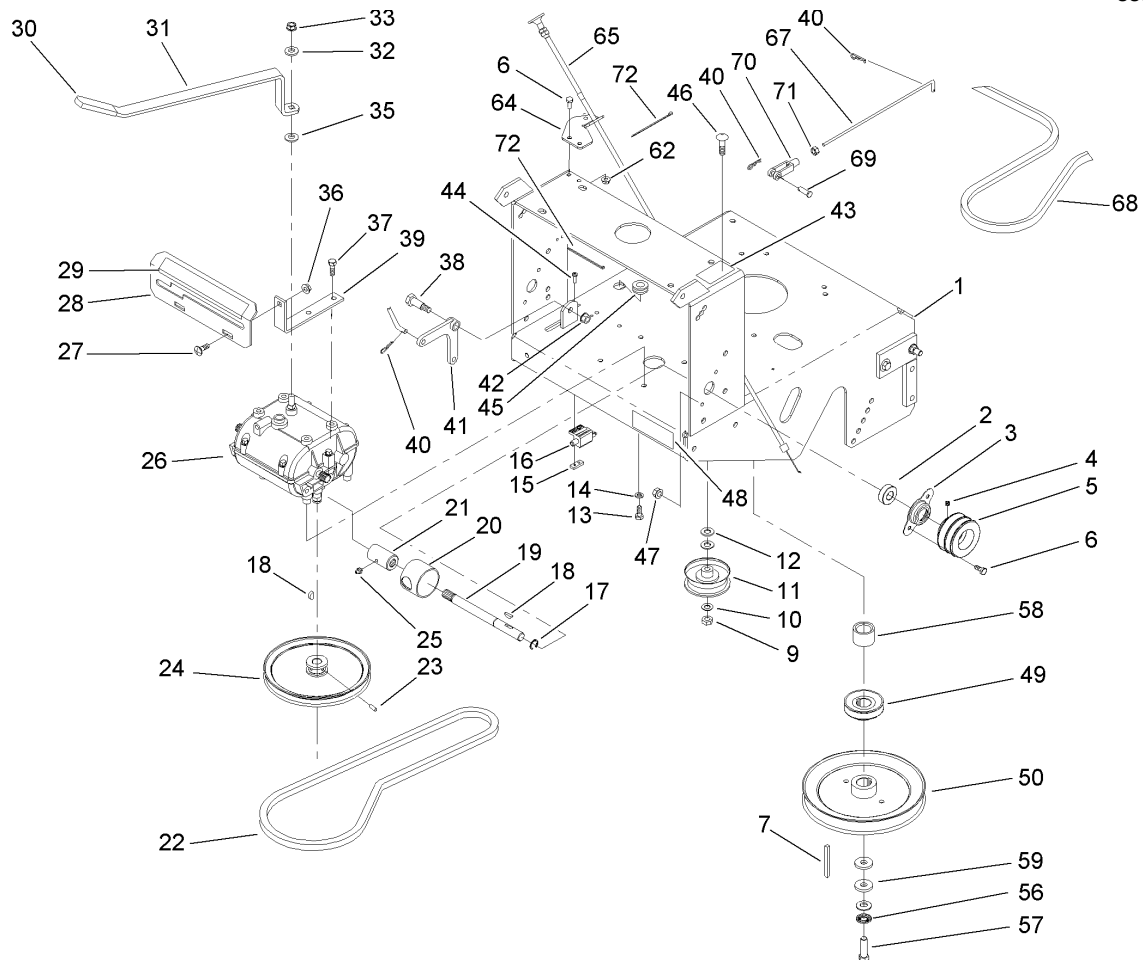

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
67	1-323303	1	Linkage-Arm
68	1-323745	1	Belt-Blade, Drive
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
72	1-303335	2	Tie-Plastic

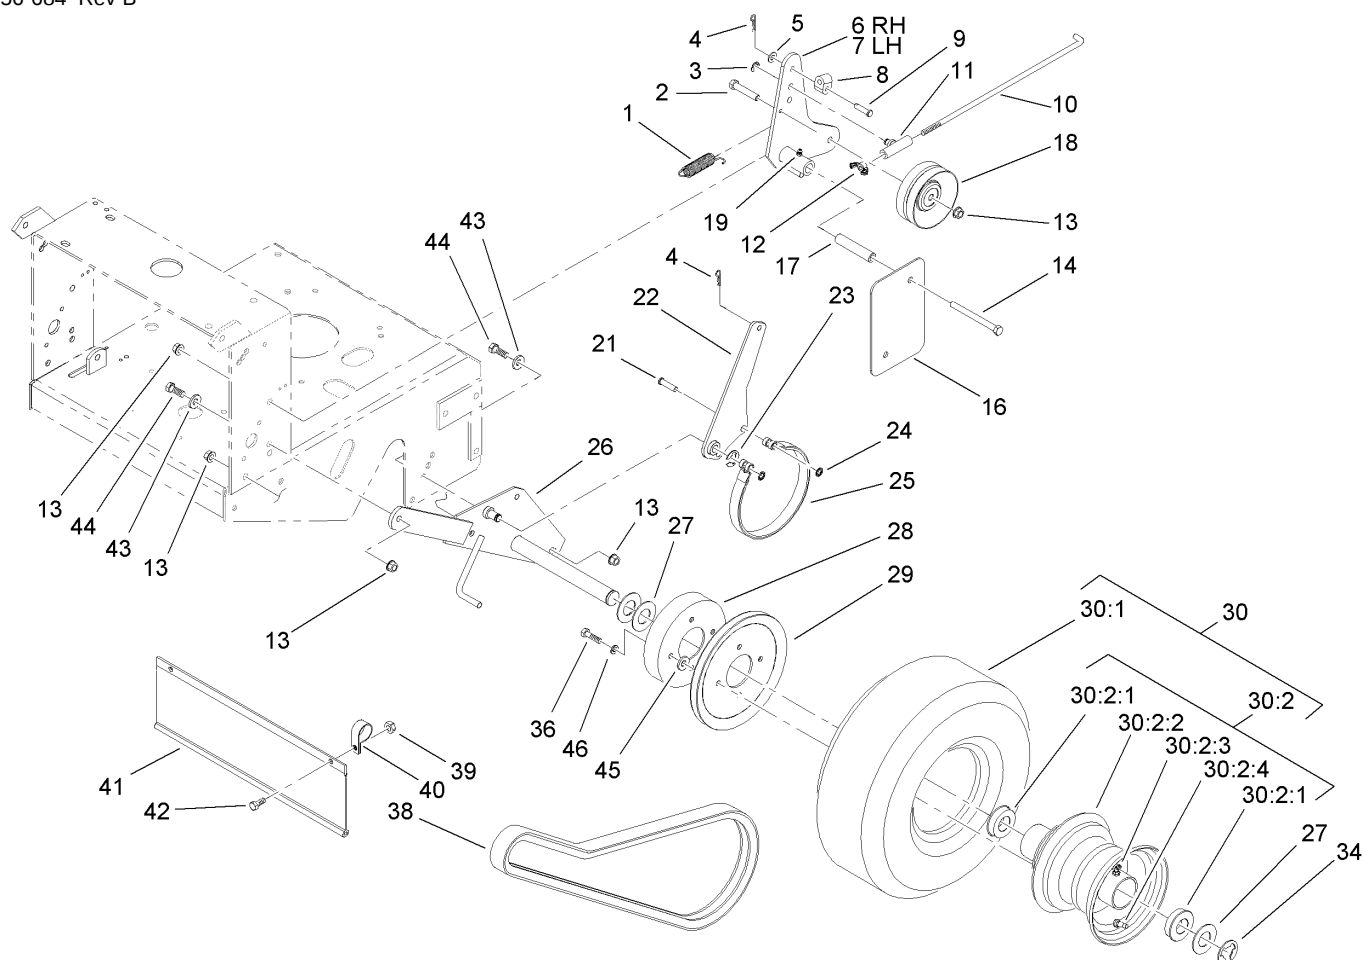

Drive Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Hair
5	3256-23	2	Washer-Flat
6	110-4925-03	1	RH Idler Arm ASM
7	110-4926-03	1	LH Idler Arm ASM
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
19	302-19	2	Fitting-Grease
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322232-03	1	Axle ASM


Ref	Part No.	Qty.	Description
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer, 18 GA
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive
30	1-323346	2	Wheel And Tire ASM
30:1	1-323361	1	Tire
30:2	1-323360	1	Wheel And Hub ASM
30:2:1	1-323329	2	Bearing-Flanged
30:2:2		1	Rim ASM
30:2:3		1	Fitting-Grease
30:2:4		1	Valve Stem And Cap
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock

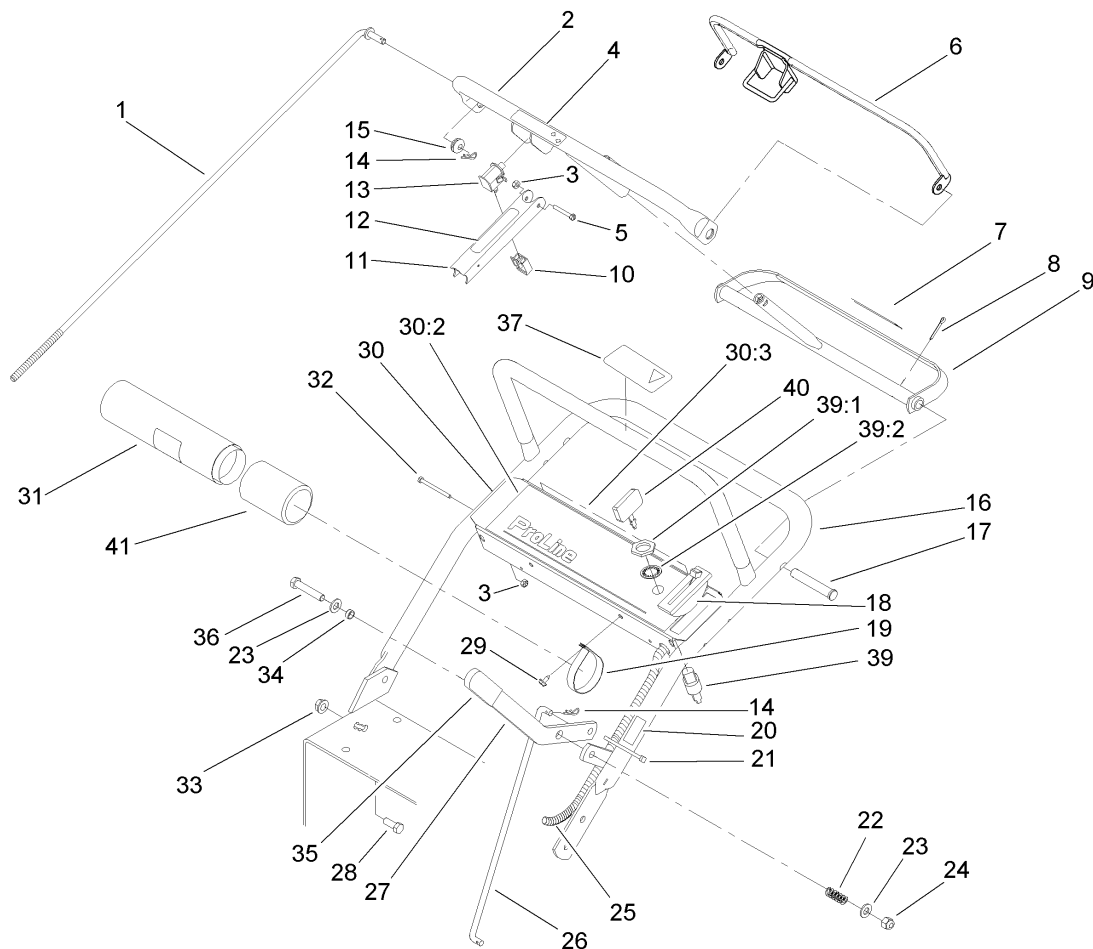

Handle and Control Assembly


Ref	Part No.	Qty.	Description
1	98-3282	2	Rod-Control
2	95-5522-03	1	Control Bar ASM
3	3296-2	5	Nut-Lock
4	82-2290	1	Decal
5	32105-1	1	Screw-SHH
6	82-7680-03	1	Bail ASM
7	82-2280	1	Decal
8	3272-11	2	Pin-Cotter
9	99-8501-03	1	Control-Pivot
10	218-595	1	Connector-Body
11	98-3261-03	1	Lever-Brake, Parking
12	98-3266	1	Decal
13	740275	1	Switch-Seat
14	1-806003	3	Pin-Hair
15	237-141	2	Grommet-Rubber
16	98-3267-03	1	Upper Handle ASM
17	283-55	2	Pin-Clevis
18	100-6450	1	Control-Throttle
19	2412-120	2	R-Clamp
20	95-5537	1	Decal-Engage, Deck
21	1-303335	1	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-24	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI

Ref	Part No.	Qty.	Description
25	106-0678	1	Harness-Wire
26	98-3279	1	Linkage-Drive, Blade
27	98-3287-03	1	Lever-Engagement, Blade
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	110-6905	1	Control Panel ASM
30:2	110-6916	1	Decal-Panel, Control
30:3	105-0884	1	Decal-Danger
31	104-7050	1	Housing-Manual
32	32105-14	4	Screw-SHH
33	32128-21	4	Nut-HF
34	99-8509	1	Spacer
35	1-303020	1	Grip-Lever
36	323-10	1	Screw-HH
37	98-4387	1	Decal-Protection, Ear
39	29-5560	1	Switch-On / Off
39:1	218-461	1	Nut-HH
39:2	3254-5	1	Washer-Tooth
40	63-8360	1	Key-Ignition
41	104-7048	1	Cap-Housing

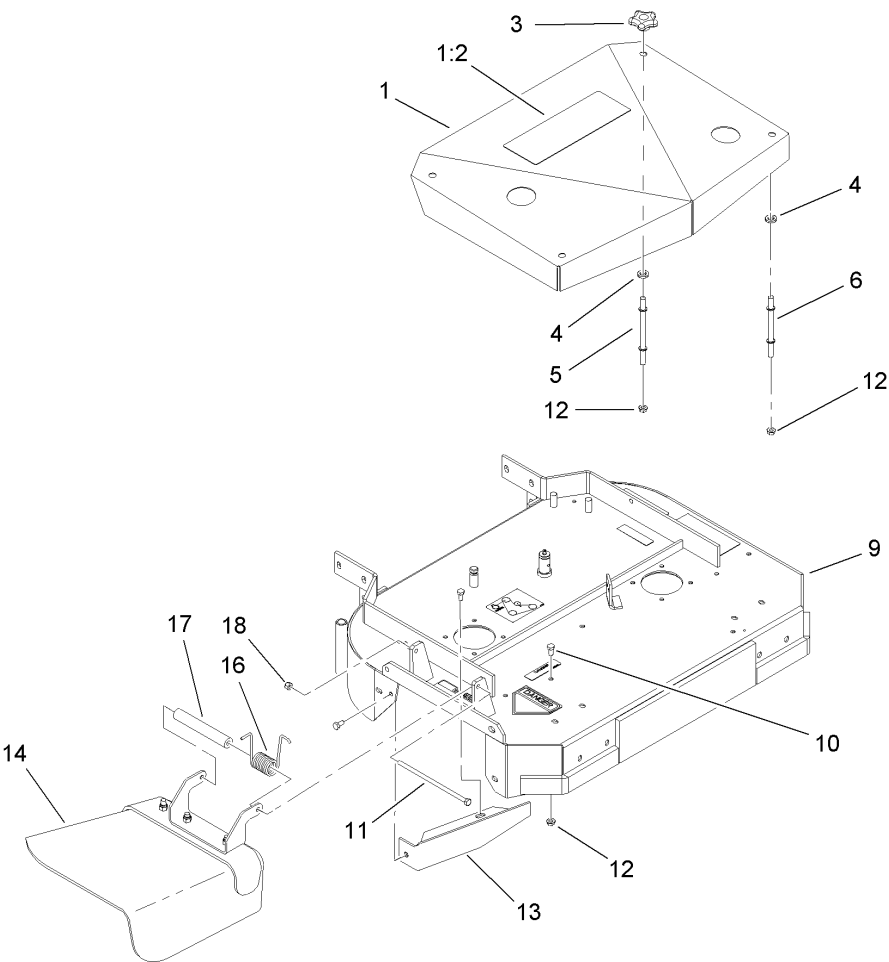


Deck and Shield Assembly

Ref	Part No.	Qty.	Description				
1	1-324407	1	Shield-Belt				
1:2	106-0710	1	Decal				
3	106-4161	4	Knob-Handle				
4	1-323417	4	Washer				
5	1-303536	2	Stud-Shield, Belt (Long)				
6	1-303537	2	Stud-Shield, Belt (Short)				
9	110-6901	1	32 Inch Deck ASM				
10	322-2	7	Screw-HH				
11	322-50	1	Screw-HH				
12	32128-20	11	Nut-HF				
13	1-302189-01	1	Baffle-Dogleg				
14	107-4140	1	Deflector ASM				
16	104-8554	1	Spring-Torsion				
17	105-4622	1	Spacer				
18	3296-29	1	Nut-Lock, NI				

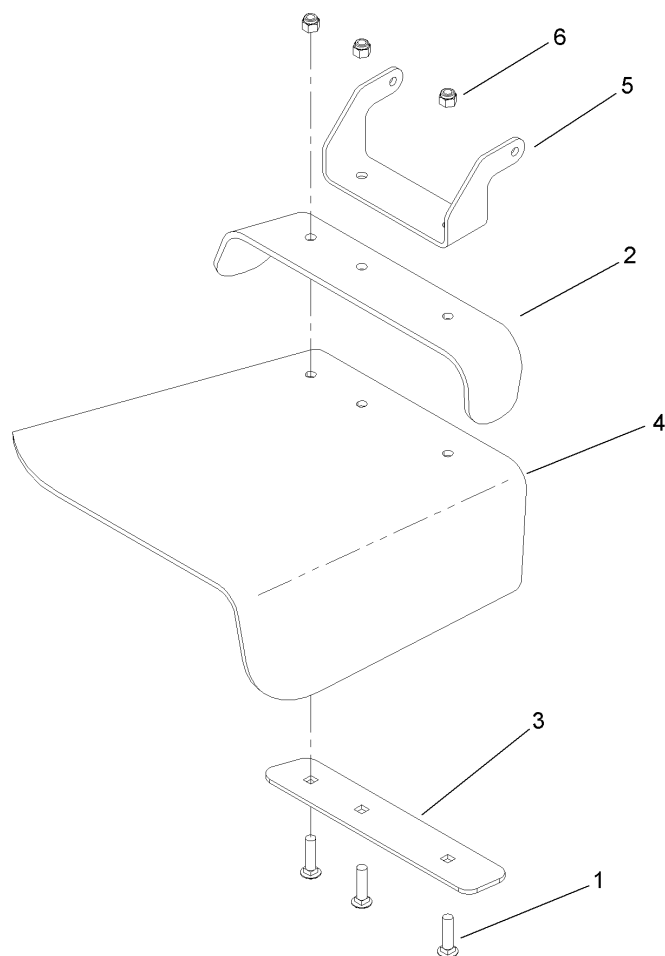

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

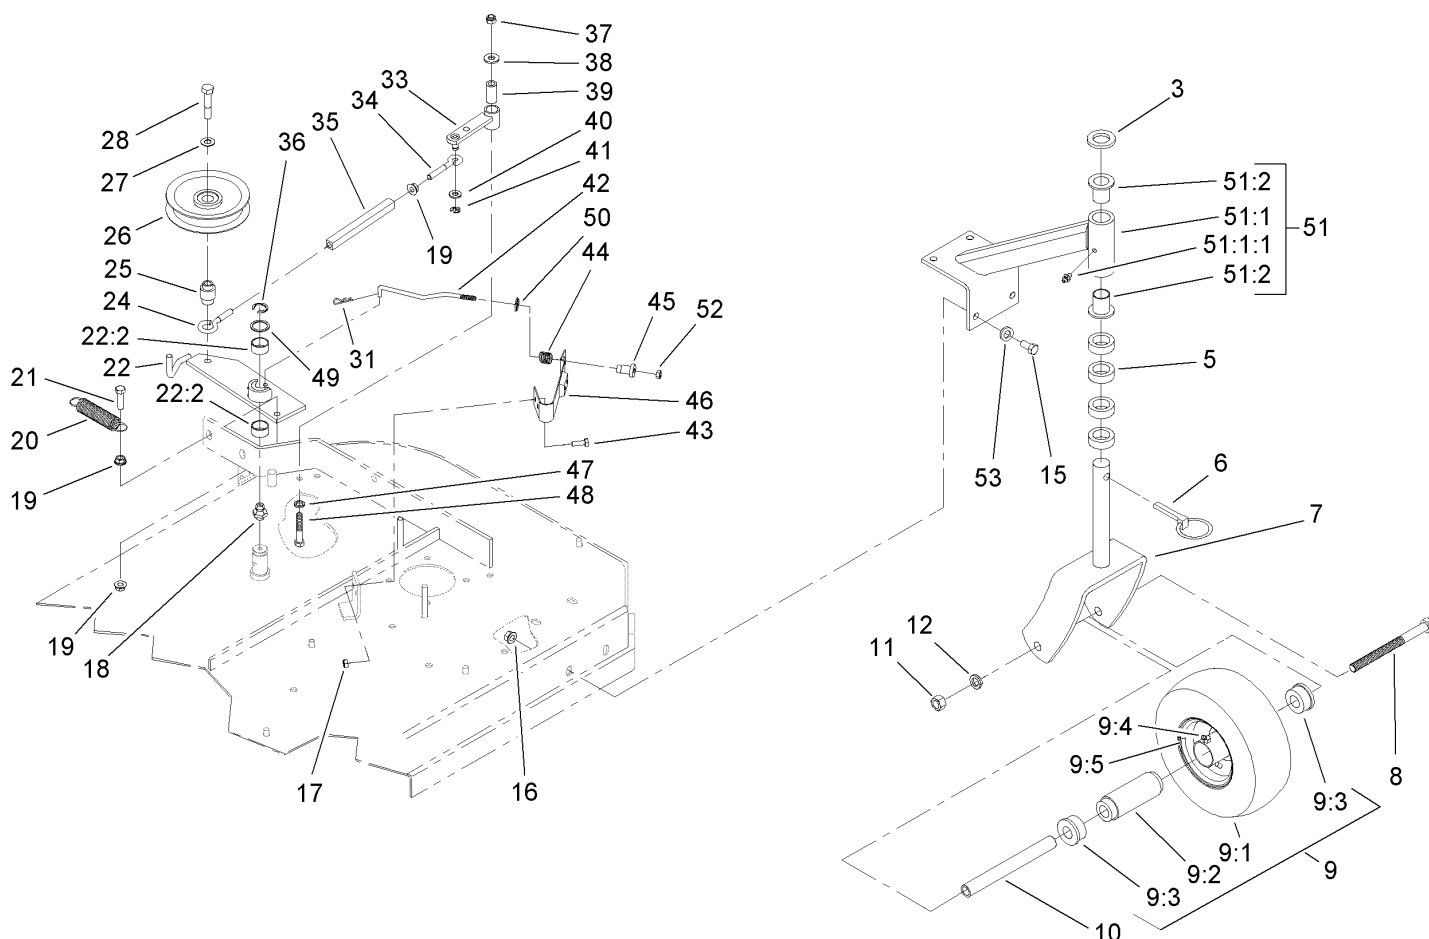

Idler Arm and Caster Wheel Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	110-5023	2	Wheel And Tire ASM
9:1		1	Tire
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Zerk
9:5		1	Wheel
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH

Ref	Part No.	Qty.	Description
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM

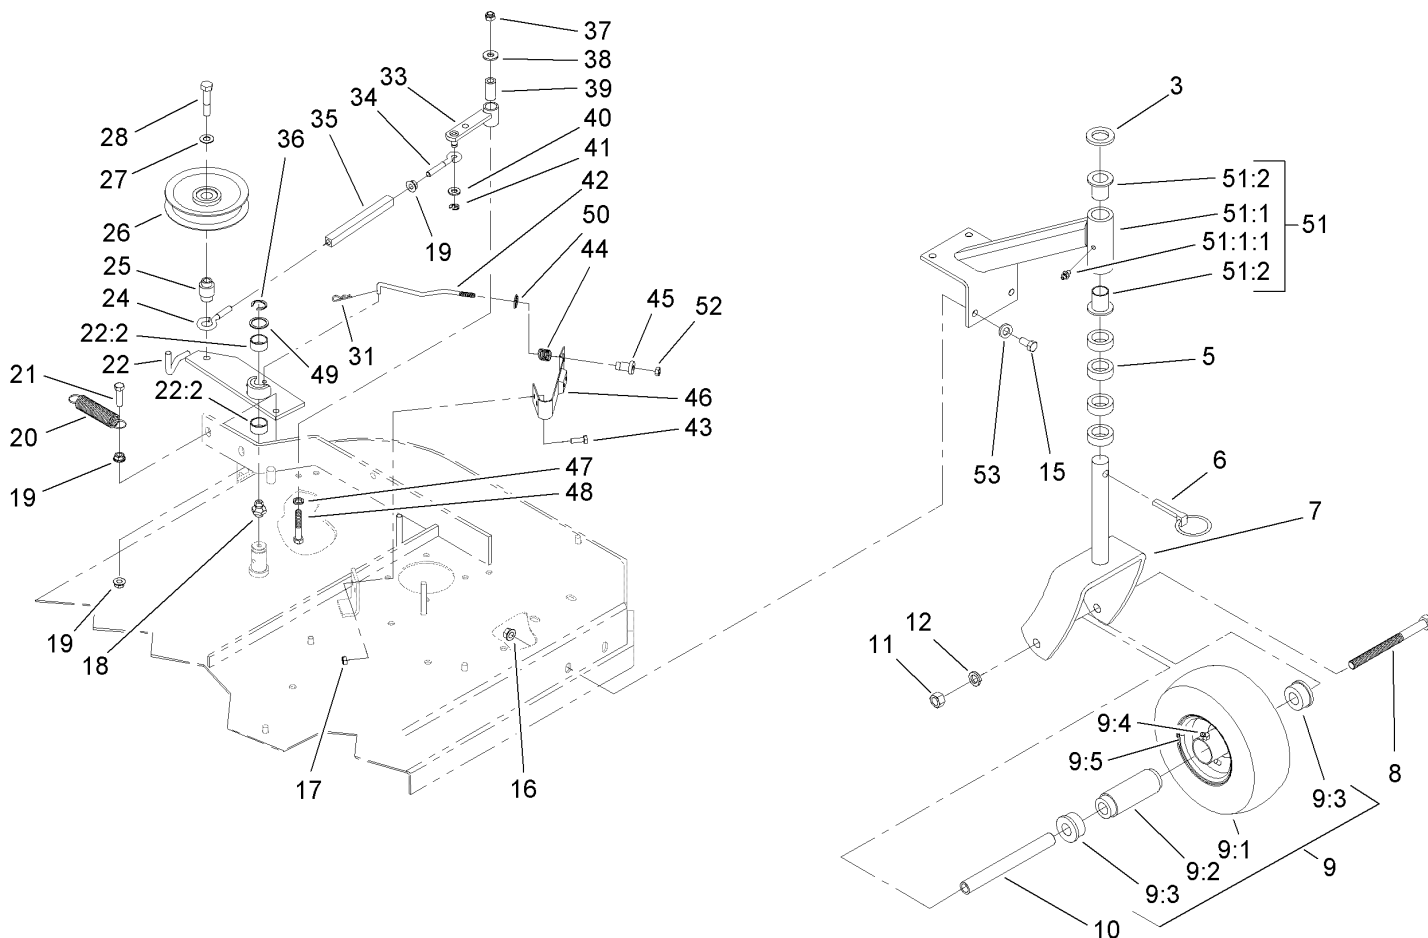


Idler Arm and Caster Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
①51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

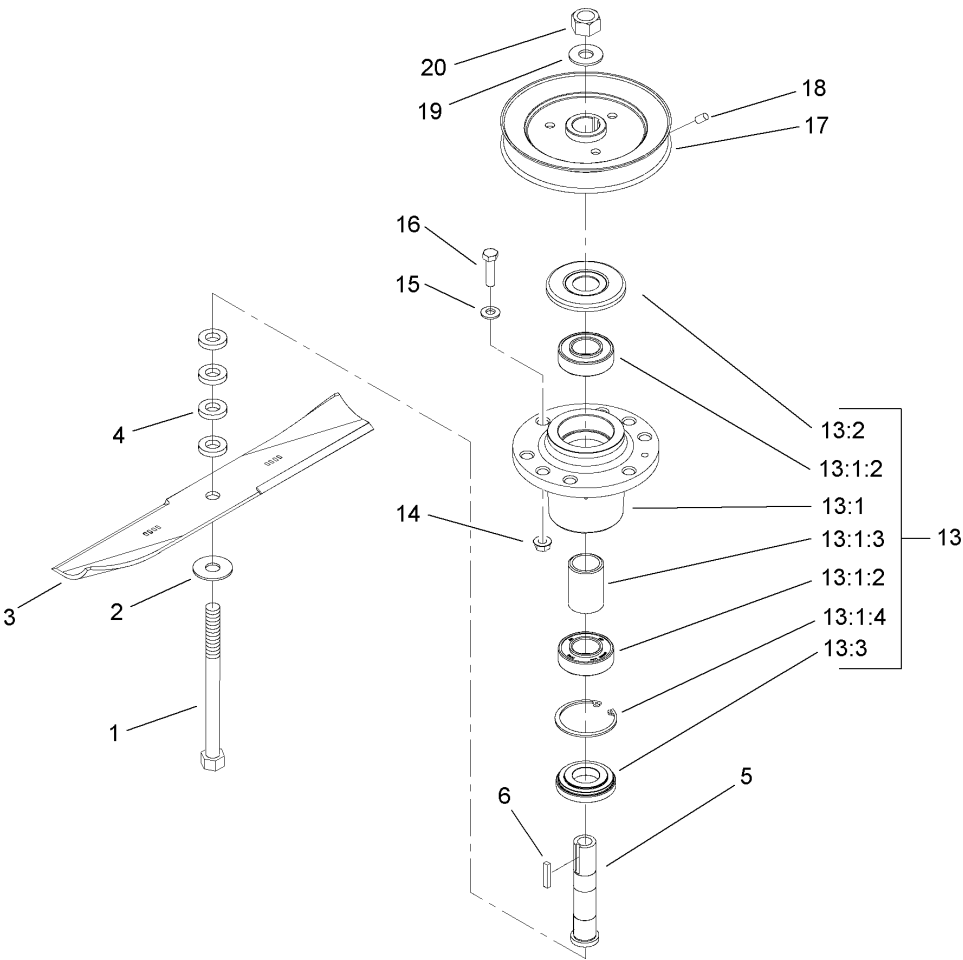

Spindle and Blade Assembly


Ref	Part No.	Qty.	Description				
1	1-800861	2	Screw-Cap, HH				
2	1-513208	2	Washer-Spring				
23	103-2527	2	Blade-Notched				
3	103-2507	2	Blade-Lift, Low				
4	1-323539	8	Spacer				
5	1-323529	2	Tube-Spindle, Short				
6	1-807267	2	Key				
13	107-4065	2	Cutter Housing ASM				
13:1		1	Housing-Cutter				
13:1:2	103-2477	2	Bearing-Ball				
13:1:3	103-2534	1	Spacer-Bearing				
13:1:4	32120-8	1	Ring-Snap				
13:2	103-1330	1	Guard-Bearing, Top				
13:3	103-2535	1	Spacer-Guard, Bottom				
14	32128-20	8	Nut-HF				
15	1-303334	8	Washer-Spring				
16	322-6	8	Screw-HH				
17	1-403183	2	Sheave				
18	1-803310	2	Screw-Set				
19	1-323339	2	Washer-Retainer, Sheave				
20	3219-6	2	Nut-Hex				

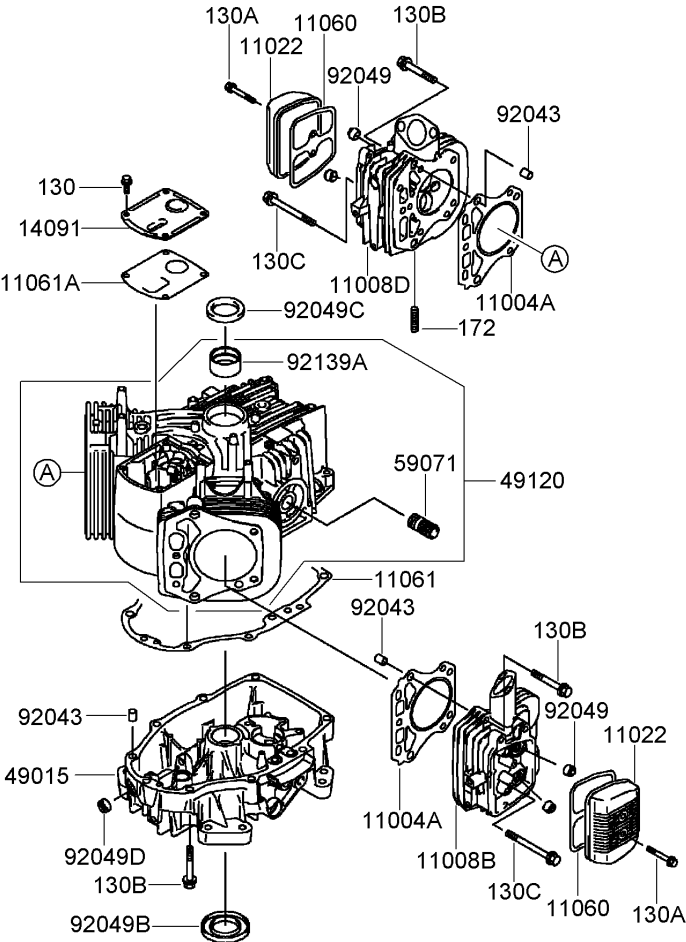

Cylinder and Crankcase Assembly


Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④ 11004A	11004-7018	2	Gasket-Head				
④ 11008B	11008-7021	1	Head-Cylinder, No. 2				
④ 11008D	11008-7022	1	Head-Cylinder, No. 1				
④ 11022	11022-7003	2	Case-Rocker				
④ 11060	11060-7001	2	Gasket-Case, Rocker				
④ 11061	11061-7007	1	Gasket-Cover, Crankcase				
④ 11061A	11061-7008	1	Gasket-Breather				
④ 14091	14091-7007	1	Cover				
④ 49015	49015-7032	1	Cover-Crankcase				
④ 49120	49120-7015	1	Crankcase				
④ 59071	59071-2079	1	Joint				
④ 92043	92043-7001	6	Pin				
④ 92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
④ 92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
④ 92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
④ 92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
④ 92139A	92139-7008	1	Bushing				
④ 130	130B0612	4	Bolt-Flanged (6X12)				
④ 130A	130B0640	4	Bolt-Flanged (6X40)				
④ 130B	130T0850	17	Bolt-Flanged (8X50)				
④ 130C	130T0875	2	Bolt-Flanged (8X75)				
④ 172	172G0818	4	Bolt-Stud (8X18)				

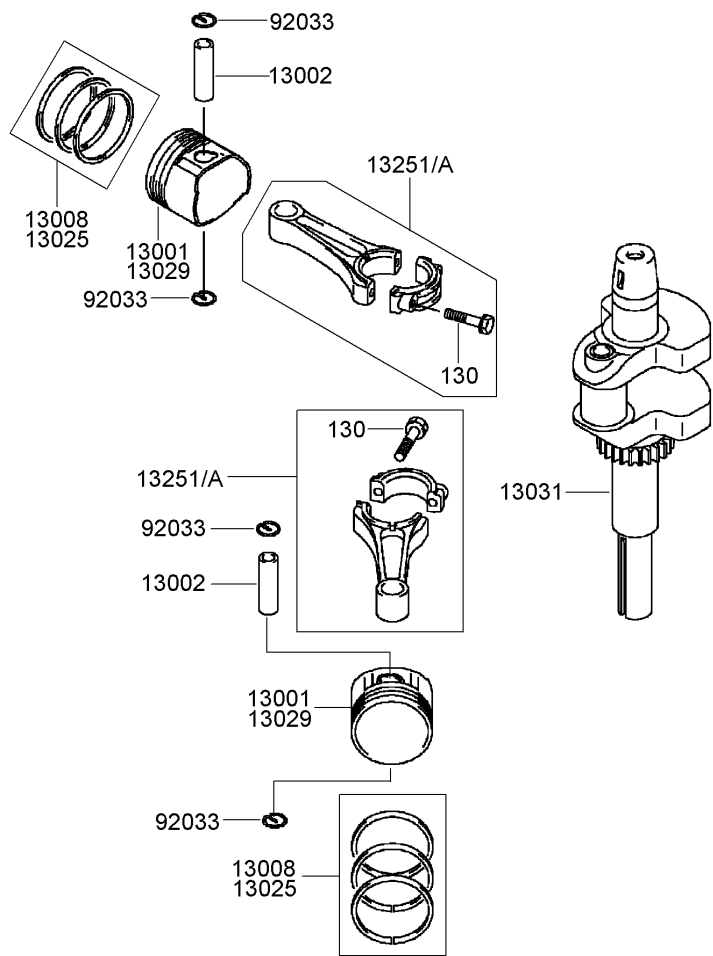


Piston and Crankshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④ 13001	13001-7009	2	Piston-Engine				
④ 13002	13002-7001	2	Pin-Piston				
④ 13008	13008-7001	2	Ring Set-Piston				
④ 13025	13025-7003	1	Ring Set-Piston (L 0.50)				
④ 13029	13029-7005	1	Piston-Engine (L 0.50)				
④ 13031	13031-7033	1	Crankshaft				
④ 13251	13251-7007	2	Connecting Rod ASM				
④ 13251A	13251-7008	2	Connecting Rod ASM (0.50)				
④ 92033	92033-7005	4	Ring-Snap				
④ 130	130G0630	4	Bolt-Flanged (6X30)				

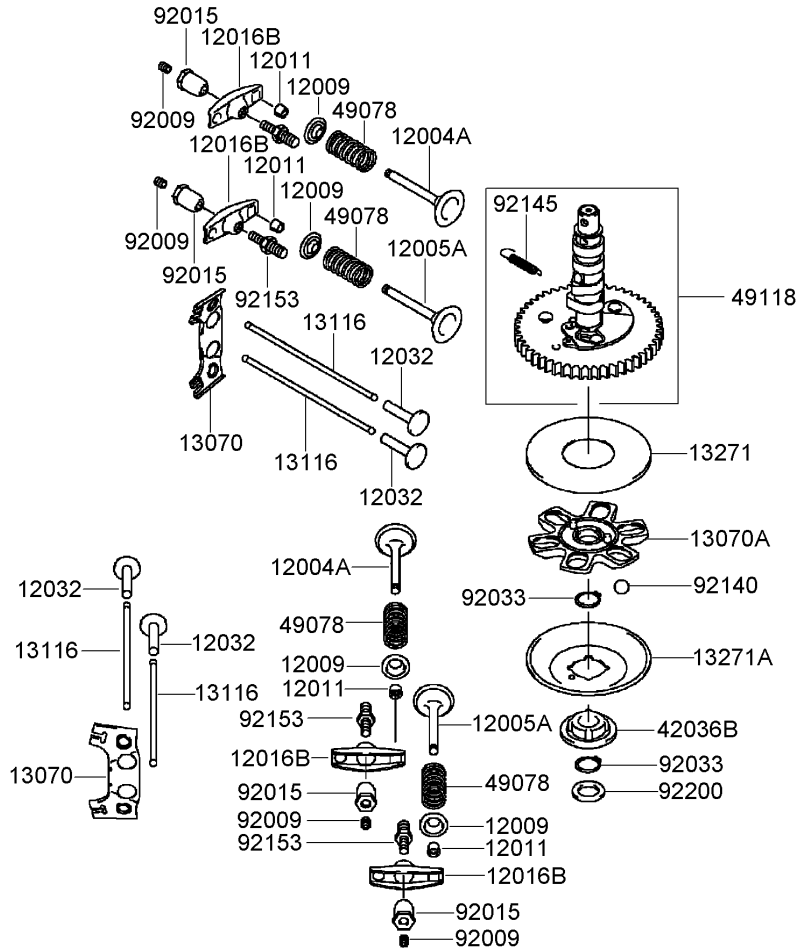


Valve and Camshaft Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④12004A	12004-7005	2	Valve-Intake				
④12005A	12005-7006	2	Valve-Exhaust				
④12009	12009-7001	4	Retainer-Spring, Valve				
④12011	12011-2056	8	Collet				
④12016B	12016-7008	4	Arm-Rocker				
④12032	12032-7001	4	Tappet				
④13070	13070-7001	2	Guide				
④13070A	13070-7004	1	Guide				
④13116	13116-2057	4	Rod-Push				
④13271	13271-7007	1	Plate				
④13271A	13271-7021	1	Plate-Governor				
④42036B	42036-7010	1	Sleeve				
④49078	49078-7001	4	Spring-Valve, Engine				
④49118	49118-7009	1	Camshaft				
④92009	92009-2341	4	Screw				
④92015	92015-2253	4	Nut				
④92033	92033-7001	2	Ring-Snap				
④92140	92140-7002	6	Ball				
④92145	92145-7001	1	Spring				
④92153	92153-7019	4	Bolt				
④92200	92200-7001	1	Washer				

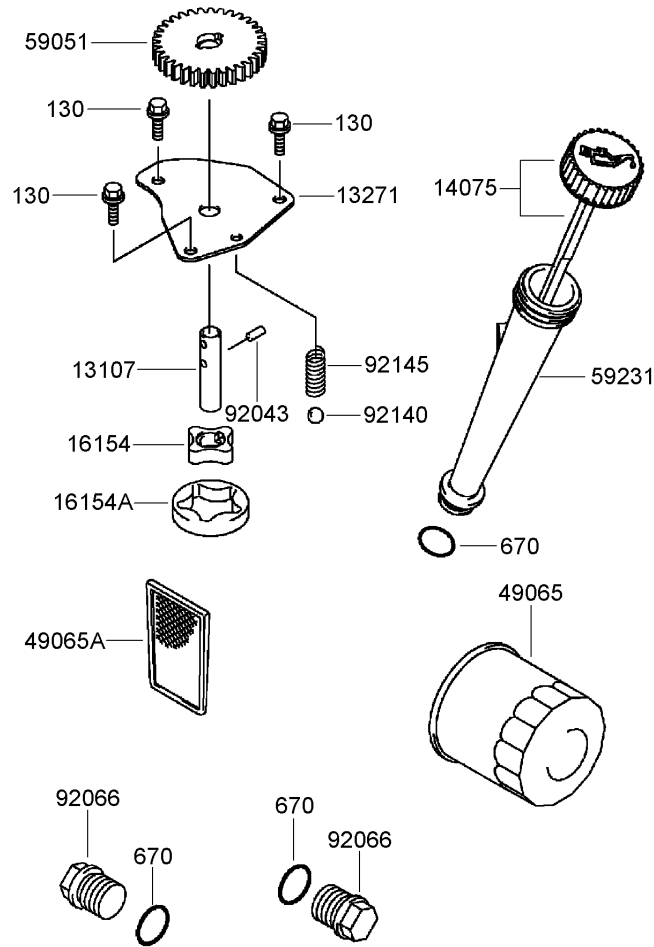


Lubrication Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④13107	13107-7009	1	Shaft				
④13271	13271-7017	1	Plate				
④14075	14075-7009	1	Cap ASM				
④16154	16154-2053	1	Rotor-Pump (In)				
④16154A	16154-2054	1	Rotor-Pump (Out)				
④49065	49065-2078	1	Filter-Oil				
④49065A	49065-7004	1	Filter-Oil				
④59051	59051-7011	1	Gear-Spur				
④59231	59231-7003	1	Filler				
④92043	92043-7003	2	Pin				
④92066	92066-7003	2	Plug				
④92140	92140-7003	1	Ball				
④92145	92145-7002	1	Spring				
④130	130B0612	3	Bolt-Flanged (6X12)				
④670	670D2016	3	O-Ring (16Mm)				

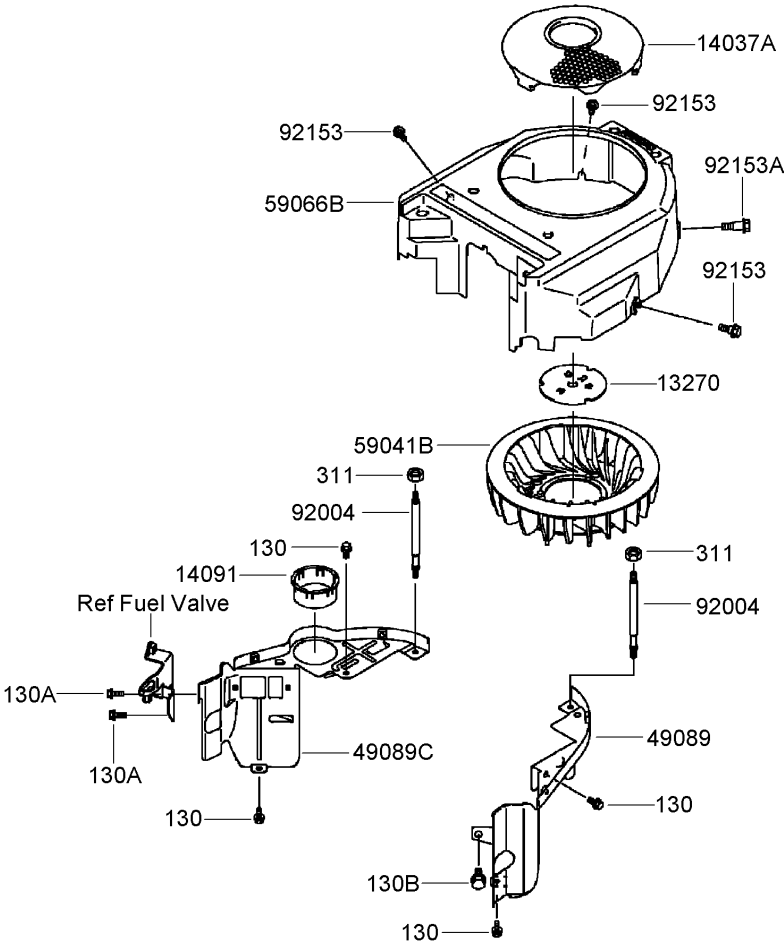


Cooling Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④ 13270	13270-7007	1	Plate				
④ 14037A	14037-7025-9H	1	Screen				
④ 14091	14091-7009	1	Cover				
④ 49089	49089-7044	1	Shroud-Engine				
④ 49089C	49089-7061	1	Shroud-Engine				
④ 59041B	59041-7012	1	Fan				
④ 59066B	59066-7036	1	Housing-Fan				
④ 92004	92004-7007	2	Stud				
④ 92153	92153-7007	3	Bolt				
④ 92153A	92153-7008	1	Bolt				
④ 130	130B0612	4	Bolt-Flanged (6X12)				
④ 130A	130B0616	2	Bolt-Flanged (6X16)				
④ 130B	130B0816	1	Bolt-Flanged (8X16)				
④ 311	311F0600	2	Nut-Hex (6Mm)				

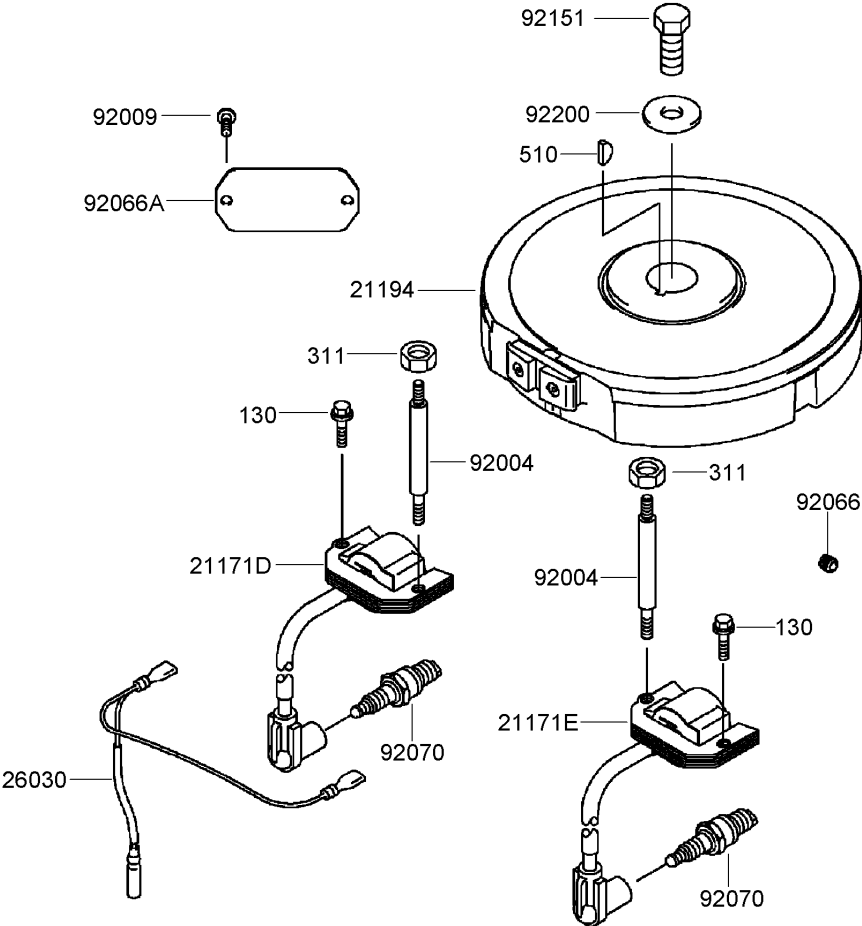


Electric Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④21171D	21171-7026	1	Coil-Assy-Ignition				
④21171E	21171-7027	1	Coil-Assy-Ignition				
④21194	21194-7013	1	Flywheel				
④26030	26030-7001	1	Harness				
④92004	92004-7008	2	Stud				
④92009	92009-2308	2	Screw				
④92066	92066-7002	1	Plug				
④92066A	92066-7005	1	Plug				
④92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
④92151	92151-2097	1	Bolt (12X30)				
④92200	92200-7002	1	Washer				
④130	130B0620	2	Bolt-Flanged (6X20)				
④311	311F0600	2	Nut-Hex (6Mm)				
④510	510A5100	1	Key-Woodruff				

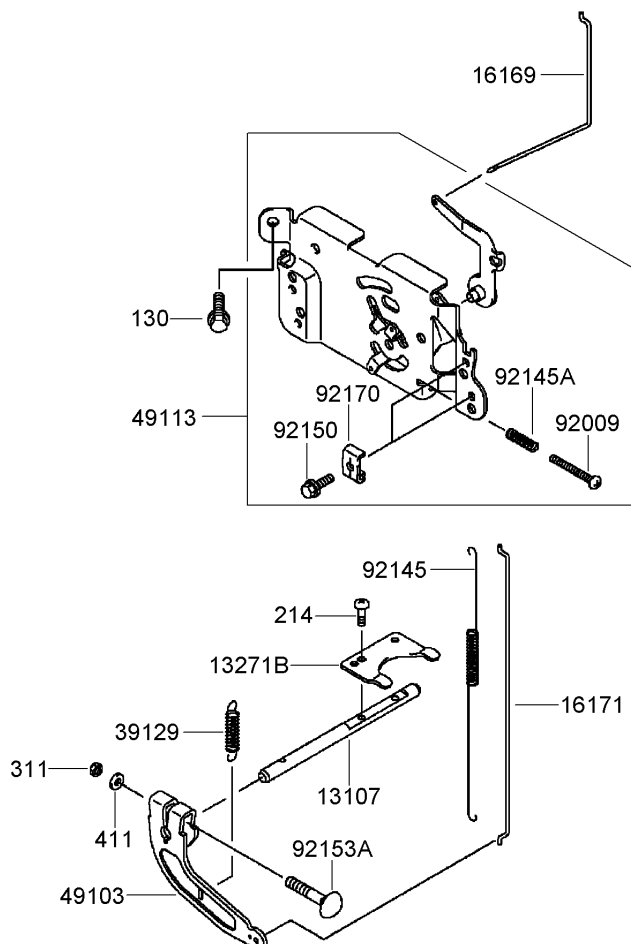

Control Equipment Assembly Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
④13107	13107-7010	1	Shaft				
④13271B	13271-7032	1	Plate				
④16169	16169-7012	1	Link-Choke				
④16171	16171-7007	1	Link				
④39129	39129-7003	1	Spring-Governor				
④49103	49103-7004	1	Arm-Governor				
④49113	49113-7024	1	Panel-Control				
④92009	92009-7007	1	Screw (4X35)				
④92145	92145-7003	1	Spring				
④92145A	92145-7005	1	Spring				
④92150	92150-2182	2	Bolt (5X18)				
④92153A	92153-7033	1	Bolt (6X35)				
④92170	92170-7001	2	Clamp				
④130	130B0612	2	Bolt-Flanged (6X12)				
④214	214B0408	2	Screw-Pan (4X8)				
④311	311B0600	1	Nut-Hex (6Mm)				
④411	411B0600	1	Washer-Plain (6Mm)				

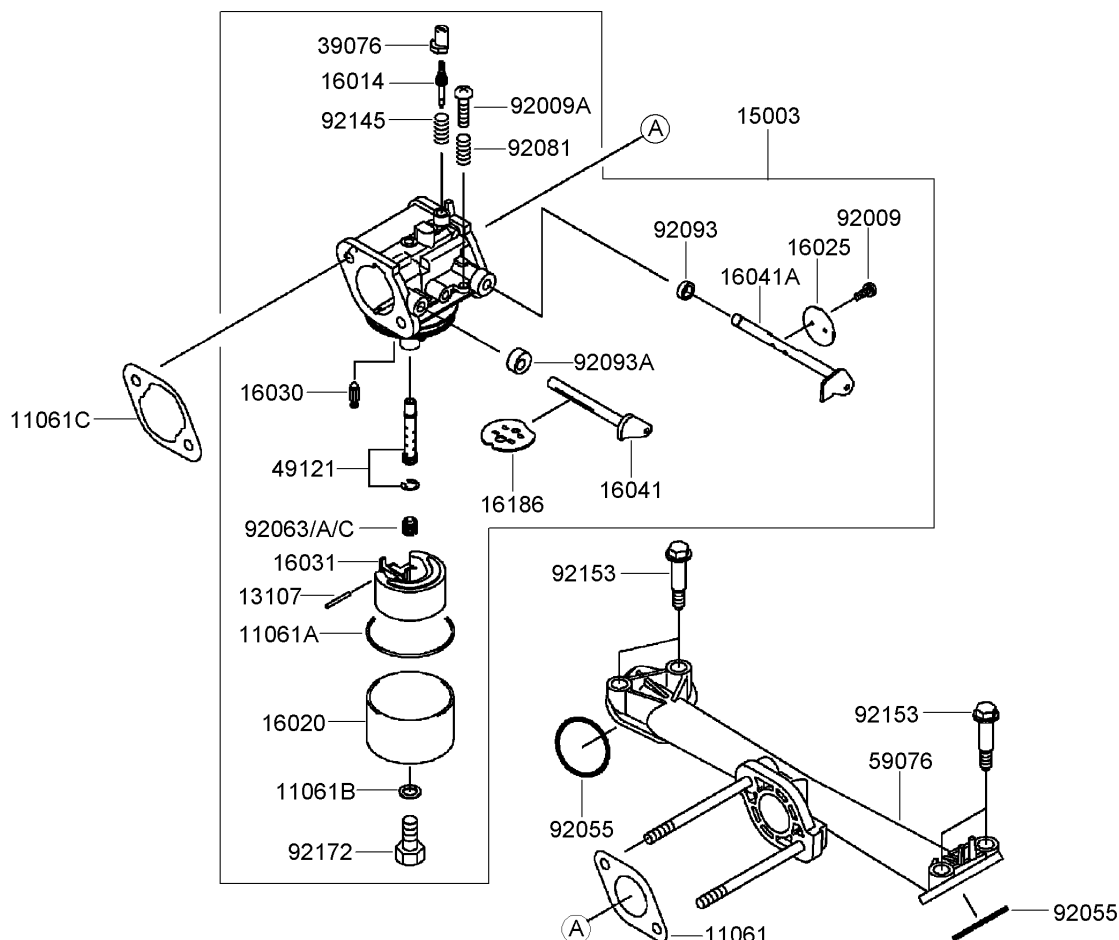

Carburetor Assembly Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
④ 11061	11061-7004	1	Gasket-Insulator
④ 11061A	11061-7009	1	Gasket-Chamber
④ 11061B	11061-7010	1	Gasket-Screw
④ 11061C	11061-7018	1	Gasket-Cleaner, Air
④ 13107	13107-7018	1	Shaft
④ 15003	15003-7061	1	Carburetor ASM
④ 16014	16014-7002	1	Screw-Pilot
④ 16020	16020-7003	1	Chamber-Float
④ 16025	16025-7006	1	Valve-Throttle
④ 16030	16030-7003	1	Valve-Float
④ 16031	16031-7002	1	Float
④ 16041	16041-7016	1	Shaft-Choke, Carburetor
④ 16041A	16041-7018	1	Shaft-Throttle, Carburetor
④ 16186	16186-7002	1	Choke Valve ASM
④ 39076	39076-7001	1	Limiter
④ 49121	49121-7001	1	Nozzle-Main
④ 59076	59076-7005	1	Manifold-Intake
④ 92009	92009-2083	2	Screw
④ 92009A	92009-2349	1	Screw
④ 92055	92055-7007	2	O-Ring (I D 31)
④ 92063	92063-7026	1	Jet-Main, No. 88
④ 92063A	92063-7028	1	Jet-Main, No. 85
④ 92063C	92063-7029	1	Jet-Main, No. 82
④ 92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
④ 92093	92093-2100	1	Seal
④ 92093A	92093-7003	1	Seal
④ 92145	92145-7015	1	Spring
④ 92153	92153-7009	4	Bolt
④ 92172	92172-7002	1	Screw

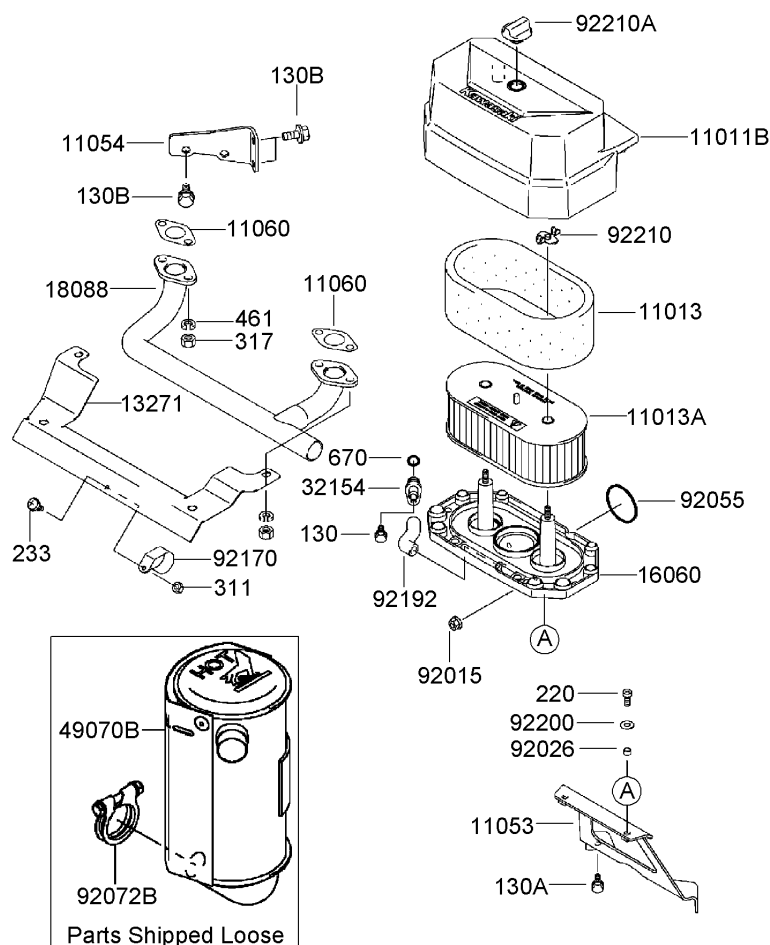

Air Filter and Muffler Assembly Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
④ 11011B	11011-7045	1	Case-Filter, Air
④ 11013	11013-7025	1	Element-Filter, Air
④ 11013A	11013-7031	1	Element-Filter, Air
④ 11053	11053-7022	1	Bracket
④ 11054	11054-7002-9H	1	Bracket
④ 11060	11060-7021	2	Gasket-Muffler
④ 13271	13271-7022	1	Plate
④ 16060	16060-7016	1	Pipe-Intake
④ 18088	18088-7001	1	Pipe-Exhaust
④ 32154	32154-7006	1	Pipe
④ 49070B	49070-7021	1	Muffler
④ 92015	92015-1193	2	Nut
④ 92026	92026-7001	2	Spacer (6.2X7.9X5)
④ 92055	92055-7015	1	O-Ring
④ 92072B	92072-7012	1	Band
④ 92170	92170-7002	1	Clamp
④ 92192	92192-7010	1	Tube
④ 92200	92200-2070	2	Washer
④ 92210	92210-7004	2	Nut
④ 92210A	92210-7019	1	Nut
④ 130	130B0610	1	Bolt-Flanged (6X10)
④ 130A	130B0612	2	Bolt-Flanged (6X12)
④ 130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
④ 220	220B0614	2	Screw-Pan (Cross) (6X14)
④ 233	233B0416	1	Screw (4X16)
④ 311	311B0400	1	Nut-Hex (4Mm)
④ 317	317R0800	4	Nut-Hex (8Mm)
④ 461	461F0800	4	Washer-Spring (8Mm)
④ 670	670B2010	1	O-Ring (10Mm)

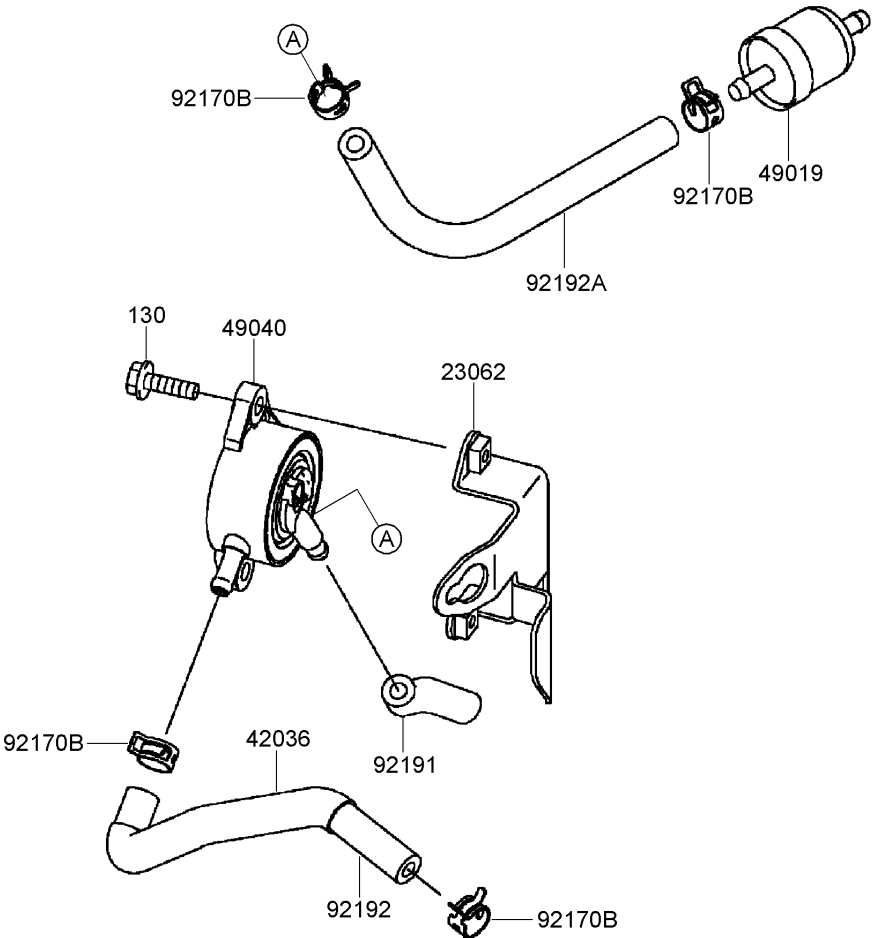

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④ 23062	23062-7004-9H	1	Bracket				
④ 42036	42036-7012	1	Sleeve				
④ 49019	49019-7001	1	Filter-Fuel				
④ 49040	49040-7001	1	Pump-Fuel				
④ 92170B	92170-2088	4	Clamp				
④ 92191	92191-7002	1	Tube				
④ 92192	92192-7035	1	Tube (6.35X12.7X170)				
④ 92192A	92192-7037	1	Tube (6.35X12.7X160)				
④ 130	130B0620	2	Bolt-Flanged (6X20)				

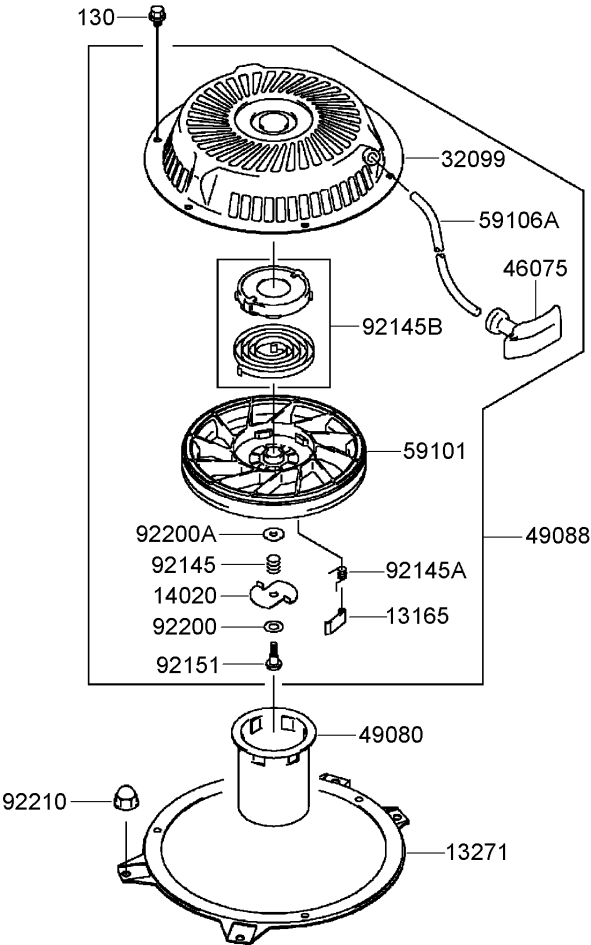

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④ 13165	13165-7001	2	Pawl-Starter, Recoil				
④ 13271	13271-7003-9H	1	Plate				
④ 14020	14020-7001	1	Retainer				
④ 32099	32099-7002	1	Case-Starter, Recoil				
④ 46075	46075-7001	1	Grip-Starter, Recoil				
④ 49080	49080-7001	1	Pulley-Starting				
④ 49088	49088-7013	1	Starter-Recoil				
④ 59101	59101-7001	1	Reel-Starter, Recoil				
④ 59106A	59106-7005	1	Rope				
④ 92145	92145-7006	1	Spring				
④ 92145A	92145-7007	2	Spring				
④ 92145B	92145-7008	1	Spring				
④ 92151	92151-7008	1	Bolt				
④ 92200	92200-7004	1	Washer				
④ 92200A	92200-7005	1	Washer				
④ 92210	92210-0003	4	Nut				
④ 130	130B0608	3	Bolt-Flanged (6X8)				

Attachments and Accessories

For 30692 - ProLine Walk-Behind Mower, Fixed Deck T-Bar Gear with 32in Cutting Unit

Product Name	Model/Part
Atomic Blade and Decal Assembly	104-8595
Blade-16.25 Inch (6 Pack)	108-1119
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES

