



TimeCutter™ Z5040 Riding Mower

Model No. 74374 - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Valve and Camshaft Assembly Kawasaki FH641V-AS31	 18
Deck Lift and Seat Support Assembly	 4	Lubrication Equipment Assembly Kawasaki FH641V-AS31	 19
Seat Assembly	 5	Cooling Equipment Assembly Kawasaki FH641V-AS31	 20
Control Assembly	 6	Electric Equipment Assembly Kawasaki FH641V-AS31	 21
Hydro Drive Assembly	 7	Control Equipment Assembly Kawasaki FH641V-AS31	 22
RH Hydro No. 110-6771 Assembly	 8	Carburetor Assembly Kawasaki FH641V-AS31	 23
LH Hydro No. 110-6770 Assembly	 9	Air Filter and Muffler Assembly Kawasaki FH641V-AS31	 24
Engine and Clutch Assembly	 10	Fuel Tank and Valve Assembly Kawasaki FH641V-AS31	 25
Styling and Fuel System Assembly	 11	Starter Assembly Kawasaki FH641V-AS31	 26
50 Inch Deck and Side Discharge Assembly	 12	Label Assembly Kawasaki FH641V-AS31	 27
50 Inch Deck Decal Assembly	 13	Attachments and Accessories List	 28
50 Inch Deck Spindle and Belt Drive Assembly	 14		
Electrical Assembly	 15		
Cylinder and Crankcase Assembly Kawasaki FH641V-AS31	 16		
Piston and Crankshaft Assembly Kawasaki FH641V-AS31	 17		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head


Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Kawasaki dealer

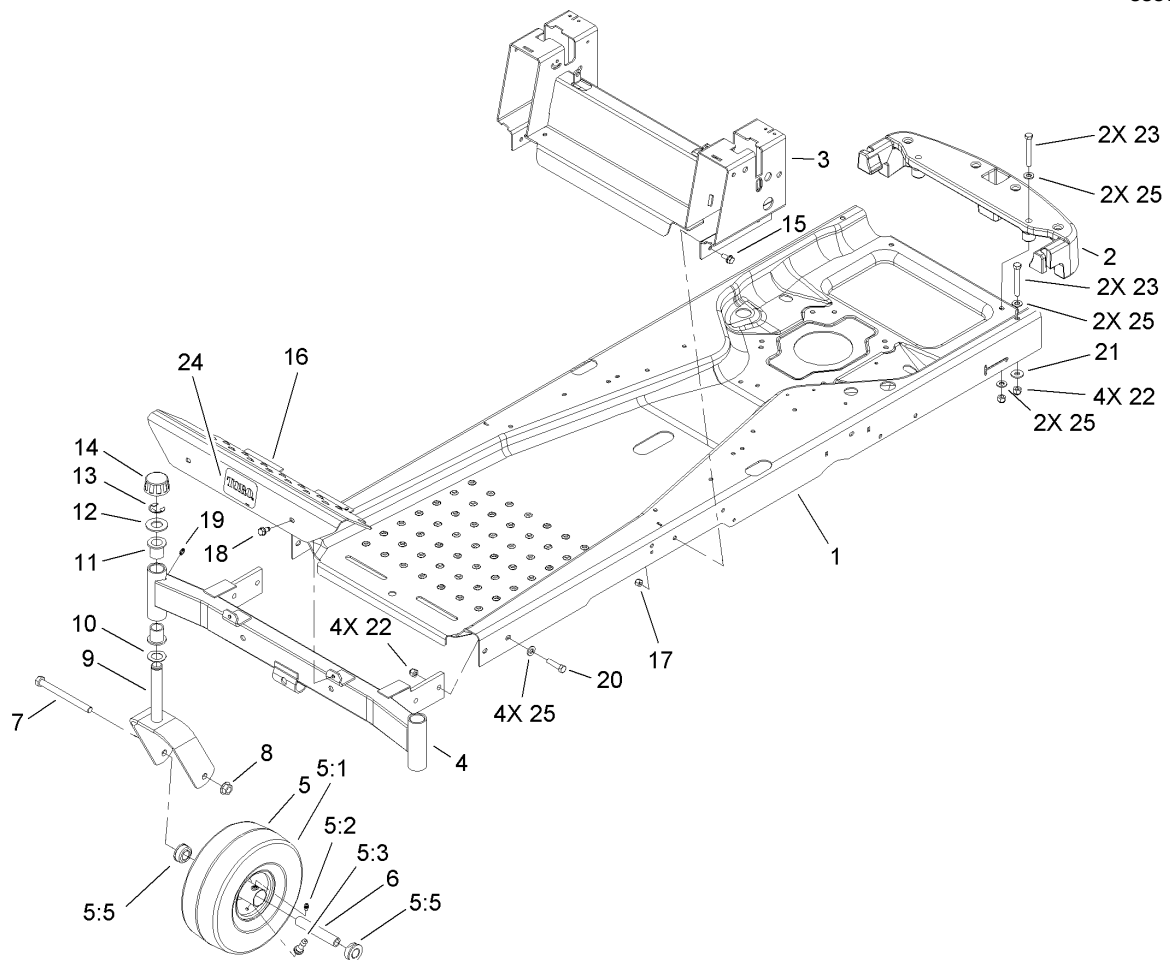

Frame Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-6780-01	1	Frame	20	323-8	4	Screw-HH
2	110-6899-03	1	Bumper-Rear	21	80-6990	2	Washer-Hardened
3	110-6872-03	1	Seat Control ASM	22	3296-39	8	Nut-Lock, NI
4	108-7882-01	1	Front Axle ASM	23	323-13	4	Screw-HH
5	110-6785	2	Castor Wheel ASM	24	99-2385	1	Decal
5:1	110-6791	1	Tire-Smooth	25	3256-24	10	Washer-Flat
5:2	302-5	1	Fitting-Grease				
5:3	232-27	1	Stem-Valve				
5:5	114-1640	2	Bushing-Flange				
5:99	93-4244	1	Tube-Inner (W/Valve)				
6	104-3667	2	Spanner-Wheel				
7	325-22	2	Screw-HH				
8	32128-23	2	Nut-HF				
9	108-7851-01	2	Caster Fork ASM				
10	110-6767	2	Washer-Thrust				
11	1-303514	4	Bearing-Flanged				
12	104-8076	2	Washer				
13	32151-103	2	Ring-Snap				
14	61-9780	2	Cap-Hub				
15	3234-47	7	Screw-HHF				
16	108-7855-03	1	Footrest				
17	3296-29	7	Nut-Lock, NI				
18	32104-32	2	Screw-HWH				
19	302-5	2	Fitting-Grease				

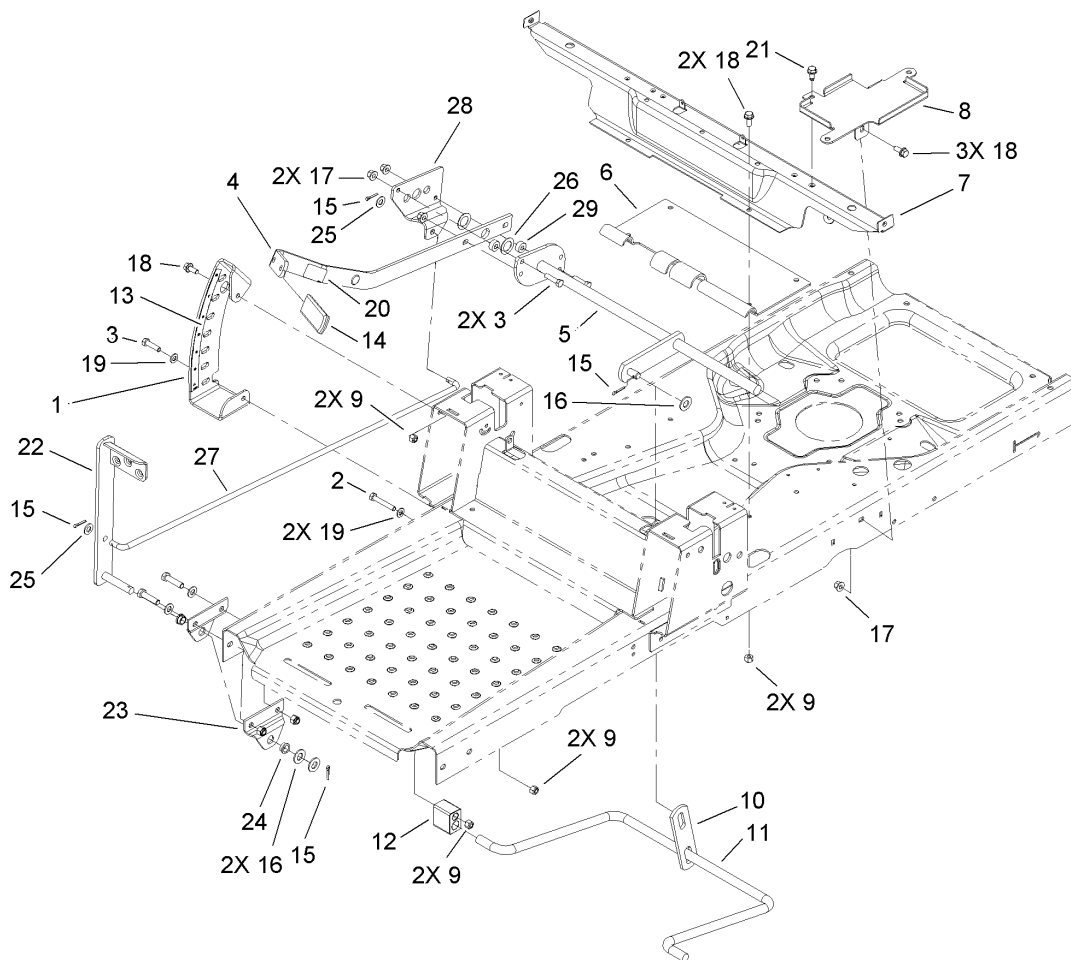

Deck Lift and Seat Support Assembly


Ref	Part No.	Qty.	Description
1	112-4027-03	1	Sector-HOC
2	322-10	2	Screw-HH
3	322-6	3	Screw-HH
4	112-3960-03	1	Lift Arm ASM
5	108-7841-03	1	Lift Lever ASM
6	110-6800-03	1	Plate-Lift
7	110-6805-03	1	Bracket-Seat/Pods
8	110-1937-03	1	Tray-Battery
9	3296-29	8	Nut-Lock, NI
10	108-7840	1	Link-Lift
11	108-7839	1	Arm-Lift, Rear
12	108-7845	2	Block-Pivot
13	112-9802	1	Decal-HOC
14	105-3450	1	Grip-Lever, Lift
15	3272-10	4	Pin-Cotter
16	3256-26	3	Washer-Flat
17	3296-58	3	Nut-Lock, NI
18	3234-47	6	Screw-HHF
19	3256-23	3	Washer-Flat
20	106-8743	1	Decal
21	32104-32	1	Screw-HWH
22	112-4018-03	1	Pedal ASM
23	112-3954-03	2	Bracket-Footlift
24	256-156	2	Bushing-Flange

Ref	Part No.	Qty.	Description
25	3256-24	2	Washer-Flat
26	3-6498	2	Washer-Thrust
27	112-3958	1	Rod-Lift
28	112-3959	1	Plate-Footlift
29	112-3961	2	Spacer

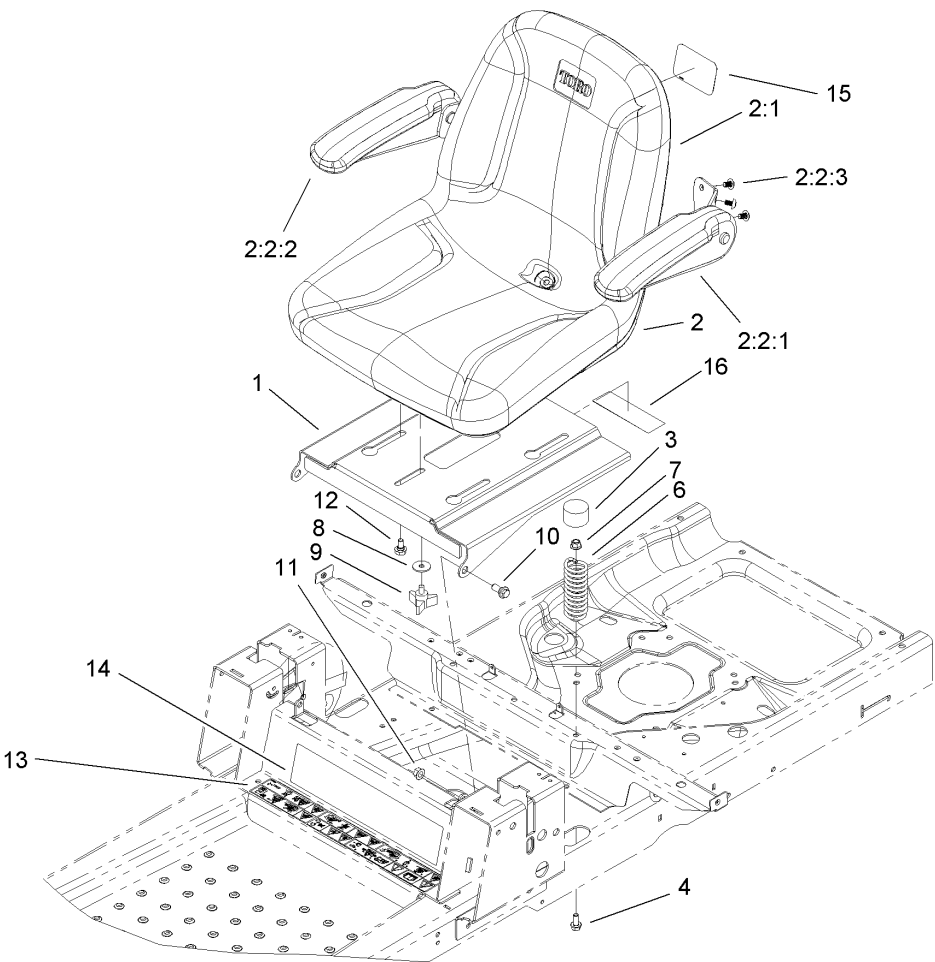

Seat Assembly


Ref	Part No.	Qty.	Description				
1	110-6679-03	1	Base-Seat				
2	110-6776	1	18 Inch Seat ASM				
2:1	110-6772	1	Seat-18 Inch				
1 2 2:2		1	Armrest Kit				
2:2:1	110-6569	1	LH Armrest Kit				
2:2:2	110-6570	1	RH Armrest Kit				
2:2:3	108-6179	6	Screw-HSBH				
3	701178	2	Cap-Protector				
4	3234-47	2	Screw-HHF				
6	92-7054	2	Spring-Compression				
7	3296-58	2	Nut-Lock, NI				
8	5-4460	1	Washer-Pivot				
9	92-9674	1	Knob				
10	94-7582	2	Bolt-Shoulder				
11	32128-21	2	Nut-HF				
12	37-8771	4	Bolt-Shoulder				
13	110-6825	1	Decal-Danger				
14	112-9766	1	Decal-Timecutter				
15	99-2385	1	Decal				
16	106-8717	1	Decal-Service				

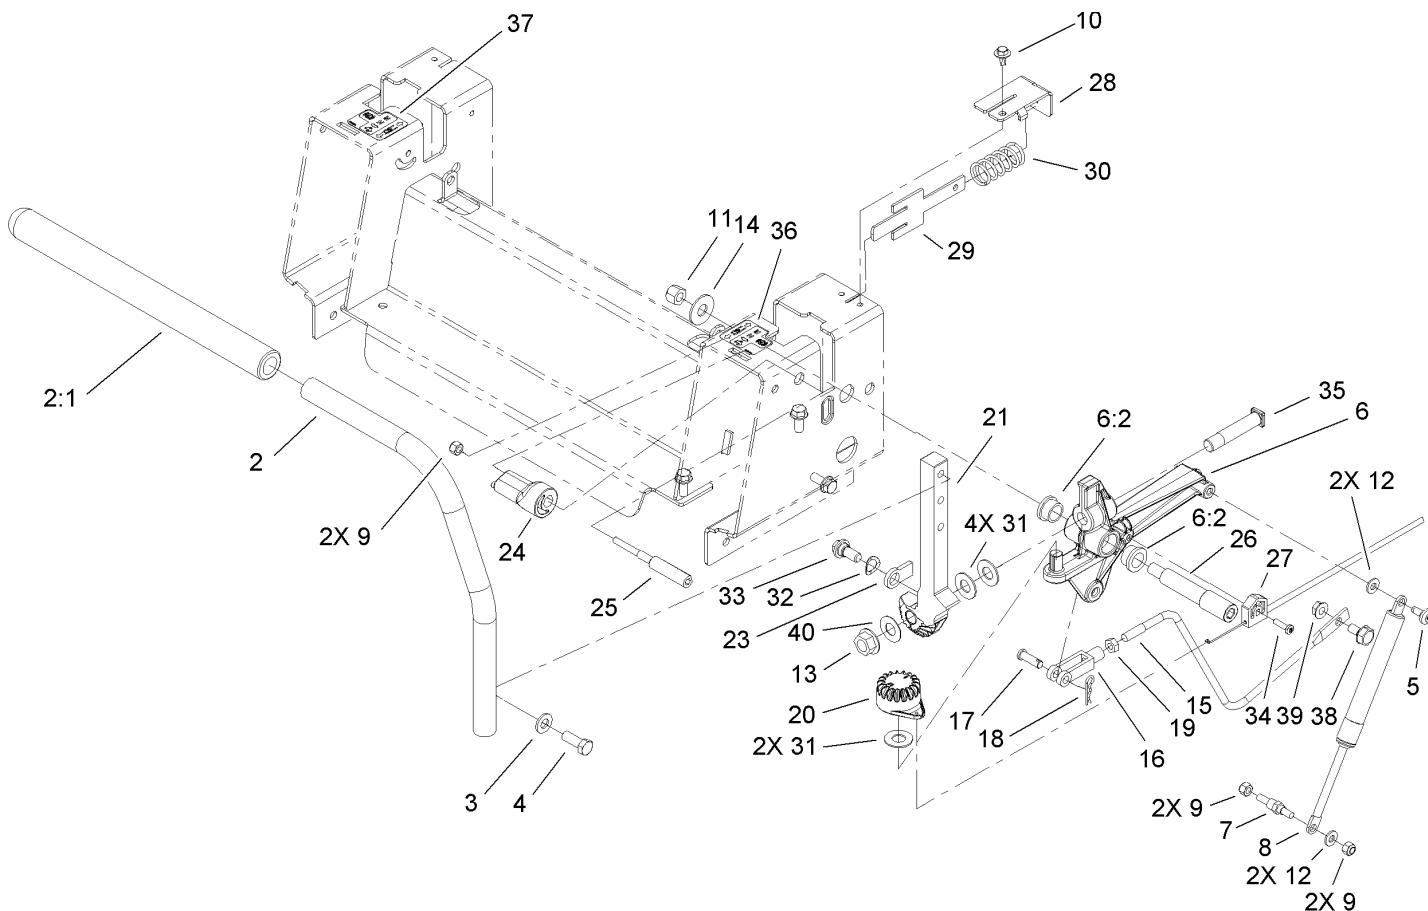

Control Assembly


Ref	Part No.	Qty.	Description
①1	110-6814	1	RH Handle ASM
①1:1	108-6187	1	Grip
2	110-6815	1	LH Handle ASM
2:1	108-6187	1	Grip
3	3256-24	4	Washer-Flat
4	323-6	4	Screw-HH
5	112-4004	2	Screw-Shoulder
6	110-6828	2	Activator Arm ASM
6:2	105-3455	2	Bushing
7	110-6810	2	Stud-Damper
8	103-2913	2	Damper-Control, Motion
9	3296-42	6	Nut-Lock, NI
10	46-8560	2	Screw-HHF
11	3296-48	2	Nut-Lock, NI
12	3256-22	4	Washer-Flat
13	32128-23	2	Nut-HF
14	3256-5	2	Washer-Flat
15	110-6693	2	Link-Hydro
16	1-303105	2	Yoke-Adjustable
17	1-808280	2	Pin-Clevis
18	1-806003	2	Pin-Hair
19	3220-2	2	Nut-Jam
20	110-6845	2	Gear-Control
21	110-6783	1	Arm-Actuator, LH

Ref	Part No.	Qty.	Description
①22	110-6782	1	Arm-Actuator, RH
23	110-6856	2	Tab-Stop
24	110-6873	2	Eccentric
25	110-6874	2	Screw-Eccentric
26	110-6875	2	Bolt-Shoulder
27	110-6858	2	Cable-Brake, Parking
28	110-6751	2	Bracket-Return
29	110-6750	2	Plate-Return
30	110-6752	2	Spring
31	110-6894	6	Washer-Pivot
32	3290-221	2	Washer-Spring
33	94-7582	2	Bolt-Shoulder
34	110-0863	2	Screw-Torx
35	110-6784	2	Bolt-Shoulder
36	112-9750	1	Decal-Contol Lever, LH
37	112-9751	1	Decal-Control Lever, RH
38	37-8771	2	Bolt-Shoulder
39	3296-58	2	Nut-Lock, NI
40	112-9771	2	Washer-Teflon

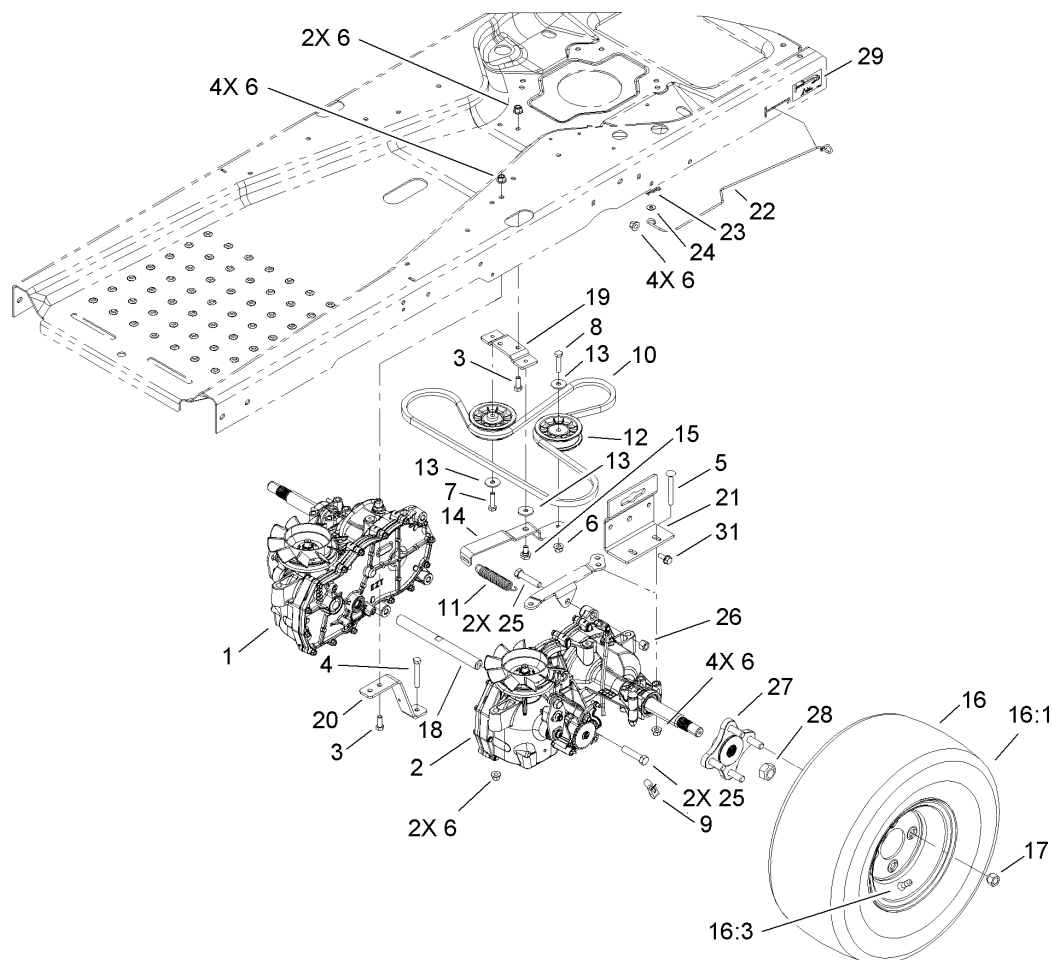

Hydro Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-6771	1	Hydro-RH	22	110-6787	2	Rod-Bypass
2	110-6770	1	Hydro-LH	23	1-806003	2	Pin-Hair
3	322-4	2	Screw-HH	24	3256-22	2	Washer-Flat
4	322-11	2	Screw-HH	25	324-8	4	Screw-HH
5	3230-9	4	Screw-CARR	26	3296-48	2	Nut-Lock, NI
6	3296-58	17	Nut-Lock, NI	27	112-3979	2	Hub ASM
7	322-6	1	Screw-HH	28	112-3982	2	Nut-Lock
8	322-7	1	Screw-HH	29	110-6680	1	Decal-Transport, LH
9	110-6677	2	Clip-Spring	30	110-6690	1	Decal-Transport, RH
10	110-6774	1	V-Belt	31	3234-47	8	Screw-HHF
11	63-1590	1	Spring-Idler				
12	110-6775	2	Pulley-Idler				
13	5-4460	3	Washer-Pivot				
14	110-1925	1	Arm-Idler				
15	37-8771	1	Bolt-Shoulder				
16	110-6883	2	Wheel And Tire ASM				
16:1	110-6887	1	Tire				
16:3	232-27	1	Stem-Valve				
16:99	232-37	1	Tube				
17	242-50	8	Nut-Lug				
18	110-6807	1	Shaft-Cross				
19	110-1926	1	Plate-Pivot				
20	110-6806-03	2	Strap-Torque				
21	110-6878-03	2	Support-Hydro				

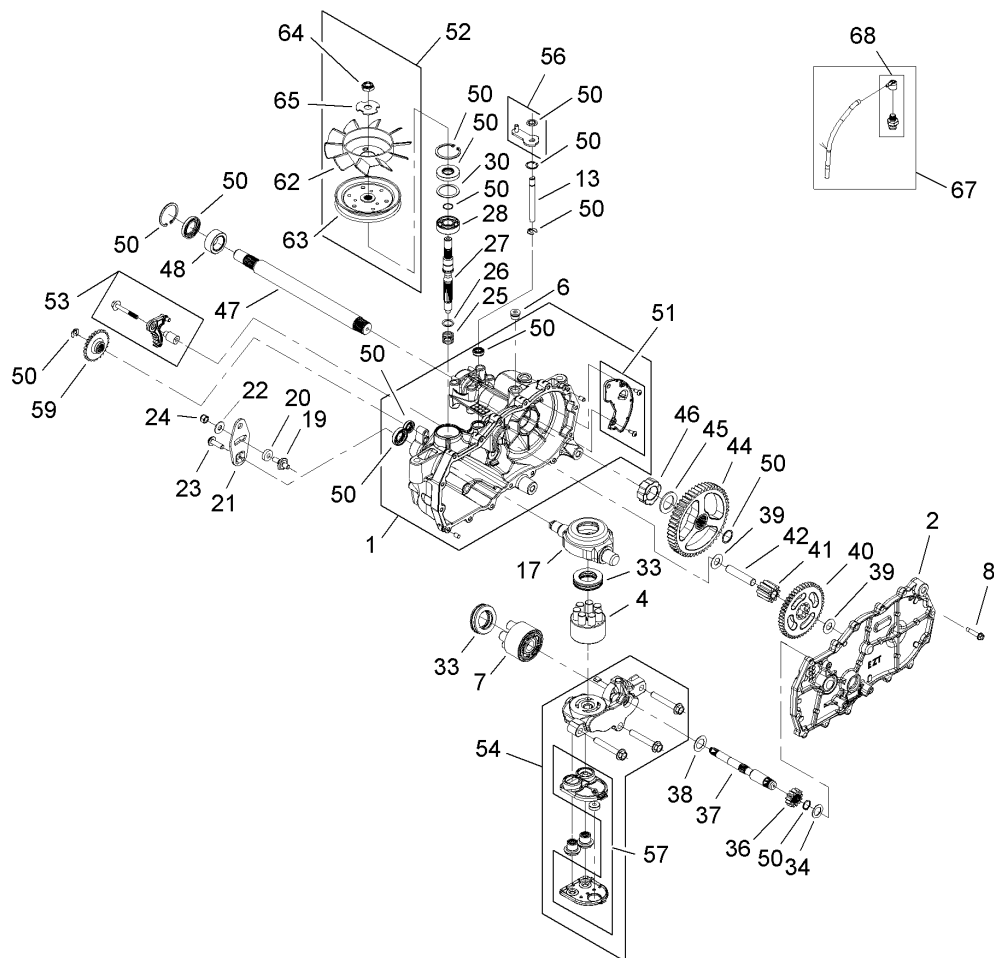

RH Hydro No. 110-6771 Assembly

Ref	Part No.	Qty.	Description
1	114-1630	1	RH Main Housing ASM
2	114-1631	1	RH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor


Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8697	1	RH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9861	1	RH Center Section Filter Kit
55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM



LH Hydro No. 110-6770 Assembly


Ref	Part No.	Qty.	Description
1	114-1636	1	LH Main Housing ASM
2	114-1637	1	LH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor

Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8687	1	LH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9862	1	LH Center Section Filter Kit
55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

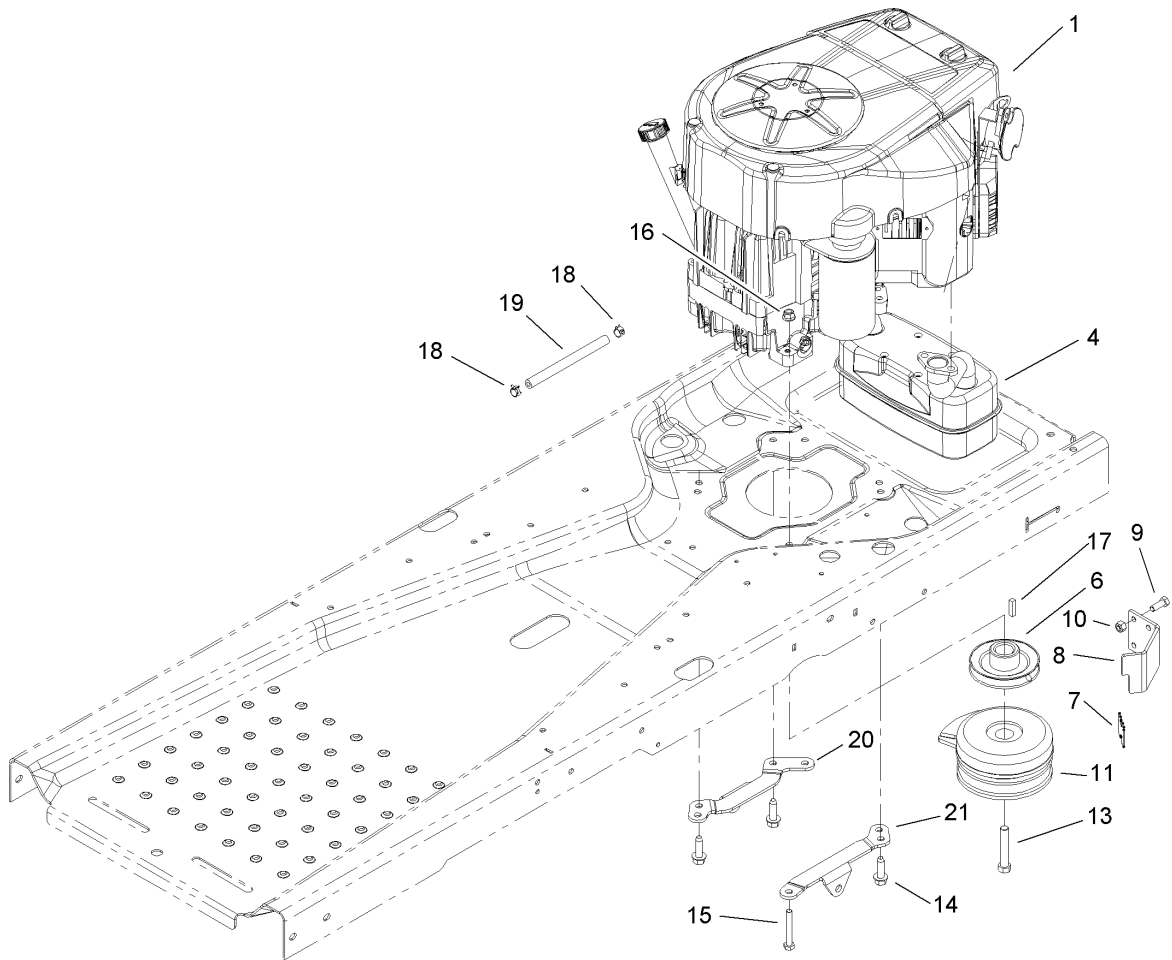

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description				
1		1	Engine-Kawasaki, FH641V-As31-R				
4	112-4020	1	Muffler-Kawasaki Twin				
6	110-6758	1	Pulley-Engine				
7	112-3974	1	Bumper				
8	110-6896	1	Stop-Clutch				
9	322-4	2	Screw-HH				
10	3296-29	2	Nut-Lock, NI				
11	110-6766	1	Clutch-Electric, PTO				
13	3212-11	1	Screw-HH				
14	32144-109	3	Screw				
15	322-9	1	Screw-HH				
16	3296-58	1	Nut-Lock, NI				
17	5-7280	1	Key				
18	2412-98	2	Clamp				
19	112-9836	1	Hose-Fuel				
20	110-6798	1	Support-Hydro, RH				
21	110-6799	1	Support-Hydro, LH				

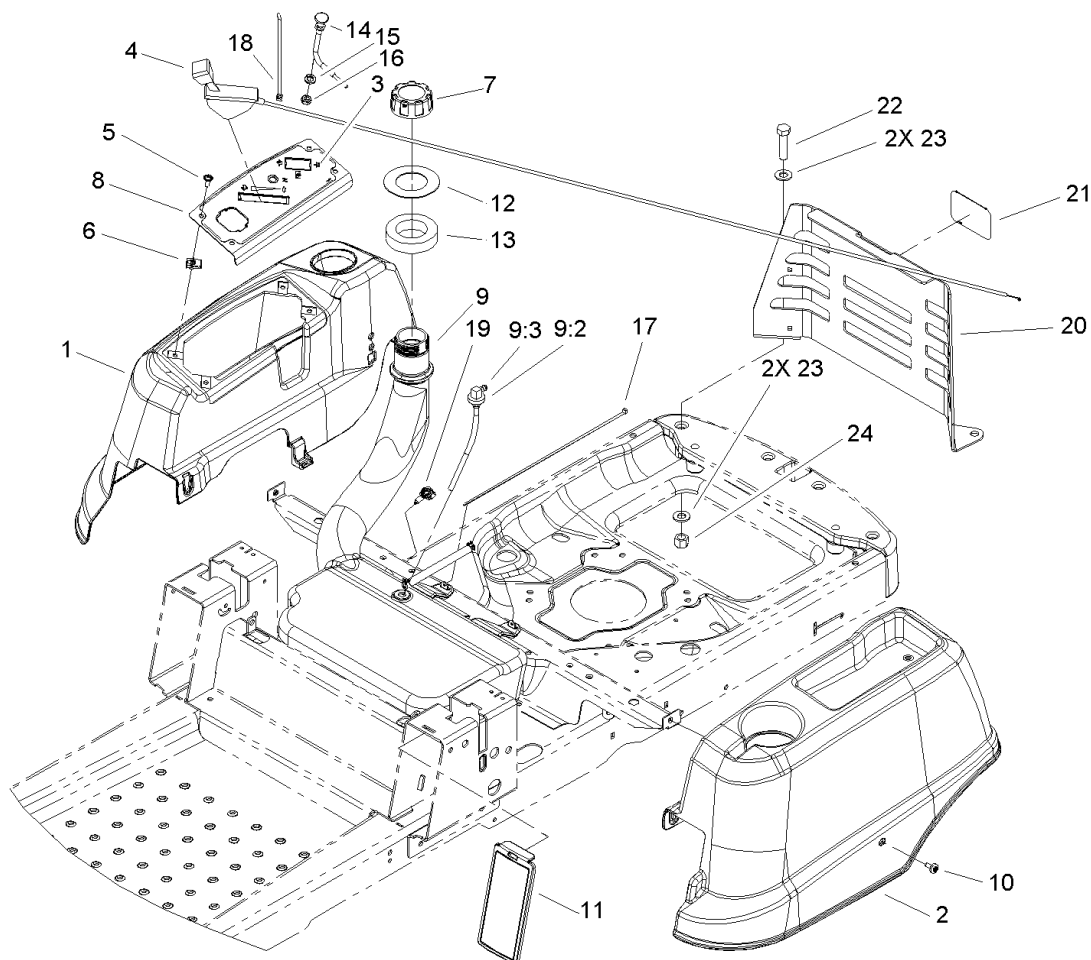

Styling and Fuel System Assembly


Ref	Part No.	Qty.	Description
1	110-1901	1	Pod-RH
2	110-1902	1	Pod-LH
3	110-6654	1	Decal-Panel, Control
4	112-9752	1	Cable-Throttle
5	3258-166	4	Screw-PRH
6	107069	4	Clip
7	93-7198	1	Gas Cap ASM
8	110-1927-03	1	Panel-Control
9	110-6890	1	Fuel Tank ASM
9:2	46-6560	1	Bushing
9:3	95-3970	1	Fitting-90 Degree
10	112-4004	6	Screw-Shoulder
11	110-6786	2	Cover-Control
12	112-9760	1	Washer-Rubber
13	55-9310	1	Seal-Foam
14	112-9753	1	Cable-Choke
15	3253-21	1	Washer-Lock
16	3220-3	1	Nut-HJ
17	100-9064	1	Tie-Cable
18	614249	1	Strap-Tie
19	32180-037	1	Clip-Harness
20	110-6685-03	1	Support-Cover, Rear
21	99-2385	1	Decal
22	325-8	2	Screw-HH

Ref	Part No.	Qty.	Description
23	3256-26	4	Washer-Flat
24	3296-23	2	Nut-Lock, NI

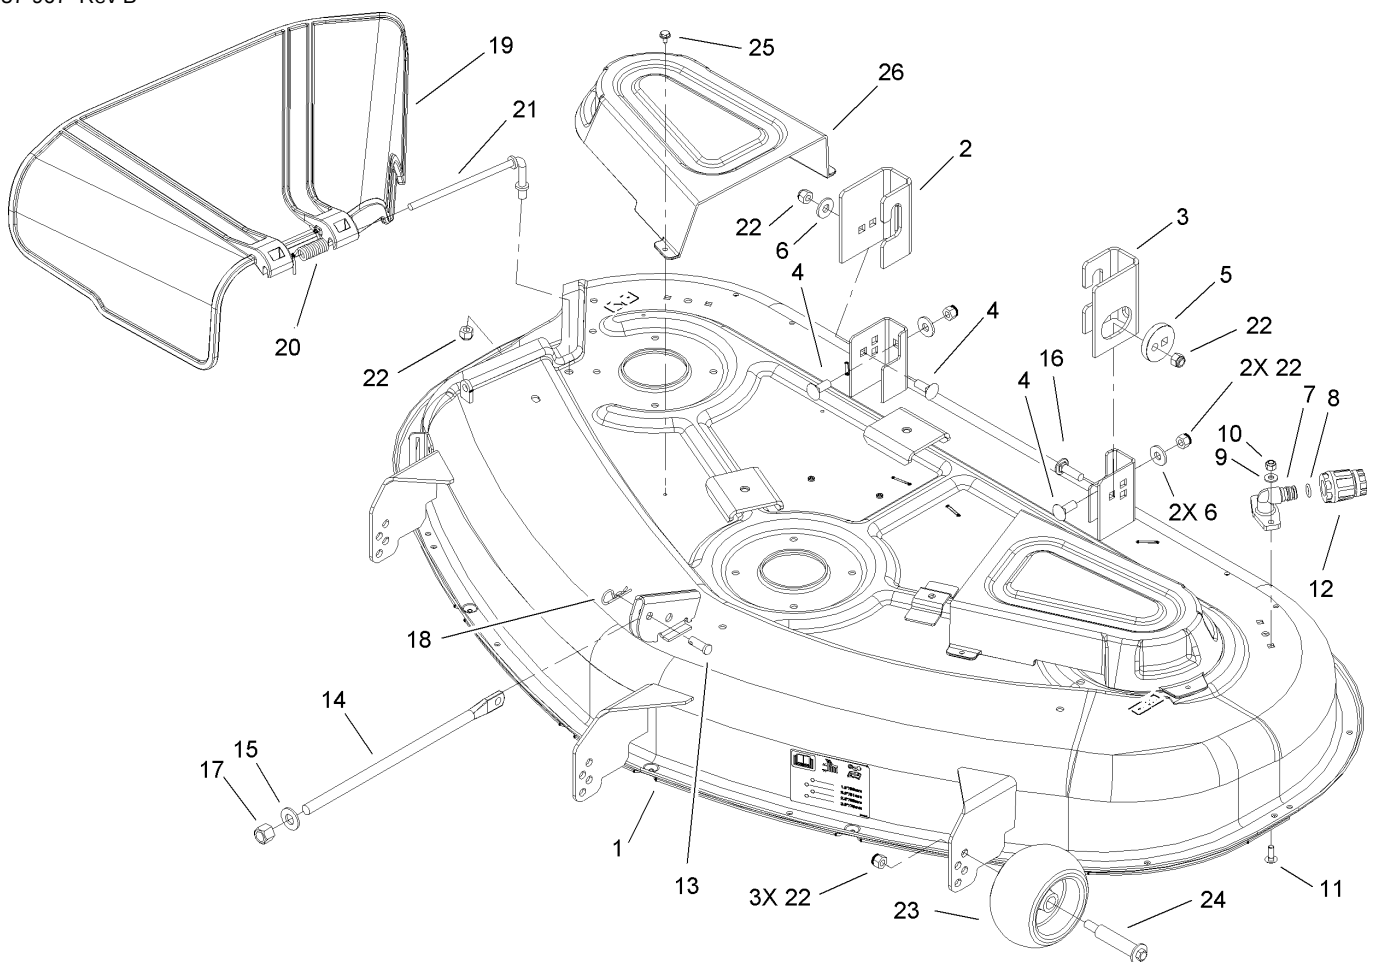

50 Inch Deck and Side Discharge Assembly


Ref	Part No.	Qty.	Description
1	110-6790	1	50 Inch Deck ASM
2	108-7836	1	Bracket-Hanger, Right Rear
3	108-7838	1	Bracket-Hanger, Left Rear
4	3231-2	3	Screw-CARR
5	112-3980	1	Eccentric
6	80-6990	3	Washer-Hardened
7	95-2747	2	Fitting-Washout
8	46-6290	2	O-Ring
9	3256-22	4	Washer-Flat
10	3296-42	4	Nut-Lock, NI
11	3229-1	4	Screw-CARR
12	95-3270	1	Connector-Hose
13	1-808284	1	Pin-Clevis
14	108-7847	1	Rod-Lift
15	87-7270	1	Washer-Thrust
16	3231-28	1	Screw-CARR
17	3296-23	1	Nut-Lock, NI
18	9335054	1	Pin-Hair
19	108-7895	1	Deflector-50 Inch
20	110-6694	1	Spring-Torsion
21	112-3950	1	Rod-Pivot
22	3296-39	8	Nut-Lock, NI
23	1-603299	3	Roller-Scalp, Anti
24	112-3977	3	Bolt-Shoulder

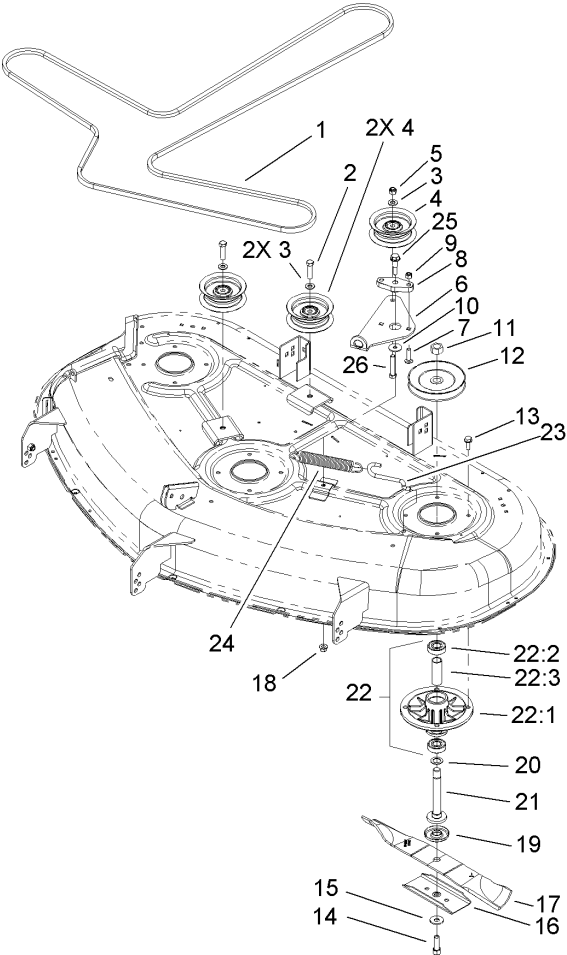

50 Inch Deck Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6892	1	V-Belt
2	323-8	2	Screw-HH
3	3256-24	3	Washer-Flat
4	106-2175	3	Pulley-Idler, Flat
5	3296-39	1	Nut-Lock, NI
6	110-6867-03	1	Arm-Idler
7	3230-3	2	Screw-CARR
8	108-7881	1	Bushing-Pivot
9	3296-29	2	Nut-Lock, NI
10	5-4460	1	Washer-Pivot
11	3219-6	3	Nut-Hex
12	110-6865	3	Pulley
13	32144-41	12	Screw-Taptite
14	26-0671	3	Screw-Blade
15	3290-465	3	Washer-Belleville
16	106-2248-03	3	Stiffener-Blade
17	110-6837-03	3	Blade-17.5 Inch, High Lift
18	3296-58	1	Nut-Lock, NI
19	80-4360	3	Shield-Bearing
20	80-4380	3	Spacer
21	110-6866	3	Shaft-Spindle
22		3	Spindle ASM
22:1	88-4510	1	Housing-Spindle
22:2	100-1048	2	Bearing-Ball


Ref	Part No.	Qty.	Description
22:3	62-3661	1	Spacer-Bearing
23	112-3973	1	Hook-Return, Spring
24	1-603414	1	Spring-Extension
25	110-6897	1	Bolt-Shoulder
26	323-10	1	Screw-HH

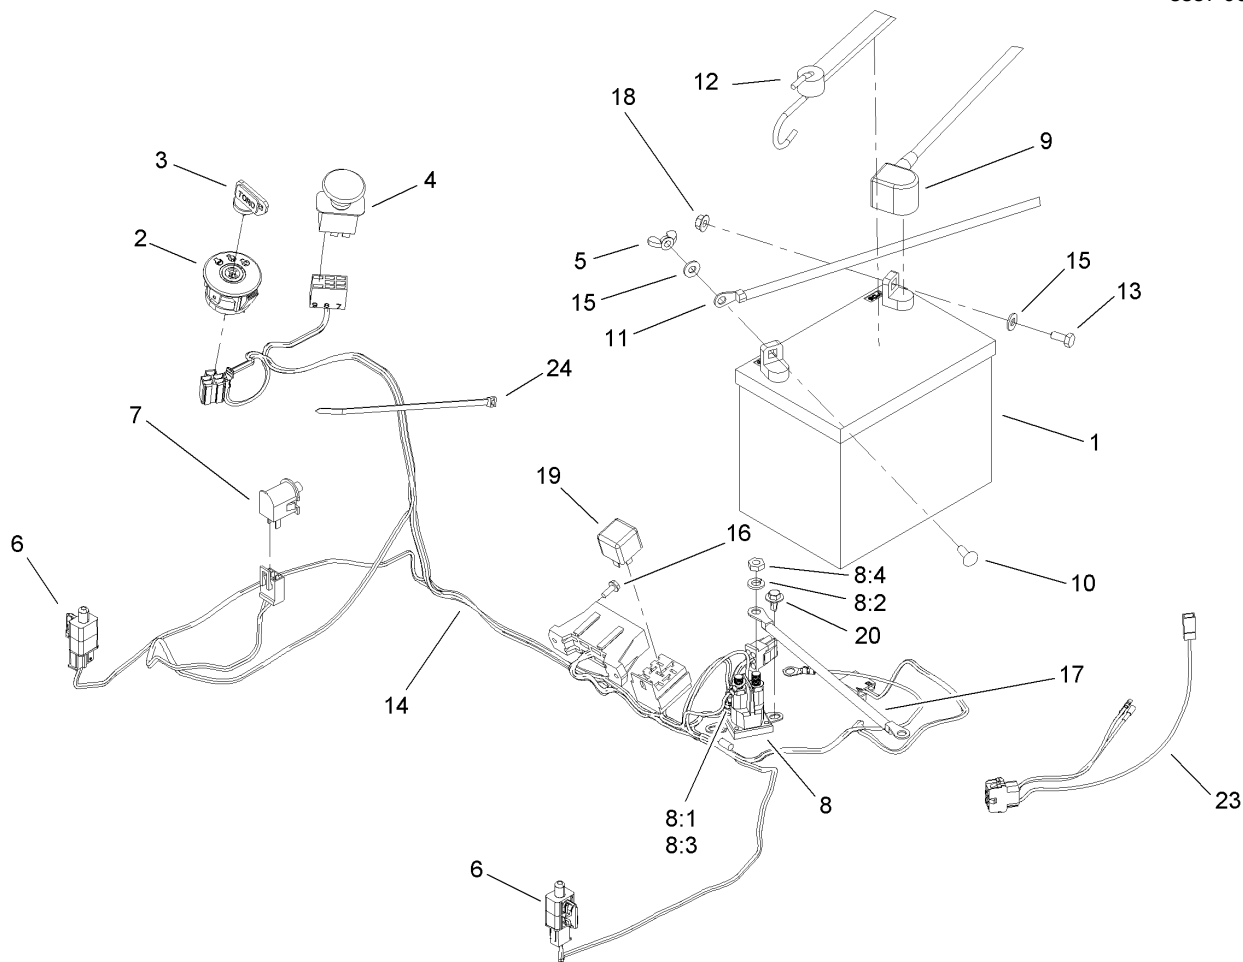

Electrical Assembly


Ref	Part No.	Qty.	Description
1	104-2493	1	Battery
2	110-6764	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	93-9998	1	Switch-PTO
5	32103-22	1	Nut-Wing
6	110-6765	2	Switch-Single Pole No
7	82-2190	1	Switch-Bail
8	1-513075	1	Switch-Solenoid
8:1	3253-17	2	Washer-Lock
8:2	3253-4	2	Washer-Lock
8:3	3219-14	2	Nut-Hex
8:4	3220-2	2	Nut-Jam
9	110-6794	1	Cable-Battery, Red
10	3229-1	1	Screw-CARR
11	110-6793	1	Cable-Battery, Black
12	104-2466	1	Holddown-Battery
13	321-3	1	Screw-HH
14	110-1923	1	Harness-Wire
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	110-6792	1	Cable-Battery, Red
18	32128-33	2	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF

Ref	Part No.	Qty.	Description
23	112-9794	1	Harness-Adapter
24	614249	1	Strap-Tie

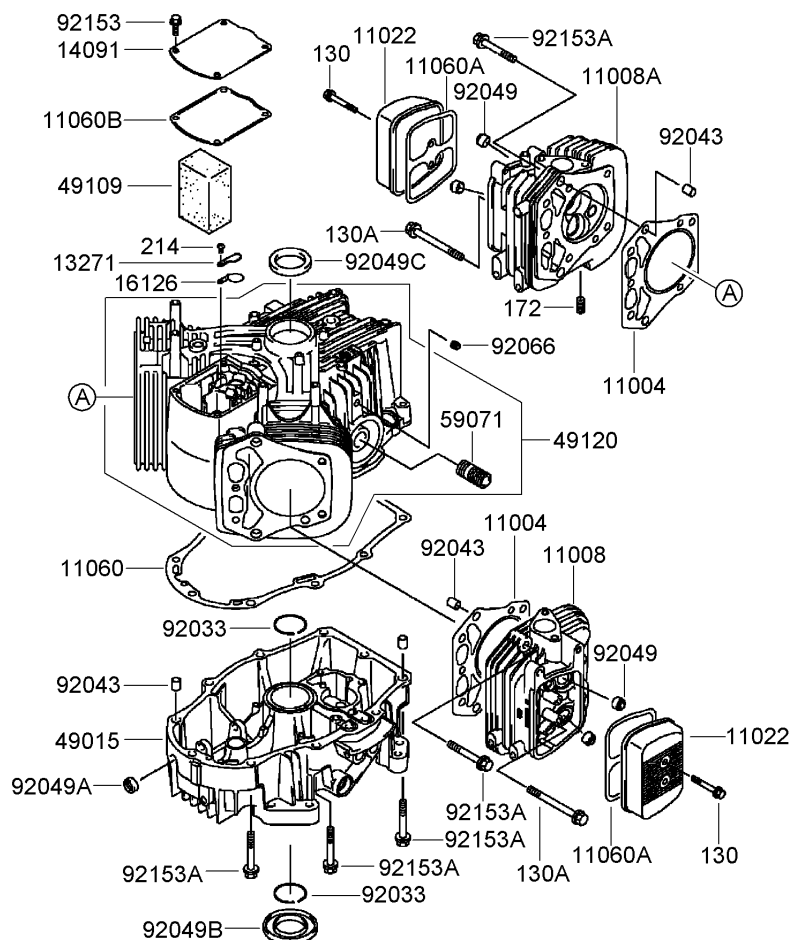


Cylinder and Crankcase Assembly Kawasaki FH641V-AS31

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
①11004	11004-7006	2	Gasket-Head	①130A	130CA0875	2	Bolt-Flanged (8X75)
①11008	11008-7023	1	Head-Cylinder, No.2	①172	172G0818	4	Bolt-Stud (8X18)
①11008A	11008-7024	1	Head-Cylinder, No.1	①214	214B0408	1	Screw-Pan (4X8)
①11022	11022-7002	2	Case-Rocker				
①11060	11060-7012	1	Gasket-Cover, Crankcase				
①11060A	11060-7013	2	Gasket-Case, Rocker				
①11060B	11060-7014	1	Gasket-Breather				
①13271	13271-7006	1	Plate				
①14091	14091-7004	1	Cover				
①16126	16126-7001	1	Valve				
①49015	49015-7064	1	Cover-Crankcase				
①49109	49109-7003	1	Element-Breather				
①49120	49120-7092	1	Crankcase				
①59071	59071-2079	1	Joint				
①92033	92033-7004	2	Ring-Snap				
①92043	92043-7001	6	Pin				
①92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
①92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S)				
①92049B	92049-7011	1	Seal-Oil, S D (35X62X8 L H S)				
①92049C	92049-7014	1	Seal-Oil, S D (35X52X7 R H S)				
①92066	92066-7002	1	Plug				
①92153	92153-7043	4	Bolt (6X12)				
①92153A	92153-7054	18	Bolt (8X50)				
①130	130B0640	4	Bolt-Flanged (6X40)				

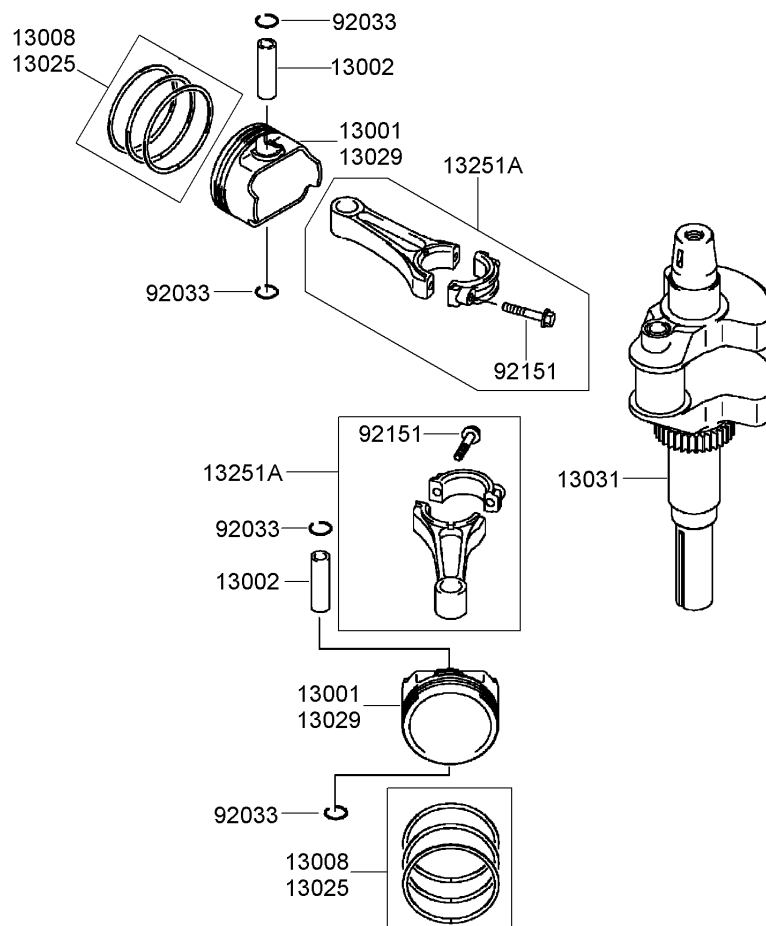


Piston and Crankshaft Assembly Kawasaki FH641V-AS31

Ref	Part No.	Qty.	Description				
③13001	13001-7007	2	Piston-Engine				
③13002	13002-7001	2	Pin-Piston				
③13008	13008-6058	2	Ring Set-Piston				
③13025	13025-7002	1	Ring Set-Piston (L,0.50)				
③13029	13029-7003	1	Piston-Engine (L,0.50)				
③13031	13031-7048	1	Crankshaft				
③13251A	13251-7016	2	Connecting Rod ASM				
③92033	92033-7002	4	Ring-Snap				
③92151	92151-7017	4	Bolt (6X35)				

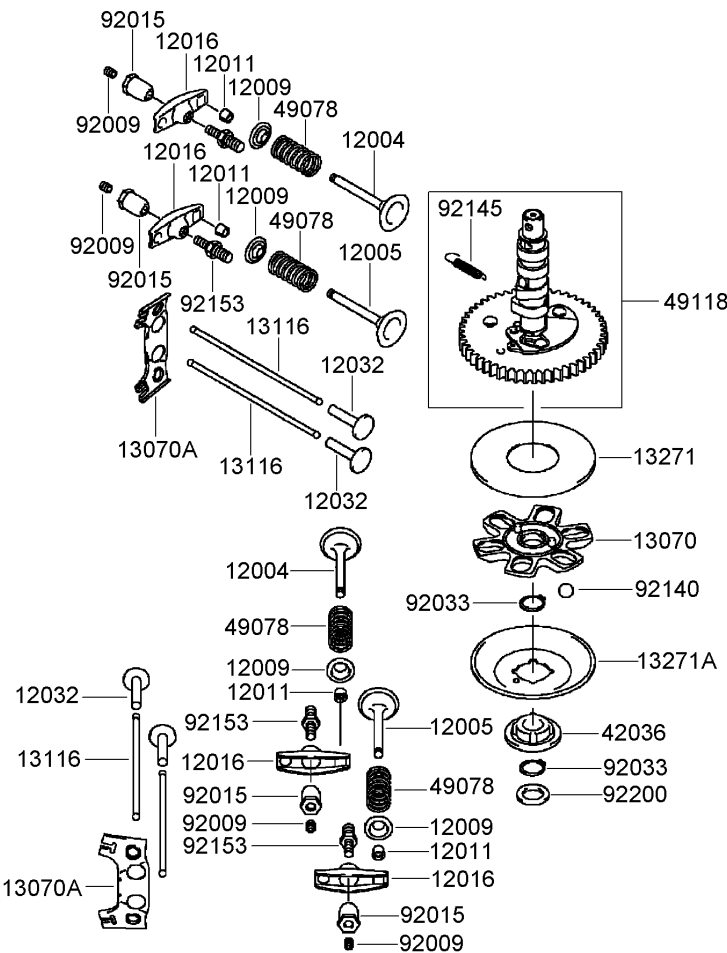

Valve and Camshaft Assembly
Kawasaki FH641V-AS31


Ref	Part No.	Qty.	Description				
❶12004	12004-7002	2	Valve-Intake				
❶12005	12005-7004	2	Valve-Exhaust				
❶12009	12009-7001	4	Retainer-Spring, Valve				
❶12011	12011-2056	8	Collet				
❶12016	12016-7007	4	Arm-Rocker				
❶12032	12032-7001	4	Tappet				
❶13070	13070-7004	1	Guide				
❶13070A	13070-7007	2	Guide				
❶13116	13116-7002	4	Rod-Push				
❶13271	13271-7007	1	Plate				
❶13271A	13271-7021	1	Plate-Governor				
❶42036	42036-7010	1	Sleeve				
❶49078	49078-7002	4	Spring-Valve, Engine (In)				
❶49118	49118-7007	1	Camshaft				
❶92009	92009-2341	4	Screw				
❶92015	92015-2253	4	Nut				
❶92033	92033-7001	2	Ring-Snap				
❶92140	92140-7002	6	Ball				
❶92145	92145-7001	1	Spring				
❶92153	92153-7019	4	Bolt				
❶92200	92200-7001	1	Washer				

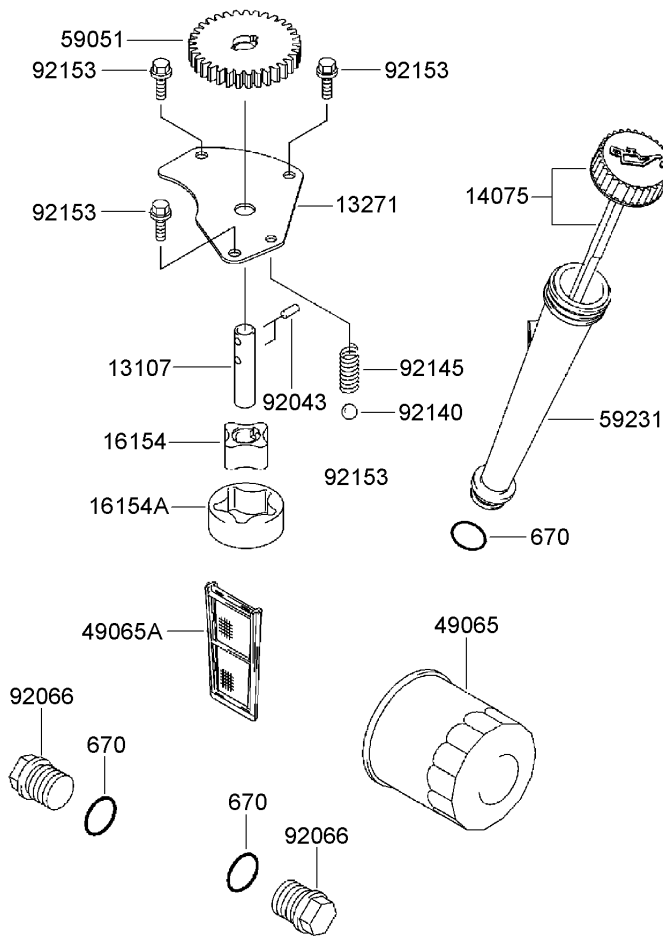

Lubrication Equipment Assembly


Kawasaki FH641V-AS31

Ref	Part No.	Qty.	Description				
⑤13107	13107-7009	1	Shaft				
⑤13271	13271-7005	1	Plate				
⑤14075	14075-7008	1	Cap ASM				
⑤16154	16154-7007	1	Rotor-Pump (In)				
⑤16154A	16154-7008	1	Rotor-Pump (Out)				
⑤49065	49065-2078	1	Filter-Oil				
⑤49065A	49065-7003	1	Filter-Oil				
⑤59051	59051-7011	1	Gear-Spur				
⑤59231	59231-7006	1	Filler				
⑤92043	92043-7003	2	Pin				
⑤92066	92066-7003	2	Plug				
⑤92140	92140-7003	1	Ball				
⑤92145	92145-7002	1	Spring				
⑤92153	92153-7043	3	Bolt (6X12)				
⑤670	670D2016	3	O-Ring (16Mm)				

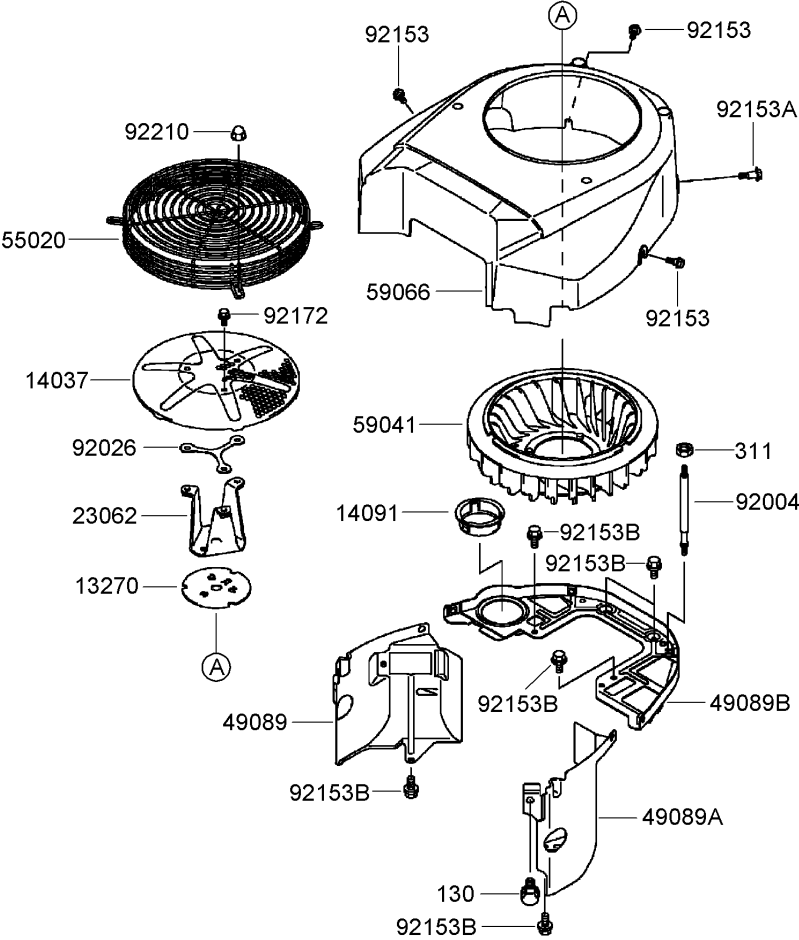

Cooling Equipment Assembly
Kawasaki FH641V-AS31


Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7008-9H	1	Screen				
❸14091	14091-7002	1	Cover				
❸23062	23062-7005	1	Bracket				
❸49089	49089-7004	1	Shroud-Engine				
❸49089A	49089-7005	1	Shroud-Engine				
❸49089B	49089-7049	1	Shroud-Engine				
❸55020	55020-7007	1	Guard				
❸59041	59041-7003	1	Fan				
❸59066	59066-7004	1	Housing-Fan				
❸92004	92004-7006	2	Stud				
❸92026	92026-7007	1	Spacer				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸92153B	92153-7043	6	Bolt (6X12)				
❸92172	92172-7029	3	Screw-Socket (6X12)				
❸92210	92210-0003	4	Nut				
❸130	130B0816	1	Bolt-Flanged (8X16)				
❸311	311B0600	2	Nut-Hex (6Mm)				

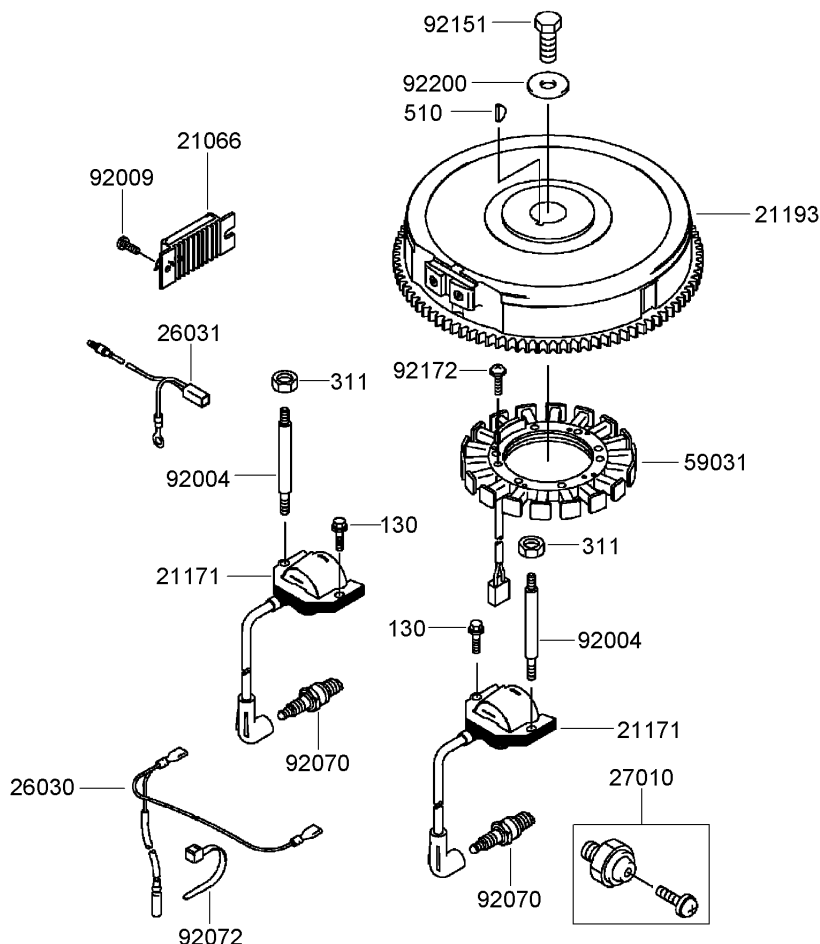

Electric Equipment Assembly

Kawasaki FH641V-AS31


Ref	Part No.	Qty.	Description
③21066	21066-7011	1	Regulator-Voltage
③21171	21171-7013	2	Ignition Coil ASM
③21193	21193-7019	1	Flywheel ASM
③26030	26030-7002	1	Harness
③26031	26031-7003	1	Harness
③27010	27010-2234	1	Switch
③59031	59031-7009	1	Coil-Charging
③92004	92004-7009	2	Stud
③92009	92009-2308	1	Screw
③92070	92070-7004	2	Sparkplug, B P R 4 E S (N G K) Solid
③92072	92072-7003	3	Band
③92151	92151-2097	1	Bolt (12X30)
③92172	92172-7018	4	Screw (5X20)
③92200	92200-7002	1	Washer
③130	130B0620	2	Bolt-Flanged (6X20)
③311	311B0600	2	Nut-Hex (6Mm)
③510	510A5100	1	Key-Woodruff

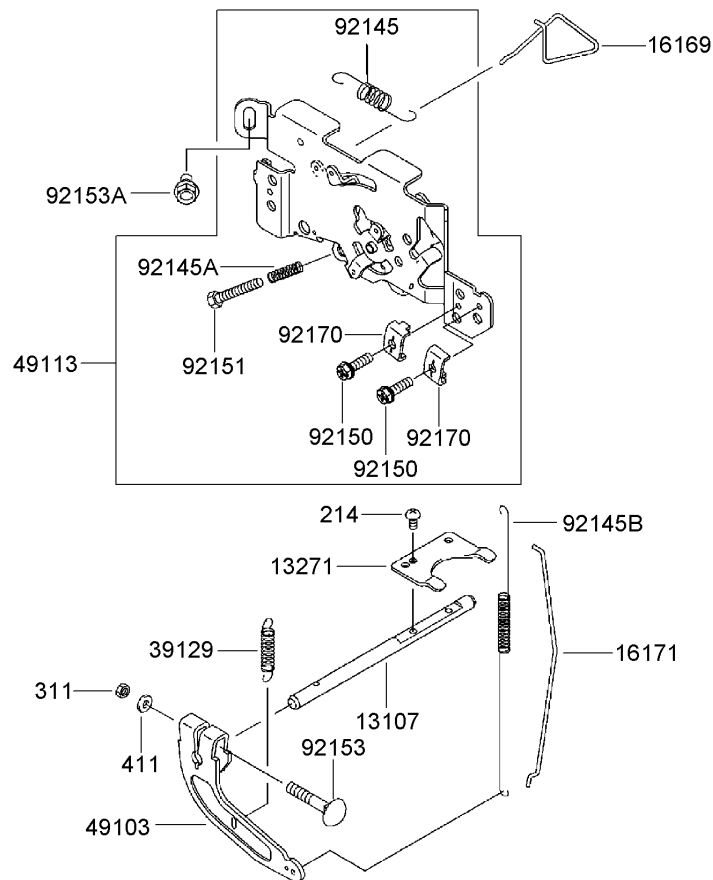

Control Equipment Assembly

Kawasaki FH641V-AS31


Ref	Part No.	Qty.	Description				
⑨13107	13107-7013	1	Shaft				
⑨13271	13271-7032	1	Plate				
⑨16169	16169-7006	1	Link-Choke				
⑨16171	16171-7004	1	Link				
⑨39129	39129-7004	1	Spring-Governor				
⑨49103	49103-7004	1	Arm-Governor				
⑨49113	49113-7017	1	Panel-Control				
⑨92145	92145-7004	1	Spring				
⑨92145A	92145-7005	1	Spring				
⑨92145B	92145-7034	1	Spring				
⑨92150	92150-2182	2	Bolt (5X18)				
⑨92151	92151-7014	1	Bolt (5X30)				
⑨92153	92153-7033	1	Bolt (6X35)				
⑨92153A	92153-7043	2	Bolt (6X12)				
⑨92170	92170-7001	2	Clamp				
⑨214	214B0408	2	Screw-Pan (4X8)				
⑨311	311B0600	1	Nut-Hex (6Mm)				
⑨411	411B0600	1	Washer-Plain (6Mm)				

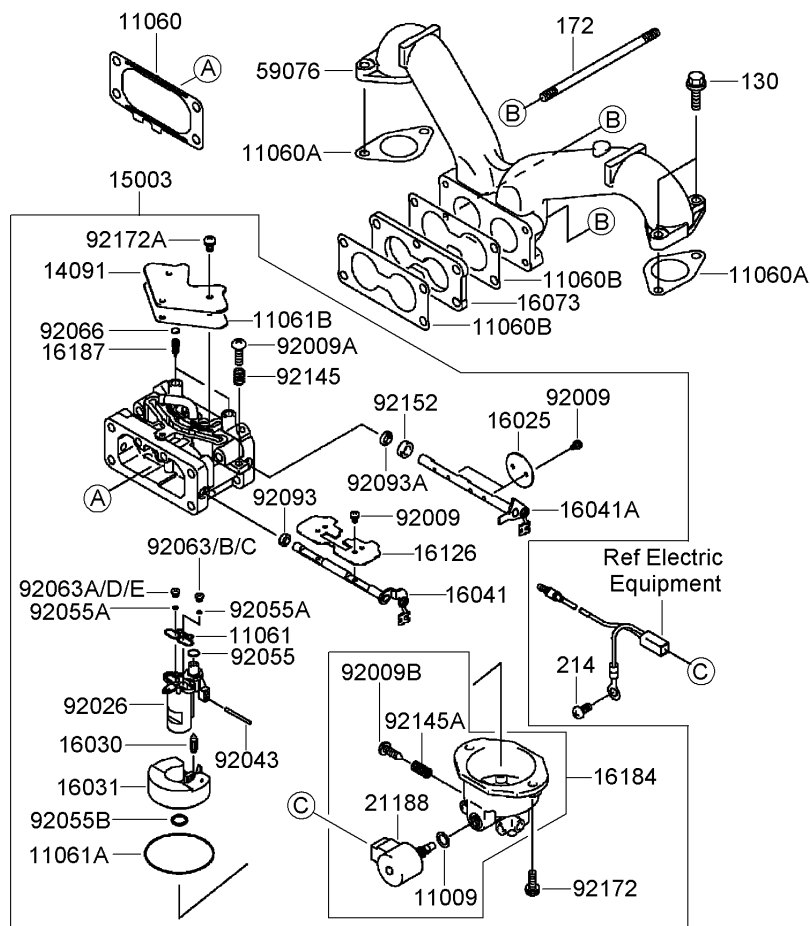

Carburetor Assembly Kawasaki FH641V-AS31


Ref	Part No.	Qty.	Description
①11009	11009-2056	1	Gasket
①11060	11060-7009	1	Gasket-Filter, Air
①11060A	11060-7011	2	Gasket-Manifold
①11060B	11060-7024	2	Gasket-Carburetor
①11061	11061-7037	1	Gasket
①11061A	11061-7038	1	Gasket
①11061B	11061-7039	1	Gasket
①14091	14091-7031	1	Cover
①15003	15003-7115	1	Carburetor ASM
①16025	16025-7003	2	Valve-Throttle
①16030	16030-7004	1	Valve-Float
①16031	16031-7003	1	Float
①16041	16041-7021	1	Shaft-Carburetor
①16041A	16041-7023	1	Shaft-Carburetor
①16073	16073-7005	1	Insulator
①16126	16126-7015	1	Valve
①16184	16184-7017	1	Chamber Float ASM
①16187	16187-7002	2	Needle-Jet
①21188	21188-7003	1	Solenoid
①59076	59076-7002	1	Manifold-Intake
①92009	92009-7003	6	Screw
①92009A	92009-7004	1	Screw
①92009B	92009-7006	1	Screw-Drain
①92026	92026-7011	1	Spacer

Ref	Part No.	Qty.	Description
①92043	92043-7014	1	Pin
①92055	92055-7012	1	O-Ring
①92055A	92055-7013	2	O-Ring
①92055B	92055-7016	1	O-Ring
①92063	92063-7051	1	Jet-Main, No.104
①92063A	92063-7056	1	Jet-Main, No.102
①92063B	92063-7075	1	Jet-Main, No.101 (3280)
①92063C	92063-7076	1	Jet-Main, No.098 (6560)
①92063D	92063-7079	1	Jet-Main, No.099 (3280)
①92063E	92063-7080	1	Jet-Main, No.096 (6560)
①92066	92066-7009	2	Plug, Extension
①92093	92093-7001	1	Seal (I D 5.9)
①92093A	92093-7002	1	Seal (I D 6.9)
①92145	92145-7010	1	Spring
①92145A	92145-7011	1	Spring
①92152	92152-7005	1	Collar
①92172	92172-7005	2	Screw
①92172A	92172-7006	3	Screw
①130	130B0620	4	Bolt-Flanged (6X20)
①172	172G06105	2	Bolt-Stud (6X10.5)
①214	214B0510	1	Screw-Pan (5X10)

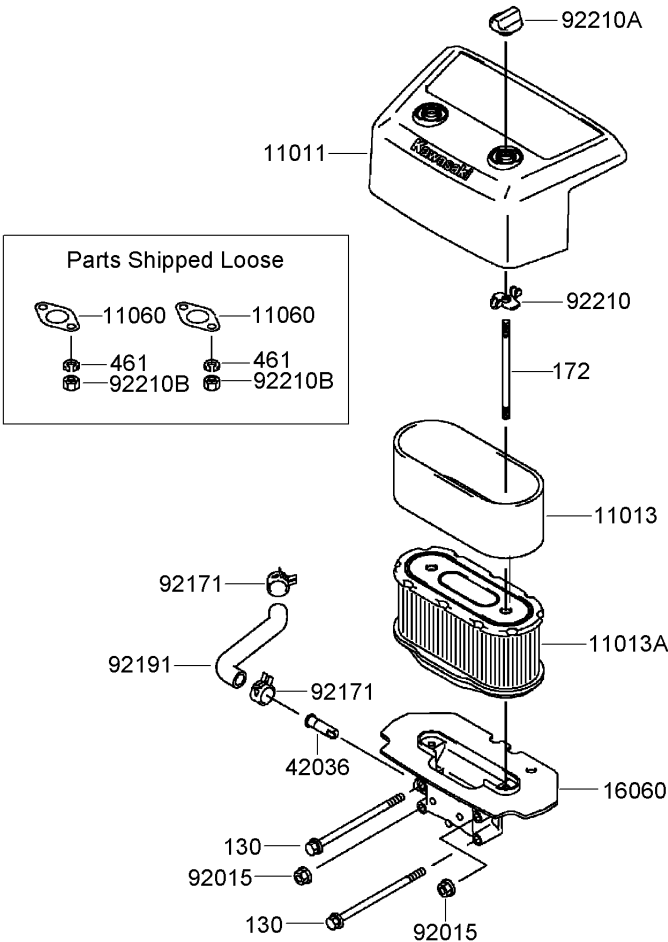

Air Filter and Muffler Assembly
Kawasaki FH641V-AS31

Ref	Part No.	Qty.	Description				
11011	11011-7042	1	Case-Air Filter				
11013	11013-7009	1	Element-Filter, Air				
11013A	11013-7027	1	Element-Filter, Air				
11060	11060-7016	2	Gasket-Muffler				
16060	16060-7001	1	Pipe-Intake				
42036	42036-7002	1	Sleeve				
92015	92015-1193	2	Nut				
92171	92171-7013	2	Clamp				
92191	92191-7006	1	Tube				
92210	92210-7004	2	Nut				
92210A	92210-7019	2	Nut				
92210B	92210-7027	4	Nut (M8)				
130	130B06105	2	Bolt-Flanged (6X10.5)				
172	172G0690	2	Bolt-Stud (6X90)				
461	461F0800	4	Washer-Spring (8Mm)				

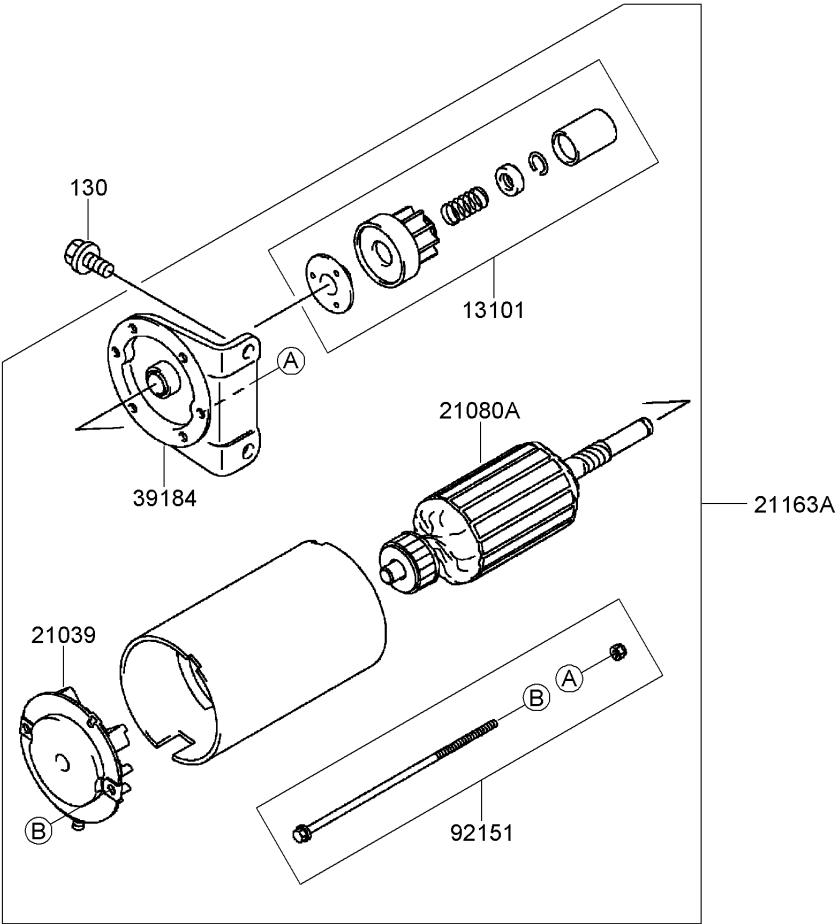

Starter Assembly
Kawasaki FH641V-AS31

Ref	Part No.	Qty.	Description				
13101	13101-7003	1	Gear ASM				
21039	21039-7004	1	Brush				
21080A	21080-7005	1	Armature				
21163A	21163-7022	1	Starter-Electric				
39184	39184-7004	1	Bracket ASM				
92151	92151-7013	1	Bolt				
130	130B0816	2	Bolt-Flanged (8X16)				

Kawasaki FH641V
21.0

Label Assembly

Kawasaki FH641V-AS31

Ref	Part No.	Qty.	Description
⑤56033	56033-7003	1	Label-Manual
⑤56070	56070-7001	1	Label-Warning
⑤56080	56080-7008	1	Label-Brand

Attachments and Accessories

For 74374 - TimeCutter Z5040 Riding Mower

Product Name	Model/Part
Hour Meter Kit	112-9763
Deck Ring Kit	114-1608
Highlift Blade Kit	114-1626
50 Inch Recycler Kit	79312
Engine Cover Kit	79314
Floor Mat Kit	79315
42 Inch and 50 Inch Twin Bagger	79324

NOTES

NOTES

NOTES

