



## TimeCutter™ Z5000 Riding Mower

Model No. 74391 - 270000001 and up.

### Parts Catalog

---

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Description	Page	Description	Page
Frame Assembly	..... 3	Oil Pan and Lubrication Assembly Kohler SV610S-0022	..... 19
Deck Lift and Seat Support Assembly	..... 4	Head, Valve and Breather Assembly Kohler SV610S-0022	..... 20
Seat Assembly	..... 5	Ignition and Electrical Assembly Kohler SV610S-0022	..... 21
Control Assembly	..... 6	Blower Housing and Baffle Assembly Kohler SV610S-0022	..... 22
Hydro Drive Assembly	..... 7	Starting System Assembly Kohler SV610S-0022	..... 23
LH Hydro No. 110-6770 Assembly	..... 8	Fuel System Assembly Kohler SV610S-0022	..... 24
RH Hydro No. 110-6771 Assembly	..... 9	Engine Control Assembly Kohler SV610S-0022	..... 25
Engine and Clutch Assembly	..... 10	Air Intake and Filtration Assembly Kohler SV610S-0022	..... 26
Styling and Fuel System Assembly	..... 11	Exhaust Assembly Kohler SV610S-0022	..... 27
50 Inch Deck Assembly	..... 12	Decal Assembly Kohler SV610S-0022	..... 28
50 Inch Deck Assembly No. 110-6790	..... 13	Attachments and Accessories List	..... 29
50 Inch Deck Recycler Assembly	..... 14		
50 Inch Deck Spindle and Belt Drive Assembly	..... 15		
Electrical Assembly	..... 16		
Crankshaft Assembly Kohler SV610S-0022	..... 17		
Crankcase Assembly Kohler SV610S-0022	..... 18		

## Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. .... as required	HYD. .... hydraulic
ASM. .... assembly	LH. .... left hand
BBC. .... blade brake clutch	NI. .... nylon insert
CARR. .... carriage	NPTF. .... national pipe thread fine
DEG. .... degrees	PFH. .... phillips flat head
EXT. .... external	PPH. .... phillips pan head
FH. .... flat head	PPHTF. .... phillips pan head thread forming
GA. .... gauge	PRH. .... phillips round head
HD. .... heavy-duty	PTH. .... phillips truss head
HF. .... hex flange	PTO. .... power-take-off
HH. .... hex head	RH. .... right hand
HHF. .... hex head flange	ROPS. .... roll-over protection system
HHFTF. .... hex head flange thread forming	SFH. .... slotted fillister head
HJ. .... hex jam	SHH. .... slotted hex head
HLH. .... hex lag head	SHWH. .... slotted hex washer head
HOC. .... height-of-cut	SPH. .... slotted pan head
HSBH. .... hex socket button head	SQH. .... square head
HSFH. .... hex socket flat head	SRH. .... slotted round head
HSH. .... hex socket head	STD. .... standard
HWH. .... hex washer head	TAP. .... self tapping
HWHTF. .... hex washer head thread forming	TTH. .... torx truss head

## Footnotes

- ❶ Not illustrated
- ❸ Obtain from your local Kohler dealer


- ❷ Not serviced separately

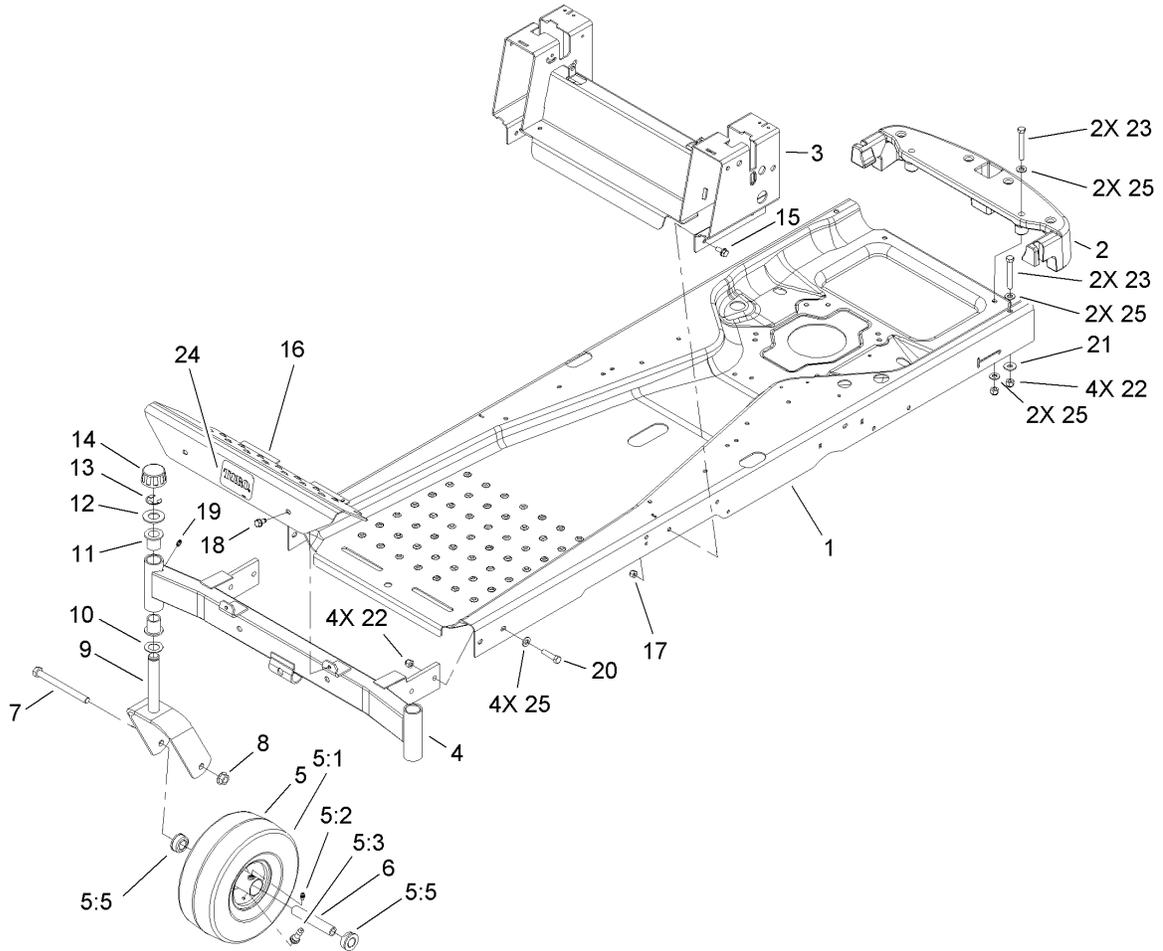

## Frame Assembly


Ref	Part No.	Qty.	Description
1	110-6780-01	1	Frame
2	110-6899-03	1	Bumper-Rear
3	110-6872-03	1	Seat Control ASM
4	108-7882-01	1	Front Axle ASM
5	110-6785	2	Castor Wheel ASM
5:1	110-6791	1	Tire-Smooth
5:2	302-5	1	Fitting-Grease
5:3	232-27	1	Stem-Valve
5:5	114-1640	2	Bushing-Flange
5:99	93-4244	1	Tube-Inner (W/Valve)
6	104-3667	2	Spanner-Wheel
7	325-22	2	Screw-HH
8	32128-23	2	Nut-HF
9	108-7851-01	2	Caster Fork ASM
10	110-6767	2	Washer-Thrust
11	1-303514	4	Bearing-Flanged
12	104-8076	2	Washer
13	32151-103	2	Ring-Snap
14	61-9780	2	Cap-Hub
15	3234-47	7	Screw-HHF
16	108-7855-03	1	Footrest
17	3296-29	7	Nut-Lock, NI
18	32104-32	2	Screw-HWH
19	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
20	323-8	4	Screw-HH
21	80-6990	2	Washer-Hardened
22	3296-39	8	Nut-Lock, NI
23	323-13	4	Screw-HH
24	99-2385	1	Decal
25	3256-24	10	Washer-Flat

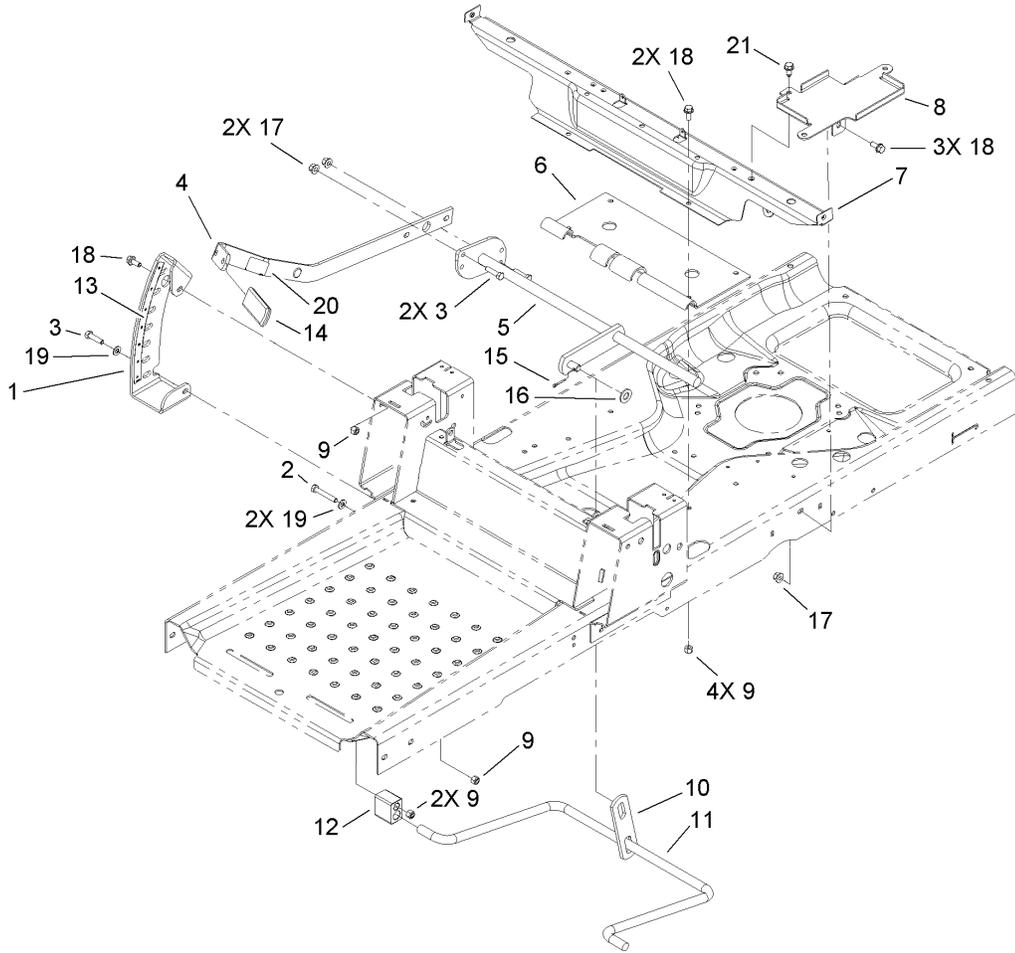

## Deck Lift and Seat Support Assembly


Ref	Part No.	Qty.	Description
1	112-4027-03	1	Sector-HOC
2	322-10	2	Screw-HH
3	322-6	3	Screw-HH
4	112-3960-03	1	Lift Arm ASM
5	108-7841-03	1	Lift Lever ASM
6	110-6800-03	1	Plate-Lift
7	110-6805-03	1	Bracket-Seat/Pods
8	110-1937-03	1	Tray-Battery
9	3296-29	8	Nut-Lock, NI
10	108-7840	1	Link-Lift
11	108-7839	1	Arm-Lift, Rear
12	108-7845	2	Block-Pivot
13	110-6824	1	Decal-HOC
14	105-3450	1	Grip-Lever, Lift
15	3272-10	1	Pin-Cotter
16	3256-26	1	Washer-Flat
17	3296-58	3	Nut-Lock, NI
18	3234-47	6	Screw-HHF
19	3256-23	3	Washer-Flat
20	106-8743	1	Decal
21	32104-32	1	Screw-HWH
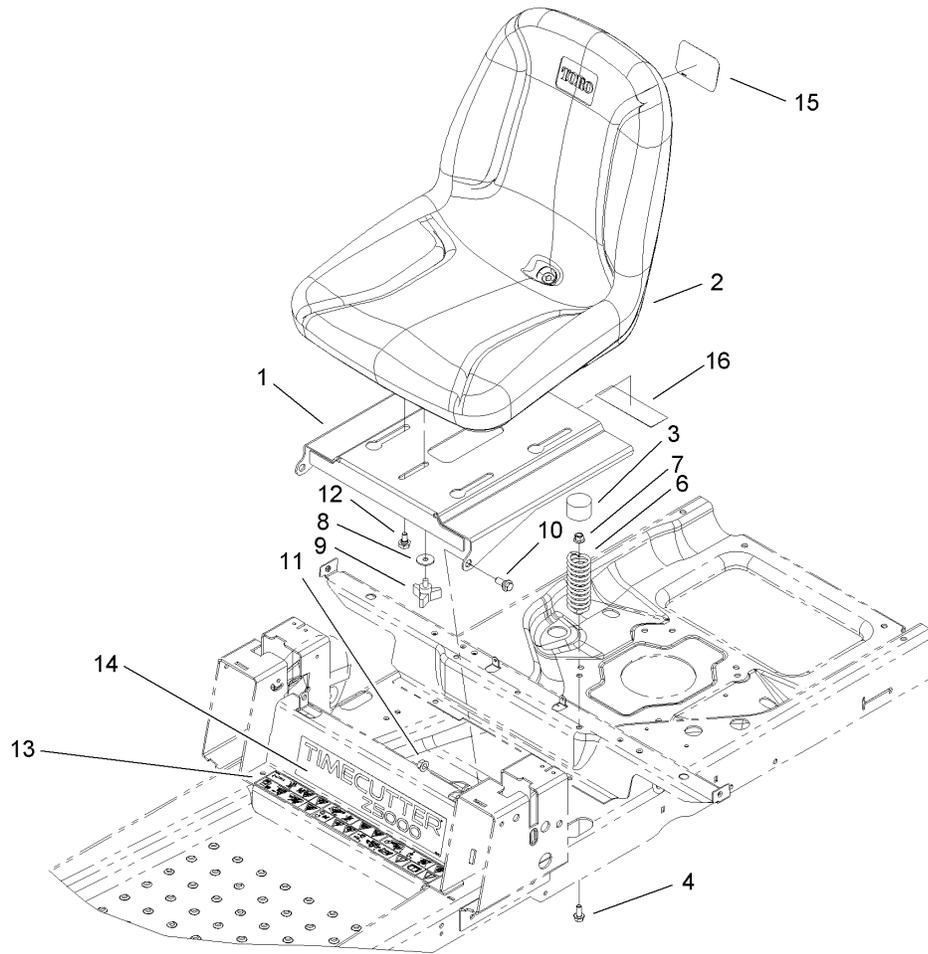
## Seat Assembly

Ref	Part No.	Qty.	Description
1	110-6679-03	1	Base-Seat
2	110-6772	1	Seat-18 Inch
3	701178	2	Cap-Protector
4	3234-47	2	Screw-HHF
6	92-7054	2	Spring-Compression
7	3296-58	2	Nut-Lock, NI
8	5-4460	1	Washer-Pivot
9	92-9674	1	Knob
10	94-7582	2	Bolt-Shoulder
11	32128-21	2	Nut-HF
12	37-8771	4	Bolt-Shoulder
13	110-6825	1	Decal-Danger
14	110-6797	1	Decal-Timecutter
15	99-2385	1	Decal
16	106-8717	1	Decal-Service


--	--	--	--

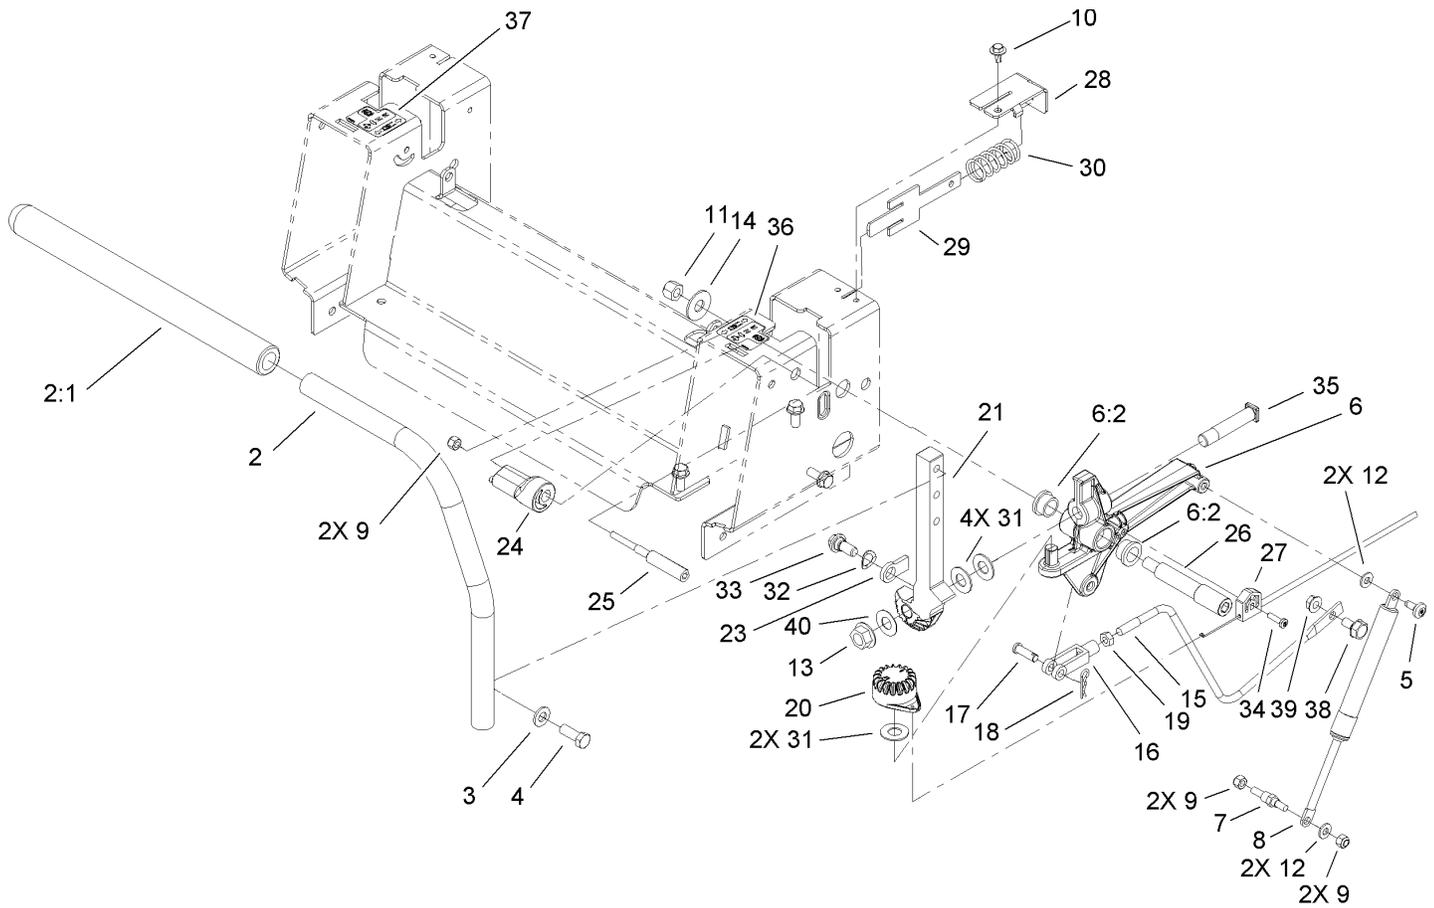

## Control Assembly

Ref	Part No.	Qty.	Description
1	110-6814	1	RH Handle ASM
1:1	108-6187	1	Grip
2	110-6815	1	LH Handle ASM
2:1	108-6187	1	Grip
3	3256-24	4	Washer-Flat
4	323-6	4	Screw-HH
5	112-4004	2	Screw-Shoulder
6	110-6828	2	Activator Arm ASM
6:2	105-3455	2	Bushing
7	110-6810	2	Stud-Damper
8	103-2913	2	Damper-Control, Motion
9	3296-42	6	Nut-Lock, NI
10	46-8560	2	Screw-HHF
11	3296-48	2	Nut-Lock, NI
12	3256-22	4	Washer-Flat
13	32128-23	2	Nut-HF
14	3256-5	2	Washer-Flat
15	110-6693	2	Link-Hydro
16	1-303105	2	Yoke-Adjustable
17	1-808280	2	Pin-Clevis
18	1-806003	2	Pin-Hair
19	3220-2	2	Nut-Jam
20	110-6845	2	Gear-Control
21	110-6783	1	Arm-Actuator, LH


Ref	Part No.	Qty.	Description
22	110-6782	1	Arm-Actuator, RH
23	110-6856	2	Tab-Stop
24	110-6873	2	Eccentric
25	110-6874	2	Screw-Eccentric
26	110-6875	2	Bolt-Shoulder
27	110-6858	2	Cable-Brake, Parking
28	110-6751	2	Bracket-Return
29	110-6750	2	Plate-Return
30	110-6752	2	Spring
31	110-6894	6	Washer-Pivot
32	3290-221	2	Washer-Spring
33	94-7582	2	Bolt-Shoulder
34	110-0863	2	Screw-Torx
35	110-6784	2	Bolt-Shoulder
36	112-9750	1	Decal-Control Lever, LH
37	112-9751	1	Decal-Control Lever, RH
38	37-8771	2	Bolt-Shoulder
39	3296-58	2	Nut-Lock, NI
40	112-9771	2	Washer-Teflon

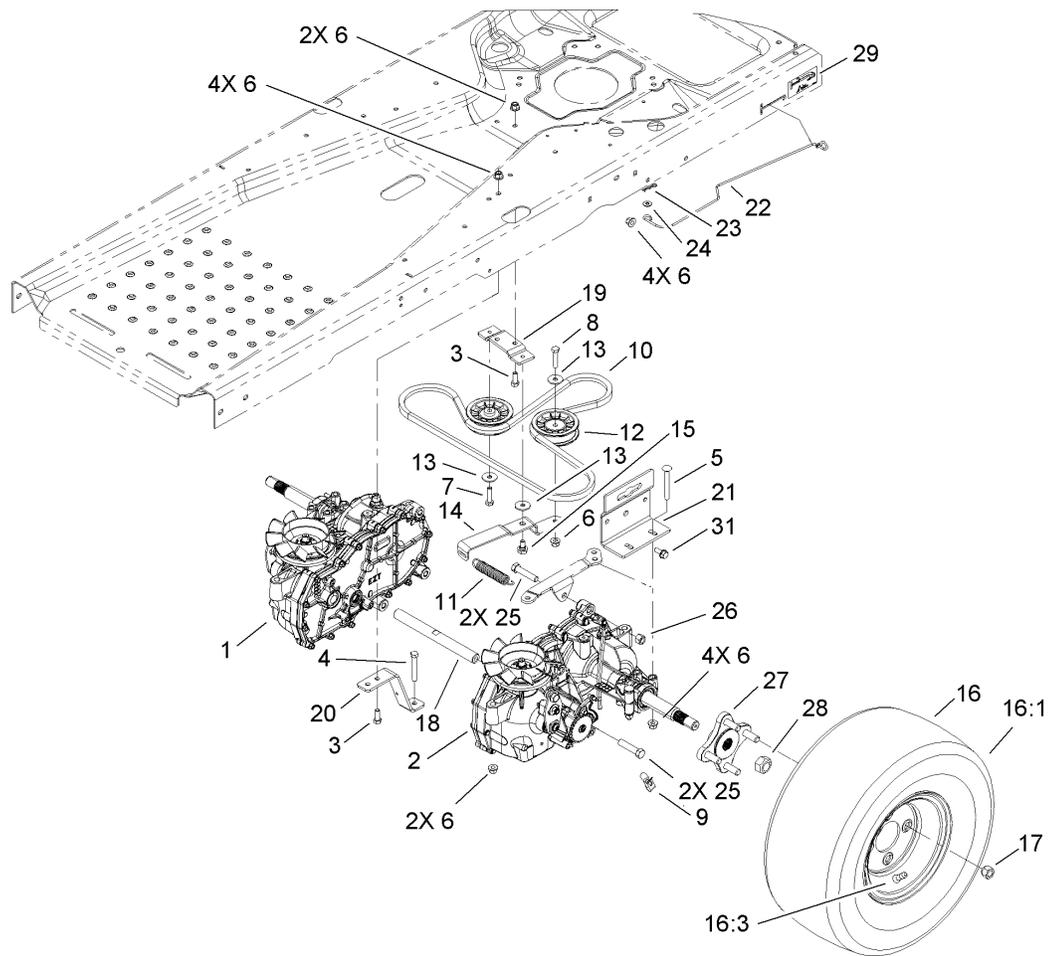

## Hydro Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6771	1	Hydro-RH
2	110-6770	1	Hydro-LH
3	322-4	2	Screw-HH
4	322-11	2	Screw-HH
5	3230-9	4	Screw-CARR
6	3296-58	17	Nut-Lock, NI
7	322-6	1	Screw-HH
8	322-7	1	Screw-HH
9	110-6677	2	Clip-Spring
10	110-6774	1	V-Belt
11	63-1590	1	Spring-Idler
12	110-6775	2	Pulley-Idler
13	5-4460	3	Washer-Pivot
14	110-1925	1	Arm-Idler
15	37-8771	1	Bolt-Shoulder
16	110-6883	2	Wheel And Tire ASM
16:1	110-6887	1	Tire
16:3	232-27	1	Stem-Valve
●16:99	232-37	1	Tube
17	242-50	8	Nut-Lug
18	110-6807	1	Shaft-Cross
19	110-1926	1	Plate-Pivot
20	110-6806-03	2	Strap-Torque
21	110-6878-03	2	Support-Hydro


Ref	Part No.	Qty.	Description
22	110-6787	2	Rod-Bypass
23	1-806003	2	Pin-Hair
24	3256-22	2	Washer-Flat
25	324-8	4	Screw-HH
26	3296-48	2	Nut-Lock, NI
27	112-3979	2	Hub ASM
28	112-3982	2	Nut-Lock
29	110-6680	1	Decal-Transport, LH
●30	110-6690	1	Decal-Transport, RH
31	3234-47	8	Screw-HHF

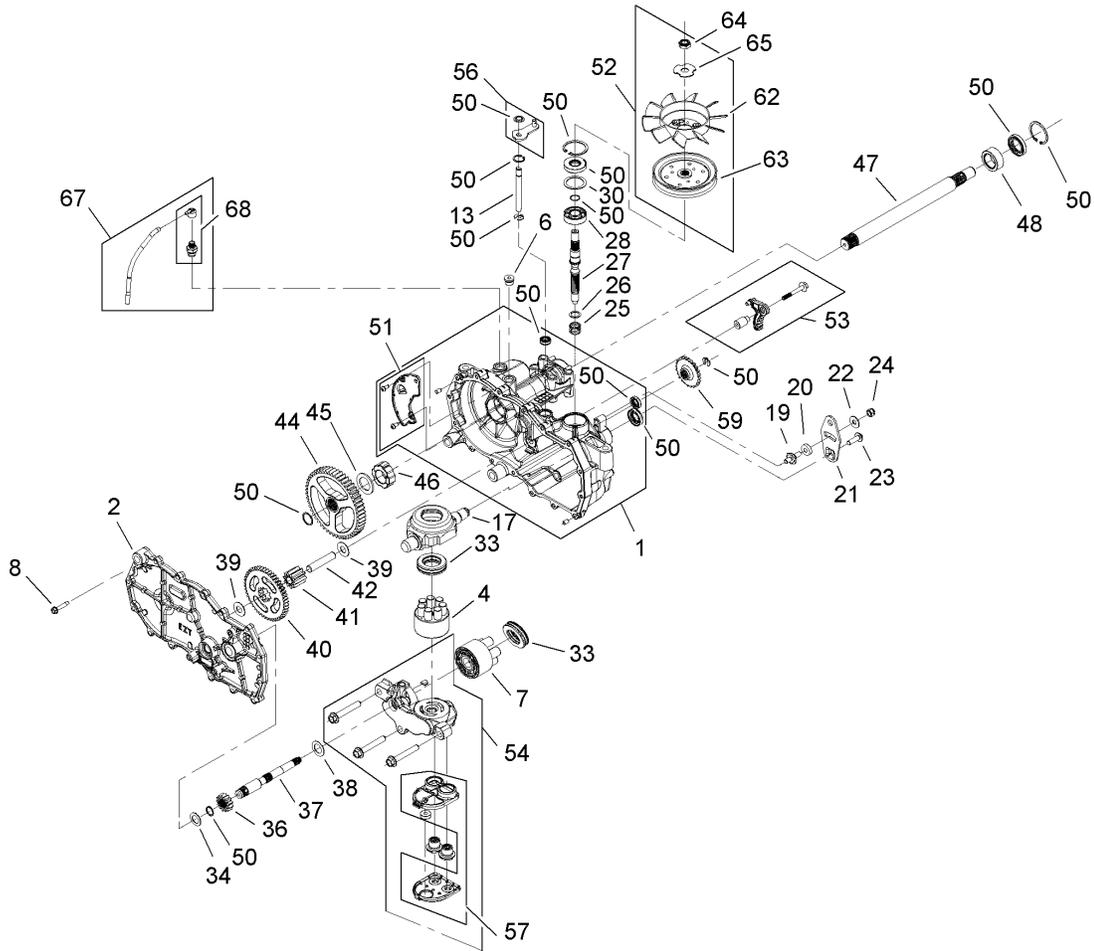

## LH Hydro No. 110-6770 Assembly

Ref	Part No.	Qty.	Description
1	114-1636	1	LH Main Housing ASM
2	114-1637	1	LH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor


Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8687	1	LH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9862	1	LH Center Section Filter Kit
55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

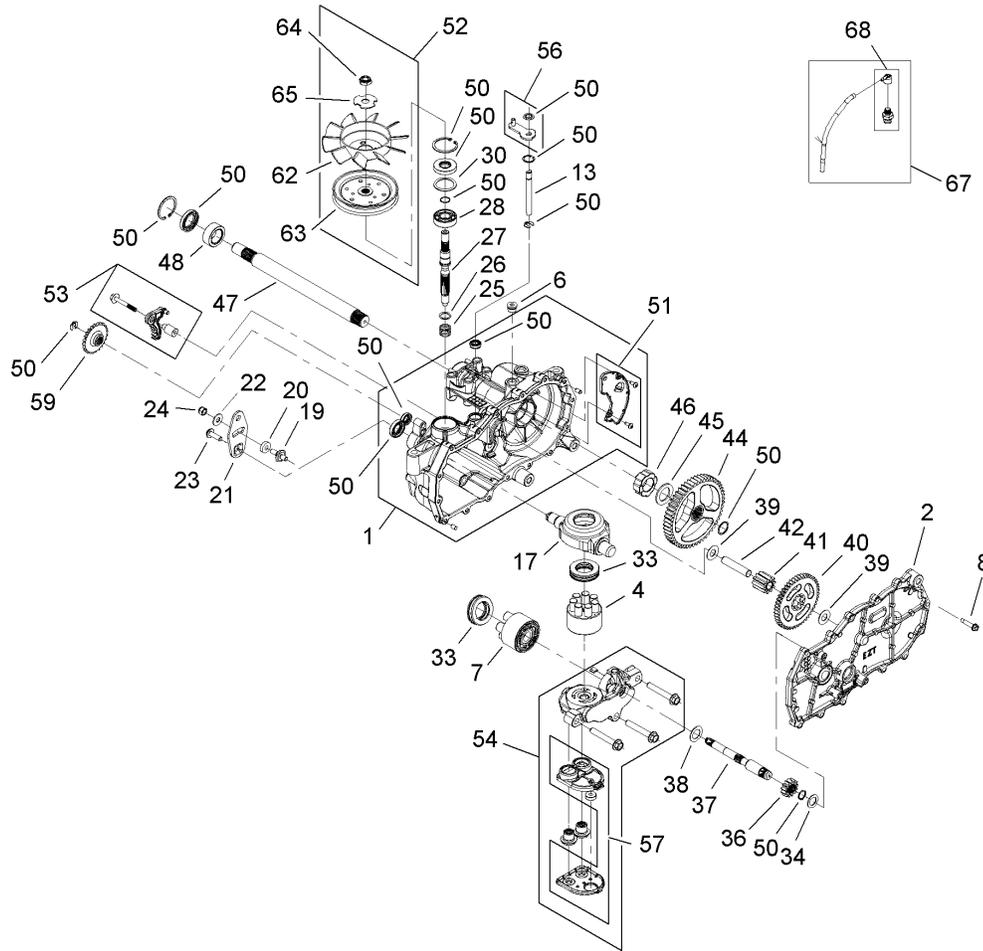

## RH Hydro No. 110-6771 Assembly


Ref	Part No.	Qty.	Description
1	114-1630	1	RH Main Housing ASM
2	114-1631	1	RH Side ASM
4	110-8561	1	Pump Block ASM
6	112-9850	1	Plug
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Block, Thrust
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft, Motor
38	104-5360	1	Washer-Shaft, Motor

Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8697	1	RH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9861	1	RH Center Section Filter Kit
55	112-9863	1	Tube-Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

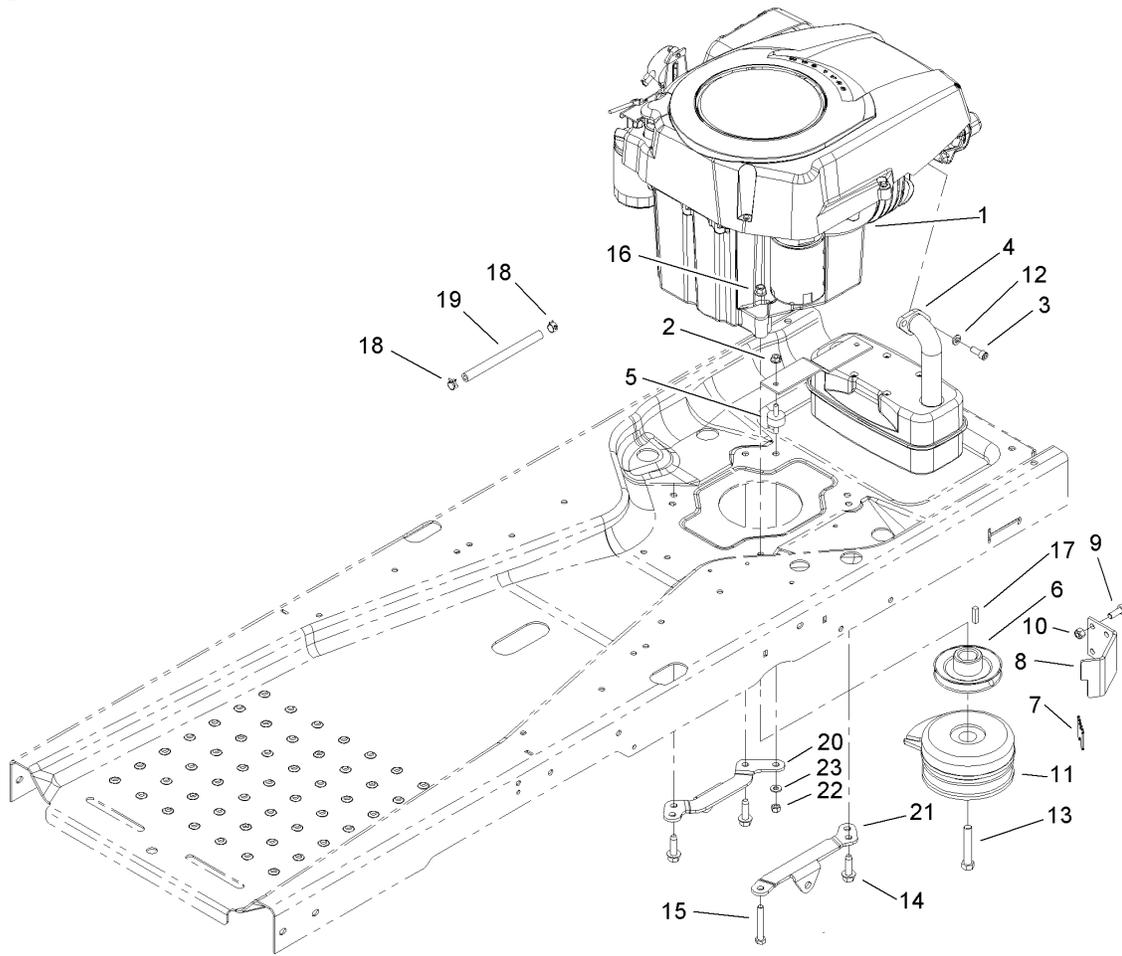


## Engine and Clutch Assembly

Ref	Part No.	Qty.	Description
1		1	Engine-Kohler, Sv610S-0022
2	32128-33	1	Nut-HF
3	3274-10	2	Screw-HSH
4	108-7829	1	Muffler-Kohler
5	112-3976	1	Isolator
6	110-6758	1	Pulley-Engine
7	112-3974	1	Bumper
8	110-6896	1	Stop-Clutch
9	322-4	2	Screw-HH
10	3296-29	2	Nut-Lock, NI
11	110-6766	1	Clutch-Electric, PTO
12	3253-4	2	Washer-Lock
13	3212-11	1	Screw-HH
14	32144-109	3	Screw
15	322-11	1	Screw-HH
16	3296-58	1	Nut-Lock, NI
17	5-7280	1	Key
18	2412-98	2	Clamp
19	109-0306	1	Hose-Fuel
20	110-6798	1	Support-Hydro, RH
21	110-6799	1	Support-Hydro, LH
22	3296-42	1	Nut-Lock, NI
23	3256-22	1	Washer-Flat
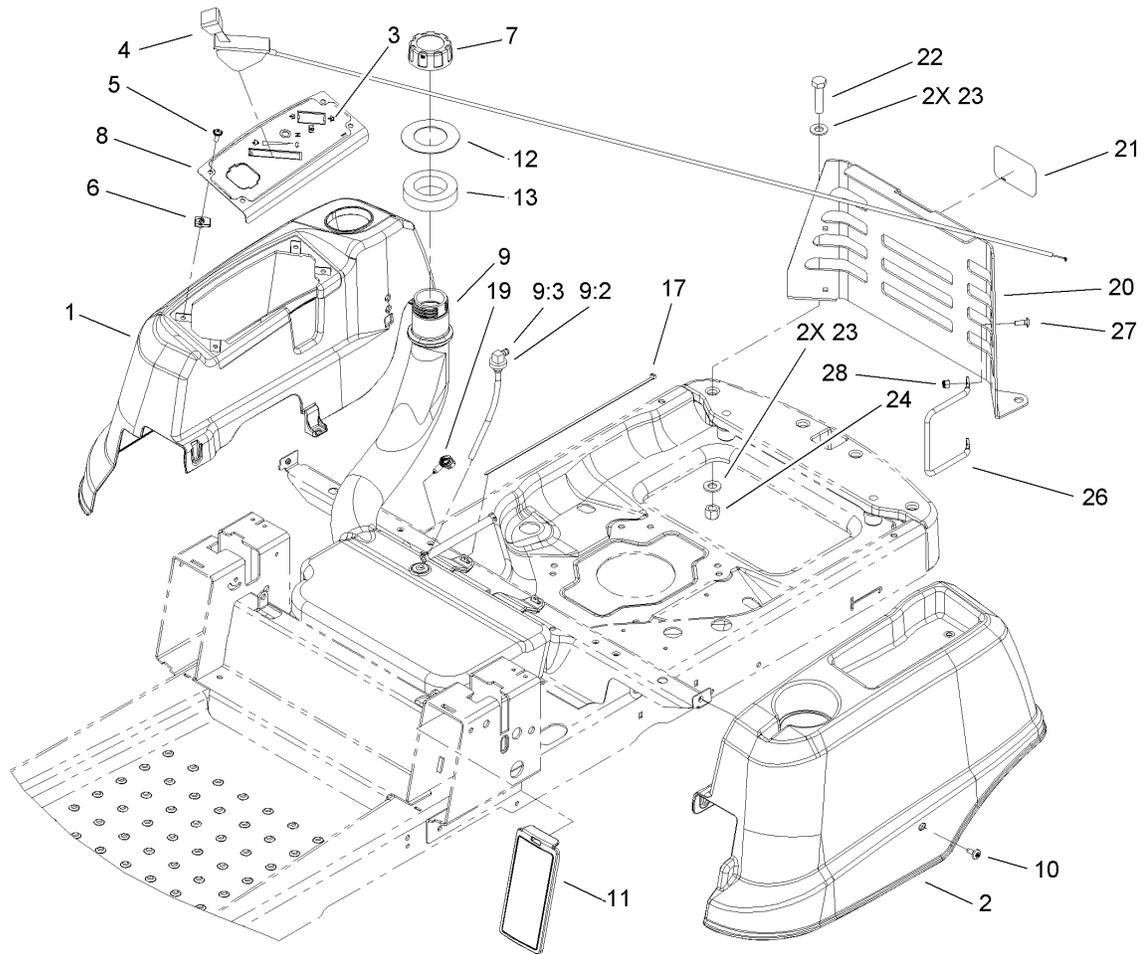
## Styling and Fuel System Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-1901	1	Pod-RH	28	3296-42	2	Nut-Lock, NI
2	110-1902	1	Pod-LH				
3	110-6823	1	Decal-Panel, Control				
4	104-3626	1	Cable-Throttle				
5	3258-166	4	Screw-PRH				
6	107069	4	Clip				
7	93-7198	1	Gas Cap ASM				
8	110-1927-03	1	Panel-Control				
9	110-6890	1	Fuel Tank ASM				
9:2	46-6560	1	Bushing				
9:3	95-3970	1	Fitting-90 Degree				
10	112-4004	6	Screw-Shoulder				
11	110-6786	2	Cover-Control				
12	112-9760	1	Washer-Rubber				
13	55-9310	1	Seal-Foam				
17	100-9064	1	Tie-Cable				
19	32180-037	1	Clip-Harness				
20	110-6685-03	1	Support-Cover, Rear				
21	99-2385	1	Decal				
22	325-8	2	Screw-HH				
23	3256-26	4	Washer-Flat				
24	3296-23	2	Nut-Lock, NI				
26	112-4022	1	Guard-Muffler				
27	3229-1	2	Screw-CARR				

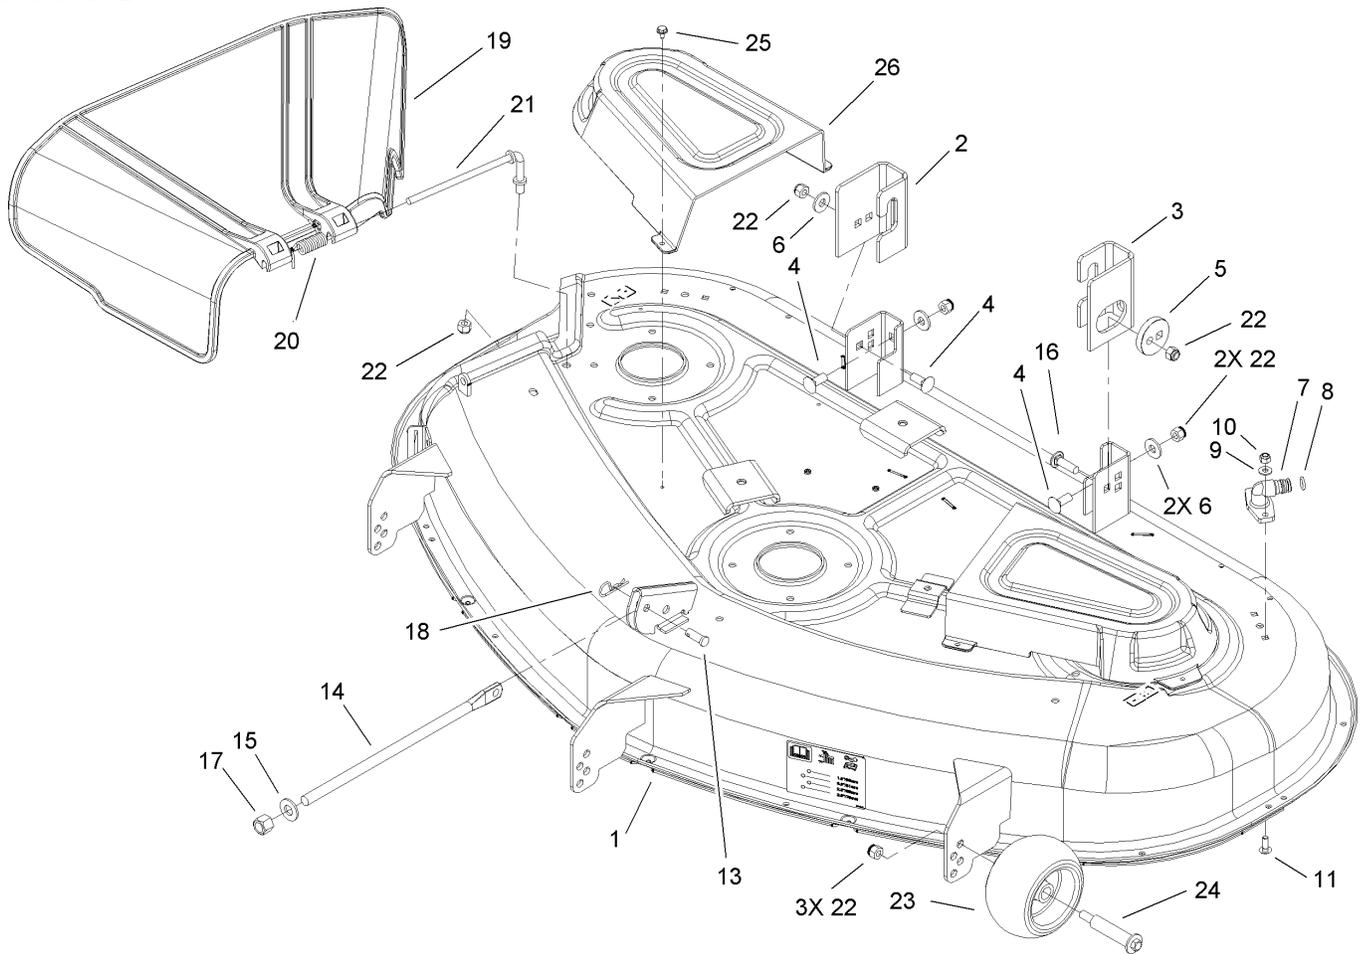


## 50 Inch Deck Assembly

Ref	Part No.	Qty.	Description
1	110-6790	1	50 Inch Deck ASM
2	108-7836	1	Bracket-Hanger, Right Rear
3	108-7838	1	Bracket-Hanger, Left Rear
4	3231-2	3	Screw-CARR
5	112-3980	1	Eccentric
6	80-6990	3	Washer-Hardened
7	95-2747	2	Fitting-Washout
8	46-6290	2	O-Ring
9	3256-22	4	Washer-Flat
10	3296-42	4	Nut-Lock, NI
11	3229-1	4	Screw-CARR
13	1-808284	1	Pin-Clevis
14	108-7847	1	Rod-Lift
15	87-7270	1	Washer-Thrust
16	3231-28	1	Screw-CARR
17	3296-23	1	Nut-Lock, NI
18	9335054	1	Pin-Hair
19	108-7895	1	Deflector-50 Inch
20	110-6694	1	Spring-Torsion
21	112-3950	1	Rod-Pivot
22	3296-39	8	Nut-Lock, NI
23	1-603299	3	Roller-Scalp, Anti
24	112-3977	3	Bolt-Shoulder
25	32104-76	6	Screw


Ref	Part No.	Qty.	Description
26	108-7890	2	Cover-Belt



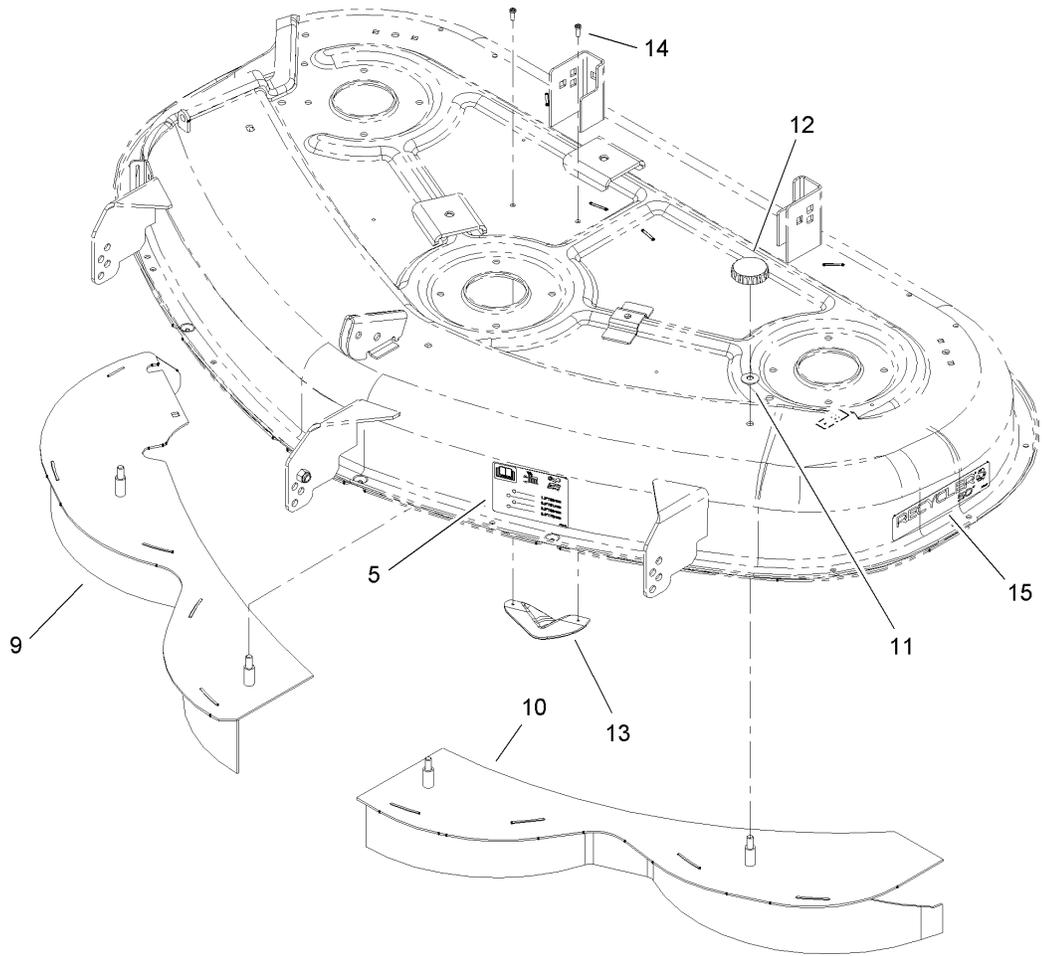

## 50 Inch Deck Recycler Assembly


Ref	Part No.	Qty.	Description				
5	112-9840	1	Decal-Anti Scalp				
9	112-4010-03	1	RH Baffle ASM				
10	112-4011-03	1	LH Baffle ASM				
11	3290-456	4	Washer-Belleville				
12	94-5583	4	Knob				
13	76-2160	3	Plate-Kicker				
14	32144-111	6	Screw-PPH				
15	110-6650	1	Decal				

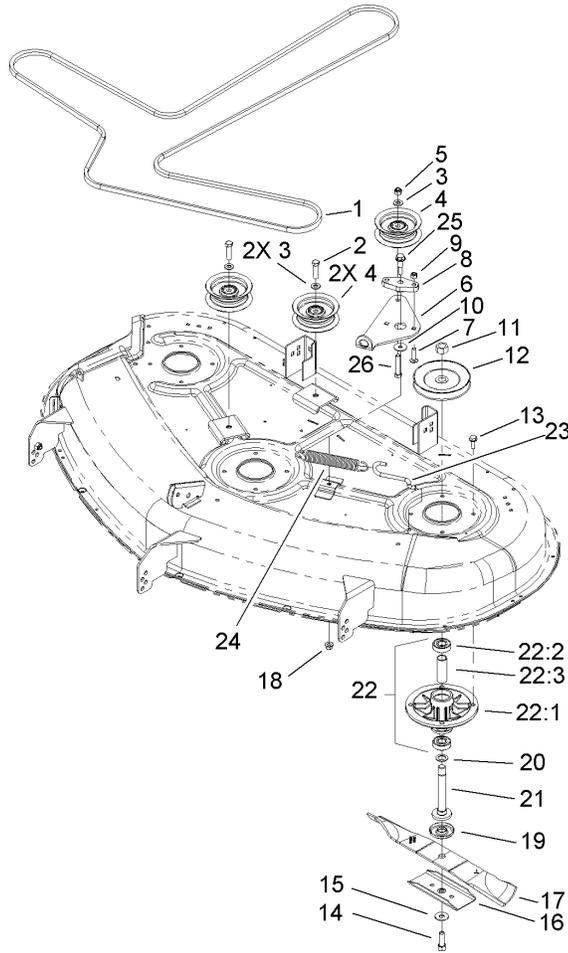

## 50 Inch Deck Spindle and Belt Drive Assembly

Ref	Part No.	Qty.	Description
1	110-6892	1	V-Belt
2	323-8	2	Screw-HH
3	3256-24	3	Washer-Flat
4	106-2175	3	Pulley-Idler, Flat
5	3296-39	1	Nut-Lock, NI
6	110-6867-03	1	Arm-Idler
7	3230-3	2	Screw-CARR
8	108-7881	1	Bushing-Pivot
9	3296-29	2	Nut-Lock, NI
10	5-4460	1	Washer-Pivot
11	3219-6	3	Nut-Hex
12	110-6865	3	Pulley
13	32144-41	12	Screw-Taptite
14	26-0671	3	Screw-Blade
15	3290-465	3	Washer-Belleville
16	106-2248-03	3	Stiffener-Blade
17	112-9759-03	3	Blade-17.50 Inch
18	3296-58	1	Nut-Lock, NI
19	80-4360	3	Shield-Bearing
20	80-4380	3	Spacer
21	110-6866	3	Shaft-Spindle
22		3	Spindle ASM
22:1	88-4510	1	Housing-Spindle
22:2	100-1048	2	Bearing-Ball

Ref	Part No.	Qty.	Description
22:3	62-3661	1	Spacer-Bearing
23	112-3973	1	Hook-Return, Spring
24	1-603414	1	Spring-Extension
25	110-6897	1	Bolt-Shoulder
26	323-10	1	Screw-HH

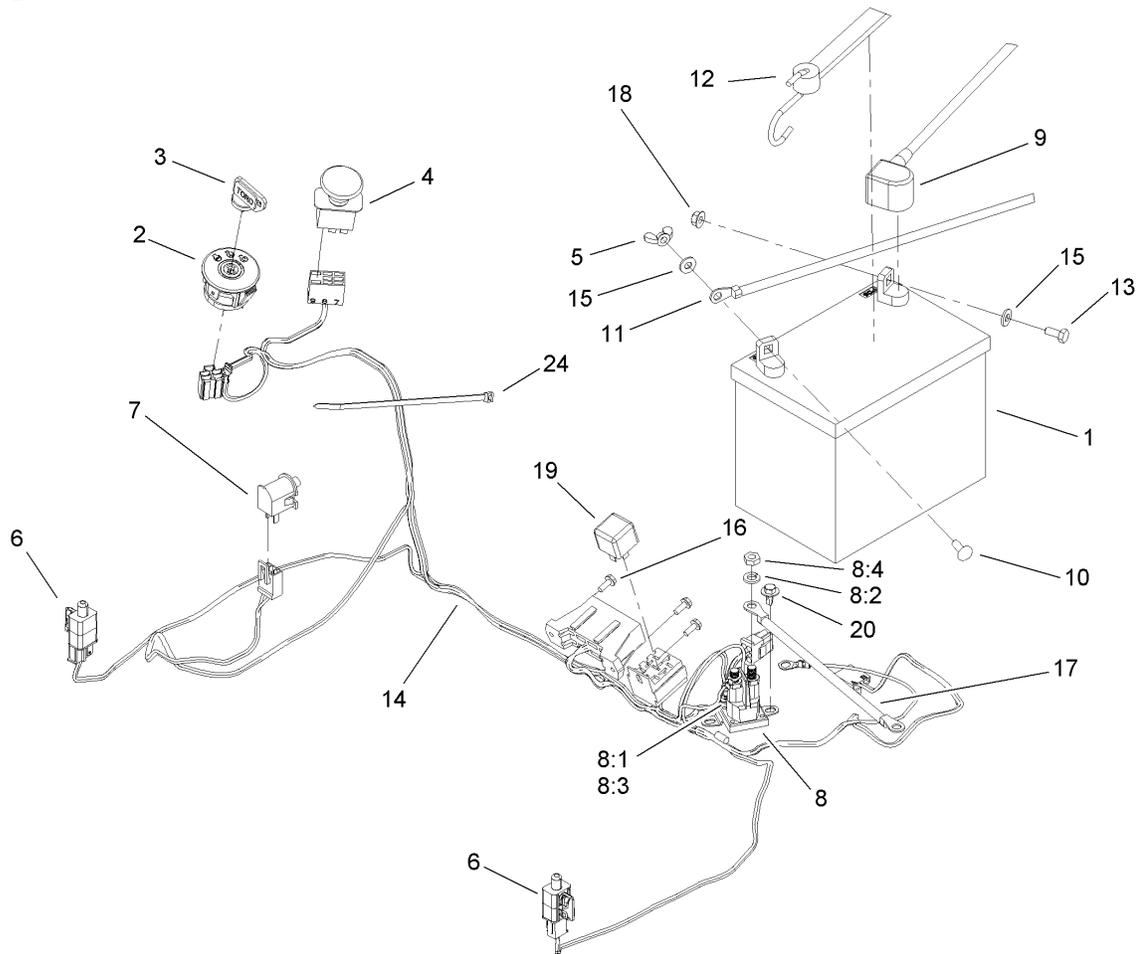


## Electrical Assembly

Ref	Part No.	Qty.	Description
1	104-2493	1	Battery
2	110-6764	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	93-9998	1	Switch-PTO
5	32103-22	1	Nut-Wing
6	110-6765	2	Switch-Single Pole No
7	82-2190	1	Switch-Bail
8	1-513075	1	Switch-Solenoid
8:1	3253-17	2	Washer-Lock
8:2	3253-4	2	Washer-Lock
8:3	3219-14	2	Nut-Hex
8:4	3220-2	2	Nut-Jam
9	110-6794	1	Cable-Battery, Red
10	3229-1	1	Screw-CARR
11	110-6793	1	Cable-Battery, Black
12	104-2466	1	Holddown-Battery
13	321-3	1	Screw-HH
14	110-1923	1	Harness-Wire
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	110-6792	1	Cable-Battery, Red
18	32128-33	2	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF

Ref	Part No.	Qty.	Description
24	614249	1	Strap-Tie




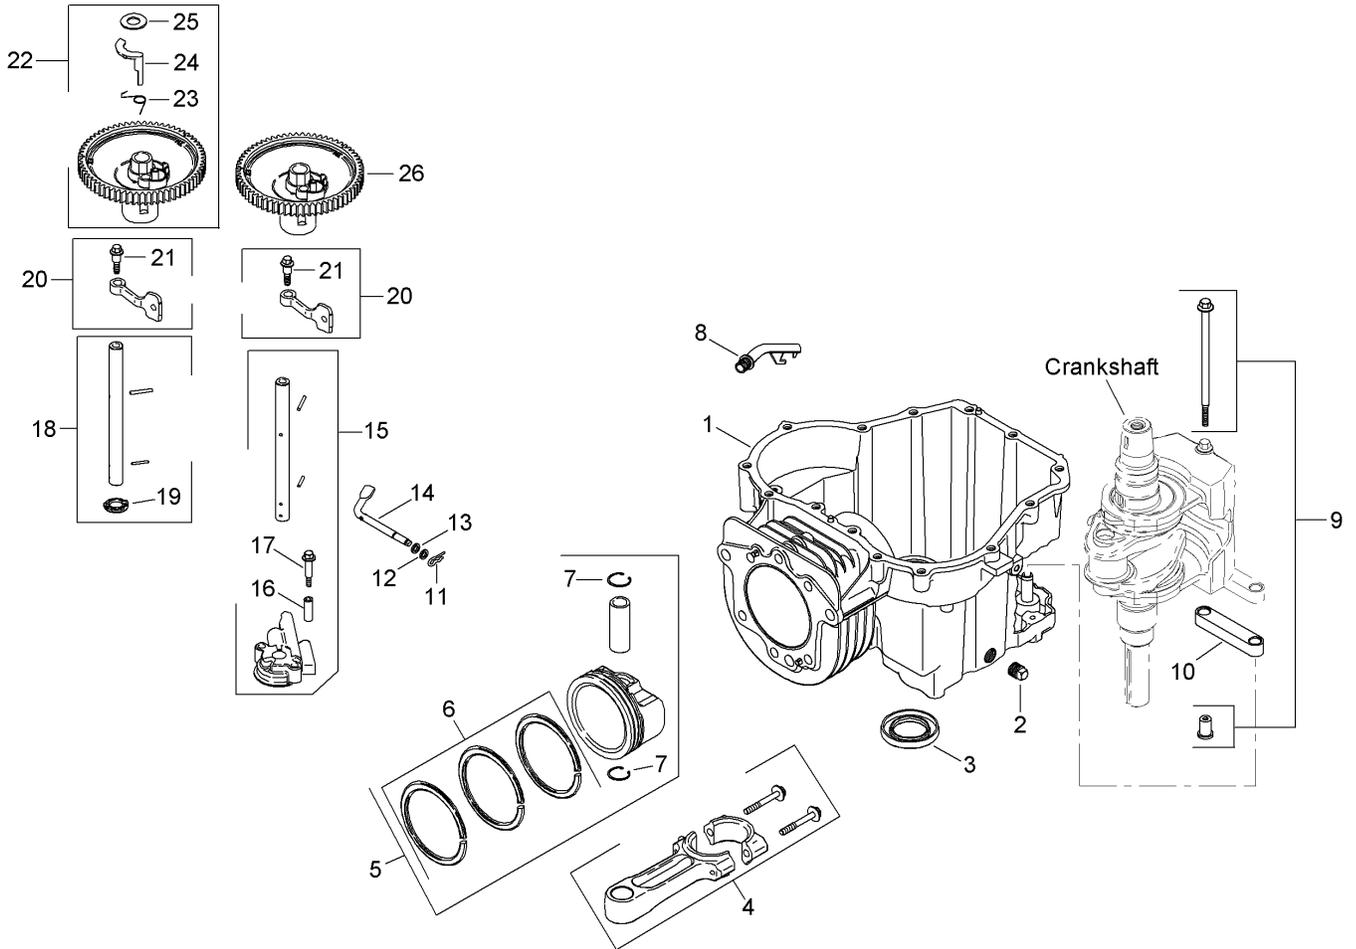

## Crankcase Assembly Kohler SV610S-0022

Ref	Part No.	Qty.	Description
❶	20 522 04	1	Crankcase (Sv610 Short Block)
❷	25 139 57-S	1	Plug-Solid, Square Head (.38)
❸	20 032 01-S	1	Seal-Oil
❹	20 067 04-S	1	Rod-Connecting
❺	20 874 01-S	1	Piston And Ring Set (94 Mm)
❻	20 108 01-S	1	Ring Set (94 Mm)
❼	20 018 04-S	2	Retainer-Pin, Piston
❽	20 123 02-S	1	Tube-Back, Drain
❾	20 380 16-S	1	Locating Pin Kit
❿	20 186 02-S	1	Linkage-Weight, Balance
⓫	12 154 05-S	1	Clip-Pin, Hitch
⓬	M-631015-S	1	Washer-Flat (6Mm)
⓭	X-25-102-S	1	Washer-Flat (1/4)
⓮	20 144 02-S	1	Shaft-Cross, Governor
⓯	20 393 02-S	1	Oil Pump ASM
⓰	20 112 02-S	2	Spacer-Screw, Oil Pump
⓱	20 086 13-S	2	Screw-Pump, Oil
⓲	20 144 11-S	1	Cam Center Shaft Kit (Exhaust)
⓳	20 468 08-S	1	Washer-Thrust
⓴	20 090 01-S	2	Cam Lever ASM
⓵	20 086 06-S	2	Bolt-Shoulder (M5X0.8X36)
⓶	20 010 06-S	1	Cam Gear ASM (Exhaust)
⓷	20 089 06-S	1	Spring-A C R
⓸	20 044 16-S	1	Weight-A C R


Ref	Part No.	Qty.	Description
❶	20 468 03-S	1	Washer-Thrust, A C R
❷	20 010 05-S	1	Cam Gear ASM (Intake)

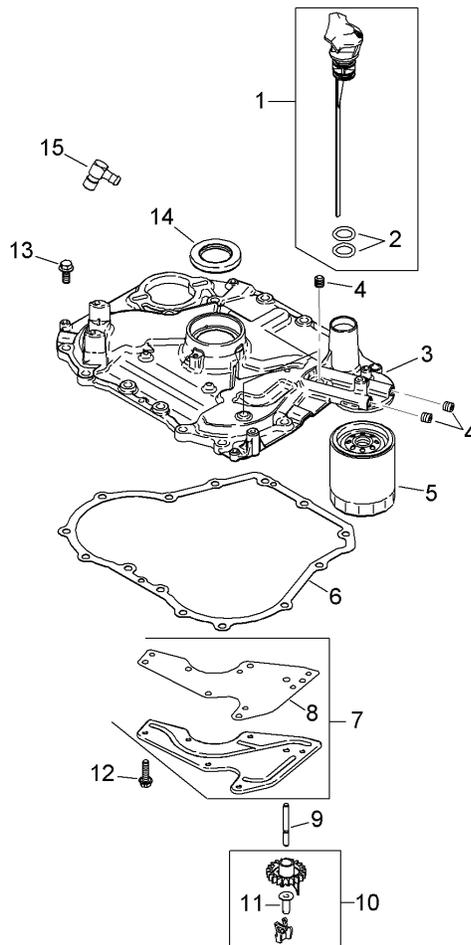

## Oil Pan and Lubrication Assembly Kohler SV610S-0022


Ref	Part No.	Qty.	Description
1	20 040 02-S	1	Dipstick Blade Kit (Yellow)
2	20 153 01-S	2	O Ring-Dipstick
3	20 009 21-S	1	Closure Plate ASM
4	25 139 60-S	4	Plug-Hex, Countersunk (.125)
5	12 050 01-S	1	Filter-Oil
6	20 041 01-S	1	Gasket-Plate, Closure
7	20 096 02-S	1	Oil Passage Cover Kit
8	20 041 02-S	1	Gasket-Passage, Oil
9	20 144 03-S	1	Shaft-Gear, Governor
10	20 310 01-S	1	Governor Gear ASM
11	12 380 01-S	1	Pin-Regulating, Governor
12	M-545013-S	6	Screw-Flange, Hex (M5X0.8X13)
13	25 086 127-S	14	Screw-Flange, Hex (1/2 Dog Point)
14	20 032 01-S	1	Seal-Oil
15	25 155 02-S	1	Connector-Hose, 90 DEG

--	--	--	--

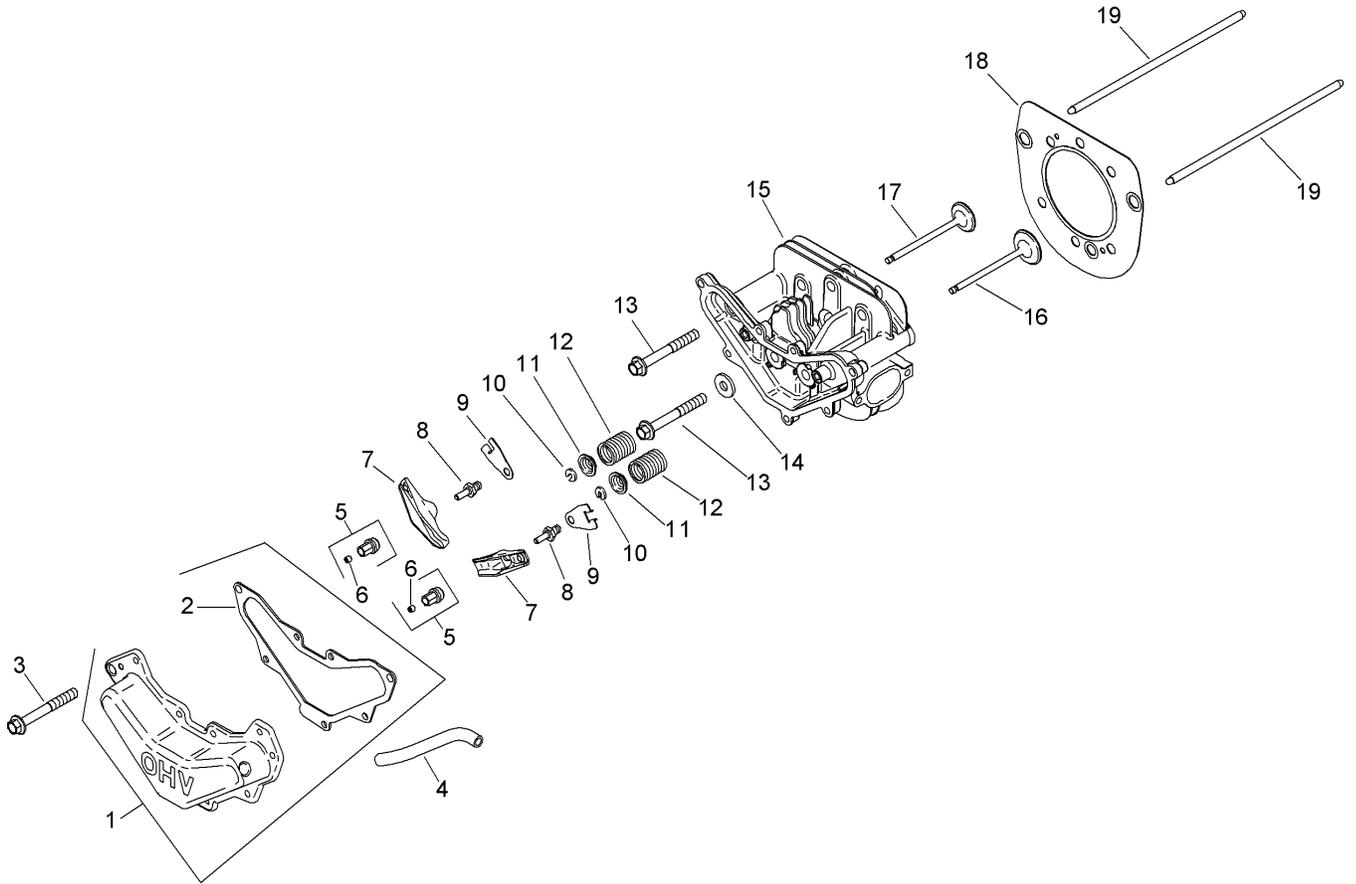


## Head, Valve and Breather Assembly Kohler SV610S-0022

Ref	Part No.	Qty.	Description
❶	20 096 07-S	1	Valve Cover Kit
❷	20 041 13-S	1	Gasket-Cover, Valve
❸	M-645020-S	7	Screw-Flange, Hex (M6X1.0X20)
❹	20 326 20-S	1	Hose-Breather
❺	20 599 02-S	2	Pivot-Arm, Rocker
❻	20 086 04-S	2	Screw-Set
❼	20 186 01-S	2	Arm-Rocker
❽	20 086 03-S	2	Stud-Rocker
❾	20 146 03-S	2	Plate-Guide, Push Rod
❿	20 062 01-S	2	Lock-Retainer
⓫	20 173 01-S	2	Cap-Spring, Valve
⓬	20 089 03-S	2	Spring-Valve
⓭	20 086 02-S	6	Screw-Flange, Hex (M10X1.5X37)
⓮	12 468 05-S	1	Washer-Flat (1/2)
⓯	20 318 07-S	1	Cylinder Head ASM
⓰	20 016 01-S	1	Valve-Exhaust
⓱	20 017 01-S	1	Valve-Intake
⓲	20 841 01-S	1	Cylinder Head Gasket Kit
⓳	20 411 04-S	2	Rod-Push

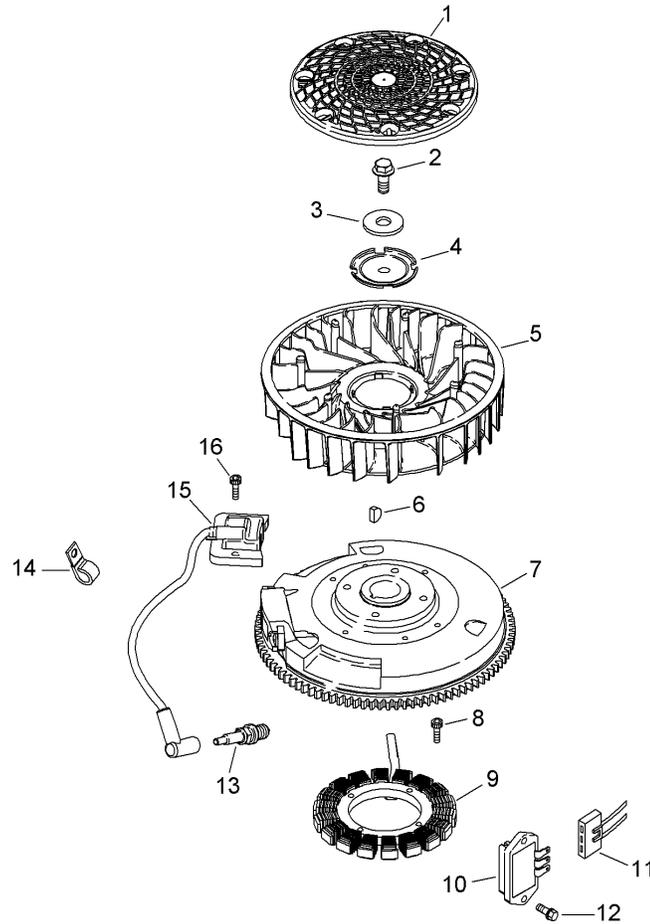
## Ignition and Electrical Assembly Kohler SV610S-0022

Ref	Part No.	Qty.	Description
1	20 162 02-S	1	Screen-Grass
2	25 086 125-S	1	Screw-Flange, Hex
3	25 468 09-S	1	Washer-Flat
4	20 146 05-S	1	Plate-Mounting, Fan
5	20 157 01-S	1	Fan
6	X-42-15-S	1	Key (.19 X .62)
7	20 025 35-S	1	Flywheel ASM
8	20 086 22-S	2	Screw-Drive, Trx HD
9	237878-S	1	Stator Kit (15 Amp)
10	41 403 10-S	1	Rectifier-Regulator
11	236602-S	1	Connector (3 Contact)
12	M-545020-S	2	Screw-HHFTF (M5X0.8X20)
13	25 132 14-S	1	Spark Plug (R F I)
14	20 154 04-S	2	Clip-Cable
15	20 584 03-S	1	Module-Ignition
16	M-561025-S	2	Screw-Socket, Hex (M5X0.8X25)
15	20 176 07-S	1	Harness-Wiring
15	25 452 01-S	2	Terminal

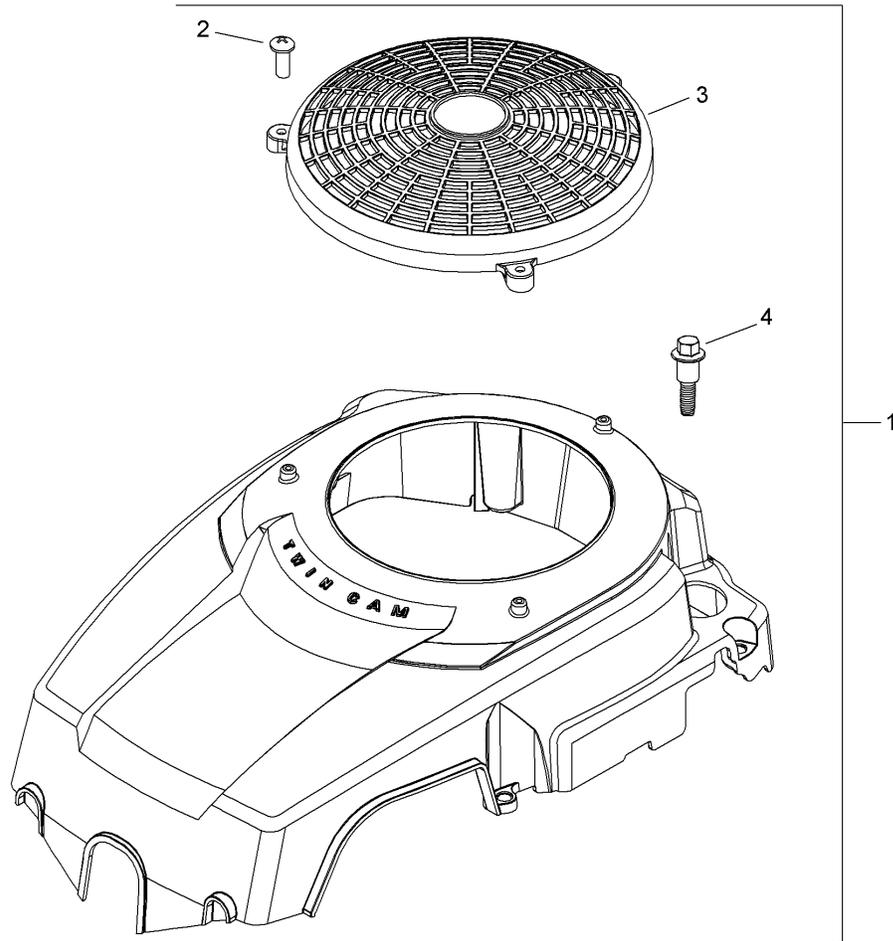


## Blower Housing and Baffle Assembly Kohler SV610S-0022

Ref	Part No.	Qty.	Description				
1	20 755 11-S	1	Blower Housing And Guard Kit				
2	24 086 41-S	3	Screw-Phl HD (11-16X1/2)				
3	20 314 06-S	1	Guard-Fixed				
4	20 086 06-S	4	Bolt-Shoulder (M5X0.8X36)				
15	20 113 29-S	1	Label-Round, Kohler				
16	41 037 10-S	1	Nameplate-Service				

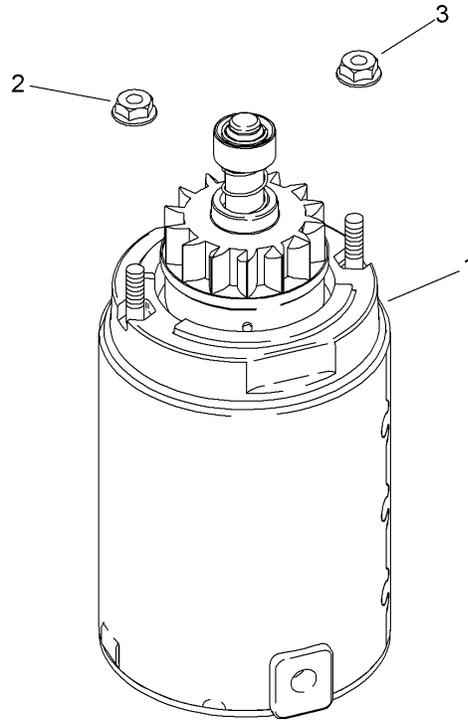

## Starting System Assembly Kohler SV610S-0022


Ref	Part No.	Qty.	Description				
1	20 098 05-S	1	Starter ASM				
2	25 100 31-S	2	Nut-Flange, Hex Serrated (10-24)				
3	12 100 07-S	1	Nut-Flange, Hex (1/4-20)				
1	12 221 02-S	1	Brush Kit				
1	20 211 02-S	1	Bolt-Thru				
1	20 227 01-S	1	Cap-End, Drive (J E)				
1	20 755 12-S	1	Drive Kit (J E)				

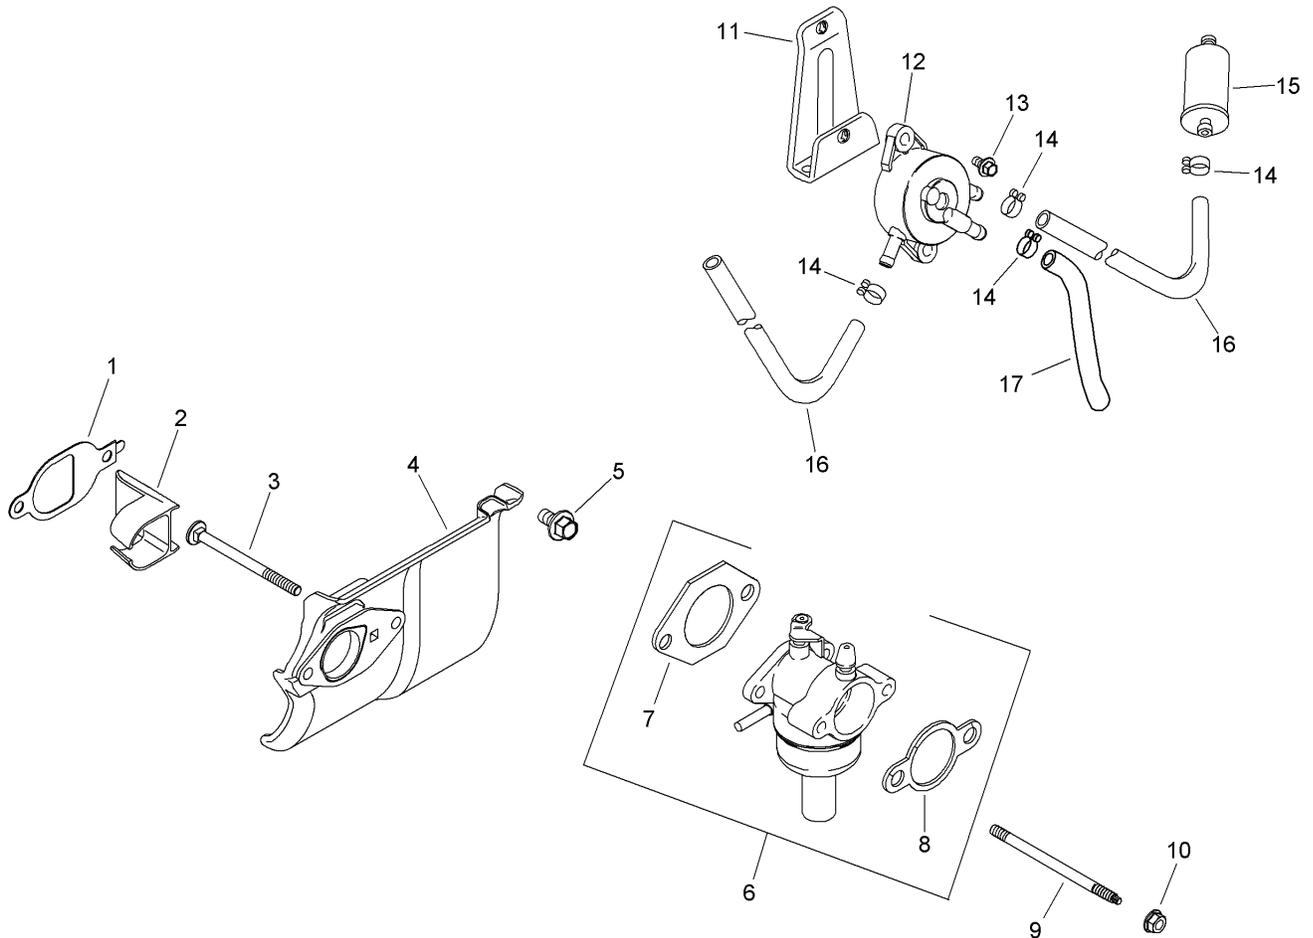

## Fuel System Assembly Kohler SV610S-0022

Ref	Part No.	Qty.	Description
❶	20 041 18-S	1	Gasket-Deflector, Heat
❷	20 332 01-S	1	Insert-Port, Intake
❸	20 072 07-S	1	Stud-Carburetor
❹	20 265 07-S	1	Deflector-Heat
❺	M-651020-S	1	Screw-Flange, Hex (M6X1.0X20)
❻	20 853 14-S	1	Carburetor ASM (Includes Gaskets)
❼	12 041 01-S	1	Gasket-Carburetor
❽	12 041 02-S	1	Gasket-Base, Air Cleaner
❾	20 072 05-S	2	Stud-Mounting, Carburetor (M6X1.0X100)
❿	M-641060-S	2	Nut-Hex, Flange (M6X1.0)
⓫	20 126 02-S	1	Bracket-Mounting, Fuel Pump
⓬	24 393 16-S	1	Pump-Pulse, Fuel
⓭	M-545010-S	2	Screw-HHFTF (M5X0.8X10)
⓮	25 237 14-S	4	Clamp-Hose
⓯	25 050 22-S	1	Filter-Fuel
⓰	25 111 34-S	2	Line-Fuel (24 Inch, Cut to needed Length)
⓱	52 353 20-S	1	Line-Fuel (10 Inch)
⓲	M-645016-S	2	Screw-HHFTF (M6X1.0X16)
⓳	25 454 05-S	1	Tie
⓴	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)
⓵	25 431 02-S	1	Sleeve-Abrasion, Anti
⓶	12 755 110-S	1	Choke Shaft Kit

Ref	Part No.	Qty.	Description
⓷	12 757 02-S	1	Float Repair Kit
⓸	12 757 03-S	1	Carburetor Repair Kit
⓹	12 757 33-S	1	Solenoid Repair Kit
⓺	12 757 37-S	1	Bowl Replacement Repair Kit
⓻	20 755 06-S	1	High Altitude Kit (5, 000 Ft)
⓼	20 755 07-S	1	High Altitude Kit (10, 000 Ft)

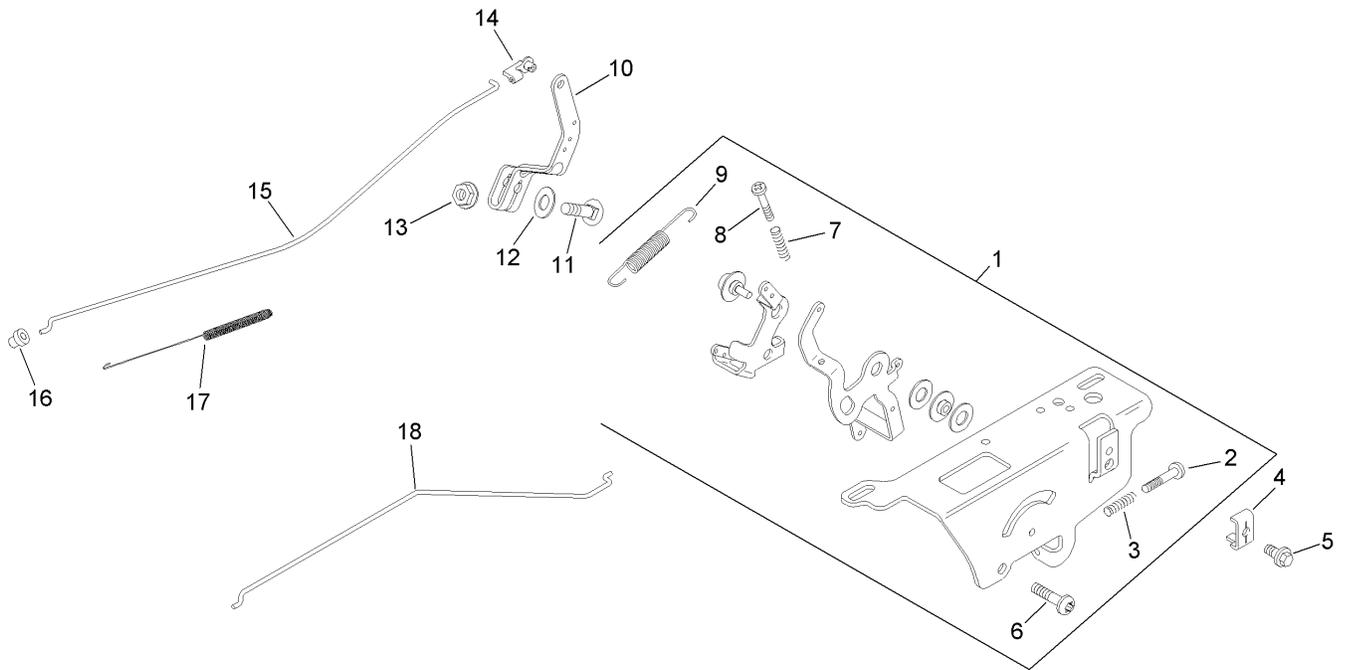


## Engine Control Assembly Kohler SV610S-0022

Ref	Part No.	Qty.	Description
❶	20 536 05-S	1	Speed Control ASM
❷	20 086 10-S	1	Screw-Thread Forming (M4X0.7X25)
❸	20 086 18-S	1	Screw-Phl Thd Frm (M4X0.7X38)
❹	12 089 11-S	1	Spring-Control, Speed
❺	20 089 12-S	1	Spring-Control, Speed (Long)
❻	12 237 01-S	1	Clamp-Cable
❼	M-545016-S	1	Screw-HHFTF (M5X0.8X16)
❽	M-664020-S	2	Screw-Socket, 6 Lobed (Thread Forming, M6X1.0X20)
❾	20 086 10-S	1	Screw-Thread Forming (M4X0.7X25)
❿	20 086 18-S	1	Screw-Phl Thd Frm (M4X0.7X38)
⓫	20 089 11-S	1	Spring-Governor
⓬	20 090 02-S	1	Lever-Governor
⓭	52 211 04-S	1	Bolt-Square Neck, Round Head (1/4-20X1)
⓮	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)
⓯	12 100 07-S	1	Nut-Flange, Hex (1/4-20)
⓰	25 158 11-S	1	Bushing-Linkage, Throttle
⓱	20 079 04-S	1	Linkage-Throttle
⓲	25 158 08-S	1	Bushing-Retaining, Linkage
⓳	20 089 10-S	1	Spring-Linkage
⓴	20 079 05-S	1	Linkage-Choke (Single Wire)



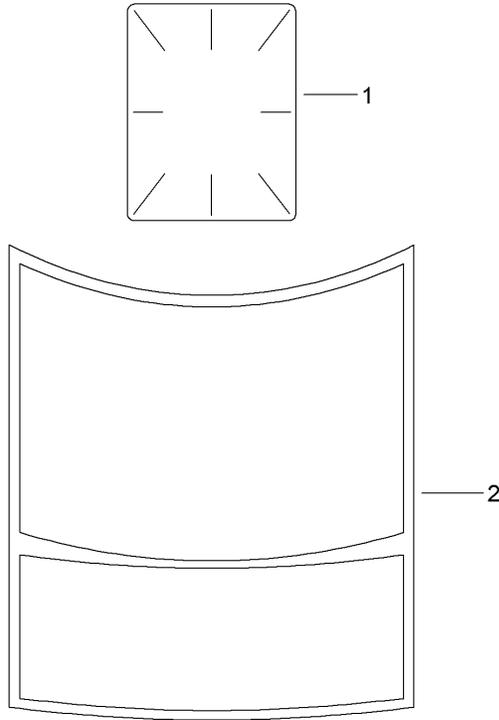

Artwork is representative  
Actual labels may differ depending on model and specification number

## Decal Assembly Kohler SV610S-0022

Ref	Part No.	Qty.	Description
1	25 113 39-S	1	Decal-Laminate, Clear
2	20 113 28-S	1	Decal-21 H P

# Attachments and Accessories

## For 74391 - TimeCutter Z5000 Riding Mower

Product Name	Model/Part
Hour Meter Kit .....	112-9763
Deck Ring Kit .....	114-1608
Armrest Kit .....	79212
Replacement Blade Kit .....	79221
Foot Assist Cutting Unit Lift Kit .....	79313
Engine Cover Kit .....	79314
Floor Mat Kit .....	79315
42 Inch and 50 Inch Twin Bagger .....	79324

# NOTES

# NOTES

