



NEW HOLLAND ..

MZ17H Zero-Turn-Radius Mower

Model No. 725058036 - T06ZR0001 and up.

Model No. 94603 - T06ZR0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	 3	Oil Pan and Lubrication Assembly Kohler Cv492s-27525	 21
Height-of-Cut Handle and Plate Assembly	 4	Head, Valve and Breather Assembly Kohler Cv492s-27525	 22
Main Frame Assembly	 5	Ignition and Electrical Assembly Kohler Cv492s-27525	 23
Fuel Tank and Control Pod Assembly	 6	Blower Housing and Baffle Assembly Kohler Cv492s-27525	 24
Parking Brake Assembly	 7	Starter Assembly Kohler Cv492s-27525	 25
Motion Control Assembly	 8	Fuel System Assembly Kohler Cv492s-27525	 26
Hydro and Belt Drive Assembly	 9	Engine Control Assembly Kohler Cv492s-27525	 27
LH Hydro Assembly No. 108-8507	 10	Air Intake and Filtration Assembly Kohler Cv492s-27525	 28
RH Hydro Assembly No. 108-8506	 12	Exhaust Assembly Kohler Cv492s-27525	 29
Engine and Clutch Assembly	 14	Attachments and Accessories List	 30
Electrical Assembly	 15		
44in Deck Assembly	 16		
44in Deck Assembly No. 110-6521	 17		
44in Deck Belt Drive Assembly	 18		
Crankshaft Assembly Kohler Cv492s-27525	 19		
Crankcase Assembly Kohler Cv492s-27525	 20		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain from your local Kohler dealer

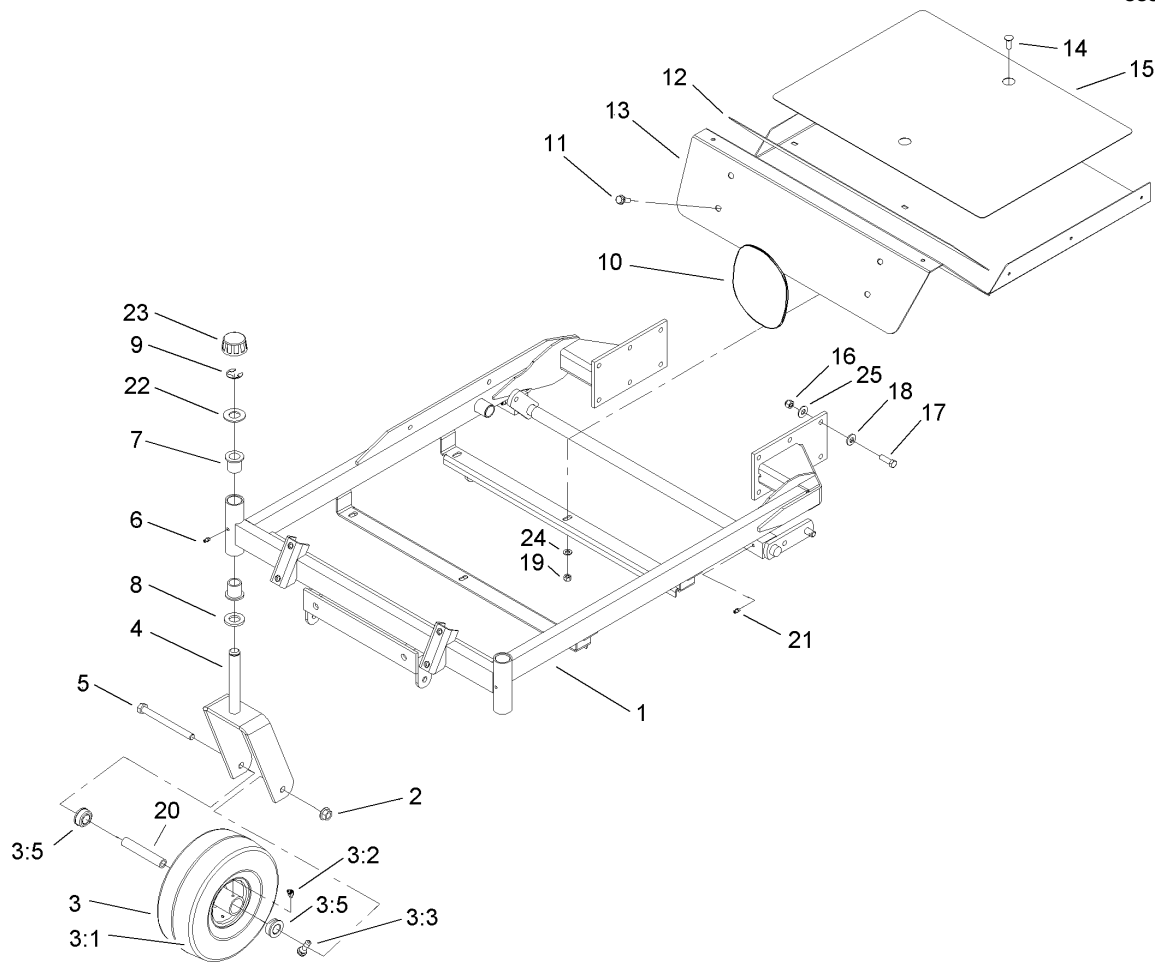

Front Frame Assembly


Ref	Part No.	Qty.	Description
1	108-2311-04	1	Carrier Frame ASM
2	32128-23	2	Nut-HF
3	107-7342	2	Front Wheel And Tire ASM
3:1	105-1943	1	Tire
3:2	302-5	1	Fitting-Grease
3:3	232-27	1	Stem-Valve
3:5	114-1640	2	Bushing-Flange
❶ 3:99	93-4244	1	Tube-Inner (W/Valve)
4	100-7363-04	2	Caster Fork ASM
5	325-22	2	Screw-HH
6	302-5	2	Fitting-Grease
7	1-303514	4	Bearing-Flanged
8	1-513338	2	Washer-Flat
9	32151-103	2	Ring-Snap
10	107-7338	1	Emblem-Logo
11	66-9300	4	Screw-HF
12	104-3639	1	Pad-Skid, Anti
13	100-7386-03	1	Floorpan
14	3230-28	6	Screw-CARR
15	104-3640	1	Pad-Skid, Anti
16	3296-39	12	Nut-Lock, NI
17	323-7	12	Screw-HH
18	98-5975	12	Washer-Belleville
19	3296-29	6	Nut-Lock, NI

Ref	Part No.	Qty.	Description
20	104-3667	2	Spanner-Wheel
21	302-19	2	Fitting-Grease
22	104-8076	2	Washer
23	61-9780	2	Cap-Hub
24	3256-23	6	Washer-Flat
25	1-809107	12	Washer-Hardened

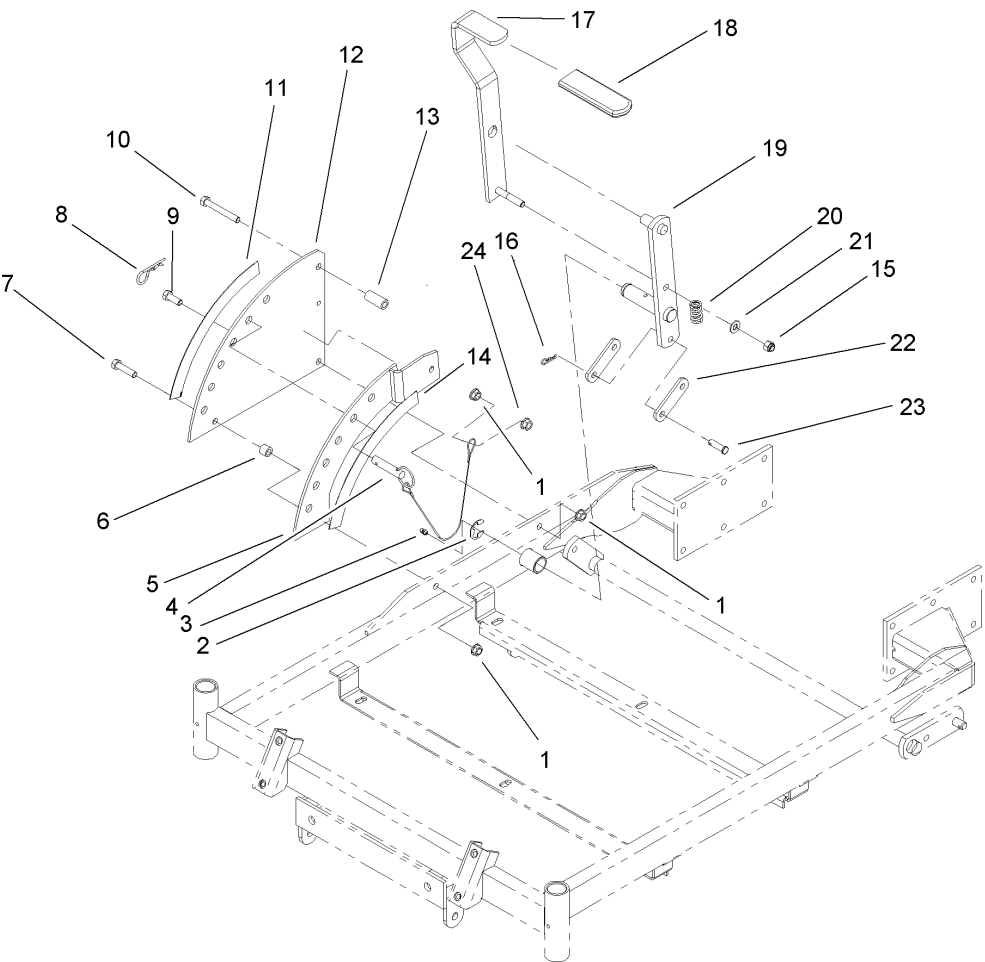

Height-of-Cut Handle and Plate Assembly


Ref	Part No.	Qty.	Description				
1	3290-357	3	Nut-HHF, Whiz				
2	32151-103	1	Ring-Snap				
3	302-5	1	Fitting-Grease				
4	104-3678	1	Pin-Hitch				
5	100-7335-04	1	Lift Plate ASM				
6	1-413088	1	Bushing-Lever, Lift				
7	323-8	1	Screw-HH				
8	1-806005	1	Pin-Hair				
9	323-6	1	Screw-HH				
10	323-13	1	Screw-HH				
11	104-3641	1	Decal-Deck Height, Outer				
12	100-7384-04	1	Plate-Lift, Deck				
13	1-633082	1	Bushing-Lever, Lift				
14	104-8032	1	Decal-Deck Height, Inner				
15	3296-39	1	Nut-Lock, NI				
16	1-806003	2	Pin-Hair				
17	1-652023-03	1	Lever-Lift				
18	1-633295	1	Grip-Lever, Lift				
19	1-652027-03	1	Arm-Deck, Lift				
20	1-633325	1	Spring-Compression				
21	3256-24	1	Washer-Flat				
22	1-633068	2	Arm-Lift, Deck				
23	283-2	2	Pin-Clevis				
24	32128-21	1	Nut-HF				

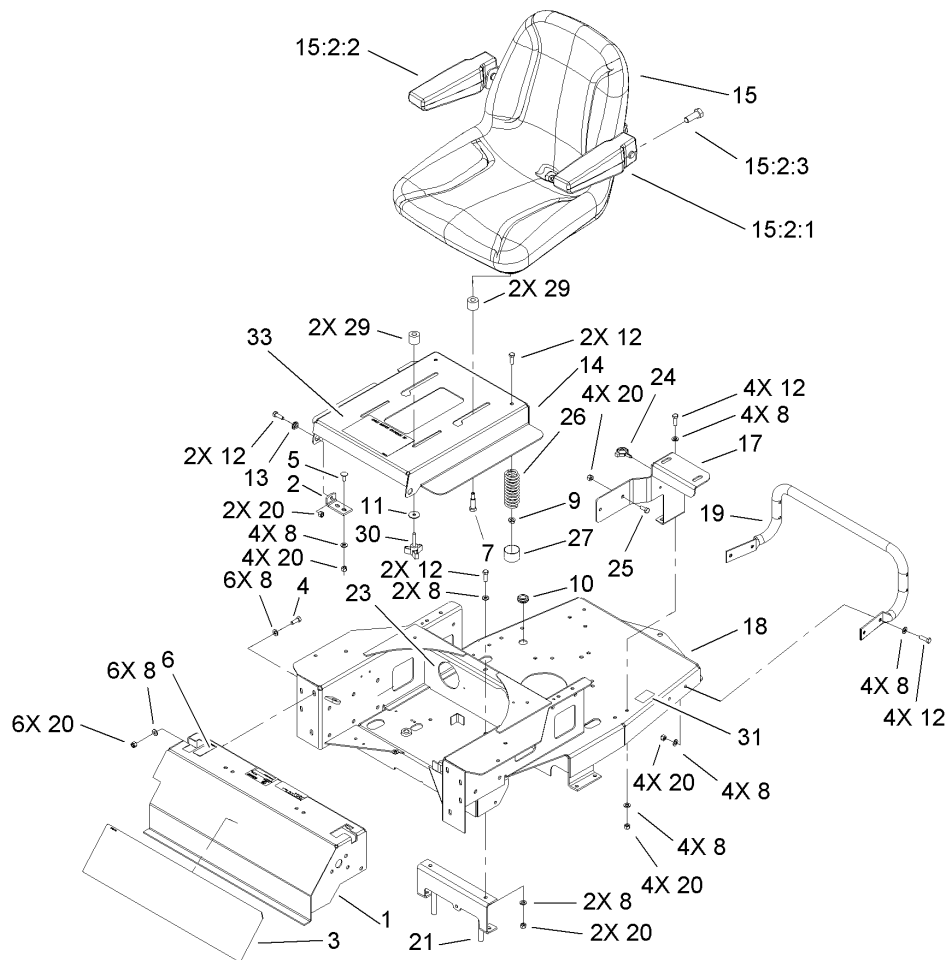

Main Frame Assembly


Ref	Part No.	Qty.	Description
1	104-8040-03	1	Console
2	104-8057-03	2	Bracket-Pivot
3	107-7378	1	Decal-Danger
4	322-4	6	Screw-HH
5	3230-23	4	Screw-CARR
6	107-7381	2	Decal-Control, Motion
7	7-0030	2	Bolt-Shoulder
8	3256-23	36	Washer-Flat
9	32128-25	2	Nut-HF
10	237-124	1	Grommet
11	5-4460	2	Washer-Pivot
12	322-5	14	Screw-HH
13	105503	2	Bushing
14	108-9572-03	1	Seat Pan ASM
15	106-6446	1	Seat ASM
15:2		1	Armrest Kit
15:2:1	108-6177	1	LH Armrest ASM
15:2:2	108-6178	1	RH Armrest ASM
15:2:3	108-6179	6	Screw-HSBH
16	100-7376-04	1	RH Bracket ASM
17	100-7368-04	1	LH Bracket ASM
18	108-2310-04	1	Rear Frame ASM
19	100-7332-03	1	Rod-Support, Rear
20	3296-29	26	Nut-Lock, NI

Ref	Part No.	Qty.	Description
21	105-6987-03	1	Bracket
23	105-1854	1	Cover-Conduit
24	105-1853	2	Clamp-Hose
25	322-3	4	Screw-HH
26	92-7054	2	Spring-Compression
27	701178	2	Cap-Protector
29	108-2327	4	Spacer
30	108-2356	2	Knob
31	106-0699	1	Decal-Warning
33	107-2473	1	Decal-Service

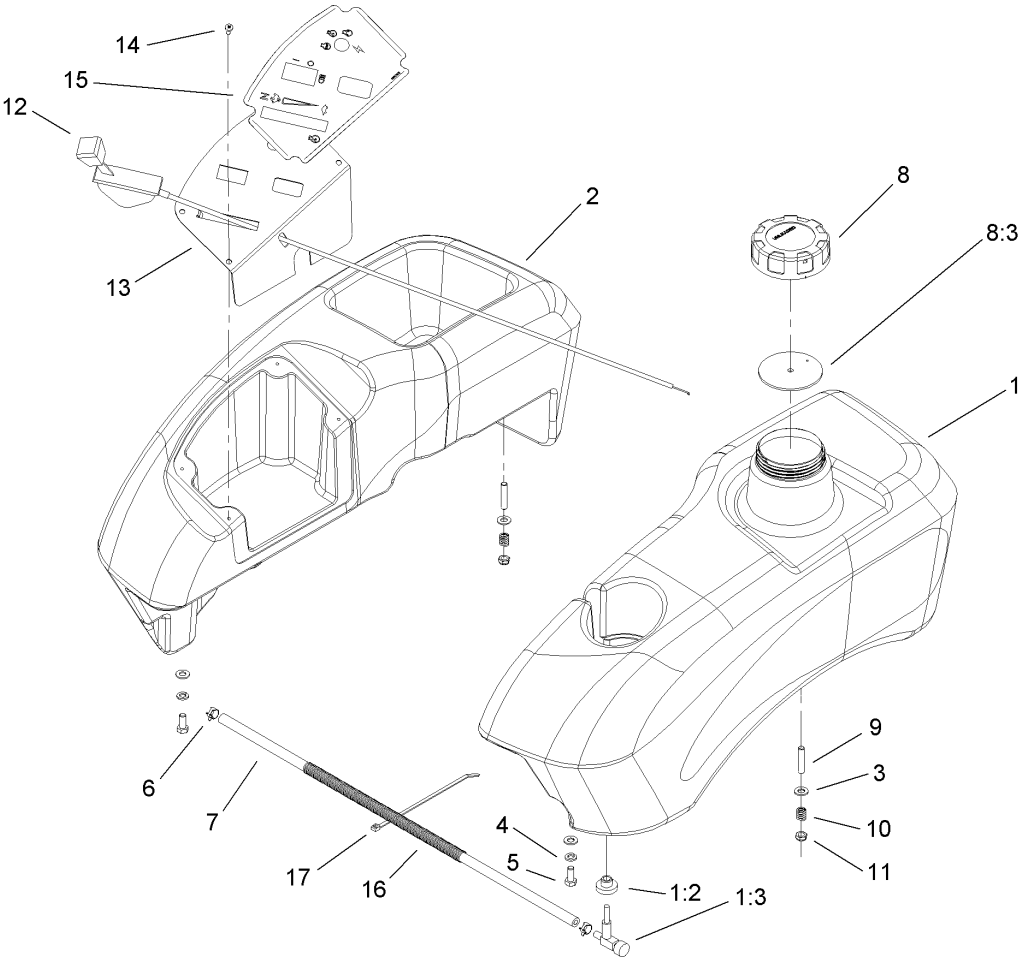

Fuel Tank and Control Pod Assembly


Ref	Part No.	Qty.	Description				
1	110-6526	1	Fuel Tank ASM				
1:2	46-6560	1	Bushing				
1:3	110-6565	1	Valve-Fuel				
2	110-6525	1	Console-Tank				
3	3256-23	8	Washer-Flat				
4	3253-4	4	Washer-Lock				
5	322-3	4	Screw-HH				
6	2412-98	2	Clamp				
7	109-0299	1	Hose-Fuel				
8	88-3980	1	Gas Cap ASM				
8:3	88-4010	1	Gasket-Cap, Gas				
9	1-633023	4	Stud				
10	1-633349	4	Spring-Tank, Fuel				
11	3296-47	4	Nut-Lock, NI				
12	110-6537	1	Cable-Throttle				
13	104-3664-03	1	Panel-Control				
14	3250-14	4	Screw-PPH				
15	107-7376	1	Decal-Panel, Control				
16	105-1854	1	Cover-Conduit				
17	614249	1	Strap-Tie				

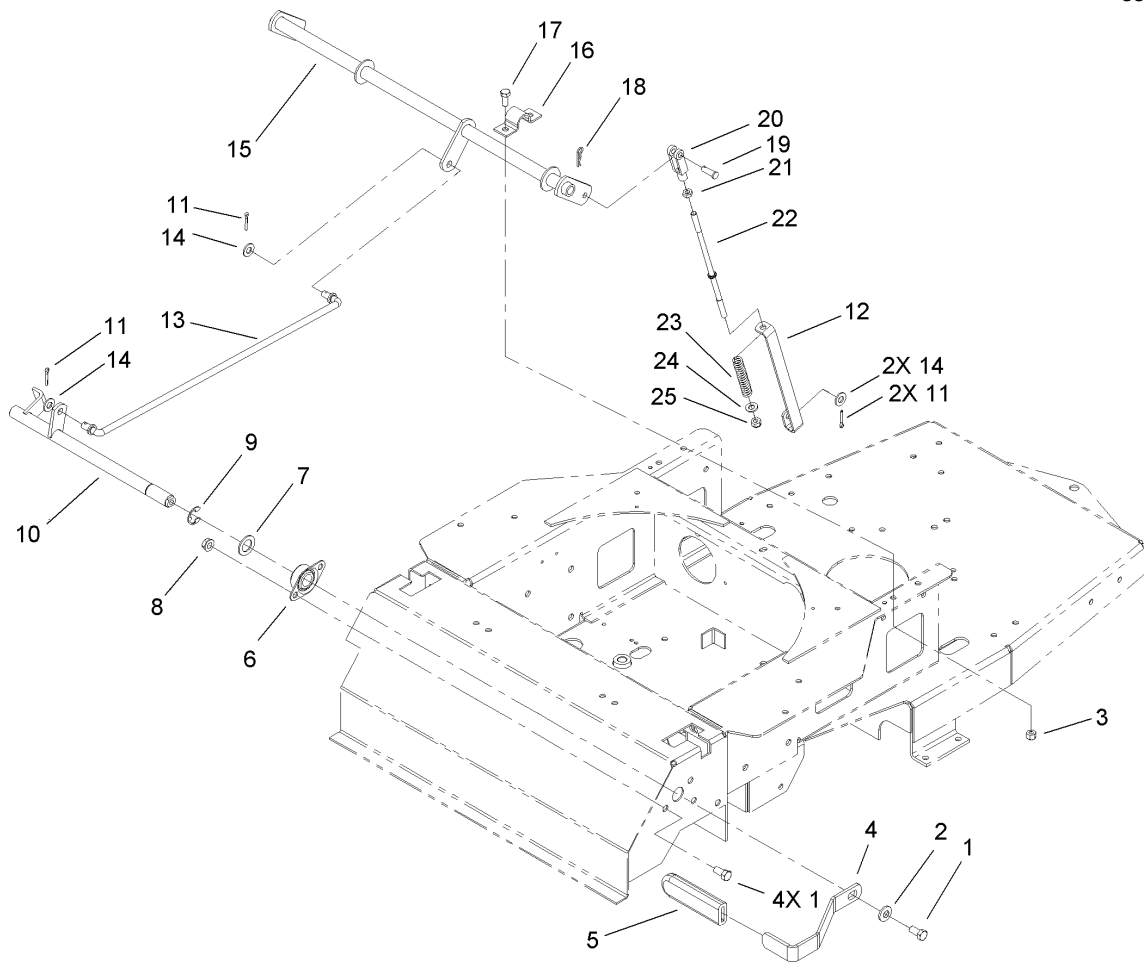

Parking Brake Assembly

Ref	Part No.	Qty.	Description
1	323-4	5	Screw-HH
2	98-5975	1	Washer-Belleville
3	3296-29	4	Nut-Lock, NI
4	100-7346-03	1	Handle-Brake, Park
5	1-633268	1	Grip-Lever, Brake
6	1-633102	2	Bearing-Flange, Side
7	1-303007	1	Washer
8	3290-357	4	Nut-HHF, Whiz
9	32151-48	1	E-Ring
10	100-7318	1	Brake Shaft ASM
11	3272-10	4	Pin-Cotter
12	104-3675	2	Bracket-Spring, Brake
13	104-8046	1	Rod-Brake, Upper
14	3256-24	4	Washer-Flat
15	104-3670-03	1	Shaft-Brake
16	88-4730	2	Clamp-Pivot, HOC
17	322-3	4	Screw-HH
18	1-806003	2	Pin-Hair
19	1-808280	2	Pin-Clevis
20	1-303105	2	Yoke-Adjustable
21	3219-2	2	Nut-Hex
22	104-3674	2	Rod-Brake, Upper
23	38-4520	2	Spring
24	3256-23	2	Washer-Flat


Ref	Part No.	Qty.	Description
25	3296-4	2	Nut-Lock

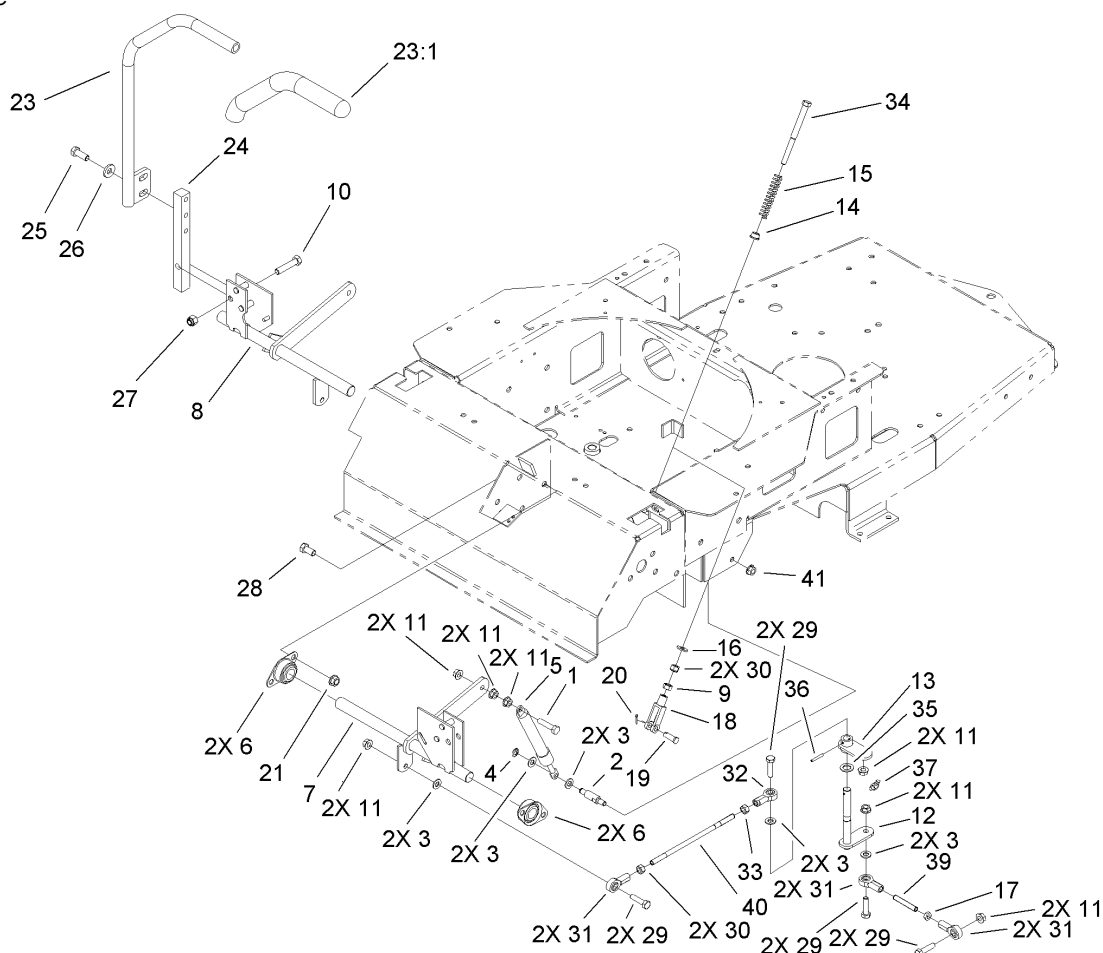

Motion Control Assembly

Ref	Part No.	Qty.	Description
1	1-403180	2	Screw-HH
2	1-653316	2	Pin-Damper
3	3256-23	10	Washer-Flat
4	32120-35	2	Ring-Retaining, EXT
5	103-2913	2	Damper-Control, Motion
6	1-633102	4	Bearing-Flange, Side
7	100-7341	1	Bracket-Motion Control, LH
8	100-7340	1	Bracket-Motion Control, RH
9	3296-4	2	Nut-Lock
10	323-9	2	Screw-HH
11	32128-20	14	Nut-HF
12	100-7311	2	Pivot ASM
13	100-7313	2	Pivot Plate ASM
14	1-603735	2	Bushing-Flanged
15	1-603807	2	Spring-Return, Neutral
16	3256-2	2	Washer-Flat
17	3220-2	2	Nut-Jam
18	1-303105	2	Yoke-Adjustable
19	1-808280	2	Pin-Clevis
20	3272-5	2	Pin-Cotter
21	3290-357	6	Nut-HHF, Whiz
22	103-0631	1	LH Lever ASM
22:1	1-633257	1	Grip-Control, Motion
23	103-0632	1	RH Lever ASM


Ref	Part No.	Qty.	Description
23:1	1-633257	1	Grip-Control, Motion
24	103-0407	2	Arm-Shaft, Control
25	323-6	4	Screw-HH
26	98-5975	4	Washer-Belleville
27	3296-39	2	Nut-Lock, NI
28	323-4	6	Screw-HH
29	322-5	8	Screw-HH
30	3219-2	4	Nut-Hex
31	1-543017	6	Balljoint-RH
32	1-633152	2	Balljoint-LH
33	1-804524	2	Nut
34	1-603737	2	Bolt-Return, Neutral
35	100-7336	2	Washer
36	933156	2	Pin-Roll
37	302-11	2	Fitting-Lube, 45 DEG
38	104-3606	1	Linkage-Lower, RH
39	104-3607	1	Linkage-Lower, LH
40	104-3605	2	Linkage-Upper
41	32128-20	2	Nut-HF

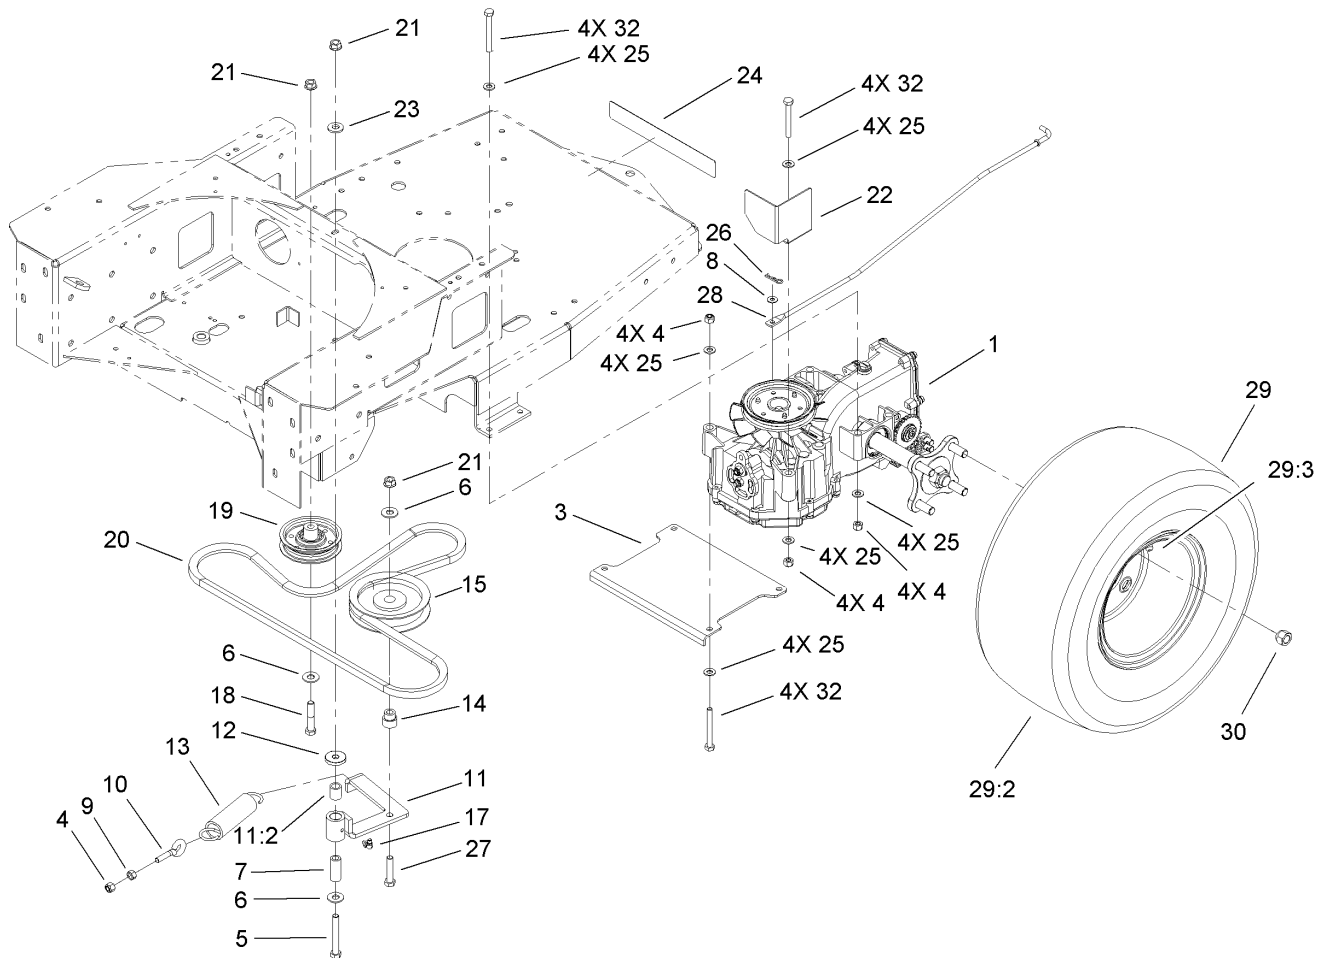

Hydro and Belt Drive Assembly


Ref	Part No.	Qty.	Description
1	108-8507	1	Hydro-LH
❶2	108-8506	1	Hydro-RH
3	100-7317-03	1	Plate-Hydro, Lower
4	3296-29	13	Nut-Lock, NI
5	323-13	1	Screw-HH
6	3256-4	3	Washer-Flat
7	1-603044	1	Bushing
8	3256-1	2	Washer-Flat
9	32128-20	1	Nut-HF
10	55-9420	1	Bolt-Eye
11	104-3614	1	Idler Arm ASM
11:2	1-513034	2	Sleeve-Bearing
12	104-8005	1	Spacer
13	1-603414	1	Spring-Extension
14	1-603496	1	Bushing-Idler
15	1-603843	1	Pulley-Idler
❶16	104-3668	1	Rod-RH
17	302-40	1	Fitting-Grease
18	323-10	1	Screw-HH
19	104-3630	1	Pulley-Idler
20	104-3622	1	Belt-V
21	32128-21	3	Nut-HF
22	104-8033-03	1	Guard-Fan, LH
23	98-5975	1	Washer-Belleville

Ref	Part No.	Qty.	Description
24	104-8061	1	Decal
25	3256-23	24	Washer-Flat
26	1-806003	2	Pin-Hair
27	323-9	1	Screw-HH
28	104-3669	1	Rod-LH
29	110-6522	2	Wheel And Tire ASM
29:2	106-7006	1	Tire
29:3	232-27	1	Stem-Valve
❶29:99	107-2491	1	Tube-Tire
30	242-50	8	Nut-Lug
❶31	104-8013-03	1	Guard-Fan, RH
32	322-13	12	Screw-HH

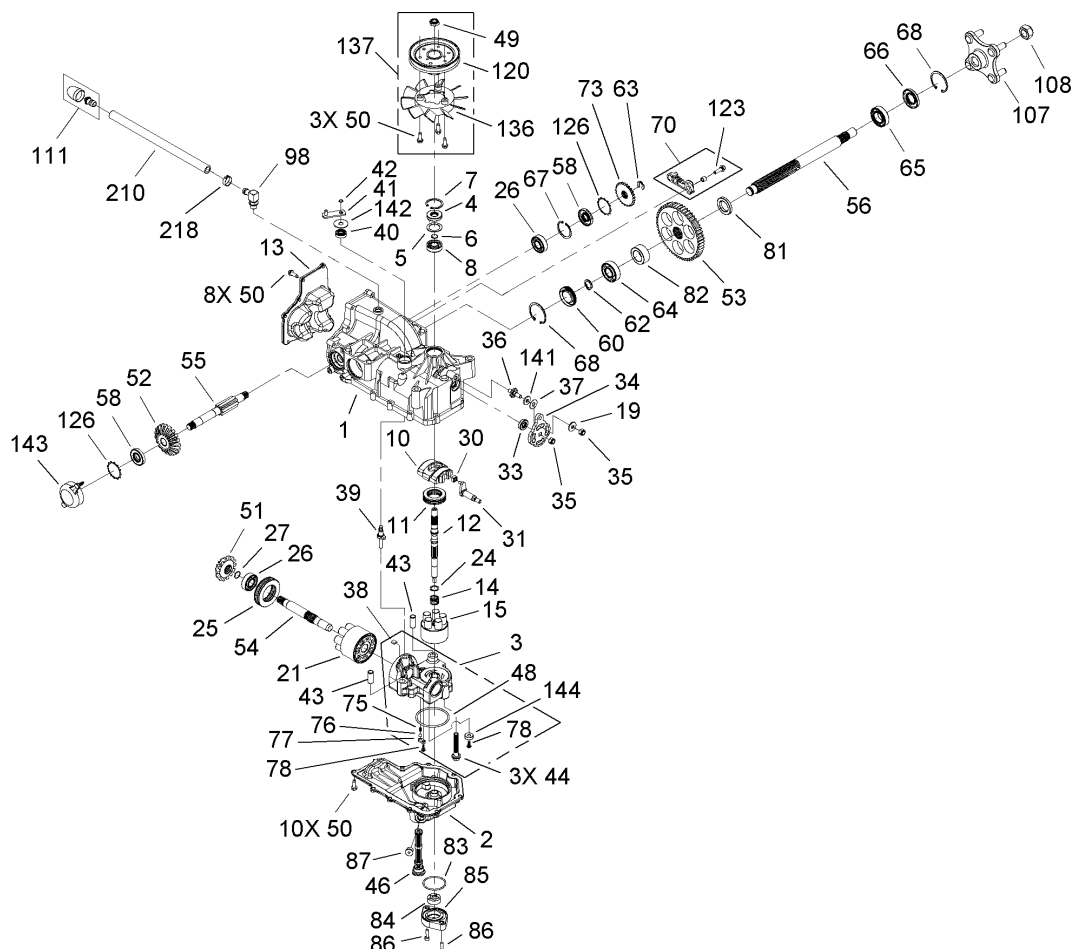

LH Hydro Assembly No. 108-8507


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-1700	1	Main Housing Kit	35	105-1872	2	Nut
2	108-8541	1	Housing-Lower	36	104-2116	1	Stud
3	108-8542	1	Center Section Kit	37	105-1873	1	Puck-Friction
4	92-6543	1	Seal-Lip	38	94-6925	1	Plate-Bypass
5	104-2104	1	Spacer	39	94-1914	1	Actuator-Bypass
6	94-1902	1	Ring-Wire, Retaining	40	92-6545	1	Seal-Lip
7	94-1903	1	Ring-Retaining	41	104-2117	1	Arm-Bypass
8	94-1904	1	Bearing-Shaft, Ball	42	936109	1	Ring-Retaining
10	94-1907	1	Swashplate-Variable	43	94-1927	2	Pin
11	94-6922	1	Bearing-Thrust	44	94-6926	3	Bolt
12	108-8543	1	Shaft-Input	46	108-8544	1	Filter ASM
13	105-1870	1	Cover-Back	48	108-8545	1	O-Ring
14	94-1936	1	Spring-Block	49	105-1875	1	Nut-Lock
15	104-2106	1	Cylinder Block ASM	50	104-2120	21	Screw
19	5-4460	1	Washer-Pivot	51	105-1876	1	Gear-Bevel, 14T
21	94-1913	1	Cylinder Block ASM	52	105-1877	1	Gear-Bevel, 19T
24	94-1937	1	Washer-Block, Thrust	53	105-1878	1	Gear-Bevel, 53T
25	94-6923	1	Bearing-Thrust	54	105-1879	1	Shaft-Motor
26	104-5311	2	Bearing-Ball	55	105-1880	1	Shaft-Brake
27	104-5307	1	Ring-Retaining	56	105-1881	1	Shaft-Axle
30	94-1910	1	Guide-Slot	58	104-5310	2	Seal-Lip
31	104-2112	1	Trunnion ASM	60	105-1882	1	Plug-Side Seal
33	92-6544	1	Seal-Lip	62	105-1883	1	Ring-Axle, Retaining
34	105-1871	1	Arm-Control	63	105-1884	1	Ring-Retaining

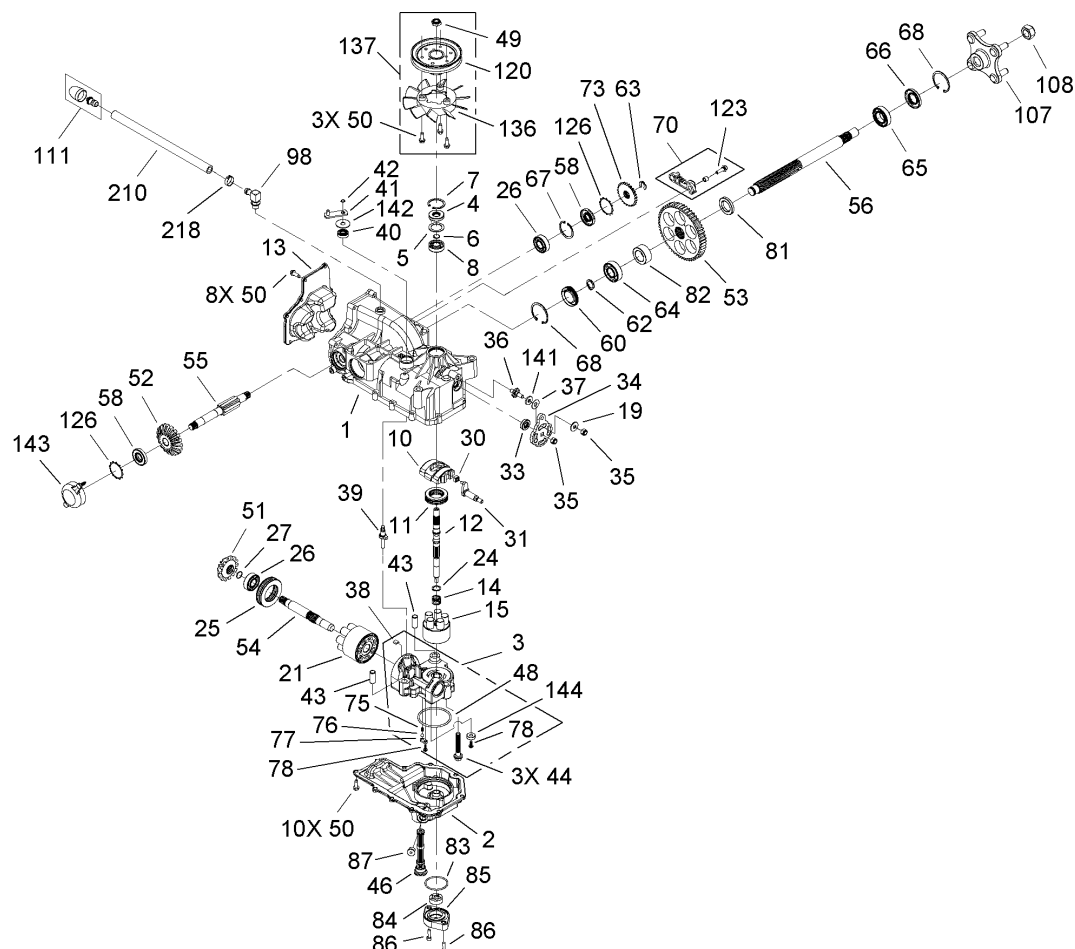

LH Hydro Assembly No. 108-8507 (continued)


Ref	Part No.	Qty.	Description
64	105-1885	1	Bearing-Ball
65	105-1886	1	Bearing-Ball
66	105-1887	1	Seal
67	104-5309	1	Ring-Retaining
68	105-1888	2	Ring-Retaining, Axle
70	108-8547	1	RH Brake Arm ASM
73	105-1890	1	Disc-Brake
75	108-8548	1	Spring-Helical
76	108-8549	1	Ball-1/4In
77	108-8550	1	Plate-Relief
78	104-5352	2	Bolt-Tapping, Self
81	108-8552	1	Spacer
82	108-8553	1	Spacer
83	106-8757	1	O-Ring
84	104-2122	1	Gerotor ASM
85	104-2124	1	Cover-Gerotor
86	106-8758	2	Screw-HSH
87	104-2184	1	Spring-Arm, Brake
98	108-8559	1	Fitting-90 DEG
100	104-2147	1	Sealant
107	105-1894	1	Hub ASM
108	105-1895	1	Nut
111	107-1701	1	Cap Vent ASM
120	104-1754	1	Pulley

Ref	Part No.	Qty.	Description
123	107-1703	1	Screw-HHF
126	105-1898	2	Ring-Retaining
134	105-1899	1	Seal Kit
136	105-1927	1	Fan
137	105-1928	1	Fan Pulley Kit
141	107-1705	1	Washer
142	107-1706	1	Washer
143	107-1707	1	Cover-Brake, Plastic
144	104-5330	1	Magnet-Ring
210	108-8561	1	Hose
218	108-8562	1	Pinch-Clamp, Single Ear

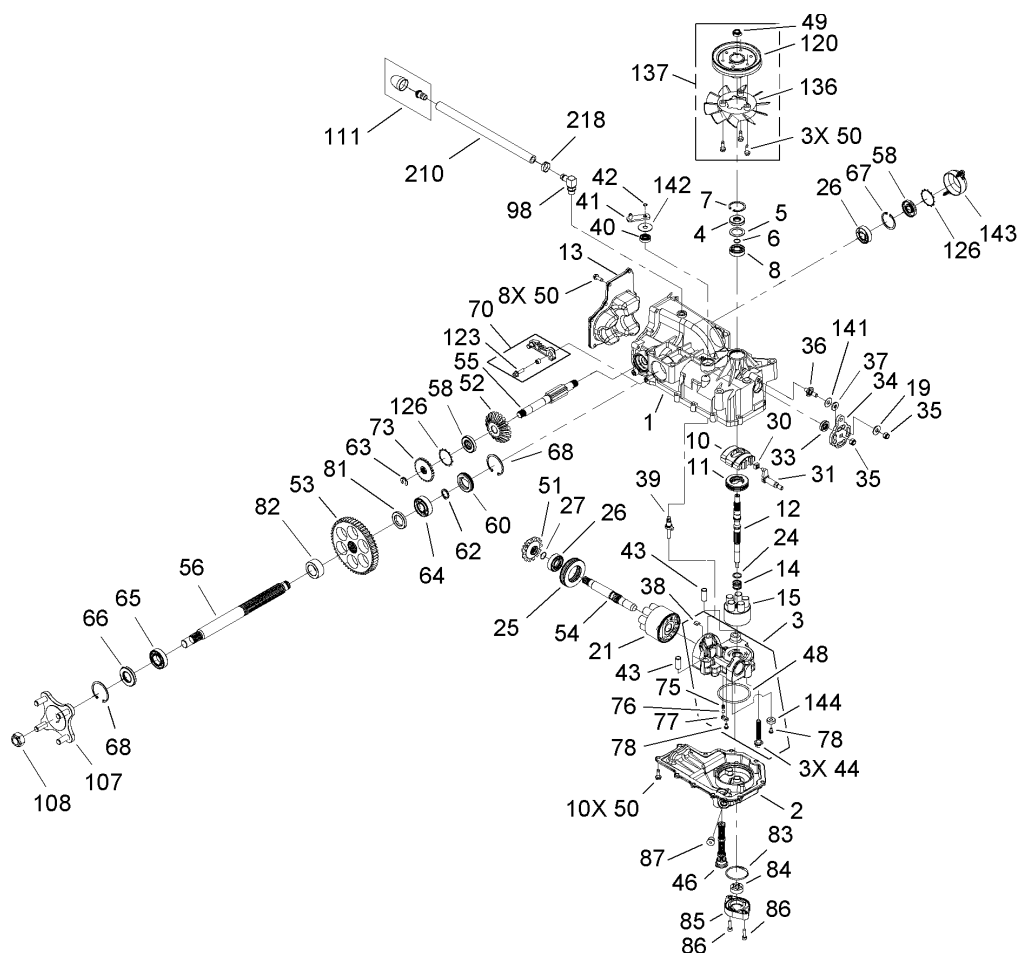

RH Hydro Assembly No. 108-8506


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-1700	1	Main Housing Kit	35	105-1872	2	Nut
2	108-8541	1	Housing-Lower	36	104-2116	1	Stud
3	108-8542	1	Center Section Kit	37	105-1873	1	Puck-Friction
4	92-6543	1	Seal-Lip	38	94-6925	1	Plate-Bypass
5	104-2104	1	Spacer	39	94-1914	1	Actuator-Bypass
6	94-1902	1	Ring-Wire, Retaining	40	92-6545	1	Seal-Lip
7	94-1903	1	Ring-Retaining	41	104-2117	1	Arm-Bypass
8	94-1904	1	Bearing-Shaft, Ball	42	936109	1	Ring-Retaining
10	94-1907	1	Swashplate-Variable	43	94-1927	2	Pin
11	94-6922	1	Bearing-Thrust	44	94-6926	3	Bolt
12	108-8543	1	Shaft-Input	46	108-8544	1	Filter ASM
13	105-1870	1	Cover-Back	48	108-8545	1	O-Ring
14	94-1936	1	Spring-Block	49	105-1875	1	Nut-Lock
15	104-2106	1	Cylinder Block ASM	50	104-2120	21	Screw
19	5-4460	1	Washer-Pivot	51	105-1876	1	Gear-Bevel, 14T
21	94-1913	1	Cylinder Block ASM	52	105-1877	1	Gear-Bevel, 19T
24	94-1937	1	Washer-Block, Thrust	53	105-1878	1	Gear-Bevel, 53T
25	94-6923	1	Bearing-Thrust	54	105-1879	1	Shaft-Motor
26	104-5311	2	Bearing-Ball	55	105-1880	1	Shaft-Brake
27	104-5307	1	Ring-Retaining	56	105-1881	1	Shaft-Axle
30	94-1910	1	Guide-Slot	58	104-5310	2	Seal-Lip
31	104-2112	1	Trunnion ASM	60	105-1882	1	Plug-Side Seal
33	92-6544	1	Seal-Lip	62	105-1883	1	Ring-Axle, Retaining
34	105-1871	1	Arm-Control	63	105-1884	1	Ring-Retaining

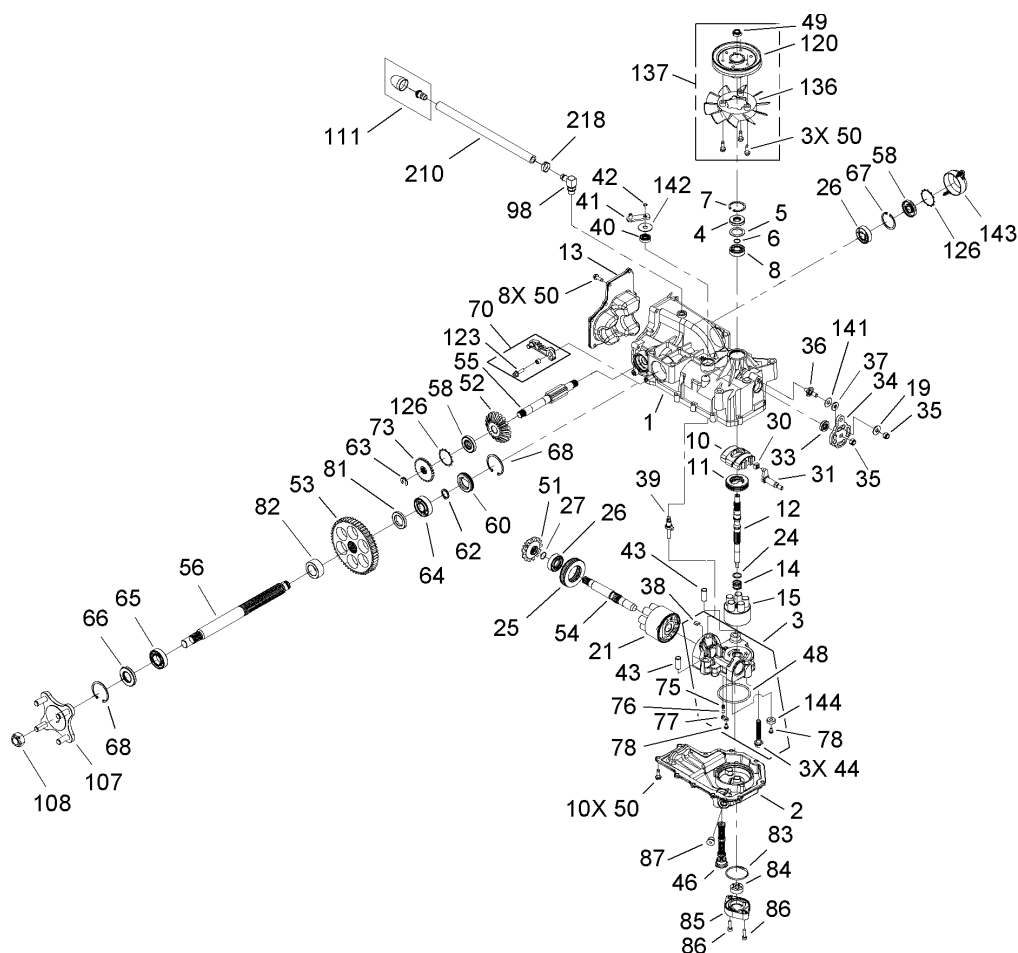

RH Hydro Assembly No. 108-8506 (continued)


Ref	Part No.	Qty.	Description
64	105-1885	1	Bearing-Ball
65	105-1886	1	Bearing-Ball
66	105-1887	1	Seal
67	104-5309	1	Ring-Retaining
68	105-1888	2	Ring-Retaining, Axle
70	108-8546	1	LH Brake Arm ASM
73	105-1890	1	Disc-Brake
75	108-8548	1	Spring-Helical
76	108-8549	1	Ball-1/4In
77	108-8550	1	Plate-Relief
78	104-5352	2	Bolt-Tapping, Self
81	108-8552	1	Spacer
82	108-8553	1	Spacer
83	106-8757	1	O-Ring
84	104-2122	1	Gerotor ASM
85	104-2124	1	Cover-Gerotor
86	106-8758	2	Screw-HSH
87	104-2184	1	Spring-Arm, Brake
98	108-8559	1	Fitting-90 DEG
●100	104-2147	1	Sealant
107	105-1894	1	Hub ASM
108	105-1895	1	Nut
111	107-1701	1	Cap Vent ASM
120	105-1896	1	Pulley

Ref	Part No.	Qty.	Description
123	107-1703	1	Screw-HHF
126	105-1898	2	Ring-Retaining
●134	105-1899	1	Seal Kit
136	105-1927	1	Fan
137	105-1928	1	Fan Pulley Kit
141	107-1705	1	Washer
142	107-1706	1	Washer
143	107-1707	1	Cover-Brake, Plastic
144	104-5330	1	Magnet-Ring
210	108-8561	1	Hose
218	108-8562	1	Pinch-Clamp, Single Ear

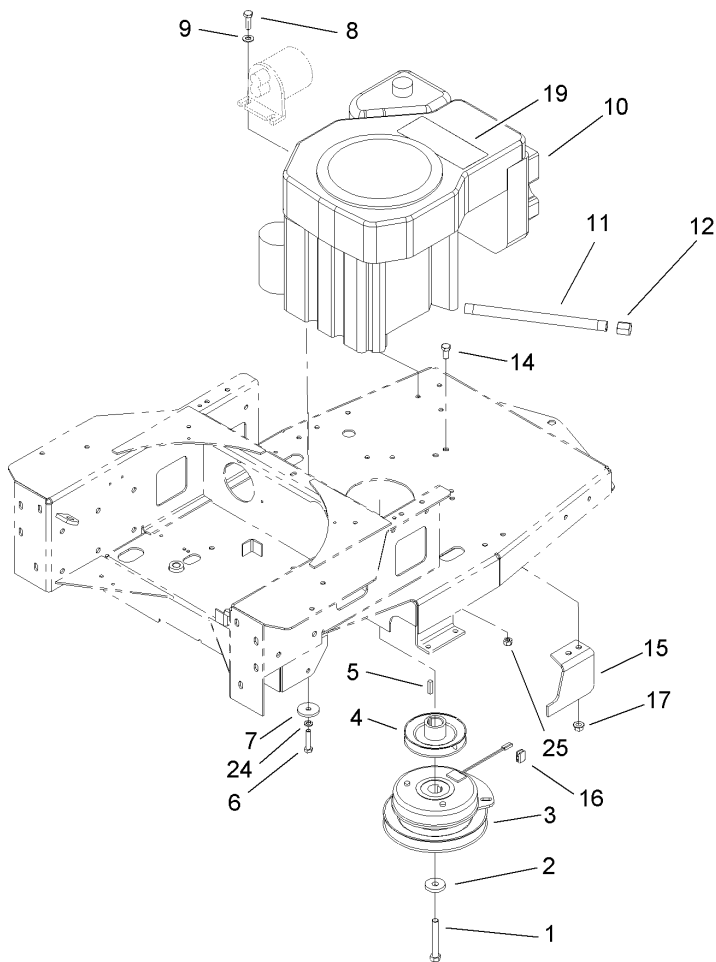

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description				
1	3212-12	1	Screw-HH				
2	112843	1	Washer				
3	108-9512	1	Clutch-PTO, Electric				
4	100-7314	1	Pump Drive Pulley ASM				
5	5-7280	1	Key				
6	33114-030	4	Screw-HH				
7	62-7190	4	Spacer-Steel				
8	322-5	2	Screw-HH				
9	3256-23	2	Washer-Flat				
10		1	Engine-Kohler, Cv492S-27525				
11	104-8018	1	Nipple-Pipe				
12	288-10	1	Cap-Pipe				
14	323-4	2	Screw-HH				
15	104-3613-03	1	Stop-Clutch				
16	98-5023	1	Bumper				
17	32128-21	2	Nut-HF				
19	110-6536	1	Decal-Engine				
24	3253-4	4	Washer-Lock				
25	3296-29	2	Nut-Lock, NI				

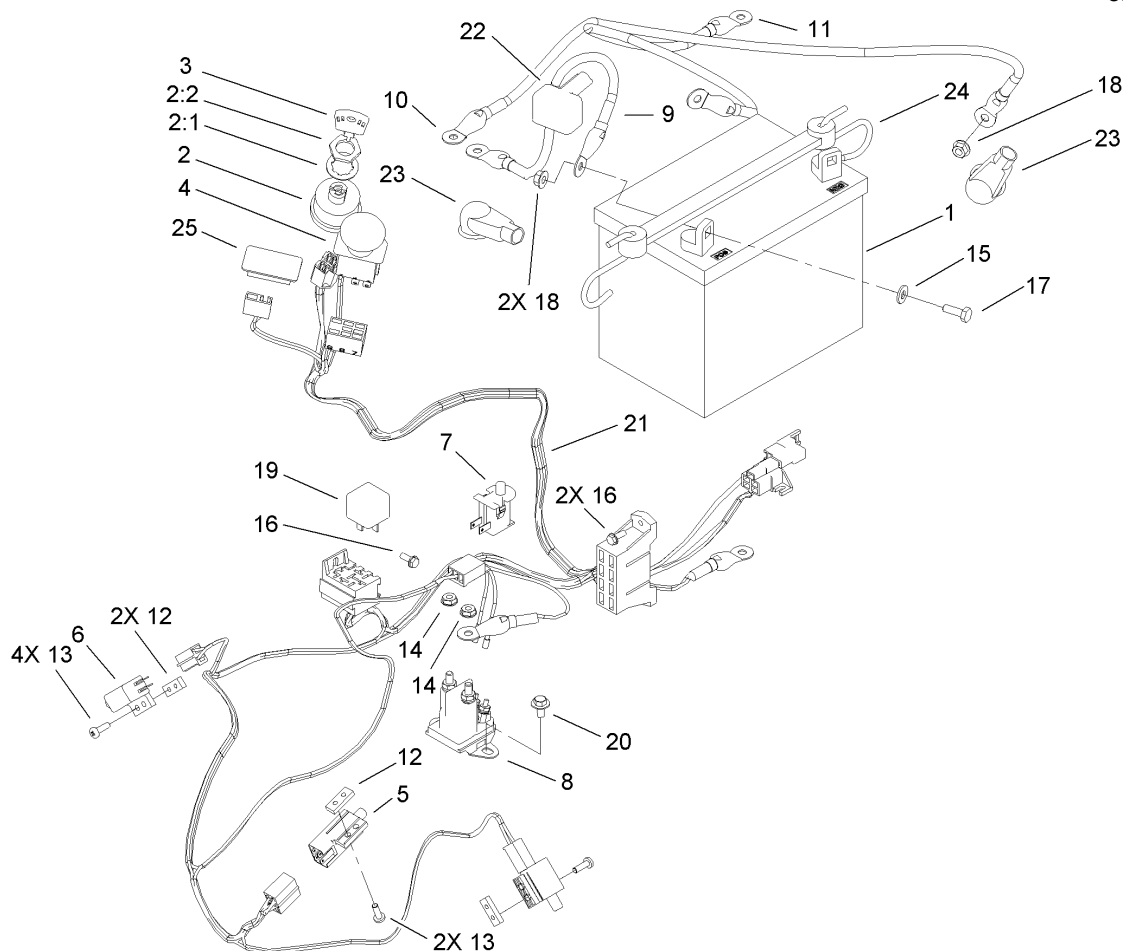

Electrical Assembly

Ref	Part No.	Qty.	Description
1	104-2491	1	Battery-Dry
2	88-9830	1	Key Switch ASM
2:1	3254-5	1	Washer-Tooth
2:2	218-461	1	Nut-HH
3	700918	1	Key
4	95-4108	1	Switch-PTO
5	86-4690	1	Switch-Interlock
6	65-7410	2	Switch-Pole, Single
7	82-2190	1	Switch-Bail
8	106-8245	1	Solenoid
9	56-7670	1	Wire ASM
10	54-2030	1	Wire ASM
11	93-0324	1	Cable
12	1-633181	3	Plate-Tapped
13	32144-8	6	Screw-PPHTF
14	32149-2	2	Nut-Keps
15	3256-22	2	Washer-Flat
16	32144-1	3	Screw-Taptite
17	321-4	2	Screw-HH
18	32128-33	3	Nut-HF
19	98-7249	1	Relay
20	46-8560	2	Screw-HHF
21	110-6517	1	Harness-Wire
22	28-8080	1	Boot-Terminal


Ref	Part No.	Qty.	Description
23	93-3190	2	Boot-Insulator, Terminal
24	104-2466	1	Holddown-Battery
25	99-7420	1	Plug-Hole

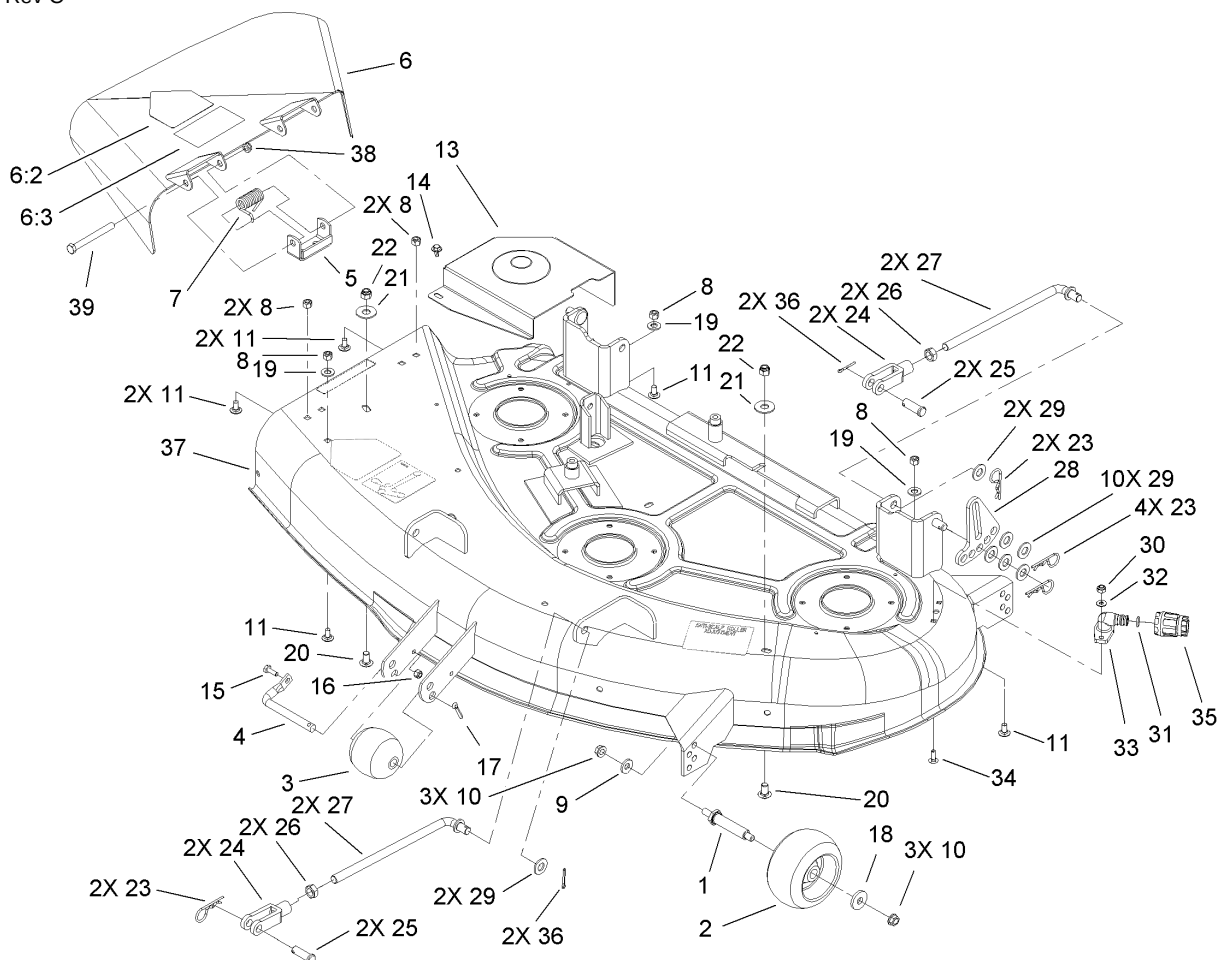

44in Deck Assembly


Ref	Part No.	Qty.	Description
1	99-2842	3	Spacer
2	1-603299	3	Roller-Scalp, Anti
3	29-4820	1	Roller
4	118960-03	1	Shaft-Roller
5	29-5590-03	2	Bracket-Pivot
6	100-8004	1	Deflector ASM
6:2	93-1122	1	Decal-Danger
6:3	92-7108	1	Decal-Danger
7	40-6230	2	Spring
8	3296-29	7	Nut-Lock, NI
9	98-5975	3	Washer-Belleville
10	3290-357	6	Nut-HHF, Whiz
11	3230-18	7	Screw-CARR
12	110-1877-03	1	Cover-Belt, LH
13	110-1878-03	1	Cover-Belt, RH
14	46-8560	4	Screw-HHF
15	321-4	1	Screw-HH
16	3296-42	1	Nut-Lock, NI
17	3272-21	1	Pin-Cotter
18	1-373034	3	Washer
19	3256-24	3	Washer-Flat
20	3231-21	2	Screw-CARR
21	3256-5	2	Washer-Flat
22	3296-39	2	Nut-Lock, NI

Ref	Part No.	Qty.	Description
23	1-806005	8	Pin-Hair
24	100-7338	4	Clevis
25	104-3634	4	Pin-Clevis
26	3220-5	4	Nut-Jam
27	104-8047	4	Rod-Trunion
28	104-3699-04	2	Link-HOC, Adjusting
29	3256-26	14	Washer-Flat
30	3296-16	2	Nut-Lock, NI
31	46-6290	1	O-Ring
32	3256-1	2	Washer-Flat
33	95-2747	1	Fitting-Washout
34	3229-1	2	Screw-CARR
35	95-3270	1	Connector-Hose
36	3272-10	4	Pin-Cotter
37	110-6521	1	44 Inch Deck ASM
38	3296-5	2	Nut-Lock
39	3211-15	2	Screw-HH

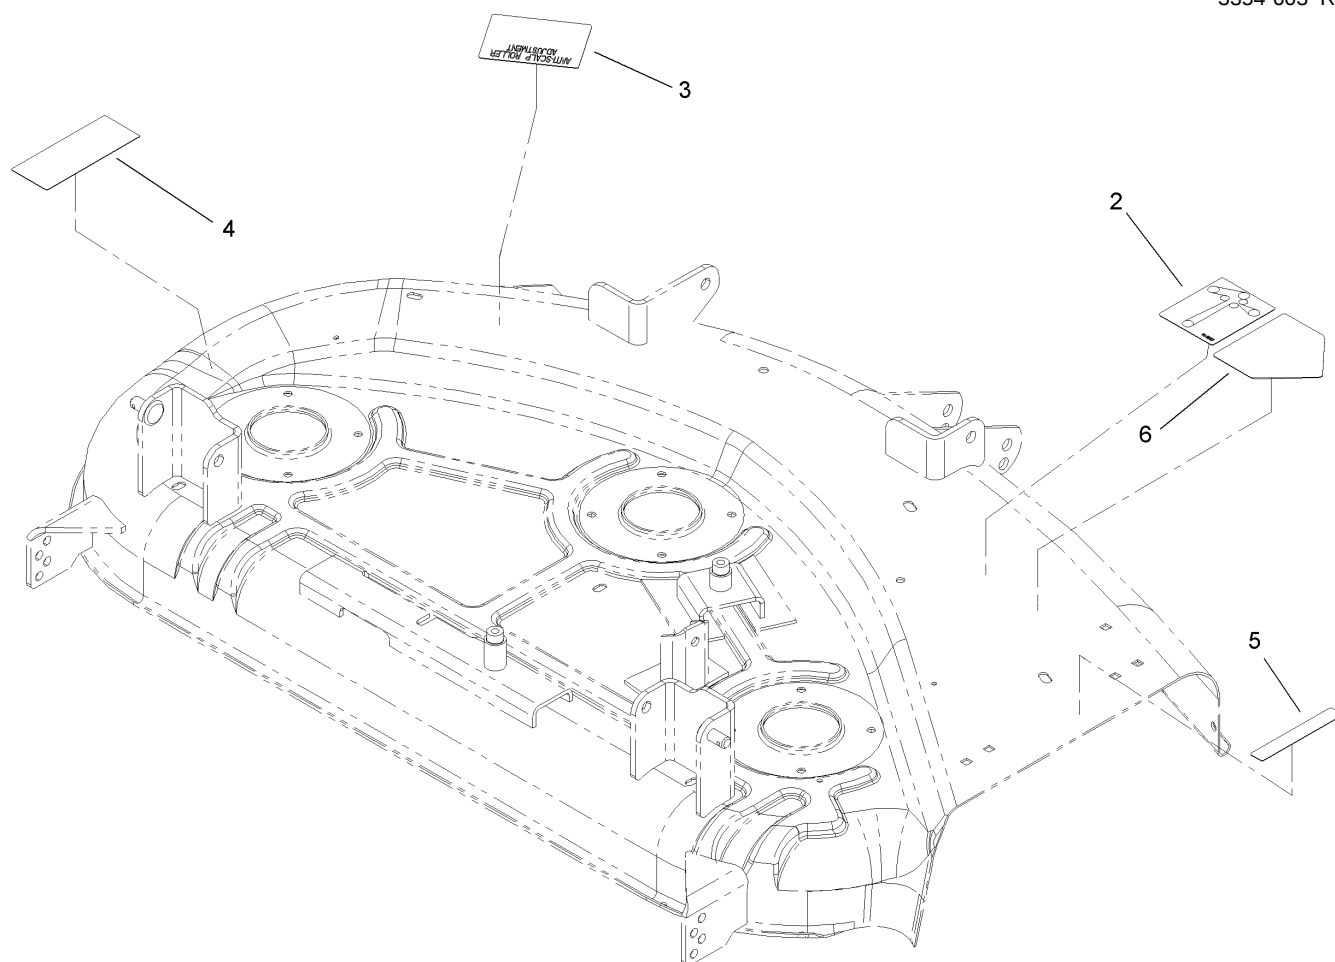


44in Deck Assembly No. 110-6521

Ref	Part No.	Qty.	Description
2	99-3943	1	Decal-Routing, Belt
3	98-3798	1	Decal-Wheel, Gage
4	92-7108	1	Decal-Danger
5	92-7109	1	Decal-Caution
6	93-1122	1	Decal-Danger

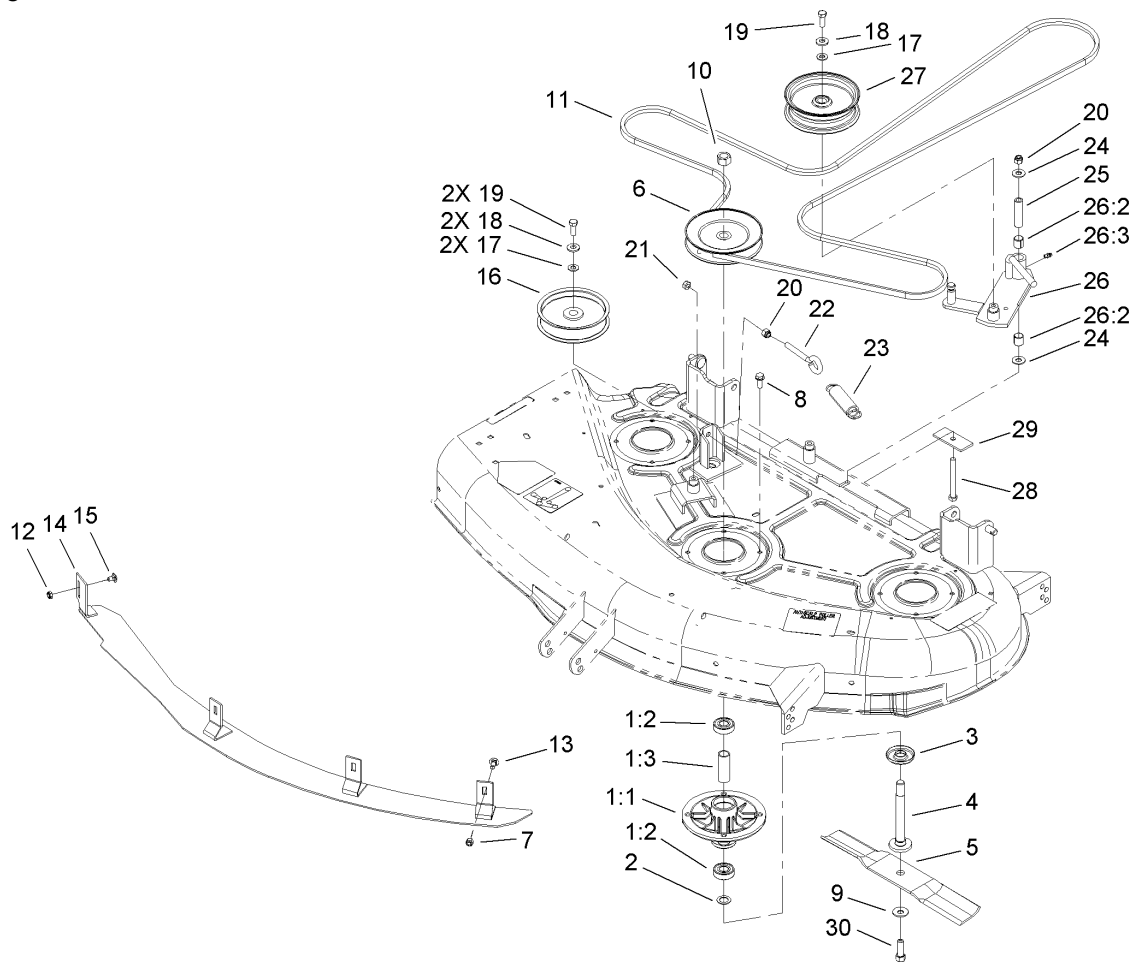


44in Deck Belt Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	21	3	Spindle ASM	22	94-2547	1	Bolt-Eye
1:1	88-4510	1	Housing-Spindle	23	105-6992	1	Spring-Extension
1:2	100-1048	2	Bearing-Ball	24	1-809107	2	Washer-Hardened
1:3	62-3661	1	Spacer-Bearing	25	1-603384	1	Bushing-Pivot, Idler
2	80-4380	3	Spacer	26	105-7010	1	Idler Arm ASM
3	80-4360	3	Shield-Bearing	26:2	1-513034	2	Sleeve-Bearing
4	80-4341	3	Shaft	26:3	302-5	1	Fitting-Grease
5	54-0010-03	3	Blade	27	99-8912	1	Pulley-Idler, Flat
6	100-7321	3	Pulley ASM	28	1-800805	1	Screw-HH
7	3296-29	3	Nut-Lock, NI	29	104-8037-03	1	Plate-Bolt, Retainer
8	32144-41	12	Screw-Taptite	30	26-0671	3	Screw-Blade
9	3290-465	3	Washer-Belleville				
10	3219-6	3	Nut-Hex				
11	105-6963	1	Belt-V				
12	3296-47	1	Nut-Lock, NI				
13	3230-1	3	Bolt-CARR				
14	93-9950-03	1	Baffle				
15	3230-19	1	Screw-CARR				
16	1-613098	2	Pulley-Idler				
17	3256-24	3	Washer-Flat				
18	98-5975	3	Washer-Belleville				
19	323-6	3	Screw-HH				
20	3296-39	2	Nut-Lock, NI				
21	3217-7	1	Nut-Hex				

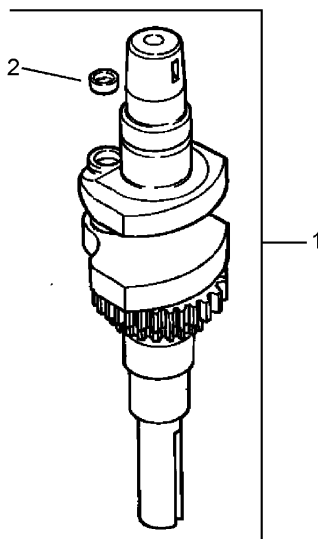


Crankshaft Assembly Kohler Cv492s-27525

Ref	Part No.	Qty.	Description
❸1	12 014 57-S	1	Crankshaft (Includes 2)
❸2	25 139 27-S	1	Plug-Cup

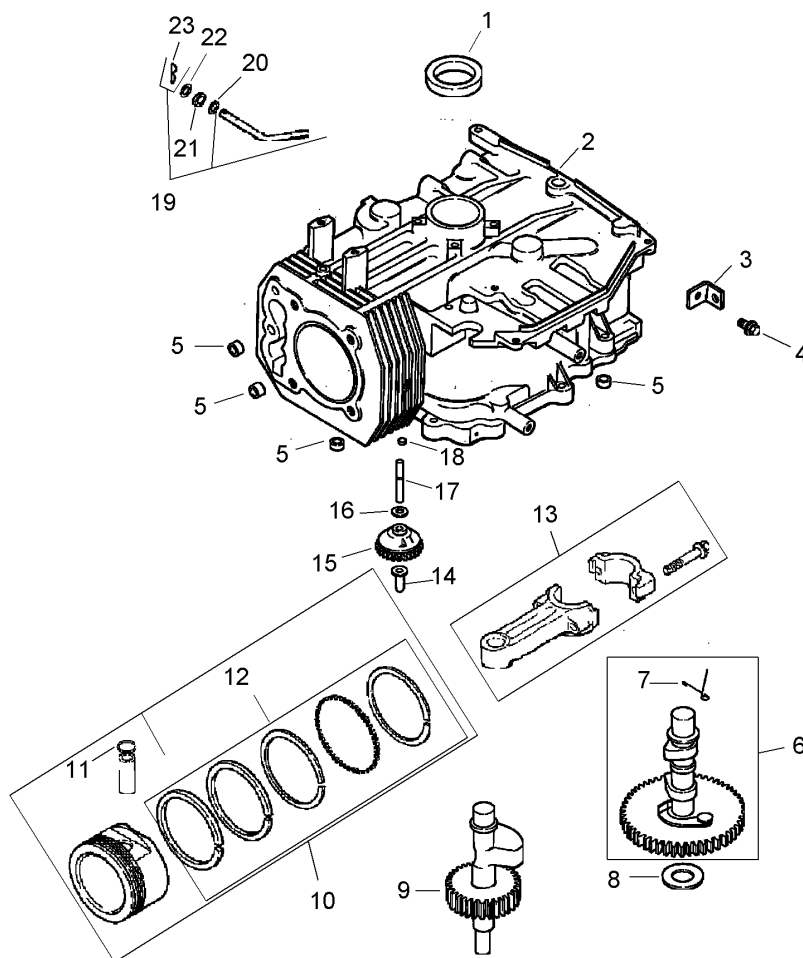

Crankcase Assembly Kohler Cv492s-27525


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Oil	13	12 067 11-S	1	Rod-Connecting (STD)
2	12 445 02-S	1	Crankcase (Use: Short Block 12 522 69)	14	12 067 12-S	1	Rod-Connecting (.25)
3	M-839025-S	1	Strap-Lifting	15	12 380 01-S	1	Pin-Regulating, Governor
4	24 380 13-S	4	Screw-HF (M8X1.25X25)	16	12 043 05-S	1	Gear-Governor
5	12 010 31-S	1	Pin-Locating	17	M-631005-S	1	Washer-Plain (6 Mm)
6	12 089 31-S	1	Camshaft (Includes 7)	18	12 144 02-S	1	Shaft-Gear, Governor
7	12 422 08-S	1	Spring-Actuating	19	52 139 09-S	1	Plug-Cup
8	12 422 09-S	1	Shim-Camshaft (Blue .03)	20	12 755 64-S	1	Kit, Governor Cross Shaft W/Clip (Includes 23)
9	12 422 10-S	1	Shim-Camshaft (Red .032)	21	X-25-102-S	1	Washer-Flat (1/4)
10	12 422 11-S	1	Shim-Camshaft (Yellow .034)	22	12 032 01-S	1	Seal-Cross Shaft, Governor
11	12 422 12-S	1	Shim-Camshaft (Green .036)	23	M-631015-S	1	Washer-Flat (6Mm)
12	12 422 13-S	1	Shim-Camshaft (Gray .038)		12 154 05-S	1	Clip-Pin, Hitch
13	12 422 07-S	1	Shim-Camshaft (Black .04)				
14	12 422 28-S	1	Shim-Camshaft (White .028)				
15	12 144 28-S	1	Shaft-Balance				
16	12 874 07-S	1	Piston W/Ring Set (STD.) (Includes 11, 12)				
17	12 874 11-S	1	Piston W/Ring Set (.08)				
18	12 874 08-S	1	Piston W/Ring Set (.25)				
19	12 874 09-S	1	Piston W/Ring Set (.50)				
20	12 018 02-S	2	Retainer-Pin, Piston				
21	12 108 07-S	1	Ring Set (STD. And .08)				
22	12 108 08-S	1	Ring Set (.25)				

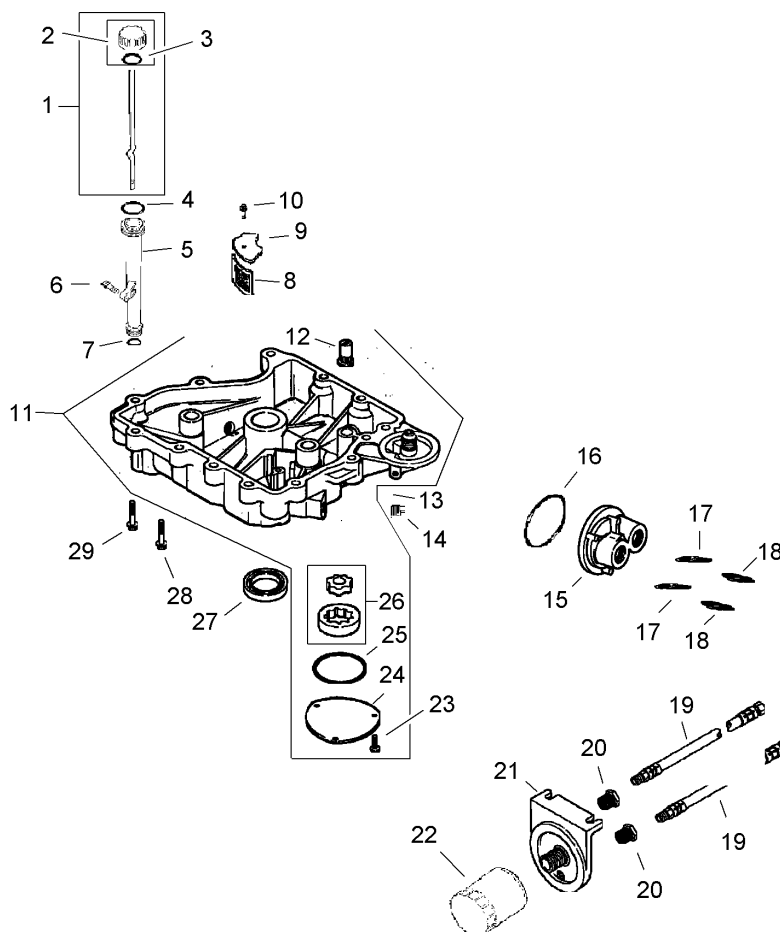

Oil Pan and Lubrication Assembly Kohler Cv492s-27525

Ref	Part No.	Qty.	Description
❶	12 038 01-S	1	Dipstick (Includes 2, 3)
❷	25 755 13-S	1	Kit, Oil Fill Cap (Includes 3)
❸	25 153 02-S	1	O-Ring
❹	12 153 02-S	1	O-Ring
❺	12 123 04-S	1	Oil Fill Tube ASM
❻	M-545020-S	1	Screw-HHFTF (M5X0.8X20)
❼	12 153 01-S	1	O-Ring
❽	25 162 07-S	1	Screen-Pickup, Oil
❾	12 096 03-S	1	Cover-Screen, Oil Pickup
❿	M-545016-S	1	Screw-HHFTF (M5X0.8X16)
⓫	12 199 50-S	1	Pan Assembly, Oil (Includes 12, 23-26)
⓬	25 462 09-S	1	Valve-Relief, Oil Pressure
⓭	25 139 52-S	1	Plug-Pipe (1/8In)
⓮	25 139 57-S	2	Plug-Solid, Square Head (.38)
⓯	12 029 02-S	1	Adapter, Oil Filter
⓰	24 153 13-S	1	O-Ring
⓱	25 158 10-S	2	Bushing, Reducing 7/8X1/4X1/2 N.P.T.F.
⓲	52 136 02-S	2	Nipple-Metallic
⓳	52 326 11-S	2	Hose, Oil (Red Tracer) (2) 1/8-27 N.P.T.F. Male Coupling, 1/4-18 N.P.S.M. Female Coupling X 23In Long

Ref	Part No.	Qty.	Description
❷❶	25 158 15-S	2	Bushing, Reducing 1/8X1/4 N.P.T.F.
❷❷	12 029 02-S	1	Adapter, Oil Filter
❷❸	12 050 01-S	1	Filter-Oil
❷❹	M-545016-S	3	Screw-HHFTF (M5X0.8X16)
❷❺	12 096 34-S	1	Cover-Pump, Oil
❷❻	12 153 06-S	1	O-Ring (Oil Pump Cover)
❷❼	12 393 01-S	1	Oil Pump ASM
❷❽	12 032 03-S	1	Seal-Oil
❷❾	24 086 16-S	11	Screw-HF (M8X1.25X45)
❷⓫	24 086 17-S	1	Screw-HF (M8X1.25X45)

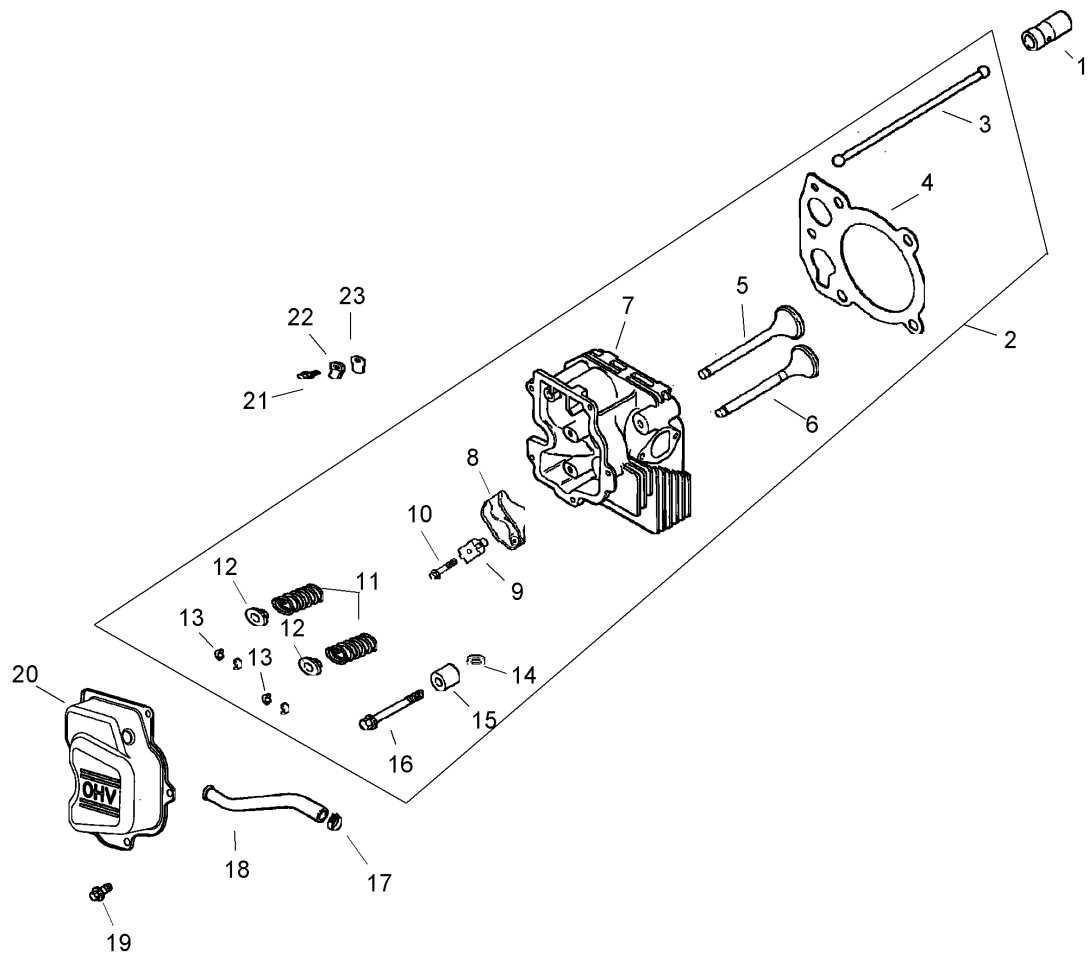


Head, Valve and Breather Assembly

Kohler Cv492s-27525


Ref	Part No.	Qty.	Description
❶	25 351 01-S	2	Lifter-Valve
❷	24 755 101-S	1	Kit, Cylinder Head (Includes 3-16, Carburetor Gasket (2),
❸	12 411 05-S	2	Rod-Push
❹	12 041 10-S	1	Gasket-Head, Cylinder
❺	12 017 01-S	1	Valve-Intake (STD)
❻	12 016 01-S	1	Valve-Exhaust (STD)
❼	12 318 51-S	1	Head-Cylinder
❽	25 186 01-S	2	Arm-Rocker
❾	12 599 03-S	2	Pivot-Arm, Rocker
❿	M-640034-S	2	Screw-HF (M6X1.0X34)
⓫	12 089 34-S	2	Spring-Valve
⓬	12 173 01-S	2	Cap-Spring, Valve
⓭	12 755 03-S	2	Retainer Kit
⓮	12 468 05-S	1	Washer-Flat (1/2)
⓯	12 112 13-S	1	Spacer-Head Bolt (Exhaust Port)
⓰	20 086 02-S	5	Screw-Flange, Hex (M10X1.5X37)
⓱	25 237 14-S	1	Clamp-Hose
⓲	12 326 18-S	1	Hose-Breather
⓳	M-645016-S	5	Screw-HHFTF (M6X1.0X16)
⓴	12 096 47-S	1	Cover-Valve
⓵	M-545010-S	1	Screw-HHFTF (M5X0.8X10)
⓶	66 018 04-S	1	Retainer-Reed, Breather
⓷	12 402 02-S	1	Reed-Breather

Ref	Part No.	Qty.	Description
❶	12 017 02-S	1	Valve-Intake (.25)
❷	12 016 02-S	1	Valve-Exhaust (.25)
❸	12 041 01-S	2	Gasket-Carburetor
❹	12 041 02-S	1	Gasket-Base, Air Cleaner
❺	12 041 03-S	1	Gasket-Manifold, Exhaust

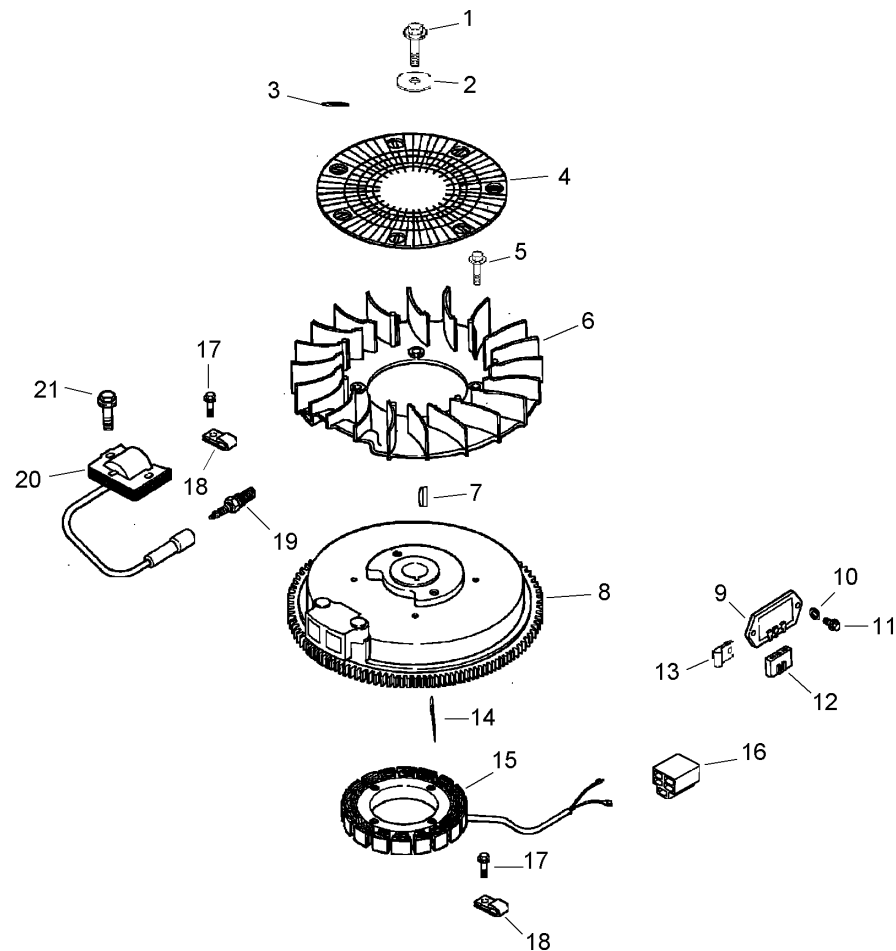


Ignition and Electrical Assembly
Kohler Cv492s-27525

Ref	Part No.	Qty.	Description				
❶1	12 086 14-S	1	Screw-Hex, Flange (M10X1.5X45)				
❷2	12 468 03-S	1	Washer-Flat (.38)				
❸3	24 018 03-S	3	Retainer				
❹4	24 162 03-S	1	Screen-Grass				
❺5	25 086 47-S	4	Bolt-Shoulder (M6X1.0X16)				
❻6	12 157 06-S	1	Fan				
❼7	X-42-15-S	1	Key (.19 X .62)				
❽8	12 025 15-S	1	Flywheel				
❾9	41 403 09-S	1	Rectifier-Regulator				
❿10	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)				
❶❶11	12 086 42-S	2	Screw-HF (M6X1.0X16)				
❶❷12	236602-S	1	Connector (3 Contact)				
❶❸13	12 157 07-S	2	Clip, Rectifier-Regulator				
❶❹14	M-548025-S	2	Screw-HHFTF (M5X0.8X25)				
❶❺15	237878-S	1	Kit, Stator (Includes Terminal 25 452 01-S)				
❶❻16	48 155 01-S	1	Connector (5 Contact)				
❶❼7	M-545010-S	2	Screw-HHFTF (M5X0.8X10)				
❶❸18	X-728-1-S	2	Clip				
❶❹19	12 132 02-S	1	Spark Plug				
❶❺20	12 584 04-S	1	Module-Ignition				
❶❻21	M-545020-S	2	Screw-HHFTF (M5X0.8X20)				

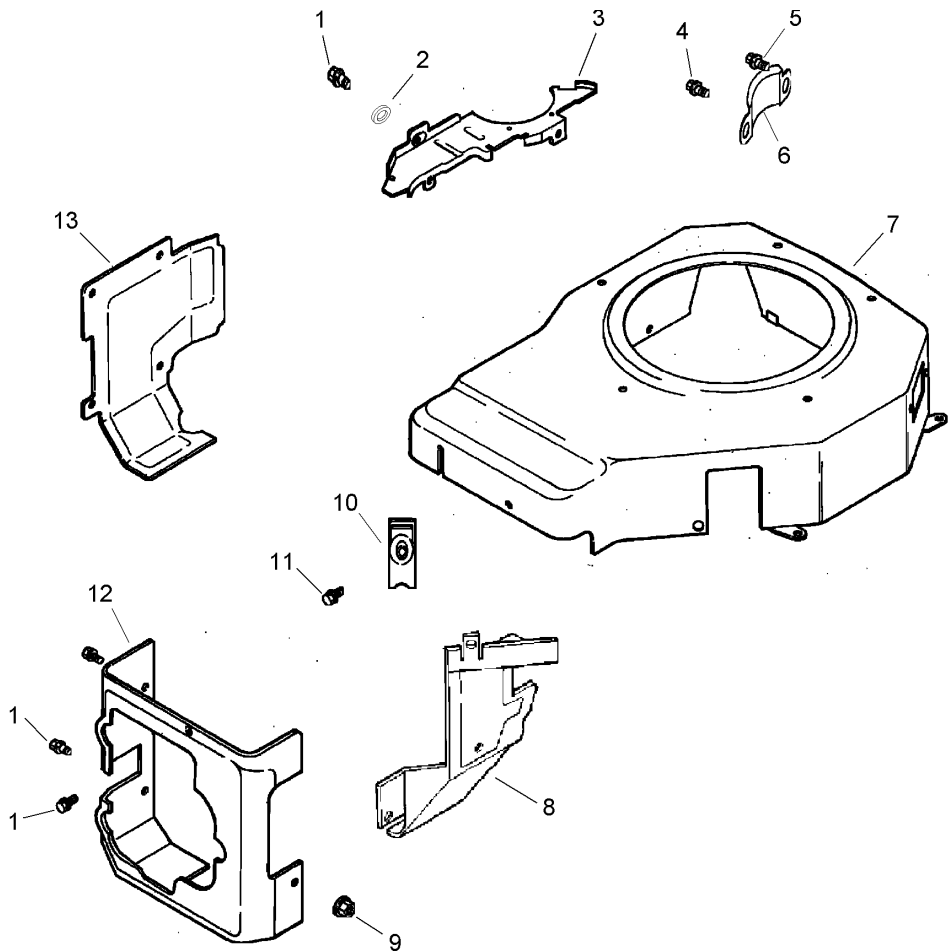


Blower Housing and Baffle Assembly
Kohler Cv492s-27525

Ref	Part No.	Qty.	Description				
❸1	M-545010-S	5	Screw-HHFTF (M5X0.8X10)				
❸2	24 468 10-S	1	Washer-Plain (1/4)				
❸3	12 146 07-S	1	Plate-Housing, Blower				
❸4	M-645016-S	1	Screw-HHFTF (M6X1.0X16)				
❸5	M-550010-S	1	Screw-HF (M5X0.8X10)				
❸6	24 096 05-S	1	Cover-Pinion				
❸7	12 027 55-S	1	Housing-Blower				
❸8	12 063 18-S	1	Baffle (Intake Side)				
❸9	M-541050-S	1	Nut-HF (M5X0.8)				
❸10	25 154 02-S	3	Clip-Mounting				
❸11	12 086 37-S	3	Screw-Washer, Captive (M5X0.8X20)				
❸12	12 063 20-S	1	Baffle (Cylinder Head)				
❸13	12 063 19-S	1	Baffle-Cylinder				
❶❸	12 113 119-S	1	Decal, 18 Hp				

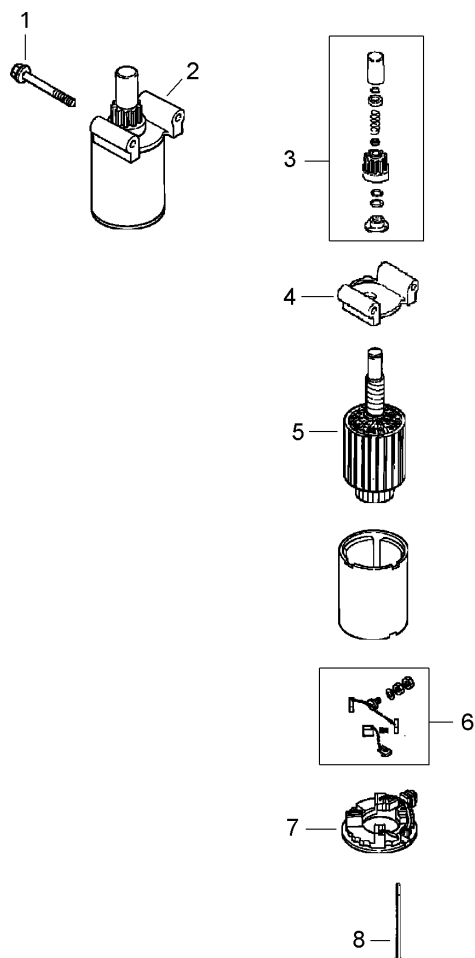


Starter Assembly Kohler Cv492s-27525

Ref	Part No.	Qty.	Description				
❸1	M-839070-S	2	Screw-HF (M8X1.25X70)				
❸2	12 098 22-S	1	Starter Assembly (Includes 3-8)				
❸3	12 755 53-S	1	Drive Kit				
❸4	12 227 19-S	1	Cap-End, Drive				
❸5	12 170 05-S	1	Armature				
❸6	12 221 01-S	1	Brush ASM				
❸7	12 227 13-S	1	Commutator-Cap, End				
❸8	12 211 01-S	2	Bolt				

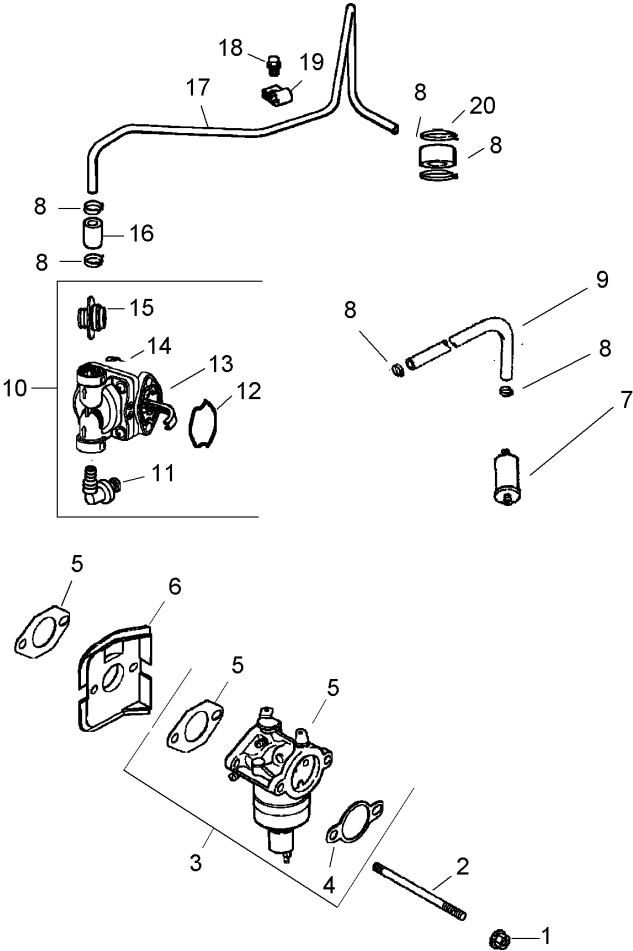


Fuel System Assembly
Kohler Cv492s-27525

Ref	Part No.	Qty.	Description				
❶1	M-641060-S	2	Nut-Hex, Flange (M6X1.0)				
❷2	M-629116-S	2	Stud (M6X1.0X116)				
❸3	12 853 117-S	1	Carburetor Kit (Includes 4, 5 [qty. 1], Tie 12 454 03-S, And Terminal 25 452 20-S)				
❹4	12 041 02-S	1	Gasket-Base, Air Cleaner				
❺5	12 041 01-S	2	Gasket-Carburetor				
❻6	12 265 06-S	1	Deflector-Heat				
❼7	12 294 13-S	1	Fitting-90 DEG				
❽8	25 237 14-S	6	Clamp-Hose				
❾9	25 353 14-S	1	Line-Fuel, 7 Inch				
❿10	25 050 07-S	1	Filter-Fuel				
⓫11	12 559 02-S	1	Kit, Fuel Pump (Includes 13-15)				
⓫12	M-645020-S	2	Screw-Flange, Hex (M6X1.0X20)				
⓫13	25 041 10-S	2	Gasket, Fuel Pump				
⓫14	25 153 04-S	1	O-Ring (Fuel Pump)				
⓫15	25 294 09-S	1	Connector-Hose, Straight				
⓫16	12 353 01-S	1	Line-Fuel (1-1/4In)				
⓫17	12 123 19-S	1	Line-Fuel. Metal				
⓫18	M-545010-S	1	Screw-HHFTF (M5X0.8X10)				
⓫19	12 154 01-S	1	Clamp-Line, Fuel				
⓫20	41 353 18-S	1	Line-Fuel (2-1/2In)				

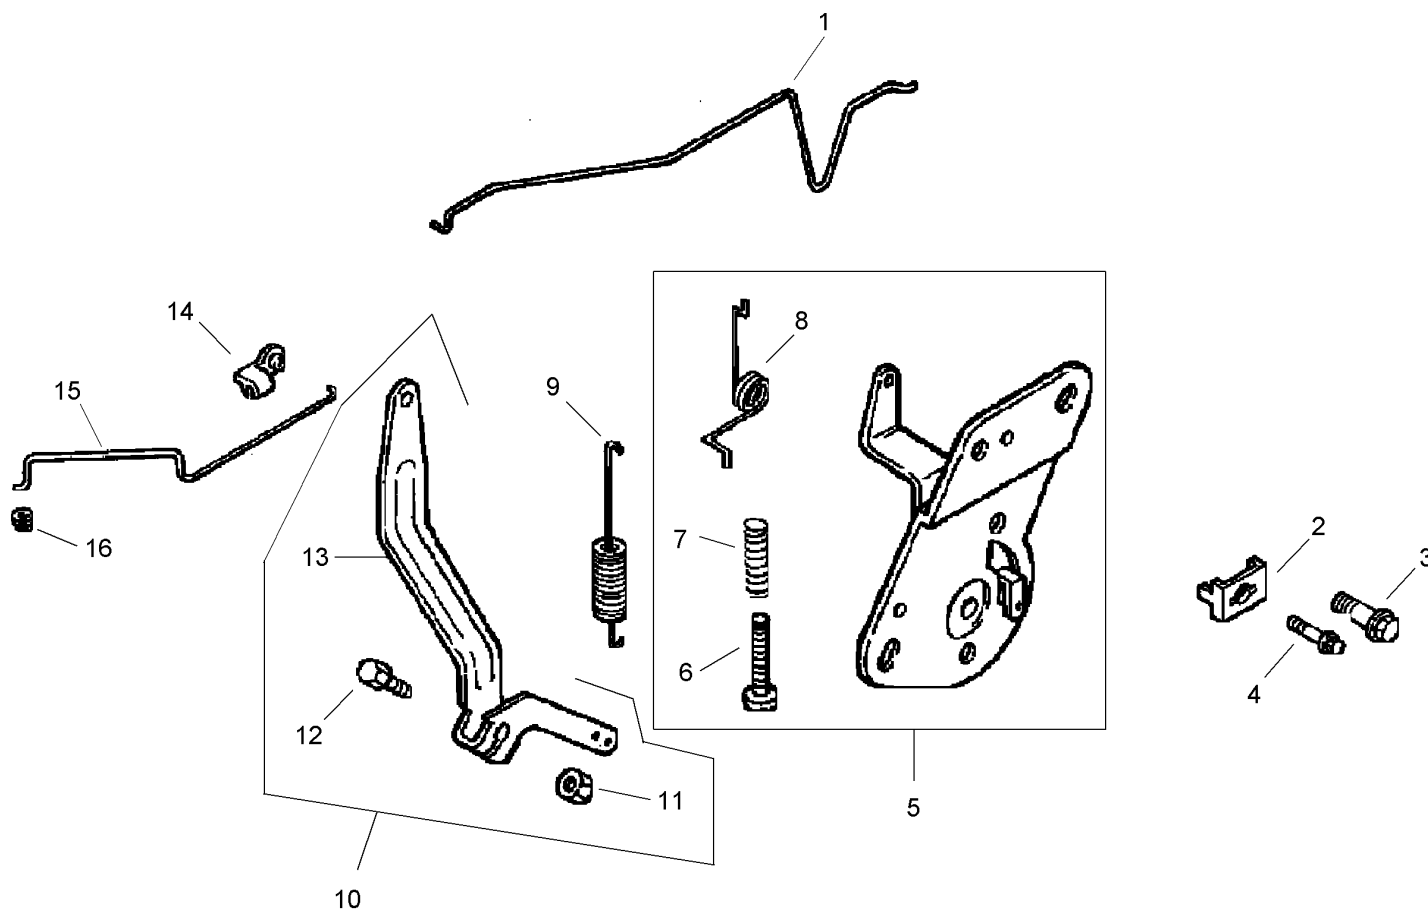


Engine Control Assembly Kohler Cv492s-27525

Ref	Part No.	Qty.	Description				
③1	12 079 11-S	1	Linkage-Choke				
③2	12 237 01-S	1	Clamp-Cable				
③3	M-545016-S	1	Screw-HHFTF (M5X0.8X16)				
③4	M-664020-S	2	Screw-Socket, 6 Lobed (Thread Forming, M6X1.0X20)				
③5	12 536 01-S	1	Control, Speed Assembly (Includes 6-8)				
③6	12 086 39-S	1	Screw-Pan Head (W/Loctite)				
③7	12 089 11-S	1	Spring-Control, Speed				
③8	12 089 23-S	1	Spring-Return, Choke				
③9	12 089 19-S	1	Spring-Governor				
③10	12 755 83-S	1	Kit, Governor Lever (Includes 11-13)				
③11	12 100 07-S	1	Nut-Flange, Hex (1/4-20)				
③12	52 211 04-S	1	Bolt-Square Neck, Round Head (1/4-20X1)				
③13	12 090 28-S	1	Lever-Governor				
③14	25 158 11-S	1	Bushing-Linkage, Throttle				
③15	12 079 10-S	1	Linkage-Throttle				
③16	25 158 08-S	1	Bushing-Retaining, Linkage				

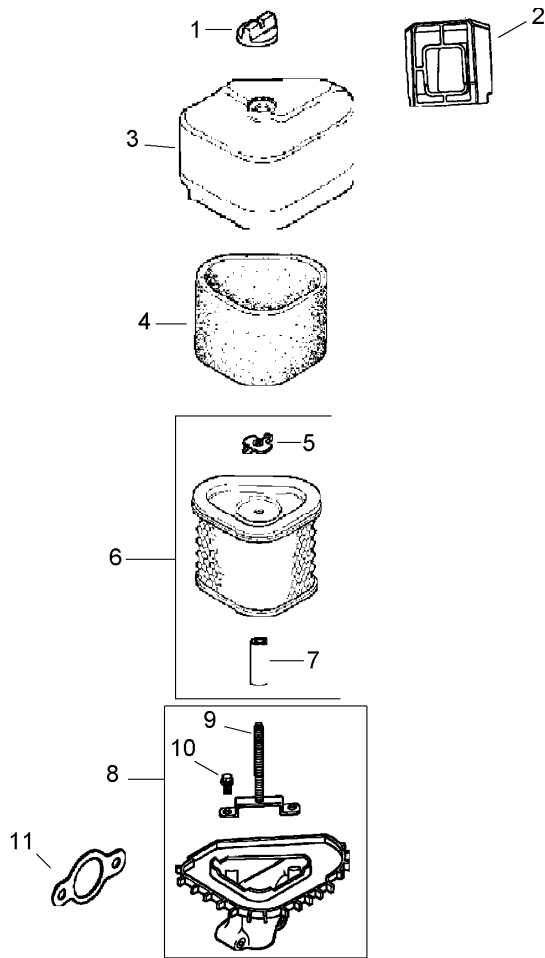

Air Intake and Filtration Assembly
Kohler Cv492s-27525

Ref	Part No.	Qty.	Description				
❸1	25 341 03-S	1	Knob-Cover				
❸2	12 281 02-S	1	Duct-Air				
❸3	12 096 44-S	1	Cover-Cleaner, Air				
❸4	12 083 12-S	1	Element-Precleaner				
❸5	12 100 01-S	1	Nut-Wing				
❸6	12 083 10-S	1	Element, Air Cleaner (Includes 5, 7, 8)				
❸7	12 032 11-S	1	Seal				
❸8	12 094 14-S	1	Base, Air Cleaner (Includes 10, 11)				
❸9	12 072 04-S	1	Stud				
❸10	12 086 01-S	2	Screw				
❸11	12 041 02-S	1	Gasket-Base, Air Cleaner				
❶❸	12 113 04-S	1	Decal-Cleaner, Air				

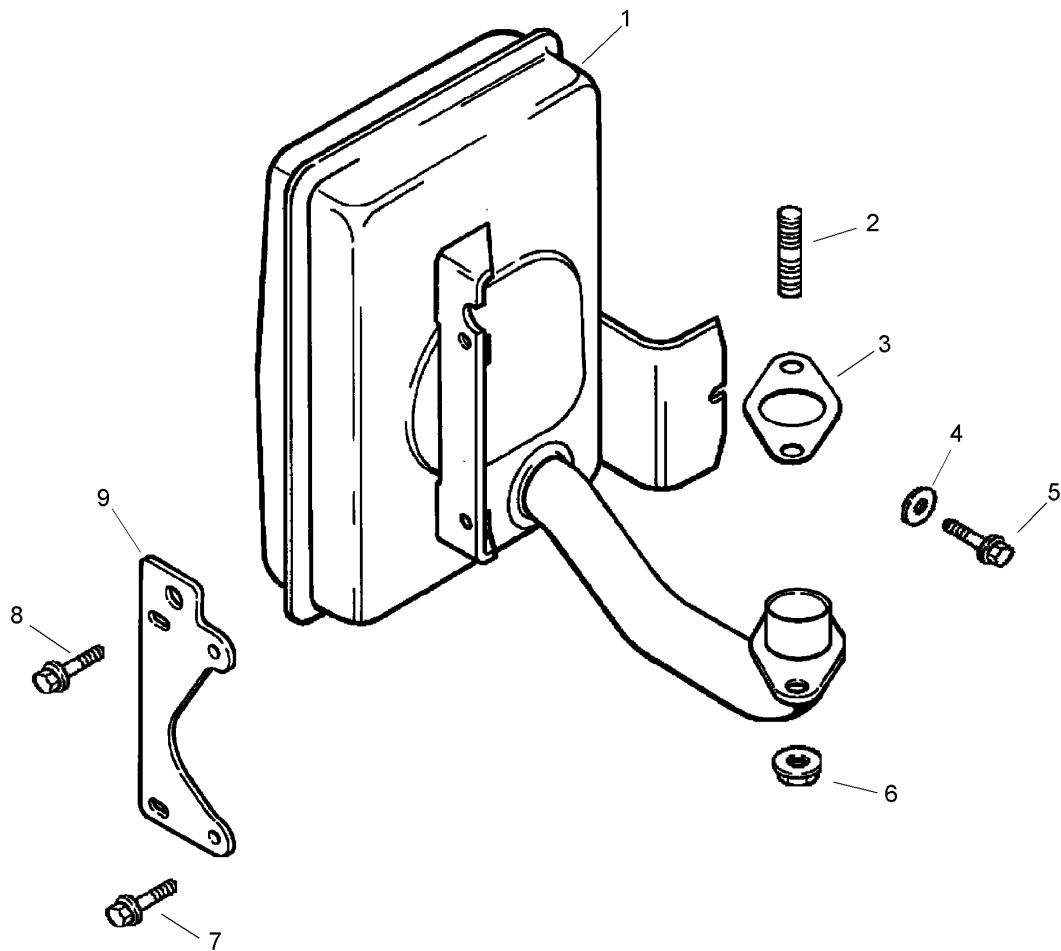

Exhaust Assembly
Kohler Cv492s-27525

Ref	Part No.	Qty.	Description				
❶	12 068 55-S	1	Muffler				
❷	25 072 04-S	2	Stud (M8X1.25X33)				
❸	12 041 03-S	1	Gasket-Manifold, Exhaust				
❹	X-25-78-S	1	Washer-Plain (1/4In)				
❺	M-545016-S	1	Screw-HHFTF (M5X0.8X16)				
❻	M-841080-S	2	Nut-Hex, Flange (M8X1.25)				
❼	M-645016-S	2	Screw-HHFTF (M6X1.0X16)				
❽	M-645025-S	2	Screw-HF (M6X1.0X25)				
❾	12 126 71-S	1	Bracket-Muffler				
❶❶	12 755 70-S	1	Kit, Muffler Guard (Includes Screw (4) M-545010-S)				
❶❷	M-545010-S	4	Screw-HHFTF (M5X0.8X10)				
❶❸	12112 20-S	2	Spacer				
❶❹	12 522 511	1	Short Block				
❶❺	12 755 93-S	1	Gasket Set				

Attachments and Accessories

For 725058036 - MZ17H Zero-Turn-Radius Mower

Product Name	Model/Part
Tire Chains	107-1738
Light Kit	107-9130
Smooth Caster Wheel Kit	107-9132
44 Inch Mulching Kit	94-7758
MZ44GD Grass Collector	99163
56 Inch Snow Blade	99165

Attachments and Accessories

For 94603 - MZ17H Zero-Turn-Radius Mower

Product Name	Model/Part
Tire Chains	107-1738
Light Kit	107-9130
Smooth Caster Wheel Kit	107-9132
44 Inch Mulching Kit	94-7758
MZ44GD Grass Collector	99163
56 Inch Snow Blade	99165

NOTES



NEW HOLLAND ..