



For Serial Nos.
320,000 & Higher

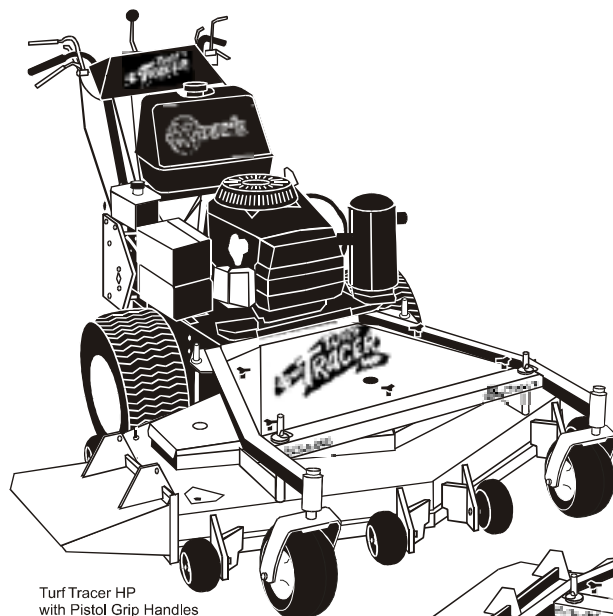

Turf Tracer HP
with Pistol Grip Handles

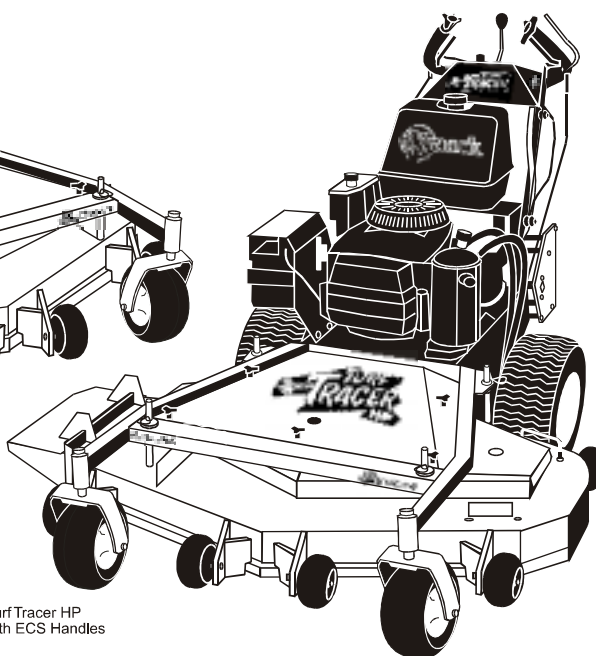

Turf Tracer HP
with ECS Handles

PARTS MANUAL

TURF TRACER[®] HP

CONGRATULATIONS on the purchase of your new Exmark mower. This product has been carefully designed and manufactured to give you a maximum amount of dependability and years of trouble-free operation. If additional information is needed, or should you require trained mechanic service, contact your authorized Exmark equipment dealer or distributor. If you need to order replacement parts from your dealer, always give the model number and serial number of your mower as well as the part number, description and quantity of the part needed.

The Serial No. plate is located next to the fuel tank on the top left hand side of the fuel tank support. For ease of ordering and reference, we suggest that you record the information requested in the following identification table.

Place Model No. and Serial No. Label Here
(Included in Literature Pack)
or Fill in Below

Model No. _____

Serial No. _____

Engine Model No. and Spec. No. (Code) _____

Engine Serial No. (E/No) _____

Date Purchased _____

EXMARK PARTS PLUS® PROGRAM


EFFECTIVE DATE: September 1, 1995

Program

If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE* Guaranteed!!

How the Program Works

1. If dealer does not have part in stock for a "down" unit at the time of request by customer, the dealer contacts his distributor by 1:00 p.m., local time, and requests Exmark Parts Plus® shipment of six (6) line items or less.
2. Distributor ships part(s) to dealer or customer, as requested by dealer, same day, overnight UPS. Distributor bills dealer for part and freight charges where applicable.
3. If distributor does not have the part(s) in stock to satisfy Exmark Parts Plus® order, he contacts Exmark by 3:00 p.m., central time, with an Exmark Parts Plus® order of six (6) line items or less.
4. If order is received by 3:00 p.m. central time, Exmark ships part(s) direct to dealer or customer, as requested by distributor, same day, overnight UPS. Exmark bills the distributor for parts and shipping charges, where applicable.
5. The customer pays for the part and freight if it is shipped under the Exmark Parts Plus® and if it arrives in accordance to the program.
6. Who pays for the part and freight if it fails to arrive overnight in accordance to the program?
 - A. Under any circumstance the customer does not pay.
 - B. If the part does not arrive overnight due to:
 1. The dealer not submitting the Exmark Parts Plus® order to his Exmark distributor by 1:00 p.m., the dealer pays for the part and freight.
 2. The Distributor being unable to ship the part the same day or not submitting the Exmark Parts Plus® order to Exmark by 3:00 p.m., central time, the Distributor pays for the part and freight.
 3. Exmark being unable to ship the part and the Exmark parts order is received by 3:00 p.m., central time, Exmark pays for the part and freight.
 4. If the part does not arrive overnight due to the shipper (UPS), the shipper pays for the freight and Exmark pays for the part.

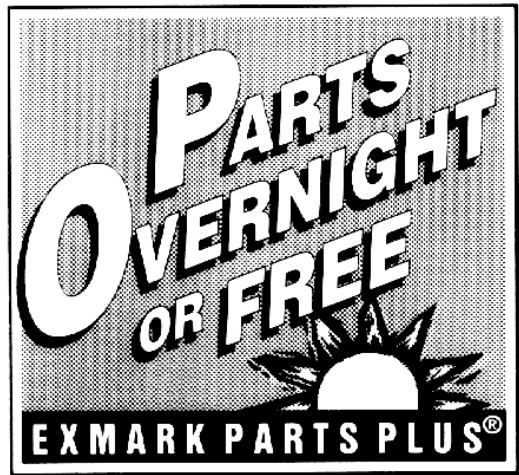

The following restrictions apply -- The Exmark Parts Plus® Program is available only through participating Exmark Dealers and applies only to orders submitted on this program Monday through Thursday. Parts Plus service is available only in the contiguous United States. UPS has initiated a Saturday delivery program to many areas of the continental United States and can be requested for an overnight shipment on Friday to be delivered Saturday. The next day air charge, plus the Saturday delivery fee will be the responsibility of the purchaser. Exmark Mfg. will assume no responsibility for Saturday delivery shipments. To qualify, all Exmark Parts Plus® orders must be received by Exmark by 3:00 p.m., central time. Orders must be six (6) line items or less. Exclusions from the Exmark Parts Plus® Program are: Any wholegood or accessory in its entirety, engines and engine replacement parts, 5-speed Peerless transmissions and 5-speed transaxles, hydraulic or hydrostatic wheel motors, cutter decks and engine decks or any item exceeding United Parcel Service size and weight restrictions.

Due to UPS restrictions, aerosol spray paint is considered a hazardous material and cannot be shipped via UPS next day or Second Day Air.

Exmark Manufacturing stocks a limited supply of parts for transaxles, pumps and wheel motors. These parts can be ordered for Next Day Air shipment but will not be guaranteed per the Parts Plus Program.



**READ OPERATOR'S MANUAL BEFORE
OPERATING OR SERVICING EXMARK EQUIPMENT.**

TABLE OF CONTENTS

<u>Description</u>	<u>Page</u>
Decals.....	20-21
Electrical Group	18
Engine Deck Group.....	10-13
52" Mower Deck	6-7
48" Mower Deck	4-5
Hydraulics Group	9
Mower Deck Cutter Housings	8
36" Mower Deck	2-3
Upper Handles & Controls, Pistol Grip.....	14-15
Upper Handles & Controls, ECS	16-17
Wiring Diagrams	19


36" MOWER DECK

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1	1-414386	Shield, belt w/decals	1	31	3256-4	Washer, Flat Std 3/8	1
	1-413098-01	Shield, belt	1	32	1-513034	Pivot Bearing	2
2	1-323385	Knob, belt shield	4	33	302-40	Zerk, 90 degree 1/4-28	1
3	1-323417	Washer, belt shield	4	34	3234-11	Bolt, Hex Whizlock 3/8-16x1	1
4	1-414309	Support wld w/bushings&decals...	1	35	3256-24	Washer, Flat 3/8 SAE	2
	1-412108-01	Support weldmemt.....	1	36	1-413099	Pulley, Idler.....	1
5	1-413425	Spacer, Front Deck Support	2	37	1-412134-03	Arm, weldmt.....	1
6	1-513336	Bushing, deck support	2		1-414144	Arm, weldmt w/bushings	1
7	302-61	Zerk, 45 degree 1/4-28	2	38	1-603384	Bushing, Idler Pivot	1
8	1-323539	Spacer	2	39	1-613098	Pulley, Idler	1
9	1-413525	Link, Deck Support.....	2	40	1-413113	Bushing, Idler	1
10	323-7	Screw, Hex Cap 3/8-16 x 1 1/4....	8	41	3296-29	Nut, Nyloc 5/16-18	2
11	3219-3	Nut, Reg Hex 3/8-24	2	42	32128-20	Nut, Whizlock 5/16-18.....	3
12	32120-33	Ring, Retaining	2	43	322-5	Screw, Hex Cap 5/16-18 x 1	2
13	1-806009	Hairpin, Cotter .177 #206.....	4	44	1-603001	Rod, Deck Support.....	2
14	302-52	Zerk, Straight 1/8.....	2	45	1-806332	Rollpin, 1/4x1 1/2	2
15	323-6	Screw, Hex Cap 3/8-16x1	2	46	322-2	Screw, Hex Cap 5/16-18 x 5/8....	3
16	3253-5	Washer, 3/8 heavy spring.....	2	47	1-414383	Deck weldmt w/decals, discharge	
17	1-373034	Washer, Swivel	3			Baffle & support rods	1
18	1-303514	Bearing, Flange	4		1-412104-01	Deck weldmt	1
19	3217-9	Nut, Reg Hex 1/2-13	2	48	1-522480-01	Baffle, discharge	1
20	3253-7	Washer, Lock Hlcl Spg 1/2 Reg... 2		49	1-613204	Ball Joint	2
21	1-522143-01	Caster weldment.....	2	50	323-13	Screw, Hex Cap 3/8-16 x 2 3/4....	1
22	325-20	Screw, Hex Cap 1/2-13x6.....	2	51	1-800805	Screw, Hex Cap 3/8-16 x 3 1/2 G8	1
23	3290-357	Nut, Whizlock 3/8-16	12	52⚙	1-603299	Roller, antiscalp	1
24	98-5975	Washer, Disc Spring 3/8.....	11	53	1-603602	Bushing, roller	1
25	103-1224	Tire & Wheel Asm(semi-pneumatic) .	2	54	98-5961	Screw, Hex Cap 3/8-16x4 Gr. 8...	1
	1-513809	Roller Bearing	2	55	1-603050	Bushing Spacer.....	2
❖	103-2170	Bushing (semi-pneumatic)	4	56	323-9	Screw, hex Cap 3/8-16x1 3/4.....	2
26■	103-2169	Spacer (semi-pneumatic)	2	57▲	1-414521	Link, Assembly.....	2
27	103-2431-01	Chute weldment, discharge	1	58	1-611216	Kit, Link Assembly.....	2
28	1-413094	Belt, deck drive.....	1	59*	103-0320	Assy, cutting deck complete	1
29	1-633151	Spring, extension	1	60□	103-2171	Kit,semi-pneumatic wheel replacement....	1
30	3296-39	Nut, Nyloc 3/8-16	1				

Exmark red touch up spray paint - P/N 1-850337

- ▲ Link assembly nominal length is 6.89" (or approximately 6 7/8") between center of ball joint and center of furthest hole. See diagram on next page. Initially adjust both links to this dimension, then adjust to where both links are equally supporting rear of mower deck by lengthening one link and shortening the other by an equal amount.
- ❖ Bushing for semi-pneumatic caster tires can be identified by a groove on the face.
- Front caster spacer for semi-pneumatic caster tires can be identified by yellow zinc plating.
- Kit 103-2171 used to install semi-pneumatic casters on machines originally fitted with pneumatic casters. Includes 103-1224 & 103-2169. Order 2 per machine.
- * Complete cutting deck assembly also includes the complete cutter housing assemblies & blades.
- ⚙ Kit 103-3168 includes antiscalp roller, bushing, and mounting hardware.

36" MOWER DECK

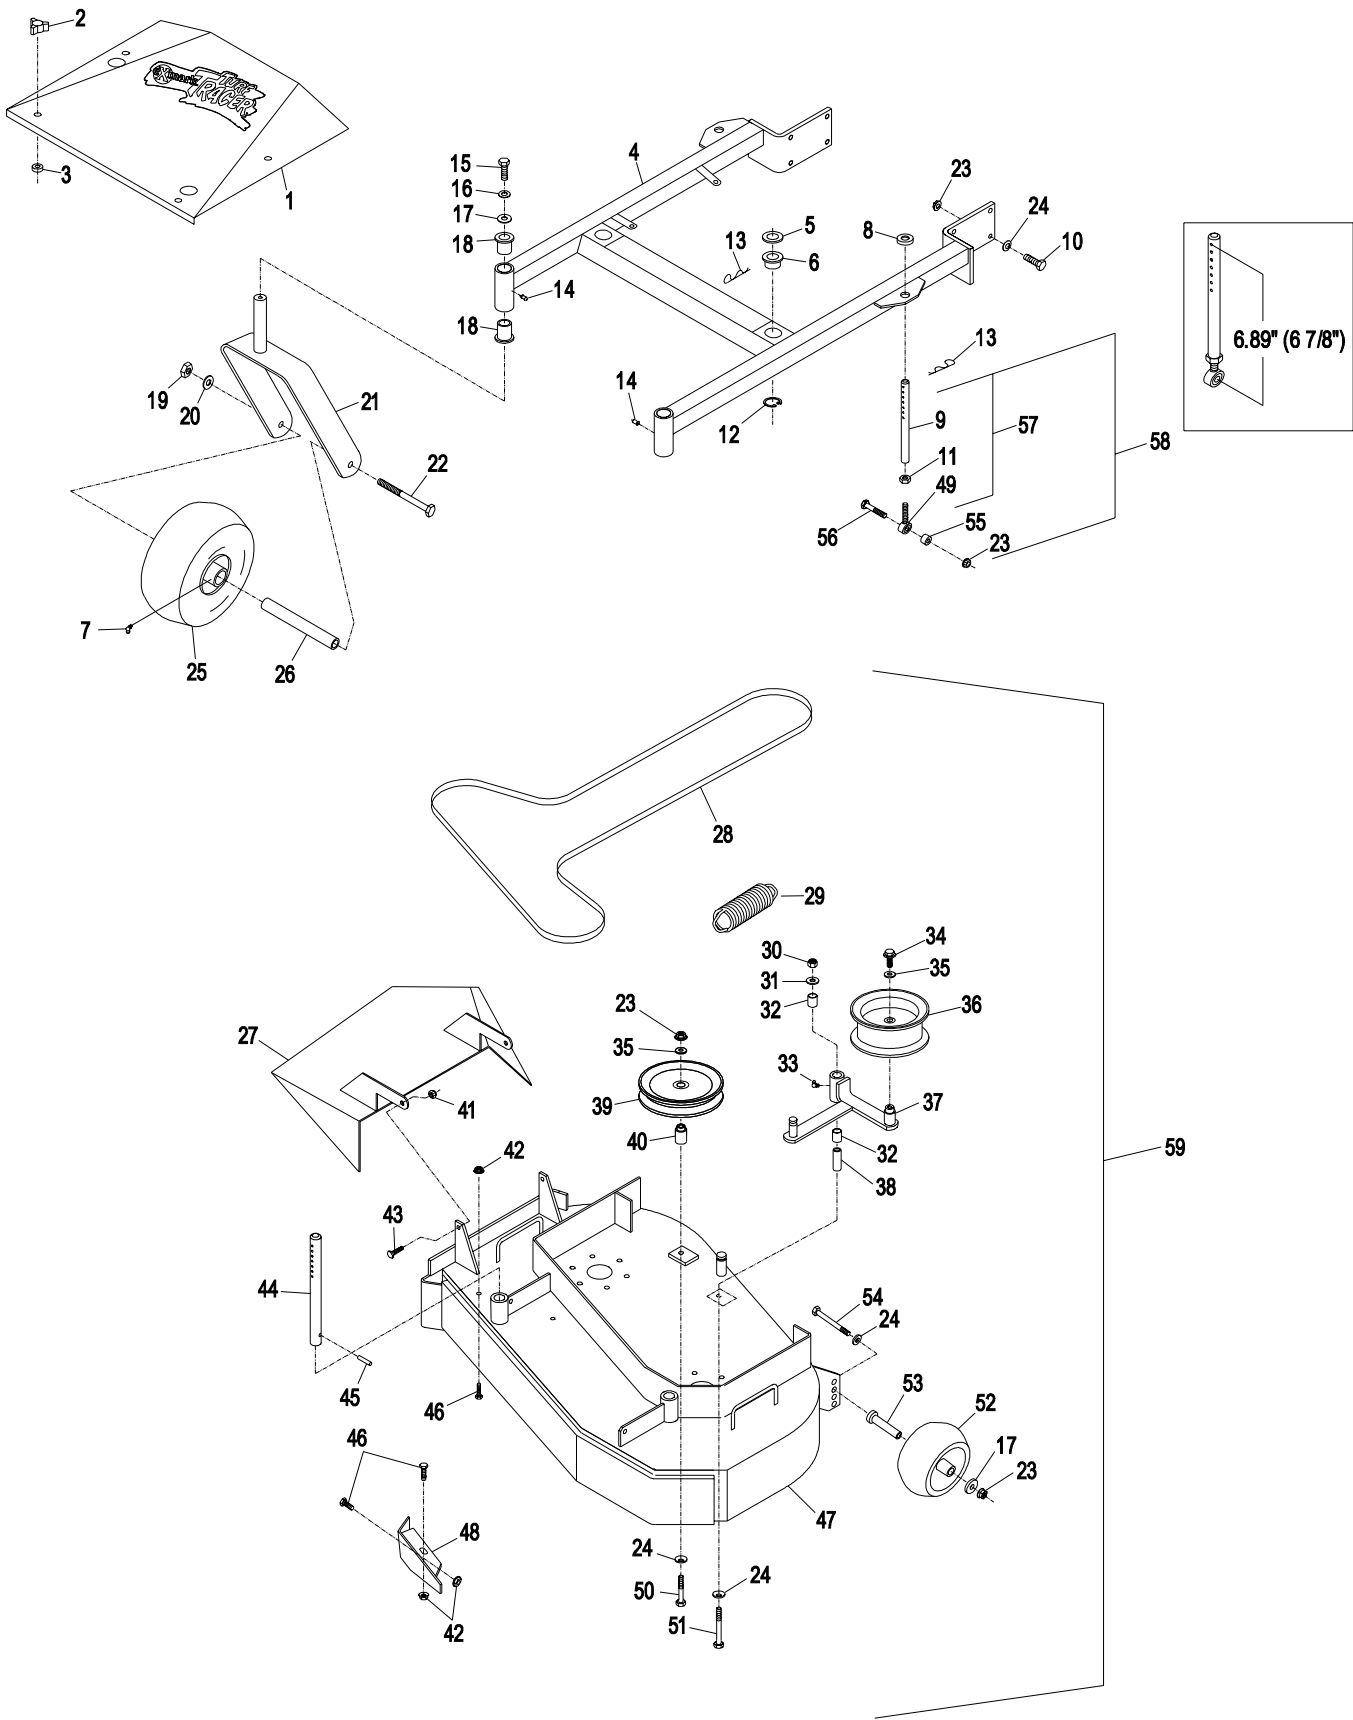


48" MOWER DECK

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1	1-414387	Shield, belt w/decals	1	33	302-40	Zerk, 90 degree ¼-28	1
	1-413101-01	Shield, belt	1	34	3234-11	Bolt, Hex Whizlock 3/8-16x1	1
2	1-323385	Knob, belt shield	4	35	3256-24	Washer, Flat 3/8 SAE	3
3	1-323417	Washer, belt cover	4	36	1-413099	Pulley, Idler	1
4	1-414310	Support wld w/bushings & decals	1	37	1-412394-03	Arm, weldmt	1
	1-412110-01	Support weldmt	1		1-414398	Arm, weldmt w/bushings	1
5	1-413425	Spacer, Front Deck Support	2	38	1-603384	Bushing, Idler Pivot	1
6	1-513336	Bushing, deck support	2	39	1-613098	Pulley, Idler	2
7	302-61	Zerk, 45 degree ¼-28	2	40	1-413113	Bushing, Idler	2
8	1-323539	Spacer	2	41	3296-29	Nut, Nyloc 5/16-18	8
9	1-413525	Link, Deck Support	2	42	32128-20	Nut, Whizlock 5/16-18	5
10	323-7	Screw, Hex Cap 3/8-16 x 1 ¼	8	43	322-5	Screw, Hex Cap 5/16-18 x 1	2
11	3219-3	Nut, Reg Hex 3/8-24	2	44	1-603001	Rod, Deck Support	2
12	32120-33	Ring, Retaining	2	45	1-806332	Rollpin, 1/4x1 1/2	2
13	1-806009	Hairpin, Cotter .177 #206	4	46	322-2	Screw, Hex Cap 5/16-18 x 5/8	3
14	302-52	Zerk, Straight 1/8	2	47	1-414384	Deck weldmt w/decals, discharge	
15	323-6	Screw, Hex Cap 3/8-16x1	2			Baffle & support rods	1
16	3253-5	Washer, 3/8 heavy spring	2		1-412106-01	Deck weldmt	1
17	1-373034	Washer, Swivel	6	48	1-522480-01	Baffle, discharge	1
18	1-303514	Bearing, Flange	4	49	1-613204	Ball Joint	2
19	3217-9	Nut, Reg Hex ½-13	2	50	323-13	Screw, Hex Cap 3/8-16 x 2 3/4	2
20	3253-7	Washer, Lock Hlcl Spg ½ Reg	2	51	1-800805	Screw, Hex Cap 3/8-16 x 3 ½ G8	1
21	1-522143-01	Caster weldment	2	52	1-603299	Roller, antiscalp	4
22	325-20	Screw, Hex Cap ½-13x6	2	53	1-603602	Bushing, roller	4
23	3290-357	Nut, Whizlock 3/8-16	16	54	98-5961	Screw, Hex Cap 3/8-16x4 Gr. 8	4
24	98-5975	Washer, Disc Spring 3/8	15	55	1-603050	Bushing Spacer	2
25	103-1224	Tire & Wheel Asm (semi pneumatic)	2	56	323-9	Screw, hex Cap 3/8-16x1 3/4	2
	1-513809	Roller Bearing	2	57	1-414521	Link, Assembly	2
❖	103-2170	Bushing (semi-pneumatic)	4	58	103-2970-01	Shield, Belt	2
26	103-2169	Spacer (semi-pneumatic)	2	59	3256-3	Washer, Flat Std 5/16	6
	103-2431-01	Chute weldment, discharge	1	60	1-800017	Bolt, Hex Tap 5/16-18 3 1/4	2
28	1-413093	Belt, deck drive	1	61	1-611216	Kit, Link Assembly	2
29	1-633151	Spring, extension	1	62*	103-0321	Assy, cutting deck complete	1
30	3296-39	Nut, Nyloc 3/8-16	1	63	103-2171	Kit, semi-pneumatic wheel replacement	1
31	3256-4	Washer, Flat Std 3/8	1				
32	1-513034	Pivot Bearing	2				

Exmark red touch up spray paint - P/N 1-850337

- ◆ Link assembly nominal length is 6.89" (or approximately 6 7/8") from center of ball joint to center of furthest hole. See diagram on next page. Initially adjust both links to this dimension, then adjust to where both links are equally supporting rear of mower deck by lengthening one link and shortening the other by an equal amount.
- ❖ Bushing for semi-pneumatic caster tires can be identified by a groove on the face.
- Front caster spacer for semi-pneumatic caster tires can be identified by yellow zinc plating.
- Kit 103-2171 used to install semi-pneumatic casters on machines originally fitted with pneumatic casters. Includes 103-1224 & 103-2169. Order 2 per machine.
- * Complete cutting deck assembly also includes the complete cutter housing assemblies & blades.
- ⊛ Kit 103-3168 includes antiscalp roller, bushing, and mounting hardware.

48" MOWER DECK

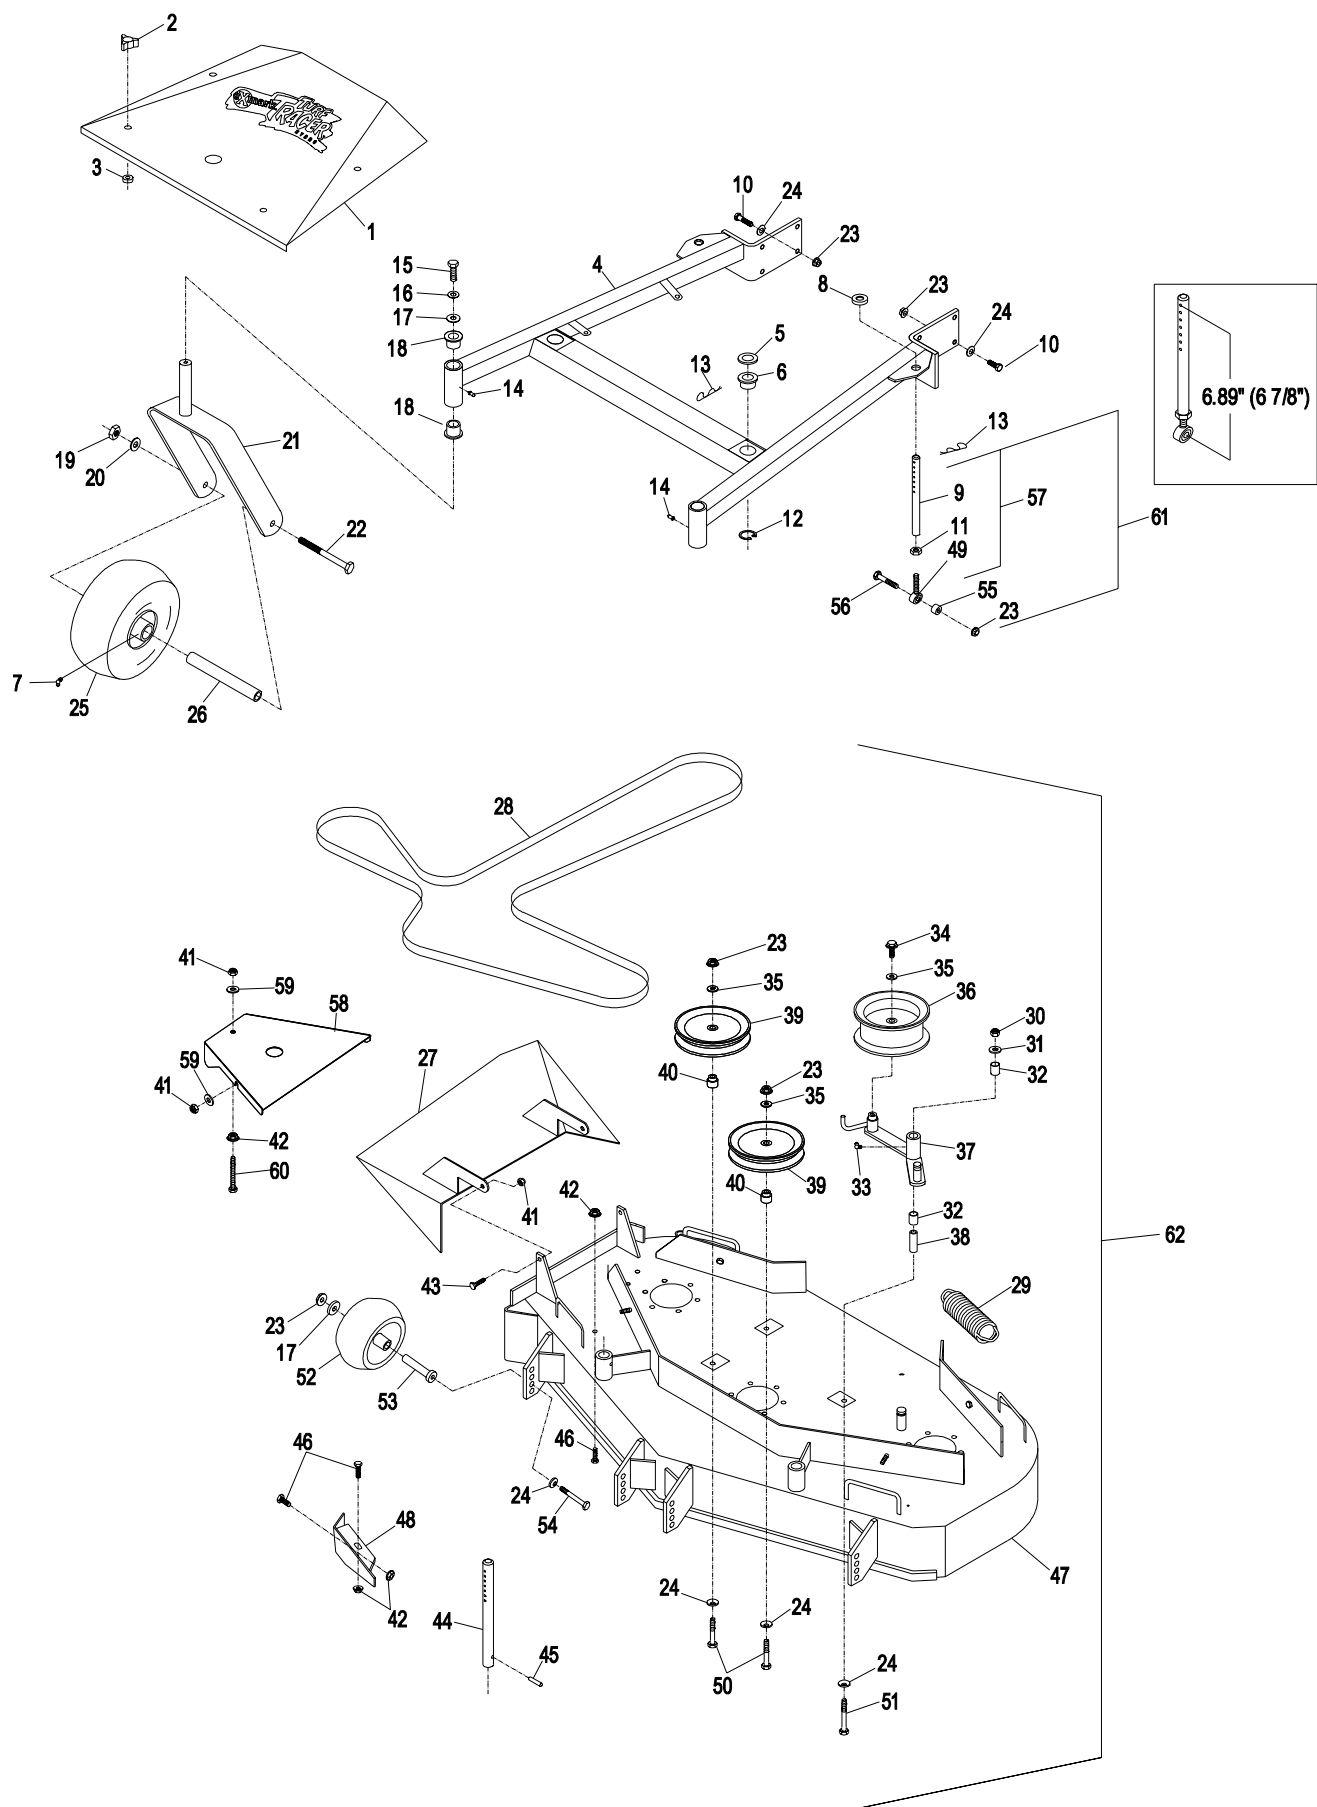


52" MOWER DECK

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1	1-414388	Shield, belt w/decals.....	1	32	1-513034	Pivot Bearing	2
	1-413303-01	Shield, belt	1	33	302-40	Zerk, 90 degree ¼-28.....	1
2	1-323385	Knob, belt shield.....	5	34	3234-11	Bolt, Hex Whizlock 3/8-16x1	1
3	1-323417	Washer, belt cover	5	35	3256-24	Washer, Flat 3/8 SAE.....	3
4	1-414311	Support wld w/bushings & decals..	1	36	1-413099	Pulley, Idler.....	1
	1-412317-01	Support weldmt	1	37	1-412394-03	Arm, weldment	1
5	1-413425	Spacer, Front Deck Support.....	2		1-414398	Arm, weldment w/bushings	1
6	1-513336	Bushing, deck support.....	2	38	1-603384	Bushing, Idler Pivot.....	1
7	1-611216	Kit, Link Assembly	2	39	1-613098	Pulley, Idler	2
8	1-323539	Spacer.....	2	40	1-413113	Bushing, Idler.....	2
9	1-413525	Link, Deck Support.....	2	41	3296-29	Nut, Nyloc 5/16-18.....	2
10	323-7	Screw, Hex Cap 3/8-16 x 1 1/4 ...	8	42	32128-20	Nut, Whizlock 5/16-18	6
11	3219-3	Nut, Reg Hex 3/8-24	2	43	322-5	Screw, Hex Cap 5/16-18 x 1	2
12	32120-33	Ring, Retaining	2	44	1-603001	Rod, Deck Support.....	2
13	1-806009	Hairpin, Cotter .177 #206	4	45	1-806332	Rollpin, 1/4x1 1/2.....	2
14	302-52	Zerk, Straight 1/8.....	2	46	322-2	Screw, Hex Cap 5/16-18 x 5/8	6
15	323-6	Screw, Hex Cap 3/8-16x1	2	47	1-414385	Deck weldmt w/decals, discharge Baffle & support rods	1
16	3253-5	Washer, 3/8 heavy spring	2		1-412313-01	Deck weldmt.....	1
17	1-373034	Washer, Swivel.	8	48	1-602913-01	Baffle, discharge	1
18	1-303514	Bearing, Flange	4	49	1-613204	Ball Joint.....	2
19	3217-9	Nut, Reg Hex ½-13	2	50	323-13	Screw, Hex Cap 3/8-16 x 2 3/4 ...	2
20	3253-7	Washer, Lock Hlcl Spg ½ Reg	2	51	1-800805	Screw, Hex Cap 3/8-16 x 3 ½ G8	1
21	1-522143-01	Caster weldment	2	52⬢	1-603299	Roller, antiscalp.....	6
22	325-20	Screw, Hex Cap ½-13x6	2	53	1-603602	Bushing, roller.....	6
23	3290-357	Nut, Whizlock 3/8-16	18	54	98-5961	Screw, Hex Cap 3/8-16x4 Gr. 8 ..	6
24	98-5975	Washer, Disc Spring 3/8	17	55	1-603050	Bushing Spacer	2
25	103-1224	Tire & Wheel Asm (semi-pneumatic)..	2	56	323-9	Screw, hex Cap 3/8-16x1 3/4.....	2
	1-513809	Roller Bearing	2	57◆	1-414521	Link, Assembly	2
❖	103-2170	Bushing (semi-pneumatic).....	4	58	103-2971-01	Shield, Belt	2
26■	103-2169	Spacer (semi-pneumatic).....	2	59*	103-0322	Assembly, cutting deck complete	1
27	1-602571-01	Chute weldment, discharge	1	60	302-61	Zerk, 45 degree ¼-28.....	2
28	1-413308	Belt, deck drive.....	1	61□	103-2171	Kit,semi-pneumatic wheel replacement ..	1
29	1-633151	Spring, extension	1				
30	3296-39	Nut, Nyloc 3/8-16.....	9				
31	3256-4	Washer, Flat Std 3/8	9				

Exmark red touch up spray paint - P/N 1-850337

- ◆ Link assembly nominal length is 6.89" (or approximately 6 7/8") between center of ball joint and center of furthest hole. See diagram on next page. Initially adjust both links to this dimension, then adjust to where both links are equally supporting rear of mower deck by lengthening one link and shortening the other by an equal amount.
- ❖ Bushing for semi-pneumatic caster tires can be identified by a groove on the face.
- Front caster spacer for semi-pneumatic caster tires can be identified by yellow zinc plating.
- Kit 103-2171 used to install semi-pneumatic casters on machines originally fitted with pneumatic casters. Includes 103-1224 & 103-2169. Order 2 per machine.
- * Complete cutting deck assembly also includes the complete cutter housing assemblies & blades.
- ⬢ Kit 103-3168 includes antiscalp roller, bushing, and mounting hardware.


52" MOWER DECK

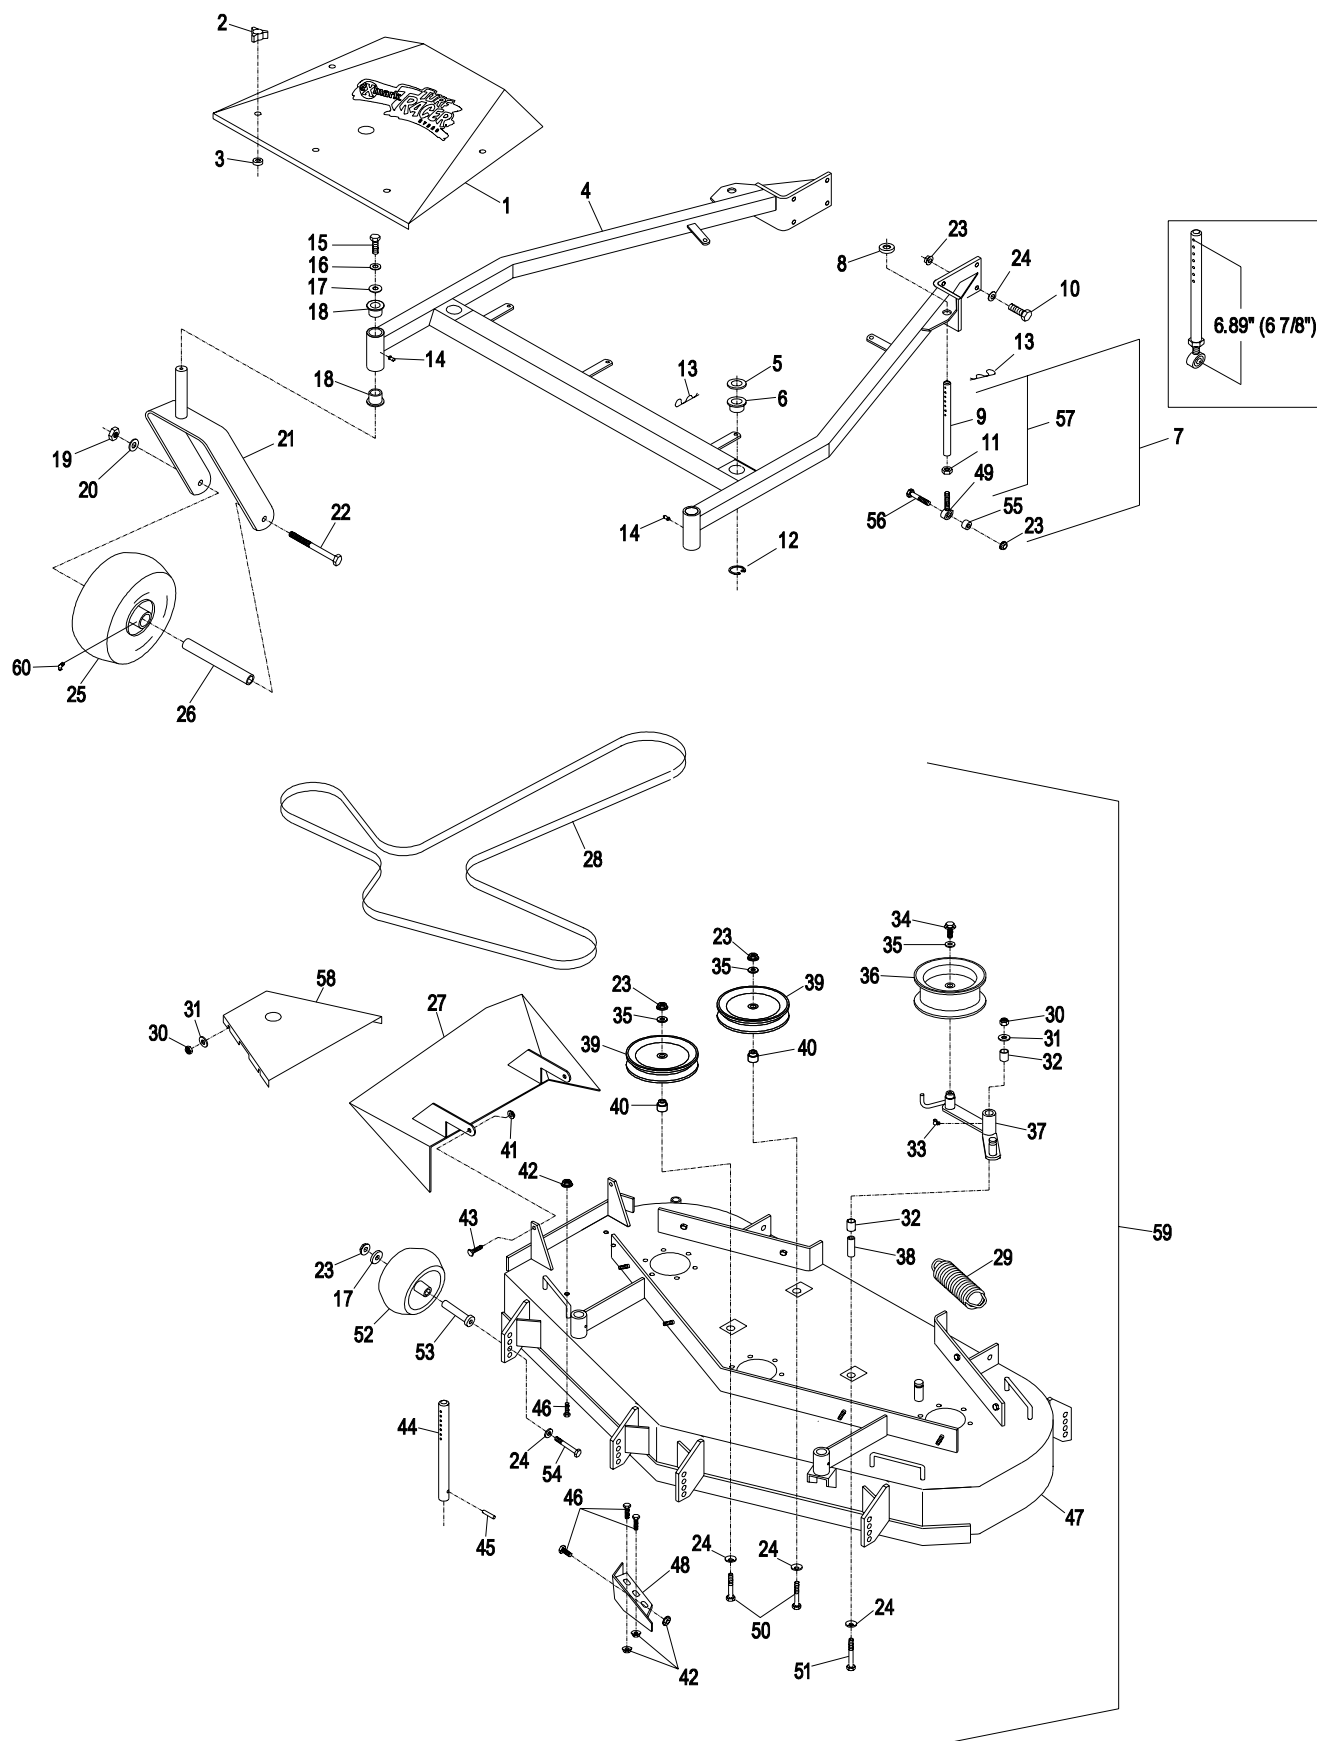

MOWER DECK CUTTER HOUSINGS


SERIAL NOS. 320,000 THRU 351,999

SERIAL NOS. 352,000 & ABOVE

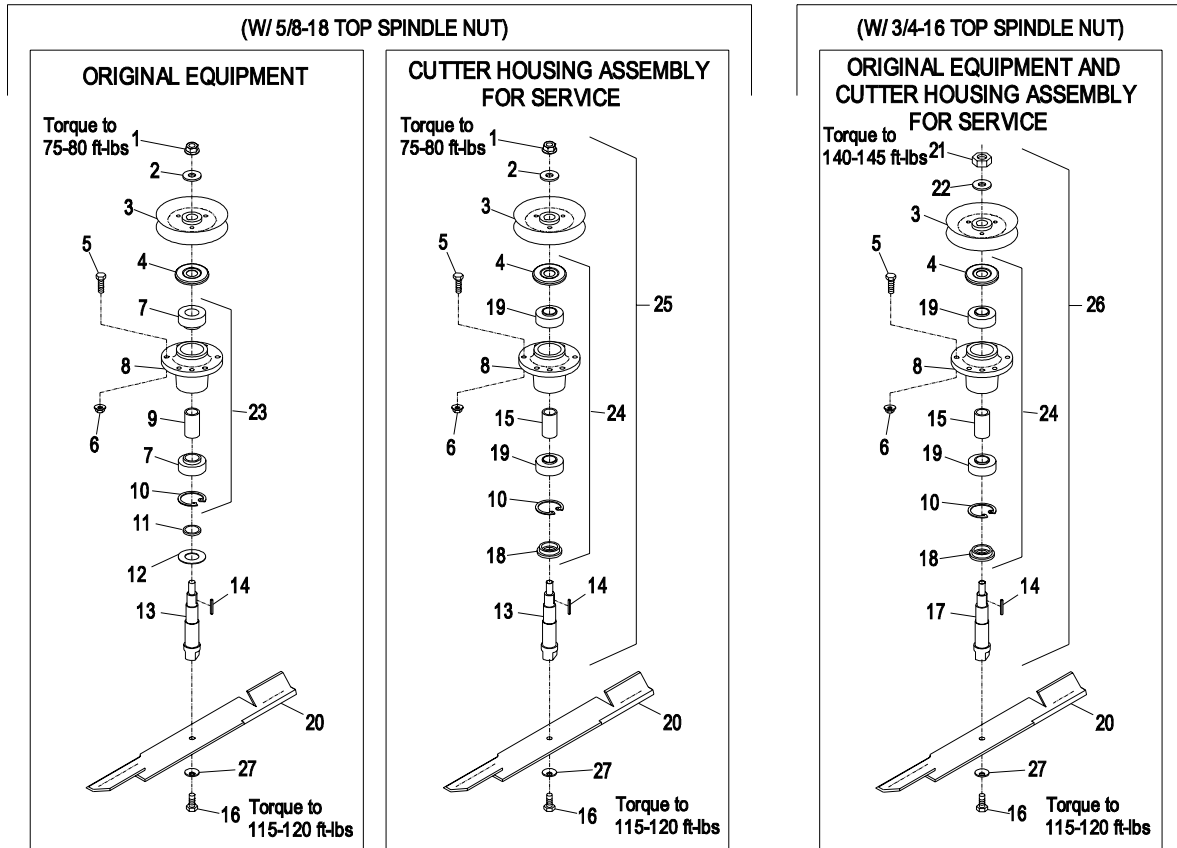

Ref. No.	Part No.	Description	Qty. Req'd.*	Ref. No.	Part No.	Description	Qty. Req'd.*
1	32128-58	Nut, Flange 5/8-16	3	18	103-2535	Spacer, guard bottom.....	3
2	1-513208	Washer, disc spring 5/8	3	19+	103-2477	Bearing, ball	6
3+	1-413424	Sheave w/ hub	3	20	103-2528	Blade, 18.00 notched (36&52)...	3
4+	103-1330	Guard, bearing top	3	◆	103-2518	Blade, 18.00 mulching (36&52) .	3
5	323-7	Screw, HH 3/8-16 x 1 1/4	18		103-2508	Blade, 18.00 low lift (36&52)	3
6	3296-39	Nut, Nyloc 3/8-16	18		103-1578	Blade, 18.00 solid (36&52)	3
7+	1-513016	Bearing.....	6		103-2527	Blade, 16.25 notched (48)	3
8	1-323532	Housing, spindle	3	◆	103-2517	Blade, 16.25 mulching (48)	3
9	1-323528	Spacer, bearing.....	3		103-2507	Blade, 18.00 low lift(48)	3
10	32120-8	Ring, snap	3		103-1577	Blade, 16.25 solid (48)	3
11	1-323533	Spacer.....	3	21	3217-46	Nut, HH 3/4-16 heavy	3
12	1-633573	Guard, bearing bottom	3	22	103-2802	Washer, disc spring 3/4	3
13+	1-413330	Shaft, spindle	3	23+		Housing w/brgs, spacer, & ring..	3
14	1-807268	Key, machine	3	24	103-2547	Cutter housing assembly.....	3
15	103-2534	Spacer, bearing.....	3	25	1-414335	Cutter housing complete	3
16	103-1026	Screw, HH 5/8-11 x 1 G8	3	26■	103-3207	Cutter housing complete	3
17+	103-2788	Shaft, spindle	3	27	1-513208	Washer, disc spring 5/8	3

- * Quantity shown for all parts is for 48" and 52" units which have three cutter housings. Make proper adjustments in quantity for 36" units which only have two cutter housings.
 - ◆ Requires installation of Micro-Mulch accessory for proper mulching. Mulch kit P/N MK363(36"), MK483(48"), MK523(52")
 - + Apply Mobil HTS grease (or a food-grade antisieze) between the spindles & bearings and spindles & sheaves and under top bearing guard. DO NOT use a copper or nickel based antisieze.
 - Complete cutter housing 103-3207 can be used on units w/ Serial Nos. 351,999 & lower. However, belt shields must be replaced by new shields w/ larger spindle holes. P/N 103-2970-01(2 req'd) for 48" units; P/N 103-2971-01(2 req'd) for 52" units.
 - ♣ This Assembly is now serviced by kit number 103-2547.
- Complete cutter housings also include items 16 & 27.

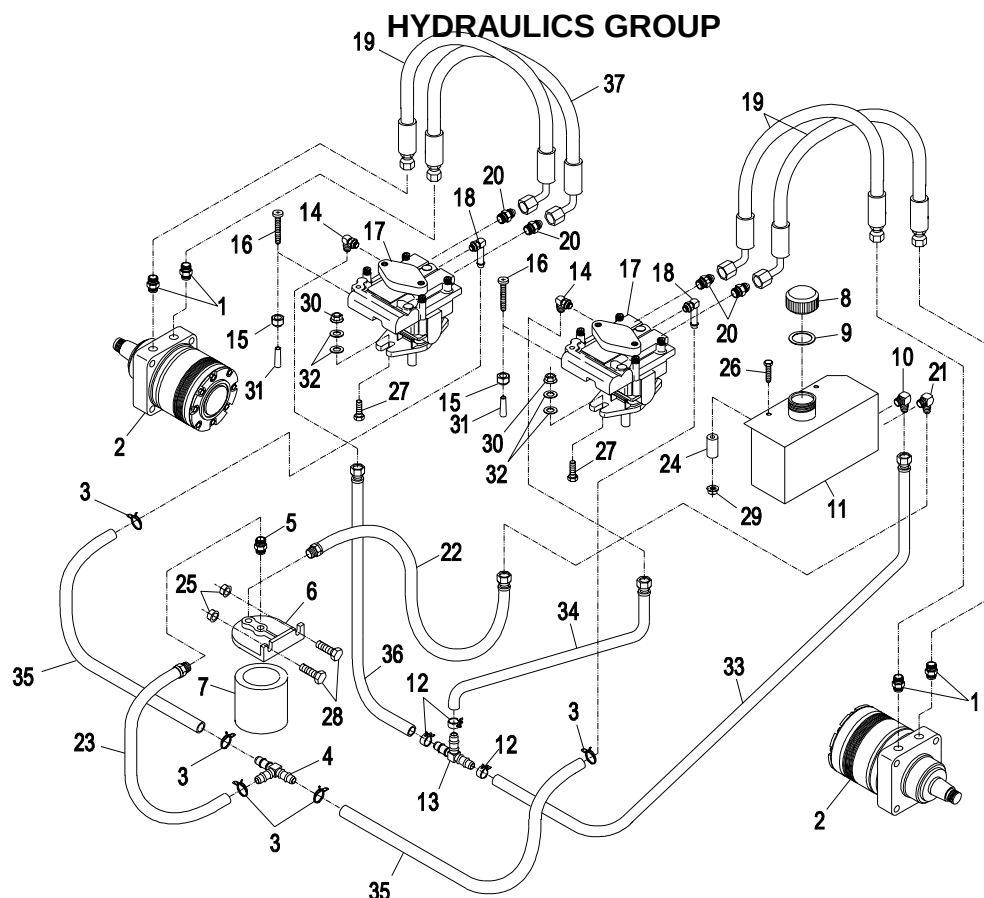

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1	1-603991	Fitting, strght connector.....	4	18	1-603989	Elbow, 90°.....	2
	1-603919	Boss O-Ring.....	1		1-603923	O-Ring.....	1
	1-603992	Flare O-Ring.....	1	19	1-613034	Hose, high pressure.....	3
2	1-603718	Wheel motor.....	2	20	1-603990	Adapter, straight thread	4
	1-000138	Kit, Bearing.....	1		1-603920	Boss O-Ring	1
	1-000119	Kit, seal.....	1		1-603992	Flare O-Ring	1
3	1-603827	Clamp, hose (5/8).....	5	21	1-603988	Elbow, 90°.....	1
4	1-603721	Fitting, Hose Tee (3/8 I.D)..	1	22	1-602985	Hose, supply	1
5	1-513510	Connector, male.....	1	23	1-602754	Hose, charge line	1
6*	1-603720	Head, filter.....	1	24	1-323218	Spacer, hydraulic tank	2
7	1-513211	Element, oil filter.....	1	25	32128-20	Nut, whizlock 5/16-18.....	2
▽	1-523541	Element, oil filter(winter)....	1	26	321-18	Screw, 1/4-20 x 2 1/4.....	2
8	1-513167	Cap, hydraulic reservoir	1	27	323-7	Screw, 3/8-16 x 1-1/4.....	4
9	1-523103	Gasket, tank cap	1	28	322-5	Screw, 5/16-18 x 1.....	2
10	1-603987	Elbow, 90°	1	29	32128-33	Nut, whizlock 1/4-20.....	2
11*	1-512166-03	Reservoir, hydraulic fluid....	1	30	3290-357	Nut, whizlock 3/8-16.....	4
12	1-603826	Hose Clamp 1/2	3	31	1-613073	Grip, dump valve.....	2
13	1-603722	Fitting - Hose Tee(1/4 I.D)..	1	32	3256-3	Washer, 5/16 std	8
14	1-513840	Elbow - 90°	2	33	1-602750	Hose, case drain.....	1
	1-603921	O-Ring	1	34	1-632286	Hose assy, lo pressure	1
15	3296-42	Nut, nylock 1/4-20	2	35	1-413273	Hose, lo pressure.....	2
16	1-801063	Screw, 1/4-20x2 pan head .	2	36	1-632285	Hose assy, lo pressure	1
17	1-613042	Pump, hydro.....	2	37	1-323241	Hose, high pressure.....	1
	2513018	Kit, seal overhaul.....	1				

Exmark black touch up spray paint - gloss black

* Use Teflon Pipe Sealant or equivalent on hydraulic reservoir and filter head fittings.

▽ Use only for operation below 32°F(0°C)

ENGINE DECK GROUP

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1 ★	323-11	Screw, 3/8-16 x 2-1/4	2	41	1-373034	Washer,pivot.....	2
↑	323-11	Screw, 3/8-16 x 2-1/4	1	42	1-603610	Washer.....	2
2 ★	98-5975	Washer, 3/8 disc spring.....	11	43▽	3212-10	Screw,7/16-20x2-1/2	1
↑	98-5975	Washer, 3/8 disc spring.....	13	44	3256-24	Washer, 3/8 SAE flat	1
3	1-603044	Bushing	2	45	1-603843	Pulley, idler.....	1
4	1-513034	Bearing, pivot	4	46	1-603496	Bushing - Idler	1
5	302-19	Zerk, straight	1	47	1-603402	Spring, extension	1
6	1-412285-03	Bellcrank weldment	1	48	1-412136-03	Idler arm weldmt	1
	1-414143	Bellcrank weldment w/brgs.....	1		1-414141	Idler arm weldmt w/brgs	1
7	322-6	Screw, 5/16-18 x 1-1/4	1	49	1481	Zerk, 45 degree.....	2
8	321-6	Screw, 1/4-20 x 1.....	2	50	323-13	Screw, 3/8-16 x 2-3/4	1
9	32128-33	Nut, 1/4-20 whizlock	4	51	323-9	Screw, 3/8-16 x 1-3/4	2
10	1-523498	Spring, motion control	1	52★	1-809069	Screw, #10-24 x 7/8	1
11	1-513113	Spring, belt tension.....	1	53★	1-323365	Chain, cold start	1
12	1-543007	Spacer	1	54★	3256-14	Washer, 7/32 std flat.....	1
13	1-213069	Washer.....	2	55★	3296-2	Nut, #10-24 nyloc.....	1
14	3296-29	Nut, 5/16-18 nyloc	3	56	1-807272	Key, 5mm sq x 25mm.....	2
15	3256-4	Washer, 3/8 std flat	2	57▽	1-803050	Setscrew,sq hd cuppoint	4
16	3290-357	Nut, 3/8-16 whizlock	18	58	1-413095	Belt, pump drive	1
17	1-413282	Linkage.....	1	59◇	1-413010	Sheave, pump drive	2
18	1-806003	Hairpin cotter.....	1	60	1-413096	Belt, blade clutch.....	1
19	103-2886-01	Deck weldmt, engine.....	1	61	1-807259	Key, 1/4 sq x 1.....	1
20	323-4	Screw, 3/8-16 x 3/4.....	2	62◇	1-412011	Sheave w/shaft.....	1
21	1-633068	Arm.....	1	63◇	1-413111	Bearing, clutch	2
22	32128-20	Nut, 5/16-18 whizlock	15	64	32120-8	Ring, retaining.....	2
23	1-303334	Washer, 5/16 disc spring.....	5	65	1-413012	Spacer, bearing.....	1
24 ★	1-322110	Guide weldmt, belt	1	66	1-523157	Washer, spacer.....	1
25 ★	322-7	Screw, 5/16-18x1-1/2	3	67	1-413049-01	Plate, clutch pivot.....	1
↑	322-7	Screw, 5/16-18x1-1/2	4	68	322-5	Screw, 5/16-18 x 1	6
26 ★	322-9	Screw, 5/16-18x1-3/4	1	69	1-413207	Pivot, bearing	2
27	3256-3	Washer, 5/16 std flat.....	2	70	1-412417-03	Arm weldmt, clutch.....	1
28 ★	1-323366	Ring, split.....	1		1-414418	Arm weldmt, clutch w/brgs	1
29	3296-39	Nut, 3/8-16 nyloc	5	71	1-413235	Washer, spacer.....	1
30★	323-6	Screw, 3/8-16 x 1.....	8	72	1-412138-03	Pin weldmt, pivot.....	1
↑	323-6	Screw, 3/8-16 x 1.....	10	73	322-3	Screw, 5/16-18 x 3/4	3
31	1-412080-01	Mount, wheel motor 36".....	2	74	1-413062	Band, brake	1
	1-412082-01	Mount, wheel motor 48" & 52"	2	75	323-8	Screw, 3/8-16 x 1 1/2	2
32	3234-12	Screw, 3/8-16 x 3/4 whizlock	8	76	1-412325	Guide weldmt, belt	1
33	1-602997	Hub, four bolt w/studs.....	2	77◇	1-412031	Sheave w/drum (36" & 52").....	1
	1-633926	Stud	8		1-412028	Sheave w/drum (48").....	1
34	1-413473	Wheel & tire assy (36").....	2	78▽	1-800521	Screw, 3/8-24 x 1	1
	1-413474	Tire 16 x 6.50-8 (36").....	2	79	1-413009-01	Plate, guard.....	1
	1-613263	Wheel & tire assy (48" & 52")	2	80	103-2056	Shield, trailing.....	1
	1-613264	Tire 16 x 7.50-8 (48" & 52")	2	81	1-413510	Clip, loom - .50	2
	1-603715	Wheel	2	82	1-413511	Hanger, drag shield.....	2
35	242-50	Nut, wheel 1/2-20	8	83♣	1-543891	Battery, cover	1
36	32136-5	Nut, slotted 3/4-16	2	84♣	1-543792	Wingnut, 1/4-20 nyloc	2
37	1-806800	Pin, cotter 9/64 x 1-1/2	2	85♣	1-413541	Trim-lok	1
38	1-807264	Key, 1/4sq x 2-5/8.....	1	86♣	103-1098	Stand w/ trim-lok	1
39 =◇	1-413004	Sheave assy, drive.....	1	87♣	1-543882	Bolt, hold down.....	2
40	1-603609	Bushing.....	1				

▽ Use Pro-Lock (nut type, Part no. 1-840022, 5 ml tube):

- on setscrew threads.
- on sheave retaining bolt in engine crankshaft.
- on sheave retaining bolt on clutch arm.

Exmark red touch up spray paint - P/N 1-850337


◇ Apply antiseize:

- between engine crankshaft and pump and blade drive sheave.
- between sheave w/shaft and bearing bores and sheave w/drum.
- between pump shafts and sheaves.

★ Manual start only

♣ Electric start only

ENGINE DECK GROUP

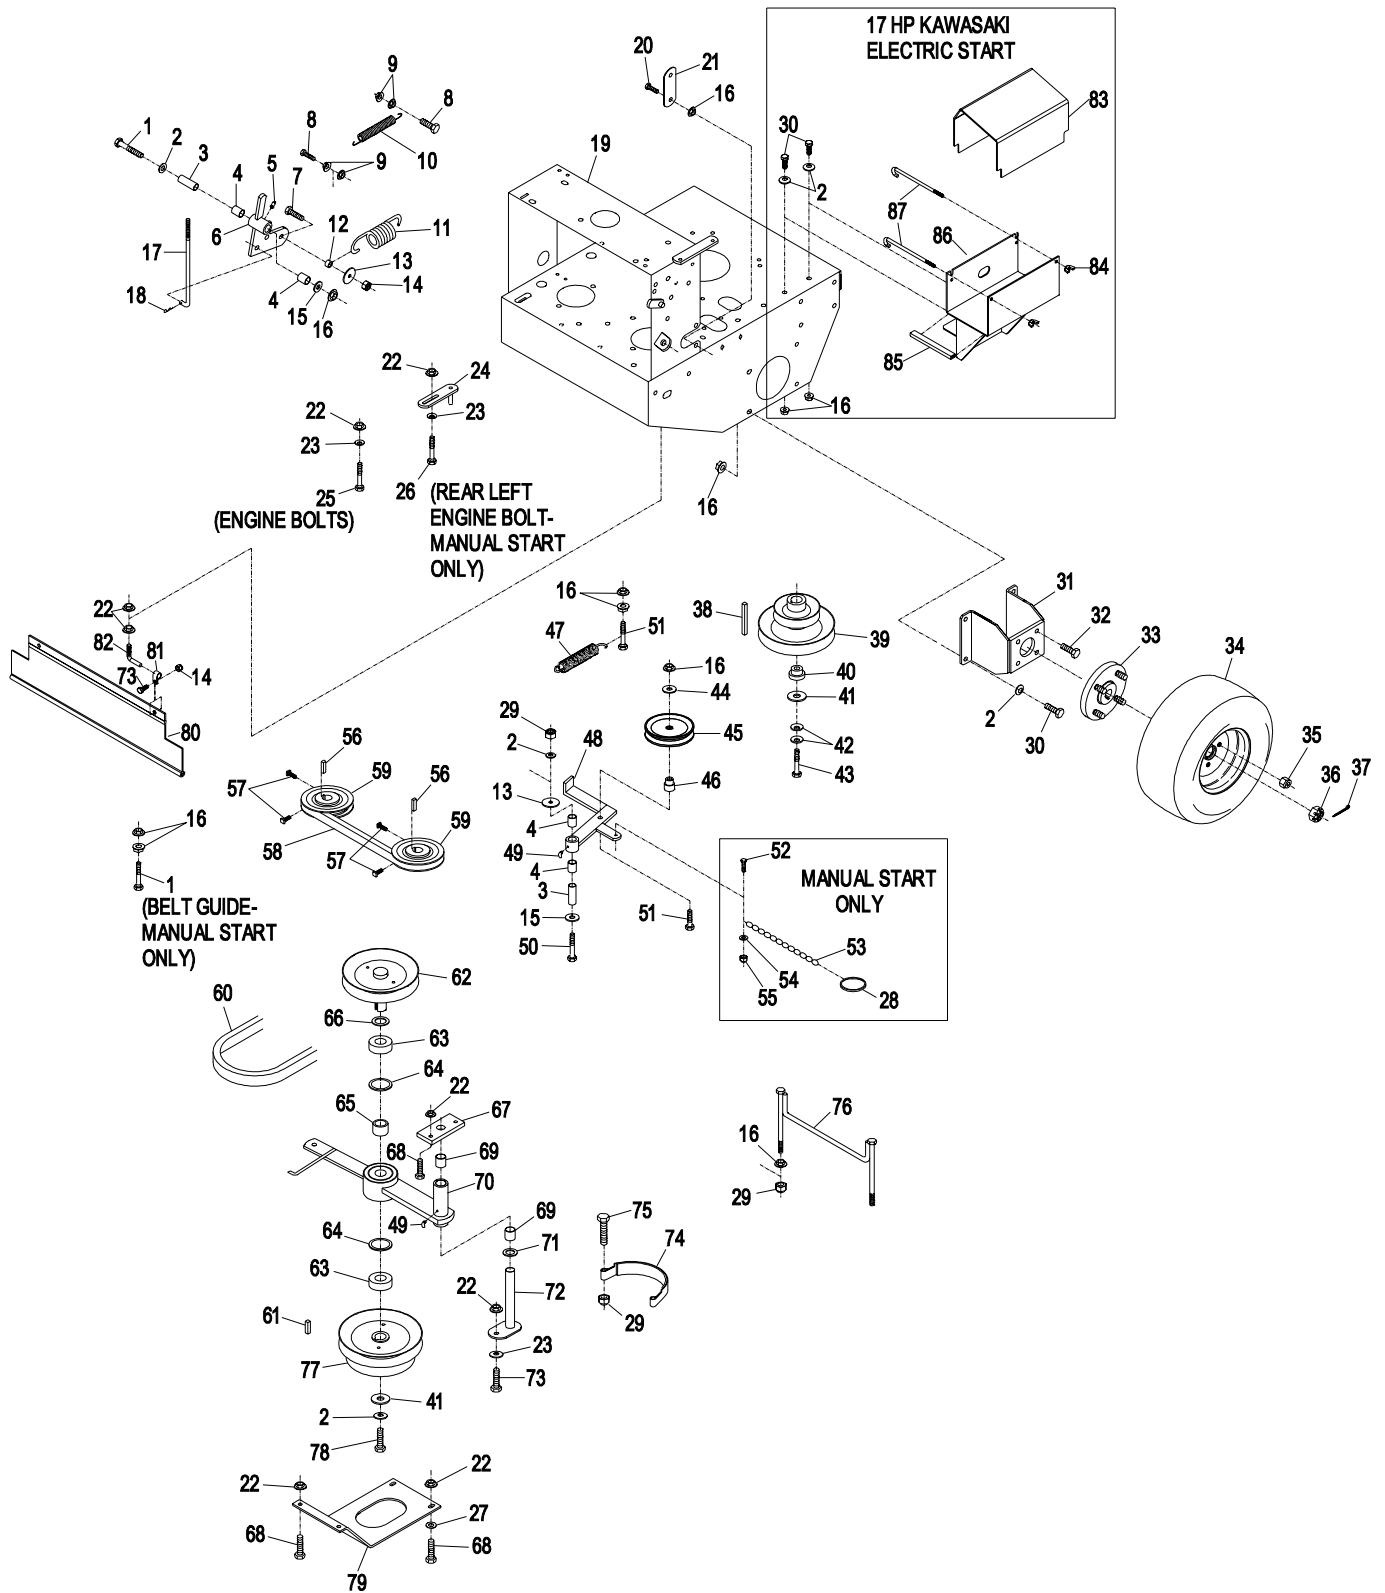


ENGINE DECK GROUP (con't.)

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1	1-323245	Spring	1	37	1-603903	Spacer	1
2	32128-20	Nut, 5/16-18 whizlock	20	38	1-403180	Screw, HH 5/16-18x1 3/8...	2
3	3296-29	Nut, 5/16-18 nylock	4	39♦	1-809056	Bolt,.375x.375 hx skt hd ...	2
4	1-613089	Tab, spring extension.....	2	40	3256-24	Washer, 3/8 SAE flat	4
5	1-603693	Spring, extension.....	2	41	1-413151	Knob	1
6	1-413201-01	Shield, hydro	2	42	1-323161	Spring	1
7	323-16	Screw, 3/8-16 x 4	6	43	103-2085-03	Brake weldmt, 36".....	1
8	302-19	Zerk, 1/4-28.....	2		103-2004-03	Brake weldmt, 48/52".....	1
9	322-3	Screw, 5/16-18 x 3/4	4	44	103-1965	Valve, oil drain	1
10	1-805005	Washer, 5/16 hvy spr lock .	4	45	103-1966	Adapter, M20-2.5/ 3/8 NPT	1
11	3256-2	Washer, 1/4 std flat	6	46	1-413492	Linkage, upper brake.....	1
12▽	3290-357	Nut, 3/8-16 whizlock	13	47●	323-23	Screw,3/8-16 x 4 1/2.....	1
❖	3290-357	Nut, 3/8-16 whizlock	15	◇	323-16	Screw,3/8-16 x 4.....	1
13	1-323195-01	Spacer, shield	4	48●	3296-39	Nut,3/8-16 nylock	2
14	1-633102	Bearing, side flange.....	2	◇	3296-39	Nut,3/8-16 nylock	1
15	1-323197-01	Spacer, shield	4	49❖	103-1148	Rod,drive lever.....	2
16	1-603737	Bolt, neutral return.....	2	50❖	323-8	Screw,3/8-16 x 1 1/2.....	2
17▽	1-603807	Spring, neutral return.....	2	51❖	103-1167	Joint,.375 LH ball end	2
❖	103-0265	Spring, neutral return.....	2	52❖	103-1166	Tube,pump link spacer	2
18	1-603735	Bushing, nylon.....	2	53❖	3220-16	Nut,jam 3/8-24 LH.....	2
19	3219-2	Nut, 5/16-24 hex	7	54●	323-16	Screw,3/8-16x4.....	1
20	1-303105	Yoke	2	◇	323-23	Screw,3/8-16x4 1/2.....	1
21	1-808280	Clevis pin, 5/16 x 1	2	55	1-303020	Grip, lever	1
22	1-806003	Hairpin cotter	5	56	323-9	Screw, HH 3/8-16 x 1 3/4	2
23	3220-2	Nut, 5/16-24 jam.....	2	57	323-4	Screw, HH 3/8-16 x 3/4	3
24	1-413350	Rod, control.....	2	58	1-412501-03	Park brake lever weldmt....	1
25	1-412203	Crank weldmt	1	59	1-414504	Weldmt, bracket w/bushings	1
26▽	1-413219	Rod, drive lever	2	60	1-413347	Sleeve, bushing	2
27	3256-23	Washer, 5/16 SAE.....	7	61	1-413344	Bushing, pivot	1
28	1-603676	Swivel, short	2	62	323-10	Screw, HH 3/8-16 x 2.....	1
29	1-800016	Tap Bolt 5/16-18 x 1-1/4.....	2	63	1-414508	Bellcrank, w/ bushings.....	1
30▽	103-1235	Swivel, drive lever.....	2	64	1-303548	Bushing, plastic.....	1
31♦	1-803022	Setscrew, 5/16-18x5/8.....	2	65	32128-21	Nut, hex flange lock 3/8-16	1
32	103-1190-01	Arm weldmt, LH	1	66	1-808285	Pin, clevis 3/8 x 1 1/8	1
33	103-1191-01	Arm weldmt, RH	1	67	3272-10	Pin, cotter 1/8 x 3/4.....	1
34▽	32151-47	Klipring .375 shaft.....	2	68	1-633131	Yoke, brake linkage	1
35	322-6	Screw, 5/16-18 x 1-1/4	3	69	1-413489	Linkage, lower brake.....	1
36	3272-5	Cotter pin, 3/32 x 1/2	2	70	3218-3	Nut, jam 3/8-16	1

Exmark red touch up spray paint - PN 1-850337

- ♦ Use Pro-Lock nut type, Part No. 1-840022 (.5 ml tube) on shoulder bolt & setscrew threads.
 - ◇ Electric start only
 - Manual start only
 - ❖ Models with ECS handles only
 - ▽ Models with Standard pistol grip handles only
- Use Teflon Pipe Sealant or equivalent between oil drain valve and adapter.

ENGINE DECK GROUP (con't.)

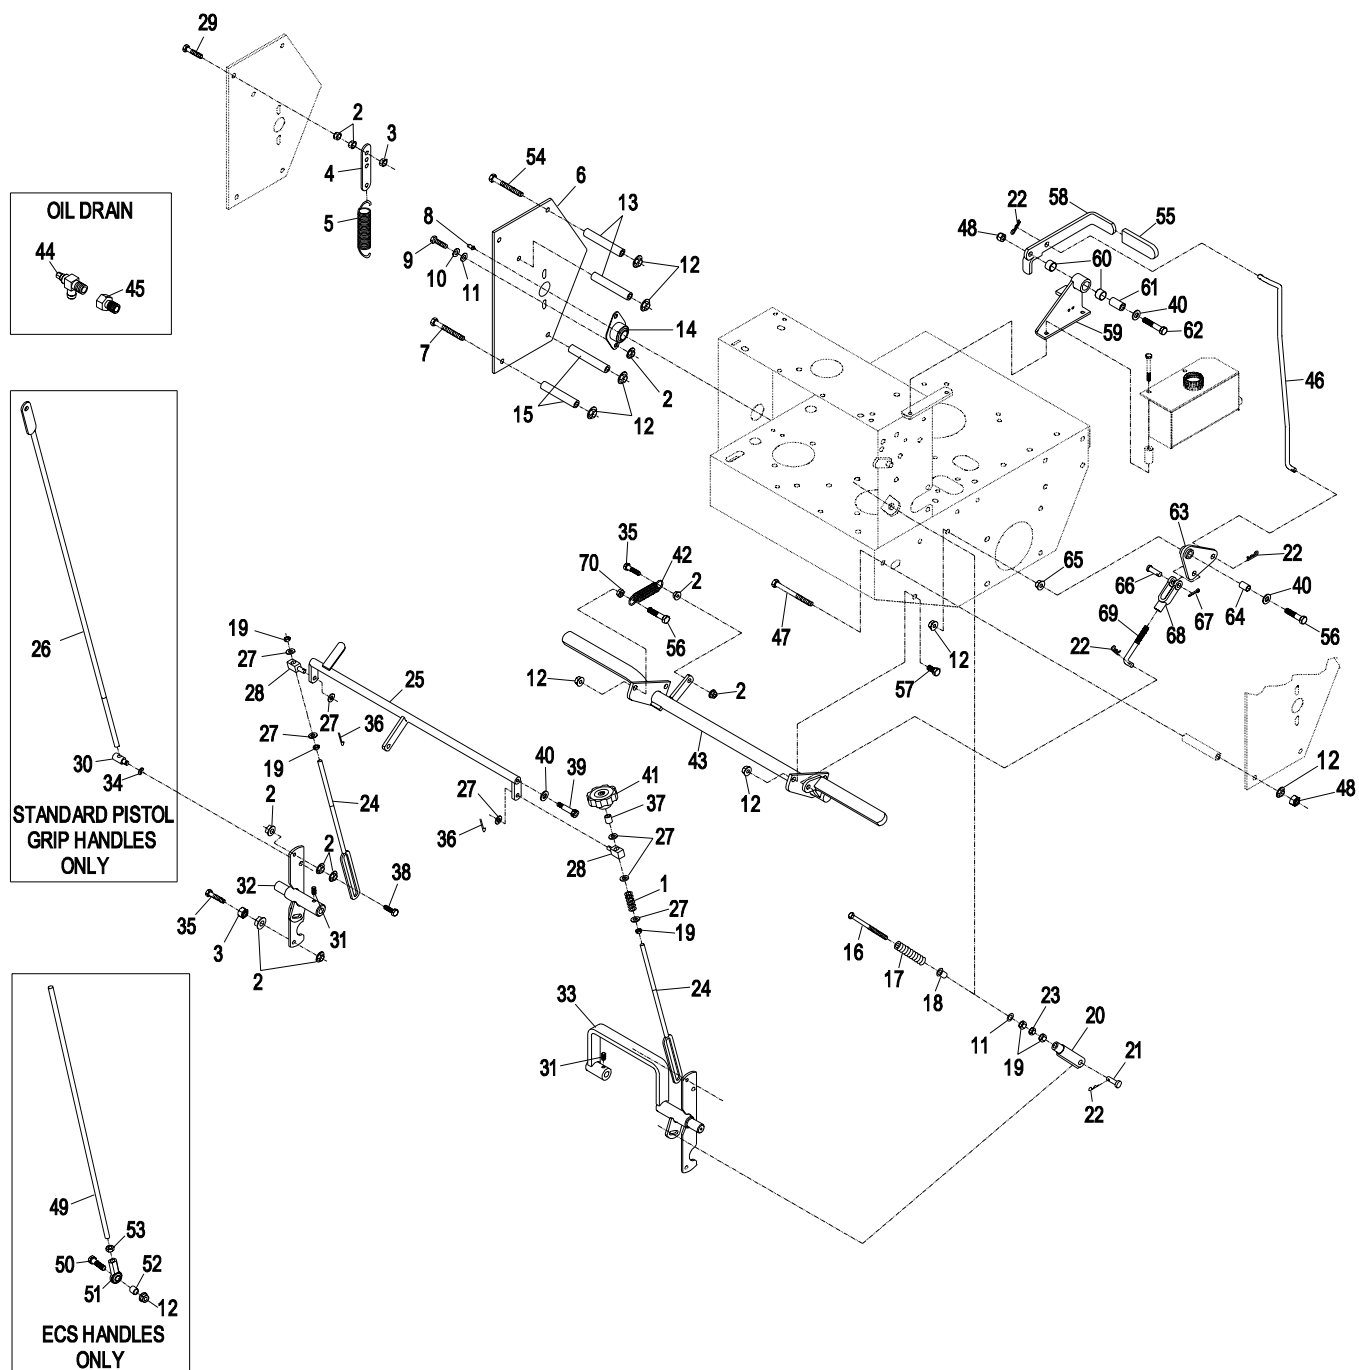

STANDARD PISTOL GRIP UPPER HANDLES and CONTROLS

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1	1-303020	Grip	1	35	98-5975	Washer, 3/8 disc spring	4
2	1-414234	Asm, Lever/grip(1-412295)..	1	36	323-6	Screw, 3/8-16 x 1	4
3	3256-24	Washer, 3/8 SAE flat.....	2	37	1-613055	Pin, clevis	2
4	323-9	Screw, 3/8-16 x 1-3/4	1	38	322-10	Screw, 5/16-18 x 2	2
5	1-413088	Spacer	1	39	1-603716	Washer, friction disc	1
6	3296-39	Nut, 3/8-16 nylock	1	40	1-323244	Washer, friction.....	2
7	1-806003	Hairpin cotter.....	5	41	1-603730	Plate, shifter lever	1
8	1-413293	Rod, blade engagement.....	1	42	106-2748	Lever weldmt, shift.....	1
9	1-413279	Turnbuckle	1	43♦	1-603175	Knob.....	1
10	3217-7	Nut, 3/8-16 hex.....	1	44	3296-29	Nut, 5/16-18 nylock	2
11▽	1-412183-03	Lever weldmt opc LH	1	45	1-323245	Spring, compression	2
12♦	1-803322	Setscrew, 5/16-24 x 5/16 ...	2	46	3256-23	Washer 5/16 SAE flat	5
13	1-303365	Bushing, nylon.....	2	47	321-3	Screw, 1/4-20 x 5/8.....	4
14	1-322192-03	Rod weldmt, opc	1	48	1-413225	Rod, speed control.....	1
15	1-303363	Spring, actuator	1	49	3220-2	Nut, 5/16-24 jam	1
16▽	1-412185-03	Lever weldmt, opc RH.....	1	50	1-303105	Yoke.....	1
17	1-807513	Bolt, #10-24 x 1/2 carriage .	2	51	1-808280	Clevis pin 5/16 x 1.....	1
18	1-513592	Knob, red throttle.....	1	52	1-513508	Cap, fuel.....	1
19	1-633696	Cable, throttle	1	53	1-413179	Tank, fuel	1
20	3296-2	Nut, #10-24 nylock	2	54▽	1-633023	Stud, fuel tank	2
21	103-0213	Handle wld,upper w/ decals	1	55	1-633349	Spring, fuel tank	2
	1-412448-03	Handle wld,upper	1	56	1-805005	Washer, 5/16 hvy lock	2
22	1-303097	Grip, handle.....	2	57	322-3	Screw, 5/16-18 x 3/4	2
23	1-413152	Bearing	4	58	1-513645	Bushing, fuel valve	1
24	1-412159-03	Lever, drive LH.....	1	59	1-543277	Elbow, fuel tank.....	1
	1-412161-03	Lever, drive RH (shown)	1	60	1-303077	Clamp, fuel line	4
25	1-603749	Bushing, drive lever.....	2	61	1-603955	Hose, fuel line 6"	1
26	321-9	Screw, 1/4-20 x 1-1/2	2	62	1-603770	Valve, fuel	1
27	32128-33	Nut, 1/4-20 whizlock.....	6	63	1-303022	Hose, fuel line 8.5"	1
28	3296-42	Nut, 1/4-20 Nylock.....	2	64	Kawasaki PN 41019-1055 filter w/6" fuel line...	1	
29	3256-2	Washer 1/4 std flat.....	2	65	3296-47	Nut, nyloc thin 5/16-18	2
30	1-303435	Washer, 1/4 disc spring	6	66	1-303287	Tie, plastic	1
31	1-612168	Thumb latch w/gripRH(shown)	1	67	103-0219	Asm, Drive Lever RH	1
	1-612167	Thumb latch w/grip LH	1		103-0218	Asm, Drive Lever LH	1
32	321-10	Screw, 1/4-20 x 1-3/4	2	68	103-1796	Cable, choke	1
33	1-303019	Grip, latch.....	2	69	103-1797-01	Bracket, choke cable	1
34	3290-357	Nut, 3/8-16 whizlock.....	4				

♦ Use Pro-Lock nut type, Part no. 1-840022 (.5cc tube) on setscrew threads and on shifter knob threads.

▽ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on inside of bore of OPC hub and on fuel tank studs.
Exmark black touch up spray paint - Gloss black

Exploded view diagram of a mechanical assembly, likely a power tool or machine component. The diagram shows the main housing (53) and various internal and external components, numbered 1 through 70. Key components include:

- Motor/Housing (53):** The central power source and main body.
- Handle (21):** The main grip for the user.
- Trigger (11):** The control mechanism for the motor.
- Internal Mechanism:** Includes various levers (e.g., 12, 13, 14, 15, 16, 17, 18, 19, 20), rods (e.g., 8, 9, 10, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69), and fasteners (e.g., 1, 2, 3, 4, 5, 6, 7, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70).
- Washer Orientation:** A circular inset showing the correct placement of a washer on a shaft.

ECS UPPER HANDLES and CONTROLS

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1	1-303020	Grip.....	1	39	1-603716	Washer, friction disc	1
2	1-414234	Asm, Lever/grip(1-412295)..	1	40	1-323244	Washer, friction.....	2
3	3256-24	Washer, 3/8 SAE flat.....	2	41●	103-2457	Console w/ decals.....	1
4	323-11	Screw, 3/8-16 x 2-1/4	1	□	103-2458	Console w/ decals.....	1
5	323-10	Screw,3/8-16 x 2.....	2		103-0546-03	Wld,upper handle console .	1
6	3296-39	Nut, 3/8-16 nylock.....	3	42	103-0773	Speed shift weldmt	1
7	1-806003	Hairpin cotter	3	43	103-0423	Knob .38-16 nyloc	1
8	103-1149	Link, blade engagement	1	44	3296-29	Nut, 5/16-18 nyloc.....	2
9	1-413279	Turnbuckle.....	1	45	1-323245	Spring, compression	2
10	3217-7	Nut, 3/8-16 hex	1	46	3256-23	Washer 5/16 SAE flat	5
11▽	103-1566-03	Lever weldmt opc LH.....	1	47●	321-3	Screw, 1/4-20 x 5/8.....	10
12◆	1-803322	Setscrew, 5/16-24 x 5/16...	2	□	321-3	Screw, 1/4-20 x 5/8.....	12
13	1-303365	Bushing, nylon	2	48	1-413225	Rod, speed control.....	1
14	103-0769-03	Lever axle weldmt, opc.....	1	49	3220-2	Nut, 5/16-24 jam	1
15	1-303363	Spring, opc extension	1	50	1-303105	Yoke	1
16▽	103-1567-03	Lever weldmt, opc RH	1	51	1-808280	Clevis pin 5/16 x 1.....	1
17	1-807513	Bolt, #10-24 x 1/2 carriage	2	52	1-513508	Cap, fuel.....	1
18	1-513592	Knob, red throttle	1	53	1-413179	Tank, fuel.....	1
19	1-633696	Cable, throttle	1	54▽	1-633023	Stud, fuel tank.....	2
20	3296-2	Nut, #10-24 nylock.....	2	55	1-633349	Spring, fuel tank.....	2
21	103-0770-03	Handle wld, upper ecs	1	56	1-805005	Washer, 5/16 hvy lock	2
22	103-0815	Grip, handle bar	2	57	322-3	Screw, 5/16-18 x 3/4	2
23	1-413152	Bearing	4	58	1-513645	Bushing, fuel valve	1
24	103-0771-03	Lever, drive LH	1	59	1-543277	Elbow, fuel tank.....	1
25	103-0027	Bushing, drive lever	2	60	1-303077	Clamp, fuel line	4
26	321-14	Screw,1/4-20 x 2 3/4.....	2	61	1-603955	Hose, fuel line 6"	1
27●	32128-33	Nut, 1/4-20 whizlock	12	62	1-603770	Valve, fuel	1
□	32128-33	Nut, 1/4-20 whizlock	14	63	1-303022	Hose, fuel line 8.5"	1
28	103-0464	Pin,1/8 x 1/2 spring.....	2	64	Kawasaki PN 41019-1055	filter w/6" fuel line...	1
29	3256-22	Washer 1/4 SAE flat.....	10	65	3296-47	Nut, nyloc thin 5/16-18	2
30	1-303435	Washer, 1/4 disc spring.....	6	66	1-303287	Tie, plastic	1
31	103-1371	Thumb latch asm RH(shown)	1	67	103-1915	Asm, Drive Lever RH	1
	103-1372	Thumb latch asm LH	1		103-1916	Asm, Drive Lever LH	1
32◆	103-0235	Screw, 1/4-20 x 1-1/8 w/nylon	2	68	103-0608	Joint,.375 ball end.....	2
33	103-0772-03	Lever,drive RH.....	1	69	103-0503	Bracket,shifter slide	1
34	3290-357	Nut, 3/8-16 whizlock	4	70	103-0489-03	Bracket,opc axle	1
35	98-5975	Washer, 3/8 disc spring.....	4	71	3219-3	Nut,reg hex 3/8-24	2
36	323-6	Screw, 3/8-16 x 1.....	4	72	103-1796	Cable, choke	1
37	3220-3	Nut, jam 3/8-24.....	4	73	103-1797-01	Bracket, choke cable	1
38	322-10	Screw, 5/16-18 x 2.....	2				

Exmark black touch up spray paint - Gloss black


◆ Use Pro-Lock nut type, Part no. 1-840022 (.5cc tube) on setscrew threads and on thumb latch screws.

▽ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on inside of bore of OPC hub and on fuel tank studs.

● Electric start only


□ Manual start only

ECS UPPER HANDLES and CONTROLS

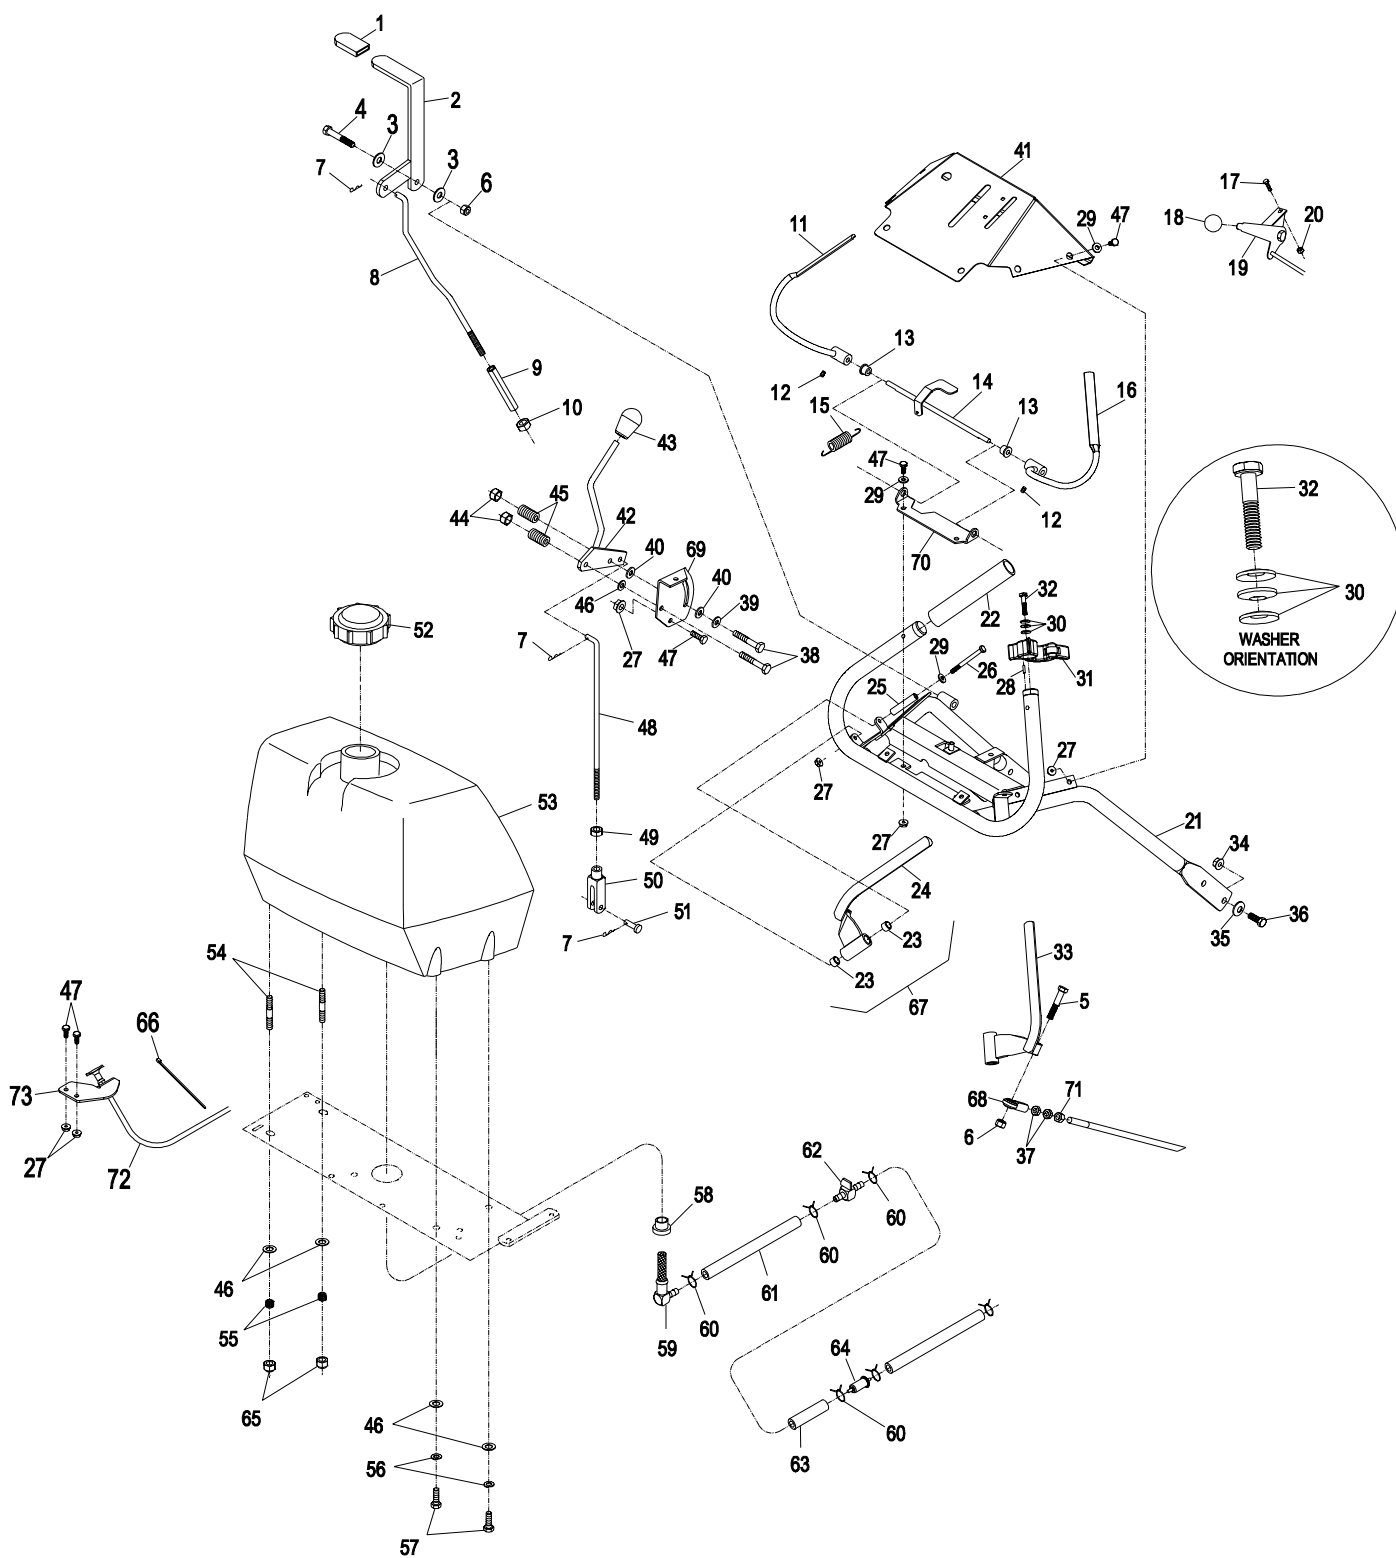

ELECTRICAL GROUP


ELECTRIC START

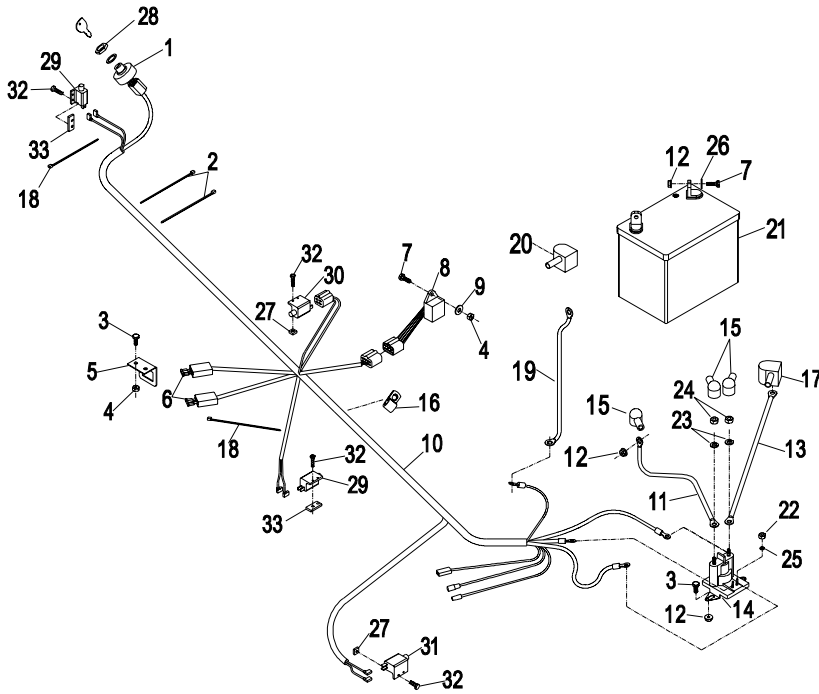

Ref. No.	Part No.	Description	Qty. Req'd.
1	1-543070	Switch, ignition	1
	1-603511	Key, ignition.....	1
	103-2106	Key, Exmark logo	1
2	1-303335	Tie, plastic large	2
3	321-3	Screw, ¼-20 x 5/8	2
4	3296-42	Nut, ¼-20 nylock	3
5	1-323442-01	Bracket, fuse.....	1
6	1-816001	Fuse, 20A.....	2
7	321-4	Screw, ¼-20 x 3/4	5
8	1-613198	Module	1
9	3256-22	Washer, 5/16 SAE flat.....	1
10●	103-2006	Harness, wiring.....	1
11	1-633306	Cable, Solenoid/Starter +	1
12	32128-33	Nut, ¼-20 whizlock	5
13	1-603490	Cable, battery +	1
14	1-513075	Switch, 12V solenoid	1
15	1-543393	Insulator, solenoid +	3
16	1-603727	Clip, loom	1
17	1-543391	Insulator, battery +	1
18	1-303287	Tie, plastic small	2
19	1-413540	Battery cable	1
20	1-543390	Insulator, battery -	1
21	103-0293	Battery, 12V MNFLD	1
22	3219-14	Nut, hex #10-32 GR2,YZ	2
23	3253-4	Washer, lock .313	2
24	3220-2	Nut, jam 5/16 – 24.....	2
25	3253-17	Washer, lock .190	2
26	3256-2	Washer, 1/4 flat.....	2
27	1-804002	Nut, square #10-24.....	4
28	103-0498	Nut, Ignition Switch.....	1
29	1-513051	Switch, N.O.	2
30	1-633111	Switch N.O / N.C.	1
31	1-513152	Switch, N.C.	1
32	3290-500	Screw, #10-24 x 5/8.....	8
33	1-633181	Plate, tapped	2

- Use dielectric grease on all electrical connectors.

MANUAL START

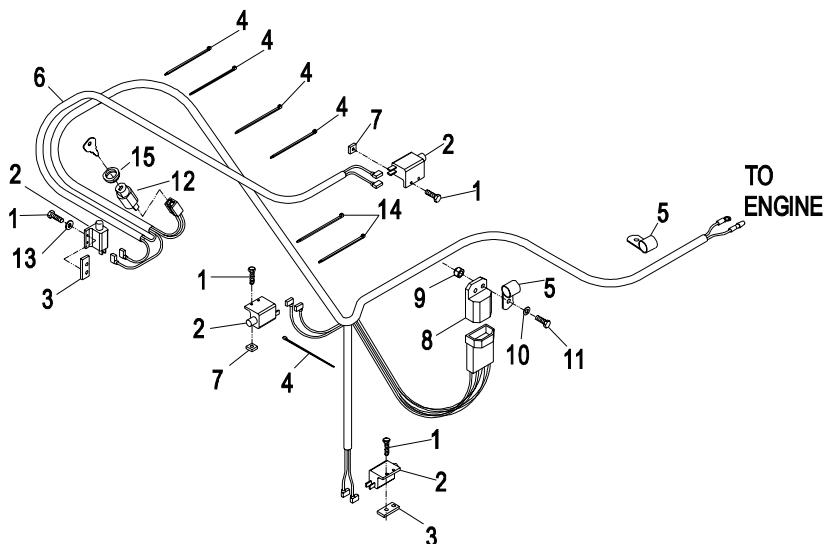


Ref. No.	Part No.	Description	Qty. Req'd.
1	3290-500	Screw, #10-24 x 5/8.....	8
2	1-513051	Switch, N.O.	4
3	1-633181	Plate, tapped	2
4	1-303287	Tie, plastic small	5
5	1-323229	Clip, loom	2
6●	103-2005	Harness, wiring	1
7	1-804002	Nut, square #10-24.....	4
8	1-323430	Module, interlock	1
9	3296-42	Nut, nyloc ¼-20	1
10	3256-22	Washer, ¼ SAE flat.....	1
11	321-4	Screw, ¼-20 x 3/4	1
12	1-403121	Switch, on/off	1
	1-603511	Key, ignition.....	1
	103-2106	Key, Exmark logo	1
13	3256-14	Washer, flat #10	1
14	1-303335	Tie, plastic large	2
15	103-0498	Nut, Ignition Switch.....	1


- Use dielectric grease on all electrical connectors.

WIRING DIAGRAMS

15 & 17 HP KAWASAKI

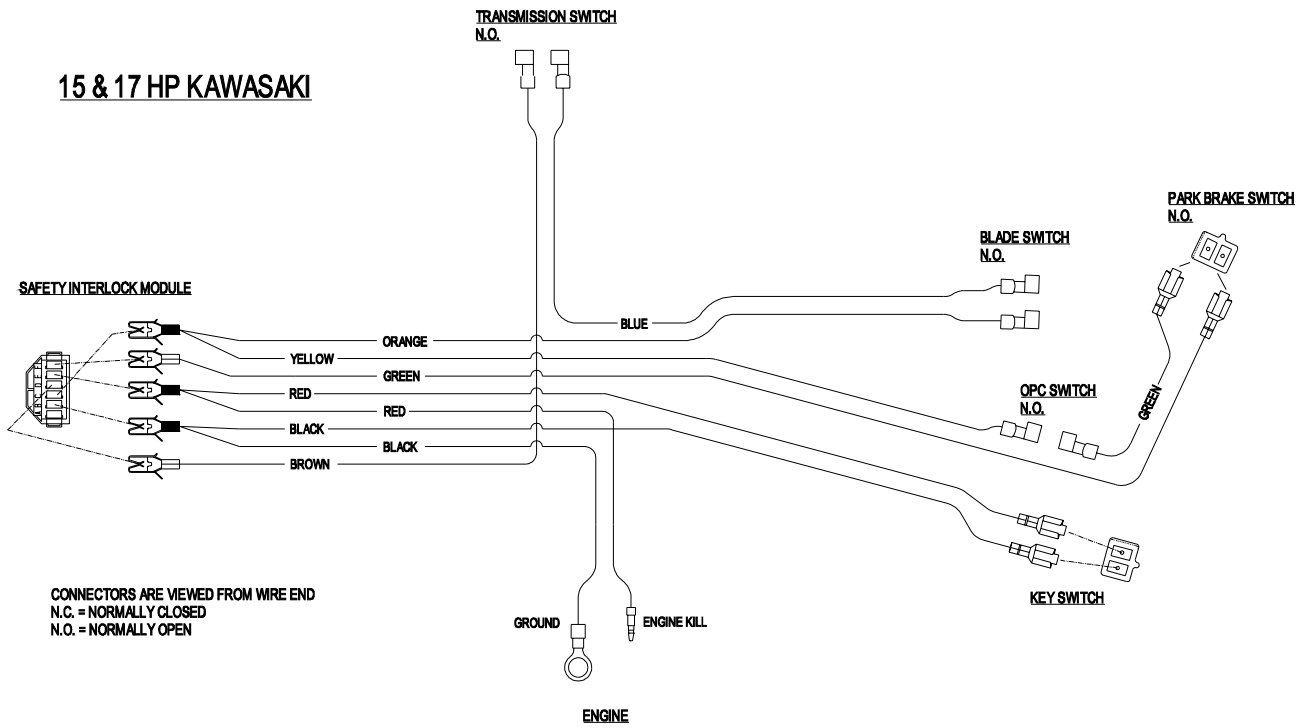

17 HP KAWASAKI ELECTRIC START

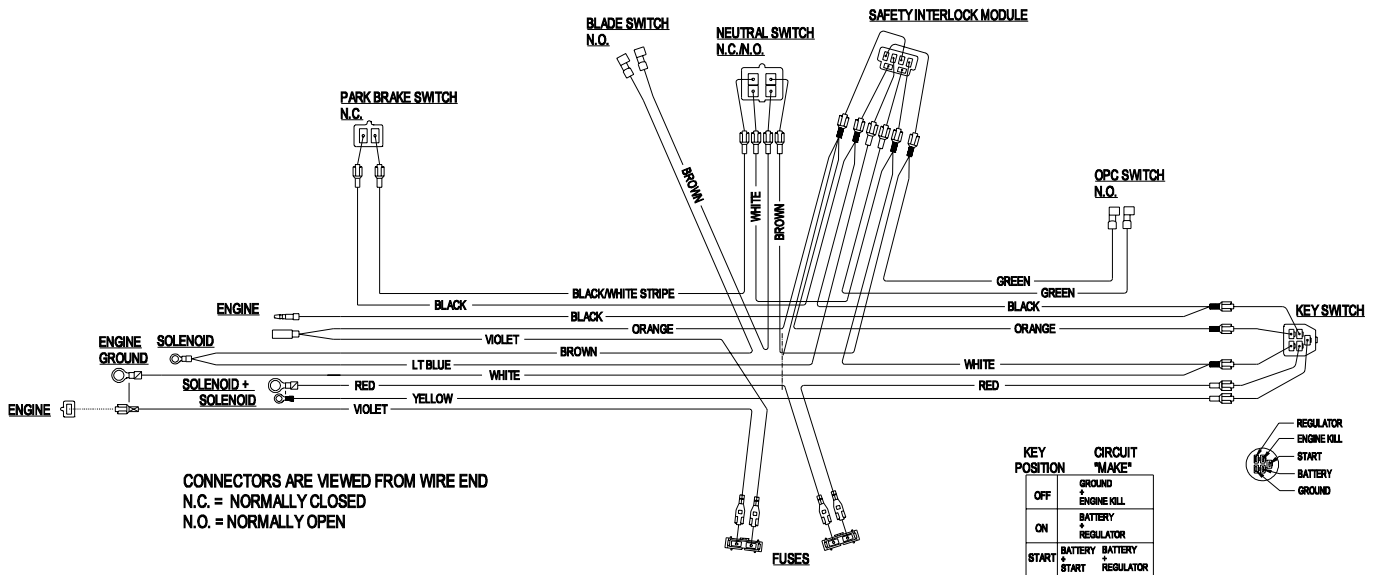


DECALS

Ref. No.	Part No.	Description	Qty. Req'd.	Ref. No.	Part No.	Description	Qty. Req'd.
1●◇	103-1974	Decal, console	1	17	1-553049	Decal, mower deck	1
2	103-1798	Decal, throttle	1	18	1-323411	Decal, commercial 36	1
3♦	103-2242	Decal, ECS instruction LH.....	1	19	1-403131	Decal, commercial 48	1
4♦	103-2243	Decal, ECS instruction RH	1	20	1-403132	Decal, commercial 52	1
5	103-1077	Decal, bolt torque	1	21	1-403143	Decal, sulky warning	1
6	1-303508	Decal, discharge warning	1	22	1-413214	Decal, tracking	1
7▲♦	103-1976	Decal, ECS console	1	23	1-303520	Decal, trivantage	1
8	1-523552	Decal, hydraulic tank	1	24▲	1-513747	Decal, battery	1
9	103-2103	Decal, park brake	1	25	1-603845	Decal, hyd drive release	1
10	1-413342	Decal, swash	1	26	98-5954	Decal, missing cover (36).....	1
11	1-513746	Decal, muffler	2		98-5954	Decal, missing cover (48 & 52)	3
12	1-413421	Decal, indicator	1	27	1-413206	Decal, belt routing (36)	1
13	103-1983	Decal, exmark logo	1	28	1-323540	Decal, roller mounting	1
14	1-303517	Decal, belt drive.....	1	29	1-413327	Decal, belt routing (48 & 52) ..	1
15◇♦	103-1977	Decal, ECS console	1	30	1-403005	Decal, danger.....	2
16●	1-303102	Decal, neutral lock.....	2		103-2461	Decal kit	

- Models with standard pistol grip handles only
- ♦ Models with ECS handles only
- ◇ Manual start models only
- ▲ Electric start models only

DECALS

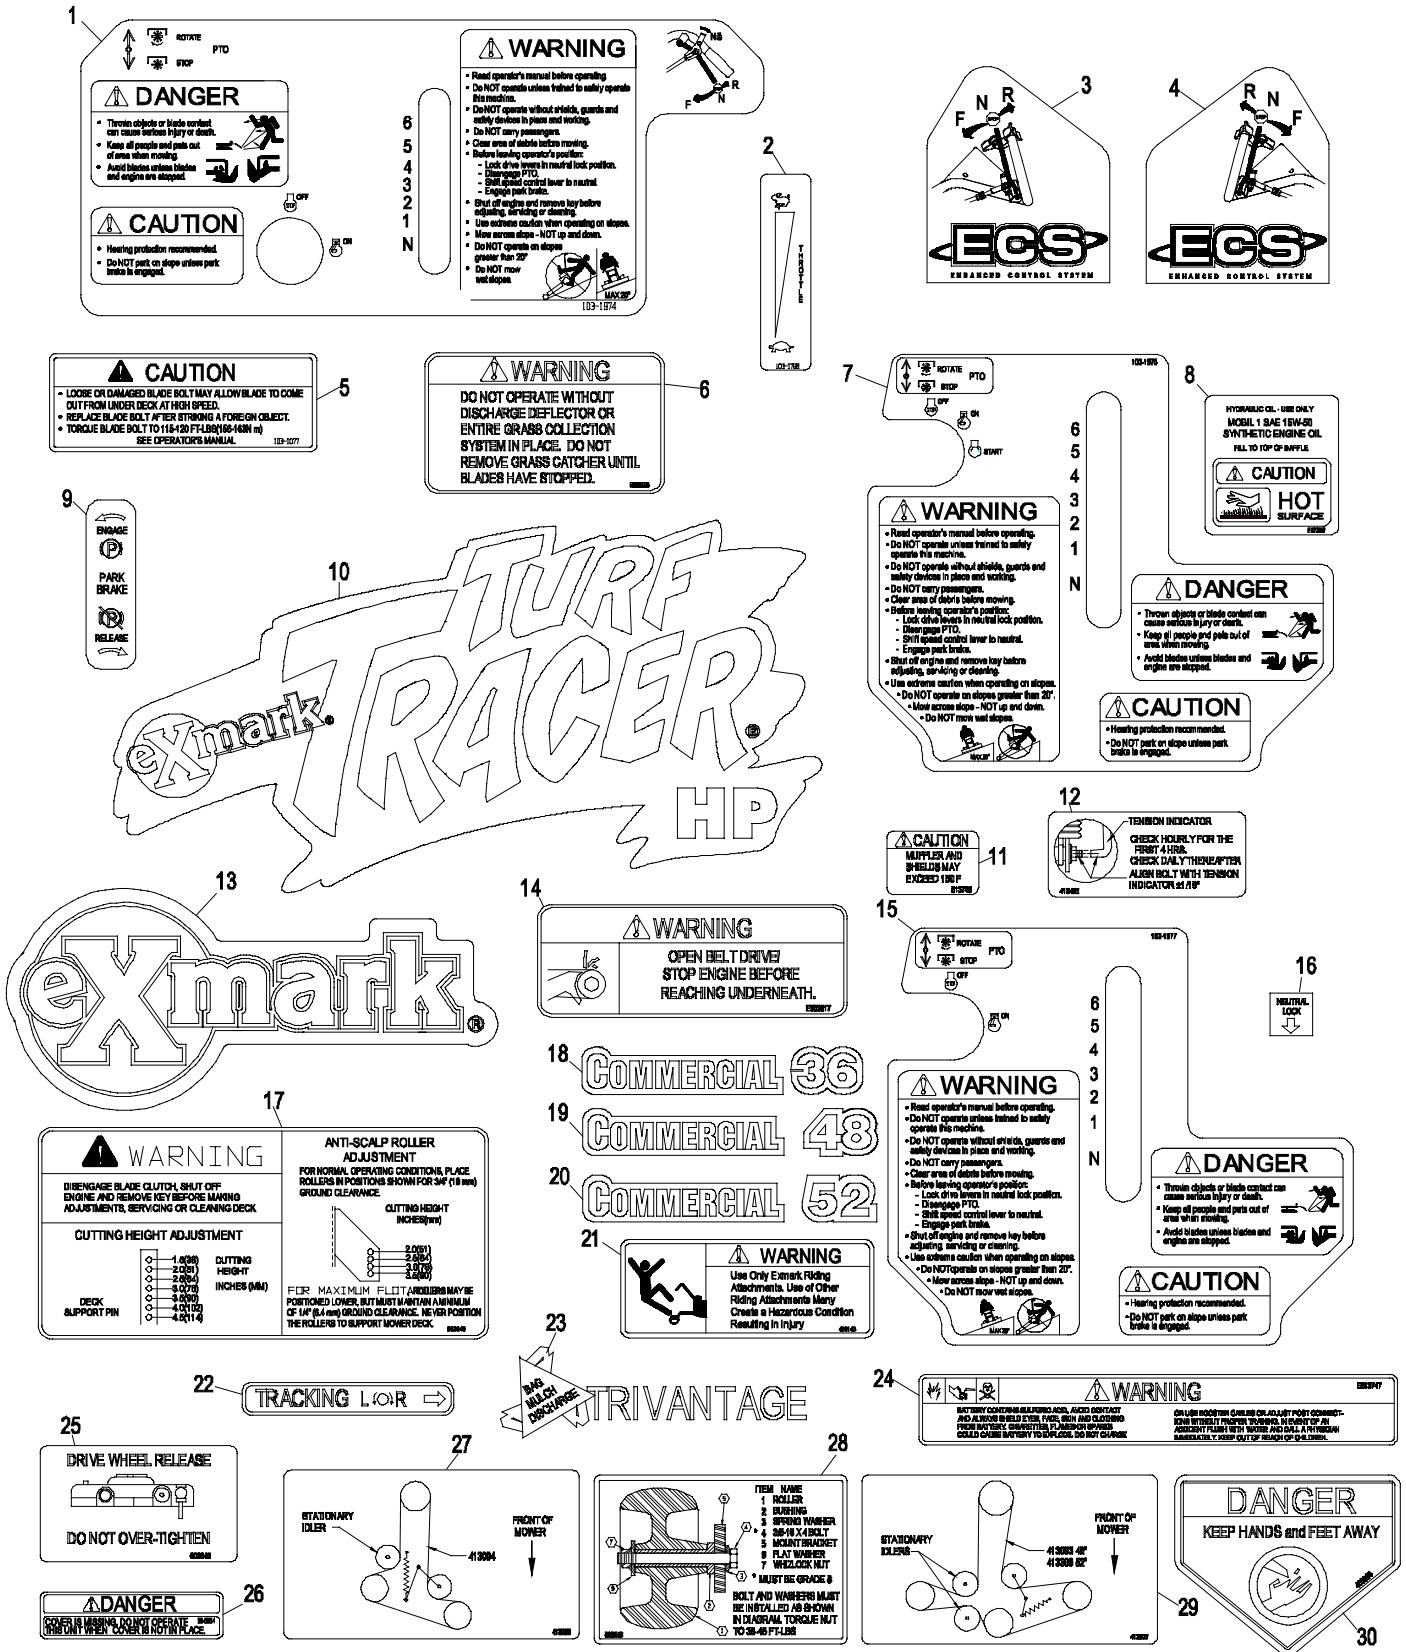

**SEE EXMARK'S COMPLETE
LINE OF PRODUCTS FOR TURF CARE**

LAZER Z[®]

LAZER Z[®] HP

LAZER Z[®] XP

TURF RANGER[®]

TURF TRACER[®]

TURF TRACER[®] HP

VIKING HYDRO

METRO[®]

METRO[®] HP

SELF STEERING SULKY

ULTRA VAC[™]

GRASS CATCHER

MICRO-MULCH[™] ACCESSORY

©1997,1998, 1999, 2000, 2001
EXMARK MFG. CO. INC.
INDUSTRIAL PARK BOX 808
BEATRICE, NE 68310
ALL RIGHTS RESERVED

PART NO. 103-1774 Rev. B
(402) 223-6300
FAX (402) 223-5489

PRINTED IN U.S.A.

