



Commercial Walk-Behind Mower Fixed Deck, T-Bar, Gear Drive with 32in Cutting Unit

Model No. 39692 - 280000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel Tank Assembly	 3	Lubrication Equipment Assembly Kawasaki FH430V-CS25	 17
Transmission Drive Assembly	 4	Cooling Equipment Assembly Kawasaki FH430V-CS25	 18
Drive Wheel and Brake Assembly	 6	Electric Equipment Assembly Kawasaki FH430V-CS25	 19
Handle and Control Assembly	 7	Control Equipment Assembly Kawasaki FH430V-CS25	 20
Deck and Shield Assembly	 8	Carburetor Assembly Kawasaki FH430V-CS25	 21
Deck Assembly No. 110-6901	 9	Air Filter and Muffler Assembly Kawasaki FH430V-CS25	 22
Deflector Assembly No. 107-4140	 10	Fuel Tank and Valve Assembly Kawasaki FH430V-CS25	 23
Idle Arm and Caster Wheel Assembly	 11	Starter Assembly Kawasaki FH430V-CS25	 24
Spindle and Blade Assembly	 13	Label Assembly Kawasaki FH430V-CS25	 25
Cylinder and Crankcase Assembly Kawasaki FH430V-CS25	 14	Attachments and Accessories List	 26
Piston and Crankshaft Assembly Kawasaki FH430V-CS25	 15		
Valve and Camshaft Assembly Kawasaki FH430V-CS25	 16		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


- | | |
|---|--|
| ❶ Not serviced separately | ❷ Optional Equipment |
| ❸ Obtain parts from Peerless Transmissions (model 700-070A) | ❹ Obtain from your local Kawasaki dealer |

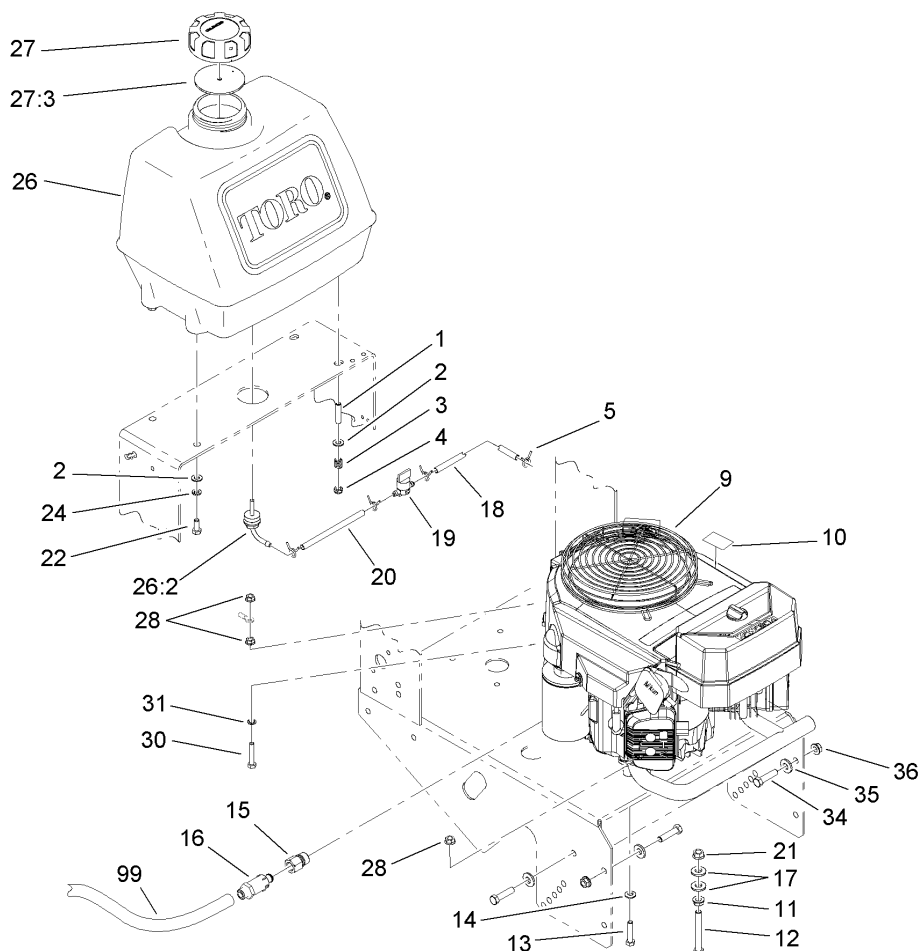

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
1 49		1	Engine-Kawasaki, FH430V-Cs25
10	106-0699	1	Decal-Warning
11	3290-357	1	Nut-HHF, Whiz
12	323-14	1	Screw-HH
13	322-7	3	Screw-HH
14	1-303334	3	Washer-Spring
15	103-1966	1	Adapter
16	92-6877	1	Valve-Drain, Oil
17	98-5975	2	Washer-Belleville
18	109-0293	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	109-0306	1	Hose-Fuel
21	32128-21	1	Nut-HF
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas


Ref	Part No.	Qty.	Description
28	32128-20	5	Nut-HF
30	322-9	1	Screw-HH
31	3254-2	1	Washer-Lock, Internal
34	323-8	8	Screw-HH
35	98-5975	8	Washer-Belleville
36	3290-357	8	Nut-HHF, Whiz
99	103-1964	1	Hose-Drain, Oil

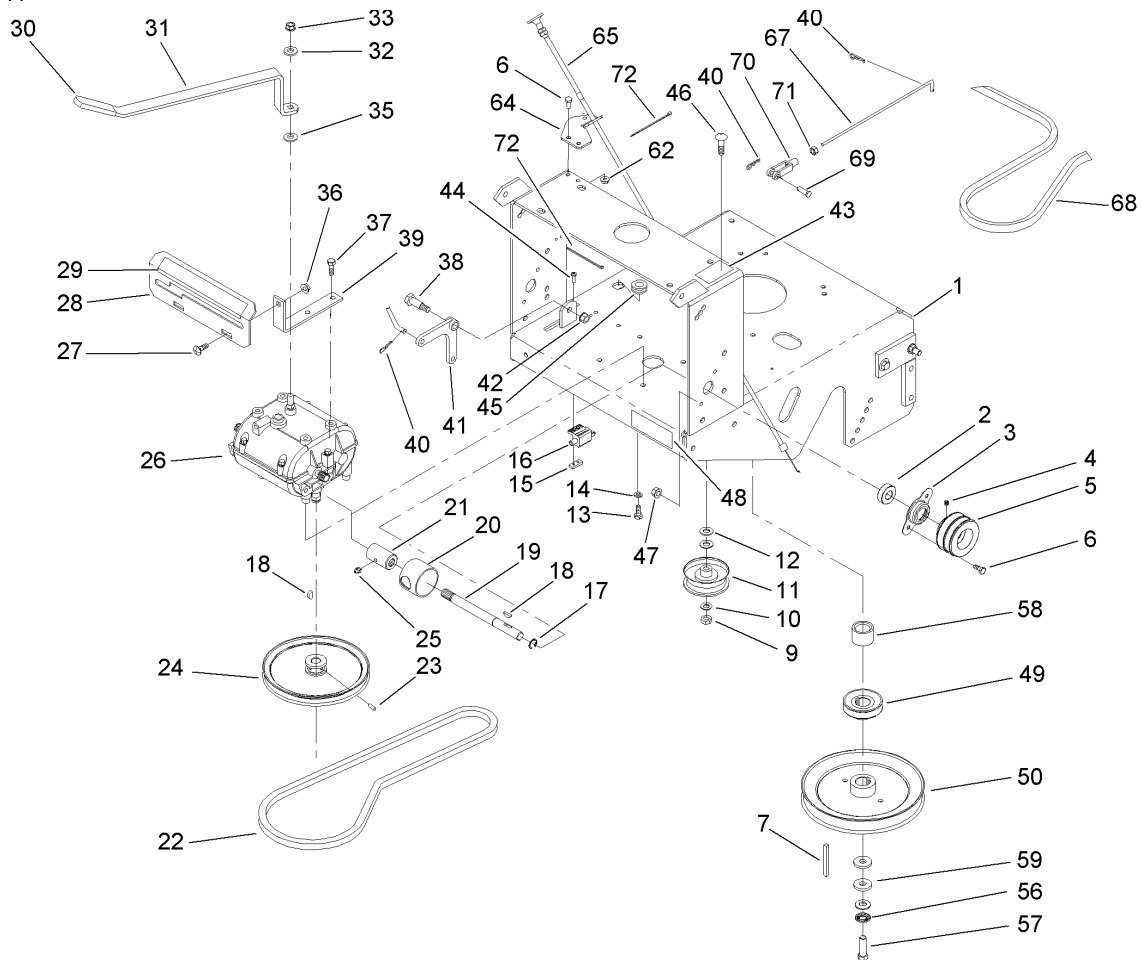

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513152	1	Switch-Closed, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1667	1	Sheave

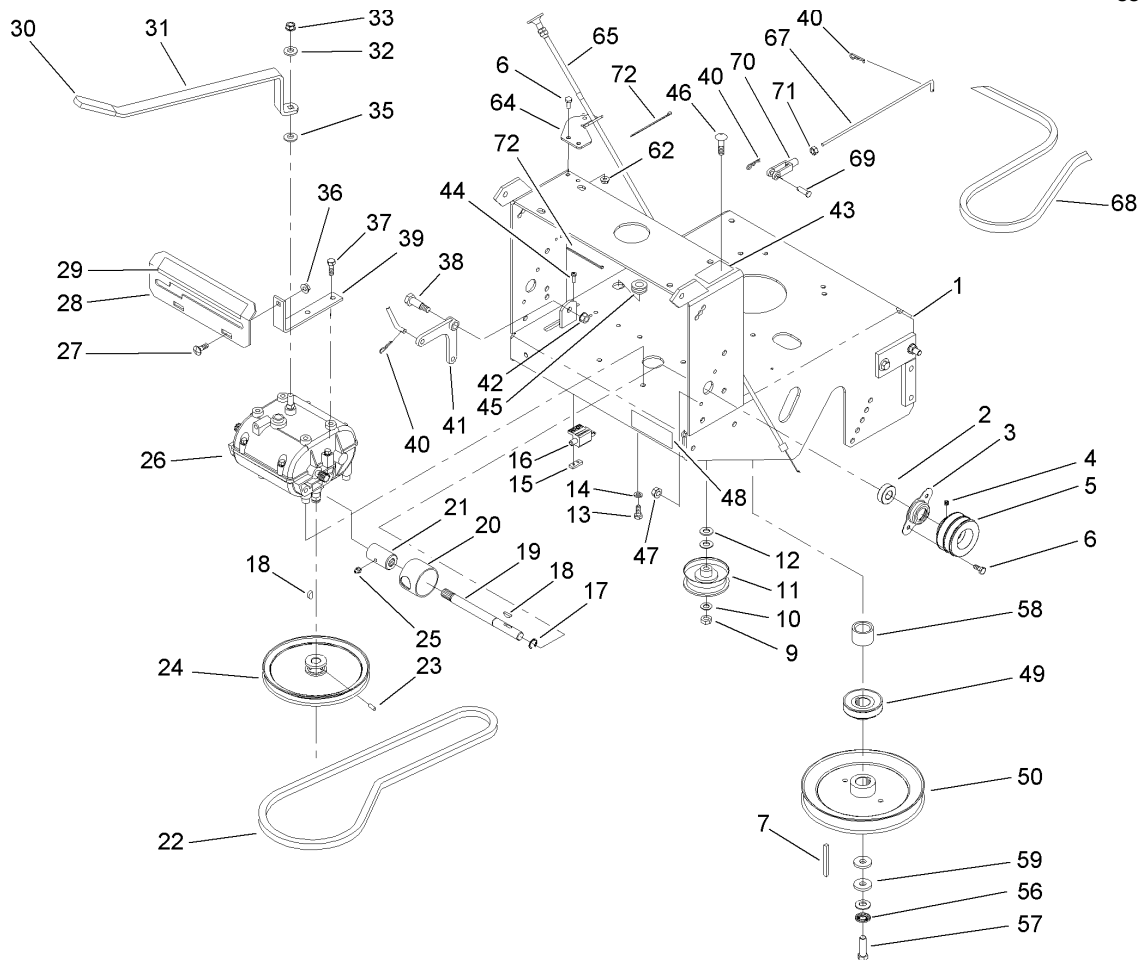

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
67	1-323303	1	Linkage-Arm
68	1-323745	1	Belt-Blade, Drive
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
72	1-303335	2	Tie-Plastic

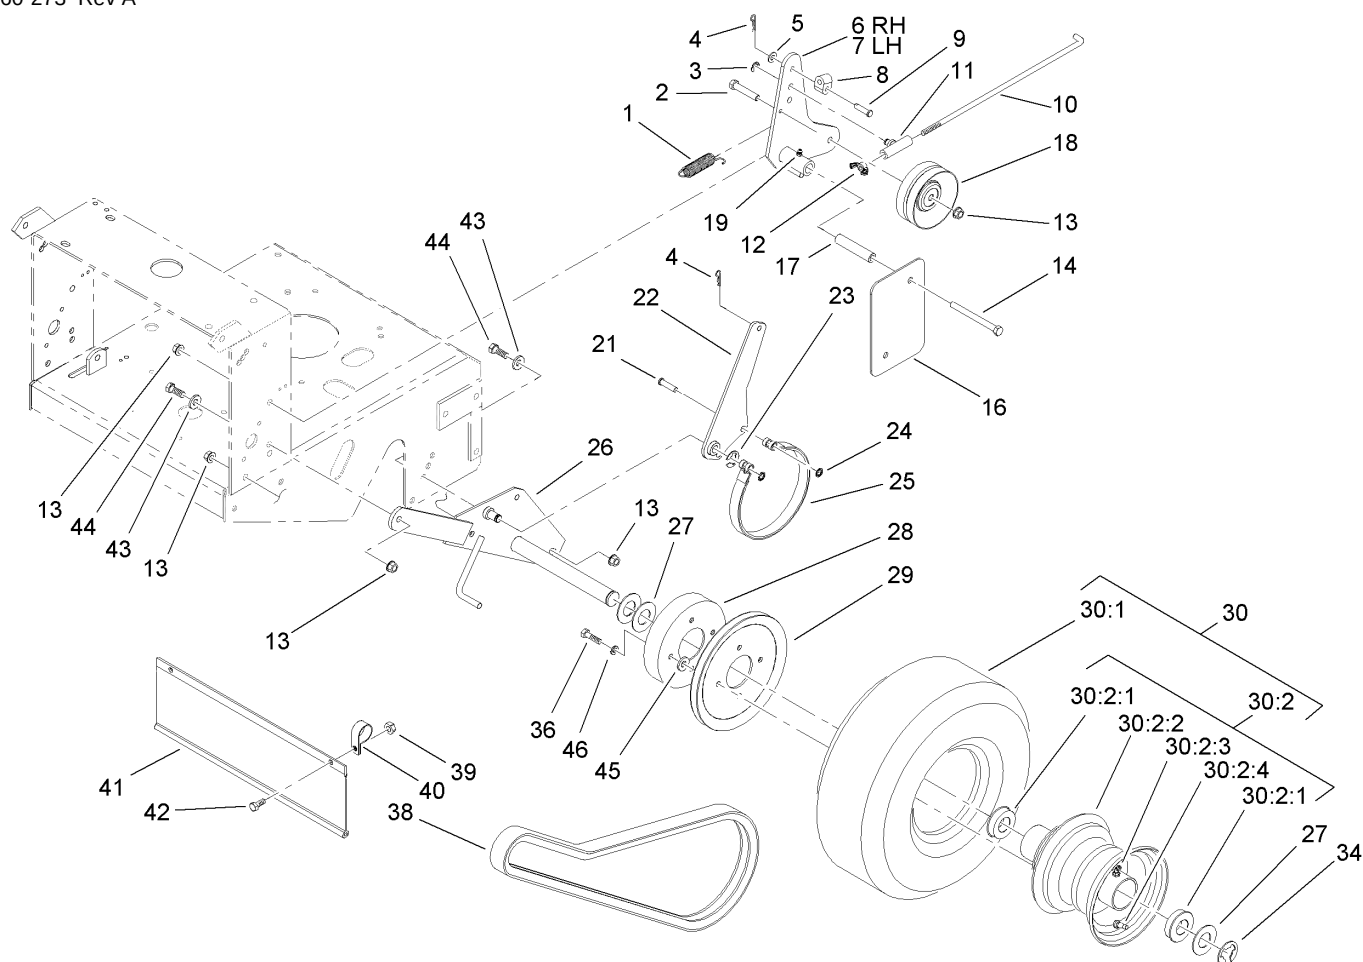

Drive Wheel and Brake Assembly


Ref	Part No.	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Hair
5	3256-23	2	Washer-Flat
6	110-4925-03	1	RH Idler Arm ASM
7	110-4926-03	1	LH Idler Arm ASM
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
19	302-19	2	Fitting-Grease
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322232-03	1	Axle ASM

Ref	Part No.	Qty.	Description
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer, 18 GA
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive
30	1-323346	2	Wheel And Tire ASM
30:1	1-323361	1	Tire
30:2	1-323360	1	Wheel And Hub ASM
30:2:1	1-323329	2	Bearing-Flanged
30:2:2		1	Rim ASM
30:2:3		1	Fitting-Grease
30:2:4		1	Valve Stem And Cap
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock

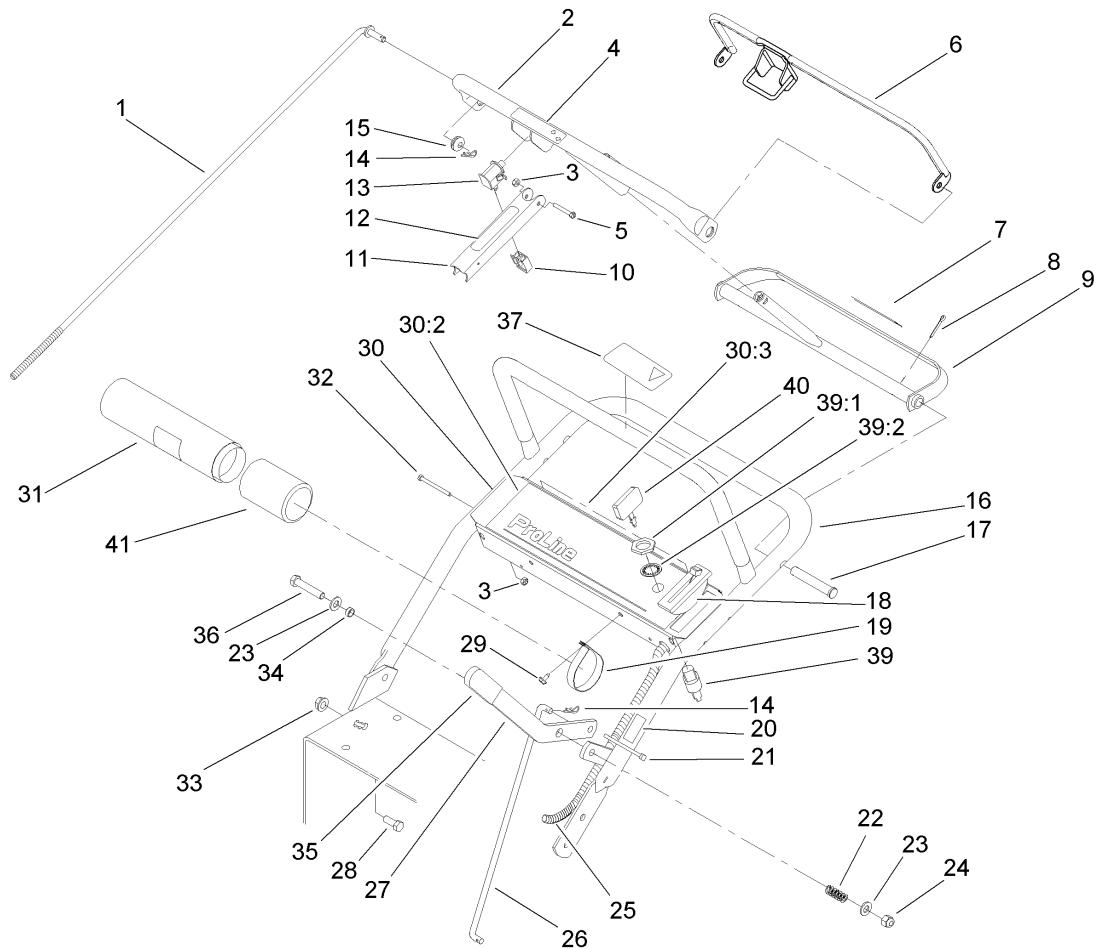


Handle and Control Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	98-3282	2	Rod-Control	25	106-0678	1	Harness-Wire
2	95-5522-03	1	Control Bar ASM	26	98-3279	1	Linkage-Drive, Blade
3	3296-2	5	Nut-Lock	27	98-3287-03	1	Lever-Engagement, Blade
4	82-2290	1	Decal	28	3234-11	4	Screw-HHF
5	32105-1	1	Screw-SHH	29	32104-76	2	Screw
6	82-7680-03	1	Bail ASM	30	110-6905	1	Control Panel ASM
7	82-2280	1	Decal	30:2	110-6916	1	Decal-Panel, Control
8	3272-11	2	Pin-Cotter	30:3	105-0884	1	Decal-Danger
9	99-8501-03	1	Control-Pivot	31	104-7050	1	Housing-Manual
10	218-595	1	Connector-Body	32	32105-14	4	Screw-SHH
11	98-3261-03	1	Lever-Brake, Parking	33	32128-21	4	Nut-HF
12	98-3266	1	Decal	34	99-8509	1	Spacer
13	740275	1	Switch-Seat	35	1-303020	1	Grip-Lever
14	1-806003	3	Pin-Hair	36	323-10	1	Screw-HH
15	237-141	2	Grommet-Rubber	37	98-4387	1	Decal-Protection, Ear
16	98-3267-03	1	Upper Handle ASM	39	29-5560	1	Switch-On / Off
17	283-55	2	Pin-Clevis	39:1	218-461	1	Nut-HH
18	100-6450	1	Control-Throttle	39:2	3254-5	1	Washer-Tooth
19	2412-120	2	R-Clamp	40	63-8360	1	Key-Ignition
20	95-5537	1	Decal-Engage, Deck	41	104-7048	1	Cap-Housing
21	1-303335	1	Tie-Plastic				
22	1-303160	1	Spring-Compression				
23	3256-24	2	Washer-Flat				
24	3296-39	1	Nut-Lock, NI				

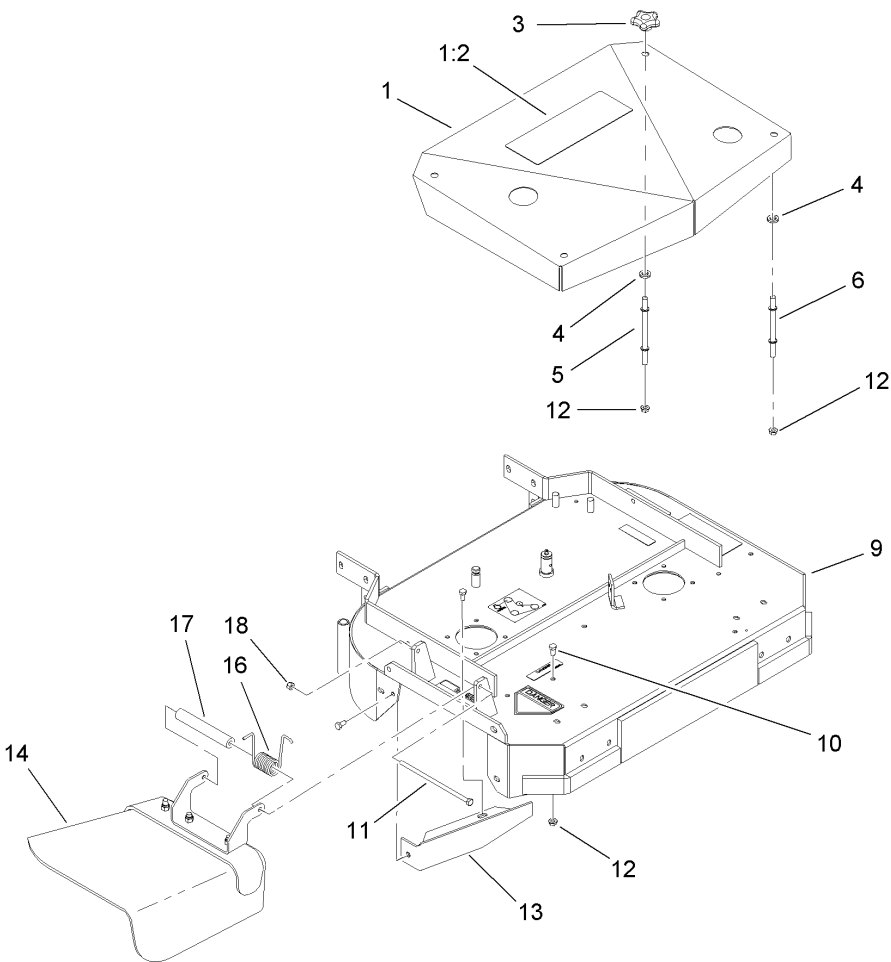


Deck and Shield Assembly

Ref	Part No.	Qty.	Description				
1	1-324407	1	Shield-Belt				
1:2	106-0710	1	Decal				
3	106-4161	4	Knob-Handle				
4	1-323417	4	Washer				
5	1-303536	2	Stud-Shield, Belt (Long)				
6	1-303537	2	Stud-Shield, Belt (Short)				
9	110-6901	1	32 Inch Deck ASM				
10	322-2	7	Screw-HH				
11	322-50	1	Screw-HH				
12	32128-20	11	Nut-HF				
13	1-302189-01	1	Baffle-Dogleg				
14	107-4140	1	Deflector ASM				
16	104-8554	1	Spring-Torsion				
17	105-4622	1	Spacer				
18	3296-29	1	Nut-Lock, NI				

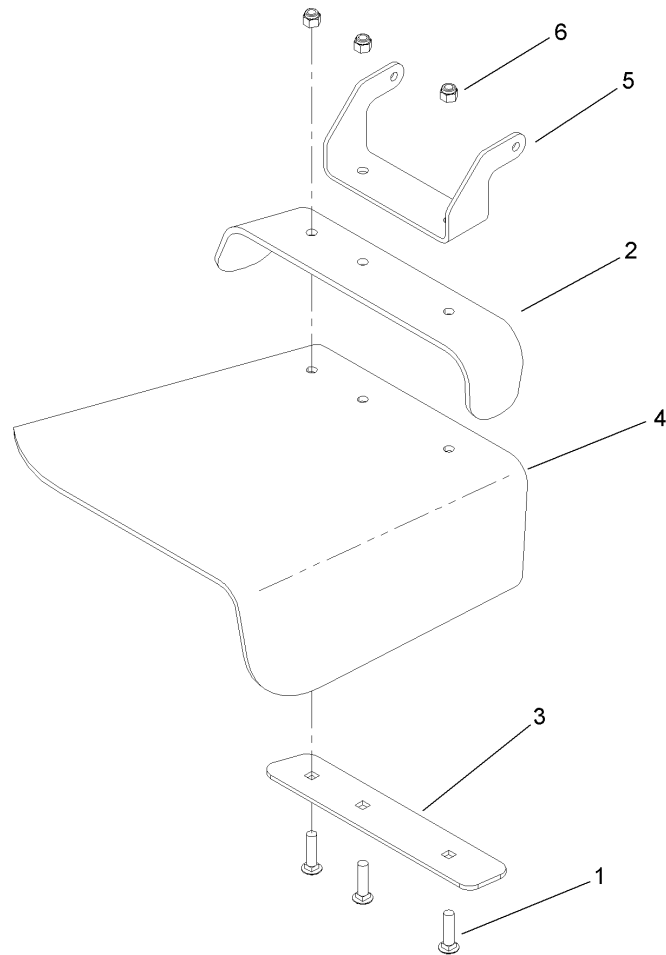

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

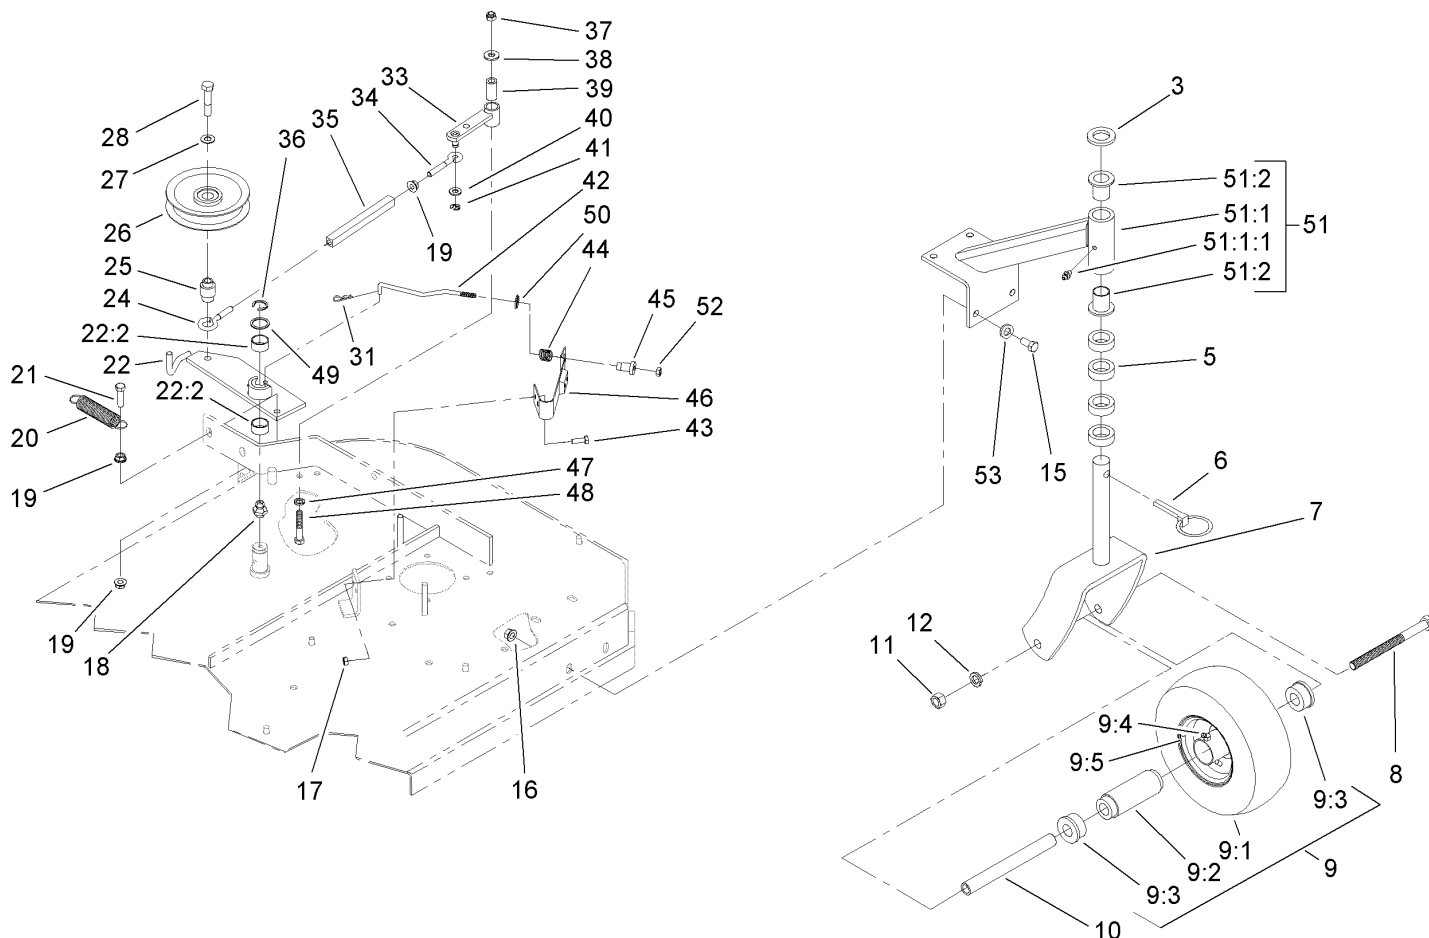

Idler Arm and Caster Wheel Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	110-5023	2	Wheel And Tire ASM
9:1		1	Tire
9:2	1-513809	1	Bearing
9:3	1-513810	2	Bushing
9:4	302-61	1	Zerk
9:5		1	Wheel
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-6	8	Screw-HH
16	3290-357	8	Nut-HHF, Whiz
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	1	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH

Ref	Part No.	Qty.	Description
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
31	1-806003	1	Pin-Hair
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Retaining, EXT
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	Ring-Retaining, EXT
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad And Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM

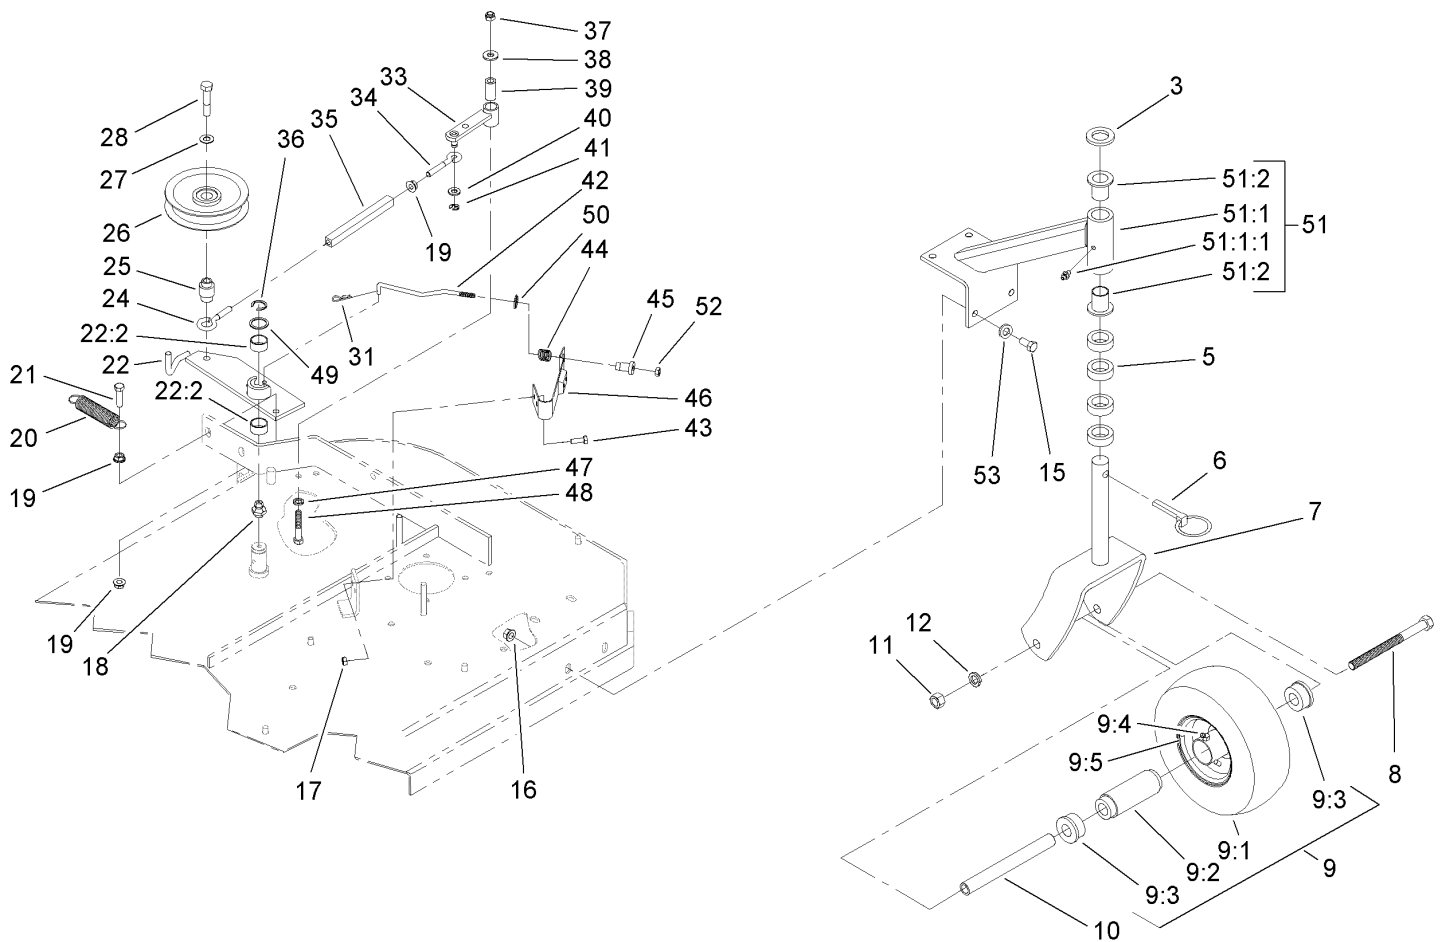


Idler Arm and Caster Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
①51:1		1	Support-Caster
51:1:1	302-52	1	Fitting-Grease
51:2	1-303514	2	Bearing-Flanged
52	3296-56	1	Nut-Lock, NI
53	3256-24	8	Washer-Flat

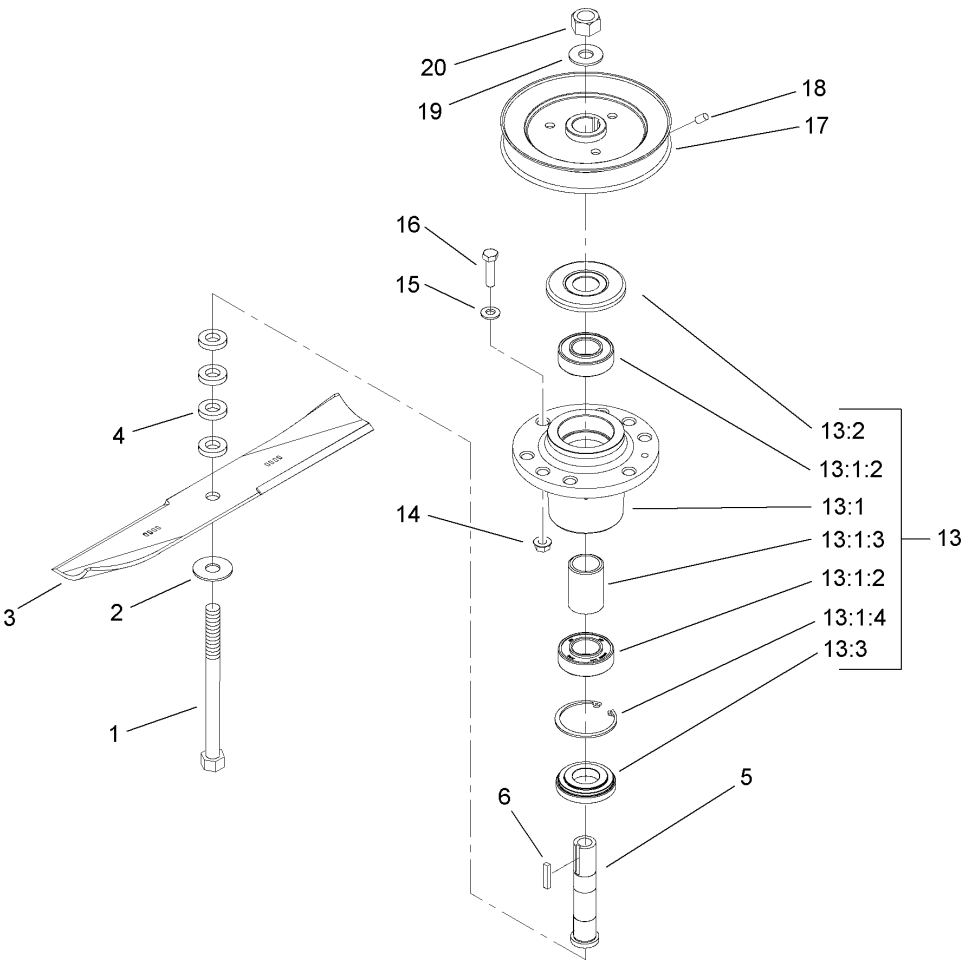

Spindle and Blade Assembly


Ref	Part No.	Qty.	Description				
1	1-800861	2	Screw-Cap, HH				
2	1-513208	2	Washer-Spring				
23	103-2527	2	Blade-Notched				
3	103-2507	2	Blade-Lift, Low				
4	1-323539	8	Spacer				
5	1-323529	2	Tube-Spindle, Short				
6	1-807267	2	Key				
13	107-4065	2	Cutter Housing ASM				
13:1		1	Housing-Cutter				
13:1:2	103-2477	2	Bearing-Ball				
13:1:3	103-2534	1	Spacer-Bearing				
13:1:4	32120-8	1	Ring-Snap				
13:2	103-1330	1	Guard-Bearing, Top				
13:3	103-2535	1	Spacer-Guard, Bottom				
14	32128-20	8	Nut-HF				
15	1-303334	8	Washer-Spring				
16	322-6	8	Screw-HH				
17	1-403183	2	Sheave				
18	1-803310	2	Screw-Set				
19	1-323339	2	Washer-Retainer, Sheave				
20	3219-6	2	Nut-Hex				

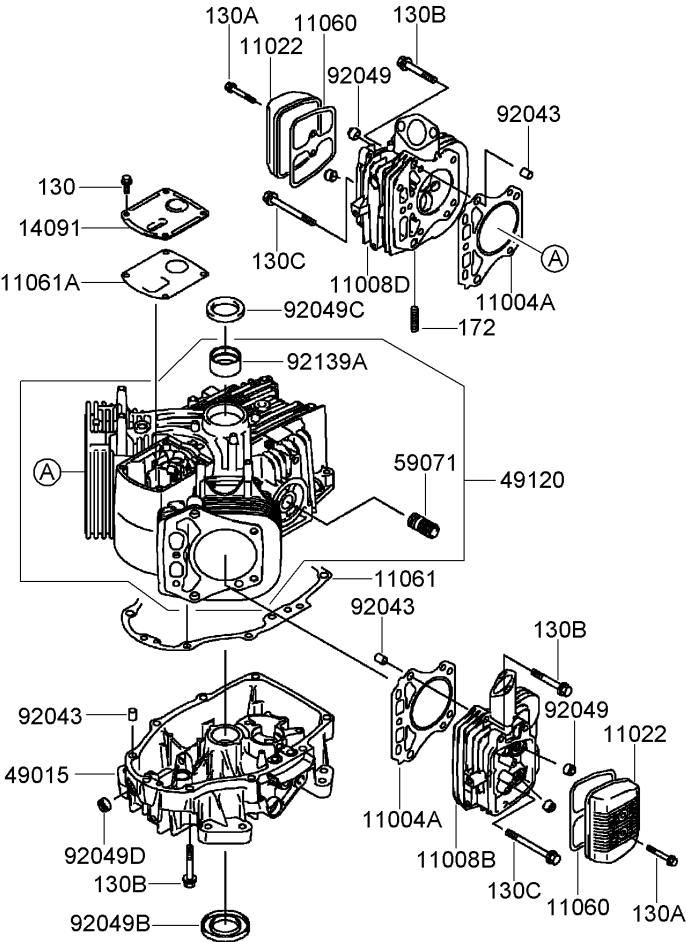

Cylinder and Crankcase Assembly


Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④11004A	11004-7018	2	Gasket-Head				
④11008B	11008-7021	1	Head-Cylinder, No. 2				
④11008D	11008-7022	1	Head-Cylinder, No. 1				
④11022	11022-7003	2	Case-Rocker				
④11060	11060-7001	2	Gasket-Case, Rocker				
④11061	11061-7007	1	Gasket-Cover, Crankcase				
④11061A	11061-7008	1	Gasket-Breather				
④14091	14091-7007	1	Cover				
④49015	49015-7032	1	Cover-Crankcase				
④49120	49120-7015	1	Crankcase				
④59071	59071-2079	1	Joint				
④92043	92043-7001	6	Pin				
④92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)				
④92049B	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)				
④92049C	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)				
④92049D	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)				
④92139A	92139-7008	1	Bushing				
④130	130B0612	4	Bolt-Flanged (6X12)				
④130A	130B0640	4	Bolt-Flanged (6X40)				
④130B	130T0850	17	Bolt-Flanged (8X50)				
④130C	130T0875	2	Bolt-Flanged (8X75)				
④172	172G0818	4	Bolt-Stud (8X18)				

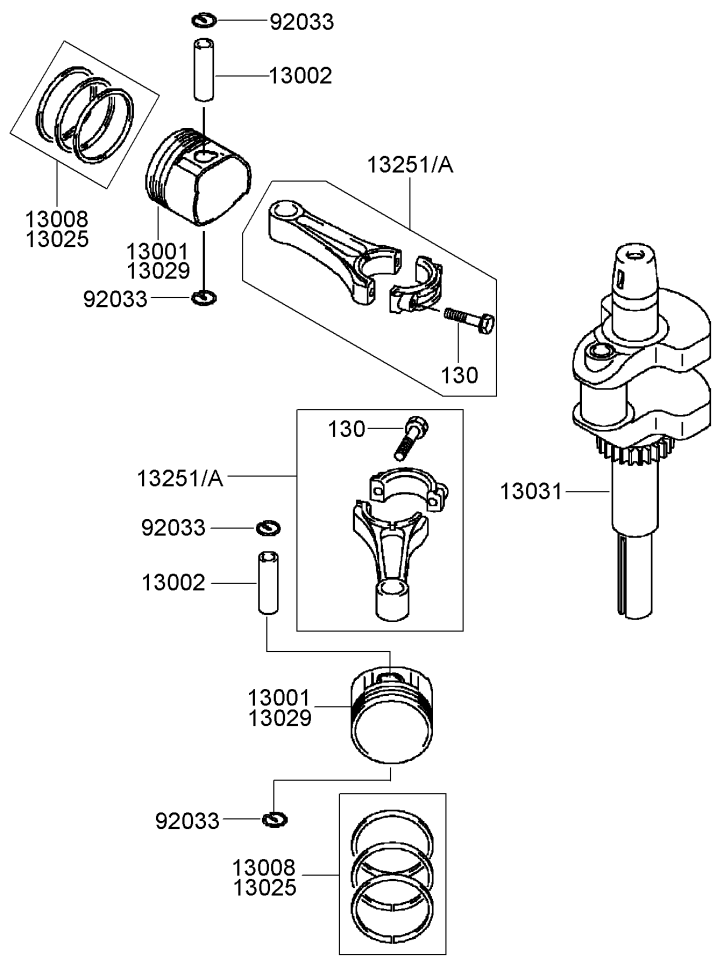

Piston and Crankshaft Assembly
Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
④13001	13001-7009	2	Piston-Engine				
④13002	13002-7001	2	Pin-Piston				
④13008	13008-7001	2	Ring Set-Piston				
④13025	13025-7003	1	Ring Set-Piston (L 0.50)				
④13029	13029-7005	1	Piston-Engine (L 0.50)				
④13031	13031-7033	1	Crankshaft				
④13251	13251-7007	2	Connecting Rod ASM				
④13251A	13251-7008	2	Connecting Rod ASM (0.50)				
④92033	92033-7005	4	Ring-Snap				
④130	130G0630	4	Bolt-Flanged (6X30)				

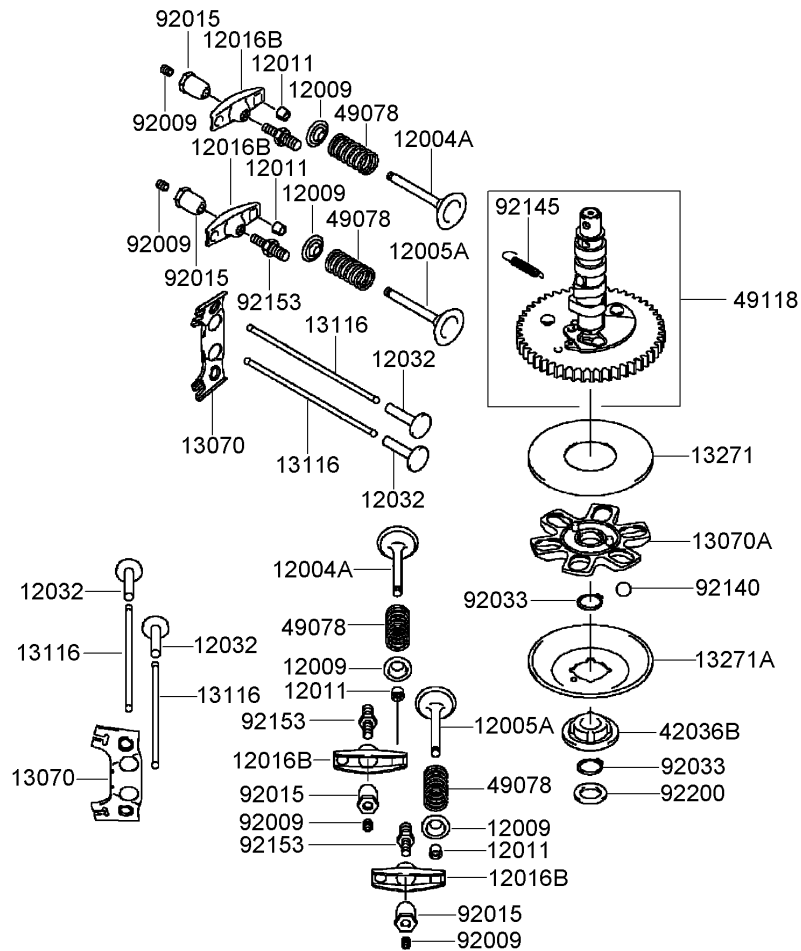

Valve and Camshaft Assembly

Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
④12004A	12004-7005	2	Valve-Intake				
④12005A	12005-7006	2	Valve-Exhaust				
④12009	12009-7001	4	Retainer-Spring, Valve				
④12011	12011-2056	8	Collet				
④12016B	12016-7008	4	Arm-Rocker				
④12032	12032-7001	4	Tappet				
④13070	13070-7001	2	Guide				
④13070A	13070-7004	1	Guide				
④13116	13116-2057	4	Rod-Push				
④13271	13271-7007	1	Plate				
④13271A	13271-7021	1	Plate-Governor				
④42036B	42036-7010	1	Sleeve				
④49078	49078-7001	4	Spring-Valve, Engine				
④49118	49118-7009	1	Camshaft				
④92009	92009-2341	4	Screw				
④92015	92015-2253	4	Nut				
④92033	92033-7001	2	Ring-Snap				
④92140	92140-7002	6	Ball				
④92145	92145-7001	1	Spring				
④92153	92153-7019	4	Bolt				
④92200	92200-7001	1	Washer				

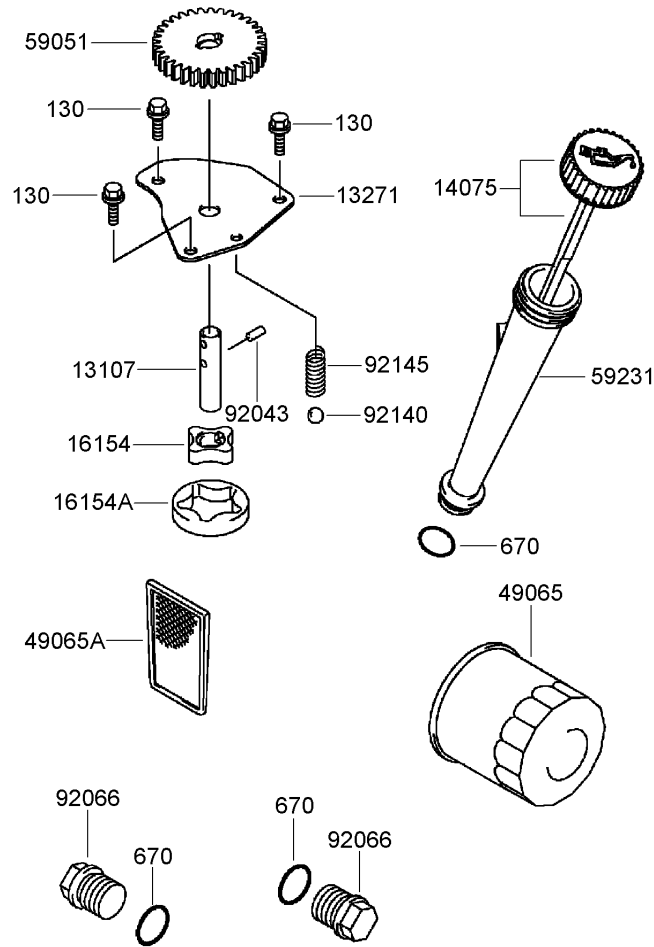

Lubrication Equipment Assembly

Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
④13107	13107-7009	1	Shaft				
④13271	13271-7017	1	Plate				
④14075	14075-7009	1	Cap ASM				
④16154	16154-2053	1	Rotor-Pump (In)				
④16154A	16154-2054	1	Rotor-Pump (Out)				
④49065	49065-2078	1	Filter-Oil				
④49065A	49065-7004	1	Filter-Oil				
④59051	59051-7011	1	Gear-Spur				
④59231	59231-7003	1	Filler				
④92043	92043-7003	2	Pin				
④92066	92066-7003	2	Plug				
④92140	92140-7003	1	Ball				
④92145	92145-7002	1	Spring				
④130	130B0612	3	Bolt-Flanged (6X12)				
④670	670D2016	3	O-Ring (16Mm)				

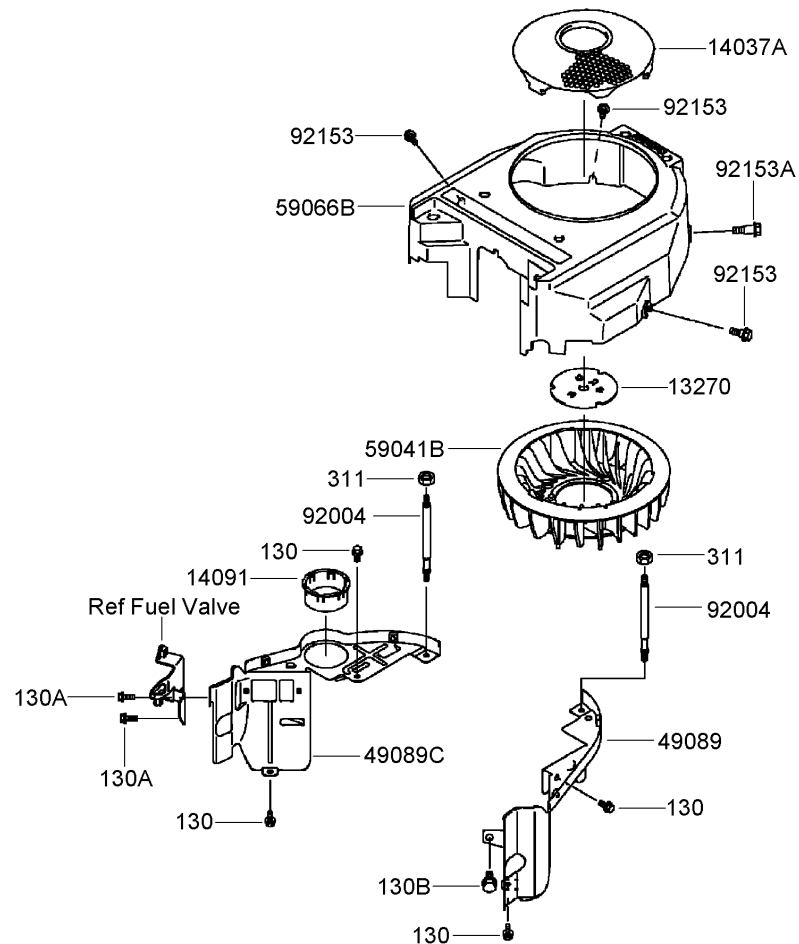

Cooling Equipment Assembly


Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④13270	13270-7007	1	Plate				
④14037A	14037-7025-9H	1	Screen				
④14091	14091-7009	1	Cover				
④49089	49089-7044	1	Shroud-Engine				
④49089C	49089-7061	1	Shroud-Engine				
④59041B	59041-7012	1	Fan				
④59066B	59066-7036	1	Housing-Fan				
④92004	92004-7007	2	Stud				
④92153	92153-7007	3	Bolt				
④92153A	92153-7008	1	Bolt				
④130	130B0612	4	Bolt-Flanged (6X12)				
④130A	130B0616	2	Bolt-Flanged (6X16)				
④130B	130B0816	1	Bolt-Flanged (8X16)				
④311	311F0600	2	Nut-Hex (6Mm)				

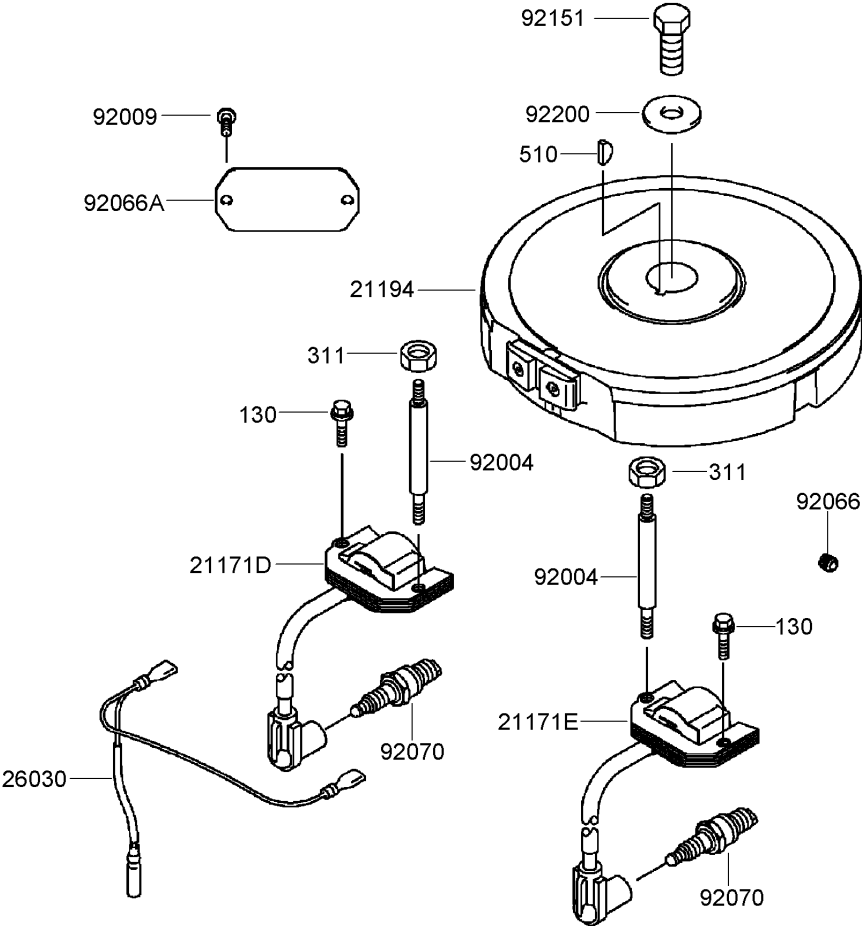


Electric Equipment Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④21171D	21171-7026	1	Ignition Coil ASM				
④21171E	21171-7027	1	Ignition Coil ASM				
④21194	21194-7013	1	Flywheel				
④26030	26030-7001	1	Harness				
④92004	92004-7008	2	Stud				
④92009	92009-2308	2	Screw				
④92066	92066-7002	1	Plug				
④92066A	92066-7005	1	Plug				
④92070	92070-7003	2	Plug-Spark (R C J 8 Y, Solid)				
④92151	92151-2097	1	Bolt (12X30)				
④92200	92200-7002	1	Washer				
④130	130B0620	2	Bolt-Flanged (6X20)				
④311	311F0600	2	Nut-Hex (6Mm)				
④510	510A5100	1	Key-Woodruff				

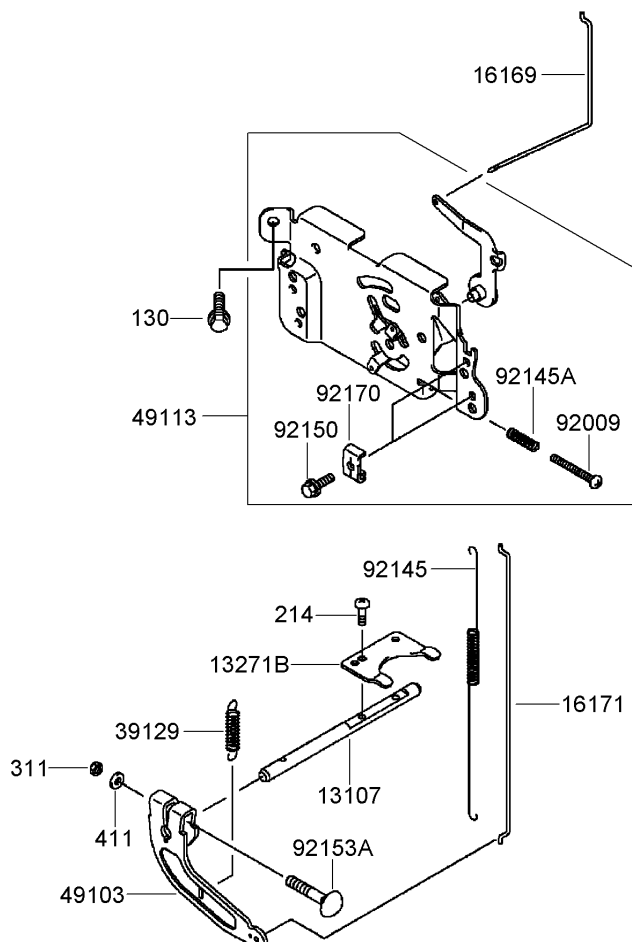

Control Equipment Assembly Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description				
④13107	13107-7010	1	Shaft				
④13271B	13271-7032	1	Plate				
④16169	16169-7012	1	Link-Choke				
④16171	16171-7007	1	Link				
④39129	39129-7003	1	Spring-Governor				
④49103	49103-7004	1	Arm-Governor				
④49113	49113-7024	1	Panel-Control				
④92009	92009-7007	1	Screw (4X35)				
④92145	92145-7003	1	Spring				
④92145A	92145-7005	1	Spring				
④92150	92150-2182	2	Bolt (5X18)				
④92153A	92153-7033	1	Bolt (6X35)				
④92170	92170-7001	2	Clamp				
④130	130B0612	2	Bolt-Flanged (6X12)				
④214	214B0408	2	Screw-Pan (4X8)				
④311	311B0600	1	Nut-Hex (6Mm)				
④411	411B0600	1	Washer-Plain (6Mm)				

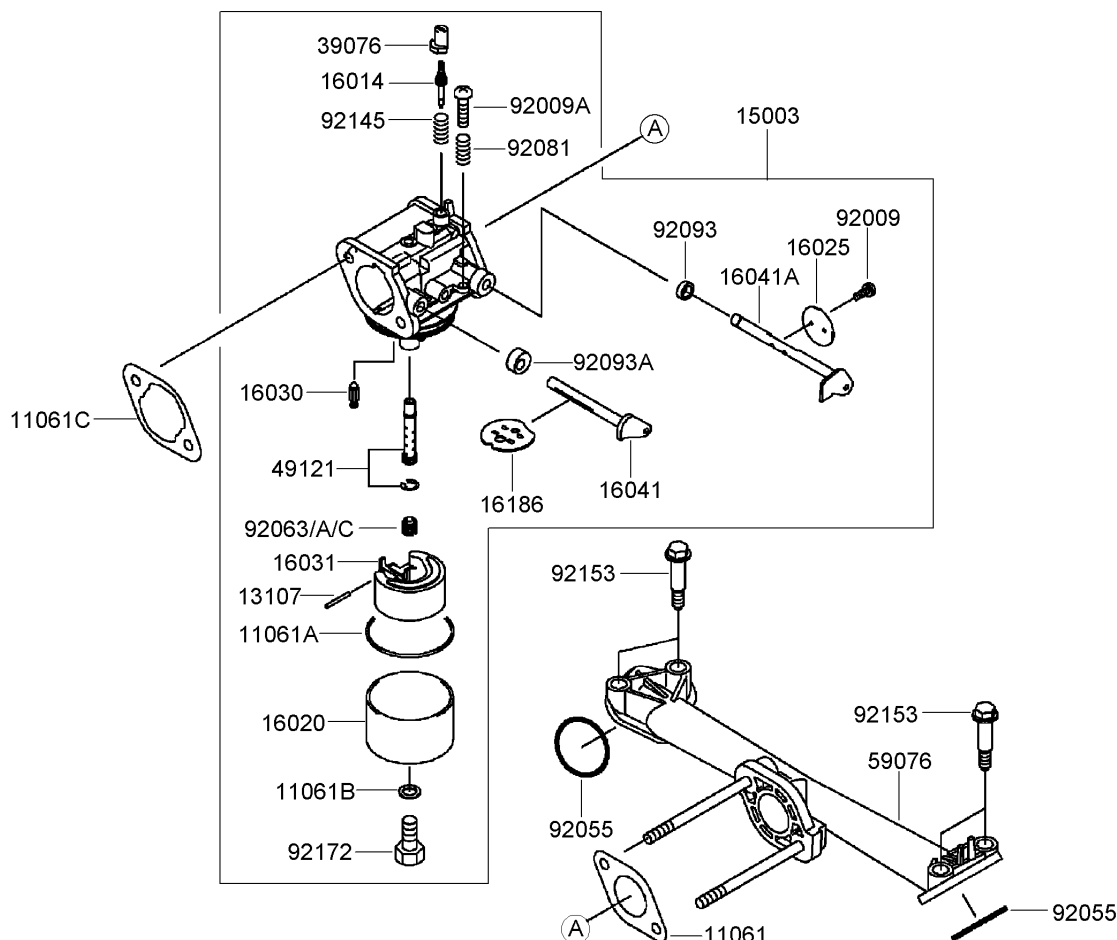

Carburetor Assembly Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description
④11061	11061-7004	1	Gasket-Insulator
④11061A	11061-7009	1	Gasket-Chamber
④11061B	11061-7010	1	Gasket-Screw
④11061C	11061-7018	1	Gasket-Cleaner, Air
④13107	13107-7018	1	Shaft
④15003	15003-7061	1	Carburetor ASM
④16014	16014-7002	1	Screw-Pilot, Air
④16020	16020-7003	1	Chamber-Float
④16025	16025-7006	1	Valve-Throttle
④16030	16030-7003	1	Valve-Float
④16031	16031-7002	1	Float
④16041	16041-7016	1	Shaft-Choke, Carburetor
④16041A	16041-7018	1	Shaft-Throttle, Carburetor
④16186	16186-7002	1	Choke Valve ASM
④39076	39076-7001	1	Limiter
④49121	49121-7001	1	Nozzle-Main
④59076	59076-7005	1	Manifold-Intake
④92009	92009-2083	2	Screw
④92009A	92009-2349	1	Screw
④92055	92055-7007	2	O-Ring (I D 31)
④92063	92063-7026	1	Jet-Main, No. 88
④92063A	92063-7028	1	Jet-Main, No. 85
④92063C	92063-7029	1	Jet-Main, No. 82
④92081	92081-2234	1	Spring


Ref	Part No.	Qty.	Description
④92093	92093-2100	1	Seal
④92093A	92093-7003	1	Seal
④92145	92145-7015	1	Spring
④92153	92153-7009	4	Bolt
④92172	92172-7002	1	Screw

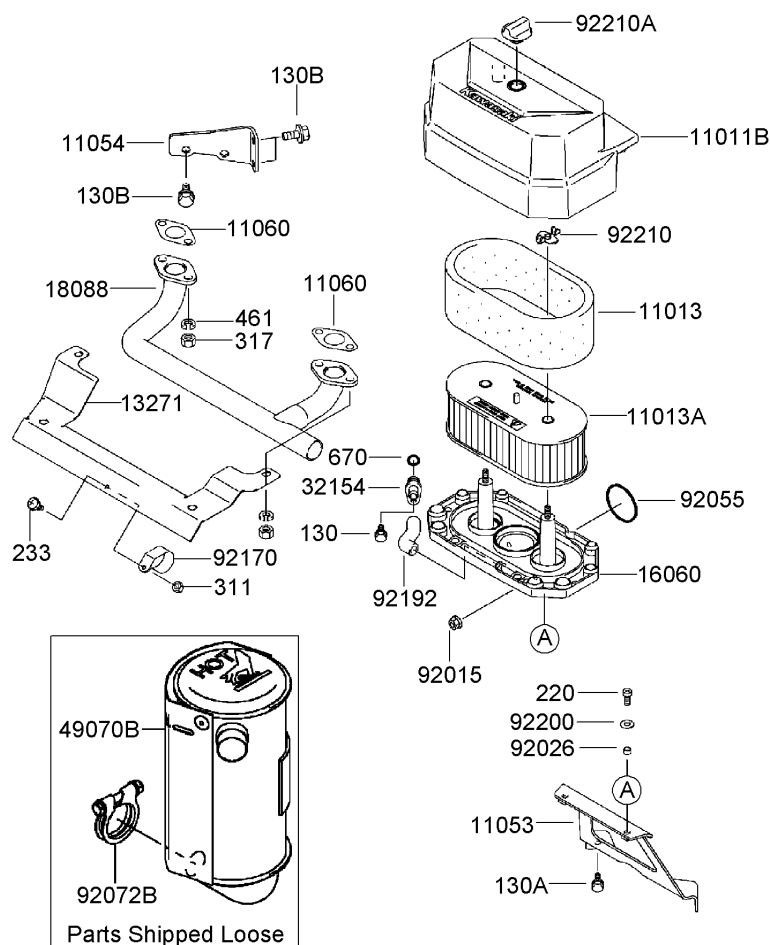

Air Filter and Muffler Assembly Kawasaki FH430V-CS25


Ref	Part No.	Qty.	Description
④11011B	11011-7045	1	Case-Filter, Air
④11013	11013-7025	1	Element-Filter, Air
④11013A	11013-7031	1	Element-Filter, Air
④11053	11053-7022	1	Bracket
④11054	11054-7002-9H	1	Bracket
④11060	11060-7021	2	Gasket-Muffler
④13271	13271-7022	1	Plate
④16060	16060-7016	1	Pipe-Intake
④18088	18088-7001	1	Pipe-Exhaust
④32154	32154-7006	1	Pipe
④49070B	49070-7021	1	Muffler
④92015	92015-1193	2	Nut
④92026	92026-7001	2	Spacer (6.2X7.9X5)
④92055	92055-7015	1	O-Ring
④92072B	92072-7012	1	Band
④92170	92170-7002	1	Clamp
④92192	92192-7010	1	Tube
④92200	92200-2070	2	Washer
④92210	92210-7004	2	Nut
④92210A	92210-7019	1	Nut
④130	130B0610	1	Bolt-Flanged (6X10)
④130A	130B0612	2	Bolt-Flanged (6X12)
④130B	130B0816	3	Bolt-Flanged (8X16)

Ref	Part No.	Qty.	Description
④220	220B0614	2	Screw-Pan, Cross (6X14)
④233	233B0416	1	Screw (4X16)
④311	311B0400	1	Nut-Hex (4Mm)
④317	317R0800	4	Nut-Hex, Small (8Mm)
④461	461F0800	4	Washer-Spring (8Mm)
④670	670B2010	1	O-Ring (10Mm)

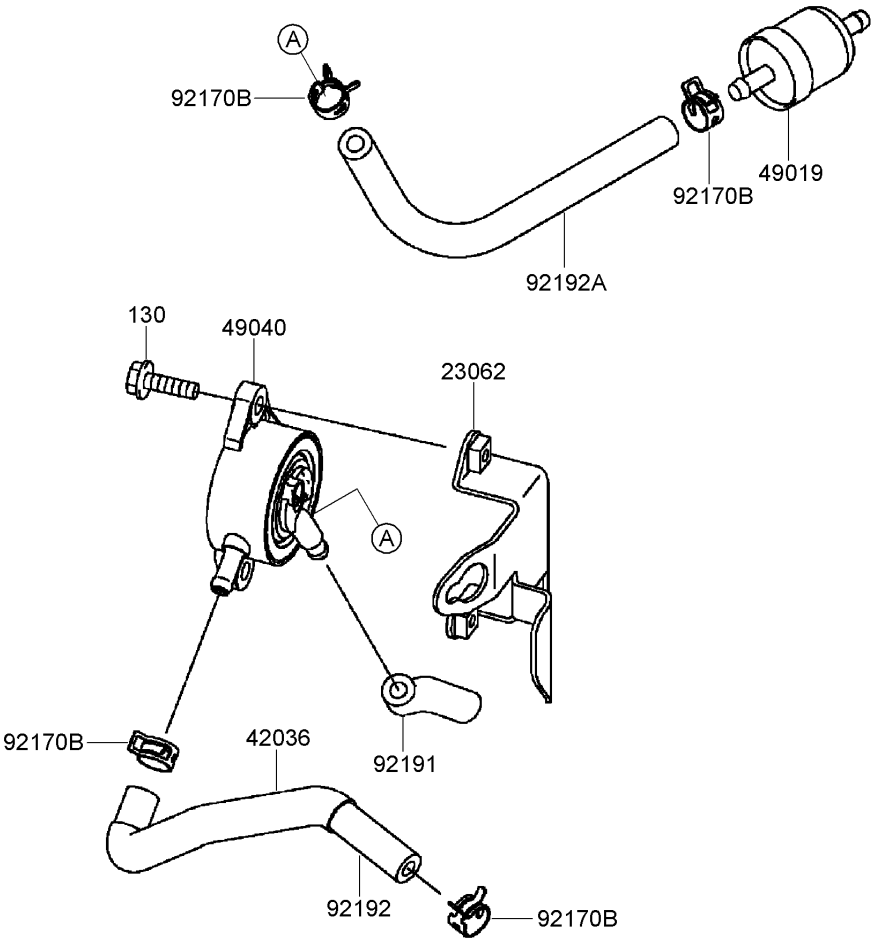

Fuel Tank and Valve Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④23062	23062-7004-9H	1	Bracket				
④42036	42036-7012	1	Sleeve				
④49019	49019-7001	1	Filter-Fuel				
④49040	49040-7001	1	Pump-Fuel				
④92170B	92170-2088	4	Clamp				
④92191	92191-7002	1	Tube				
④92192	92192-7035	1	Tube (6.35X12.7X170)				
④92192A	92192-7037	1	Tube (6.35X12.7X160)				
④130	130B0620	2	Bolt-Flanged (6X20)				

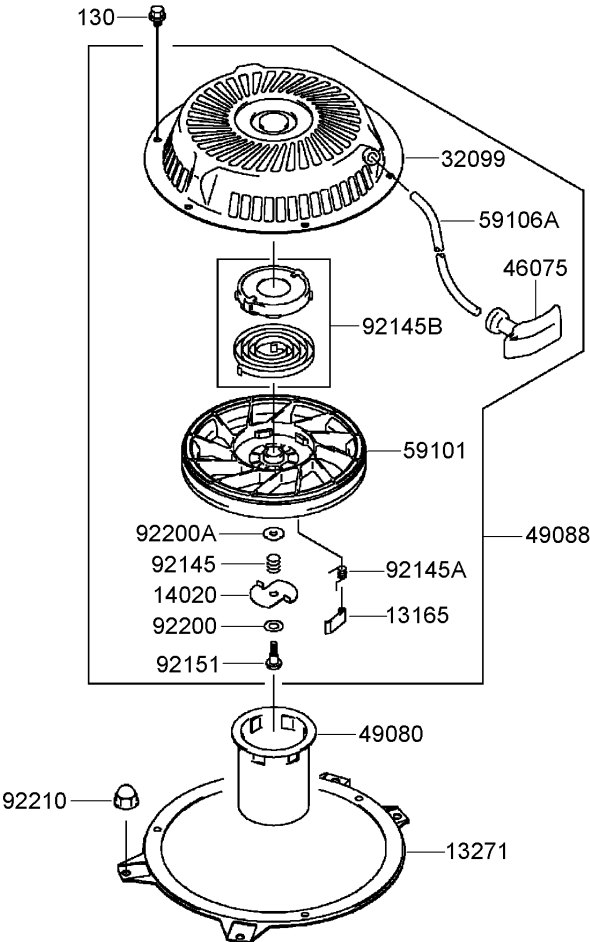

Starter Assembly
Kawasaki FH430V-CS25

Ref	Part No.	Qty.	Description				
④13165	13165-7001	2	Pawl-Starter, Recoil				
④13271	13271-7003-9H	1	Plate				
④14020	14020-7001	1	Retainer				
④32099	32099-7002	1	Case-Starter, Recoil				
④46075	46075-7001	1	Grip-Starter, Recoil				
④49080	49080-7001	1	Pulley-Starting				
④49088	49088-7013	1	Starter-Recoil				
④59101	59101-7001	1	Reel-Starter, Recoil				
④59106A	59106-7005	1	Rope				
④92145	92145-7006	1	Spring				
④92145A	92145-7007	2	Spring				
④92145B	92145-7008	1	Spring				
④92151	92151-7008	1	Bolt				
④92200	92200-7004	1	Washer				
④92200A	92200-7005	1	Washer				
④92210	92210-0003	4	Nut				
④130	130B0608	3	Bolt-Flanged (6X8)				

Attachments and Accessories

For 39692 - Commercial Walk-Behind Mower, Fixed Deck, T-Bar, Gear Drive with 32in Cutting Unit

Product Name	Model/Part
32 Inch and 48 Inch Fixed Deck Low Lift Blades	103-2507
Blade-Notched	103-2527
Atomic Blade and Decal Assembly	104-8595
Blade-Atomic, 16.25 Inch (6 Pack)	110-0407
Spring-Extension	110-1119
32 Inch Recycler Kit	110-4915
Soft Bag (3 Bushel)	30198

NOTES

