



Z589 Z Master[®]

With 60in TURBO FORCE[®] Side Discharge Mower

Model No. 74253CP - 270000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame Assembly	 3	Spindle Assembly No. 112-8698	 28
Caster and Z Stand Assembly	 5	Lever Assembly No. 107-1664	 29
Traction Frame and Floor Pan Assembly	 6	Rubber Deflector Assembly No. 108-2792	 30
Seat and Roll-Over Protection System Assembly	 7	Electrical Assembly	 31
Deluxe Seat Assembly No. 110-0838	 8	Cylinder and Crankcase Assembly Kawasaki FD791D-AS07	 32
Roll-Over Protection System Assembly No. 110-0877	 9	Piston and Crankshaft Assembly Kawasaki FD791D-AS07	 33
Parking Brake and Wheel Assembly	 10	Valve and Camshaft Assembly Kawasaki FD791D-AS07	 34
Hydro Control Assembly	 11	Lubrication Equipment Assembly Kawasaki FD791D-AS07	 35
Engine, Muffler and Air Cleaner Assembly	 12	Cooling Equipment Assembly Kawasaki FD791D-AS07	 36
Air Cleaner Assembly No. 95-5805	 13	Electric Equipment Assembly Kawasaki FD791D-AS07	 37
Hydro and Gearbox Drive Assembly	 14	Control Equipment Assembly Kawasaki FD791D-AS07	 38
90 Degree Gearbox Assembly No. 110-5771	 15	Throttle Assembly Kawasaki FD791D-AS07	 39
Hydraulic Tank, Motor and Pump Assembly	 16	Air Filter and Muffler Assembly Kawasaki FD791D-AS07	 40
Tandem Pump Assembly No. 110-5757	 18	Fuel Tank and Valve Assembly Kawasaki FD791D-AS07	 41
Hydraulic Hose Routing Assembly	 19	Starter Assembly Kawasaki FD791D-AS07	 42
Fuel Tank, Lines and Filter Assembly	 20	Attachments and Accessories List	 43
Engine Housing Assembly	 21		
Cooling System Assembly	 22		
Hood Assembly	 23		
Deck Connection Assembly	 24		
Deck Assembly	 25		
Deck Decal Assembly No. 108-5945	 27		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

- ❶ Not illustrated
- ❷ Obtain from your local Kawasaki dealer


- ❸ Not serviced separately

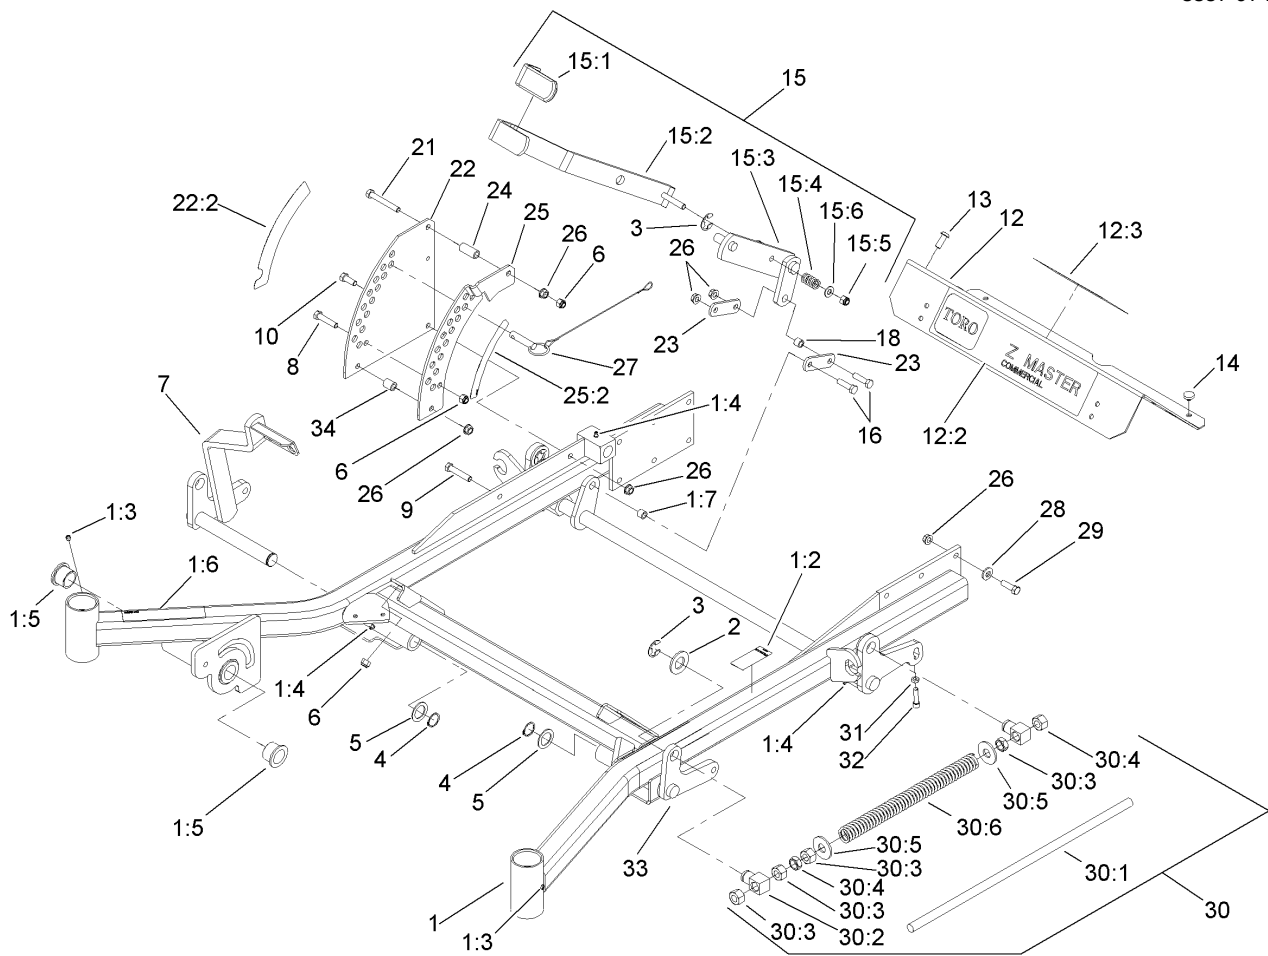

Front Frame Assembly


Ref	Part No.	Qty.	Description
1	106-8998	1	Frame ASM
1:2	107-1857	1	Decal-Brake, Parking
1:3	1-811010	2	Plug
1:4	302-19	5	Fitting-Grease
1:5	94-1291	2	Bushing
1:6	104-7759	1	Decal-Warning
1:7	103-1918	1	Bushing
2	3256-29	4	Washer-Flat
3	32151-103	5	Ring-Retaining, EXT
4	32151-29	2	Ring-Retaining
5	1-523157	2	Washer-Spacer
6	3296-39	6	Nut-Lock, NI
7	108-7786-01	1	RH Front Deck Lift ASM
8	323-9	1	Screw-HH
9	323-10	1	Screw-HH
10	323-5	1	Screw-HH
12	106-9981	1	Footrest
12:2	106-7451	1	Decal
12:3	107-2112	1	Decal-Warning
13	3274-94	4	Screw-HSBH
14	1-513658	2	Bumper
15	110-5860	1	Deck Lift Handle ASM
15:1	1-633295	1	Grip-Lever, Lift
15:2	103-2083	1	Lever-Lift

Ref	Part No.	Qty.	Description
15:3	103-2064	1	Arm-Lift, Deck
15:4	1-633325	1	Spring-Compression
15:5	3296-39	1	Nut-Lock, NI
15:6	3256-24	1	Washer-Flat
16	323-29	2	Screw-HH
18	103-1918	1	Bushing
21	323-13	1	Screw-HH
22	110-0833	1	Plate-Deck Lift, Outer
22:2	107-1860	1	Decal-Height, Deck
23	1-633068	2	Arm-Lift, Deck
24	1-633082	1	Bushing-Lever, Lift
25	110-0834	1	Plate-Deck Lift, Inner
25:2	107-1861	1	Decal-Height, Deck
26	3290-357	17	Nut-HHF, Whiz
27	106-9951	1	Hitch Pin ASM
28	98-5975	12	Washer-Belleville
29	323-7	12	Screw-HH
30		2	Front Frame Spring ASM
30:1	1-633096	1	Rod-Lift, Deck
30:2	1-633441	2	Swivel-Deck Mount, Rear
30:3	3217-11	4	Nut-Hex
30:4	3218-6	2	Nut-Jam
30:5	3256-7	2	Washer-Flat
30:6	1-633064	1	Spring-Support, Deck

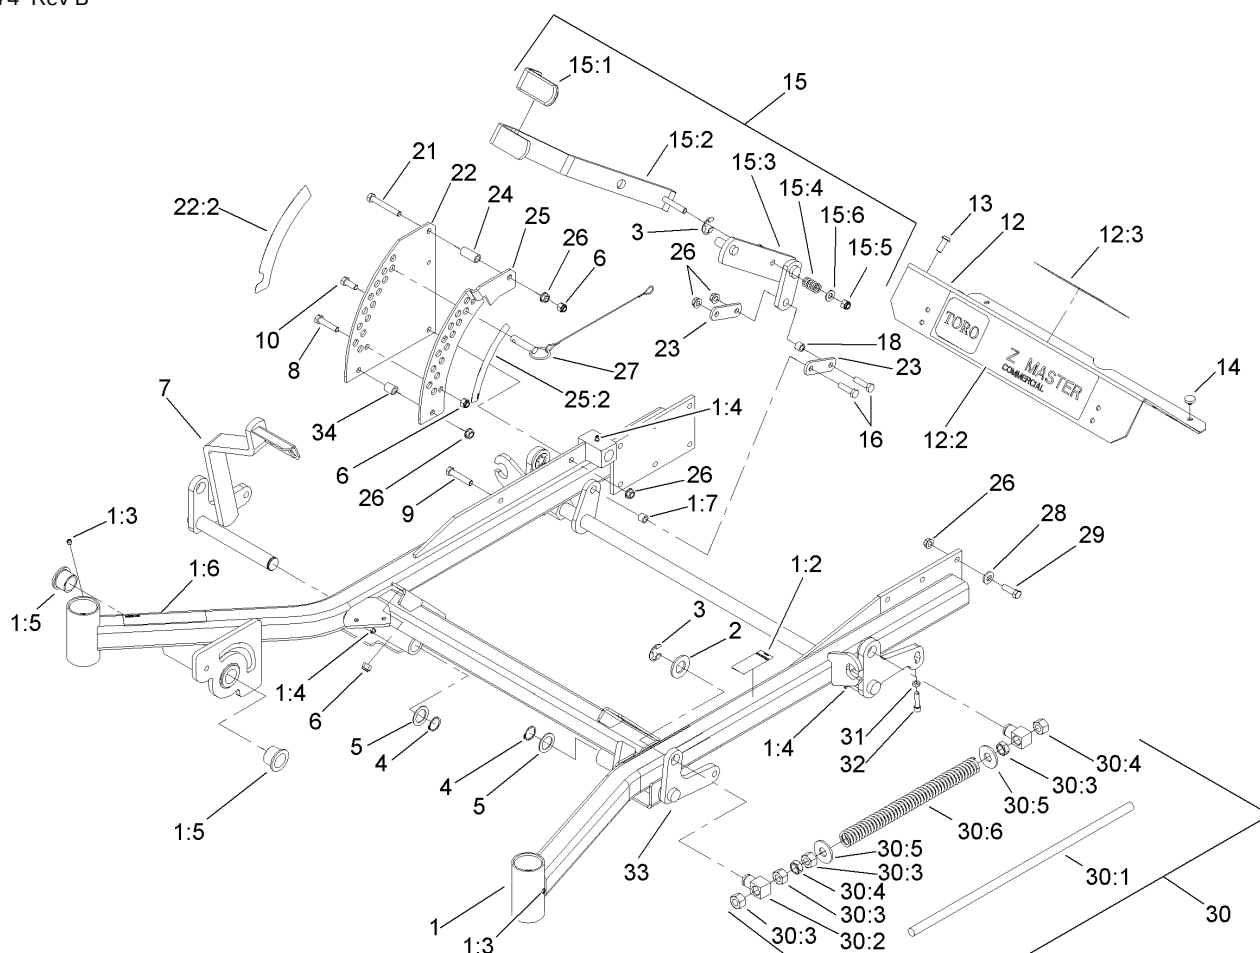


Front Frame Assembly (continued)

Ref	Part No.	Qty.	Description
31	3218-2	2	Nut-Jam
32	3274-18	2	Screw-HSH
33	106-8984-01	1	LH Deck Lift ASM
34	1-633080	1	Bushing-Lever, Lift

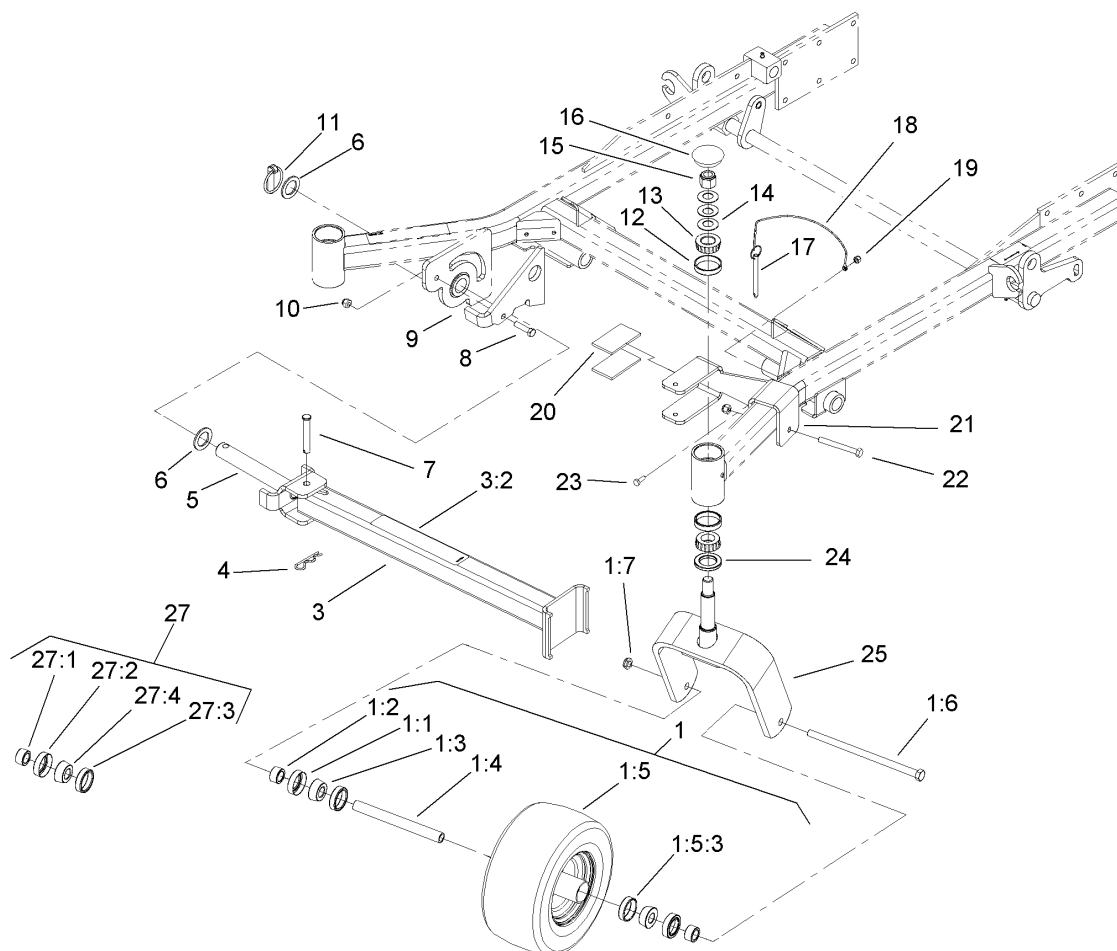

Caster and Z Stand Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-5746	2	Castor Wheel ASM	16	103-4882	2	Cap-Grease
1:1	1-633580	2	Seal-Bearing	17	105-1647	1	Pin-Hitch, Cotterless
1:2	1-633581	2	Spacer-Bearing	18	100-9385	1	Lanyard-Nylon
1:3	1-633585	2	Bearing-Cone, Taper	19	3296-42	1	Nut-Lock, NI
1:4	1-633959	1	Spacer-Caster, Front	20	100-6547	2	Cushion-Rubber
1:5	110-5744	1	Wheel And Tire ASM (Semi-Pneumatic)	21	100-6542-01	1	Bracket-Cradle
1:5:3	1-633584	1	Bearing-Cup	22	323-20	1	Screw-HH
1:6	325-24	1	Screw-HH	23	321-4	1	Screw-HH
1:7	3296-45	1	Nut-Lock, NI	24	1-543511	2	Seal-Grease
3	107-1874	1	Leg ASM	25	103-1474-01	2	Fork-Caster
3:2	106-7464	1	Decal-Z Stand	27	110-8837	1	Caster Wheel Bearing Kit
4	3290-355	1	Pin-Hair	27:1	1-633581	2	Spacer-Bearing
5	100-9692-01	1	Pivot Pin ASM	27:2	1-633580	2	Seal-Bearing
6	3-6781	2	Washer-Thrust	27:3	1-633584	2	Bearing-Cup
7	283-55	1	Pin-Clevis	27:4	1-633585	2	Bearing-Cone, Taper
8	323-8	1	Screw-HH				
9	100-9686-01	1	Bracket-Latch				
10	3296-39	2	Nut-Lock, NI				
11	283-71	1	Pin-Lynch				
12	254-72	4	Bearing-Cup, Tapered				
13	254-94	4	Bearing-Cone, Tapered				
14	1-633508	6	Washer-Bellville				
15	3296-51	2	Nut-Lock, NI				

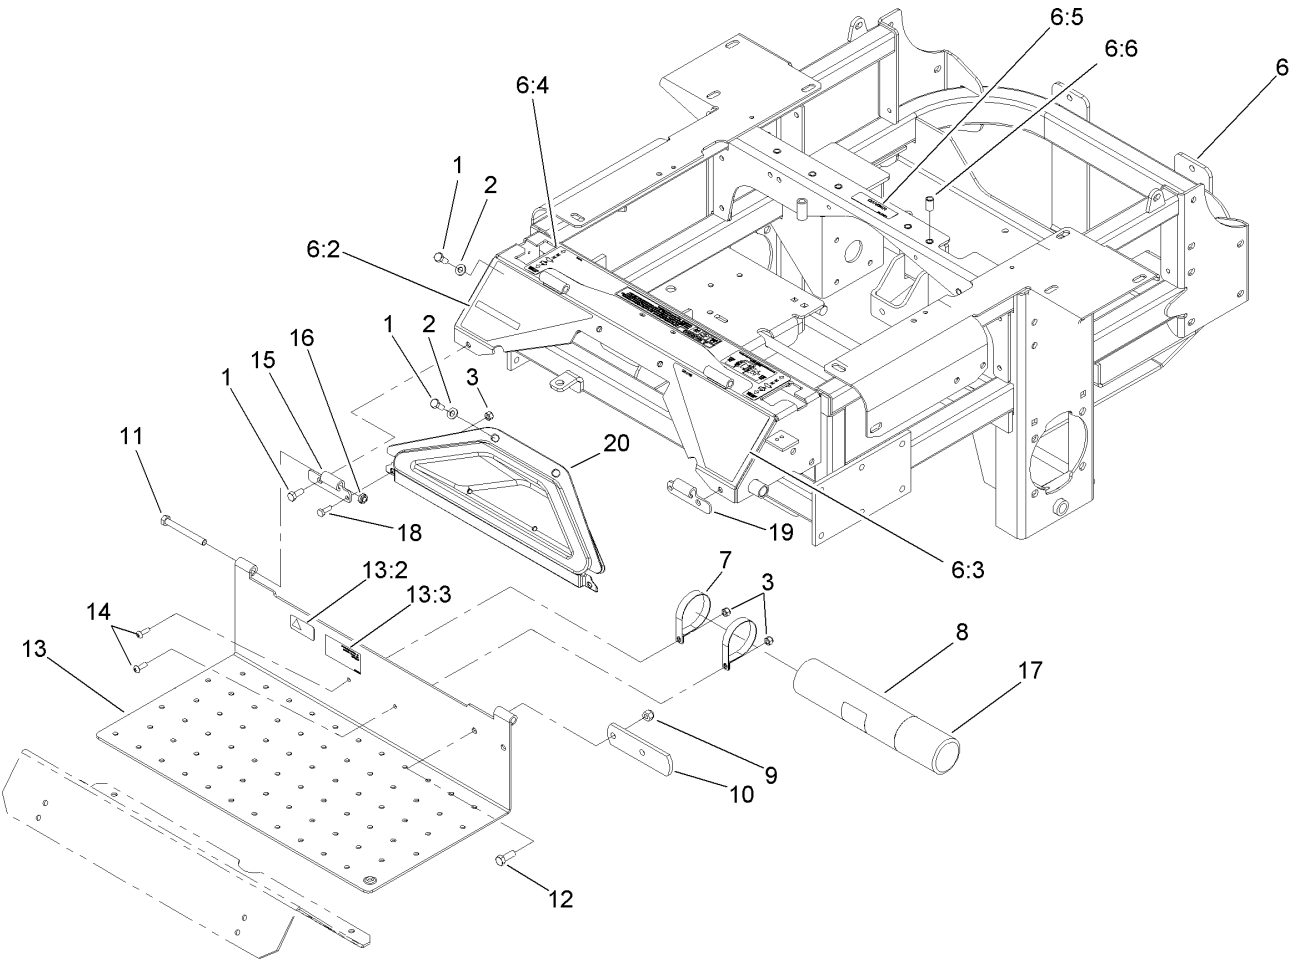

Traction Frame and Floor Pan Assembly


Ref	Part No.	Qty.	Description
1	322-43	6	Screw-HH
2	3256-70	4	Washer-Flat
3	3296-42	4	Nut-Lock, NI
6	110-6212	1	Main Frame ASM
6:2	106-9989	1	Decal-Warning
6:3	106-7492	1	Decal-Danger
6:4	110-0819	1	Decal-Console, Top
6:5	98-5954	1	Decal-Cover, Missing
6:6	32148-11	7	Insert-Threaded
7	107-1865	2	R-Clamp
8	104-7050	1	Housing-Manual
9	3296-39	2	Nut-Lock, NI
10	1-633964-03	1	Stop-Brake, Park
11	323-20	2	Screw-HH
12	323-6	2	Screw-HH
13	107-1858	1	Floorpan
13:2	98-4387	1	Decal-Protection, Ear
13:3	107-1864	1	Decal-Location, Manual
14	3258-166	2	Screw-PRH
15	106-7488-03	1	Hinge-Floorpan, LH
16	3296-59	2	Nut-Lock, NI
17	104-7048	1	Cap-Housing
18	321-4	2	Screw-HH
19	106-7489-03	1	Hinge-Floorpan, RH

Ref	Part No.	Qty.	Description
20	106-7498	1	Pocket

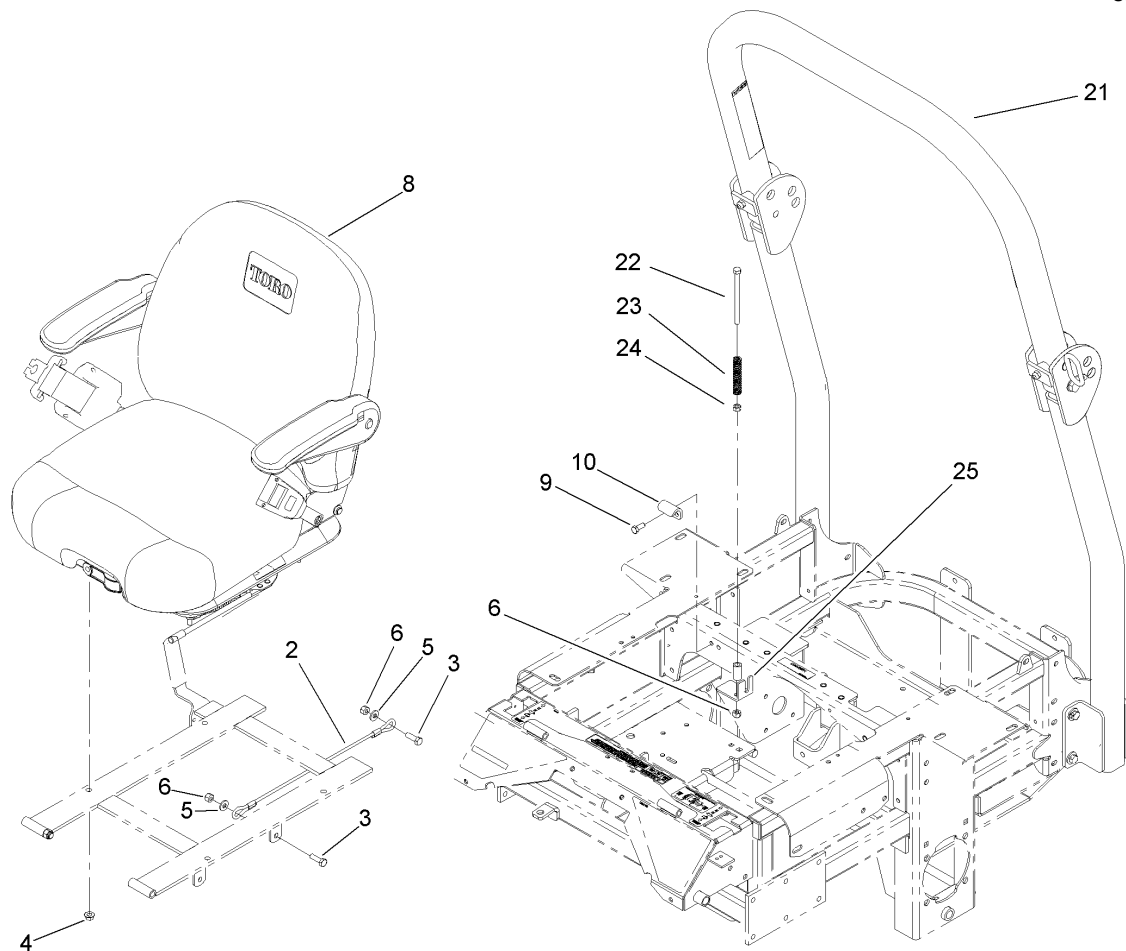


Seat and Roll-Over Protection System Assembly

Ref	Part No.	Qty.	Description				
2	98-4371	1	Cable-Seat				
3	322-5	2	Screw-HH				
4	32128-20	4	Nut-HF				
5	1-613235	2	Washer				
6	3296-29	5	Nut-Lock, NI				
8	110-0838	1	Deluxe Seat ASM				
9	322-4	2	Screw-HH				
10	107-3058	1	Catch-Latch, Seat				
21	110-0877	1	ROPS Kit				
22	322-38	1	Screw-HH				
23	1-523415	1	Spring-Switch, Seat				
24	3217-6	1	Nut-Hex				
25	114-1500-03	1	Plate-Switch, Seat				

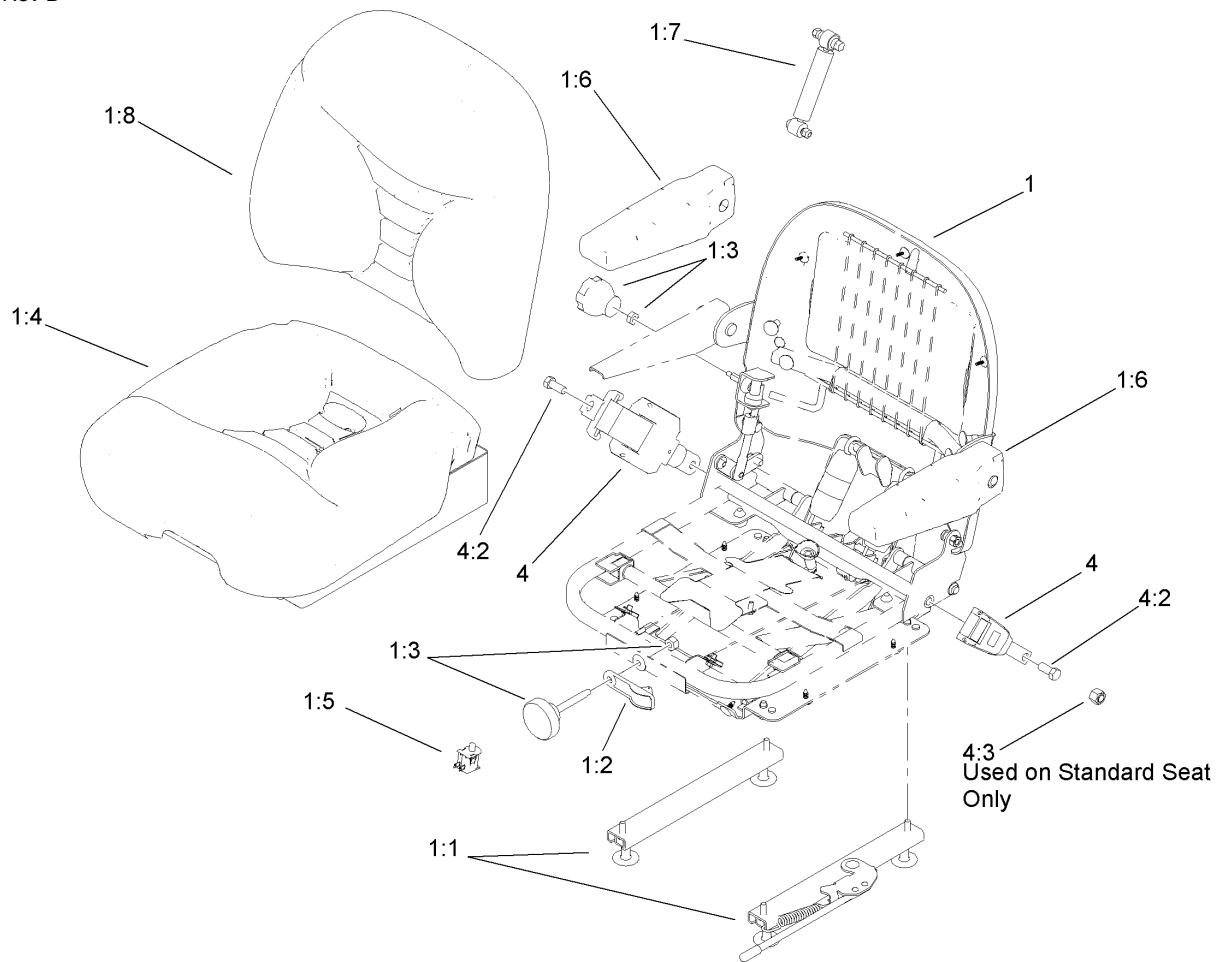

Deluxe Seat Assembly No. 110-0838


Ref	Part No.	Qty.	Description				
1		1	Seat ASM				
1:1	107-1880	1	Seat Track Kit				
1:2	107-1885	1	Weight Indicator Kit				
1:3	107-1881	1	Knob Kit				
1:4	107-1883	1	Bottom Cushion Kit				
1:5	107-1886	1	Switch Kit				
1:6	107-1887	1	Armrest Kit				
1:7	107-1884	1	Shock Absorber Kit				
1:8	107-1882	1	Back Cushion Kit				
4	110-0883	1	Retractable Seatbelt Kit				
4:2	3212-4	2	Screw-HH				
4:3	3296-7	2	Nut-Lock				

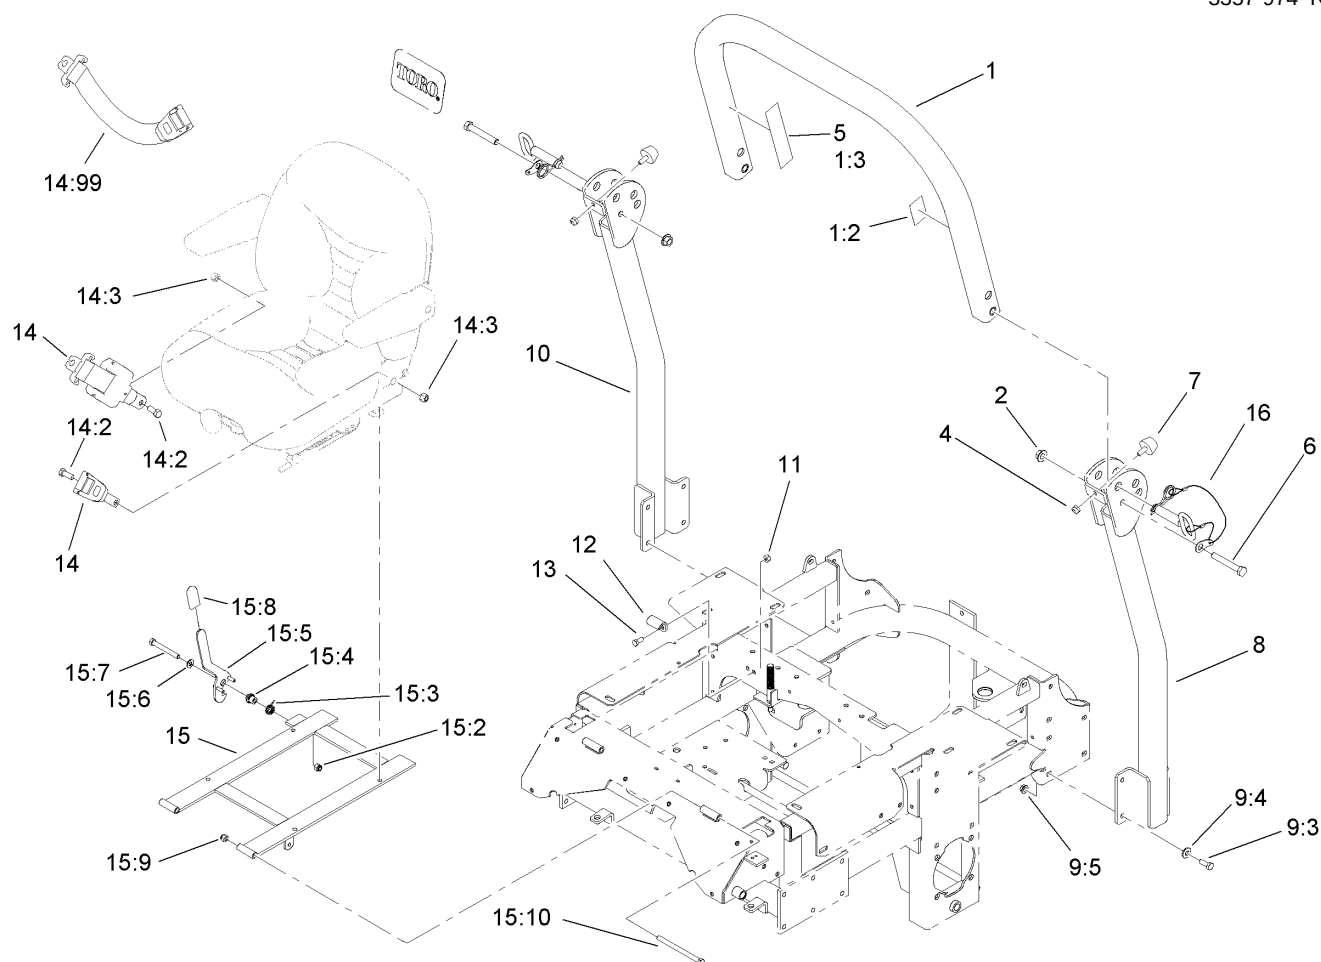

Roll-Over Protection System Assembly No. 110-0877

Ref	Part No.	Qty.	Description
21		1	Upper Tube ASM
1:2	107-2101	1	Decal-ROPS
1:3	107-2102	1	Decal-Warning, Folding ROPS
2	32128-23	2	Nut-HF
4	3296-73	2	Nut-Lock, NI
5	107-3069	1	Decal-Warning, Folding ROPS (Ce)
6	325-13	2	Screw-HH
7	109-2365	2	Bumper-Rubber (W/Stud)
28		1	Tube-Support, LH
19		1	Bag-Bolt, ROPS
9:3	323-6	8	Screw-HH
9:4	98-5975	8	Washer-Belleville
9:5	3290-357	8	Nut-HHF, Whiz
210		1	Tube-Support, RH
11	3296-29	2	Nut-Lock, NI
12	107-3058	1	Catch-Latch, Seat
13	322-3	2	Screw-HH
14	110-0883	1	Retractable Seatbelt Kit
14:2	3212-4	2	Screw-HH
14:3	3296-7	2	Nut-Lock
14:99	109-6226	1	Seat Belt Extension Kit
15	110-0874	1	Seatframe ASM
15:2	3296-39	1	Nut-Lock, NI


Ref	Part No.	Qty.	Description
15:3	107-0076	1	Spring-Torsion
15:4	107-0075	1	Bushing-Latch, Seat
15:5	107-3083	1	Latch ASM
15:6	3256-24	1	Washer-Flat
15:7	323-20	1	Screw-HH
15:8	103-4434	1	Grip-Lever
15:9	3296-39	2	Nut-Lock, NI
15:10	323-39	2	Screw-HH
16	103-4553	2	ROPS Fold Pin ASM

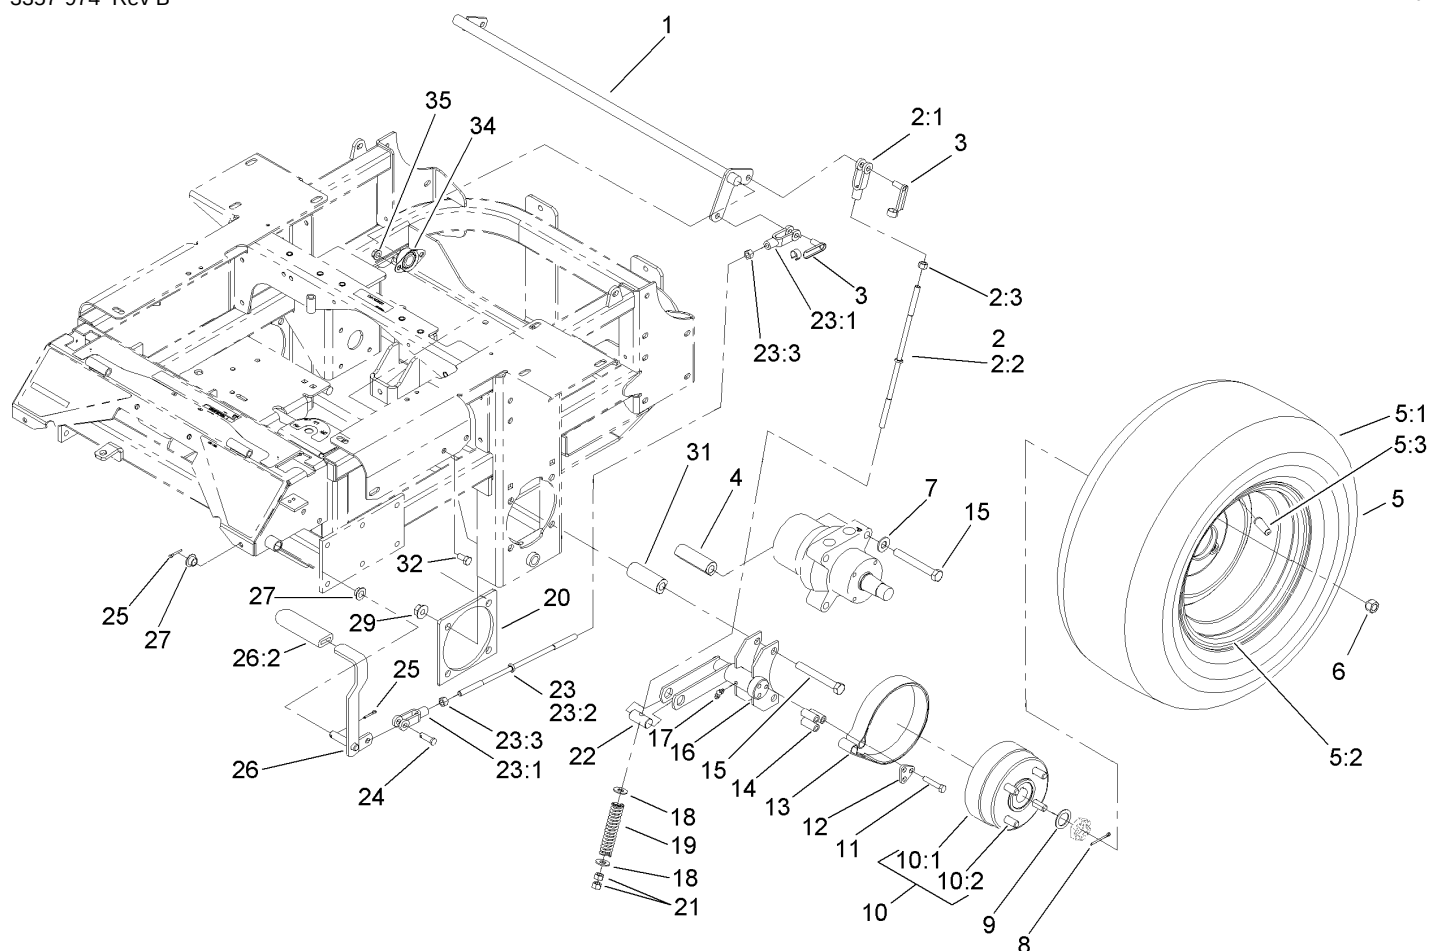

Parking Brake and Wheel Assembly

Ref	Part No.	Qty.	Description
1	1-632217-03	1	Shaft-Brake
2	108-5963	2	Brake Rod ASM
2:1	1-633131	1	Yoke-Linkage, Brake
2:2	108-5980	1	Rod, Brake
2:3	3219-3	1	Nut-Hex
3	103-2399	3	Pin-Spring, Clevis
4	114-1185	4	Spacer-Wheel, Long
5	1-633970	2	Wheel And Tire ASM
5:1	1-633993	1	Tire
5:2	1-633992	1	Wheel Rim
5:3	232-27	1	Stem-Valve
6	242-50	8	Nut-Lug
7	87-7270	4	Washer-Thrust
8	1-806800	2	Pin-Cotter
9	1-523157	2	Washer-Spacer
10	103-0590	2	Hub And Wheel ASM
10:1	103-0589	1	Wheel Hub ASM
10:2	1-633926	4	Stud-Wheel
11	322-9	6	Screw-HH
12	103-0374	2	Retainer-Band, Brake
13	103-0355	2	Band-Brake
14	103-0384	6	Spacer
15	325-18	8	Screw-HH
16	103-0352-03	2	Bracket-Brake


Ref	Part No.	Qty.	Description
17	1481	2	Fitting-Grease
18	3256-4	4	Washer-Flat
19	1-633454	2	Spring-Brake
20	103-3271-03	2	Plate-Reinforcement
21	3219-3	4	Nut-Hex
22	1-633144	2	Pin-Trunion
23	108-5962	1	Brake Rod ASM
23:1	1-633131	2	Yoke-Linkage, Brake
23:2	1-633477	1	Rod-Brake
23:3	3219-3	2	Nut-Hex
24	1-808285	1	Pin-Clevis
25	3272-10	2	Pin-Cotter
26	1-634500	1	Brake Lever ASM
26:2	1-633268	1	Grip-Lever, Brake
27	1-513140	2	Bearing-Control
29	32128-49	8	Nut-HHF
31	114-1184	4	Spacer-Wheel, Short
32	323-4	4	Screw-HH
34	1-633102	2	Bearing-Flange, Side
35	3290-357	4	Nut-HHF, Whiz

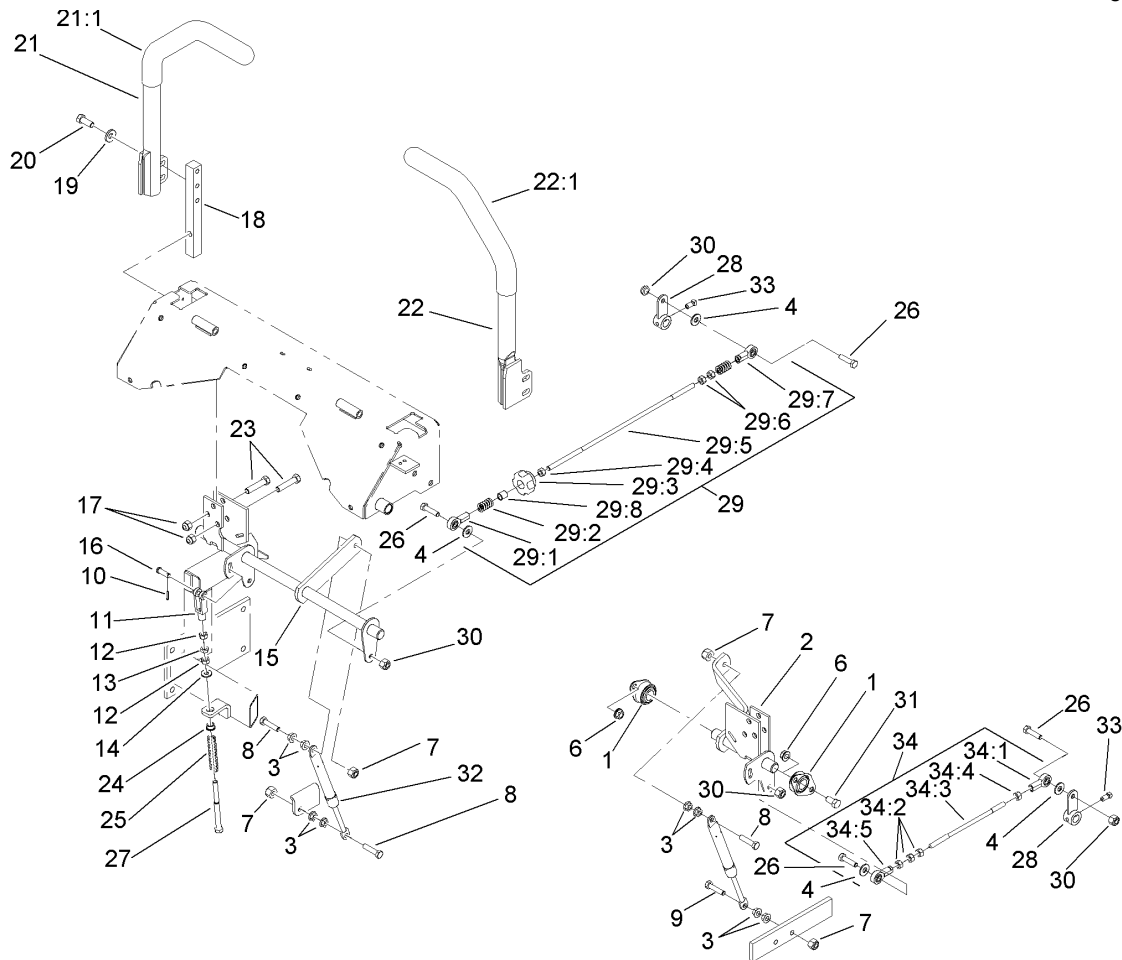

Hydro Control Assembly


Ref	Part No.	Qty.	Description
1	1-633102	4	Bearing-Flange, Side
2	107-3480	1	LH Motion Control ASM
3	32128-20	10	Nut-HF
4	3256-3	4	Washer-Flat
6	3290-357	6	Nut-HHF, Whiz
7	3296-29	4	Nut-Lock, NI
8	1-403180	3	Screw-HH
9	322-41	1	Screw-HH
10	3272-5	2	Pin-Cotter
11	1-303105	2	Yoke-Adjustable
12	3219-2	4	Nut-Hex
13	3220-2	2	Nut-Jam
14	3256-2	2	Washer-Flat
15	107-3481	1	RH Motion Control ASM
16	1-808280	2	Pin-Clevis
17	3296-39	6	Nut-Lock, NI
18	103-0407	2	Arm-Shaft, Control
19	98-5975	4	Washer-Belleville
20	323-6	4	Screw-HH
21	108-7237	1	RH Lever ASM
21:1	106-9987	1	Grip-Control, Motion
22	108-7238	1	LH Lever ASM
22:1	106-9987	1	Grip-Control, Motion
23	323-9	6	Screw-HH

Ref	Part No.	Qty.	Description
24	1-603735	2	Bushing-Flanged
25	1-603807	2	Spring-Return, Neutral
26	322-5	4	Screw-HH
27	1-603737	2	Bolt-Return, Neutral
28	107-3470-03	2	Hydraulic Control Arm ASM
29	107-3474	1	RH Control Rod ASM
29:1	1-543017	1	Balljoint-RH
29:2	1-323245	2	Spring-Compression
29:3	103-3060	1	Knob-Tracking
29:4	3219-2	1	Nut-Hex
29:5	107-3472	1	Rod-Control, RH
29:6	1-804524	2	Nut
29:7	1-633152	1	Balljoint-LH
29:8	103-1166	1	Spacer-Tube, Pump Link
30	3296-47	4	Nut-Lock, NI
31	323-4	6	Screw-HH
32	109-2339	2	Damper-Control, Motion
33	1-803022	2	Screw-Set
34	107-3475	1	LH Control Rod ASM
34:1	1-543017	1	Balljoint-RH
34:2	3219-2	3	Nut-Hex
34:3	107-3473	1	Rod-Control, LH
34:4	1-804524	1	Nut
34:5	1-633152	1	Balljoint-LH

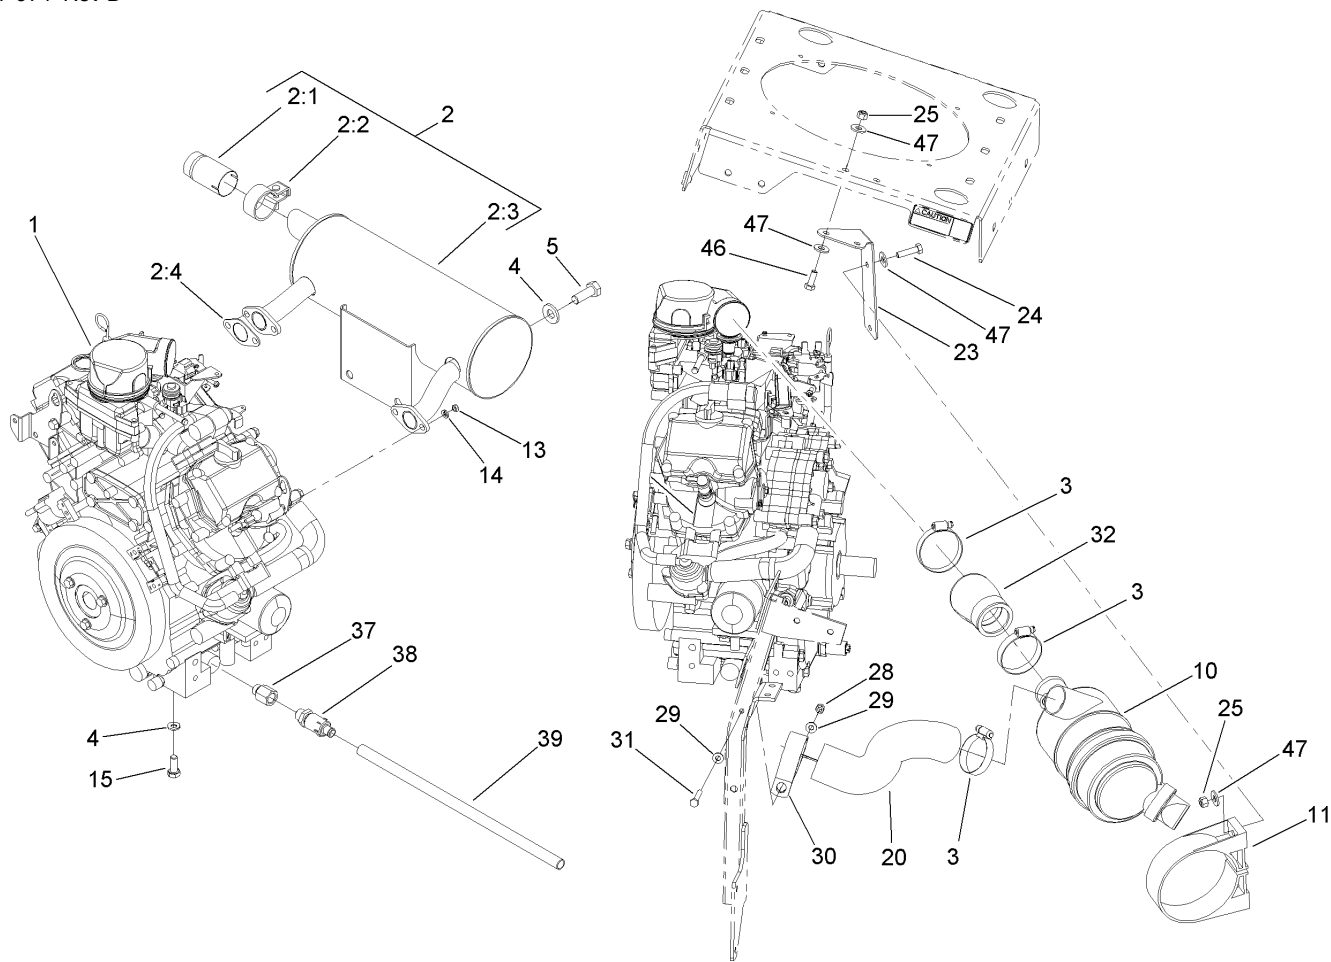


Engine, Muffler and Air Cleaner Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1		1	Engine-Kawasaki, Fd791D-As07	38	92-6877	1	Valve-Drain, Oil
2	105-1678	1	Muffler Kit (W/ Arrester)	39	106-7022	1	Tube-Drain, Oil
2:1	103-1511	1	Arrestor-Spark	46	322-4	2	Screw-HH
2:2	103-1512	1	Clamp-Muffler	47	3256-3	8	Washer-Flat
2:3	103-2759	1	Muffler				
2:4	103-1564	2	Gasket-Exhaust				
3	2412-42	3	Clamp-Hose				
4	98-5975	6	Washer-Belleville				
5	33115-020	2	Screw-HH				
10	95-5805	1	Air Cleaner ASM				
11	95-5806	1	Bracket-Mounting				
13	33013-00	2	Nut-Hex				
14	1-805004	2	Washer-Lock				
15	33115-025	4	Screw-HH				
20	110-6227	1	Hose-Air Cleaner, Inlet				
23	110-6226-03	1	Bracket-Mount, Ac				
24	322-6	2	Screw-HH				
25	3296-29	4	Nut-Lock, NI				
28	3296-42	1	Nut-Lock, NI				
29	3256-22	2	Washer-Flat				
30	110-6245	1	Clamp-R				
31	321-10	1	Screw-HH				
32	110-6222	1	Hose-Air Cleaner, Outlet				
37	109-0878	1	Adapter				

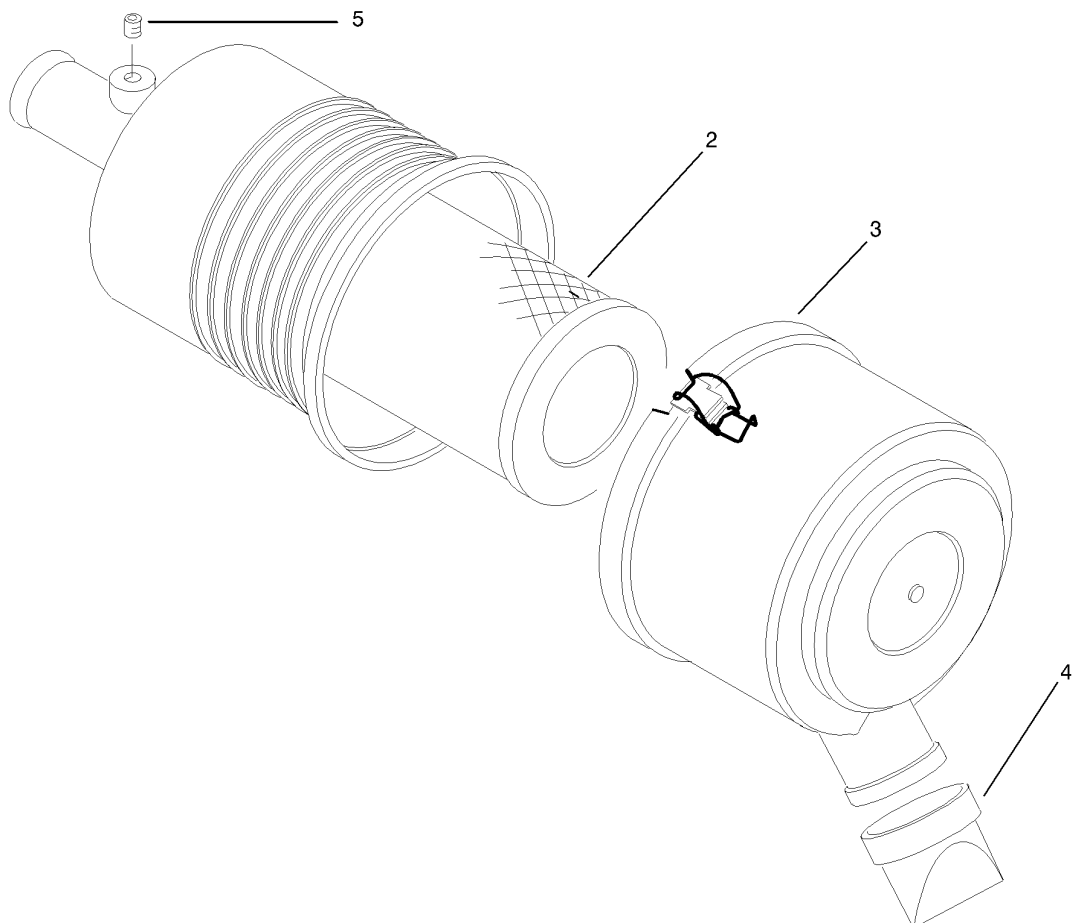


Air Cleaner Assembly No. 95-5805

Ref	Part No.	Qty.	Description
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

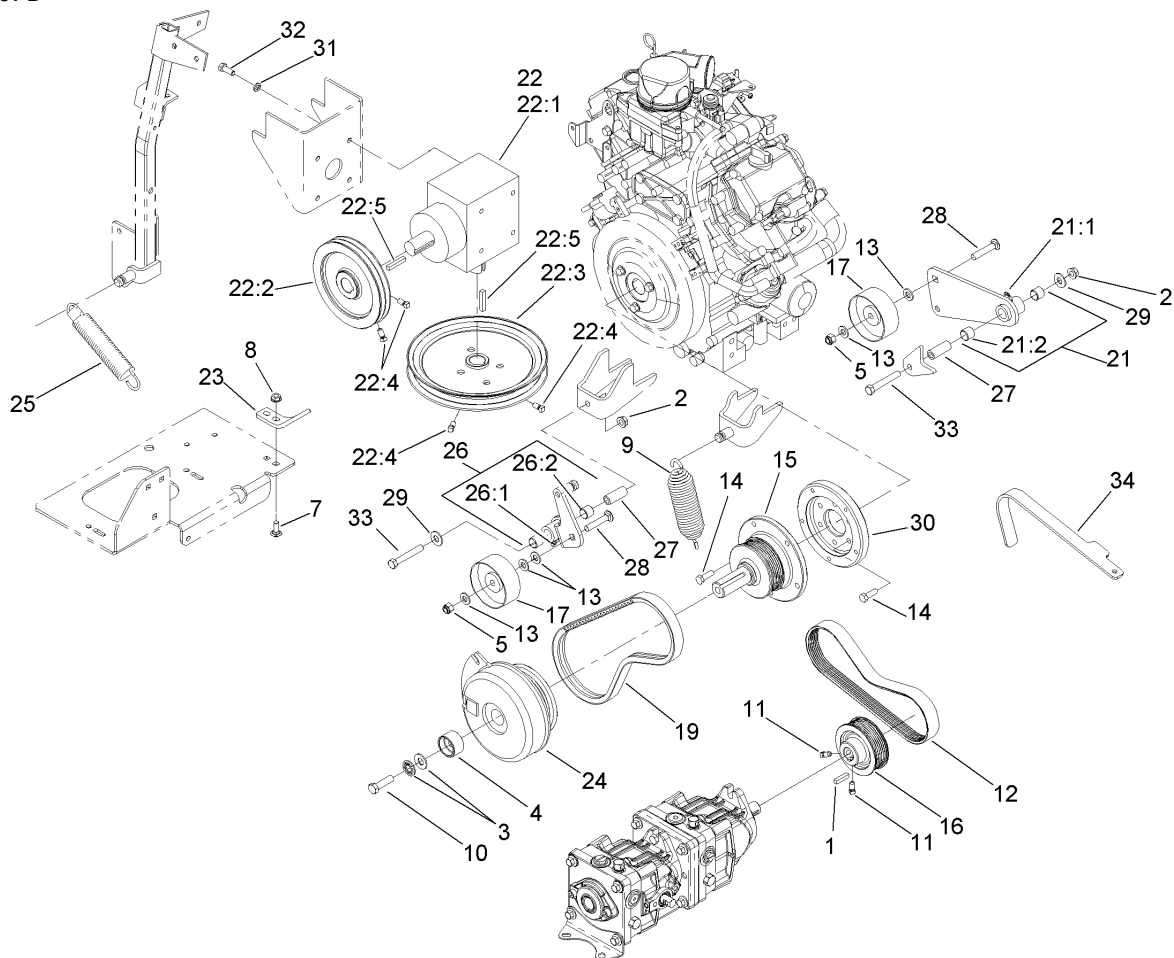


Hydro and Gearbox Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	5-0698	1	Key	22:4	1-803022	4	Screw-Set
2	3290-357	2	Nut-HHF, Whiz	22:5	67-7490	2	Key-Square
3	1-603610	2	Washer-Spring	23	110-6217	1	Bracket-Clutch Stop
4	110-0854	1	Retainer-Clutch	24	110-5799	1	Clutch-Electromagnetic
5	3296-39	2	Nut-Lock, NI	25	1-513308	1	Spring-Idler, Deck
7	3230-16	2	Screw-CARR	26	110-6215	1	Idler Arm ASM
8	32128-25	2	Nut-HF	26:1	1481	1	Fitting-Grease
9	109-0148	1	Spring-Extension	26:2	103-4681	2	Sleeve-Bearing
10	3212-6	1	Screw-HH	27	1-603044	2	Bushing
11	1-803022	2	Screw-Set	28	3231-6	2	Screw-CARR
12	107-9910	1	Belt-V	29	3256-4	2	Washer-Flat
13	3256-24	5	Washer-Flat	30	110-6249	1	Adapter-Shaft, Stub
14	33114-025	11	Screw-HH	31	3253-4	4	Washer-Lock
15	110-6248	1	Shaft-Stub	32	322-4	4	Screw-HH
16	110-3864	1	Pulley	33	323-12	2	Screw-HH
17	108-5910	2	Pulley-Flat	34	110-0876	1	Tool-Alignment, Pulley
19	110-5759	1	Belt-V				
21	110-6216	1	Idler Arm ASM				
21:1	1481	1	Fitting-Grease				
21:2	103-4681	2	Sleeve-Bearing				
22		1	Gearbox ASM				
22:1	110-5771	1	Gearbox-90 DEG				
22:2	110-3862	1	Pulley				
22:3	110-0892	1	Pulley				

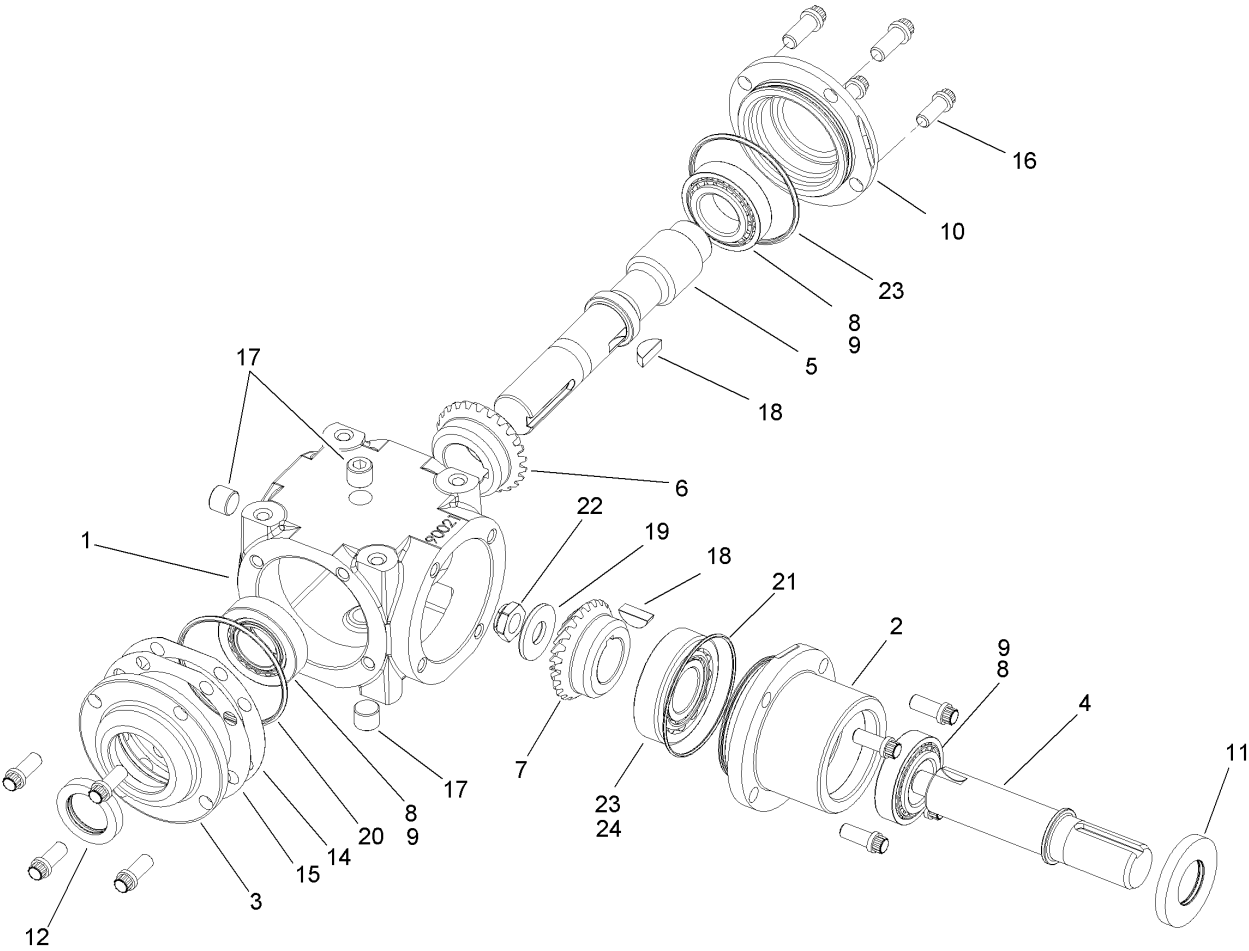


90 Degree Gearbox Assembly No. 110-5771

Ref	Part No.	Qty.	Description				
1	114-4413	1	Case				
2	110-0853	1	Housing-Pinion				
3	114-4414	1	Cap, End, Open				
4	110-0844	1	Shaft-Pinion				
5	114-4415	1	Shaft, Cross				
6	110-0847	1	Gear-Shaft, Cross				
7	110-0846	1	Gear-Pinion				
8	110-0848	3	Bearing-Cup				
9	110-0849	3	Bearing-Cone				
10	100-4574	1	Cap-End, Closed				
11	100-4575	1	Seal				
12	110-0850	1	Seal-Shaft, Cross				
14	100-4592	1	Shim-Blue, .005In				
15	100-4593	1	Shim-Green, .003In				
16	100-4578	12	Screw				
17	100-4579	3	Plug				
18	3257-33	2	Key-Woodruff				
19	100-4581	1	Washer				
20	100-4582	2	O-Ring				
21	110-0851	1	O-Ring				
22	110-0852	1	Nut Lock				
23	100-5817	1	Bearing-Cup				
24	100-5816	1	Bearing-Cone				

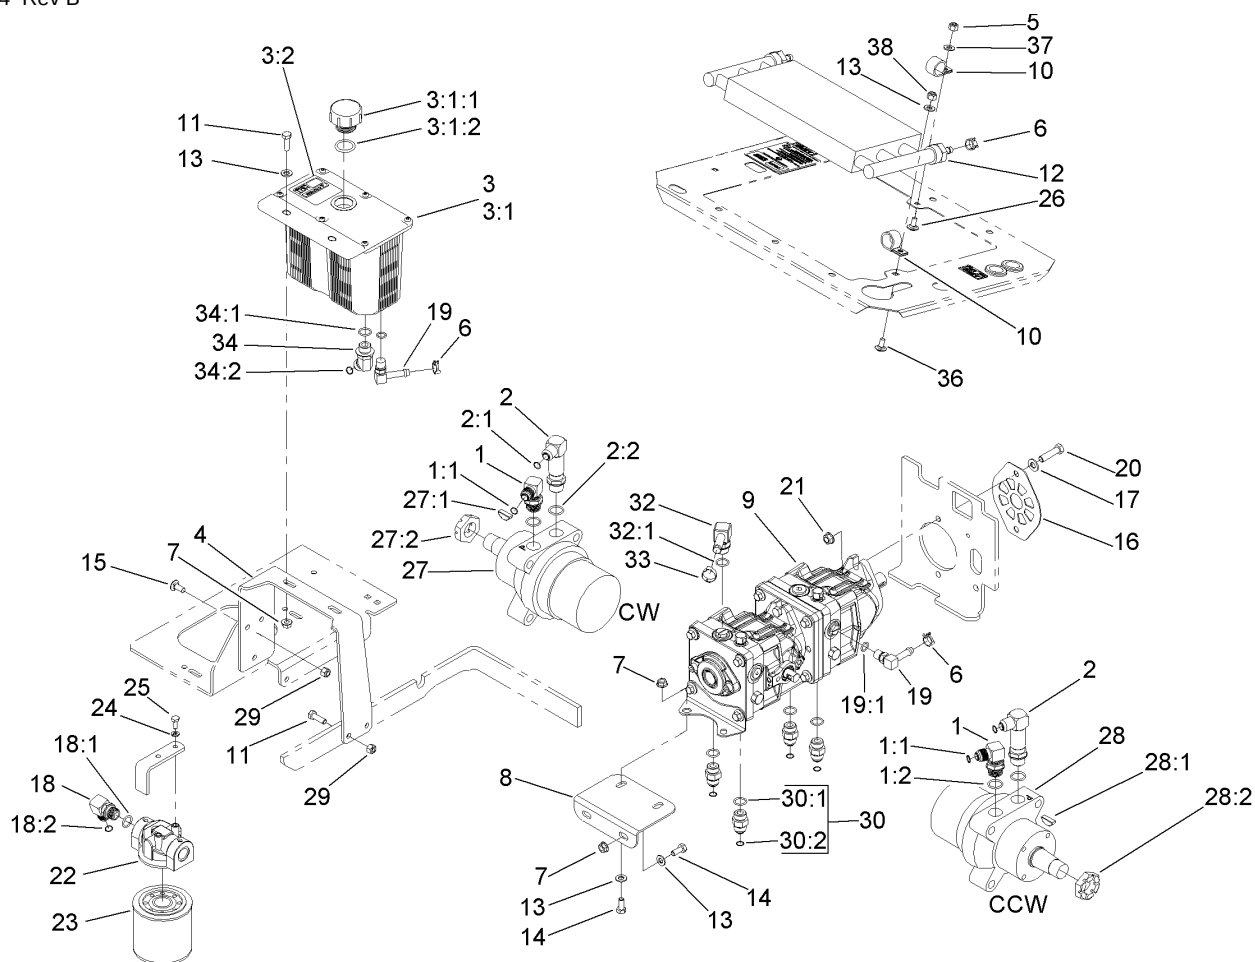

Hydraulic Tank, Motor and Pump Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-633605	2	Fitting-HYD, 90 DEG	17	3256-24	2	Washer-Flat
1:1	1-603992	1	O-Ring	18	103-2153	1	Fitting-90 DEG
1:2	237-80	1	O-Ring	18:1	1-603920	1	O-Ring
2	108-5323	2	Fitting-Elbow-90	18:2	1-603992	1	O-Ring
2:1	1-603992	1	O-Ring	19	109-6449	2	Fitting-Elbow, 90
2:2	237-80	1	O-Ring	19:1	1-603921	1	O-Ring
3	108-5315	1	Hydraulic Tank ASM	20	323-8	2	Screw-HH
3:1		1	Tank-Hydraulic	21	3290-357	2	Nut-HHF, Whiz
3:1:1	103-1948	1	Cap-Reservoir, HYD	22	86-9080	1	Head-Filter
3:1:2	103-1949	1	Gasket-Cap	23	67-8110	1	Cartridge-Filter, Oil
3:2	1-523552	1	Decal-Tank, HYD	24	1-805004	2	Washer-Lock
4	108-5352-03	1	Bracket-Tank, Hydraulic	25	321-3	2	Screw-HH
5	3296-42	1	Nut-Lock, NI	26	3229-11	1	Screw-CARR
6	110-6242	4	Clamp-Hose	27	107-9886	1	Motor-Wheel, Cw
7	32128-20	6	Nut-HF	27:1	3257-42	1	Key-Woodruff
8	107-3462-03	1	Bracket-Pump, Front	27:2	1-809036	1	Nut-HH
9	110-5757	1	Tandem Pump ASM	28	108-5917	1	Motor-Wheel, Ccw
10	110-0824	3	R-Clamp	28:1	3257-42	1	Key-Woodruff
11	322-5	3	Screw-HH	28:2	1-809036	1	Nut-HH
12	114-4403	1	Cooler-Oil, Hydro	29	3296-29	4	Nut-Lock, NI
13	3256-23	8	Washer-Flat	30	1-603990	4	Fitting-Straight
14	322-4	4	Screw-HH	30:1	1-603920	1	O-Ring
15	3230-23	3	Screw-CARR	30:2	1-603992	1	O-Ring
16	108-5367-03	1	Plate-Shield, Pump	32	108-5316	1	Fitting-Elbow, 90 DEG

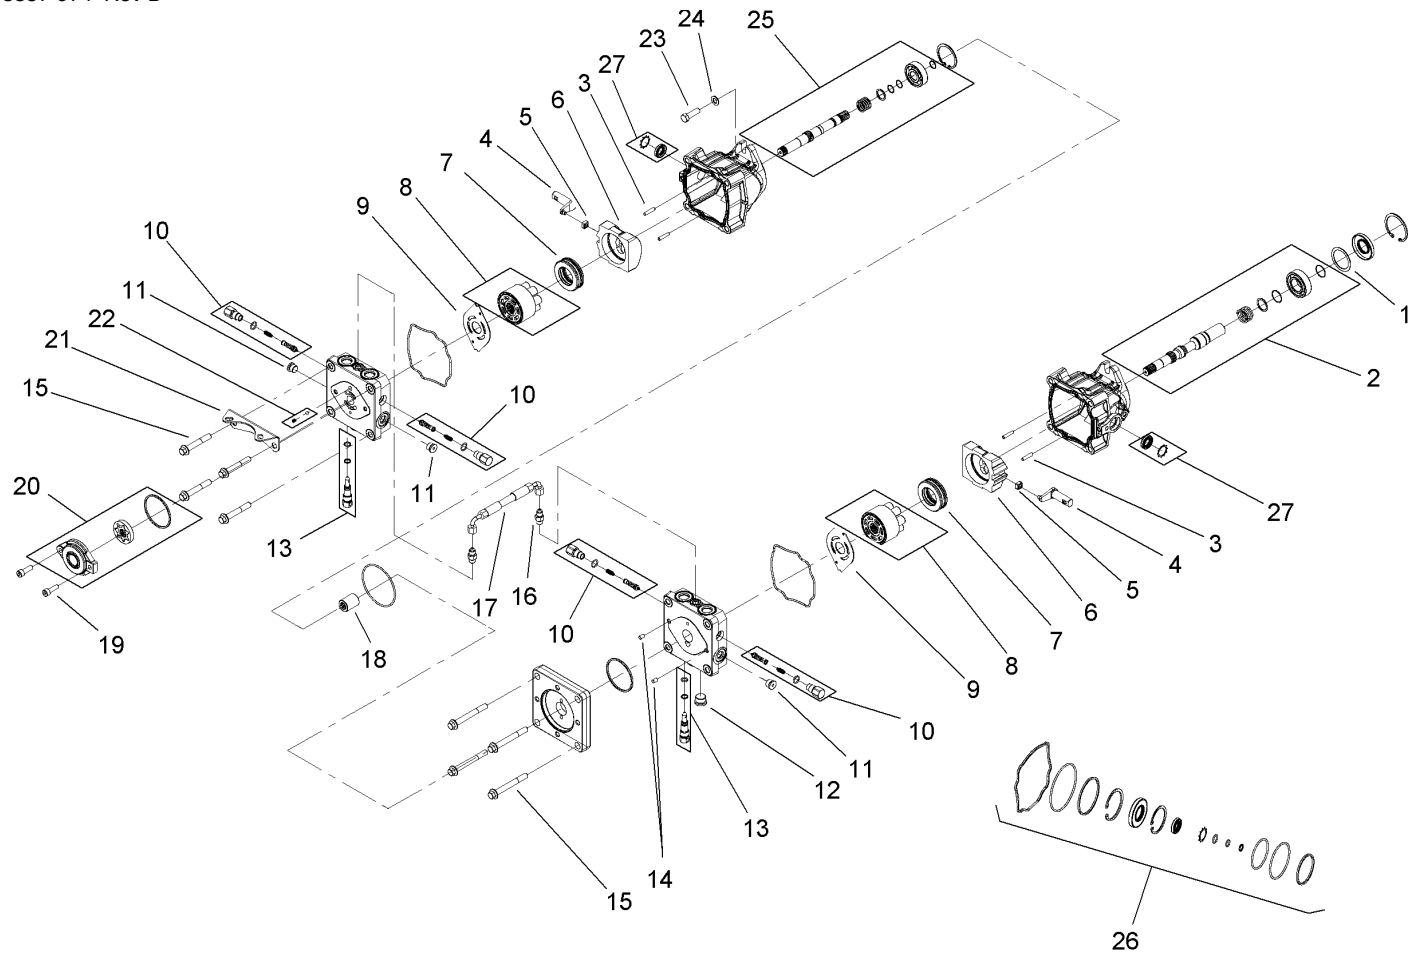

Tandem Pump Assembly No. 110-5757


Ref	Part No.	Qty.	Description
1	112-4168	1	Spacer
2	112-4151	1	Input Pump Shaft Kit
3	106-8753	4	Pin-Headless, Straight
4	112-4152	2	Arm-Trunnion
5	94-1910	2	Guide-Slot
6	112-4153	2	Swashplate
7	112-4154	2	Bearing-Thrust
8	108-2112	2	Cylinder Block Kit
9	108-6801	2	Plate-Valve
10	112-4155	4	Shock Valve Kit
11	104-2189	3	Plug-Thread, Straight
12	112-4156	1	Plug-Steel
13	106-8759	2	Bypass Valve Kit
14	104-2170	2	Pin
15	112-4157	8	Bolt
16	112-4158	2	Fitting-Straight
17	112-4159	1	Hose ASM
18	112-4160	1	Coupling
19	112-4161	2	Bolt
20	112-4162	1	Charge Pump Kit
21	112-4163	1	Bracket-Support, Pump
22	112-4164	1	Charge Relief Kit
23	112-4165	2	Bolt-HSH
24	112-4166	2	Washer

Ref	Part No.	Qty.	Description
25	112-4167	1	Second Pump Shaft Kit
26	112-4150	1	Overhaul Seal Kit
27	114-8155	2	Trunnion Seal Kit

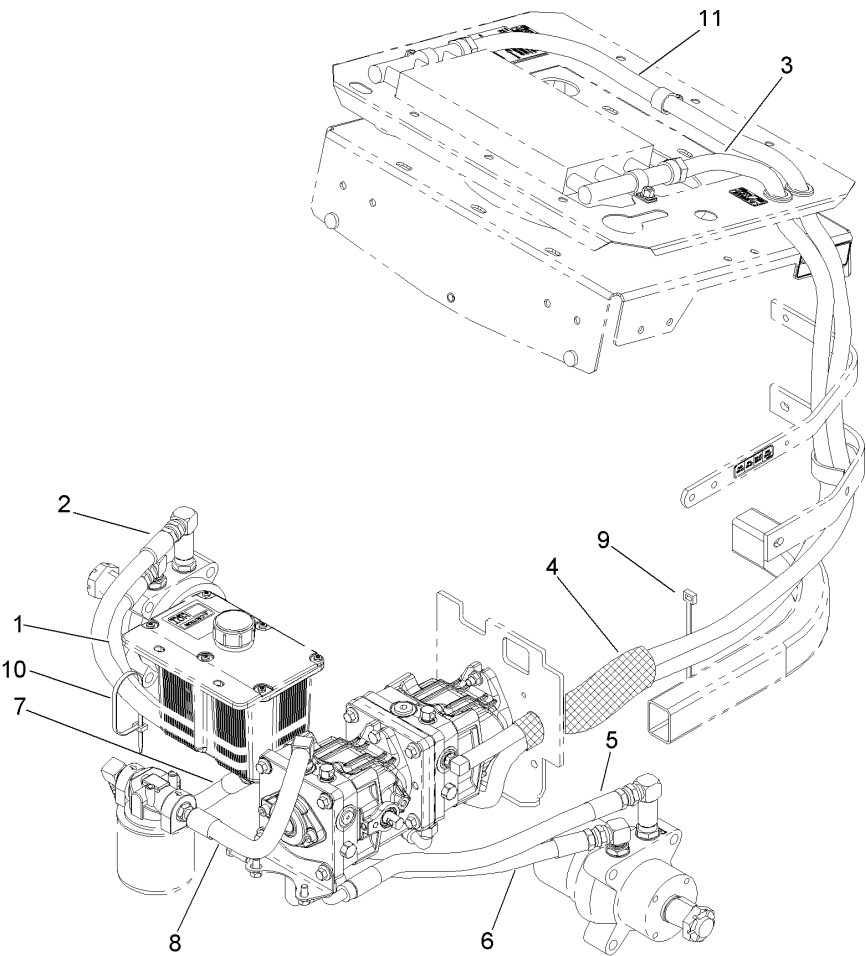


Hydraulic Hose Routing Assembly

Ref	Part No.	Qty.	Description				
1	110-5789	1	Hydraulic Hose ASM				
2	110-5790	1	Hydraulic Hose ASM				
3	110-6238	1	Hose-Hydraulic				
4	114-4406	1	Sleeve-Fabric				
5	110-5792	1	Hydraulic Hose ASM				
6	110-5791	1	Hydraulic Hose ASM				
7	110-3854	1	Hydraulic Hose ASM				
8	108-5374	1	Hydraulic Hose ASM				
9	1-303335	1	Tie-Plastic				
10	1-809066	1	Tie-Plastic				
11	110-6239	1	Hose-Hydraulic				

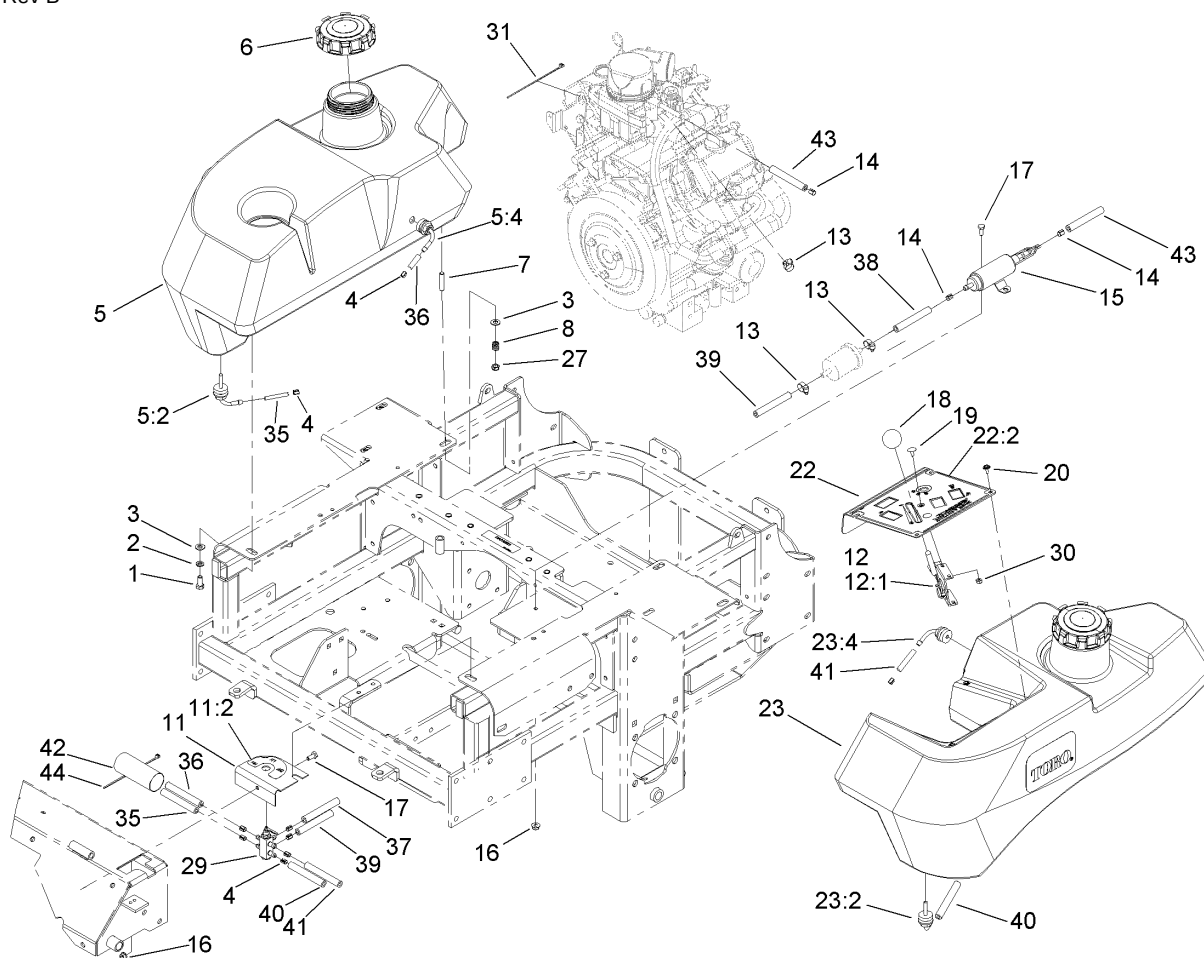

Fuel Tank, Lines and Filter Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	322-3	2	Screw-HH	23	110-0441	1	Tank-Fuel, LH
2	1-805005	2	Washer-Lock	23:2	103-2605	1	Fitting-Fuel, Bulkhead
3	3256-23	8	Washer-Flat	23:4	103-2615	1	Fitting-Fuel, Bulkhead
4	1-643293	10	Clamp-Hose, Fuel	27	3296-47	6	Nut-Lock, NI
5	110-0440	1	Tank-Fuel, RH	29	1-643234	1	Valve-Fuel, Dual Flow
5:2	103-2605	1	Fitting-Fuel, Bulkhead	30	3296-2	2	Nut-Lock
5:4	103-2615	1	Fitting-Fuel, Bulkhead	31	1-303287	1	Tie-Plastic
6	109-0346	2	Cap-Fuel, Gas	35	109-0307	1	Hose-Fuel
7	1-633023	6	Stud	36	110-5702	1	Hose-Fuel
8	1-633349	6	Spring-Tank, Fuel	37	109-0281	1	Hose-Fuel
11	110-6247	1	Fuel Valve Bracket ASM	38	114-4416	1	Hose-Fuel
11:2	107-2114	1	Decal-Valve, Fuel	39	109-0295	1	Hose-Fuel
12	110-6234	1	Throttle Control ASM	40	109-0305	1	Hose-Fuel
12:1	112-2334	1	Lever-Throttle	41	109-0299	1	Hose-Fuel
13	2412-108	3	Clamp-Worm	42	114-4406	1	Sleeve-Fabric
14	1-643277	3	Clamp-Hose, Fuel	43	114-4404	1	Hose-Fuel
15	109-0928	1	Pump-Fuel	44	1-303287	3	Tie-Plastic
16	32128-33	3	Nut-HF				
17	321-3	3	Screw-HH				
18	1-603175	1	Knob-Ball				
19	1-807513	2	Bolt-CARR				
20	109-2661	4	Screw-PPH				
22	110-6233	1	Control Panel ASM				
22:2	110-5772	1	Decal-Control Panel				

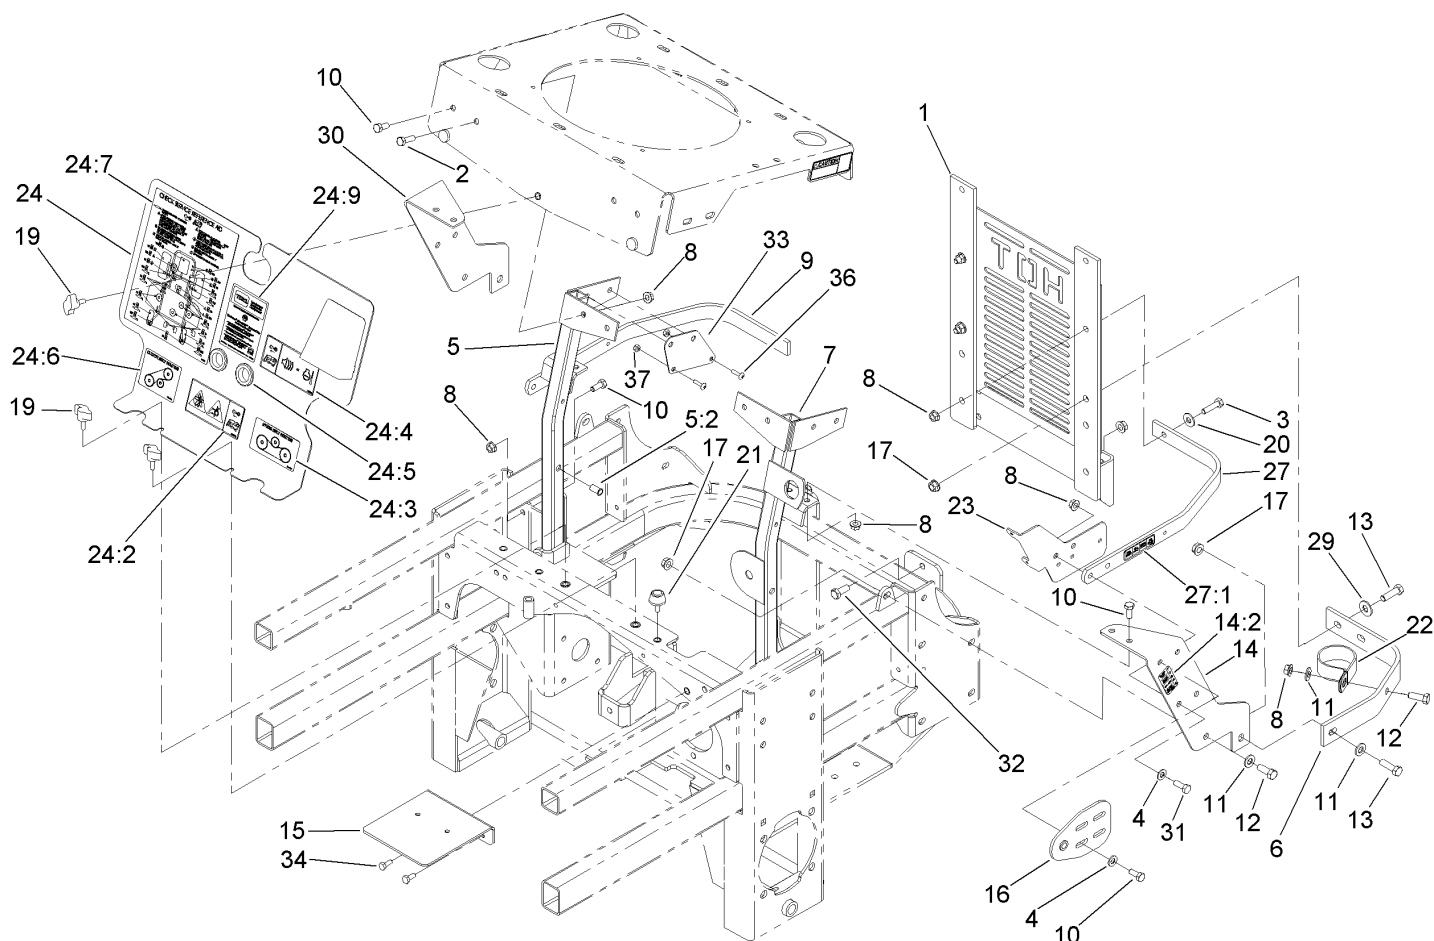

Engine Housing Assembly


Ref	Part No.	Qty.	Description
1	110-5779-03	1	Rear Guard ASM
2	322-5	2	Screw-HH
3	322-6	2	Screw-HH
4	3256-23	8	Washer-Flat
5	110-5793	1	RH Radiator Brace ASM
5:2	32148-11	1	Insert-Threaded
6	110-6235-03	2	Strap-Guard
7	110-6213-03	1	LH Radiator Brace ASM
8	32128-20	22	Nut-HF
9	1-633897-03	1	Rib-Top
10	322-3	14	Screw-HH
11	3256-24	5	Washer-Flat
12	323-6	3	Screw-HH
13	323-7	4	Screw-HH
14	110-5795	1	LH Support Bracket ASM
14:2	110-5794	1	Decal-Fuse
15	110-6230-03	1	Bracket-Mount, Pump
16	108-5345-03	2	Hood Pivot Plate ASM
17	3290-357	9	Nut-HHF, Whiz
19	98-8332	3	Knob
20	3256-3	2	Washer-Flat
21	109-2365	2	Bumper-Rubber (W/Stud)
22	110-6245	1	Clamp-R
23	110-5798-03	1	Bracket-Relay/Fuse

Ref	Part No.	Qty.	Description
24	110-6219	1	Front Shield ASM
24:2	110-3853	1	Decal-Danger, Rotating Devices
24:3	110-6220	1	Decal-Routing, Hydro Belt
24:4	110-3852	1	Decal-Buzzer, Warning
24:5	100-3815	2	Grommet-Rubber
24:6	110-6221	1	Decal-Routing, Clutch Belt
24:7	110-3851	1	Decal-Check, Service
24:9	104-2449	1	Decal-Coolant
27	110-5797	1	Strap-Top W/Decal
27:1	1-633897-03	1	Rib-Top
29	3256-4	2	Washer-Flat
30	108-5339-03	1	Bracket-Support, RH
31	322-4	4	Screw-HH
32	323-5	2	Screw-HH
33	110-5783-03	1	Plate-Ecm Mount
34	321-3	2	Screw-HH
36	1-803075	2	Screw-Head, Truss
37	3296-2	2	Nut-Lock

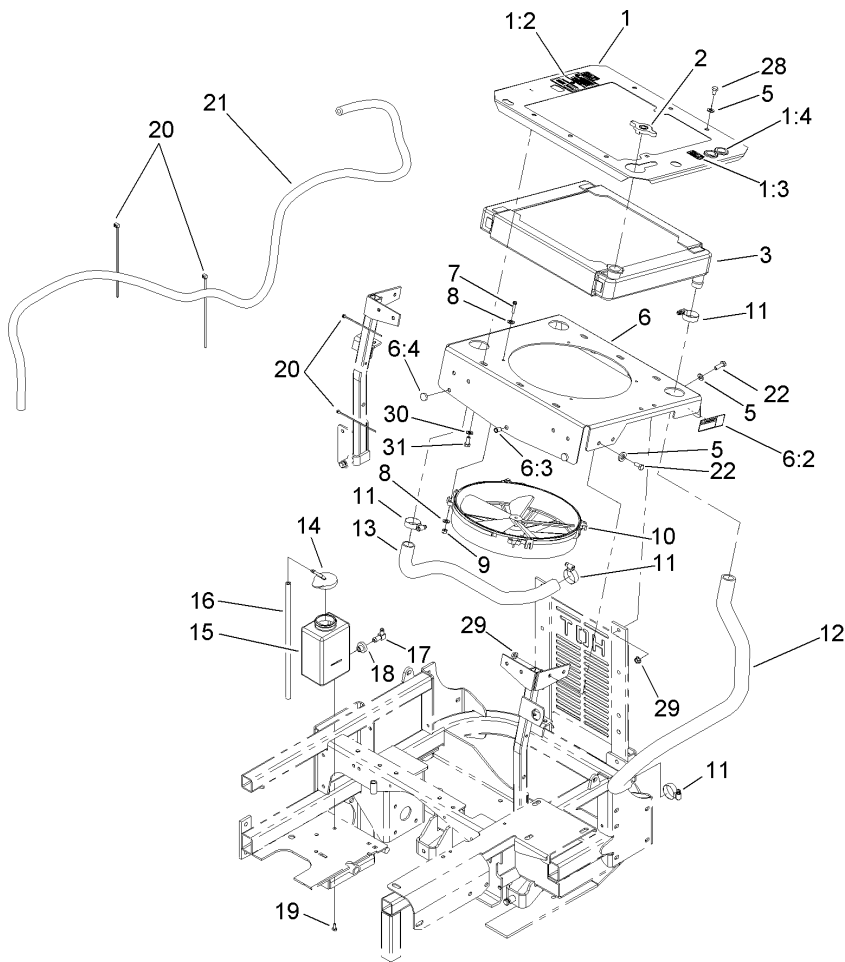


Cooling System Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110-6208	1	Plate-Radiator, Top	20	1-303287	5	Tie-Plastic
1:2	65-2690	2	Decal-Surface, Hot	21	110-7503	1	Hose-Fuel
1:3	104-2449	1	Decal-Coolant	22	322-4	6	Screw-HH
1:4	100-3815	2	Grommet-Rubber	28	322-1	6	Screw-HH
2	1-643161	1	Cap-Radiator	29	32128-20	6	Nut-HF
3	103-1046	1	Radiator-Mount	30	3256-3	6	Washer-Flat
5	3256-23	12	Washer-Flat	31	322-2	6	Screw-HH
6	110-6206	1	Plate-Radiator, Bottom				
6:2	1-643253	2	Decal-Fan, Radiator				
6:3	32148-6	1	Insert-Nut				
6:4	1-513658	2	Bumper				
7	1-803067	4	Screw				
8	3256-16	8	Washer-Flat				
9	1-804254	4	Nut				
10	1-633831	1	Fan				
11	1-633989	4	Clamp-Hose				
12	110-6231	1	Hose-Radiator, Outlet				
13	103-0074	1	Hose-Inlet, Radiator				
14	1-643164	1	Cap-Tank, Overflow				
15	1-643163	1	Tank-Overflow				
16	1-603954	1	Hose-Line, Fuel				
17	1-643259	1	Fitting-Elbow				
18	1-513645	1	Bushing-Valve, Fuel				
19	321-2	2	Screw-HH				

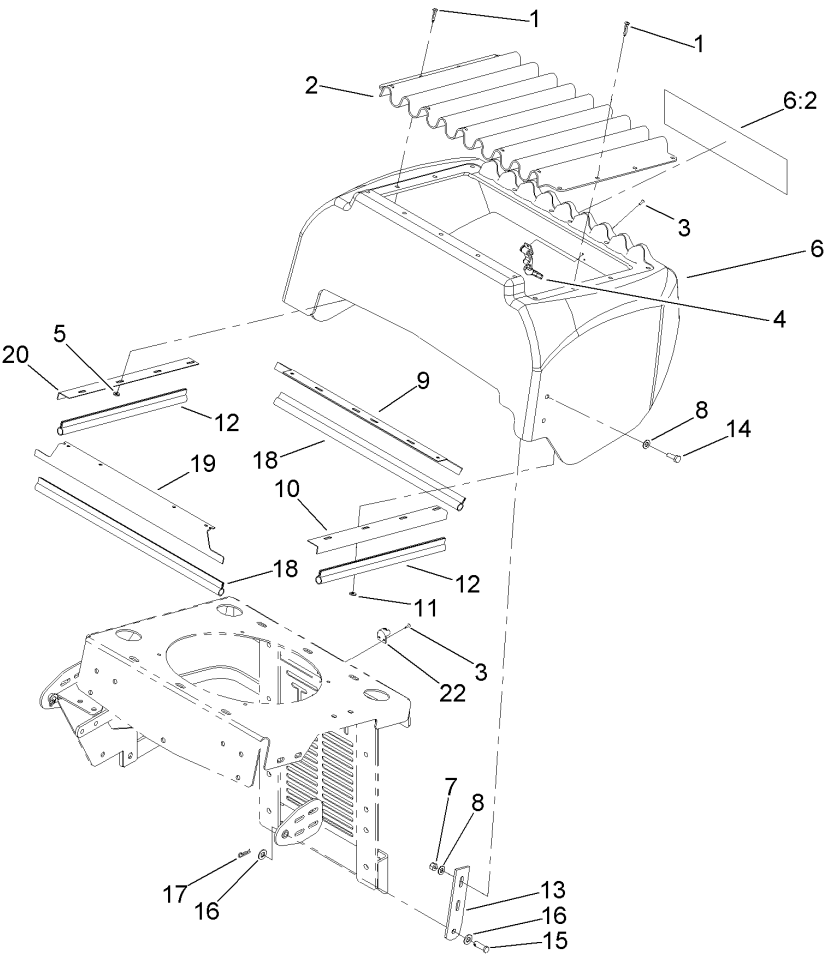


Hood Assembly

Ref	Part No.	Qty.	Description				
1	1-803072	17	Rivet				
2	1-633864-03	1	Screen-Radiator				
3	923786	4	Rivet				
4	1-643188	1	Latch-Rubber				
5	1-303435	4	Washer-Spring				
6	110-6218	1	Hood ASM				
6:2	106-7456	1	Decal				
7	3296-29	4	Nut-Lock, NI				
8	3256-23	8	Washer-Flat				
9	1-643108-03	1	Angle-Radiator, Bottom				
10	1-643105-03	1	Angle-Radiator, LH				
11	3256-14	12	Washer-Flat				
12	1-643186	2	Seal-Trim				
13	108-5337-03	2	Plate-Hinge, Hood				
14	322-4	4	Screw-HH				
15	1-808285	2	Pin-Clevis				
16	3256-24	4	Washer-Flat				
17	1-806003	2	Pin-Hair				
18	1-643187	2	Seal-Trim				
19	1-643107-03	1	Angle-Radiator, Top				
20	1-643106-03	1	Angle-Radiator, RH				
22	1-643189	1	Keeper-Latch, Rubber				

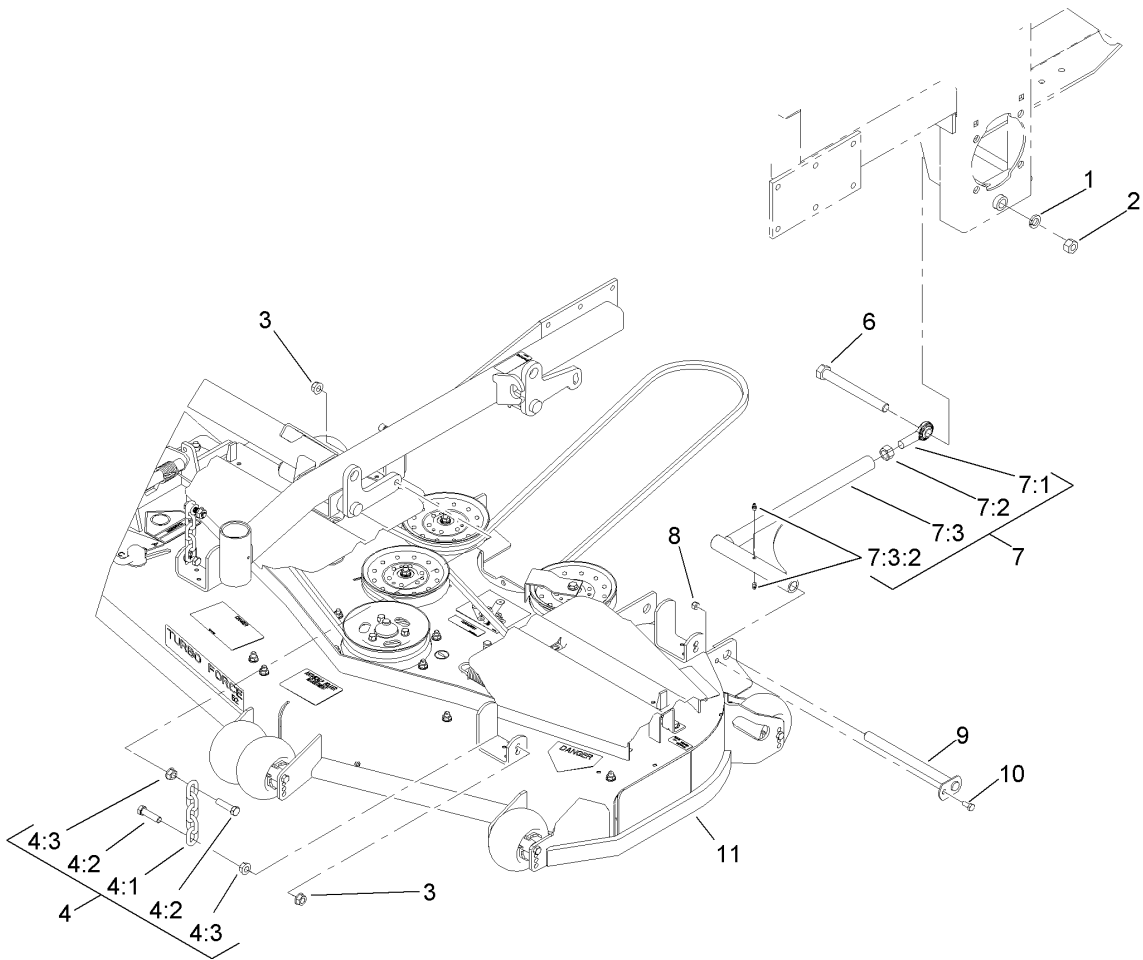

Deck Connection Assembly


Ref	Part No.	Qty.	Description				
1	3253-8	2	Washer-Lock				
2	3217-11	2	Nut-Hex				
3	32128-37	8	Nut-HF				
4	103-9792	4	Deck Chain ASM				
4:1	1-633447	1	Chain-Lift, Deck				
4:2	103-1898	2	Screw-HH				
4:3	32128-37	2	Nut-HF				
6	327-11	2	Screw-HH				
7	108-5969	2	Strut ASM				
7:1	1-633029	1	Balljoint-Spherical				
7:2	3219-6	1	Nut-Hex				
7:3		1	Strut-Deck				
7:3:2	109-1380	2	Fitting-Grease				
8	3296-29	2	Nut-Lock, NI				
9	1-632199-01	2	Pin-Strut				
10	322-3	2	Screw-HH				
11		1	Deck ASM				

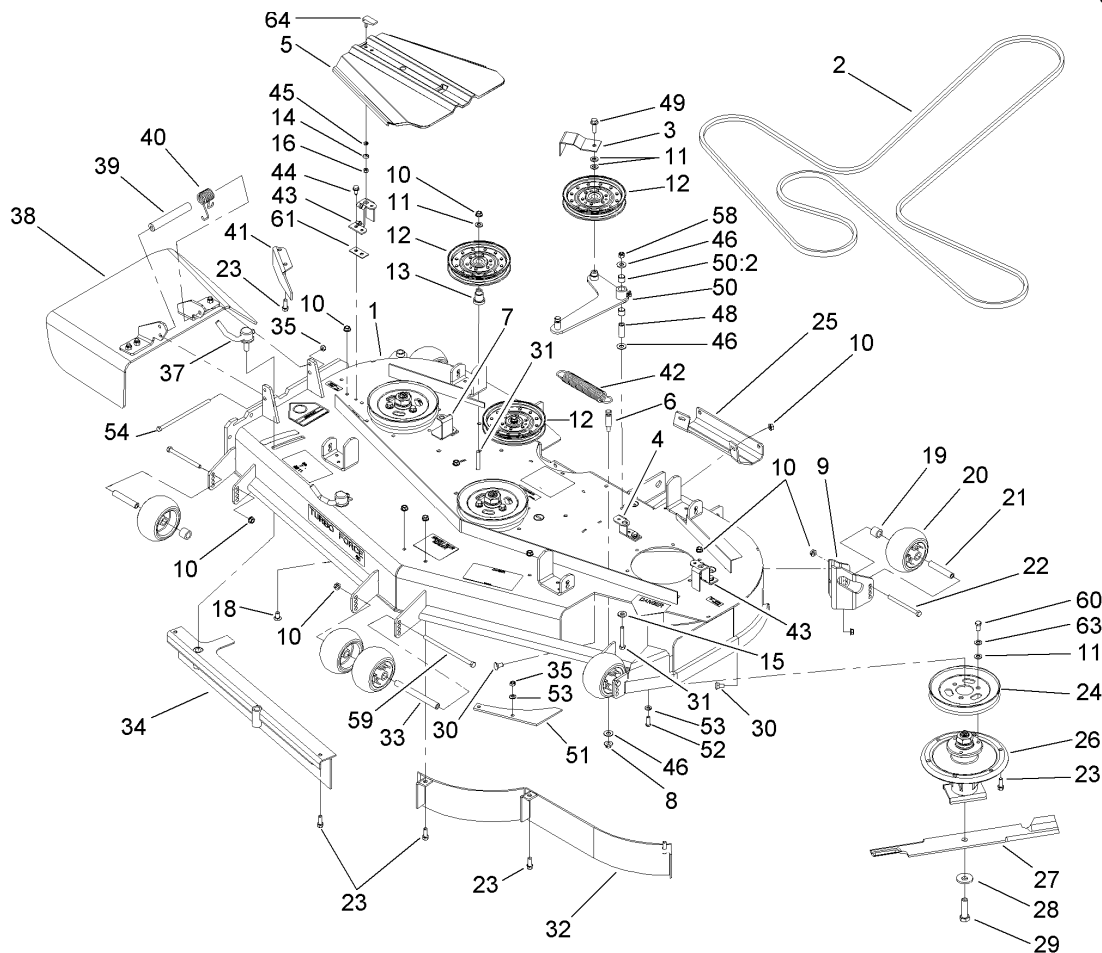

Deck Assembly


Ref	Part No.	Qty.	Description
1	108-5945	1	Deck Decal ASM
2	108-5915	1	Belt-V
3	108-7220-01	1	Guide-Belt
4	108-2177-01	1	Bracket-Cover, Tall
5	112-8664	2	Cover-Belt
6	110-0801	1	Pin-Threaded, Spring Anchor
7	108-4122-01	1	Bracket-Cover
8	32128-19	1	Nut-HF
9	106-7354-01	1	Mount-Wheel, LH
10	3290-357	43	Nut-HHF, Whiz
11	3256-24	13	Washer-Flat
12	1-633109	3	Idler-Flat
13	106-3214	2	Mount-Pulley
14	106-6778	2	Bushing-Latch, Swell
15	98-5975	1	Washer-Belleville
16	1-804254	2	Nut
18	3231-21	1	Screw-CARR
19	98-7913	4	Tube-Spacer
20	1-603299	6	Roller-Scalp, Anti
21	98-7912	4	Tube-Spinner
22	323-23	4	Screw-HH
23	92-1624	24	Screw
24	105-7734	3	Pulley
25	105-8792-01	1	Plate-Skid

Ref	Part No.	Qty.	Description
26	112-8698	3	Spindle ASM
27	105-7718-03	3	Blade-Hi Flow
28	103-0865	3	Washer-Blade Bolt, Heavy
29	51-4060	3	Screw-Blade
30	3231-1	11	Screw-CARR
31	323-12	3	Screw-HH
32	105-7657-01	1	Baffle ASM
33	98-5967	1	Spacer-Wheel
34	105-7669-01	1	Baffle ASM
35	3296-29	3	Nut-Lock, NI
37	107-1664	2	Lever ASM
38	108-2792	1	Rubber Deflector ASM
39	105-4622	1	Spacer
40	108-4052	1	Spring-Torsion
41	106-3216-01	1	Baffle-Discharge
42	110-0818	1	Spring-Extension
43	108-4121-01	2	Bracket-Cover
44	32144-70	4	Screw-HWHTF
45	99-3058	2	Washer
46	3256-4	3	Washer-Flat
48	1-603044	1	Bushing
49	3234-24	1	Screw-HHF
50	108-5949	1	Deck Idler Arm ASM
50:2	103-4681	2	Sleeve-Bearing

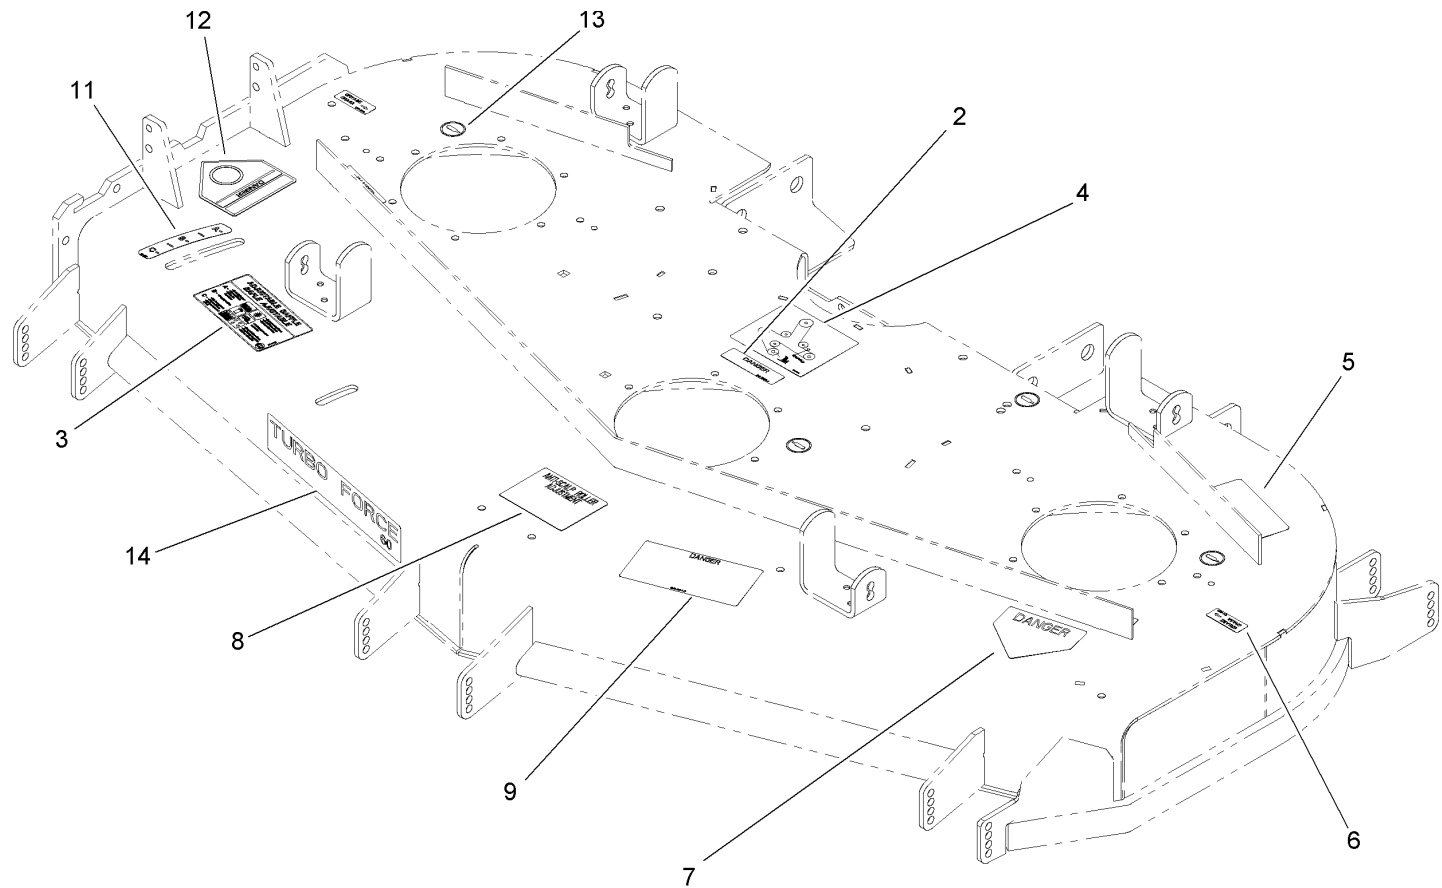

Deck Decal Assembly No. 108-5945


Ref	Part No.	Qty.	Description				
2	98-5954	3	Decal-Cover, Missing				
3	110-2068	1	Decal-Adjustment, Baffle				
4	108-5981	1	Decal-Router, Belt				
5	68-8340	1	Decal-Torque				
6	107-1613	2	Decal-Grease				
7	1-403005	1	Decal-Danger				
8	105-7798	1	Decal-Scalp, Anti				
9	66-1340	1	Decal-Danger				
11	110-2067	1	Decal-Setting, Baffle				
12	54-9220	1	Decal-Danger				
13	58-6520	4	Decal-Grease				
14	107-1619	1	Decal				

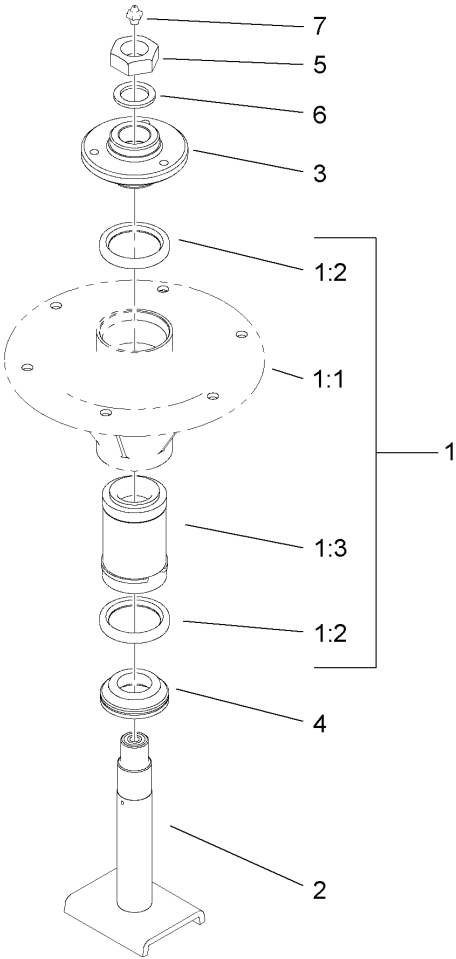

Spindle Assembly No. 112-8698


Ref	Part No.	Qty.	Description				
② 1		1	Spindle Bearing ASM				
② 1:1		1	Housing-Spindle				
1:2	253-154	2	Seal-Oil				
1:3	71-2530	1	Bearing/Spacer Kit				
2	110-3285	1	Spindle Shaft ASM				
3	114-1161	1	Hub-Spline				
4	69-6950	1	Spacer-Shaft, Spindle				
5	3296-49	1	Nut-Lock, NI				
6	3-8514	1	Washer-Thrust				
7	302-2	1	Fitting-Grease				

29

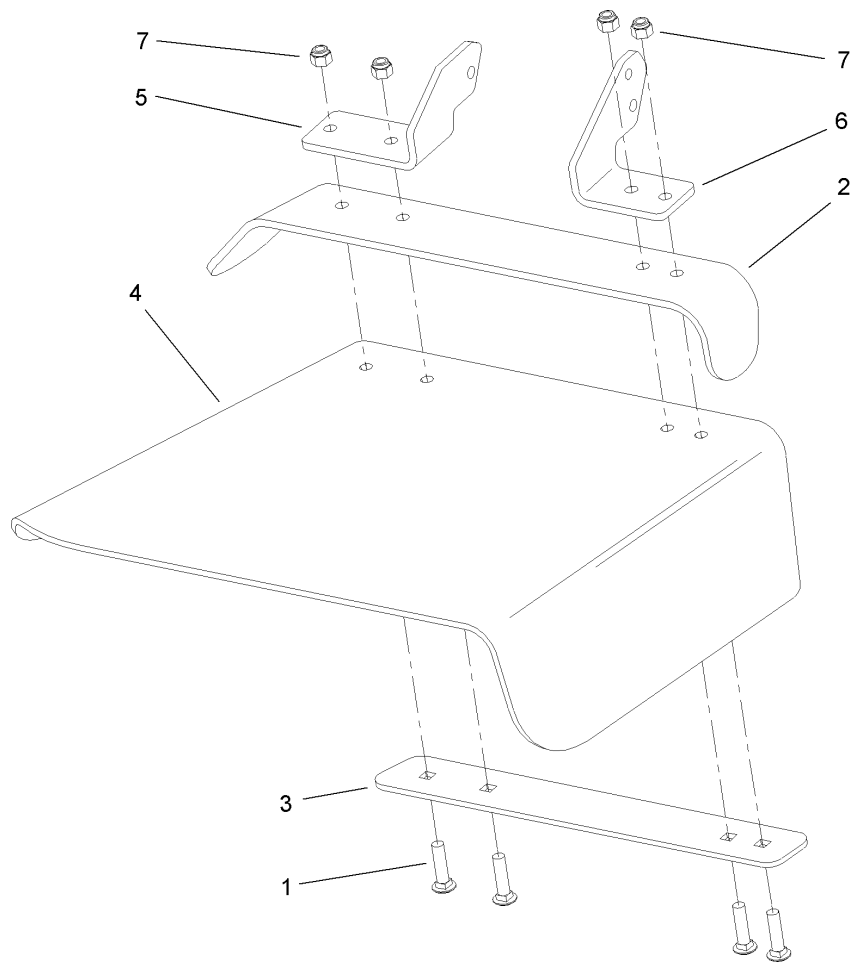

Rubber Deflector Assembly No. 108-2792


Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	106-3246-01	1	Deflector				
3	106-3248-03	1	Strap-Discharge				
4	108-5029	1	Deflector-Rubber				
5	108-4059-01	1	Plate-Hinge, Rear				
6	106-3253-01	1	Plate-Hinge, Front				
7	3296-39	4	Nut-Lock, NI				

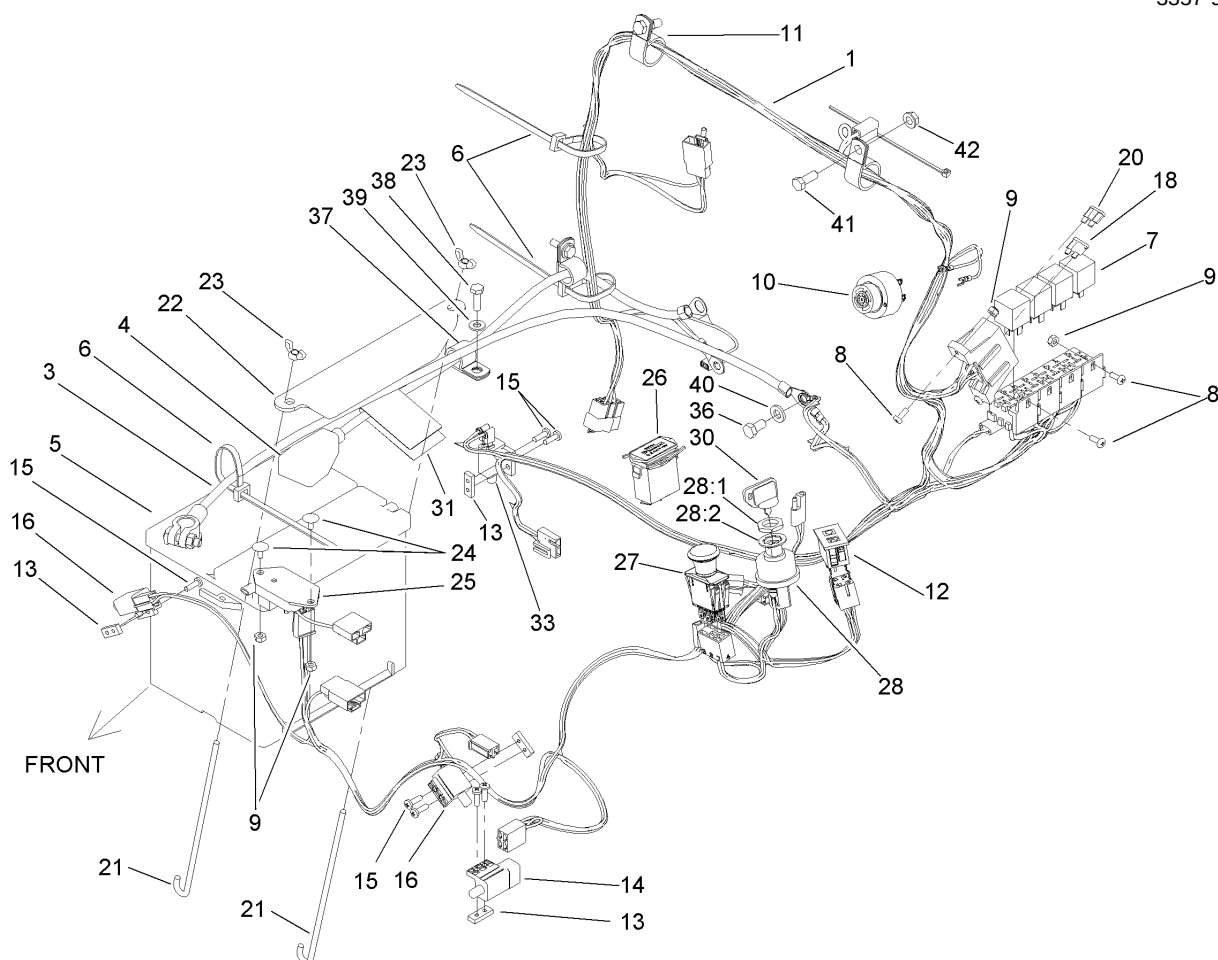

Electrical Assembly


Ref	Part No.	Qty.	Description
1	112-1796	1	Harness-Wire
3	110-5786	1	Cable-Battery, Negative
4	110-5775	1	Cable-Battery, Positive
5	106-5187	1	Battery
6	1-303335	7	Tie-Plastic
7	1-643275	4	Relay
8	1-803071	4	Screw
9	3296-2	6	Nut-Lock
10	103-0205	1	Alarm-Tone, Dual
11	2412-74	2	R-Clamp
12	110-5739	1	Lamp-Warning
13	1-633181	4	Plate-Tapped
14	1-633111	1	Switch
15	3290-500	8	Screw-PPH
16	1-513051	2	Switch-Open, Normally
18	218-578	1	Fuse-10 Amp
20	109103	2	Fuse-30 Amp
21	103-1312	2	Bolt-Holddown
22	103-1311-03	1	Holddown-Battery
23	1-543792	2	Wingnut
24	1-807513	2	Bolt-CARR
25	103-5218	1	Module-Delay, Seat
26	1-513374	1	Meter-Hour
27	103-5221	1	Switch-PTO

Ref	Part No.	Qty.	Description
28	104-2541	1	Switch ASM
28:1	218-461	1	Nut-HH
28:2	3254-5	1	Washer-Tooth
30	63-8360	2	Key-Ignition
31	107-9309	1	Decal-Instructions, Charging
33	1-513152	1	Switch-Closed, Normally
36	33114-016	1	Screw-HH
37	1-633396	1	Clip-Loom
38	321-5	1	Screw-HH
39	3256-22	1	Washer-Flat
40	3256-23	1	Washer-Flat
41	322-5	2	Screw-HH
42	32128-20	2	Nut-HF

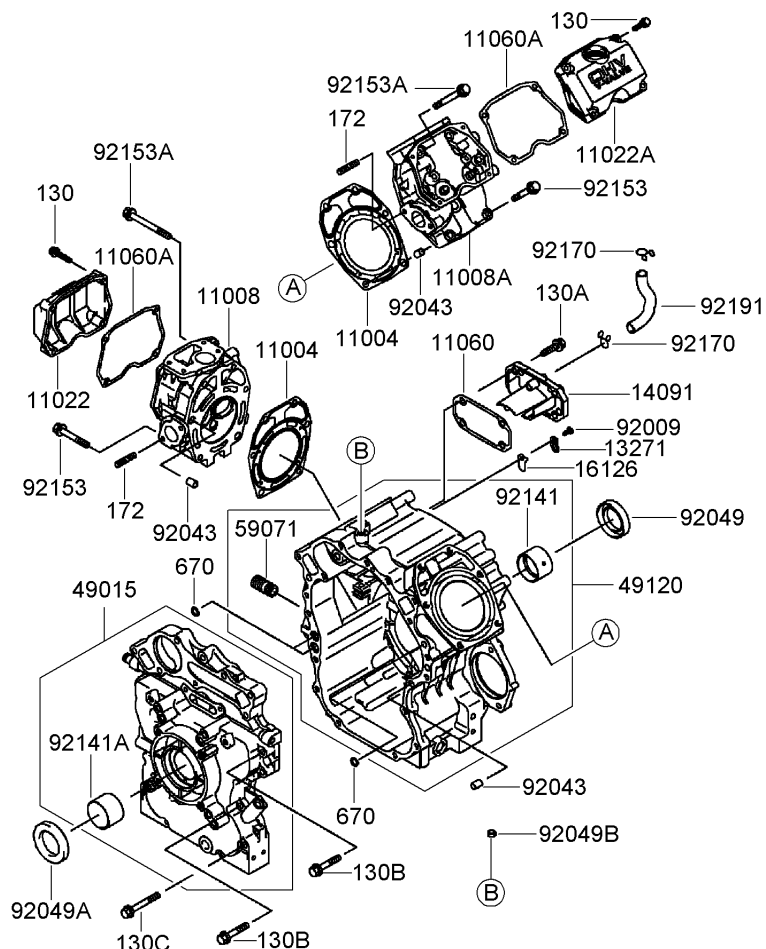


Cylinder and Crankcase Assembly Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
11004	11004-2142	2	Gasket-Head	130	130G0630	8	Bolt-Flanged (6X30)
11008	11008-2145	1	Head-Cylinder	130A	130G0830	4	Bolt-Flanged (8X30)
11008A	11008-2146	1	Head-Cylinder	130B	130G0845	6	Bolt-Flanged (8X45)
11022	11022-2072	1	Case-Rocker	130C	130G0860	4	Bolt-Flanged (8X60)
11022A	11022-2073	1	Case-Rocker	172	172G0822	4	Bolt-Stud (8X22)
11060	11060-2466	1	Gasket-Breather	670	670B2011	3	O-Ring (11Mm)
11060A	11060-2470	2	Gasket-Case, Rocker				
13271	13271-2105	2	Plate				
14091	14091-2064	1	Cover-Breather				
16126	16126-2225	2	Valve-Breather				
49015	49015-6232	1	Cover-Crankcase				
49120	49120-6134	1	Crankcase				
59071	59071-2079	1	Joint				
92009	92009-2308	2	Screw				
92043	92043-1037	6	Pin				
92049	92049-2242	1	Seal-Oil, Isd (38X58X11) Ae				
92049A	92049-2243	1	Seal-Oil, Isd (42X65X9) Ae				
92049B	92049-2255	1	Seal-Oil, Vc (8X12X2.5)				
92141	92141-2118	1	Bearing-Plane				
92141A	92141-2119	1	Bearing-Plane				
92153	92153-2131	4	Bolt (8X60)				
92153A	92153-2132	8	Bolt (8X85)				
92170	92170-2002	2	Clamp				
92191	92191-2105	1	Tube				

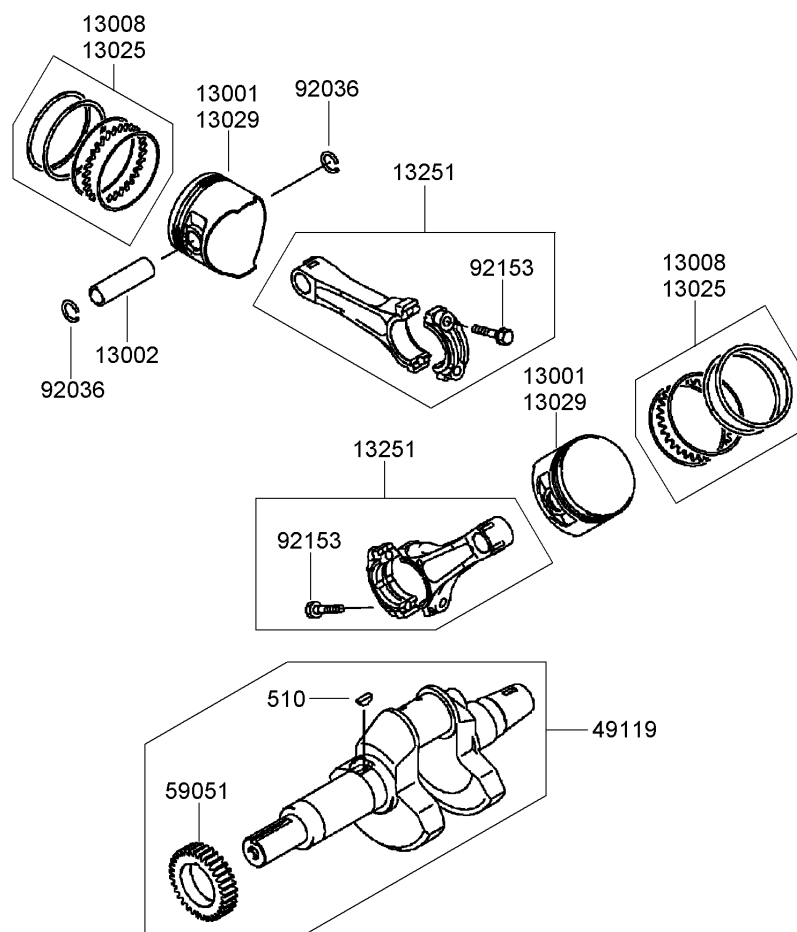


Piston and Crankshaft Assembly Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description				
③13001	13001-2150	2	Piston-Engine				
③13002	13002-2069	2	Pin-Piston				
③13008	13008-6007	2	Ring-Set, Piston				
③13025	13025-2074	1	Piston Ring Set (0.50)				
③13029	13029-2124	1	Piston-Engine (0.50)				
③13251	13251-2058	2	Connecting Rod ASM				
③49119	49119-2228	1	Crankshaft ASM				
③59051	59051-2358	1	Gear-Spur (33T)				
③92036	92036-008	4	Ring-Snap				
③92153	92153-2054	4	Bolt (7X35.2)				
③510	510A5100	1	Key-Woodruff				

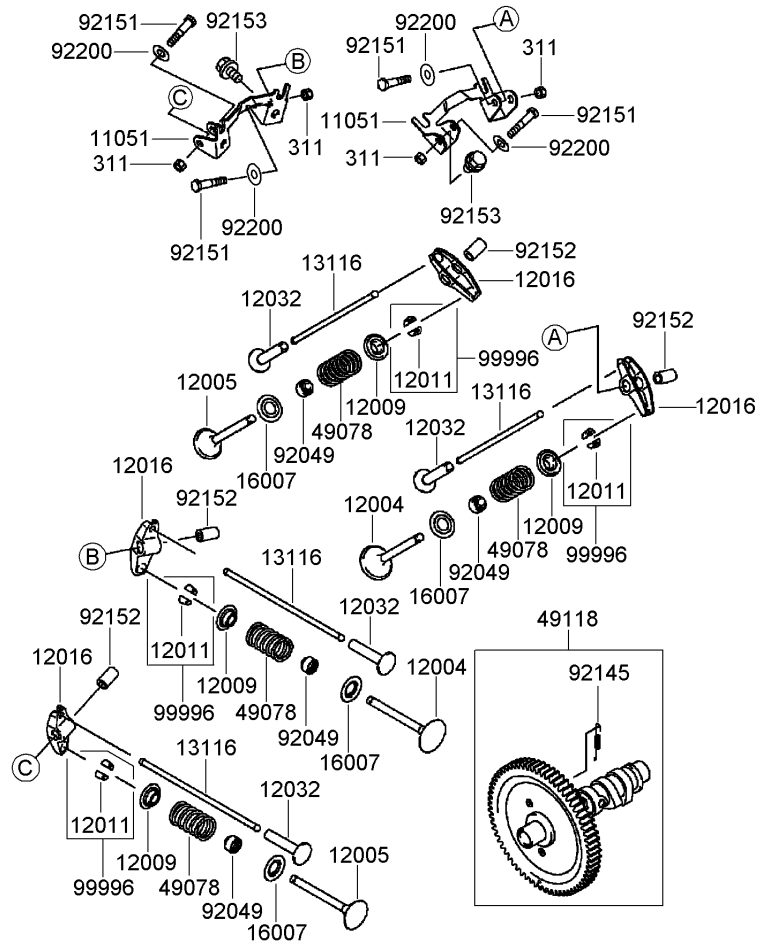


Valve and Camshaft Assembly
Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description				
❶11051	11051-2092	2	Bracket				
❶12004	12004-2113	2	Valve-Intake				
❶12005	12005-2100	2	Valve-Exhaust				
❶12009	12009-2060	4	Retainer-Spring, Valve				
❶12011	12011-2052	8	Collet				
❶12016	12016-2066	4	Arm-Rocker				
❶12032	12032-2060	4	Tappet				
❶13116	13116-2074	4	Rod-Push				
❶16007	16007-2052	4	Seat-Spring				
❶49078	49078-2060	4	Spring-Valve, Engine				
❶49118	49118-2138	1	Camshaft				
❶92049	92049-2100	4	Seal-Oil,Vsb (7X12X5.5X9.7)				
❶92145	92145-2085	1	Spring				
❶92151	92151-2165	4	Bolt (M6)				
❶92152	92152-2077	4	Collar				
❶92153	92153-2062	4	Bolt (8X14)				
❶92200	92200-2151	4	Washer (8.1X18X0.5)				
❶99996	99996-2077	4	Collet Kit				
❶311	311B0600	4	Nut-Hex (6Mm)				

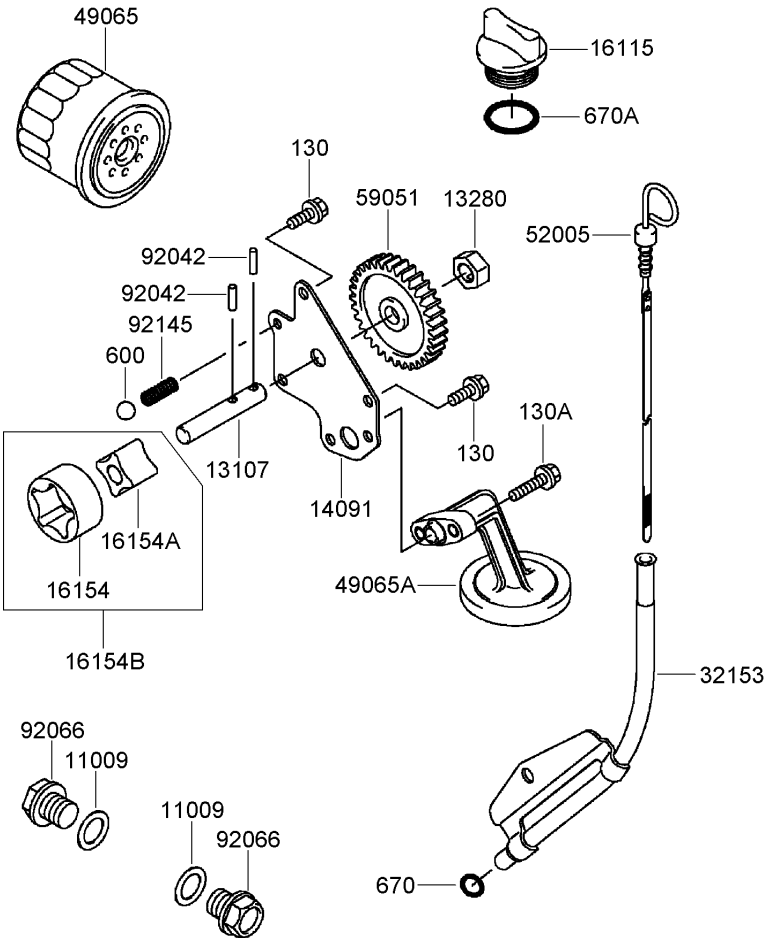


Lubrication Equipment Assembly
Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description				
❸11009	11009-2566	2	Gasket-Plug, Drain				
❸13107	13107-2281	1	Shaft-Pump, Oil				
❸13280	13280-2061	1	Holder-Pump, Oil				
❸14091	14091-2065	1	Cover-Pump, Oil				
❸16115	16115-2126	1	Cap-Filler, Oil				
❸16154	16154-1075	1	Rotor-Pump, Outer				
❸16154A	16154-1076	1	Rotor-Pump, Inner				
❸16154B	16154-1079	1	Rotor-Pump				
❸32153	32153-2076-9H	1	Pipe-Gauge, Oil				
❸49065	49065-2071	1	Filter-Oil				
❸49065A	49065-2082	1	Filter-Oil				
❸52005	52005-2132	1	Gauge-Oil				
❸59051	59051-2354	1	Gear-Spur (33T)				
❸92042	92042-014	2	Pin				
❸92066	92066-2099	2	Plug-Drain				
❸92145	92145-2132	1	Spring				
❸130	130G0616	3	Bolt-Flanged (6X16)				
❸130A	130G0625	2	Bolt-Flanged (6X25)				
❸600	600A1300	1	Ball-Steel (13/32)				
❸670	670B2010	1	O-Ring (10Mm)				
❸670A	670B3025	1	O-Ring (25Mm)				

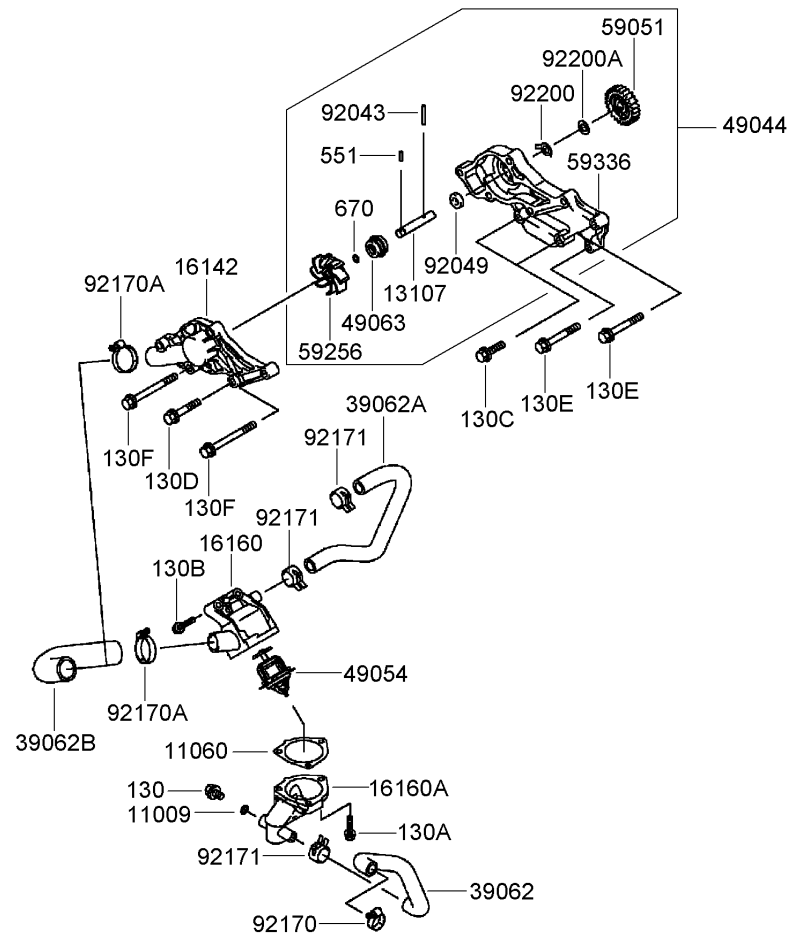


Cooling Equipment Assembly Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶11009	11009-3028	1	Gasket (8.2X12X1)	❶130B	130G0635	2	Bolt-Flanged (6X35)
❶11060	11060-2475	1	Gasket-Thermostat	❶130C	130G0830	2	Bolt-Flanged (8X30)
❶13107	13107-2097	1	Shaft-Impeller	❶130D	130G0845	1	Bolt-Flanged (8X45)
❶16142	16142-2077	1	Cover-Pump	❶130E	130G0860	2	Bolt-Flanged (8X60)
❶16160	16160-2139	1	Body, Upp	❶130F	130G0880	4	Bolt-Flanged (8X80)
❶16160A	16160-6002	1	Body-Valve	❶551	551A0314	1	Pin-Dowel (3X14)
❶39062	39062-2083	1	Hose-Cooling	❶670	670B1507	1	O Ring (7Mm)
❶39062A	39062-2098	1	Hose-Cooling				
❶39062B	39062-2101	1	Hose-Cooling				
❶49044	49044-2067	1	Pump-Water				
❶49054	49054-2058	1	Thermostat				
❶49063	49063-1056	1	Seal-Mechanical				
❶59051	59051-2355	1	Gear-Spur (25T)				
❶59256	59256-2069	1	Impeller				
❶59336	59336-2078	1	Case-Pump				
❶92043	92043-2237	1	Pin				
❶92049	92049-2111	1	Seal-Oil				
❶92170	92170-1283	1	Clamp				
❶92170A	92170-1284	2	Clamp				
❶92171	92171-2056	3	Clamp				
❶92200	92200-2134	1	Washer				
❶92200A	92200-2135	1	Washer (10.2X19X0.8)				
❶130	130C0812	1	Bolt-Flanged (8X12)				
❶130A	130G0625	3	Bolt-Flanged (6X25)				

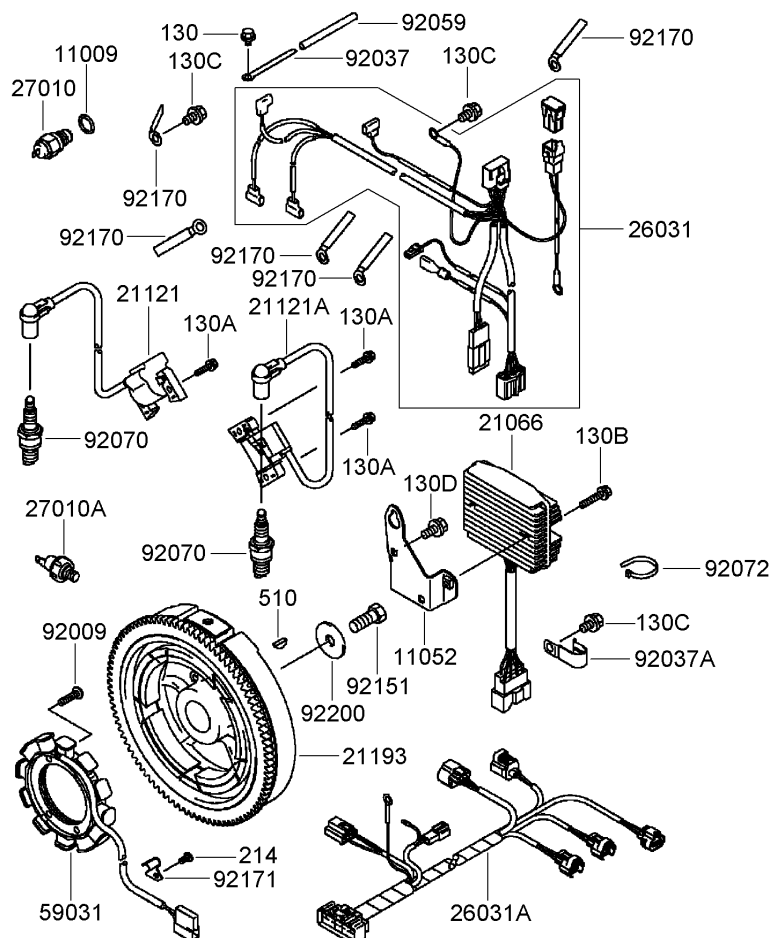

Electric Equipment Assembly Kawasaki FD791D-AS07


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
①11009	11009-2766	1	Gasket (16X24X1)	①130C	130G0812	3	Bolt-Flanged (8X12)
①11052	11052-2058	1	Bracket	①130D	130G0816	2	Bolt-Flanged (8X16)
①21066	21066-2079	1	Regulator-Voltage	①214	214B0510	1	Screw-Pan (5X10)
①21121	21121-2090	1	Coil-Ignition, No. 1	①510	510A5100	1	Key-Woodruff
①21121A	21121-2091	1	Coil-Ignition, No. 2				
①21193	21193-2187	1	Flywheel ASM				
①26031	26031-2070	1	Harness, C-Unit				
①26031A	26031-2074	1	Harness				
①27010	27010-2182	1	Switch				
①27010A	27010-7001	1	Switch				
①59031	59031-2127	1	Coil-Charging				
①92009	92009-2273	4	Screw (6X25)				
①92037	92037-2006	1	Clamp				
①92037A	92037-2101	1	Clamp				
①92059	92059-2011	1	Tube (5X6X75)				
①92070	92070-2112	2	Spark Plug-Bpr4Es, (Ngk) Solid				
①92072	92072-1195	1	Band				
①92151	92151-2097	1	Bolt (12X30)				
①92170	92170-2060	5	Clamp				
①92171	92171-2060	1	Clamp				
①92200	92200-2119	1	Washer (12.2X40X3.0)				
①130	130C0608	1	Bolt-Flanged (6X8)				
①130A	130G0520	4	Bolt-Flanged (5X20)				
①130B	130G0630	2	Bolt-Flanged (6X30)				

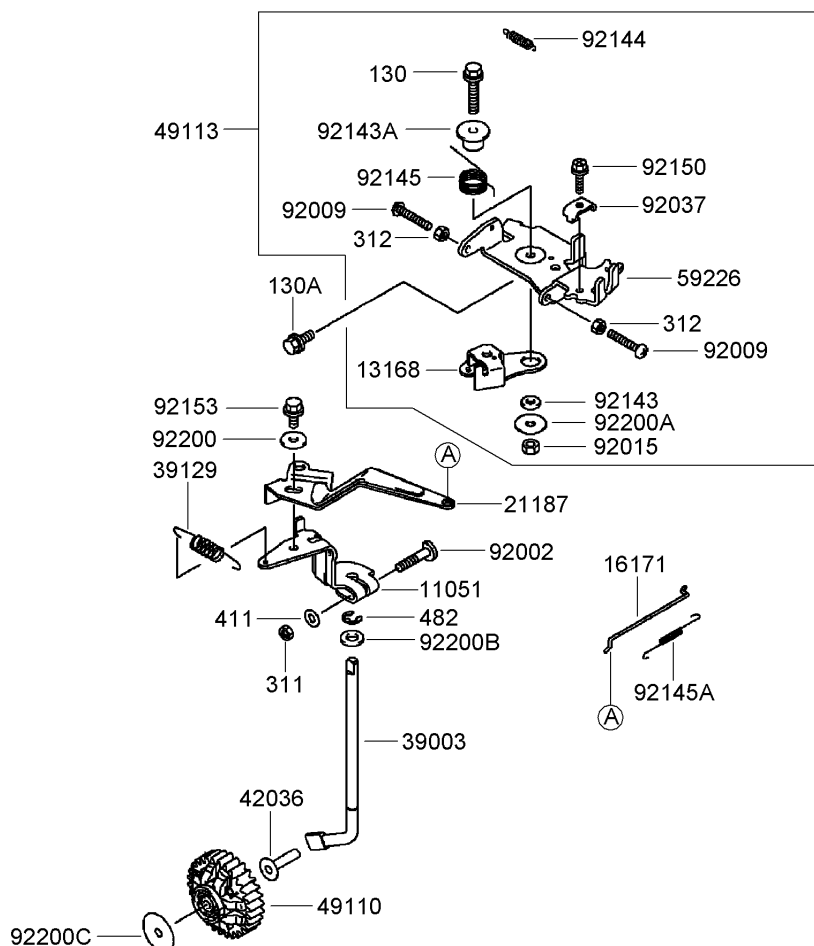

Control Equipment Assembly Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description
①11051	11051-2113	1	Bracket
①13168	13168-2466	1	Lever-Throttle
①16171	16171-2094	1	Link
①21187	21187-2076	1	Arm ASM
①39003	39003-2091	1	Arm-Pivot
①39129	39129-2105	1	Spring-Governor
①42036	42036-2060	1	Sleeve
①49110	49110-2094	1	Governor ASM
①49113	49113-2173	1	Control Panel ASM
①59226	59226-2328	1	Panel-Control
①92002	92002-2269	1	Bolt (6X28)
①92009	92009-2381	2	Screw (5X10)
①92015	92015-2051	1	Nut
①92037	92037-2209	1	Clamp
①92143	92143-2135	1	Collar (6X13X2.3)
①92143A	92143-2148	1	Collar
①92144	92144-2052	1	Spring
①92145	92145-2058	1	Spring
①92145A	92145-2106	1	Spring
①92150	92150-2182	1	Bolt (5X18)
①92153	92153-0009	1	Bolt (6X12)
①92200	92200-2035	1	Washer
①92200A	92200-2108	1	Washer (6.5X22X1.2)
①92200B	92200-2120	1	Washer (8.3X16X2.3)


Ref	Part No.	Qty.	Description
①92200C	92200-2152	1	Washer (6.2X30X0.5)
①130	130B0630	1	Bolt-Flanged (6X30)
①130A	130G0614	2	Bolt-Flanged (6X14)
①311	311B0600	1	Nut-Hex (6Mm)
①312	312B0500	2	Nut-Hex (5Mm)
①411	411B0600	1	Washer-Plain (6Mm)
①482	482J7000	1	Circlip-Type E (7Mm)

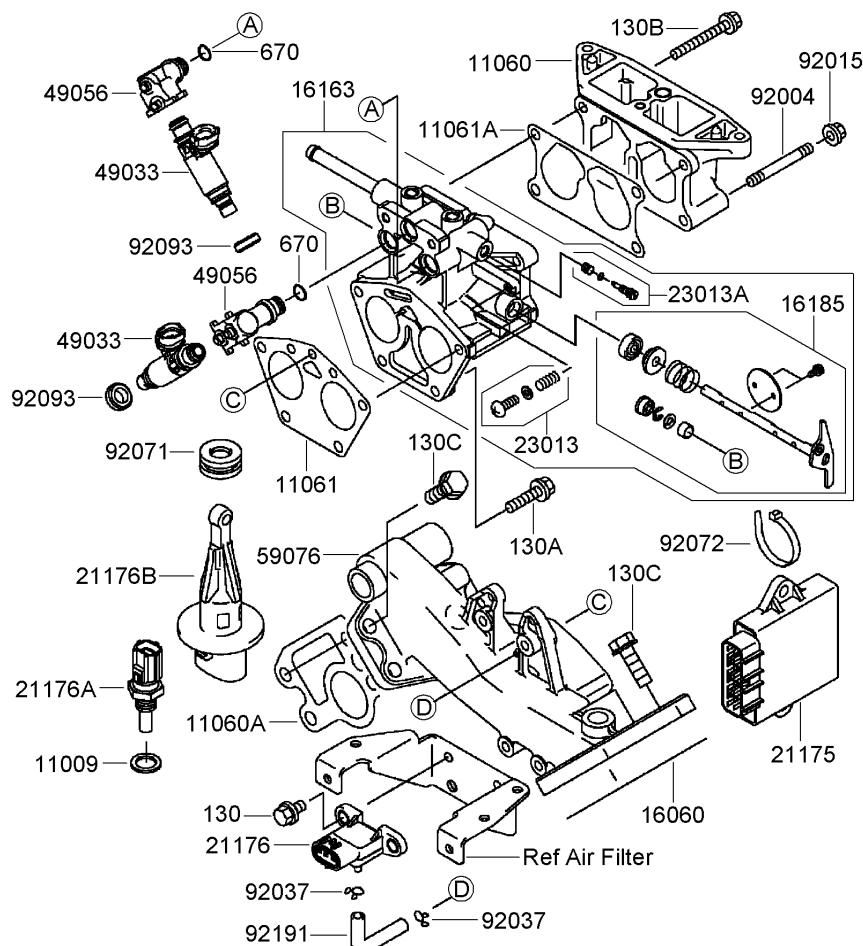

Throttle Assembly Kawasaki FD791D-AS07


Ref	Part No.	Qty.	Description
111009	11009-1376	1	Gasket (12.5X18X1.5)
111060	11060-2468	1	Gasket-Manifold, Intake
111060A	11060-2469	1	Gasket-Manifold, Intake
111061	11061-2058	1	Gasket,Throttle
111061A	11061-2075	1	Gasket-Pipe, Intake
16060	16060-2194	1	Pipe-Intake
16163	16163-2067	1	Throttle ASM
16185	16185-2046	1	Throttle Valve ASM
21175	21175-2059	1	Control Unit-Electronic
21176	21176-1095	1	Sensor
21176A	21176-2097	1	Sensor
21176B	21176-2106	1	Sensor
23013	23013-2065	1	Screw ASM
23013A	23013-2066	1	Screw ASM
49033	49033-2059	2	Nozzle-Injection
49056	49056-2060	2	Pipe-Injection
59076	59076-2080	1	Manifold-Intake
92004	92004-2133	2	Stud (6X100)
92015	92015-1193	2	Nut
92037	92037-2163	2	Clamp
92071	92071-2140	1	Grommet
92072	92072-1195	1	Band
92093	92093-2119	2	Seal
92191	92191-2133	1	Tube (4X7X65)

Ref	Part No.	Qty.	Description
130	130G0610	2	Bolt-Flanged (6X10)
130A	130G0625	2	Bolt-Flanged (6X25)
130B	130G0645	2	Bolt-Flanged (6X45)
130C	130G0825	8	Bolt-Flanged (8X25)
670	670E1508	2	O-Ring (8Mm)

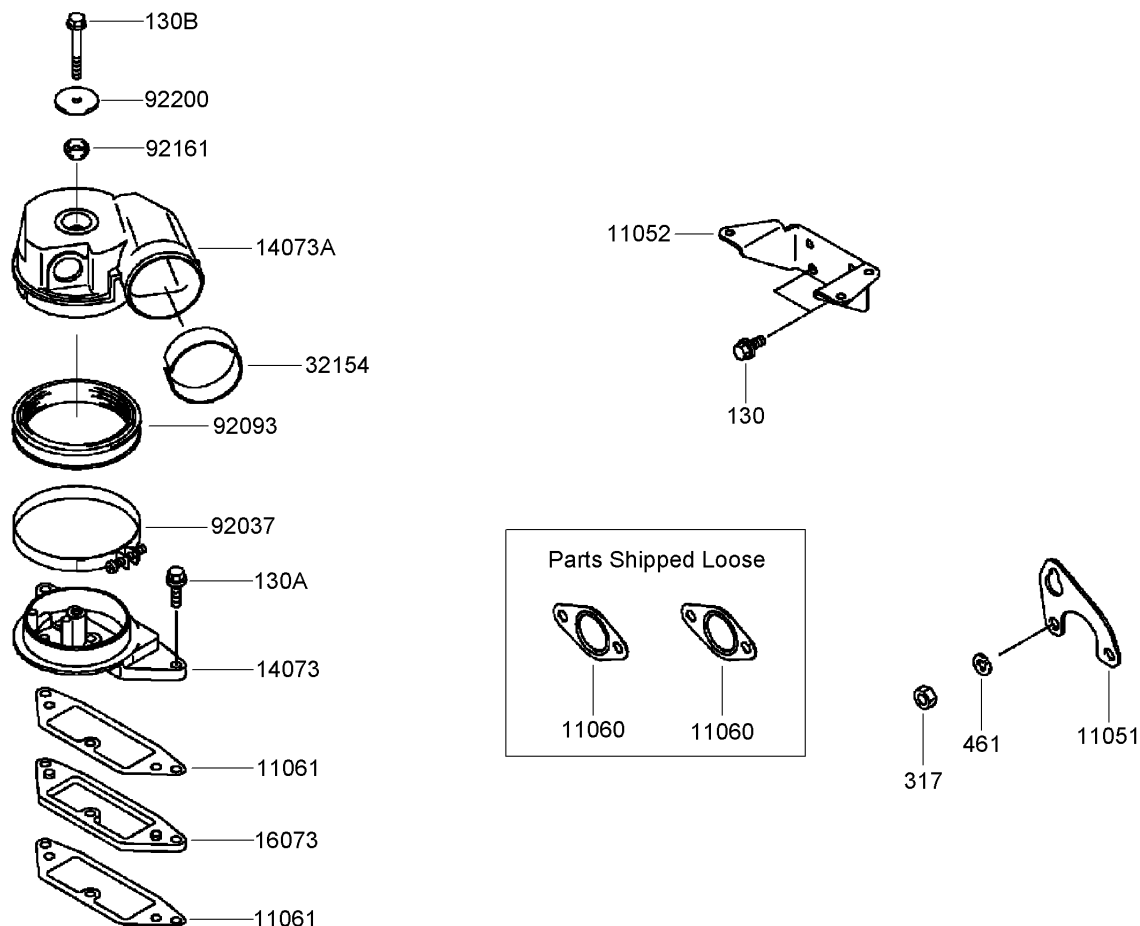


Air Filter and Muffler Assembly Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description
⑨11051	11051-2088	1	Bracket
⑨11052	11052-2062	1	Bracket
⑨11060	11060-2467	2	Gasket-Muffler
⑨11061	11061-2085	2	Gasket
⑨14073	14073-2084	1	Duct-Low
⑨14073A	14073-2086	1	Duct-Upp
⑨16073	16073-2216	1	Insulator
⑨32154	32154-2059	1	Pipe-Duct, Inside
⑨92037	92037-1654	1	Clamp
⑨92093	92093-2118	1	Seal
⑨92161	92161-2058	1	Damper
⑨92200	92200-2144	1	Washer
⑨130	130G0614	2	Bolt-Flanged (6X14)
⑨130A	130G0625	3	Bolt-Flanged (6X25)
⑨130B	130G0645	1	Bolt-Flanged (6X45)
⑨317	317R0800	1	Nut-Hex, Small (8Mm)
⑨461	461F0800	1	Washer-Spring (8Mm)

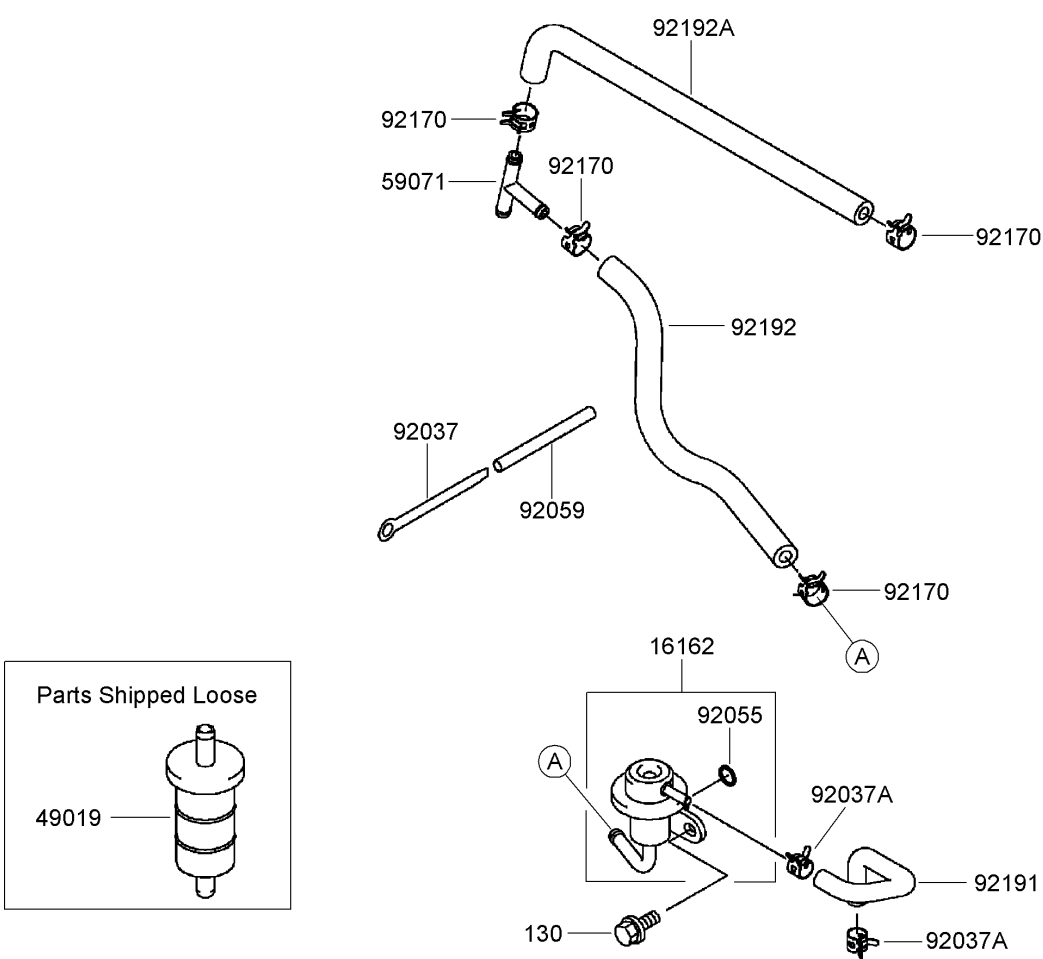

Fuel Tank and Valve Assembly
Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description				
16162	16162-2055	1	Regulator-Fuel				
49019	49019-1055	1	Filter-Fuel				
59071	59071-3705	1	Joint				
92037	92037-2006	1	Clamp				
92037A	92037-2083	2	Clamp				
92055	92055-2187	1	O-Ring, Fuel Regulator				
92059	92059-2011	1	Tube (5X6X75)				
92170	92170-2009	4	Clamp				
92191	92191-2165	1	Tube				
92192	92192-2108	1	Tube (6.2X13.2X200)				
92192A	92192-2109	1	Tube (6.2X13.2X230)				
130	130G0612	2	Bolt-Flanged (6X12)				

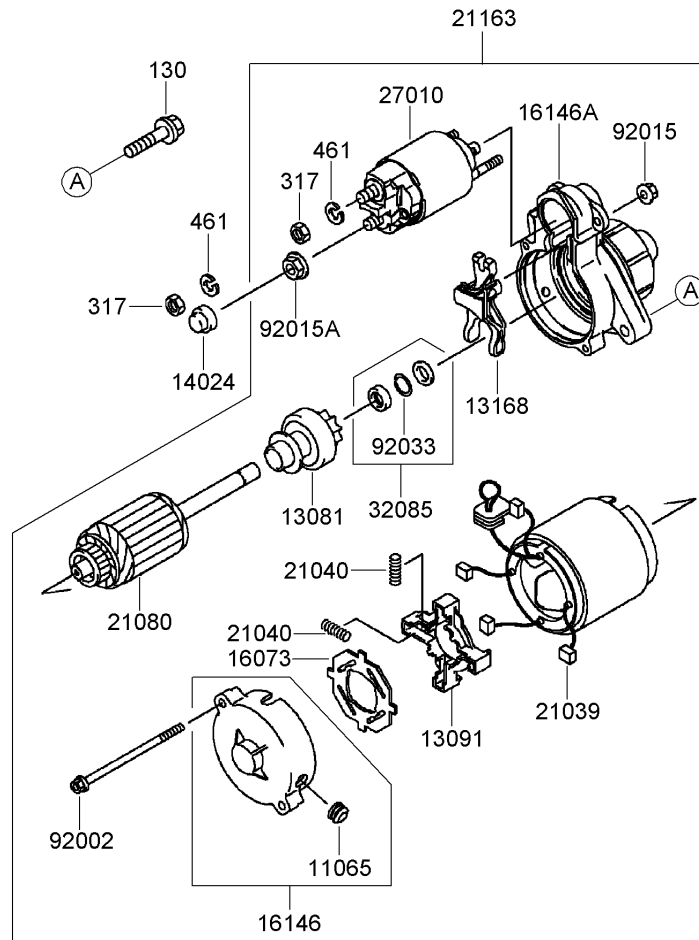

Starter Assembly

Kawasaki FD791D-AS07

Ref	Part No.	Qty.	Description				
③11065	11065-2118	1	Cap				
③13081	13081-2085	1	Clutch ASM				
③13091	13091-2068	1	Brush Holder				
③13168	13168-2131	1	Lever-Shift				
③14024	14024-2205	1	Cover				
③16073	16073-2098	1	Insulator				
③16146	16146-2235	1	Cover ASM				
③16146A	16146-2239	1	Cover ASM				
③21039	21039-2059	4	Brush				
③21040	21040-2052	4	Spring-Brush				
③21080	21080-2054	1	Armature				
③21163	21163-2130	1	Starter-Electric				
③27010	27010-2122	1	Switch				
③32085	32085-2097	1	Stopper				
③92002	92002-2277	2	Bolt				
③92015	92015-2146	2	Nut				
③92015A	92015-2147	1	Nut				
③92033	92033-2081	1	Ring-Snap				
③130	130G0835	2	Bolt-Flanged (8X35)				
③317	317B0800	2	Nut-Hex, Small (8Mm)				
③461	461F0800	2	Washer-Spring (8Mm)				

Attachments and Accessories

For 74253CP - Z589 Z Master, With 60in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Blade-Mid Flow, 20.5 Inch	105-7715-03
Blade-Lo Flow, 20.5 Inch	105-7716-03
Blade-Hi Flow, 20.5 Inch	105-7718-03
Blade-Recycler, 20.5 Inch	105-7777-03
Blade-Atomic, 20.5 Inch	105-8777-03
60 Inch Recycler Kit	107-1611
Striping Kit	107-1630
Turbo Baffle Kit	107-1634
Light Kit	107-9880
6 Pack Blade, 20.5 Inch Hi-Flow	108-1114
6 Pack-Blade, 20.5 Inch Atomic	108-1115
6 Pack Blade, 20.5 Inch Mid-Flow	108-1123
6 Pack-Blade, 20.5 Inch Lo Flow	108-1128
Roller Striping Kit	108-2162
6 Pack-Blade, 20.5 Inch Recycler	110-0405
DFS Vac Collection System Mounting Kit	110-0891
DFS Bagger Gusset Kit	110-3946
Bimini Sunshade	110-5726
60 Inch Deck Finishing Kit (Triple Bagger)	78502
Vac Collection System	78514
Chute Gate Kit	78521
Triple Bag Assembly	78534
Blower and Drive Kit	78538
Filter Minder Gauge	99-4664
Hitch Kit	99-8925

