



Z Master[®] G3 Riding Mower with 60in TURBO FORCE[®] Side Discharge Mower

Model No. 74955CP - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame and Caster Wheel Assembly	 3	Spindle Assembly No. 117-3840	 27
Roll-Over Protection System Assembly No. 116-0232	 4	Lever Assembly No. 107-1664	 28
Caster Wheel and Fork Assembly	 5	Rubber Deflector Assembly No. 108-2792	 29
Hydraulic Pump, Idler and Belt Assembly	 6	Cylinder and Crankcase Assembly Kawasaki FX921V-AS04	 30
Pump Idler Assembly No. 116-1255	 7	Piston and Crankshaft Assembly Kawasaki FX921V-AS04	 31
LH Hydro Assembly No. 116-1382	 8	Valve and Camshaft Assembly Kawasaki FX921V-AS04	 32
RH Hydro Assembly No. 116-1383	 9	Lubrication Equipment Assembly Kawasaki FX921V-AS04	 33
Rear Wheel and Park Brake Assembly	 10	Cooling Equipment Assembly Kawasaki FX921V-AS04	 34
Brake Handle Assembly No. 116-1878	 11	Electric Equipment Assembly Kawasaki FX921V-AS04	 35
Fuel System Assembly	 12	Control Equipment Assembly Kawasaki FX921V-AS04	 36
Fuel Tank Assembly No. 109-9357	 13	Carburetor Assembly Kawasaki FX921V-AS04	 37
Seat Mounting Assembly	 14	Air Filter and Muffler Assembly Kawasaki FX921V-AS04	 38
Seat Assembly No. 116-0035	 15	Fuel Tank and Fuel Valve Assembly Kawasaki FX921V-AS04	 39
Motion Control Assembly	 16	Starter Assembly Kawasaki FX921V-AS04	 40
Fender, Console and Control Assembly	 17	Label Set Kawasaki FX921V-AS04	 41
LH Console Assembly No. 115-7401	 18	Attachments and Accessories List	 42
RH Console Assembly No. 115-7400	 19		
Electrical System Assembly	 20		
Deck Lift Assembly	 21		
Height-of-Cut Assembly No. 109-7438	 22		
Engine, Muffler and Clutch Assembly	 23		
Deck Assembly	 24		
Deck Decal Assembly No. 112-4180	 25		
Idler Assembly	 26		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	
BBC. blade brake clutch	HYD. hydraulic
CARR. carriage	LH. left hand
CCW. counter clock wise	NI. nylon insert
CW. clockwise	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
ECM. electronic control module	PPH. phillips pan head
EXT. external	PPHTF. phillips pan head thread forming
FH. flat head	PRH. phillips round head
GA. gauge	PTH. phillips truss head
HD. heavy-duty	PTO. power-take-off
HF. hex flange	RH. right hand
HH. hex head	ROPS. roll-over protection system
HHF. hex head flange	SFH. slotted fillister head
HHFTF. hex head flange thread forming	SHH. slotted hex head
HJ. hex jam	SHWH. slotted hex washer head
HLH. hex lag head	SPH. slotted pan head
HOC. height-of-cut	SQH. square head
HSBH. hex socket button head	SRH. slotted round head
HSFH. hex socket flat head	STD. standard
HSH. hex socket head	TAP. self tapping
HWH. hex washer head	TTH. torx truss head

Footnotes

❶ Not illustrated


❷ Not serviced separately

3 Obtain parts from www.kawpowerepc.com

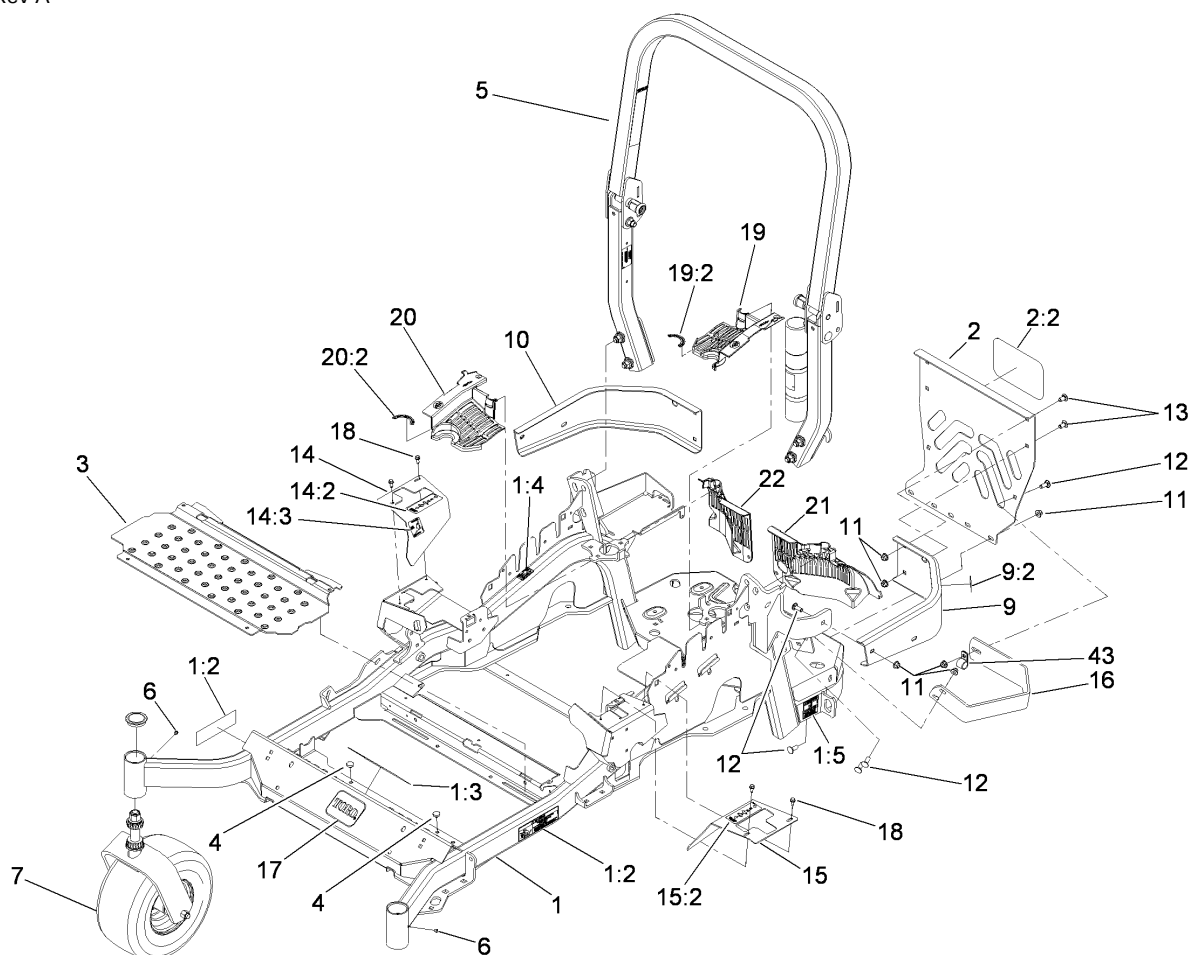


Front Frame and Caster Wheel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	109-7347	1	Main Frame ASM	17	68-3640	1	Decal
1:2	109-9477	2	Decal-Warning	18	32144-10	4	Screw-HWH
1:3	107-2112	1	Decal-Warning	19	116-0170	1	LH Hydro Guard ASM
1:4	103-2076	2	Decal-Caution	19:2	116-0157	1	Decal-Hydro Oil
1:5	116-0205	2	Decal-Belt Drive	20	116-0171	1	RH Hydro Guard ASM
2	115-7410	1	Rear Guard ASM	20:2	116-0157	1	Decal-Hydro Oil
2:2	67-7320	1	Decal	21	109-9057	1	Guard-Hydro, Rear LH
3	116-0024-01	1	Floorpan	22	109-9058	1	Guard-Hydro, Rear RH
4	1-513658	2	Bumper	43	1-633396	1	Clip-Loom
5	116-0232	1	ROPS ASM				
6	1-811010	2	Plug				
7		2	Caster Wheel ASM				
9	116-0180	1	LH Bumper ASM				
9:2	103-2076	1	Decal-Caution				
10	116-0057-03	1	Bumper-RH				
11	104-8301	11	Nut-Flange, NI				
12	3231-22	7	Screw-CARR				
13	3231-21	4	Screw-CARR				
14	116-0579	1	RH Motion Control Cover ASM				
14:2	109-7232	1	Decal-Motion Control				
14:3	109-7929	1	Decal-Park Brake				
15	116-0580	1	LH Motion Control Cover ASM				
15:2	109-7232	1	Decal-Motion Control				
16	116-0043-03	1	Guard-Muffler				

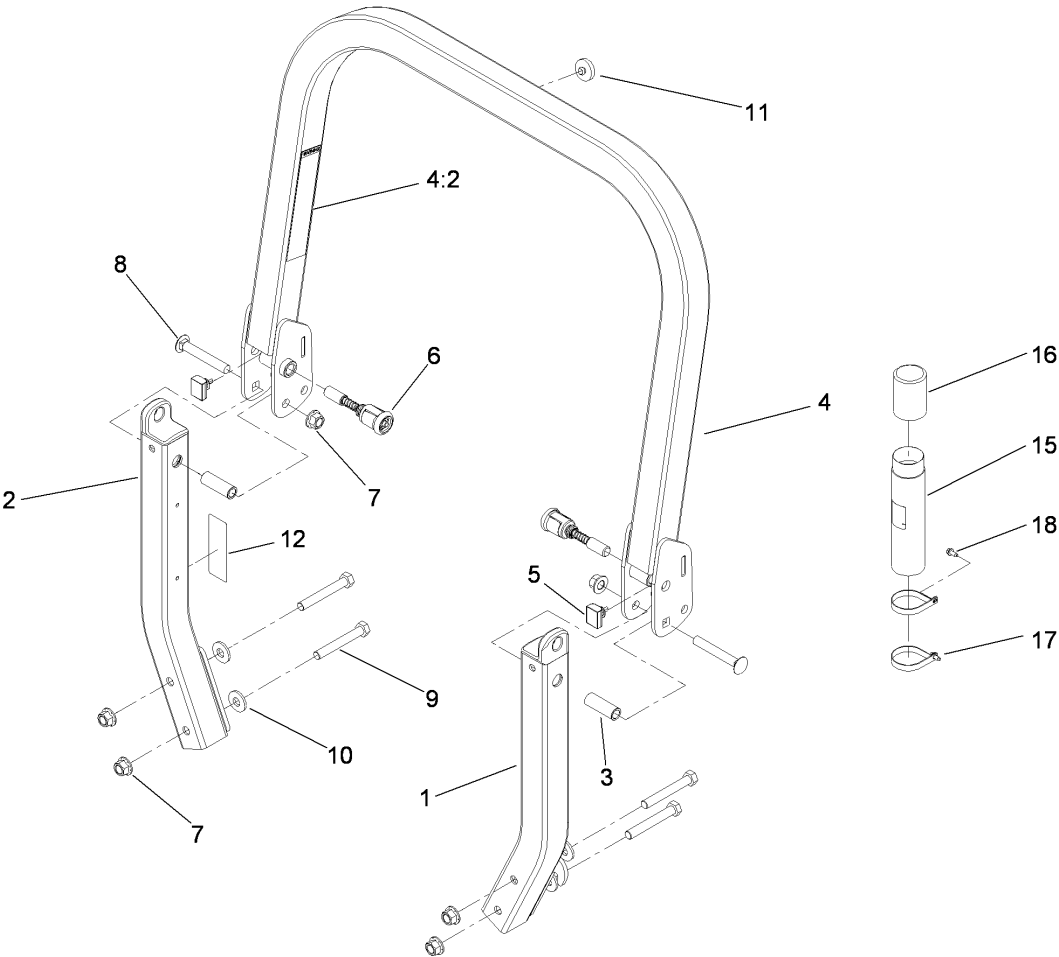


Roll-Over Protection System Assembly No. 116-0232

Ref	Part No.	Qty.	Description				
②1		1	Leg-ROPS, LH				
②2		1	Leg-ROPS, RH				
3	109-6653	2	Spacer				
②4		1	Upper ROPS ASM				
4:2	107-3069	1	Decal-Warning, Folding ROPS				
5	109-5337	2	Bumper-ROPS				
6	116-0104	2	Spring Pin ASM				
7	99-5107	6	Nut-Lock				
8	3233-10	2	Screw-CARR				
9	325-17	4	Screw-HH				
10	109-9505	4	Washer-Spring				
11	109-9233	1	Bumper-Push-In, Rubber				
12	117-0346	1	Decal-Caution, Fuel Vent				
15	104-7050	1	Tube-Manual				
16	104-7048	1	Cap-Housing				
17	107-1865	2	R-Clamp				
18	32144-10	2	Screw-HWH				

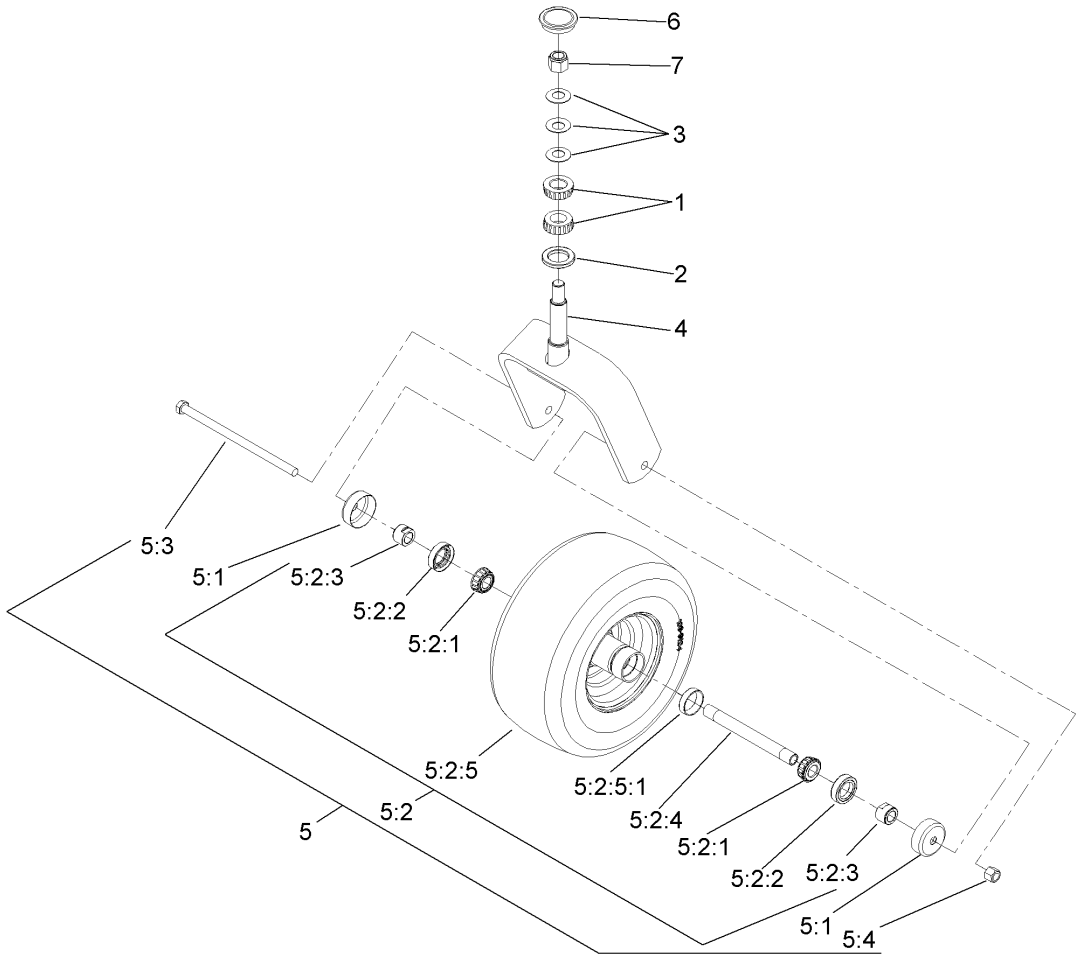


Caster Wheel and Fork Assembly

Ref	Part No.	Qty.	Description				
1	1-543509	2	Bearing-Roller, Tapered				
2	1-543511	1	Seal-Grease				
3	1-633508	3	Washer-Bellville				
4	103-1474-01	1	Caster-Fork				
5	109-9127	1	Wheel And Tire ASM				
5:1	103-2768	2	Guard-Seal				
5:2		1	Wheel And Tire ASM				
5:2:1	1-633585	2	Bearing-Cone, Taper				
5:2:2	103-0063	2	Seal-Caster				
5:2:3	103-3051	2	Spacer-Nut				
5:2:4	103-5156	1	Axle-Caster				
5:2:5	109-9124	1	Wheel And Tire ASM				
5:2:5:1	1-633584	1	Bearing-Cup				
5:3	325-39	1	Screw-HH				
5:4	3296-23	1	Nut-Lock, NI				
6	103-4882	1	Cap-Grease				
7	3296-51	1	Nut-Lock, NI				

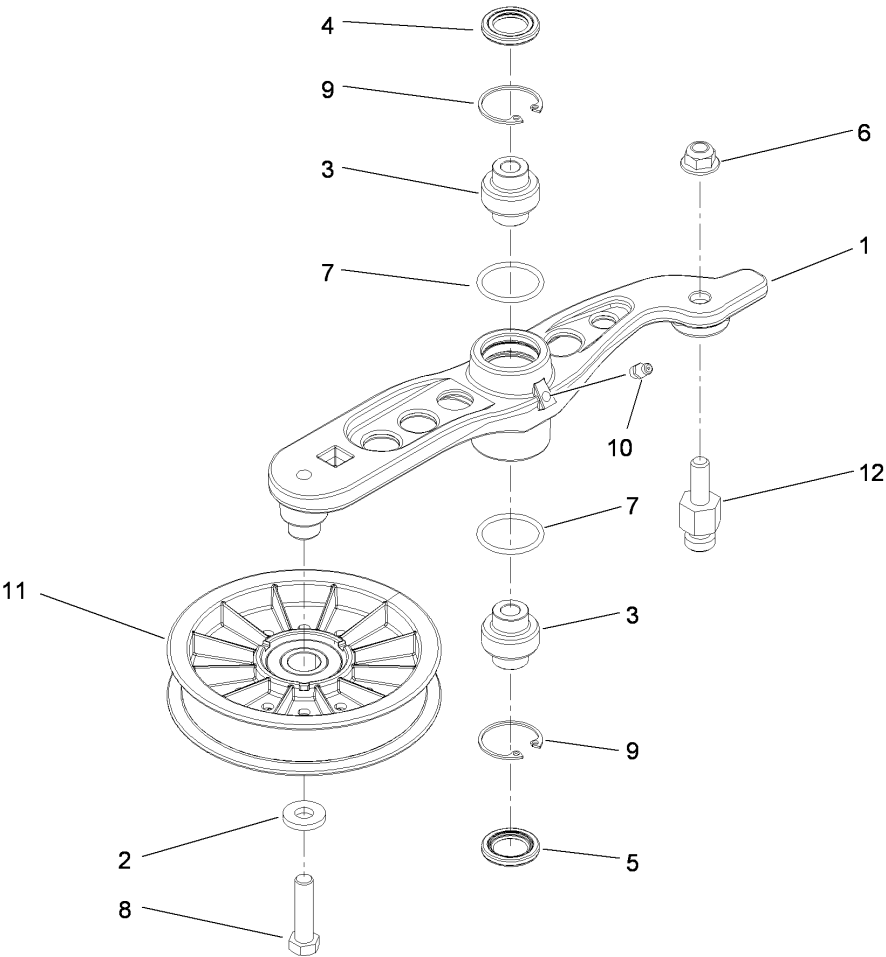


Pump Idler Assembly No. 116-1255

Ref	Part No.	Qty.	Description				
1		1	Arm-Pump, Idler				
2	43-0940	1	Spacer-Hub, Blower				
3	103-3504	2	Bearing-Spherical				
4	103-3505	1	Seal-Double Lip				
5	103-3506	1	Seal-Single Lip				
6	109-6658	1	Nut-Flange, NI (Split)				
7	106-7159	2	O-Ring				
8	323-8	1	Screw-HH				
9	32120-10	2	Ring-Snap				
10	302-19	1	Fitting-Grease				
11	109-8076	1	Pulley-Idler				
12	109-7399	1	Pin-Anchor, Spring				

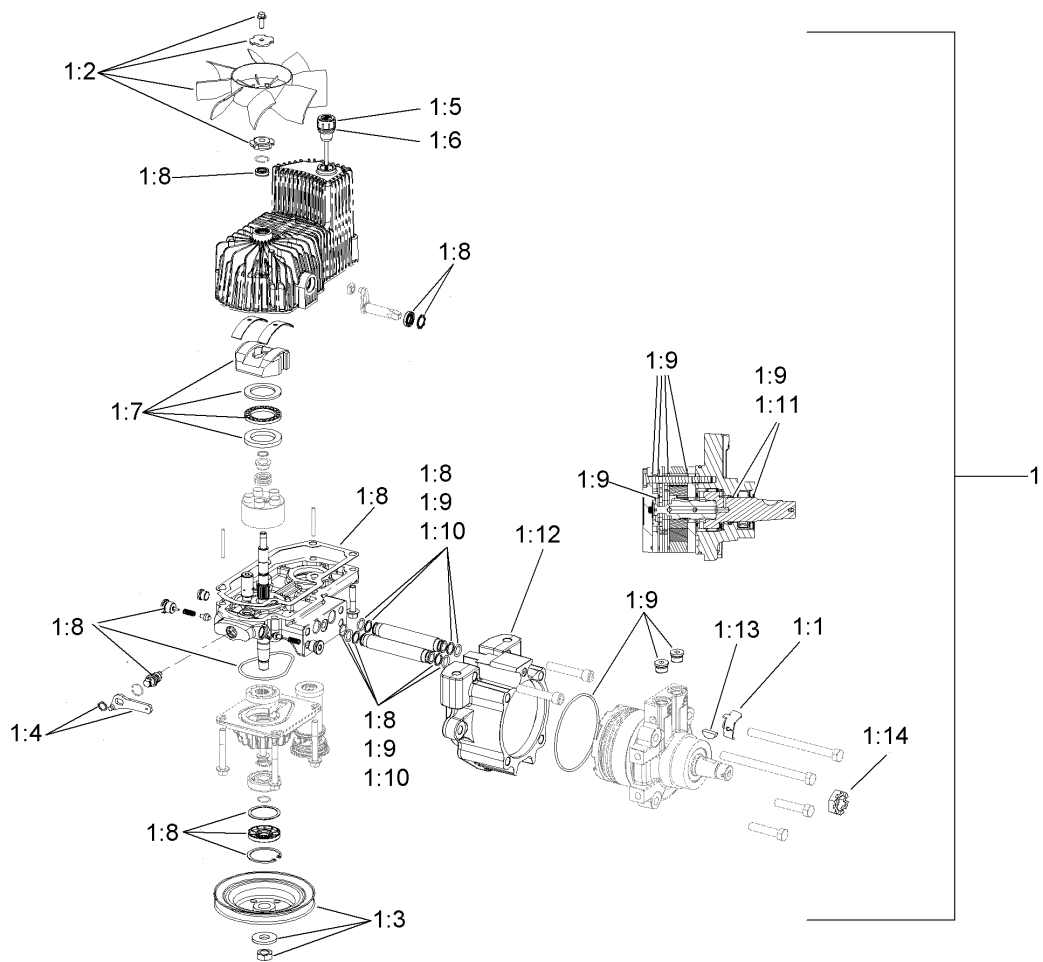


LH Hydro Assembly No. 116-1382

Ref	Part No.	Qty.	Description				
② 1		1	Hydro-RH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
① 1:99	116-1373	1	Flow Test Kit				

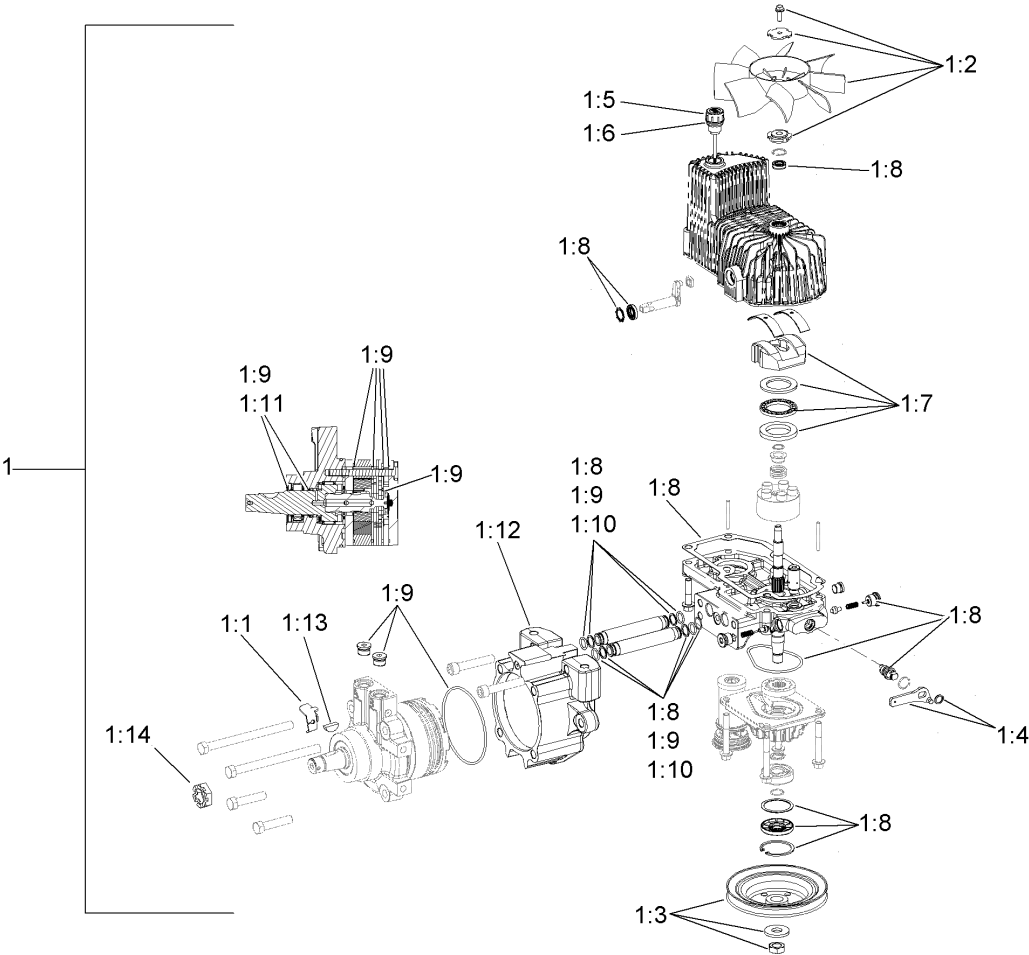

RH Hydro Assembly No. 116-1383


Ref	Part No.	Qty.	Description				
② 1		1	Hydro-LH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
① 1:99	116-1373	1	Flow Test Kit				

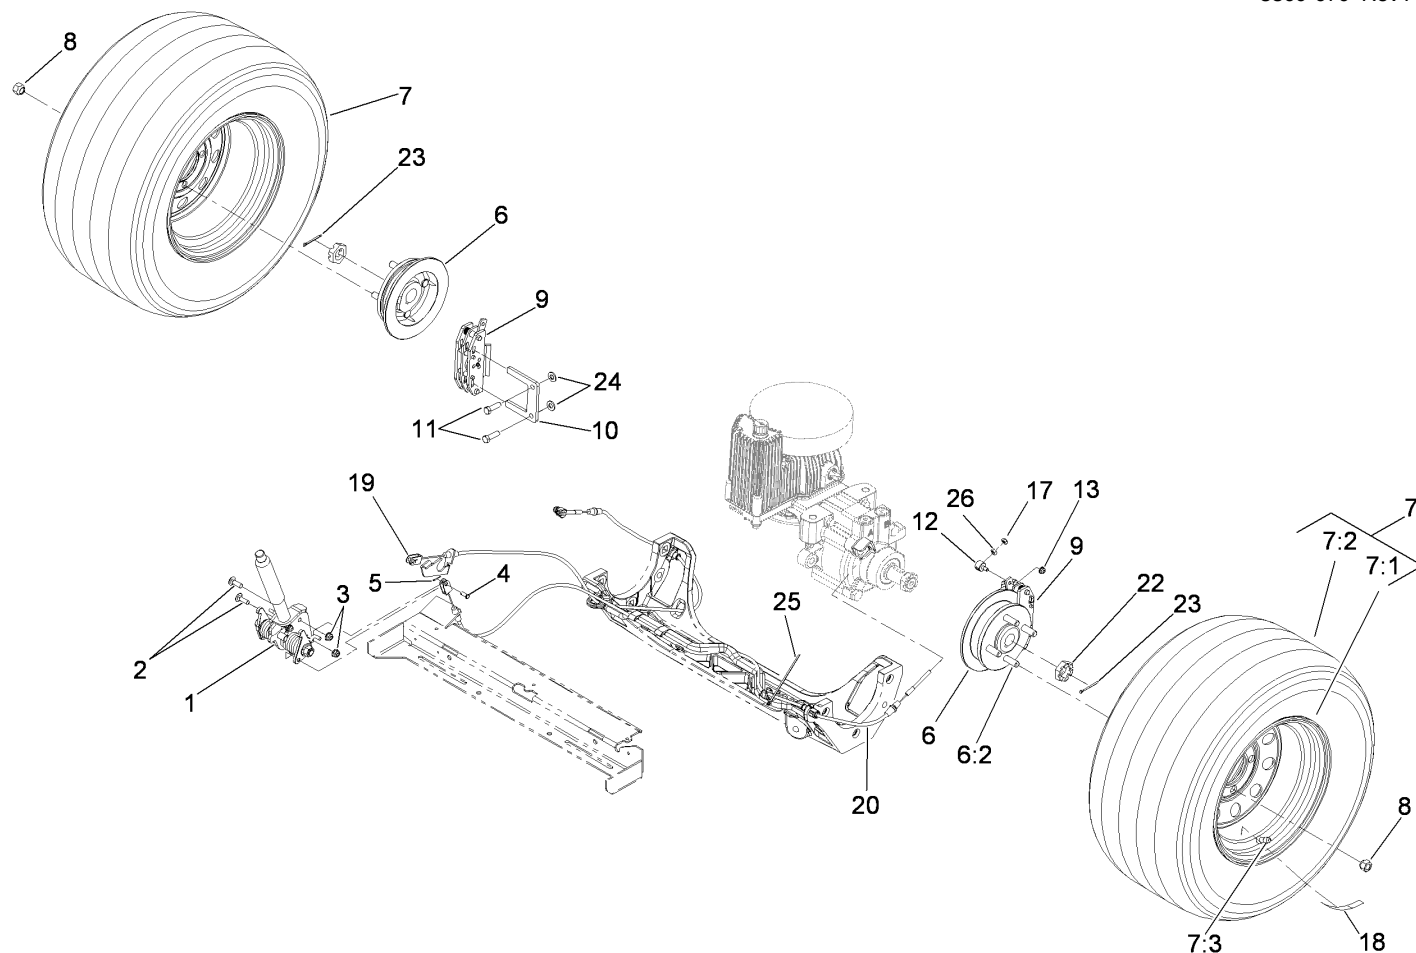

Rear Wheel and Park Brake Assembly


Ref	Part No.	Qty.	Description
1	116-1878	1	Brake Handle ASM
2	3230-2	2	Bolt-CARR
3	104-8300	2	Nut-Flange, NI
4	60-1730	2	Pin-Clevis
5	3272-1	2	Pin-Cotter
6	117-6163	2	Wheel Hub And Stud ASM
6:2	1-633926	4	Stud-Wheel
7	109-3248	2	Wheel And Tire ASM
7:1	109-2871	1	Rim ASM
7:2	103-2744	1	Tire
7:3	232-27	1	Stem-Valve
8	242-50	8	Nut-Lug
9	109-2889	2	Caliper-Brake
10	109-0958	2	Plate-Mount, Brake
11	323-7	4	Screw-HH
12	112-8379	2	Swivel
13	104-7201	2	Nut-HF
17	3296-13	2	Nut-Lock NI
18	116-0165	2	Decal-Hub, Wheel
19	115-3584	1	Cable
20	115-3585	1	Cable
22	1-809036	2	Nut-HH
23	1-806800	2	Pin-Cotter
24	3256-24	4	Washer-Flat

Ref	Part No.	Qty.	Description
25	116-0940	1	Tie-Cable
26	3219-1	2	Nut-Hex

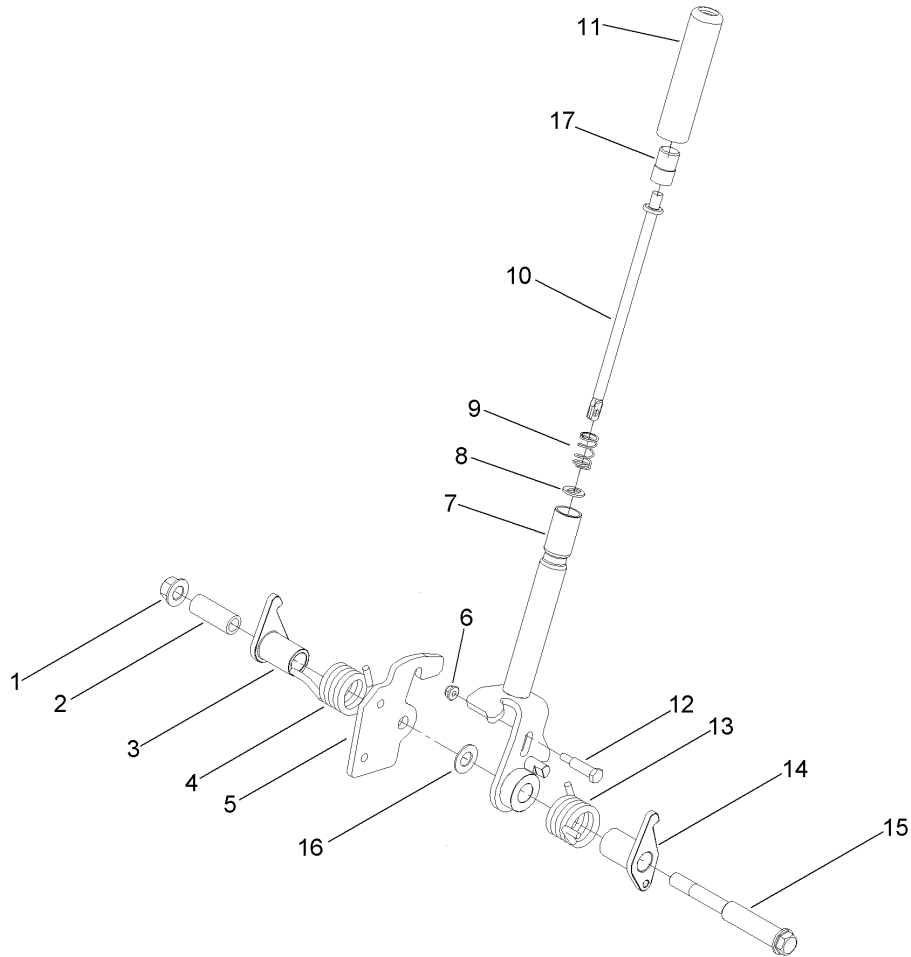


Brake Handle Assembly No. 116-1878

Ref	Part No.	Qty.	Description				
1	99-5107	1	Nut-Lock				
2	117-0380	1	Spacer				
3	115-3580	1	Arm-Brake, LH				
4	117-0376	1	Spring-Torsion, RH				
5	115-3574	1	Plate-Latch				
6	104-7201	1	Nut-HF				
7	116-1876-03	1	Brake Handle ASM				
8	114-1207	1	Washer-Special				
9	114-8187	1	Spring-Compression				
10	115-3581	1	Rod-Release, Brake				
11	115-3592	1	Grip				
12	112-8387	1	Bolt-Shoulder				
13	117-0375	1	Spring-Torsion, LH				
14	115-3579	1	Arm-Brake, RH				
15	117-0379	1	Bolt-Shoulder				
16	117-0378	1	Washer				
17	115-2750	1	Knob				

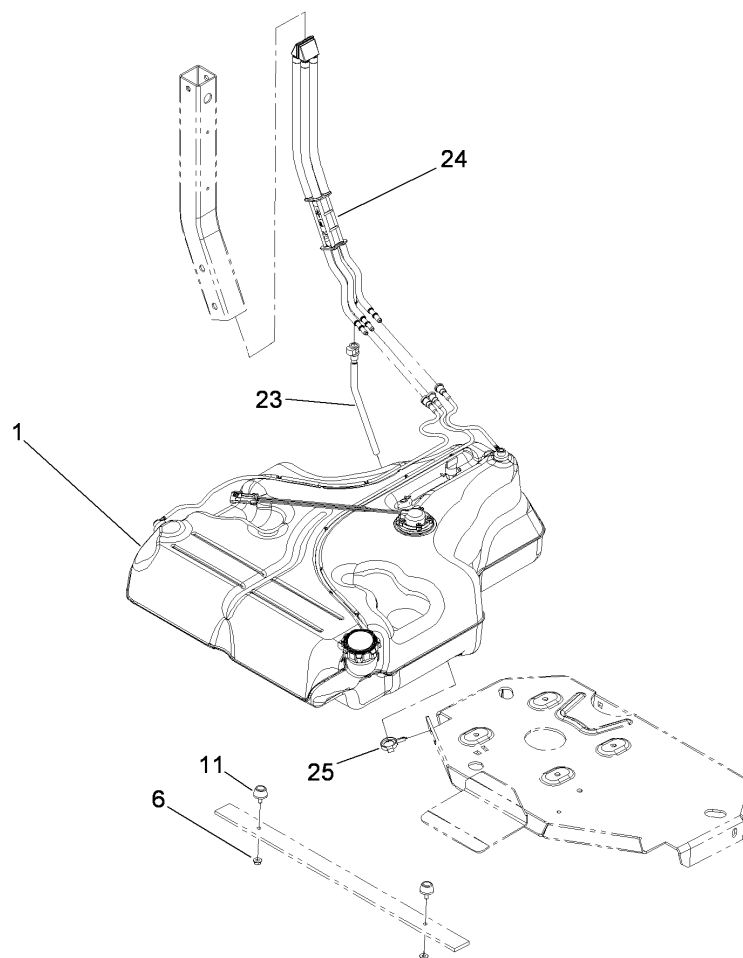

Fuel System Assembly

Ref	Part No.	Qty.	Description				
1	109-9656	1	Fuel Tank ASM (W/O Sender)				
1	109-9357	1	Fuel Tank ASM				
6	32128-33	2	Nut-HF				
11	109-2365	2	Bumper-Rubber (W/Stud)				
23	109-9450	1	Tube-Vent, Fuel Drain				
24	109-9491	1	Fuel Manifold Vent ASM				
25	105-1853	1	Clamp-Hose				

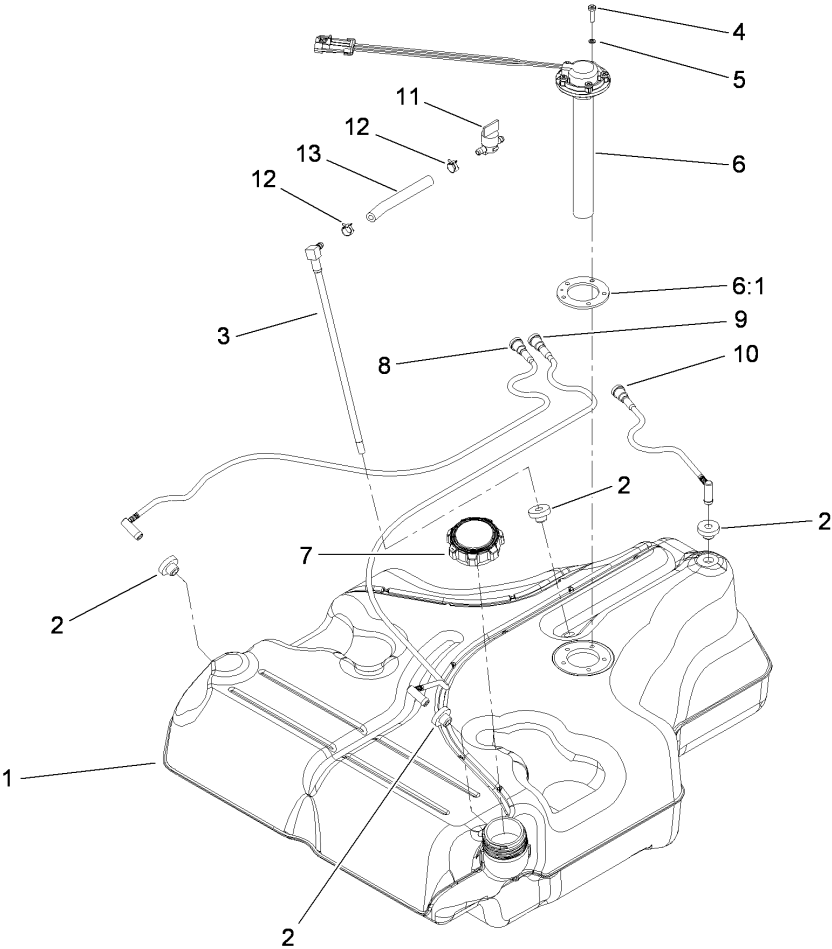


Fuel Tank Assembly No. 109-9357

Ref	Part No.	Qty.	Description				
1		1	Tank-Fuel, Belly				
2	46-6560	4	Bushing				
3	109-9364	1	Fitting-Fuel (W/Line And Screen)				
4	9107944	5	Screw-Pan				
5	3253-17	5	Washer-Lock				
6	116-0003	1	Sender-Fuel Level				
6:1	109-9620	1	Gasket-Sender, Fuel				
7	109-9619	1	Cap-Fuel				
8	109-9447	1	Tube-Vent, RH				
9	109-9448	1	Tube-Vent, LH				
10	109-9449	1	Tube-Vent, Rear				
11	1-603770	1	Valve-Fuel				
12	2412-98	2	Clamp				
13	109-0650	1	Hose-Fuel				




Ref	Part No.	Qty.	Description				
1	116-0035	1	Seat-Standard				
3	109-9034	4	Isolator-Seat				
4	109-9036	1	Mount-Seat				
4:2	109-7069	1	Decal-Console				
4:3	116-0211	1	Decal-Service Aid				
6	3230-23	11	Screw-CARR				
8	104-8300	18	Nut-Flange, NI				
9	104-8301	4	Nut-Flange, NI				
10	9266934	2	Screw				
13	116-0181-03	1	Plate-Support, Seat Tilt				
14	116-0179-03	1	Plate-Frame, Seat Tilt				
15	109-9881-03	1	Plate-Latch, Seat				
16	3230-4	1	Screw-CARR				
17	107-3017	1	Spring-Compression				
18	116-1297	2	Screw, Shoulder				
20	116-0070	1	Rod-Prop				
21	114-5878	1	Decal-Dash				
24	3256-23	1	Washer-Flat				

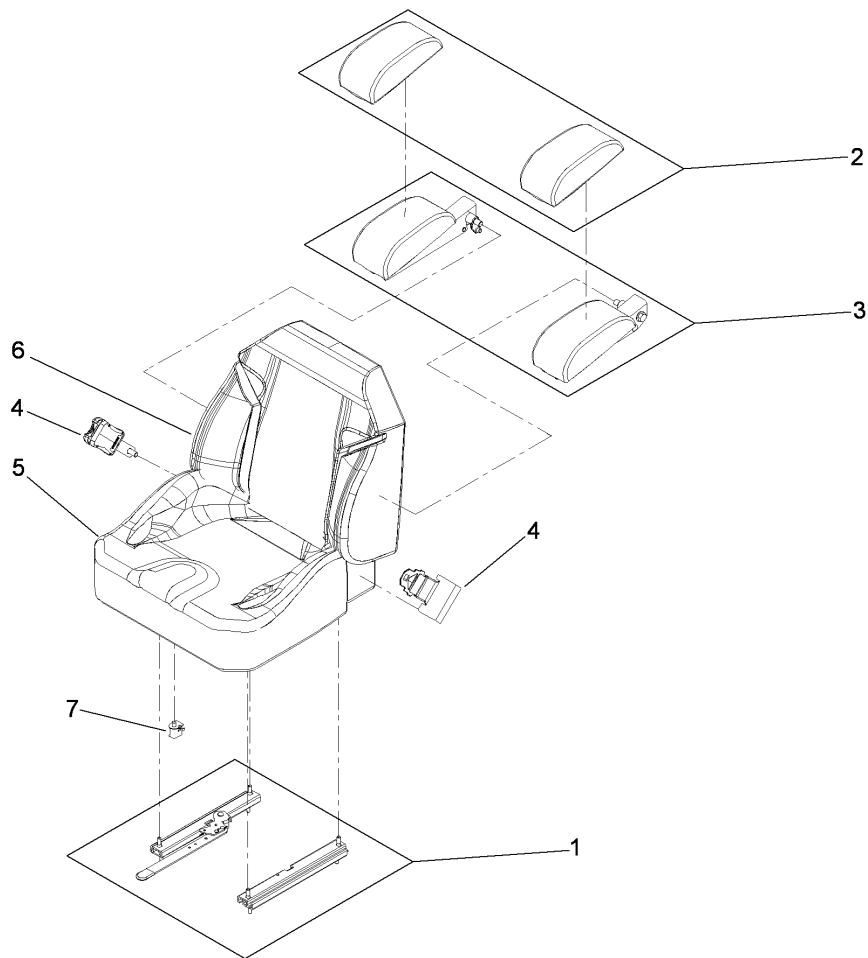

Seat Assembly No. 116-0035


Ref	Part No.	Qty.	Description				
1	109-9801	1	Seat Track Set				
2	109-9802	1	Arm Rest Pad Set				
3	109-9803	1	Arm Rest Set				
4	109-9805	1	Seat Belt Kit				
5	109-9806	1	Cover-Cushion				
6	109-9808	1	Cover-Back				
7	82-2190	1	Switch-Bail				

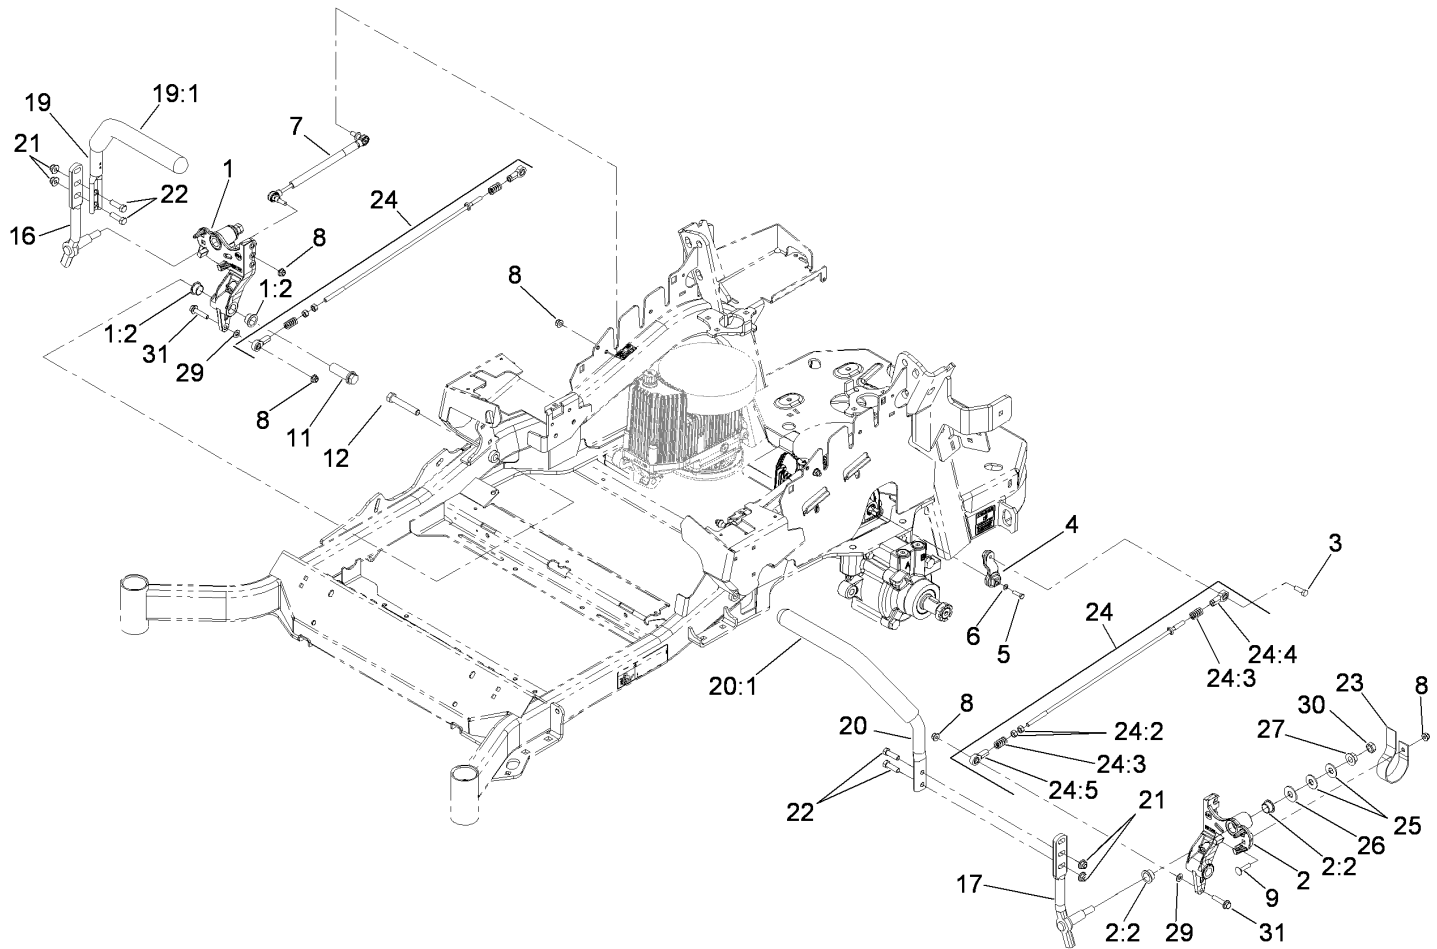

Motion Control Assembly


Ref	Part No.	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	116-0648	2	Screw-Thread Locking
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH
6	1-303435	2	Washer-Spring
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-Flange, NI
9	3230-2	2	Bolt-CARR
11	109-5891	2	Hub-Threaded
12	325-12	2	Screw-HH
16	116-0039	1	Lever-Control Motion, RH
17	116-0040	1	Lever-Control Motion, LH
19	109-6591	1	RH Steering Handle ASM
19:1	106-9987	1	Grip-Control, Motion
20	109-6592	1	LH Steering Handle ASM
20:1	106-9987	1	Grip-Control, Motion
21	104-8301	4	Nut-Flange, NI
22	323-7	4	Screw-HH
23	109-5575	2	Spring-Leaf

Ref	Part No.	Qty.	Description
24	109-8106	2	Front Pump Linkage ASM
24:2	3219-2	2	Nut-Hex
24:3	1-323245	2	Spring-Compression
24:4	1-633152	1	Balljoint-LH
24:5	1-543017	1	Balljoint-RH
25	109-9505	4	Washer-Spring
26	3256-6	2	Washer-Flat
27	32128-56	2	Nut-HF
29	3256-23	2	Washer-Flat
30	3218-5	2	Nut-Jam
31	115-1794	2	Screw-HHF

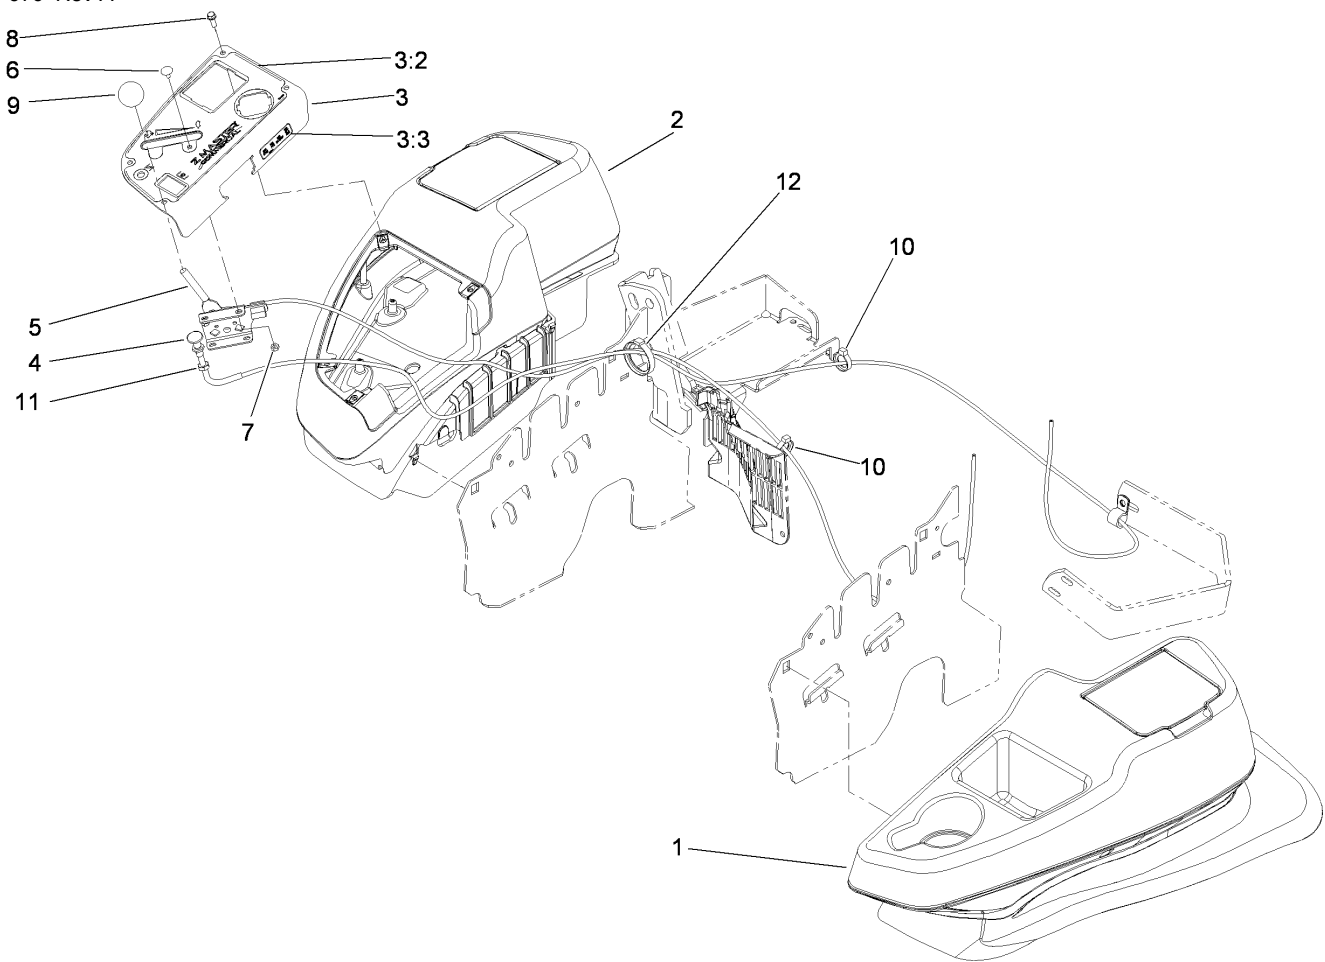


Fender, Console and Control Assembly

Ref	Part No.	Qty.	Description				
1	115-7401	1	LH Wide Fender/Console ASM				
2	115-7400	1	RH Wide Fender/Console ASM				
3	114-9836	1	Control Panel ASM				
3:2	114-9834	1	Decal-Panel, Control				
3:3	114-4466	1	Decal-Fuses				
4	115-2754	1	Control-Choke ASM				
5	115-2751	1	Control-Throttle ASM				
6	1-807513	2	Bolt-CARR				
7	3296-2	2	Nut-Lock, NI				
8	32105-15	4	Screw				
9	1-603175	1	Knob-Ball				
10	105-1853	2	Clamp-Hose				
11	3220-3	1	Nut-HJ				
12	117-7817	1	Clamp-Harness				

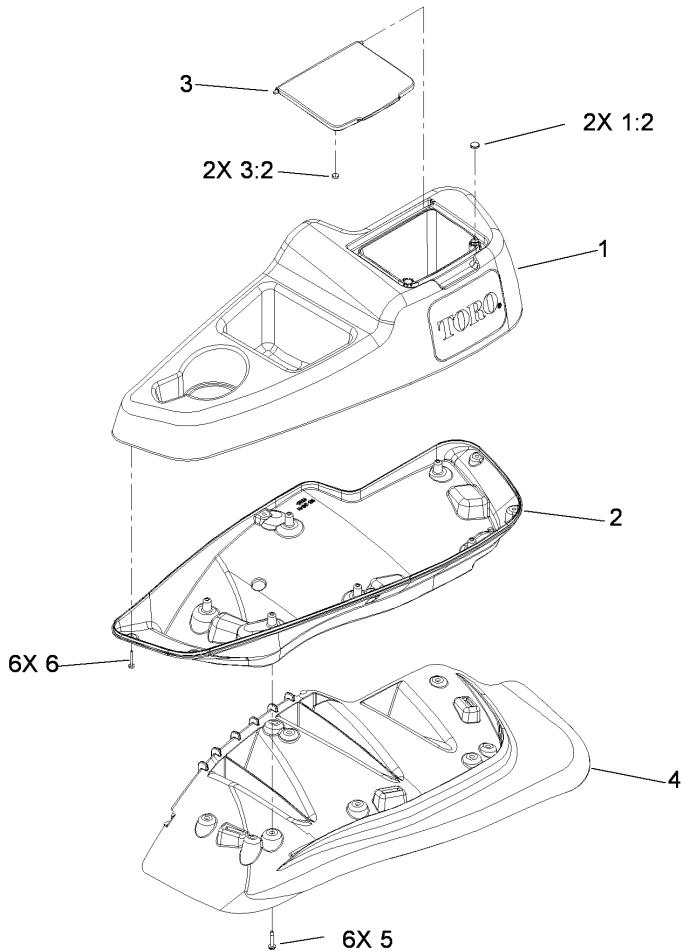


LH Console Assembly No. 115-7401

Ref	Part No.	Qty.	Description				
1	114-1539	1	LH Wide Console Top ASM				
1:2	117-0883	2	Puck				
2	115-3641	1	Console-Lwr, LH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9085	1	Fender-Wide, LH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

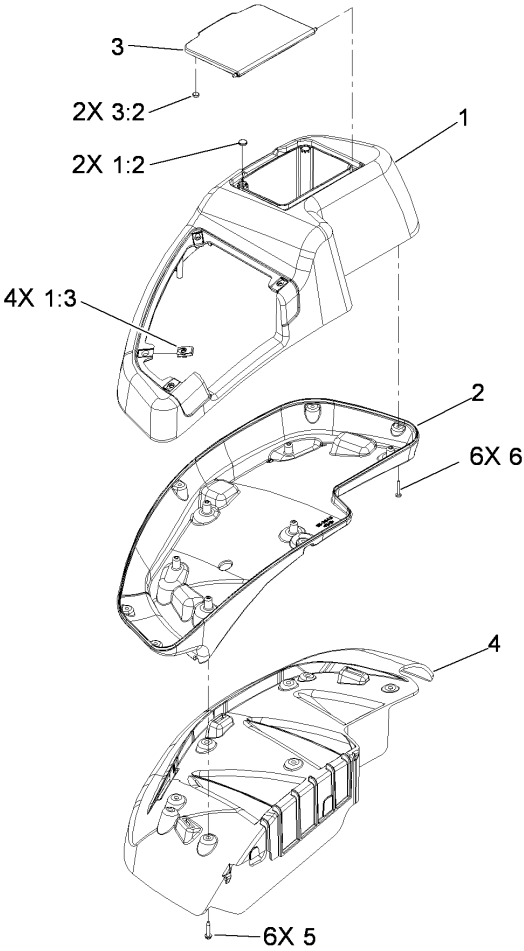

RH Console Assembly No. 115-7400


Ref	Part No.	Qty.	Description				
1	114-1538	1	RH Wide Top Console ASM				
1:2	117-0883	2	Puck				
1:3	107069	4	Clip				
2	115-3643	1	Console-Lwr, RH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9083	1	Fender-Wide, RH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

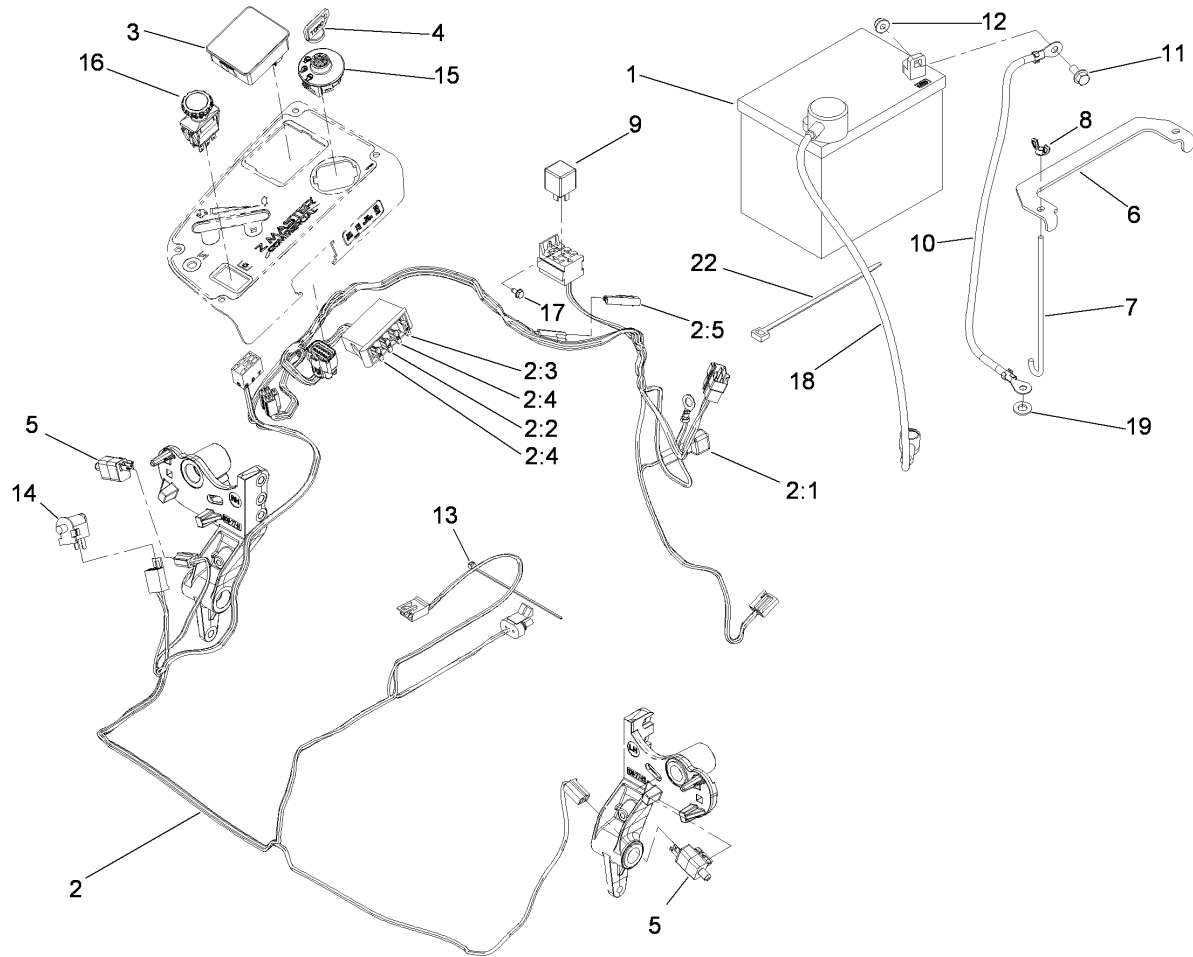

Electrical System Assembly

Ref	Part No.	Qty.	Description
1	104-2492	1	Battery
2	115-2796	1	Harness-Wire, Main
2:1	103-3895	1	Diode-Tvs
2:2	218-578	1	Fuse-10 Amp
2:3	109355	1	Fuse-15 Amp
2:4	109102	2	Fuse-25 Amp
2:5	116-0053	1	Cap-Plug
3	116-0916	1	Module-Meter, Hour
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch-Single Pole No
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut
9	1-643275	1	Relay
10	114-1218	1	Cable-Battery, Negative
11	3234-5	2	Screw-HHF
12	104-8300	2	Nut-Flange, NI
13	1-303287	3	Tie-Plastic
14	82-2190	1	Switch-Bail
15	116-0229	1	Switch-Ignition
16	116-0124	1	Switch-PTO, 10A
17	104-2065	1	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
19	3256-24	1	Washer-Flat


Ref	Part No.	Qty.	Description
22	1-303335	1	Tie-Plastic

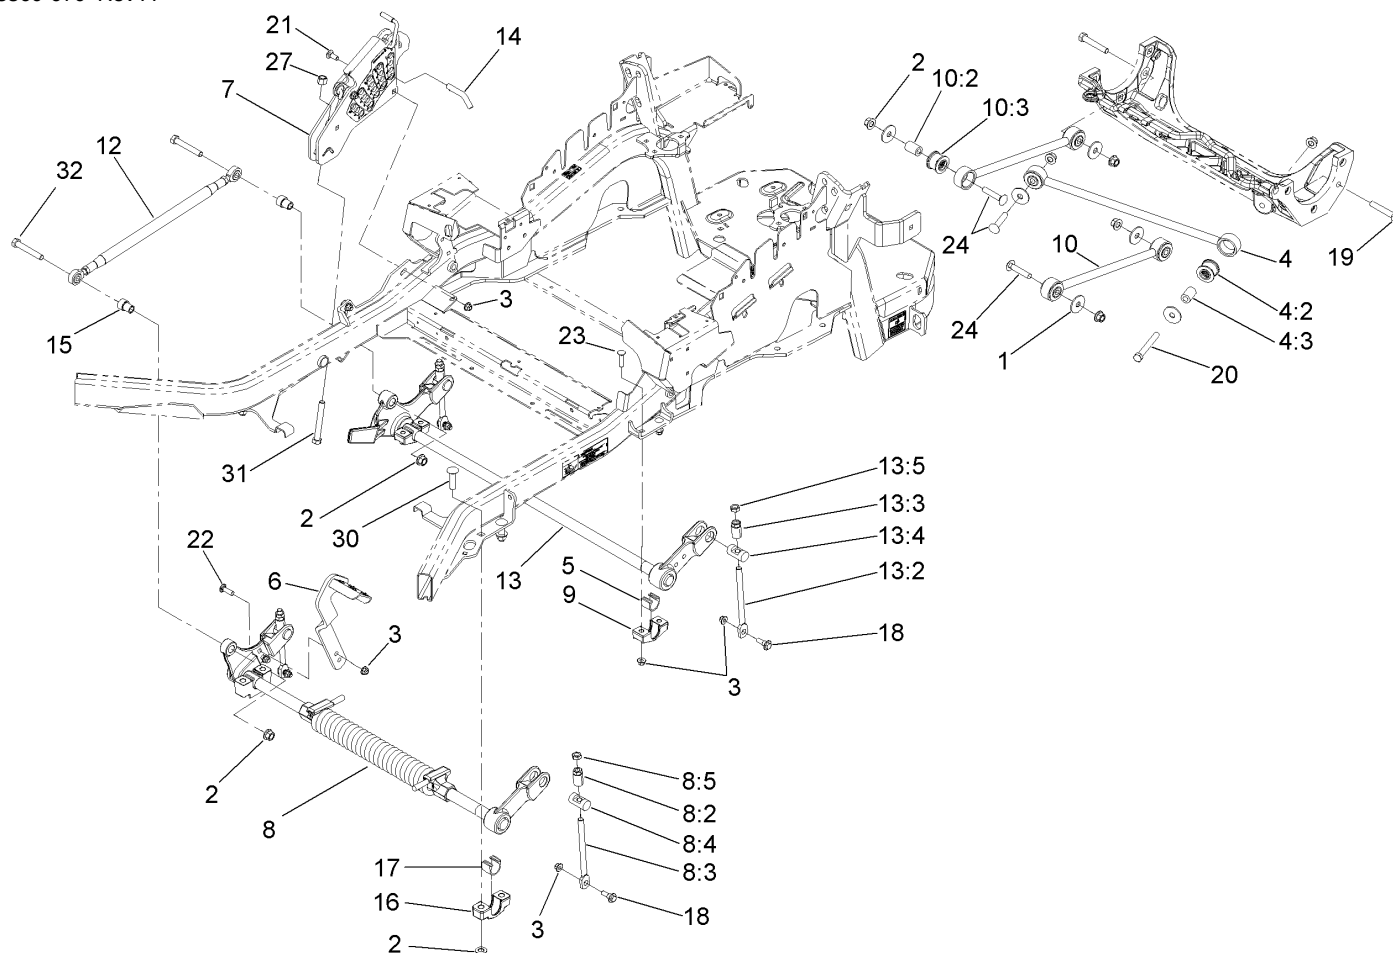

Deck Lift Assembly


Ref	Part No.	Qty.	Description
1	86-1990	6	Washer
2	99-5107	12	Nut-Lock
3	104-8301	12	Nut-Flange, NI
4	109-5013	1	Panhard Rod ASM
4:2	109-5009	2	Bushing-Suspension, Rubber
4:3	109-5010	2	Spacer
5	109-7173	2	Bearing-Cross, Rear Shaft
6	109-8737-01	1	Pedal-Foot
7	109-7438	1	HOC ASM
8	116-1651	1	Front Cross Shaft ASM
8:2	109-7840	2	Adjuster-Lift, Deck
8:3	109-8007	2	Link-Adjuster, Deck Lift
8:4	109-8353	2	Trunnion
8:5	3218-5	2	Nut-Jam
9	116-0818-03	2	Support-Bearing, Cross Shaft Rear
10	109-7952	2	Deck Strut ASM
10:2	109-5009	2	Bushing-Suspension, Rubber
10:3	109-5010	2	Spacer
12	116-0806	1	Side Link ASM
13	116-1619	1	Rear Cross Shaft ASM
13:2	109-8007	2	Link-Adjuster, Deck Lift
13:3	109-7840	2	Adjuster-Lift, Deck
13:4	109-8353	2	Trunnion

Ref	Part No.	Qty.	Description
13:5	3218-5	2	Nut-Jam
14	109-8757	1	Pin-HOC
15	116-0795	2	Bushing-Flange
16	109-9409	2	Support-Cross Shaft, Bearing Front
17	109-9410	2	Bearing-Shaft Front, Cross
18	109-9840	4	Screw-Shoulder, HHF
19	325-12	2	Screw-HH
20	325-17	1	Screw-HH
21	3231-2	2	Screw-CARR
22	3231-4	2	Screw-CARR
23	3231-5	4	Screw-CARR
24	3233-34	3	Screw-CARR
27	3296-23	1	Nut-Lock, NI
30	3233-37	4	Screw-CARR, Short Neck
31	116-0559	1	Bolt-TAP
32	325-13	2	Screw-HH

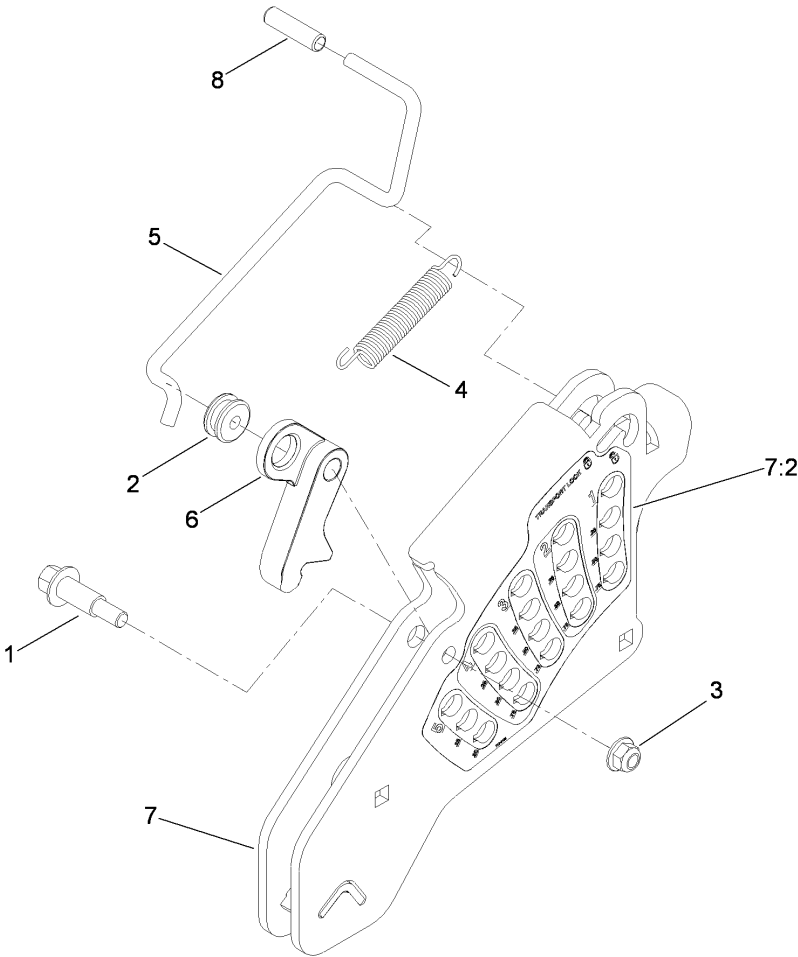


Height-of-Cut Assembly No. 109-7438

Ref	Part No.	Qty.	Description				
1	62-1330	1	Bolt-Shoulder				
2	109-7130	1	Grommet				
3	104-8301	1	Nut-Flange, NI				
4	109-7124	1	Spring-Extension				
5	109-7128	1	Rod-Lock, Transport				
6	116-0118	1	Pawl-Transport, HOC				
7	109-7335	1	HOC Plate ASM				
7:2	116-0752	1	Decal-HOC				
8	109-8250	1	Grip-Lever				

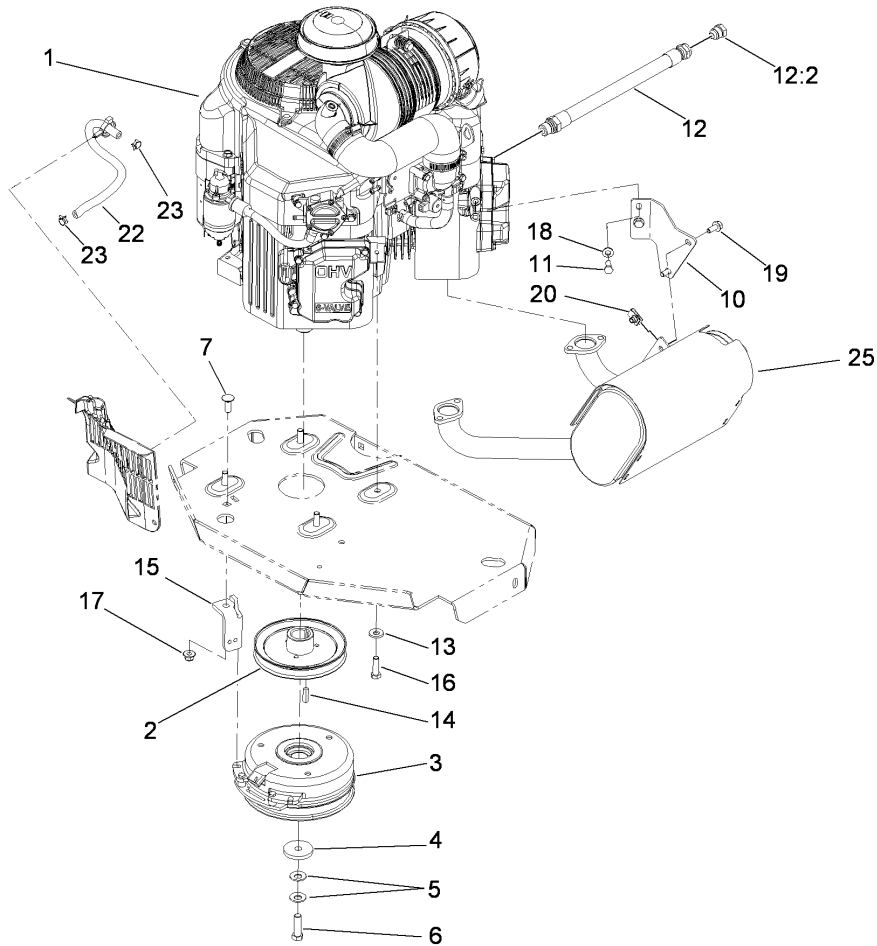

Engine, Muffler and Clutch Assembly


Ref	Part No.	Qty.	Description				
1		1	Engine-Kawasaki, Fx921V-As04				
2	109-9905	1	Sheave				
3	116-1621	1	Clutch Kit				
4	109-6919	1	Washer-Clutch				
5	1-603610	2	Washer-Spring				
6	109-9761	1	Screw-HH W/Loctite				
7	3231-22	1	Screw-CARR				
10	116-1587	1	Bracket-Muffler				
11	33114-020	2	Screw-HH				
12	109-4490	1	Oil Drain Hose ASM				
12:2	109-1012	1	Plug				
13	98-5975	4	Washer-Belleville				
14	1-807259	1	Key				
15	109-8138-01	1	Anchor-Clutch				
16	323-7	4	Screw-HH				
17	104-8301	1	Nut-Flange, NI				
18	1-303334	2	Washer-Spring				
19	3234-5	2	Screw-HHF				
20	94-2413	2	U-Nut				
22	109-0296	1	Hose-Fuel				
23	2412-98	2	Clamp				
25	116-1707	1	Muffler-Big Block, Kawasaki				

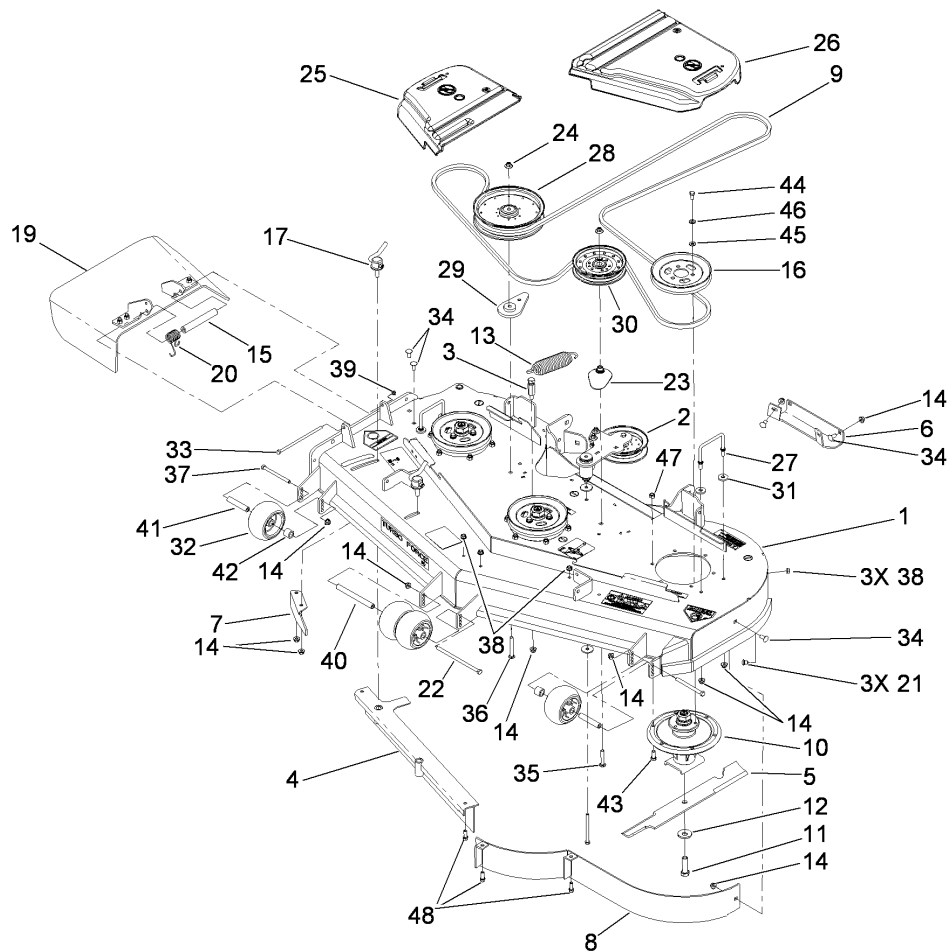

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-4180	1	Deck Decal ASM
2	114-5875	1	Idler Arm ASM
3	114-5867	1	Anchor-Spring, Tall
4	105-7669-01	1	Baffle ASM
5	105-7718-03	3	Blade-Hi Flow
6	105-8792-01	1	Plate-Skid
7	106-3216-01	1	Baffle-Discharge
8	114-5842-01	1	Baffle ASM
9	114-5858	1	Belt-V
10	117-3840	3	Spindle ASM
11	51-4060	3	Screw-Blade
12	103-0865	3	Washer-Blade Bolt, Heavy
13	116-0133	1	Extension-Spring
14	104-8301	15	Nut-Flange, NI
15	105-4622	1	Spacer
16	105-7734	3	Pulley
17	107-1664	2	Lever ASM
19	108-2792	1	Rubber Deflector ASM
20	108-4052	1	Spring-Torsion
21	108-5387	3	Screw-CARR
22	108-5388	1	Screw-HH
23	109-2872	1	Spacer-Pulley
24	109-6658	2	Nut-Flange, NI (Split)
25	116-0094	1	Cover-Belt, RH

Ref	Part No.	Qty.	Description
26	109-6938	1	Cover-Belt, LH
27	109-6982	2	Wireform-Cover
28	109-8590	1	Pulley-Idler
29	109-9416	1	Spacer-Idler
30	114-5895	1	Pulley-Idler, Flat
31	1-373034	4	Washer
32	1-603299	4	Roller-Scalp, Anti
33	322-50	1	Screw-HH
34	3231-27	7	Screw-CARR
35	3231-40	1	Bolt-CARR
36	3231-42	1	Screw-CARR
37	323-23	2	Screw-HH
38	3290-357	6	Nut-HHF, Whiz
39	3296-47	1	Nut-Lock, NI
40	98-5967	1	Spacer-Wheel
41	98-7912	2	Tube-Spanner
42	98-7913	2	Tube-Spacer
43	33115-025	18	Screw-HH
44	323-4	9	Screw-HH
45	3256-24	9	Washer-Flat
46	3290-455	9	Washer-Belleville
47	33025-00	18	Nut-Lock
48	92-1624	3	Screw-HWH

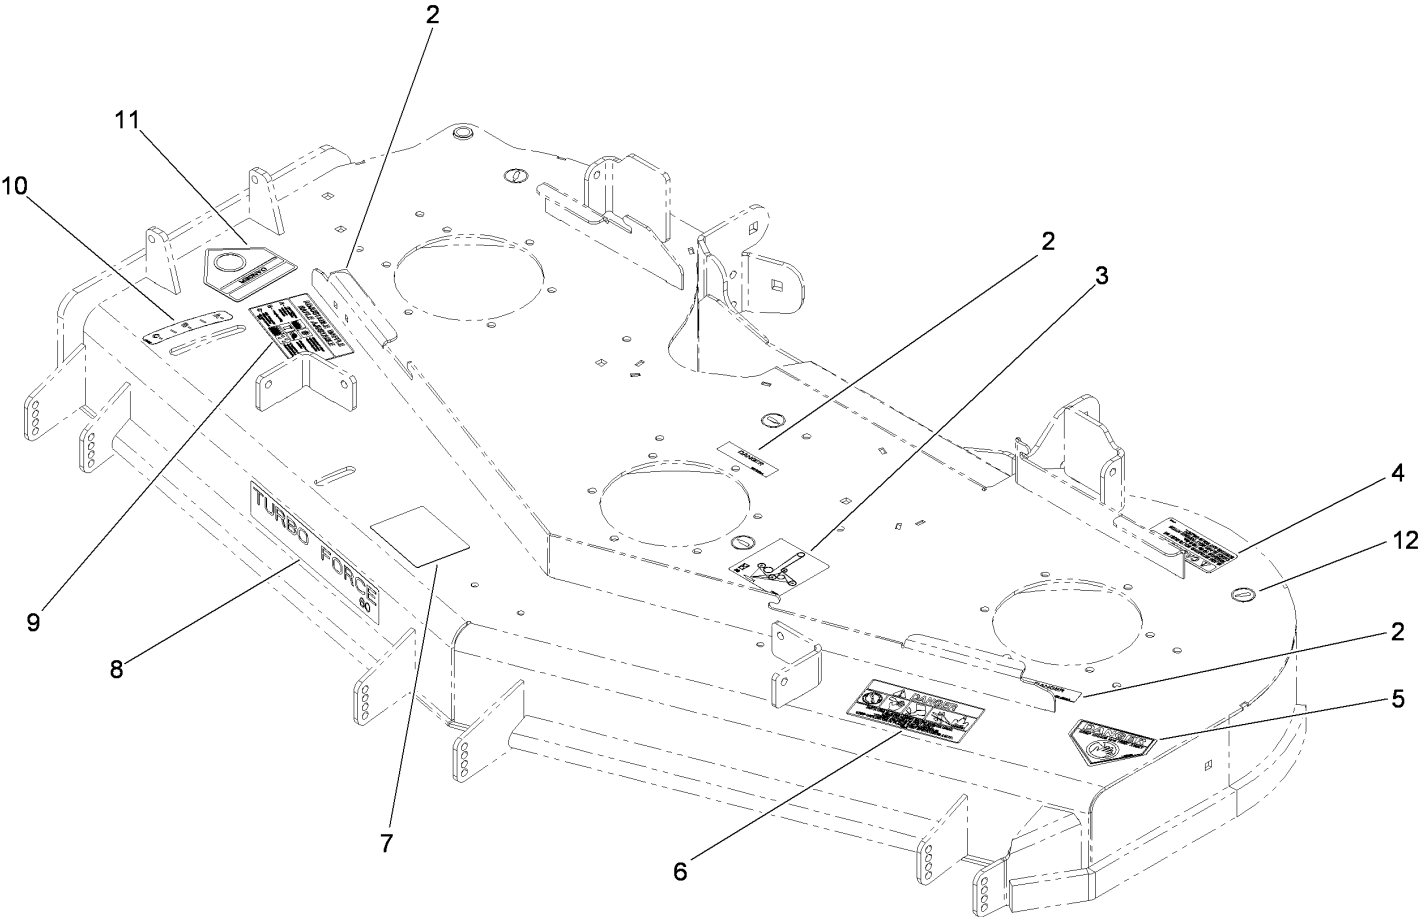


Deck Decal Assembly No. 112-4180

Ref	Part No.	Qty.	Description				
2	98-5954	3	Decal-Cover, Missing				
3	115-7445	1	Decal-Routing, Deck Belt				
4	68-8340	1	Decal-Torque				
5	1-403005	1	Decal-Danger				
6	66-1340	1	Decal-Danger, Thrown Object				
7	105-7798	1	Decal-Scalp, Anti				
8	107-1619	1	Decal				
9	110-2068	1	Decal-Adjustment, Baffle				
10	110-2067	1	Decal-Setting, Baffle				
11	54-9220	1	Decal-Danger				
12	58-6520	4	Decal-Grease				

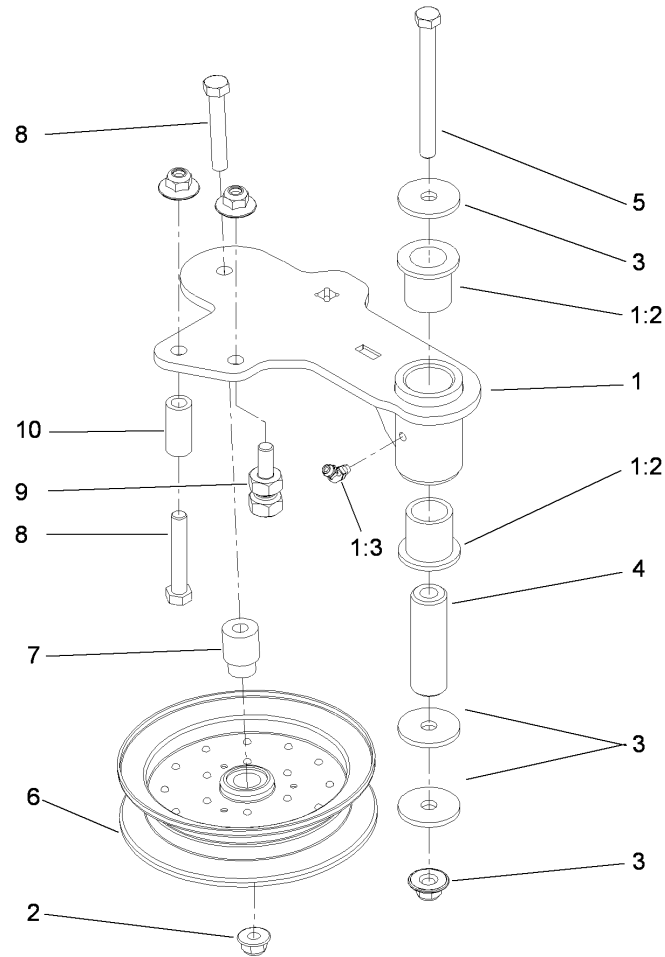

Idler Assembly

Ref	Part No.	Qty.	Description				
1	114-5870	1	Idler Arm ASM				
1:2	1-303514	2	Bearing-Flanged				
1:3	1481	1	Fitting-Grease				
2	109-6658	4	Nut-Flange, NI (Split)				
3	1-213069	3	Washer				
4	114-5848	1	Spacer-Plain				
5	98-5961	1	Screw-HH				
6	103-8743	1	Pulley-Idler, Flanged				
7	112-4212	1	Mount-Pulley				
8	323-11	2	Screw-HH				
9	114-5866	1	Anchor-Spring, Short				
10	104-0151	1	Spacer				

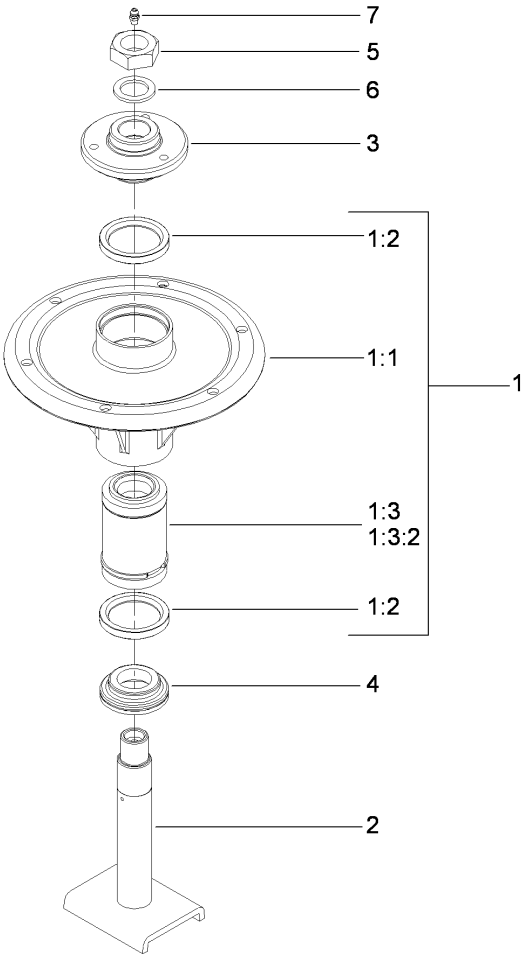


Spindle Assembly No. 117-3840

Ref	Part No.	Qty.	Description				
② 1		1	Spindle Bearing ASM				
② 1:1		1	Housing-Spindle				
1:2	253-154	2	Seal-Oil				
1:3	71-2530	1	Bearing/Spacer Kit				
② 1:3:2		1	Spacer-Bearing				
2	117-3841	1	Spindle Shaft ASM				
3	114-1161	1	Hub-Spline				
4	69-6950	1	Spacer-Shaft, Spindle				
5	3296-49	1	Nut-Lock, NI				
6	3-8514	1	Washer-Thrust				
7	302-57	1	Fitting-Grease				


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

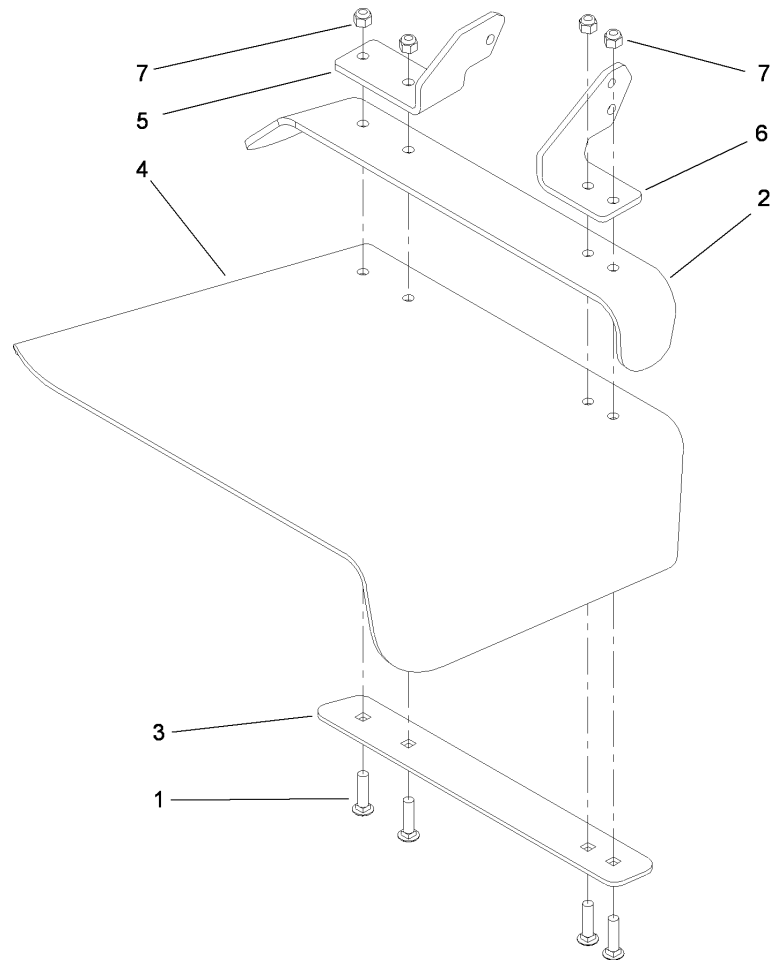

Rubber Deflector Assembly No. 108-2792


Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	106-3246-01	1	Deflector				
3	106-3248-03	1	Strap-Discharge				
4	108-5029	1	Deflector-Rubber				
5	108-4059-01	1	Plate-Hinge, Rear				
6	106-3253-01	1	Plate-Hinge, Front				
7	3296-39	4	Nut-Lock, NI				

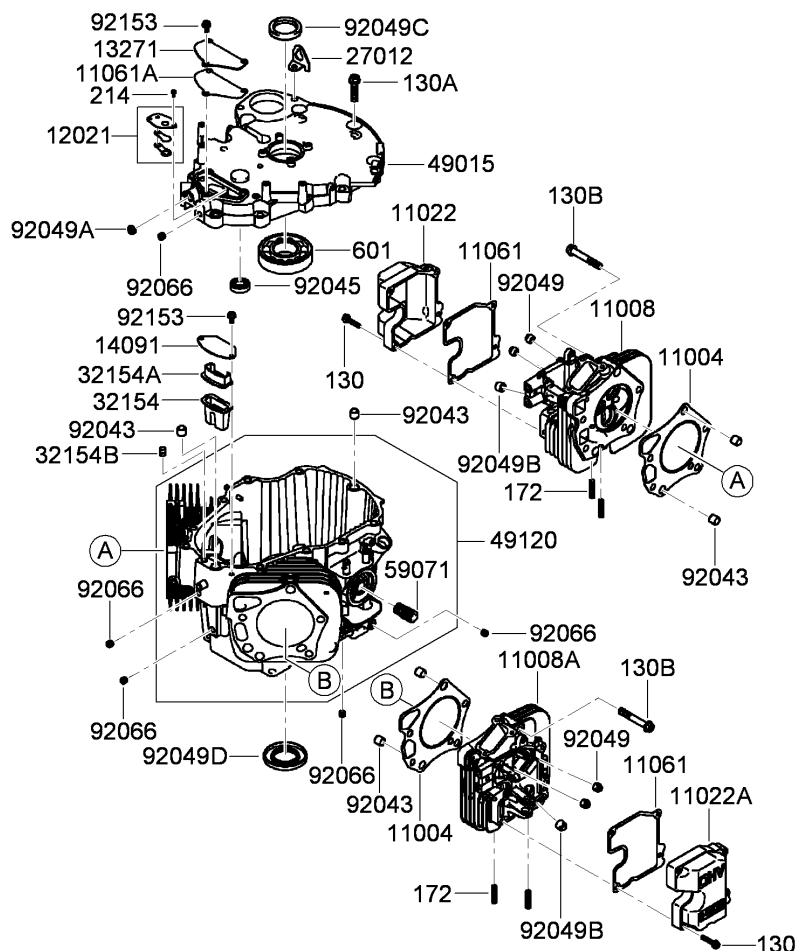

Cylinder and Crankcase Assembly Kawasaki FX921V-AS04


Ref	Part No.	Qty.	Description
③130	130AA0630	8	Bolt-Flanged (6X30)
③130A	130CA1040	11	Bolt-Flanged (10X40)
③130B	130CA1065	10	Bolt-Flanged (10X65)
③172	172BA0818	4	Bolt-Stud (8X18)
③214	214AA0408	2	Screw-Pan +- (4X8)
③601	601A6308	1	Bearing-Ball
③11004	11004-7023	2	Gasket-Head
③11008	11008-7043	1	Head ASM (Cylinder No.1)
③11008A	11008-7044	1	Head ASM (Cylinder No.2)
③11022	11022-7012	1	Case-Rocker, No.1
③11022A	11022-7013	1	Case-Rocker, No.2
③11061	11061-7055	2	Gasket-Case, Rocker
③11061A	11061-7065	1	Gasket-Cover, Breather
③12021	12021-7003	1	Breather Reed Valve ASM
③13271	13271-7037	1	Plate-Cover, Breather
③14091	14091-7052	1	Cover-Breather
③27012	27012-7004	1	Hook
③32154	32154-7014	1	Pipe-Breather
③32154A	32154-7015	1	Pipe-Breather
③32154B	32154-7019	1	Pipe
③49015	49015-7060	1	Cover-Crankcase
③49120	49120-6174	1	Crankcase
③59071	59071-2079	1	Joint
③92043	92043-1266	6	Pin

Ref	Part No.	Qty.	Description
③92045	92045-7002	1	Bearing-Ball, A (15X32X9 6002)
③92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
③92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S)
③92049B	92049-7020	2	Seal-Oil (7X15X13)
③92049C	92049-7024	1	Seal-Oil, S D (40X54X9 R Hs)
③92049D	92049-7025	1	Seal-Oil, S D (40X72X8 L Vs)
③92066	92066-7026	5	Plug
③92153	92153-7043	5	Bolt (6X12)

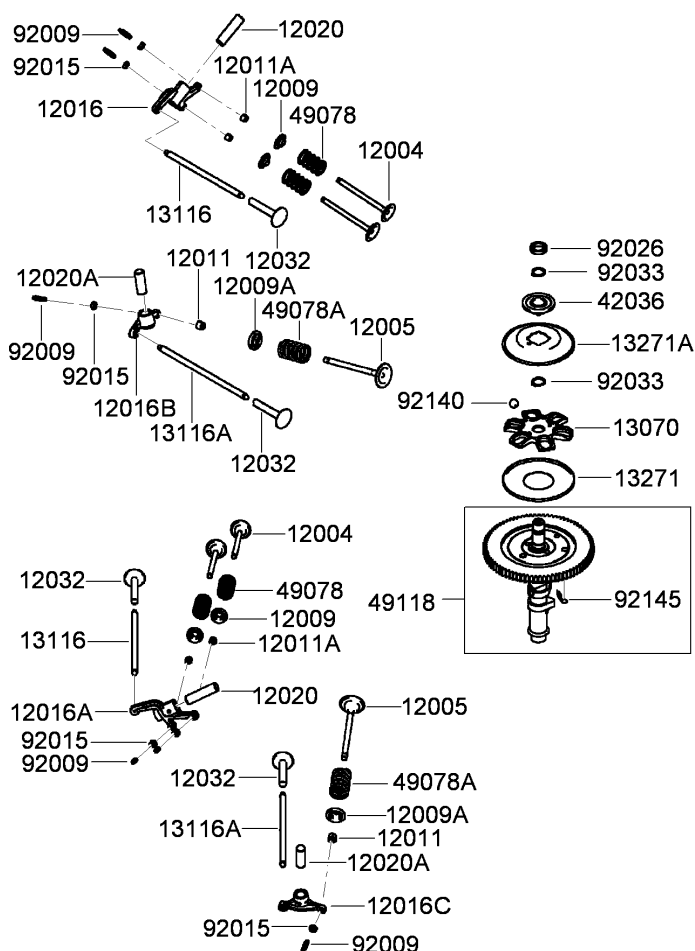

Valve and Camshaft Assembly Kawasaki FX921V-AS04


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③12004	12004-7006	4	Valve-Intake	③92026	92026-7019	1	Spacer
③12005	12005-7007	2	Valve-Exhaust	③92033	92033-7001	2	Ring-Snap
③12009	12009-7001	4	Retainer-Spring, Valve	③92140	92140-7005	6	Ball
③12009A	12009-7002	2	Retainer-Spring, Valve	③92145	92145-7001	1	Spring
③12011	12011-2052	4	Collet				
③12011A	12011-2056	8	Collet				
③12016	12016-7014	1	Arm-Rocker (No.1 Intake)				
③12016A	12016-7015	1	Arm-Rocker (No.2 Intake)				
③12016B	12016-7018	1	Arm-Rocker (No.1 Exhaust)				
③12016C	12016-7019	1	Arm-Rocker (No.2 Exhaust)				
③12020	12020-7001	2	Shaft-Rocker (Intake)				
③12020A	12020-7003	2	Shaft-Rocker (Exhaust)				
③12032	12032-7002	4	Tappet				
③13070	13070-7004	1	Guide				
③13116	13116-2054	2	Rod-Push				
③13116A	13116-7005	2	Rod-Push				
③13271	13271-7007	1	Plate				
③13271A	13271-7021	1	Plate-Governor				
③42036	42036-7010	1	Sleeve				
③49078	49078-7002	4	Spring-Valve, Engine (Intake)				
③49078A	49078-7004	2	Spring-Valve, Engine (Exhaust)				
③49118	49118-7018	1	Camshaft ASM				
③92009	92009-1109	6	Screw				
③92015	92015-1137	6	Nut				

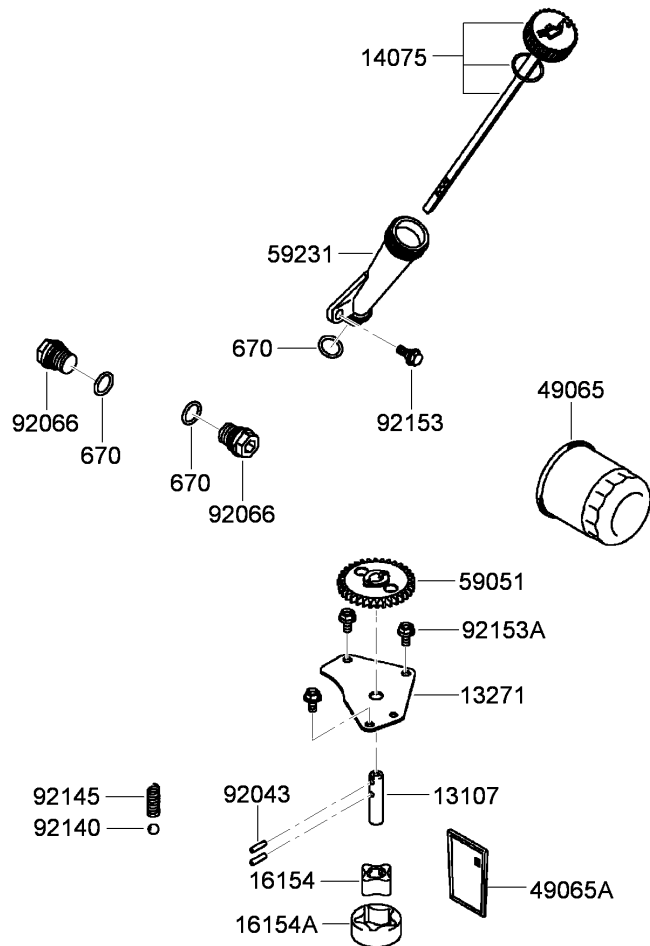

Lubrication Equipment Assembly


Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
③ 670	670D2016	3	O-Ring (16Mm)				
③ 13107	13107-7009	1	Shaft				
③ 13271	13271-7034	1	Plate-Rotor, Pump				
③ 14075	14075-7011	1	Cap ASM				
③ 16154	16154-7007	1	Rotor-Pump (In)				
③ 16154A	16154-7008	1	Rotor-Pump (Out)				
③ 49065	49065-2078	1	Filter-Oil				
③ 49065A	49065-7004	1	Filter-Oil				
③ 59051	59051-7026	1	Gear-Spur, Oil Pump				
③ 59231	59231-7011	1	Filler				
③ 92043	92043-7003	2	Pin				
③ 92066	92066-7003	2	Plug				
③ 92140	92140-7003	1	Ball				
③ 92145	92145-7046	1	Spring				
③ 92153	92153-7007	1	Bolt				
③ 92153A	92153-7043	3	Bolt (6X12)				

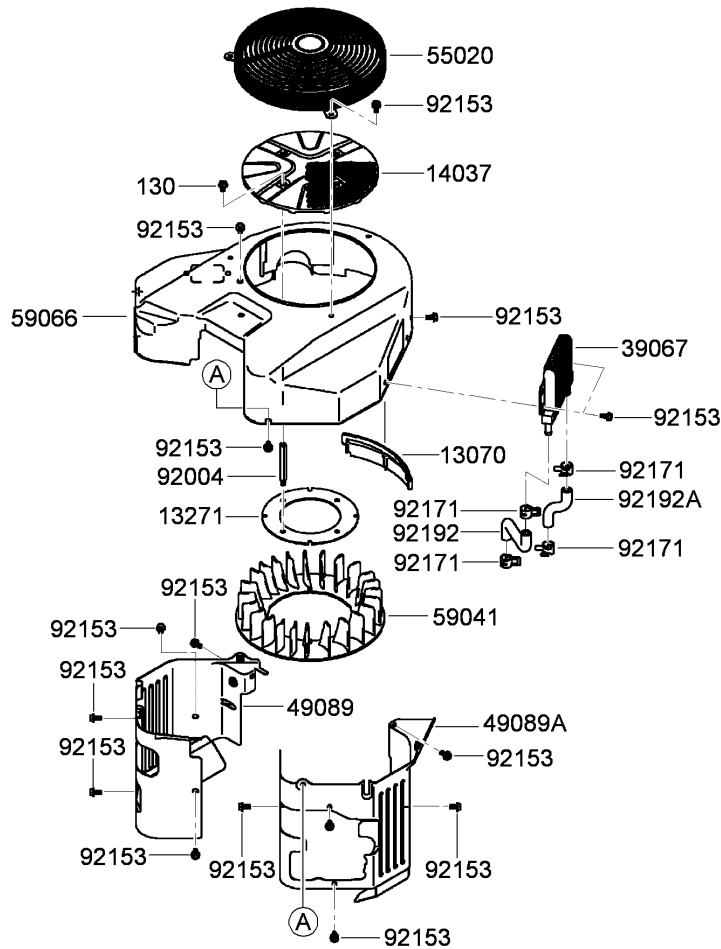


Cooling Equipment Assembly
Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
❸130	130AA0610	4	Bolt-Flanged (6X10)				
❸13070	13070-7013	1	Guide				
❸13271	13271-7035	1	Plate-Fan				
❸14037	14037-7029-9H	1	Screen				
❸39067	39067-7007	1	Cooler-Oil				
❸49089	49089-7062-753	1	Shroud-Engine				
❸49089A	49089-7063-753	1	Shroud-Engine				
❸55020	55020-7016-9H	1	Guard				
❸59041	59041-7013	1	Fan				
❸59066	59066-7043-753	1	Housing-Fan				
❸92004	92004-7021	4	Stud-Screen				
❸92153	92153-7043	18	Bolt (6X12)				
❸92171	92171-7015	4	Clamp				
❸92192	92192-7078	1	Tube				
❸92192A	92192-7079	1	Tube				

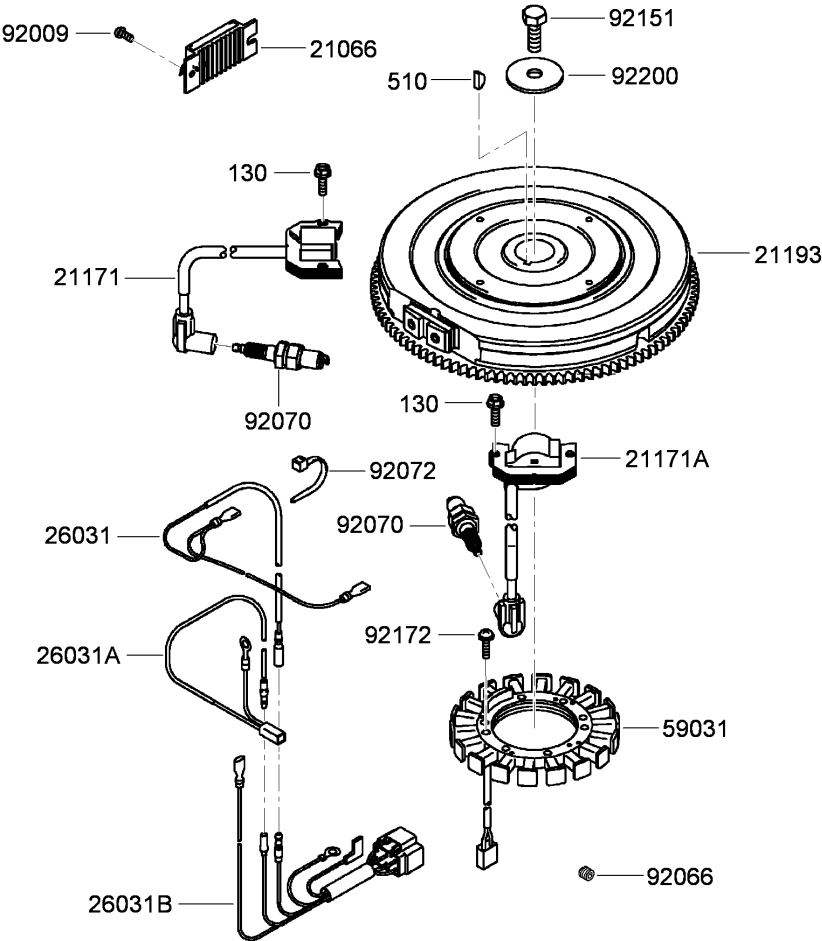


Electric Equipment Assembly
Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
❶130	130AA0620	4	Bolt-Flanged (6X20)				
❶510	510A5100	1	Key-Woodruff				
❶21066	21066-7011	1	Regulator-Voltage				
❶21171	21171-7042	1	Ignition Coil ASM (No.1 Cylinder)				
❶21171A	21171-7043	1	Ignition Coil ASM (No.2 Cylinder)				
❶21193	21193-7034	1	Flywheel ASM				
❶26031	26031-7033	1	Harness				
❶26031A	26031-7034	1	Harness				
❶26031B	26031-7039	1	Harness				
❶59031	59031-7017	1	Coil-Charging				
❶92009	92009-2308	2	Screw				
❶92066	92066-7026	1	Plug				
❶92070	92070-2088	2	Spark Plug, B P R 5E S (N G K) Solid				
❶92072	92072-7003	3	Band				
❶92151	92151-2097	1	Bolt (12X30)				
❶92172	92172-7018	4	Screw (5X20)				
❶92200	92200-7040	1	Washer (12.2X46X3)				

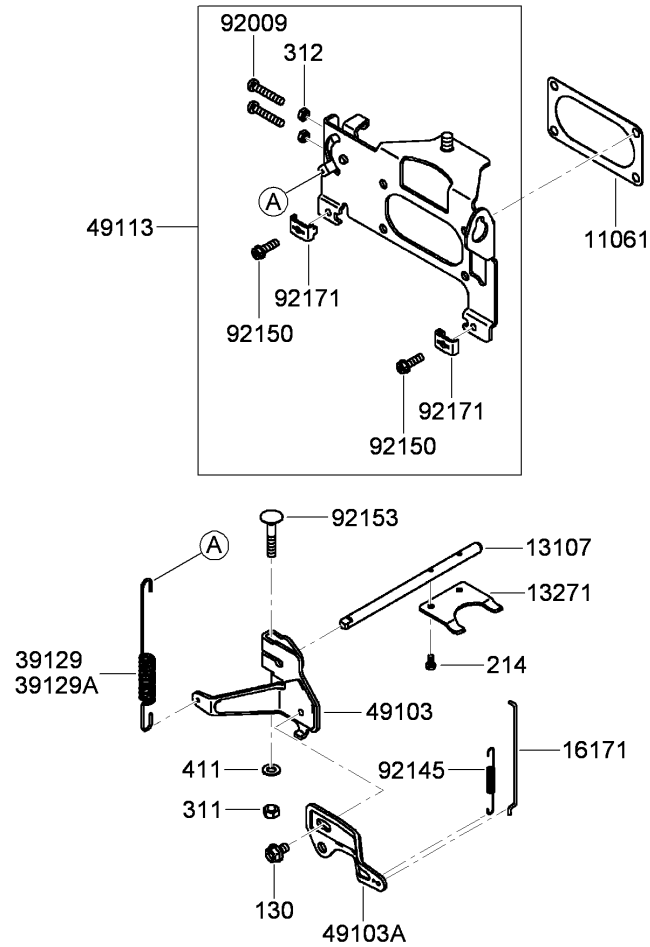

Control Equipment Assembly
Kawasaki FX921V-AS04


Ref	Part No.	Qty.	Description				
❸130	130BA0610	1	Bolt-Flanged (6X10)				
❸214	214AA0408	2	Screw-Pan +- (4X8)				
❸311	311AA0600	1	Nut-Hex (6Mm)				
❸312	312AA0500	2	Nut-Hex (5Mm)				
❸411	411AA0600	1	Washer-Plain (6Mm)				
❸11061	11061-7056	1	Gasket-Pipe, Intake				
❸13107	13107-7040	1	Shaft				
❸13271	13271-7038	1	Plate				
❸16171	16171-7018	1	Link				
❸39129	39129-7017	1	Spring-Governor (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)				
❸39129A	39129-7027	1	Spring-Governor				
❸49103	49103-7009	1	Arm-Governor				
❸49103A	49103-7010	1	Arm-Governor				
❸49113	49113-7048	1	Control Panel ASM				
❸92009	92009-2381	2	Screw (5X30)				
❸92145	92145-7050	1	Spring				
❸92150	92150-2182	2	Bolt (5X18)				
❸92153	92153-7033	1	Bolt (6X35)				
❸92171	92171-7018	2	Clamp				

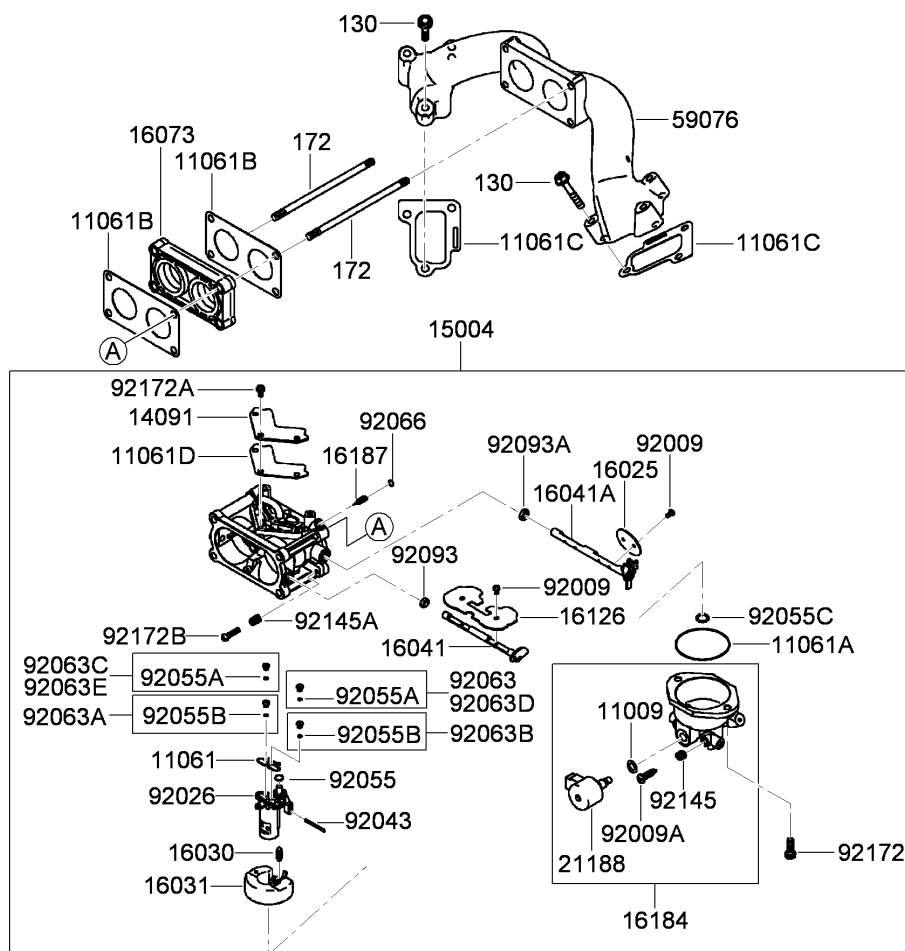

Carburetor Assembly Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description
①130	130AA0635	6	Bolt-Flanged (6X35)
①172	172BA06120	2	Bolt-Stud (6X120)
①11009	11009-2056	1	Gasket
①11061	11061-7037	1	Gasket
①11061A	11061-7038	1	Gasket
①11061B	11061-7057	2	Gasket-Insulator
①11061C	11061-7062	2	Gasket-Manifold
①11061D	11061-7067	1	Gasket
①14091	14091-7059	1	Cover
①15004	15004-7009	1	Carburetor-ASM
①16025	16025-7012	2	Valve-Throttle
①16030	16030-7004	1	Valve-Float
①16031	16031-7003	1	Float
①16041	16041-7035	1	Shaft-Chock, Carburetor
①16041A	16041-7037	1	Shaft-Throttle, Carburetor
①16073	16073-7010	1	Insulator
①16126	16126-7019	1	Valve-Chock
①16184	16184-7021	1	Float Chamber ASM
①16187	16187-7005	2	Needle-Jet
①21188	21188-7003	1	Solenoid
①59076	59076-7012	1	Manifold-Intake
①92009	92009-7003	6	Screw
①92009A	92009-7006	1	Screw-Drain
①92026	92026-7022	1	Spacer


Ref	Part No.	Qty.	Description
①92043	92043-7014	1	Pin
①92055	92055-7012	1	O-Ring
①92055A	92055-7013	1	O-Ring
①92055B	92055-7013	2	O-Ring
①92055C	92055-7016	1	O-Ring
①92063	92063-7099	1	Jet-Main (No.134, 6560 Ft)
①92063A	92063-7099	1	Jet-Main (No.134, 6560 Ft)
①92063B	92063-7100	1	Jet-Main (No.140)
①92063C	92063-7101	1	Jet-Main (No.131, 3280 Ft)
①92063D	92063-7102	1	Jet-Main (No.137, 3280 Ft)
①92063E	92063-7103	1	Jet-Main (No.128, 6560 Ft)
①92066	92066-7009	2	Plug-Extension
①92093	92093-7001	1	Seal (I D 5.9)
①92093A	92093-7002	1	Seal (I D 6.9)
①92145	92145-7011	1	Spring
①92145A	92145-7039	1	Spring
①92172	92172-7005	2	Screw
①92172A	92172-7006	3	Screw
①92172B	92172-7031	1	Screw-Adjust, Throttle

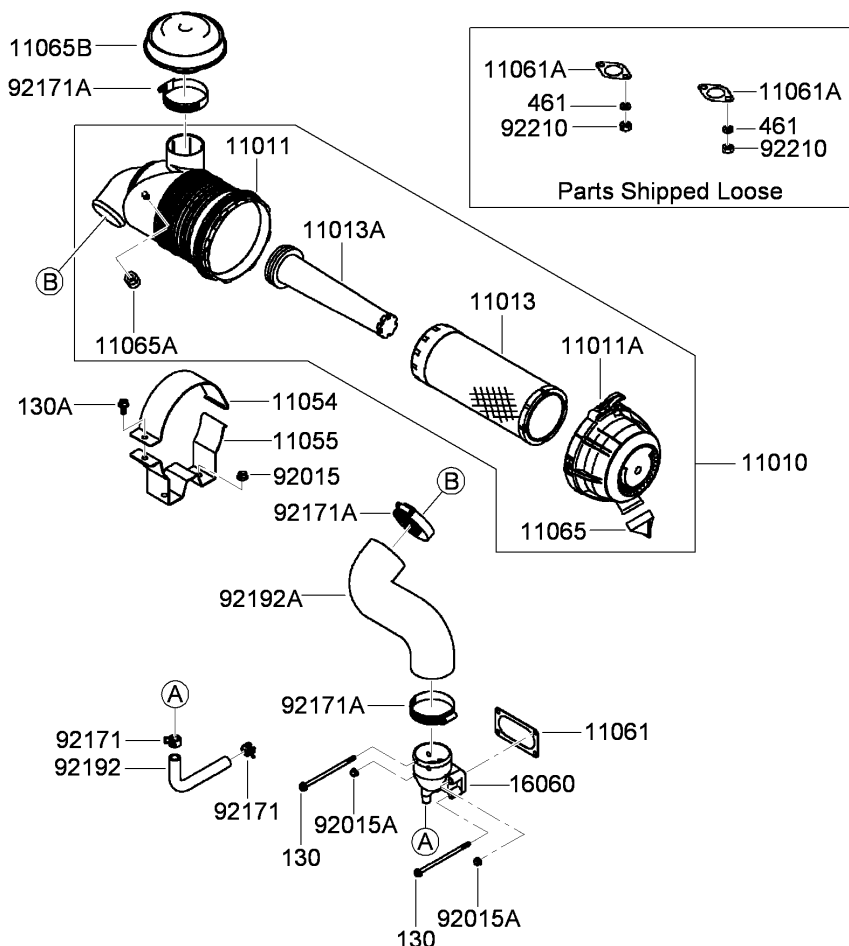

Air Filter and Muffler Assembly Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description
③ 130	130AA06120	2	Bolt-Flanged (6X120)
③ 130A	130AA0816	1	Bolt-Flanged (8X16)
③ 461	461DA0800	4	Washer-Spring (8Mm)
③ 11010	11010-7020	1	Air Filter ASM
③ 11011	11011-7047	1	Case-Filter, Air
③ 11011A	11011-7050	1	Case-Filter, Air
③ 11013	11013-7038	1	Element-Filter, Air
③ 11013A	11013-7039	1	Element-Filter, Air
③ 11054	11054-7013-9X	1	Bracket
③ 11055	11055-7010-9H	1	Bracket
③ 11061	11061-7056	1	Gasket-Pipe, Intake
③ 11061A	11061-7061	2	Gasket-Muffler
③ 11065	11065-7008	1	Cap
③ 11065A	11065-7009	1	Cap
③ 11065B	11065-7017	1	Cap
③ 16060	16060-6006	1	Pipe-Intake
③ 92015	92015-1143	2	Nut
③ 92015A	92015-1367	2	Nut
③ 92171	92171-7013	2	Clamp
③ 92171A	92171-7023	3	Clamp-Filter, Air
③ 92192	92192-7075	1	Tube (12.6X18.6X183)
③ 92192A	92192-7096	1	Tube-Filter, Air


Ref	Part No.	Qty.	Description
③ 92210	92210-7027	4	Nut (M8)

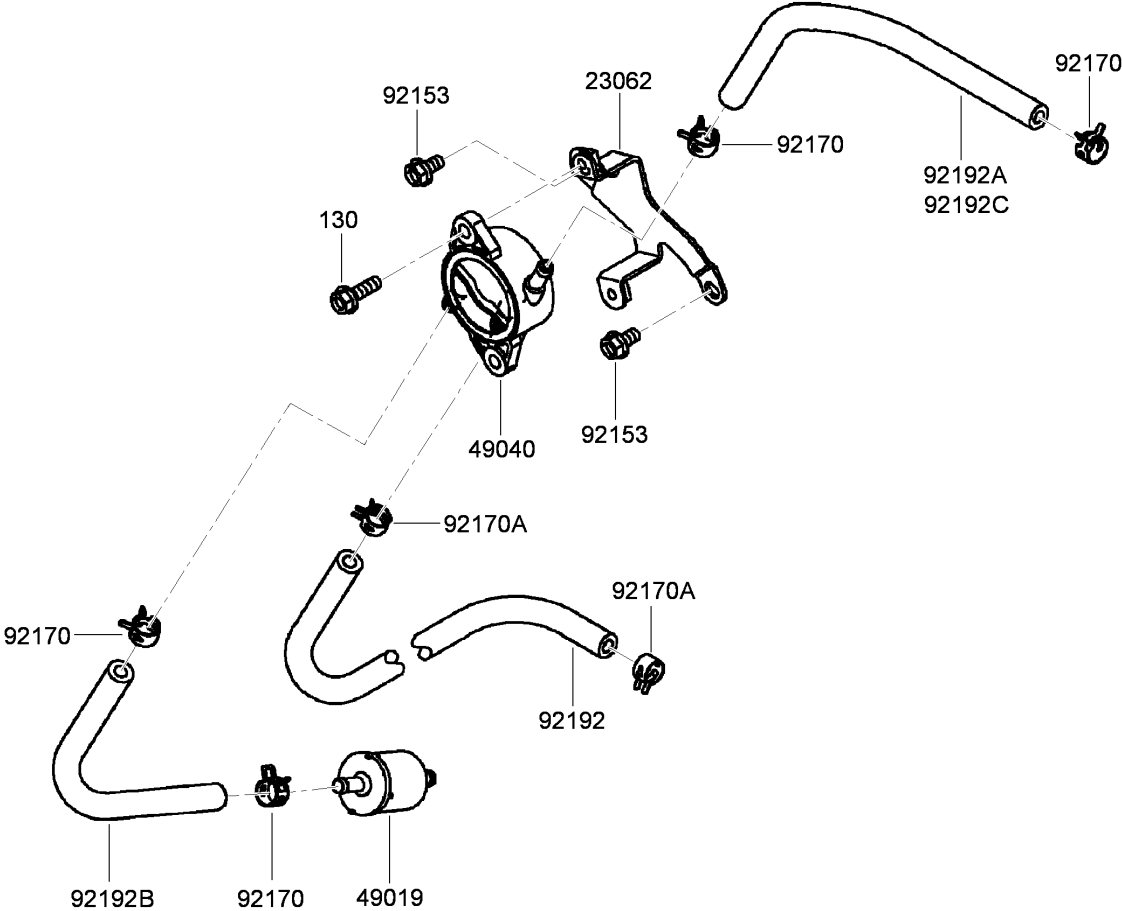

Fuel Tank and Fuel Valve Assembly

Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
❶ 130	130AA0620	2	Bolt-Flanged (6X20)				
❶ 23062	23062-7020	1	Bracket ASM				
❶ 49019	49019-7001	1	Filter-Fuel				
❶ 49040	49040-7009	1	Pump-Fuel				
❶ 92153	92153-7043	2	Bolt (6X12)				
❶ 92170	92170-2009	4	Clamp				
❶ 92170A	92170-2088	2	Clamp				
❶ 92192	92192-7077	1	Tube (6.4X12.7X318)				
❶ 92192A	92192-7140	1	Tube (6.35X12.7X220) (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)				
❶ 92192B	92192-7145	1	Tube (6.35X12.7X185)				
❶ 92192C	92192-7160	1	Tube (6.35X12.7X230)				

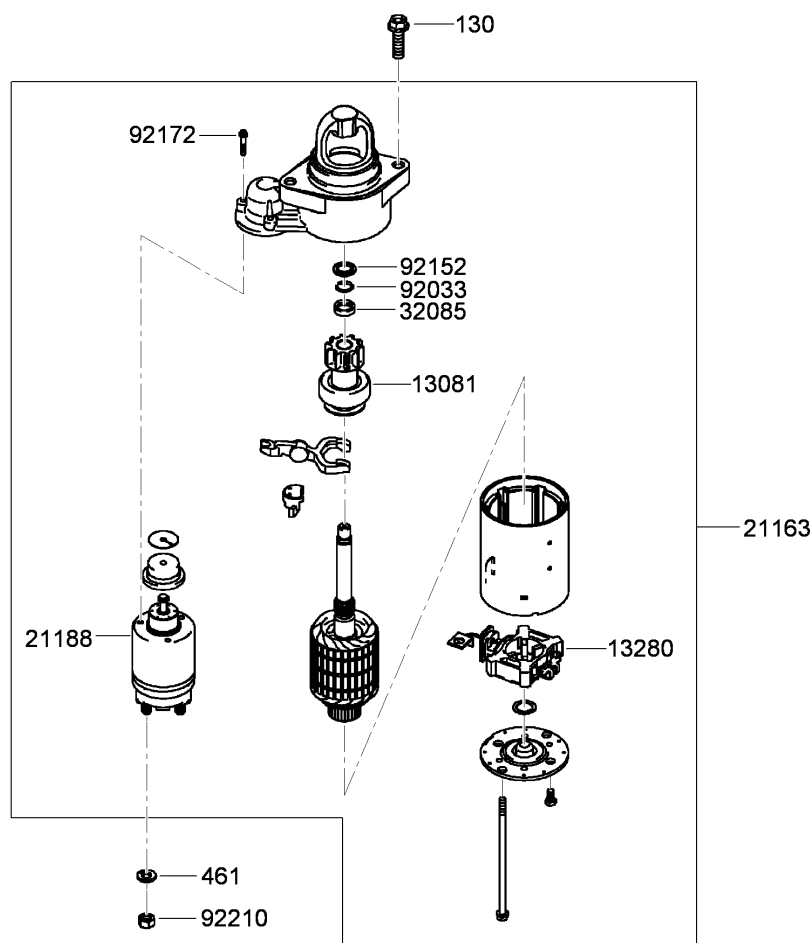

Starter Assembly

Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
③130	130AA0830	2	Bolt-Flanged (8X30)				
③461	461DA0800	1	Washer-Spring (8Mm)				
③13081	13081-7001	1	Clutch ASM				
③13280	13280-7002	1	Holder				
③21163	21163-7021	1	Starter-Electric				
③21188	21188-7005	1	Solenoid				
③32085	32085-7001	1	Stopper				
③92033	92033-7014	1	Ring-Snap				
③92152	92152-7013	1	Collar				
③92172	92172-7032	3	Screw				
③92210	92210-7027	1	Nut (M8)				

Attachments and Accessories

For 74955CP - Z Master G3 Riding Mower, with 60in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Blade-Mid Flow, 20.5 Inch	105-7715-03
Blade-Lo Flow, 20.5 Inch	105-7716-03
Blade-Hi Flow, 20.5 Inch	105-7718-03
Blade-Recycler, 20.5 Inch	105-7777-03
Blade-Atomic, 20.5 Inch	105-8777-03
6 Pack Blade, 20.5 Inch Hi-Flow	108-1114
6 Pack-Blade, 20.5 Inch Atomic	108-1115
6 Pack Blade, 20.5 Inch Mid-Flow	108-1123
6 Pack-Blade, 20.5 Inch Lo Flow	108-1128
Hitch Kit	109-9487
6 Pack-Blade, 20.5 Inch Recycler	110-0405
HYPR-OIL 500 (Quart)	114-4713
HYPR-OIL 500 (Gallon)	114-4714
HYPR-OIL 500-5 (5 Gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Recycler Kit	115-7468
Light Kit	116-1154
Z Stand Kit	117-0350
Operator-Controlled Discharge Chute Kit	117-3600
Deluxe Suspension Seat Kit	117-6174
Blower and Drive Kit	78553
E-Z Vac Triple Bagging System	78563
E-Z Vac DFS Collection System	78567
Trash Holder Kit	TC26

