



Z Master[®] G3 Riding Mower with 72in TURBO FORCE[®] Side Discharge Mower

Model No. 74957CP - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Front Frame and Caster Wheel Assembly	 3	Spindle Assembly No. 117-3840	 28
Roll-Over Protection System Assembly No. 116-0232	 4	Lever Assembly No. 107-1664	 29
Caster Wheel and Fork Assembly	 5	Rubber Deflector Assembly No. 108-2792	 30
Hydraulic Pump, Idler and Belt Assembly	 6	Cylinder and Crankcase Assembly Kawasaki FX921V-AS04	 31
Pump Idler Assembly No. 116-1255	 7	Piston and Crankshaft Assembly Kawasaki FX921V-AS04	 32
LH Hydro Assembly No. 116-1382	 8	Valve and Camshaft Assembly Kawasaki FX921V-AS04	 33
RH Hydro Assembly No. 116-1383	 9	Lubrication Equipment Assembly Kawasaki FX921V-AS04	 34
Rear Wheel and Park Brake Assembly	 10	Cooling Equipment Assembly Kawasaki FX921V-AS04	 35
Brake Handle Assembly No. 116-1878	 11	Electric Equipment Assembly Kawasaki FX921V-AS04	 36
Fuel System Assembly	 12	Control Equipment Assembly Kawasaki FX921V-AS04	 37
Fuel Tank Assembly No. 109-9357	 13	Carburetor Assembly Kawasaki FX921V-AS04	 38
Seat Mounting Assembly	 14	Air Filter and Muffler Assembly Kawasaki FX921V-AS04	 39
Seat Assembly No. 116-0035	 15	Fuel Tank and Fuel Valve Assembly Kawasaki FX921V-AS04	 40
Motion Control Assembly	 16	Starter Assembly Kawasaki FX921V-AS04	 41
Fender, Console and Control Assembly	 17	Label Set Kawasaki FX921V-AS04	 42
LH Console Assembly No. 115-7401	 18	Attachments and Accessories List	 43
RH Console Assembly No. 115-7400	 19		
Electrical System Assembly	 20		
Deck Lift Assembly	 21		
Height-of-Cut Assembly No. 109-7438	 22		
Engine, Muffler and Clutch Assembly	 23		
Deck Assembly	 24		
Deck Decal Assembly No. 112-4195	 26		
Idler Assembly	 27		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	LH. left hand
CARR. carriage	NI. nylon insert
CCW. counter clock wise	NPTF. national pipe thread fine
CW. clockwise	PFH. phillips flat head
DEG. degrees	PPH. phillips pan head
ECM. electronic control module	PPHTF. phillips pan head thread forming
EXT. external	PRH. phillips round head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power-take-off
HD. heavy-duty	RH. right hand
HF. hex flange	ROPS. roll-over protection system
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HSBH. hex socket button head	STD. standard
HSFH. hex socket flat head	TAP. self tapping
HSH. hex socket head	TTH. torx truss head
HWH. hex washer head	

Footnotes

❶ Not illustrated


❷ Not serviced separately

3 Obtain parts from www.kawpowerepc.com

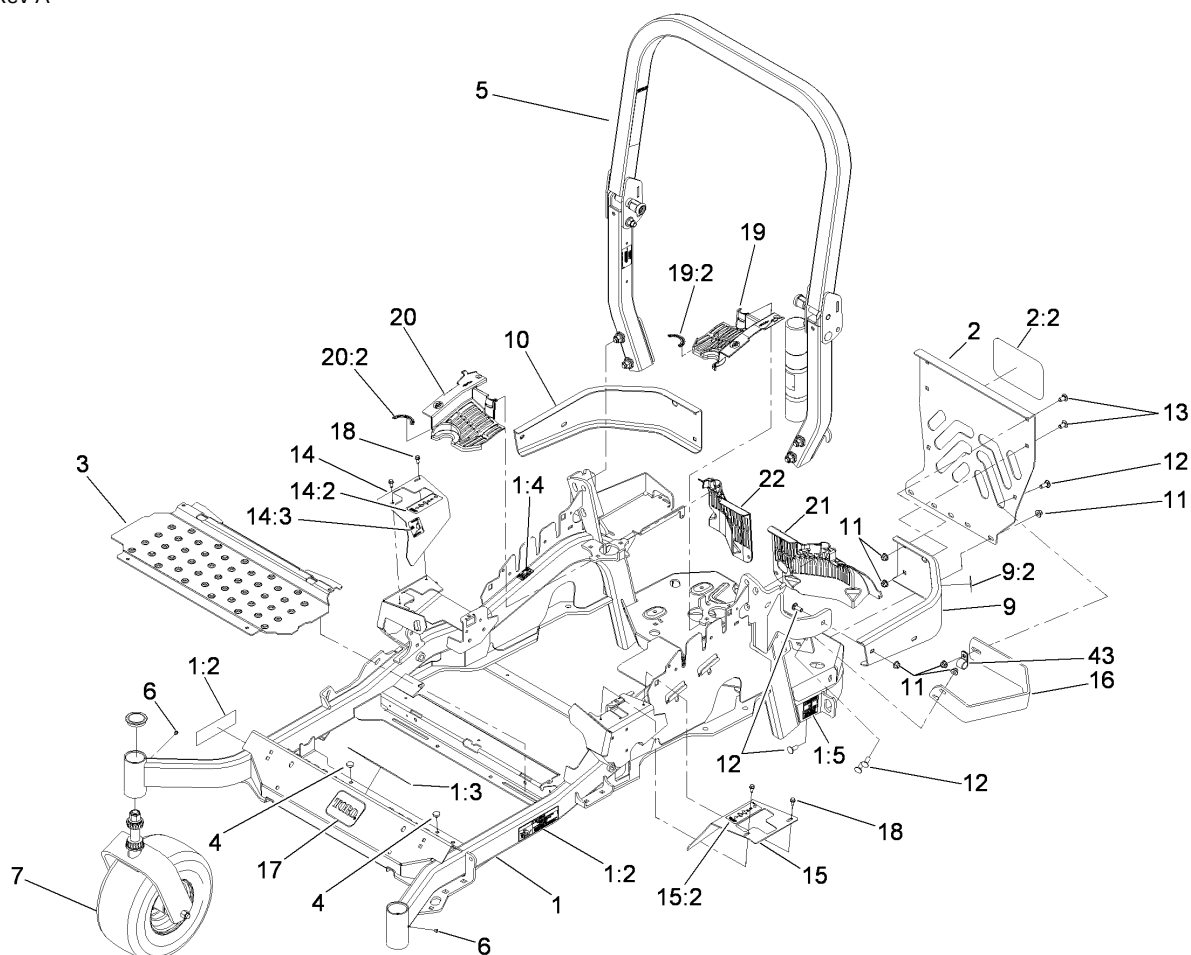


Front Frame and Caster Wheel Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	109-7349	1	Main Frame ASM	17	68-3640	1	Decal
1:2	109-9477	2	Decal-Warning	18	32144-10	4	Screw-HWH
1:3	107-2112	1	Decal-Warning	19	116-0170	1	LH Hydro Guard ASM
1:4	103-2076	2	Decal-Caution	19:2	116-0157	1	Decal-Hydro Oil
1:5	116-0205	2	Decal-Belt Drive	20	116-0171	1	RH Hydro Guard ASM
2	115-7410	1	Rear Guard ASM	20:2	116-0157	1	Decal-Hydro Oil
2:2	67-7320	1	Decal	21	109-9057	1	Guard-Hydro, Rear LH
3	116-0024-01	1	Floorpan	22	109-9058	1	Guard-Hydro, Rear RH
4	1-513658	2	Bumper	43	1-633396	1	Clip-Loom
5	116-0232	1	ROPS ASM				
6	1-811010	2	Plug				
7		2	Caster Wheel ASM				
9	116-0180	1	LH Bumper ASM				
9:2	103-2076	1	Decal-Caution				
10	116-0057-03	1	Bumper-RH				
11	104-8301	11	Nut-Flange, NI				
12	3231-22	7	Screw-CARR				
13	3231-21	4	Screw-CARR				
14	116-0579	1	RH Motion Control Cover ASM				
14:2	109-7232	1	Decal-Motion Control				
14:3	109-7929	1	Decal-Park Brake				
15	116-0580	1	LH Motion Control Cover ASM				
15:2	109-7232	1	Decal-Motion Control				
16	116-0043-03	1	Guard-Muffler				

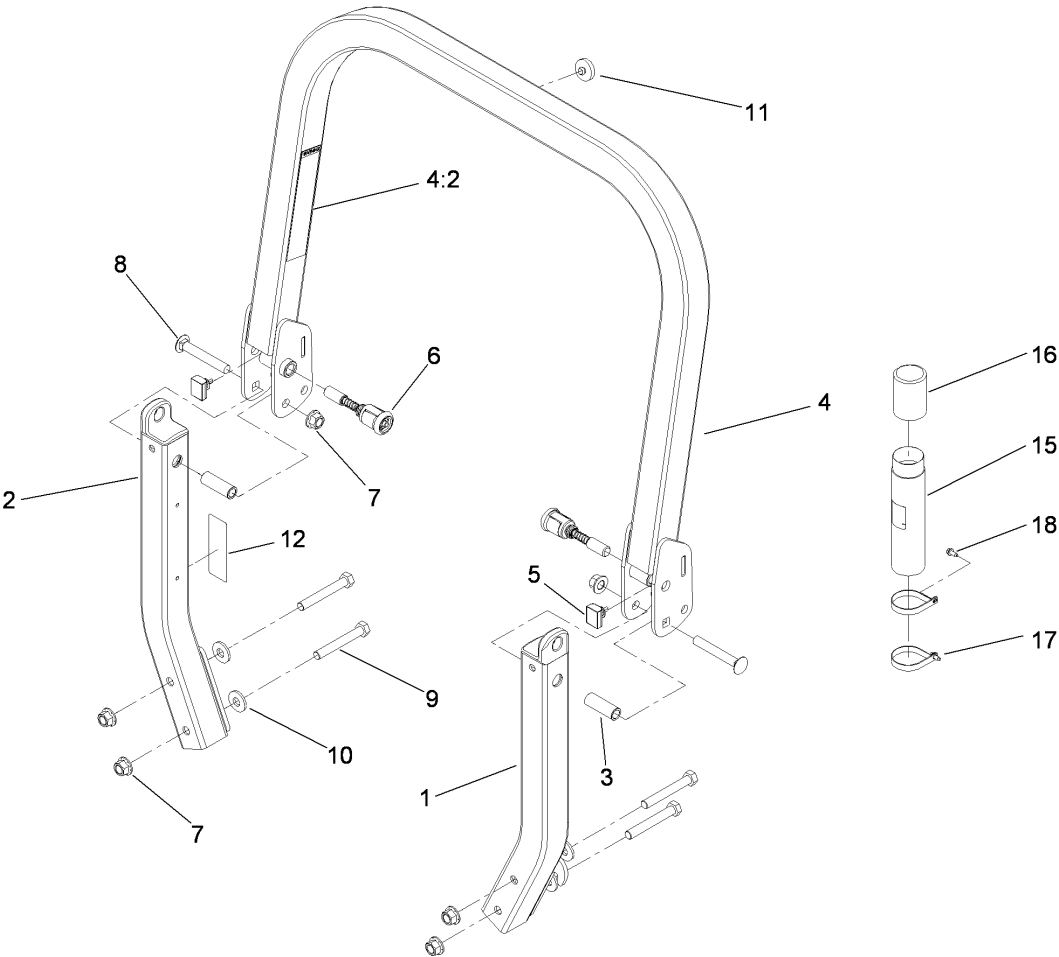


Roll-Over Protection System Assembly No. 116-0232

Ref	Part No.	Qty.	Description				
1		1	Leg-ROPS, LH				
2		1	Leg-ROPS, RH				
3	109-6653	2	Spacer				
4		1	Upper ROPS ASM				
4:2	107-3069	1	Decal-Warning, Folding ROPS				
5	109-5337	2	Bumper-ROPS				
6	116-0104	2	Spring Pin ASM				
7	99-5107	6	Nut-Lock				
8	3233-10	2	Screw-CARR				
9	325-17	4	Screw-HH				
10	109-9505	4	Washer-Spring				
11	109-9233	1	Bumper-Push-In, Rubber				
12	117-0346	1	Decal-Caution, Fuel Vent				
15	104-7050	1	Tube-Manual				
16	104-7048	1	Cap-Housing				
17	107-1865	2	R-Clamp				
18	32144-10	2	Screw-HWH				

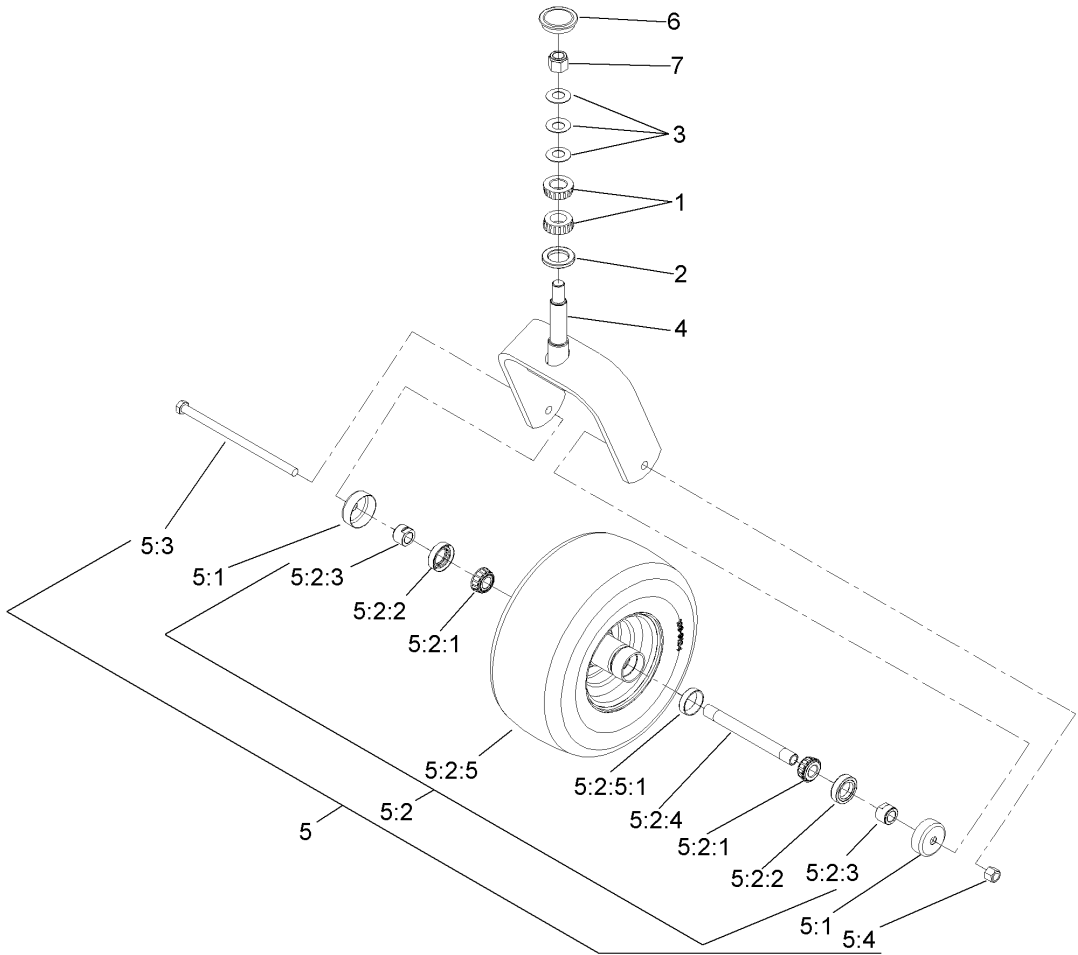


Caster Wheel and Fork Assembly

Ref	Part No.	Qty.	Description				
1	1-543509	2	Bearing-Roller, Tapered				
2	1-543511	1	Seal-Grease				
3	1-633508	3	Washer-Bellville				
4	103-1474-01	1	Caster-Fork				
5	109-9127	1	Wheel And Tire ASM				
5:1	103-2768	2	Guard-Seal				
5:2		1	Wheel And Tire ASM				
5:2:1	1-633585	2	Bearing-Cone, Taper				
5:2:2	103-0063	2	Seal-Caster				
5:2:3	103-3051	2	Spacer-Nut				
5:2:4	103-5156	1	Axle-Caster				
5:2:5	109-9124	1	Wheel And Tire ASM				
5:2:5:1	1-633584	1	Bearing-Cup				
5:3	325-39	1	Screw-HH				
5:4	3296-23	1	Nut-Lock, NI				
6	103-4882	1	Cap-Grease				
7	3296-51	1	Nut-Lock, NI				

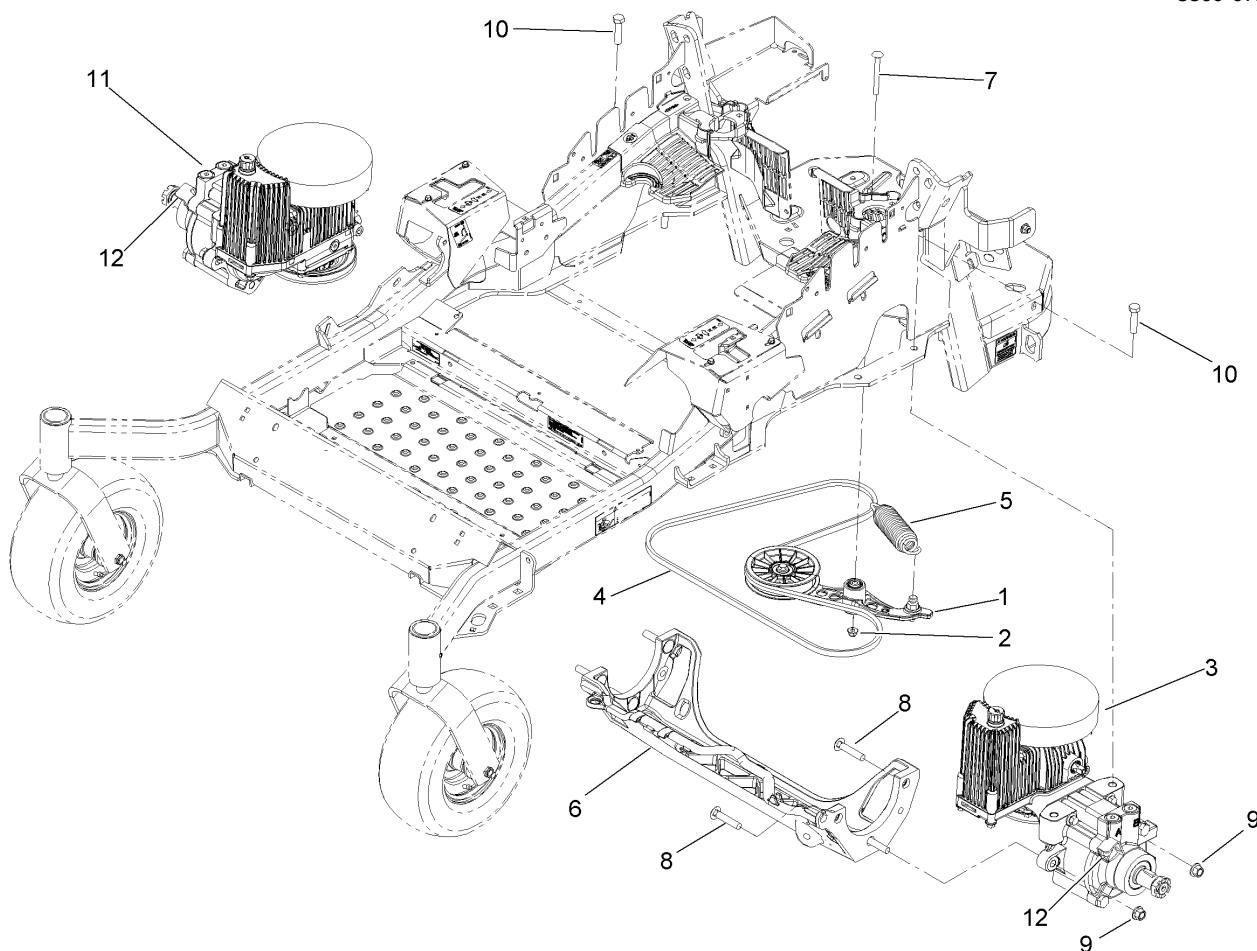


Hydraulic Pump, Idler and Belt Assembly

Ref	Part No.	Qty.	Description				
1	116-1255	1	Pump Idler ASM				
2	109-6658	1	Nut-Flange, NI (Split)				
3	116-1382	1	LH Hydro ASM (16Cc W/Shock)				
4	109-3388	1	Belt				
5	116-0133	1	Extension-Spring				
6	109-9375	1	Cradle-Hydro, Machined				
7	3231-41	1	Bolt-Carriage				
8	3233-34	6	Screw-CARR				
9	99-5107	6	Nut-Lock				
10	325-8	4	Screw-HH				
11	116-1383	1	RH Hydro ASM (16Cc W/Shock)				
12	116-1758	2	Bracket-Anchor, Cable				
①99	114-4713	1	Hypr-Oil 500 (Quart)				
①99	114-4714	1	Hypr-Oil 500 (Gallon)				
①99	114-4715	1	Hypr-Oil 500-5 (5 Gallon)				
①99	117-0390	1	Filter-Hydro				

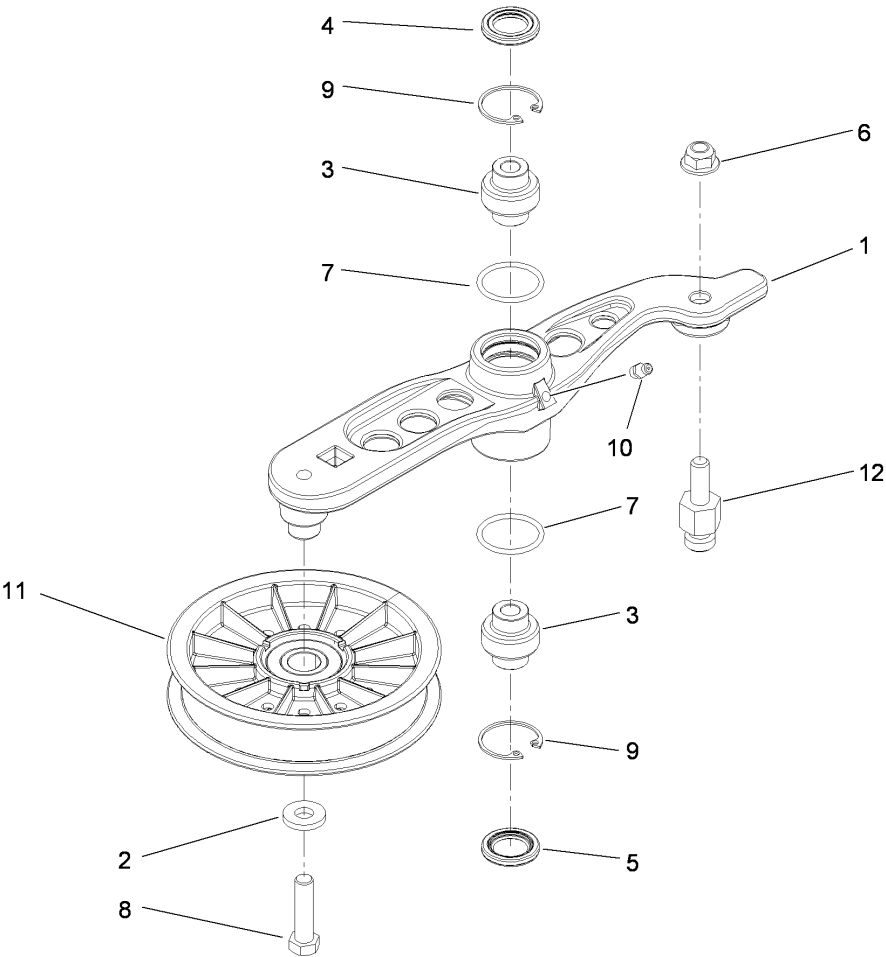


Pump Idler Assembly No. 116-1255

Ref	Part No.	Qty.	Description				
1		1	Arm-Pump, Idler				
2	43-0940	1	Spacer-Hub, Blower				
3	103-3504	2	Bearing-Spherical				
4	103-3505	1	Seal-Double Lip				
5	103-3506	1	Seal-Single Lip				
6	109-6658	1	Nut-Flange, NI (Split)				
7	106-7159	2	O-Ring				
8	323-8	1	Screw-HH				
9	32120-10	2	Ring-Snap				
10	302-19	1	Fitting-Grease				
11	109-8076	1	Pulley-Idler				
12	109-7399	1	Pin-Anchor, Spring				

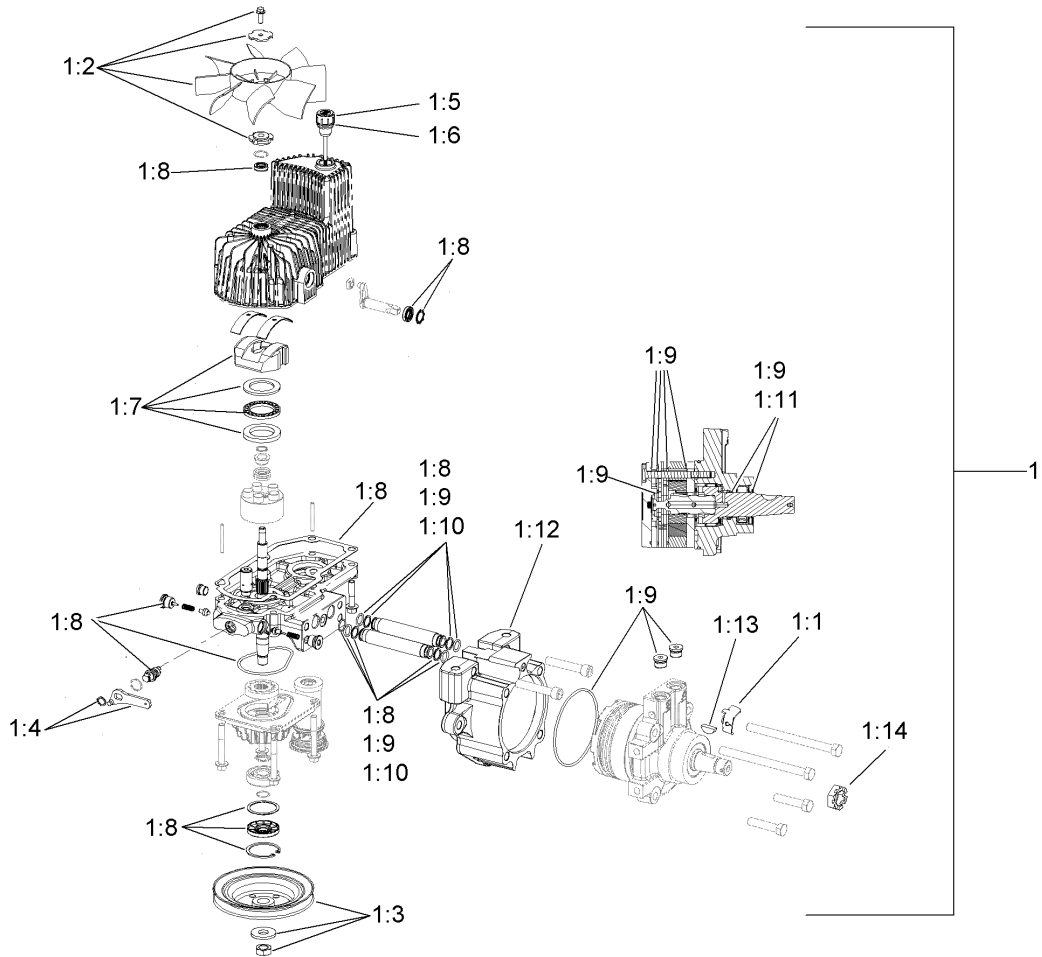


LH Hydro Assembly No. 116-1382

Ref	Part No.	Qty.	Description				
❶1		1	Hydro-LH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
❶1:99	116-1373	1	Flow Test Kit				

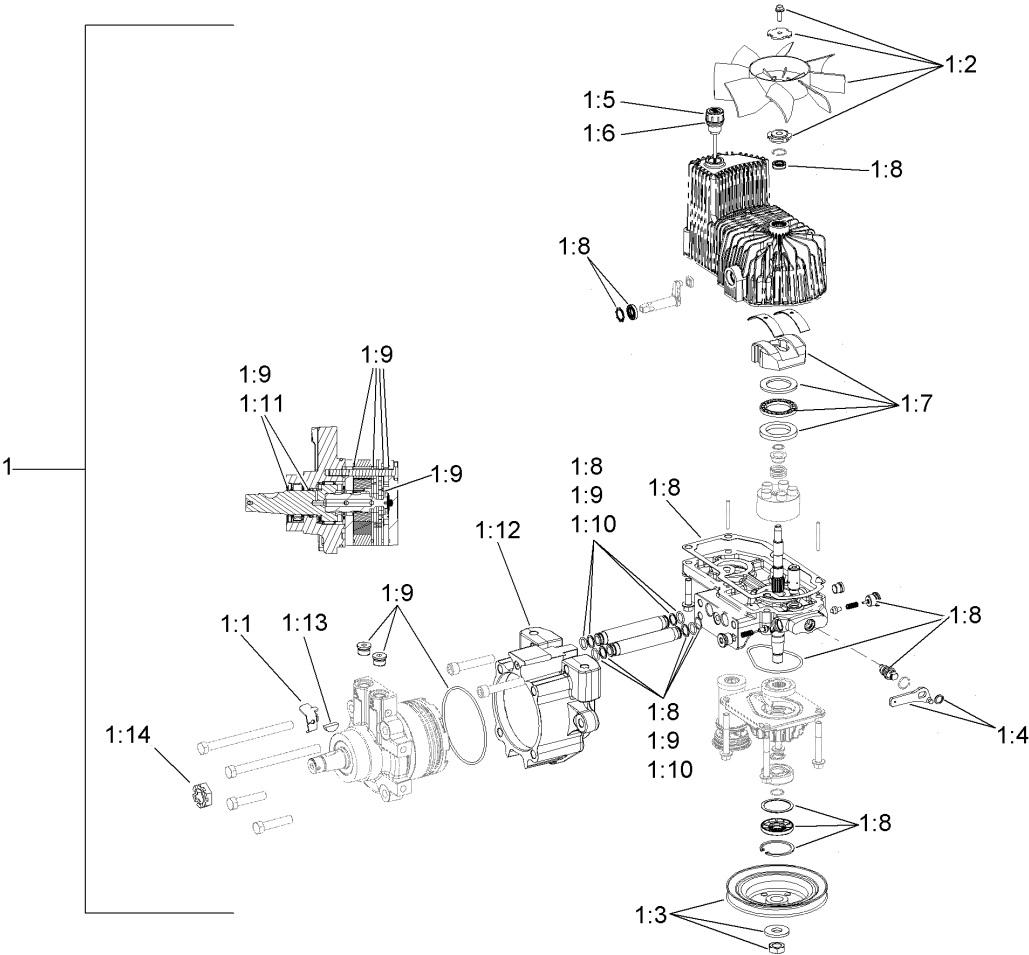

RH Hydro Assembly No. 116-1383


Ref	Part No.	Qty.	Description				
② 1		1	Hydro-RH				
1:1	116-1758	1	Bracket-Anchor, Cable				
1:2	116-0233	1	Fan Kit				
1:3	116-0234	1	Pulley Kit				
1:4	116-0235	1	Handle-Bypass Valve, Hydro				
1:5	116-0236	1	Dipstick-Hydro W/Gasket				
1:6	116-0237	1	Gasket-Dipstick, Hydro				
1:7	116-1367	1	Swash Block Kit				
1:8	116-1368	1	Pump Seal Kit				
1:9	116-1369	1	Motor Seal Kit				
1:10	116-1370	1	Tube Seal Kit				
1:11	116-1371	1	Output Shaft Seal Kit				
1:12	116-1372	1	Cup-Nose				
1:13	3257-42	1	Key-Woodruff				
1:14	1-809036	1	Nut-HH				
① 1:99	116-1373	1	Flow Test Kit				

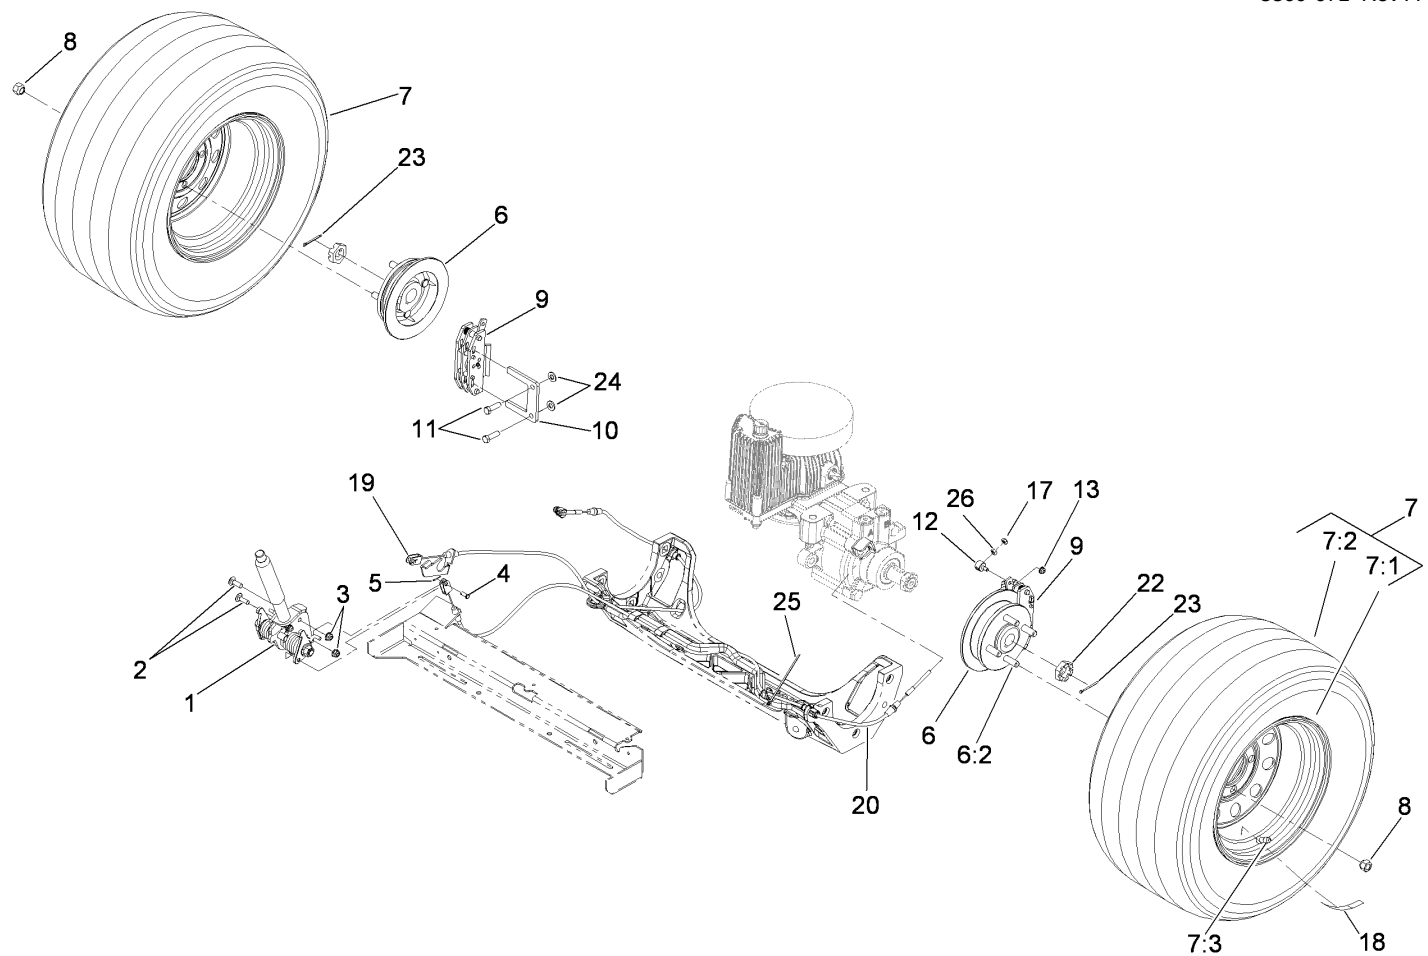

Rear Wheel and Park Brake Assembly


Ref	Part No.	Qty.	Description
1	116-1878	1	Brake Handle ASM
2	3230-2	2	Bolt-CARR
3	104-8300	2	Nut-Flange, NI
4	60-1730	2	Pin-Clevis
5	3272-1	2	Pin-Cotter
6	117-6163	2	Wheel Hub And Stud ASM
6:2	1-633926	4	Stud-Wheel
7	109-3158	2	Wheel & Tire ASM
7:1	109-3156	1	Rim ASM
7:2	103-2744	1	Tire
7:3	232-27	1	Stem-Valve
8	242-50	8	Nut-Lug
9	109-2889	2	Caliper-Brake
10	109-0958	2	Plate-Mount, Brake
11	323-7	4	Screw-HH
12	112-8379	2	Swivel
13	104-7201	2	Nut-HF
17	3296-13	2	Nut-Lock NI
18	116-0165	2	Decal-Hub, Wheel
19	115-3584	1	Cable
20	115-3585	1	Cable
22	1-809036	2	Nut-HH
23	1-806800	2	Pin-Cotter
24	3256-24	4	Washer-Flat

Ref	Part No.	Qty.	Description
25	116-0940	1	Tie-Cable
26	3219-1	2	Nut-Hex

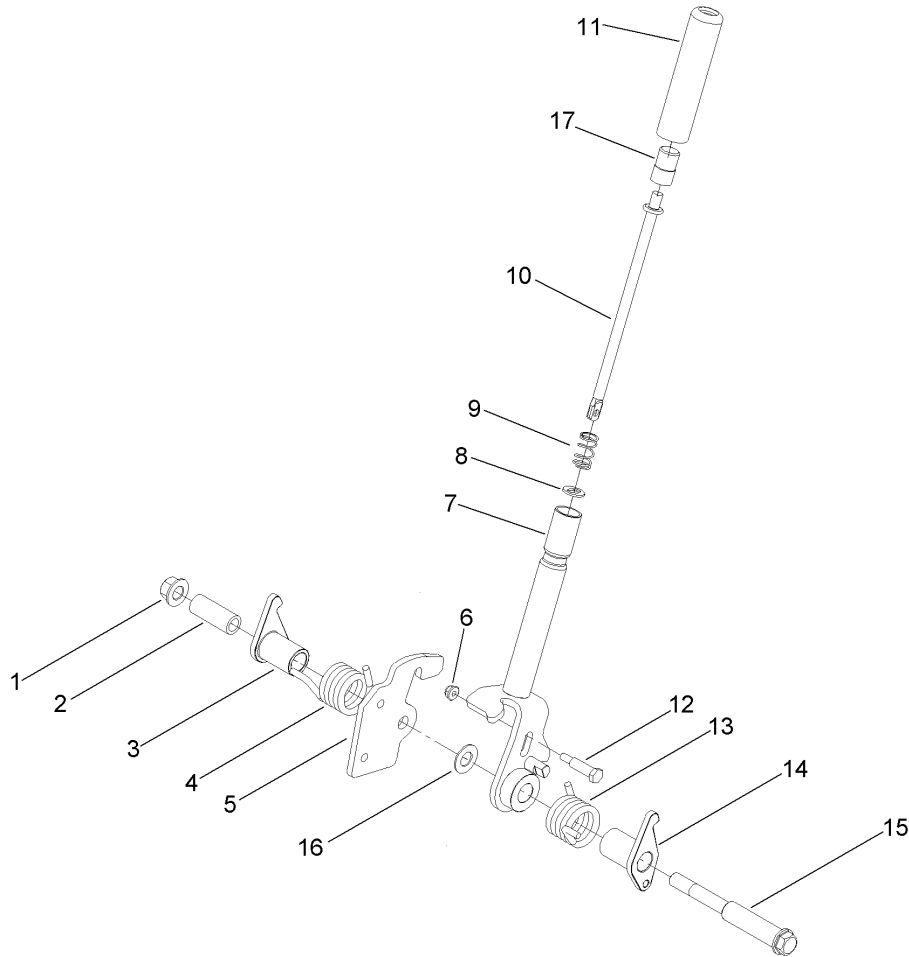


Brake Handle Assembly No. 116-1878

Ref	Part No.	Qty.	Description				
1	99-5107	1	Nut-Lock				
2	117-0380	1	Spacer				
3	115-3580	1	Arm-Brake, LH				
4	117-0376	1	Spring-Torsion, RH				
5	115-3574	1	Plate-Latch				
6	104-7201	1	Nut-HF				
7	116-1876-03	1	Brake Handle ASM				
8	114-1207	1	Washer-Special				
9	114-8187	1	Spring-Compression				
10	115-3581	1	Rod-Release, Brake				
11	115-3592	1	Grip				
12	112-8387	1	Bolt-Shoulder				
13	117-0375	1	Spring-Torsion, LH				
14	115-3579	1	Arm-Brake, RH				
15	117-0379	1	Bolt-Shoulder				
16	117-0378	1	Washer				
17	115-2750	1	Knob				

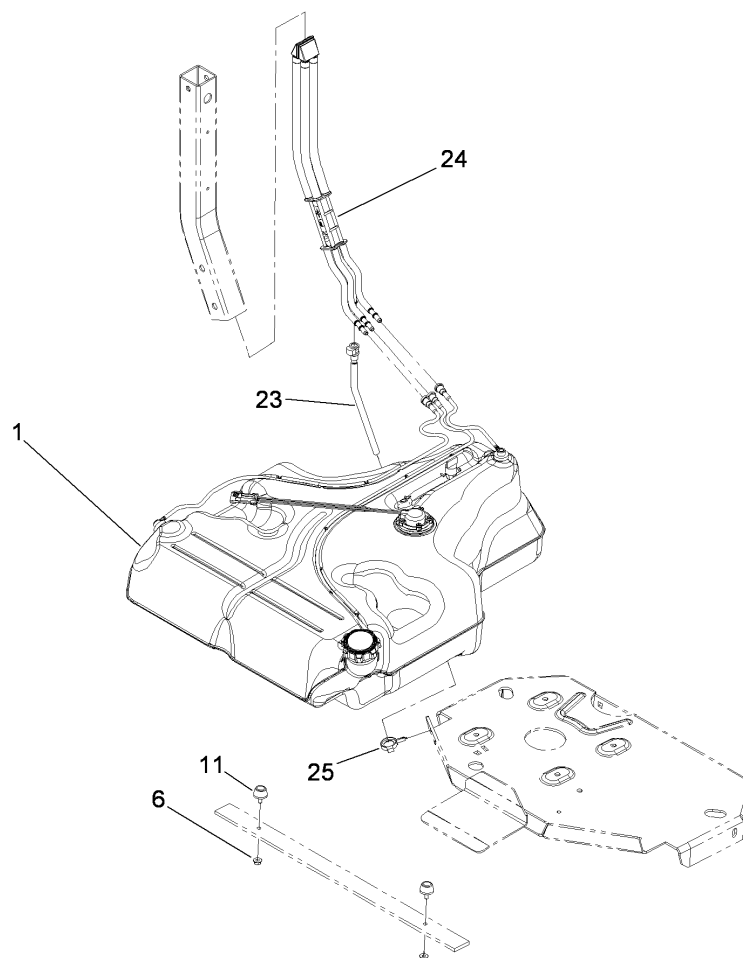

Fuel System Assembly

Ref	Part No.	Qty.	Description
1	109-9656	1	Fuel Tank ASM (W/O Sender)
1	109-9357	1	Fuel Tank ASM
6	32128-33	2	Nut-HF
11	109-2365	2	Bumper-Rubber (W/Stud)
23	109-9450	1	Tube-Vent, Fuel Drain
24	109-9491	1	Fuel Manifold Vent ASM
25	105-1853	1	Clamp-Hose

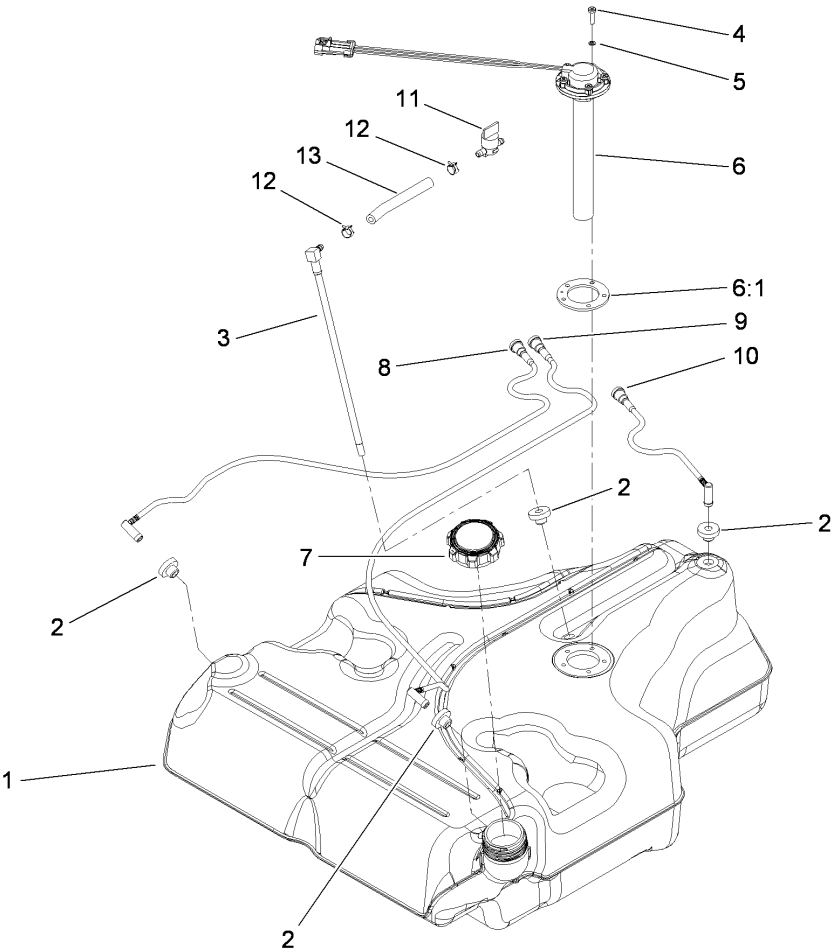


Fuel Tank Assembly No. 109-9357

Ref	Part No.	Qty.	Description				
1		1	Tank-Fuel, Belly				
2	46-6560	4	Bushing				
3	109-9364	1	Fitting-Fuel (W/Line And Screen)				
4	9107944	5	Screw-Pan				
5	3253-17	5	Washer-Lock				
6	116-0003	1	Sender-Fuel Level				
6:1	109-9620	1	Gasket-Sender, Fuel				
7	109-9619	1	Cap-Fuel				
8	109-9447	1	Tube-Vent, RH				
9	109-9448	1	Tube-Vent, LH				
10	109-9449	1	Tube-Vent, Rear				
11	1-603770	1	Valve-Fuel				
12	2412-98	2	Clamp				
13	109-0650	1	Hose-Fuel				




Ref	Part No.	Qty.	Description				
1	116-0035	1	Seat-Standard				
3	109-9034	4	Isolator-Seat				
4	109-9036	1	Mount-Seat				
4:2	109-7069	1	Decal-Console				
4:3	116-0211	1	Decal-Service Aid				
6	3230-23	11	Screw-CARR				
8	104-8300	18	Nut-Flange, NI				
9	104-8301	4	Nut-Flange, NI				
10	9266934	2	Screw				
13	116-0181-03	1	Plate-Support, Seat Tilt				
14	116-0179-03	1	Plate-Frame, Seat Tilt				
15	109-9881-03	1	Plate-Latch, Seat				
16	3230-4	1	Screw-CARR				
17	107-3017	1	Spring-Compression				
18	116-1297	2	Screw, Shoulder				
20	116-0070	1	Rod-Prop				
21	114-5878	1	Decal-Dash				
24	3256-23	1	Washer-Flat				

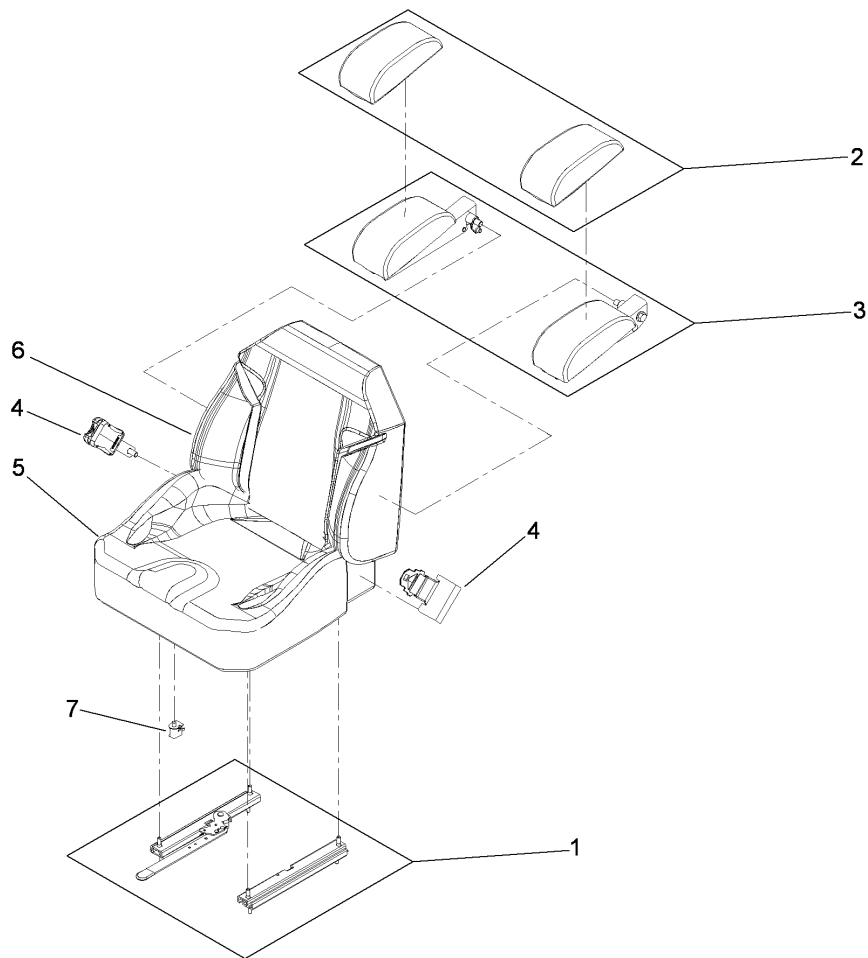

Seat Assembly No. 116-0035


Ref	Part No.	Qty.	Description				
1	109-9801	1	Seat Track Set				
2	109-9802	1	Arm Rest Pad Set				
3	109-9803	1	Arm Rest Set				
4	109-9805	1	Seat Belt Kit				
5	109-9806	1	Cover-Cushion				
6	109-9808	1	Cover-Back				
7	82-2190	1	Switch-Bail				

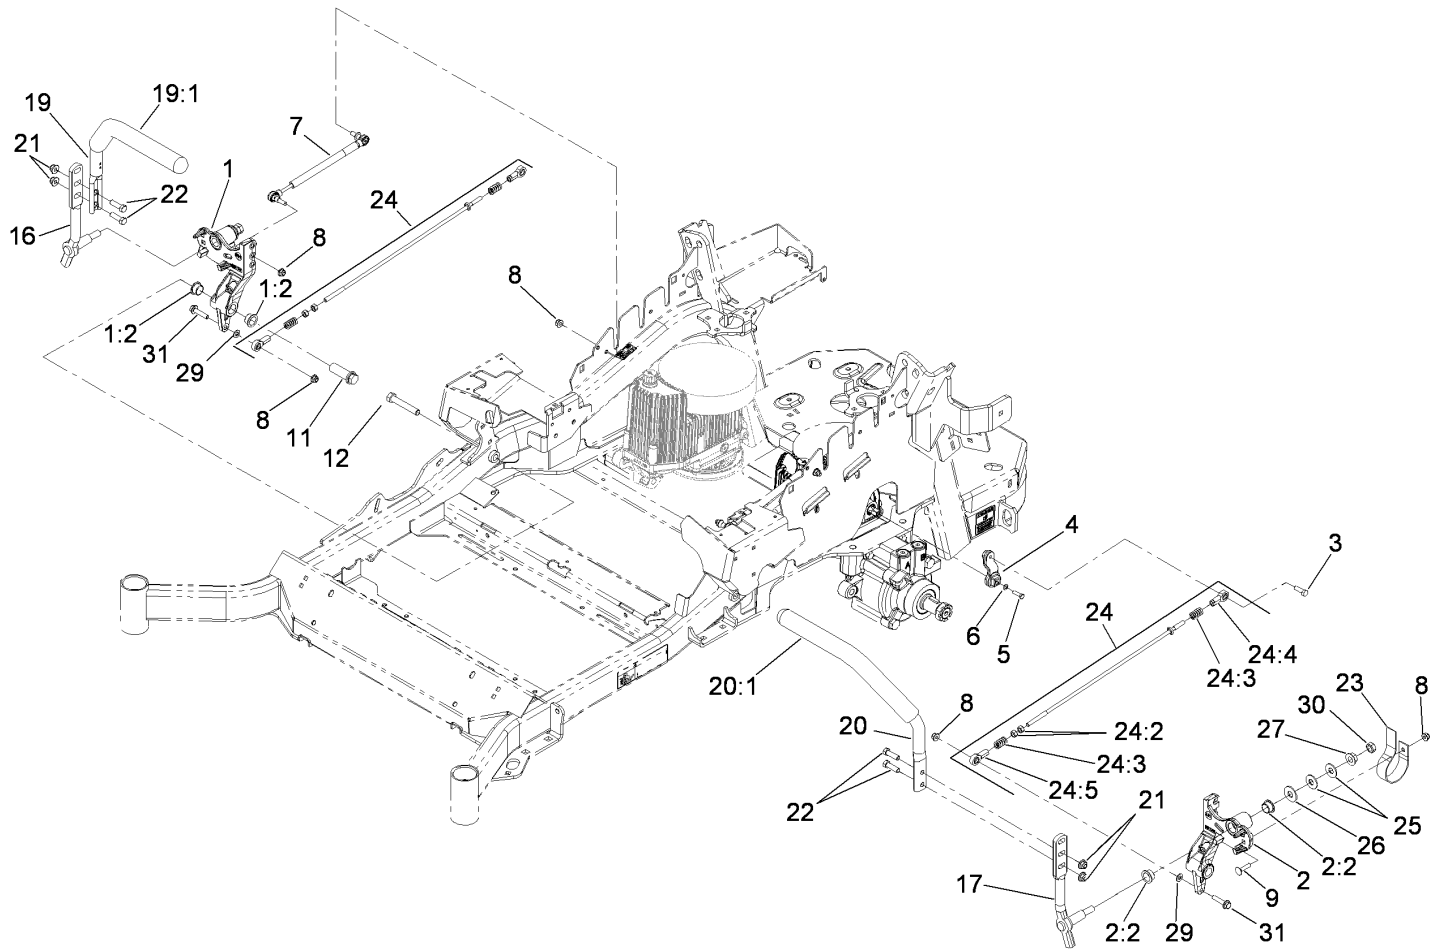

Motion Control Assembly


Ref	Part No.	Qty.	Description
1	116-0880	1	RH Motion Control And Bushing ASM
1:2	109-8054	4	Bushing-Flange
2	116-0881	1	LH Motion Control And Bushing ASM
2:2	109-8054	4	Bushing-Flange
3	116-0648	2	Screw-Thread Locking
4	109-4581	2	Arm-Control, Pump
5	9080046	2	Screw-HH
6	1-303435	2	Washer-Spring
7	116-0027	2	Damper-Control, Motion
8	104-8300	8	Nut-Flange, NI
9	3230-2	2	Bolt-CARR
11	109-5891	2	Hub-Threaded
12	325-12	2	Screw-HH
16	116-0039	1	Lever-Control Motion, RH
17	116-0040	1	Lever-Control Motion, LH
19	109-6591	1	RH Steering Handle ASM
19:1	106-9987	1	Grip-Control, Motion
20	109-6592	1	LH Steering Handle ASM
20:1	106-9987	1	Grip-Control, Motion
21	104-8301	4	Nut-Flange, NI
22	323-7	4	Screw-HH
23	109-5575	2	Spring-Leaf

Ref	Part No.	Qty.	Description
24	109-8106	2	Front Pump Linkage ASM
24:2	3219-2	2	Nut-Hex
24:3	1-323245	2	Spring-Compression
24:4	1-633152	1	Balljoint-LH
24:5	1-543017	1	Balljoint-RH
25	109-9505	4	Washer-Spring
26	3256-6	2	Washer-Flat
27	32128-56	2	Nut-HF
29	3256-23	2	Washer-Flat
30	3218-5	2	Nut-Jam
31	115-1794	2	Screw-HHF

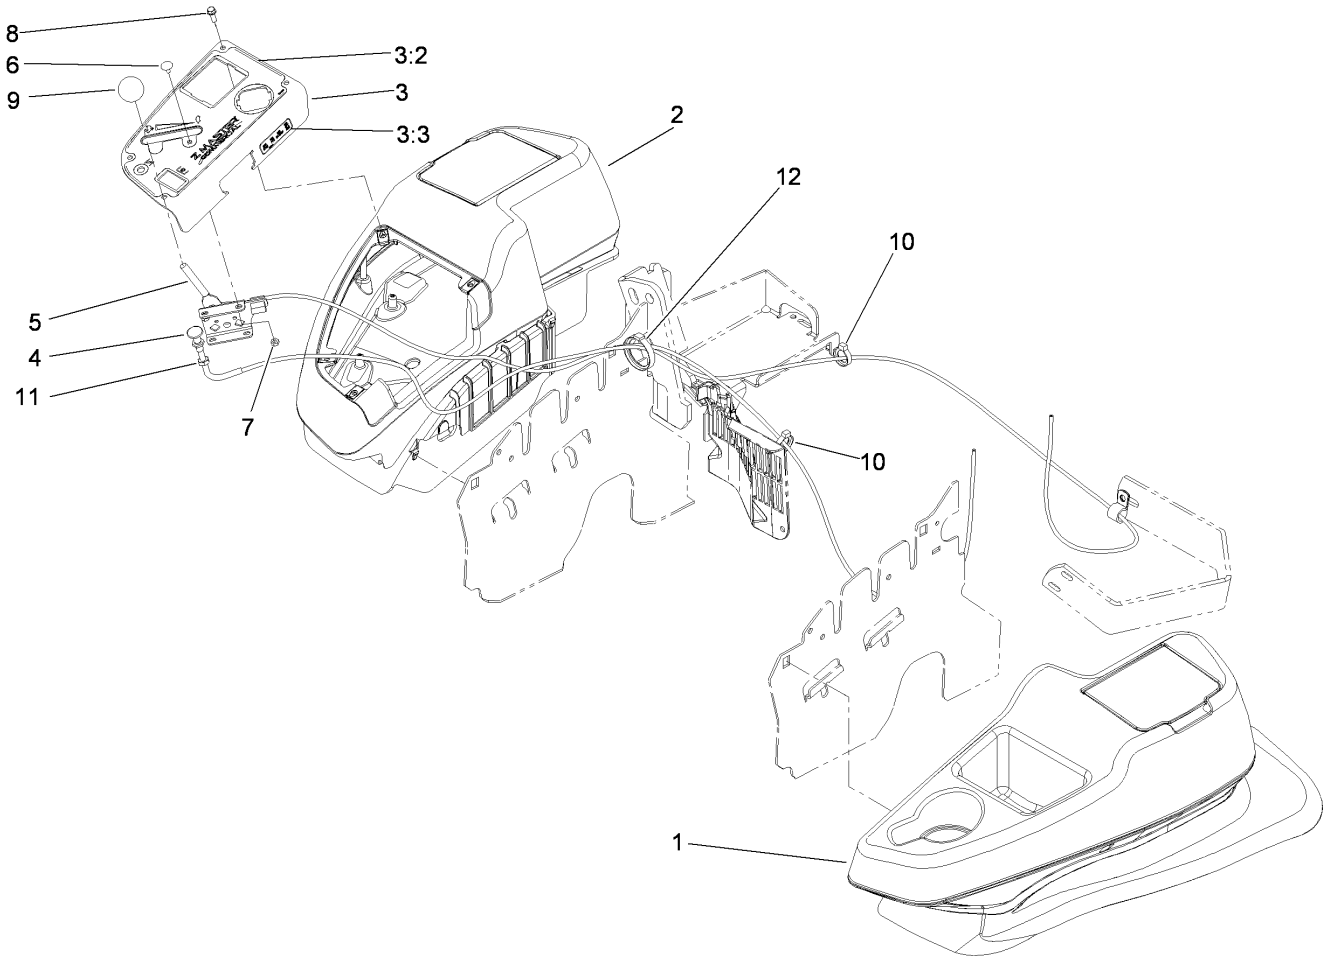


Fender, Console and Control Assembly

Ref	Part No.	Qty.	Description				
1	115-7401	1	LH Wide Fender/Console ASM				
2	115-7400	1	RH Wide Fender/Console ASM				
3	114-9836	1	Control Panel ASM				
3:2	114-9834	1	Decal-Panel, Control				
3:3	114-4466	1	Decal-Fuses				
4	115-2754	1	Control-Choke ASM				
5	115-2751	1	Control-Throttle ASM				
6	1-807513	2	Bolt-CARR				
7	3296-2	2	Nut-Lock, NI				
8	32105-15	4	Screw				
9	1-603175	1	Knob-Ball				
10	105-1853	2	Clamp-Hose				
11	3220-3	1	Nut-HJ				
12	117-7817	1	Clamp-Harness				

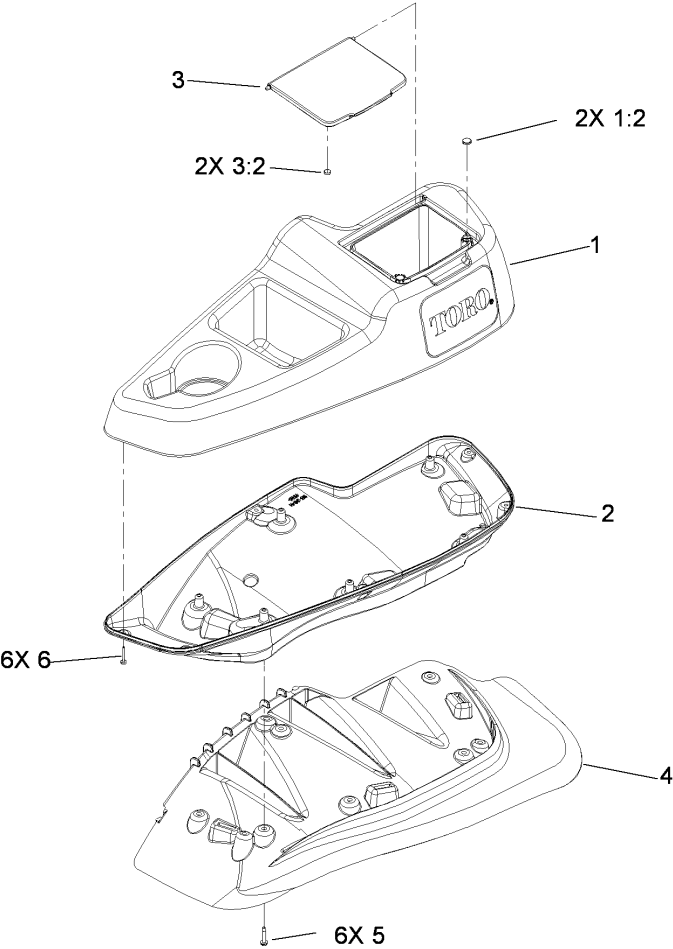


LH Console Assembly No. 115-7401

Ref	Part No.	Qty.	Description				
1	114-1539	1	LH Wide Console Top ASM				
1:2	117-0883	2	Puck				
2	115-3641	1	Console-Lwr, LH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9085	1	Fender-Wide, LH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

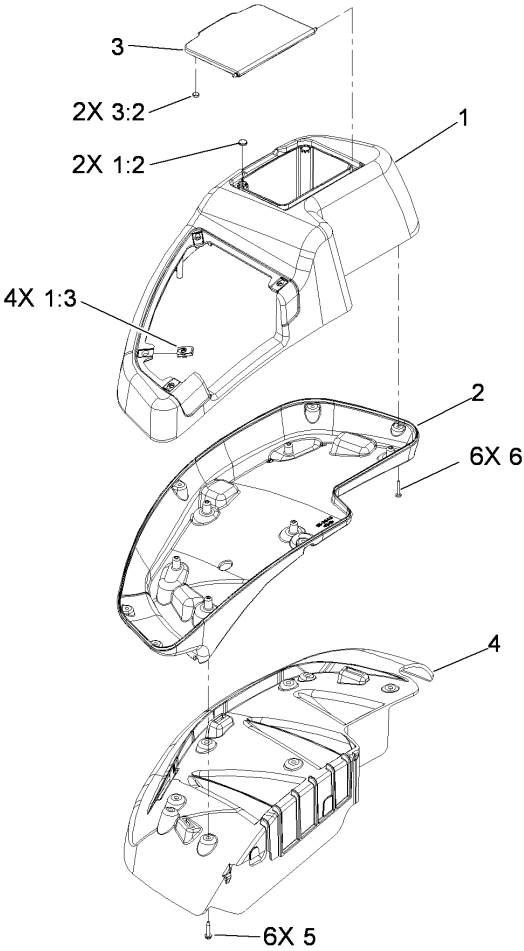

RH Console Assembly No. 115-7400


Ref	Part No.	Qty.	Description				
1	114-1538	1	RH Wide Top Console ASM				
1:2	117-0883	2	Puck				
1:3	107069	4	Clip				
2	115-3643	1	Console-Lwr, RH Wide				
3	114-1537	1	Wide Lid ASM				
3:2	114-5896	2	Magnet				
4	109-9083	1	Fender-Wide, RH				
5	32144-89	6	Screw-Thread Forming				
6	117-0347	6	Screw-Fillister Head				

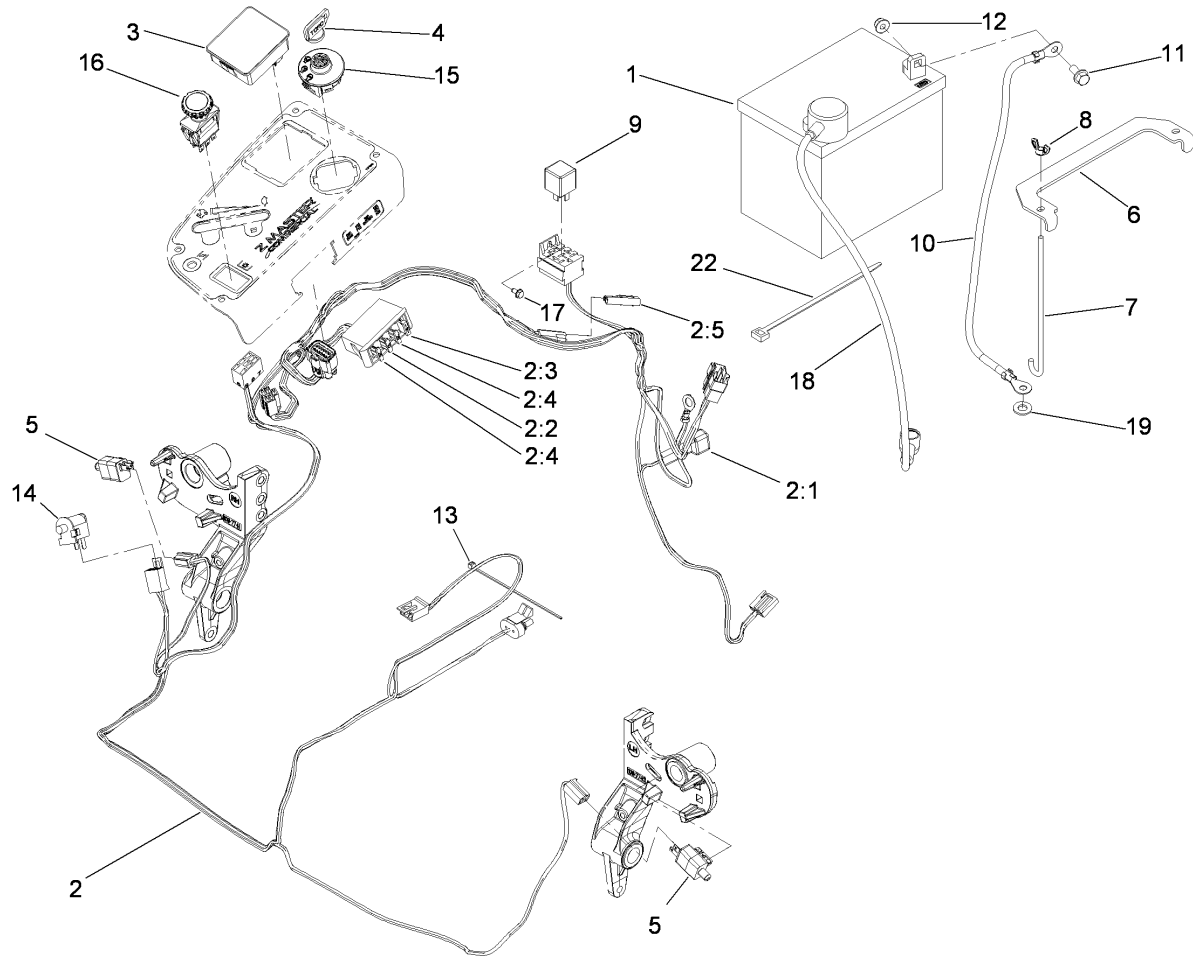

Electrical System Assembly

Ref	Part No.	Qty.	Description
1	104-2492	1	Battery
2	115-2796	1	Harness-Wire, Main
2:1	103-3895	1	Diode-Tvs
2:2	218-578	1	Fuse-10 Amp
2:3	109355	1	Fuse-15 Amp
2:4	109102	2	Fuse-25 Amp
2:5	116-0053	1	Cap-Plug
3	116-0916	1	Module-Meter, Hour
4	63-8360	1	Key-Ignition
5	110-6765	2	Switch-Single Pole No
6	116-0042-03	1	Strap-Tie Down, Battery
7	1-633651	2	Bolt-Holddown
8	1-543792	2	Wingnut
9	1-643275	1	Relay
10	114-1218	1	Cable-Battery, Negative
11	3234-5	2	Screw-HHF
12	104-8300	2	Nut-Flange, NI
13	1-303287	3	Tie-Plastic
14	82-2190	1	Switch-Bail
15	116-0229	1	Switch-Ignition
16	116-0124	1	Switch-PTO, 10A
17	104-2065	1	Screw-HWH
18	115-3864	1	Cable-Battery, Positive
19	3256-24	1	Washer-Flat


Ref	Part No.	Qty.	Description
22	1-303335	1	Tie-Plastic

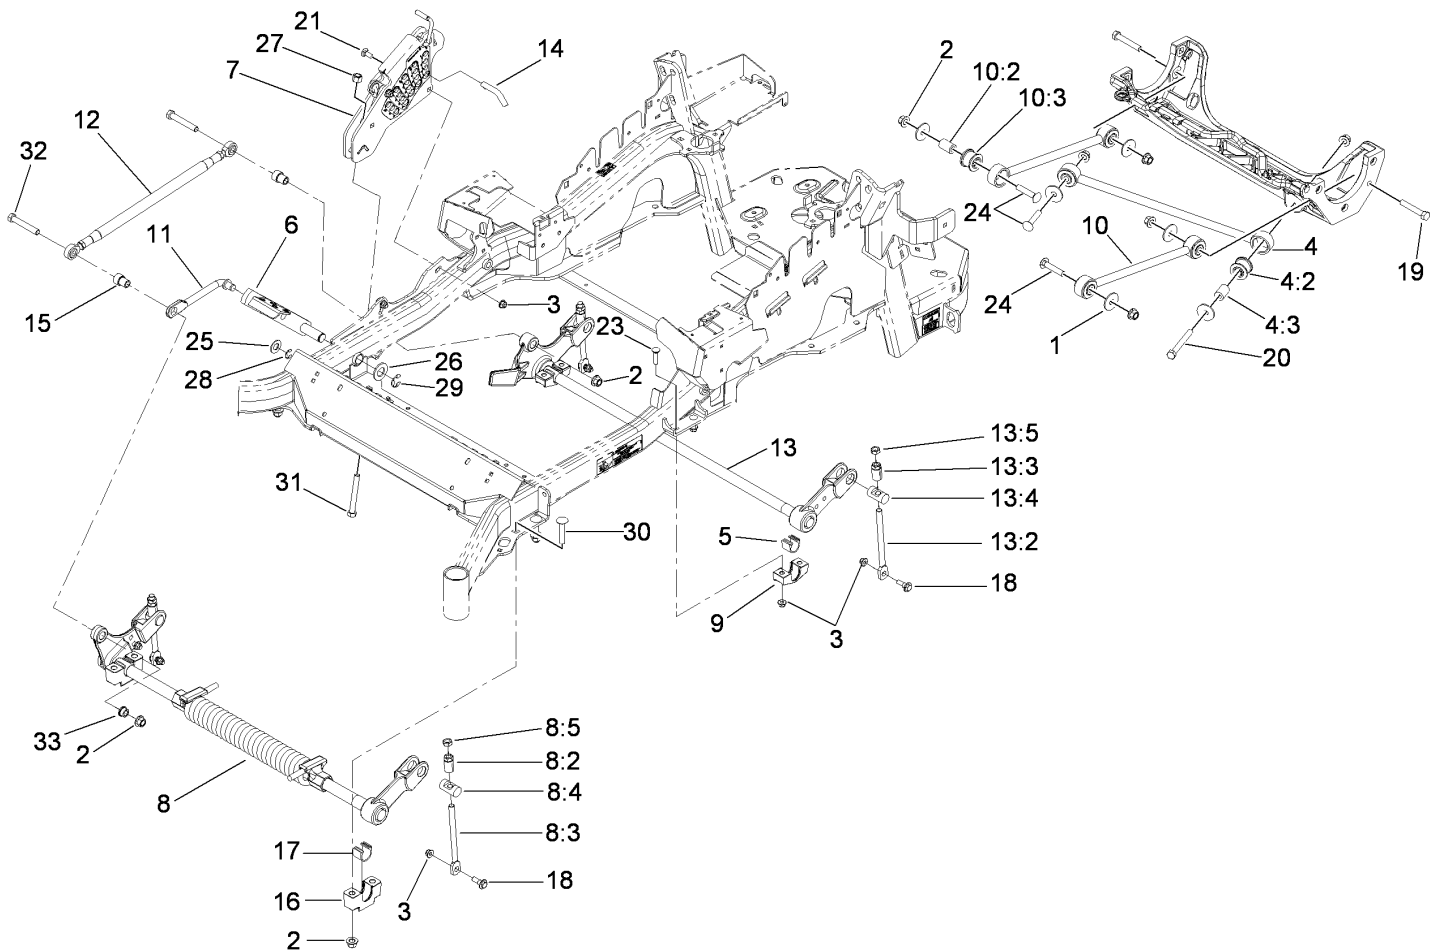

Deck Lift Assembly


Ref	Part No.	Qty.	Description
1	86-1990	6	Washer
2	99-5107	12	Nut-Lock
3	104-8301	10	Nut-Flange, NI
4	109-5013	1	Panhard Rod ASM
4:2	109-5009	2	Bushing-Suspension, Rubber
4:3	109-5010	2	Spacer
5	109-7173	2	Bearing-Cross, Rear Shaft
6	109-7202-01	1	Lever-Foot
7	109-7438	1	HOC ASM
8	116-1651	1	Front Cross Shaft ASM
8:2	109-7840	2	Adjuster-Lift, Deck
8:3	109-8007	2	Link-Adjuster, Deck Lift
8:4	109-8353	2	Trunnion
8:5	3218-5	2	Nut-Jam
9	116-0818-03	2	Support-Bearing, Cross Shaft Rear
10	109-7952	2	Deck Strut ASM
10:2	109-5009	2	Bushing-Suspension, Rubber
10:3	109-5010	2	Spacer
11	109-8004	1	Link-Lever, Foot
12	116-0806	1	Side Link ASM
13	116-1619	1	Rear Cross Shaft ASM
13:2	109-8007	2	Link-Adjuster, Deck Lift
13:3	109-7840	2	Adjuster-Lift, Deck

Ref	Part No.	Qty.	Description
13:4	109-8353	2	Trunnion
13:5	3218-5	2	Nut-Jam
14	109-8757	1	Pin-HOC
15	116-0795	2	Bushing-Flange
16	109-9409	2	Support-Cross Shaft, Bearing Front
17	109-9410	2	Bearing-Shaft Front, Cross
18	109-9840	4	Screw-Shoulder, HHF
19	325-12	2	Screw-HH
20	325-17	1	Screw-HH
21	3231-2	2	Screw-CARR
23	3231-5	4	Screw-CARR
24	3233-34	3	Screw-CARR
25	3256-27	1	Washer-Flat
26	3256-29	1	Washer-Flat
27	3296-23	1	Nut-Lock, NI
28	32120-19	1	E-Ring
29	32151-103	1	Ring-Retaining, EXT
30	3233-37	4	Screw-CARR, Short Neck
31	116-0559	1	Bolt-TAP
32	325-13	2	Screw-HH
33	116-0796	1	Bushing-Flange

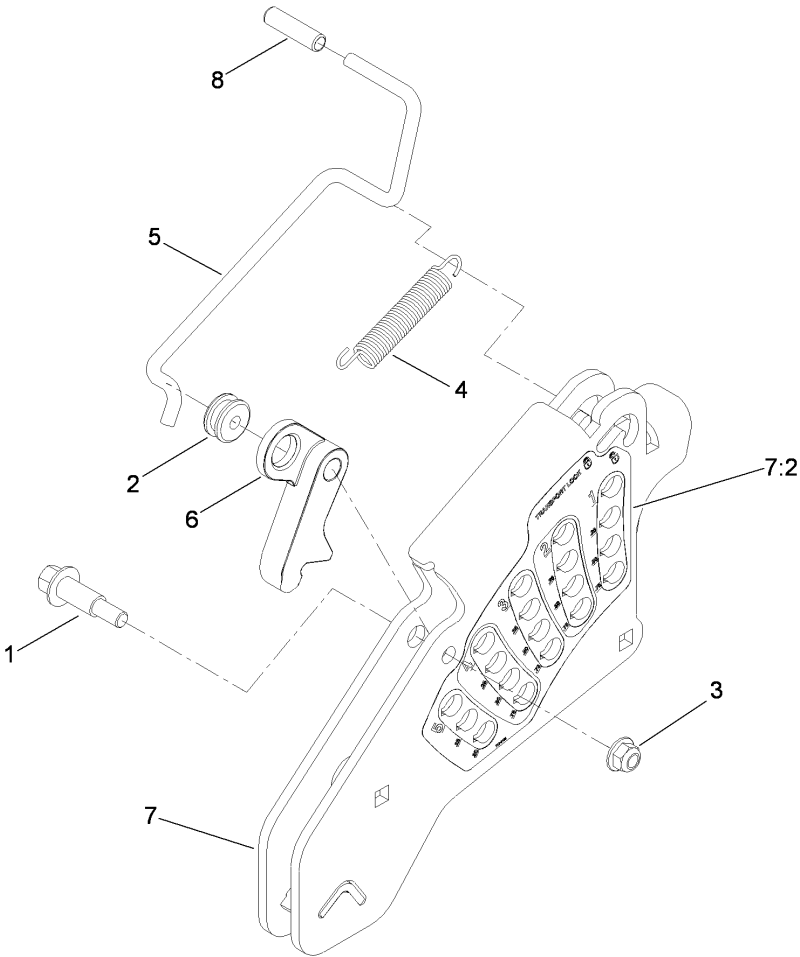


Height-of-Cut Assembly No. 109-7438

Ref	Part No.	Qty.	Description				
1	62-1330	1	Bolt-Shoulder				
2	109-7130	1	Grommet				
3	104-8301	1	Nut-Flange, NI				
4	109-7124	1	Spring-Extension				
5	109-7128	1	Rod-Lock, Transport				
6	116-0118	1	Pawl-Transport, HOC				
7	109-7335	1	HOC Plate ASM				
7:2	116-0752	1	Decal-HOC				
8	109-8250	1	Grip-Lever				

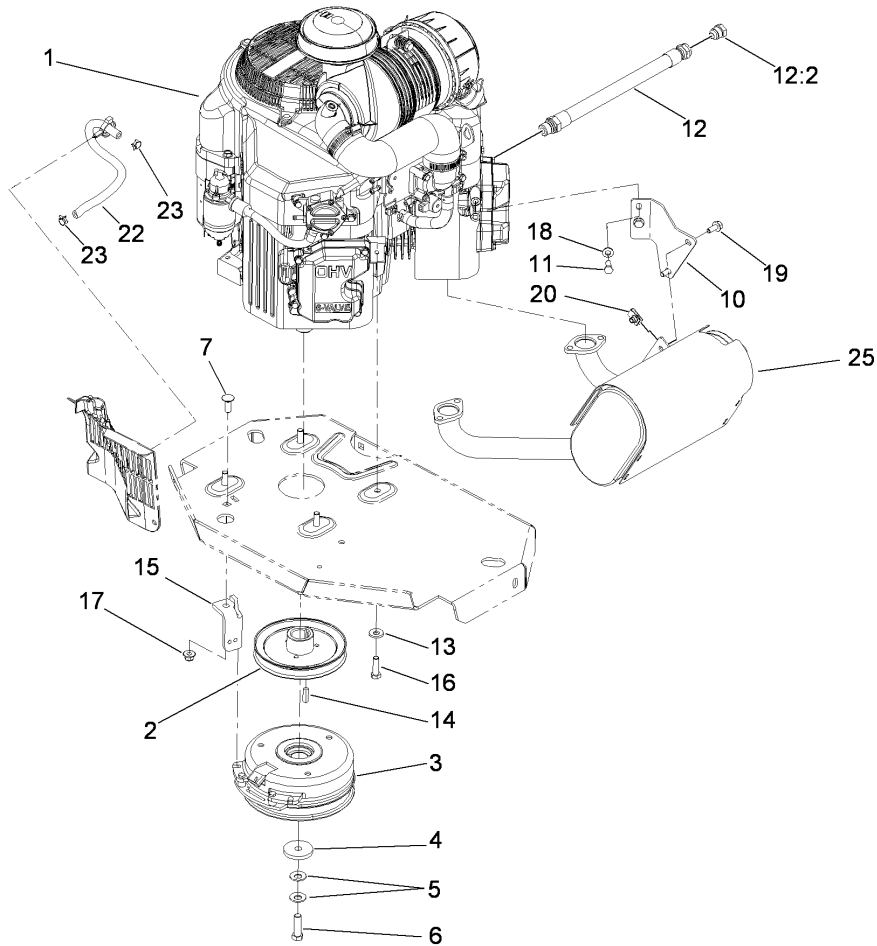

Engine, Muffler and Clutch Assembly


Ref	Part No.	Qty.	Description				
1		1	Engine-Kawasaki, Fx921V				
2	109-9905	1	Sheave				
3	116-1621	1	Clutch Kit				
4	109-6919	1	Washer-Clutch				
5	1-603610	2	Washer-Spring				
6	109-9761	1	Screw-HH W/Loctite				
7	3231-22	1	Screw-CARR				
10	116-1587	1	Bracket-Muffler				
11	33114-020	2	Screw-HH				
12	109-4490	1	Oil Drain Hose ASM				
12:2	109-1012	1	Plug				
13	98-5975	4	Washer-Belleville				
14	1-807259	1	Key				
15	109-8138-01	1	Anchor-Clutch				
16	323-7	4	Screw-HH				
17	104-8301	1	Nut-Flange, NI				
18	1-303334	2	Washer-Spring				
19	3234-5	2	Screw-HHF				
20	94-2413	2	U-Nut				
22	109-0296	1	Hose-Fuel				
23	2412-98	2	Clamp				
25	116-1707	1	Muffler-Big Block, Kawasaki				

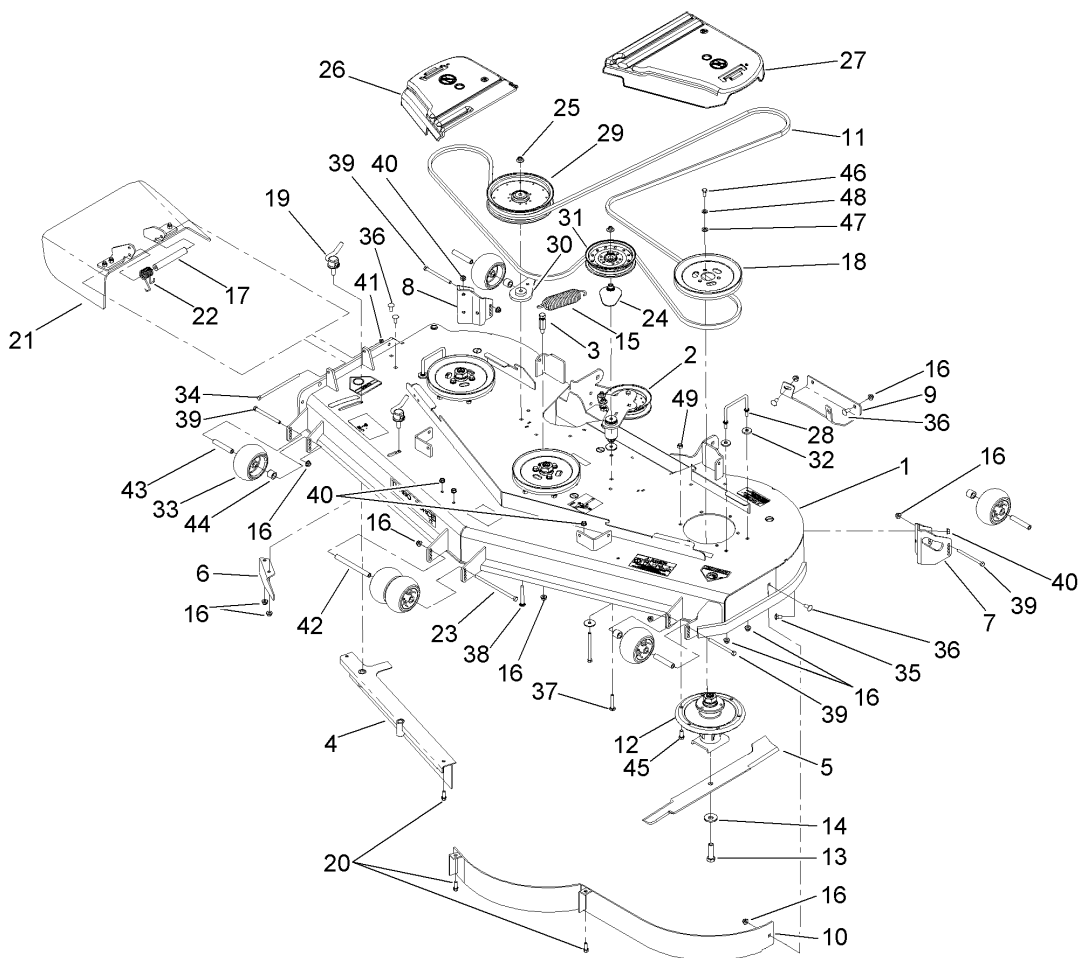

Deck Assembly


Ref	Part No.	Qty.	Description
1	112-4195	1	Deck And Decal ASM
2	114-5875	1	Idler Arm ASM
3	114-5867	1	Anchor-Spring, Tall
4	105-7669-01	1	Baffle ASM
5	105-7784-03	3	Blade-Hi Flow, 24.5 Inch
6	106-3216-01	1	Baffle-Discharge
7	106-7354-01	1	Mount-Wheel, LH
8	106-7355-01	1	Mount-Wheel, RH
9	112-4230-01	1	Plate-Skid
10	114-5843-01	1	Baffle ASM
11	114-5859	1	Belt-V
12	117-3840	3	Spindle ASM
13	51-4060	3	Screw-Blade
14	103-0865	3	Washer-Blade Bolt, Heavy
15	116-0133	1	Extension-Spring
16	104-8301	17	Nut-Flange, NI
17	105-4622	1	Spacer
18	105-7733	3	Pulley
19	107-1664	2	Lever ASM
20	92-1624	3	Screw-HWH
21	108-2792	1	Rubber Deflector ASM
22	108-4052	1	Spring-Torsion
23	108-5388	1	Screw-HH
24	109-2872	1	Spacer-Pulley

Ref	Part No.	Qty.	Description
25	109-6658	2	Nut-Flange, NI (Split)
26	116-0094	1	Cover-Belt, RH
27	109-6938	1	Cover-Belt, LH
28	109-6982	2	Wireform-Cover
29	109-8590	1	Pulley-Idler
30	109-9416	1	Spacer-Idler
31	114-5895	1	Pulley-Idler, Flat
32	1-373034	4	Washer
33	1-603299	6	Roller-Scalp, Anti
34	322-50	1	Screw-HH
35	3231-1	6	Screw-CARR
36	3231-27	7	Screw-CARR
37	3231-40	1	Bolt-CARR
38	3231-42	1	Screw-CARR
39	323-23	4	Screw-HH
40	3290-357	9	Nut-HHF, Whiz
41	3296-47	1	Nut-Lock, NI
42	98-5967	1	Spacer-Wheel
43	98-7912	4	Tube-Spanner
44	98-7913	4	Tube-Spacer
45	33115-025	18	Screw-HH
46	323-4	9	Screw-HH
47	3256-24	9	Washer-Flat
48	3290-455	9	Washer-Belleville

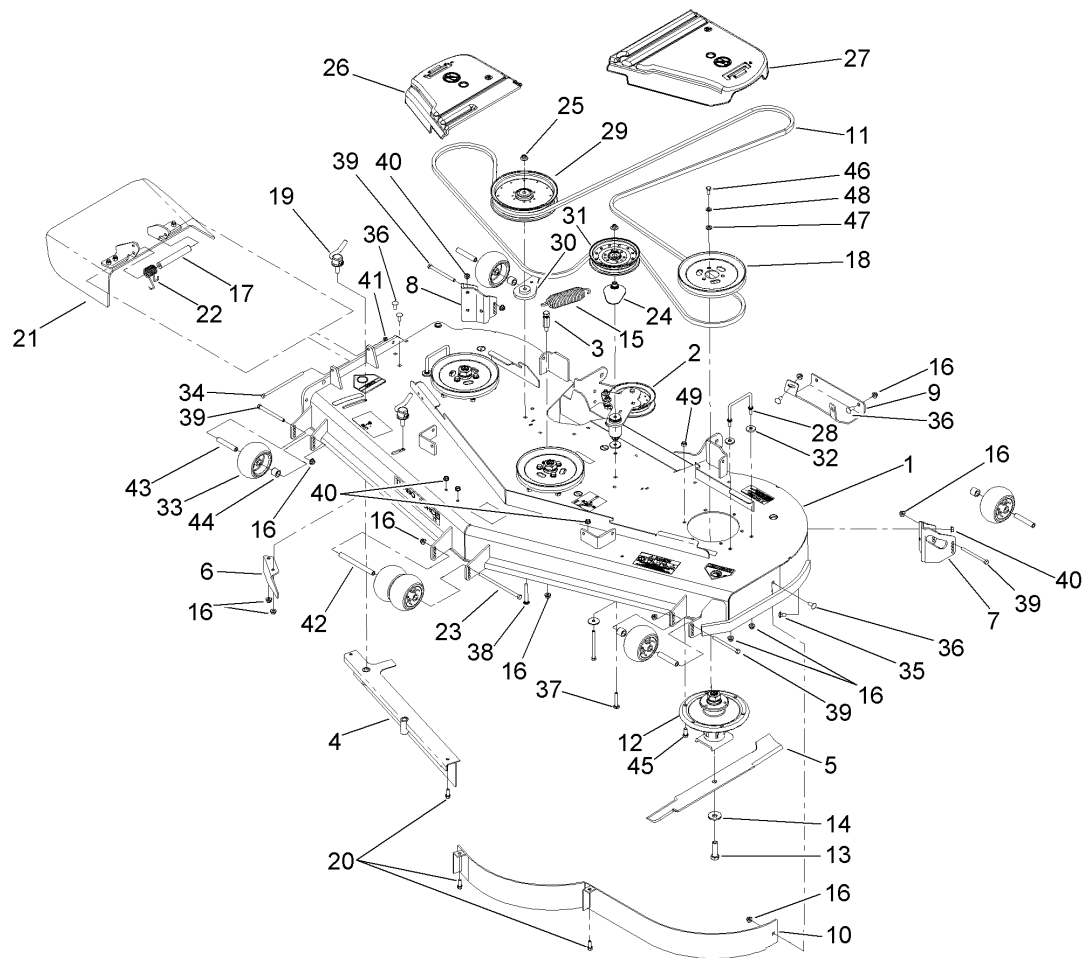


Deck Assembly (continued)

Ref	Part No.	Qty.	Description
49	33025-00	18	Nut-Lock

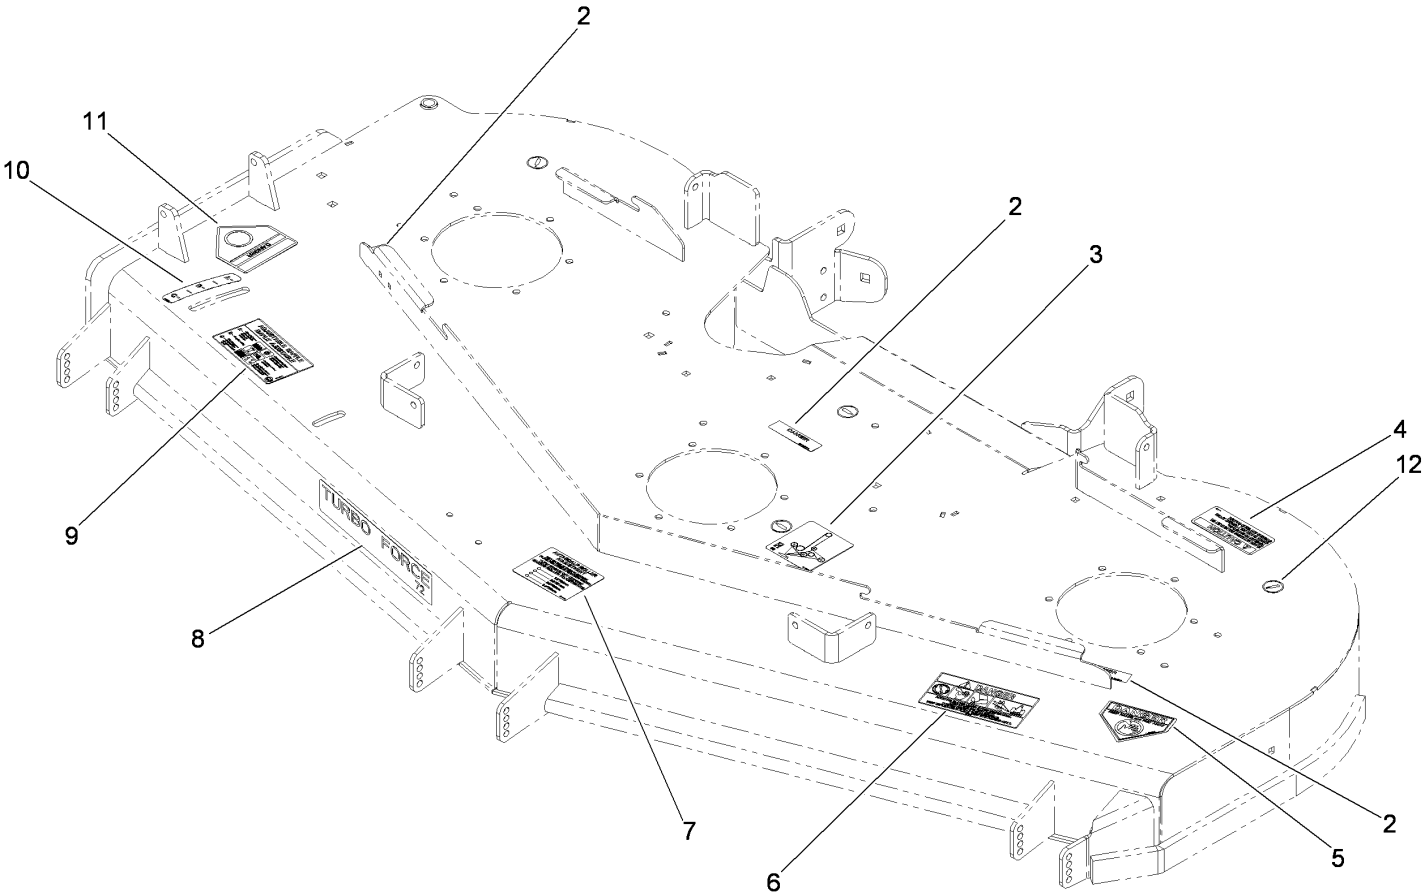


Deck Decal Assembly No. 112-4195

Ref	Part No.	Qty.	Description				
2	98-5954	3	Decal-Cover, Missing				
3	115-7445	1	Decal-Routing, Deck Belt				
4	68-8340	1	Decal-Torque				
5	1-403005	1	Decal-Danger				
6	66-1340	1	Decal-Danger, Thrown Object				
7	105-7798	1	Decal-Scalp, Anti				
8	107-1620	1	Decal				
9	110-2068	1	Decal-Adjustment, Baffle				
10	110-2067	1	Decal-Setting, Baffle				
11	54-9220	1	Decal-Danger				
12	58-6520	4	Decal-Grease				

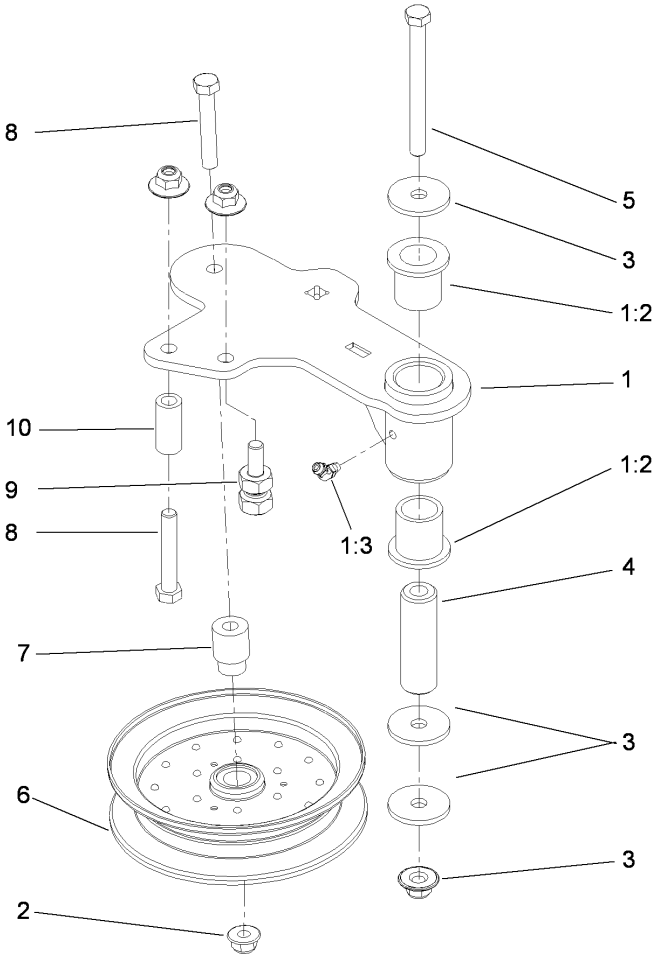

Idler Assembly

Ref	Part No.	Qty.	Description				
1	114-5870	1	Idler Arm ASM				
1:2	1-303514	2	Bearing-Flanged				
1:3	1481	1	Fitting-Grease				
2	109-6658	4	Nut-Flange, NI (Split)				
3	1-213069	3	Washer				
4	114-5848	1	Spacer-Plain				
5	98-5961	1	Screw-HH				
6	103-8743	1	Pulley-Idler, Flanged				
7	112-4212	1	Mount-Pulley				
8	323-11	2	Screw-HH				
9	114-5866	1	Anchor-Spring, Short				
10	104-0151	1	Spacer				

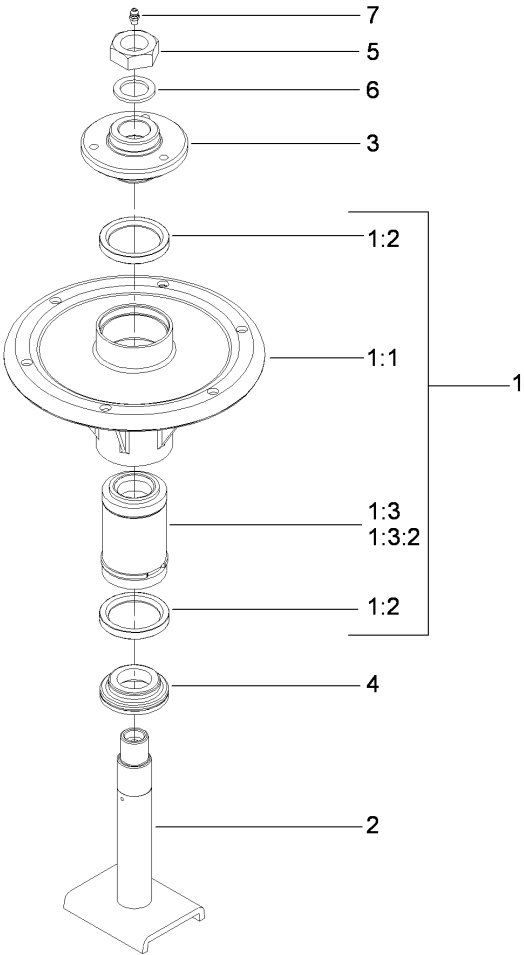


Spindle Assembly No. 117-3840

Ref	Part No.	Qty.	Description				
② 1		1	Spindle Bearing ASM				
② 1:1		1	Housing-Spindle				
1:2	253-154	2	Seal-Oil				
1:3	71-2530	1	Bearing/Spacer Kit				
② 1:3:2		1	Spacer-Bearing				
2	117-3841	1	Spindle Shaft ASM				
3	114-1161	1	Hub-Spline				
4	69-6950	1	Spacer-Shaft, Spindle				
5	3296-49	1	Nut-Lock, NI				
6	3-8514	1	Washer-Thrust				
7	302-57	1	Fitting-Grease				


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

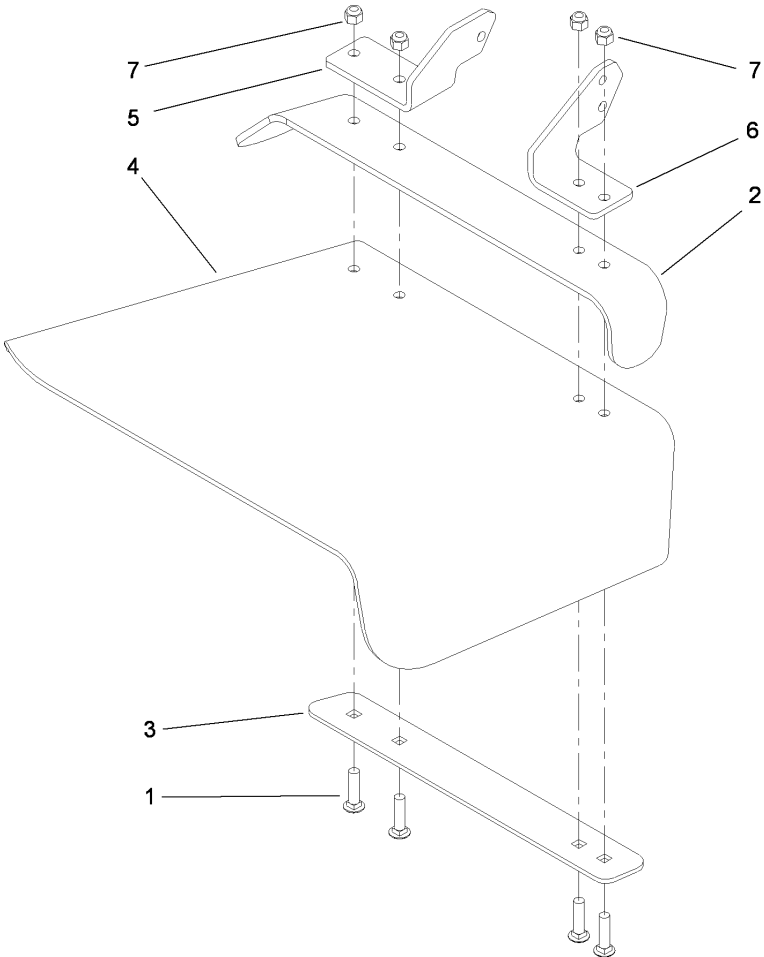


Rubber Deflector Assembly No. 108-2792

Ref	Part No.	Qty.	Description				
1	3231-4	4	Screw-CARR				
2	106-3246-01	1	Deflector				
3	106-3248-03	1	Strap-Discharge				
4	108-5029	1	Deflector-Rubber				
5	108-4059-01	1	Plate-Hinge, Rear				
6	106-3253-01	1	Plate-Hinge, Front				
7	3296-39	4	Nut-Lock, NI				

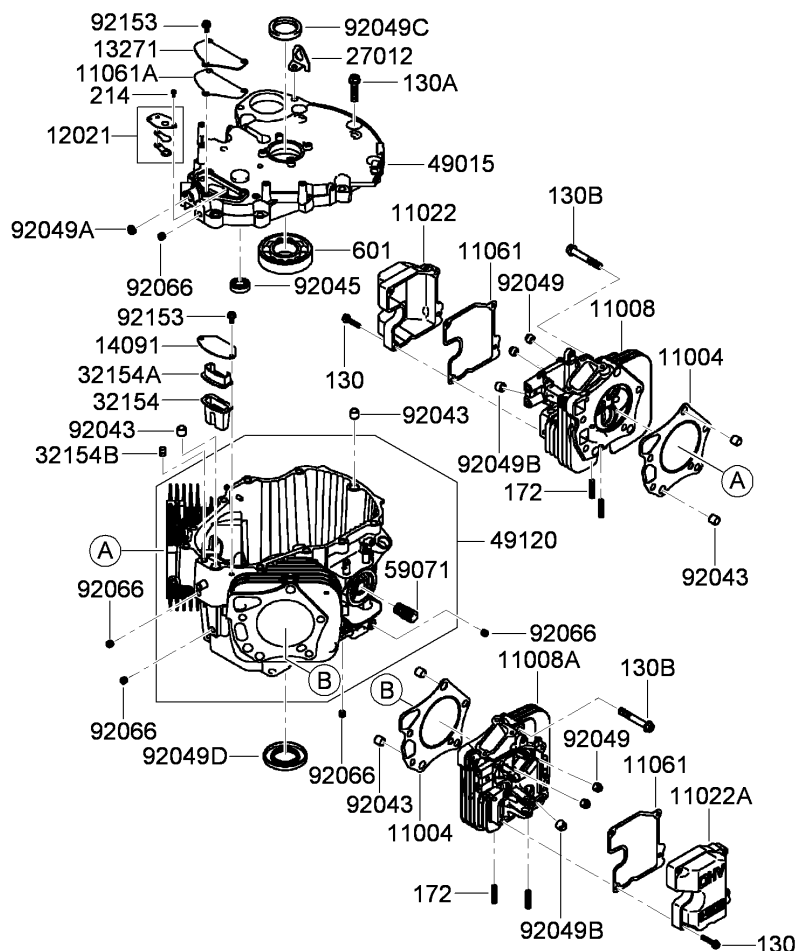


Cylinder and Crankcase Assembly Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③130	130AA0630	8	Bolt-Flanged (6X30)	③92045	92045-7002	1	Bearing-Ball, A (15X32X9 6002)
③130A	130CA1040	11	Bolt-Flanged (10X40)	③92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
③130B	130CA1065	10	Bolt-Flanged (10X65)	③92049A	92049-7005	1	Seal-Oil, S O (8X14X5 H S)
③172	172BA0818	4	Bolt-Stud (8X18)	③92049B	92049-7020	2	Seal-Oil (7X15X13)
③214	214AA0408	2	Screw-Pan +- (4X8)	③92049C	92049-7024	1	Seal-Oil, S D (40X54X9 R Hs)
③601	601A6308	1	Bearing-Ball	③92049D	92049-7025	1	Seal-Oil, S D (40X72X8 L Vs)
③11004	11004-7023	2	Gasket-Head	③92066	92066-7026	5	Plug
③11008	11008-7043	1	Head ASM (Cylinder No.1)	③92153	92153-7043	5	Bolt (6X12)
③11008A	11008-7044	1	Head ASM (Cylinder No.2)				
③11022	11022-7012	1	Case-Rocker, No.1				
③11022A	11022-7013	1	Case-Rocker, No.2				
③11061	11061-7055	2	Gasket-Case, Rocker				
③11061A	11061-7065	1	Gasket-Cover, Breather				
③12021	12021-7003	1	Breather Reed Valve ASM				
③13271	13271-7037	1	Plate-Cover, Breather				
③14091	14091-7052	1	Cover-Breather				
③27012	27012-7004	1	Hook				
③32154	32154-7014	1	Pipe-Breather				
③32154A	32154-7015	1	Pipe-Breather				
③32154B	32154-7019	1	Pipe				
③49015	49015-7060	1	Cover-Crankcase				
③49120	49120-6174	1	Crankcase				
③59071	59071-2079	1	Joint				
③92043	92043-1266	6	Pin				

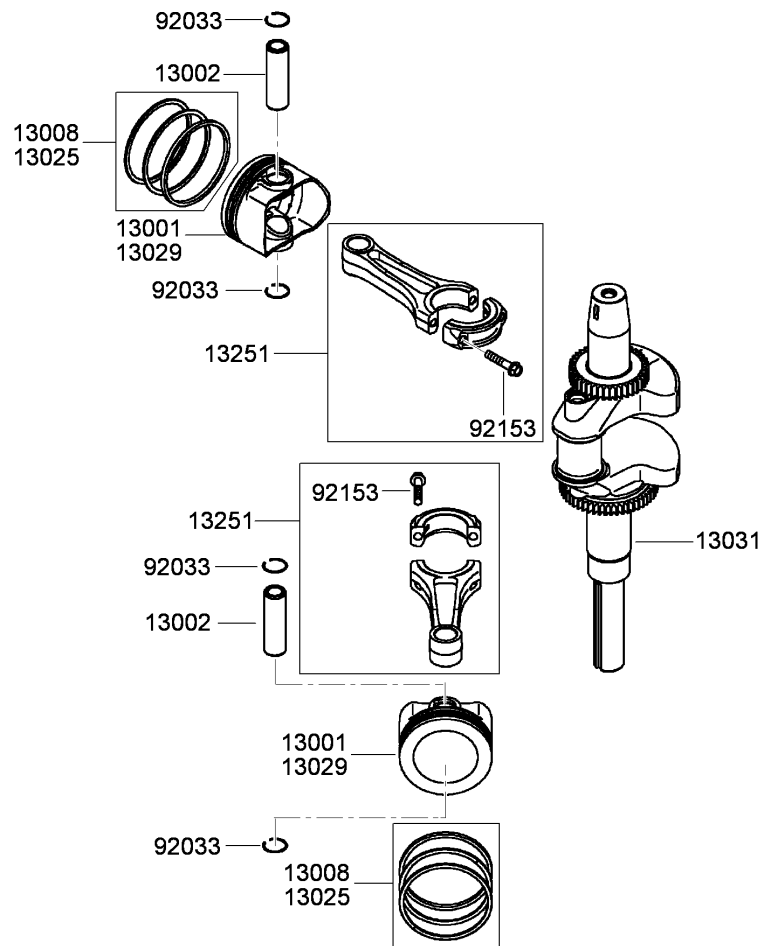


Piston and Crankshaft Assembly
Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
13001	13001-7021	2	Piston-Engine				
13002	13002-7004	2	Pin-Piston				
13008	13008-7004	2	Piston Ring Set				
13025	13025-7008	1	Piston Ring Set (L, 0.5)				
13029	13029-7009	1	Piston-Engine (L, 0.5)				
13031	13031-7080	1	Crankshaft				
13251	13251-7018	2	Connecting Rod ASM				
92033	92033-2176	4	Ring-Snap				
92153	92153-2054	4	Bolt (7X35.2)				

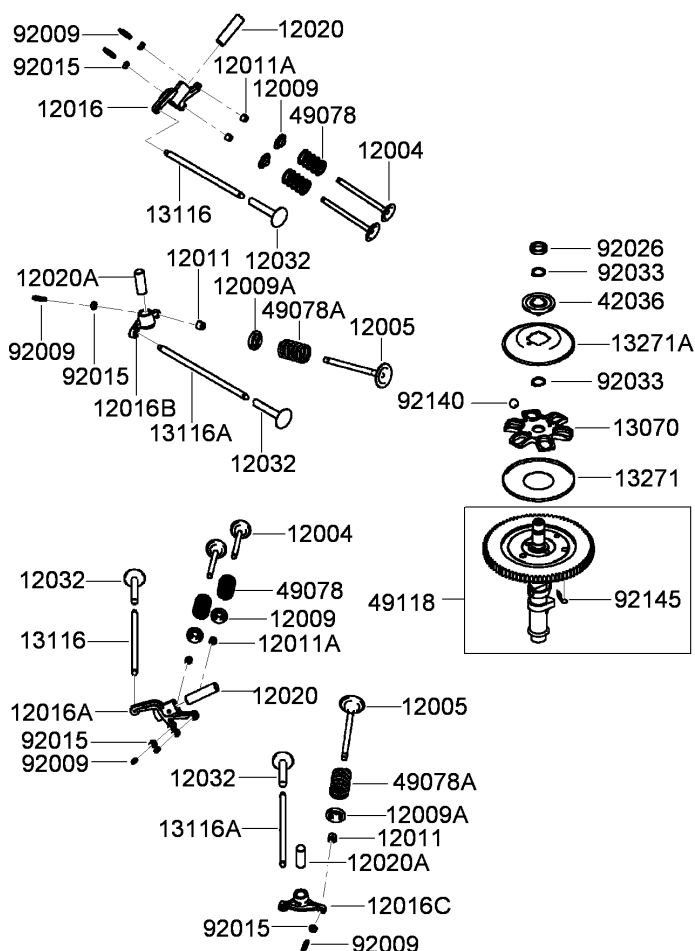


Valve and Camshaft Assembly Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③12004	12004-7006	4	Valve-Intake	③92026	92026-7019	1	Spacer
③12005	12005-7007	2	Valve-Exhaust	③92033	92033-7001	2	Ring-Snap
③12009	12009-7001	4	Retainer-Spring, Valve	③92140	92140-7005	6	Ball
③12009A	12009-7002	2	Retainer-Spring, Valve	③92145	92145-7001	1	Spring
③12011	12011-2052	4	Collet				
③12011A	12011-2056	8	Collet				
③12016	12016-7014	1	Arm-Rocker (No.1 Intake)				
③12016A	12016-7015	1	Arm-Rocker (No.2 Intake)				
③12016B	12016-7018	1	Arm-Rocker (No.1 Exhaust)				
③12016C	12016-7019	1	Arm-Rocker (No.2 Exhaust)				
③12020	12020-7001	2	Shaft-Rocker (Intake)				
③12020A	12020-7003	2	Shaft-Rocker (Exhaust)				
③12032	12032-7002	4	Tappet				
③13070	13070-7004	1	Guide				
③13116	13116-2054	2	Rod-Push				
③13116A	13116-7005	2	Rod-Push				
③13271	13271-7007	1	Plate				
③13271A	13271-7021	1	Plate-Governor				
③42036	42036-7010	1	Sleeve				
③49078	49078-7002	4	Spring-Valve, Engine (Intake)				
③49078A	49078-7004	2	Spring-Valve, Engine (Exhaust)				
③49118	49118-7018	1	Camshaft ASM				
③92009	92009-1109	6	Screw				
③92015	92015-1137	6	Nut				

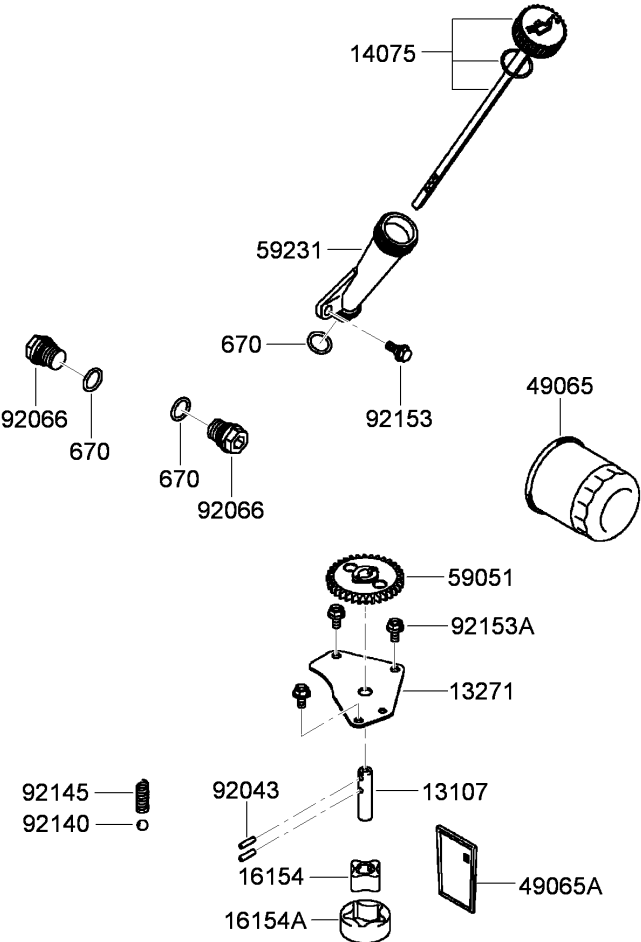

Lubrication Equipment Assembly
Kawasaki FX921V-AS04


Ref	Part No.	Qty.	Description				
③670	670D2016	3	O-Ring (16Mm)				
③13107	13107-7009	1	Shaft				
③13271	13271-7034	1	Plate-Rotor, Pump				
③14075	14075-7011	1	Cap ASM				
③16154	16154-7007	1	Rotor-Pump (In)				
③16154A	16154-7008	1	Rotor-Pump (Out)				
③49065	49065-2078	1	Filter-Oil				
③49065A	49065-7004	1	Filter-Oil				
③59051	59051-7026	1	Gear-Spur, Oil Pump				
③59231	59231-7011	1	Filler				
③92043	92043-7003	2	Pin				
③92066	92066-7003	2	Plug				
③92140	92140-7003	1	Ball				
③92145	92145-7046	1	Spring				
③92153	92153-7007	1	Bolt				
③92153A	92153-7043	3	Bolt (6X12)				

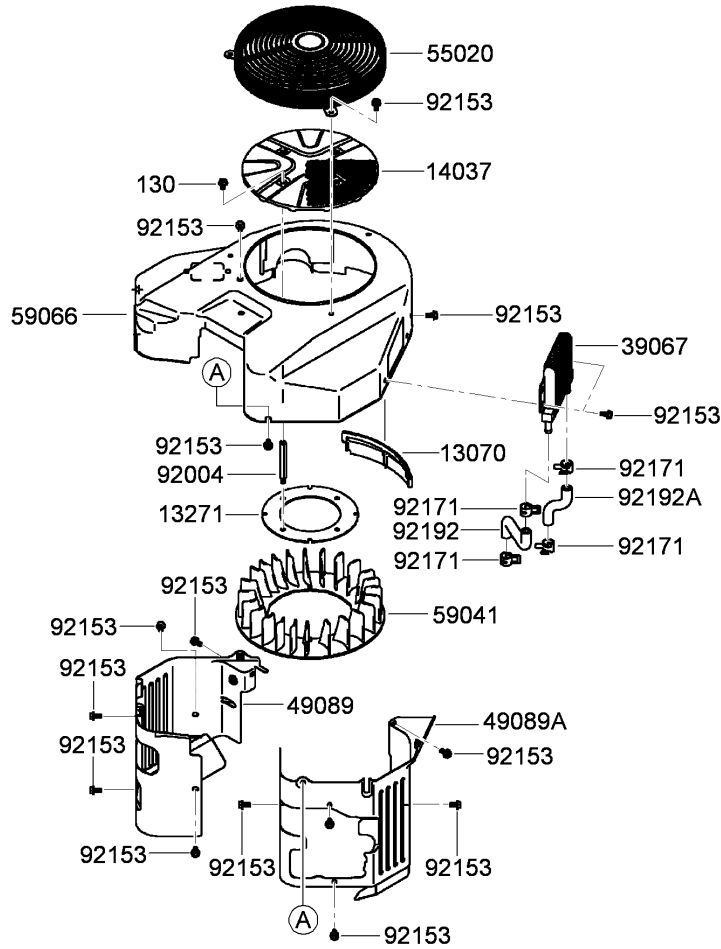

Cooling Equipment Assembly


Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
③130	130AA0610	4	Bolt-Flanged (6X10)				
③13070	13070-7013	1	Guide				
③13271	13271-7035	1	Plate-Fan				
③14037	14037-7029-9H	1	Screen				
③39067	39067-7007	1	Cooler-Oil				
③49089	49089-7062-753	1	Shroud-Engine				
③49089A	49089-7063-753	1	Shroud-Engine				
③55020	55020-7016-9H	1	Guard				
③59041	59041-7013	1	Fan				
③59066	59066-7043-753	1	Housing-Fan				
③92004	92004-7021	4	Stud-Screen				
③92153	92153-7043	18	Bolt (6X12)				
③92171	92171-7015	4	Clamp				
③92192	92192-7078	1	Tube				
③92192A	92192-7079	1	Tube				

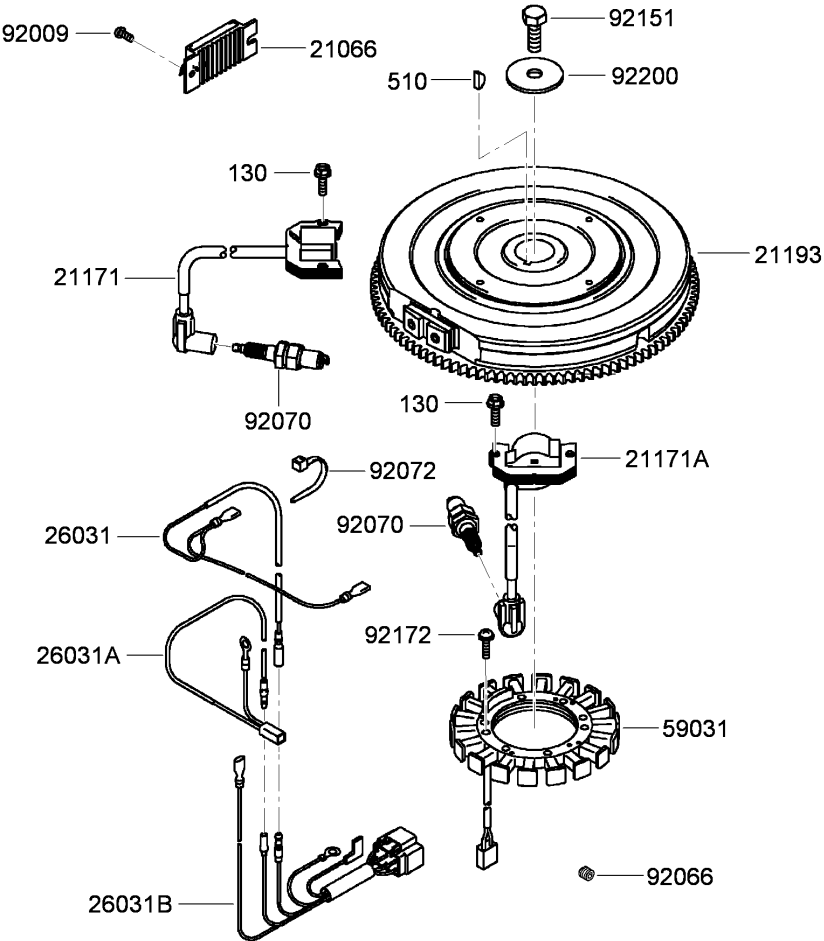


Electric Equipment Assembly
Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
❶130	130AA0620	4	Bolt-Flanged (6X20)				
❷510	510A5100	1	Key-Woodruff				
❸21066	21066-7011	1	Regulator-Voltage				
❹21171	21171-7042	1	Ignition Coil ASM (No.1 Cylinder)				
❺21171A	21171-7043	1	Ignition Coil ASM (No.2 Cylinder)				
❻21193	21193-7034	1	Flywheel ASM				
❼26031	26031-7033	1	Harness				
❼26031A	26031-7034	1	Harness				
❼26031B	26031-7039	1	Harness				
❶59031	59031-7017	1	Coil-Charging				
❶92009	92009-2308	2	Screw				
❶92066	92066-7026	1	Plug				
❶92070	92070-2088	2	Spark Plug, B P R 5E S (N G K) Solid				
❶92072	92072-7003	3	Band				
❶92151	92151-2097	1	Bolt (12X30)				
❶92172	92172-7018	4	Screw (5X20)				
❶92200	92200-7040	1	Washer (12.2X46X3)				

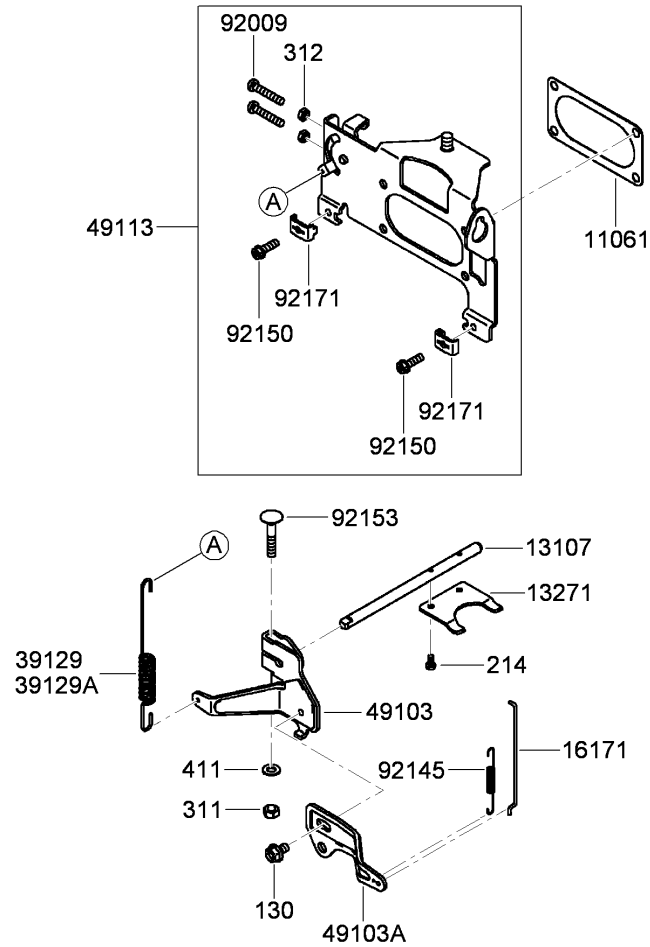

Control Equipment Assembly
Kawasaki FX921V-AS04


Ref	Part No.	Qty.	Description				
❸130	130BA0610	1	Bolt-Flanged (6X10)				
❸214	214AA0408	2	Screw-Pan +- (4X8)				
❸311	311AA0600	1	Nut-Hex (6Mm)				
❸312	312AA0500	2	Nut-Hex (5Mm)				
❸411	411AA0600	1	Washer-Plain (6Mm)				
❸11061	11061-7056	1	Gasket-Pipe, Intake				
❸13107	13107-7040	1	Shaft				
❸13271	13271-7038	1	Plate				
❸16171	16171-7018	1	Link				
❸39129	39129-7017	1	Spring-Governor (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)				
❸39129A	39129-7027	1	Spring-Governor				
❸49103	49103-7009	1	Arm-Governor				
❸49103A	49103-7010	1	Arm-Governor				
❸49113	49113-7048	1	Control Panel ASM				
❸92009	92009-2381	2	Screw (5X30)				
❸92145	92145-7050	1	Spring				
❸92150	92150-2182	2	Bolt (5X18)				
❸92153	92153-7033	1	Bolt (6X35)				
❸92171	92171-7018	2	Clamp				

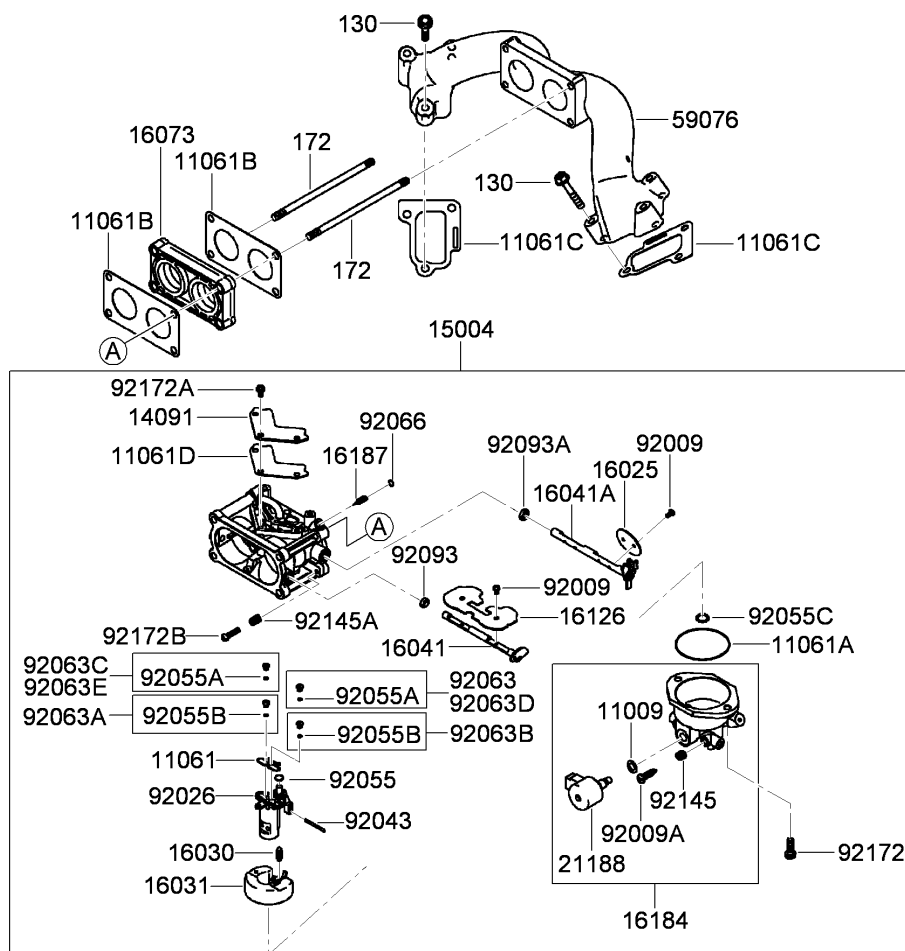

Carburetor Assembly Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description
①130	130AA0635	6	Bolt-Flanged (6X35)
①172	172BA06120	2	Bolt-Stud (6X120)
①11009	11009-2056	1	Gasket
①11061	11061-7037	1	Gasket
①11061A	11061-7038	1	Gasket
①11061B	11061-7057	2	Gasket-Insulator
①11061C	11061-7062	2	Gasket-Manifold
①11061D	11061-7067	1	Gasket
①14091	14091-7059	1	Cover
①15004	15004-7009	1	Carburetor-ASM
①16025	16025-7012	2	Valve-Throttle
①16030	16030-7004	1	Valve-Float
①16031	16031-7003	1	Float
①16041	16041-7035	1	Shaft-Chock, Carburetor
①16041A	16041-7037	1	Shaft-Throttle, Carburetor
①16073	16073-7010	1	Insulator
①16126	16126-7019	1	Valve-Chock
①16184	16184-7021	1	Float Chamber ASM
①16187	16187-7005	2	Needle-Jet
①21188	21188-7003	1	Solenoid
①59076	59076-7012	1	Manifold-Intake
①92009	92009-7003	6	Screw
①92009A	92009-7006	1	Screw-Drain
①92026	92026-7022	1	Spacer


Ref	Part No.	Qty.	Description
①92043	92043-7014	1	Pin
①92055	92055-7012	1	O-Ring
①92055A	92055-7013	1	O-Ring
①92055B	92055-7013	2	O-Ring
①92055C	92055-7016	1	O-Ring
①92063	92063-7099	1	Jet-Main (No.134, 6560 Ft)
①92063A	92063-7099	1	Jet-Main (No.134, 6560 Ft)
①92063B	92063-7100	1	Jet-Main (No.140)
①92063C	92063-7101	1	Jet-Main (No.131, 3280 Ft)
①92063D	92063-7102	1	Jet-Main (No.137, 3280 Ft)
①92063E	92063-7103	1	Jet-Main (No.128, 6560 Ft)
①92066	92066-7009	2	Plug-Expansion
①92093	92093-7001	1	Seal (I D 5.9)
①92093A	92093-7002	1	Seal (I D 6.9)
①92145	92145-7011	1	Spring
①92145A	92145-7039	1	Spring
①92172	92172-7005	2	Screw (M5)
①92172A	92172-7006	3	Screw (M4)
①92172B	92172-7031	1	Screw-Adjust, Throttle

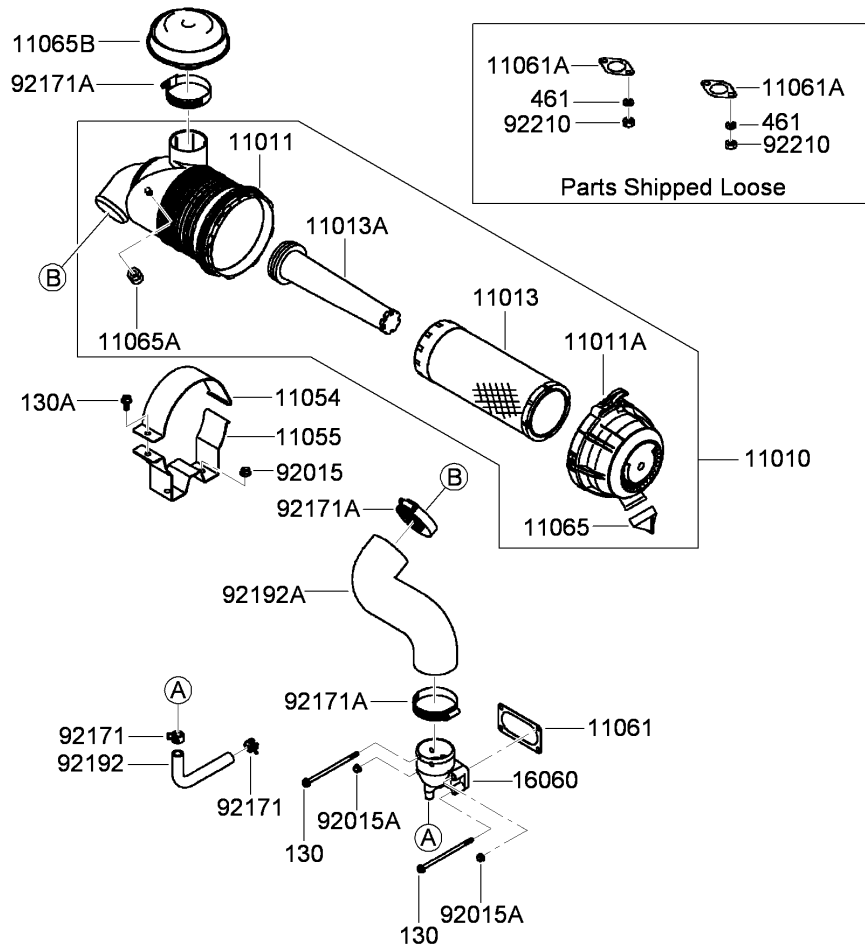

Air Filter and Muffler Assembly
Kawasaki FX921V-AS04


Ref	Part No.	Qty.	Description
③130	130AA06120	2	Bolt-Flanged (6X120)
③130A	130AA0816	1	Bolt-Flanged (8X16)
③461	461DA0800	4	Washer-Spring (8Mm)
③11010	11010-7020	1	Air Filter ASM
③11011	11011-7047	1	Case-Filter, Air
③11011A	11011-7050	1	Case-Filter, Air
③11013	11013-7038	1	Element-Filter, Air
③11013A	11013-7039	1	Element-Filter, Air
③11054	11054-7013-9X	1	Bracket
③11055	11055-7010-9H	1	Bracket
③11061	11061-7056	1	Gasket-Pipe, Intake
③11061A	11061-7061	2	Gasket-Muffler
③11065	11065-7008	1	Cap
③11065A	11065-7009	1	Cap
③11065B	11065-7017	1	Cap
③16060	16060-6006	1	Pipe-Intake
③92015	92015-1143	2	Nut
③92015A	92015-1367	2	Nut
③92171	92171-7013	2	Clamp
③92171A	92171-7023	3	Clamp-Filter, Air
③92192	92192-7075	1	Tube (12.6X18.6X183)
③92192A	92192-7096	1	Tube-Filter, Air

Ref	Part No.	Qty.	Description
③92210	92210-7027	4	Nut (M8)

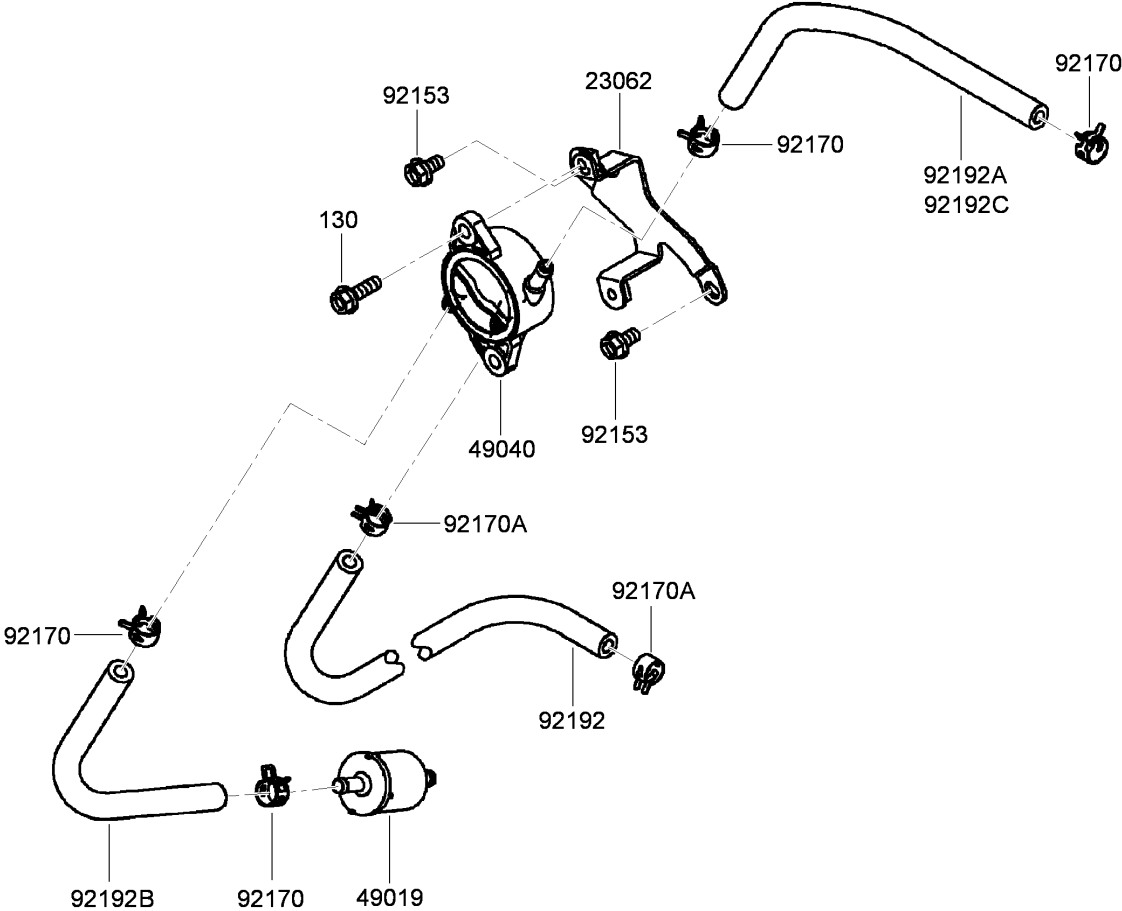

Fuel Tank and Fuel Valve Assembly
Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
❶130	130AA0620	2	Bolt-Flanged (6X20)				
❶23062	23062-7020	1	Bracket ASM				
❶49019	49019-7001	1	Filter-Fuel				
❶49040	49040-7009	1	Pump-Fuel				
❶92153	92153-7043	2	Bolt (6X12)				
❶92170	92170-2009	4	Clamp				
❶92170A	92170-2088	2	Clamp				
❶92192	92192-7077	1	Tube (6.4X12.7X318)				
❶92192A	92192-7140	1	Tube (6.35X12.7X220) (Part Can Be Used As Substitute On The Product And Is Supplied Until Stock Is Exhausted)				
❶92192B	92192-7145	1	Tube (6.35X12.7X185)				
❶92192C	92192-7160	1	Tube (6.35X12.7X230)				

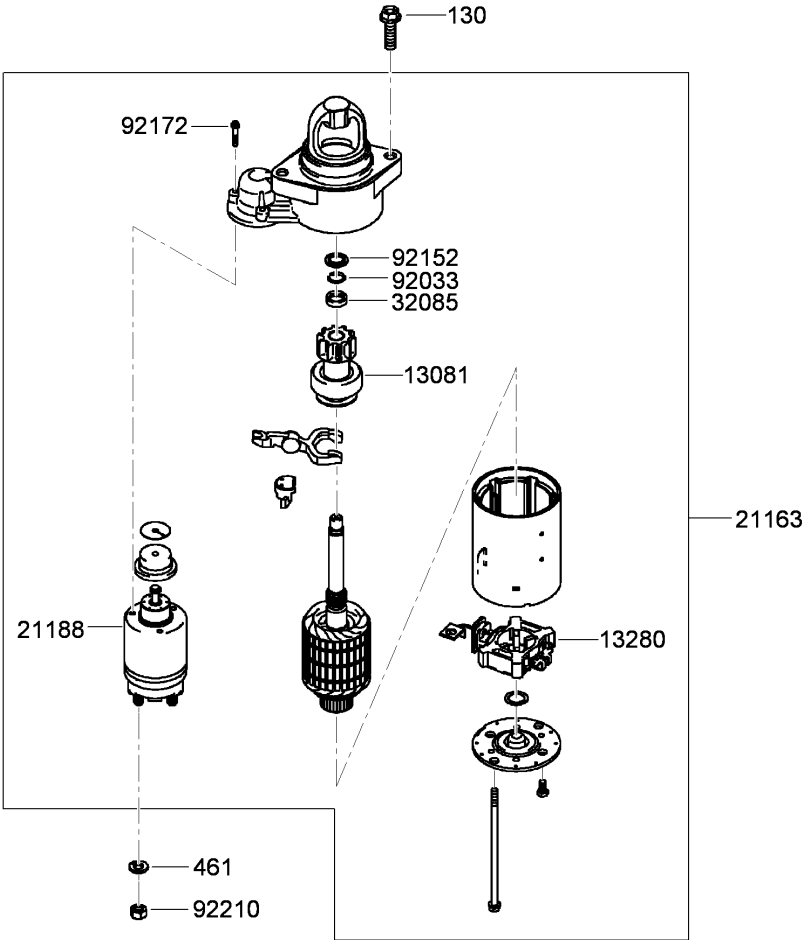

Starter Assembly
Kawasaki FX921V-AS04

Ref	Part No.	Qty.	Description				
130	130AA0830	2	Bolt-Flanged (8X30)				
461	461DA0800	1	Washer-Spring (8Mm)				
13081	13081-7001	1	Clutch ASM				
13280	13280-7002	1	Holder				
21163	21163-7021	1	Starter-Electric				
21188	21188-7005	1	Solenoid				
32085	32085-7001	1	Stopper				
92033	92033-7014	1	Ring-Snap				
92152	92152-7013	1	Collar				
92172	92172-7032	3	Screw				
92210	92210-7027	1	Nut (M8)				

Attachments and Accessories

For 74957CP - Z Master G3 Riding Mower, with 72in TURBO FORCE Side Discharge Mower

Product Name	Model/Part
Blade-Mid Flow, 24.5 Inch	105-7711-03
Blade-Lo Flow, 24.5 Inch	105-7712-03
Blade-Atomic, 24.5 Inch	105-7719-03
Blade-Recycler, 24.5 Inch	105-7778-03
Blade-Hi Flow, 24.5 Inch	105-7784-03
6 Pack Blade, 24.5 Inch Hi-Flow	108-1120
6 Pack Blade, 24.5 Inch Atomic	108-1126
Hitch Kit	109-9487
6 Pack-Blade, 24.5 Inch Mid-Flow	110-0404
6 Pack-Blade, 24.5 Inch Lo-Flow	110-0410
6 Pack-Blade, 24.5 Inch Recycler	110-0411
HYPR-OIL 500 (Quart)	114-4713
HYPR-OIL 500 (Gallon)	114-4714
HYPR-OIL 500-5 (5 Gallon)	114-4715
Bimini Folding Shade Assembly	115-4510
Recycler Kit	115-7469
Light Kit	116-1154
Z Stand Kit	117-0354
Operator-Controlled Discharge Chute Kit	117-3600
Deluxe Suspension Seat Kit	117-6174
Blower and Drive Kit	78554
E-Z Vac Triple Bagging System	78564
E-Z Vac DFS Collection System	78568
Trash Holder Kit	TC26

NOTES

NOTES

NOTES

