



Power Max 826 LE Snowthrower

Model No. 38622 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Auger and Housing Assembly	 3	Carburetor Assembly No. 640349 Tecumseh LH318SA-156563H	 13
26 Inch Auger Gearcase Assembly No. 108-7328	 4	Engine Assembly No. 1 Tecumseh LH318SA-156563H	 14
Chute Assembly	 5	Engine Assembly No. 2 Tecumseh LH318SA-156563H	 16
Frame Assembly	 6	Rewind Starter No. 590749 Tecumseh LH318SA-156563H	 18
Chain Drive Assembly	 8	Recoil Starter No. 590733 (Optional) Tecumseh LH318SA-156563H	 19
Handle and Control Assembly	 9	Electric Starter Assembly No. 33329D Tecumseh LH318SA-156563H	 20
Handle Assembly	 10	Attachments and Accessories List	 21
Lever Chute Control Assembly	 11		
Engine Assembly	 12		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes

❶ Not serviced separately


❷ Obtain from your local Tecumseh dealer

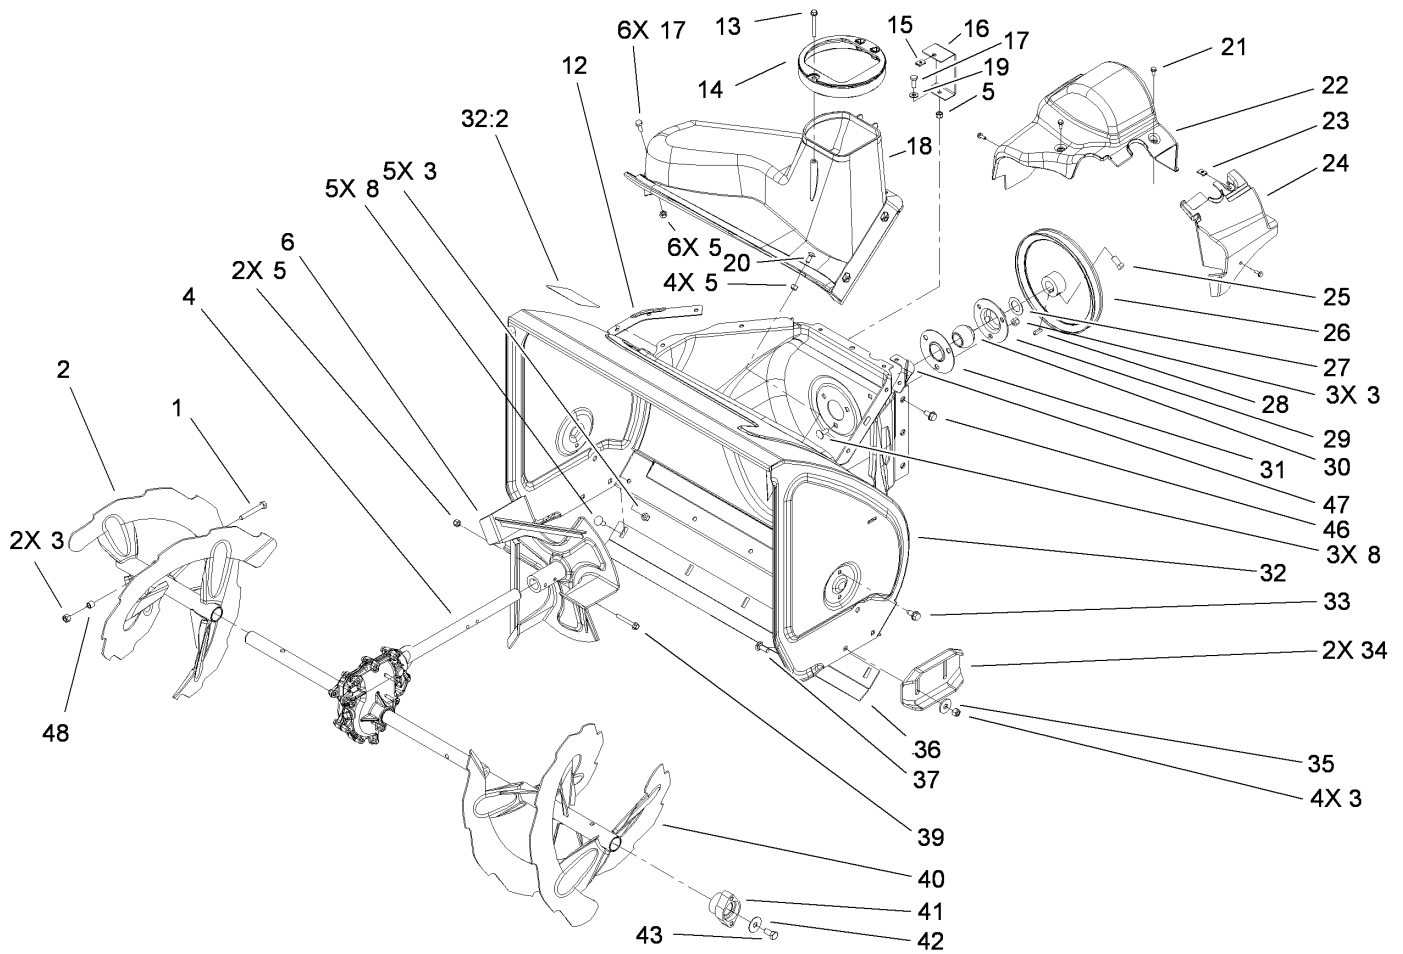

Auger and Housing Assembly

Ref	Part No.	Qty.	Description
1	322-11	2	Screw-HH
2	106-7289-03	1	RH Auger ASM
3	3296-29	14	Nut-Lock, NI
4	108-7328	1	26 Inch Auger Gearcase ASM
5	3296-42	13	Nut-Lock, NI
6	106-4576-03	1	Impeller ASM
8	3230-23	8	Screw-CARR
12	107-1017-03	1	Seal-Flange, Cover
13	107-3003	1	Screw-Plastite
14	107-3006	1	Guide-Chute
15	107-1013	1	Nut-Speed, U-Type
16	107-1014-03	1	Bracket-Cover, Clip Nut
17	321-4	7	Screw-HH
18	108-0017	1	Cover
19	3256-22	1	Washer-Flat
20	3229-1	4	Screw-CARR
21	32144-112	4	Screw-HWH
22	107-1001	1	Cover-Belt
23	701493	1	Nut-Speed
24	107-1016	1	Cover-Extension, Belt
25	3242-4	2	Screw-Set, SQH
26	62-1300	1	Pulley-Impeller
27	252-80	1	Washer-Thrust
28	3257-23	1	Key-Woodruff

Ref	Part No.	Qty.	Description
29	26-6110	1	Flange-Cup, Bearing
30	63-3450	1	Bearing-Ball
31	26-6120	1	Flange-Cup, Bearing
32	107-3821	1	Housing-Auger, 26 Inch
32:2	53-7670	1	Decal-Warning, Auger
33	32144-70	4	Screw-HWHTF
34	106-4588-01	2	Skid
35	52-2861	4	Washer
36	105-9976-01	1	Scraper-Fixed
37	3230-16	4	Screw-CARR
39	321-44	2	Screw-HHF
40	106-7299-03	1	LH Auger ASM
41	106-4570	2	Auger-Bearing
42	3-0750	2	Washer
43	323-4	2	Screw-HH
46	32144-14	6	Screw-HWHTF
47	108-0039-03	1	Seal
48	1-633545	2	Spacer

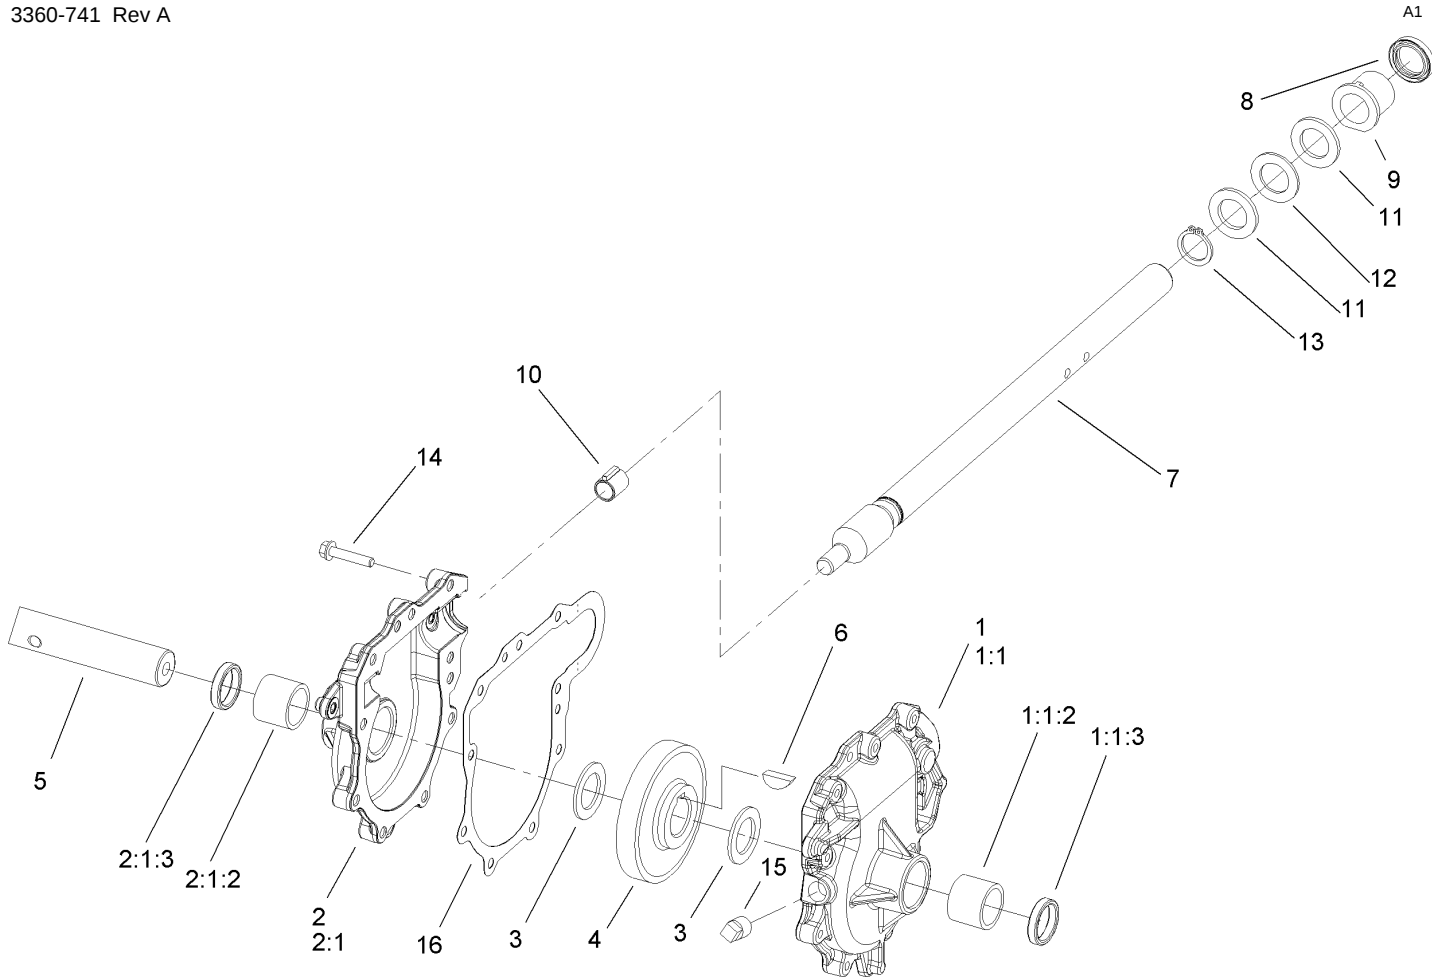

26 Inch Auger Gearcase Assembly No. 108-7328


Ref	Part No.	Qty.	Description				
1	108-7325	1	LH Auger Gearcase ASM				
① 1:1		1	Gearcase-Auger, LH				
1:1:2	112-6635	1	Bushing-Sleeve				
1:1:3	7-0045	1	Seal-Oil				
2	108-7327	1	RH Auger Gearcase ASM				
② 2:1		1	Gearcase-Auger, RH				
2:1:2	112-6635	1	Bushing-Sleeve				
2:1:3	7-0045	1	Seal-Oil				
3	252-71	2	Washer-Thrust				
4	62-0120	1	Gear-Helical				
5	106-4579	1	Shaft-Auger				
6	3257-10	1	Key-Woodruff				
7	66-7811	1	Shaft-Impeller				
8	253-149	1	Seal-Oil				
9	37-6560	1	Bushing-Input				
10	62-1150	1	Bushing-Worm				
11	252-78	2	Bearing-Thrust				
12	252-76	1	Bearing-Thrust				
13	32151-33	1	Ring-Retaining, EXT				
14	108-4862	9	Screw-HWHTF				
15	281-1	1	Plug-Pipe, SQH				
16	108-7330	1	Gasket-Gearcase, Auger				



Chute Assembly

Ref	Part No.	Qty.	Description
1	112-6606	1	Deflector-Chute
2	106-4594	1	Spring-Torsion
3	46-8092	5	Screw-Plastite
4	106-4472	1	Gear-Chute
5	46-6810	3	Screw And Washer ASM
6	100-9880	1	Bolt-Shoulder
7	106-4585	1	Cover-Gear, Chute
9	106-7296	1	Bracket-Cable, Clamp
10	106-7297	1	Clamp-Cable
11	106-4471	1	Gear-Face
12	107-1021	1	Rod-Deflector
14	98-1375	2	Screw-HWH
15	106-7266	1	Bracket-Deflector
16	106-4582-03	1	Bracket-Support, Chute
17	106-4422	1	Spacer-Chute
18	3256-2	3	Washer-Flat
19	3296-47	2	Nut-Lock, NI
20	106-7276	3	Screw-Shoulder
21	106-7257	1	Mount-Gear, Face
22	63-2650	1	Screw-Shoulder
23	106-4476	1	Latch-Chute
24	106-7253-03	1	Tube-Support
25	3256-22	3	Washer-Flat
26	3296-42	3	Nut-Lock, NI

Ref	Part No.	Qty.	Description
27	3296-29	2	Nut-Lock, NI
28	106-7260	1	Washer-Curved
29	3230-5	1	Screw-CARR
30	3230-23	1	Screw-CARR
31	46-8091	3	Screw-HWH
32	105-9991	1	Ring-Chute
33	106-4440	1	Chute-Discharge
35	108-7315	1	Spring-Torsion
36	108-5052	1	Seal-Chute
37	3290-456	1	Washer-Belleville
38	32144-10	1	Screw-HWH

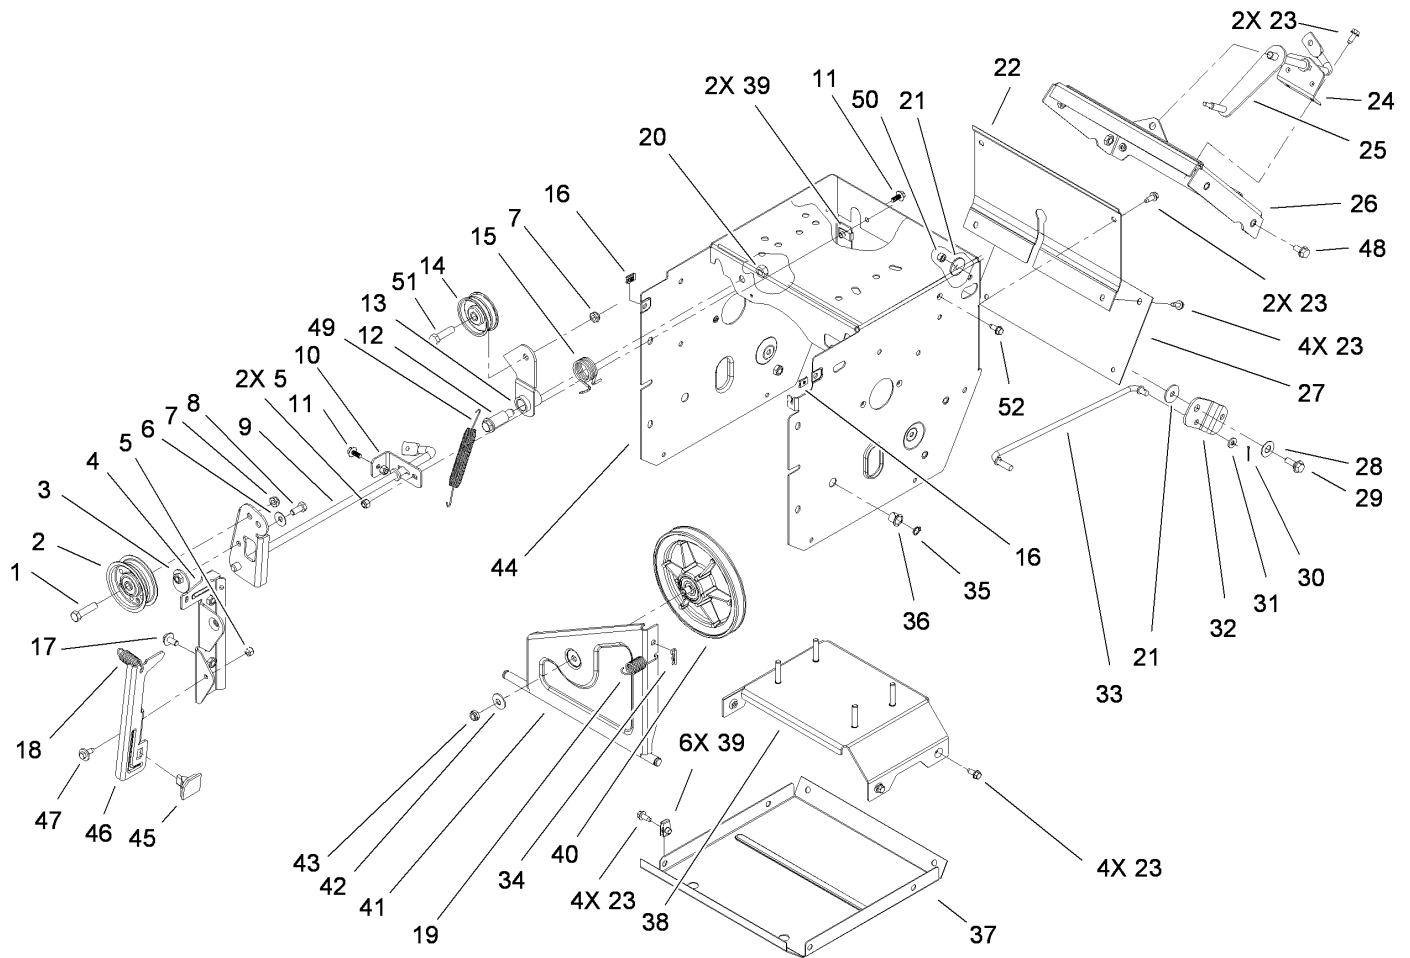


Frame Assembly

Ref	Part No.	Qty.	Description
1	323-8	1	Screw-HH
2	92-7104	1	Pulley-Idler
3	107-1047	1	Nut
4	107-1039	1	Bracket-Idler, Impeller
5	3296-42	3	Nut-Lock, NI
6	3290-456	1	Washer-Belleville
7	3296-59	2	Nut-Lock, NI
8	322-3	1	Screw-HH
9	107-3838-03	1	Impeller Clutch ASM
10	106-7341	1	Bracket-Rear, Clutch
11	99-6810	2	Screw-HH
12	108-5056	1	Bolt-Shoulder
13	108-5058	1	Arm-Idler, Traction
14	3-4244	1	Pulley-Idler
15	108-7332	1	Spring-Torsion
16	107-1013	2	Nut-Speed, U-Type
17	3234-7	2	Screw-HH
18	107-1045	1	Spring-Extension
19	107-1003	1	Spring-Extension
20	3296-76	1	Nut-Lock, NI
21	5-4460	2	Washer-Pivot
22	106-4556-01	1	Cover-Upper
23	32144-10	16	Screw-HWH
24	108-0036	1	Bracket-Rod, Shift


Ref	Part No.	Qty.	Description
25	106-7268	1	Lever-Control, Traction
26	108-0026-01	1	Shift Plate ASM
27	106-7345-01	1	Cover-Lower
28	25-5640	1	Washer
29	27-0410	1	Screw-Shoulder
30	3272-4	1	Pin-Cotter
31	3256-23	1	Washer-Flat
32	107-1011	1	Bellcrank-Drive
33	106-4467	1	Link-Control, Speed
34	3290-307	1	Pin-Hair
35	32151-61	2	Ring-Retaining
36	256-257	2	Bushing-Nyliner
37	106-7330-01	1	Pan-Bottom
38	106-7315	1	Brace Frame ASM
39	107069	8	Clip
40	108-0031	1	Traction Pulley ASM
41	108-7307	1	Friction Wheel Bracket ASM
42	3290-340	1	Washer-Belleville
43	3296-5	1	Nut-Lock
44	114-9259-01	1	Traction Frame ASM
45	66-8060	1	Pad-Brake
46	107-1000	1	Arm-Brake
47	92-9698	1	Screw-Shoulder
48	32144-14	4	Screw-HWHTF



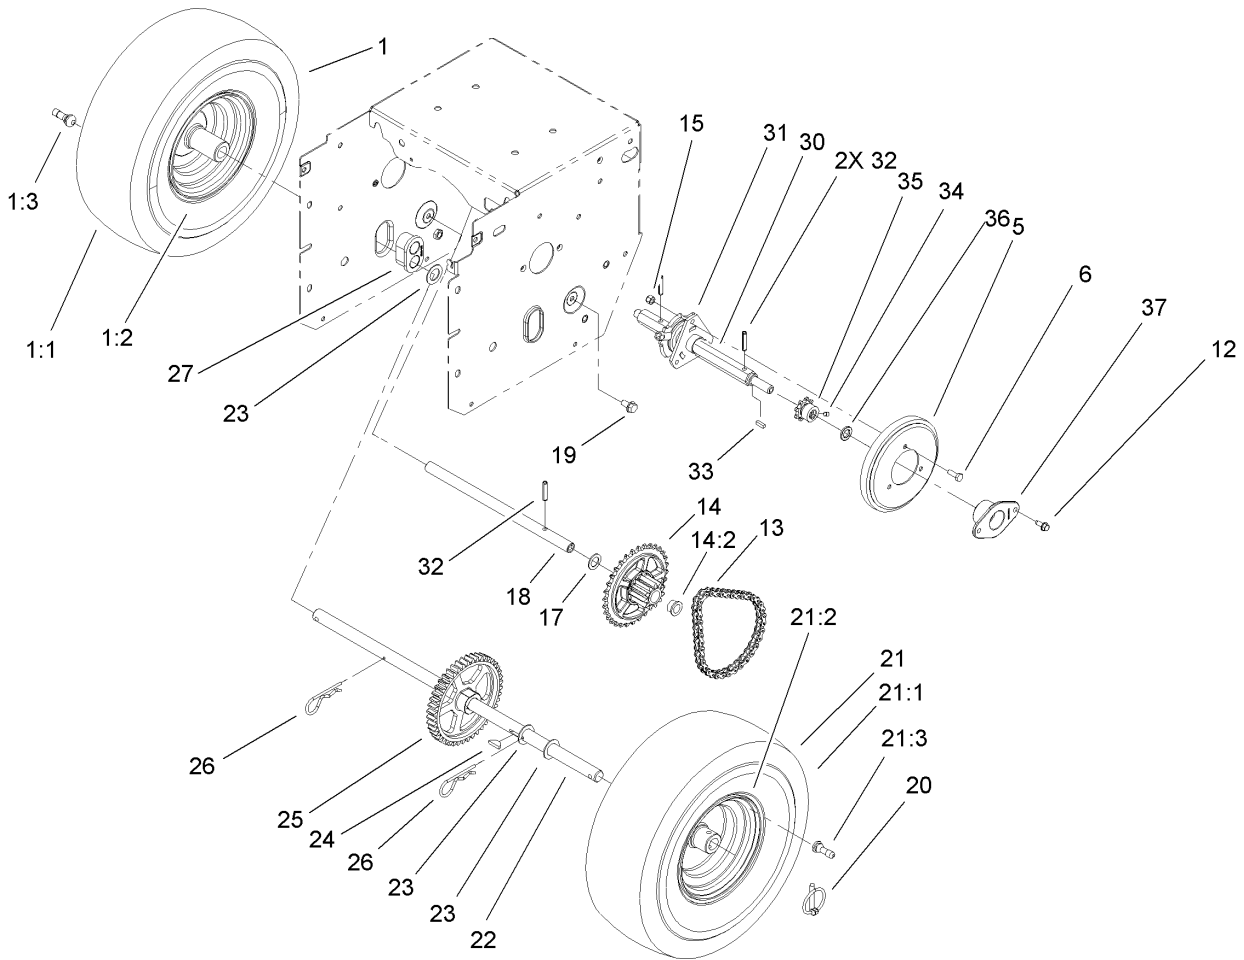

Chain Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶ 1		1	RH Wheel And Tire ASM	26	3290-343	2	Pin-Hair
1:1	107-3042	1	Tire	27	106-4558	2	Bearing-Axle
1:2	107-3043	1	Rim-Tire	30	108-5054	1	Shaft-Hex
1:3	232-27	1	Stem-Valve	31	106-4434	1	Trunion-Hex
5	106-4480	1	Wheel-Friction	32	32121-9	3	Pin-Roll, Slotted
6	321-4	3	Screw-HH	33	94-8850	1	Key-Square
12	32144-10	4	Screw-HWH	34	3245-32	2	Screw-HSH
13	108-0016	1	Chain-Roller	35	106-7317	1	Sprocket-8 Tooth
13	2710-6	1	Link-Connecting	36	108-5059	1	Spacer-Bushing
14	108-0013	1	Sprocket ASM	37	108-7319	2	Retainer-Bearing
14:2	108-2974	2	Bushing-Flange				
15	3296-42	3	Nut-Lock, NI				
17	107-3041	1	Washer-Flat				
18	106-4592	1	Shaft-Intermediate				
19	32144-14	2	Screw-HWHTF				
20	107-3039	2	Klik Pin ASM				
❶ 21		1	LH Wheel And Tire ASM				
21:1	107-3042	1	Tire				
21:2	107-3043	1	Rim-Tire				
21:3	232-27	1	Stem-Valve				
22	106-4449	1	Shaft-Axle				
23	3-8664	3	Washer-Thrust				
24	3257-7	1	Key-Woodruff				
25	106-4572	1	Gear-Axle, 44 Tooth				

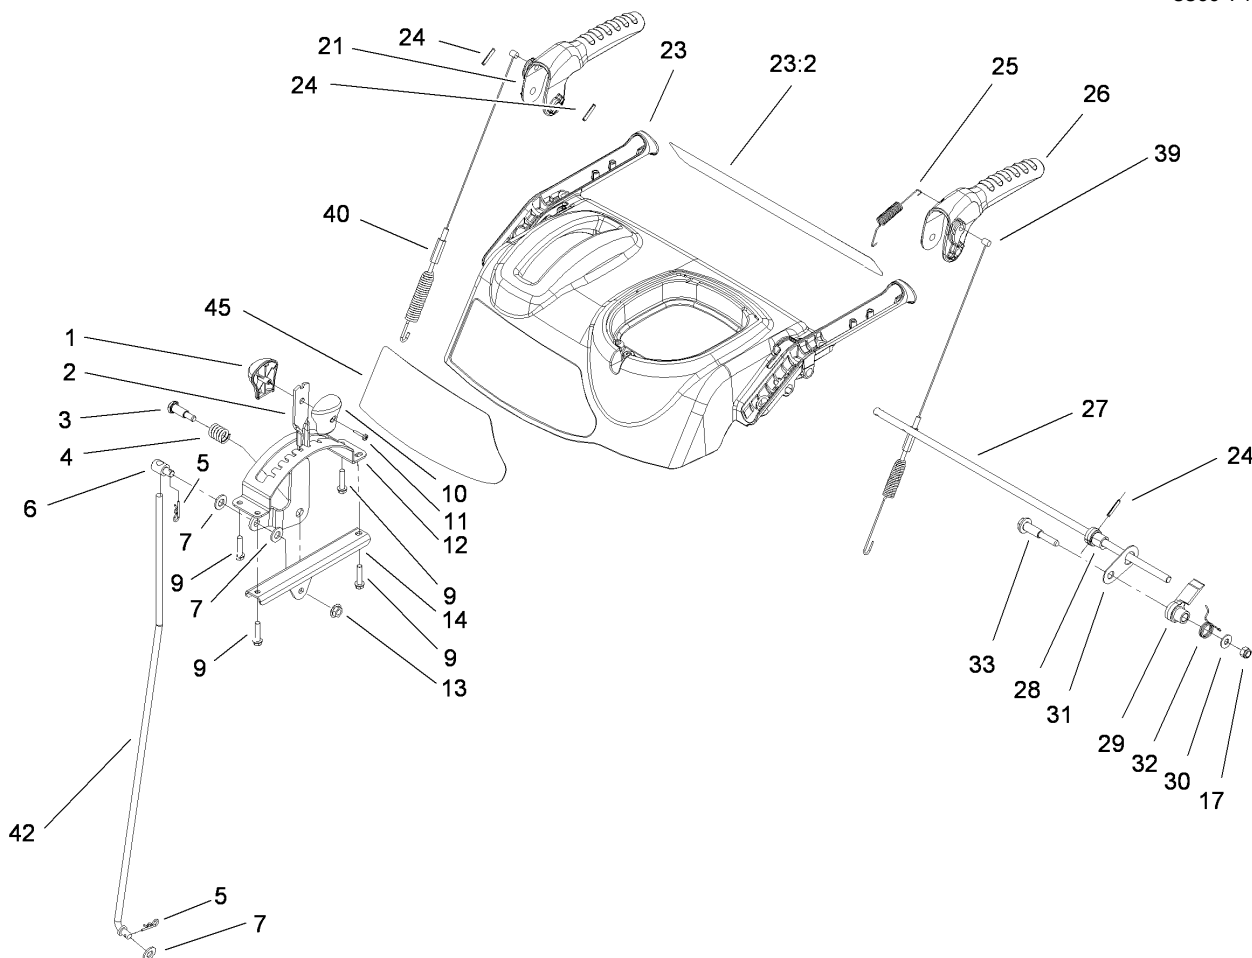

Handle and Control Assembly

Ref	Part No.	Qty.	Description
1	106-4423	1	Knob-Shift, RH
2	106-7278-03	1	Selector-Speed
3	63-2650	1	Screw-Shoulder
4	108-7313	1	Spring-Compression
5	3290-307	2	Pin-Hair
6	110-3446	1	Trunion-Rod
7	3256-24	3	Washer-Flat
9	46-8092	4	Screw-Plastite
10	105-9999	1	Knob-Shift, LH
11	94-4496	1	Screw-PPH
12	106-7277-03	1	Guide-Selector, Speed
13	32128-13	1	Nut-HF
14	106-7279-03	1	Mount-Selector, Speed
17	3296-72	1	Nut-Lock, NI
21	106-4413	1	Lever-Augur
23	112-6630	1	Control Panel ASM
23:2	112-6623	1	Decal-Control Panel, Back
24	32121-125	3	Pin-Spring
25	107-3001	1	Spring-Tension
26	106-4410	1	Lever-Traction
27	105-9996	1	Rod-Lockout
28	107-1043	1	Cam-Lockout
29	108-0023	1	Latch-Lockout
30	98-3499	1	Washer-Flat


Ref	Part No.	Qty.	Description
31	107-3000	1	Link-Lockout
32	108-0024	1	Spring-Torsion
33	106-4412	1	Screw-Shoulder
39	115-5671	1	Cable-Traction
40	115-5680	1	Cable-Augur
42	107-1005	1	Rod-Shift
45	106-4513	1	Decal

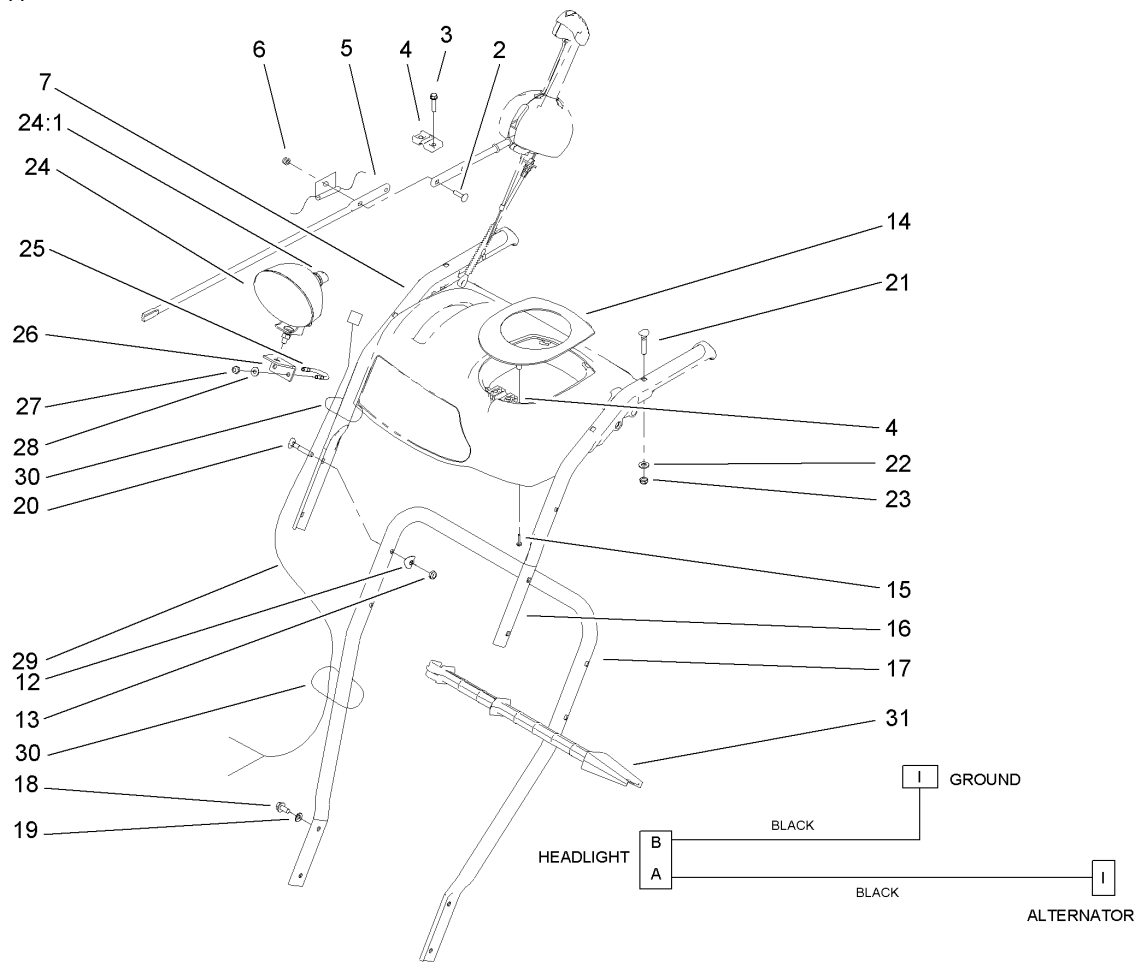

Handle Assembly


Ref	Part No.	Qty.	Description
2	3229-30	2	Screw-CARR
3	46-8092	2	Screw-Plastite
4	105-9987	2	Support-Rod
5	106-7283	1	Rod-Chute, Front
6	3296-73	2	Nut-Lock, NI
7	108-0038-03	1	Handle-Upper, RH
12	107-3844	4	Washer
13	3296-72	4	Nut-Lock, NI
14	106-4586	1	Cover-Panel, Control
15	94-4496	2	Screw-PPH
16	108-0037-03	1	Handle-Upper, LH
17	105-9981-03	1	Handle-Lower
18	32144-14	4	Screw-HWHTF
19	3290-475	4	Washer-Belleville
20	92-2260	4	Screw-Handle
21	107-3018	4	Screw-Handle
22	3256-70	4	Washer-Flat
23	3296-72	4	Nut-Lock, NI
24	106-4510	1	Headlamp ASM
24:1	108-0008	1	Lamp-12 Volt
25	107-3024	1	Clamp
26	107-1020-03	1	Bracket-Light
27	3296-73	2	Nut-Lock, NI
28	3256-1	2	Washer-Flat

Ref	Part No.	Qty.	Description
29	106-4511	1	Harness-Wire
30	614249	2	Strap-Tie
31	110-3408	1	Stick-Cleanout

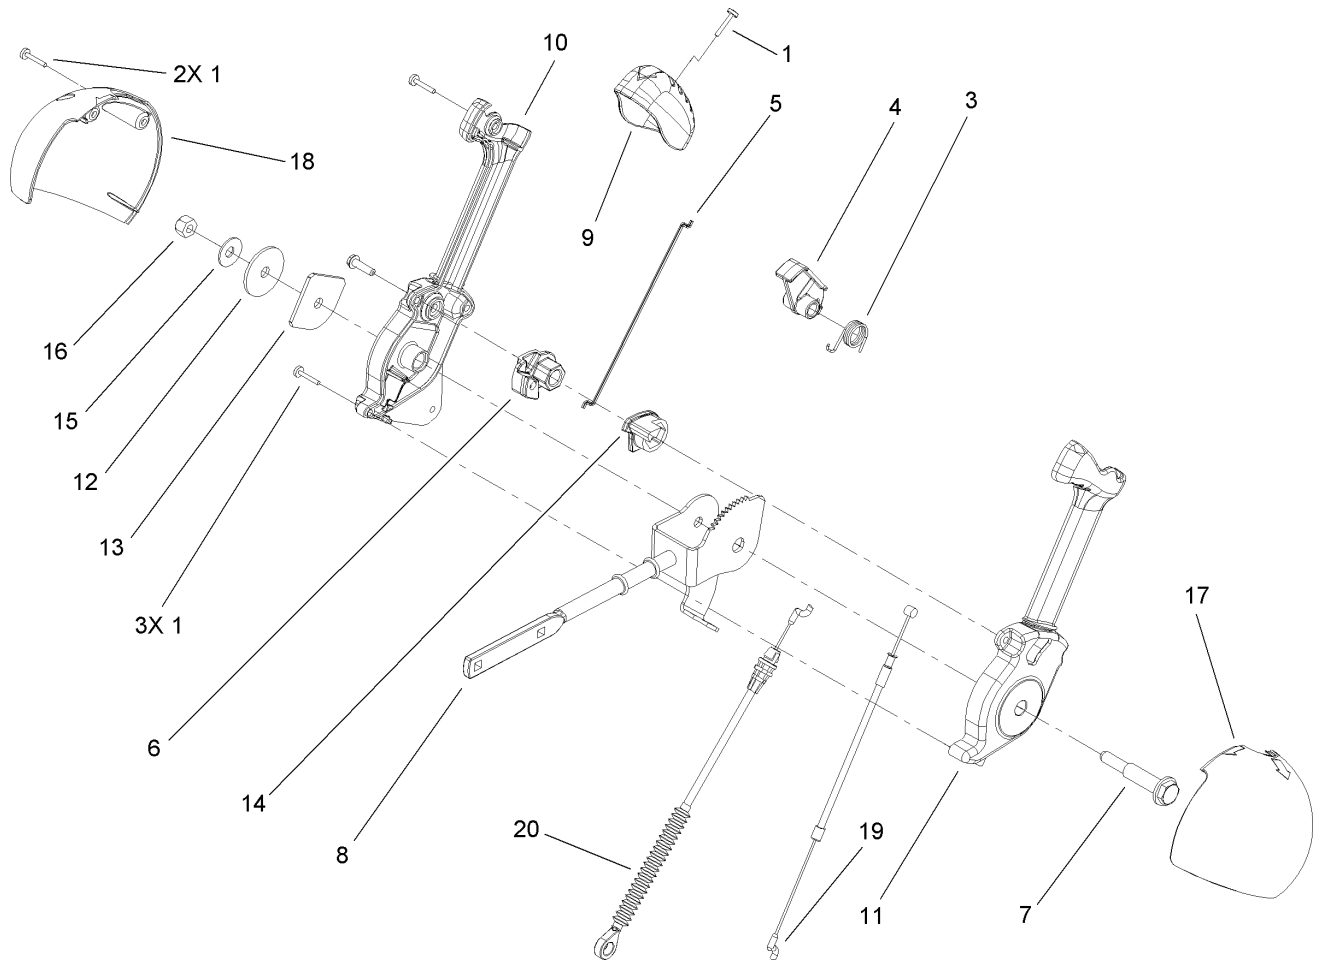


Lever Chute Control Assembly

Ref	Part No.	Qty.	Description				
1	94-4496	6	Screw-PPH				
3	105-9982	1	Spring-Torsion				
4	105-9984	1	Trigger-Latch				
5	105-9985	1	Link-Latch				
6	105-9988	1	Lever-Cable, Deflector				
7	105-9995	1	Screw-Shoulder				
8	106-4479	1	Rod-Control, Chute				
9	106-7280	1	Cap-Lever				
10	106-7281	1	Lever-Chute Control, RH				
11	106-7282	1	Lever-Chute Control, LH				
12	107-3002	1	Washer-Nylon				
13	106-7295	1	Plate-Friction				
14	106-7310	1	Pawl-Latch				
15	3290-456	1	Washer-Belleville				
16	3296-29	1	Nut-Lock, NI				
17	105-9986	1	Cover-Chute Lever, LH				
18	106-7292	1	Cover-Chute Lever, RH				
19	105-9989	1	Cable-Release, Chute				
20	105-9990	1	Cable-Control, Deflector				

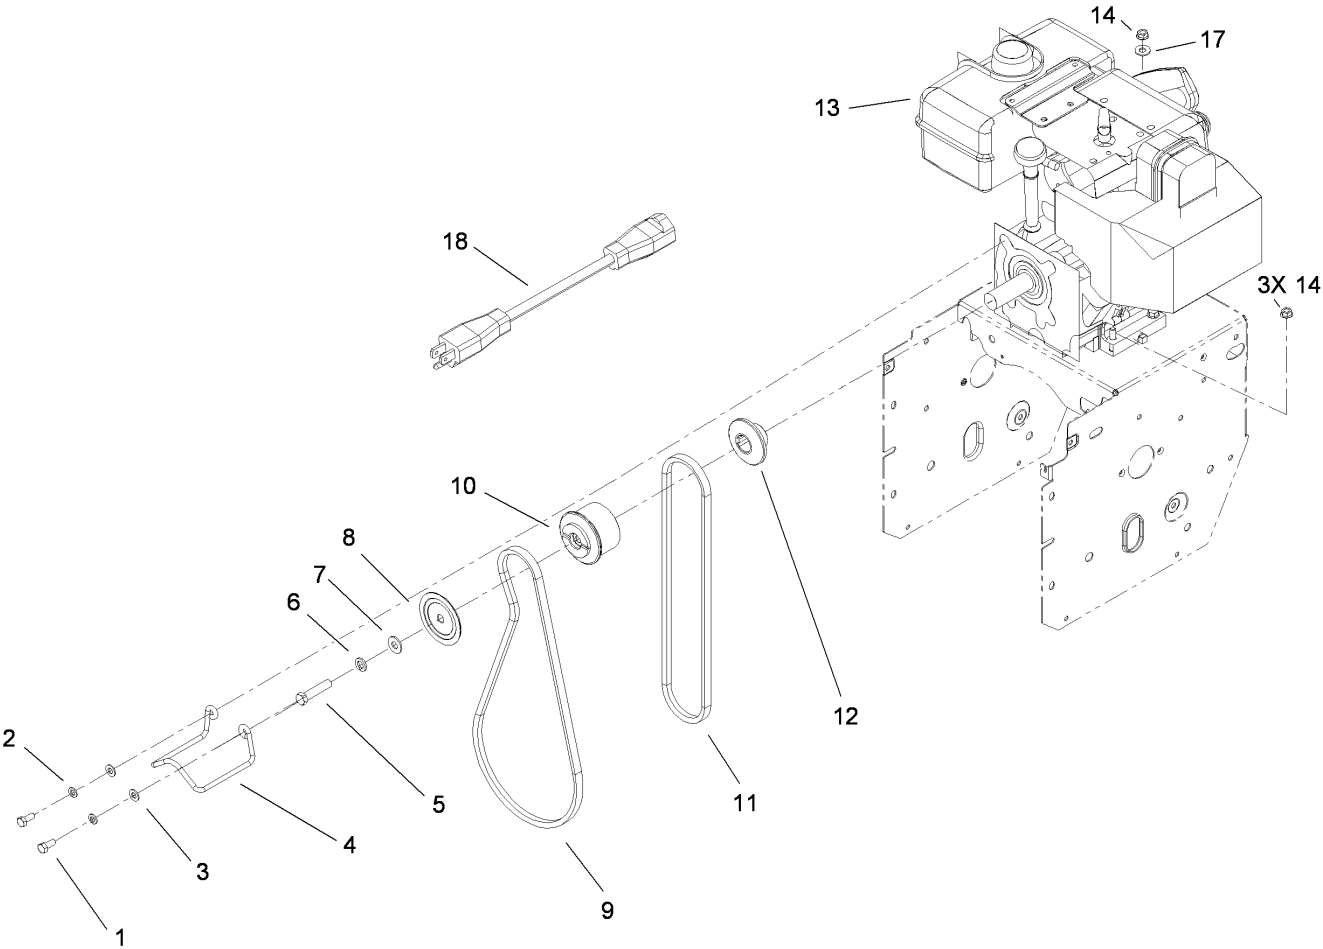

Engine Assembly

Ref	Part No.	Qty.	Description				
1	3210-3	2	Screw-HH				
2	3253-4	2	Washer-Lock				
3	3256-23	2	Washer-Flat				
4	107-3835	1	Guide-Belt				
5	3212-8	1	Screw-HH				
6	3253-6	1	Washer-Lock				
7	3256-4	1	Washer-Flat				
8	62-0940	1	Sheave-Half, Impeller				
9	106-4498	1	Belt-V				
10	106-7333	1	Pulley-Engine, Center				
11	94-8812	1	V Belt-Traction				
12	106-7334	1	Sheave-Half, Traction				
1 2 13		1	Engine-Tecumseh, LH318Sa-156563H				
14	32128-20	4	Nut-HF				
17	3256-2	1	Washer-Flat				
18	99-9300	1	Cord-Extension				

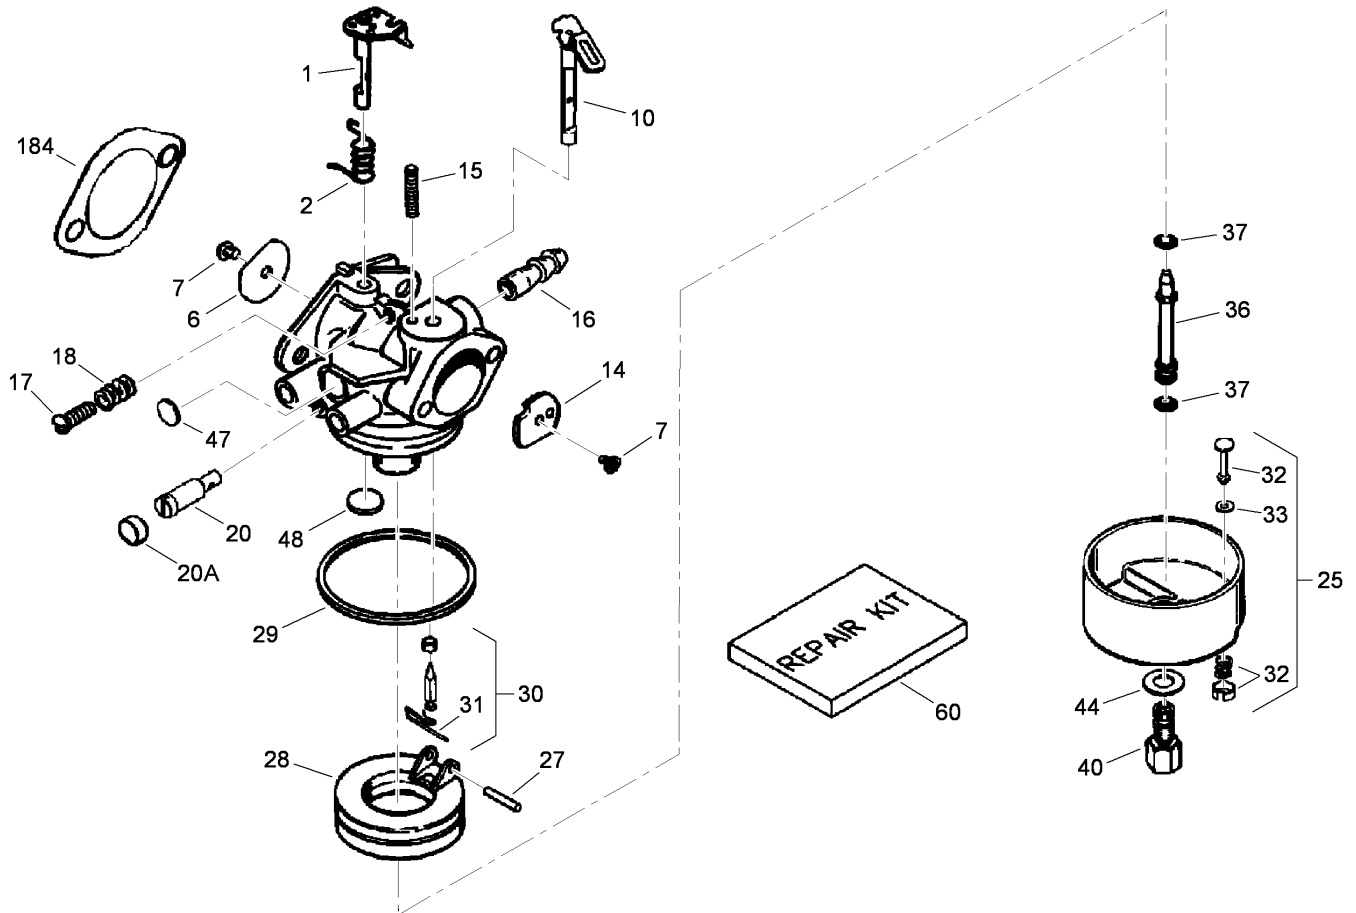

Carburetor Assembly No. 640349

Tecumseh LH318SA-156563H


Ref	Part No.	Qty.	Description
20	640349	1	Carburetor ASM (Includes 184)
21	631776A	1	Throttle Shaft And Lever ASM
22	631970	1	Spring-Return, Throttle
26	640109	1	Shutter-Throttle
27	650506	2	Screw-Shutter
210	632112	1	Choke Shaft And Lever ASM
214	632174	1	Shutter-Choke
215	630735	1	Spring-Positioning, Choke
216	632164	1	Fitting-Fuel
217	651025	1	Screw-Throttle Crack And Idle Speed
218	630766	1	Spring-Tension
220	640027	1	Screw-Restrictor, Idle
220A	640200	1	Cap-Screw, Restrictor Idle
225	631951	1	Float Bowl ASM (Includes 32-33)
227	631024	1	Shaft-Float
228	632802	1	Float (Plastic)
229	631028	1	O Ring-Bowl, Float
230	631021A	1	Inlet Needle, Seat, And Clip ASM (Includes 31)
231	631022	1	Clip-Spring
232	27136A	1	Bowl Drain ASM
233	27554	1	Gasket-Plunger, Drain
236	640113	1	Tube-Nozzle

Ref	Part No.	Qty.	Description
237	632547	2	O-Ring
240	640128	1	Nut-Bowl, High Speed
244	27110	1	Washer-Bowl Nut
247	630748	1	Plug-Welch, Idle Mixture Well
248	631027	1	Plug-Welch, Atmospheric Vent
260	632760B	1	Repair Kit (Includes 7, 27, 29, 30, 33, 37, 44, 47, 48)
2184	33263	1	Gasket-Carburetor To Intake Pipe

Engine Assembly No. 1

Tecumseh LH318SA-156563H

Tecumseh LH318SA-156563H

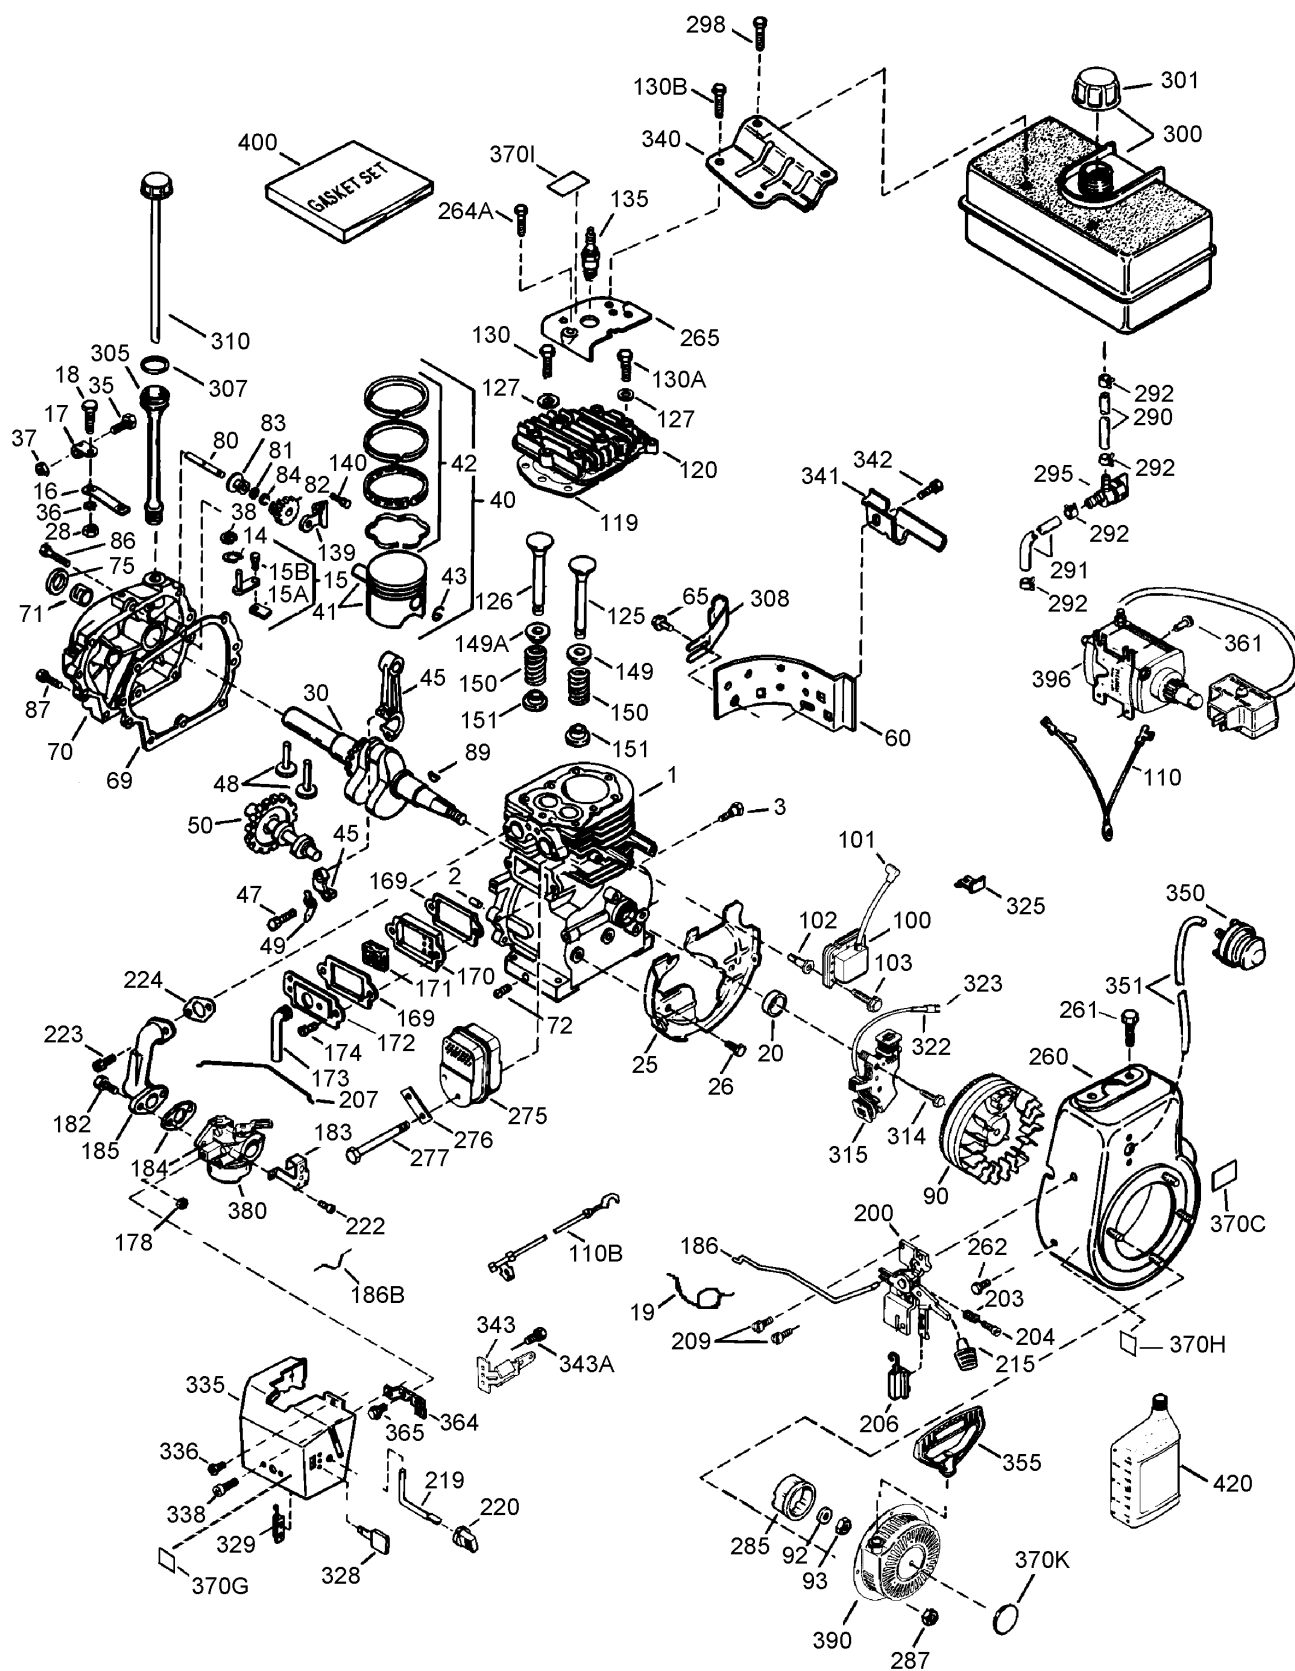


Engine Assembly No. 1

Tecumseh LH318SA-156563H

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
21	35385	1	Cylinder ASM (Includes 2, 20, 72)	290	611093	1	Flywheel ASM
22	27652	2	Pin-Dowel	292	650880	1	Washer-Belleville
23	650820	2	Screw (1/4-20X1/2)	293	650881	1	Nut-Flywheel
214	28277	1	Washer-Flat	2100	35135A	1	Ignition-State, Solid (Includes 101)
215	30699C	1	Rod-Governor (Includes 15A, 15B)	2101	610118	1	Cover-Spark Plug
215A	30700	1	Yoke-Governor	2102	651024	2	Stud-Mounting, Solid State
215B	650494	1	Screw (6-40X5/16)	2103	651007	2	Screw (T-15, 10-24 X 15/16)
216	33454A	1	Lever-Governor	2110	35187	1	Wire-Ground
217	29916	1	Clamp-Lever, Governor	2110B	37047	1	Wire-Ground
218	651028	1	Screw (T-15, 8-32X7/16)	2119	36448	1	Gasket-Head, Cylinder
219	34663	1	Spring-Throttle	2120	36449	1	Head-Cylinder
220	35319	1	Seal-Oil	2125	27878A	1	Valve-Exhaust (STD) (Includes 151)
225	37853	1	Baffle-Housing, Blower	2125	27880A	1	Valve-Exhaust (1/32In Os) (Includes 151)
226	650561	2	Screw (1/4-20X19/32)	2126	34035	1	Valve-Intake (STD.) (Includes 151)
228	30322	1	Nut-Lock (8-32)	2127	650691	2	Washer-Flat
230	35571A	1	Crankshaft	2130	6021A	7	Screw (5/16-18X1-1/2)
235	29826	1	Screw (10-32X3/4)	2130A	650727	2	Screw (5/16-18X1-25/32)
236	29918	1	Washer-Lock (8)	2130B	651055	2	Screw (5/16-18X39/64)
237	29216	1	Nut-Lock (10-32)	2135	35395	1	Spark Plug-Resistor (R J19 L M)
238	29642	1	Ring-Retaining	2139	33369	1	Bracket-Gear, Governor
240	40011	1	Piston-Pin And Ring Set (STD)	2140	650836	2	Screw (10-24X1/2)
240	40012	1	Piston- Pin And Ring Set (.010 O S)	2149	27882	1	Cap-Spring, Valve
241	40009	1	Piston And Pin ASM (STD) (Includes 43)	2149A	35862	1	Cap-Spring, Valve
241	40010	1	Piston And Pin ASM (.010In Os) (Includes 43)	2150	27881	2	Spring-Valve
242	40013	1	Ring Set (STD)	2151	32581	2	Keeper-Spring, Valve
242	40014	1	Ring Set (.010 O S)	2169	27896A	2	Gasket-Cover, Valve
243	27888	2	Ring-Retaining, Piston Pin	2170	28423	1	Body-Breather
245	36897	1	Connecting Rod ASM (Includes 47, 49)	2171	28424	1	Element-Breather
247	651033	2	Bolt-Rod, Connecting	2172	28425	1	Cover-Valve
248	34034	2	Lifter-Valve	2173	35350	1	Tube-Breather
249	36896	1	Dipper-Oil	2174	650128	2	Screw (10-24X1/2)
250	35375	1	Camshaft (Mcr)	2178	29752	2	Nut And Lock Washer (1/4-28)
260	33273A	1	Extension-Housing, Blower				
265	650128	1	Screw (10-24X1/2)				
269	37342	1	Gasket-Cover, Cylinder				
270	37847	1	Cover-Cylinder (Includes 71, 75, 80-84)				
271	35377	1	Bushing-Crankshaft				
272	27642	1	Plug-Drain, Oil (SQH 1/4-18)				
275	35319	1	Seal-Oil				
280	37587	1	Shaft-Governor				
281	651080	1	Washer				
282	37588	1	Governor Gear ASM (Includes 81)				
283	30588A	1	Spool-Governor				
284	29193	1	Ring-Retaining				
286	650833	7	Screw (1/4-20X1-3/16)				
287	650832	1	Screw (1/4-20X1-11/16)				
289	32589	1	Key-Flywheel				

Engine Assembly No. 2


Tecumseh LH318SA-156563H

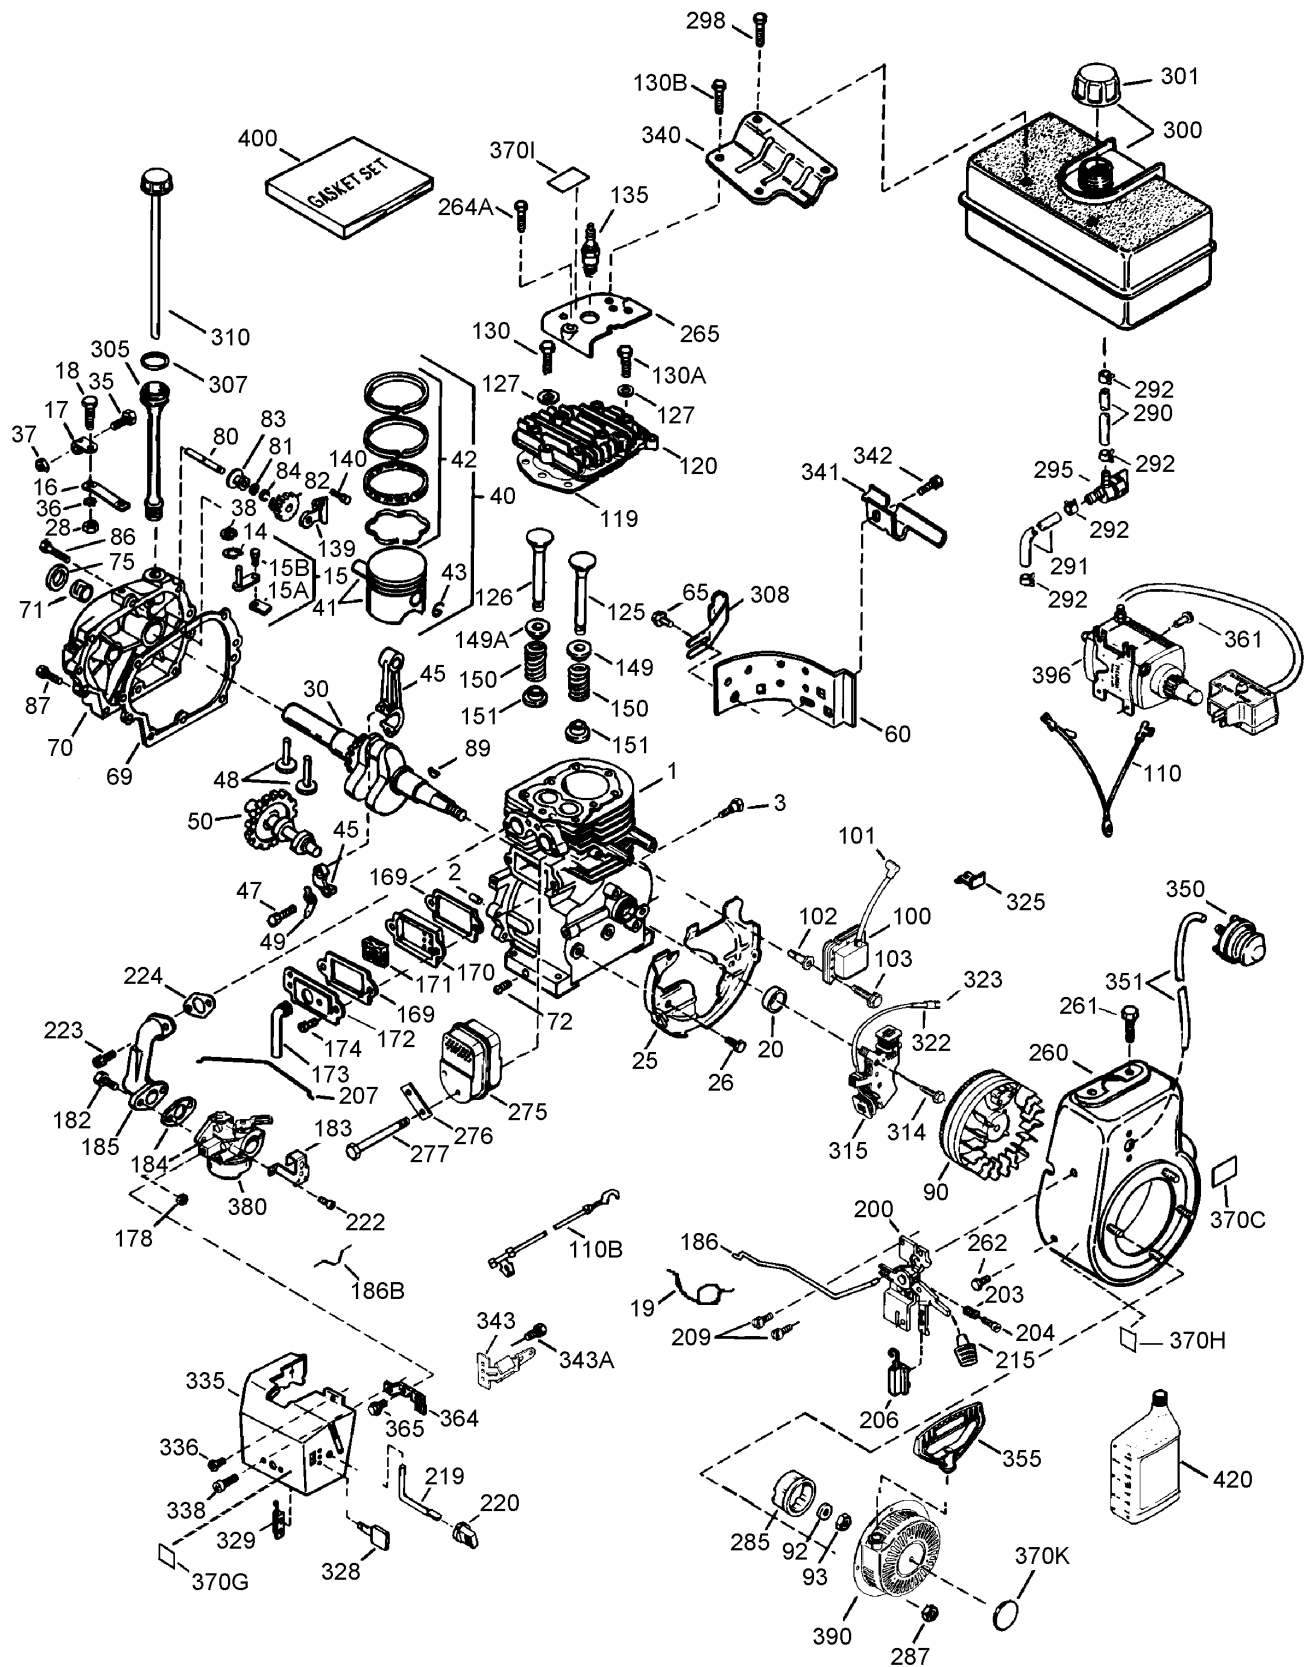

Engine Assembly No. 2

Tecumseh LH318SA-156563H






Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2182	30088A	2	Screw (1/4-28X1)	2340	34154	1	Bracket-Tank, Fuel (Black)
2183	34587A	1	Bracket-Choke	2341	34155	1	Bracket-Tank, Fuel
2184	33263	1	Gasket-Carburetor To Intake Pipe	2342	650561	1	Screw (1/4-20X19/32)
2185	33877	1	Pipe-Intake	2343	35079A	1	Bracket-Switch, Key (Includes 343A)
2186	34667	1	Link-Governor	2343A	651060	1	Screw (8-32 X 23/64)
2186B	36652	1	Spring-Choke	2350	570682A	1	Primer ASM
2200	34677	1	Bracket-Control (Includes 19, 203, 204, 206)	2351	32180C	1	Line-Primer (12 Inches)
2203	31342	1	Spring-Compression	2355	590574	1	Handle-Starter, Mitten Grip
2204	651029	1	Screw (T-10, 5-40X7/16)	2361	650990	2	Screw (T-30, 1/4-20X15/32)
2206	610973	1	Terminal	2364	37659	1	Bracket-Cover, Carburetor
2207	33878	1	Link-Throttle	2365	650767	2	Screw (8-32X27/64)
2209	650821	2	Screw (10-32 X 1/2)	2370C	36501	1	Decal-Primer, International Symbol
2215	35440	1	Knob-Control	2370G	36534	1	Decal-Instruction
2219	34586	1	Rod-Choke	2370H	35077	1	Decal-Speed Control And Choke
2220	35438	1	Knob-Control	2370I	37119	1	Decal-Warning (Bilingual)
2222	28820	2	Screw (10-32 X 1/2)	2370K	36695	1	Decal-Tecumseh Logo For Top Of Recoil Starter
2223	650378	2	Screw (T-30, 5/16-18X1-3/32)	2380	640349	1	Carburetor ASM (Includes 184)
2224	27915A	1	Gasket-Pipe, Intake	2390	590749	1	Starter-Rewind (Note: This Engine Could Have Been Built With Starter 590733)
2260	35447A	1	Housing-Blower	2396	33329D	1	Starter-Electric (110 Volt)
2261	650788	2	Screw (5/16-18X3/4)	2400	36450C	1	Gasket Set (Includes 69, 119, 169, 184, 224)
2262	651084	2	Screw (5/16-18X9/16)	2420	730226A	1	Oil-Engine, S A E 5W30
2264A	650802	1	Screw (1/2-20X5/8)	2	756320C	1	Shortblock
2265	33272D	1	Cover-Head, Cylinder (Black)				
2275	35056	1	Muffler				
2276	31588	1	Plate-Locking				
2277	651002	2	Screw (5/16-18X4-3/16)				
2285	35985C	1	Cup-Starter				
2287	29752	4	Nut And Lock Washer (1/4-28)				
2290	29774	1	Line-Fuel (8.62)				
2291	30705	1	Line-Fuel				
2292	26460	4	Clamp-Line, Fuel				
2295	35857	1	Valve-Shut Off, Fuel (Includes 292)				
2298	650665	2	Screw (1/4-15X7/8)				
2300	34156A	1	Tank-Fuel (Includes 292, 301)				
2301	37844	1	Cap-Fuel (Black) (1-1/2 I D)				
2305	36877	1	Tube-Fill, Oil				
2307	35499	1	O-Ring				
2308	35539	1	Clip-Tube, Fill				
2310	37869	1	Dipstick				
2314	650873	1	Screw (1/4-20 X 3/4)				
2315	611111	1	Coil-Alternator, 18 Watt (Includes 322, 323)				
2322	611117	1	Body-Connector				
2323	611118	1	Terminal				
2325	29443	1	Clip-Wire				
2328	35062	2	Key-Ignition				
2329	610973	1	Terminal				
2335	36547	1	Cover-Carburetor (Black)				
2336	650765	1	Screw (10-32X1/2)				
2338	28942	2	Screw (10-32 X 3/8)				

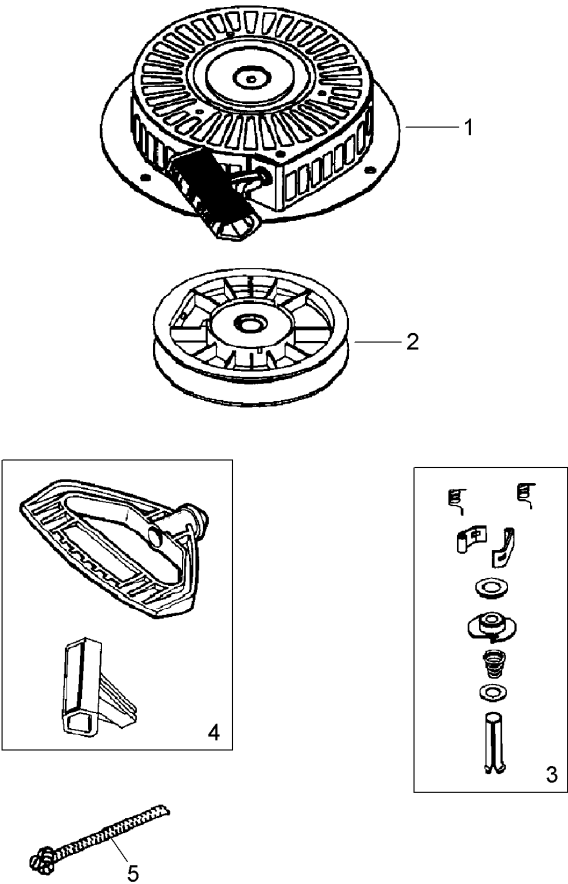

This illustration may not depict actual equipment and is for reference purposes only

Rewind Starter No. 590749
Tecumseh LH318SA-156563H

Ref	Part No.	Qty.	Description				
❶	590749	1	Starter-Rewind				
❷	590682	1	Pulley And Rewind Spring ASM				
❸	590773	1	Repair Kit				
❹	590574	0	Handle-Starter, Mitten Grip (Also Available In Packaged Part 740053B)				
❺	590535	1	Rope-Starter (98 Cut To Length)				

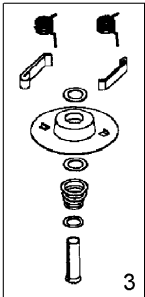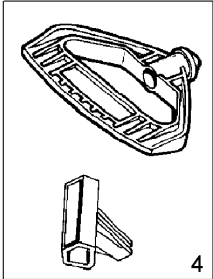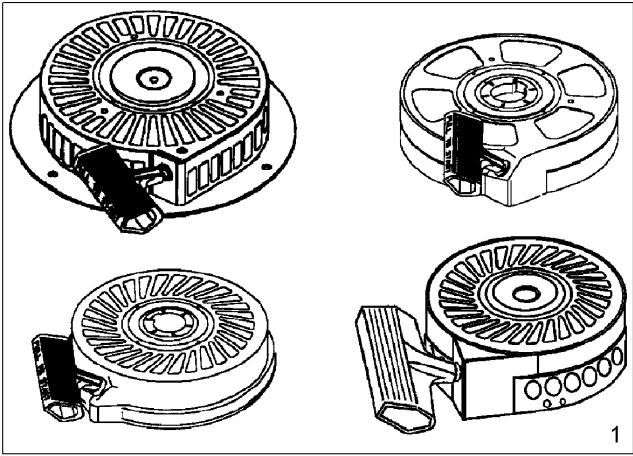


This illustration may not depict actual equipment and is for reference purposes only

Recoil Starter No. 590733 (Optional)
Tecumseh LH318SA-156563H

Ref	Part No.	Qty.	Description
❶1	590733	1	Starter-Rewind
❷2	590709	1	Pulley And Rewind Spring ASM
❸3	590774	1	Repair Kit
❹4	590574	0	Handle-Starter, Mitten Grip (Also Available In Packaged Part 740053B)
❺5	590535	1	Rope-Starter (98 Cut To Length)

--	--	--	--

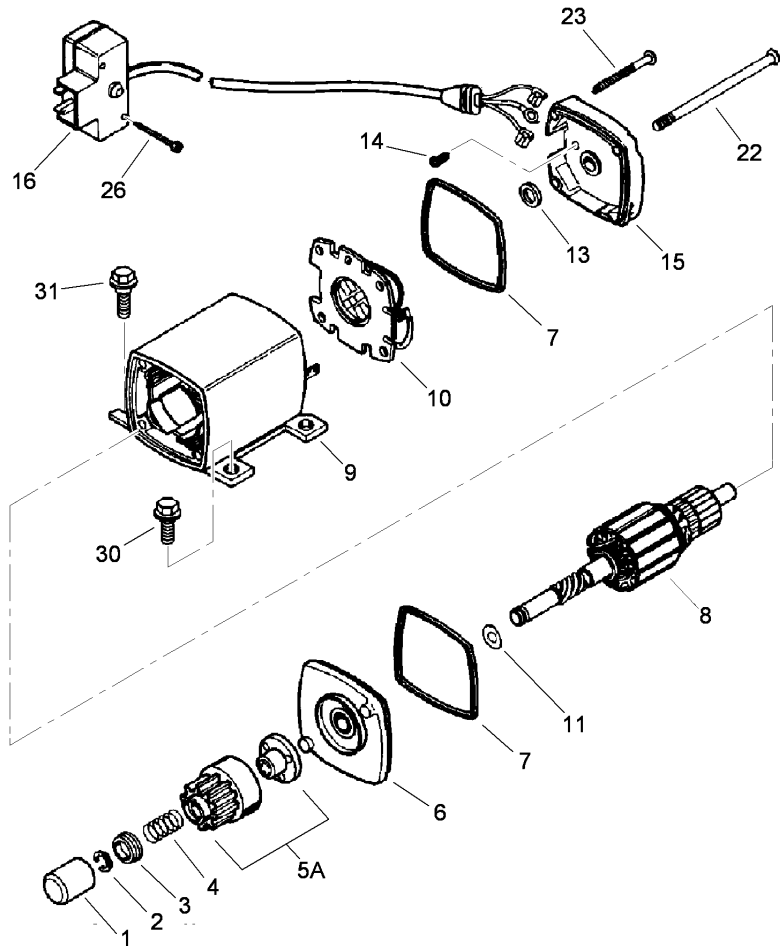

Electric Starter Assembly No. 33329D
Tecumseh LH318SA-156563H

Ref	Part No.	Qty.	Description				
1	33451	1	Cover-Dust				
2	33842	1	Ring-Retainer				
3	33430	1	Retainer-Spring				
4	33431	1	Spring-Anti Drift				
5A	37050	1	Gear And Nut (Includes 2)				
6	35449	1	Drive End Cap ASM (Includes 7)				
7	35450	2	O-Ring				
8	35915	1	Armature				
9	35451A	1	Housing ASM				
10	35452A	1	Brush Card ASM				
11	35911	1	Washer-Thrust				
13	590500	1	Washer-Thrust				
14	33441	1	Screw-Ground				
15	35453	1	Commutator End Cap ASM (Includes 7)				
16	35454	1	Switch Box ASM				
22	35455	2	Bolt-Case				
23	35456	1	Screw-Ground				
26	650819	2	Screw (6-32X2-1/2)				
30	30063	2	Screw (T-30, 1/4-20X1/2)				
31	650820	2	Screw (1/4-20X1/2)				

Attachments and Accessories

For 38622 - Power Max 826 LE Snowthrower

Product Name	Model/Part
Tire Chain Kit	107-3813
Snow Cab	107-3814
Weight Kit	107-3815
26 Inch Drift Breaker	107-3816

NOTES

NOTES

