




MODEL NO. 73400-3900001 & UP


PARTS
CATALOG

WHEEL HORSE[®]
314-8 Garden Tractor

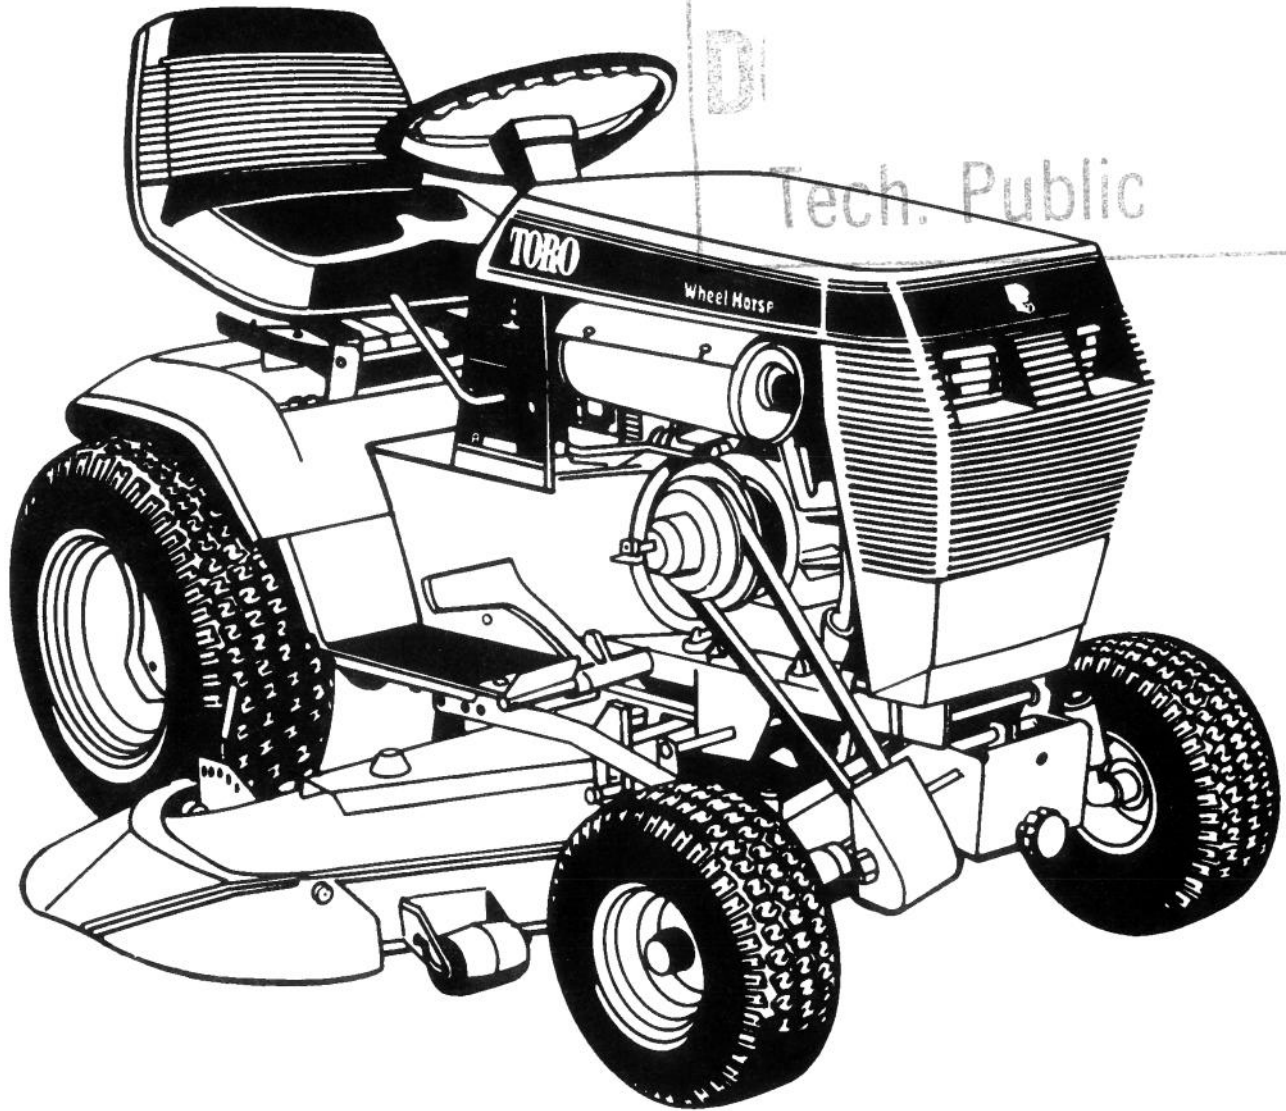

D

Tech. Public

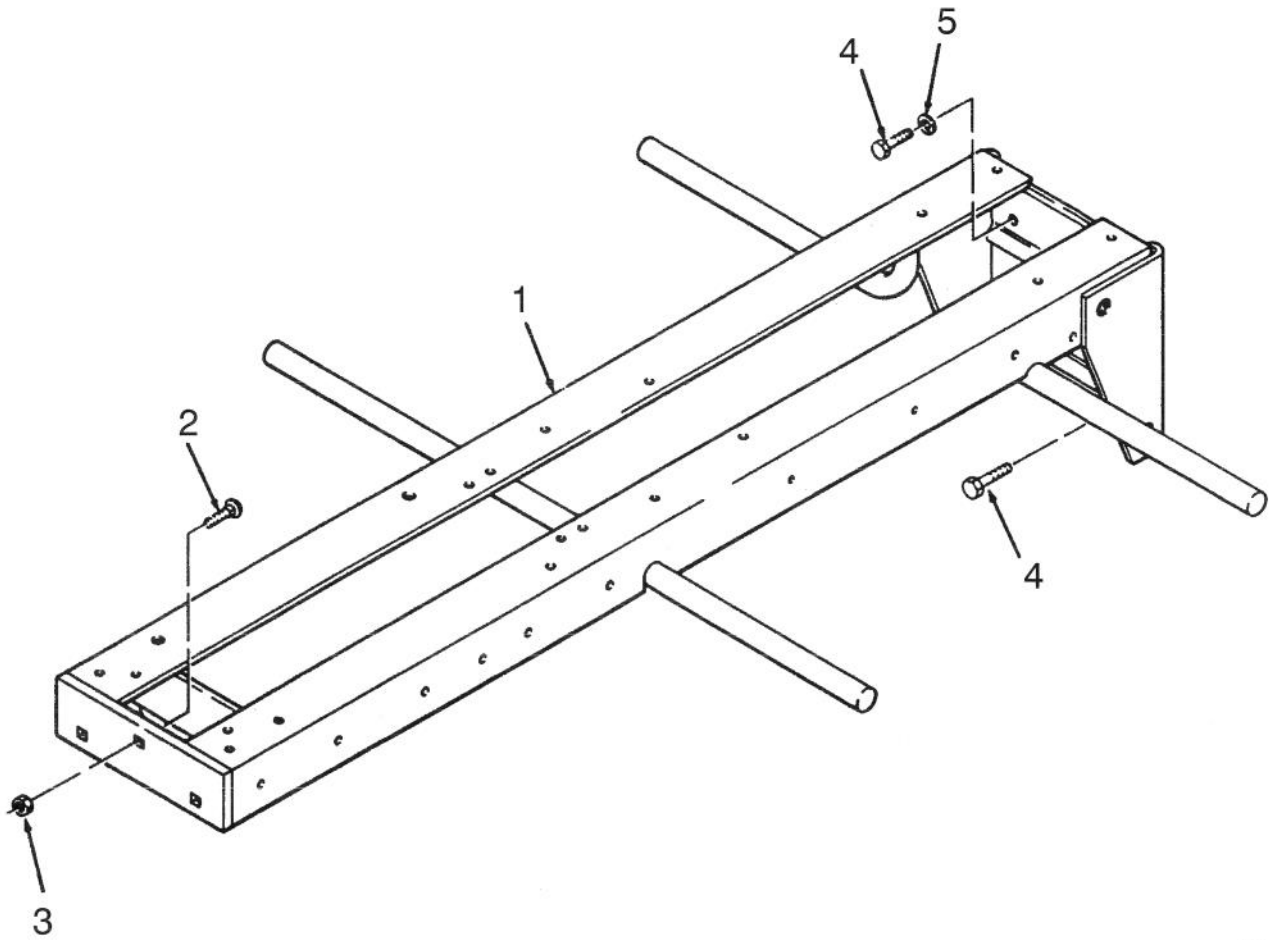


C-1471

FRAME

Ref. No.	Part No.	Description	No. Used
1	78-2680	Frame	1
2	3231-25	Bolt - Carriage	3
3	3296-39	Nut	3

Ref. No.	Part No.	Description	No. Used
4	323-5	Bolt	4
5	3253-21	Washer - Lock	4

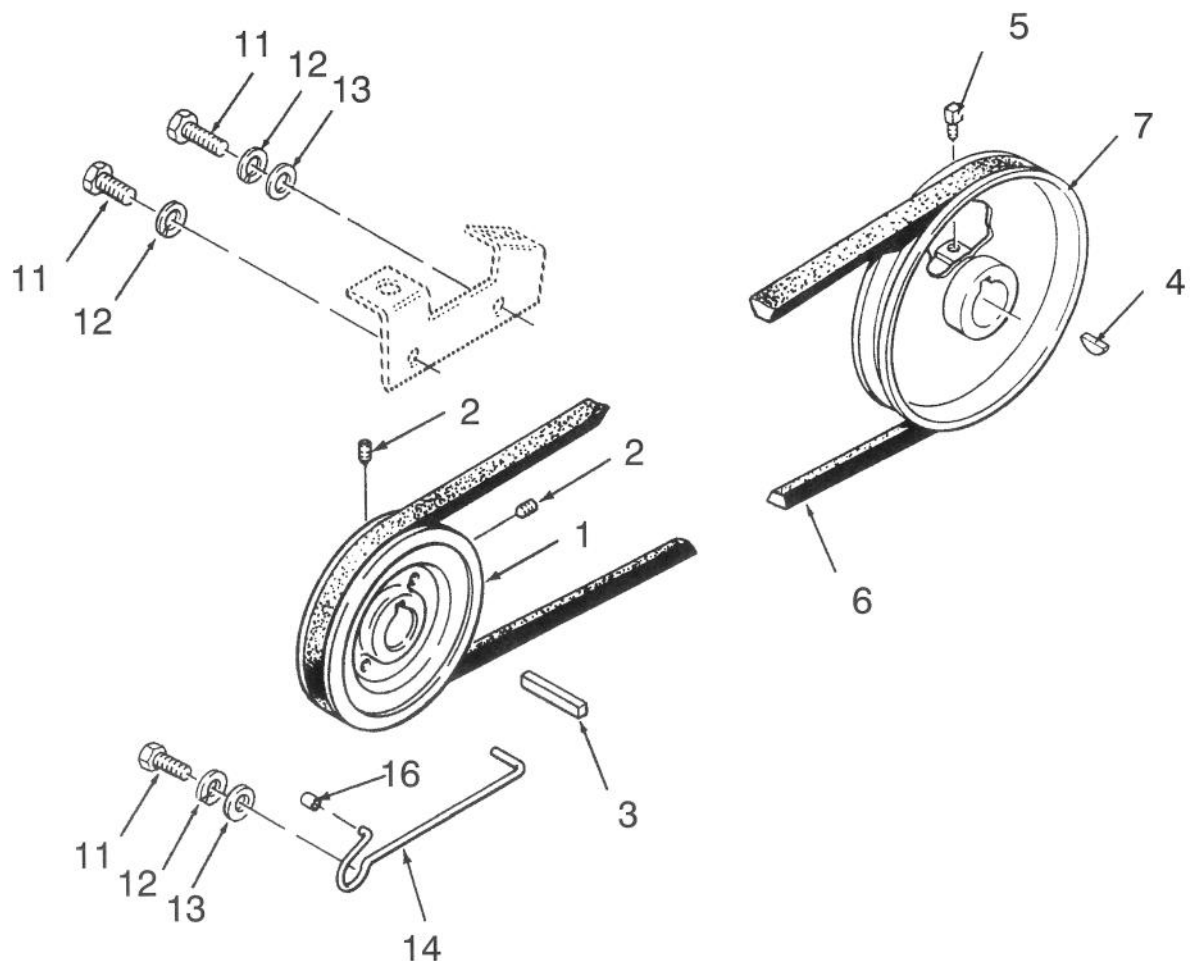


C-1472

DRIVE BELT AND PULLEYS

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	7466	Pulley - Engine Drive	1	7	106165	Pulley - Transmission Drive	1
2	3246-2	Screw - Set	2	11	324-5	Bolt	3
3	105453	Key	1	12	3253-6	Washer - Lock	3
4	937221	Key - Hi-Pro	1	13	3256-25	Washer	3
5	3242-2	Screw - Set	2	14	111242	Guide - Belt, Bottom	1
6	7473	Belt - Drive	1	16	112841	Cap	1

TRANSMISSION 8-SPEED

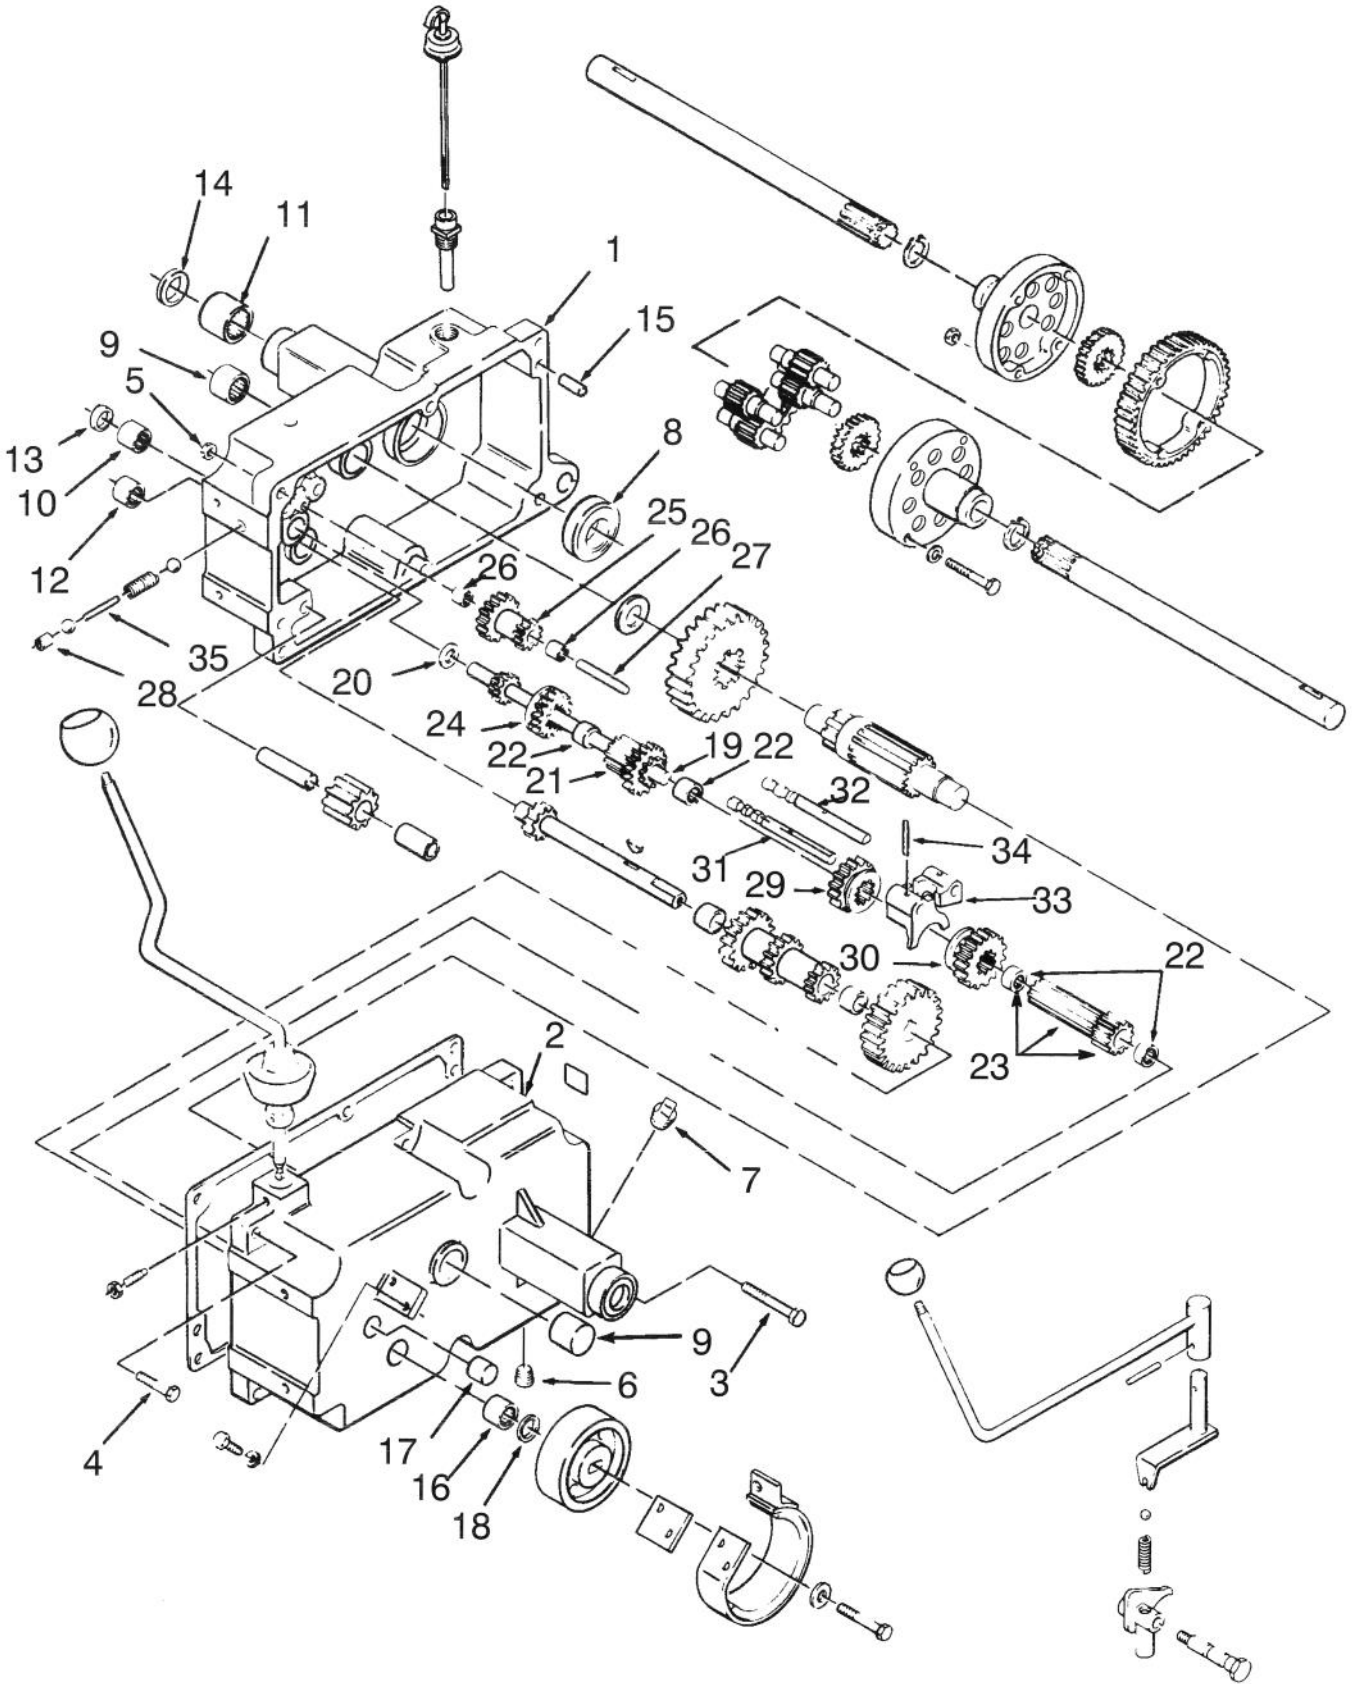


TRANSMISSION 8-SPEED

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
*	110995	Transmission Assembly	1	19	7201	Shaft - Input	1
1	111200	Case-Transmission, RH	1	20	7418	Washer - Thrust	1
2	111198	Case-Transmission, LH	1	21	7204	Gear Assembly (Incl. Ref. #22)	1
3	323-15	Bolt	1	22	1518	Bearing - Needle	4
4	323-10	Bolt	5	23	5175	Gear Assembly (Incl. Ref. # 22)	1
5	3296-39	Nut	6	24	7205	Gear - Sliding	1
6	281-10	Plug - Pipe, Allen Hd	1	25	7206	Gear - Reduction	1
7	281-2	Plug - Pipe, Sq Hd	1	26	7207	Bearing - Needle	2
8	111199	Bearing - Ball	2	27	7208	Shaft - Reduction Gear	1
9	1532	Bearing - Needle	2	28	1243	Cup - Plug	1
10	1542	Bearing - Needle	1	29	5173	Gear - 2nd & 3rd	1
11	9416	Bearing - Needle	2	30	5174	Gear - 1st & Reverse	1
12	1529	Bearing - Needle	1	31	5615	Rail - Shift, Front	1
13	100442	Seal - Input Shaft	1	32	5616	Rail - Shift, Rear	1
14	100443	Seal - Axle	2	33	3503	Fork - Shift	2
15	3915	Pin - Locating	2	34	933156	Pin - Spirol	2
16	1523	Bearing - Needle	1	35	5614	Pin - Shift	1
17	83-2890	Bearing - Needle	1				
18	100441	Seal - Brake Shaft	1				

*Not Illustrated


TRANSMISSION 8-SPEED

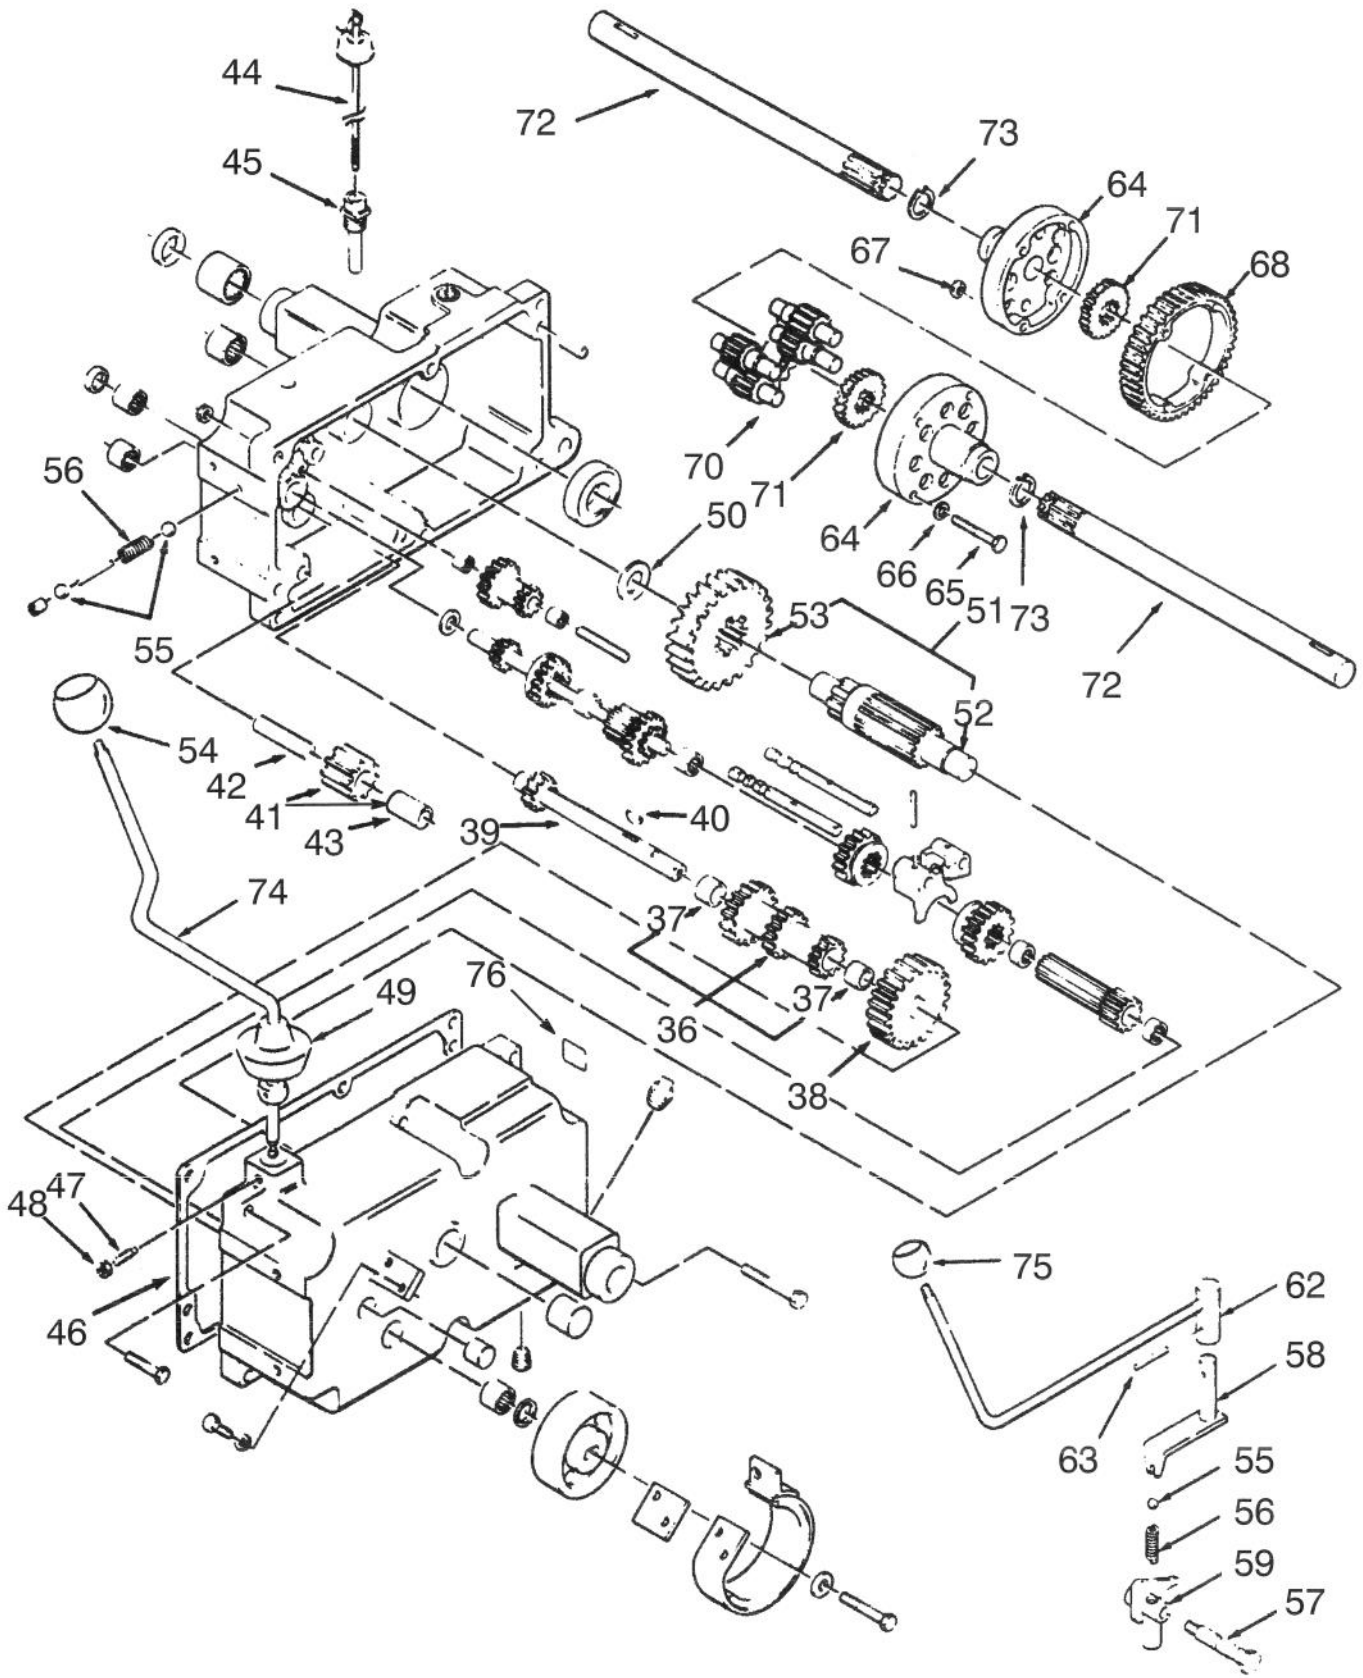

TRANSMISSION 8-SPEED

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
36	7269	Gear Assembly (Incl. Ref.#37)	1	54	108758	Knob - Gear Shift	1
37	1504	Bushing - Bronze	2	55	3517	Ball - Detent	3
38	3527	Gear - Reduction	1	56	106030	Spring - Detent	2
39	83-3530	Shaft - Cluster	1	57	7213	Bolt - Detent	1
40	937089	Key - Woodruff	1	58	7214	Lever - Shift Hi-Low Range	1
41	4204	Gear Assembly, Reverse Idler (Incl. Ref. #43)	1	59	116636	Fork - Shift Hi-Low Range	1
42	3909	Pin - Reverse Idler	1	62	110727	Rod - Shift Hi-Low Range	1
43	1516	Bushing - Reverse Idler	1	63	933184	Pin - Spirol	1
44	101847	Dipstick	1	64	111196	Cap - Diff End	2
45	102703	Nipple - Transmission Fill	1	65	911423	Bolt	4
46	3912	Gasket - Transmission	1	66	107374	Washer - Special	4
47	1239	Screw - Set, Special	1	67	108881	Nut	4
48	3217-5	Nut	1	68	105061	Gear - Differential Ring 43 Tooth	1
49	3577	Cover - Dust	1	70	101623	Gear - Differential Pinion	8
50	9547	Washer - Thrust	1	71	101889	Gear - Differential Axle	2
51	102974	Gear Assembly (Incl. Ref.# 52 & 53)	1	72	105875	Axle - Rear	2
52	101625	Shaft - Pinion	1	73	105876	Ring - Special, Snap	2
53	101626	Gear 44 Tooth	1	74	110725	Stick Shift Assembly	1
				75	83-2710	Knob - Hi-Lo Range Shift	1
				76	104955	Decal - Unidrive	1

FRONT AXLE AND STEERING

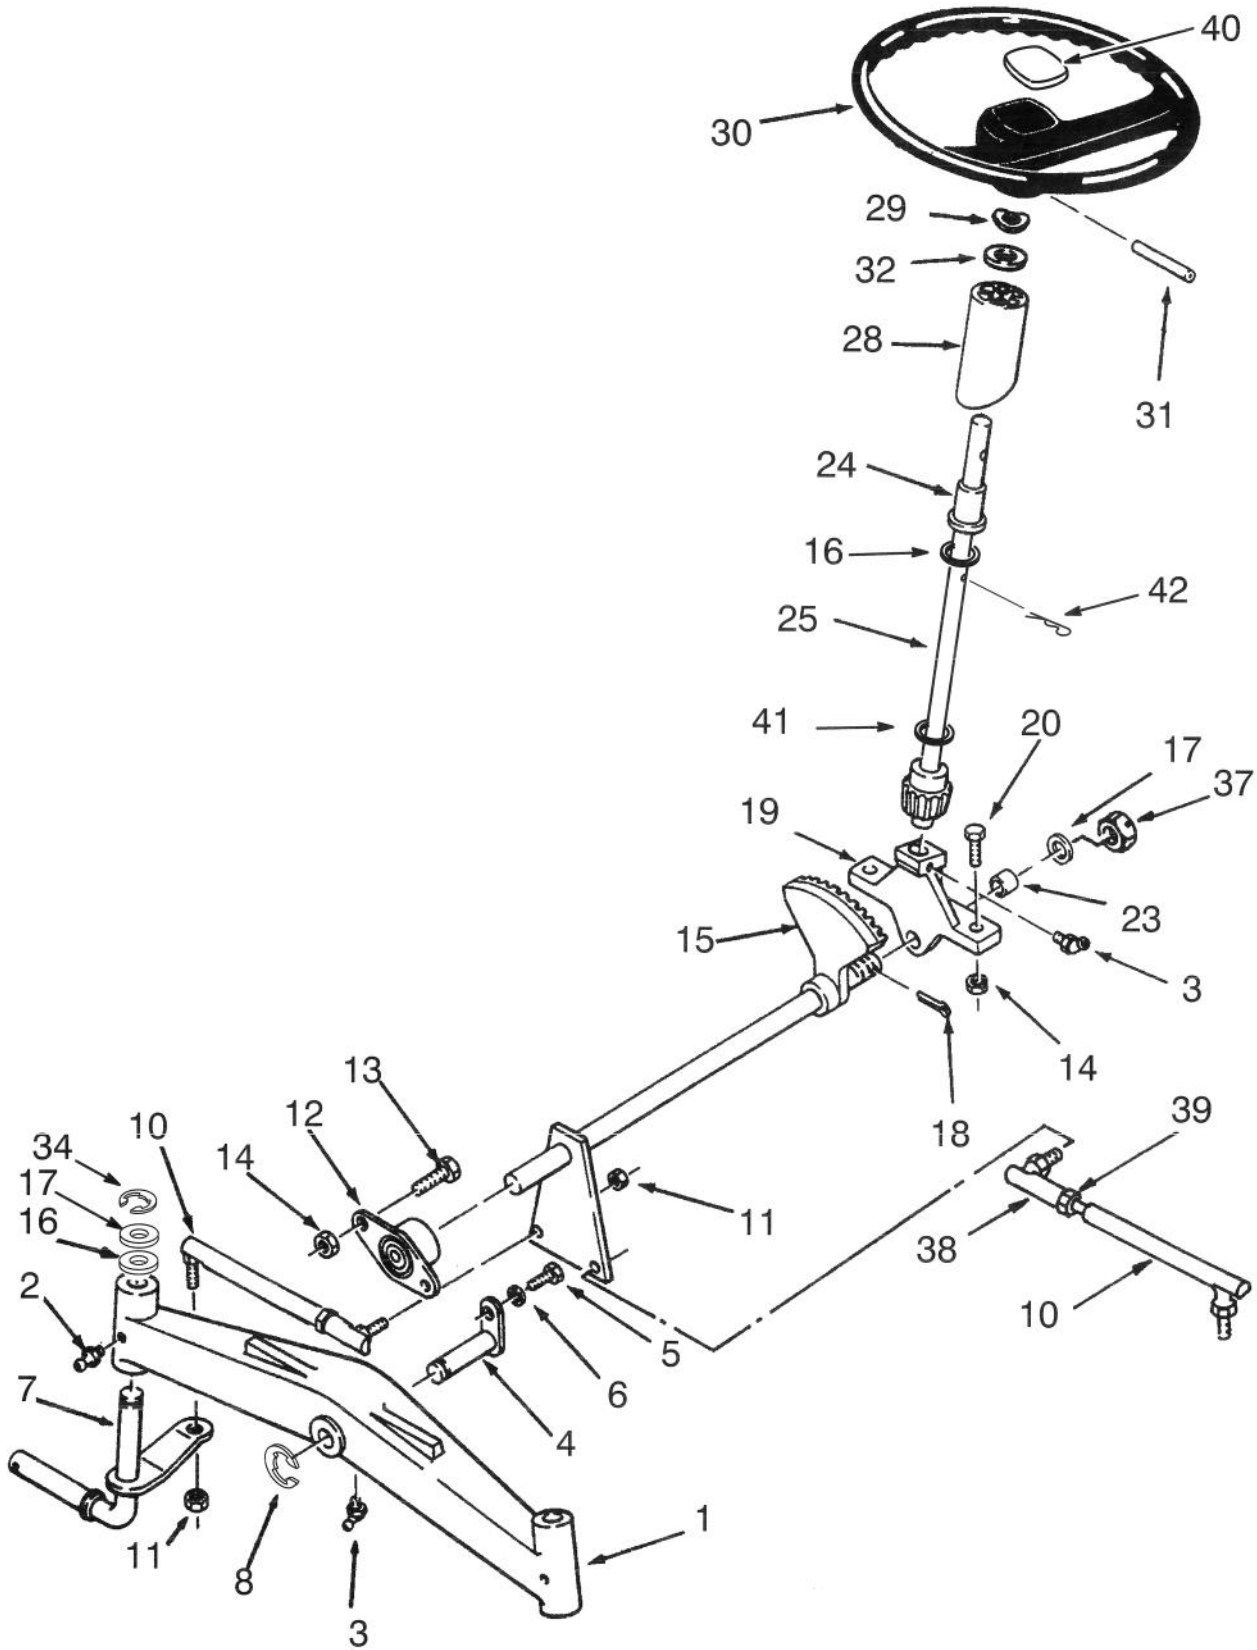


FRONT AXLE AND STEERING

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	5638	Axle - Front	1	19	88-2710	Support - Steering	1
2	302-5	Fitting - Grease	2	20	323-9	Bolt	2
3	1481	Fitting - Grease, 45°	2	23	6397	Bearing	1
4	6216	Pin & Plate	1	24	109189	Bearing	1
5	322-1	Bolt	1	25	92-4987	Steering Shaft Assembly	1
6	3253-4	Washer - Lock	1	28	113443	Tube - Steering	1
7	113381	Spindle - Front, LH	1	29	7896	Washer - Bowed	1
*	113382	Spindle - Front, RH	1	30	76-1420	Steering Wheel (Incl. Ref. #40)	1
8	5618	Ring - Retaining	1	31	32121-111	Pin - Spirol	1
10	78-2900	Tie Rod Assembly (Incl. Ref. # 38 & 39)	2	32	109262	Washer - Special	2
11	9156934	Nut	4	34	32120-93	Ring - Retaining	2
12	6472	Bearing - Flanged	1	37	32136-5	Nut - Slotted	1
13	323-6	Bolt	2	38	78-2920	Joint - Ball	1
14	3296-39	Nut - Lock	4	39	915002	Nut	1
15	78-2880	Shaft	1	40	78-0370	Insert	1
16	5210	Washer - Shim	6	41	237-69	"O"Ring	1
17	1278	Washer - Shim	3	42	3272-21	Pin - Cotter	1
18	3272-19	Pin - Cotter	1				

*Not Illustrated


CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

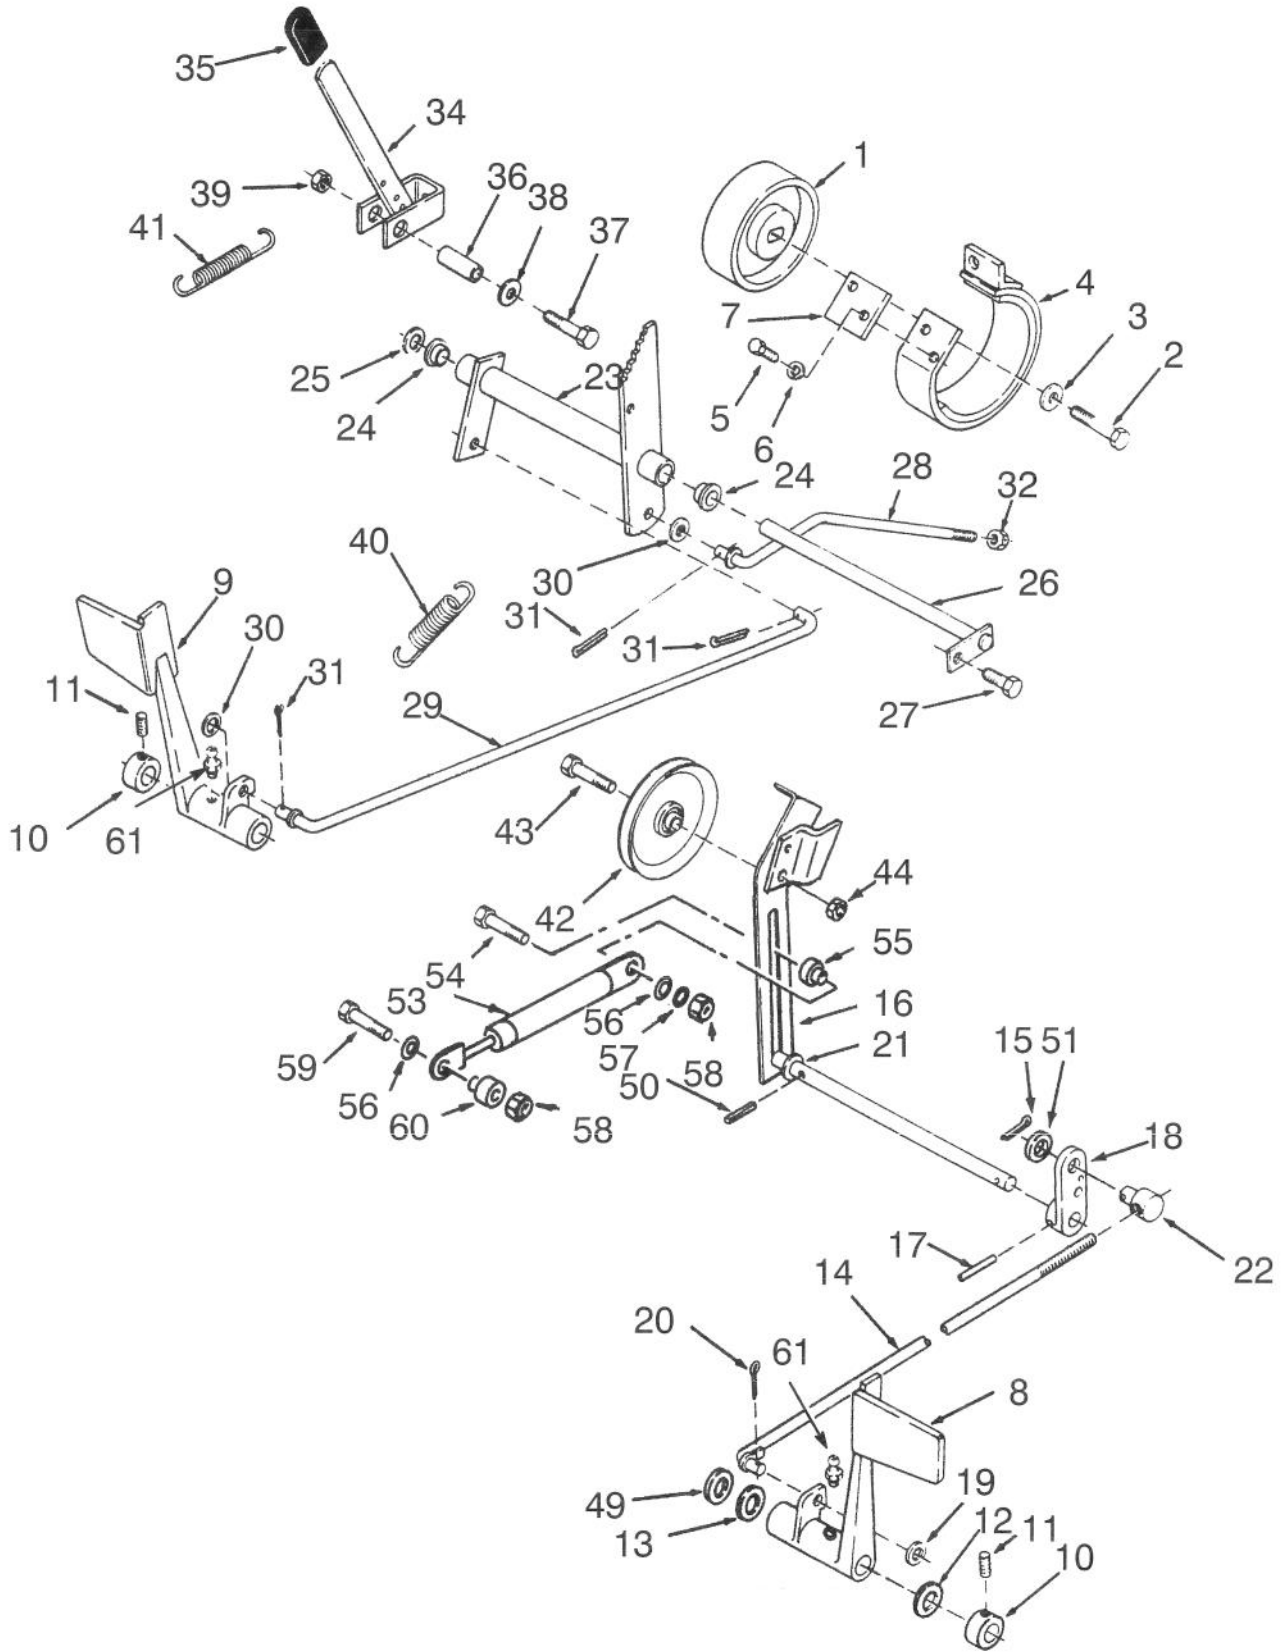

CLUTCH, BRAKE AND SPEED CONTROL LINKAGE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	106719	Drum – Brake	1	29	105886	Rod – Brake, Front	1
2	110234	Bolt	1	30	920248	Washer – Nylon	2
3	2844	Washer – Special	1	31	3272-10	Pin – Cotter	3
4	9593	Band – Brake	1	32	3296-39	Nut	1
5	321-3	Bolt	2	34	106451	Lever – Parking Brake	1
6	3253-3	Washer – Lock	2	35	6820	Grip	1
7	9598	Plate – Back-Up	1	36	102025	Spacer	1
8	114814	Pedal – Clutch	1	37	323-9	Bolt	1
9	114813	Pedal – Brake	1	38	3256-24	Washer	1
10	111383	Collar	2	39	102809	Nut – Special	1
11	3245-32	Screw – Set	2	40	107677	Spring – Brake Return	1
12	7896	Washer – Bowed	1	41	103628	Spring – Return	1
13	1278	Washer – Shim	1	42	7451	Pulley – Idler	1
14	103347	Rod – Clutch	1	43	106193	Bolt – Special	1
15	3272-6	Pin – Cotter	1	44	3296-39	Nut	1
16	78-2970	Arm – Clutch Idler	1	49	9202254	Washer – Special	1
17	933190	Pin – Spirol	1	50	933267	Pin – Spirol	1
18	105896	Arm – Clutch Rod	1	51	3256-24	Washer	1
19	920248	Washer – Nylon	3	53	78-3240	Spring – Gas	1
20	3272-10	Pin – Cotter	2	54	321-6	Bolt	1
21	3765	Washer – Shim	1	55	78-3260	Spacer	1
22	101161	Trunnion – Clutch Rod	1	56	3256-22	Washer	2
23	103543	Bell Crank – Brake Linkage	1	57	3253-3	Washer – Lock	1
24	7879	Bushing	2	58	3296-42	Nut	2
25	3256-26	Washer	1	59	321-9	Bolt	1
26	106417	Rod – Bell Crank Pivot	1	60	78-3250	Spacer	1
27	9266944	Bolt	1	61	302-5	Fitting – Grease	2
28	105900	Rod – Brake, Rear	1				

HITCHES

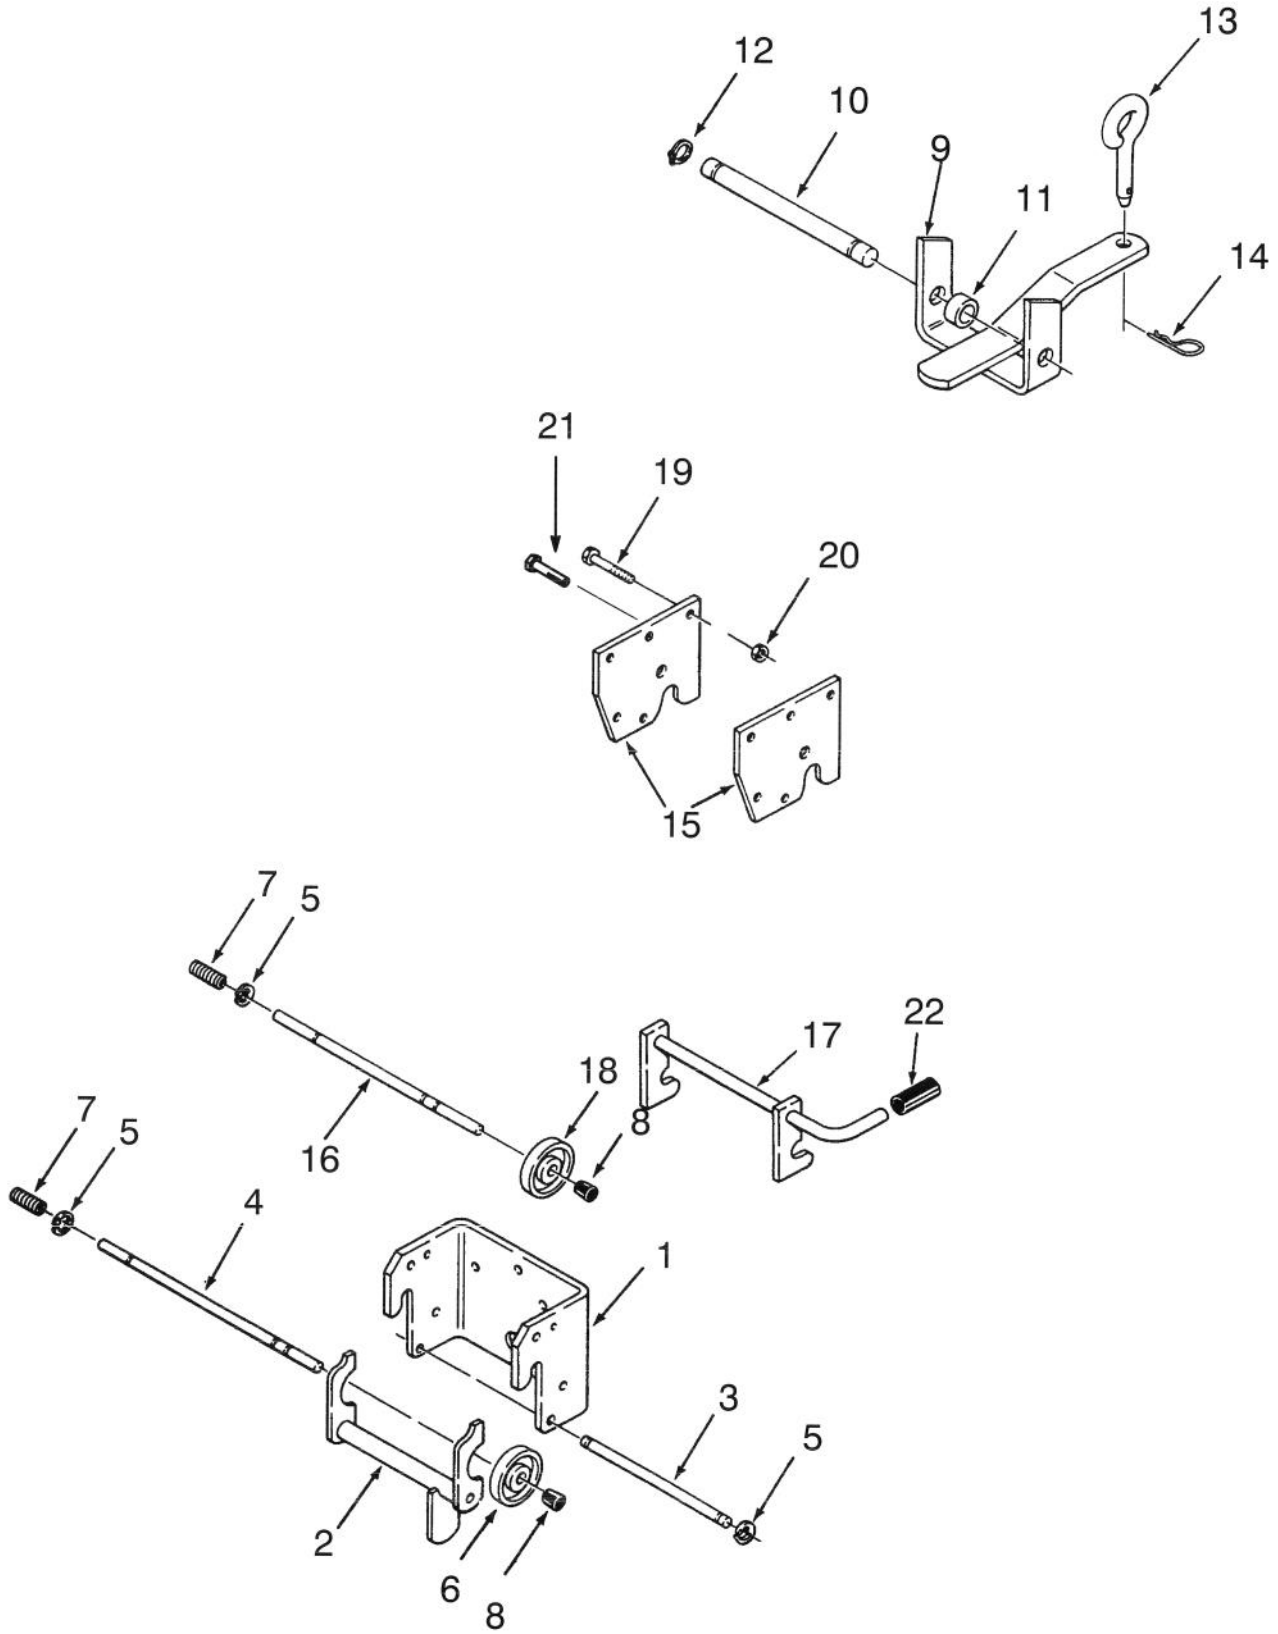


HITCHES

Ref. No.	Part No.	Description	No. Used
1	101711	Housing – Front Hitch	1
2	105859	Latch – Front Hitch	1
3	101750	Rod	1
4	101751	Rod – Front Hitch Lock	1
5	105797	Ring – Retaining	8
6	101707	Lock	1
7	8616	Spring	2
8	105316	Cap – Lock Rod	2
9	1644	Hitch – Drawbar	1
10	105269	Shaft – Drawbar Hitch	1
11	9791204	Spacer	2

Ref. No.	Part No.	Description	No. Used
12	5618	Ring – Retaining	2
13	106634	Pin – Hitch	1
14	933505	Pin – Cotter	1
15	102644	Plate – Mid Hitch	2
16	117940	Rod – Mid Hitch Lock	1
17	117930	Latch – Mid Hitch	1
18	83-6520	Rod – Lock	1
19	3251-25	Bolt	3
20	3296-39	Nut	5
21	323-7	Bolt	2
22	9038	Grip	1


MANUAL LIFT LINKAGE

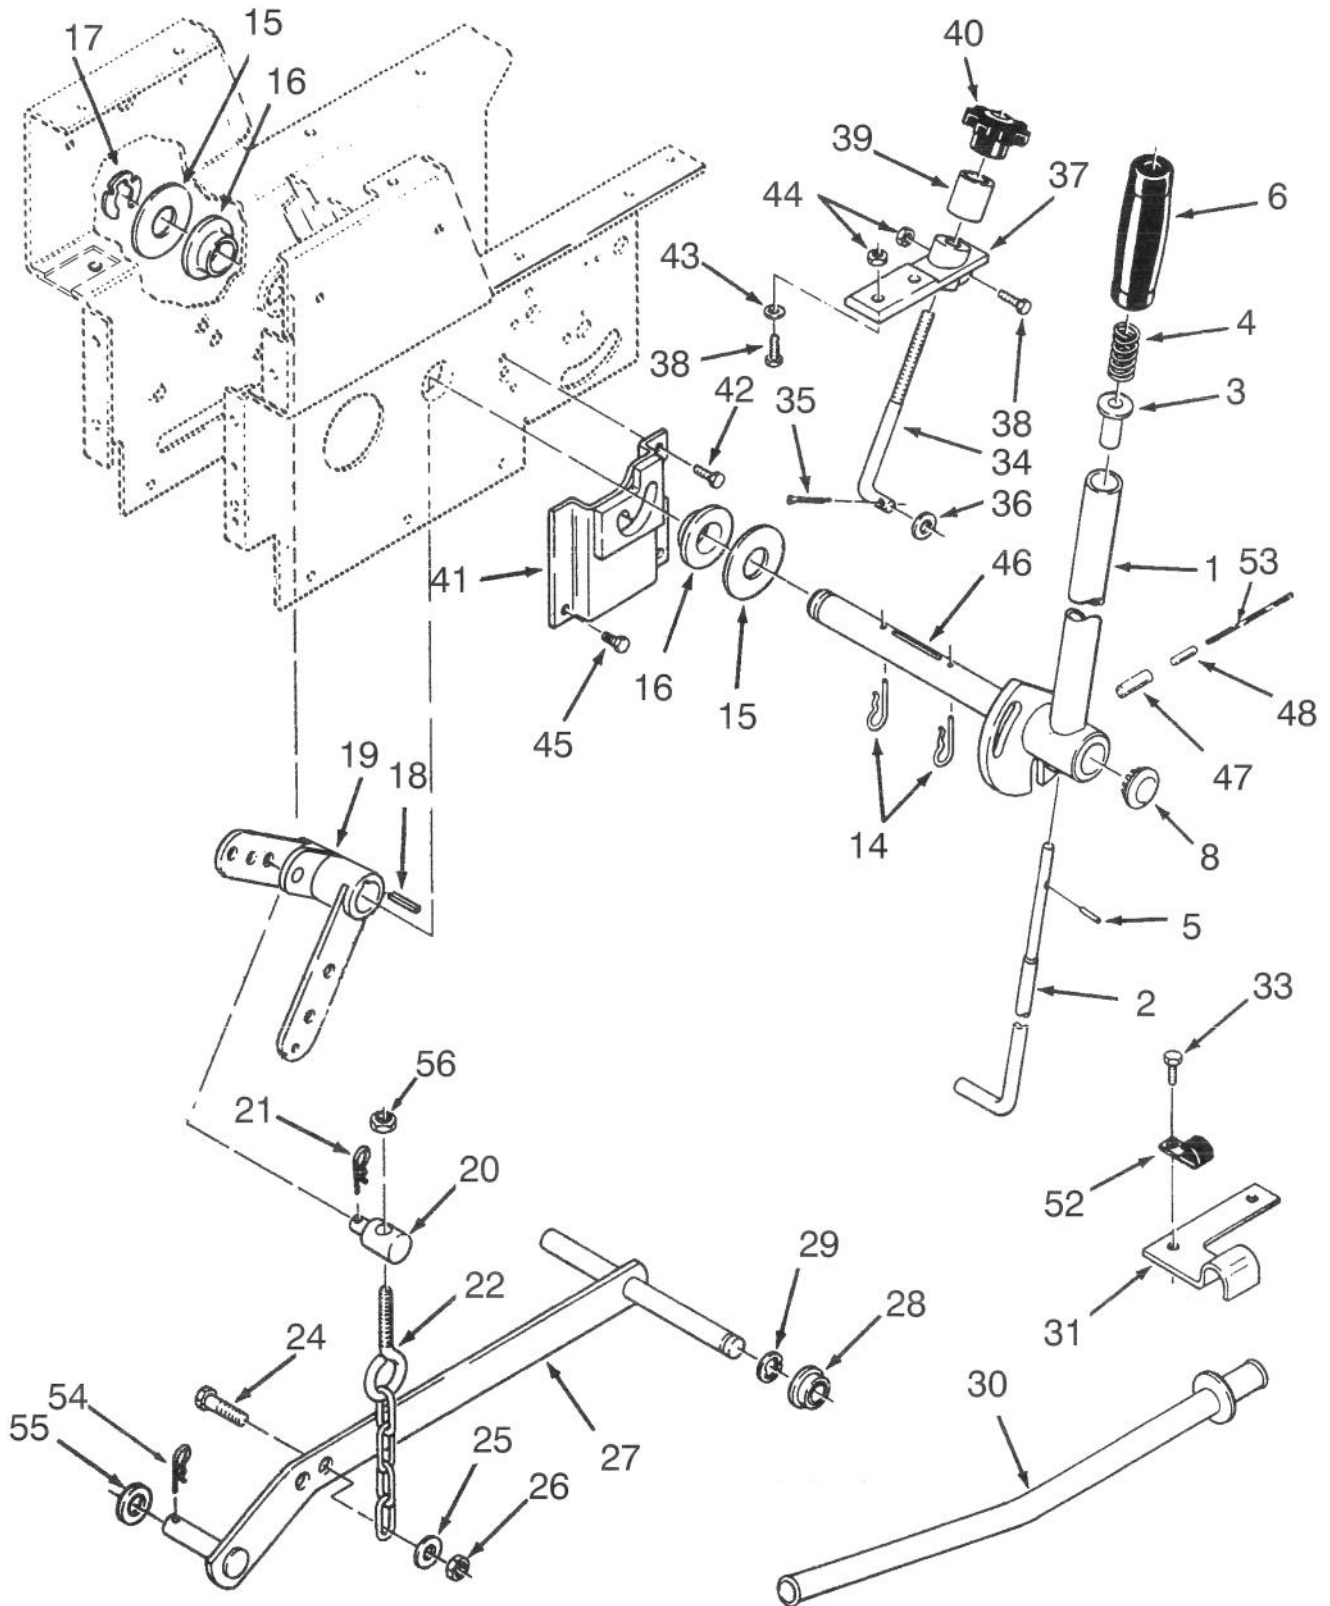

MANUAL LIFT LINKAGE

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	108563	Lever – Lift (Incl. Ref.# 46, 47, & 48)	1	30	105845	Tube – Rear Lift Cable	1
2	106257	Rod – Latch	1	31	108903	Clamp – Tube	1
3	8130	Retainer – Spring	1	33	3235-22	Bolt	2
4	3624	Spring	1	34	110653	Rod – Height Control	1
5	933148	Pin – Spirol	1	35	3272-10	Pin – Cotter	1
6	6542	Grip – Lift Lever	1	36	3256-5	Washer	1
8	4944	Button – Plug	1	37	106345	Casting – Height Control	1
14	933507	Pin – Cotter	2	38	322-5	Bolt	3
15	3256-30	Washer	3	39	106258	Sleeve	1
16	106269	Bushing	2	40	5280	Knob – Height Control	1
17	106414	Retainer	1	41	106411	Latch Bracket	1
18	1121	Key	1	42	9266944	Bolt	1
19	78-1550	Lever – Lift	1	43	3256-23	Washer	2
20	6739	Trunnion	1	44	3296-29	Nut	3
21	9335044	Pin – Cotter	1	45	926696	Bolt	2
22	106522	Chain – Lift	1	46	108565	Shaft	1
24	322-6	Bolt	1	47	32121-103	Pin – Spirol	1
25	3256-23	Washer	1	48	32121-25	Pin – Roll	1
26	3296-29	Nut	1	52	8830	Clamp	1
27	113445	Bar – Lift	1	53	111154	Wire – Lock	1
28	6229	Bearing	1	54	933505	Pin – Cotter	1
29	5701	Ring – Retaining	1	55	3256-26	Washer	1
				56	3296-39	Nut	1

HOOD ASSEMBLY

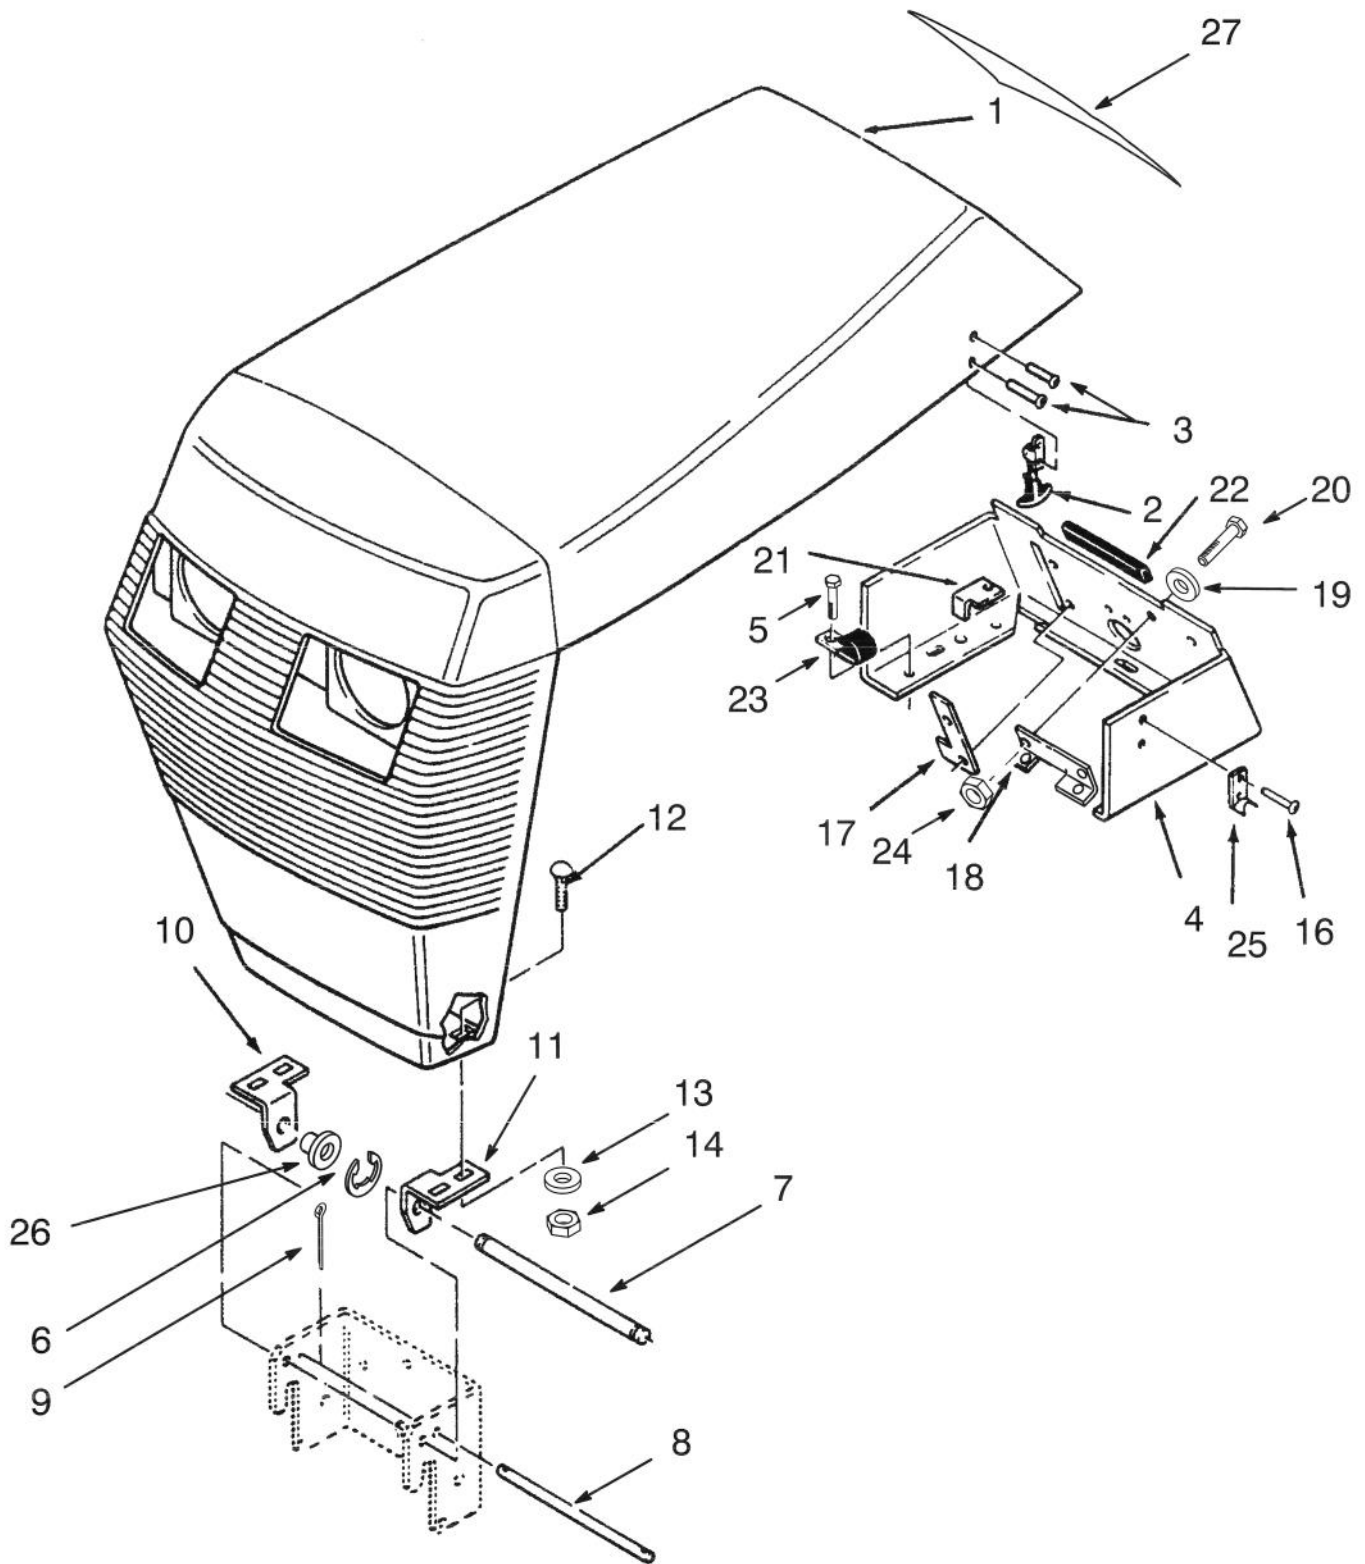


HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	88-2782	Hood (Incl. Ref. # 27)	1	13	3256-22	Washer	4
2	117344	Handle Assembly (Incl. Ref. #25)	2	14	32146-17	Nut	4
3	117432	Rivet - Pop	4	16	117431	Rivet - Pop	4
4	111271	Console	1	17	120590	Stop - Throttle	1
5	9266944	Bolt - Washer Hd	3	18	112506	Bracket	1
6	105797	Ring - Retaining	2	19	9201504	Washer - Lock	2
7	116745	Rod - Pivot	1	20	9107622	Screw	2
8	101850	Rod - Hood Stop	1	21	112415	Stop - PTO	1
9	9320004	Pin - Cotter	2	22	111757	Edging - Console	1
10	116746	Bracket - RH	1	23	111392	J-Clip	1
11	116747	Bracket - LH	1	24	9159604	Nut	2
12	3229-25	Bolt - Carriage	4	25	117343	Latch - Hood	2
				26	5979	Bushing - Hood Pivot	2
				27	88-0020	Decal - Danger	1

*Not Illustrated

HOOD STAND AND SUPPORTS

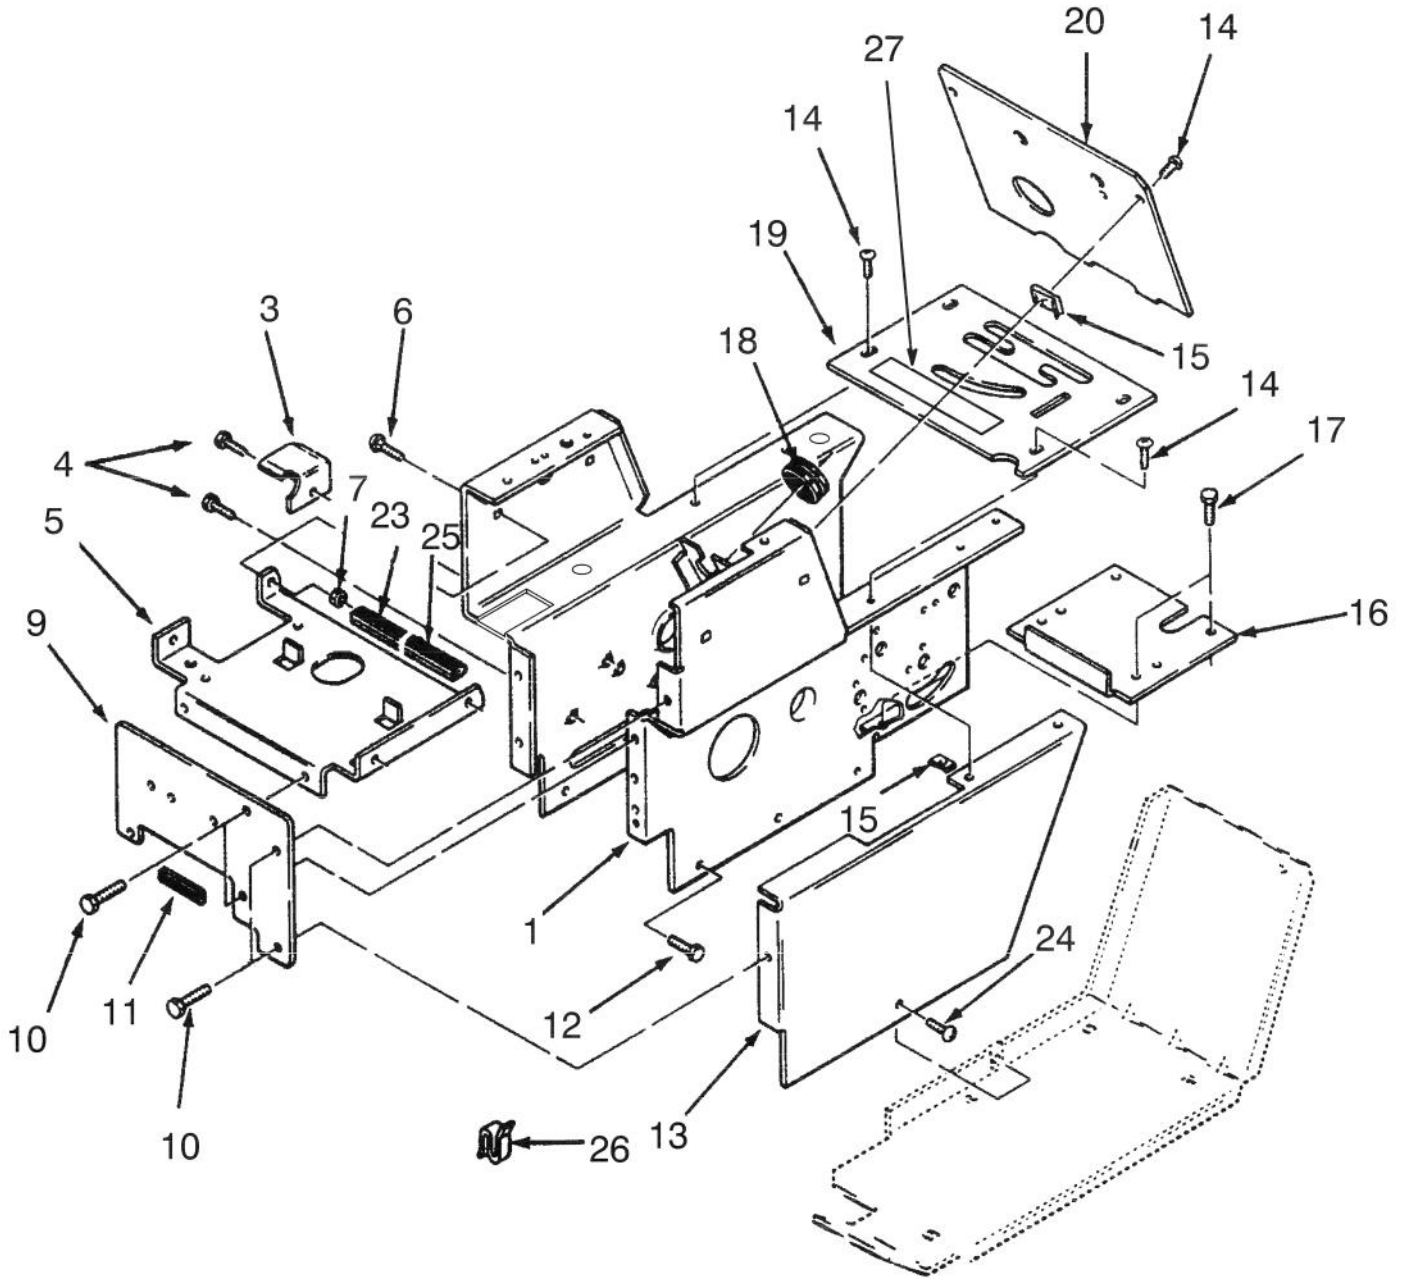


HOOD STAND AND SUPPORTS

Ref. No.	Part No.	Description	No. Used
1	79-4900	Hoodstand	1
3	106261	Bracket - Belt	1
4	9266944	Bolt	1
5	78-3010	Bracket - Battery Support	1
6	117371	Bolt - Carriage	4
7	9151126	Nut	4
9	78-3020	Plate - Front	1
10	9266944	Bolt	1
11	106772	Trim - Edge 4"	1
12	9266944	Bolt	4
*	926696	Bolt	2
13	113935	Cover - Side, LH	1
14	9108372	Screw	6

Ref. No.	Part No.	Description	No. Used
15	107069	Nut - Speed	6
16	106250	Cover - Dust	1
17	9266944	Bolt	4
18	104248	Grommet	1
19	92-6529	Plate - Shift Cover (Incl. Ref.#27)	1
20	111034	Plate - Hood Stand	1
23	110142	Trim - Edge	1
24	9108372	Screw	1
25	106454	Trim - Edge	1
26	3023	Clip	1
27	79-0370	Decal - Danger	1

*Not Illustrated

FENDER AND SUPPORTS

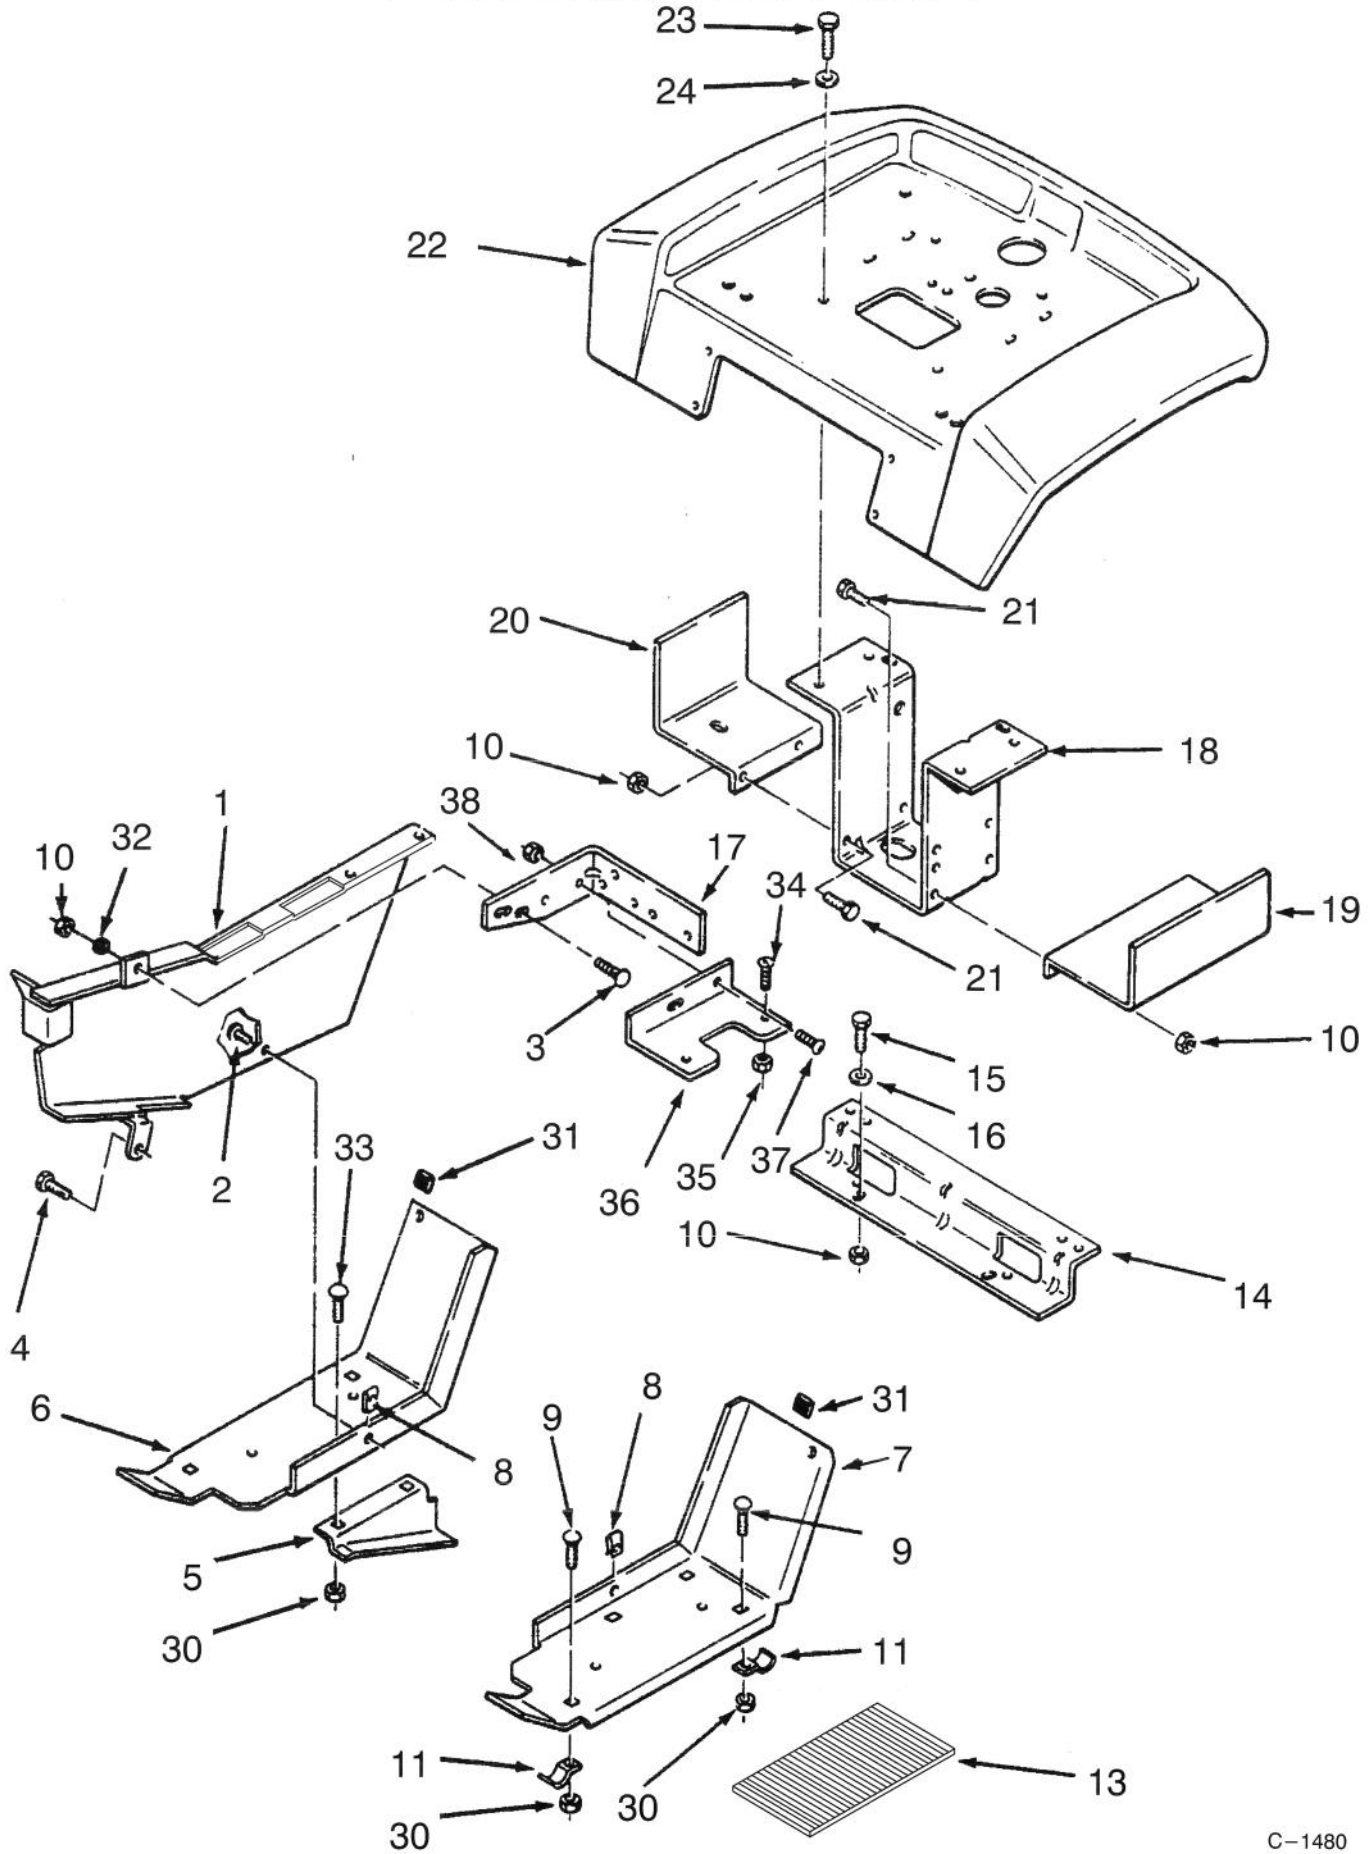


FENDER AND SUPPORTS

Ref. No.	Part No.	Description	No. Used
1	107975	Guard – Belt	1
2	9108372	Screw	2
3	116000	Bolt – Carriage	1
4	9266944	Bolt	1
5	106352	Guard – Lower Belt	1
6	106222	Footrest – RH	1
7	106223	Footrest – LH	1
8	107069	Clip	3
9	116000	Bolt – Carriage	6
10	3296-29	Nut	7
11	7456	Clamp	4
13	110636	Pad – Footrest	2
14	107951	Bracket – Fender Front	1
15	322-3	Bolt	2
16	3256-23	Washer	2
17	109554	Bracket – Belt Guard	1

Ref. No.	Part No.	Description	No. Used
18	79-4990	Bracket – Fender Support	1
19	108464	Support – Fuel Tank, LH	1
20	106236	Support – Fuel Tank, RH	1
21	322-3	Bolt	4
22	110960	Fender	1
23	9266944	Bolt	4
24	920008	Washer	4
30	3296-29	Nut	6
31	111071	Bumper	2
32	108457	Nut – Push	1
33	118620	Bolt – Carriage	2
34	9107944	Screw – Machine	2
35	9157404	Nut	4
36	117331	Holder – Fuse	1
37	321-4	Bolt	2
38	3296-42	Nut	1

*Not Illustrated

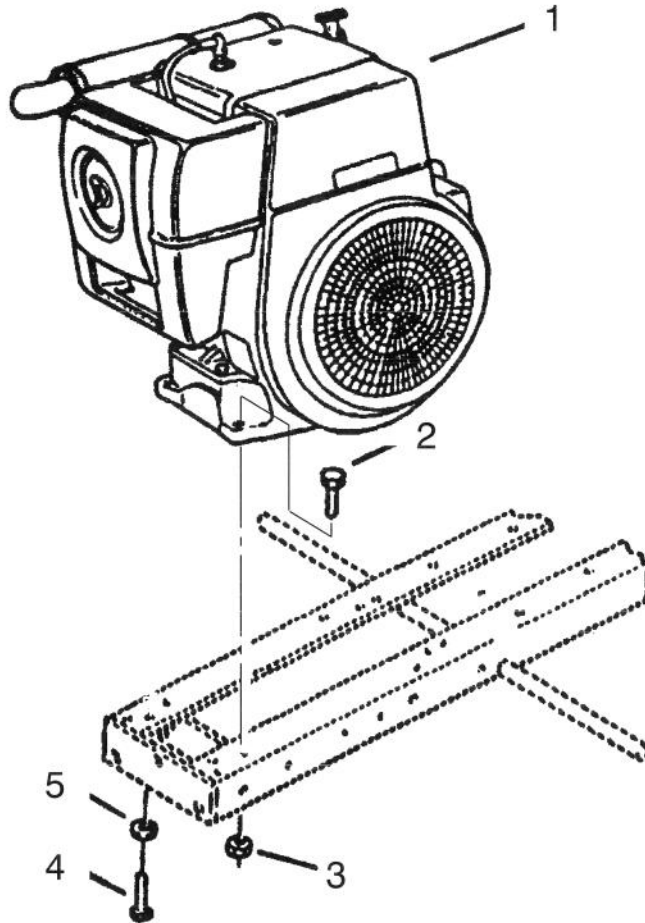


C-1481

ENGINE, KOHLER

Ref. No.	Part No.	Description	No. Used
1	92-1532	Engine - 14HP	1
2	323-8	Bolt	2
3	3296-39	Nut	2

Ref. No.	Part No.	Description	No. Used
4	323-6	Bolt	2
5	3253-21	Washer - Lock	1

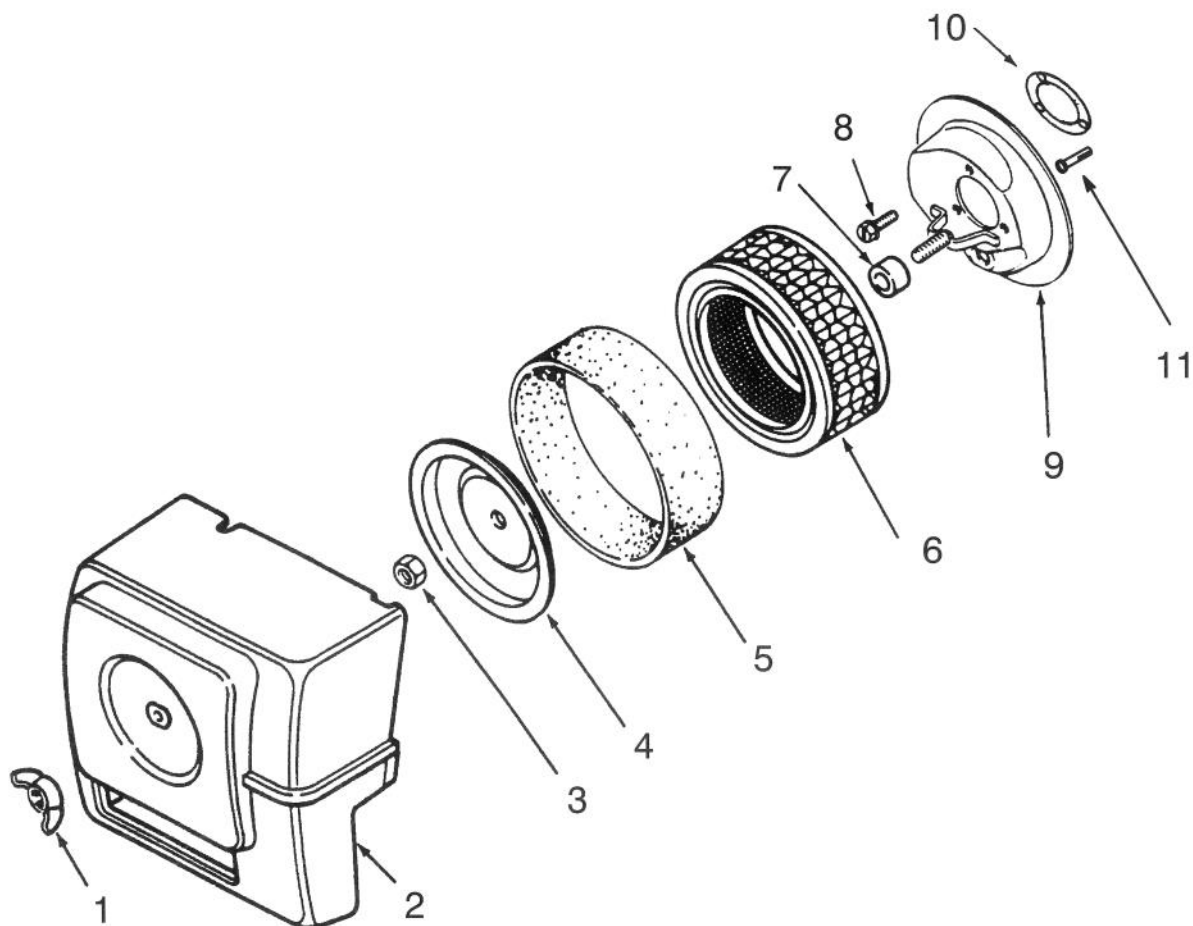


C-1482

AIR INTAKE

Ref. No.	Part No.	Description	No. Used
1	KH10576	Nut – Wing	1
2	KH10299	Cover	1
3	KH10189	Nut	1
4	KH10412	Cover – Air Cleaner Element	1
5	KH10235	Element – Precleaner	1
6	KH10236	Element	1

Ref. No.	Part No.	Description	No. Used
7	KH10034	Seal	1
8	KH10609	Screw	3
9	KH10297	Base – Air Cleaner	1
10	KH10697	Gasket	1
11	KH10625	Screw	1
*	KH10191	Decal – Air Cleaner	1

*Not Illustrated

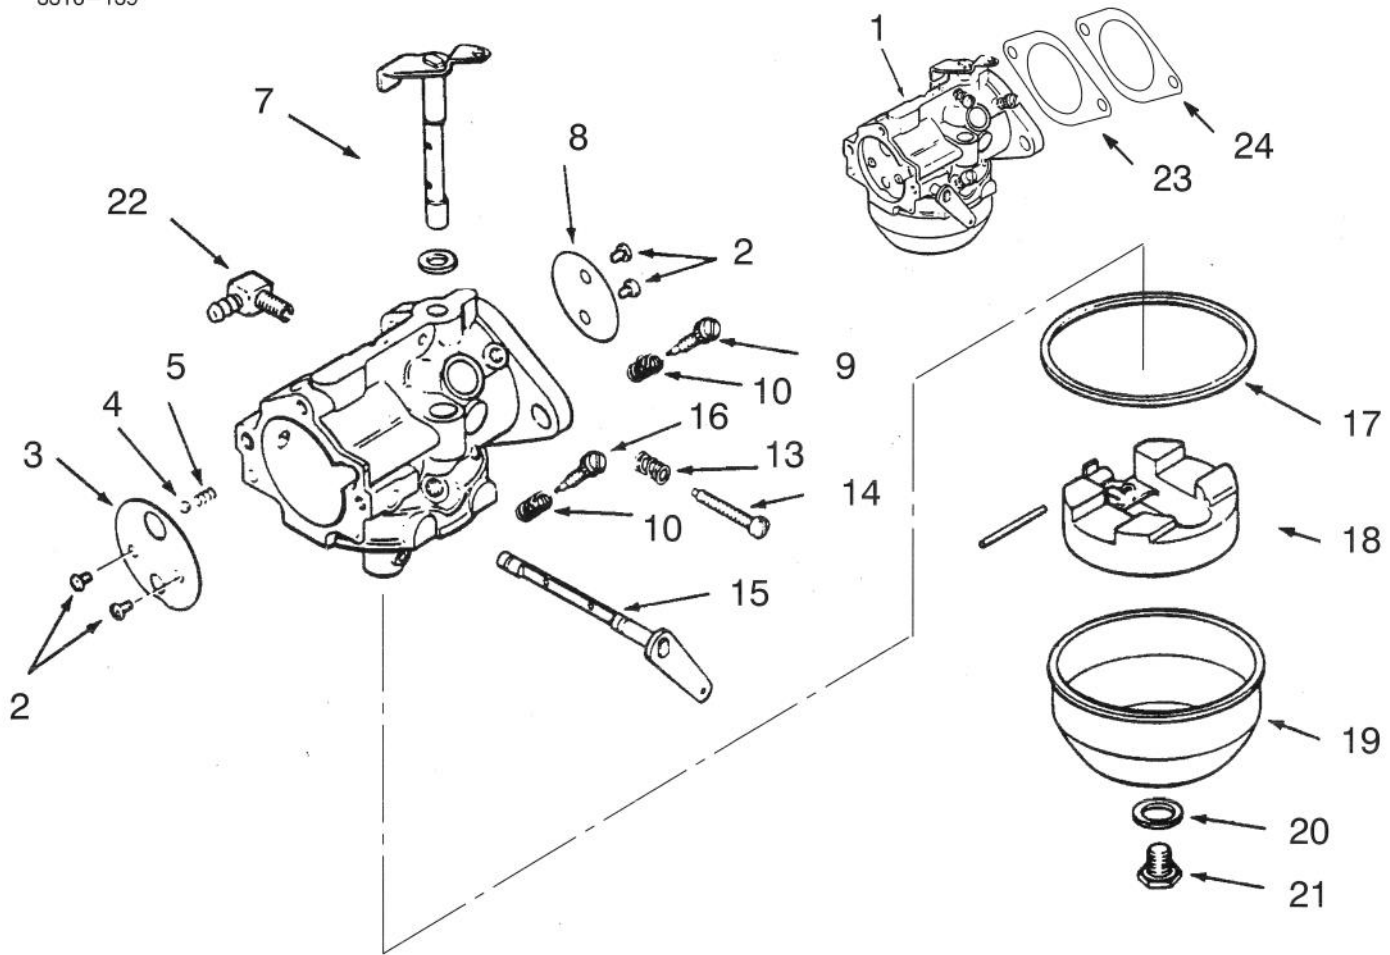


C-1483

CARBURETORS

Ref. No.	Part No.	Description	No. Used
1	92-7252	Carburetor Assembly (Incl. Ref. #2-24)	1
2	KH10110	Screw	4
3	92-7255	Plate - Choke	1
4	KH10128	Ball	1
5	KH10113	Spring	1
7	92-7256	Shaft w/Lever & Seal	1
8	92-7257	Plate - Throttle	1
9	KH10132	Needle - Idle Fuel Adj.	1
10	KH10112	Spring - Idle Fuel	1
13	KH10114	Spring - Adj.	1
14	KH10109	Screw - Idle Speed Adj.	1
15	KH10702	Shaft - Choke	1
16	KH10694	Main - Needle	1
17	KH10094	Gasket	1
18	KH10663	Kit - Float (Incl. Pin)	1
19	KH10117	Bowl - Fuel	1
20	KH10093	Gasket	1
21	KH10116	Screw	1
22	KH10123	Connector 90°	1
23	KH10274	Gasket - Carburetor	1
24	KH10146	Gasket - Carburetor	1
*	KH10696	Kit - Carburetor Repair (Includes	
	KH10009	Gasket - Flange	
	KH10146	Gasket - Carburetor	

Ref. No.	Part No.	Description	No. Used
	KH10733	Gasket	
	KH10093	Gasket - Bowl Screen	
	KH10094	Gasket - Bowl	
	KH10677	Gasket - Air Cleaner	
	KH10697	Gasket	
	KH10274	Gasket - Carburetor	
*	KH10358	Kit - Choke & Throttle Repair	1
*	KH10710	Kit - High Altitude Jet (Includes	
	KH10682	Bushing	
	KH10709	Jet - Main	
*	92-7251	Kit - Carburetor w/Linkage (Includes	1
	KH10682	Bushing &	
	KH10709	Main Jet	
*	KH10693	Kit - Adjustable Jet w/Linkage (Includes	1
	KH10701	Carburetor Linkage	
	KH10682	Bushing - Linkage Natural	
	KH10686	Bushing Linkage Black	
	KH10697	Gasket - Air Cleaner	
	KH10693	Carburetor Assembly	
	KH10146	Gasket	
	KH10274	Gasket	1

*Not Illustrated

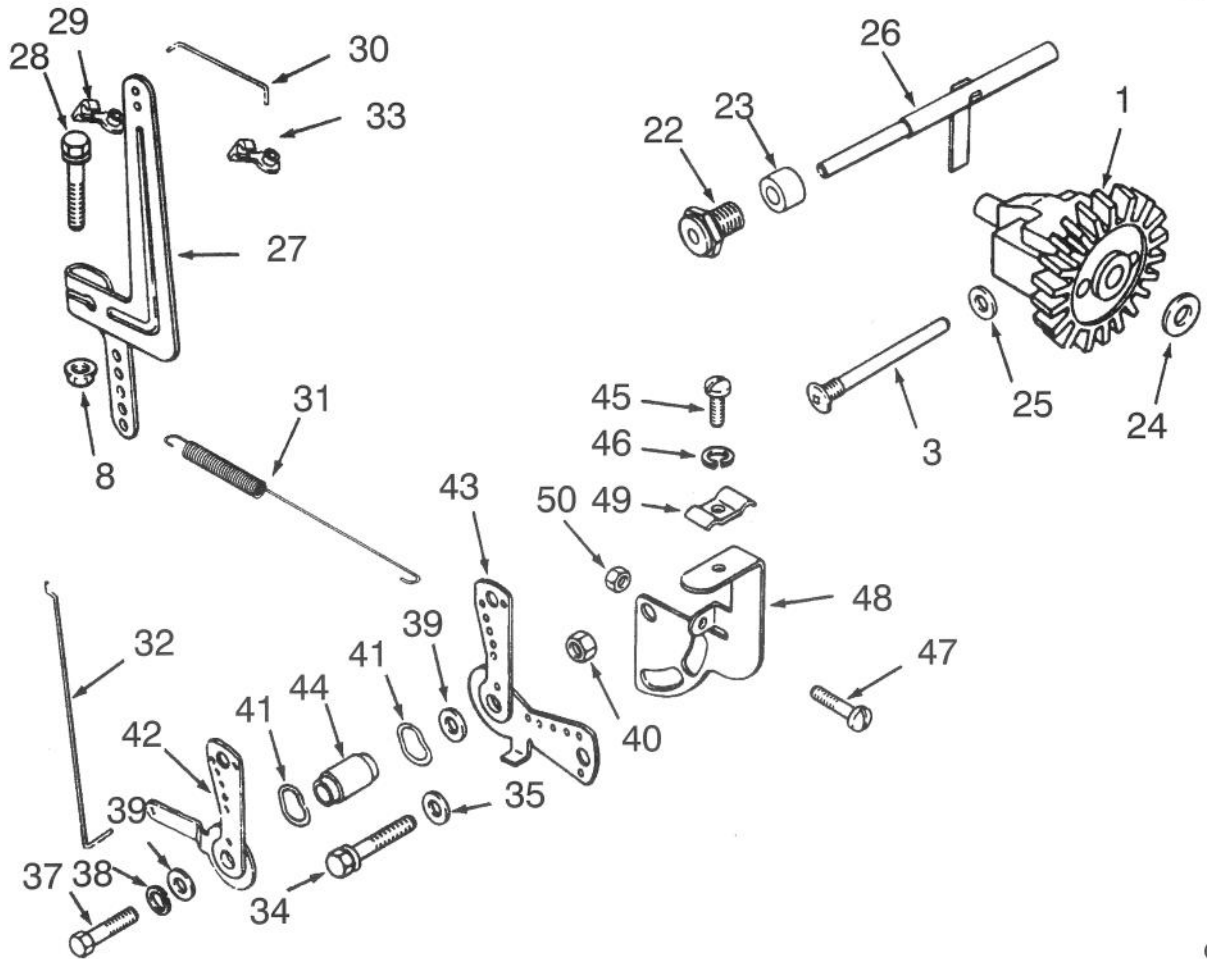


C-1565

GOVERNOR LINKAGE

Ref. No.	Part No.	Description	No. Used
1	KH10660	Kit – Governor Gear (Incl. Ref.# 24)	1
3	KH10035	Pin – Governor Stop	1
8	KH10629	Nut – Pal	1
22	KH10070	Bushing	1
23	KH10585	Spacer	1
24	KH10087	Washer	1
25	KH10136	Washer	1
26	92-7262	Kit – Governor Cross Shaft	1
27	KH10295	Lever – Governor	1
28	KH10626	Screw	1
29	92-7254	Bushing	1
30	KH10701	Linkage (Governor to Carb.)	1
31	KH10296	Spring (Governor to Carb.)	1
32	KH10287	Linkage – Choke (Carb. to Choke Shaft)	1
33	92-7253	Bushing	1
34	KH10545	Screw	1

Ref. No.	Part No.	Description	No. Used
35	KH10570	Washer	1
37	KH10600	Screw	1
38	KH10599	Washer – Lock	1
39	KH10569	Washer	1
40	KH10624	Nut	1
41	KH10152	Washer	2
42	KH10293	Lever – Choke Control	1
43	KH10294	Lever – Throttle Control	1
44	KH10302	Space	1
45	KH10605	Screw	1
46	KH10695	Washer	1
47	KH10040	Screw	1
48	KH10303	Bracket – Clutch Control	1
49	KH10308	Clamp	1
50	KH10619	Nut	1
*	92-7263	Choke Lever Assembly (Incl. Ref. #37 thru 44)	1

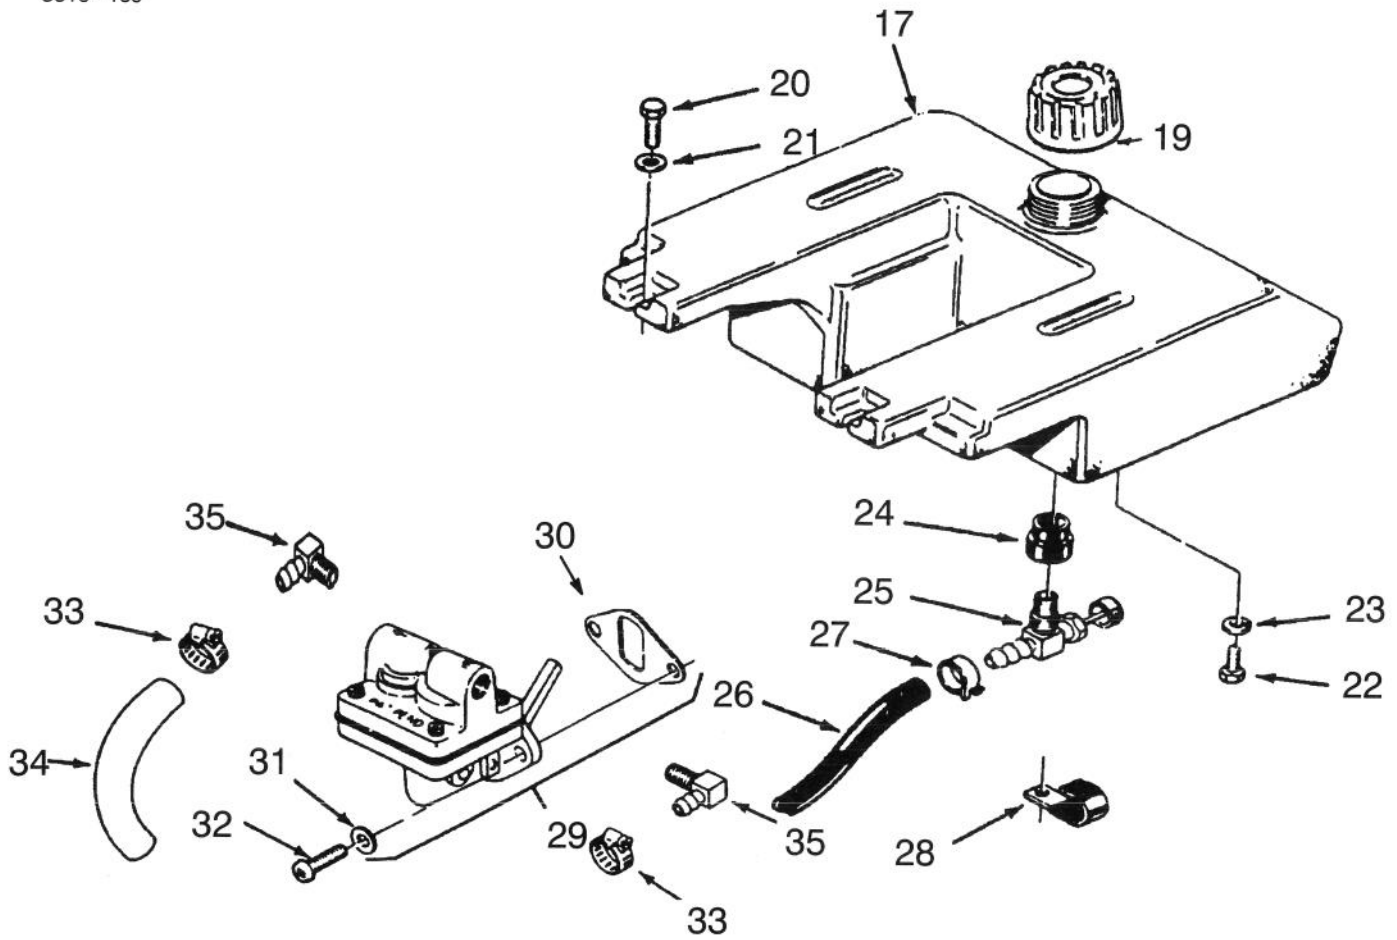


C-1494

FUEL SYSTEM

Ref. No.	Part No.	Description	No. Used
17	106234	Tank - Fuel	1
18	55-3570	Cap - Fuel	1
20	926697	Bolt	2
21	3256-4	Washer	2
22	322-2	Bolt	3
23	3253-4	Washer - Lock	1
24	104047	Bushing	1
25	104048	Valve - Fuel Shut-Off	1
26	103787	Line - Fuel 62"	1
27	108898	Clamp	2

Ref. No.	Part No.	Description	No. Used
28	950154	Clamp 1/2" (1.3 cm) Dia.	2
29	KH10319	Pump Assy - Fuel (Incl. Ref.#30 & 31)	1
30	92-7261	Gasket - Fuel Pump	1
31	KH10569	Washer	2
32	KH10552	Screw - Pozidrive	2
33	KH10586	Clamp	2
34	92-7250	Line - Fuel 5" Lg	1
35	KH10123	Connector - 90°	2

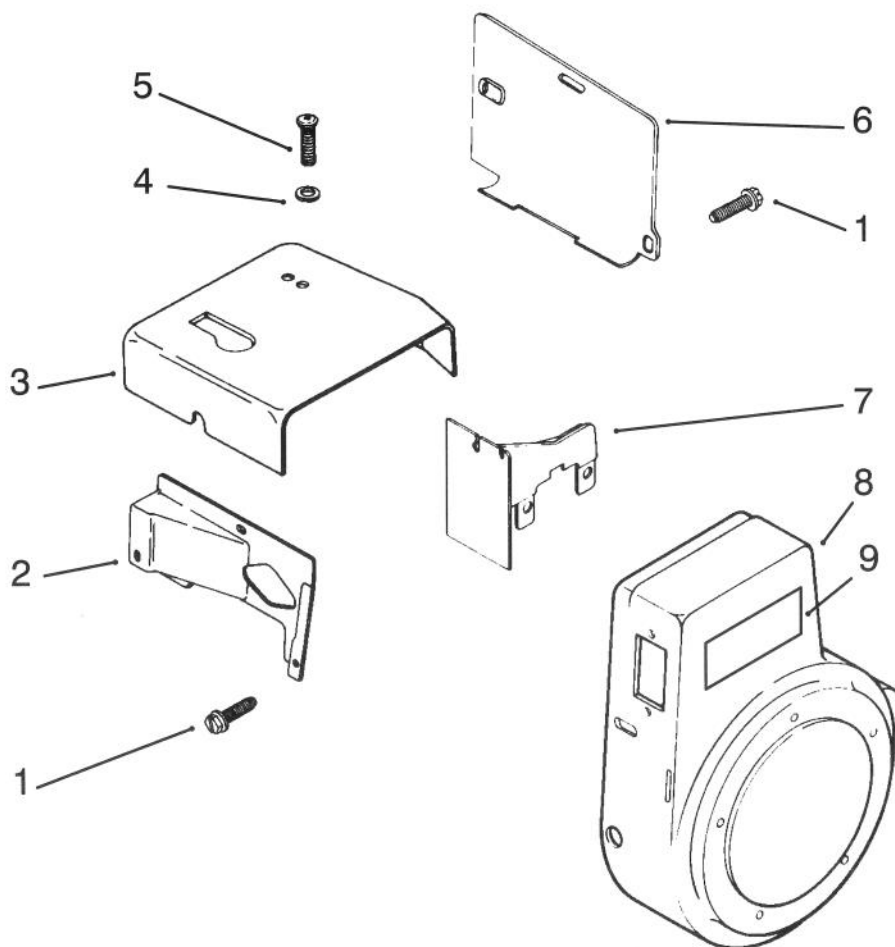


C-1559

BAFFLES AND SHROUDS

Ref. No.	Part No.	Description	No. Used
1	KH10413	Screw - Hex .Hd.	6
2	KH10279	Baffle - Side Air	1
3	KH10231	Baffle - Head	1
4	KH10567	Washer	1
5	KH10289	Screw - Pozidrive T.H.	3

Ref. No.	Part No.	Description	No. Used
6	KH10282	Baffle - Cylinder	1
7	KH10280	Baffle - Inner	1
8	KH10265	Housing - Blower	1
9	92-7281	Decal - HP	1

*Not Illustrated

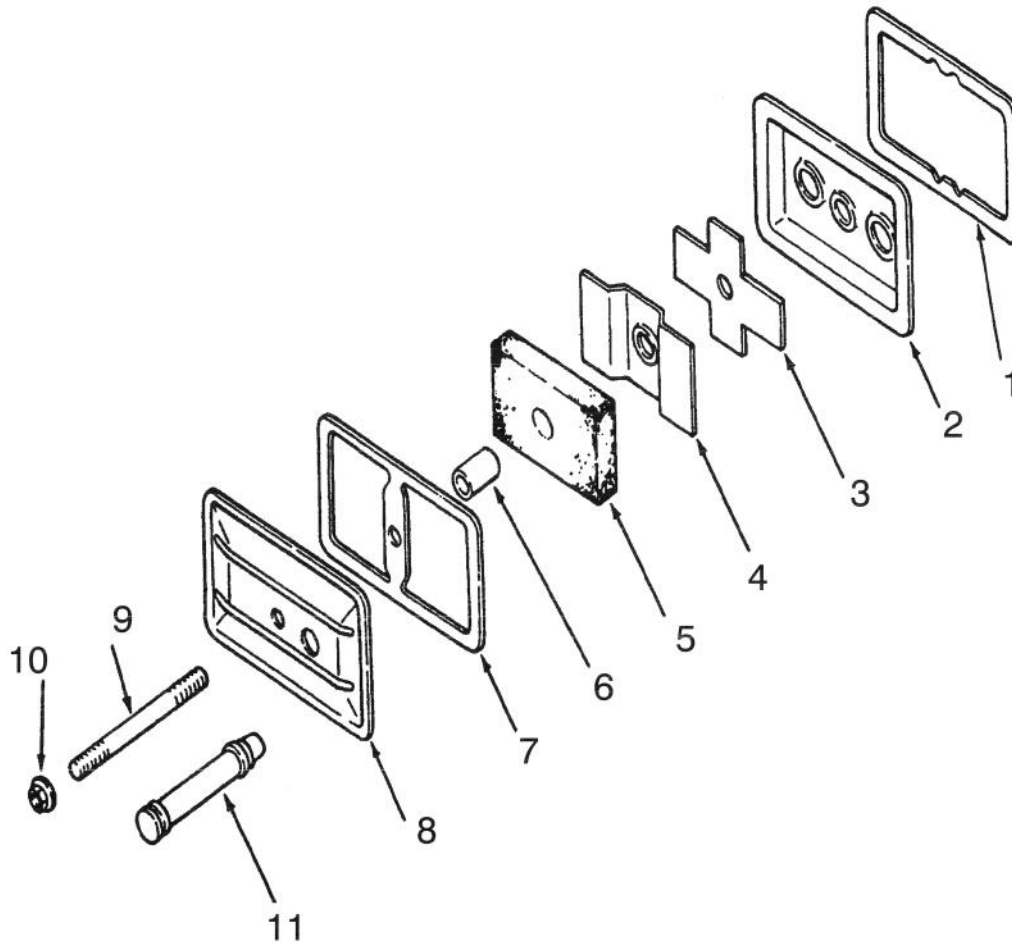


C-1485

BREATHER AND VENT

Ref. No.	Part No.	Description	No. Used
1	KH10058	Gasket	1
2	KH10072	Plate	1
3	KH10057	Reed	1
4	KH10143	Baffle	1
5	KH10275	Filter	1
6	KH10034	Seal	1

Ref. No.	Part No.	Description	No. Used
7	KH10149	Gasket	1
8	KH10298	Cover	1
9	KH10150	Stud	1
10	KH10629	Palnut	1
11	KH10309	Hose	1

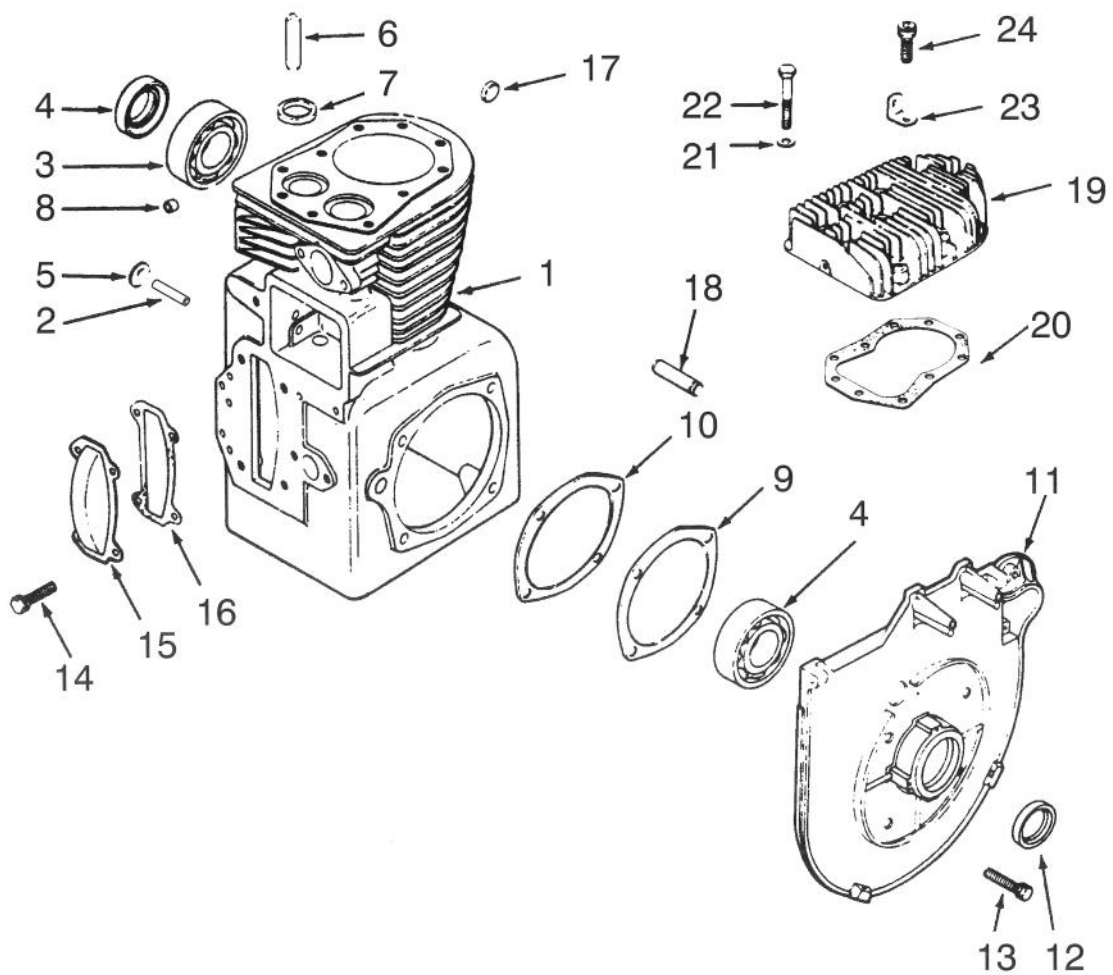


C-1561

CRANKCASE AND CYLINDER HEAD

Ref. No.	Part No.	Description	No. Used
1	92-7279	Short Block (Includes Crankshaft)	1
	92-7280	Miniblock (w/Out Crankshaft)	1
2	92-7258	Shaft - Governor Gear	1
3	KH10067	Ball Bearing	2
4	KH10269	Seal	1
5	KH10562	Plug	1
6	92-7259	Guide - Valve	2
7	KH10029	Insert - Exhaust Valve	1
8	KH10049	Bearing	1
9	KH10272	Gasket	1
10	KH10311	Gasket	1
11	KH10687	Plate - Bearing	1
12	KH10268	Seal	1

Ref. No.	Part No.	Description	No. Used
13	KH10549	Screw	4
14	KH10545	Screw	4
15	KH10661	Cover	1
16	KH10055	Gasket	1
18	KH10081	Shaft - Balance Gear	1
19	KH10261	Head - Cylinder	1
20	KH10700	Gasket	1
21	KH10145	Washer	9
22	KH10144	Screw	8
23	KH10312	Strap - Lifting	1
24	KH10290	Screw	1
*	KH10325	Set - Gasket w/ Seals	1
*	KH10258	Set - Gasket w/o Seals	1

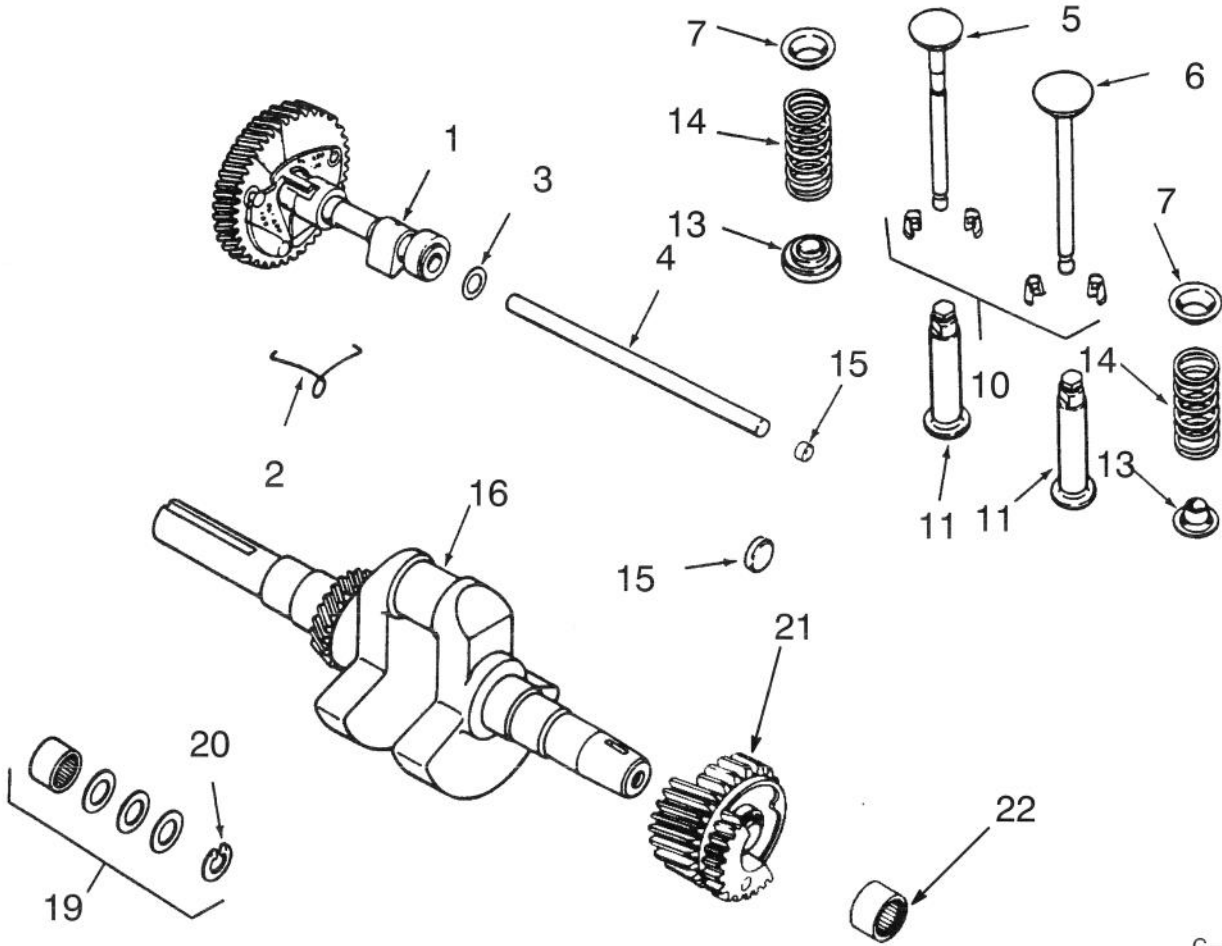


C-1560

CAMSHAFT, CRANKSHAFT AND VALVES

Ref. No.	Part No.	Description	No. Used
1	KH10259	Camshaft Assy (Incl. Ref.# 2)	1
2	KH10292	Spring	1
3	KH10147	Spacer .005	1
*	KH10148	Spacer .010	1
4	KH10310	Pin - Camshaft	1
5	KH10090	Valve - Exhaust	1
6	KH10071	Valve - Intake	1
7	KH10054	Retainer - Upper Spring	2
10	KH10221	Kit - Retainer	2
11	KH10539	Tappet - Intake Valve	2

Ref. No.	Part No.	Description	No. Used
13	KH10496	Rotator - Valve	2
14	KH10062	Spring	2
15	KH10617	Plug - Cup	1
16	KH10245	Kit - Crankshaft (Includes Flywheel Hdwr.)	1
19	KH10322	Kit - Spacer (Incl. Ref.#20)	2
20	KH10574	Retainer	1
21	KH10228	Gear Assembly (Incl. Ref. #22)	2
22	KH10267	Bearing - Needle	2

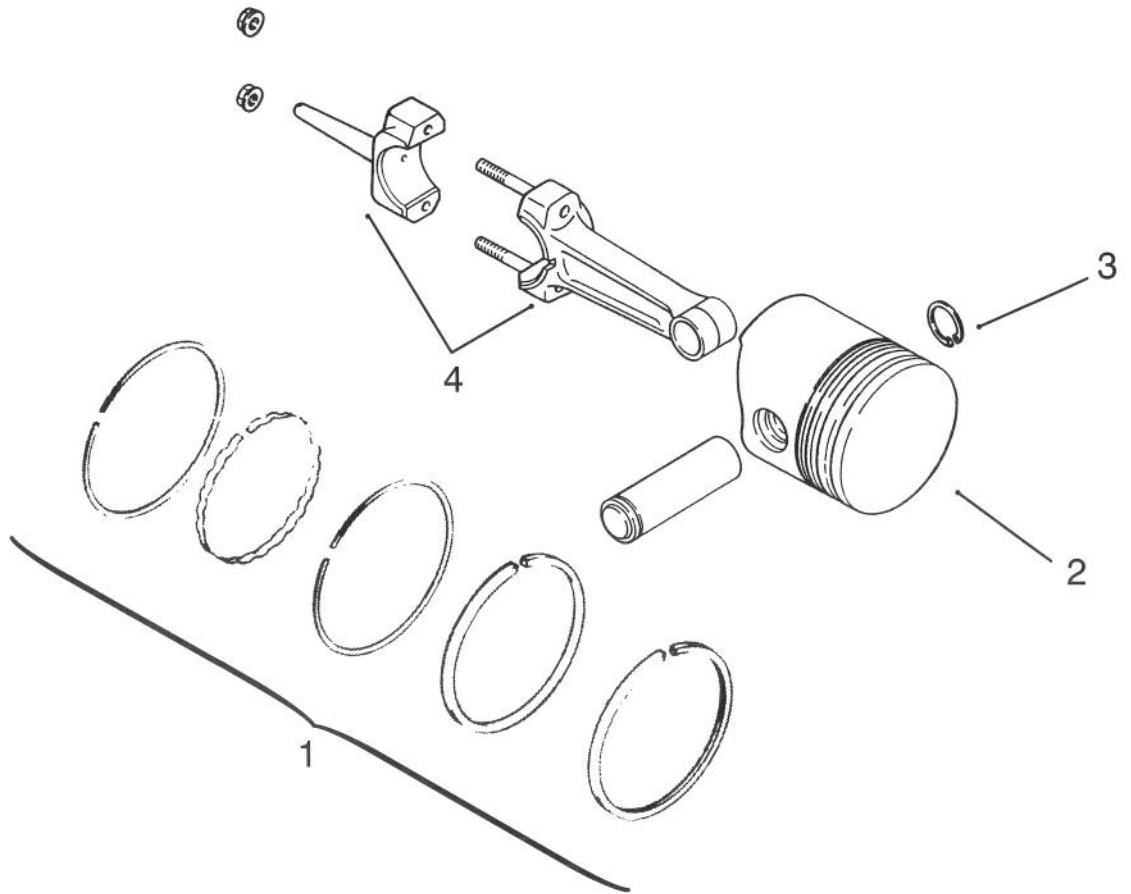


C-1563

PISTON AND RINGS

Ref. No.	Part No.	Description	No. Used
1	92-7273	Set - Ring, Std. & .003	1
*	92-7274	Set - Ring .010	1
*	92-7275	Set - Ring .020	1
*	92-7276	Set - Ring .030	1
2	92-7268	Piston w/Ring Set Std.	1
*	92-7269	Piston w/Ring Set .003	1

Ref. No.	Part No.	Description	No. Used
*	92-7270	Piston w/Ring Set .010	1
*	92-7271	Piston w/Ring Set .020	1
*	92-7272	Piston w/Ring Set .030	1
3	KH10262	Retainer - Piston Pin	2
4	92-7267	Rod - Connecting Std.	1
*	KH10695	Rod - Connecting .010	1

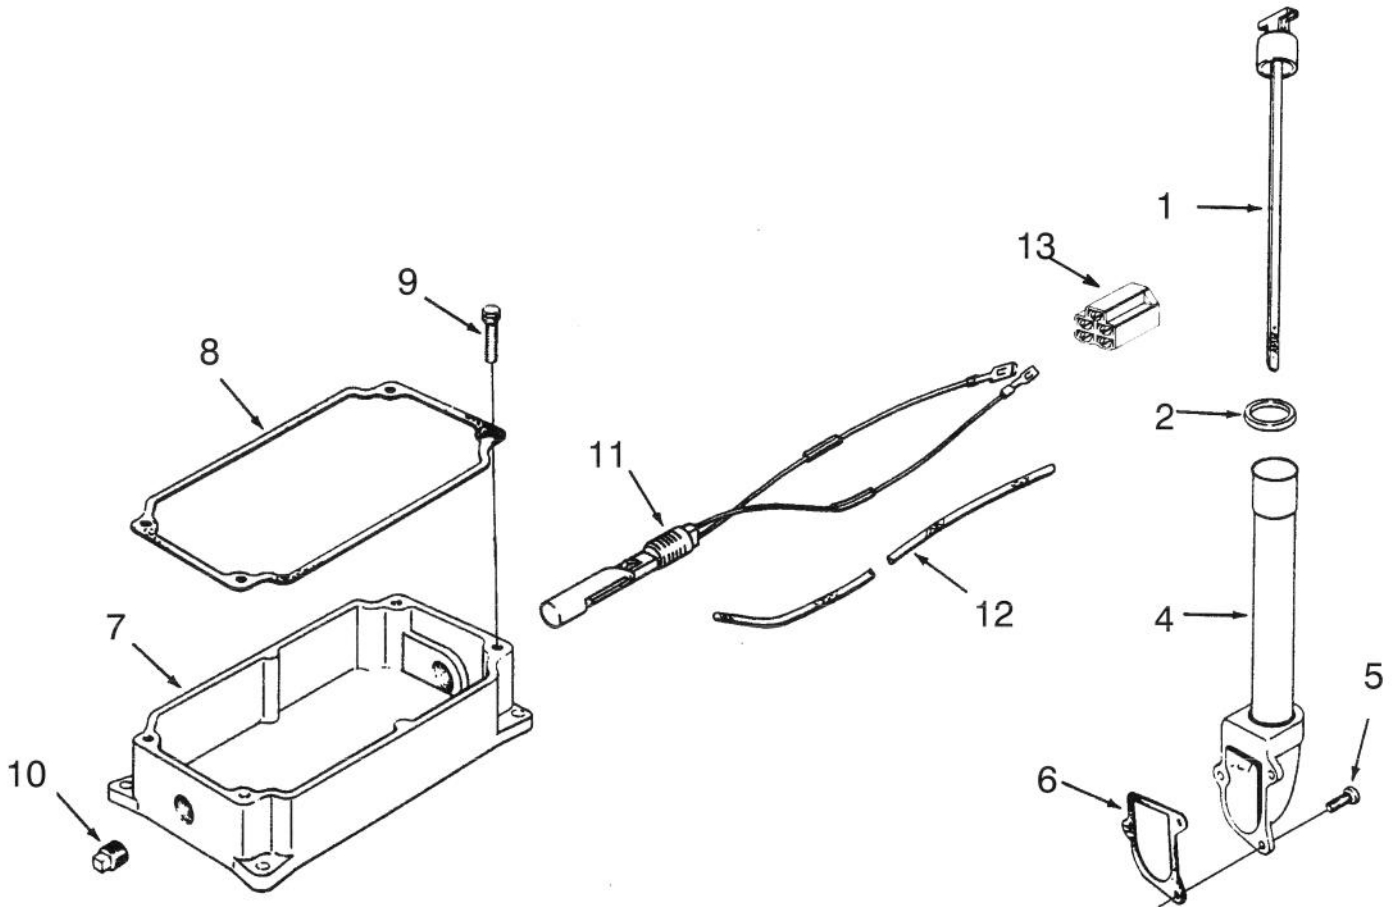


C-1562

OIL PAN AND DIPSTICK

Ref. No.	Part No.	Description	No. Used
1	KH10270	Dipstick	1
2	KH10201	"O"Ring	1
4	KH10266	Adapter - Oil Fill	1
5	KH10541	Screw	3
6	KH10088	Gasket	1
7	KH10248	Pan - Oil	1
8	KH10059	Gasket	1
9	KH10550	Screw	4

Ref. No.	Part No.	Description	No. Used
10	KH10620	Plug	4
11	92-7278	Kit - Float Switch (Incl. Ref.#12 & Decal)	1
12	KH10134	Sleeve	1
13	KH10345	Connector - Female (5-Contact)	1
*	KH10119	Decal - Float Switch	1

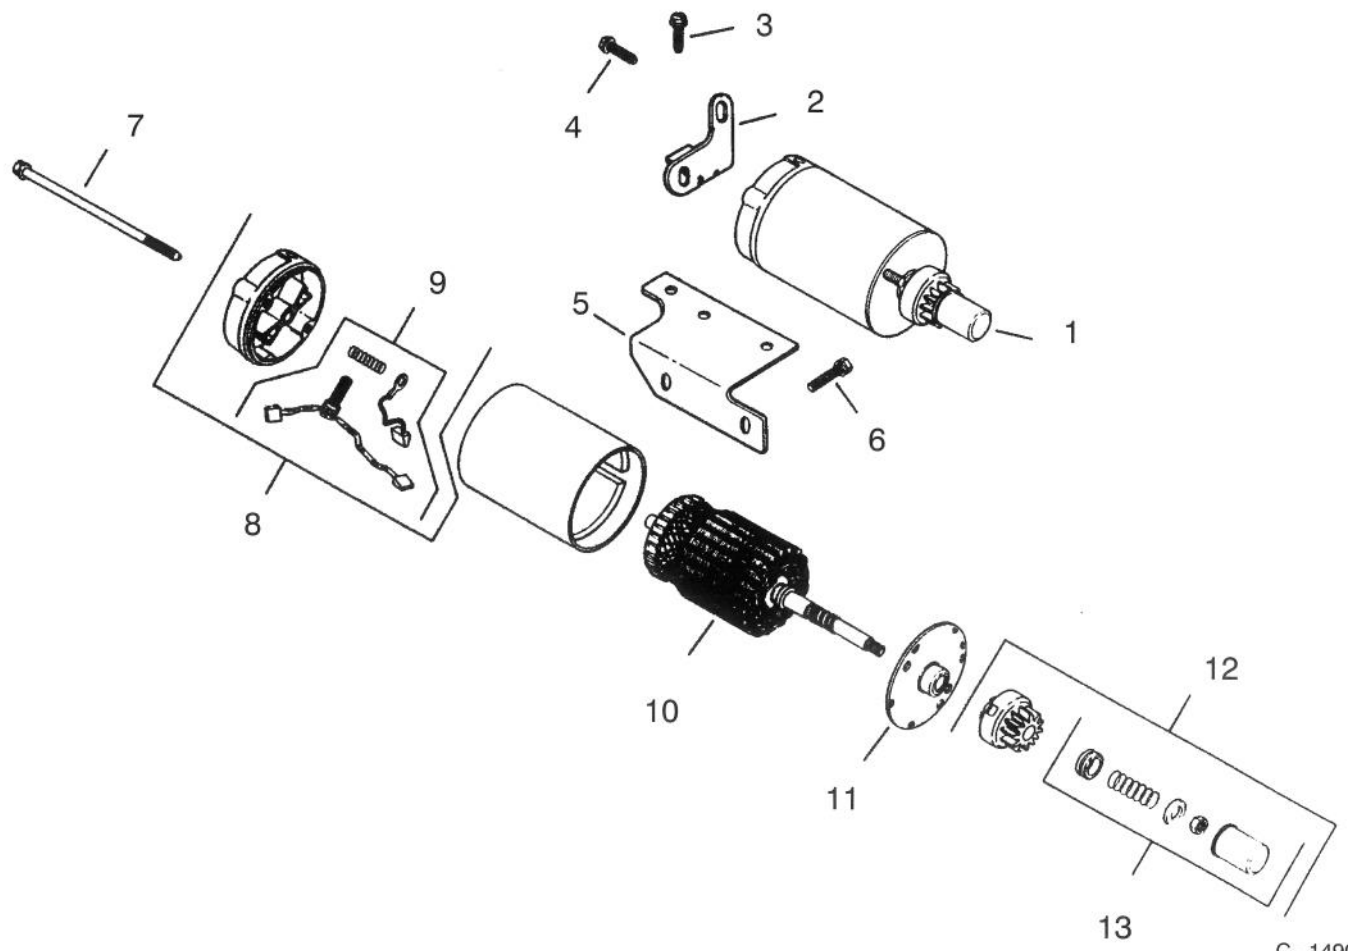


C-1490

STARTER

Ref. No.	Part No.	Description	No. Used
1	92-7260	Starter Assembly (Incl. Ref. # 9-15)	1
2	KH10244	Brace - Starter Tail	1
3	KH10610	Screw - Hex. Hd.	1
4	KH10607	Screw - Hex. Hd.	1
5	KH10304	Bracket - Starter	1
6	KH10549	Screw	2
7	KH10181	Bolt	2

Ref. No.	Part No.	Description	No. Used
8	KH10210	End Cap Ass'y (Incl. Ref.#9)	1
9	KH10515	Kit - Brush	1
10	KH10247	Armature	1
11	KH10209	Cap - Drive End	1
12	KH10323	Kit - Drive (Incl. Ref. #15)	1
13	KH10324	Kit - Drive Parts	1
*	KH10135	Tag - Caution	1
*	KH10549	Screw	1

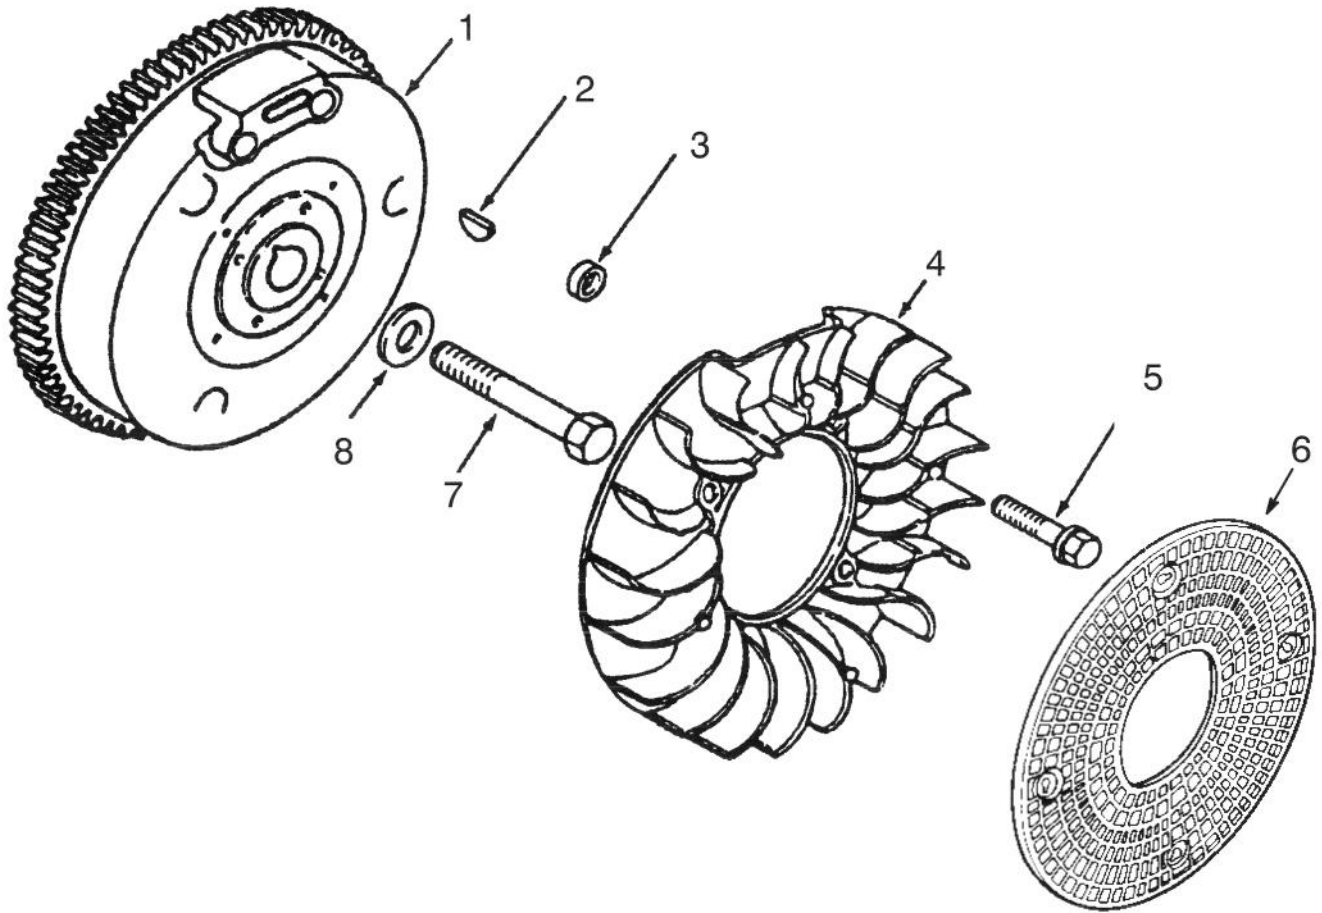


C-1564

FLYWHEEL

Ref. No.	Part No.	Description	No. Used
1	KH10263	Flywheel	1
2	KH10588	Key – Woodruff	1
3	KH10188	Spacer	4
4	KH10124	Fan	1

Ref. No.	Part No.	Description	No. Used
5	KH10107	Screw – Hex. Hd.	4
6	KH10126	Screen	1
7	KH10108	Screw	1
8	KH10666	Washer	1

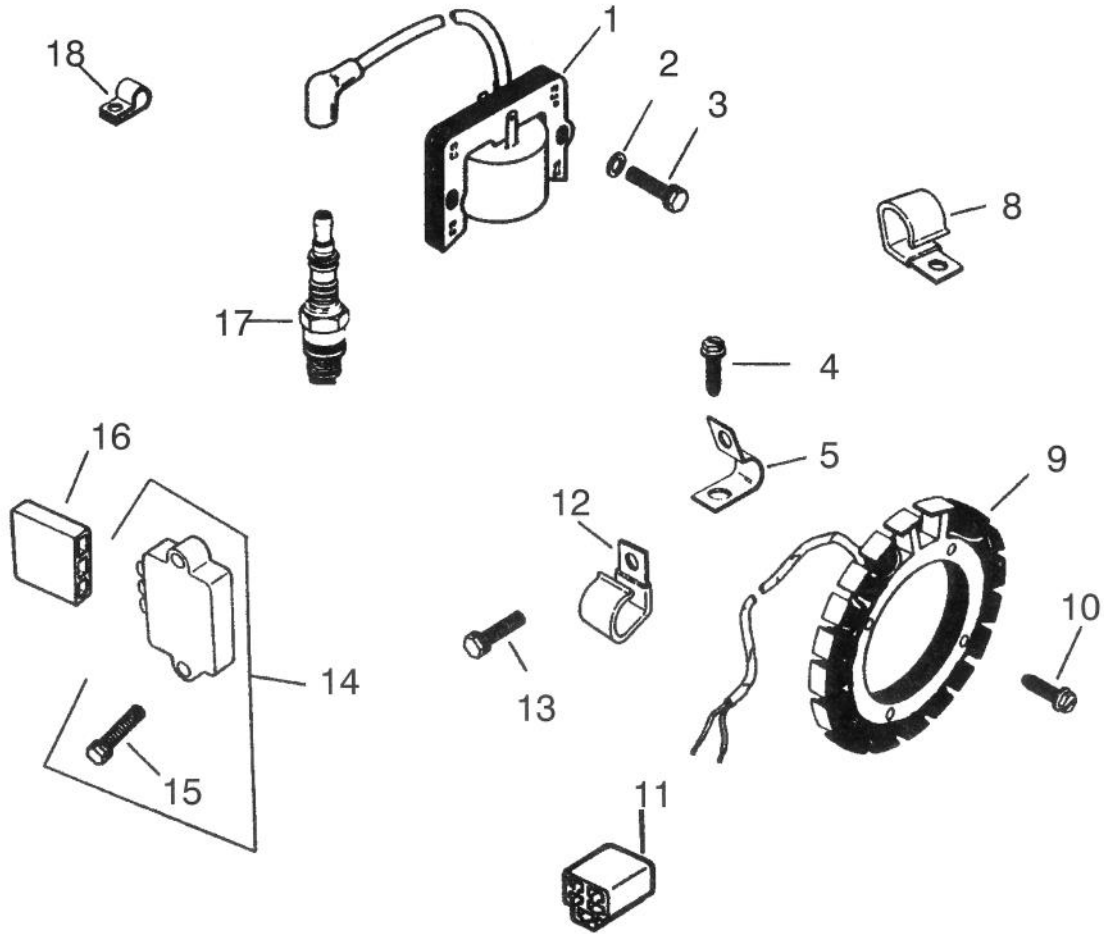


C-1493

IGNITION SYSTEM

Ref. No.	Part No.	Description	No. Used
1	KH10321	Module – Ignition	1
2	KH10570	Washer – Flat	1
3	KH10610	Screw	1
4	KH10606	Screw – Hex. Hd.	1
5	KH10618	Clip	1
8	92-7264	Clip	1
9	KH10091	Kit – Stator 15 am (Incl. Ref.#8)	1
10	KH10605	Screw – Pozidrive	4
11	KH10345	Connector	1
12	KH10344	Clip	1

Ref. No.	Part No.	Description	No. Used
13	KH10545	Screw	1
14	KH10673	Regulator – Rectifier	2
15	92-7266	Screw	2
16	KH10082	Connector	1
17	92-7265	Plug – Spark	1
18	KH10010	Clip – Hi-Tension	1
*	KH10313	Lead – Violet, Regulator Rectifier to Connector	1
*	KH10315	Lead – Wire, Module to Connector	1

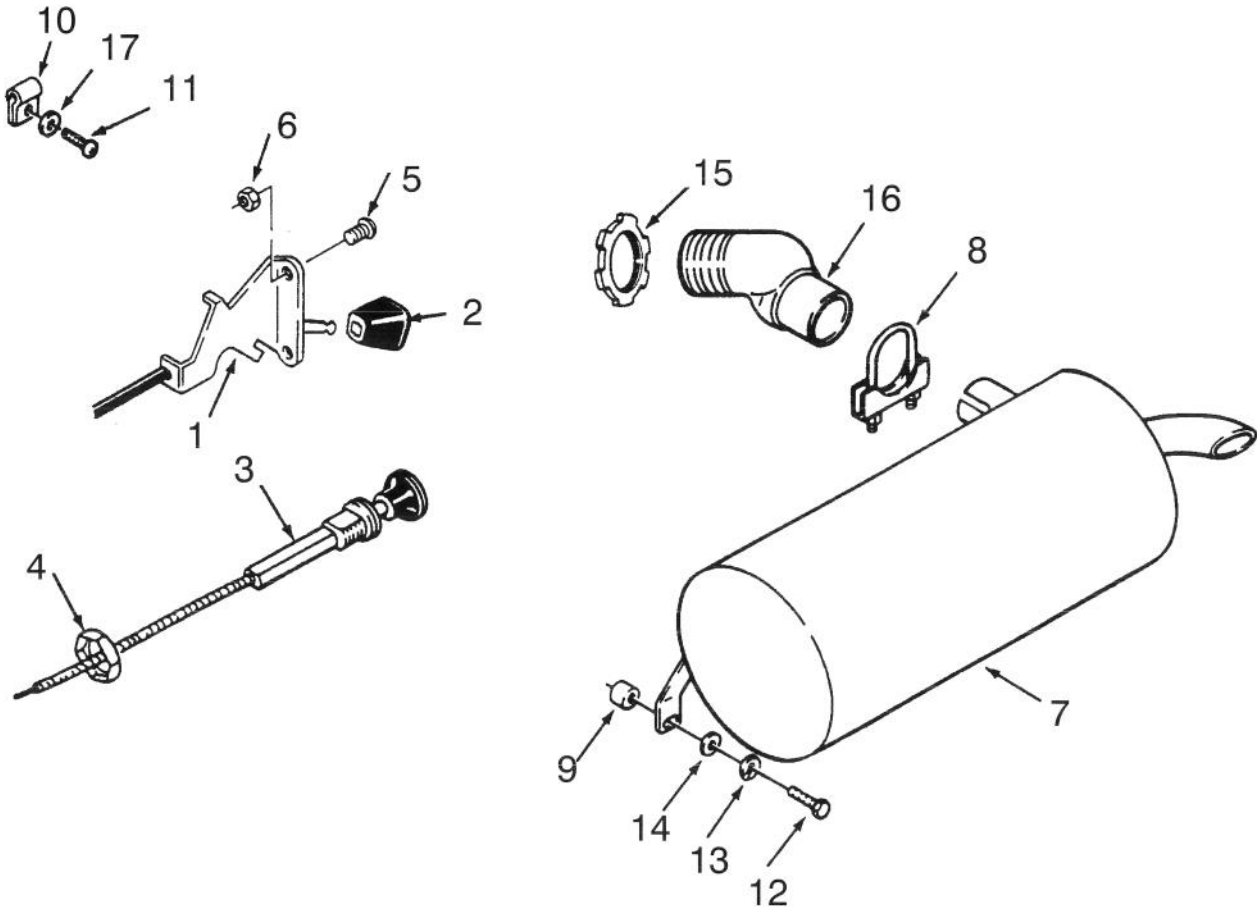


C-1495

THROTTLE CHOKE AND EXHAUST

Ref. No.	Part No.	Description	No. Used
1	115854	Control - Throttle	1
2	116454	Knob - Throttle Control	1
3	112214	Choke Control	1
4	109530	Nut - Pal	1
5	910792	Screw	2
6	9157404	Nut	2
7	112213	Muffler	1
8	106858	Clamp	1
9	6876	Spacer	1

Ref. No.	Part No.	Description	No. Used
10	KH10344	Clamp - Cable	1
11	KH10610	Screw - Hex. Hd.	1
12	322-6	Bolt	1
13	3253-4	Washer	1
14	3256-66	Washer	1
15	KH10535	Nut - Lock	1
16	KH10278	Elbow	1
17	KH10570	Washer	1

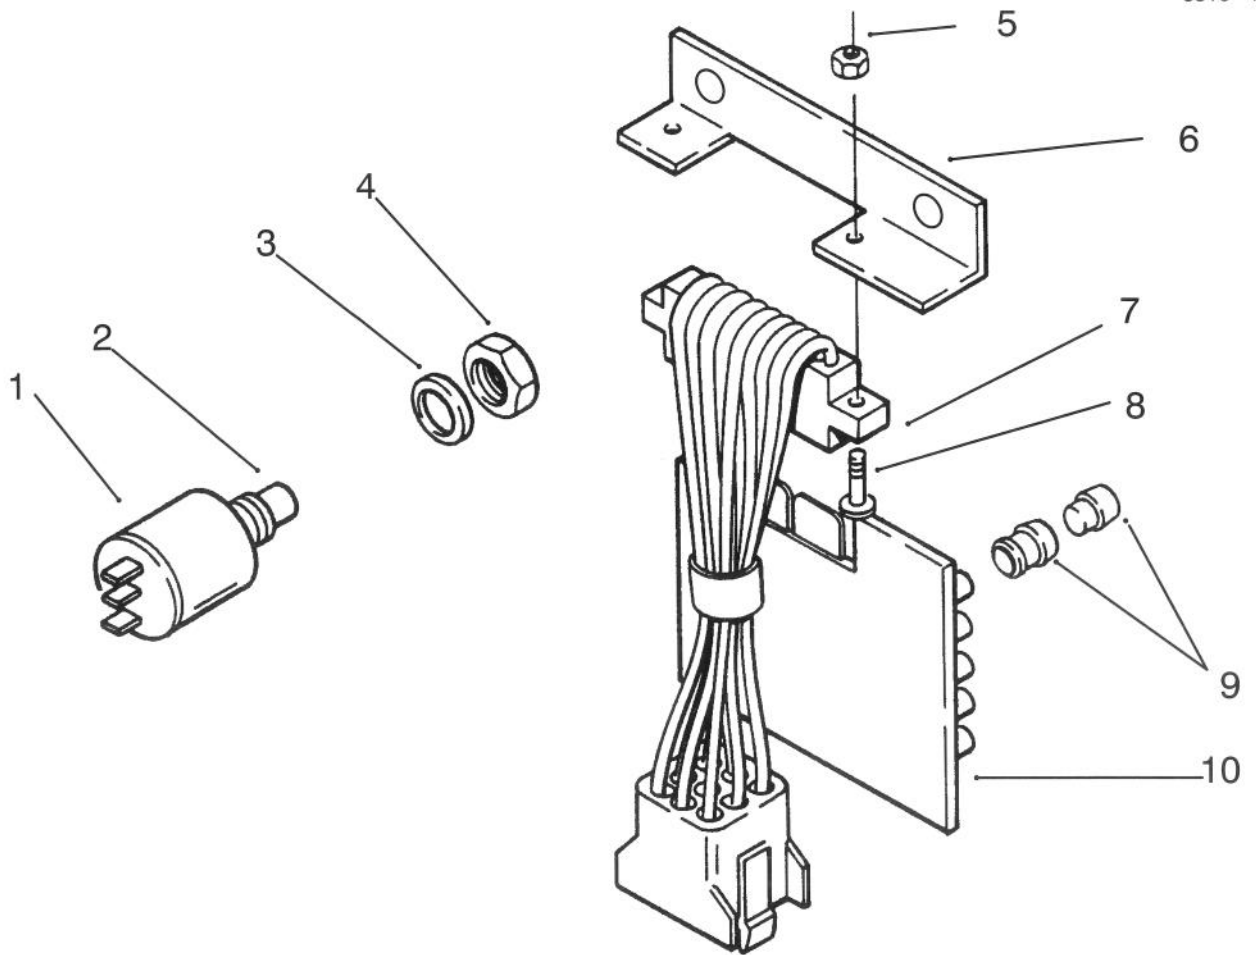


C-1497

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	116796	Test Switch (Incl. Ref. #2-4)	1
2	117217	Switch - Button	1
3	111767	Washer	1
4	111359	Nut - Hex	1
5	9157324	Nut - Lock	2


Ref. No.	Part No.	Description	No. Used
6	112506	Bracket	1
7	116723	Harness - Wiring	1
8	9107562	Screw	2
9	111343	Bushing Assembly & Indicator Lens	5
10	114825	PC Board w/Lights	1

ELECTRICAL SYSTEM

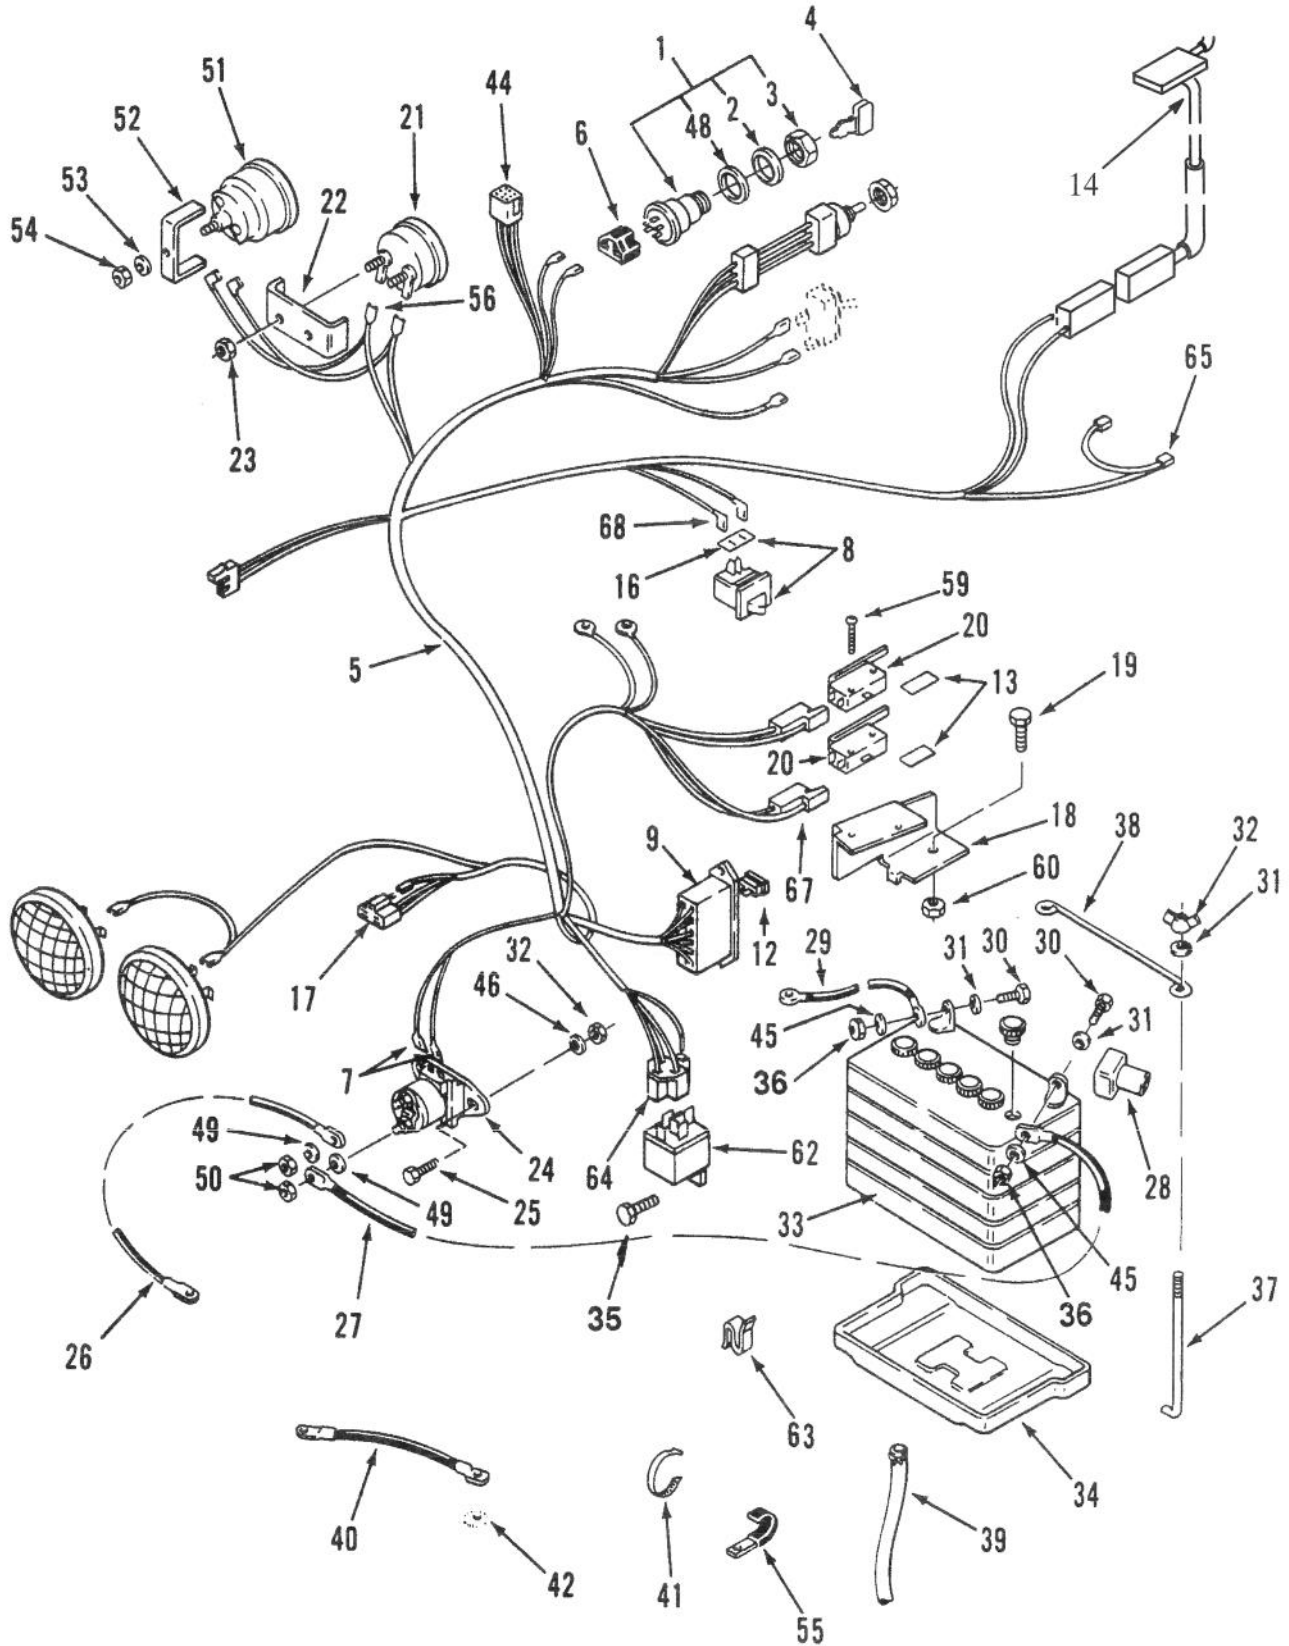

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	116338	Switch – Ignition	1	30	321-4	Bolt	2
	111216	Switch – Ignition	1	31	3256-22	Washer	4
2	920160	Washer – Intl. T	1	32	116497	Nut	4
3	101884	Nut – Special	1	33	104962	Battery	1
4	62-7770	Key – Ignition, Padded	1	34	106948	Tray – Battery	1
5	79-3590	Harness Assy – Wiring	1		9107944	Screw	1
6	104926	Switch – Connector Body			32146-7	Nut	2
		Ignition, Part of 5	1	37	113969	Hook – Battery Hold Down	2
7	518105	Terminal – Part of 5	1	38	113010	Hold Down – Battery	1
8	103480	Switch – Clutch Interlock		39	114720	Tube – Drain	1
		(Incl. Ref.# 16)	1	40	109910	Cable – Ground	1
9	120930	Body – Fuse, Part of 5	1	41	100571	Tie – Cable	1
12	109355	Fuse 15 Amp ATO or ATC	1	42	3254-2	Washer – Intl. T	1
	109102	Fuse 25 Amp ATO or ATC	1	44	102651	Terminal – Female Part of 5	8
	NN10277	Fuse 30 Amp ATO or ATC	1	45	3253-3	Washer – Lock	4
13	111642	Barrier – Switch Insulator	2	48	920262	Washer – Special	1
14	38-1420	Switch – Seat	1	49	3253-3	Washer – Lock	2
16	110502	Shield – Dirt	1	50	3218-1	Nut	2
17	112185	Body – Connector, Part of 5	1	51	78-0020	Meter – Hour	
18	115411	Support – Switch	1			(Incl. Ref.# 52-54)	1
19	926671	Bolt	1	52	114017	Clamp – Steel	1
20	111332	Switch – PTO Interlock	2	53	920120	Washer – Lock	1
21	79-0060	Voltmeter	1	54	915962	Nut – Hex	1
22	78-0080	Clamp – Voltmeter, Back	1	55	8830	Clip	1
23	5924	Nut	2	59	910478	Screw	2
24	47-1910	Solenoid	1	60	915732	Nut	2
25	960152	Bolt – Whizlock	2	62	116397	Relay	1
26	111069	Cable – Solenoid To Starter	1	63	519337	Clip – Cable	1
27	111074	Cable – Battery, Positive	1	64	518105	Terminal – Part of 5	1
28	109553	Cover – Terminal	1	65	6921	Terminal – Part of 5	1
29	111069	Cable – Battery, Negative	1	68	518077	Terminal – Part of 5	2

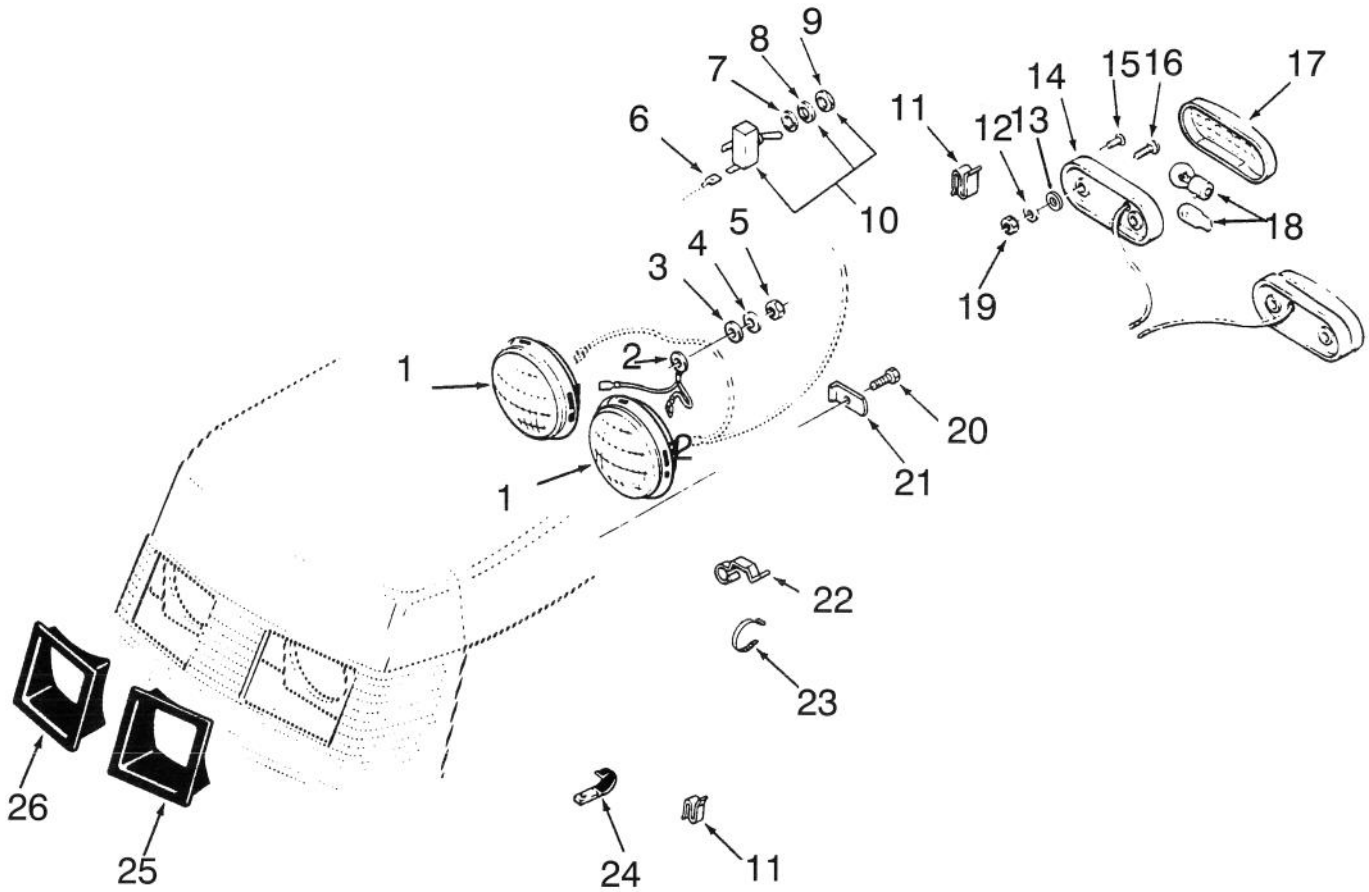


C-1498

ELECTRICAL SYSTEM

Ref. No.	Part No.	Description	No. Used
1	102881	Headlight	2
2	108130	Wire - Headlight Ground	1
3	3256-23	Washer	1
4	3254-2	Washer - Lock	1
5	3296-29	Nut	1
6	518104	Terminal	1
7	920259	Washer - Special	1
8	102950	Ring - Retaining	1
9	113179	Nut	1
10	102138	Switch - Light	1
11	3023	Clip - Small	1
12	3256-21	Washer	4
13	3254-1	Washer - Lock	4
14	105202	Base - Taillight, w/Bulb	2

Ref. No.	Part No.	Description	No. Used
15	3269-3	Rivet - Pop	4
16	910808	Screw	4
17	112564	Lens - Taillight	2
18	8043	Bulb - Light, Metal Base	2
*	109045	Bulb - Light, All Glass	2
19	915551	Nut	4
20	926671	Bolt	2
21	109459	Clamp	2
22	8519	Clip - Large	1
23	100571	Tie - Cable	1
24	8830	Clip	1
25	109495	Retainer - Headlight LH	1
26	109494	Retainer - Headlight RH	1

*Not Illustrated

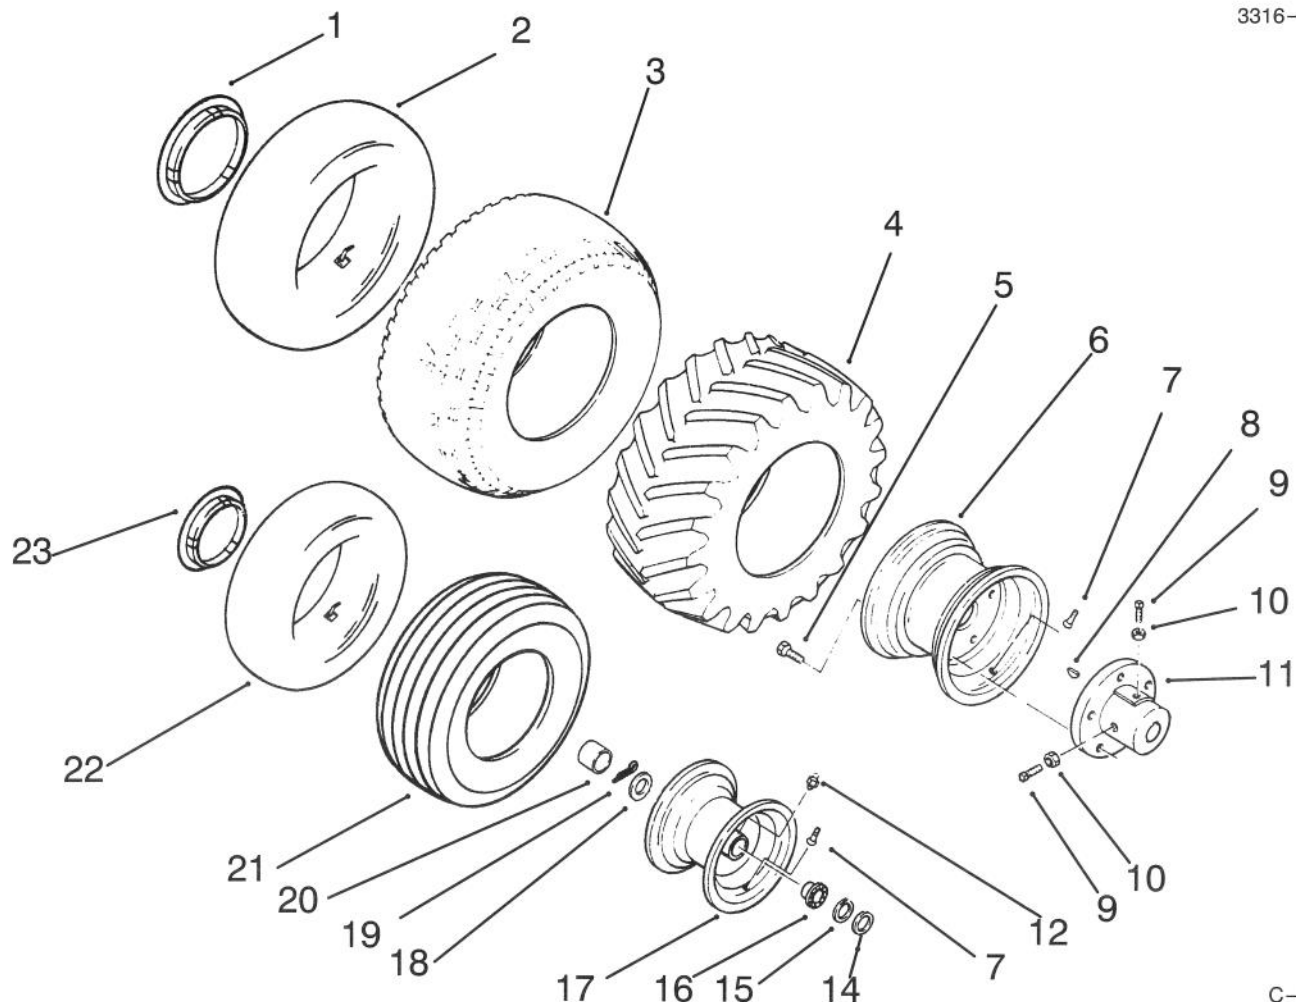


C-1499

WHEELS AND TIRES

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	114428	Logo - Hub Cap 12" (Opt.)	2	12	109500	Fitting - Grease	2
2	7007	Tube - Rear	2	14	5210	Washer - Shim .015	2
*	100291	Tube - Cleat Tires" (Opt.)	2	15	1278	Washer - Shim .050	4
3	116744	Tire - Turf Trac, Rear	2	16	110513	Bearing - Ball	4
4	7607	Tire - Cleat, Rear" (Opt.)	2	17	78-1660	Wheel Assembly - Front (Incl. Ref.# 7, 12, & 16)	2
5	83-2720	Bolt - Lug	10	18	111952	Washer - Special Hub Cap	2
6	111516	Wheel - Rear	2	19	3272-17	Pin - Cotter	2
7	5108	Stem - Valve	4	20	111951	Hubcap	2
8	937108	Key - Woodruff	2	21	117127	Tire - Turf Trac, Front	2
9	3243-5	Screw - Set	4	22	100079	Tube - Front	2
10	3218-3	Nut	4	23	114427	Logo - Hub Cap 6" (Opt.)	2
11	105763	Hub - Rear	2				

*Not Illustrated

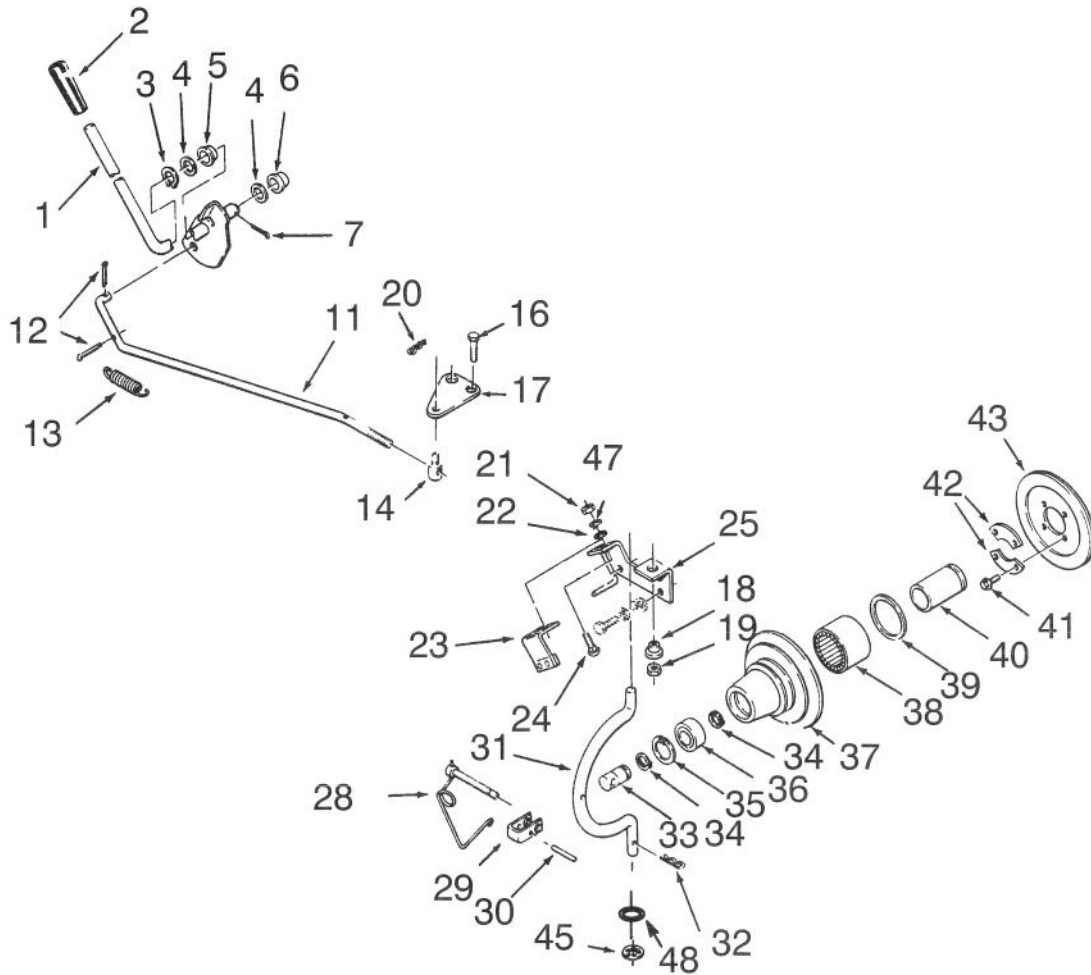


C-1500

PTO CLUTCH AND CONTROL

Ref. No.	Part No.	Description	No. Used
1	111234	Lever - PTO Clutch	1
2	9038	Grip	1
3	106649	Ring - Grip	1
4	3765	Washer - Shim	2
5	5666	Bushing - Nyliner	1
6	5983	Bushing	1
7	3272-10	Pin - Cotter	1
11	111052	Rod - PTO Clutch	1
12	3272-10	Pin - Cotter	2
13	103125	Spring	1
14	110656	Trunnion	1
16	323-7	Bolt	1
17	110669	Plate - PTO	1
18	104859	Spacer	1
19	3296-39	Nut	1
20	933505	Pin - Cotter	1
21	3218-1	Nut	2
22	3256-22	Washer	2
23	110665	Bracket - Engine	1
24	3229-25	Bolt - Carriage	2

Ref. No.	Part No.	Description	No. Used
25	111240	Bracket - Engine	1
28	111314	Pin - Locking	1
29	113107	Clevis	1
30	933274	Pin - Spirol	1
31	113108	Rod - PTO Housing	1
32	933506	Pin - Cotter	1
33	102872	Shaft - Stub	1
34	32120-72	Ring - Retaining	2
35	936032	Ring - Retaining	1
36	109842	Bearing - Ball	1
37	103478	Housing - Pulley	1
38	106769	Bearing - Needle	1
39	6663	Seal	1
40	6658	Race - Bearing	1
41	321-3	Bolt - Nylok	4
42	6659	Retainer	2
43	114881	Facing - Clutch Plate	1
45	106695	Push-On Ring	1
47	3253-3	Washer - Lock	1
48	3256-27	Washer	1

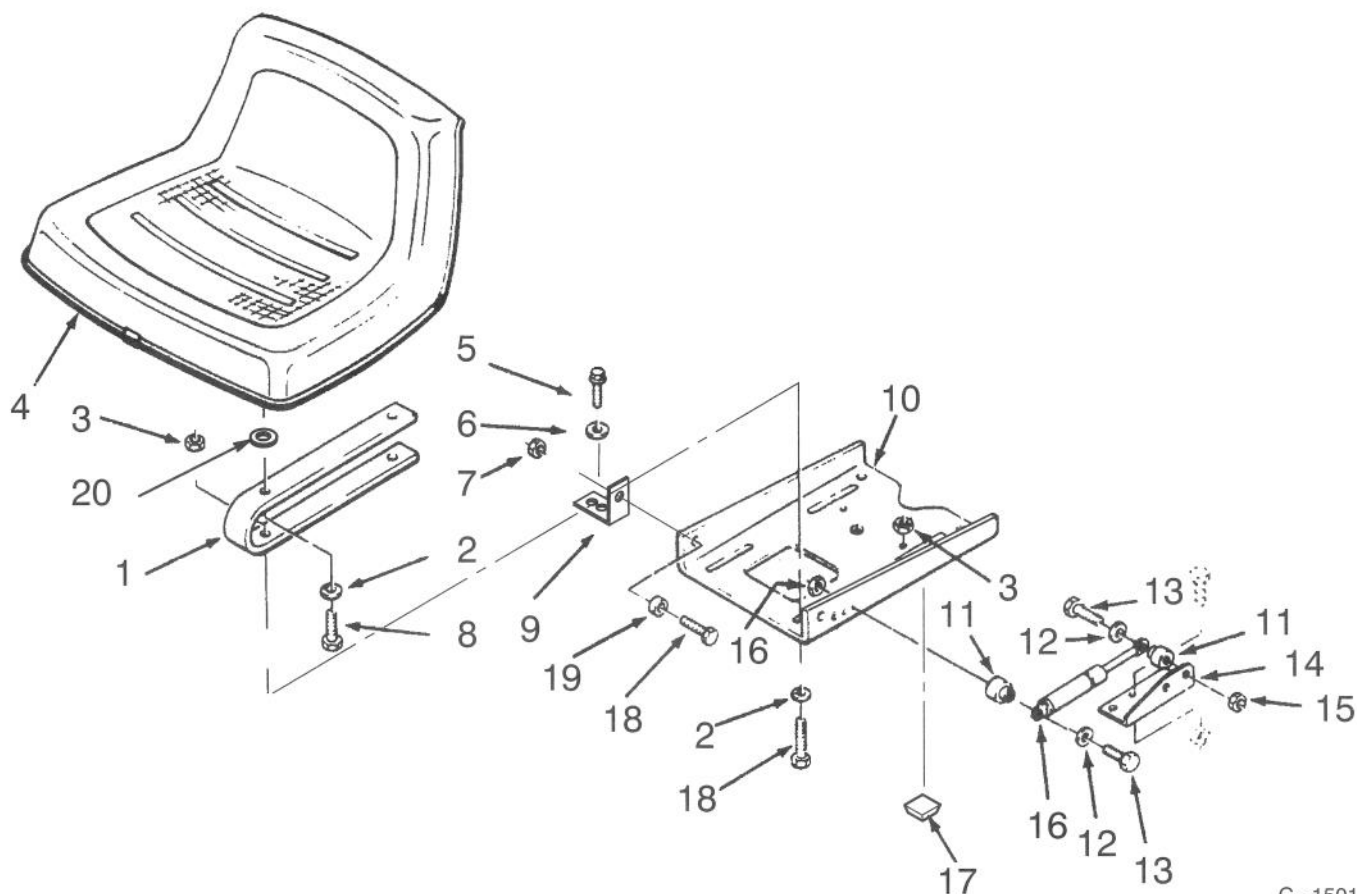


C-1501

SEAT

Ref. No.	Part No.	Description	No. Used
1	110920	Spring - Seat	2
2	3253-4	Washer - Lock	12
3	3296-29	Nut	6
4	79-0670	Seat	1
5	913464	Bolt	4
6	3256-23	Washer	8
7	3296-29	Nut	2
8	322-5	Bolt	4
9	105524	Bracket - Pivot	2
10	78-2990	Plate - Seat Pivot	1

Ref. No.	Part No.	Description	No. Used
11	114344	Spacer	2
12	3256-22	Washer	2
13	321-8	Bolt	2
14	114345	Bracket	1
15	3296-42	Nut	2
16	114343	Spring - Gas	1
17	111071	Bumper	2
18	322-4	Bolt	6
19	105503	Bushing	2
20	109989	Spacer	4

*Not Illustrated

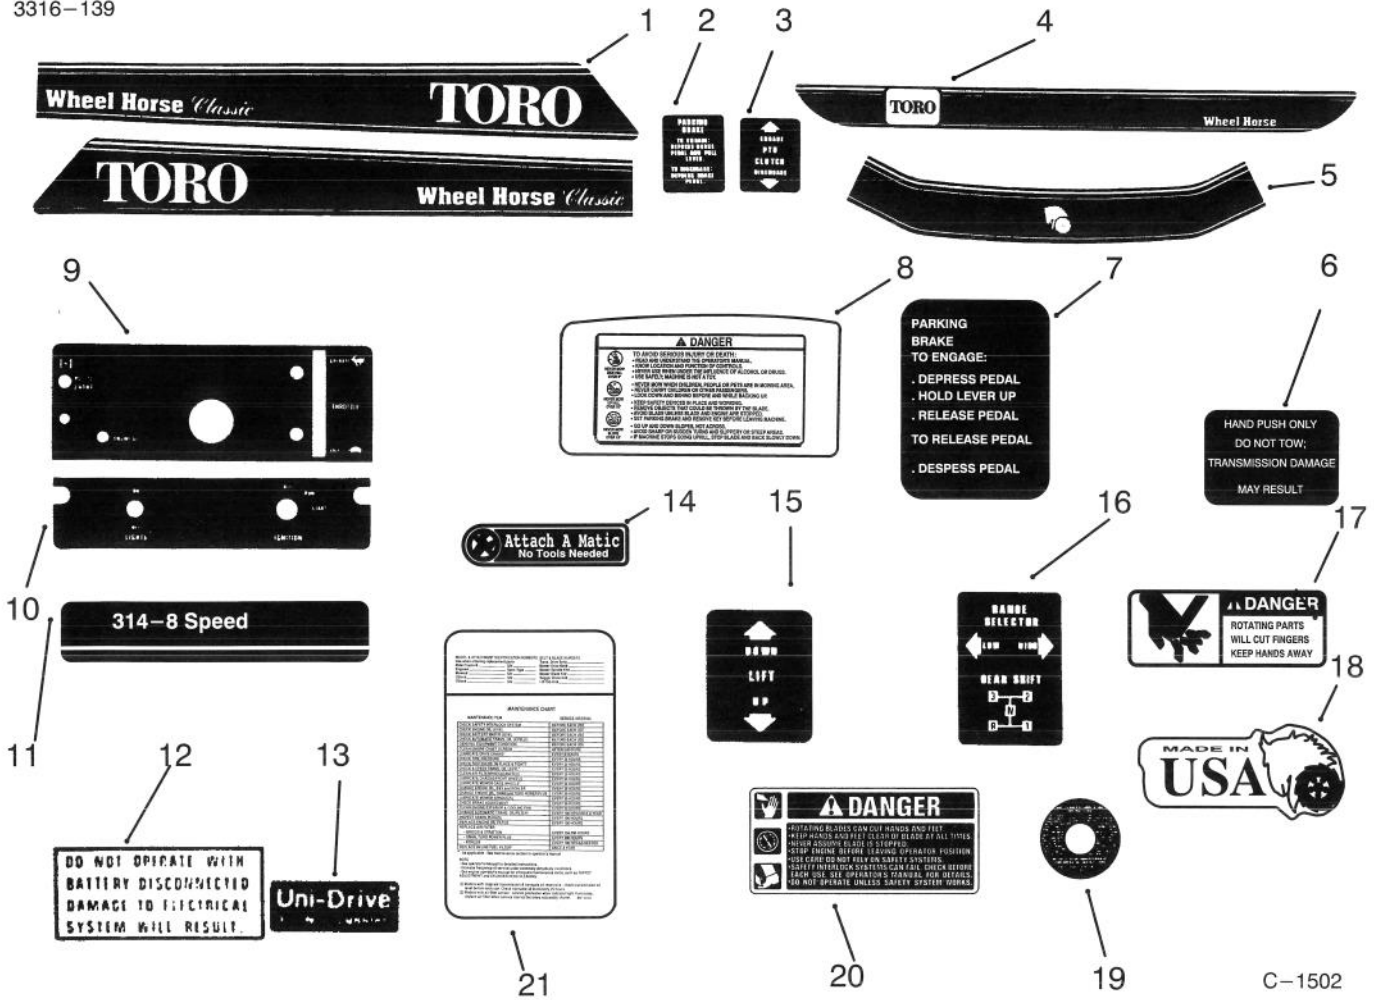

DECALS

Ref. No.	Part No.	Description	No. Used
1	79-4460	Decal - Hood RH	1
	79-4450	Decal - Hood LH	1
2	111510	Decal - Parking Brake	1
3	111960	Decal - PTO Clutch	1
4	117760	Decal - Rear Fender	1
5	117509	Decal - Front Hood	1
6	116446	Decal - Do Not Toe	1
7	116445	Decal - Parking Brake	1
8	88-0020	Decal - Rear Hood Danger	1
9	119190	Decal - Lower Dash	1
10	119220	Decal - Switch Plate	1
11	92-1530	Decal - 314-8-Speed	2

Ref. No.	Part No.	Description	No. Used
12	111926	Decal - Electrical System	1
13	104955	Decal - Unidrive	1
14	115197	Decal - Attach-A-Matic	1
15	112168	Decal - Lift	1
16	111534	Decal - Hi-Low Shift	1
17	88-2790	Decal - Danger	1
18	117242	Decal - Made in U.S.A.	1
19	KH10191	Decal - Air Cleaner/Lub	1
20	79-0370	Decal - Danger	1
21	88-3200	Decal - Maintenance	1
*	92-0982	Loose Parts Package	1

C-1502

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
1121	Key	15	18	1	7007	Tube - Rear	41	2	2
1239	Screw - Set, Special	7	47	1	7201	Shaft - Input	5	19	1
1243	Cup - Plug	5	28	1	7204	Gear Assembly	5	21	1
1278	Washer - Shim	11	13	1	7205	Gear - Sliding	5	24	1
1278	Washer - Shim	9	17	3	7206	Gear - Reduction	5	25	1
1278	Washer - Shim .050	41	15	4	7207	Bearing - Needle	5	26	2
1481	Fitting - Grease, 45°	9	3	2	7208	Shaft - Reduction Gear	5	27	1
1504	Bushing - Bronze	7	37	2	7213	Bolt - Detent	7	57	1
1516	Bushing - Reverse Idler	7	43	1	7214	Lever - Shift Hi-Low Range	7	58	1
1518	Bearing - Needle	5	22	4	7269	Gear Assembly	7	36	1
1523	Bearing - Needle	5	16	1	7418	Washer - Thrust	5	20	1
1529	Bearing - Needle	5	12	1	7451	Pulley - Idler	11	42	1
1532	Bearing - Needle	5	9	2	7456	Clamp	21	11	4
1542	Bearing - Needle	5	10	1	7466	Pulley - Engine Drive	3	1	1
1644	Hitch - Drawbar	13	9	1	7473	Belt - Drive	3	6	1
2844	Washer - Special	11	3	1	7607	Tire - Cleat, Rear (Opt.)	41	4	2
3023	Clip	19	26	1	7879	Bushing	11	24	2
3023	Clip - Small	40	11	1	7896	Washer - Bowed	11	12	1
3503	Fork - Shift	5	33	2	7896	Washer - Bowed	9	29	1
3517	Ball - Detent	7	55	3	8043	Bulb - Light, Metal Base	40	18	2
3527	Gear - Reduction	7	38	1	8130	Retainer - Spring	15	3	1
3577	Cover - Dust	7	49	1	8519	Clip - Large	40	22	1
3624	Spring	15	4	1	8616	Spring	13	7	2
3765	Washer - Shim	42	4	2	8830	Clamp	15	52	1
3765	Washer - Shim	11	21	1	8830	Clip	40	24	1
3909	Pin - Reverse Idler	7	42	1	8830	Clip	39	55	1
3912	Gasket - Transmission	7	46	1	9038	Grip	42	2	1
3915	Pin - Locating	5	15	2	9038	Grip	13	22	1
4204	Gear Assembly, Reverse	7	41	1	9416	Bearing - Needle	5	11	2
4944	Button - Plug	15	8	1	9547	Washer - Thrust	7	50	1
5108	Stem - Valve	41	7	4	9593	Band - Brake	11	4	1
5173	Gear - 2nd & 3rd	5	29	1	9598	Plate - Back-Up	11	7	1
5174	Gear - 1st & Reverse	5	30	1	100079	Tube - Front	41	22	2
5175	Gear Assembly	5	23	1	100291	Tube - Cleat Tires (Opt.)	41	*	2
5210	Washer - Shim	9	16	6	100441	Seal - Brake Shaft	5	18	1
5210	Washer - Shim .015	41	14	2	100442	Seal - Input Shaft	5	13	1
5280	Knob - Height Control	15	40	1	100443	Seal - Axle	5	14	2
5614	Pin - Shift	5	35	1	100571	Tie - Cable	40	23	1
5615	Rail - Shift, Front	5	31	1	100571	Tie - Cable	39	41	1
5616	Rail - Shift, Rear	5	32	1	101161	Trunnion - Clutch Rod	11	22	1
5618	Ring - Retaining	9	8	1	101623	Gear - Differential Pinion	7	70	8
5618	Ring - Retaining	13	12	2	101625	Shaft - Pinion	7	52	1
5638	Axle - Front	9	1	1	101626	Gear 44 Tooth	7	53	1
5666	Bushing - Nyliner	42	5	1	101707	Lock	13	6	1
5701	Ring - Retaining	15	29	1	101711	Housing - Front Hitch	13	1	1
5924	Nut	39	23	2	101750	Rod	13	3	1
5979	Bushing - Hood Pivot	17	26	2	101751	Rod - Front Hitch Lock	13	4	1
5983	Bushing	42	6	1	101847	Dipstick	7	44	1
6216	Pin & Plate	9	4	1	101850	Rod - Hood Stop	17	8	1
6229	Bearing	15	28	1	101884	Nut - Special	39	3	1
6397	Bearing	9	23	1	101889	Gear - Differential Axle	7	71	2
6472	Bearing - Flanged	9	12	1	102025	Spacer	11	36	1
6542	Grip - Lift Lever	15	6	1	102138	Switch - Light	40	10	1
6658	Race - Bearing	42	40	1	102644	Plate - Mid Hitch	13	15	2
6659	Retainer	42	42	2	102651	Terminal - Female Part of 5	39	44	8
6663	Seal	42	39	1	102703	Nipple - Transmission Fill	7	45	1
6739	Trunnion	15	20	1	102809	Nut - Special	11	39	1
6820	Grip	11	35	1	102872	Shaft - Stub	42	33	1
6876	Spacer	36	9	1	102881	Headlight	40	1	2
6921	Terminal - Part of 5	39	65	1	102950	Ring - Retaining	40	8	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
102974	Gear Assembly	7	51	1	106948	Tray - Battery	39	34	1
103125	Spring	42	13	1	107069	Clip	21	8	3
103347	Rod - Clutch	11	14	1	107069	Nut - Speed	19	15	6
103478	Housing - Pulley	42	37	1	107374	Washer - Special	7	66	4
103480	Switch - Clutch Interlock	39	8	1	107677	Spring - Brake Return	11	40	1
103543	Bell Crank - Brake Linkage	11	23	1	107951	Bracket - Fender Front	21	14	1
103628	Spring - Return	11	41	1	107975	Guard - Belt	21	1	1
103787	Line - Fuel 62"	26	26	1	108130	Wire - Headlight Ground	40	2	1
104047	Bushing	26	24	1	108457	Nut - Push	21	32	1
104048	Valve - Fuel Shut-Off	26	25	1	108464	Support - Fuel Tank, LH	21	19	1
104248	Grommet	19	18	1	108563	Lever - Lift	15	1	1
104859	Spacer	42	18	1	108565	Shaft	15	46	1
104926	Switch - Connector Body	39	6	1	108758	Knob - Gear Shift	7	54	1
104955	Decal - Unidrive	44	13	1	108881	Nut	7	67	4
104955	Decal - Unidrive	7	76	1	108898	Clamp	26	27	2
104962	Battery	39	33	1	108903	Clamp - Tube	15	31	1
105061	Gear - Differential Ring	7	68	1	109045	Bulb - Light, All Glass	40	*	2
105202	Base - Taillight, w/Bulb	40	14	2	109102	Fuse 25 Amp ATO or ATC	39		1
105269	Shaft-Drawbar Hitch	13	10	1	109189	Bearing	9	24	1
105316	Cap-Lock Rod	13	8	2	109262	Washer - Special	9	32	2
105453	Key	3	3	1	109355	Fuse 15 Amp ATO or ATC	39	12	1
105503	Bushing	43	19	2	109459	Clamp	40	21	2
105524	Bracket - Pivot	43	9	2	109494	Retainer - Headlight RH	40	26	1
105763	Hub - Rear	41	11	2	109495	Retainer - Headlight LH	40	25	1
105797	Ring - Retaining	13	5	8	109500	Fitting - Grease	41	12	2
105797	Ring - Retaining	17	6	2	109530	Nut - Pal	36	4	1
105845	Tube - Rear Lift Cable	15	30	1	109553	Cover - Terminal	39	28	1
105859	Latch-Front Hitch	13	2	1	109554	Bracket - Belt Guard	21	17	1
105875	Axle - Rear	7	72	2	109842	Bearing - Ball	42	36	1
105876	Ring - Special, Snap	7	73	2	109910	Cable - Ground	39	40	1
105886	Rod - Brake, Front	11	29	1	109989	Spacer	43	20	4
105896	Arm - Clutch Rod	11	18	1	110142	Trim - Edge	19	23	1
105900	Rod - Brake, Rear	11	28	1	110234	Bolt	11	2	1
106030	Spring - Detent	7	56	2	110502	Shield - Dirt	39	16	1
106165	Pulley - Transmission Drive	3	7	1	110513	Bearing - Ball	41	16	4
106193	Bolt - Special	11	43	1	110636	Pad - Footrest	21	13	2
106222	Footrest - RH	21	6	1	110653	Rod - Height Control	15	34	1
106223	Footrest - LH	21	7	1	110656	Trunnion	42	14	1
106234	Tank - Fuel	26	17	1	110665	Brake Assembly - PTO	42	23	1
106236	Support - Fuel Tank, RH	21	20	1	110669	Plate - PTO	42	17	1
106250	Cover - Dust	19	16	1	110725	Stick Shift Assembly	7	74	1
106257	Rod - Latch	15	2	1	110727	Rod - Shift Hi-Low Range	7	62	1
106258	Sleeve	15	39	1	110920	Spring - Seat	43	1	2
106261	Bracket - Belt	19	3	1	110960	Fender	21	22	1
106269	Bushing	15	16	2	110995	Transmission Assembly	5	*	1
106345	Casting - Height Control	15	37	1	111034	Plate - Hood Stand	19	20	1
106352	Guard - Lower Belt	21	5	1	111052	Rod - PTO Clutch	42	11	1
106411	Latch Bracket	15	41	1	111069	Cable - Battery, Negative	39	29	1
106414	Retainer	15	17	1	111069	Cable - Solenoid To Starter	39	26	1
106417	Rod - Bell Crank Pivot	11	26	1	111071	Bumper	43	17	2
106451	Lever - Parking Brake	11	34	1	111071	Bumper	21	31	2
106454	Trim - Edge	19	25	1	111074	Cable - Battery, Positive	39	27	1
106522	Chain - Lift	15	22	1	111154	Wire - Lock	15	53	1
106634	Pin - Hitch	13	13	1	111196	Cap - Diff End	7	64	2
106649	Ring - Grip	42	3	1	111198	Case-Transmission, LH	5	2	1
106695	Push-On Ring	42	45	1	111199	Bearing - Ball	5	8	2
106719	Drum - Brake	11	1	1	111200	Case-Transmission, RH	5	1	1
106769	Bearing - Needle	42	38	1	111216	Switch - Ignition	39		1
106772	Trim - Edge 4	19	11	1	111234	Lever - PTO Clutch	42	1	1
106858	Clamp	36	8	1	111240	Bracket - Engine	42	25	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
111242	Guide - Belt, Bottom	3 14 1	116744	Tire - Turf Trac, Rear	41 3 2
111271	Console	17 4 1	116745	Rod - Pivot	17 7 1
111314	Pin - Locking	42 28 1	116746	Bracket - RH	17 6 1
111332	Switch - PTO Interlock	39 20 2	116747	Bracket - LH	17 11 1
111343	Bushing Assembly	37 9 5	116796	Test Switch	37 1 1
111359	Nut - Hex	37 4 1	117127	Tire - Turf Trac, Front	41 21 2
111383	Collar	11 10 2	117217	Switch - Button	37 2
111392	J-Clip	17 23 1	117242	Decal - Made in U.S.A.	44 18 1
111510	Decal - Parking Brake	44 2 1	117331	Holder - Fuse	21 36 1
111516	Wheel - Rear	41 6 2	117337	Steering Wheel	9 30 1
111534	Decal - Hi-Low Shift	44 16 1	117343	Latch - Hood	17 25 2
111642	Barrier - Switch Insulator	39 13 2	117344	Handle Assembly	17 2 2
111757	Edging - Console	17 22 1	117371	Bolt - Carriage	19 6 4
111767	Washer	37 3 1	117431	Rivet - Pop	17 16 4
111926	Decal - Electrical System	44 12 1	117432	Rivet - Pop	17 3 4
111951	Hubcap	41 20 2	117509	Decal - Front Hood	44 5 1
111952	Washer - Special Hub Cap	41 18 2	117760	Decal - Rear Fender	44 4 1
111960	Decal - PTO Clutch	44 3 1	117930	Latch-Mid Hitch	13 17 1
112168	Decal - Lift	44 16 1	117940	Rod-Mid Hitch Lock	13 16 1
112185	Body - Connector	39 17 1	118620	Bolt - Carriage	21 33 2
112213	Muffler	36 7 1	119190	Decal - Lower Dash	44 9 1
112214	Choke Control	36 3 1	119220	Decal - Switch Plate	44 10 1
112415	Stop - PTO	17 21 1	120590	Stop - Throttle	17 17 1
112506	Bracket	37 6 1	120930	Body - Fuse	39 9 1
112506	Bracket	17 18 1	518077	Terminal	39 68 2
112564	Lens - Taillight	40 17 2	518104	Terminal	40 6 1
112841	Cap	3 16 1	518105	Terminal	39 7 1
113010	Hold Down - Battery	39 38 1	518105	Terminal	39 64 1
113107	Clevis	42 29 1	519337	Clip - Cable	39 63 1
113108	Rod - PTO Housing	42 31 1	910478	Screw	39 59 2
113179	Nut	40 9 1	910792	Screw	36 5 2
113381	Spindle - Front, LH	9 7 1	910808	Screw	40 16 4
113382	Spindle - Front, RH	9 * 1	911423	Bolt	7 65 4
113443	Tube - Steering	9 28 1	913464	Bolt	43 5 4
113445	Bar - Lift	15 27 1	915002	Nut	9 39 1
113935	Cover - Side, LH	19 13 1	915551	Nut	40 19 4
113969	Hook - Battery Hold Down	39 37 2	915732	Nut	39 60 2
114017	Clamp - Steel	39 52 1	915962	Nut - Hex	39 54 1
114343	Spring - Gas	43 16 1	920008	Washer	21 24 4
114344	Spacer	43 11 2	920120	Washer - Lock	39 53 1
114345	Bracket	43 14 1	920160	Washer - IntL. T	39 2 1
114427	Logo - Hub Cap 6 (Opt.)	41 23 2	920248	Washer - Nylon	11 19 3
114428	Logo - Hub Cap 12 (Opt.)	41 1 2	920248	Washer - Nylon	11 30 2
114720	Tube - Drain	39 39 1	920259	Washer - Special	40 7 1
114813	Pedal - Brake	11 9 1	920262	Washer - Special	39 48 1
114814	Pedal - Clutch	11 8 1	926671	Bolt	39 19 1
114825	PC Board w/Lights	37 10 1	926671	Bolt	40 20 2
114881	Facing - Clutch Plate	42 43 1	926696	Bolt	15 45 2
115197	Decal - Attach-A-Matic	44 14 1	926696	Bolt	19 * 2
115411	Support - Switch	39 18 1	926697	Bolt	26 20 2
115854	Control - Throttle	36 1 1	933148	Pin - Spirol	15 5 1
116000	Bolt - Carriage	21 3 1	933156	Pin - Spirol	5 34 2
116000	Bolt - Carriage	21 9 6	933184	Pin - Spirol	7 63 1
116338	Switch - Ignition	39 1 1	933190	Pin - Spirol	11 17 1
116397	Relay	39 62 1	933267	Pin - Spirol	11 50 1
116445	Decal - Parking Brake	44 * 1	933274	Pin - Spirol	42 30 1
116454	Knob - Throttle Control	36 2 1	933505	Pin - Cotter	42 20 1
116497	Nut	39 32 4	933505	Pin - Cotter	15 54 1
116636	Fork - Shift Hi-Low Range	7 59 1	933505	Pin - Cotter	13 14 1
116723	Harness - Wiring	37 7 1	933506	Pin - Cotter	42 32 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
933507	Pin - Cotter	15	14	2	KH10094	Gasket	24	17	1
936032	Ring - Retaining	42	35	1	KH10094	Gasket - Bowl	24		
937089	Key - Woodruff	7	40	1	KH10107	Screw - Hex. Hd.	34	5	4
937108	Key - Woodruff	41	8	2	KH10108	Screw	34	7	1
937221	Key - Hi-Pro	3	4	1	KH10109	Screw - Idle Speed Adj.	24	14	1
950154	Clamp 1/2 (1.3 cm) Dia	26	28	2	KH10110	Screw	24	2	4
960152	Bolt - Whizlock	39	25	2	KH10112	Spring - Idle Fuel	24	10	1
9107562	Screw	37	8	2	KH10113	Spring	24	5	1
9107622	Screw	17	20	2	KH10114	Spring - Adj.	24	13	1
9107944	Screw	39		1	KH10116	Screw	24	21	1
9107944	Screw - Machine	21	34	2	KH10117	Bowl - Fuel	24	19	1
9108372	Screw	21	2	2	KH10119	Decal - Float Switch	32	*	1
9108372	Screw	19	24	1	KH10123	Connector - 90°	26	35	2
9108372	Screw	19	14	6	KH10123	Connector 90°	24	22	1
9151126	Nut	19	7	4	KH10124	Fan	34	4	1
9156934	Nut	9	11	4	KH10126	Screen	34	6	1
9157324	Nut - Lock	37	5	2	KH10128	Ball	24	4	1
9157404	Nut	36	6	2	KH10132	Needle - Idle Fuel Adj.	24	9	1
9157404	Nut	21	35	4	KH10134	Sleeve	32	12	1
9159604	Nut	17	24	2	KH10135	Tag - Caution	33	*	1
9201504	Washer - Lock	17	19	2	KH10136	Washer	25	25	1
9202254	Washer - Special	11	49	1	KH10143	Baffle	28	4	1
9266944	Bolt	19	4	1	KH10144	Screw	29	22	8
9266944	Bolt	21	4	1	KH10145	Washer	29	21	9
9266944	Bolt	19	12	4	KH10146	Gasket	24		
9266944	Bolt	19	17	4	KH10146	Gasket - Carburetor	24		
9266944	Bolt	11	27	1	KH10146	Gasket - Carburetor	24	24	1
9266944	Bolt	15	42	1	KH10147	Spacer .005	30	3	1
9266944	Bolt	19	10	1	KH10148	Spacer .010	30	*	1
9266944	Bolt	21	23	4	KH10149	Gasket	28	7	1
9266944	Bolt - Washer Hd	17	5	3	KH10150	Stud	28	9	1
9320004	Pin - Cotter	17	9	2	KH10152	Washer	25	41	2
9335044	Pin - Cotter	15	21	1	KH10181	Bolt	33	7	2
9791204	Spacer	13	11	2	KH10188	Spacer	34	3	4
KH10009	Gasket - Flange	24			KH10189	Nut	23	3	1
KH10010	Clip - Hi-Tension	35	18	1	KH10191	Decal - Air Cleaner	23	*	1
KH10029	Insert - Exhaust Valve	29	7	1	KH10191	Decal - Air Cleaner/Lub	44	30	1
KH10034	Seal	28	6	1	KH10201	O-Ring	32	2	1
KH10034	Seal	23	7	1	KH10209	Cap - Drive End	33	11	1
KH10035	Pin - Governor Stop	25	3	1	KH10210	End Cap Ass'y	33	8	1
KH10040	Screw	25	47	1	KH10221	Kit - Retainer	30	10	2
KH10049	Bearing	29	8	1	KH10228	Gear Assembly	30	21	2
KH10054	Retainer - Upper Spring	30	7	2	KH10231	Baffle - Head	27	3	1
KH10055	Gasket	29	16	1	KH10235	Element - Precleaner	23	5	1
KH10057	Reed	28	3	1	KH10236	Element	23	6	1
KH10058	Gasket	28	1	1	KH10244	Brace - Starter Tail	33	2	1
KH10059	Gasket	32	8	1	KH10245	Kit - Crankshaft	30	16	1
KH10062	Spring	30	14	2	KH10247	Armature	33	10	1
KH10067	Ball Bearing	29	3	2	KH10248	Pan - Oil	32	7	1
KH10070	Bushing	25	22	1	KH10258	Set - Gasket w/o Seals	29	*	1
KH10071	Valve - Intake	30	6	1	KH10259	Camshaft Assy	30	1	1
KH10072	Plate	28	2	1	KH10261	Head - Cylinder	29	19	1
KH10081	Shaft - Balance Gear	29	18	1	KH10262	Retainer - Piston Pin	31	3	2
KH10082	Connector	35	16	1	KH10263	Flywheel	34	1	1
KH10087	Washer	25	24	1	KH10265	Housing - Blower	27	8	1
KH10088	Gasket	32	6	1	KH10266	Adapter - Oil Fill	32	4	1
KH10090	Valve - Exhaust	30	5	1	KH10267	Bearing - Needle	30	22	2
KH10091	Kit - Stator 15 am	35	9	1	KH10268	Seal	29	12	1
KH10093	Gasket	24	20	1	KH10269	Seal	29	4	1
KH10093	Gasket - Bowl Screen	24			KH10270	Dipstick	32	1	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
KH10272	Gasket	29	9	1	KH10570	Washer	36	17	1
KH10274	Gasket	24		1	KH10570	Washer	25	35	1
KH10274	Gasket - Carburetor	24			KH10570	Washer - Flat	35	2	1
KH10274	Gasket - Carburetor	24	23	1	KH10574	Retainer	30	20	1
KH10275	Filter	28	5	1	KH10576	Nut - Wing	23	1	1
KH10278	Elbow	36	16	1	KH10585	Spacer	25	23	1
KH10279	Baffle - Side Air	27	2	1	KH10586	Clamp	26	33	2
KH10280	Baffle - Inner	27	7	1	KH10588	Key - Woodruff	34	2	1
KH10282	Baffle - Cylinder	27	6	1	KH10599	Washer - Lock	25	38	1
KH10287	Linkage - Choke	25	32	1	KH10600	Screw	25	37	1
KH10289	Screw - Pozidrive T.H.	27	5	3	KH10605	Screw	25	45	1
KH10290	Screw	29	24	1	KH10605	Screw - Pozidrive	35	10	4
KH10292	Spring	30	2	1	KH10606	Screw - Hex. Hd.	35	4	1
KH10293	Lever - Choke Control	25	42	1	KH10607	Screw - Hex. Hd.	33	4	1
KH10294	Lever - Throttle Control	25	43	1	KH10609	Screw	23	8	3
KH10295	Lever - Governor	25	27	1	KH10610	Screw	35	3	1
KH10296	Spring (Governor to Carb.)	25	31	1	KH10610	Screw - Hex. Hd.	33	3	1
KH10297	Base - Air Cleaner	23	9	1	KH10610	Screw - Hex. Hd.	36	11	1
KH10298	Cover	28	8	1	KH10617	Plug - Cup	30	15	1
KH10299	Cover	23	2	1	KH10618	Clip	35	5	1
KH10302	Space	25	44	1	KH10619	Nut	25	50	1
KH10303	Bracket - Clutch Control	25	48	1	KH10620	Plug	32	10	4
KH10304	Bracket - Starter	33	5	1	KH10624	Nut	25	40	1
KH10308	Clamp	25	49	1	KH10625	Screw	23	11	1
KH10309	Hose	28	11	1	KH10626	Screw	25	28	1
KH10310	Pin - Camshaft	30	4	1	KH10629	Nut - Pal	25	8	1
KH10311	Gasket	29	10	1	KH10629	Palnut	28	10	1
KH10312	Strap - Lifting	29	23	1	KH10660	Kit - Governor Gear	25	1	1
KH10313	Lead - Violet, Regulator	35	*	1	KH10661	Cover	29	15	1
KH10315	Lead - Wire, Module to	35	*	1	KH10663	Kit - Float	24	18	1
KH10319	Pump Assy - Fuel	26	29	1	KH10666	Washer	34	8	1
KH10321	Module - Ignition	35	1	1	KH10673	Regulator - Rectifier	35	14	2
KH10322	Kit - Spacer	30	19	2	KH10677	Gasket - Air Cleaner	24		
KH10323	Kit - Drive	33	12	1	KH10682	Bushing &	24		
KH10324	Kit - Drive Parts	33	13	1	KH10682	Bushing	24		
KH10325	Set - Gasket w/ Seals	29	*	1	KH10682	Bushing - Linkage Natural	24		
KH10344	Clamp - Cable	36	10	1	KH10686	Bushing Linkage Black	24		
KH10344	Clip	35	12	1	KH10687	Plate - Bearing	29	11	1
KH10345	Connector	35	11	1	KH10693	Carburetor Assembly	24		
KH10345	Connector - Female	32	13	1	KH10693	Kit - Adjustable Jet	24	*	
KH10358	Kit - Choke & Throttle	24	*	1	KH10694	Main - Needle	24	16	1
KH10412	Cover - Air Cleaner Element	23	4	1	KH10695	Rod - Connecting .010	31	*	1
KH10413	Screw - Hex .Hd.	27	1	6	KH10695	Washer	25	46	1
KH10496	Rotator - Valve	30	13	2	KH10696	Kit - Carburetor Repair	24	*	
KH10515	Kit - Brush	33	9	1	KH10697	Gasket	24		
KH10535	Nut - Lock	36	15	1	KH10697	Gasket	23	10	1
KH10539	Tappet - Intake Valve	30	11	2	KH10697	Gasket - Air Cleaner	24		
KH10541	Screw	32	5	3	KH10700	Gasket	29	20	1
KH10545	Screw	35	13	1	KH10701	Carburetor Linkage	24		
KH10545	Screw	29	14	4	KH10701	Linkage (Governor to Carb.)	25	30	1
KH10545	Screw	25	34	1	KH10702	Shaft - Choke	24	15	1
KH10549	Screw	33	*	1	KH10709	Jet - Main	24		
KH10549	Screw	33	6	2	KH10709	Main Jet	24		
KH10549	Screw	29	13	4	KH10710	Kit - High Altitude Jet	24	*	
KH10550	Screw	32	9	4	KH10733	Gasket	24		
KH10552	Screw - Pozidrive	26	32	2	NN10277	Fuse 30 Amp ATO or ATC	39		1
KH10562	Plug	29	5	1	38-1420	Switch - Seat	39	14	1
KH10567	Washer	27	4	1	47-1910	Solenoid	39	24	1
KH10569	Washer	26	31	2	55-3570	Fuel Cap	26	18	1
KH10569	Washer	25	39	1	62-7770	Key - Ignition, Padded	39	4	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
78-0020	Meter - Hour	39	51	1	92-7269	Piston w/Ring Set .003	31	*	1
78-0080	Clamp - Voltmeter, Back	39	22	1	92-7270	Piston w/Ring Set .010	31	*	1
78-0370	Insert	9	40	1	92-7271	Piston w/Ring Set .020	31	*	1
78-1550	Lever - Lift	15	19	1	92-7272	Piston w/Ring Set .030	31	*	1
78-1660	Wheel Assembly - Front	41	17	2	92-7273	Set - Ring, Std. & .003	31	1	1
78-2680	Frame	2	1	1	92-7274	Set - Ring .010	31	*	1
78-2880	Shaft	9	15	1	92-7275	Set - Ring .020	31	*	1
78-2900	Tie Rod	9	10	2	92-7276	Set - Ring .030	31	*	1
78-2920	Joint - Ball	9	38	1	92-7278	Kit - Float Switch	32	11	1
78-2970	Arm - Clutch Idler	11	16	1	92-7279	Short Block	29	1	1
78-2990	Plate - Seat Pivot	43	10	1	92-7280	Miniblock (w/Out Crankshaft)	29		1
78-3010	Bracket - Battery Support	19	5	1	92-7281	Decal - HP	27	9	1
78-3020	Plate - Front	19	9	1	237-69	"O"Ring	9	41	1
78-3240	Spring - Gas	11	53	1	281-2	Plug - Pipe, Sq Hd	5	7	1
78-3250	Spacer	11	60	1	281-10	Plug - Pipe, Allen Hd	5	6	1
78-3260	Spacer	11	55	1	302-5	Fitting - Grease	9	2	2
79-0060	Voltmeter	39	21	1	302-5	Fitting - Grease	11	61	2
79-0370	Decal - Danger	19	27	1	321-3	Bolt	11	5	2
79-0370	Decal - Danger	44	20	1	321-3	Bolt - Nylok	42	41	4
79-0670	Seat	43	4	1	321-4	Bolt	39	30	2
79-3590	Harness Assy - Wiring	39	5	1	321-4	Bolt	21	37	2
79-4450	Decal - Hood LH	44	1	1	321-6	Bolt	11	54	1
79-4460	Decal - Hood RH	44	1	1	321-8	Bolt	43	13	2
79-4900	Hoodstand	19	1	1	321-9	Bolt	11	59	1
79-4990	Bracket - Fender Support	21	18	1	322-1	Bolt	9	5	1
83-2710	Knob - Hi-Lo Range Shift	7	75	1	322-2	Bolt	26	22	3
83-2720	Bolt - Lug	41	5	10	322-3	Bolt	21	15	2
83-2890	Bearing - Needle	5	17	1	322-3	Bolt	21	21	4
83-3530	Shaft - Cluster	7	39	1	322-4	Bolt	43	18	6
83-6520	Rod - Lock	13	18	1	322-5	Bolt	43	8	4
88-0020	Decal - Danger	17	27	1	322-5	Bolt	15	38	3
88-0020	Decal - Rear Hood Danger	44	8	1	322-6	Bolt	36	12	1
88-2710	Support - Steering	9	19	1	322-6	Bolt	15	24	1
88-2782	Hood	17	1	1	323-5	Bolt	2	4	4
88-2790	Decal - Danger	44	17	1	323-6	Bolt	22	4	2
88-3200	Decal - Maintenance	44	21	1	323-7	Bolt	9	13	2
92-0982	Loose Parts Package	44	*	1	323-7	Bolt	42	16	1
92-1530	Decal - 8-Speed	44	11	2	323-7	Bolt	13	21	2
92-1532	Engine - 14HP	22	1	1	323-8	Bolt	22	2	2
92-4987	Steering Shaft Assembly	9	25	1	323-9	Bolt	9	20	2
92-6529	Plate - Shift Cover	19	19	1	323-9	Bolt	11	37	1
92-7250	Line - Fuel 5" Lg	26	34	1	323-10	Bolt	5	4	5
92-7251	Kit - Carburetor w/Linkage	24	*		323-15	Bolt	5	3	1
92-7252	Carburetor Assembly	24	1	1	324-5	Bolt	3	11	3
92-7253	Bushing	25	33	1	3217-5	Nut	7	48	1
92-7254	Bushing	25	29	1	3218-1	Nut	42	21	2
92-7255	Plate - Choke	24	3	1	3218-1	Nut	39	50	2
92-7256	Shaft w/Lever & Seal	24	7	1	3218-3	Nut	41	10	4
92-7257	Plate - Throttle	24	8	1	3229-25	Bolt - Carriage	17	12	4
92-7258	Shaft - Governor Gear	29	2	1	3229-25	Bolt - Carriage	42	24	2
92-7259	Guide - Valve	29	6	2	3231-25	Bolt - Carriage	2	2	3
92-7260	Starter Assembly	33	1	1	3235-22	Bolt	15	33	2
92-7261	Gasket - Fuel Pump	26	30	1	3242-2	Screw - Set	3	5	2
92-7262	Kit - Governor Cross Shaft	25	26	1	3243-5	Screw - Set	41	9	4
92-7263	Choke Lever Assembly	25	*	1	3245-32	Screw -Set	11	11	2
92-7264	Clip	35	8	1	3246-2	Screw - Set	3	2	2
92-7265	Plug - Spark	35	17	1	3251-25	Bolt	13	19	3
92-7266	Screw	35	15	2	3253-3	Washer - Lock	11	6	2
92-7267	Rod - Connecting Std.	31	4	1	3253-3	Washer - Lock	39	45	4
92-7268	Piston w/Ring Set Std.	31	2	1	3253-3	Washer - Lock	42	47	1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3253-3	Washer - Lock	39 49 2	3272-10	Pin - Cotter	42 7 1
3253-3	Washer - Lock	11 57 1	3272-10	Pin - Cotter	42 12 2
3253-4	Washer - Lock	36 13 1	3272-10	Pin - Cotter	11 20 2
3253-4	Washer - Lock	43 2 12	3272-10	Pin - Cotter	11 31 3
3253-4	Washer - Lock	9 6 1	3272-10	Pin - Cotter	15 35 1
3253-4	Washer - Lock	26 23 1	3272-17	Pin - Cotter	41 19 2
3253-6	Washer - Lock	3 12 3	3272-19	Pin - Cotter	9 18 1
3253-21	Washer - Lock	2 5 4	3272-21	Pin - Cotter	9 42 1
3253-21	Washer - Lock	22 5 1	3296-29	Nut	43 3 6
3254-1	Washer - Lock	40 13 4	3296-29	Nut	40 5 1
3254-2	Washer - Intl. T	39 42 1	3296-29	Nut	43 7 2
3254-2	Washer - Lock	40 4 1	3296-29	Nut	21 10 7
3256-4	Washer	26 21 2	3296-29	Nut	15 26 1
3256-5	Washer	15 36 1	3296-29	Nut	21 30 6
3256-21	Washer	40 12 4	3296-29	Nut	15 44 3
3256-22	Washer	43 12 2	3296-39	Nut	2 3 3
3256-22	Washer	17 13 4	3296-39	Nut	22 3 2
3256-22	Washer	39 31 4	3296-39	Nut	5 5 6
3256-22	Washer	11 56 2	3296-39	Nut	42 19 1
3256-22	Washer	42 22 2	3296-39	Nut	13 20 5
3256-23	Washer	40 3 1	3296-39	Nut	11 32 1
3256-23	Washer	43 6 8	3296-39	Nut	11 44 1
3256-23	Washer	21 16 2	3296-39	Nut	15 56 1
3256-23	Washer	15 25 1	3296-39	Nut - Lock	9 14 4
3256-23	Washer	15 43 2	3296-42	Nut	43 15 2
3256-24	Washer	11 38 1	3296-42	Nut	21 38 1
3256-24	Washer	11 51 1	3296-42	Nut	11 58 2
3256-25	Washer	3 13 3	32120-72	Ring - Retaining	42 34 2
3256-26	Washer	11 25 1	32120-93	Ring - Retaining	9 34 2
3256-26	Washer	15 55 1	32121-25	Pin - Roll	15 48 1
3256-27	Washer	42 48 1	32121-103	Pin - Spirol	15 47 1
3256-30	Washer	15 15 3	32121-111	Pin - Spirol	9 31 1
3256-66	Washer	36 14 1	32136-5	Nut - Slotted	9 37 1
3269-3	Rivet - Pop	40 15 4	32146-7	Nut	39 2
3272-6	Pin - Cotter	11 15 1	32146-17	Nut	17 14 4

*Not Illustrated

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame under the seat. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number .
2. Part number, description, and the quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Frame	2	Breather And Vent	28
Drive Belt And Pulleys	3	Crankcase And Cylinder Head	29
Mechanical Transmission 8-Speed	4	Camshaft, Crankshaft And Valves	30
Front Axle and Steering	8	Piston And Rings	31
Clutch, Brake and Speed Control Linkage	10	Oil Pan And Dipstick	32
Hitches	12	Starter	33
Manual Lift Linkage	14	Flywheel	34
Hood Assembly	16	Fuel System	35
Hood Stand And Supports	18	Throttle Choke And Exhaust	36
Fender And Supports	20	Electrical System	37-40
Engine Kohler	22	Wheel And Tires	41
Air Intake	23	P.T.O. Clutch And Control	42
Carburetors	24	Seat	43
Governor Linkage	25	Decals	44
Ignition System	26	Numerical Parts List	45
Baffles And Shrouds	27		

Optional Equipment

Description	Model No.	Description	Model No.
36" Rear Discharge Cutting Unit	78305	42" Recycler Cutting Unit	78355
42" Rear Discharge Cutting Unit	78345	36" Tiller	79370
48" Rear Discharge Cutting Unit	78360	48" Dozer Blade	0648BC
42" Rear Discharge Cutting Unit	78350	50" Grader Blade	79351