




MODEL NO. 38072-490001 & UP MODEL NO. 38073-490001 & UP	PARTS CATALOG
724 SNOWTHROWER	

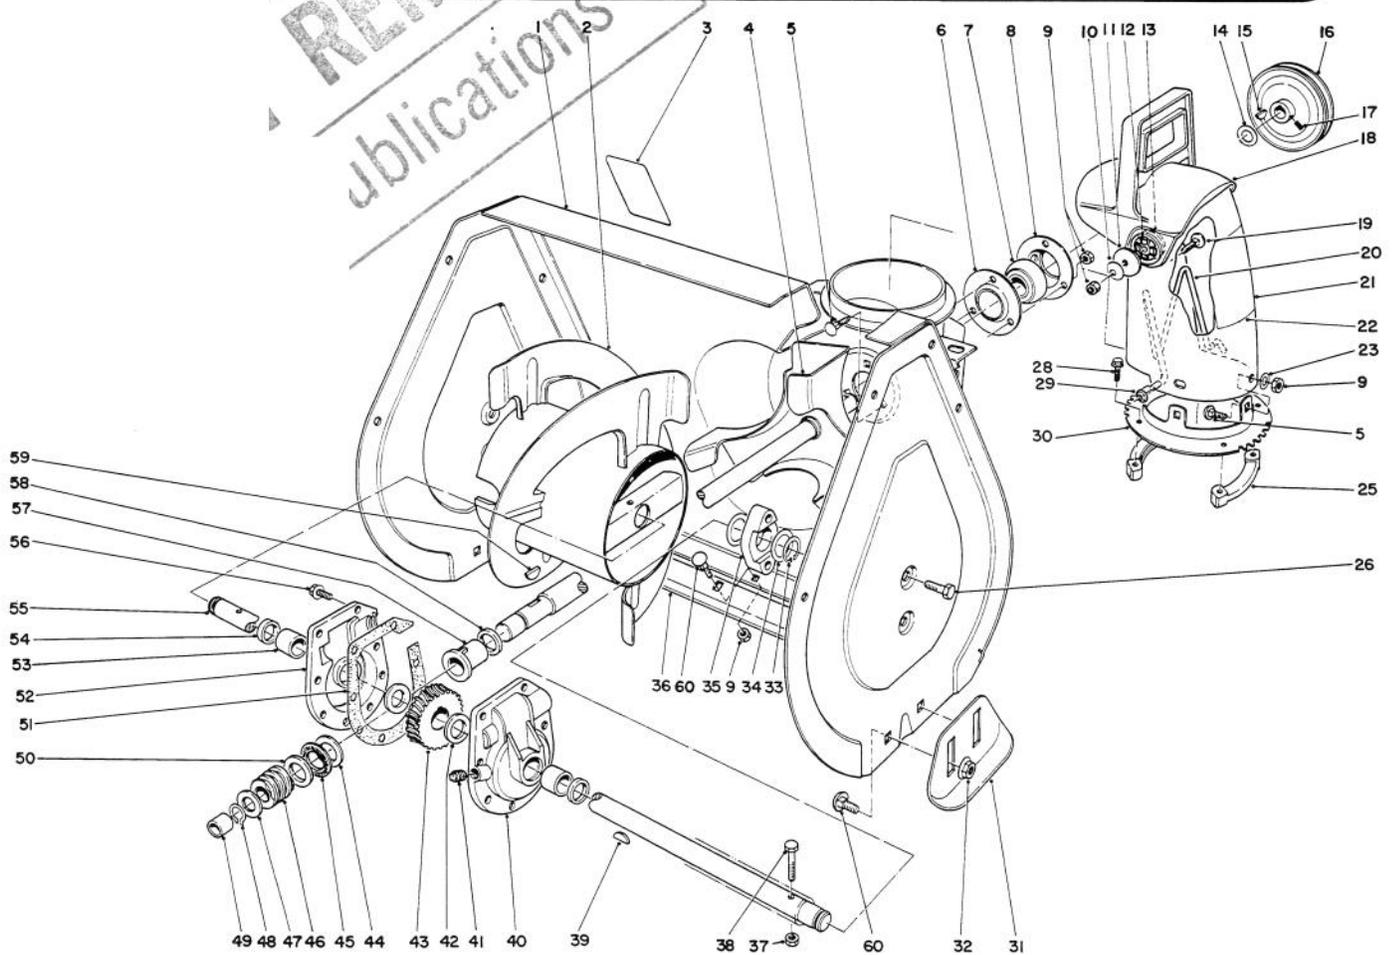


C-0031

AUGER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	14-8119	Housing - Auger (Incl. ref. #3)	1
2	74-1600	Auger - R.H.	1
*	74-1590	Auger - L.H.	1
3	53-7670	Decal - Auger Warning	1
4	37-6990	Shaft & Impeller	1
5	3230-18	Bolt - Carriage	6
6		Flange - Bearing Front	1
7	63-3450	Bearing - Ball	1
8		Flange - Bearing Rear	1
9	3296-29	Nut - Lock	13
10	3290-340	Washer - Belleville	2
11	3256-68	Washer - Flat	2
12	55-8950	Plate - Friction	2
13	20-4320	Washer - Rubber	2
14	3-0737	Washer	1
15	3257-23	Key	1
16	37-6890	Pulley	1

Ref. No.	Part No.	Description	No. Used
17	3242-4	Screw - Set	2
18	56-2680	Deflector	1
19	3230-22	Bolt - Carriage	2
20	56-2670	Chute - Wire	1
21	13-7979	Chute - Discharge Model 38072 (Incl. Ref. #22)	1
*	12-8749	Chute - Discharge Model 38073 (Incl. Ref. #22)	1
22	63-3740	Decal - Discharge Model 38072	1
*	63-3760	Decal - Discharge Model 38073	1
23	3256-23	Washer	3
25	37-6490	Retainer - Chute Ring	3
26	32144-70	Screw - Self Tapping	4
28	27-0220	Screw - Self Tapping	6

*Not Illustrated

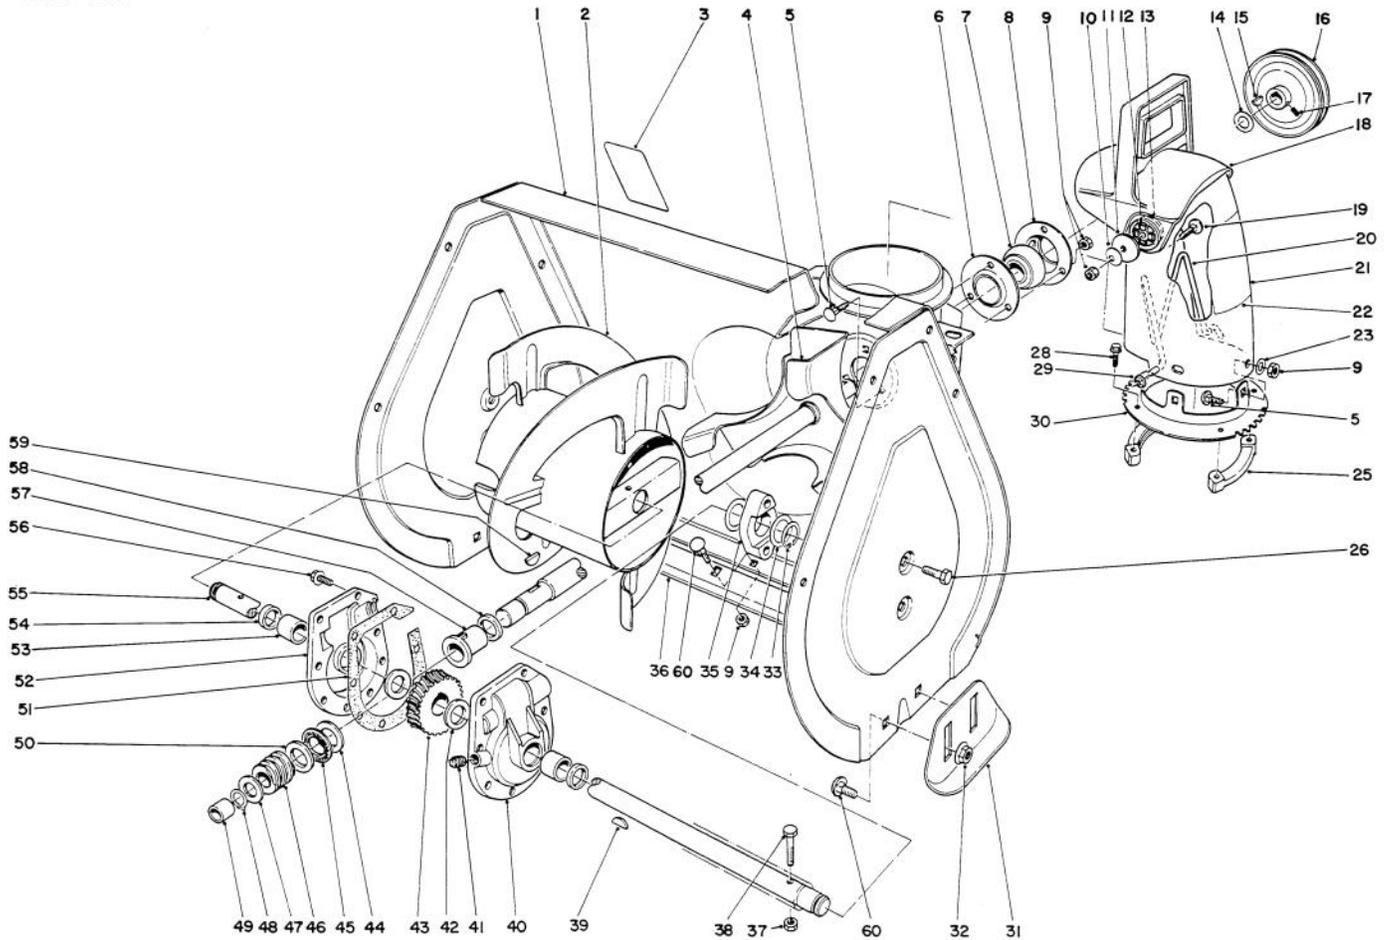


C-0031

AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	3290-326	Pushnut	1
30	37-8941	Ring - Chute	1
31	40-8160	Skid	2
32	32128-20	Nut - Flange	4
33	32151-36	Ring - Retaining	2
34	5-1550	Washer - Thrust	4
35	37-6550	Bearing - Auger	2
36	74-1420	Blade - Scraper	1
37	3296-42	Nut - Lock	2
38	321-10	Screw - Cap	2
39	3257-33	Key - Woodruff	1
40	14-2459	Gear Case L.H. (Incl. ref. #53 & 54)	1
41	281-1	Pipe - Plug	1
42	252-71	Bearing - Thrust	2
43	5-7180	Gear	1
44	257-3	Washer - Thrust	1
45	252-76	Bearing - Needle, Thrust	1
46	5-7170	Gear - Worm	1

Ref. No.	Part No.	Description	No. Used
47	3-8664	Washer	1
48	32120-72	Ring - Retaining	1
49	256-32	Bushing	1
50	252-80	Washer - Thrust	1
51	51-0460	Gasket	1
52	14-2449	Gear Case R.H. (Incl. ref. #53 & 54)	1
53	256-237	Bushing	2
54	7-0045	Seal - Oil	2
55	37-6801	Shaft - Auger	1
56	32144-41	Screw - Self Tapping	8
57	37-6560	Bushing - Input	1
58	237-87	Seal	1
59	3257-23	Key - Woodruff	1
60	3230-1	Bolt - Carriage	9
*	37-6961	Gear Case Assembly	1
*	12-8789	Bearing Assembly (Incl. ref. #6-8)	1


*Not Illustrated

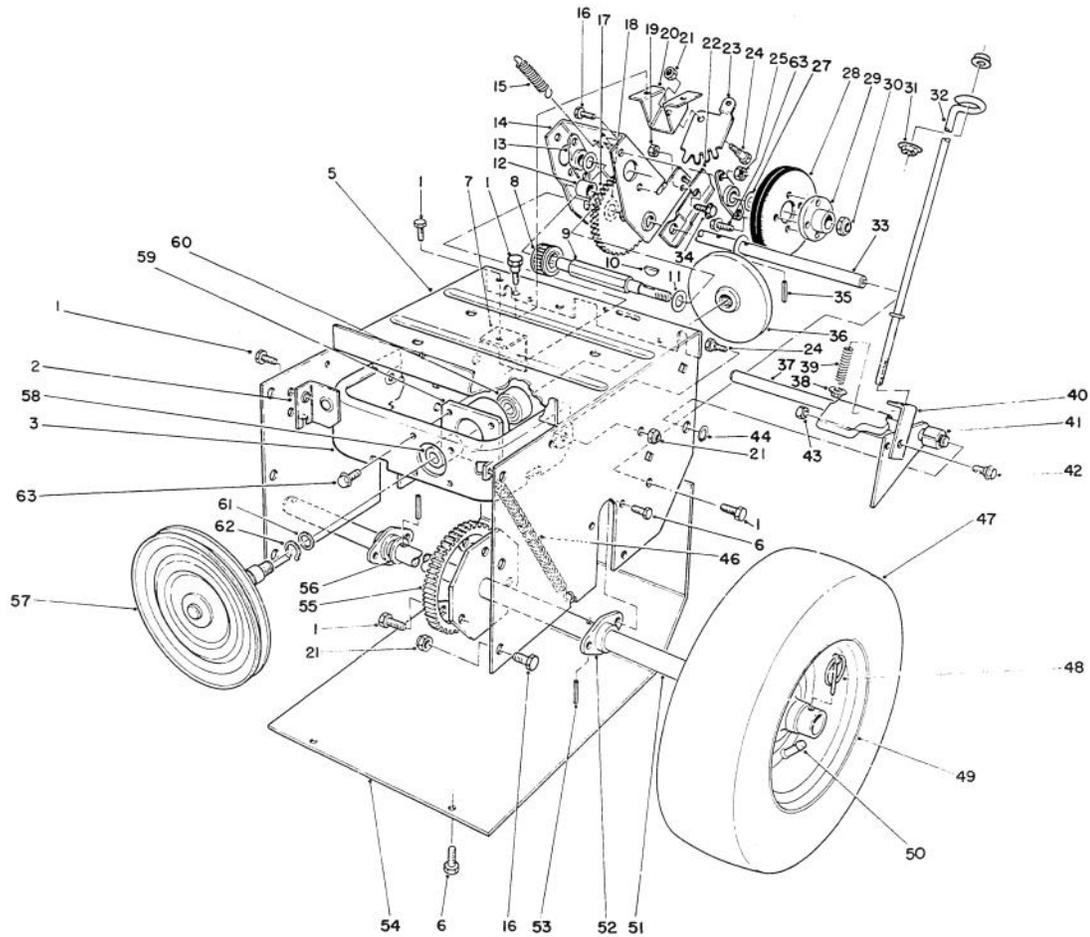

C-1277

TRACTION ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-70	Screw - Self Tap.Hex. Hd.	9	24	37-8770	Bolt - Shoulder	3
2	66-6790	Mount - Clutch Rod Front	1	25	3296-29	Nut - Lock	4
3	88-0550	Frame - Friction Plate	1	27	36-4790	Washer - Thrust	2
5	37-8900	Frame - Traction	1	28	37-6570	Wheel - Friction	1
6	32144-4	Screw - Self Tap.Hex. Hd.	8	29	39-1520	Hub - Friction Wheel Mount	1
7	37-9070	Mount - Clutch Rod Rear	1	30	3296-48	Nut - Lock	1
8	37-6500	Gear - Sliding	1	31	32128-33	Nut - Flange	2
9	37-6780	Shaft - Hex	1	32	39-3060	Rod - Lower Traction	1
10	3257-24	Key	1	33	37-6760	Shaft - Pivot	1
11	5-7570	Washer - Thrust	2	34	321-4	Screw - Hex. Hd.	1
12	256-86	Bushing	1	35	32121-45	Pin - Roll	2
13	20-1620	Bearing - Friction Wheel	2	36	38-0800	Plate - Friction	1
14	39-1230	Bracket - Sliding	1	37	43-7310	Traction Engagement Assy.	1
15	37-8880	Spring - Traction Engage	1	38	32128-32	Nut - Flange	1
16	322-2	Screw - Hex. Hd. Cap	10	39	38-4520	Spring - Compression	1
17	37-9160	Intermediate Gear & Bushing (Incl. ref. #12)	1	40	38-4490	Bracket - Traction	1
18	10-9280	Washer - Thrust	2	41	40-9680	Spacer	1
19	3296-16	Nut - Lock	1	42	40-8350	Screw - Shoulder	1
20	37-8790	Mount - Quadrant Gear	1	43	3296-42	Nut - Lock	1
21	3296-29	Nut - Lock	9	44	32151-61	Ring - Retaining	1
22	39-1250	Cam - Receiver	1	46	37-8870	Spring - Friction Plate Frame	1
23	37-8801	Quadrant - Gear	1	47	231-120	Tire	2
				48	3290-243	Pin - Klik	2

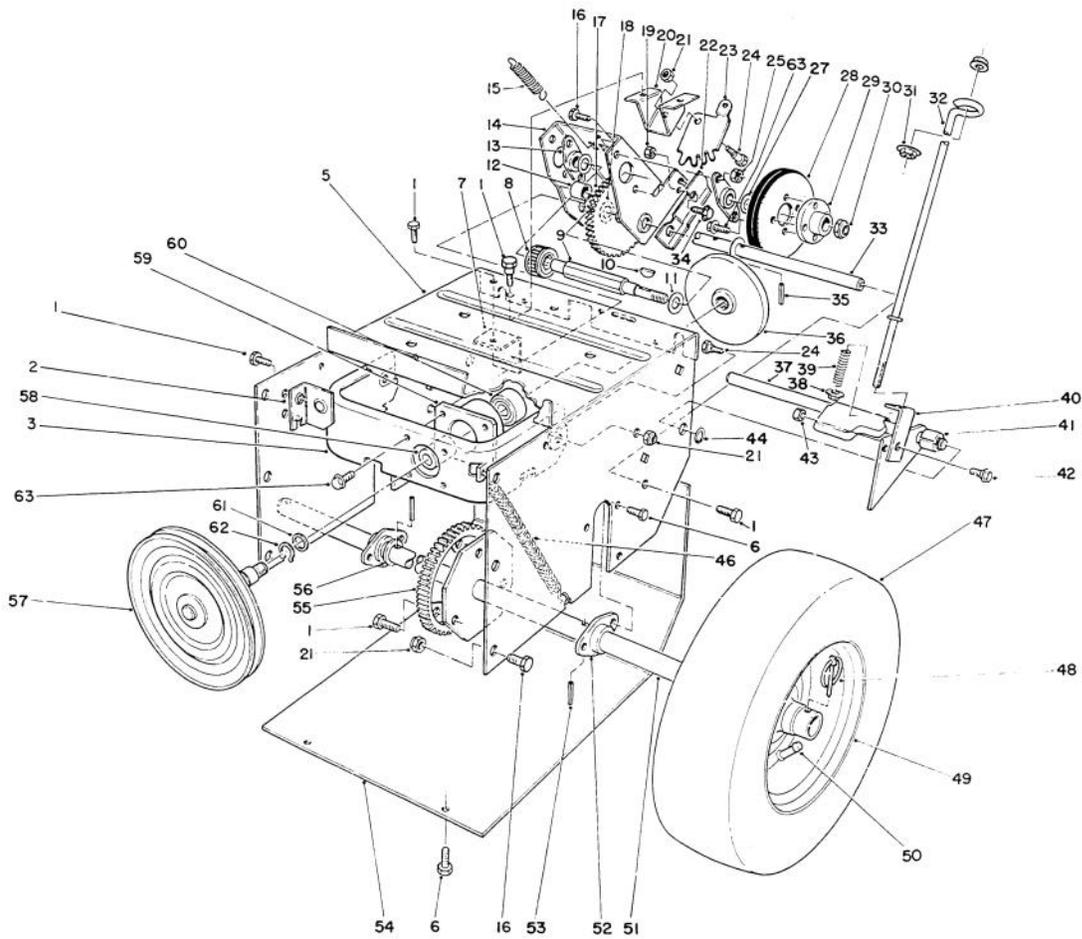

C-1277

TRACTION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
49	241-131	Rim	2	57	88-0850	Pulley & Shaft	1
50	232-46	Tube	2	58	256-322	Bushing	1
51	74-1350	Shaft - Axle	1	59	88-0560	Hub - Frame	1
52	37-6850	Bearing - Axle	2	60	38-7820	Bearing	1
53	32121-31	Pin - Roll	2	61	252-80	Washer - Thrust	1
54	37-6830	Cover - Bottom	1	62	32151-103	Ring - Snap	1
55	37-6520	Gear - Axle	1	63	12-3270	Screw - Tapping	8
56	3-8664	Washer - Thrust	2				

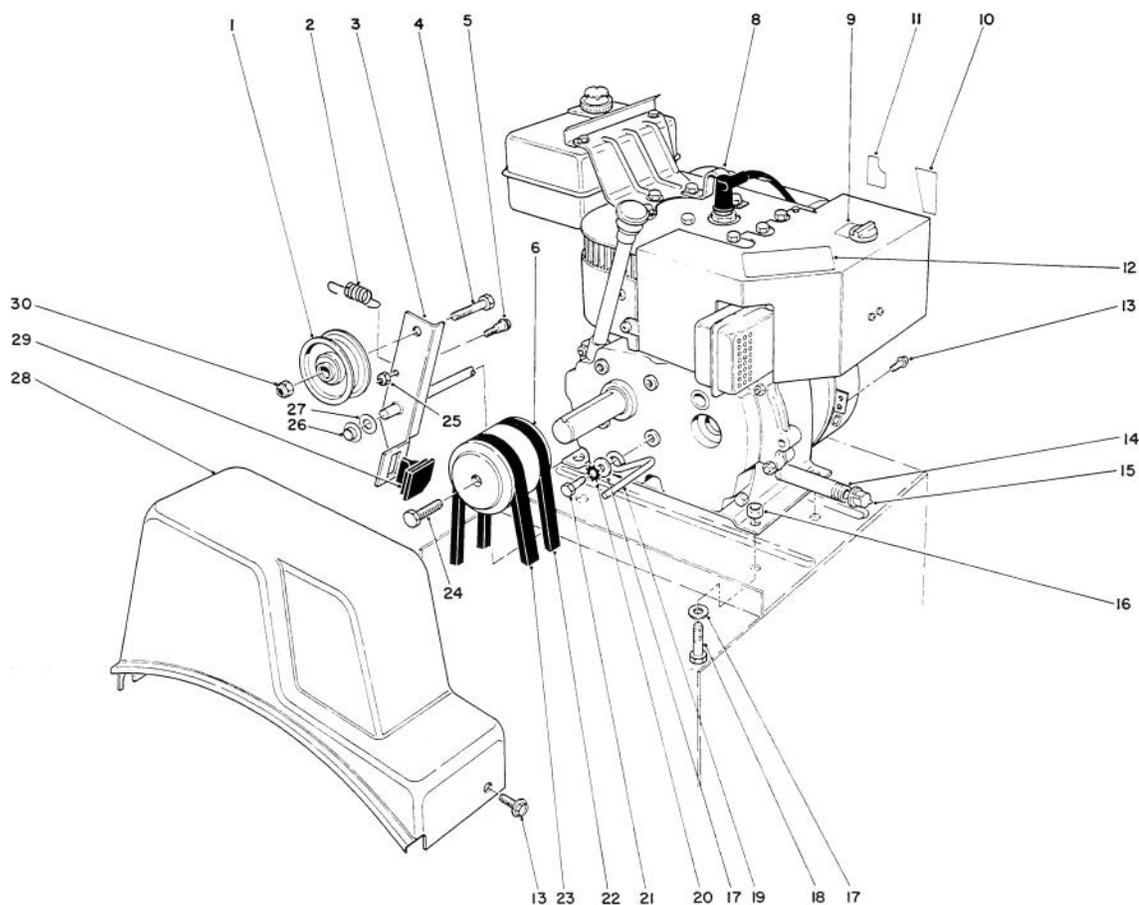


C-1278

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3-4244	Idler Pulley	1	13	32144-4	Screw - Self Tapping	3
2	53-7570	Spring - Auger Disengage	1	14	289-9	Pipe Nipple	1
3	14-7959	Auger Clutch	1	15	288-2	Cap	1
		(Incl. ref. #29)	1	16	3296-29	Nut - Lock	4
4	323-29	Screw - Cap	1	17	3256-23	Washer - Flat	5
5	42-3560	Bolt - Shoulder	1	18	322-4	Screw - Cap	4
6	74-1370	Engine Pulley	1	19	37-8990	Retainer - Belt	1
8		Engine	1	20	3255-8	Washer - Lock Ext. Tooth	1
9	63-2420	Decal - Choke (Model 38072)	1	21	3210-3	Screw - Cap	1
*	63-2430	Decal - Choke (Model 38073)	1	22	37-9090	V-Belt - Traction	1
10	63-3190	Decal - Throttle	1	23	26-9672	V-Belt - Auger	1
11	62-5760	Decal - Primer	1	24	43-7290	Screw - Special	1
12	66-6840	Decal - Hot Surface Warning (Model 38072)	1	25	3296-56	Nut - Lock	1
*	63-2310	Decal - Hot Surface Warning (Model 38073)	1	26	3290-320	Nut - Push On	1
				27	3256-24	Washer - Flat	1
				28	37-6900	Cover - Belt	1
				29	66-8060	Molded Brake Assembly	1
				30	3296-59	Nut - Lock	1

*Not Illustrated

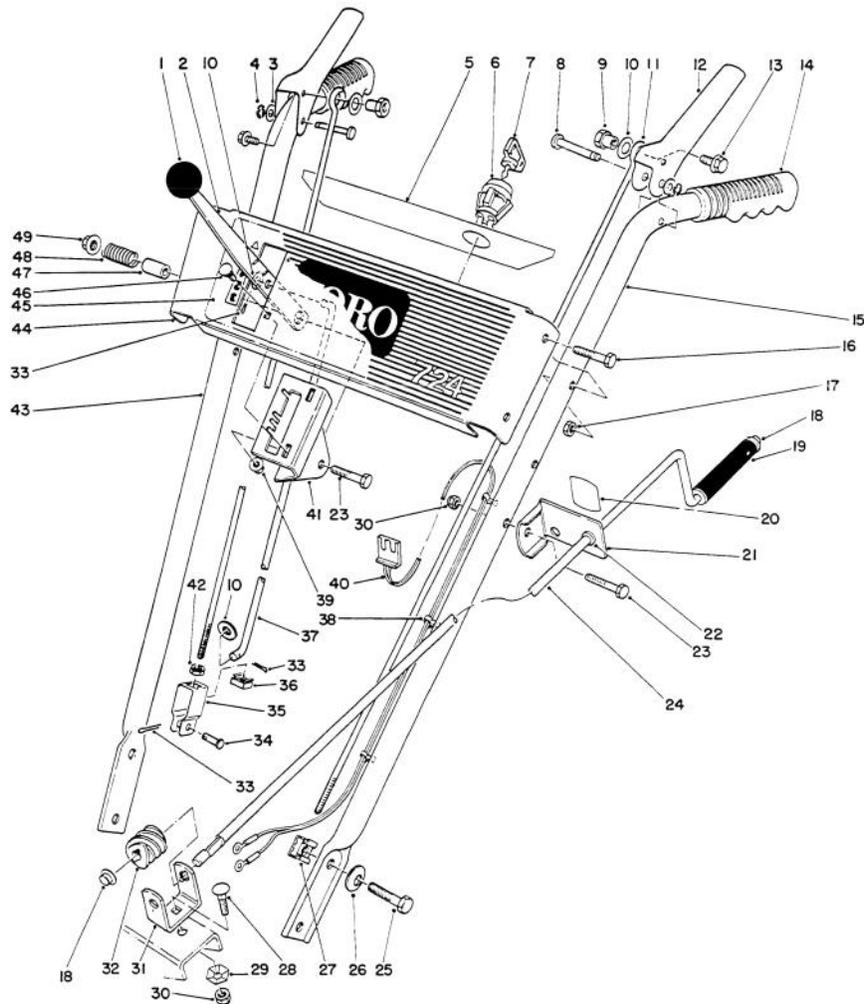


C-1279

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	233-21	Knob	1	21	12-7739	Bracket - Chute Control (Incl. Ref.# 20 & 22)	1
2	37-8821	Selector - Speed	1	22	256-249	Nyliner	1
3	3256-23	Washer	2	23	322-7	Screw - Hex. Hd.	2
4	32151-73	Ring - Clip	2	24	40-8270	Rod - Chute Control	1
5	66-6830	Decal - Escutcheon Back (Model 38072)	1	25	322-2	Screw - Hex. Hd. Cap	4
*	66-6880	Decal - Escutcheon Back (Model 38073)	1	26	3290-456	Washer - Belleville	4
6	40-5940	Switch - On/Off	1	27	3290-196	Retainer - Nut	4
7	63-8360	Key - Ignition	1	28	3230-22	Bolt - Carriage	1
8	52-5600	Pin - Control Lever	2	29	3290-238	Washer - Pyramidal	1
9	47-4990	Post - Linkage Mounting	2	30	3296-29	Nut - Lock	2
10	3256-24	Washer	4	31	40-8280	Bracket - Chute Worm	1
11	52-5590	Link - Upper	2	32	40-8250	Gear - Worm	1
12	63-3640	Handle - Control	2	33	3272-4	Pin - Cotter	3
13	3234-13	Screw - Hex. Flange Hd.	2	34	283-3	Pin - Clevis	1
14	74-1360	Grip - Handle	2	35	39-3080	Clevis	1
15	52-5571	Handle - Left (Model 38072)	1	36	32115-5	Retainer - Nut	1
*	52-5570	Handle - Left (Model 38073)	1	37	74-1490	Rod - Speed Selector	1
16	321-9	Screw - Hex. Hd	4	38	17-9120	Mount - Wire	3
17	3296-42	Nut - Lock	4	39	32128-33	Nut - Flange Lock	2
18	3290-320	Nut - Push	2	40	43-7390	Wire Harness Assembly	1
19	66-6540	Grip - Rod	1	41	39-1280	Mount - Speed Selector	1
20	63-3510	Decal - Chute Direction	1	42	3218-1	Nut - Jam	1

*Not Illustrated

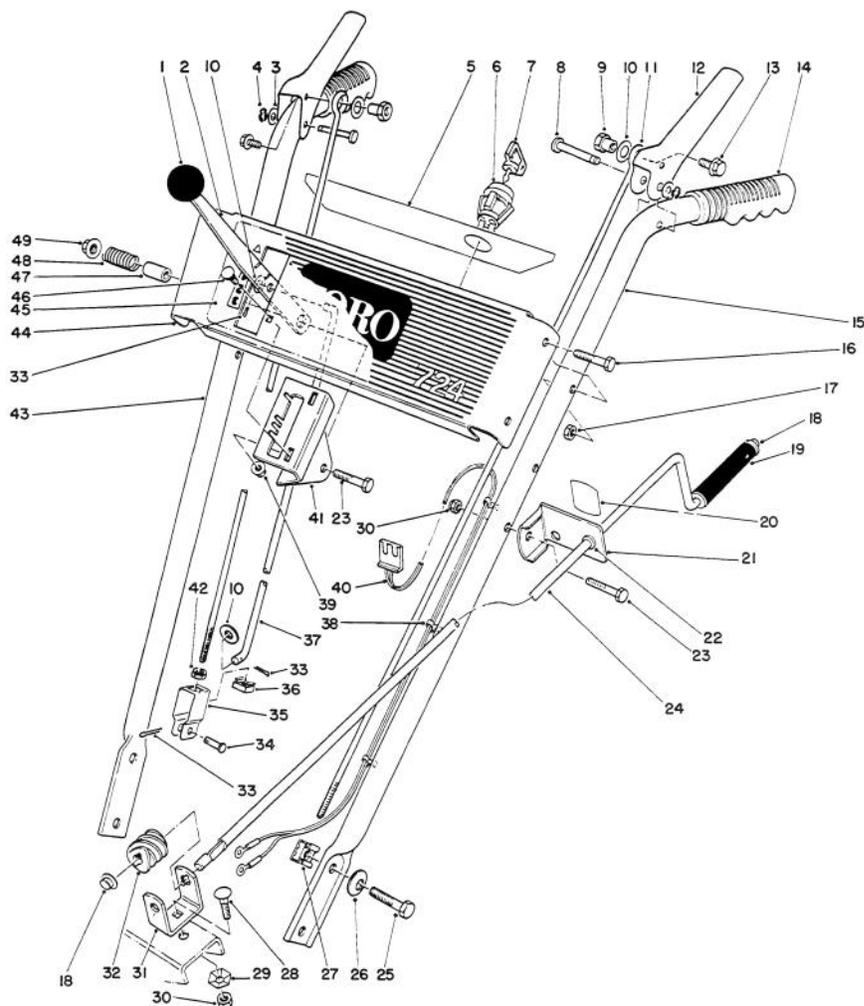


C-1279

HANDLE ASSEMBLY (Cont.)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
43	52-5561	Handle - Right (Model 38072)	1	46	3229-11	Bolt - Carriage	2
*	52-5560	Handle - Right (Model 38073)	1	47	40-8130	Spacer - Speed Selector	1
44	43-7360	Panel - Escutcheon	1	48	37-9150	Spring	1
45	88-0740	Decal - 724	1	49	32128-13	Nut - Flange Lock	1
				*	3290-378	Cable Tie	2

*Not Illustrated

ENGINE TECUMSEH MODEL HSK70-130282S

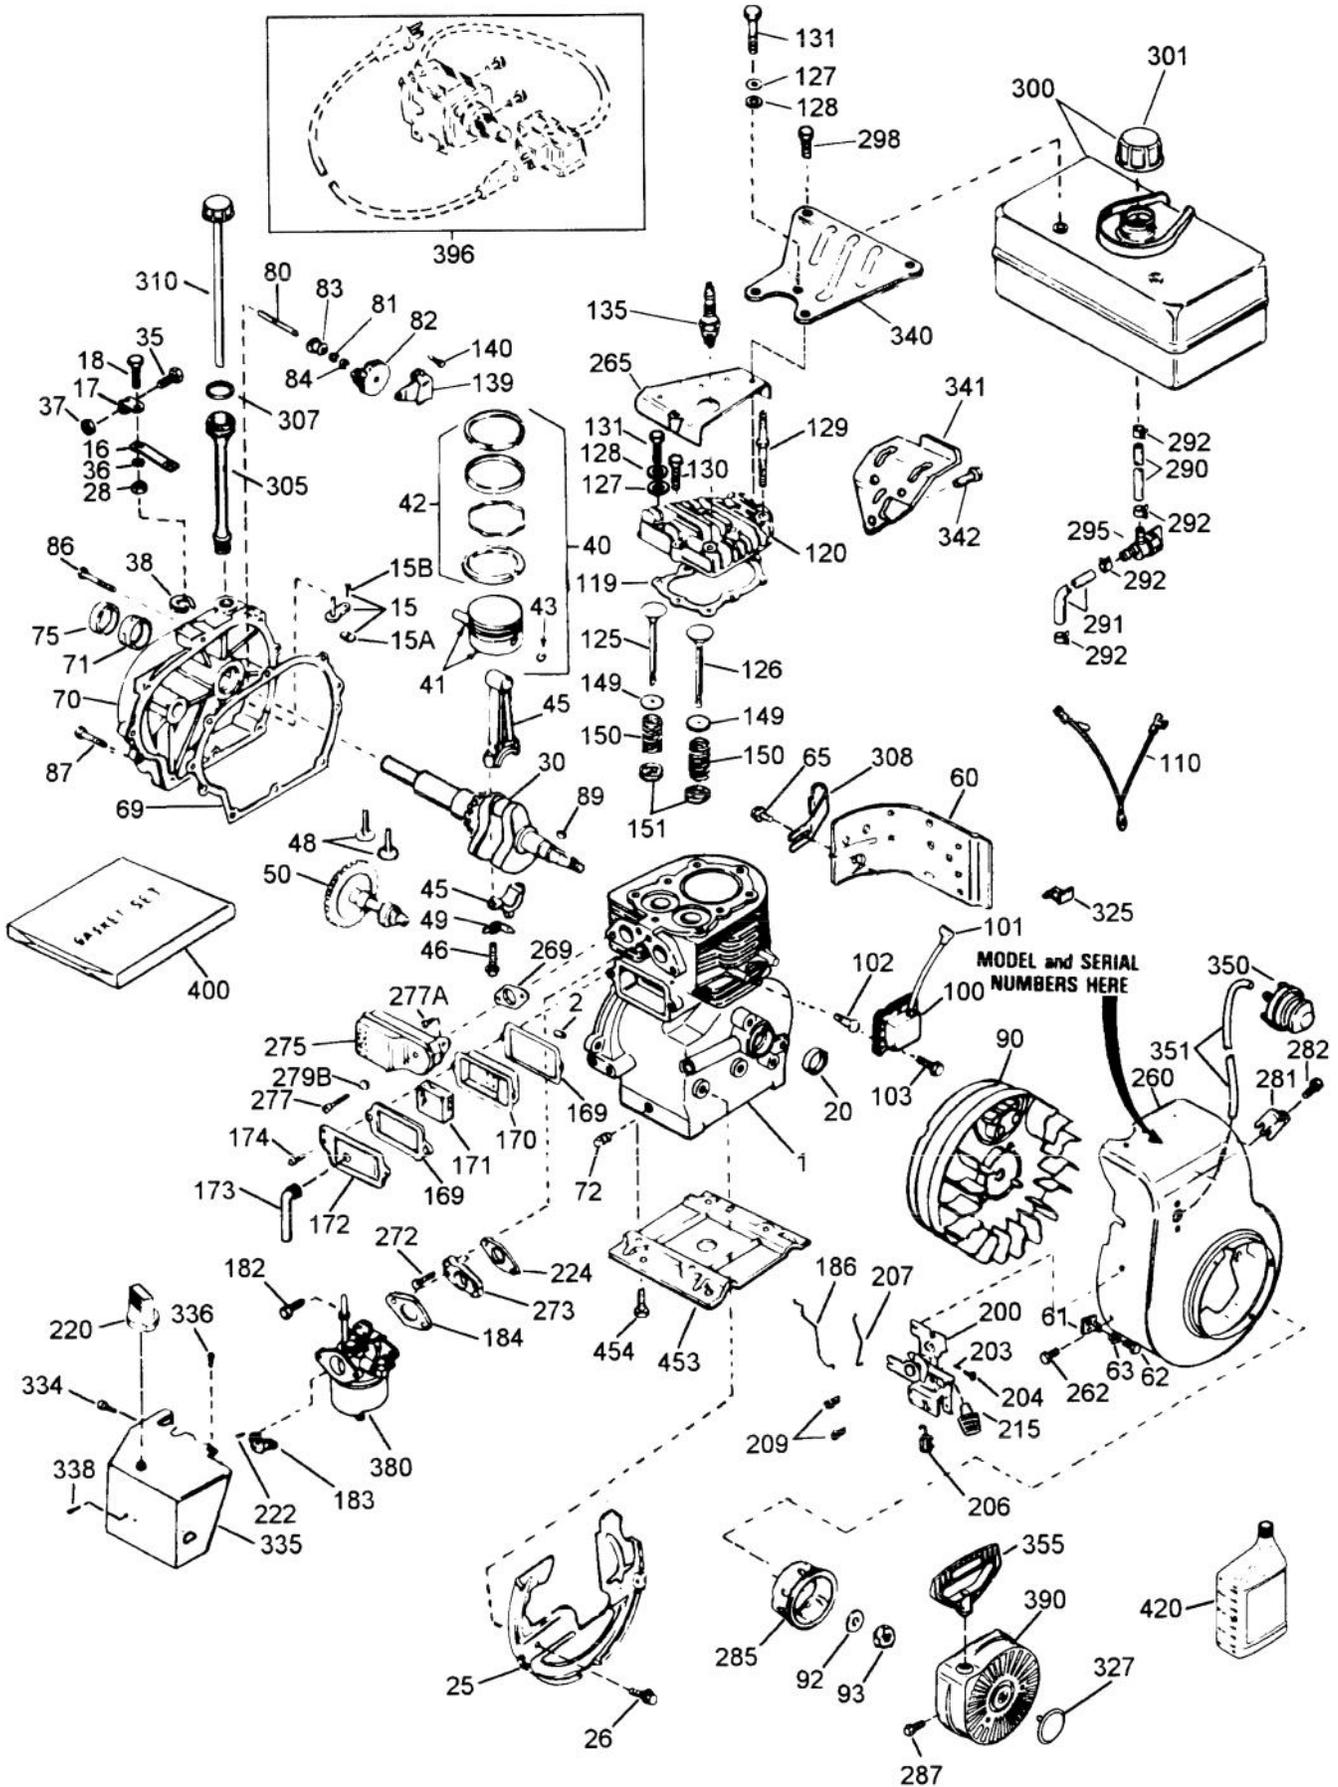


ENGINE TECUMSEH MODEL HSK70-130282S

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32586C	Cylinder (Incl. Ref. #2 & 20)	1	87	650493	Screw	1
2	27652	Dowel Pin	2	89	32589	Flywheel Key	1
15	30699C	Governor Rod (Incl. Ref. #15A & 15B)	1	90	611085	Flywheel	1
15A	30700	Governor Yoke	1	92	650815	Belleville Washer	1
15B	650494	Screw	1	93	650871	Flywheel Nut	1
16	33454	Governor Lever	1	100	34443A	Solid State Ignition	1
17	29916	Governor Lever Clamp	1	101	610118	Spark Plug Cover	1
18	650548	Screw	1	102	650872	Solid State Mounting Stud	2
20	32630	Oil Seal	1	103	650814	Screw, Torx T-15	2
25	35326	Blower Housing Baffle	1	110	35253	Ground Wire	1
26	650561	Screw	2	*119	36453	Cylinder Head Gasket	1PK
28	30322	Lock Nut	1	120	36446	Cylinder Head (Incl. 3 of 131)	1
30	35272	Crankshaft	1	125	27878A	Exhaust Valve (Std.) (Incl. Ref. #151)	1
35	29826	Screw	1	125	27880A	Exhaust Valve (1/32" OS) (Incl. Ref. #151)	1
36	29918	Lock Washer	1	126	32784	Intake Valve (1/32" OS) (Incl. Ref. #151)	1
37	29216	Lock Nut	1	126	32783	Intake Valve (Std.) (Incl. Ref. #151)	1
38	29642	Retaining Ring	1	127	650691	Washer	3
40	34518	Piston, Pin & Ring Set (.010" OS)	1	128	650690	Belleville Washer	3
40	34519	Piston, Pin & Ring Set (.020" OS)	1	129	650697A	Screw	2
40	34517	Piston, Pin & Ring Set (Std.)	1	130	650697A	Screw	3
41	32593B	Piston & Pin Ass'y (.010" OS) (Incl. Ref. #43)	1	131	650697A	Screw	3
41	32594B	Piston & Pin Ass'y (.020" OS) (Incl. Ref. #43)	1	135	35395	Resistor Spark Plug (RJ19LM)	1
41	32592B	Piston & Pin Ass'y (Std.) (Incl. Ref. #43)	1	139	31843A	Governor Gear Bracket	1
42	32595	Ring Set (Std.)	1	140	650965	Screw, Torx T-25	2
42	32597	Ring Set (.020" OS)	1	149	27882	Valve Spring Cap	2
42	32596	Ring Set (.010" OS)	1	150	27881	Valve Spring	2
43	27888	Piston Pin Retaining Ring	2	151	32581	Valve Spring Keeper	2
45	32591C	Connecting Rod Ass'y (Incl. Ref. #46 & 49)	1	*169	27896A	Valve Cover Gasket	2PK
46	650662C	Connecting Rod Bolt	2	170	28423	Breather Body	1
48	34034	Valve Lifter	2	171	28424	Breather Element	1
49	34242	Oil Dipper	1	172	28425	Valve Cover	1
50	32115	Camshaft (MCR)	1	173	35350	Breather Tube	1
60	30622A	Blower Housing Extension	1	174	650128	Screw	2
61	34126	Grommet Mounting Bracket	1	182	650517	Screw	2
62	650760	Screw	1	183	32398	Choke Bracket	1
63	28545	Grommet	1	*184	31688A	Carburetor To Intake Pipe Gasket	1PK
65	650128	Screw	1	186	34661	Governor Link	1
69	30684	Cylinder Cover Gasket	1PK	200	34677	Control Bracket (Incl. Ref. #203, 204, & 206)	1
*70	31303C	Cylinder Cover (Incl. Ref. #71, 75, & 80)	1	203	31342	Compression Spring	1
71	31546	Crankshaft Bushing	1	204	650549	Screw	1
72	27642	Oil Drain Plug	2	206	610973	Terminal	1
75	28427	Oil Seal	1	207	34662	Throttle Link	1
80	31845	Governor Shaft	1	209	650821	Screw	2
81	30590A	Washer	1	215	35440	Control Knob	1
82	30591	Governor Gear Ass'y	1	220	35439	Control Knob	1
83	30588A	Governor Spool	1	222	28820	Screw	2
84	29193	Retaining Ring	1	*224	27915A	Intake Pipe Gasket	1PK
86	650488	Screw	7	260	36154	Blower Housing	1
				262	29747B	Screw, Torx T-40	2
				265	30939A	Cylinder Head Cover	1
				*269	35865	Exhaust Manifold Gasket	1PK
				272	30196	Screw	2
				273	34712	Carburetor Flange	1

*Included in Gasket Set Ref. #400.


ENGINE TECUMSEH MODEL HSK70-130282S

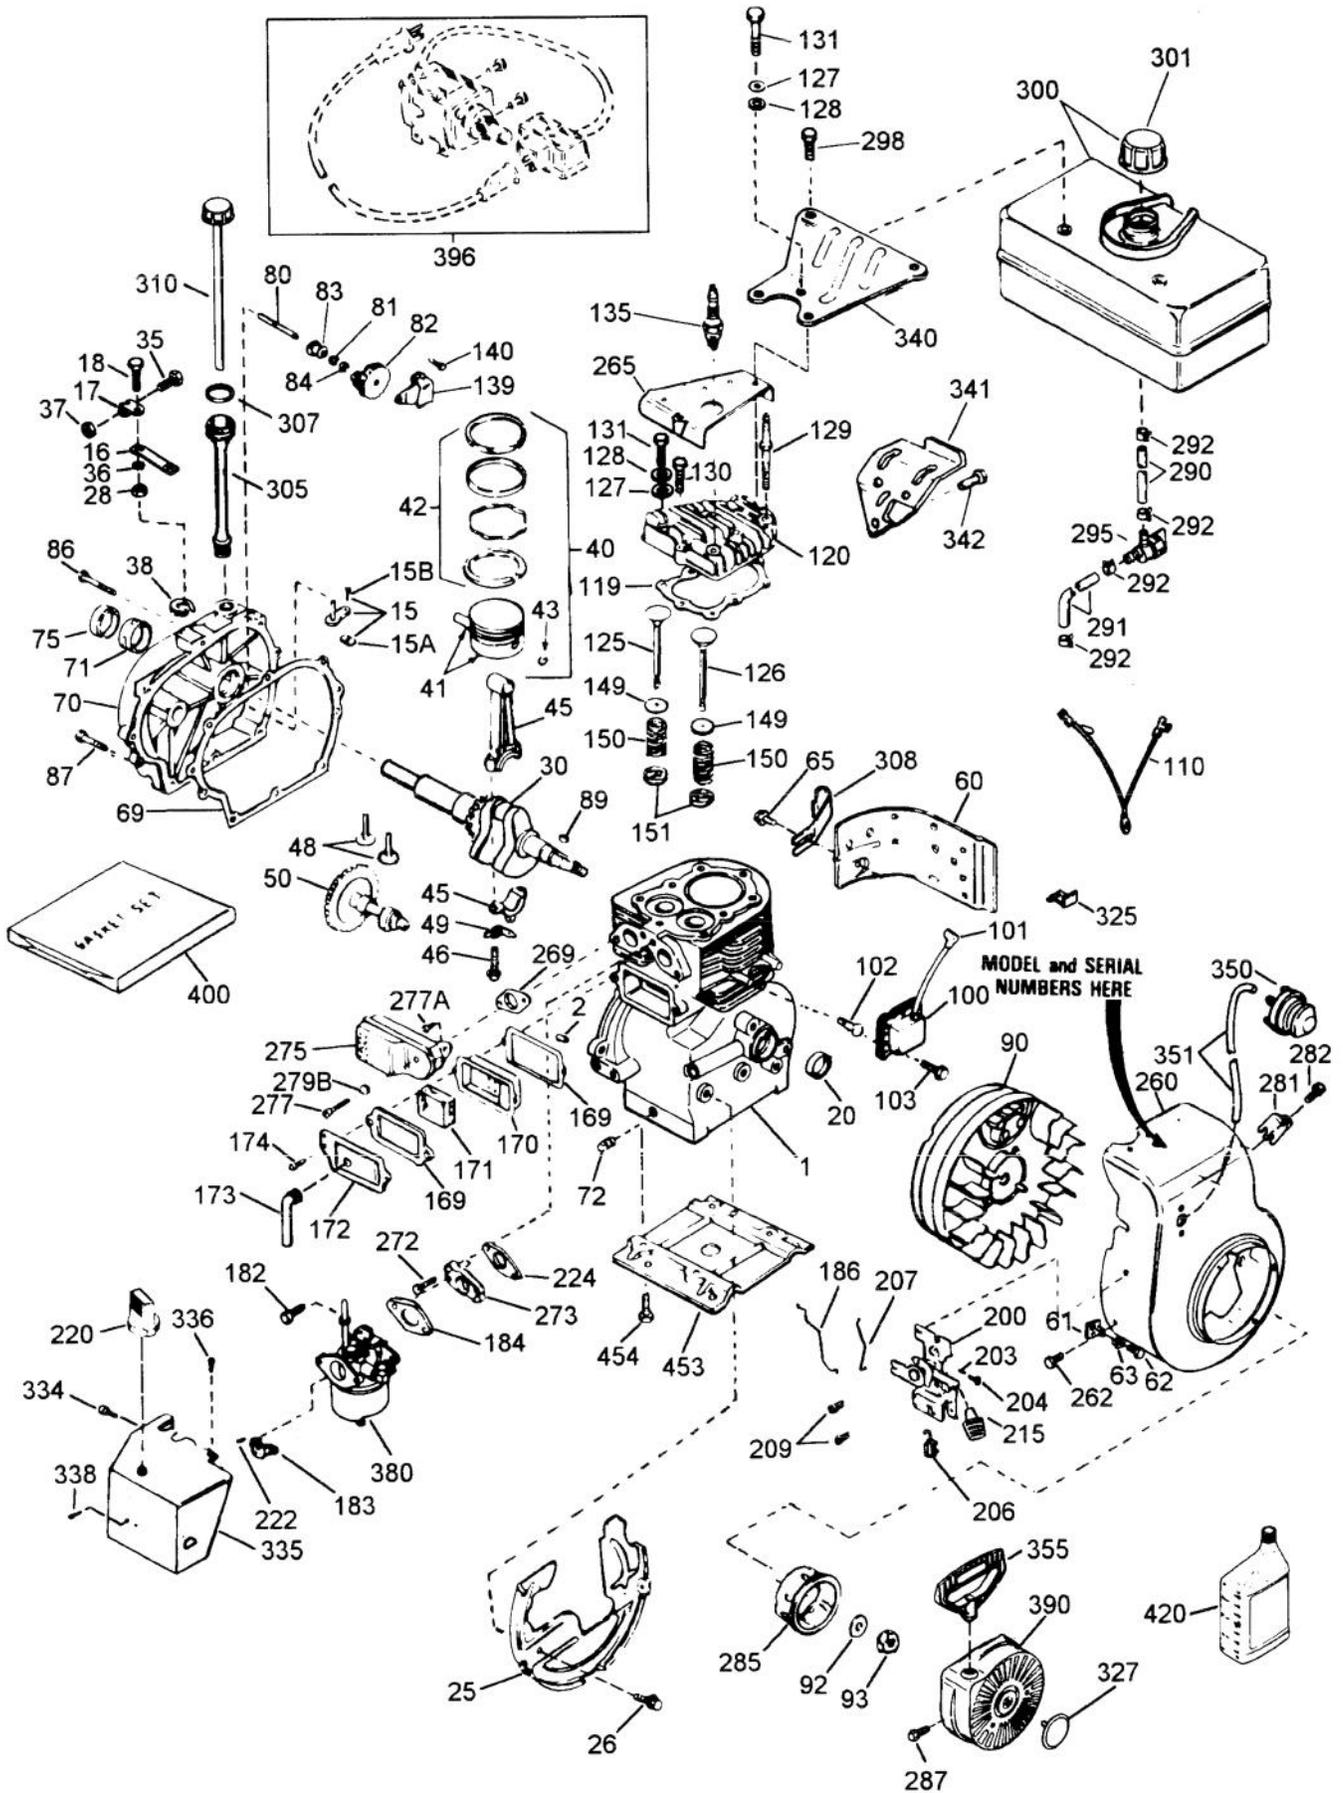

ENGINE TECUMSEH MODEL HSK70-130282S

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
275	32401	Muffler	1	327	35392	Starter Plug	1
277	650694A	Screw	1	334	650257	Screw	2
277A	30196	Screw	1	335	35060	Carburetor Cover	1
279B	26073	Washer	1	336	650765	Screw	1
281	33013	Starter Bubble Cover	1	338	650760	Screw	1
282	650760	Screw	1	340	34159	Fuel Tank Bracket	1
285	32125	Starter Cup	1	341	34158	Fuel Tank Bracket	1
287	650926	Screw	3	342	650561	Screw	1
290	29774	Fuel Line	1	350	570682	Primer Ass'y	1
291	30962	Fule Line	1	351	32180C	Primer Line	1
292	26460	Fuel Line Clamp	4	355	590574	Starter Handle	1
295	35857	Fuel Shut-Off Valve	1	380	632371A	Carburetor (Incl. Ref. #184)	1
298	650665	Screw	2	390	590646	Rewind Starter	1
299	650764	"U" Type Nut	1	396	33329D	Electric Starter Motor (Optional)	1
300	34186A	Fuel Tank (Incl. Ref. #292 & 301)	1	400	33239A	Gasket Set	1
301	35355	Fuel Cap	1	420	730225	Sae 30 4-Cycle Engine Oil (Quart)	1
305	35554	Oil Fill Tube	1	453	29058	Engine Mounting Base	1
307	35499	"O" Ring	1	454	650542	Screw	4
308	35540	Fill Tube Clip	1				
310	35555	Dipstick	1				
325	29443	Wire Clip	1				

*Included in Gasket Set Ref. #400.

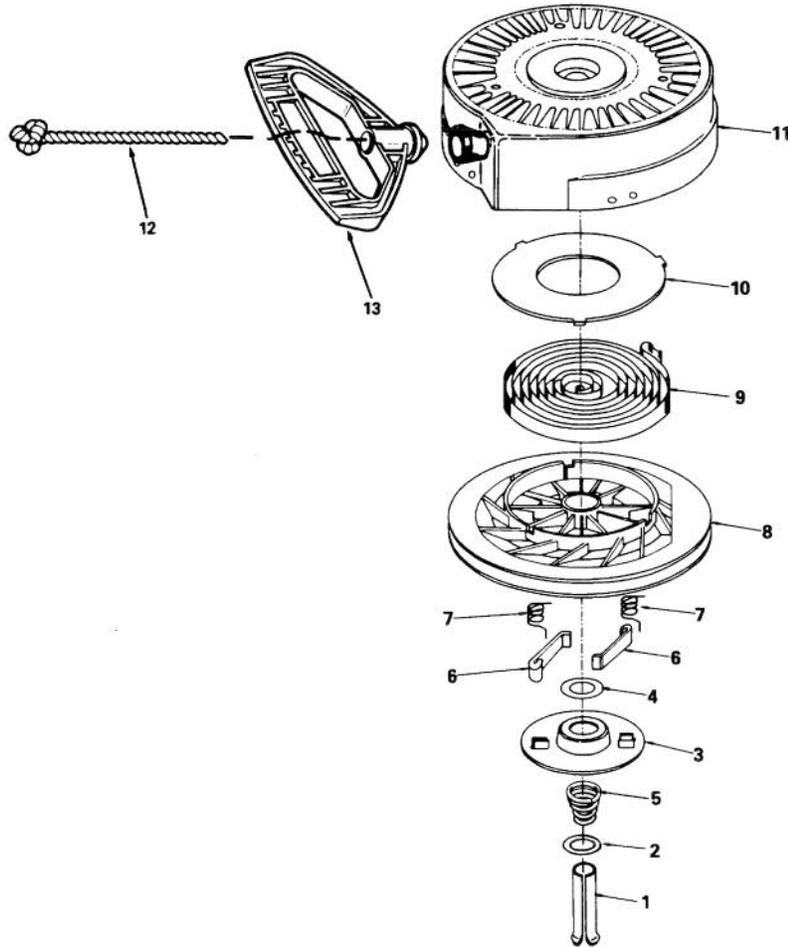


C-1758

REWIND STARTER NO. 590646

Ref. No.	Part No.	Description	No. Used
1	590599A	Pin - Spring (Incl. Ref. #4)	1
2	590600	Washer	1
3	590615	Retainer	1
4	590601	Washer	1
5	590598	Spring - Brake	1
6	590616	Dog - Starter	2
7	590617	Spring - Dog	2
8	590645A	Pulley (Incl. Ref. #9, & 10)	1

Ref. No.	Part No.	Description	No. Used
9	590619	Spring - Rewind	1
10	590620	Cover - Spring	1
11	590647	Housing Assembly	1
12	590535	Rope - 9/64" dia. 98"Lg.	1
13	590574	Handle - Mitten Grip (Not included with Starter)	1
*	590646	Starter - Rewind (Incl. Ref. #1-13)	1

*Not Illustrated

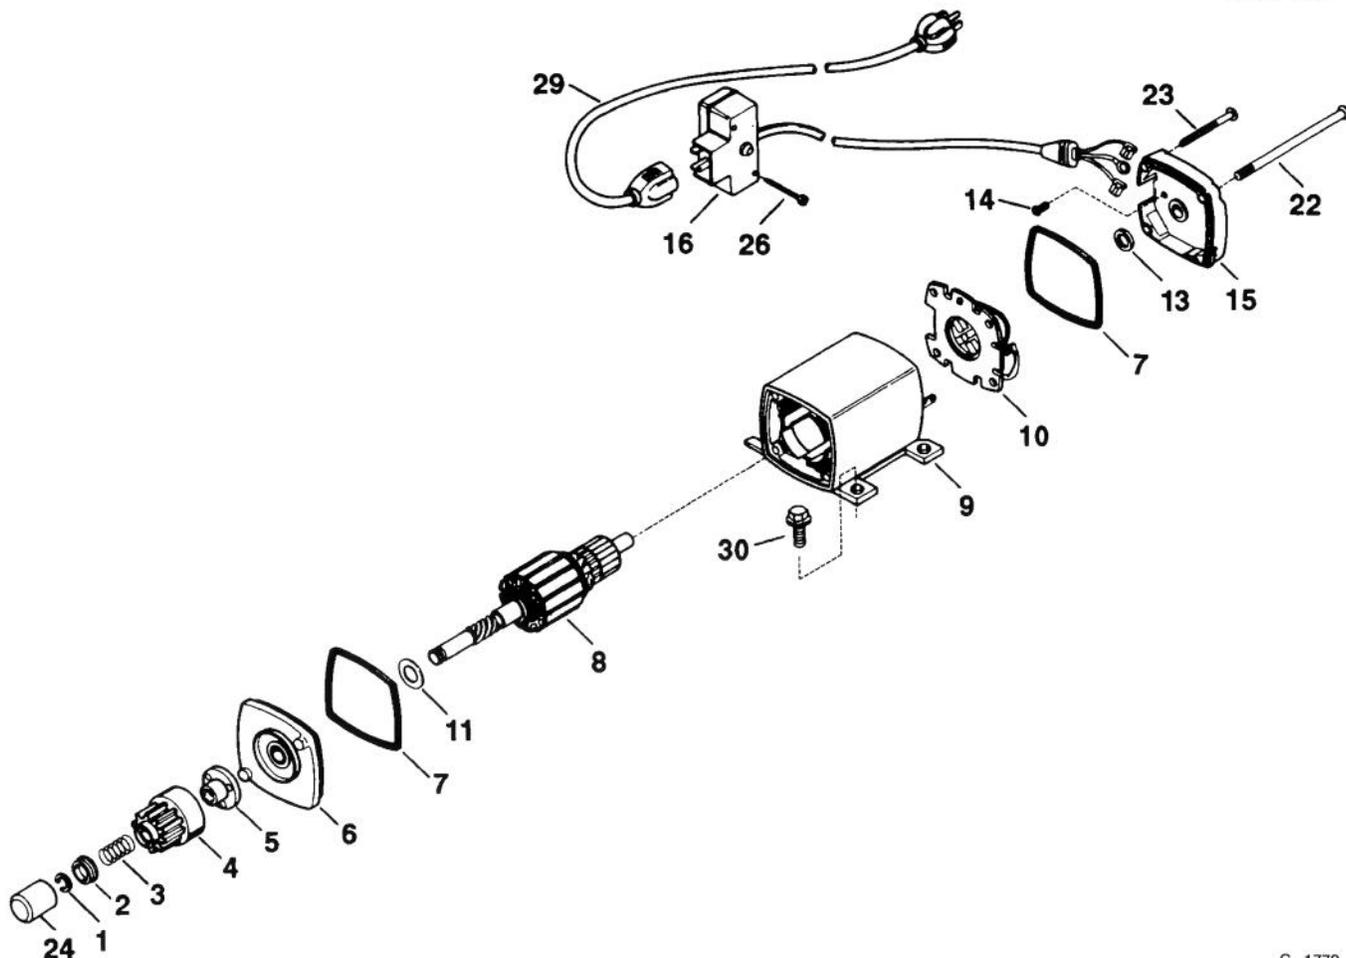


C-1772

ELECTRIC STARTER MOTOR KIT NO. 38-7590

Ref. No.	Part No.	Description	No. Used
1	33842	Ring - Retainer	1
2	33430	Retainer - Spring	1
3	33431	Spring - Anti-Drift	1
4	33432	Gear	1
5	35913	Nut & Retainer (Incl. Ref. #1)	1
6	35449	Cap Assembly - Drive End (Incl. Ref. #7)	1
7	35450	"O" Ring	2
8	35914	Armature	1
9	35457A	Housing Assembly	1
10	35452A	Card Assembly - Brush	1
11	35911	Washer - Thrust	1

Ref. No.	Part No.	Description	No. Used
13	590500	Washer - Thrust	1
14	33441	Screw - Ground	1
15	35453	Cap Assy., Commutator End (Incl. Ref. #7)	1
16	35454	Box Assembly - Switch (Incl. Ref. #26)	1
22	35458	Bolt - Case	2
23	35456	Screw - Grounding	1
24	33451	Cover - Dust	1
26	650819	Screw - Hex. Hd.	2
29	32450B	Cord - Extension, 10' 6"	1
30	30063	Screw - Hex. Hd.	4

Note: Order individual parts from your local Tecumseh dealer.

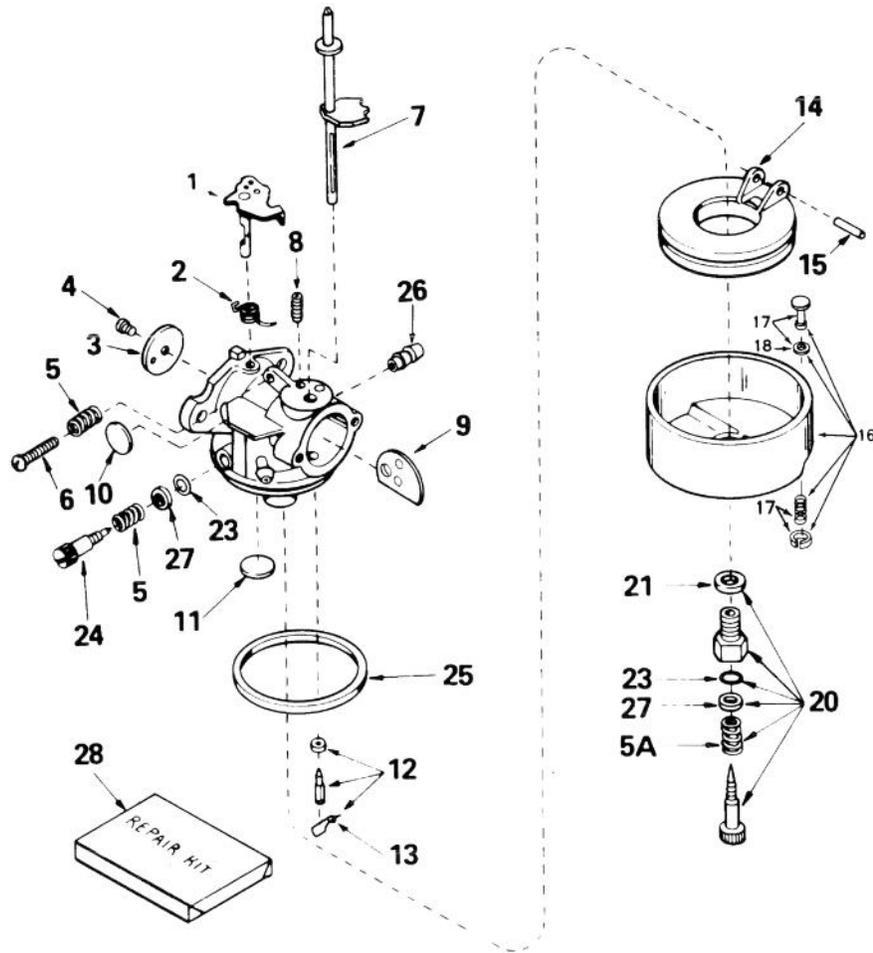

C-1773

CARBURETOR NO. 632371A

Ref. No.	Part No.	Description	No. Used
1	31834	Shaft & Lever Assembly	1
2	631767	Spring - Throttle Return	1
3	631036	Shutter - Throttle	1
4	650506	Screw	2
5	630766	Spring - Idle Screw	2
5A	630738	Spring	1
6	650417	Screw - Idle	1
7	632373	Shaft & Lever Assy.(Choke)	1
8	630735	Spring - Choke Stop	1
9	632372	Shutter - Choke	1
10	630748†	Plug - Welch	1
11	631027†	Plug - Welch	1
12	631021†	Inlet Needle - Seat & Clip (Incl. Ref. #13)	1
13	631022	Clip - Inlet Needle	1
14	632019	Float - Carburetor	1
15	631024†	Shaft - Float	1

Ref. No.	Part No.	Description	No. Used
16	631951	Bowl - Assembly (Incl. Ref. #17 & 18)	1
17	27136A	Drain Assembly - Bowl (Incl. Ref. #18)	1
18	27554	Gasket - Bow Drain	1
20	31839†	Screw Adjustment Assembly (Incl. Ref. #5A, 21, 23, & 27)	1
21	27110	Gasket - Bowl-to-Body	1
23	630740†	"O" Ring	1
24	631838†	Screw - Idle	1
25	631028†	Gasket - Bowl-to-Body	1
26	632164	Fitting - Fuel Inlet	1
27	630739	Washer - Flat	2
28	31840	Repair Kit (Incl. Items Marked †)	1
*	632371A	Carburetor (Incl. Ref. #1-28)	1

* Not Illustrated

TORO PART NUMBER INDEX

3316-332

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0737	Washer	1 14 1	40-8130	Spacer - Speed Selector	7 47 1
3-4244	Idler Pulley	5 1 1	40-8160	Skid	2 31 2
3-8664	Washer	2 47 1	40-8250	Gear - Worm	6 32 1
3-8664	Washer - Thrust	4 56 2	40-8270	Rod - Chute Control	6 24 1
5-1550	Washer - Thrust	2 34 4	40-8280	Bracket - Chute Worm	6 31 1
5-7170	Gear - Worm	2 46 1	40-8350	Screw - Shoulder	3 42 1
5-7180	Gear	2 43 1	40-9680	Spacer	3 41 1
5-7570	Washer - Thrust	3 11 2	42-3560	Bolt - Shoulder	5 5 1
7-0045	Seal - Oil	2 54 2	43-7290	Screw - Special	5 24 1
10-9280	Washer - Thrust	3 18 2	43-7310	Traction Engagement Assy.	3 37 1
12-3270	Screw - Tapping	4 63 8	43-7360	Panel - Escutcheon	7 44 1
12-7739	Bracket - Chute Control	6 21 1	43-7390	Wire Harness Assembly	6 40 1
12-8749	Chute - Discharge	1 * 1	47-4990	Post - Linkage Mounting	6 9 2
12-8789	Bearing Assembly	2 * 1	51-0460	Gasket	2 51 1
13-7979	Chute - Discharge	1 21 1	52-5560	Handle - Right	7 * 1
14-2449	Gear Case R.H.	2 52 1	52-5561	Handle - Right	7 43 1
14-2459	Gear Case L.H.	2 40 1	52-5570	Handle - Left (Model 38073)	6 * 1
14-7959	Auger Clutch	5 3 1	52-5571	Handle - Left (Model 38072)	6 15 1
14-8119	Housing - Auger	1 1 1	52-5590	Link - Upper	6 11 2
17-9120	Mount - Wire	6 38 3	52-5600	Pin - Control Lever	6 8 2
20-1620	Bearing - Friction Wheel	3 13 2	53-7570	Spring - Auger Disengage	5 2 1
20-4320	Washer - Rubber	1 13 2	53-7670	Decal - Auger Warning	1 3 1
26-9672	V-Belt - Auger	5 23 1	55-8950	Plate - Friction	1 12 2
27-0220	Screw - Self Tapping	1 28 6	56-2670	Chute - Wire	1 20 1
36-4790	Washer - Thrust	3 27 2	56-2680	Deflector	1 18 1
37-6490	Retainer - Chute Ring	1 25 3	62-5760	Decal - Primer	5 11 1
37-6500	Gear - Sliding	3 8 1	63-2310	Decal - Hot Surface Warning	5 * 1
37-6520	Gear - Axle	4 55 1	63-2420	Decal - Choke	5 9 1
37-6550	Bearing - Auger	2 35 2	63-2430	Decal - Choke	5 * 1
37-6560	Bushing - Input	2 57 1	63-3190	Decal - Throttle	5 10 1
37-6570	Wheel - Friction	3 28 1	63-3450	Bearing - Ball	1 7 1
37-6760	Shaft - Pivot	3 33 1	63-3510	Decal - Chute Direction	6 20 1
37-6780	Shaft - Hex	3 9 1	63-3640	Handle - Control	6 12 2
37-6801	Shaft - Auger	2 55 1	63-3740	Decal - Discharge	1 22 1
37-6830	Cover - Bottom	4 54 1	63-3760	Decal - Discharge	1 * 1
37-6850	Bearing - Axle	4 52 2	63-8360	Key - Ignition	6 7 1
37-6890	Pulley	1 16 1	66-6540	Grip - Rod	6 19 1
37-6900	Cover - Belt	5 28 1	66-6790	Mount - Clutch Rod Front	3 2 1
37-6961	Gear Case Assembly	2 * 1	66-6830	Decal - Escutcheon Back	6 5 1
37-6990	Shaft & Impeller	1 4 1	66-6840	Decal - Hot Surface Warning	5 12 1
37-8770	Bolt - Shoulder	3 24 3	66-6880	Decal - Escutcheon Back	6 * 1
37-8790	Mount - Quadrant Gear	3 20 1	66-8060	Molded Brake Assembly	5 29 1
37-8801	Quadrant - Gear	3 23 1	74-1350	Shaft - Axle	4 51 1
37-8821	Selector - Speed	6 2 1	74-1360	Grip - Handle	6 14 2
37-8870	Spring - Friction Plate Frame	3 46 1	74-1370	Engine Pulley	5 6 1
37-8880	Spring - Traction Engage	3 15 1	74-1420	Blade - Scraper	2 36 1
37-8900	Frame - Traction	3 5 1	74-1490	Rod - Speed Selector	6 37 1
37-8941	Ring - Chute	2 30 1	74-1590	Auger - L.H.	1 * 1
37-8990	Retainer - Belt	5 19 1	74-1600	Auger - R.H.	1 2 1
37-9070	Mount - Clutch Rod Rear	3 7 1	88-0550	Frame - Friction Plate	3 3 1
37-9090	V-Belt - Traction	5 22 1	88-0560	Hub - Frame	4 59 1
37-9150	Spring	7 48 1	88-0740	Decal - 724	7 45 1
37-9160	Intermediate Gear & Bushing	3 17 1	88-0850	Pulley & Shaft	4 57 1
38-0800	Plate - Friction	3 36 1	231-120	Tire	3 47 2
38-4490	Bracket - Traction	3 40 1	232-46	Tube	4 50 2
38-4520	Spring - Compression	3 39 1	233-21	Knob	6 1 1
38-7820	Bearing	4 60 1	237-87	Seal	2 58 1
39-1230	Bracket - Sliding	3 14 1	241-131	Rim	4 49 2
39-1250	Cam - Receiver	3 22 1	252-71	Bearing - Thrust	2 42 2
39-1280	Mount - Speed Selector	6 41 1	252-76	Bearing - Needle, Thrust	2 45 1
39-1520	Hub - Friction Wheel Mount	3 29 1	252-80	Washer - Thrust	2 50 1
39-3060	Rod - Lower Traction	3 32 1	252-80	Washer - Thrust	4 61 1
39-3080	Clevis	6 35 1	256-32	Bushing	2 49 1
40-5940	Switch - On/Off	6 6 1	256-86	Bushing	3 12 1

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
256-237	Bushing	2 53 2	3290-326	Pushnut	2 29 1
256-249	Nyliner	6 22 1	3290-340	Washer - Belleville	1 10 2
256-322	Bushing	4 58 1	3290-378	Cable Tie	7 * 2
257-3	Washer - Thrust	2 44 1	3290-456	Washer - Belleville	6 26 4
281-1	Pipe - Plug	2 41 1	3296-16	Nut - Lock	3 19 1
283-3	Pin - Clevis	6 34 1	3296-29	Nut - Lock	5 16 4
288-2	Cap	5 15 1	3296-29	Nut - Lock	3 21 9
289-9	Pipe Nipple	5 14 1	3296-29	Nut - Lock	3 25 4
321-4	Screw - Hex. Hd.	3 34 1	3296-29	Nut - Lock	6 30 2
321-9	Screw - Hex. Hd	6 16 4	3296-29	Nut - Lock	1 9 13
321-10	Screw - Cap	2 38 2	3296-42	Nut - Lock	6 17 4
322-2	Screw - Hex. Hd. Cap	3 16 10	3296-42	Nut - Lock	2 37 2
322-2	Screw - Hex. Hd. Cap	6 25 4	3296-42	Nut - Lock	3 43 1
322-4	Screw - Cap	5 18 4	3296-48	Nut - Lock	3 30 1
322-7	Screw - Hex. Hd.	6 23 2	3296-56	Nut - Lock	5 25 1
323-29	Screw - Cap	5 4 1	3296-59	Nut - Lock	5 30 1
3210-3	Screw - Cap	5 21 1	32115-5	Retainer - Nut	6 36 1
3218-1	Nut - Jam	6 42 1	32120-72	Ring - Retaining	2 48 1
3229-11	Bolt - Carriage	7 46 2	32121-31	Pin - Roll	4 53 2
3230-1	Bolt - Carriage	2 60 9	32121-45	Pin - Roll	3 35 2
3230-18	Bolt - Carriage	1 5 6	32128-13	Nut - Flange Lock	7 49 1
3230-22	Bolt - Carriage	1 19 2	32128-20	Nut - Flange	2 32 4
3230-22	Bolt - Carriage	6 28 1	32128-32	Nut - Flange	3 38 1
3234-13	Screw - Hex. Flange Hd.	6 13 2	32128-33	Nut - Flange	3 31 2
3242-4	Screw - Set	1 17 2	32128-33	Nut - Flange Lock	6 39 2
3255-8	Washer -Lock Ext. Tooth	5 20 1	32144-4	Screw - Self Tap.Hex. Hd.	3 6 8
3256-23	Washer	6 3 2	32144-4	Screw - Self Tapping	5 13 3
3256-23	Washer	1 23 3	32144-41	Screw - Self Tapping	2 56 8
3256-23	Washer - Flat	5 17 5	32144-70	Screw - Self Tap.Hex. Hd.	3 1 9
3256-24	Washer	6 10 4	32144-70	Screw - Self Tapping	1 26 4
3256-24	Washer - Flat	5 27 1	32151-36	Ring - Retaining	2 33 2
3256-68	Washer - Flat	1 11 2	32151-61	Ring - Retaining	3 44 1
3257-23	Key	1 15 1	32151-73	Ring - Clip	6 4 2
3257-23	Key - Woodruff	2 59 1	32151-103	Ring - Snap	4 62 1
3257-24	Key	3 10 1			
3257-33	Key - Woodruff	2 39 1			
3272-4	Pin - Cotter	6 33 3			
3290-196	Retainer - Nut	4 6 27			
3290-238	Washer - Pyramidal	6 29 1			
3290-243	Pin - Klik	3 48 2			
3290-320	Nut - Push	6 18 2			
3290-320	Nut - Push On	5 26 1			

OPTIONAL EQUIPMENT

110 Vac Electric Starter Kit	Part No. 38-7590
Drift Breaker	Part No. 37-7020
Light Kit	Part No. 54-9822
Tire Chain Kit	Part No. 56-2700
Snow Cab Kit	Part No. 88-0600

*Not Illustrated