



## Greensmaster® 1600 Mower

Model No. 04035 - 290000001 and up.

### Parts Catalog

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

## Contents

| Description                       | Page     | Description                       | Page     |
|-----------------------------------|----------|-----------------------------------|----------|
| Frame Assembly                    | ..... 3  | Cylinder and Crankcase Assembly   | ..... 17 |
| Engine Mount and Frame Assembly   | ..... 4  | Piston and Crankshaft Assembly    | ..... 18 |
| Reel Drive Assembly               | ..... 5  | Valve and Camshaft Assembly       | ..... 19 |
| Reel Assembly                     | ..... 7  | Lubrication Equipment Assembly    | ..... 20 |
| Drum Drive Assembly               | ..... 8  | Cooling Equipment Assembly        | ..... 21 |
| Drum and Basket Assembly          | ..... 10 | Electric Equipment Assembly       | ..... 22 |
| Differential Assembly No. 93-9041 | ..... 11 | Control Equipment Assembly        | ..... 23 |
| Inner Countershaft Assembly       | ..... 12 | Carburetor Assembly               | ..... 24 |
| Outer Crankshaft Assembly         | ..... 13 | Air Filter and Muffler Assembly   | ..... 25 |
| Engine Assembly                   | ..... 14 | Fuel Tank and Fuel Valve Assembly | ..... 26 |
| Bellcrank Assembly                | ..... 15 | Starter Assembly                  | ..... 27 |
| Handle Assembly                   | ..... 16 | Label Set                         | ..... 28 |
|                                   |          | Attachments and Accessories List  | ..... 29 |


## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                              |
|--------------------------------------------|----------------------------------------------|
| AR. .... as required                       | HYD. .... hydraulic                          |
| ASM. .... assembly                         | LH. .... left hand                           |
| BBC. .... blade brake clutch               | NI. .... nylon insert                        |
| CARR. .... carriage                        | NPTF. .... national pipe thread fine         |
| DEG. .... degrees                          | PFH. .... phillips flat head                 |
| EXT. .... external                         | PPH. .... phillips pan head                  |
| FH. .... flat head                         | PPHTF. .... phillips pan head thread forming |
| GA. .... gauge                             | PRH. .... phillips round head                |
| HD. .... heavy-duty                        | PTH. .... phillips truss head                |
| HF. .... hex flange                        | PTO. .... power-take-off                     |
| HH. .... hex head                          | RH. .... right hand                          |
| HHF. .... hex head flange                  | ROPS. .... roll-over protection system       |
| HHFTF. .... hex head flange thread forming | SFH. .... slotted fillister head             |
| HJ. .... hex jam                           | SHH. .... slotted hex head                   |
| HLH. .... hex lag head                     | SHWH. .... slotted hex washer head           |
| HOC. .... height-of-cut                    | SPH. .... slotted pan head                   |
| HSBH. .... hex socket button head          | SQH. .... square head                        |
| HSFH. .... hex socket flat head            | SRH. .... slotted round head                 |
| HSH. .... hex socket head                  | STD. .... standard                           |
| HWH. .... hex washer head                  | TAP. .... self tapping                       |
| HWHTF. .... hex washer head thread forming | TTH. .... torx truss head                    |

## Footnotes


- ❶ Not serviced separately

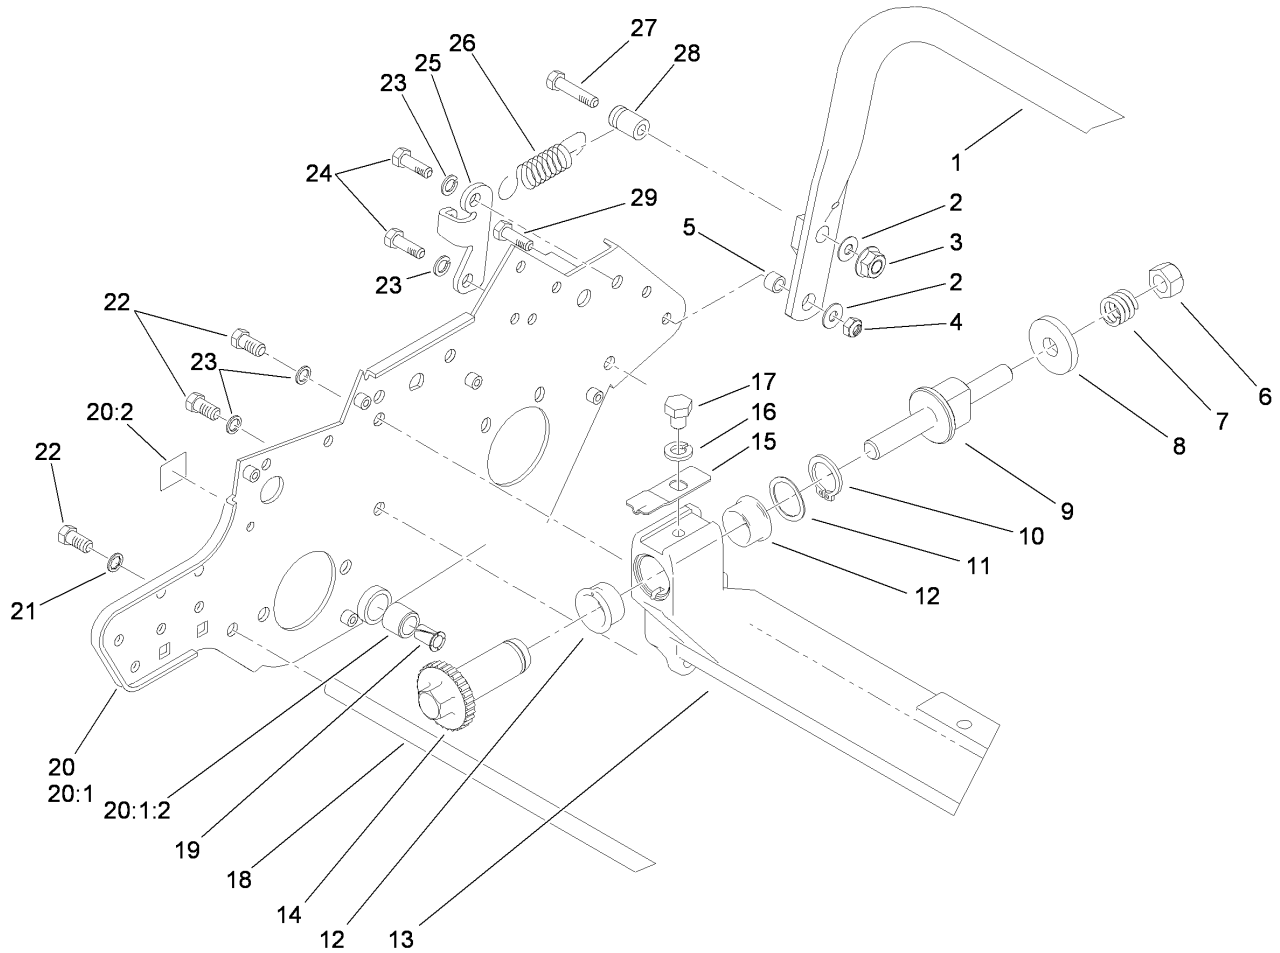

## Frame Assembly

| Ref    | Part No.    | Qty. | Description                 |
|--------|-------------|------|-----------------------------|
| 1      | 93-9019-03  | 1    | Kickstand ASM               |
| 2      | 3256-2      | 3    | Washer-Flat                 |
| 3      | 32128-25    | 1    | Nut-HF                      |
| 4      | 3296-29     | 2    | Nut-Lock, NI                |
| 5      | 65-7910     | 2    | Spacer                      |
| 6      | 33025-00    | 2    | Nut-Lock                    |
| 7      | 99-3755     | 2    | Spring-Compression          |
| 8      | 99-2098     | 2    | Washer                      |
| 9      | 99-2096     | 2    | Screw-Adjuster, Bedbar      |
| 10     | 32120-93    | 2    | Ring-Retaining              |
| 11     | 106-5335    | 2    | Washer-Wave                 |
| 12     | 106-5344    | 4    | Bushing-Flange, Keyed       |
| 13     | 108-8649-01 | 1    | Crossmember-Front           |
| 14     | 106-5363    | 2    | Shaft-Adjuster              |
| 15     | 99-2097     | 2    | Detent                      |
| 16     | 3253-4      | 2    | Washer-Lock                 |
| 17     | 322-26      | 2    | Screw-HH                    |
| 18     | 94-5867     | 1    | Rod-Frame                   |
| 19     | 52-2890     | 2    | Bushing-Nylon               |
| 20     | 94-9004     | 1    | RH Side Plate ASM           |
| 20:1   |             | 1    | RH Side Plate/Bushing ASM   |
| 20:1:2 | 63-9510     | 1    | Bushing                     |
| 20:2   | 93-9389     | 2    | Decal-Warning, Belt (Japan) |
| 20:2   | 93-9356     | 2    | Decal-Warning, Belt         |


| Ref | Part No. | Qty. | Description           |
|-----|----------|------|-----------------------|
| 21  | 3254-6   | 2    | Washer-Lock, Internal |
| 22  | 323-4    | 6    | Screw-HH              |
| 23  | 3253-21  | 6    | Washer-Lock           |
| 24  | 323-5    | 2    | Screw-HH              |
| 25  | 65-7890  | 1    | Bracket               |
| 26  | 65-7880  | 1    | Spring-Extension      |
| 27  | 322-10   | 1    | Screw-HH              |
| 28  | 65-7900  | 1    | Retainer-Spring       |
| 29  | 322-5    | 2    | Screw-HH              |

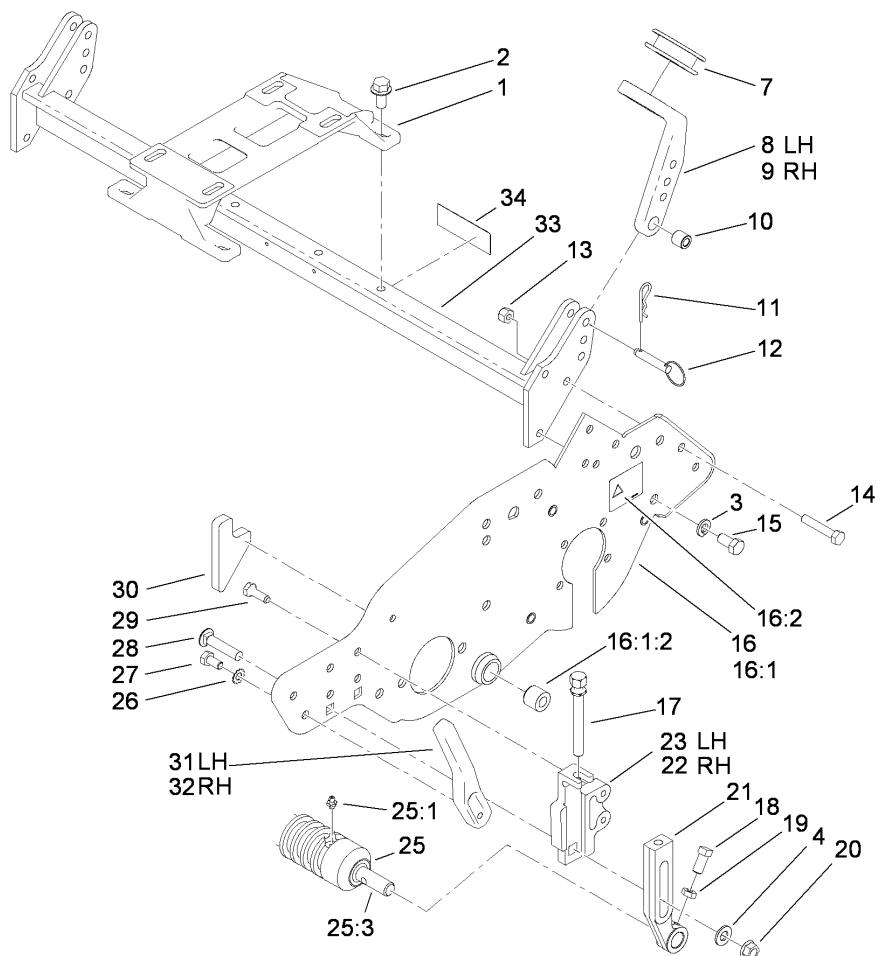

## Engine Mount and Frame Assembly

| Ref    | Part No. | Qty. | Description                 |
|--------|----------|------|-----------------------------|
| 1      | 88-7670  | 1    | Mount-Engine                |
| 2      | 3234-1   | 4    | Screw-HHF                   |
| 3      | 3253-21  | 4    | Washer-Lock                 |
| 4      | 3256-24  | 2    | Washer-Flat                 |
| 7      | 65-7510  | 2    | Grommet-Handle              |
| 8      | 93-6038  | 1    | Arm-Support, Handle (LH)    |
| 9      | 93-6037  | 1    | Arm-Support, Handle (RH)    |
| 10     | 93-6024  | 2    | Bushing-Support, Handle     |
| 11     | 3290-467 | 2    | Pin-Hair                    |
| 12     | 93-6029  | 2    | Pin-Clevis, Ring            |
| 13     | 3296-29  | 2    | Nut-Lock, NI                |
| 14     | 322-9    | 2    | Screw-HH                    |
| 15     | 323-4    | 2    | Screw-HH                    |
| 16     | 94-9005  | 1    | LH Side Plate ASM           |
| 16:1   |          | 1    | LH Side Plate/Bushing ASM   |
| 16:1:2 | 63-9510  | 1    | Bushing                     |
| 16:2   | 93-9356  | 1    | Decal-Warning, Belt         |
| 16:2   | 93-9389  | 1    | Decal-Warning, Belt (Japan) |
| 17     | 93-6051  | 2    | Screw-HOC                   |
| 18     | 3242-4   | 2    | Screw-Set, SQH              |
| 19     | 3218-2   | 2    | Nut-Jam                     |
| 20     | 32128-21 | 2    | Nut-HF                      |
| 21     | 93-6090  | 2    | Arm-HOC                     |
| 21     | 99-4286  | 2    | Arm-HOC, Extended           |


| Ref  | Part No.   | Qty. | Description           |
|------|------------|------|-----------------------|
| 22   | 93-6048    | 1    | Bracket-HOC, RH       |
| 23   | 93-6049    | 1    | Bracket-HOC, LH       |
| 25   | 93-9039    | 1    | Weihle Roller ASM     |
| 25:1 | 302-5      | 2    | Fitting-Grease        |
| 25:3 | 52-3180    | 2    | Bearing-Roller, Front |
| 26   | 3255-8     | 4    | Washer-Lock           |
| 27   | 322-2      | 4    | Screw-HH              |
| 28   | 3231-5     | 2    | Screw-CARR            |
| 29   | 92-8914    | 4    | Bolt-Face, Tapered    |
| 30   | 93-6064    | 1    | Seal-Catcher, Grass   |
| 31   | 93-9018    | 1    | Rod-Basket, LH        |
| 32   | 93-9017    | 1    | Rod-Basket, RH        |
| 33   | 93-9026-01 | 1    | Frame-Rear            |
| 34   | 115-1093   | 1    | Decal-Regulatory      |

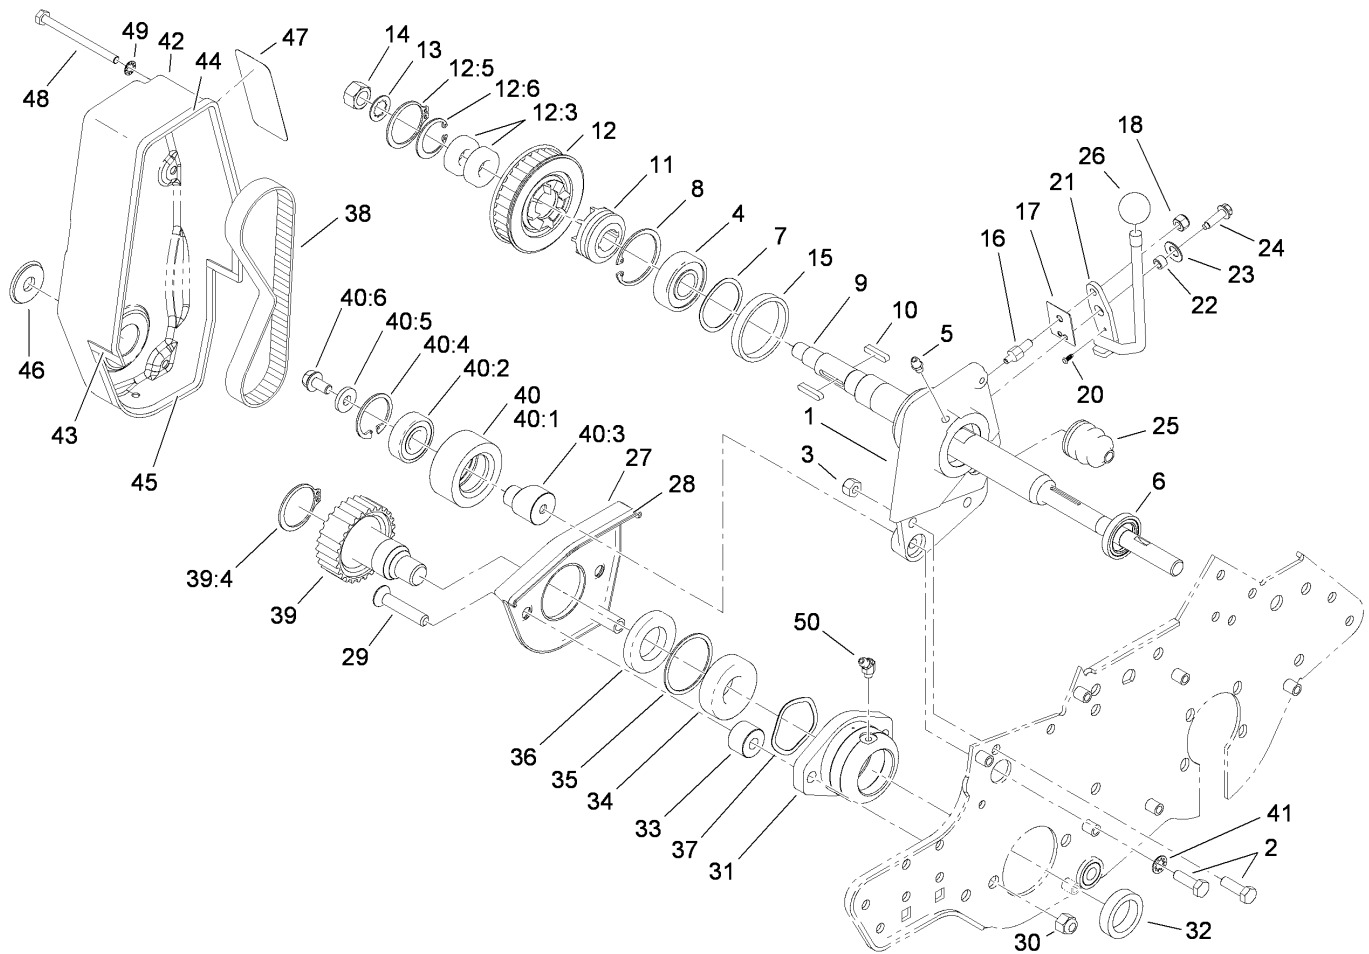

## Reel Drive Assembly

| Ref  | Part No. | Qty. | Description           |
|------|----------|------|-----------------------|
| 1    | 92-8013  | 1    | Housing-Clutch        |
| 2    | 322-5    | 3    | Screw-HH              |
| 3    | 3296-29  | 2    | Nut-Lock, NI          |
| 4    | 251-318  | 1    | Bearing-Ball          |
| 5    | 302-5    | 1    | Fitting-Grease        |
| 6    | 253-118  | 1    | Seal-Oil              |
| 7    | 88-7720  | 1    | Spring-Wave           |
| 8    | 32151-75 | 1    | Ring-Retaining        |
| 9    | 94-5872  | 1    | Shaft-Power           |
| 10   | 88-7150  | 2    | Key                   |
| 11   | 65-6940  | 1    | Clutch-Slider, Jaw    |
| 12   | 88-7830  | 1    | Clutch And Pulley ASM |
| 12:3 | 251-336  | 2    | Bearing-Ball          |
| 12:5 | 32151-95 | 1    | Ring-Retaining        |
| 12:6 | 32151-89 | 1    | Ring-Retaining, Bowed |
| 13   | 3254-4   | 1    | Washer-Lock/Int       |
| 14   | 3219-5   | 1    | Nut-Hex               |
| 15   | 65-6970  | 1    | Seal-Felt             |
| 16   | 93-9014  | 1    | Pin-Clutch, Actuator  |
| 17   | 65-6290  | 1    | Spring-Detent, Clutch |
| 18   | 3296-42  | 1    | Nut-Lock, NI          |
| 20   | 95-5731  | 1    | Screw-Drive           |
| 21   | 88-7170  | 1    | Lever-Clutch          |
| 22   | 88-7860  | 1    | Spacer                |


| Ref  | Part No.   | Qty. | Description          |
|------|------------|------|----------------------|
| 23   | 3290-414   | 1    | Washer-Belleville    |
| 24   | 80-0700    | 1    | Screw                |
| 25   | 65-8960    | 1    | Boot-Clutch          |
| 26   | 233-69     | 1    | Knob                 |
| 27   | 65-7190-01 | 1    | Cover-Arm            |
| 28   | 65-7131    | 1    | Seal-Cover, Strip    |
| 29   | 3289-23    | 2    | Capscrew             |
| 30   | 3296-39    | 2    | Nut-Lock, NI         |
| 31   | 65-8640    | 1    | Housing-Bearing      |
| 32   | 253-96     | 1    | Seal-Oil             |
| 33   | 65-8290    | 2    | Standoff-Cover       |
| 34   | 251-342    | 1    | Bearing-Ball         |
| 35   | 32151-92   | 1    | Ring-Retaining       |
| 36   | 253-163    | 1    | Seal                 |
| 37   | 3290-485   | 1    | Washer-Wave          |
| 38   | 65-6200    | 1    | Belt                 |
| 39   | 88-7840    | 1    | Pulley And Drive ASM |
| 39:4 | 32151-95   | 1    | Ring-Retaining       |
| 40   | 88-7850    | 1    | Idler Pulley ASM     |
| 40:1 | 88-7180    | 1    | Pulley-Idler         |
| 40:2 | 38-7820    | 1    | Bearing-Ball         |
| 40:3 | 88-7190    | 1    | Spacer               |
| 40:4 | 32120-42   | 1    | Ring-Retaining       |
| 40:5 | 88-7200    | 1    | Washer-Flat          |

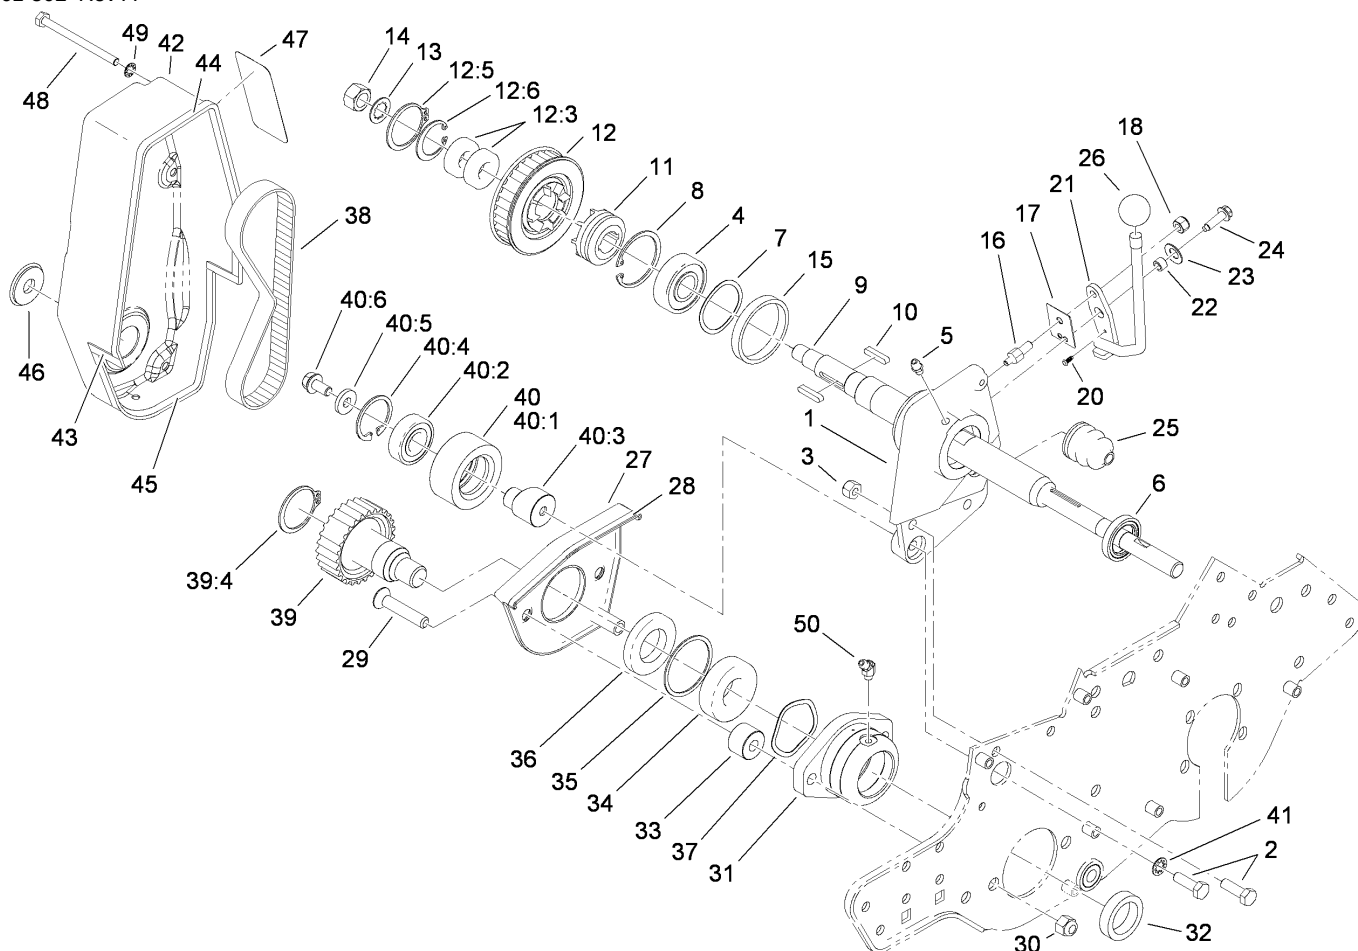

## Reel Drive Assembly (continued)


| Ref  | Part No.   | Qty. | Description                    |
|------|------------|------|--------------------------------|
| 40:6 | 3234-14    | 1    | Screw-HHF                      |
| 41   | 3254-2     | 1    | Washer-Lock, Internal          |
| 42   | 88-7700-01 | 1    | Cover-Drive, Reel              |
| 43   | 88-7770    | 2    | Strip-Seal, Front              |
| 44   | 88-7790    | 1    | Strip-Seal, Upper              |
| 45   | 88-7800    | 1    | Strip-Seal, Lower              |
| 46   | 237-160    | 1    | Plug-Rubber                    |
| 47   | 92-4817    | 1    | Decal-Engagement, Reel (Japan) |
| 47   | 93-7346    | 1    | Decal-Engagement, Reel         |
| 48   | 321-20     | 4    | Screw-HH                       |
| 49   | 3254-8     | 4    | Washer-Lock                    |
| 50   | 302-11     | 1    | Fitting-Lube, 45 DEG           |

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |

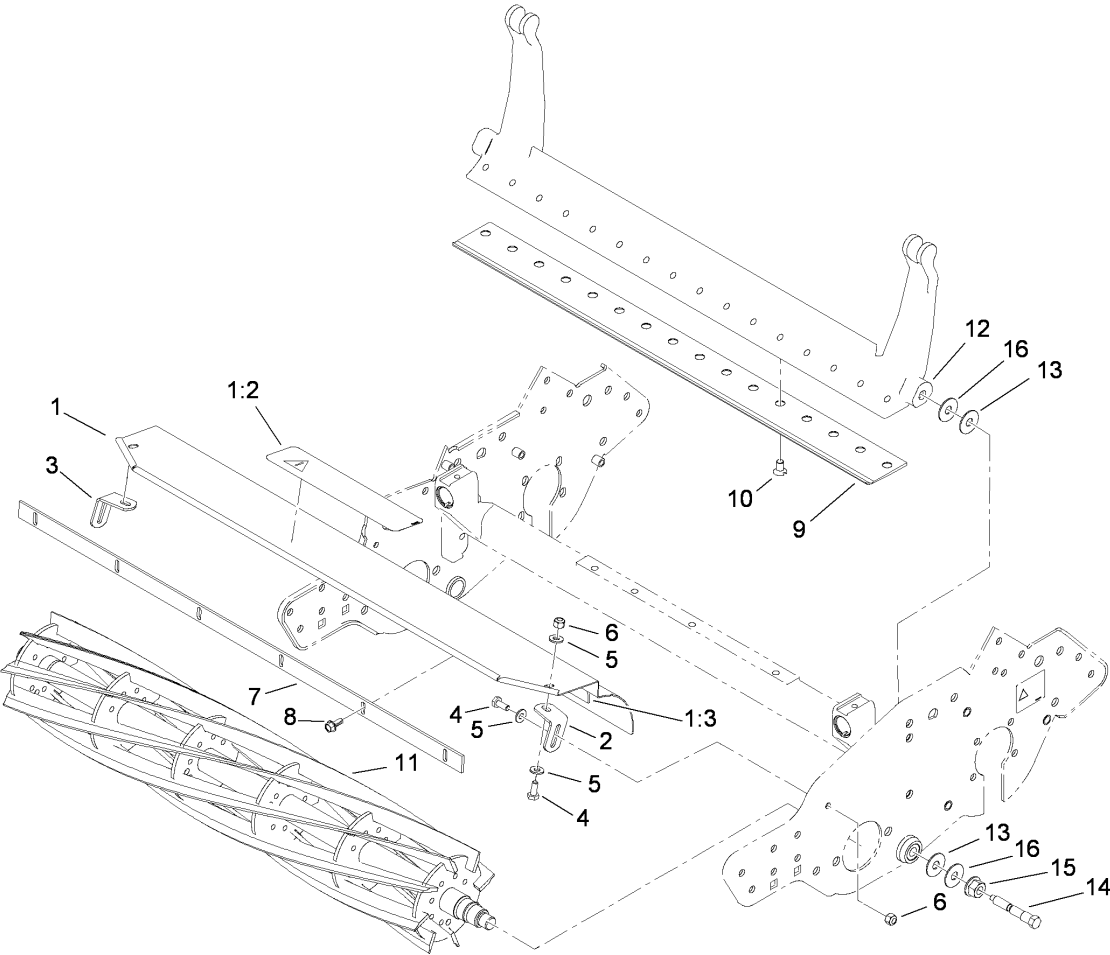

Reel Assembly

| Ref | Part No.    | Qty. | Description           |  |  |  |  |
|-----|-------------|------|-----------------------|--|--|--|--|
| 1   | 110-7370    | 1    | Grass Shield ASM      |  |  |  |  |
| 1:2 | 84-6560     | 1    | Decal-Warning (Japan) |  |  |  |  |
| 1:2 | 93-8064     | 1    | Decal-Danger, Ce      |  |  |  |  |
| 1:3 | 95-1636     | 1    | Strip-Seal            |  |  |  |  |
| 2   | 65-6450     | 1    | Bracket-LH            |  |  |  |  |
| 3   | 65-6460     | 1    | Bracket-RH            |  |  |  |  |
| 4   | 321-3       | 4    | Screw-HH              |  |  |  |  |
| 5   | 3256-22     | 6    | Washer-Flat           |  |  |  |  |
| 6   | 3296-42     | 4    | Nut-Lock, NI          |  |  |  |  |
| 7   | 94-5879     | 1    | Bar-Cut Off           |  |  |  |  |
| 8   | 104-2065    | 6    | Screw-HWH             |  |  |  |  |
| 9   | 93-9015     | 1    | Bedknife-Lowcut       |  |  |  |  |
| 10  | 57-4910     | 16   | Screw-Special         |  |  |  |  |
| 11  | 95-0900     | 1    | 8-Blade Reel ASM      |  |  |  |  |
| 12  | 112-9280-01 | 1    | Bedbar-Standard       |  |  |  |  |
| 13  | 52-2900     | 4    | Washer-Plastic        |  |  |  |  |
| 14  | 65-6270     | 2    | Bolt-Bedbar           |  |  |  |  |
| 15  | 32128-48    | 2    | Nut-Lock, HHF         |  |  |  |  |
| 16  | 52-2860     | 4    | Washer                |  |  |  |  |

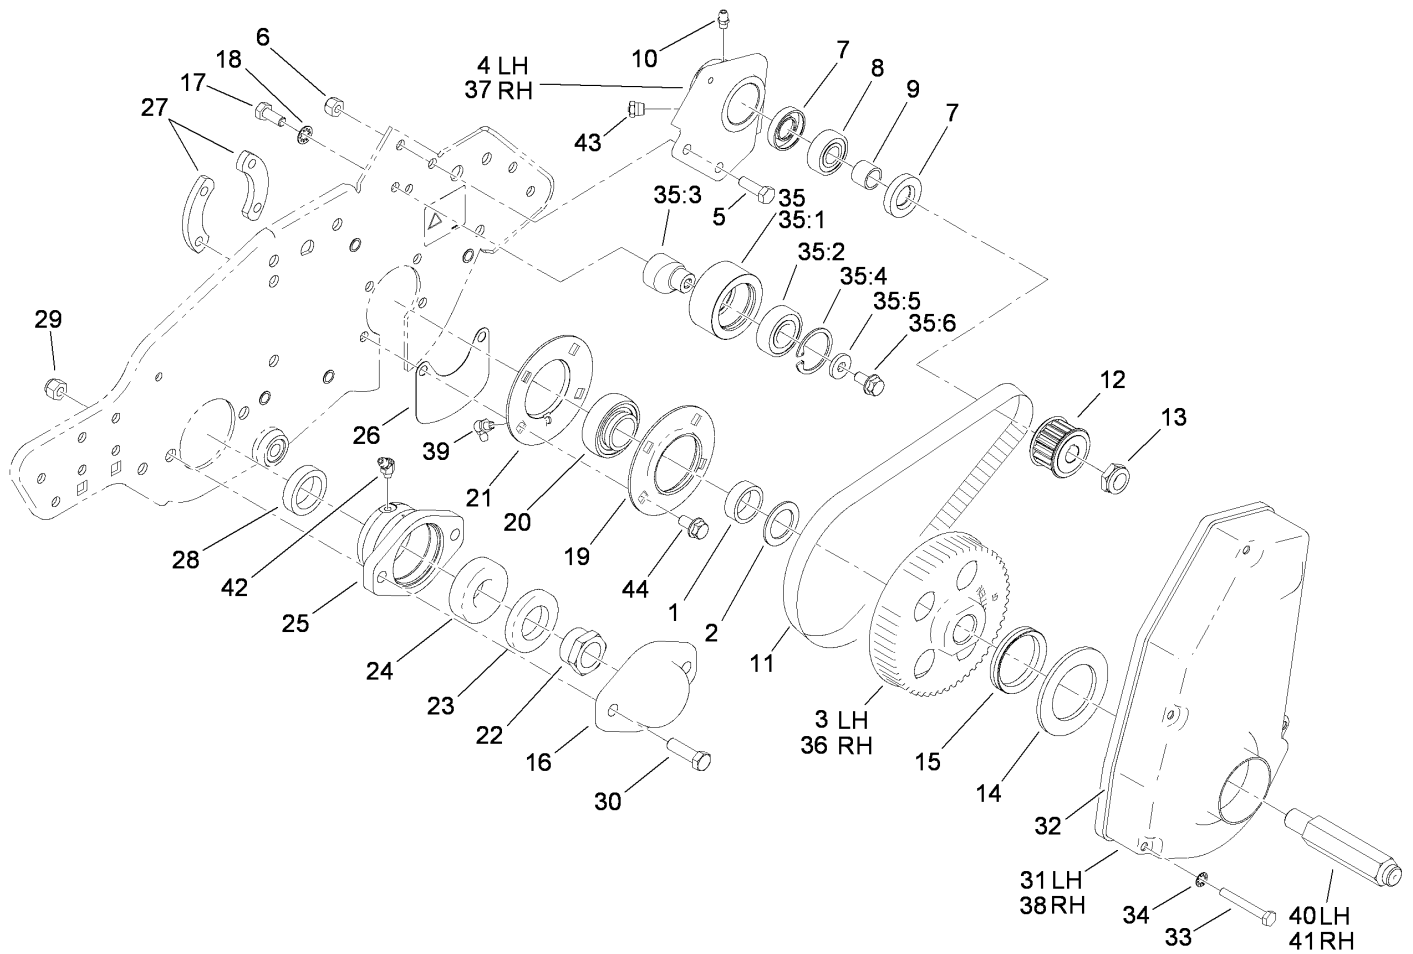


## Drum Drive Assembly

| Ref | Part No.   | Qty. | Description                        |
|-----|------------|------|------------------------------------|
| 1   | 88-7530    | 2    | Spacer                             |
| 2   | 88-7540    | 2    | Washer-Backup                      |
| 3   | 105-5365   | 1    | Pulley-Drum, LH                    |
| 4   | 108-9414   | 1    | Housing-Support, Differential (LH) |
| 5   | 322-5      | 4    | Screw-HH                           |
| 6   | 3296-29    | 4    | Nut-Lock, NI                       |
| 7   | 253-160    | 4    | Seal-Grease                        |
| 8   | 251-338    | 2    | Bearing-Ball                       |
| 9   | 86-7130    | 2    | Spacer-Pulley                      |
| 10  | 302-5      | 2    | Fitting-Grease                     |
| 11  | 65-6210    | 2    | Belt                               |
| 12  | 65-6660    | 2    | Pulley                             |
| 13  | 3296-57    | 2    | Nut-Lock, NI                       |
| 14  | 94-9018    | 2    | Washer-Plastic                     |
| 15  | 253-161    | 2    | Seal-V-Ring                        |
| 16  | 65-6220-01 | 1    | Cover-End, Reel                    |
| 17  | 322-3      | 2    | Screw-HH                           |
| 18  | 3254-2     | 2    | Washer-Lock, Internal              |
| 19  | 65-6590    | 2    | Flangette-Bearing                  |
| 20  | 88-7880    | 2    | Bearing                            |
| 21  | 95-0923    | 2    | Flangette                          |
| 22  | 92-7302    | 1    | Nut-Bearing, Lock                  |
| 23  | 253-163    | 1    | Seal                               |
| 24  | 251-342    | 1    | Bearing-Ball                       |

| Ref  | Part No.   | Qty. | Description                        |
|------|------------|------|------------------------------------|
| 25   | 65-8640    | 1    | Housing-Bearing                    |
| 26   | 65-8720    | 2    | Closure-Plate, Side                |
| 27   | 65-8730    | 4    | Clamp-Bearing                      |
| 28   | 253-96     | 1    | Seal-Oil                           |
| 29   | 3296-39    | 2    | Nut-Lock, NI                       |
| 30   | 323-7      | 2    | Screw-HH                           |
| 31   | 88-7680-01 | 1    | Cover-Belt Drum, LH                |
| 32   | 88-7810    | 2    | Seal-Strip, Drum Cover             |
| 33   | 321-11     | 8    | Screw-HH                           |
| 34   | 3254-8     | 8    | Washer-Lock                        |
| 35   | 88-7850    | 2    | Idler Pulley ASM                   |
| 35:1 | 88-7180    | 1    | Pulley-Idler                       |
| 35:2 | 38-7820    | 1    | Bearing-Ball                       |
| 35:3 | 88-7190    | 1    | Spacer                             |
| 35:4 | 32120-42   | 1    | Ring-Retaining                     |
| 35:5 | 88-7200    | 1    | Washer-Flat                        |
| 35:6 | 3234-14    | 1    | Screw-HHF                          |
| 36   | 105-5364   | 1    | Pulley-Drum, RH                    |
| 37   | 108-9416   | 1    | Housing-Support, Differential (RH) |
| 38   | 88-7690-01 | 1    | Cover-Drum, Belt (RH)              |
| 39   | 104-1843   | 2    | Fitting-Grease, 90 DEG             |
| 40   | 88-7580    | 1    | Shaft-Wheel, Transport (LH)        |
| 41   | 88-7590    | 1    | Shaft-Wheel, Transport (RH)        |
| 42   | 302-11     | 1    | Fitting-Lube, 45 DEG               |






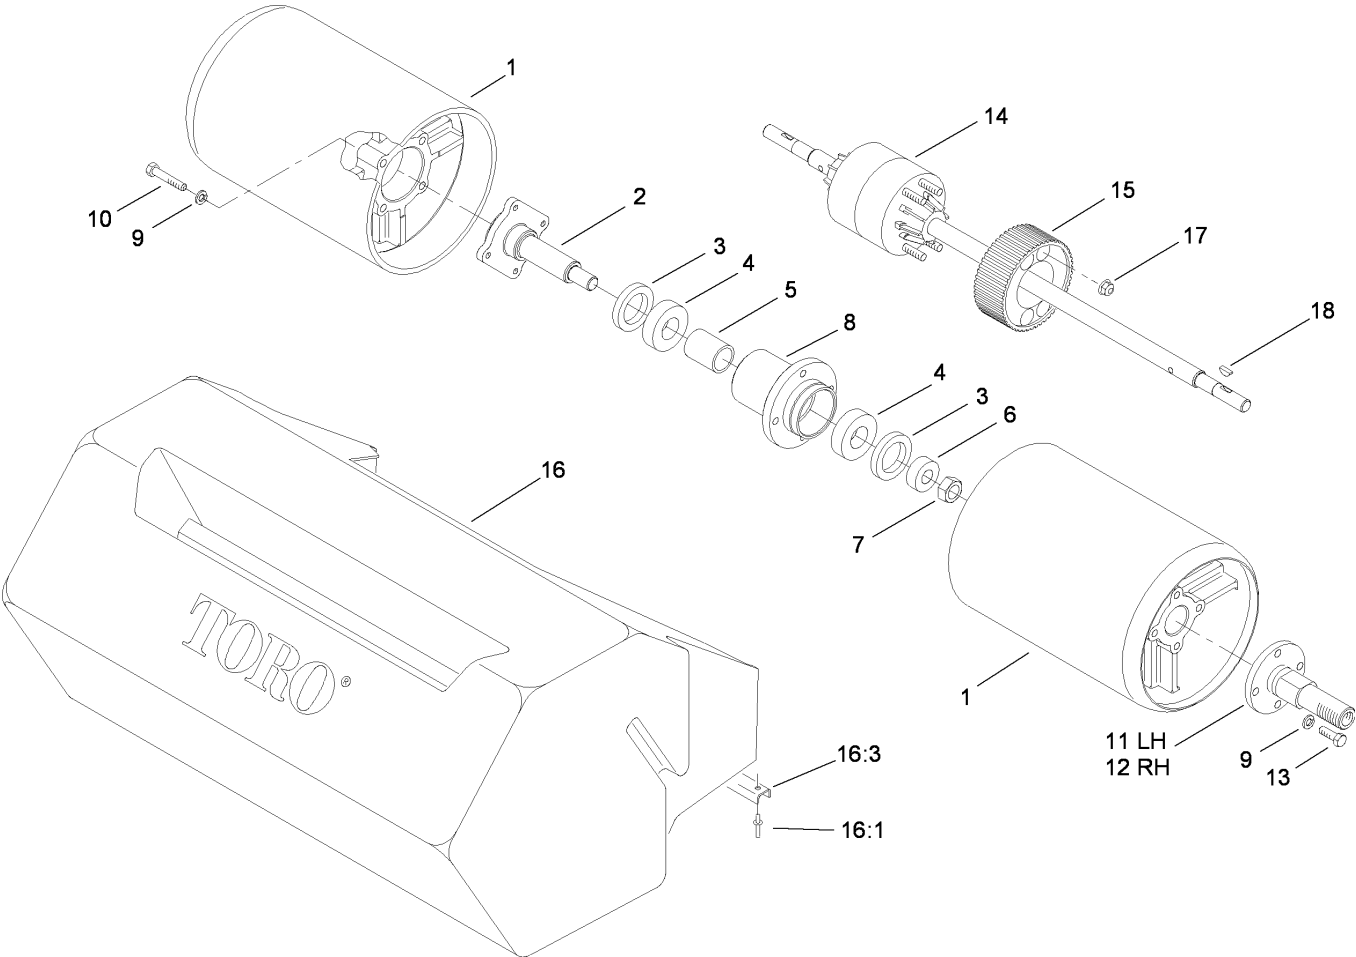


Drum and Basket Assembly

| Ref  | Part No. | Qty. | Description                  |  |  |  |  |
|------|----------|------|------------------------------|--|--|--|--|
| 1    | 93-9042  | 2    | Drum-Long                    |  |  |  |  |
| 2    | 94-5850  | 1    | Spindle-Drum                 |  |  |  |  |
| 3    | 253-159  | 2    | Seal                         |  |  |  |  |
| 4    | 251-82   | 2    | Bearing-Ball                 |  |  |  |  |
| 5    | 65-6520  | 1    | Spacer                       |  |  |  |  |
| 6    | 65-6530  | 1    | Spacer                       |  |  |  |  |
| 7    | 3296-33  | 1    | Nut-Lock, NI                 |  |  |  |  |
| 8    | 94-5852  | 1    | Hub-Drum                     |  |  |  |  |
| 9    | 3253-4   | 16   | Washer-Lock                  |  |  |  |  |
| 10   | 322-9    | 8    | Screw-HH                     |  |  |  |  |
| 11   | 88-7520  | 1    | Shaft-Extension, Drum (LH)   |  |  |  |  |
| 12   | 88-7510  | 1    | Shaft-Extension, Drum (RH)   |  |  |  |  |
| 13   | 322-5    | 8    | Screw-HH                     |  |  |  |  |
| 14   | 93-9041  | 1    | Differential                 |  |  |  |  |
| 15   | 65-9120  | 1    | Pulley-Housing, Differential |  |  |  |  |
| 16   | 94-5893  | 1    | Basket ASM                   |  |  |  |  |
| 16:1 | 3290-409 | 9    | Rivet                        |  |  |  |  |
| 16:3 | 94-5894  | 1    | Channel-Basket               |  |  |  |  |
| 17   | 104-8300 | 4    | Nut-Flange, NI               |  |  |  |  |
| 18   | 3257-30  | 2    | Key-Woodruff                 |  |  |  |  |

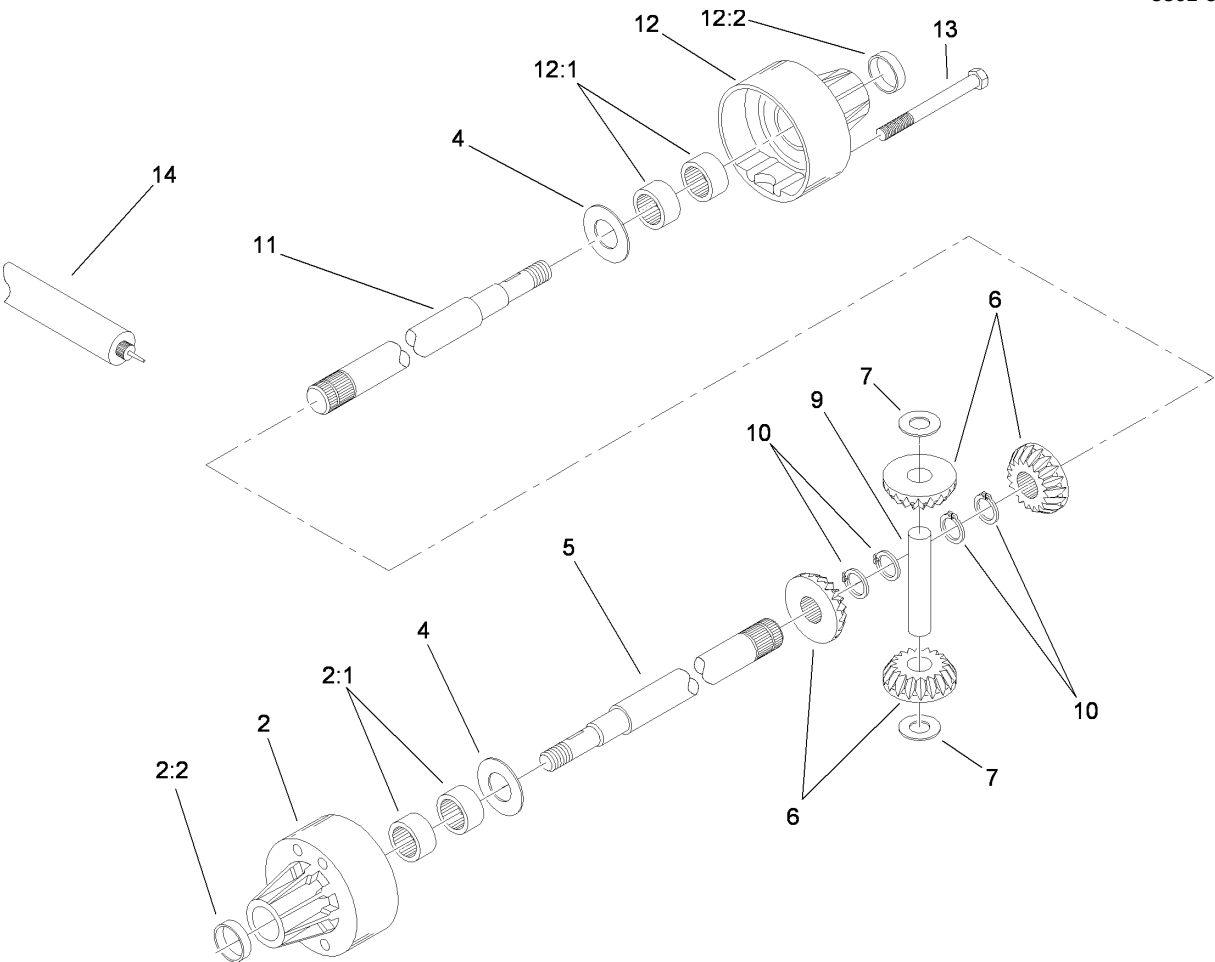

Differential Assembly No. 93-9041


| Ref  | Part No. | Qty. | Description           |  |  |  |  |
|------|----------|------|-----------------------|--|--|--|--|
| 2    | 95-5741  | 1    | Carrier-Differential  |  |  |  |  |
| 2:1  | 95-5738  | 4    | Bearing-Needle        |  |  |  |  |
| 2:2  | 95-5737  | 2    | Seal-Oil              |  |  |  |  |
| 4    | 95-5745  | 2    | Washer                |  |  |  |  |
| 5    | 95-5743  | 1    | Axle-Long             |  |  |  |  |
| 6    | 104-0503 | 1    | Gear Set-Differential |  |  |  |  |
| 7    | 95-5744  | 2    | Washer-Flat           |  |  |  |  |
| 9    | 95-5747  | 1    | Pin-Drive             |  |  |  |  |
| 10   | 95-5746  | 4    | Ring-Retaining        |  |  |  |  |
| 11   | 95-5742  | 1    | Axle-Short            |  |  |  |  |
| 12   | 95-5740  | 1    | Carrier-Differential  |  |  |  |  |
| 12:1 | 95-5738  | 4    | Bearing-Needle        |  |  |  |  |
| 12:2 | 95-5737  | 2    | Seal-Oil              |  |  |  |  |
| 13   | 95-5739  | 4    | Screw                 |  |  |  |  |
| 14   | 95-5734  | 1    | Grease                |  |  |  |  |

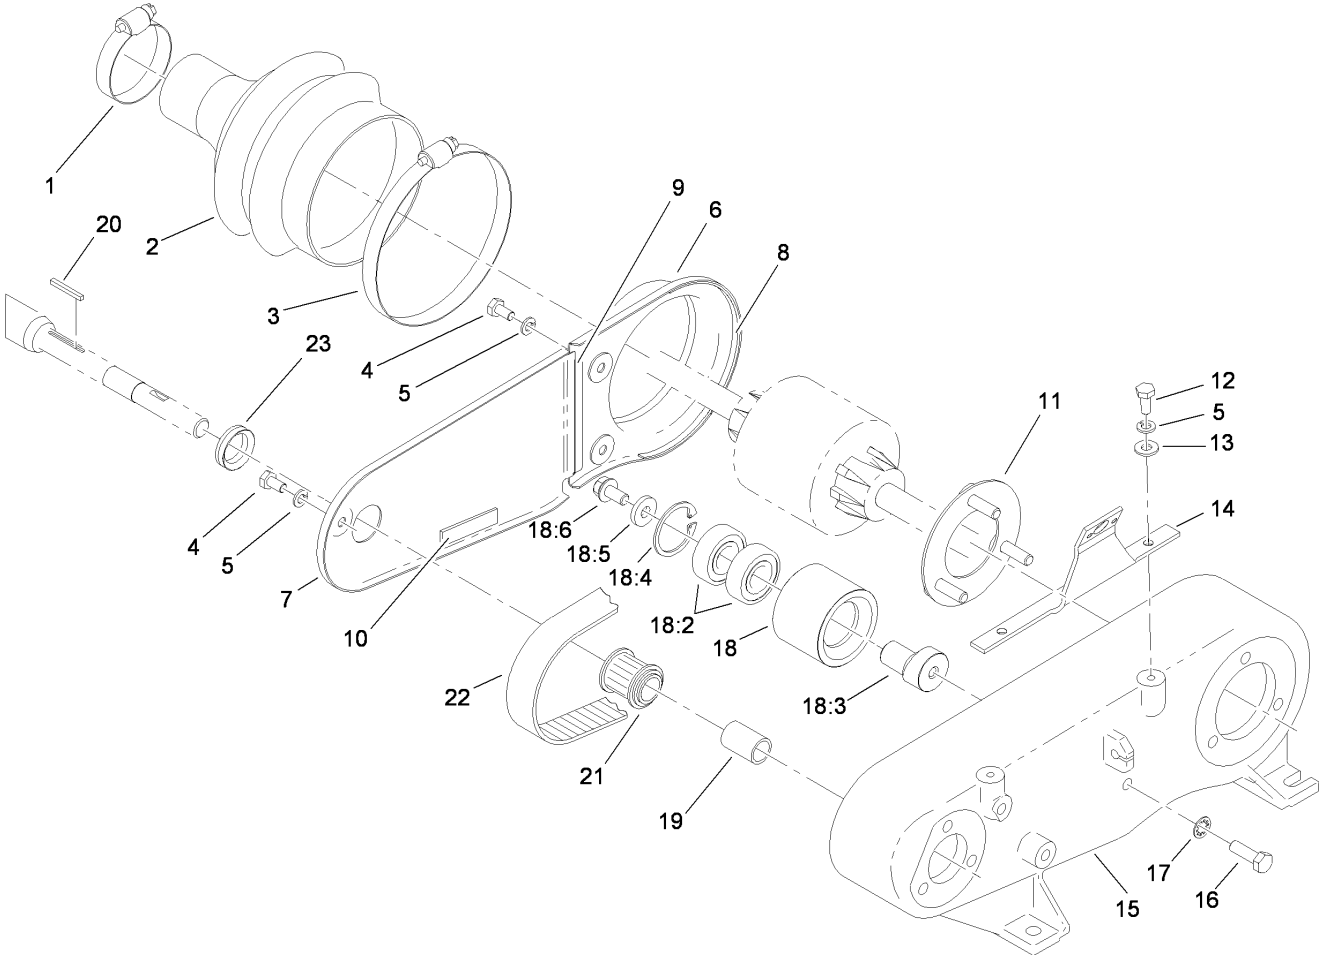

Inner Countershaft Assembly

| Ref  | Part No.   | Qty. | Description            |
|------|------------|------|------------------------|
| 1    | 2412-139   | 1    | Clamp-Hose             |
| 2    | 94-5866    | 1    | Boot-Differential      |
| 3    | 2412-140   | 1    | Clamp-Hose             |
| 4    | 321-2      | 3    | Screw-HH               |
| 5    | 3253-3     | 5    | Washer-Lock            |
| 6    | 88-7250-03 | 1    | Cover-Box, Rear        |
| 7    | 88-7240-03 | 1    | Cover-Box, Front       |
| 8    | 65-6902    | 1    | Strip-Seal, Cover      |
| 9    | 65-6903    | 1    | Strip-Seal, Cover      |
| 10   | 65-6901    | 1    | Strip-Seal, Cover      |
| 11   | 65-6720    | 1    | Plate-Screw            |
| 12   | 321-3      | 2    | Screw-HH               |
| 13   | 3256-22    | 2    | Washer-Flat            |
| 14   | 93-1448    | 1    | Bracket Cover ASM      |
| 15   | 88-7230    | 1    | Housing-Shaft, Counter |
| 16   | 322-5      | 1    | Screw-HH               |
| 17   | 3254-2     | 1    | Washer-Lock, Internal  |
| 18   | 88-7870    | 1    | Idler Pulley ASM       |
| 18:2 | 38-7820    | 2    | Bearing-Ball           |
| 18:3 | 88-7380    | 1    | Spacer-Pulley          |
| 18:4 | 32120-42   | 1    | Ring-Retaining         |
| 18:5 | 88-7200    | 1    | Washer-Flat            |
| 18:6 | 3234-14    | 1    | Screw-HHF              |
| 19   | 86-7140    | 1    | Spacer                 |


| Ref | Part No. | Qty. | Description         |
|-----|----------|------|---------------------|
| 20  | 65-6850  | 1    | Key-Square          |
| 21  | 65-8910  | 1    | Pulley-Countershaft |
| 22  | 65-9080  | 1    | Belt                |
| 23  | 88-7710  | 1    | Seal-V-Ring         |

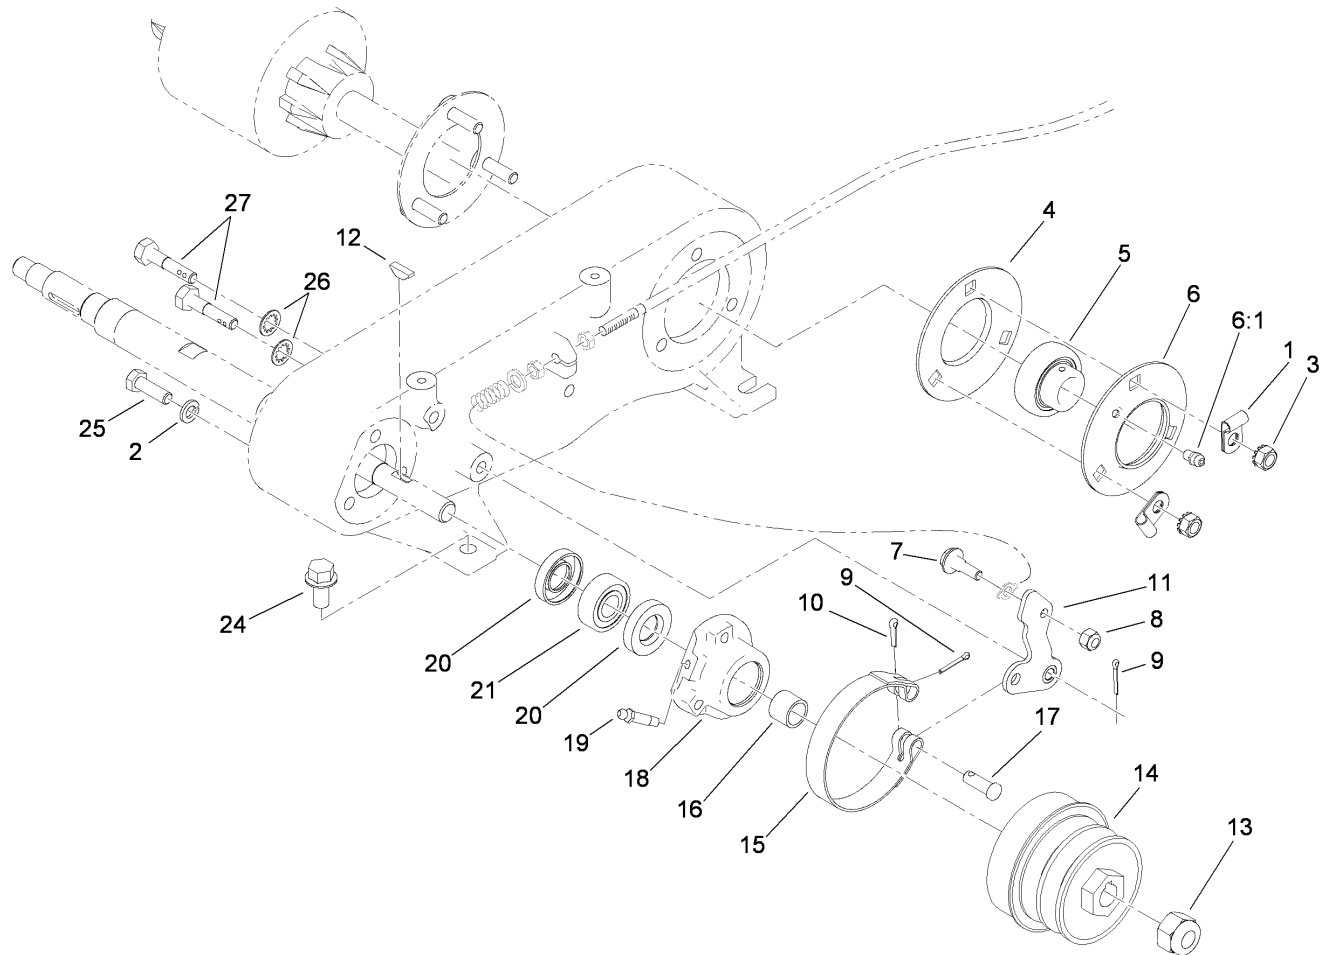

## Outer Crankshaft Assembly


| Ref | Part No. | Qty. | Description            |
|-----|----------|------|------------------------|
| 1   | 88-7970  | 2    | Clip                   |
| 2   | 3253-4   | 3    | Washer-Lock            |
| 3   | 32149-1  | 3    | Nut-Keps               |
| 4   | 65-6710  | 1    | Flangette-Bearing      |
| 5   | 108-7663 | 1    | Bearing-Race, Extended |
| 6   | 65-6700  | 1    | Flangette-Lube         |
| 6:1 | 302-55   | 1    | Fitting-Grease         |
| 7   | 11-9030  | 1    | Screw-Shoulder         |
| 8   | 3296-42  | 1    | Nut-Lock, NI           |
| 9   | 3272-6   | 2    | Pin-Cotter             |
| 10  | 3272-8   | 1    | Pin-Cotter             |
| 11  | 117-1433 | 1    | Lower Brake Lever ASM  |
| 12  | 3257-30  | 1    | Key-Woodruff           |
| 13  | 3296-63  | 1    | Nut-Lock NI            |
| 14  | 92-9212  | 1    | Pulley-Shaft, Input    |
| 15  | 65-8700  | 1    | Band-Brake             |
| 16  | 86-7130  | 1    | Spacer-Pulley          |
| 17  | 283-75   | 1    | Pin-Clevis             |
| 18  | 65-6760  | 1    | Housing-Bearing        |
| 19  | 302-64   | 1    | Fitting-Grease         |
| 20  | 253-160  | 2    | Seal-Grease            |
| 21  | 251-338  | 1    | Bearing-Ball           |
| 24  | 3234-1   | 4    | Screw-HHF              |
| 25  | 322-5    | 3    | Screw-HH               |

| Ref | Part No. | Qty. | Description           |
|-----|----------|------|-----------------------|
| 26  | 3254-6   | 2    | Washer-Lock, Internal |
| 27  | 117-1430 | 2    | Bolt-Mount, Brake     |

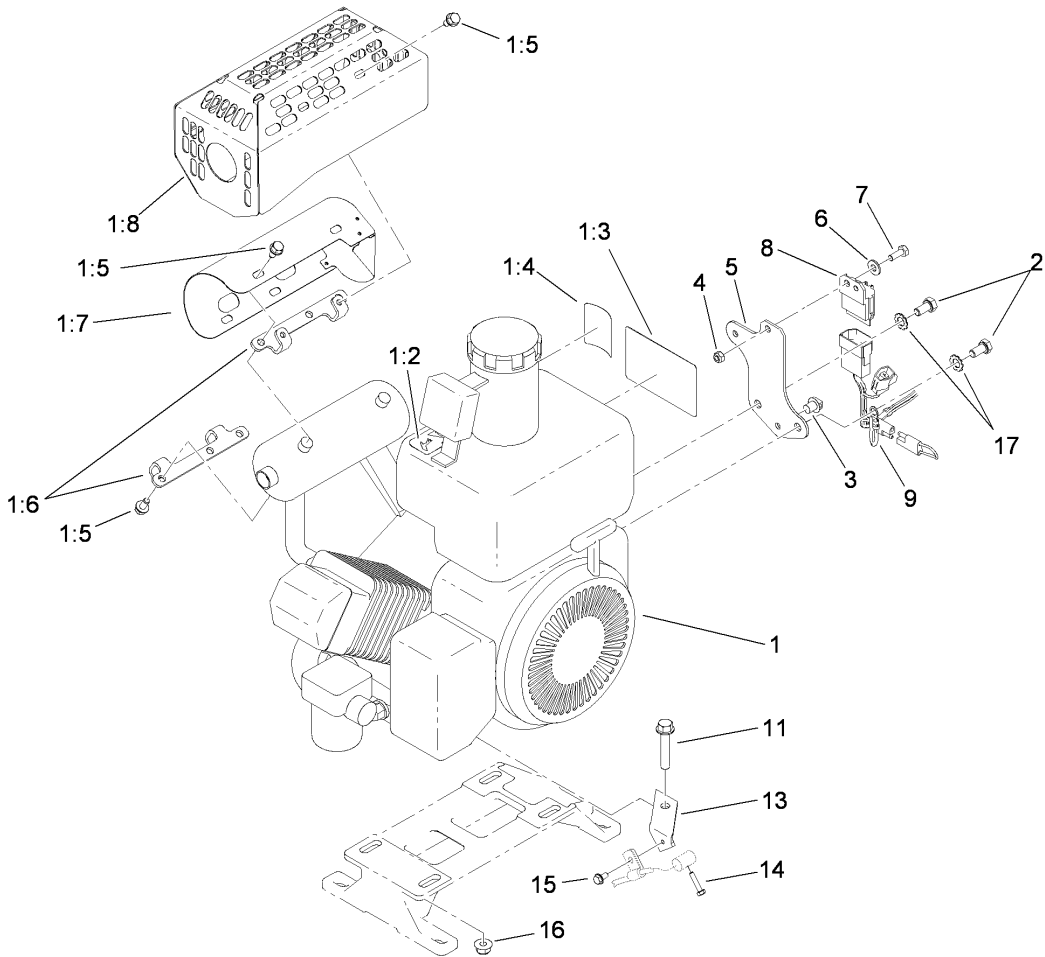

Engine Assembly


| Ref | Part No.    | Qty. | Description             |  |  |  |  |
|-----|-------------|------|-------------------------|--|--|--|--|
| 1   | 112-9402    | 1    | Engine ASM              |  |  |  |  |
| 1:2 | 115-1615    | 1    | Decal-Surface, Hot      |  |  |  |  |
| 1:3 | 115-1613    | 1    | Decal-Danger            |  |  |  |  |
| 1:4 | 93-9886     | 1    | Decal-Fuel              |  |  |  |  |
| 1:5 | 104-2628    | 8    | Screw-HWH               |  |  |  |  |
| 1:6 | 104-9771    | 2    | Bracket-Guard, Muffler  |  |  |  |  |
| 1:7 | 112-9360    | 1    | Shield-Muffler, Inner   |  |  |  |  |
| 1:8 | 112-9361-03 | 1    | Guard-Muffler           |  |  |  |  |
| 2   | 33114-016   | 2    | Screw-HH                |  |  |  |  |
| 3   | 32180-030   | 1    | Clip-Harness            |  |  |  |  |
| 4   | 33023-00    | 1    | Nut-Lock                |  |  |  |  |
| 5   | 117-1365-03 | 1    | Plate-Harness, Wire     |  |  |  |  |
| 6   | 3256-22     | 1    | Washer-Flat             |  |  |  |  |
| 7   | 33113-016   | 1    | Screw-HH                |  |  |  |  |
| 8   | 1-323430    | 1    | Module-Interlock        |  |  |  |  |
| 9   | 115-1610    | 1    | Harness-Wire            |  |  |  |  |
| 11  | 94-5780     | 4    | Screw-HWH               |  |  |  |  |
| 13  | 88-7960     | 1    | Bracket-Cable, Throttle |  |  |  |  |
| 14  | 94-9015     | 1    | Screw-HH                |  |  |  |  |
| 15  | 104-2065    | 1    | Screw-HWH               |  |  |  |  |
| 16  | 104-8300    | 4    | Nut-Flange, NI          |  |  |  |  |
| 17  | 3255-9      | 2    | Washer-Lock             |  |  |  |  |

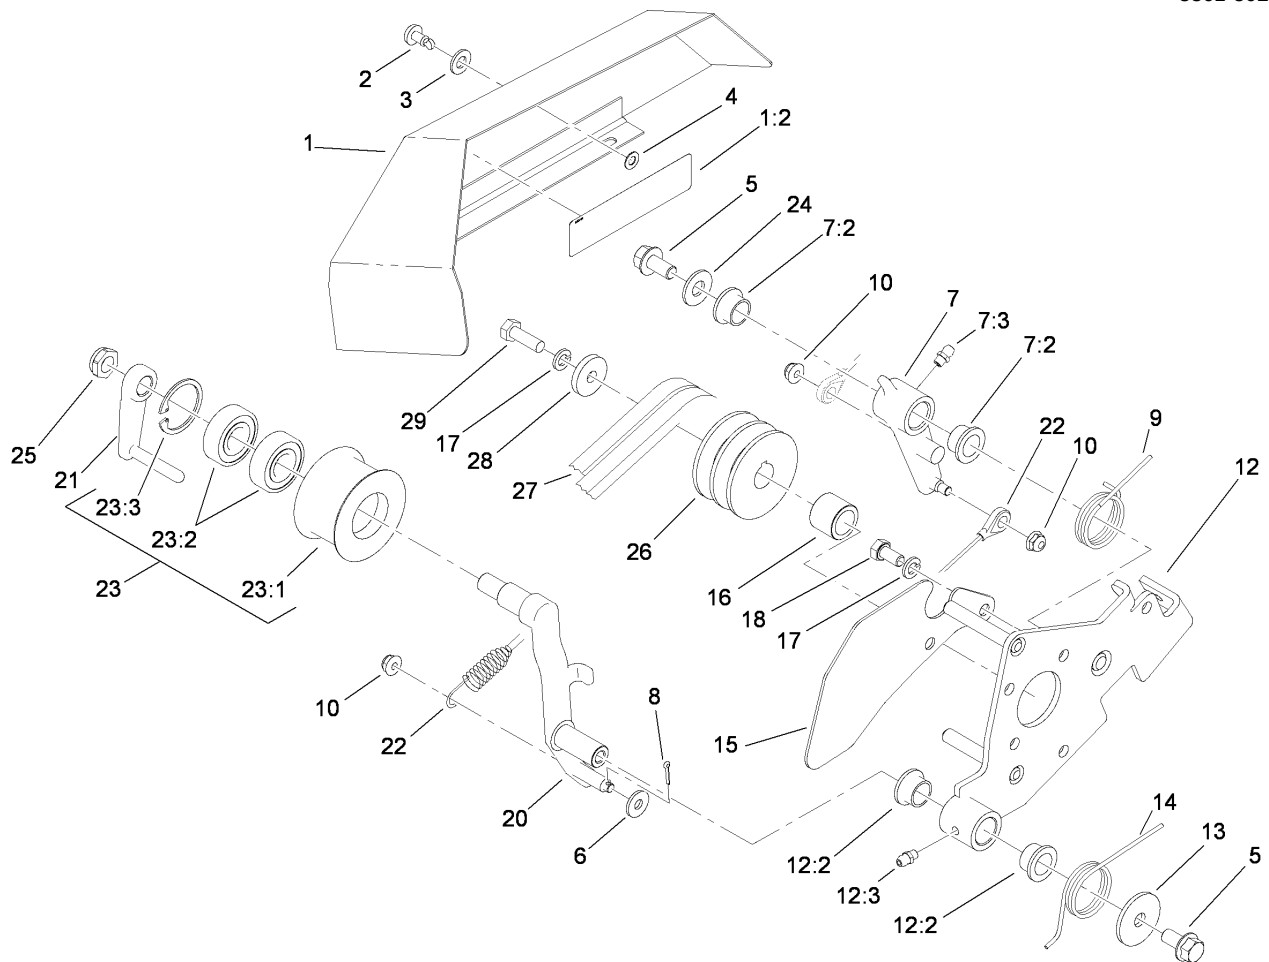

## Bellcrank Assembly

| Ref  | Part No.   | Qty. | Description                 |
|------|------------|------|-----------------------------|
| 1    | 94-9007    | 1    | Bellcrank Cover ASM         |
| 1:2  | 84-7280    | 1    | Decal-Danger, Japan         |
| 1:2  | 93-7273    | 1    | Decal-Danger                |
| 2    | 93-6074    | 1    | Stud                        |
| 3    | 3256-70    | 1    | Washer-Flat                 |
| 4    | 93-6073    | 1    | Washer-Nylon                |
| 5    | 110-1718   | 2    | Screw-HHF                   |
| 6    | 3256-78    | 1    | Washer-Flat                 |
| 7    | 112-9388   | 1    | Traction Lever ASM          |
| 7:2  | 65-8770    | 2    | Bushing-Bellcrank           |
| 7:3  | 302-5      | 1    | Fitting-Grease              |
| 8    | 3272-5     | 1    | Pin-Cotter                  |
| 9    | 93-6011    | 1    | Spring-Torsion              |
| 10   | 104-7201   | 3    | Nut-HF                      |
| 12   | 112-9398   | 1    | Clutch Bracket ASM          |
| 12:2 | 65-8770    | 2    | Bushing-Bellcrank           |
| 12:3 | 302-5      | 1    | Fitting-Grease              |
| 13   | 93-6099    | 1    | Washer                      |
| 14   | 93-6012    | 1    | Spring-Torque, Clutch Lever |
| 15   | 93-6013-03 | 1    | Shield-Belt                 |
| 16   | 65-8260    | 1    | Spacer-Shaft, Engine        |
| 17   | 3253-4     | 6    | Washer-Lock                 |
| 18   | 33114-016  | 5    | Screw-HH                    |
| 20   | 112-9392   | 1    | Lever-Clutch                |


| Ref  | Part No.  | Qty. | Description          |
|------|-----------|------|----------------------|
| 21   | 112-9390  | 1    | Guide-Belt           |
| 22   | 93-9024   | 1    | Cable Link ASM       |
| 23   | 112-9385  | 1    | Idler Pulley ASM     |
| 23:1 | 98-7297   | 1    | Pulley-Idler         |
| 23:2 | 38-7820   | 2    | Bearing-Ball         |
| 23:3 | 32120-42  | 1    | Ring-Retaining       |
| 24   | 3256-4    | 1    | Washer-Flat          |
| 25   | 3296-45   | 1    | Nut-Lock, NI         |
| 26   | 92-9216   | 1    | Pulley-Drive, Input  |
| 27   | 92-9218   | 1    | V-Belt (Matched Set) |
| 28   | 65-8270   | 1    | Washer               |
| 29   | 33114-025 | 1    | Screw-HH             |

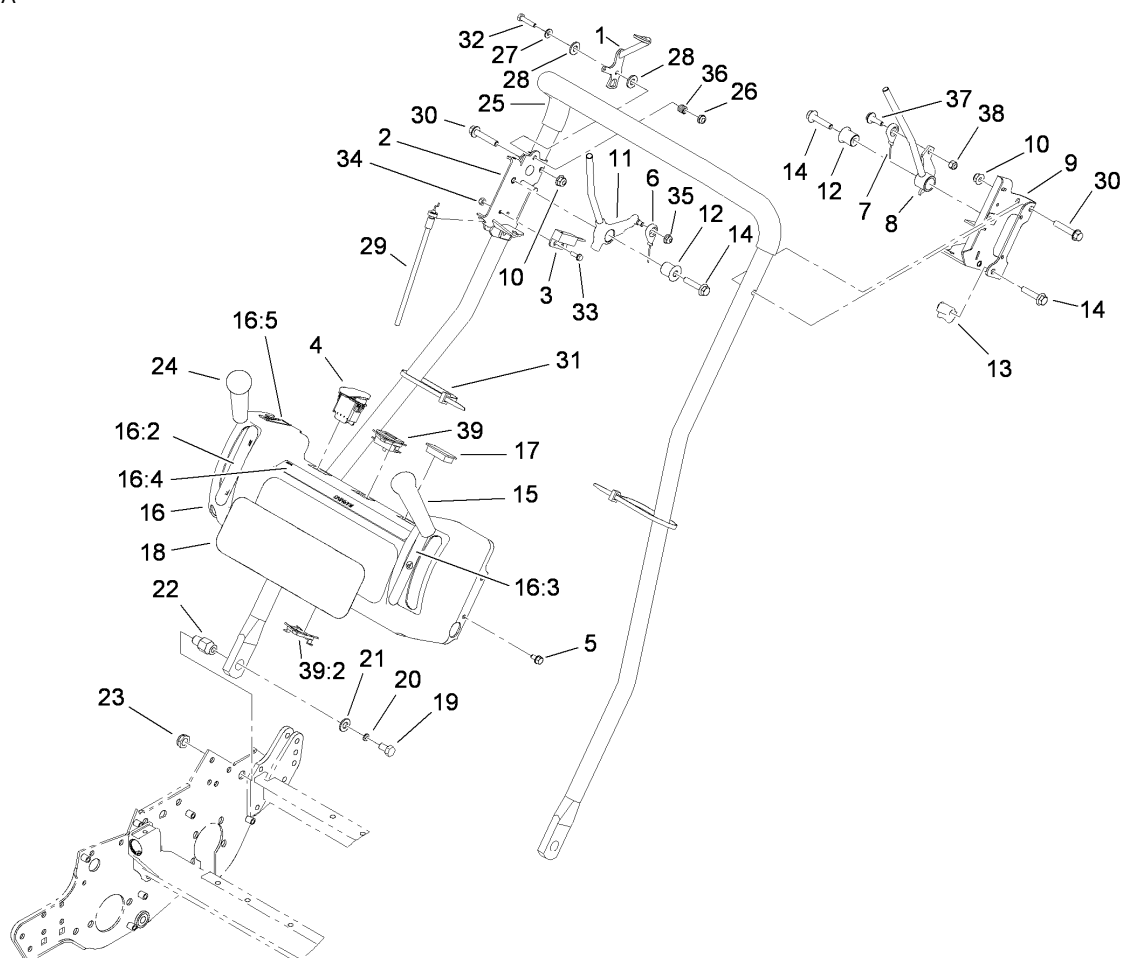

## Handle Assembly


| Ref  | Part No.    | Qty. | Description           | Ref  | Part No. | Qty. | Description        |
|------|-------------|------|-----------------------|------|----------|------|--------------------|
| 1    | 115-1098    | 1    | Throttle Lever ASM    | 21   | 3256-24  | 2    | Washer-Flat        |
| 2    | 115-1751-03 | 1    | Traction Bracket ASM  | 22   | 110-7364 | 2    | Pin-Handle, Pivot  |
| 3    | 100-1270    | 1    | Switch-Proximity      | 23   | 3296-28  | 2    | Nut-Lock, NI       |
| 4    | 112-9420    | 1    | Switch-Engine         | 24   | 104-9760 | 1    | Knob-Black         |
| 5    | 104-2628    | 4    | Screw-HWH             | 25   | 112-9479 | 1    | Handle             |
| 6    | 94-5870     | 1    | Cable Clutch ASM      | 26   | 3296-56  | 1    | Nut-Lock, NI       |
| 7    | 94-5871     | 1    | Cable Brake ASM       | 27   | 3256-22  | 1    | Washer-Flat        |
| 8    | 115-1677    | 1    | Brake Lever ASM       | 28   | 66-2921  | 2    | Washer-Friction    |
| 9    | 115-1068-03 | 1    | Brake Bracket ASM     | 29   | 115-1747 | 1    | Cable-Throttle     |
| 10   | 104-8300    | 2    | Nut-Flange, NI        | 30   | 94-5780  | 2    | Screw-HWH          |
| 11   | 112-9321    | 1    | Lever-Traction        | 31   | 3290-378 | 2    | Tie-Cable          |
| 12   | 112-9317    | 2    | Bushing-Flanged       | 32   | 321-8    | 1    | Screw-HH           |
| 13   | 110-2415    | 2    | Clamp-Handle          | 33   | 115-1727 | 2    | Screw-HHF          |
| 14   | 112-9318    | 4    | Screw-HHF W/Lock      | 34   | 1-804254 | 2    | Nut                |
| 15   | 104-9774    | 1    | Knob-Red              | 35   | 104-7201 | 1    | Nut-HF             |
| 16   | 115-1124    | 1    | Console ASM           | 36   | 3-5787   | 1    | Spring-Compression |
| 16:2 | 115-1720    | 1    | Decal-Lever, Traction | 37   | 11-9030  | 1    | Screw-Shoulder     |
| 16:3 | 104-2618    | 1    | Decal-Lever, Brake    | 38   | 3296-42  | 1    | Nut-Lock, NI       |
| 16:4 | 115-1614    | 1    | Decal-Warning         | 39   | 104-4233 | 1    | Meter-Hour         |
| 16:5 | 93-6085     | 1    | Decal-Throttle        | 39:2 | 104-4234 | 1    | Clip-Mounting      |
| 17   | 99-7420     | 1    | Plug-Hole             |      |          |      |                    |
| 18   | 115-1131    | 1    | Decal-Console         |      |          |      |                    |
| 19   | 323-34      | 2    | Screw-HH              |      |          |      |                    |
| 20   | 3253-21     | 2    | Washer-Lock           |      |          |      |                    |



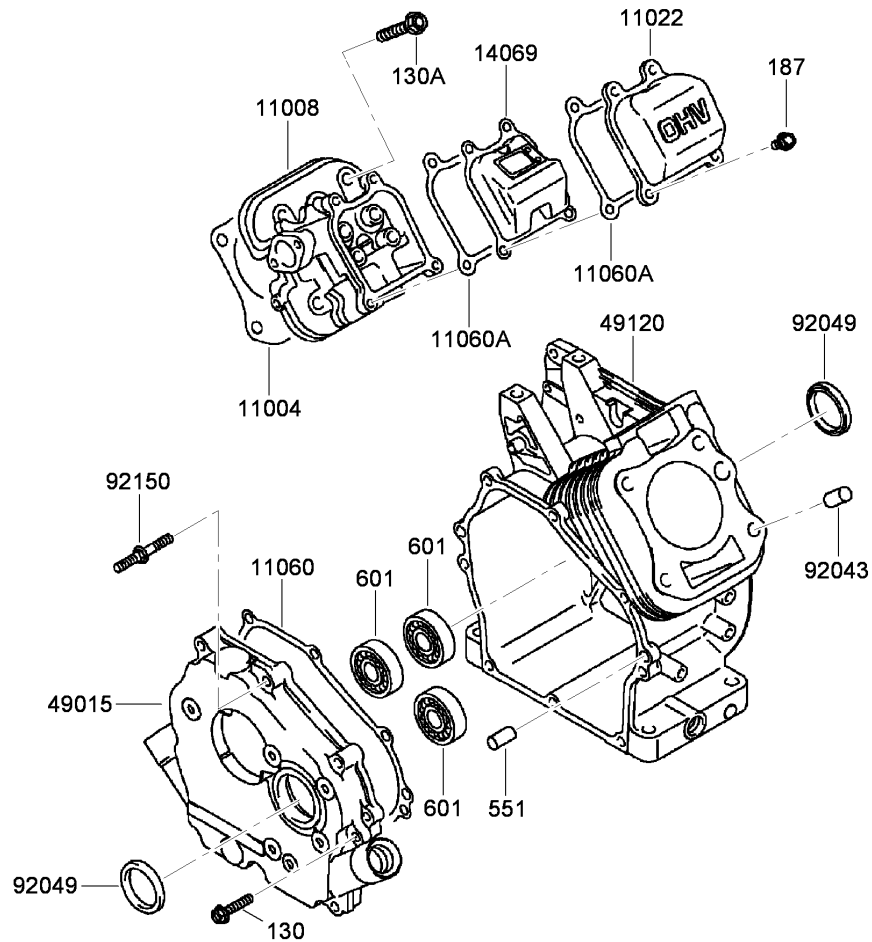


## Cylinder and Crankcase Assembly

| Ref    | Part No. | Qty. | Description             |  |  |  |  |
|--------|----------|------|-------------------------|--|--|--|--|
| 130    | 108-2522 | 4    | Bolt-Flanged (6X30)     |  |  |  |  |
| 130A   | 115-1759 | 4    | Bolt-Flanged (8X45)     |  |  |  |  |
| 187    | 115-1760 | 4    | Bolt-Upset, Wsp (6X16)  |  |  |  |  |
| 551    | 93-8516  | 2    | Pin-Dowel (6X12)        |  |  |  |  |
| 601    | 93-8517  | 3    | Bearing-Ball            |  |  |  |  |
| 11004  | 93-8504  | 1    | Gasket-Head             |  |  |  |  |
| 11008  | 115-1757 | 1    | Head-Cylinder           |  |  |  |  |
| 11022  | 93-8508  | 1    | Case-Rocker             |  |  |  |  |
| 11060  | 93-8525  | 1    | Gasket-Cover, Crankcase |  |  |  |  |
| 11060A | 93-8509  | 2    | Gasket-Case, Rocker     |  |  |  |  |
| 14069  | 93-8510  | 1    | Breather                |  |  |  |  |
| 49015  | 93-8520  | 1    | Cover-Crankcase         |  |  |  |  |
| 49120  | 93-8515  | 1    | Crankcase               |  |  |  |  |
| 92043  | 93-8512  | 2    | Pin                     |  |  |  |  |
| 92049  | 93-8511  | 2    | Seal-Oil                |  |  |  |  |
| 92150  | 93-8524  | 1    | Stud                    |  |  |  |  |

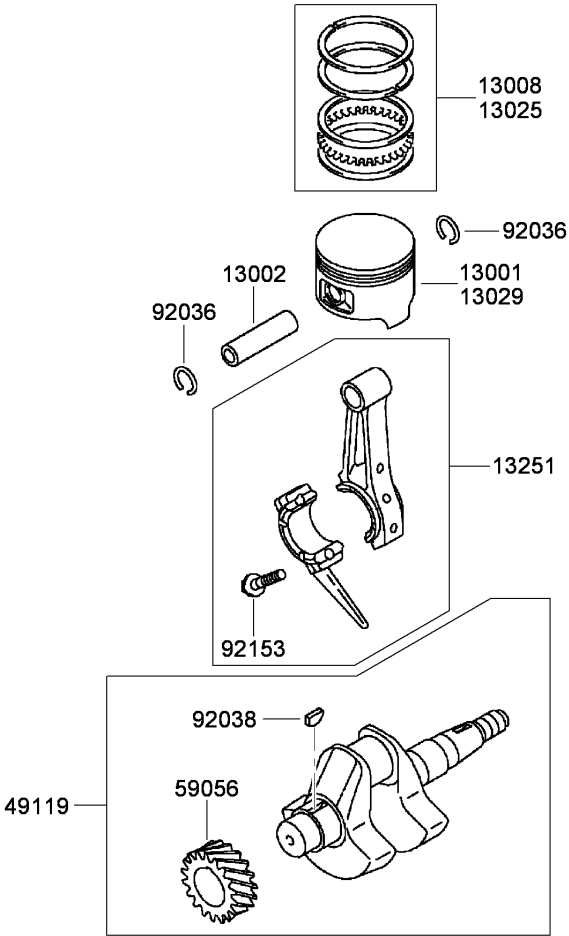


Piston and Crankshaft Assembly

| Ref   | Part No. | Qty. | Description             |  |  |  |  |
|-------|----------|------|-------------------------|--|--|--|--|
| 13001 | 93-8502  | 1    | Piston                  |  |  |  |  |
| 13002 | 93-8501  | 1    | Pin-Piston              |  |  |  |  |
| 13008 | 93-8503  | 1    | Set-Ring, Piston        |  |  |  |  |
| 13025 | 94-6837  | 1    | Piston Ring Set (.05Mm) |  |  |  |  |
| 13029 | 94-6836  | 1    | Piston (0.5 O S)        |  |  |  |  |
| 13251 | 93-8528  | 1    | Connecting Rod ASM      |  |  |  |  |
| 49119 | 93-8518  | 1    | Crankshaft ASM          |  |  |  |  |
| 59056 | 94-9043  | 1    | Gear-Helical            |  |  |  |  |
| 92036 | 93-8500  | 2    | Ring-Retaining          |  |  |  |  |
| 92038 | 93-8698  | 1    | Key                     |  |  |  |  |
| 92153 | 115-1805 | 2    | Bolt (6X30)             |  |  |  |  |

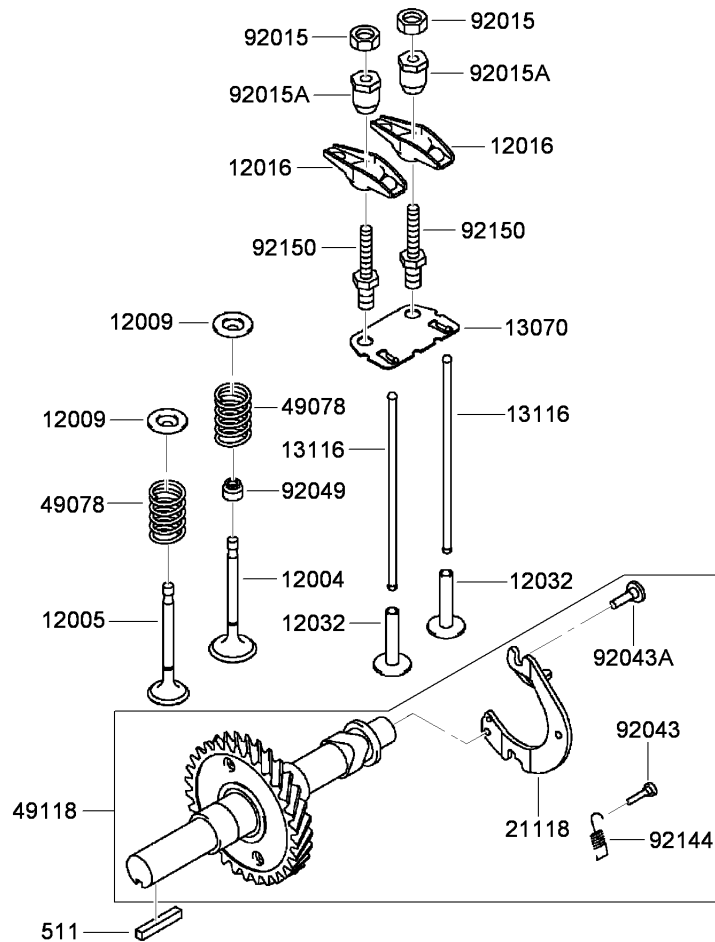

## Valve and Camshaft Assembly


| Ref    | Part No. | Qty. | Description            |  |  |  |  |
|--------|----------|------|------------------------|--|--|--|--|
| 511    | 108-9442 | 1    | Key                    |  |  |  |  |
| 12004  | 93-8532  | 1    | Valve-Intake           |  |  |  |  |
| 12005  | 93-8529  | 1    | Valve-Exhaust          |  |  |  |  |
| 12009  | 93-8531  | 2    | Retainer-Spring, Valve |  |  |  |  |
| 12016  | 93-8535  | 2    | Arm-Rocker             |  |  |  |  |
| 12032  | 93-8539  | 2    | Tappet                 |  |  |  |  |
| 13070  | 115-1758 | 1    | Guide                  |  |  |  |  |
| 13116  | 93-8538  | 2    | Rod-Push               |  |  |  |  |
| 21118  | 93-8543  | 1    | Decompressor           |  |  |  |  |
| 49078  | 115-1763 | 2    | Spring-Valve, Engine   |  |  |  |  |
| 49118  | 93-8544  | 1    | Camshaft ASM           |  |  |  |  |
| 92015  | 93-8533  | 2    | Nut                    |  |  |  |  |
| 92015A | 93-8534  | 2    | Nut                    |  |  |  |  |
| 92043  | 93-8542  | 1    | Pin                    |  |  |  |  |
| 92043A | 93-8540  | 2    | Pin                    |  |  |  |  |
| 92049  | 115-1762 | 1    | Seal-Oil               |  |  |  |  |
| 92144  | 93-8541  | 1    | Spring                 |  |  |  |  |
| 92150  | 93-8536  | 2    | Bolt                   |  |  |  |  |

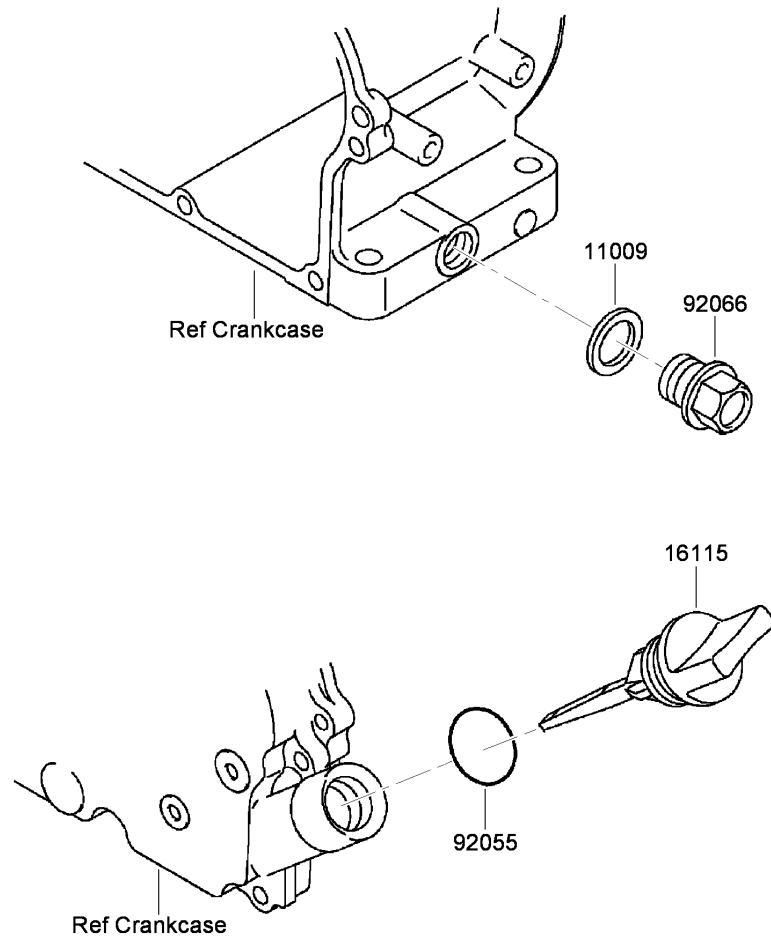

## Lubrication Equipment Assembly


| Ref   | Part No. | Qty. | Description                    |
|-------|----------|------|--------------------------------|
| 11009 | 93-8514  | 2    | Gasket-Plug, Drain (14.2X19X2) |
| 16115 | 93-8523  | 2    | Cap-Filler, Oil                |
| 92055 | 94-9041  | 2    | O-Ring (20Mm)                  |
| 92066 | 115-1761 | 2    | Plug (14X12)                   |

21

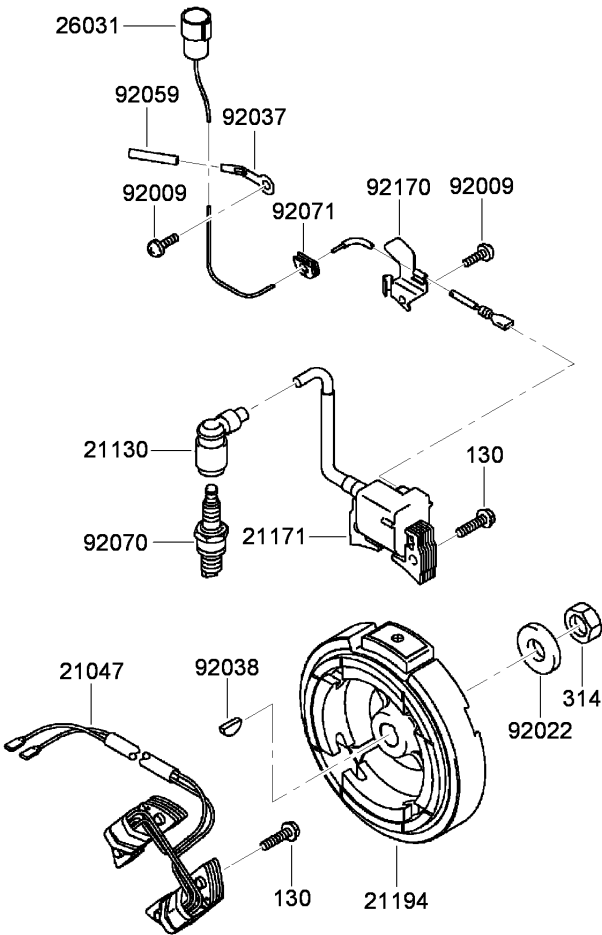

Electric Equipment Assembly


| Ref   | Part No. | Qty. | Description                    |  |  |  |  |
|-------|----------|------|--------------------------------|--|--|--|--|
| 130   | 100-2610 | 6    | Bolt-Flanged (6X25)            |  |  |  |  |
| 314   | 115-1845 | 1    | Nut-Hex, Fine                  |  |  |  |  |
| 21047 | 99-4267  | 1    | Coil-Lighting                  |  |  |  |  |
| 21130 | KW10087  | 1    | Cap-Sparkplug                  |  |  |  |  |
| 21171 | 94-9031  | 1    | Ignition Coil ASM              |  |  |  |  |
| 21194 | 99-6237  | 1    | Flywheel ASM                   |  |  |  |  |
| 26031 | 115-1767 | 1    | Harness                        |  |  |  |  |
| 92009 | 95-9716  | 2    | Screw                          |  |  |  |  |
| 92022 | 93-8569  | 1    | Washer                         |  |  |  |  |
| 92037 | 115-1771 | 1    | Clamp                          |  |  |  |  |
| 92038 | 93-8571  | 1    | Key                            |  |  |  |  |
| 92059 | 115-1768 | 1    | Tube (5X6X75)                  |  |  |  |  |
| 92070 | 108-2557 | 1    | Sparkplug (Bpr5Es) (Ngk) Solid |  |  |  |  |
| 92071 | 115-1772 | 1    | Grommet                        |  |  |  |  |
| 92170 | 93-8583  | 1    | Clamp                          |  |  |  |  |

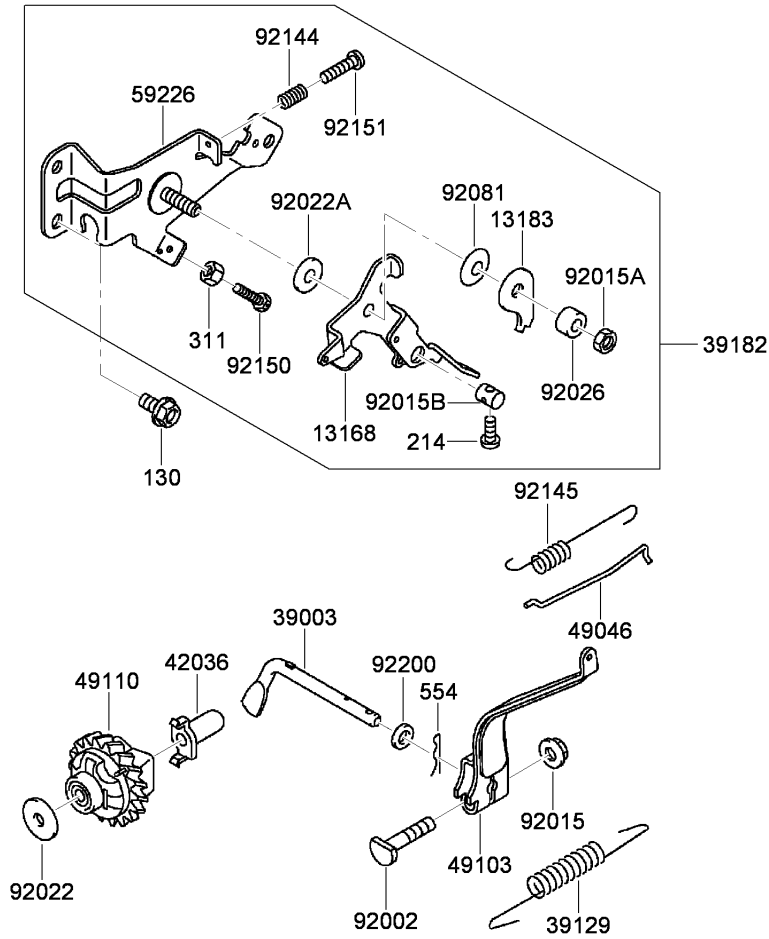

# Control Equipment Assembly

| Ref    | Part No. | Qty. | Description         |
|--------|----------|------|---------------------|
| 130    | 115-1809 | 2    | Bolt-Flanged (6X12) |
| 214    | 115-1778 | 1    | Screw-Pan (4X14)    |
| 311    | 115-6495 | 1    | Nut-Hex (4Mm)       |
| 554    | 115-8671 | 1    | Pin-Snap (1.2X21.2) |
| 13168  | 93-8598  | 1    | Lever               |
| 13183  | 93-8592  | 1    | Plate               |
| 39003  | 93-8609  | 1    | Arm-Pivot           |
| 39129  | 115-1803 | 1    | Spring-Governor     |
| 39182  | 115-1754 | 1    | Control Panel ASM   |
| 42036  | 108-2567 | 1    | Sleeve              |
| 49046  | 115-1811 | 1    | Rod-Governor        |
| 49103  | 93-8603  | 1    | Arm-Governor        |
| 49110  | 115-1812 | 1    | Governor ASM        |
| 59226  | 115-1773 | 1    | Panel-Control       |
| 92002  | 93-8606  | 1    | Bolt (6X28)         |
| 92015  | 93-8631  | 1    | Nut                 |
| 92015A | 93-8595  | 1    | Nut                 |
| 92015B | 93-8597  | 1    | Nut                 |
| 92022  | 94-6842  | 1    | Washer (6.2X20X0.5) |
| 92022A | 93-8590  | 1    | Washer              |
| 92026  | 115-1776 | 1    | Spacer              |
| 92081  | 115-1775 | 1    | Spring              |
| 92144  | 93-8588  | 1    | Spring              |
| 92145  | 115-1810 | 1    | Spring              |


| Ref   | Part No. | Qty. | Description           |
|-------|----------|------|-----------------------|
| 92150 | 115-1813 | 1    | Bolt                  |
| 92151 | 115-1774 | 1    | Bolt (4X22)           |
| 92200 | 93-8608  | 1    | Washer (6.5X11.5X2.0) |

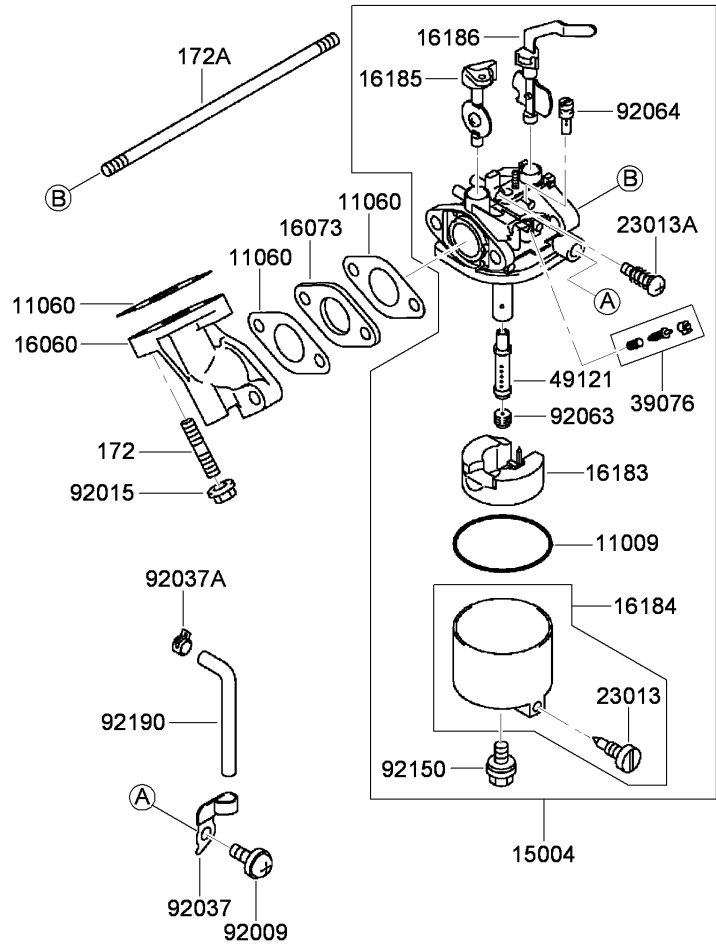

Carburetor Assembly


| Ref    | Part No. | Qty. | Description        |  |  |  |  |
|--------|----------|------|--------------------|--|--|--|--|
| 172    | 93-8632  | 2    | Bolt-Stud (6X18)   |  |  |  |  |
| 172A   | 115-1814 | 1    | Bolt-Stud (6X73)   |  |  |  |  |
| 11009  | 93-8624  | 1    | Gasket             |  |  |  |  |
| 11060  | 93-8613  | 3    | Gasket             |  |  |  |  |
| 15004  | 115-1869 | 1    | Carburetor ASM     |  |  |  |  |
| 16060  | 93-8633  | 1    | Pipe-Intake        |  |  |  |  |
| 16073  | 94-9048  | 1    | Insulator          |  |  |  |  |
| 16183  | 94-6844  | 1    | Float ASM          |  |  |  |  |
| 16184  | 93-8625  | 1    | Float Chamber ASM  |  |  |  |  |
| 16185  | 94-9033  | 1    | Throttle Valve ASM |  |  |  |  |
| 16186  | 115-1870 | 1    | Choke Valve ASM    |  |  |  |  |
| 23013  | 93-8626  | 1    | Screw ASM          |  |  |  |  |
| 23013A | 93-8619  | 1    | Screw ASM          |  |  |  |  |
| 39076  | 94-9034  | 1    | Limiter            |  |  |  |  |
| 49121  | 115-1871 | 1    | Nozzle-Main        |  |  |  |  |
| 92009  | 94-6845  | 1    | Screw              |  |  |  |  |
| 92015  | 93-8631  | 2    | Nut                |  |  |  |  |
| 92037  | 94-6846  | 1    | Clamp              |  |  |  |  |
| 92037A | 93-8629  | 1    | Clamp              |  |  |  |  |
| 92063  | 94-9036  | 1    | Jet-Main (No.65)   |  |  |  |  |
| 92064  | 94-9037  | 1    | Jet-Pilot (No.40)  |  |  |  |  |
| 92150  | 93-8627  | 1    | Bolt               |  |  |  |  |
| 92190  | 93-8630  | 1    | Tube               |  |  |  |  |



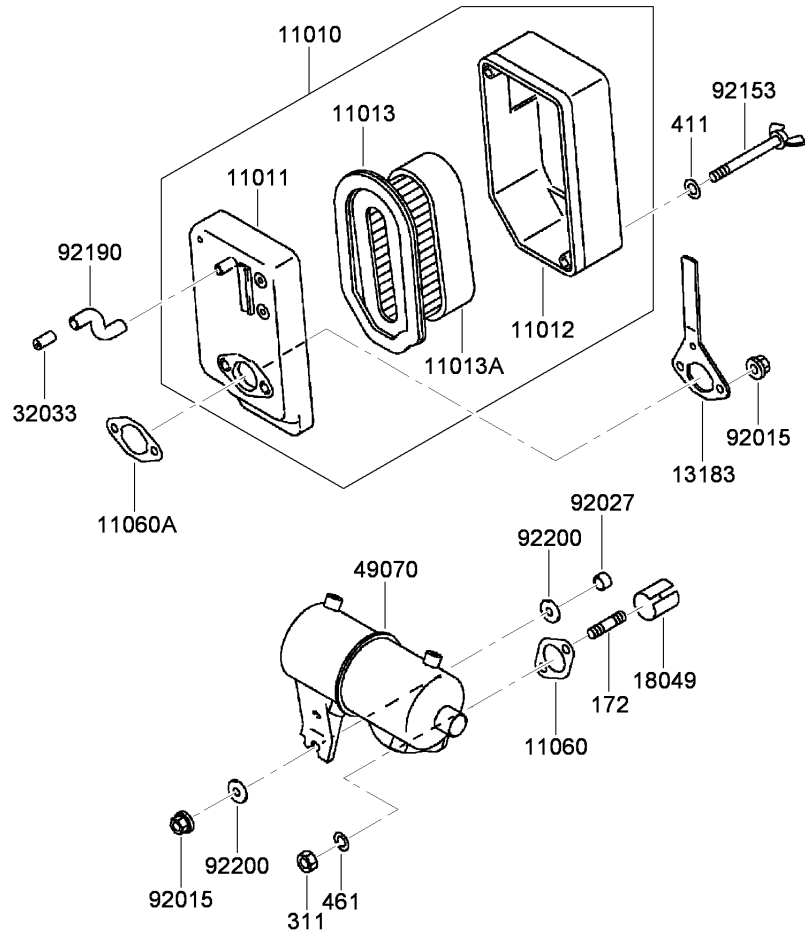


## Air Filter and Muffler Assembly

| Ref    | Part No. | Qty. | Description         |  |  |  |  |
|--------|----------|------|---------------------|--|--|--|--|
| 172    | 115-1819 | 2    | Bolt-Stud (6X16)    |  |  |  |  |
| 311    | 93-8656  | 2    | Nut-Hex (6Mm)       |  |  |  |  |
| 411    | 115-1802 | 2    | Washer-Plain        |  |  |  |  |
| 461    | 115-1801 | 2    | Washer-Spring       |  |  |  |  |
| 11010  | 115-1872 | 1    | Air Filter ASM      |  |  |  |  |
| 11011  | 115-1873 | 1    | Case-Filter, Air    |  |  |  |  |
| 11012  | 93-8638  | 1    | Cap-Filter, Air     |  |  |  |  |
| 11013  | 93-8636  | 1    | Element-Filter, Air |  |  |  |  |
| 11013A | 93-8637  | 1    | Element-Filter, Air |  |  |  |  |
| 11060  | 93-8654  | 1    | Gasket-Muffler      |  |  |  |  |
| 11060A | 93-8657  | 1    | Gasket-Filter, Air  |  |  |  |  |
| 13183  | 93-8642  | 1    | Plate-Filter, Air   |  |  |  |  |
| 18049  | 93-8652  | 1    | Pipe-Exhaust        |  |  |  |  |
| 32033  | 93-8658  | 1    | Pipe                |  |  |  |  |
| 49070  | 115-1874 | 1    | Muffler             |  |  |  |  |
| 92015  | 93-8631  | 3    | Nut                 |  |  |  |  |
| 92027  | 93-8651  | 1    | Collar              |  |  |  |  |
| 92153  | 93-8640  | 2    | Bolt                |  |  |  |  |
| 92190  | 93-8659  | 1    | Tube                |  |  |  |  |
| 92200  | 93-8650  | 2    | Washer (.5X18X2.0)  |  |  |  |  |

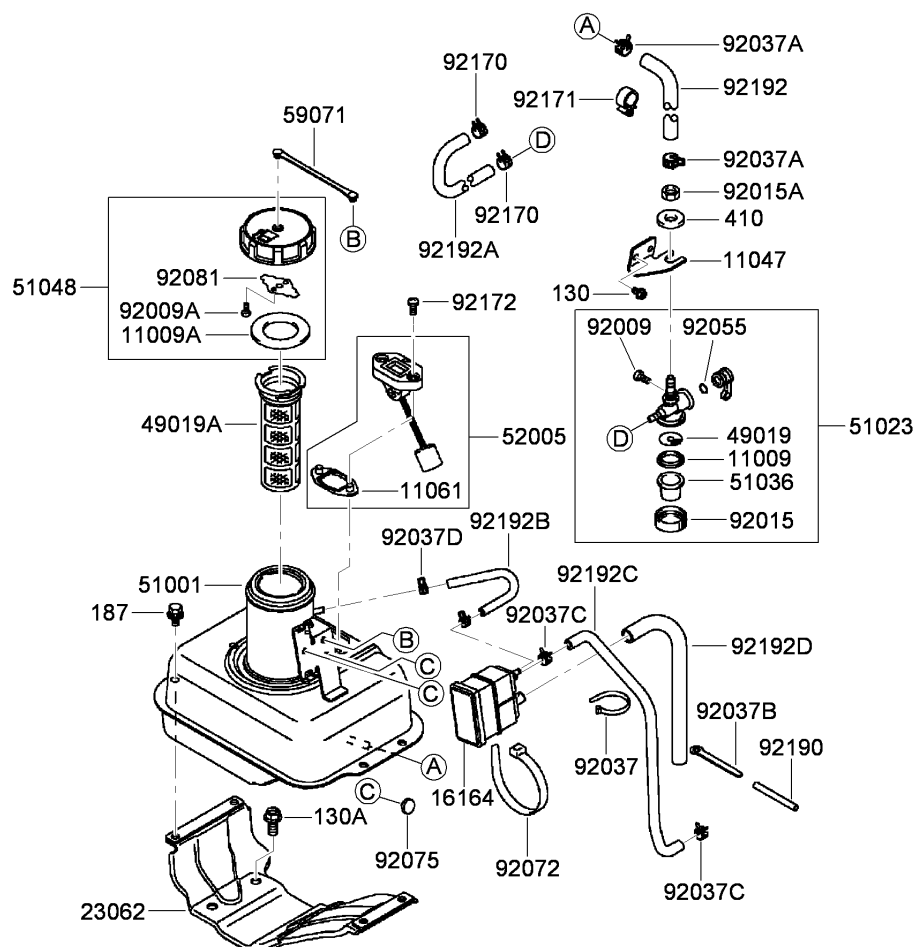


## Fuel Tank and Fuel Valve Assembly

| Ref    | Part No. | Qty. | Description            | Ref    | Part No. | Qty. | Description         |
|--------|----------|------|------------------------|--------|----------|------|---------------------|
| 130    | 115-1864 | 2    | Bolt-Flanged (5X8)     | 92037B | 115-1854 | 1    | Clamp               |
| 130A   | 115-1867 | 4    | Bolt-Flanged (8X18)    | 92037C | 93-8664  | 2    | Clamp               |
| 187    | 115-1760 | 4    | Bolt-Upset, Wsp (6X16) | 92037D | 93-8676  | 2    | Clamp               |
| 410    | 115-1885 | 1    | Washer-Plain, Small    | 92055  | 93-8671  | 1    | O-Ring              |
| 11009  | 93-8673  | 1    | Gasket                 | 92072  | 115-1853 | 1    | Band                |
| 11009A | 93-8662  | 1    | Gasket                 | 92075  | 115-1852 | 2    | Damper              |
| 11047  | 93-8681  | 1    | Bracket                | 92081  | 93-8663  | 1    | Spring              |
| 11061  | 104-2384 | 1    | Gasket-Gauge, Fuel     | 92170  | 115-1865 | 2    | Clamp               |
| 16164  | 115-1859 | 1    | Canister               | 92171  | 115-1862 | 1    | Clamp               |
| 23062  | 104-2383 | 1    | Bracket-Tank           | 92172  | 115-1860 | 2    | Screw (5X12)        |
| 49019  | 94-6849  | 1    | Filter-Tapper, Fuel    | 92190  | 115-1851 | 1    | Tube                |
| 49019A | 94-6826  | 1    | Filter-Fuel            | 92192  | 115-1863 | 1    | Tube (6.2X13.2X200) |
| 51001  | 115-1858 | 1    | Fuel Tank ASM          | 92192A | 115-1866 | 1    | Tube (4X11X160)     |
| 51023  | 93-8669  | 1    | Fuel Tapper ASM        | 92192B | 115-1889 | 1    | Tube                |
| 51036  | 93-8674  | 1    | Cup-Tapper, Fuel       | 92192C | 115-1890 | 1    | Tube                |
| 51048  | 115-1857 | 1    | Tank Cap ASM           | 92192D | 115-1891 | 1    | Tube                |
| 52005  | 93-8685  | 1    | Gauge-Fuel             |        |          |      |                     |
| 59071  | 115-1856 | 1    | Joint                  |        |          |      |                     |
| 92009  | 93-8670  | 1    | Screw                  |        |          |      |                     |
| 92009A | 93-8661  | 2    | Screw                  |        |          |      |                     |
| 92015  | 93-8675  | 1    | Nut                    |        |          |      |                     |
| 92015A | 94-9042  | 1    | Nut                    |        |          |      |                     |
| 92037  | 115-1855 | 1    | Clamp                  |        |          |      |                     |
| 92037A | 115-1861 | 2    | Clamp-Clip, Hose       |        |          |      |                     |

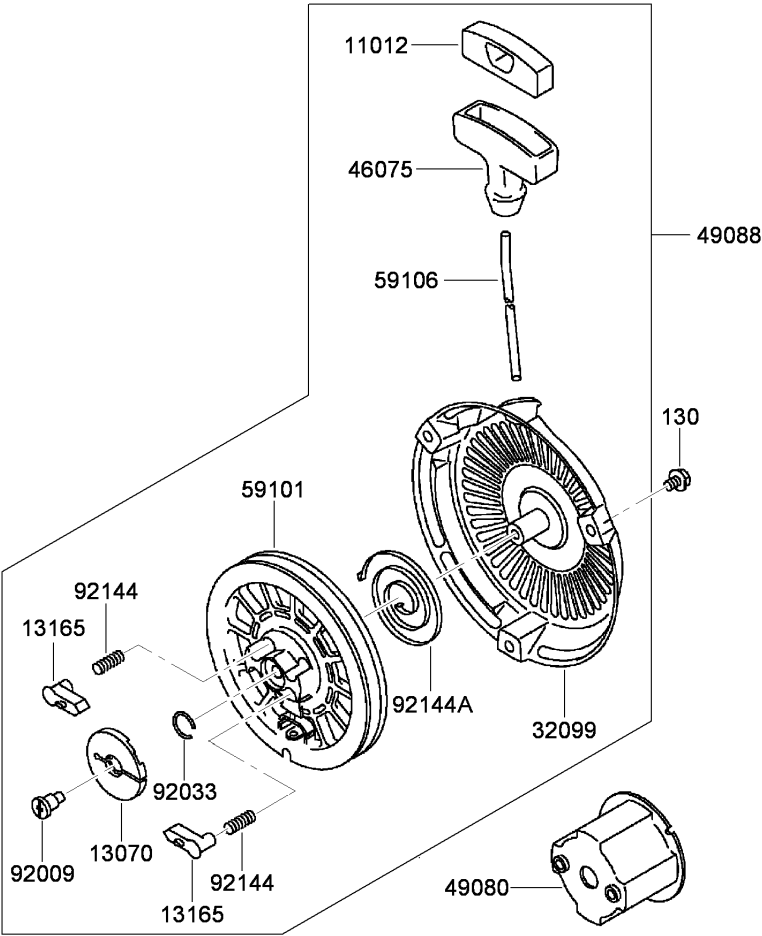

Starter Assembly

| Ref    | Part No. | Qty. | Description          |  |  |  |  |
|--------|----------|------|----------------------|--|--|--|--|
| 130    | 115-1765 | 3    | Bolt-Flanged (6X8)   |  |  |  |  |
| 11012  | 94-9044  | 1    | Cap-Grip             |  |  |  |  |
| 13070  | 93-8562  | 1    | Guide-Pawl           |  |  |  |  |
| 13165  | 93-8554  | 2    | Pawl-Starter, Recoil |  |  |  |  |
| 32099  | 94-9046  | 1    | Case-Starter, Recoil |  |  |  |  |
| 46075  | 94-9045  | 1    | Grip-Starter, Recoil |  |  |  |  |
| 49080  | 93-8567  | 1    | Pulley-Recoil        |  |  |  |  |
| 49088  | 93-8552  | 1    | Recoil Starter ASM   |  |  |  |  |
| 59101  | 93-8556  | 1    | Reel-Starter, Recoil |  |  |  |  |
| 59106  | 93-8560  | 1    | Rope (4X1500)        |  |  |  |  |
| 92009  | 93-8553  | 1    | Screw                |  |  |  |  |
| 92033  | 93-8561  | 1    | Ring-Retaining       |  |  |  |  |
| 92144  | 93-8555  | 2    | Spring-Return        |  |  |  |  |
| 92144A | 93-8557  | 1    | Spring               |  |  |  |  |

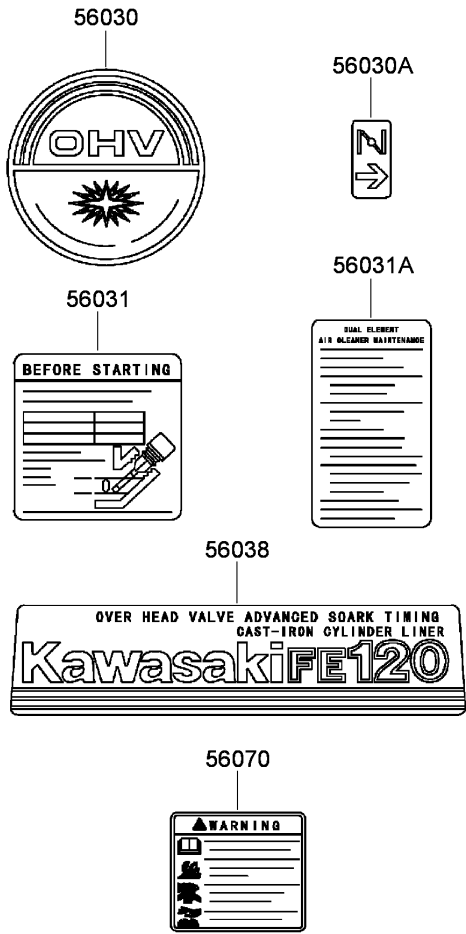

Label Set

| Ref    | Part No. | Qty. | Description        |  |  |  |  |
|--------|----------|------|--------------------|--|--|--|--|
| 56030  | 94-9027  | 1    | Label-Recoil       |  |  |  |  |
| 56030A | 93-8687  | 1    | Decal-Choke        |  |  |  |  |
| 56031  | 93-8689  | 1    | Decal-Instructions |  |  |  |  |
| 56031A | 93-8690  | 1    | Decal-Maintenance  |  |  |  |  |
| 56038  | 94-9028  | 1    | Label-Kawasaki     |  |  |  |  |
| 56070  | 93-8692  | 1    | Decal-Warning      |  |  |  |  |

## Attachments and Accessories

### For 04035 - Greensmaster 1600 Mower

| Product Name                 | Model/Part  |
|------------------------------|-------------|
| Light Kit                    | 04061       |
| Wheel Kit                    | 04123       |
| Groomer Reel Kit             | 04132       |
| Bedknife-Highcut             | 104-2646    |
| Hour Meter Kit               | 105-5350    |
| Knife-Bed, Fairway           | 107-8181    |
| Bedbar-Aggressive            | 112-9278-03 |
| Operator Presence Kit        | 112-9282    |
| Wiehle Scraper Kit           | 112-9290    |
| Groomer Brush Assembly       | 115-1600    |
| Wrench-Spanner, 16 Tooth     | 115-1806    |
| Wrench-Spanner, 18 Tooth     | 115-1808    |
| 16-Tooth Traction Pulley Kit | 115-1886    |
| 25 Inch Clip Kit             | 65-9000     |
| Bedknife-Tournament Cut      | 94-5885     |
| Height-of-Cut Bar ASM        | 94-9010     |
| Full Roller ASM              | 95-0930     |
| Jet-Main, #62 High Altitude  | 98-8735     |
| Jet-Main, #60 High Altitude  | 98-8736     |
| Arm-HOC, Extended            | 99-4286     |

## NOTES

## NOTES

