Form Number 3361-971 Rev A

Commercial Walk-Behind Mower

Fixed Deck, T-Bar, Gear Drive with 40in TURBO FORCE® Cutting Unit

Model No. 38696 - 290000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

© The Toro Company - 2009
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine and Fuel Tank Assembly	3
Transmission Drive Assembly	4
Drive Wheel and Brake Assembly	6
Handle and Control Assembly	7
Deck Assembly	8
Deck Assembly No. 110-4908	9
Deflector Assembly No. 110-0790	10
Sheave, Spindle and Blade Assembly	11
Idler Assembly	12
Caster Assembly	13
Cylinder and Crankcase Assembly Kawasaki FH541V-FS23	14
Piston and Crankshaft Assembly Kawasaki FH541V-FS23	15
Valve and Camshaft Assembly Kawasaki FH541V-FS23	16
Lubrication Equipment Assembly Kawasaki FH541V-FS23	17
Cooling Equipment Assembly Kawasaki FH541V-FS23	18
Electric Equipment Assembly Kawasaki FH541V-FS23	19
Control Equipment Assembly Kawasaki FH541V-FS23	20
Carburetor Assembly Kawasaki FH541V-FS23	21
Air Filter and Muffler Assembly Kawasaki FH541V-FS23	22
Fuel Tank and Valve Assembly Kawasaki FH541V-FS23	23
Starter Assembly Kawasaki FH541V-FS23	24
Label Assembly Kawasaki FH541V-FS23	25
Attachments and Accessories List	26

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
BBC. . . . . blade brake clutch
CARR. . . . . carriage
CCW. . . . . counter clock wise
CW. . . . . clockwise
DEG. . . . . degrees
ECM. . . . . electronic control module
EXT. . . . . external
FH. . . . . flat head
GA. . . . . gauge
HD. . . . . heavy-duty
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
LH. . . . . left hand
NI. . . . . nylon insert
NPTF. . . . . national pipe thread fine
PFH. . . . . phillips flat head
PPH. . . . . phillips pan head
PPHTF. . . . . phillips pan head thread forming
PRH. . . . . phillips round head
PTH. . . . . phillips truss head
PTO. . . . . power-take-off
RH. . . . . right hand
ROPS. . . . . roll-over protection system
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head

Footnotes

❶ Not serviced separately


❷ Obtain parts from www.kawpowerepc.com

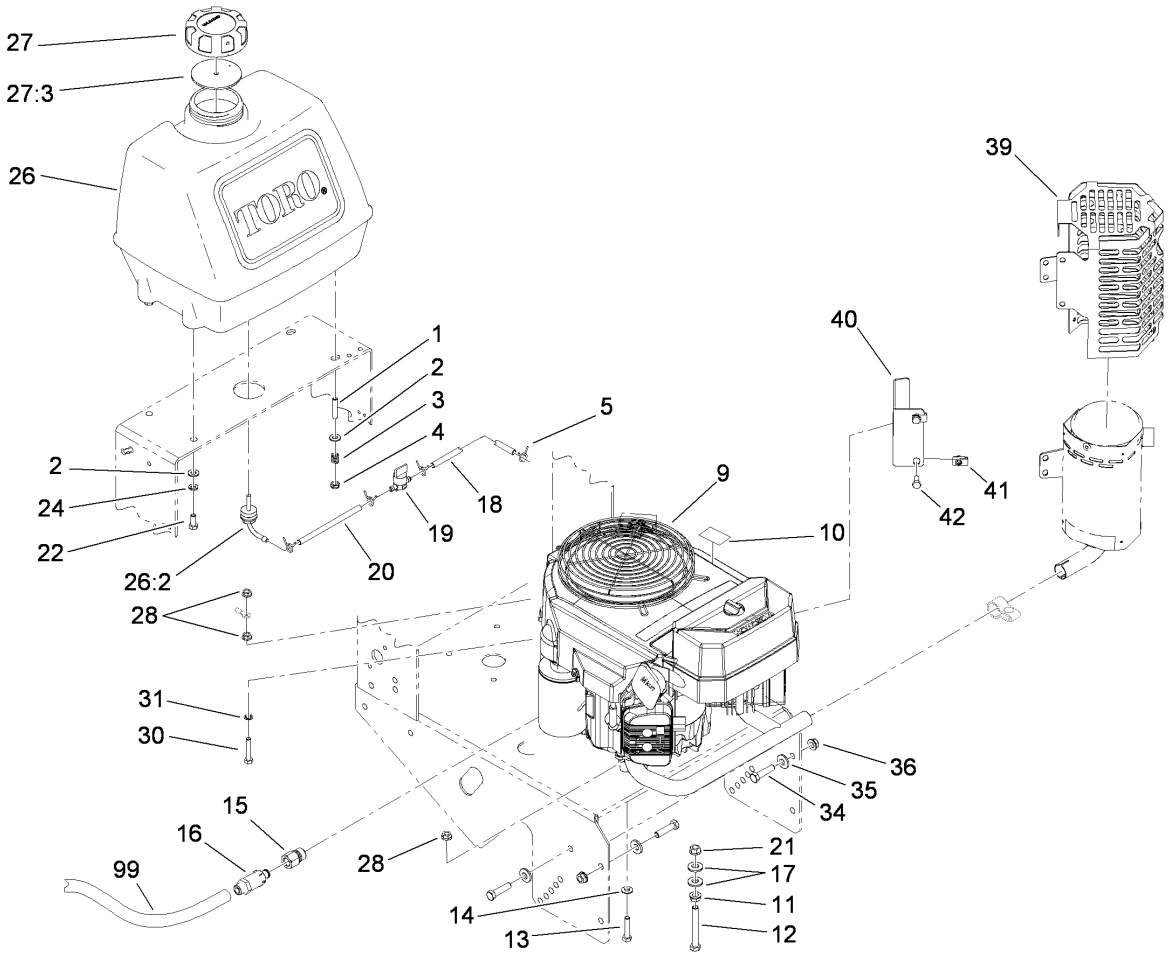

Engine and Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
❶❷9		1	Engine-Kawasaki, FH541V-Fs23
10	106-0699	1	Decal-Warning
11	3290-357	1	Nut-HHF, Whiz
12	323-14	1	Screw-HH
13	322-7	3	Screw-HH
14	1-303334	3	Washer-Spring
15	103-1966	1	Adapter
16	92-6877	1	Valve-Drain, Oil
17	98-5975	2	Washer-Belleville
18	109-0293	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	109-0306	1	Hose-Fuel
21	32128-21	1	Nut-HF
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas


Ref	Part No.	Qty.	Description
28	32128-20	5	Nut-HF
30	322-9	1	Screw-HH
31	3254-2	1	Washer-Lock, Internal
34	323-8	8	Screw-HH
35	98-5975	8	Washer-Belleville
36	3290-357	8	Nut-HHF, Whiz
39	115-4150-03	1	Muffler Shield ASM
40	115-4154-03	1	Bracket-Muffler
41	94-2413	4	U-Nut
42	322-3	4	Screw-HH
99	103-1964	1	Hose-Drain, Oil

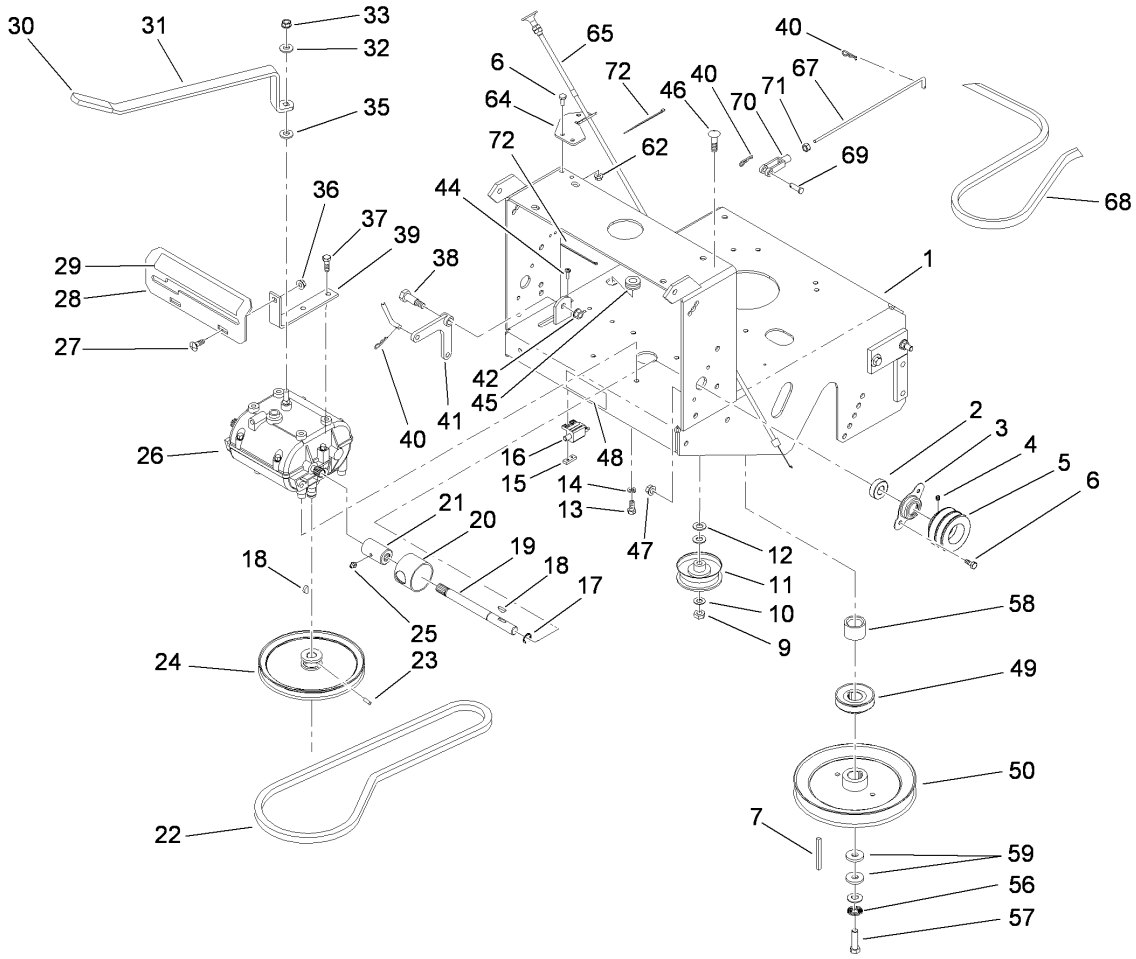

Transmission Drive Assembly


Ref	Part No.	Qty.	Description
1	103-9897-01	1	Deck-Engine
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	2	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	6	Screw-HH
7	103-4177	1	Key
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513152	1	Switch-Closed, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission
25	302-19	2	Fitting-Grease

Ref	Part No.	Qty.	Description
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	98-3256	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-HWH, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	3	Pin-Cotter, Hair
41	1-303186	1	Bellcrank
42	32128-21	1	Nut-HF
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	110-0504	1	Pulley ASM
56	1-603610	2	Washer-Spring

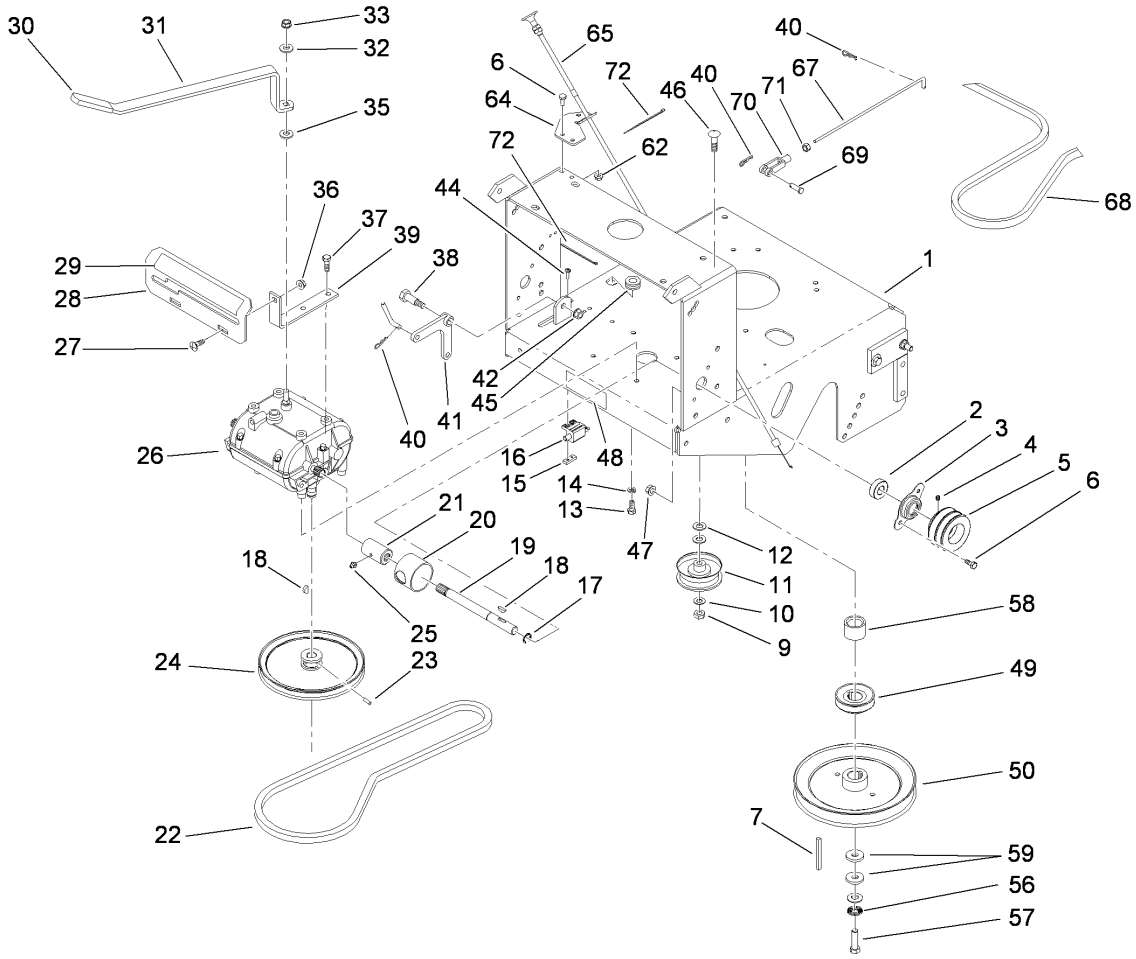

Transmission Drive Assembly (continued)


Ref	Part No.	Qty.	Description
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
67	1-323303	1	Linkage-Arm
68	110-0749	1	Belt-V
69	1-808280	1	Pin-Clevis
70	1-303105	1	Yoke-Adjustable
71	3219-2	1	Nut-Hex
72	1-303335	2	Tie-Plastic

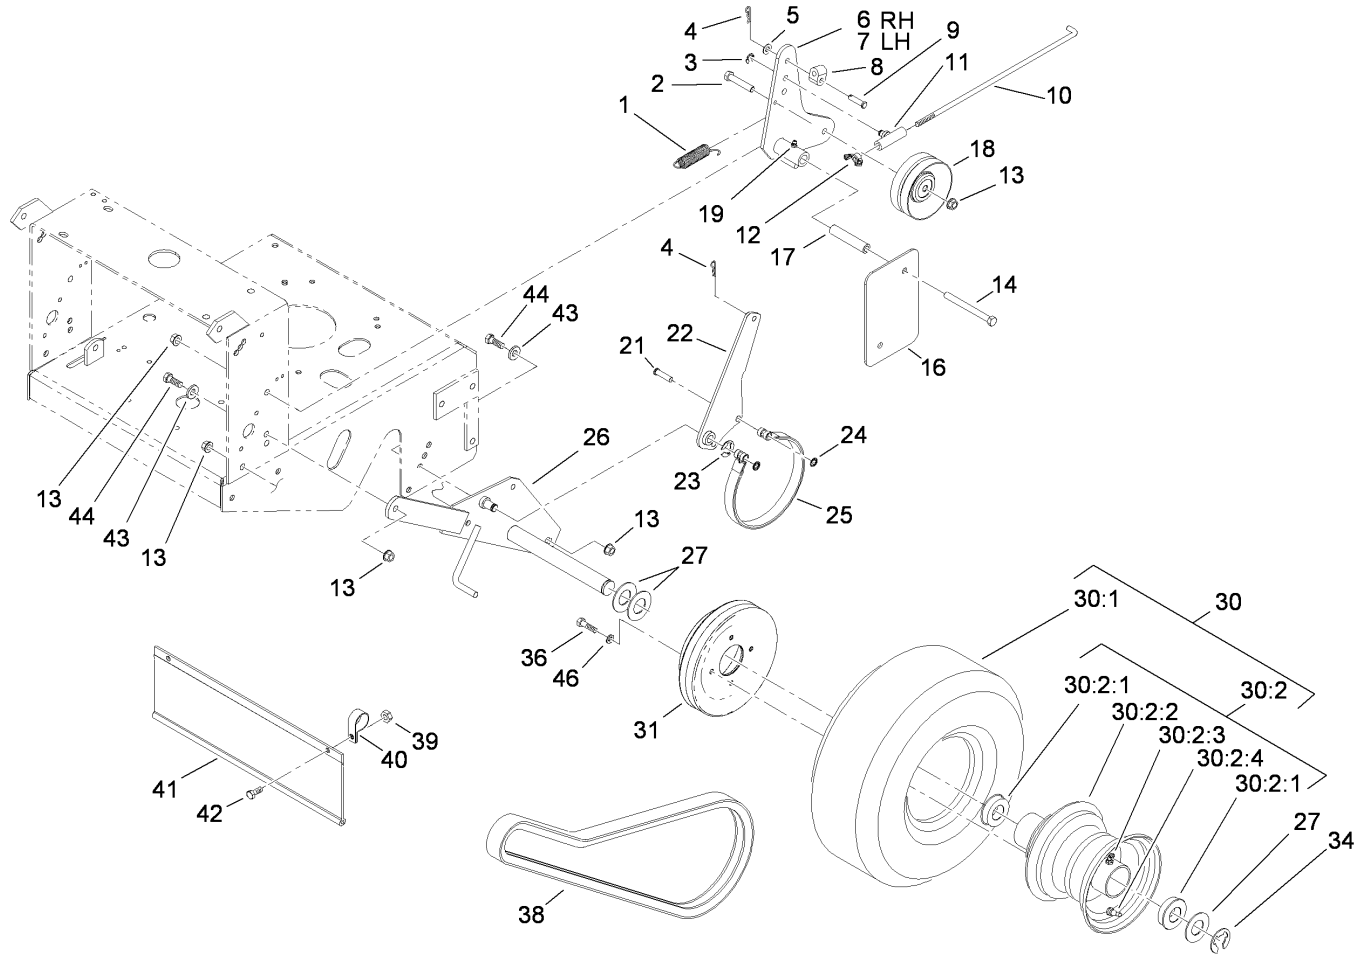

Drive Wheel and Brake Assembly

Ref	Part No.	Qty.	Description
1	98-3273	2	Spring-Extension
2	323-10	2	Screw-HH
3	32151-47	2	Ring-Retaining
4	1-806003	4	Pin-Cotter, Hair
5	3256-23	2	Washer-Flat
6	110-4925-03	1	RH Idler Arm ASM
7	110-4926-03	1	LH Idler Arm ASM
8	74-0521	2	Fitting-Rod
9	283-6	2	Pin-Clevis
10	1-323296	2	Rod-Brake
11	110-5866	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	10	Nut-HHF, Whiz
14	323-16	4	Screw-HH
16	98-5131-01	2	Shield-Wheel, Drive
17	1-323694	4	Spacer-Shield
18	1-323634	2	Idler-Drive, Wheel
19	302-19	2	Fitting-Grease
21	1-323307	4	Pin-Clevis
22	1-322209-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	4	Nut-Push
25	1-323595	2	Band-Brake
26	1-322212-03	1	Axle ASM


Ref	Part No.	Qty.	Description
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
30	1-323719	2	Wheel And Tire ASM
30:1	1-323720	1	Tire-Turfmaster
30:2	1-323328	1	Wheel And Hub ASM
30:2:1	1-323329	2	Bearing-Flanged
❶30:2:2		1	Rim ASM
❶30:2:3		1	Fitting-Grease
❶30:2:4		1	Stem-Valve
31	109-4359	2	Drum And Sheave ASM
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
38	1-323631	2	V-Belt
39	3296-29	2	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
46	1-805005	8	Washer-Lock

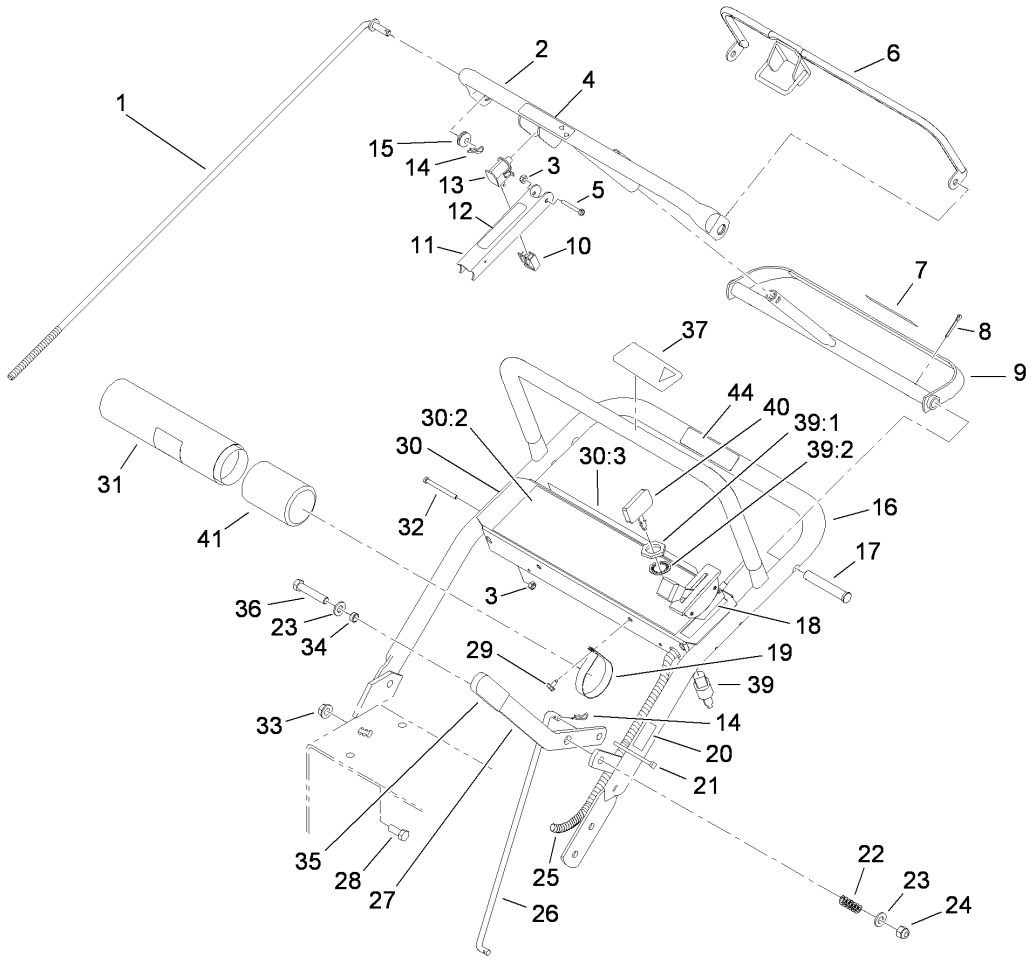

Handle and Control Assembly

Ref	Part No.	Qty.	Description
1	98-3282	2	Rod-Control
2	95-5522-03	1	Control Bar ASM
3	3296-2	5	Nut-Lock, NI
4	82-2290	1	Decal
5	32105-1	1	Screw-SHH
6	82-7680-03	1	Bail ASM
7	82-2280	1	Decal
8	3272-11	2	Pin-Cotter
9	99-8501-03	1	Control-Pivot
10	218-595	1	Connector-Body
11	98-3261-03	1	Lever-Brake, Parking
12	98-3266	1	Decal
13	740275	1	Switch-Seat
14	1-806003	3	Pin-Cotter, Hair
15	237-141	2	Grommet-Rubber
16	98-3267-03	1	Upper Handle ASM
17	283-55	2	Pin-Clevis
18	114-3465	1	Cable-Throttle
19	2412-120	2	R-Clamp
20	95-5537	1	Decal-Engage, Deck
21	1-303335	1	Tie-Plastic
22	1-303160	1	Spring-Compression
23	3256-24	2	Washer-Flat
24	3296-39	1	Nut-Lock, NI


Ref	Part No.	Qty.	Description
25	106-0678	1	Harness-Wire
26	98-3279	1	Linkage-Drive, Blade
27	98-3287-03	1	Lever-Engagement, Blade
28	3234-11	4	Screw-HHF
29	32104-76	2	Screw
30	110-6905	1	Control Panel ASM
30:2	110-6916	1	Decal-Panel, Control
30:3	105-0884	1	Decal-Danger
31	104-7050	1	Tube-Manual
32	32105-14	4	Screw-SHH
33	32128-21	4	Nut-HF
34	99-8509	1	Spacer
35	1-303020	1	Grip-Lever
36	323-10	1	Screw-HH
37	98-4387	1	Decal-Protection, Ear
39	29-5560	1	Switch-On / Off
39:1	218-461	1	Nut-HH
39:2	3254-5	1	Washer-Tooth
40	63-8360	1	Key-Ignition
41	104-7048	1	Cap-Housing
44	117-2718	1	Decal-Arrester, Spark

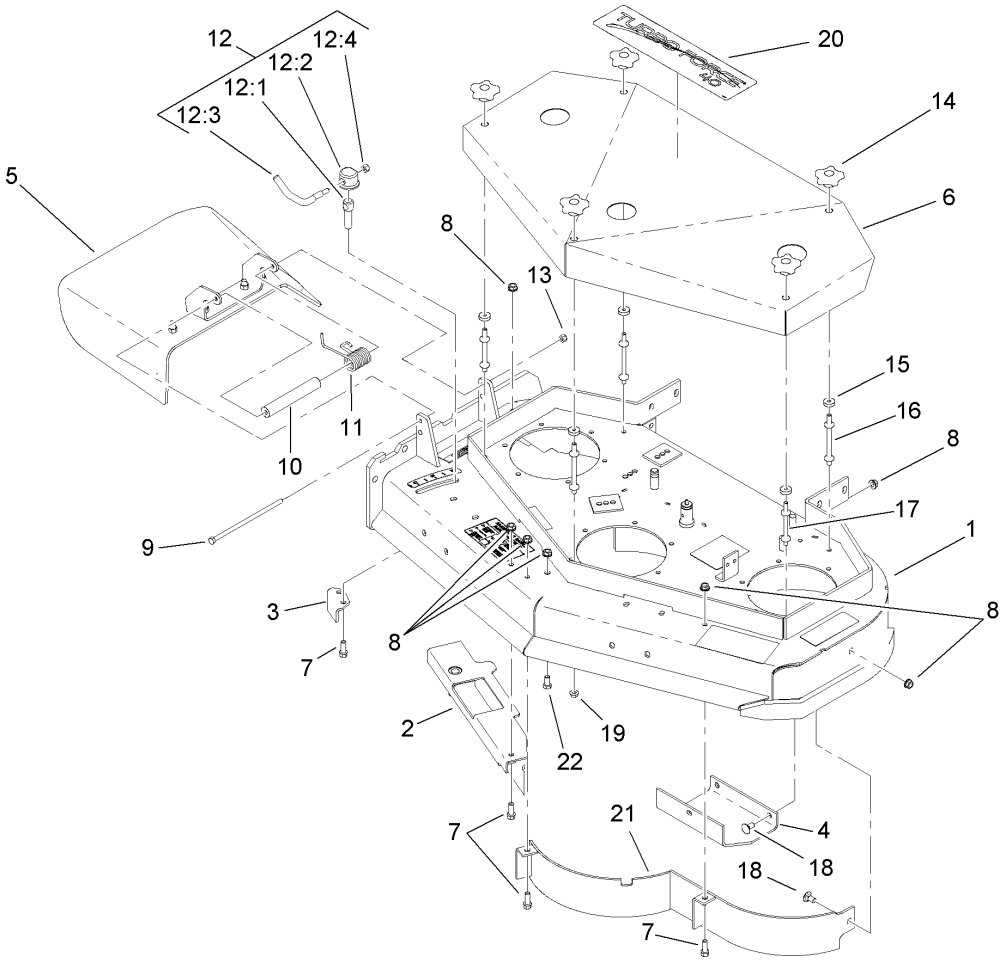

Deck Assembly


Ref	Part No.	Qty.	Description
1	110-4908	1	Deck ASM
2	110-0795-03	1	Baffle Adjust ASM
3	108-7273-01	1	Baffle-Discharge
4	108-7282-01	1	Plate-Skid
5	110-0790	1	Deflector ASM
6	110-2034-01	1	Cover-Deck
7	92-1624	5	Screw-HWH
8	3290-357	12	Nut-HHF, Whiz
9	322-50	1	Screw-HH
10	105-4622	1	Spacer
11	104-8554	1	Spring-Torsion
12	107-1664	1	Lever ASM
12:1	106-3239	1	Screw-Lock
12:2	107-1644	1	Cap-Lock
12:3	106-3241	1	Lever-Lock
12:4	3296-29	1	Nut-Lock, NI
13	3296-29	1	Nut-Lock, NI
14	106-4161	5	Knob-Handle
15	1-323417	5	Washer
16	1-303536	3	Stud-Shield, Belt (Long)
17	1-303537	2	Stud-Shield, Belt (Short)
18	3231-1	4	Screw-CARR
19	32128-20	5	Nut-HF
20	112-9711	1	Decal

Ref	Part No.	Qty.	Description
21	110-6910-03	1	Baffle ASM
22	323-4	3	Screw-HH

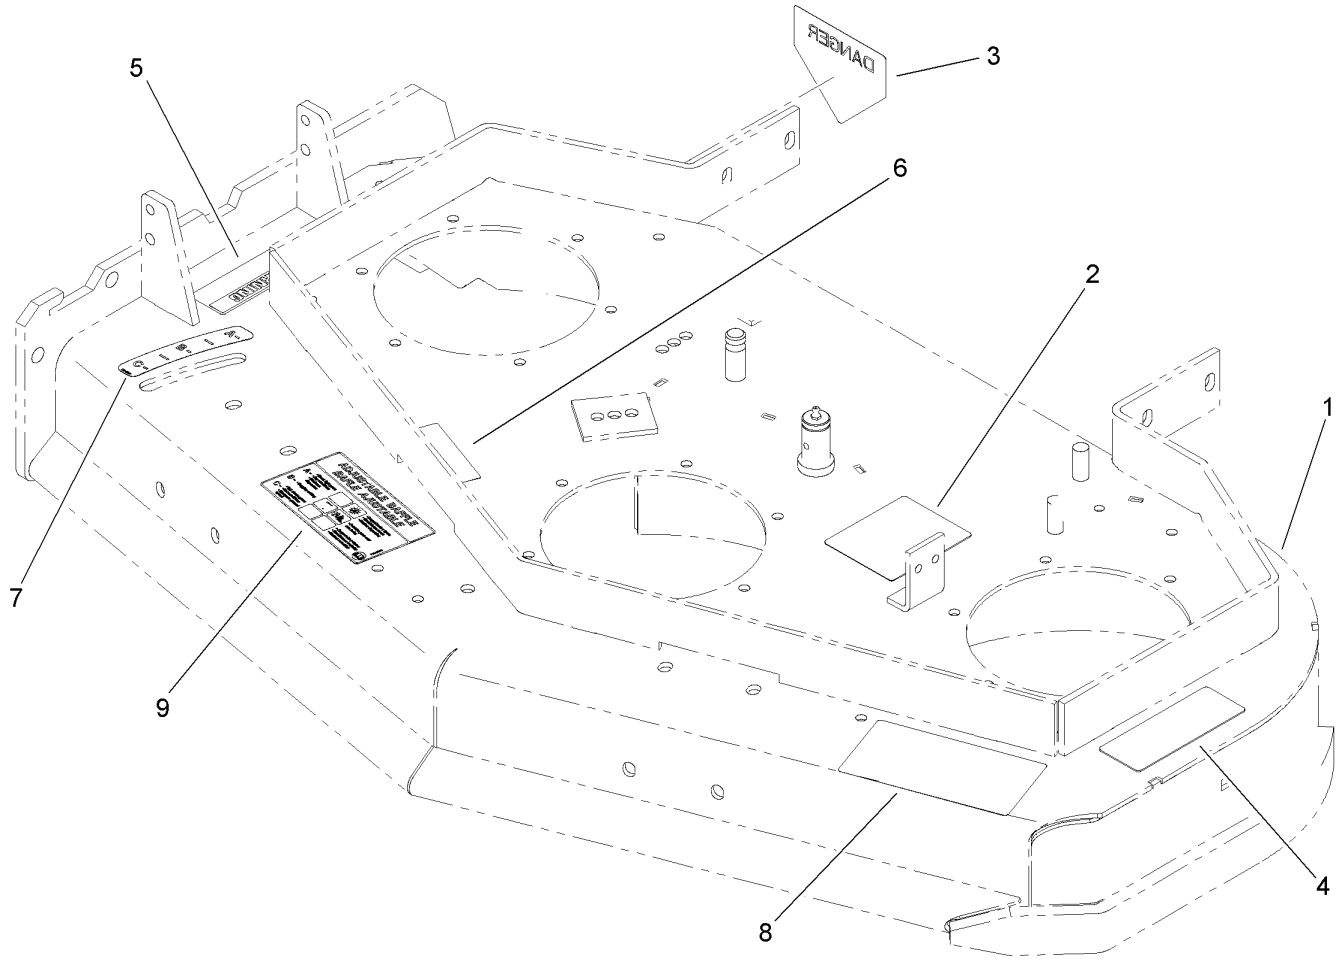


Deck Assembly No. 110-4908

Ref	Part No.	Qty.	Description
❶1		1	40 Inch Deck ASM
2	99-3943	1	Decal-Routing, Belt
3	43-8480	1	Decal-Danger
4	98-5130	1	Decal-Torque, Bolt
5	104-8569	1	Decal-Warning
6	98-5954	2	Decal-Cover, Missing
7	110-2067	1	Decal-Setting, Baffle
8	66-1340	1	Decal-Danger, Thrown Object
9	110-2068	1	Decal-Adjustment, Baffle

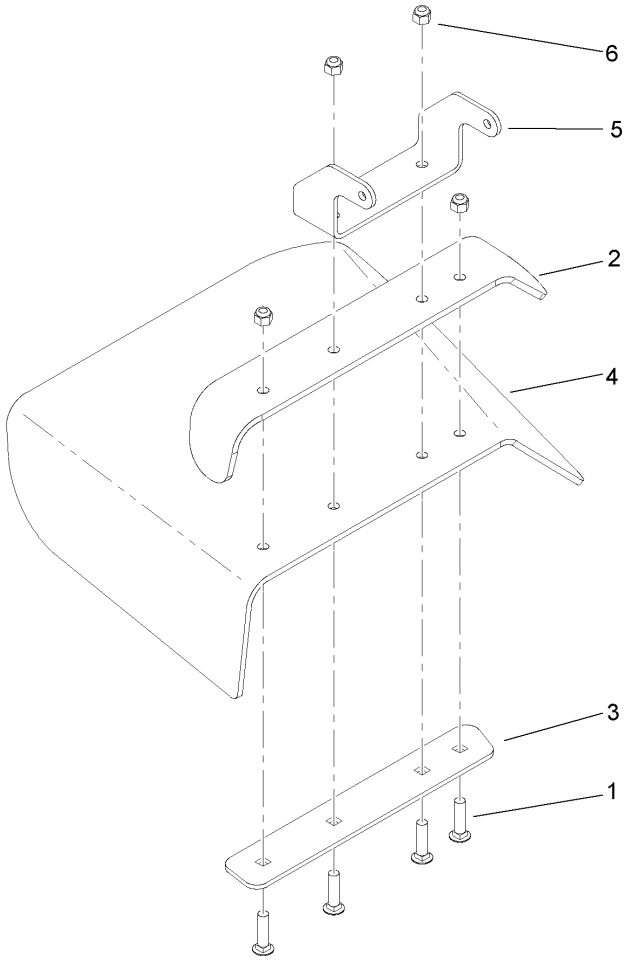

Deflector Assembly No. 110-0790


Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI

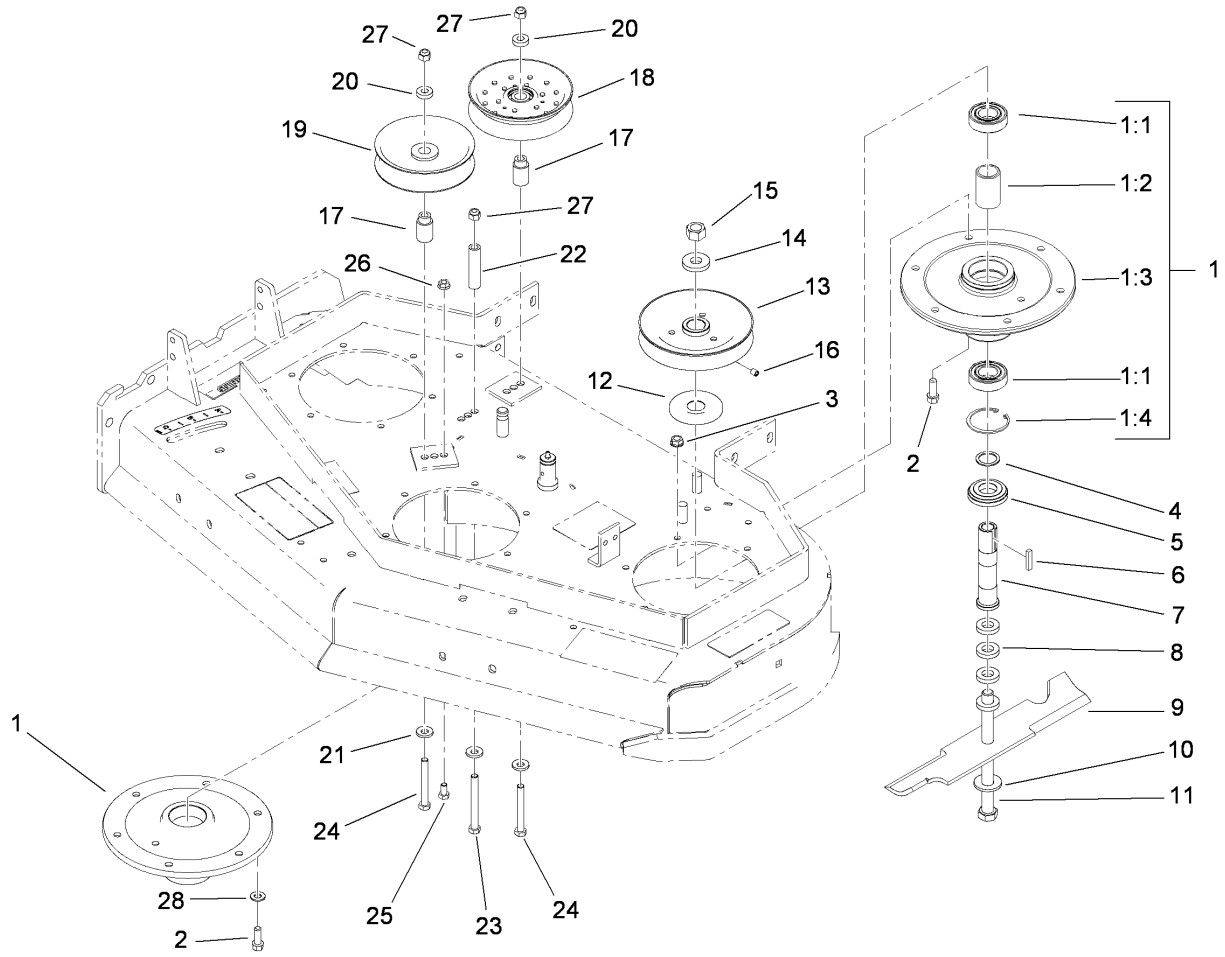

Sheave, Spindle and Blade Assembly

Ref	Part No.	Qty.	Description
1	108-6697	3	Spindle Housing ASM
1:1	110-2118	2	Bearing
1:2	110-2116	1	Spacer-Bearing
1:3	108-6694	1	Housing-Spindle
1:4	32120-8	1	Ring-Snap
2	92-1624	18	Screw-HWH
3	3290-357	18	Nut-HHF, Whiz
4	110-4888	3	Washer-Spacer
5	103-2535	3	Spacer-Guard, Bottom
6	1-807267	3	Key
7	1-323529	3	Tube-Spindle, Short
8	1-323539	12	Spacer
9	108-4081-03	3	Blade-14 Inch (High Sail)
10	1-513208	3	Washer-Spring
11	1-800861	3	Screw-Cap, HH
12	103-1330	3	Guard-Bearing, Top
13	1-403183	3	Sheave
14	1-323339	3	Washer-Retainer, Sheave
15	3219-6	3	Nut-Hex
16	1-803310	3	Screw-Set
17	1-413113	2	Bushing-Idler
18	1-403186	1	Idler-Pulley, Flat
19	1-613098	1	Pulley-Idler
20	5-0652	2	Spacer


Ref	Part No.	Qty.	Description
21	98-5975	3	Washer-Belleville
22	1-403188	1	Spacer
23	323-15	1	Screw-HH
24	323-14	2	Screw-HH
25	322-2	1	Screw-HH
26	32128-20	1	Nut-HF
27	3296-39	3	Nut-Lock, NI
28	3256-24	1	Washer-Flat

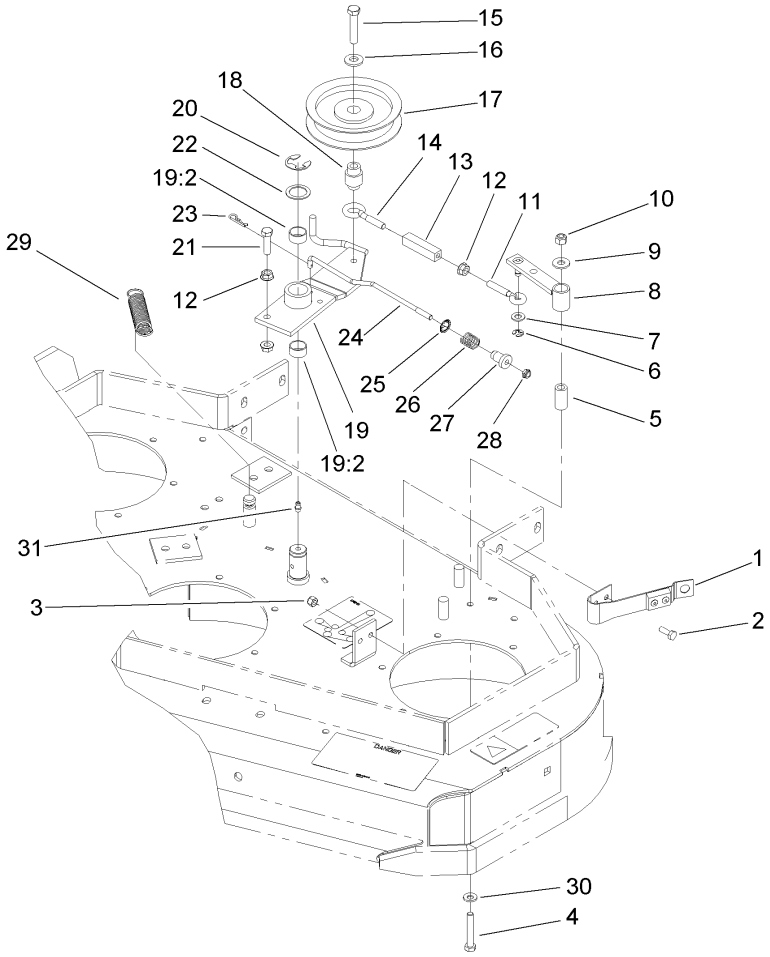

Idler Assembly


Ref	Part No.	Qty.	Description
1	1-324372	1	Pad And Spring ASM
2	321-4	2	Screw-HH
3	3296-42	2	Nut-Lock, NI
4	322-10	1	Screw-HH
5	1-403179	1	Tube-Pivot
6	32120-35	1	Ring-Retaining, EXT
7	3256-23	1	Washer-Flat
8	1-322235	1	Arm-Assist
9	3256-3	1	Washer-Flat
10	3296-29	1	Nut-Lock, NI
11	1-303238	1	Eyebolt-Thread, RH
12	32128-20	3	Nut-HF
13	1-303236	1	Body-Turnbuckle
14	1-303348	1	Eyebolt-Thread, LH
15	702809	1	Screw-Cap
16	98-5975	1	Washer-Belleville
17	1-603843	1	Pulley-Idler
18	1-303434	1	Bushing-Engagement
19	103-3600	1	Idler Arm ASM
19:2	1-323729	2	Sleeve-Bearing
20	32151-103	1	Ring-Retaining, EXT
21	322-6	1	Screw-HH
22	1-303352	1	Washer-Spindle
23	1-806003	3	Pin-Cotter, Hair

Ref	Part No.	Qty.	Description
24	110-2051	1	Rod-Brake
25	1-323748	1	Ring-Push On
26	1-323747	1	Spring-Compression
27	1-323746	1	Spacer-Flanged
28	3296-56	1	Nut-Lock, NI
29	1-323071	1	Spring-Extension
30	1-303334	1	Washer-Spring
31	302-19	2	Fitting-Grease

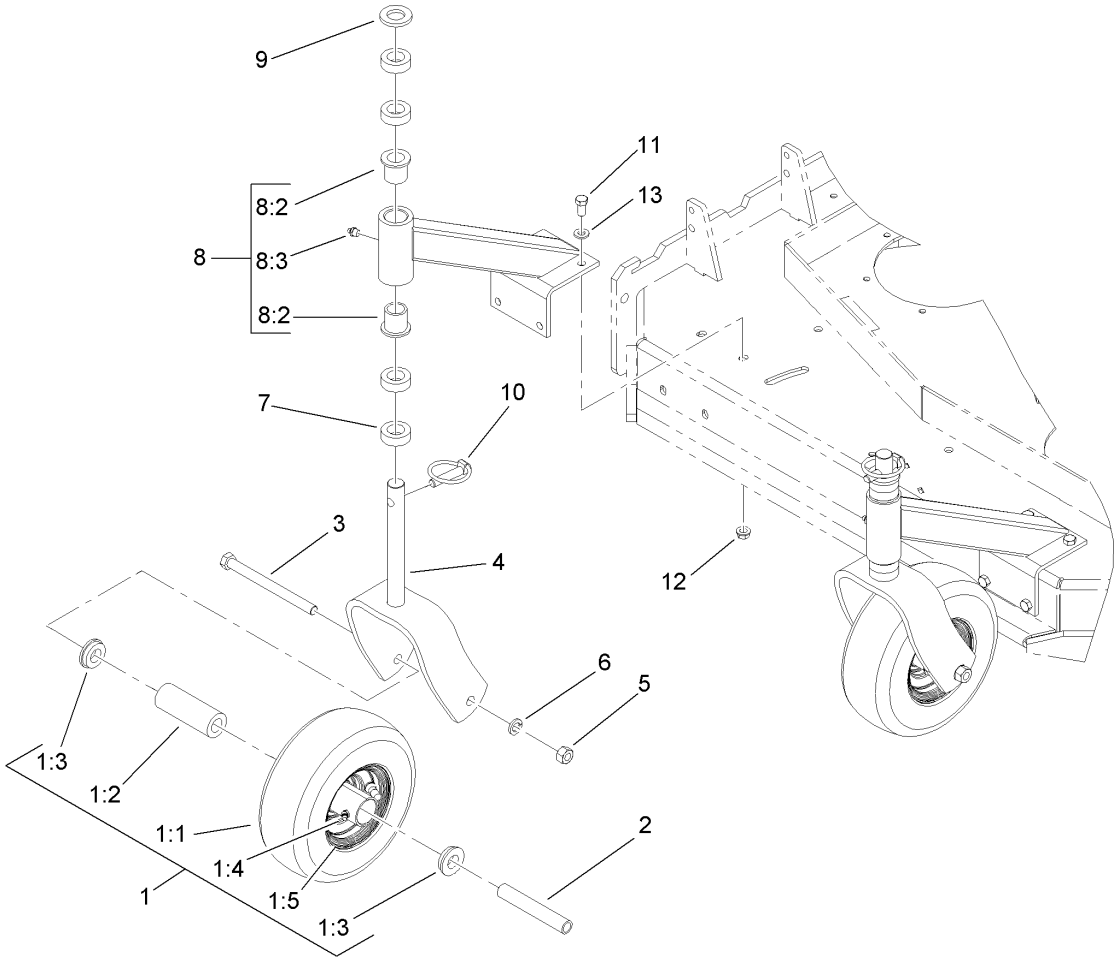

Caster Assembly


Ref	Part No.	Qty.	Description
1	110-5023	2	Wheel And Tire ASM
❶1:1		1	Tire
1:2	1-513809	1	Bearing
1:3	1-513810	2	Bushing
1:4	302-61	1	Zerk
❶1:5		1	Wheel
2	1-513547	2	Spacer
3	325-20	2	Screw-HH
4	1-322145-01	2	Fork
5	3217-9	2	Nut-HH
6	3253-7	2	Washer-Lock
7	1-303314	8	Spacer-Caster
8	110-2130	2	Support ASM
8:2	1-303514	2	Bearing-Flanged
8:3	302-52	1	Fitting-Grease
9	1-513338	2	Washer-Flat
10	1-809020	2	Pin
11	323-6	8	Screw-HH
12	3290-357	8	Nut-HHF, Whiz
13	3256-24	8	Washer-Flat

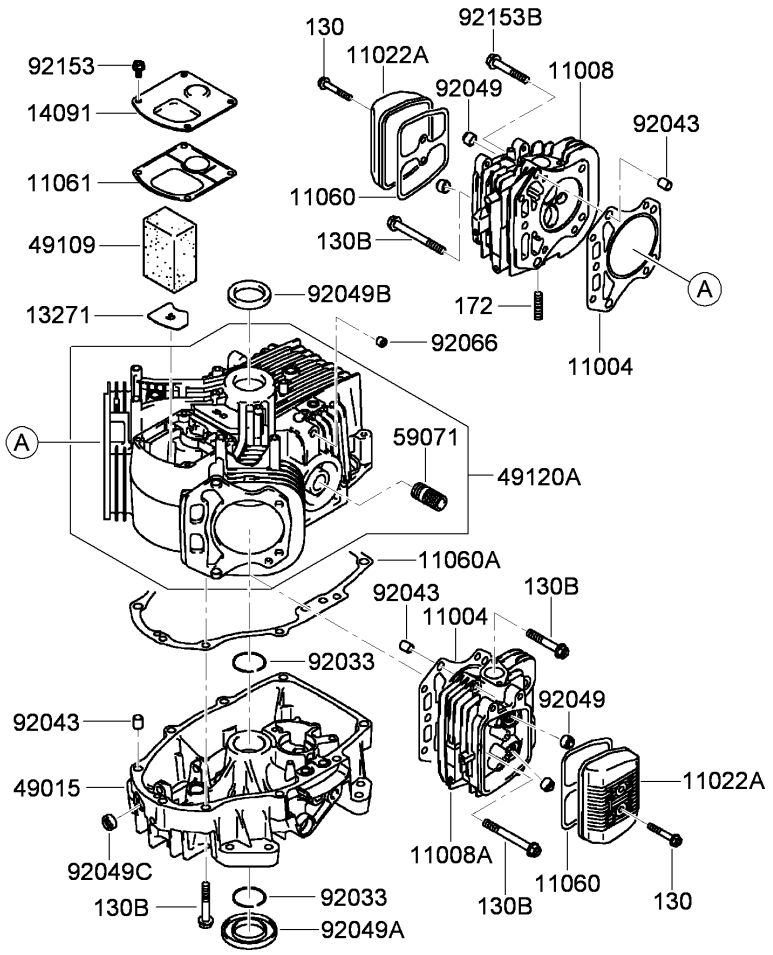

Cylinder and Crankcase Assembly
Kawasaki FH541V-FS23


Ref	Part No.	Qty.	Description
❷130	130AA0640	4	Bolt-Flanged (6X40)
❷130B	130CA0875	2	Bolt-Flanged (8X75)
❷172	172BA0818	4	Bolt-Stud (8X18)
❷11004	11004-7016	2	Gasket-Head
❷11008	11008-6043	1	Head-Cylinder, No. 1
❷11008A	11008-7020	1	Head-Cylinder, No. 2
❷11022A	11022-7018	2	Case-Rocker
❷11060	11060-7001	2	Gasket-Case, Rocker
❷11060A	11060-7008	1	Gasket-Cover, Crankcase
❷11061	11061-7001	1	Gasket-Breather
❷13271	13271-7016	1	Plate
❷14091	14091-7006	1	Cover
❷49015	49015-6253	1	Cover-Crankcase
❷49109	49109-7002	1	Element-Breather
❷49120A	49120-7113	1	Crankcase
❷59071	59071-2079	1	Joint
❷92033	92033-7003	2	Ring-Snap
❷92043	92043-7001	6	Pin
❷92049	92049-7001	4	Seal-Oil, R V C2 (6X11X10.2)
❷92049A	92049-7015	1	Seal-Oil, S D (35X62X8 L HSH)
❷92049B	92049-7016	1	Seal-Oil, S D (35X48X8 R HSH)
❷92049C	92049-7019	1	Seal-Oil, S O (8X14X5 HSH)
❷92066	92066-7026	1	Plug
❷92153	92153-7043	4	Bolt (6X12)

Ref	Part No.	Qty.	Description
❷92153B	92153-7054	17	Bolt (8X50)

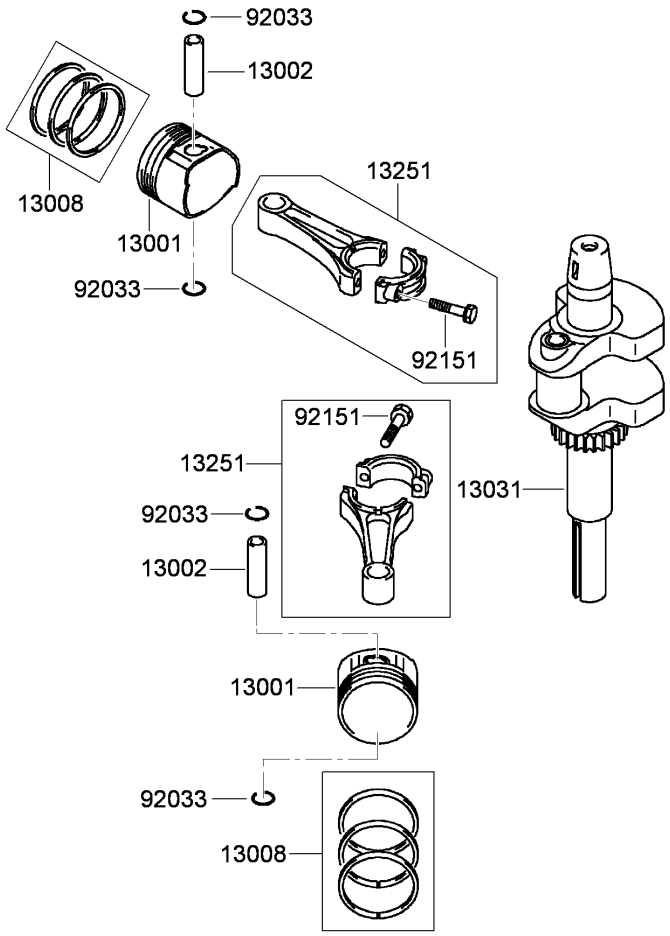


Piston and Crankshaft Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷13001	13001-7010	2	Piston-Engine
❷13002	13002-7001	2	Pin-Piston
❷13008	13008-6060	2	Piston Ring Set
❷13031	13031-7073	1	Crankshaft
❷13251	13251-7010	2	Connecting Rod ASM
❷92033	92033-7002	4	Ring-Snap
❷92151	92151-7017	4	Bolt (6X35)

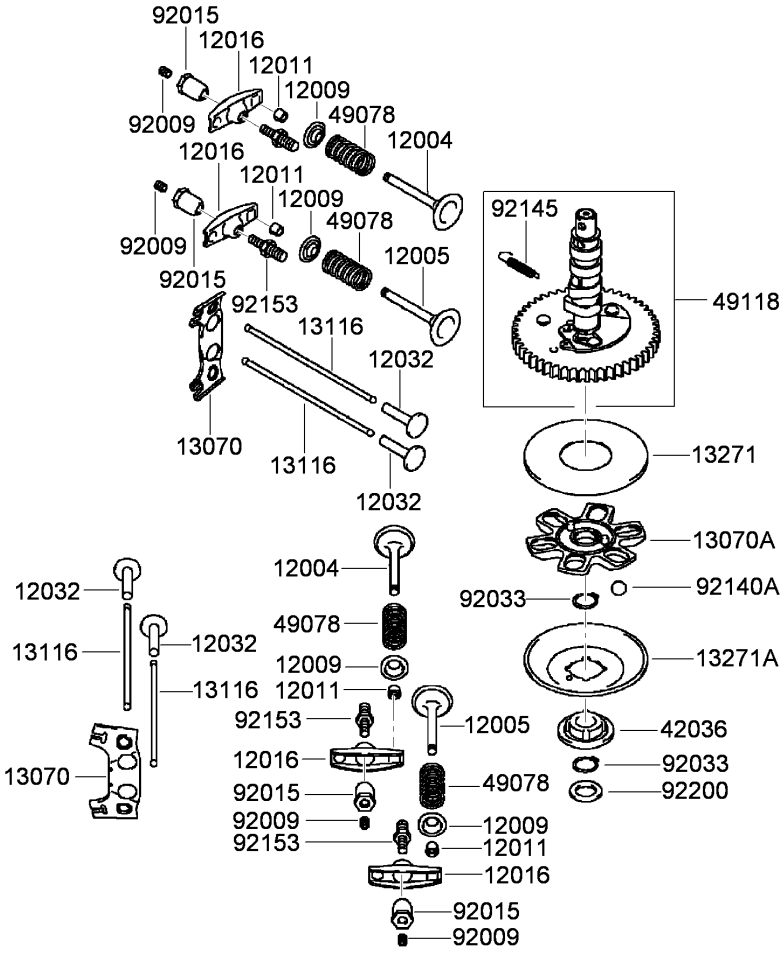


Valve and Camshaft Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷12004	12004-7003	2	Valve-Intake
❷12005	12005-7003	2	Valve-Exhaust
❷12009	12009-7001	4	Retainer-Spring, Valve
❷12011	12011-2056	8	Collet
❷12016	12016-7008	4	Arm-Rocker
❷12032	12032-7001	4	Tappet
❷13070	13070-7001	2	Guide
❷13070A	13070-7004	1	Guide
❷13116	13116-2057	4	Rod-Push
❷13271	13271-7007	1	Plate
❷13271A	13271-7021	1	Plate-Governor
❷42036	42036-7010	1	Sleeve
❷49078	49078-7001	4	Spring-Valve, Engine
❷49118	49118-7004	1	Camshaft
❷92009	92009-2341	4	Screw
❷92015	92015-2253	4	Nut
❷92033	92033-7001	2	Ring-Snap
❷92140A	92140-7005	6	Ball
❷92145	92145-7001	1	Spring
❷92153	92153-7019	4	Bolt
❷92200	92200-7001	1	Washer

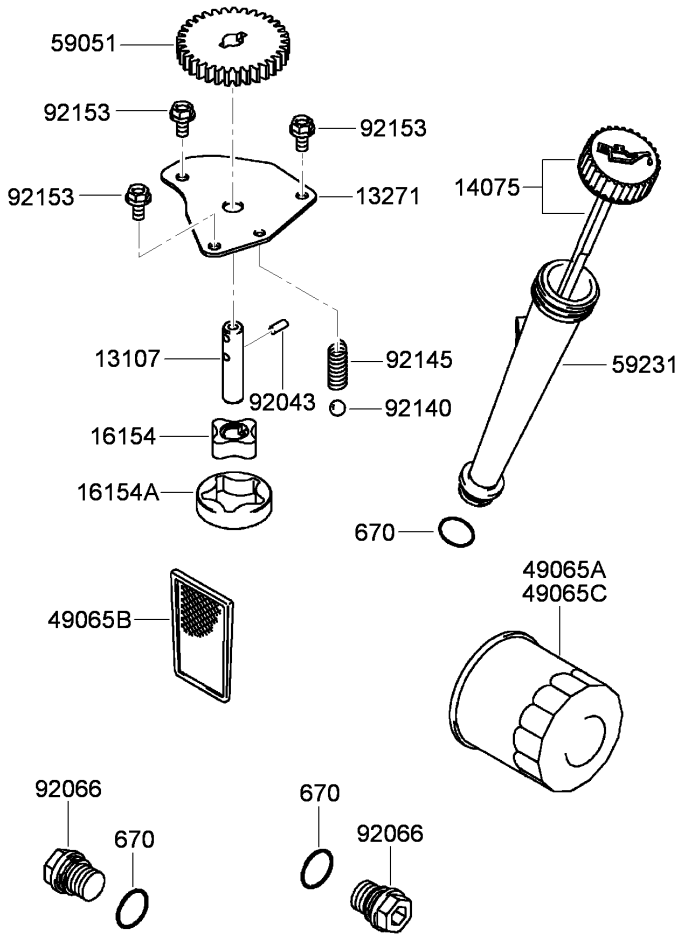


Lubrication Equipment Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷670	670D2016	3	O-Ring (16Mm)
❷13107	13107-7009	1	Shaft
❷13271	13271-7017	1	Plate
❷14075	14075-7009	1	Cap ASM
❷16154	16154-2053	1	Rotor-Pump (In)
❷16154A	16154-2054	1	Rotor-Pump (Out)
❷49065A	49065-2078	1	Filter-Oil (Part May Be Used As Substitute And Is Supplied Until The Stock Is Exhausted)
❷49065B	49065-7004	1	Filter-Oil
❷49065C	49065-7010	1	Filter-Oil
❷59051	59051-7011	1	Gear-Spur
❷59231	59231-7005	1	Filler
❷92043	92043-7003	2	Pin
❷92066	92066-7003	2	Plug
❷92140	92140-7003	1	Ball
❷92145	92145-7002	1	Spring
❷92153	92153-7043	3	Bolt (6X12)

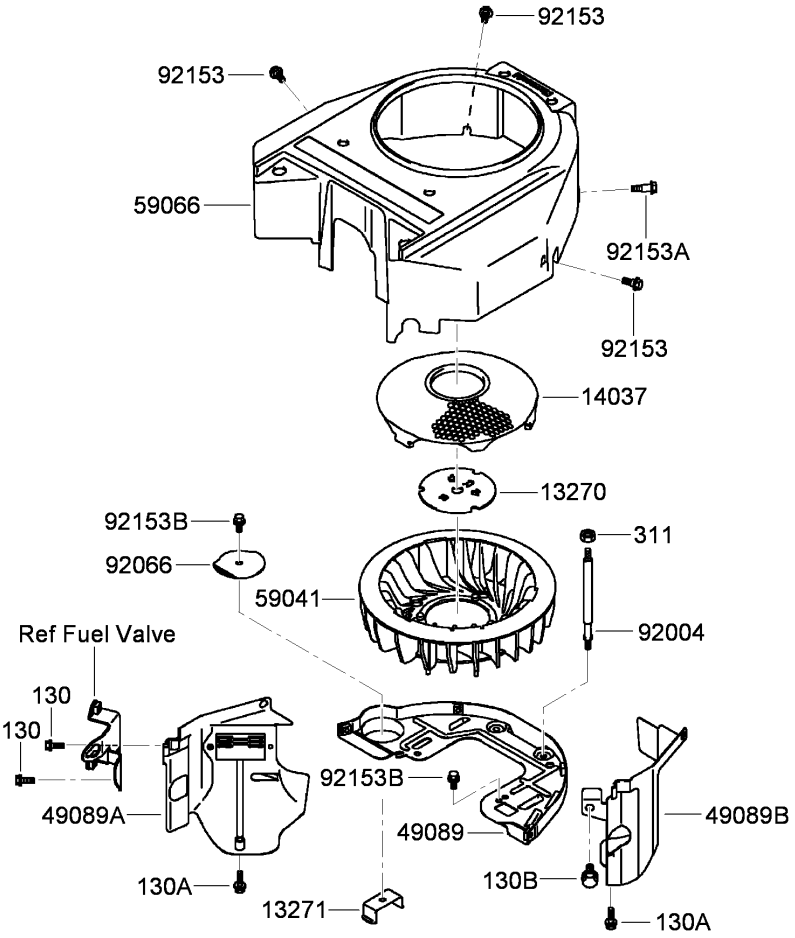


Cooling Equipment Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷130	130AA0616	2	Bolt-Flanged (6X16)
❷130A	130AA0625	2	Bolt-Flanged (6X25)
❷130B	130AA0816	1	Bolt-Flanged (8X16)
❷311	311AA0600	2	Nut-Hex (6Mm)
❷13270	13270-7007	1	Plate
❷13271	13271-7002	1	Plate
❷14037	14037-7025-9H	1	Screen
❷49089	49089-7032	1	Shroud-Engine
❷49089A	49089-7042	1	Shroud-Engine
❷49089B	49089-7043	1	Shroud-Engine
❷59041	59041-7012	1	Fan
❷59066	59066-7037	1	Housing-Fan
❷92004	92004-7006	2	Stud
❷92066	92066-7004	1	Plug
❷92153	92153-7007	3	Bolt
❷92153A	92153-7008	1	Bolt
❷92153B	92153-7043	3	Bolt (6X12)

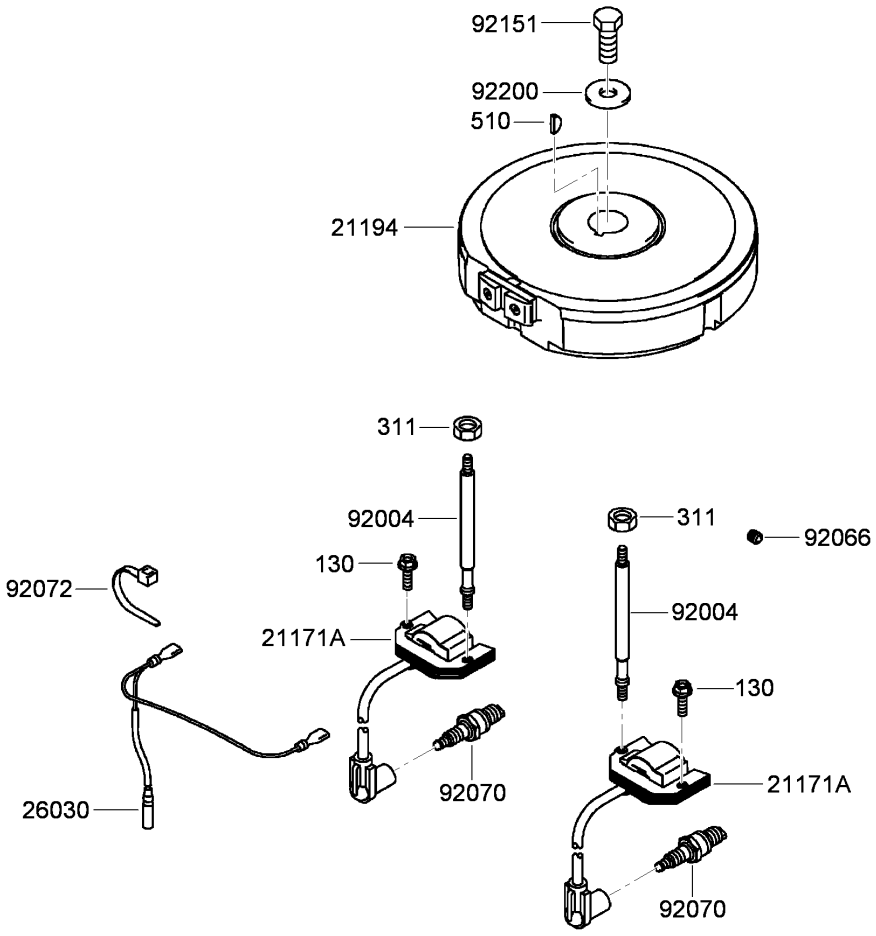


Electric Equipment Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷130	130AA0620	2	Bolt-Flanged (6X20)
❷311	311AA0600	2	Nut-Hex (6Mm)
❷510	510A5100	1	Key-Woodruff
❷21171A	21171-7034	2	Ignition Coil ASM
❷21194	21194-7027	1	Flywheel
❷26030	26030-7001	1	Harness
❷92004	92004-7009	2	Stud
❷92066	92066-7026	1	Plug
❷92070	92070-7003	2	Spark Plug (R C J 8 Y, Solid)
❷92072	92072-7003	3	Band
❷92151	92151-2097	1	Bolt (12X30)
❷92200	92200-7002	1	Washer

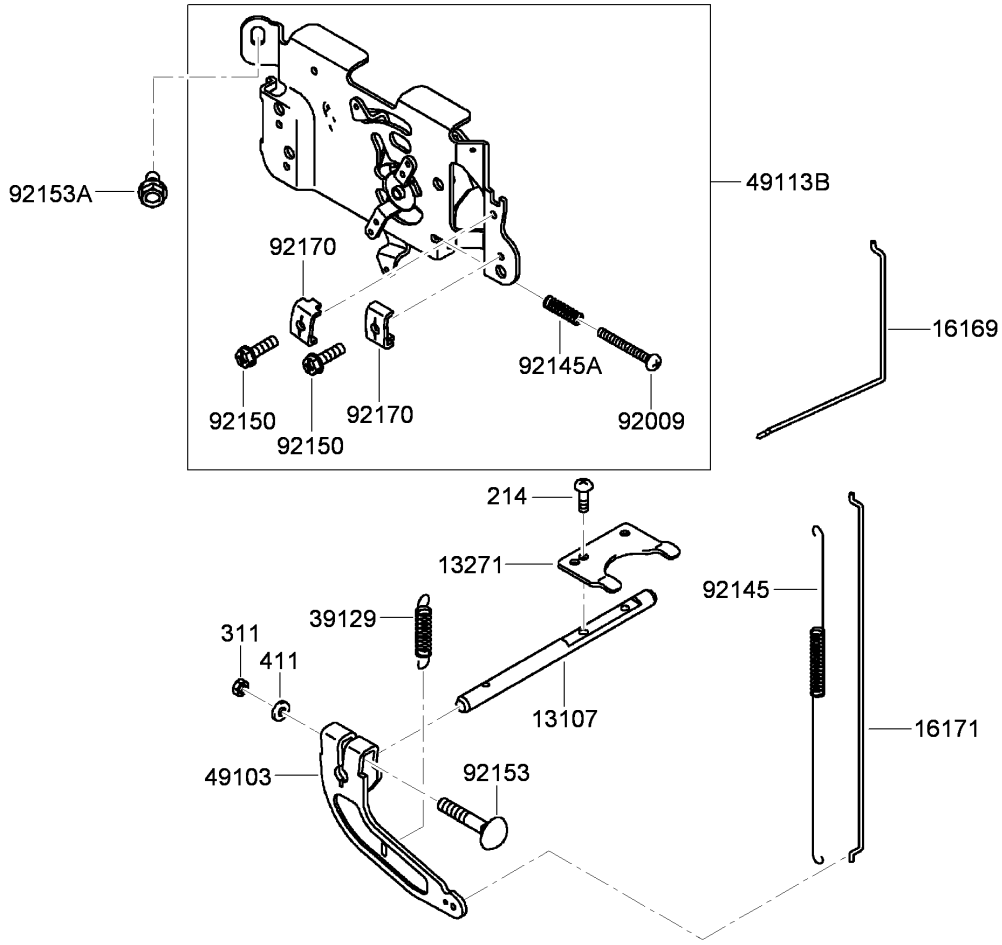

Control Equipment Assembly
Kawasaki FH541V-FS23


Ref	Part No.	Qty.	Description
❷214	214AA0408	2	Screw-Pan +-(4X8)
❷311	311AA0600	1	Nut-Hex (6Mm)
❷411	411AA0600	1	Washer-Plain (6Mm)
❷13107	13107-7010	1	Shaft
❷13271	13271-7032	1	Plate
❷16169	16169-7010	1	Link-Choke
❷16171	16171-7001	1	Link
❷39129	39129-7003	1	Spring-Governor
❷49103	49103-7004	1	Arm-Governor
❷49113B	49113-7054	1	Control Panel ASM
❷92009	92009-7007	1	Screw (4X35)
❷92145	92145-7003	1	Spring
❷92145A	92145-7005	1	Spring
❷92150	92150-2182	2	Bolt (5X18)
❷92153	92153-7033	1	Bolt (6X35)
❷92153A	92153-7043	2	Bolt (6X12)
❷92170	92170-7001	2	Clamp

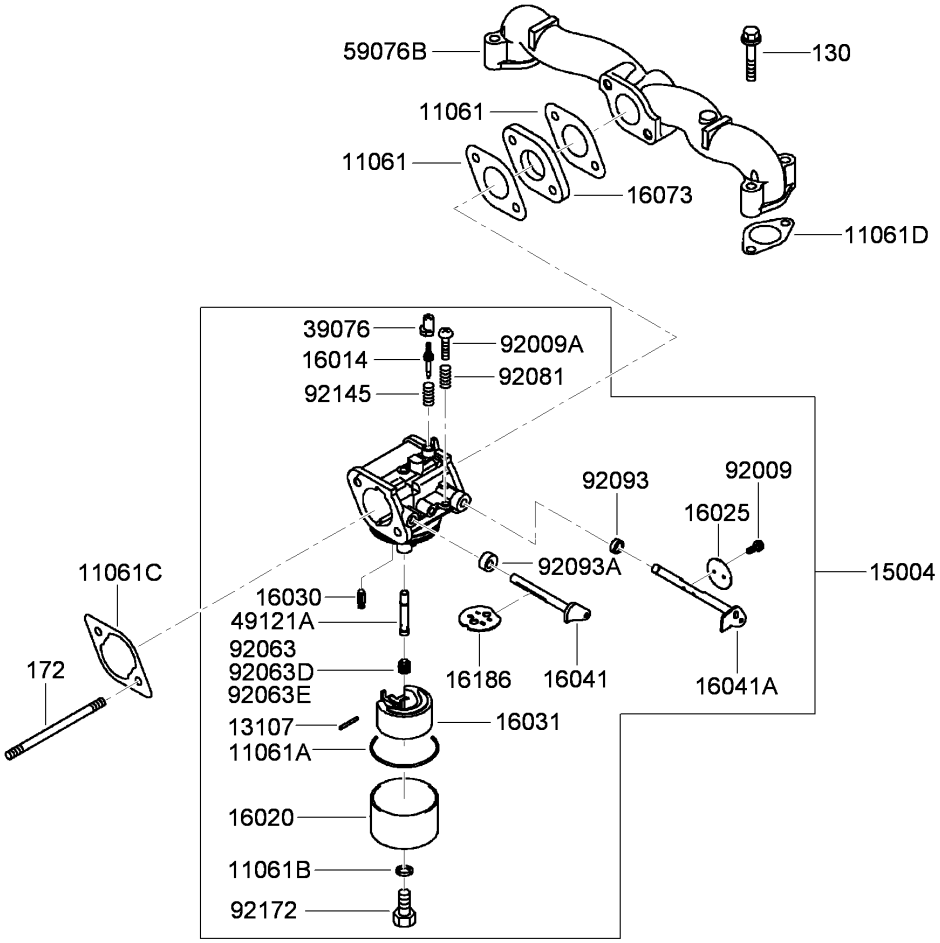

Carburetor Assembly
Kawasaki FH541V-FS23


Ref	Part No.	Qty.	Description
❷130	130AA0635	4	Bolt-Flanged (6X35)
❷172	172BA0690	2	Bolt-Stud (6X90)
❷11061	11061-7004	2	Gasket-Insulator
❷11061A	11061-7009	1	Gasket-Chamber
❷11061B	11061-7010	1	Gasket-Screw
❷11061C	11061-7018	1	Gasket-Cleaner, Air
❷11061D	11061-7019	2	Gasket
❷13107	13107-7018	1	Shaft
❷15004	15004-7057	1	Carburetor ASM
❷16014	16014-7005	1	Screw-Air, Pilot
❷16020	16020-7003	1	Chamber-Float
❷16025	16025-7006	1	Valve-Throttle
❷16030	16030-7003	1	Valve-Float
❷16031	16031-7002	1	Float
❷16041	16041-7016	1	Shaft-Choke, Carburetor
❷16041A	16041-7018	1	Shaft-Throttle, Carburetor
❷16073	16073-7007	1	Insulator
❷16186	16186-7001	1	Choke Valve ASM
❷39076	39076-7001	1	Limiter
❷49121A	49121-7017	1	Nozzle-Main
❷59076B	59076-7017	1	Manifold-Intake
❷92009	92009-2083	2	Screw
❷92009A	92009-2349	1	Screw
❷92063	92063-7029	1	Jet-Main, No.82 (6560 Ft)

Ref	Part No.	Qty.	Description
❷92063D	92063-7147	1	Jet-Main, No.86
❷92063E	92063-7148	1	Jet-Main-No.84 (3280 Ft)
❷92081	92081-2234	1	Spring
❷92093	92093-2100	1	Seal
❷92093A	92093-7003	1	Seal
❷92145	92145-7015	1	Spring
❷92172	92172-7002	1	Screw

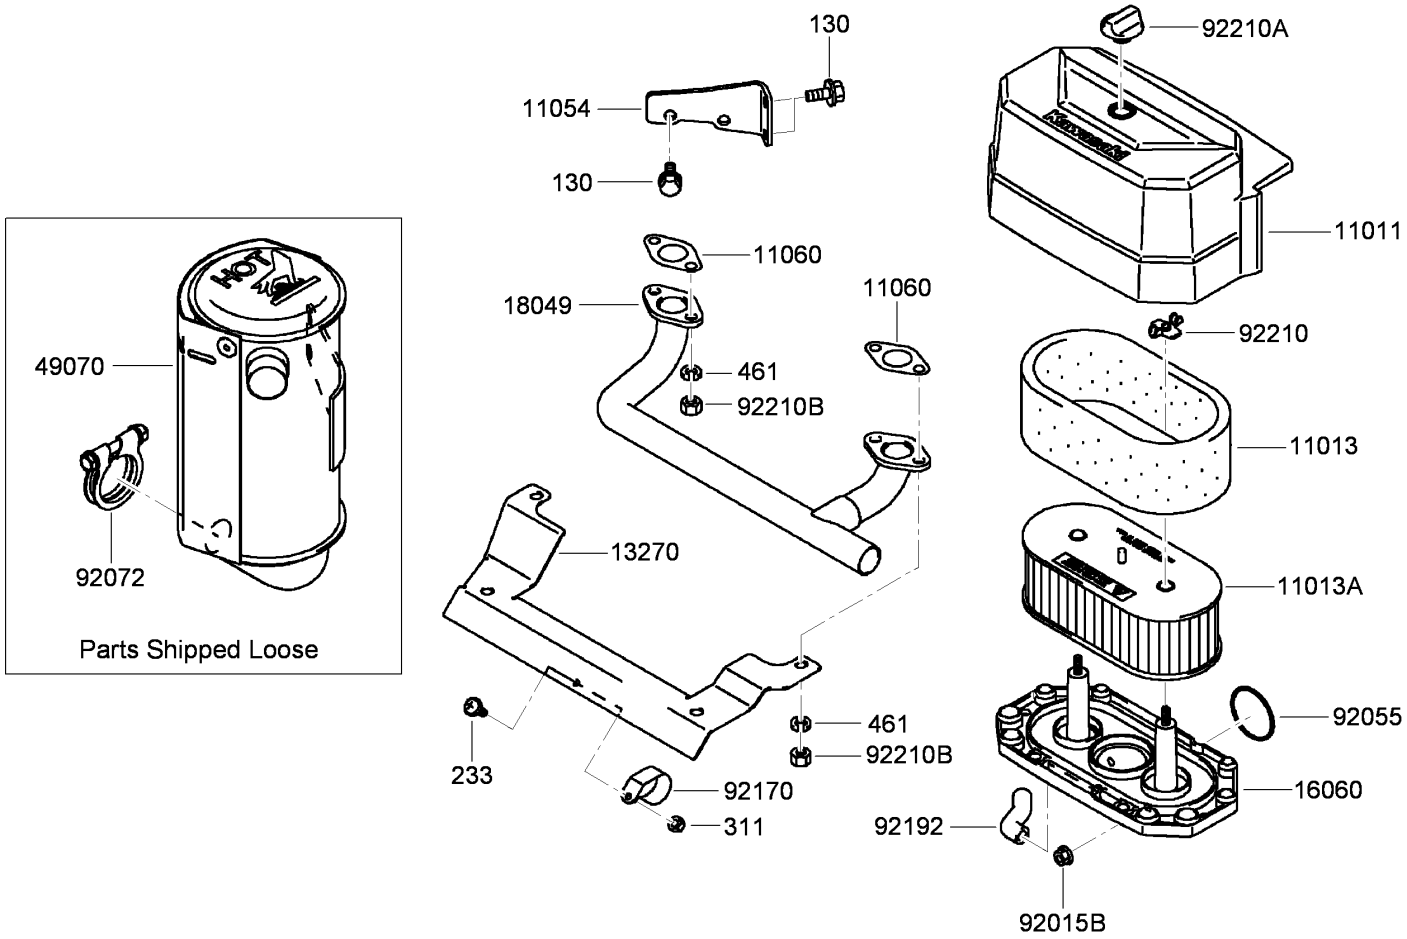


Air Filter and Muffler Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷130	130AA0816	3	Bolt-Flanged (8X16)
❷233	233AA0416	1	Screw-Pan, Wp +-(4X16)
❷311	311AA0400	1	Nut-Hex (4Mm)
❷461	461DA0800	4	Washer-Spring (8Mm)
❷11011	11011-7046	1	Case-Filter, Air
❷11013	11013-7025	1	Element-Filter, Air
❷11013A	11013-7031	1	Element-Filter, Air
❷11054	11054-7002-9H	1	Bracket
❷11060	11060-7021	2	Gasket-Muffler
❷13270	13270-7008	1	Plate
❷16060	16060-7016	1	Pipe-Intake
❷18049	18049-7001	1	Pipe-Exhaust
❷49070	49070-7021	1	Muffler
❷92015B	92015-1367	2	Nut
❷92055	92055-7015	1	O-Ring
❷92072	92072-7012	1	Band
❷92170	92170-7002	1	Clamp
❷92192	92192-7010	1	Tube
❷92210	92210-7004	2	Nut (M6)
❷92210A	92210-7019	1	Nut
❷92210B	92210-7027	4	Nut (M8)

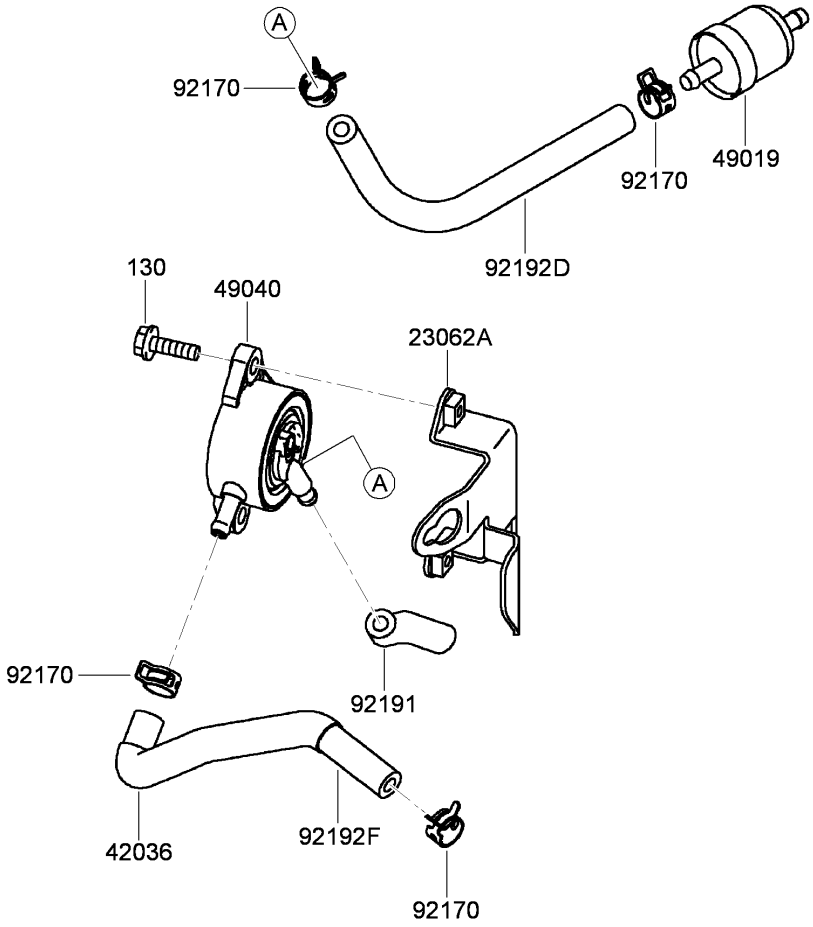


Fuel Tank and Valve Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷130	130AA0620	2	Bolt-Flanged (6X20)
❷23062A	23062-7019-9H	1	Bracket
❷42036	42036-7012	1	Sleeve
❷49019	49019-7001	1	Filter-Fuel
❷49040	49040-7001	1	Pump-Fuel
❷92170	92170-2009	4	Clamp
❷92191	92191-7002	1	Tube
❷92192D	92192-7135	1	Tube (6.35X12.7X160)
❷92192F	92192-7136	1	Tube (6.35X12.7X180)

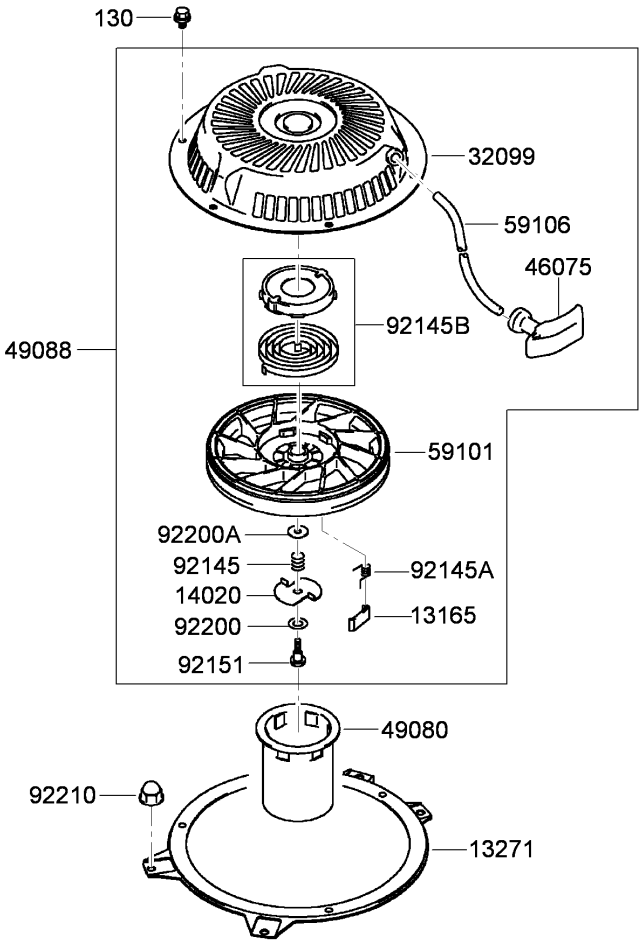


Starter Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷130	130AA0608	3	Bolt-Flanged (6X8)
❷13165	13165-7001	2	Pawl-Starter, Recoil
❷13271	13271-7003-9H	1	Plate
❷14020	14020-7001	1	Retainer
❷32099	32099-7002	1	Case-Starter, Recoil
❷46075	46075-7001	1	Grip-Starter, Recoil
❷49080	49080-7001	1	Pulley-Starting
❷49088	49088-7013	1	Starter-Recoil
❷59101	59101-7001	1	Reel-Starter, Recoil
❷59106	59106-7005	1	Rope
❷92145	92145-7006	1	Spring
❷92145A	92145-7007	2	Spring
❷92145B	92145-7008	1	Spring
❷92151	92151-7008	1	Bolt
❷92200	92200-7004	1	Washer
❷92200A	92200-7005	1	Washer
❷92210	92210-0003	4	Nut

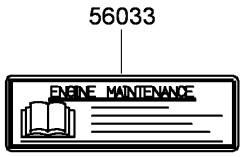





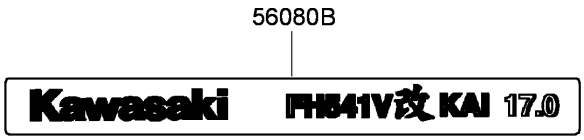

Label Assembly
Kawasaki FH541V-FS23

Ref	Part No.	Qty.	Description
❷56033	56033-7001	1	Label-Manual
❷56070	56070-7001	1	Label-Warning
❷56080	56080-2077	1	Label-Brand
❷56080B	56080-7056	1	Label-Brand

Attachments and Accessories

For 38696 - Commercial Walk-Behind Mower, Fixed Deck, T-Bar, Gear Drive with 40in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Rotary, 14 Inch (Recycling)	108-4089-03
Blade-Rotary, 14 Inch (Mid Flow)	108-4110-03
Blade-Rotary, 14 Inch (Low Flow)	108-4111-03
Blade-Rotary, 14 Inch (Atomic)	108-4112-03
40 Inch Bagger Enhancement Kit	110-2025
40 Inch Recycler Kit	110-2070
Weight Kit	110-2085
Plate Kit	110-6902
Blade-Recycler, 14 Inch (6-pack)	114-4961
Blade-Low Flow, 14inch (6-pack)	114-4962
Blade-Mid Flow, 14 Inch (6-pack)	114-4963
Blade-High Flow, 14 Inch (6-pack)	114-4964
Blade-Atomic, 14 Inch (6-pack)	114-4965
Operator-Controlled Discharge Chute Kit	115-4190
Soft Bag (3 Bushel)	30104
Sulky	30109

NOTES


TORO®