



66cm Heavy-Duty Rear Bagger Lawn Mower

Model No. 22200TE - 290000501 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Valve and Camshaft Assembly Kawasaki FJ180V-AS64	 16
Bag and Door Assembly	 4	Lubrication Equipment Assembly Kawasaki FJ180V-AS64	 17
Handle Assembly	 5	Cooling Equipment Assembly Kawasaki FJ180V-AS64	 18
Gear Case and Pinion Assembly	 6	Electric Equipment Assembly Kawasaki FJ180V-AS64	 19
Gear Case Assembly No. 116-0786	 7	Control Equipment Assembly Kawasaki FJ180V-AS64	 20
Engine Assembly	 8	Carburetor Assembly Kawasaki FJ180V-AS64	 21
Blade Drive Assembly	 9	Air Filter and Muffler Assembly Kawasaki FJ180V-AS64	 22
Cutter Housing Assembly No. 107-4065	 10	Starter Assembly Kawasaki FJ180V-AS64	 23
Rear Wheel Assembly	 11	Label Assembly Kawasaki FJ180V-AS64	 24
Wheel Assembly No. 112-8707	 12		
Front Wheel Assembly	 13		
Cylinder and Crankcase Assembly Kawasaki FJ180V-AS64	 14		
Piston and Crankshaft Assembly Kawasaki FJ180V-AS64	 15		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HD. heavy-duty	PTH. phillips truss head
HF. hex flange	PTO. power-take-off
HH. hex head	RH. right hand
HHF. hex head flange	ROPS. roll-over protection system
HHFTF. hex head flange thread forming	SFH. slotted fillister head
HJ. hex jam	SHH. slotted hex head
HLH. hex lag head	SHWH. slotted hex washer head
HOC. height-of-cut	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head

Footnotes


❶ Not serviced separately

❷ Obtain from your local Kawasaki dealer

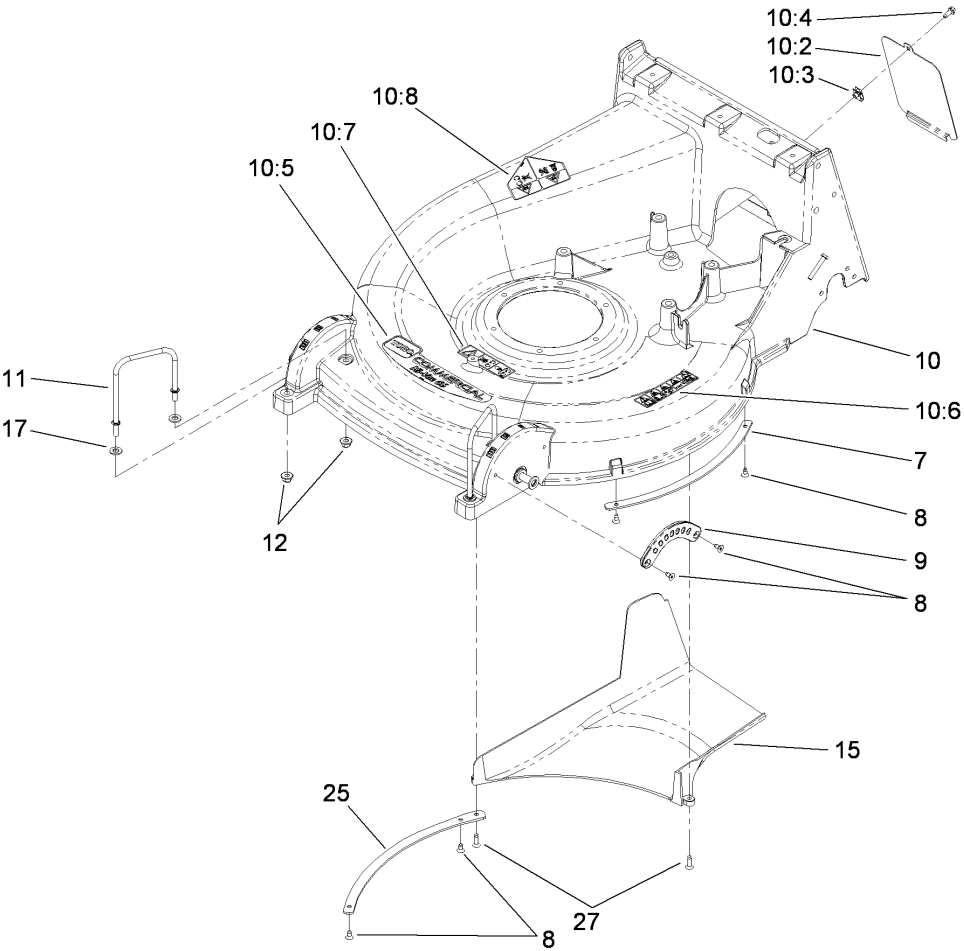


Housing Assembly

Ref	Part No.	Qty.	Description				
7	116-0059-03	1	Plate-Skid, 10 Gage				
8	103-6145	8	Screw				
9	103-6460	2	Quadrant-Front				
10	115-4240	1	Deck ASM				
10:2	116-0336	1	Cover-Access, Axle				
10:3	107069	1	Clip				
10:4	32144-10	1	Screw-HWH				
10:5	112-8709	1	Decal				
10:6	110-4978	1	Decal-Danger				
10:7	112-9028	1	Decal-Cover Missing				
10:8	112-8760	1	Decal-Danger				
11	103-8875	2	Handle-Deck				
12	104-8301	4	Nut-Flange, NI				
15	116-1405	1	Plastic Chute Kit (W/Screws)				
17	3256-24	4	Washer-Flat				
25	116-1273-03	1	Plate-Skid				
27	116-0606	2	Screw-Torx				

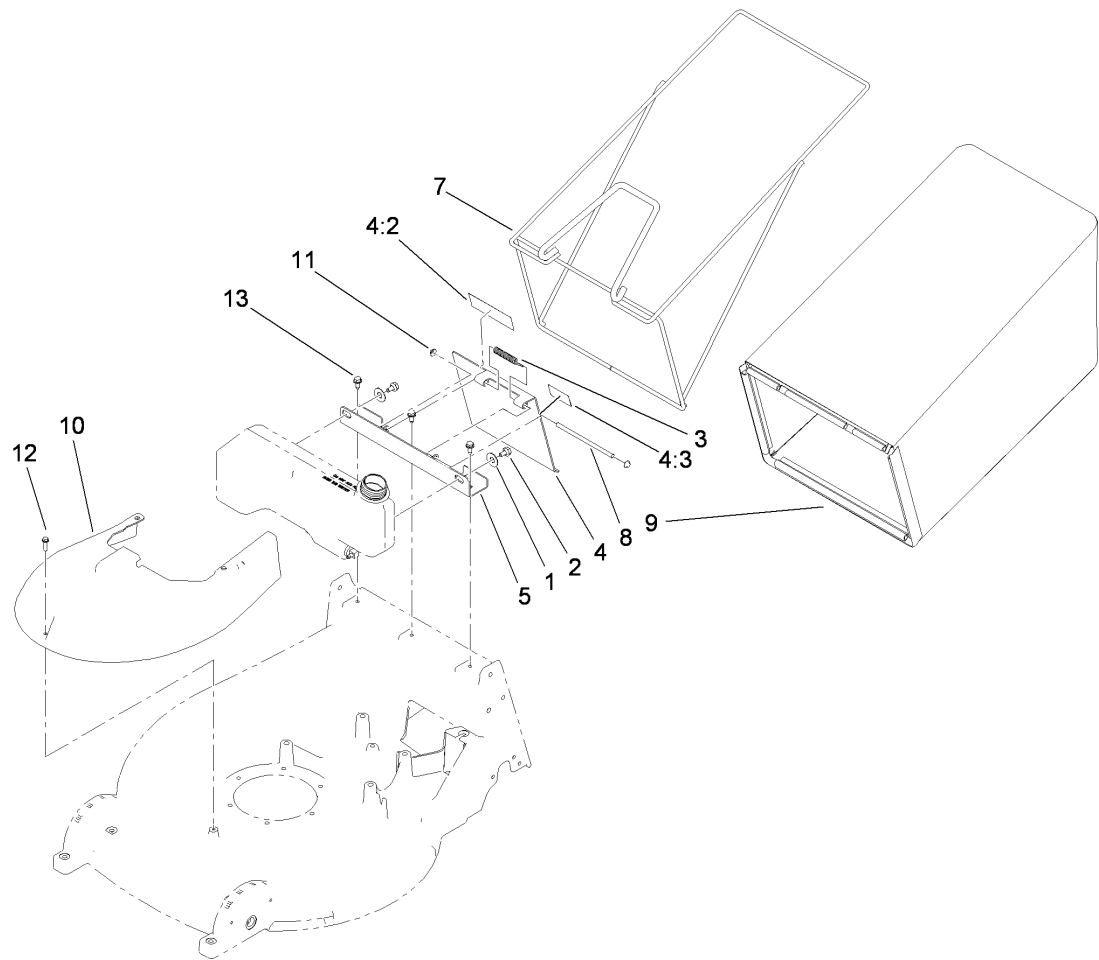

Bag and Door Assembly


Ref	Part No.	Qty.	Description				
1	28-2450	2	Washer-Plastic				
2	37-8771	2	Bolt-Shoulder				
3	99-5293	1	Spring-Torsion				
4	112-9741	1	Door ASM				
4:2	110-4977	1	Decal-Danger				
4:3	115-4207	1	Decal-Grease				
5	103-8223-03	1	Bracket-Mount, Bag/Door				
7	109-2445-03	1	Frame-Bag				
8	109-2453	1	Rod-Pivot, Door				
9	110-5029	1	Grass Bag ASM				
10	114-3413	1	Cover-Spindle				
11	32112-11	2	Nut-Push				
12	32144-86	1	Screw-HWHTF				
13	32144-70	3	Screw-HWHTF				

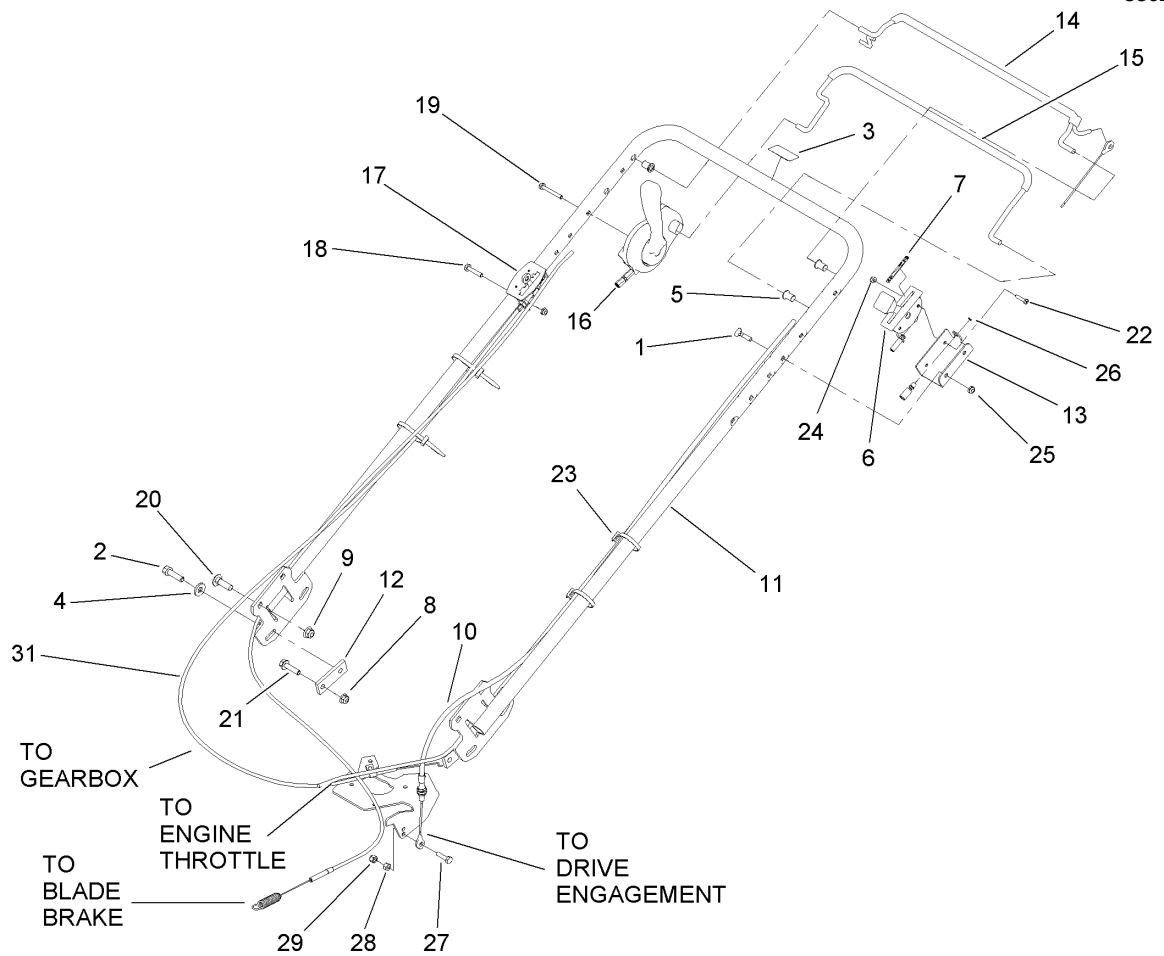

Handle Assembly


Ref	Part No.	Qty.	Description
1	109-8144	2	Bolt-Handle
2	95-1727	2	Screw-Taptite
3	98-4387	1	Decal-Protection, Ear
4	98-5975	2	Washer-Belleville
5	109-2713	3	Bushing
6	103-6123	1	Control-Throttle
7	103-6328	1	Decal-Throttle / Choke
8	104-8300	2	Nut-Flange, NI
9	104-8301	2	Nut-Flange, NI
10	109-2212	1	Cable-Traction
11	109-2441-03	1	Handle
12	109-2643-03	2	Nut-Handle
13	109-2821-03	1	Bracket-Control
14	116-0389	1	Traction Bail With Grip ASM
15	109-2826	1	Bail-BBC (With Grip)
16	116-1079	1	Control-BBC
17	116-0504	1	Control-Shift
18	321-8	2	Screw-HH
19	33113-045	1	Screw-HH
20	3231-25	2	Screw-CARR
21	3234-36	2	Screw-HHF
22	3250-27	2	Screw-PPH
23	3290-378	4	Tie-Cable
24	3296-2	2	Nut-Lock, NI

Ref	Part No.	Qty.	Description
25	3296-56	2	Nut-Lock, NI
26	32151-86	1	E-Ring
27	321-6	1	Screw-HH
28	3217-5	1	Nut-Hex
29	3296-42	1	Nut-Lock, NI
31	109-4115	1	Cable-Shifter

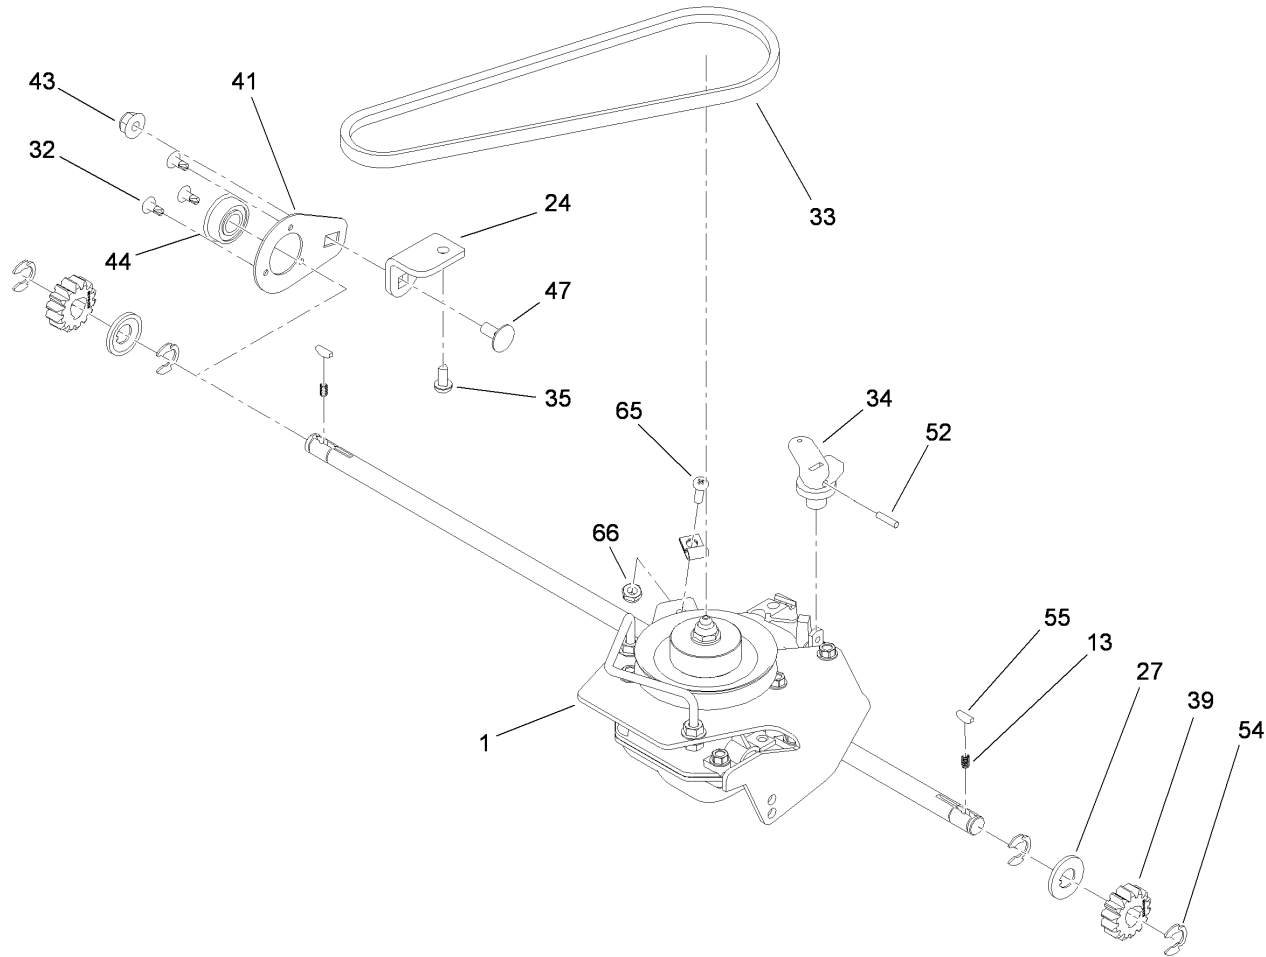


Gear Case and Pinion Assembly

Ref	Part No.	Qty.	Description				
1	116-0786	1	Gear Case ASM				
13	39-9650	2	Spring-Compression				
24	116-0222	1	Bracket-Bearing, Plated				
27	62-3830	2	Washer-Thrust, Outer				
32	92-9665	3	Screw-TAP				
33	103-6114	1	Belt-V, Traction				
34	103-6138	1	Lever-Shift				
35	32144-85	1	Screw-HWH				
39	103-6436	2	Gear-Pinion, 14 Tooth				
41	109-6612	1	Plate-Bearing				
43	104-8300	1	Nut-Flange, NI				
44	251-180	1	Bearing-Ball				
47	3230-23	1	Screw-CARR				
52	32121-99	1	Pin-Coil				
54	32151-68	4	Ring-Retaining				
55	612066	2	Key				
65	3274-31	1	Screw-HSBH				
66	3296-56	1	Nut-Lock, NI				

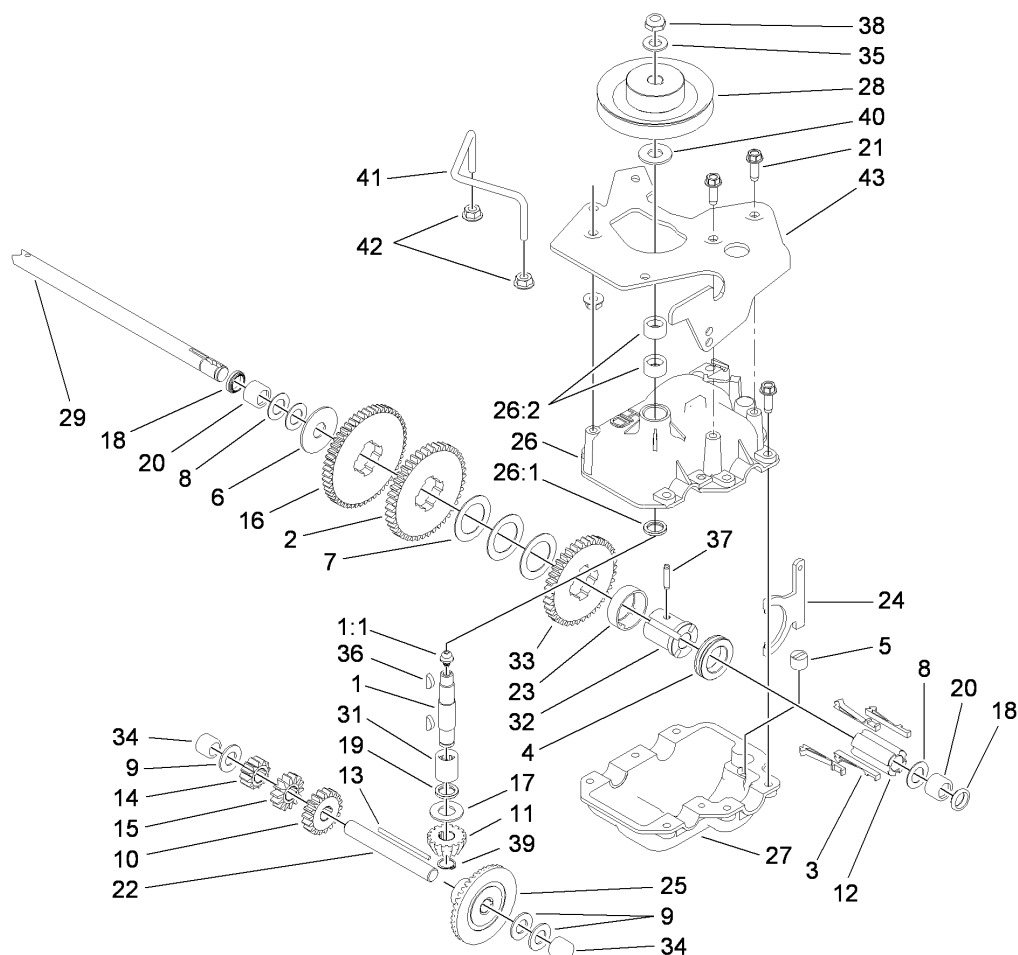


Gear Case Assembly No. 116-0786

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	13-5149	1	Input Shaft ASM	24	60-8870	1	Yoke-Shift
1:1	302-63	1	Zerk	25	74-1760	1	Gear-Bevel
2	29-9271	1	Gear-42T	26	13-9739	1	Upper Gearcase ASM
3	29-9330	4	Key-Shift	26:1	47-7260	1	Seal
4	29-9340	1	Collar-Shift	26:2	47-7270	2	Bearing
5	29-9570	1	Bushing-Yoke	27	74-1920	1	Case-Gear, Lower
6	29-9690	1	Washer	28	103-6429	1	Sheave
7	36-4770	3	Washer	29	103-6435	1	Shaft-Axle
8	36-4780	3	Washer-Plain	31	103-9773	1	Bearing-Roller, Caged
9	36-4792	3	Washer-Thrust	32	109-2642	1	Sleeve-4 Dog
10	39-6650	1	Gear-18T	33	109-3130	1	Gear-38T (High Strength)
11	39-6660	1	Pinion-Bevel	34	252-103	2	Bearing-Closed
12	39-6720	1	Sleeve	35	3256-45	1	Washer-Flat
13	39-7842	1	Key	36	3257-1	2	Key-Woodruff
14	46-3540	1	Gear-12T	37	3285-19	1	Pin-Groove
15	46-3550	1	Gear-14T	38	3296-5	1	Nut-Lock
16	46-3560	1	Gear	39	32151-57	1	Ring-Retaining
17	47-2910	1	Washer-Thrust	40	109-3614	1	Washer
18	47-6730	2	Seal-Oil	41	103-8224	1	Guide-Belt
19	47-7260	1	Seal	42	32128-33	4	Nut-HF
20	48-2060	2	Bearing-Roller	43	116-0339-03	1	Bracket-Guide, Belt
21	49-2040	9	Screw-HWHTF				
22	53-7950	1	Shaft-Intermediate				
23	55-8020	1	Retainer-Key				

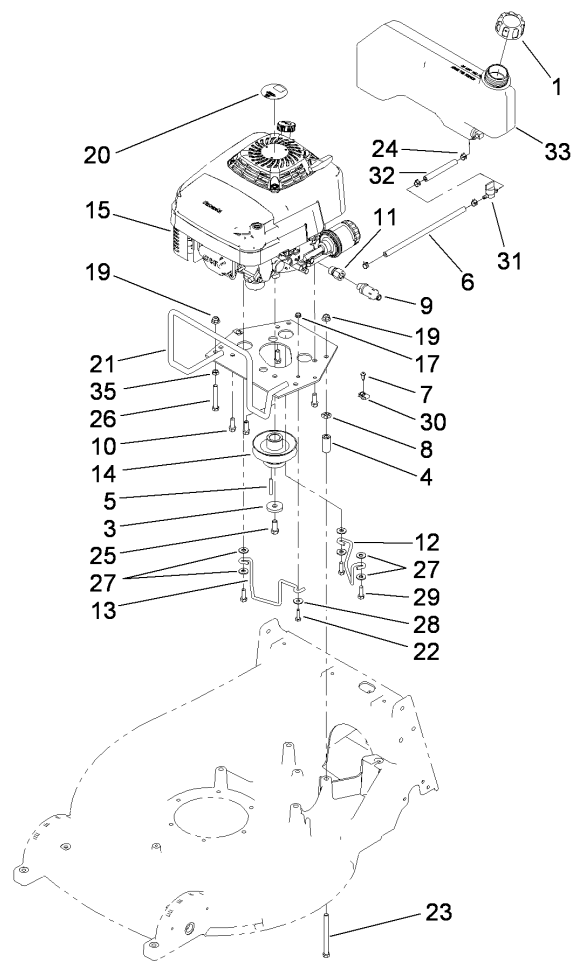


Engine Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	93-7198	1	Gas Cap ASM	28	3290-456	1	Washer-Belleville
3	1-543610	1	Washer-Clutch	29	33114-025	3	Screw-HH
4	116-1182	4	Spacer	30	107069	2	Clip
5	7-0036	1	Key-Square	31	1-603770	1	Valve-Fuel
6	109-0294	1	Hose-Fuel	32	109-0295	1	Hose-Fuel
7	63-8590	2	Screw	33	109-3851	1	Fuel Tank ASM
8	78-7170	4	Ring-Retaining	35	3218-3	1	Nut-Jam
9	92-6877	1	Valve-Drain, Oil				
10	95-1726	4	Screw-Taptite				
11	103-1966	1	Adapter				
12	116-0860	1	Guide-Belt, Rear				
13	116-0859	1	Guide-Belt, Front				
14	116-0822	1	Sheave-Drive				
15	110-5045	1	Engine-Kawasaki, Fj180V-As64				
17	104-7201	1	Nut-HF				
19	104-8301	5	Nut-Flange, NI				
20	110-0520	1	Decal				
21	116-0972-03	1	Plate-Engine				
22	321-6	1	Screw-HH				
23	323-23	4	Screw-HH				
24	2412-98	4	Clamp				
25	3212-4	1	Screw-HH				
26	323-12	1	Screw-HH				
27	3256-3	6	Washer-Flat				

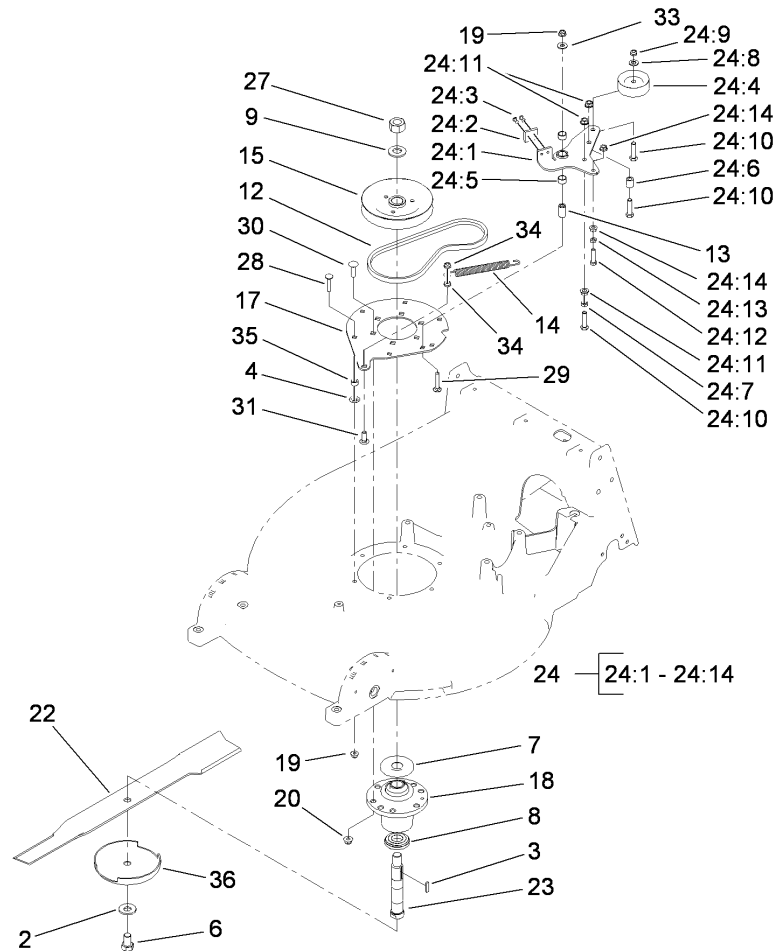


Blade Drive Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
2	1-513208	1	Washer-Spring	24:7	3218-3	2	Nut-Jam
3	1-807268	1	Key-Rectangle	24:8	3256-24	1	Washer-Flat
4	78-7170	6	Ring-Retaining	24:9	3296-59	1	Nut-Lock, NI
6	103-1026	1	Screw-Cap	24:10	323-8	3	Screw-HH
7	103-1330	1	Guard-Bearing, Top	24:11	3290-357	3	Nut-HHF, Whiz
8	103-2535	1	Spacer-Guard, Bottom	24:12	1-403180	1	Screw-HH
9	103-2802	1	Washer	24:13	3218-2	1	Nut-Jam
12	116-0823	1	Belt	24:14	32128-20	2	Nut-HF
13	103-7108	1	Bushing-Arm, Idler	27	3217-46	1	Nut-HH
14	103-7896	1	Spring-Brake	28	3230-4	6	Screw-CARR
15	116-0821	1	Sheave-Split, Steel (W/Hub)	29	116-0629	1	Screw-CARR
17	116-0092-03	1	Plate-Adapter, Housing	30	3231-28	6	Screw-CARR
18	107-4065	1	Cutter Housing ASM	31	3231-22	1	Screw-CARR
19	104-8300	7	Nut-Flange, NI	33	3256-3	1	Washer-Flat
20	104-8301	6	Nut-Flange, NI	34	3296-59	3	Nut-Lock, NI
22	109-0343	1	Blade	35	111044	6	Spacer
23	109-2650	1	Shaft-Spindle	36	67-7561	1	Cup-Scalp, Anti
24	116-0096	1	Idler Arm ASM				
24:1	116-0085-03	1	Arm-Idler				
24:2	116-0959	1	Pad-Brake				
24:3	103-0138	2	Rivet-Pop				
24:4	109-3546	1	Pulley-Idler				
24:5	103-6111	2	Bearing				
24:6	1-633080	1	Bushing-Lever, Lift				

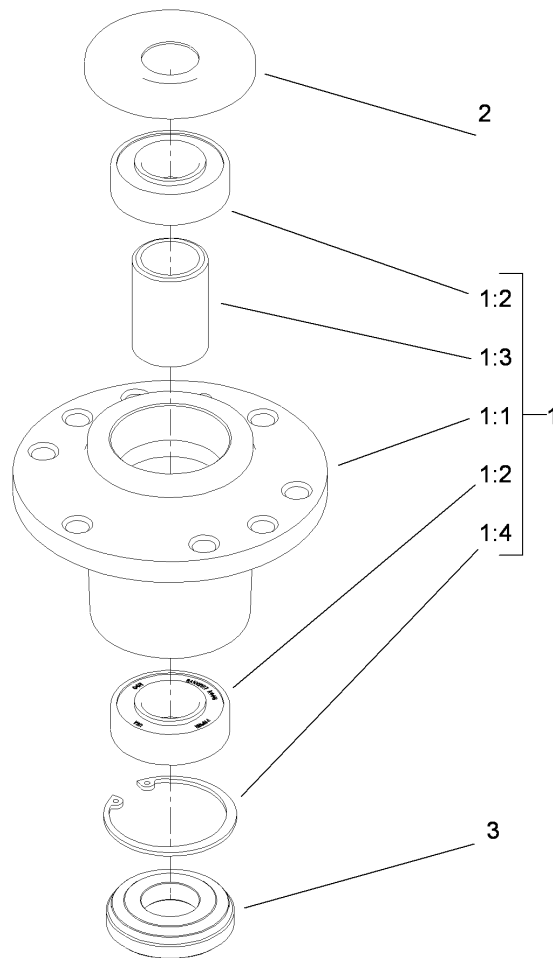

Cutter Housing Assembly No. 107-4065


Ref	Part No.	Qty.	Description				
1		1	Housing-Cutter				
1:1	103-7975	1	Housing-Spindle				
1:2	103-2477	2	Bearing-Ball				
1:3	103-2534	1	Spacer-Bearing				
1:4	32120-8	1	Ring-Snap				
2	103-1330	1	Guard-Bearing, Top				
3	103-2535	1	Spacer-Guard, Bottom				

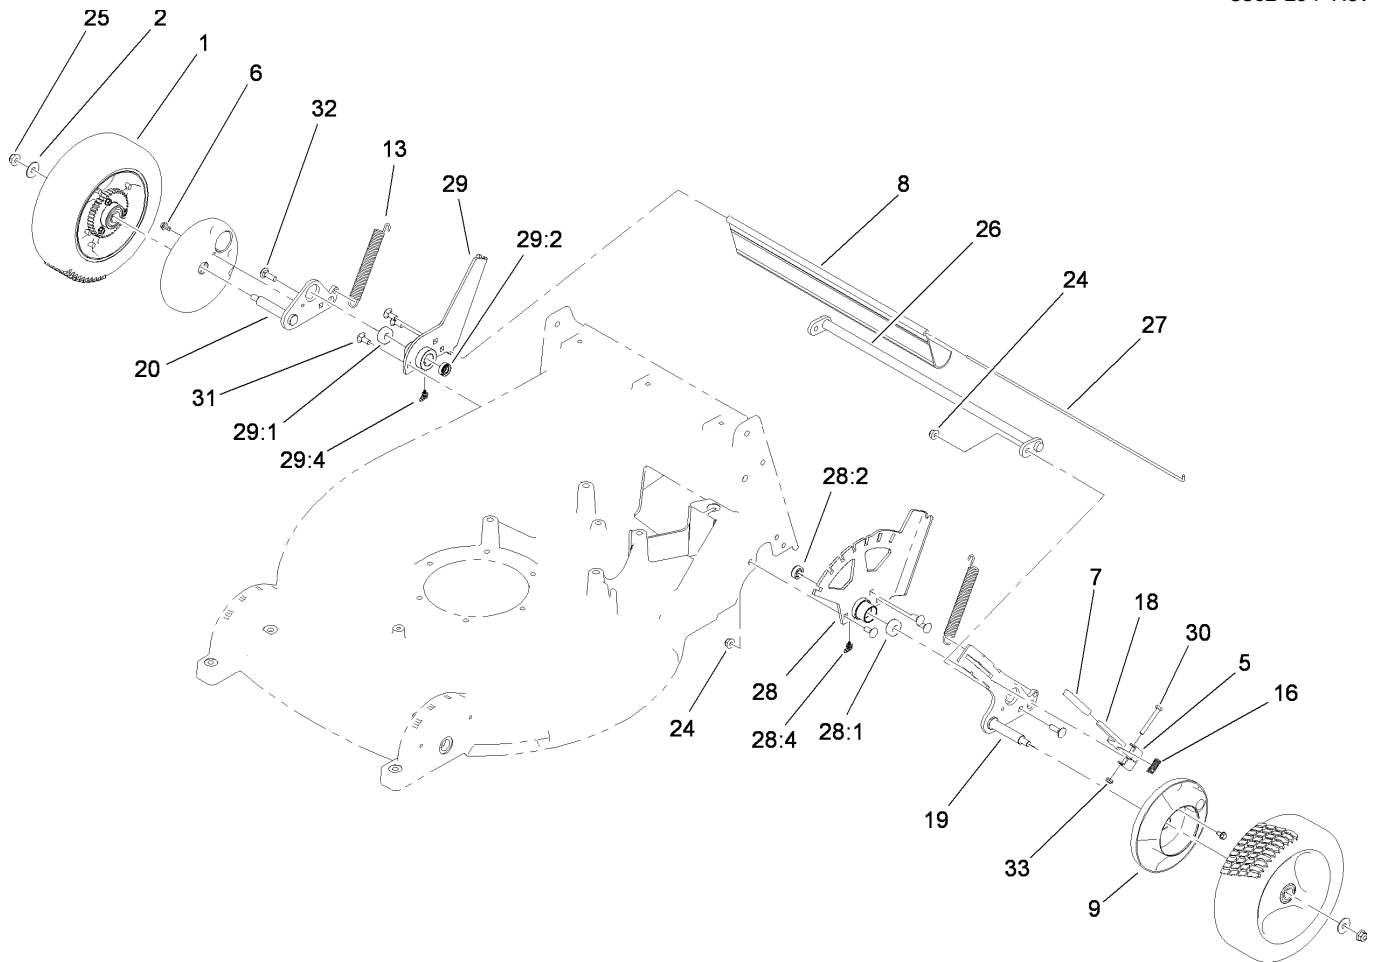

Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	112-8707	2	10 Inch Wheel ASM
2	52-2860	2	Washer
5	103-6158	1	Bracket-Pivot, Lift
6	12-3270	2	Screw
7	103-6165	1	Cover-Handle
8	109-5974	1	Shield-Rear
9	103-6441	2	Cover-Gear
13	103-7659	2	Spring-Assist, Lift
16	103-7897	1	Spring-Latch
18	103-8226	1	Lever-Lift
19	103-8227	1	Arm-Axle, LH
20	103-8229	1	Arm-Axle, RH
24	104-8300	8	Nut-Flange, NI
25	104-8301	2	Nut-Flange, NI
26	109-2456-03	1	Rod-Torque
27	109-2458	1	Rod-Shield
28	109-2833	1	LH Bearing Support ASM
28:1	103-6110	1	Bearing-Axle, Rear
28:2	103-7654	1	Seal-Axle
28:4	103-8864	1	Fitting-Grease
29	109-2834	1	RH Bearing Support ASM
29:1	103-6110	1	Bearing-Axle, Rear
29:2	103-7654	1	Seal-Axle
29:4	103-8864	1	Fitting-Grease

Ref	Part No.	Qty.	Description
30	321-10	1	Screw-HH
31	3230-1	6	Bolt-CARR
32	3230-2	2	Bolt-CARR
33	3296-56	1	Nut-Lock, NI

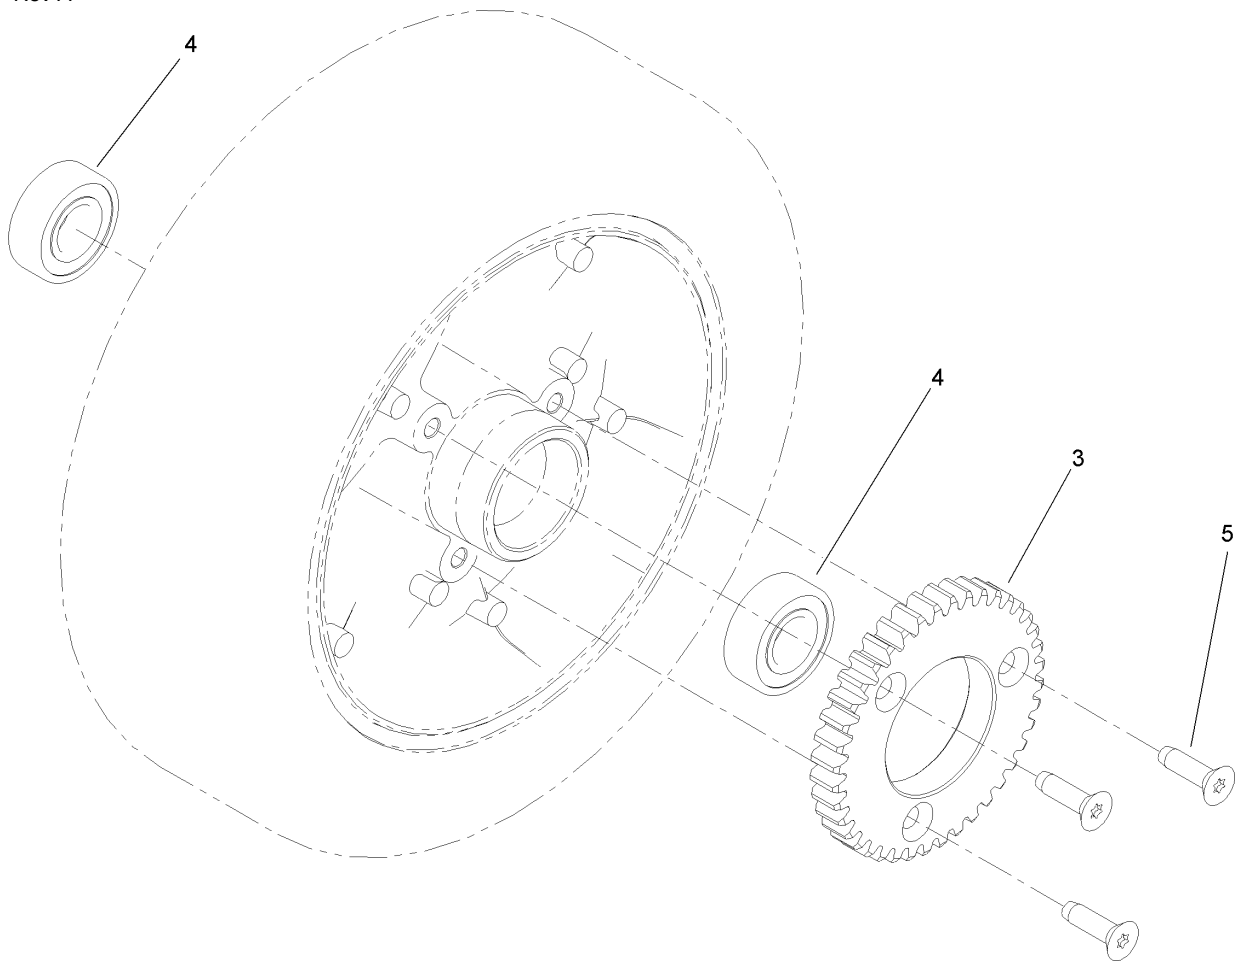


Wheel Assembly No. 112-8707

Ref	Part No.	Qty.	Description
3	103-6445	1	Gear-Driven
4	103-6103	2	Bearing-Ball
5	116-0606	3	Screw-Torx

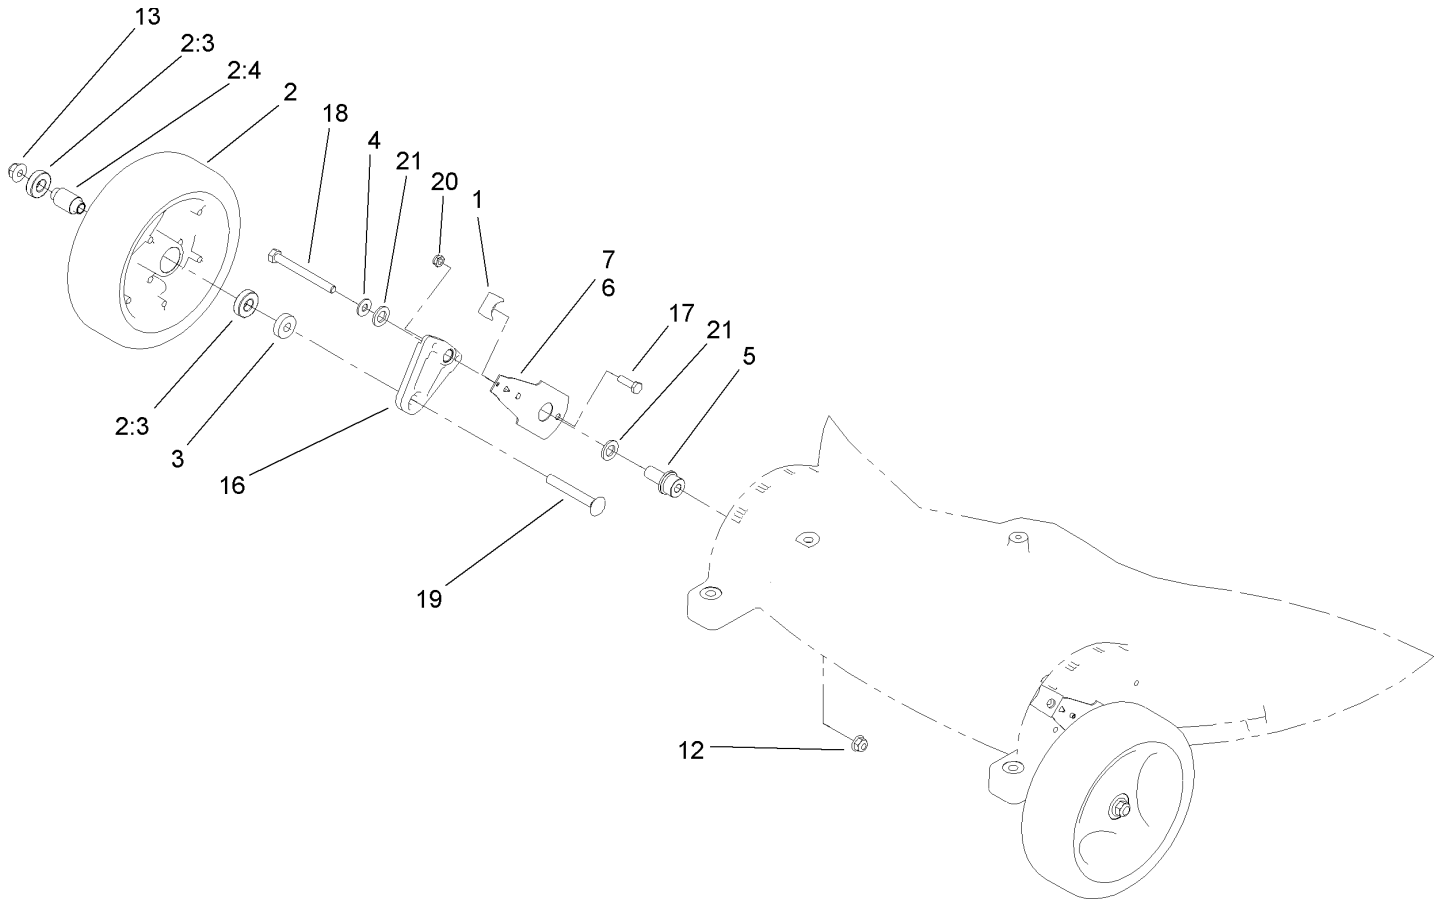

Front Wheel Assembly


Ref	Part No.	Qty.	Description				
1	25-7740	2	Knob-Arm				
2	112-8706	2	8 Inch Wheel ASM				
2:3	52-2450	2	Bearing-Wheel				
2:4	103-7649	1	Spacer-Wheel, Front				
3	62-6660	2	Spacer				
4	98-3499	2	Washer-Flat				
5	109-6041	2	Bushing-Pivot, Wheel				
6	103-5847	1	LH Front Spring Arm ASM				
7	103-5848	1	RH Front Spring Arm ASM				
12	104-8300	2	Nut-Flange, NI				
13	104-8301	2	Nut-Flange, NI				
16	109-2843	2	Front Pivot Arm ASM				
17	321-5	2	Screw-HH				
18	322-20	2	Screw-HH				
19	3231-9	2	Screw-CARR				
20	3296-56	2	Nut-Lock, NI				
21	77-0350	4	Washer-Thrust, Nylon				

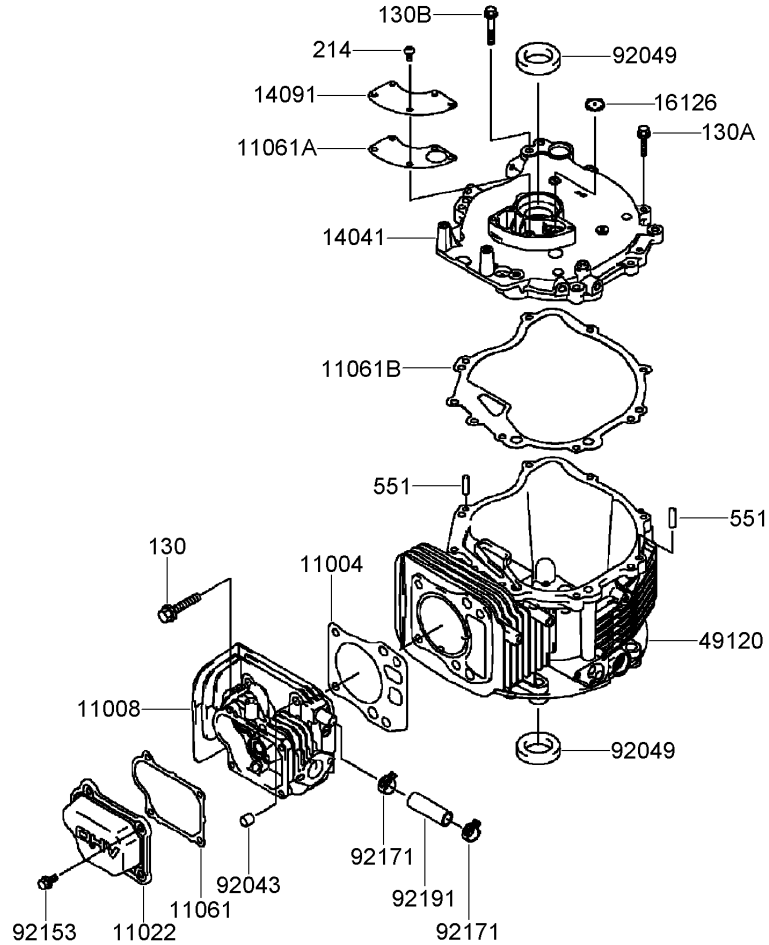

Cylinder and Crankcase Assembly


Kawasaki FJ180V-AS64

Ref	Part No.	Qty.	Description				
211004	11004-7020	1	Gasket-Head				
211008	11008-7025	1	Head-Cylinder				
211022	11022-7005	1	Case-Rocker				
211061	11061-7023	1	Gasket-Case, Rocker				
211061A	11061-7031	1	Gasket-Breather				
211061B	11061-7060	1	Gasket-Cover, Crankcase				
214041	14041-7009	1	Cover				
214091	14091-7010	1	Cover-Breather				
216126	16126-7014	1	Valve-Breather				
249120	49120-7082	1	Crankcase				
292043	92043-7001	2	Pin				
292049	92049-7008	2	Seal-Oil (28-44-9 T C)				
292153	92153-7043	4	Bolt (6X12)				
292171	92171-7024	2	Clamp				
292191	92191-7025	1	Tube (12X16X49)				
2130	130CA0840	4	Bolt-Flanged (8X40)				
2130A	130G0625	7	Bolt-Flanged (6X25)				
2130B	130G0635	1	Bolt-Flanged (6X35)				
2214	214B0510	5	Screw-Pan (5X10)				
2551	551A0612	2	Pin-Dowel (6X12)				

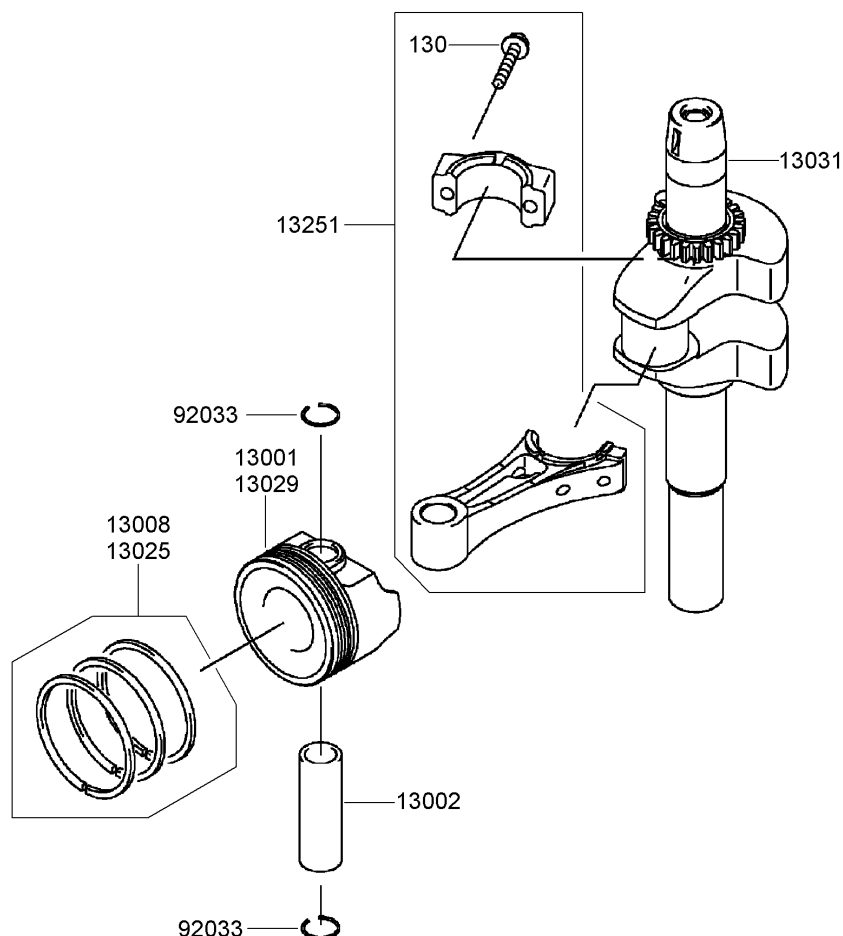


Piston and Crankshaft Assembly Kawasaki FJ180V-AS64

Ref	Part No.	Qty.	Description				
②13001	13001-7022	1	Piston-Engine				
②13002	13002-7001	1	Pin-Piston				
②13008	13008-7002	1	Piston Ring Set				
②13025	13025-7006	1	Piston Ring Set (L 0.50)				
②13029	13029-7005	1	Piston-Engine (L 0.50)				
②13031	13031-7064	1	Crankshaft				
②13251	13251-7011	1	Connecting Rod ASM				
②92033	92033-7002	2	Ring-Snap				
②130	130G0630	2	Bolt-Flanged (6X30)				

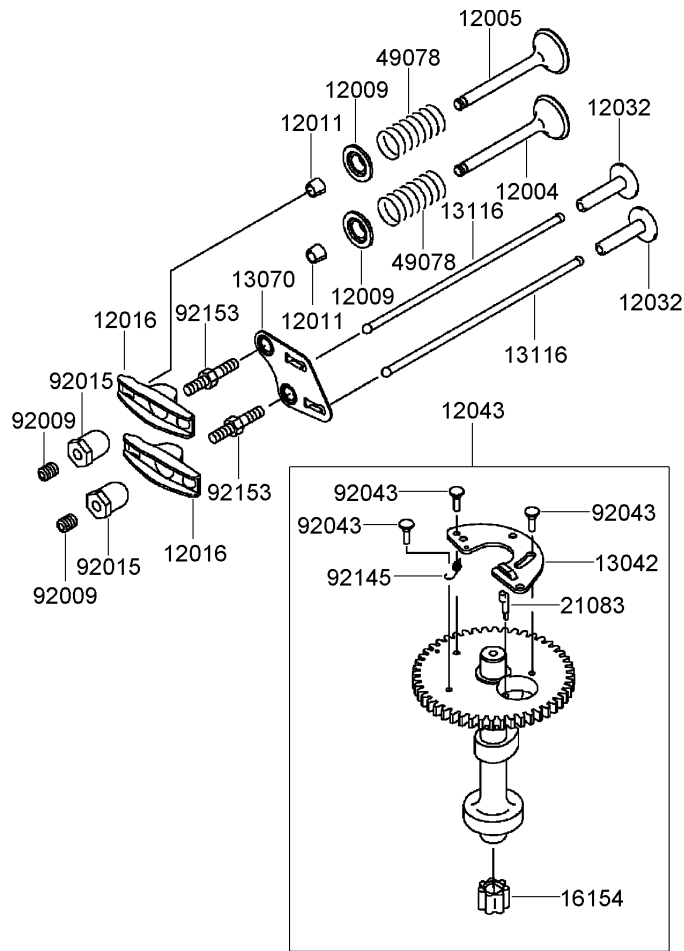

Valve and Camshaft Assembly
Kawasaki FJ180V-AS64


Ref	Part No.	Qty.	Description				
②12004	12004-7005	1	Valve-Intake				
②12005	12005-7006	1	Valve-Exhaust				
②12009	12009-7001	2	Retainer-Spring, Valve				
②12011	12011-2056	4	Collet				
②12016	12016-7008	2	Arm-Rocker				
②12032	12032-7001	2	Tappet				
②12043	12043-7005	1	Camshaft Valve ASM				
②13042	13042-7006	1	Weight				
②13070	13070-7009	1	Guide				
②13116	13116-7003	2	Rod-Push				
②16154	16154-7004	1	Rotor-Pump				
②21083	21083-7009	1	Arm				
②49078	49078-7001	2	Spring-Valve, Engine				
②92009	92009-2341	2	Screw				
②92015	92015-2253	2	Nut				
②92043	92043-7006	3	Pin				
②92145	92145-7016	1	Spring				
②92153	92153-7019	2	Bolt				

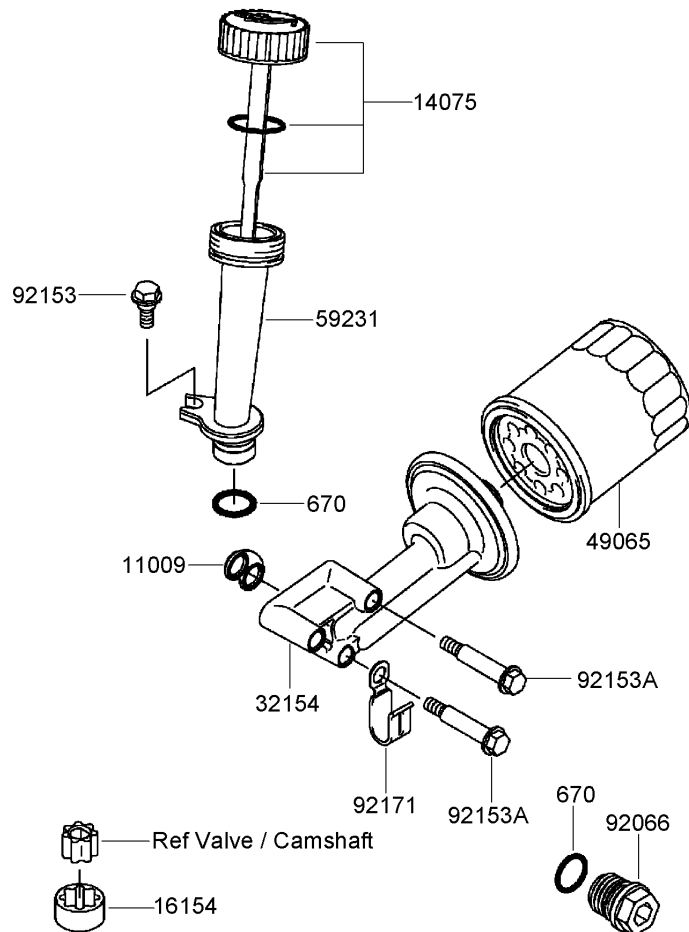

Lubrication Equipment Assembly


Kawasaki FJ180V-AS64

Ref	Part No.	Qty.	Description				
②11009	11009-2860	1	Gasket				
②14075	14075-7007	1	Cap ASM				
②16154	16154-7002	1	Rotor-Pump				
②32154	32154-7018	1	Pipe				
②49065	49065-2078	1	Filter-Oil				
②59231	59231-7004	1	Filler				
②92066	92066-7003	1	Plug				
②92153	92153-7007	1	Bolt				
②92153A	92153-7028	3	Bolt				
②92171	92171-7008	1	Clamp				
②670	670D2016	2	O-Ring (16Mm)				

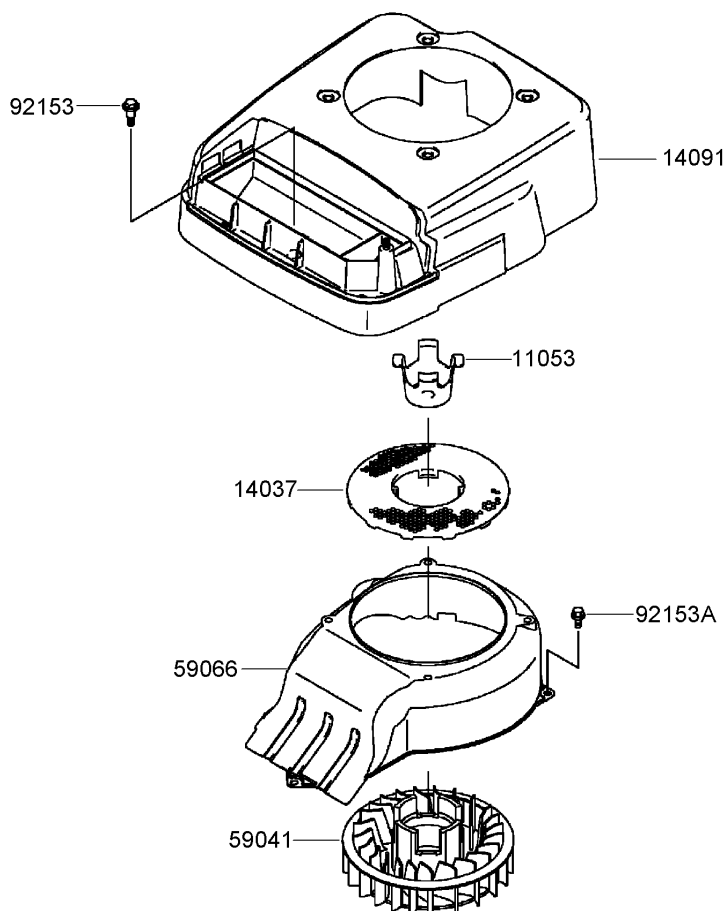

Cooling Equipment Assembly Kawasaki FJ180V-AS64


Ref	Part No.	Qty.	Description				
②11053	11053-7009	1	Bracket-Fan				
②14037	14037-7017	1	Screen				
②14091	14091-7046	1	Cover				
②59041	59041-7009	1	Fan				
②59066	59066-7016	1	Housing-Fan				
②92153	92153-7008	1	Bolt				
②92153A	92153-7043	1	Bolt (6X12)				

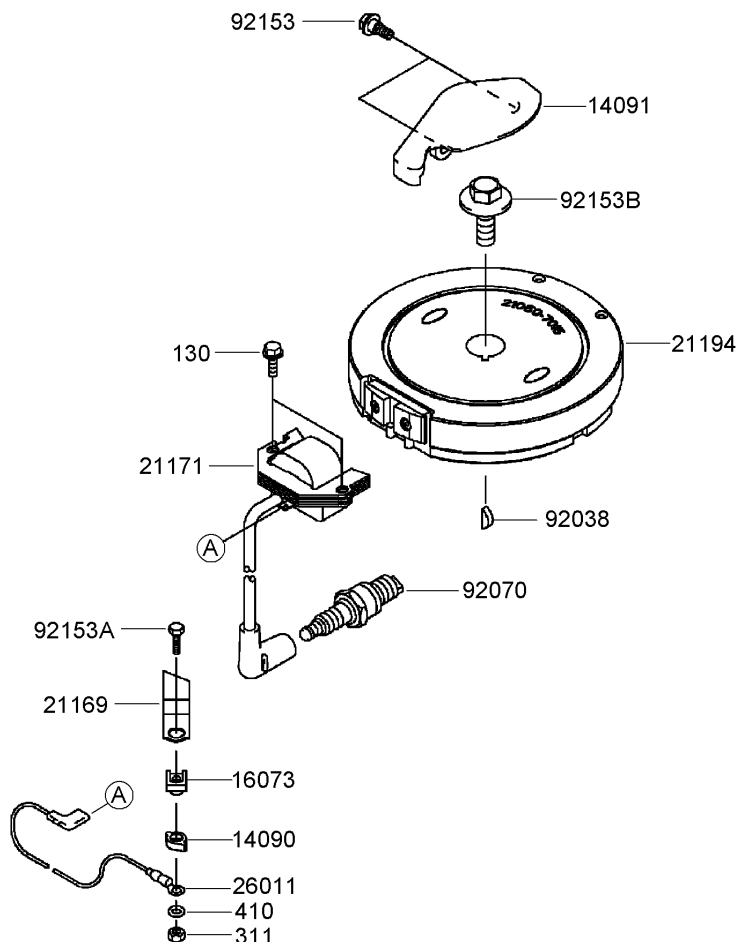

Electric Equipment Assembly


Kawasaki FJ180V-AS64

Ref	Part No.	Qty.	Description				
②14090	14090-2108	1	Cover				
②14091	14091-7036	1	Cover				
②16073	16073-2192	1	Insulator				
②21169	21169-2071	1	Terminal				
②21171	21171-7030	1	Ignition Coil ASM				
②21194	21194-7024	1	Flywheel				
②26011	26011-7013	1	Wire-Lead				
②92038	92038-2077	1	Key				
②92070	92070-2088	1	Spark Plug, B P R 5E S (N G K) Solid				
②92153	92153-7007	2	Bolt				
②92153A	92153-7012	1	Bolt (4X16)				
②92153B	92153-7030	1	Bolt (12X30)				
②130	130B0620	2	Bolt-Flanged (6X20)				
②311	311B0400	1	Nut-Hex (4Mm)				
②410	410B0400	1	Washer-Plain, S (4Mm)				

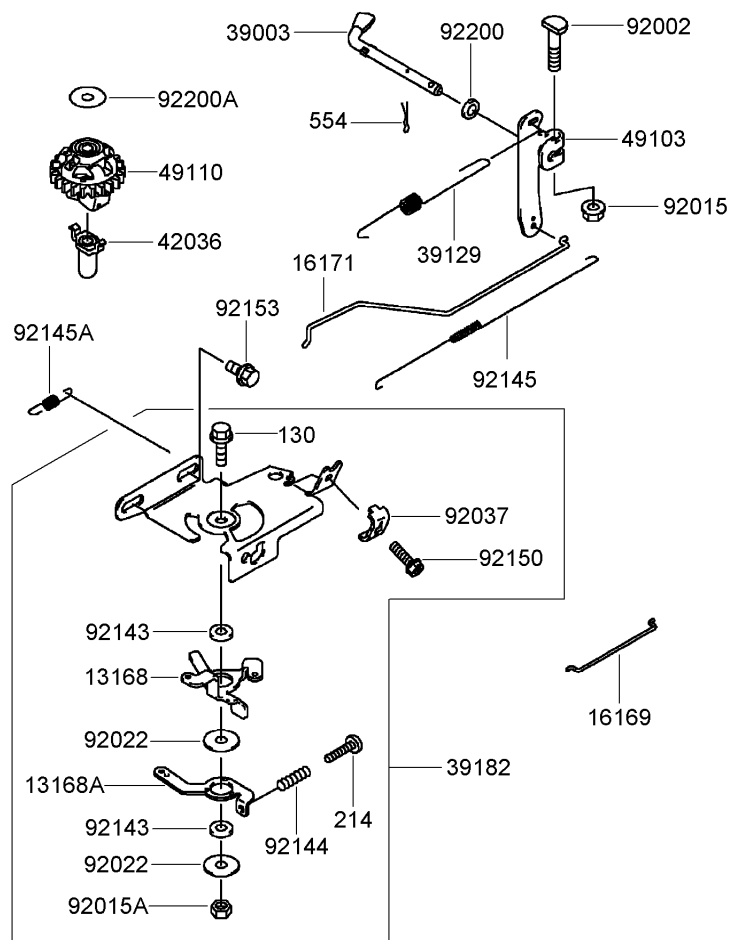


Control Equipment Assembly Kawasaki FJ180V-AS64

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②13168	13168-7020	1	Lever	②214	214B0420	1	Screw-Pan +- (4X20)
②13168A	13168-7022	1	Lever	②554	554A0600	1	Pin-Snap (1.2X21.2)
②16169	16169-7011	1	Link-Choke				
②16171	16171-7015	1	Link-Throttle				
②39003	39003-7002	1	Arm-Pivot				
②39129	39129-7014	1	Spring-Governor				
②39182	39182-7005	1	Control Panel ASM				
②42036	42036-2051	1	Sleeve				
②49103	49103-7005	1	Arm-Governor				
②49110	49110-7002	1	Governor ASM				
②92002	92002-2269	1	Bolt (6X28)				
②92015	92015-1193	1	Nut				
②92015A	92015-2051	1	Nut				
②92022	92022-2372	2	Washer (6X19X1.2)				
②92037	92037-2209	1	Clamp				
②92143	92143-2135	2	Collar (6X13X2.3)				
②92144	92144-2266	1	Spring				
②92145	92145-7025	1	Spring-Throttle				
②92145A	92145-7032	1	Spring				
②92150	92150-2182	1	Bolt (5X18)				
②92153	92153-7043	2	Bolt (6X12)				
②92200	92200-2029	1	Washer (6.5X11.5X2.0)				
②92200A	92200-2036	1	Washer (6.2X20X0.5)				
②130	130B0618	1	Bolt-Flanged				

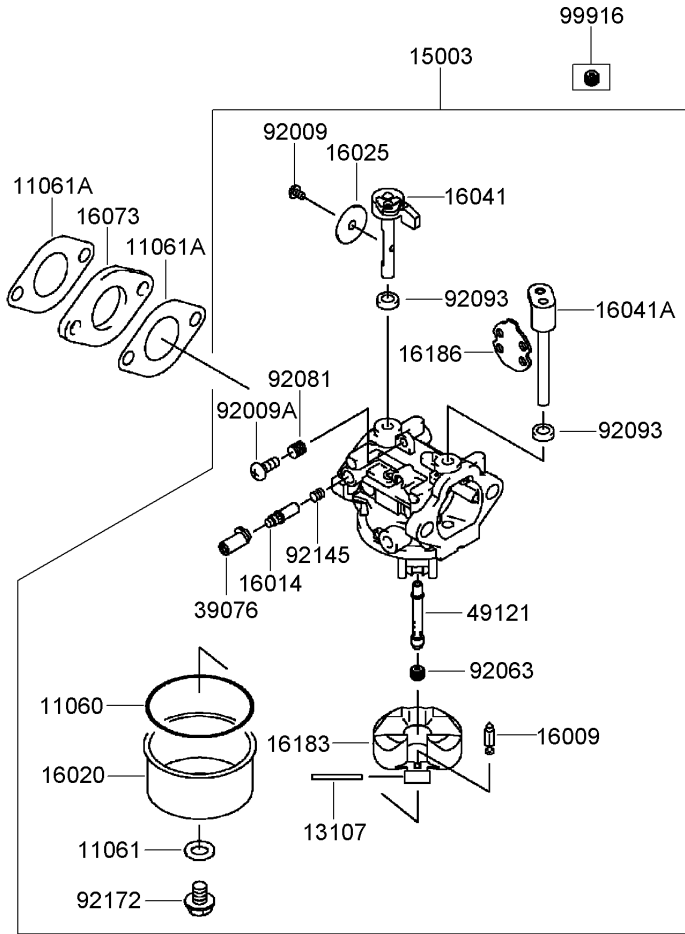


Carburetor Assembly **Kawasaki FJ180V-AS64**

Ref	Part No.	Qty.	Description				
②11060	11060-2190	1	Gasket				
②11061	11061-7010	1	Gasket-Screw				
②11061A	11061-7015	2	Gasket-Insulator				
②13107	13107-7024	1	Shaft				
②15003	15003-7132	1	Carburetor ASM				
②16009	16009-2136	1	Needle-Jet				
②16014	16014-7008	1	Screw-Air, Pilot				
②16020	16020-7004	1	Chamber-Float				
②16025	16025-7007	1	Valve-Throttle				
②16041	16041-7019	1	Shaft-Carburetor				
②16041A	16041-7020	1	Shaft-Carburetor				
②16073	16073-7006	1	Insulator				
②16183	16183-2002	1	Float ASM				
②16186	16186-7003	1	Choke Valve ASM				
②39076	39076-7001	1	Limiter				
②49121	49121-7008	1	Nozzle-Main				
②92009	92009-2083	1	Screw				
②92009A	92009-2349	1	Screw				
②92063	92063-7049	1	Jet-Main, No. 74				
②92081	92081-2234	1	Spring				
②92093	92093-2100	2	Seal				
②92145	92145-7015	1	Spring				
②92172	92172-7002	1	Screw				
②99916	99916-7007	1	Main Jet K H I Parts Kit				

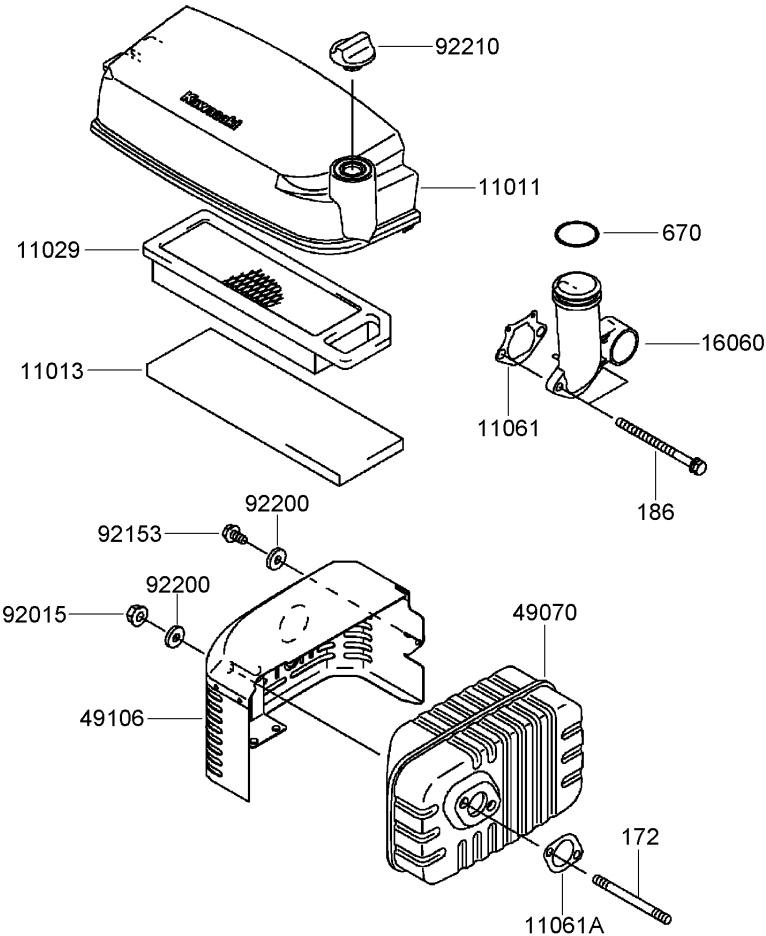

Air Filter and Muffler Assembly
Kawasaki FJ180V-AS64


Ref	Part No.	Qty.	Description				
②11011	11011-7028	1	Case-Filter, Air				
②11013	11013-7032	1	Element-Filter, Air				
②11029	11029-7021	1	Air Filter Element ASM				
②11061	11061-7012	1	Gasket-Pipe, Intake				
②11061A	11061-7029	1	Gasket-Muffler				
②16060	16060-7012	1	Pipe-Intake				
②49070	49070-7022	1	Muffler				
②49106	49106-7019	1	Cover-Muffler				
②92015	92015-1193	2	Nut				
②92153	92153-7022	1	Bolt (6X12)				
②92200	92200-7043	3	Washer (6.4X17X3)				
②92210	92210-7019	1	Nut				
②172	172G0680	2	Bolt-Stud (6X80)				
②186	186B0680	2	Bolt-Upset, Wp (6X80)				
②670	670B3032	1	O-Ring (32Mm)				

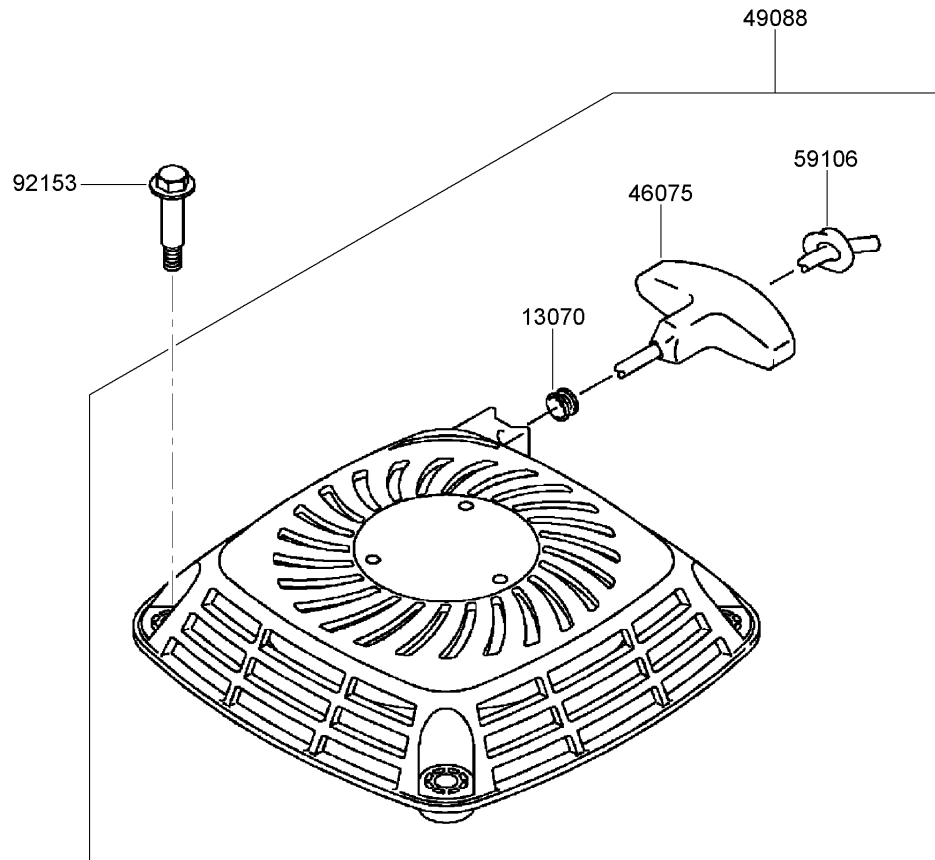

Starter Assembly Kawasaki FJ180V-AS64

Ref	Part No.	Qty.	Description				
213070	13070-7015	1	Guide				
246075	46075-7002	1	Grip				
249088	49088-7022	1	Starter-Recoil				
259106	59106-7006	1	Rope (1500Mm)				
292153	92153-7021	4	Bolt (M6)				

56070

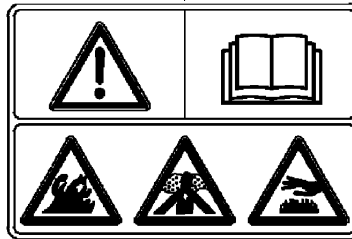

Label Assembly

Kawasaki FJ180V-AS64

Ref	Part No.	Qty.	Description
56070	56070-2021	1	Label-Warning

NOTES

NOTES

NOTES

