




MODEL NO. 30157- 590001 & UP

PARTS CATALOG

PROLINE MID-SIZE TRACTION UNIT
12.5HP GEAR DRIVE

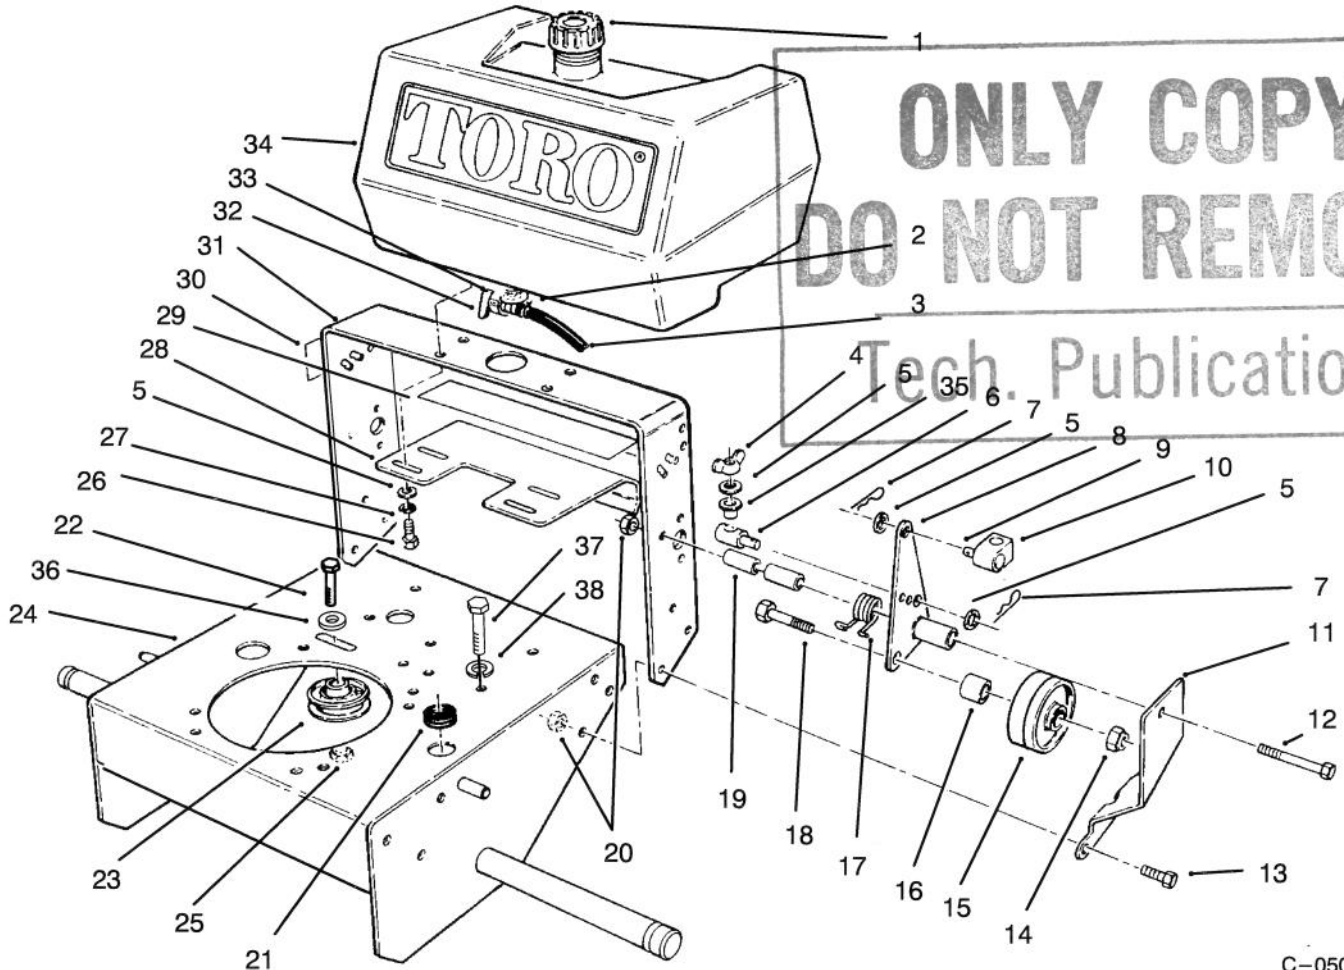

ONLY COPY
DO NOT REMOVE

Tech. Publications


C-0505A

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-3570	Cap - Fuel Tank	1
2	2412-98	Clamp - Fuel line	1
3	47-2982	Hose - Fuel	1
4	32103-25	Nut - Wing	2
5	3256-23	Washer - Flat	10
6	68-9690	Fitting - Rod	2
7	3290-307	Pin - Cotter	4
8	74-0220	Idler - Bracket L.H.	1
*	74-0230	Idler - Bracket R.H.	1
9	283-6	Pin - Clevis	2
10	74-0521	Fitting - Rod	2
11	67-6380	Bracket - Support L.H.	1
*	67-6370	Bracket - Support R.H.	1
12	323-16	Screw - Hex. Hd.	2
13	323-6	Screw - Hex. Hd.	6
14	3296-23	Nut - Lock	2
15	51-4480	Idler - Wheel	2

Ref. No.	Part No.	Description	No. Used
16	51-4490	Spacer - Idler Wheel	2
17	51-4380	Spring - Torsion L.H.	1
*	51-4370	Spring - Torsion R.H.	1
18	51-4450	Screw - Leveler	2
19	74-0040	Spacer - Pivot Idler	4
20	3296-39	Nut - Lock	8
21	237-124	Grommet	1
22	323-9	Screw - Hex. Hd.	1
23	51-4810	Pulley - Idler	1
24	93-1161	Frame	1
25	32128-21	Nut - Hex. Flange	1
26	322-4	Screw - Hex. Hd.	4
27	3253-4	Washer - Lock	4
28	66-7400	Plate - Control	1
29	82-7750	Decal - Ground Speed	1
30	74-0490	Decal - Fuel Shut Off	1
31	74-0360	Frame - Rear	1

*Not Illustrated

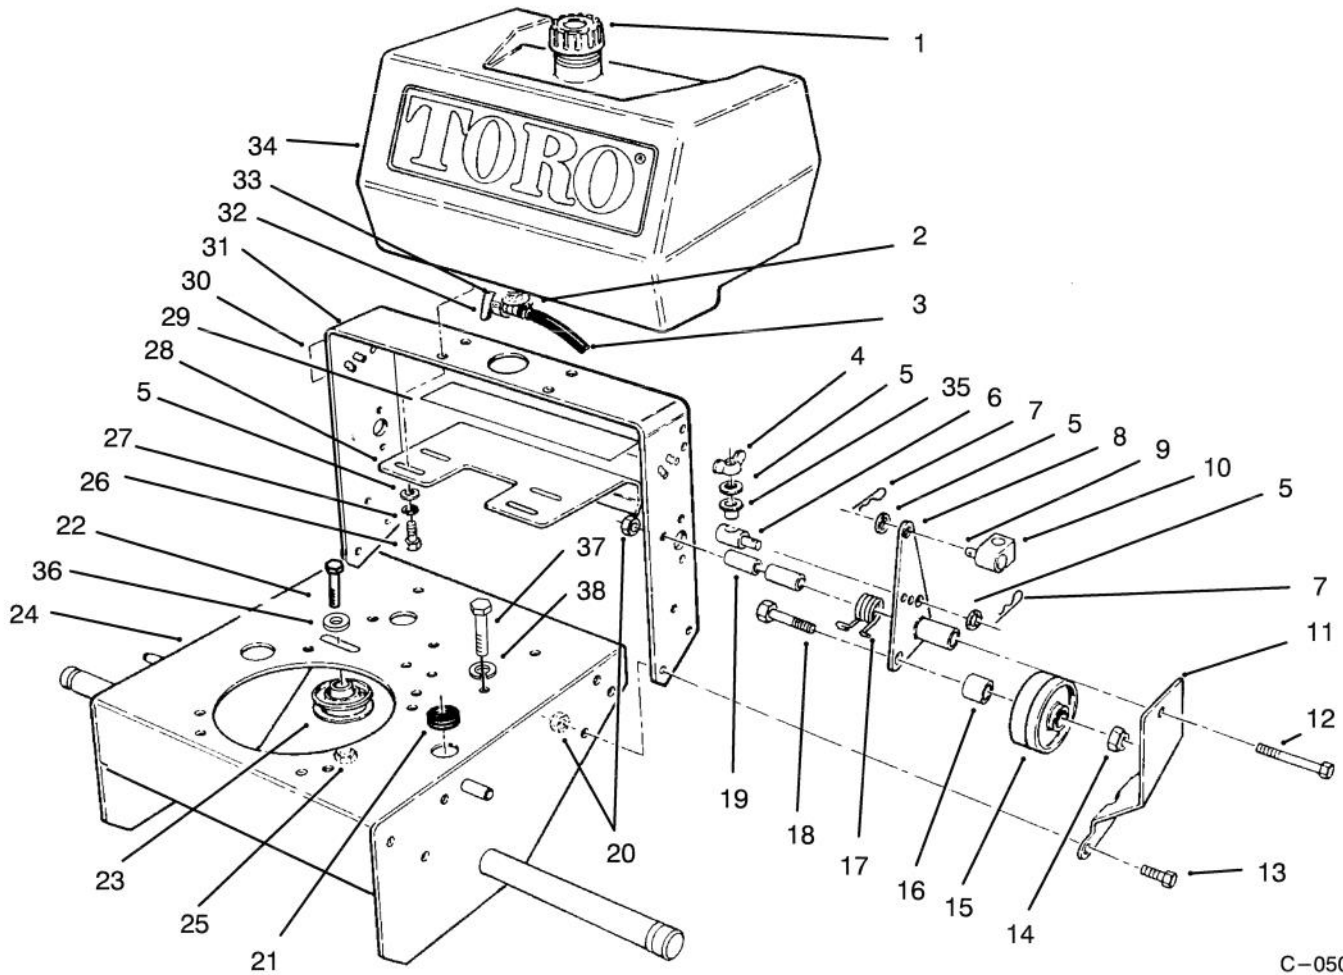


C-0505A

FRAME ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
32	74-0510	Valve - Fuel	1
33	237-7	"O"Ring	1
34	82-8440	Fuel Tank Assembly (Incl. Ref. # 32 & 33)	1

Ref. No.	Part No.	Description	No. Used
35	52-2890	Bushing	2
36	3256-24	Washer - Flat	1
37	12-3270	Screw - Hex Head	1
38	3255-7	Washer - Lock	2


*Not Illustrated

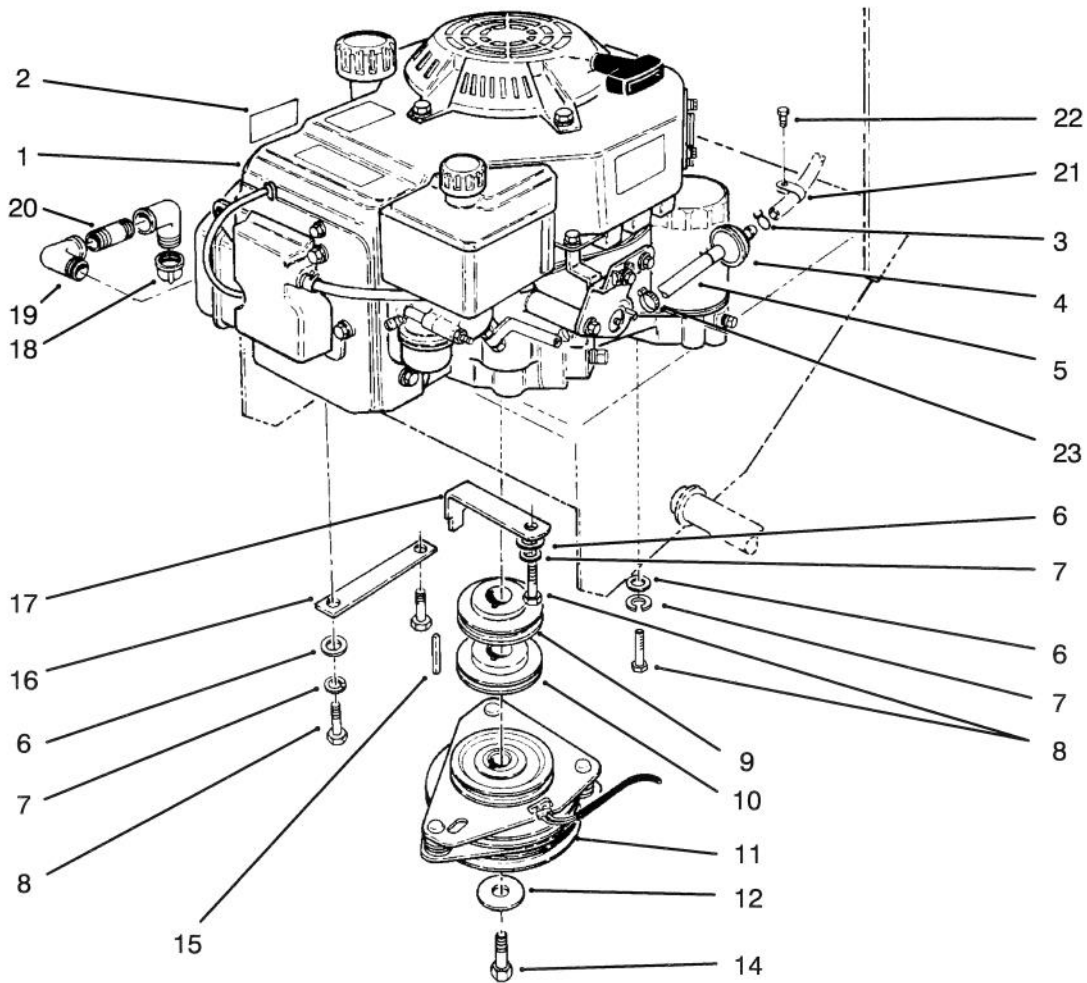

C-0501A

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1		Engine	1	12	112843	Washer - PTO	1
2	63-8440	Decal - Hot	1	14	57-6360	Screw - Hex. Hd.	1
3	2412-98	Clamp - Fuel Filter	2	15	608006	Key - Crankshaft	1
4	56-6360	Filter - Fuel	1	16	74-0930	Guard - Pulley	1
5	47-2964	Line - Fuel	1	17	51-4540	Retainer - Clutch	1
6	3256-23	Washer - Flat	6	18	288-4	Cap - Pipe	1
7	3253-4	Washer - Lock	3	19	74-0950	Elbow	2
8	57-6380	Screw - Hex. Hd.	4	20	289-51	Nipple	1
9	74-0060	Sheave - Upper Half	1	21	2412-87	Clamp	1
10	74-0050	Sheave - Lower Half	1	22	32144-19	Screw	1
11	54-3200	Clutch Assembly	1	23	2412-108	Clamp	1

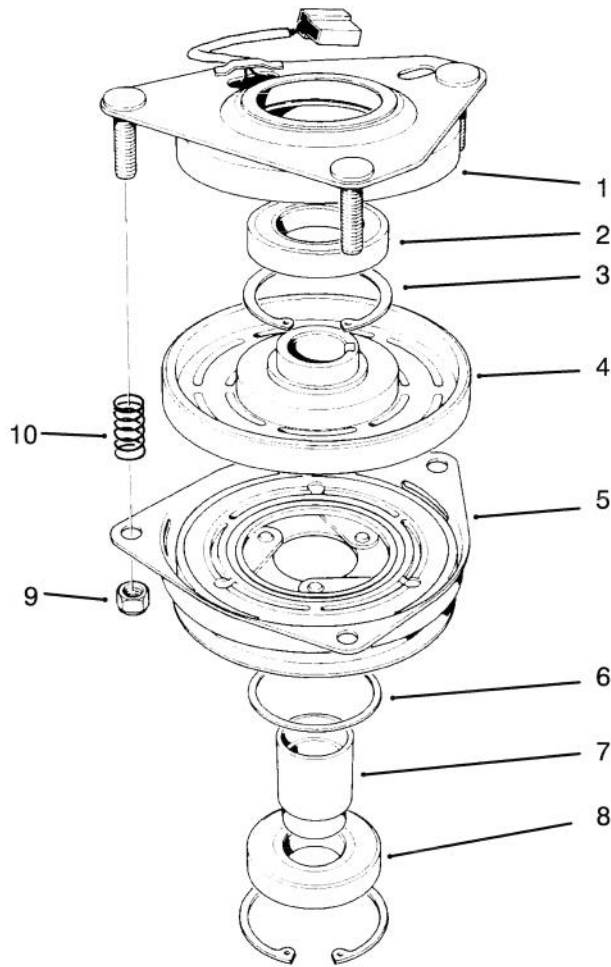

T-0080

CLUTCH ASSEMBLY NO. 54-3200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54-0230	Field Assembly (Incl. Ref. #2 & 3)	1	6	44-8330	Spacer - Pulley Bearing	1
2	251-292	Bearing - Field	1	7	44-8340	Collar - Bearing	1
3	44-8310	Ring - Retaining	2	8	251-291	Bearing - Pulley	1
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1	9	3296-5	Nut - Lock	3
5	55-7410	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7, & 8)	1	10	44-8320	Spring	3

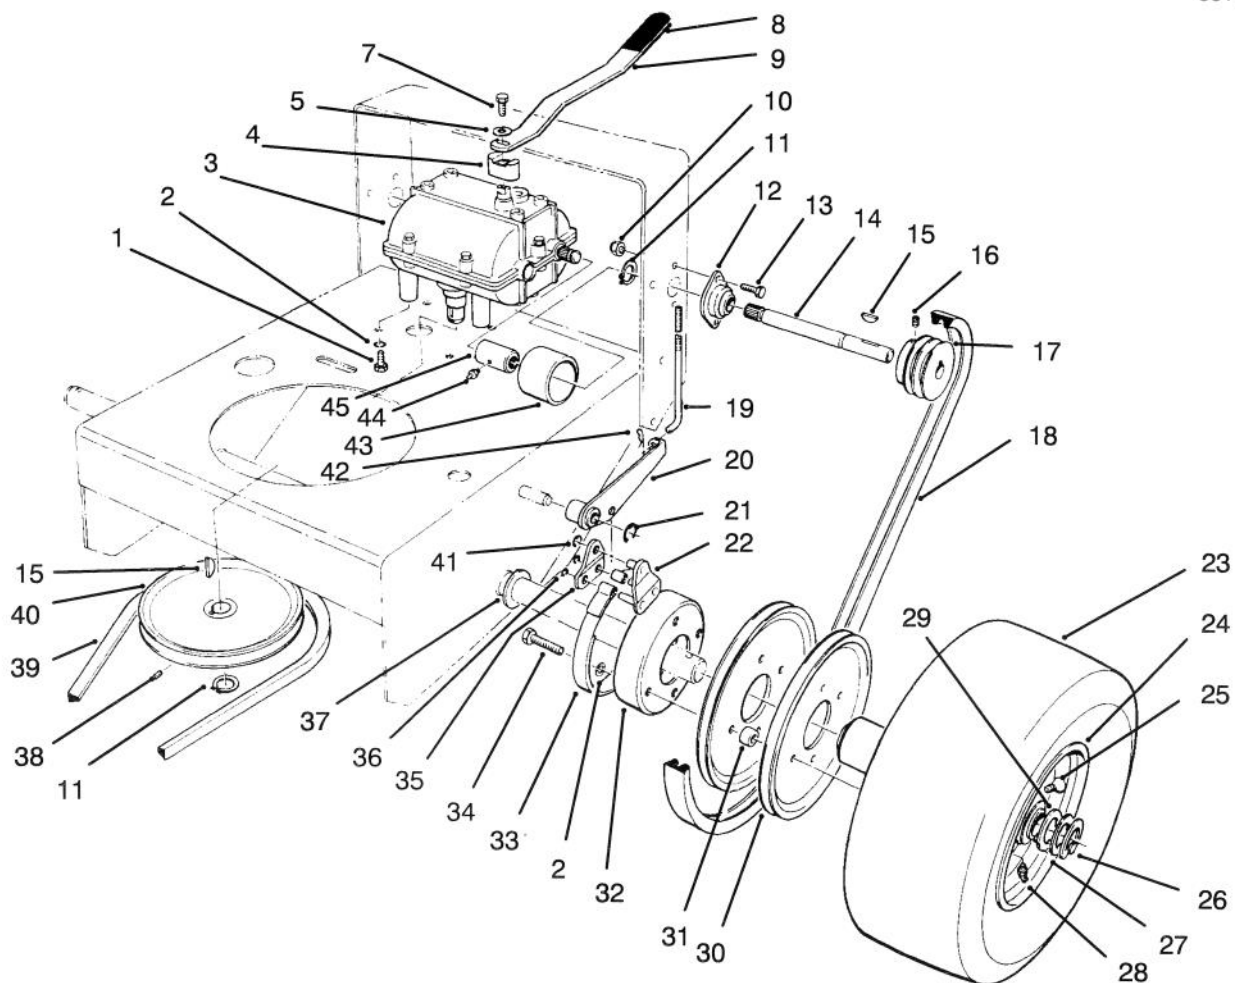


C-0502

AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	322-2	Screw - Hex. Hd.	4	23	231-94	Tire	2
2	3253-4	Washer - Lock	8	24	93-1181	Rim	2
3	74-0610	Transmission	1	25	232-27	Valve Stem	2
4	72-2190	Mount - Shift Lever	1	26	32151-91	Ring - Retaining	2
5	7-5461	Spacer	1	27	92-1746	Bearing	4
7	329-10	Screw - Hex. Hd.	1	28	302-57	Fitting - Grease	2
8	47-1970	Grip - Engagement	1	29	10-8110	Washer - Flat	A/R
9	74-0320	Lever - Shift	1	30	51-4160	Pulley - Wheel	4
10	3296-42	Nut - Lock	4	31	51-4170	Spacer - Pulley	8
11	32120-64	Ring - Retaining	3	32	51-4180	Drum - Brake	2
12	51-4270	Bearing - Shaft Extension	2	33	51-4700	Brake Band Assembly	2
13	321-4	Screw - Hex. Hd.	4	34	322-7	Screw - Hex. Hd.	8
14	51-4240	Shaft - Extension R.H.	1	35	51-4660	Plate - Link Brake	2
*	51-4250	Shaft - Extension L.H.	1	36	32151-72	Ring - Retaining	4
15	3257-5	Key - Woodruff	3	37	51-4230	Washer - Wheel	2
16	3245-3	Screw - Socket Hd. Set	2	38	3241-5	Screw - Socket Hd. Set	1
17	74-0480	Pulley - Drive	2	39	26-9670	Belt - Traction	1
18	51-4291	Belt - Drive	2	40	51-4190	Pulley - Driven	1
19	51-4580	Rod - Brake	2	41	32151-56	Ring - Retaining	2
20	67-6420	Brake Arm L.H.	1	42	3290-307	Pin - Cotter	2
*	67-6400	Brake Arm R.H.	1	43	51-4220	Guard - Coupler	2
21	32151-40	Ring - Retaining	2	44	302-5	Fitting - Grease	2
22	51-4650	Link - Brake	2	45	51-4260	Coupler	2

*Not Illustrated

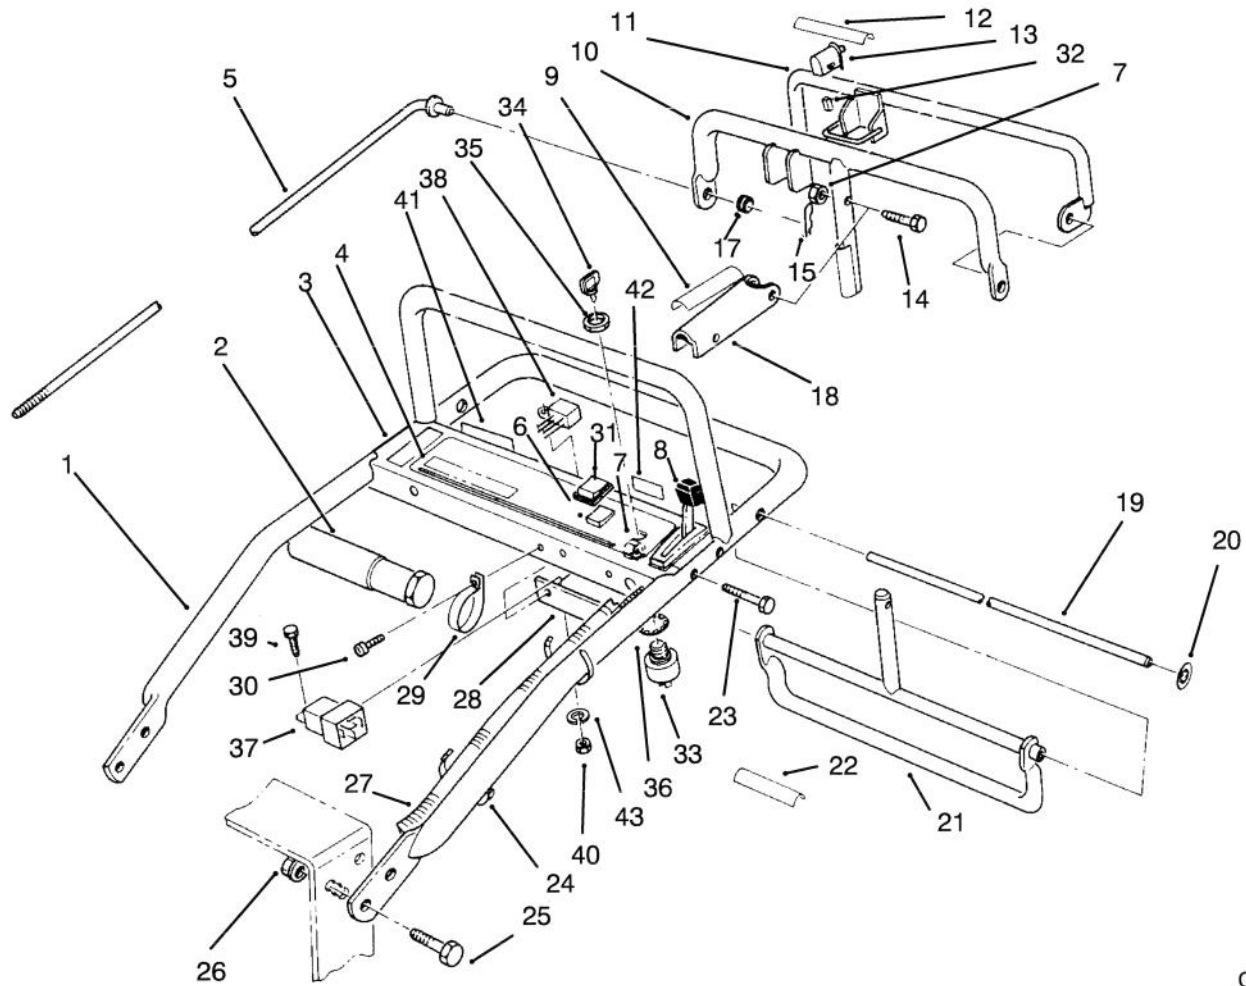


C-0686

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	67-6440	Handle - Upper	1
2	74-0720	Tube - Manual	1
3	82-2180	Panel - Control	1
4	82-7730	Decal - Proline	1
5	82-7632	Rod - Control	2
6	82-2300	Switch - Clutch	1
7	3296-2	Nut - Lock	5
8	74-0630	Control - Throttle	1
9	52-2010	Decal - Parking Brake	1
10	82-7690	Bar - Control	1
11	82-7680	Bail - Handle	1
12	82-2290	Decal - Control Bar	1
13	82-2190	Switch - Bail	1
14	32105-1	Screw - Hex. Hd. Machine	1
15	3290-307	Pin - Cotter	2
17	237-141	Grommet - Rubber	2
18	51-4850	Lever - Brake, Parking	1
19	74-0470	Rod - Pivot	1
20	32151-80	Ring - Push On	2
21	74-0380	Control - Pivot	1
22	82-2280	Decal - Reverse Handle	1
23	32105-14	Screw - Hex. Hd. Machine	4

Ref. No.	Part No.	Description	No. Used
24	3290-378	Cable Tie	2
25	3234-11	Screw - Hex. Hd.	4
26	32128-21	Nut - Hex. Flange	4
27	82-2260	Wire Harness	1
28	57-5811	Panel - Bottom	1
29	2412-120	"R" Clamp	2
30	32144-19	Screw - Self Tapping	4
31	82-3820	Boot - Switch	1
32	218-595	Connector - Body	1
33	29-5560	Switch - On/Off (Incl. Ref. #34-36)	1
34	63-8360	Key	2
35	218-461	Nut	1
36	3254-5	Washer - Lock	1
37	63-7590	Relay	1
38	86-7910	Module - Interlock	1
39	321-2	Screw - Hex. Hd.	2
40	3296-42	Nut - Lock	2
41	71-1280	Decal - Danger	1
42	65-3090	Decal - Instructions	1
43	3255-7	Washer - Lock	2

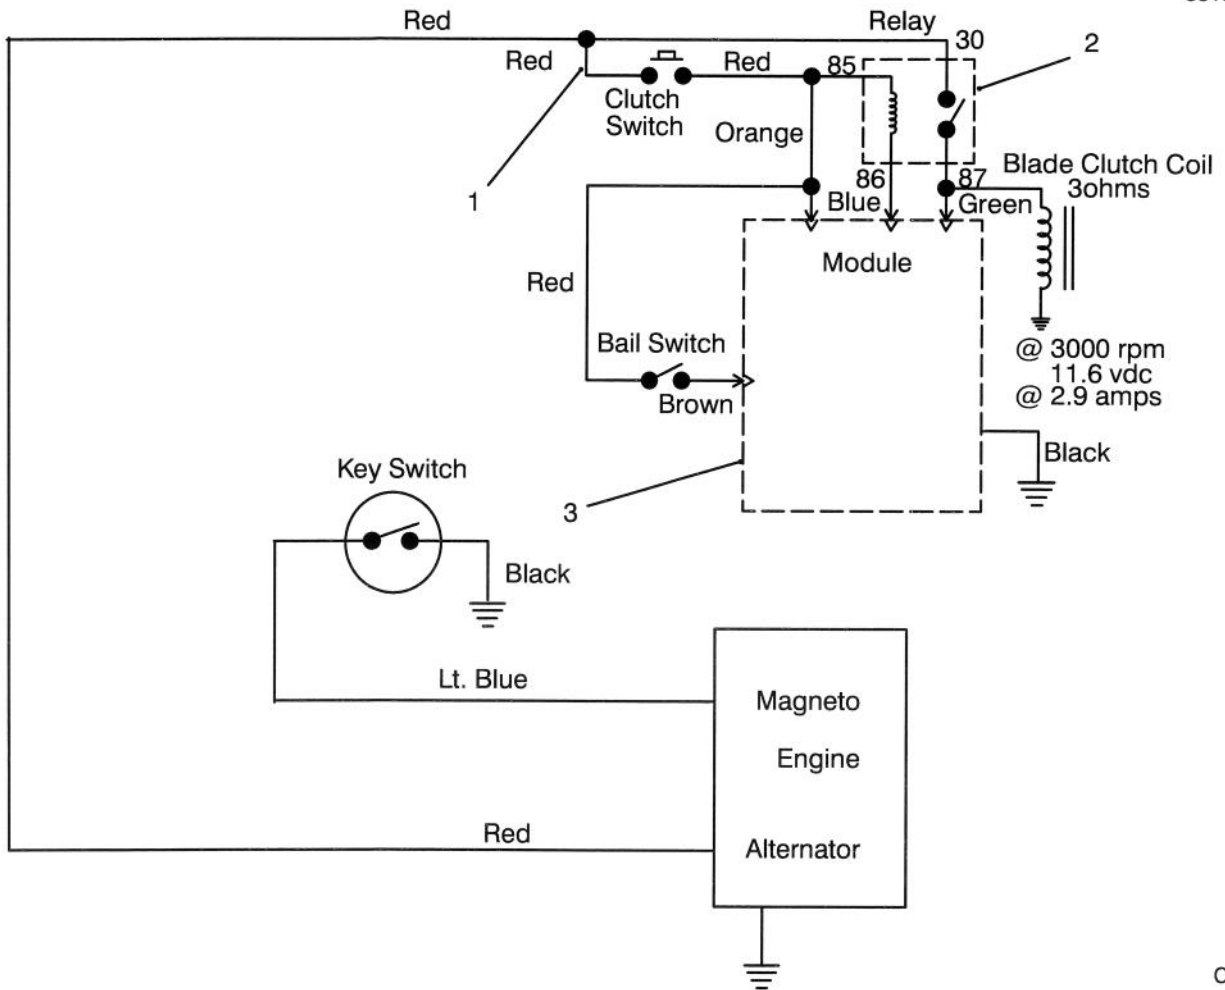


C-0748

ELECTRIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	82-2260	Wire Harness	1
2	63-7590	Relay	1

Ref. No.	Part No.	Description	No. Used
3	86-7910	Module - Interlock	1

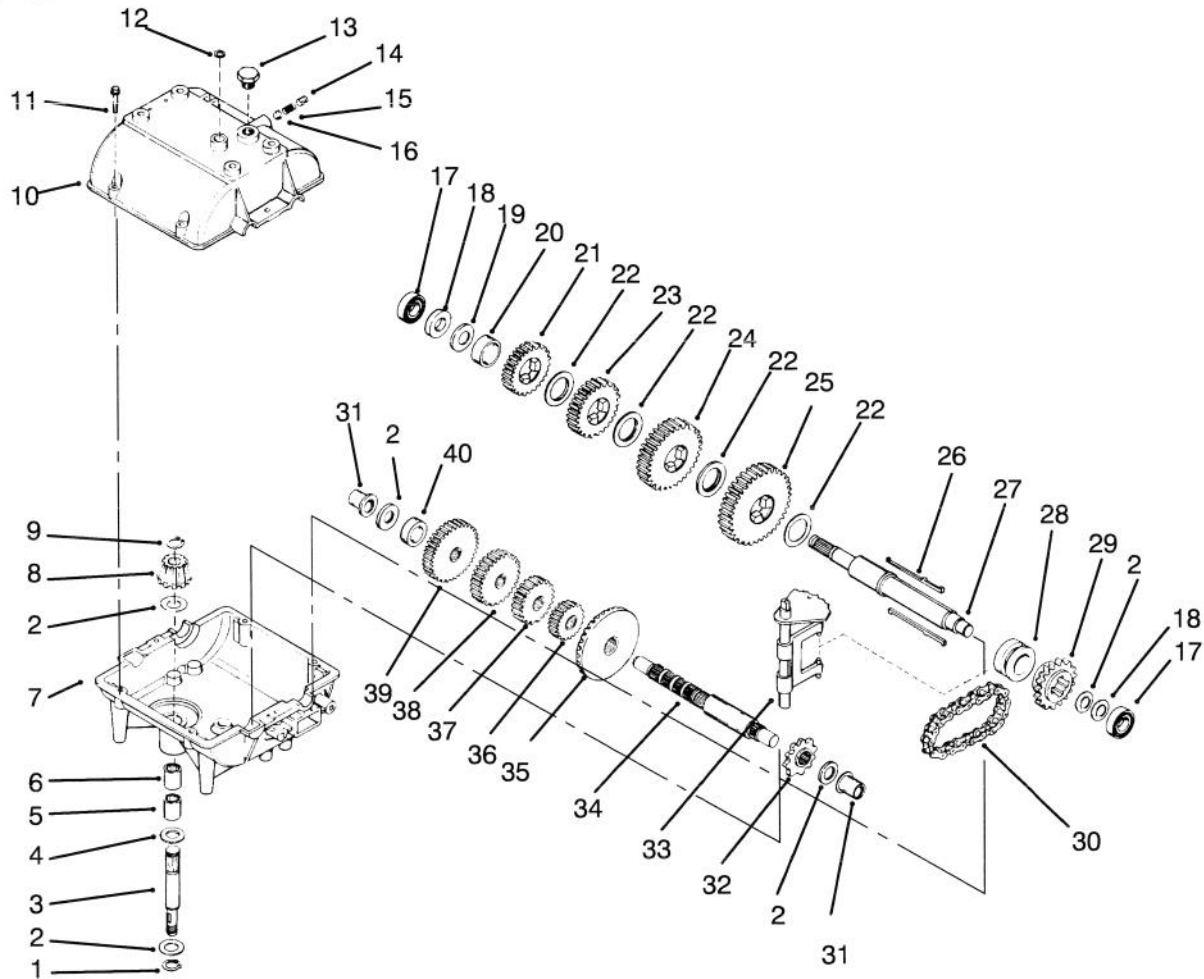


C-1776

PEERLESS TRANSMISSION MODEL NO. 700-039

Ref. No.	Part No.	Description	No. Used
1	792035	Ring - Retaining	1
2	780072	Washer - Thrust	5
3	776135	Shaft - Input	1
4	792001	"O"Ring	2
5	780142	Bearing - Needle	1
6	780086	Bearing - Needle	1
7	770090A	Case - Transmission	1
8	778153	Bevel Pinion - Input	1
9	788040	Ring - Retaining	1
10	772099A	Cover - Transmission	1
11	792073	Screw - Self Tapping	6
12	788069	Seal - Square Cut	1
13	792074	Plug - Threaded	1
14	792078	Screw - Set	1
15	792079	Spring	1
16	792077	Ball - Steel	1
17	780092	Bearing - Ball	2
18	780065	Washer - Thrust	2
19	780139	Washer - Thrust	1
20	786072	Spacer	1
21	778123A	Gear - Spur (25 Teeth)	1

Ref. No.	Part No.	Description	No. Used
22	780108	Washer - Thrust	4
23	778250	Gear - Spur (27 Teeth)	1
24	778124A	Gear - Spur (30 Teeth)	1
25	778125	Gear - Spur (35 Teeth)	1
26	792089A	Key	4
27	776289A	Shaft - Output & Brake	1
28	784266	Collar - Shift	1
29	786083	Sprocket (18 Teeth)	1
30	786081	Chain - Roller (No. 41 Chain 24 Links)	1
31	780105A	Bushing - Flanged	2
32	786082	Sprocket (9 Teeth)	1
33	784267	Rod & Fork Ass'y - Shift	1
34	776134	Shaft - Counter	1
35	778154	Gear - Bevel (42Teeth)	1
36	778136	Gear - Spur (15 Teeth)	1
37	778126A	Gear - Spur (20 Teeth)	1
38	778249	Gear - Spur (23 Teeth)	1
39	778127A	Gear - Spur (25 Teeth)	1
40	786071	Spacer	1

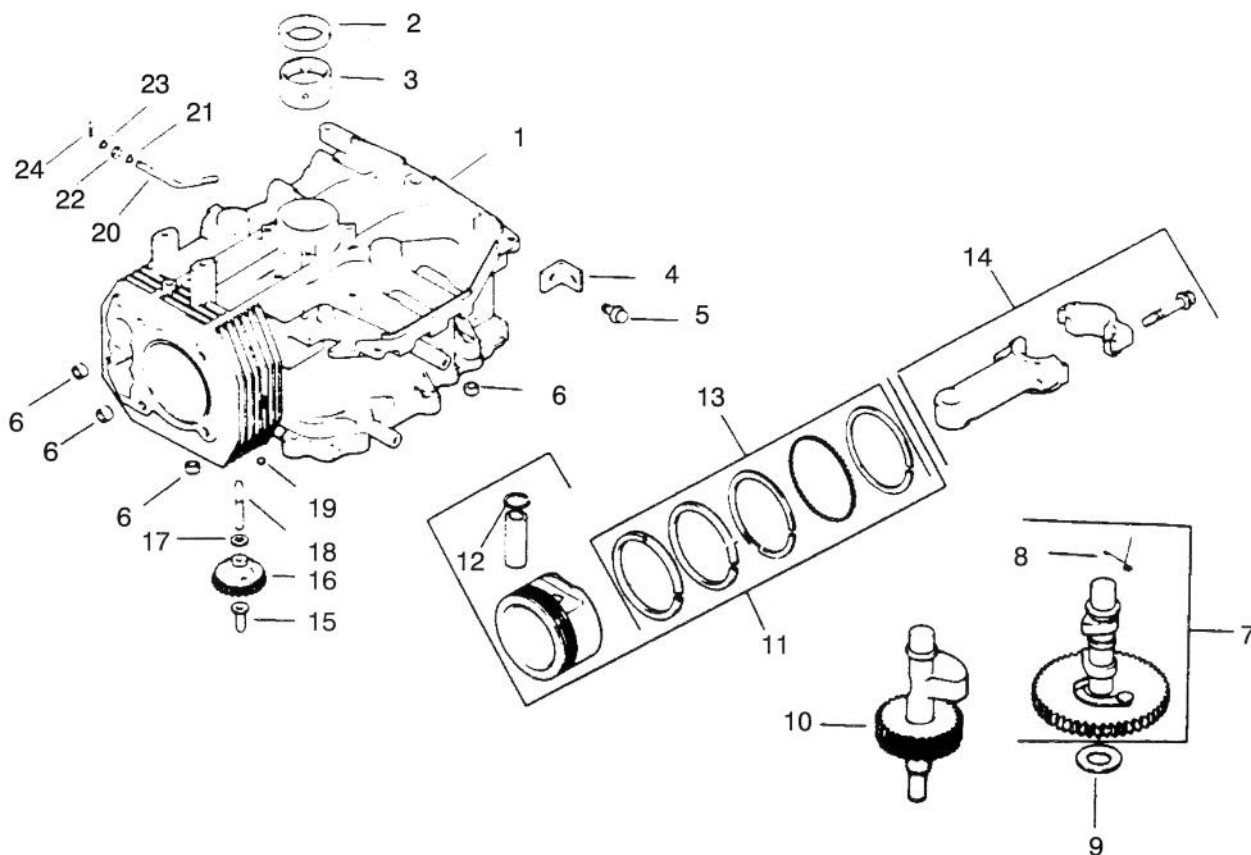


C-1792

ENGINE KOHLER MODEL NO. CV12.5T-1254

Ref. No.	Part No.	Description	No. Used
		Crankcase Group 2	
1	12 522 02	Short Block	1
2	12 032 03	Seal - Crankshaft	1
3	12 030 01	Bearing - Crankshaft (Std.)	1
*	12 030 02	Bearing - Crankshaft (.25)	1
*	12 030 03	Bearing - Crankshaft (.50)	1
4	12 445 02	Strap - Lifting	1
5	M-0839025	Screw - Lifting Strap	1
6	12 380 03	Dowel - Locating	4
7	12 010 05	Camshaft Assembly	1
8	12 089 18	Spring - Actuating	1
9	12 422 08	Shim - Camshaft	1
*	12 422 09	Shim - Camshaft	A/R
*	12 422 10	Shim - Camshaft	A/R
*	12 422 11	Shim - Camshaft	A/R
*	12 422 12	Shim - Camshaft	A/R
*	12 422 13	Shim - Camshaft	A/R
*	12 422 07	Shim - Camshaft	A/R
10	12 144 04	Shaft - Balance	1

Ref. No.	Part No.	Description	No. Used
11	12 847 01	Piston W/Ring Set (Std.)	1
*	12 847 02	Piston W/Ring Set (.25)	1
*	12 847 03	Piston W/Ring Set (.50)	1
12	12 018 02	Retainer - Piston Pin	2
13	12 108 01	Ring Set (Std.)	1
*	12 108 02	Ring Set (.25)	1
*	12 108 03	Ring Set (.50)	1
14	12 067 01	Connecting Rod (Std.)	1
*	12 067 02	Connecting Rod (.25)	1
15	12 380 01	Pin - Governor Regulating	1
16	12 043 05	Gear - Governor Ass'y	1
17	SM-0631005	Washer - Governor Gear	1
18	12 144 02	Shaft - Governor Gear	1
19	52 139 09	Plug - Cap	1
20	12 144 01	Shaft - Governor Cross	1
21	X-25-102	Washer	1
22	12 032 01	Seal - Cross Shaft	1
23	SM-0631015	Washer - Governor Shaft	1
24	12 380 04	Pin - Governor Hitch	1


*Not Illustrated

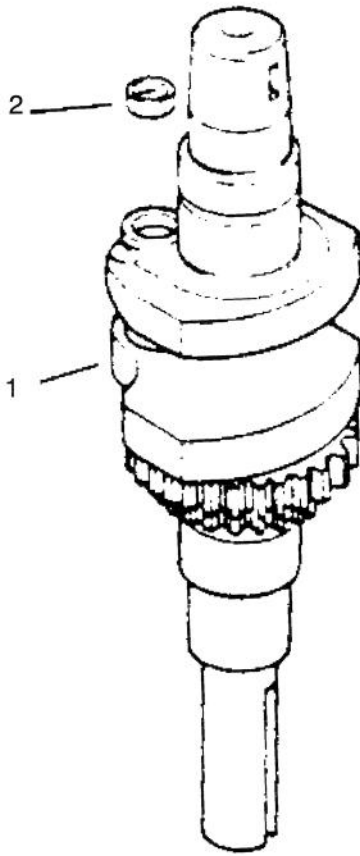

C-1793

ENGINE KOHLER MODEL NO. CV12.5T-1254

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	12 014 02	Crankshaft Group 1 Crankshaft Assembly	1	2	12 139 01	Plug - Cup	1

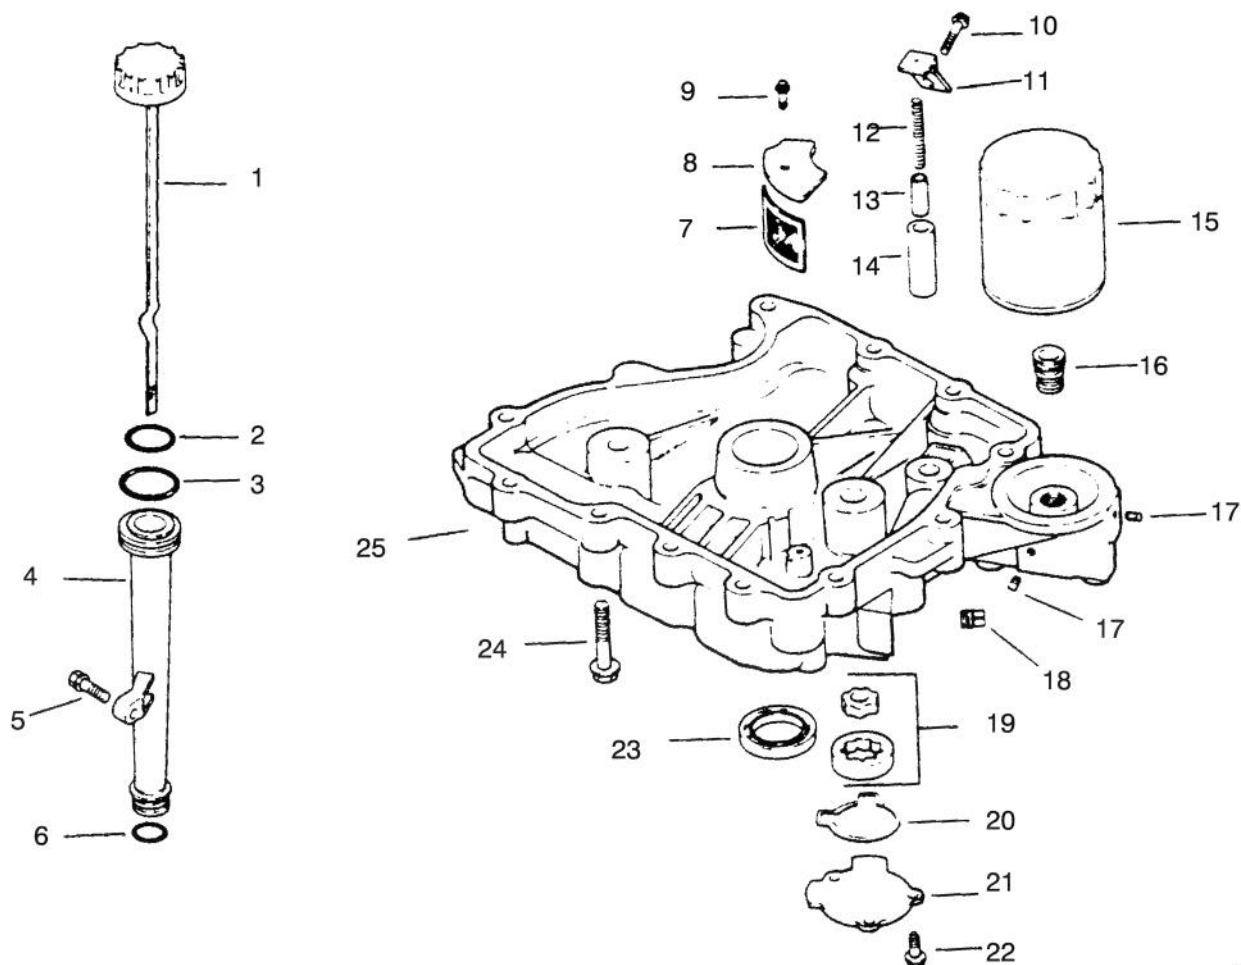


C-1794

ENGINE KOHLER MODEL NO. CV12.5T-1254

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		Oil Pan / Lubrication Group 3					
1	12 038 01	Dipstick Assembly	1	13	12 462 01	Piston - Oil Pump Relief Valve	1
2	12 153 03	"O"Ring - Dipstick	1	14	12 208 01	Body - Oil Pump Relief Valve	1
3	12 153 02	"O"Ring - Upper Tube	1	15	52 050 02	Filter - Oil	1
4	12 123 04	Tube - Oil Fill	1	16	12 136 01	Adapter - Oil Filter	1
5	SM-0545020	Screw - Oil Fill Tube	1	17	X-75-1	Plug - 1/8 N.P.T.F.	2
6	12 153 01	"O"Ring - Lower Tube	2	18	X-75-10	Plug - 3/8 N.P.T.F.	2
7	12 162 02	Screen - Oil Pick Up	1	19	12 393 01	Pump - Oil Assembly	1
8	12 096 03	Cover - Oil Screen	1	20	12 032 04	"O"Ring - Pump Cover	1
9	SM-0545016	Screw	1	21	12 096 02	Cover - Oil Pump	1
10	M-1051025	Screw	1	22	SM-0545016	Screw	3
11	12 126 02	Bracket - Oil Pump Relief Valve	1	23	12 032 03	Seal - Oil (P.T.O.End)	1
12	12 089 03	Spring - Oil Pump Relief Valve	1	24	SM-0839045	Screw - Oil Pan	11
				25	12 199 09	Pan - Oil	1
				*	25 755 13	Kit - Oil Fill Cap	1

*Not Illustrated

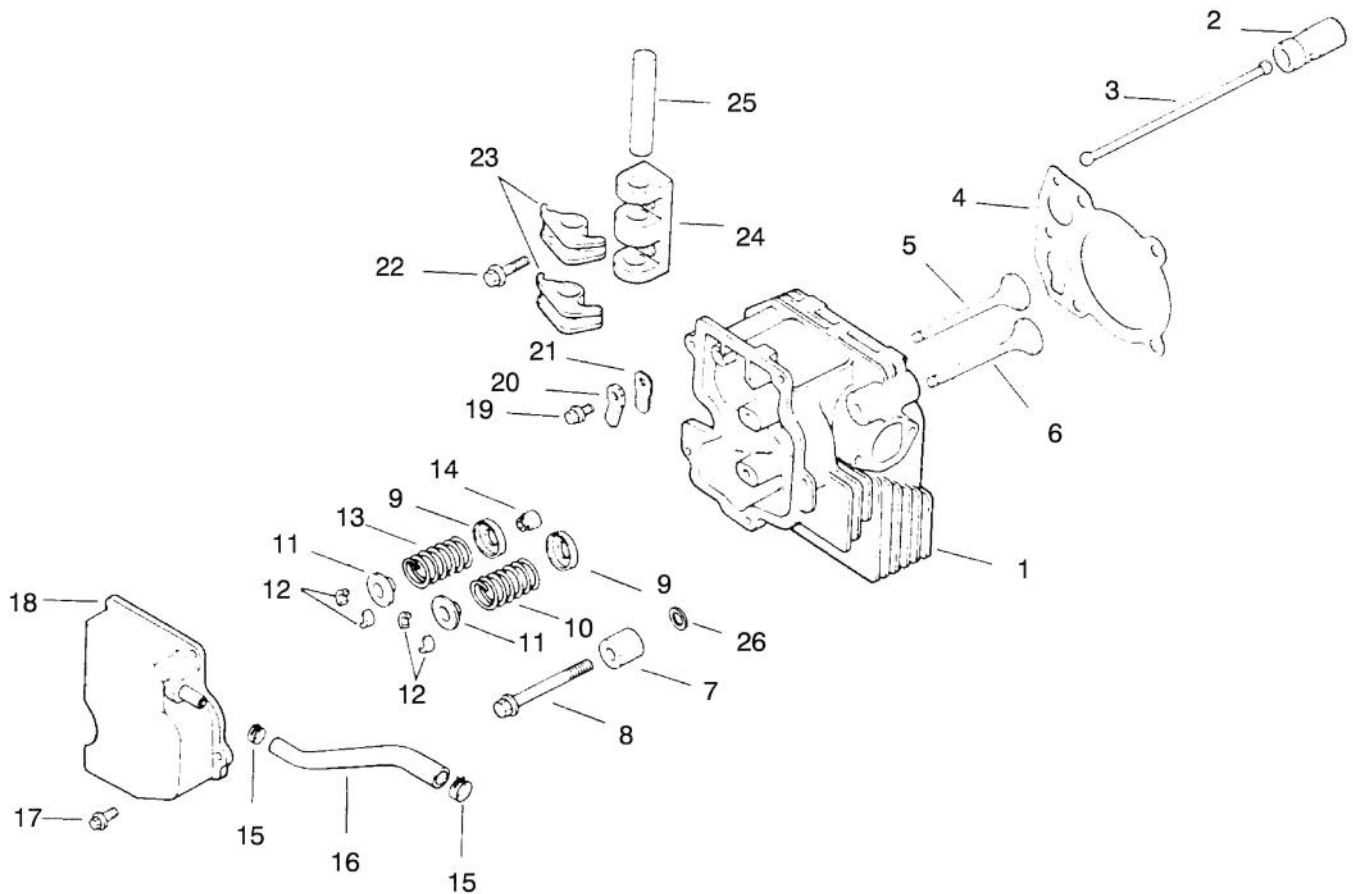


C-1795

ENGINE KOHLER MODEL NO. CV12.5T-1254

Ref. No.	Part No.	Description	No. Used
		Cylinder Head / Valve / Breather - Group 4	
1	12 318 01	Cylinder Head	1
2	12 351 01	Lifter - Valve	2
3	12 411 01	Rod - Push	2
4	12 041 08	Gasket - Cylinder Head	1
5	12 017 01	Valve - Intake (Std.)	1
	12 017 02	Valve - Intake (.25)	1
6	12 016 01	Valve - Exhaust (Std)	1
	12 016 02	Valve - Exhaust (.25)	1
7	12 112 13	Spacer - Head Bolt	1
8	12 086 15	Screw - Cylinder Head	5
9	52 018 01	Retainer - Spring	2
10	12 089 01	Spring - Valve	1
11	12 173 01	Cap - Valve Spring	2

Ref. No.	Part No.	Description	No. Used
12	12 755 03	Kit - Retainer	2
13	12 089 15	Spring - Valve, Exhaust	1
14	12 032 02	Seal - Valve Stem	1
15	X-426-9	Clamp - Hose	2
16	12 326 03	Hose - Breather	1
17	SM-0645020	Screw - Valve Cover	3
18	12 096 07	Cover - Valve W/Nipple	1
19	M-0545010	Screw - Breather Reed	1
20	12 018 01	Retainer - Breather Reed	1
21	12 402 01	Reed - Breather	1
22	SM-0642025	Screw - Rocker Bridge	2
23	12 186 01	Arm - Rocker	2
24	12 126 05	Bridge - Rocker Arm	1
25	12 144 03	Shaft - Rocker Arm	1
26	12 468 05	Washer - Flat	1
*	12 755 02	Kit - Cylinder Head	1

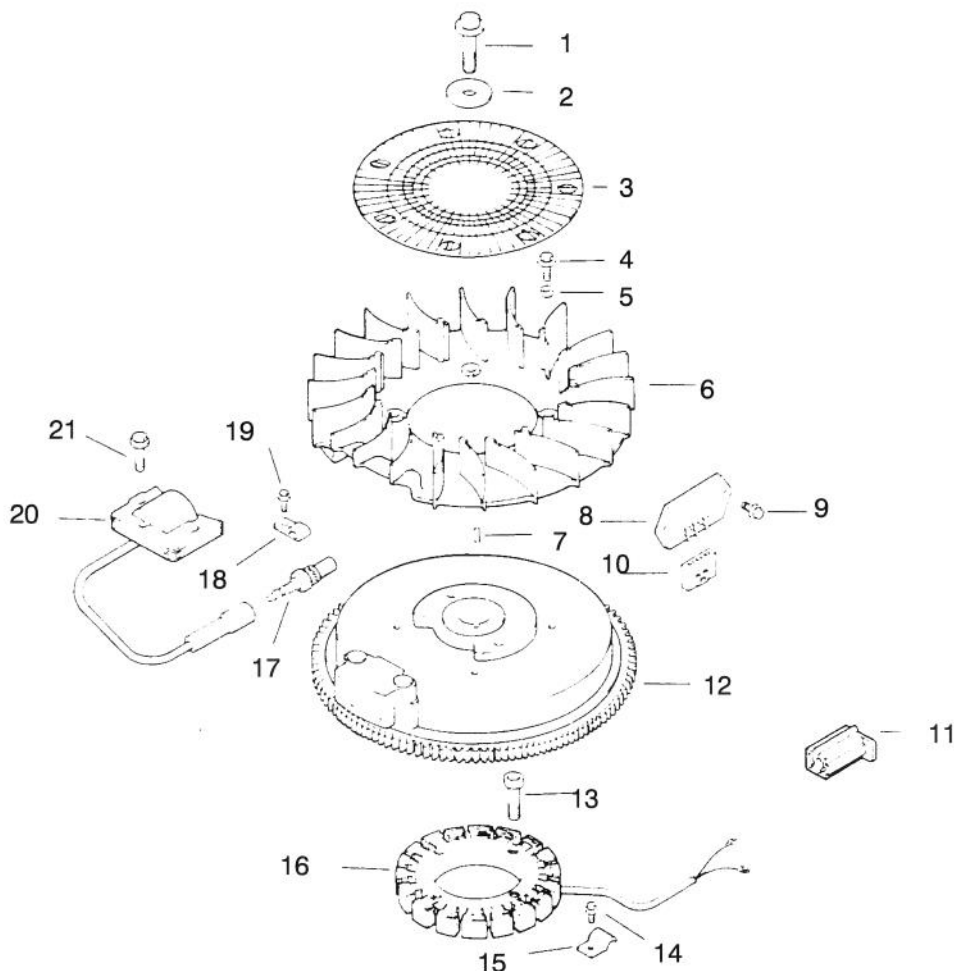


C-1796

ENGINE KOHLER MODEL NO. CV12.5T-1254

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		Ignition / Electrical Group 5					
1	12 086 14	Screw - Flywheel	1	13	M-0548025	Screw - Stator	4
2	12 486 03	Washer - Flywheel	1	14	M-0545010	Screw - Stator Harness	1
3	12 162 03	Screen - Grass	1	15	12 154 02	Clip - Stator Harness	1
4	M-0639016	Screw - Fan	4	16	24 085 01	Stator - 15 Amp.	1
5	12 112 01	Spacer - Fan	4	17	12 132 02	Spark Plug	1
6	12 157 02	Fan	1	18	X-728-1	Clip - Kill Lead	1
7	X-42-15	Key	1	19	M-0545010	Screw - Lead Clip	1
8	12 403 01	Rectifier - Unregulated	1	20	12 584 02	Module - Ignition	1
9	M-0639016	Screw - Regulator	2	21	SM-0545020	Screw - Ignition Module	2
10	236602	Connector - Regulator	1		25 518 05	Lead - Black, Rectifier to Connector(5"-14 Gauge)	1
11	41 155 03	Connector	1	*	12 518 01	Lead - White, Ground to Kill (9.5"-18 Gauge)	1
12	12 025 16	Flywheel Assembly	1				

*Not Illustrated

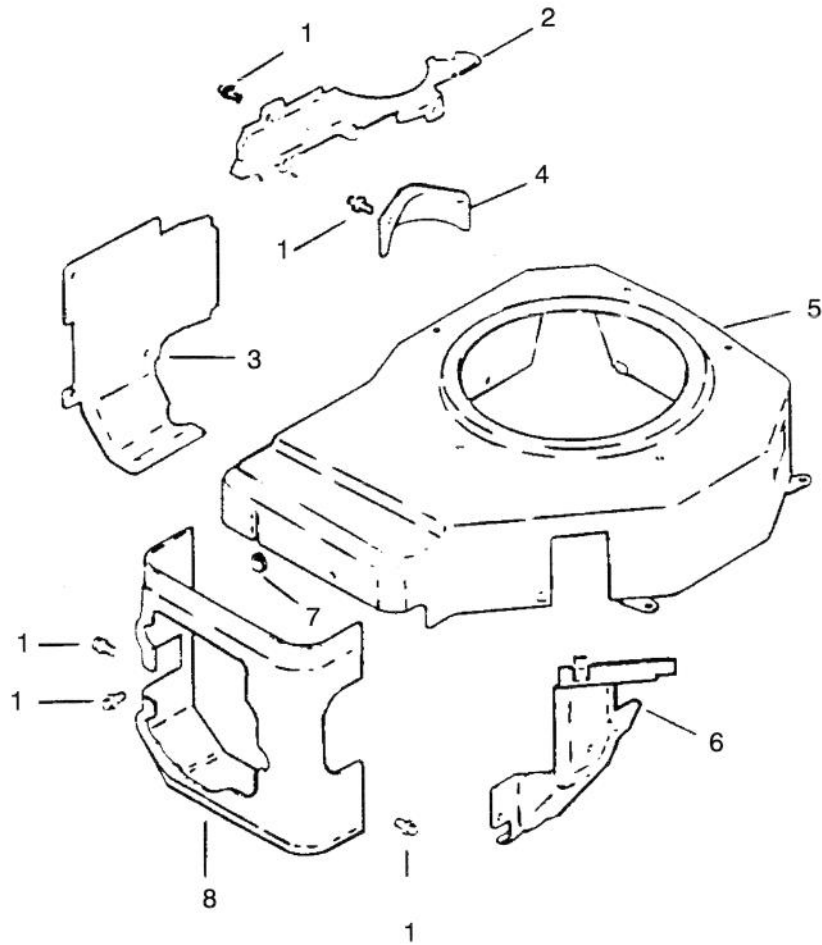


C-1797

ENGINE KOHLER MODEL NO. CV12.5T – 1254

Ref. No.	Part No.	Description	No. Used
		Blower Housing & Baffle Group 6	
1	M-0545010	Screw	14
2	12 146 07	Plate – Blower Housing	1
3	12 063 01	Baffle – Cylinder Barrel	1
4	12 096 05	Cover – Starter	1

Ref. No.	Part No.	Description	No. Used
5	12 027 11	Housing – Blower	1
6	12 063 05	Baffle – Carburetor	1
7	12 313 03	Grommet – Blower Hsg	1
8	12 063 03	Baffle – Cylinder Head	1
*	12 133 30	Decal – H.P.	1

*Not Illustrated

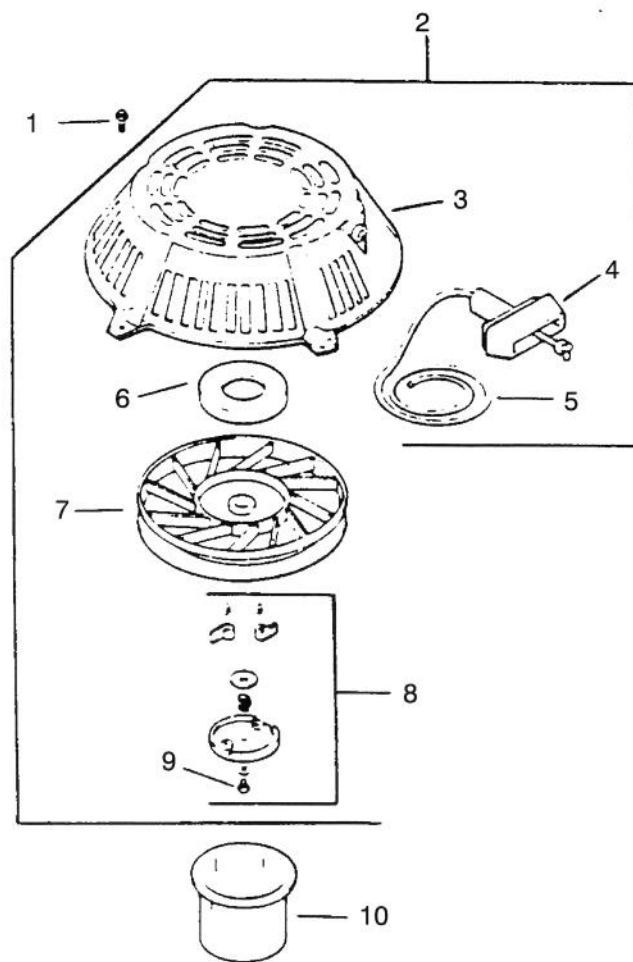


C-1798

ENGINE KOHLER MODEL NO. CV12.5T – 1254


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		Starting System Group 7					
1	M-0545010	Screw	5	6	12 089 06	Spring & Keeper	1
2	12 165 01	Starter (Incl. Ref. #3-9)	1	7	12 093 01	Pulley	1
3	12 081 01	Housing - Starter	1	8	12 757 06	Kit - Dog Replacement (Incl Ref. #9)	1
4	234452	Handle - Recoil	1	9	41 086 09	Screw - Pozidrive	1
5	12 160 01	Rope - Starter	1	10	15 109 01	Cup - Driver	1
				*	12 113 07	Decal - Starting	1

ENGINE KOHLER MODEL NO. CV12.5T - 1254


Group 8 FUEL SYSTEM

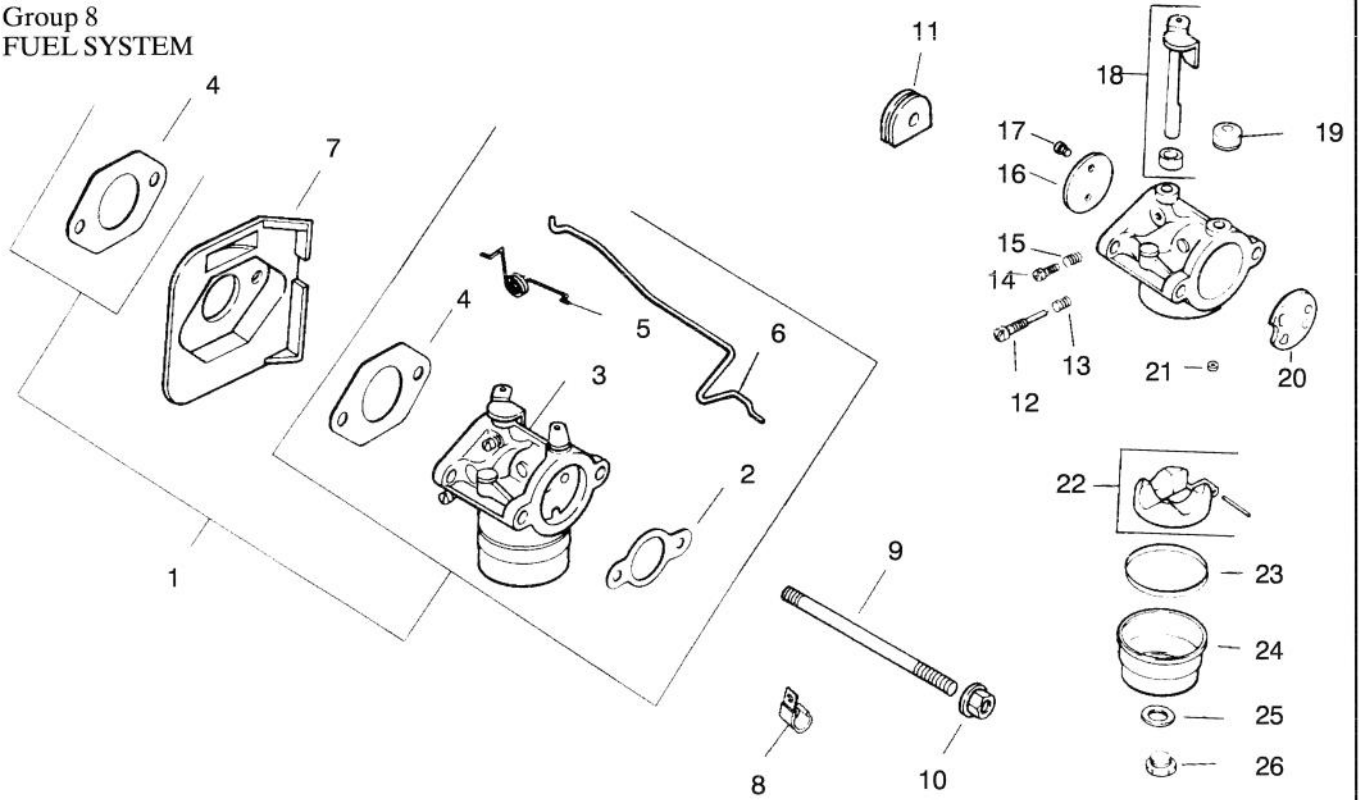


Group 9 ENGINE CONTROLS

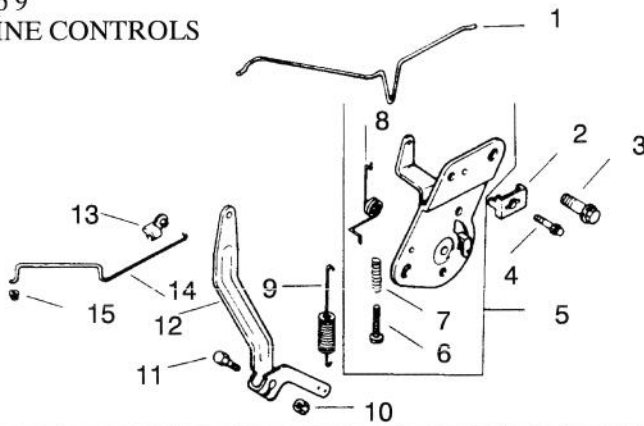

Group 10 AIR INTAKE/FILTRATION

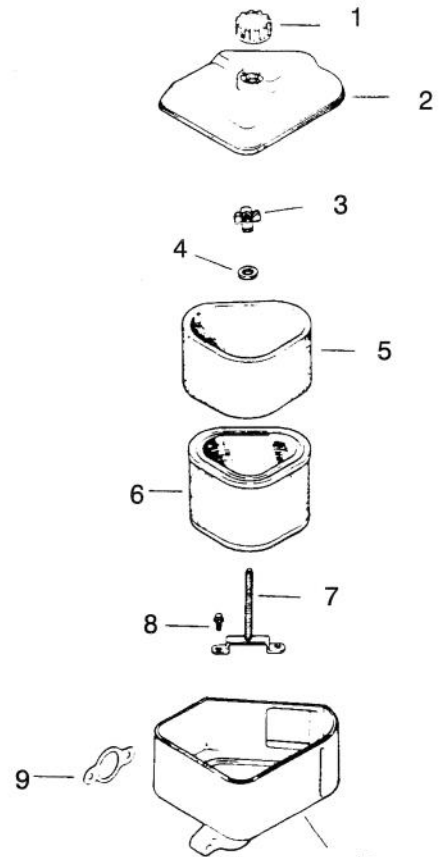

Group 11 EXHAUST

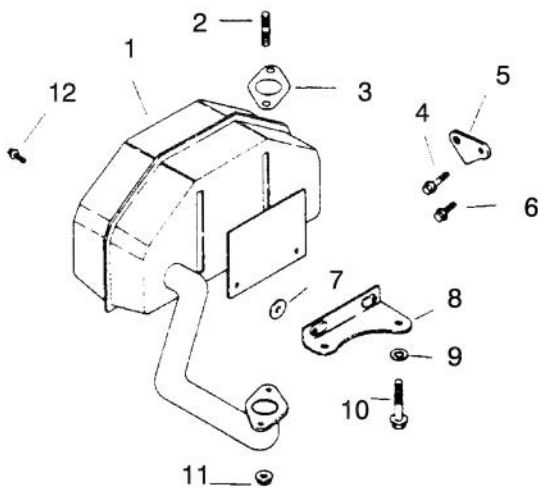

ENGINE KOHLER MODEL NO. CV12.5T – 1254

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
		Fuel System Group 8					
1	12 853 22	Kit – Carburetor (Incl Ref. #2-6)	1	6	SM-0443025	Screw	1
2	12 041 02	Gasket – Air Cleaner	1	7	12 089 11	Spring	1
3	12 053 28	Carburetor Assembly (Incl Ref. #12-26)	1	8	12 089 23	Spring – Choke	1
4	12 041 01	Gasket – Carburetor	1	9	12 089 19	Spring – Governor	1
5	12 089 23	Spring – Choke Return	1	10	SM-0641060	Nut – Governor	1
6	12 079 07	Linkage – Choke	1	11	SM-0642025	Screw – Governor	1
7	12 265 01	Deflector – Heat	1	12	12 090 05	Lever – Governor	1
8	47 154 01	Clamp – Fuel Line	1	13	25 158 11	Bushing – Black Retainer	1
9	M-0629122	Stud – Carburetor	2	14	12 079 01	Linkage – Throttle	1
10	SM-0641060	Nut – Carburetor	2	15	25 158 08	Bushing – Natural,Linkage	1
11	12 313 01	Grommet	1			Air Intake / Filtration Group 10	
12	12 368 03	Needle – Idle	1	1	12 341 01	Knob – Air Cleaner Cover	1
13	12 089 09	Spring – Idle	1	2	12 096 06	Cover – Air Cleaner	1
14	12 086 04	Screw – Idle	1	3	12 100 01	Nut – Wing	1
15	12 089 09	Spring – Idle	1	4	X-25-63	Washer – Flat	1
16	12 146 03	Plate – Throttle	1	5	12 083 08	Precleaner – Element	1
17	25 086 27	Screw – Throttle Plate	2	6	12 083 05	Element – Air Cleaner	1
18	12 144 09	Shaft Assembly-Throttle	1	7	12 072 03	Stud – Mounting Plate	1
19	12 173 06	Cap – Choke Lever	1	8	12 086 01	Screw – Mounting Plate	1
20	12 146 10	Plate – Choke	1	9	12 041 02	Gasket – Air Cleaner	1
21	12 337 07	Jet – Main	1	10	12 094 01	Base – Air Cleaner	1
22	12 757 02	Kit – Float	1	*	12 113 04	Decal – Air Cleaner	1
23	12 041 05	Gasket – Bowl	1			Exhaust Group 11	
24	12 104 01	Bowl – Fuel	1	1	12 068 03	Muffler	1
25	12 041 06	Gasket – Bowl	1	2	M-0829033	Stud – Exhaust Manifold	2
26	12 086 05	Screw – Bowl	1	3	12 041 03	Gasket – Exhaust	1
*	12 757 01	Kit – Carburetor Repair	1	4	SM-0645025	Screw – Lifting Strap	1
*	12 755 36	Kit – Kit High Altitude Jet	1	5	12 445 01	Strap – Lifting	1
*	12 757 11	Kit – Choke Repair	1	6	SM-0645020	Screw – Valve Cover	1
		Engine Control Group 9		7	X-25-52	Washer	2
1	12 079 07	Linkage – Choke	1	8	12 126 39	Bracket – Muffler	1
2	12 237 01	Clamp – Cable	1	9	12 468 01	Washer – Flat	1
3	SM-0645016	Screw – Hex. Hd.	2	10	12 086 13	Screw – Oil Pan	1
4	SM-0545016	Screw – Cable Clamp	1	11	M-0841080	Nut – Muffler	2
5	12 536 01	Control – Speed ((incl Ref.#6-8)	1	12	M-0650012	Screw – Muffler	2
				*	12 755 01	Gasket Set	1
					12 755 30	Kit –Bracket	1

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
112843	Washer - PTO	3 12 1	71-1280	Decal - Danger	6 41 1
608006	Key - Crankshaft	3 15 1	71-3040	Kit - Axle Replacement	2 * 1
7-5461	Spacer	5 5 1	72-2190	Mount - Shift Lever	5 4 1
10-8110	Washer - Flat	5 29A/R	74-0040	Spacer - Pivot Idler	1 19 4
12-3270	Screw - Hex Head	2 37 1	74-0050	Sheave - Lower Half	3 10 1
26-9670	Belt - Traction	5 39 1	74-0060	Sheave - Upper Half	3 9 1
29-5560	Switch - On/Off	6 33 1	74-0220	Idler - Bracket L.H.	1 8 1
44-8310	Ring - Retaining	4 3 2	74-0230	Idler - Bracket R.H.	1 * 1
44-8320	Spring	4 10 3	74-0320	Lever - Shift	5 9 1
44-8330	Spacer - Pulley Bearing	4 6 1	74-0360	Frame - Rear	1 31 1
44-8340	Collar - Bearing	4 7 1	74-0380	Control - Pivot	6 21 1
44-8360	Field Coil, Rotor & Bearing	4 4 1	74-0470	Rod - Pivot	6 19 1
47-1970	Grip - Engagement	5 8 1	74-0480	Pulley - Drive	5 17 2
47-2964	Line - Fuel	3 5 1	74-0490	Decal - Fuel Shut Off	1 30 1
47-2982	Hose - Fuel	1 3 1	74-0510	Valve - Fuel	2 32 1
51-4160	Pulley - Wheel	5 30 4	74-0521	Fitting - Rod	1 10 2
51-4170	Spacer - Pulley	5 31 8	74-0610	Transmission	5 3 1
51-4180	Drum - Brake	5 32 2	74-0630	Control - Throttle	6 8 1
51-4190	Pulley - Driven	5 40 1	74-0720	Tube - Manual	6 2 1
51-4220	Guard - Coupler	5 43 2	74-0930	Guard - Pulley	3 16 1
51-4230	Washer - Wheel	5 37 2	74-0950	Elbow	3 19 2
51-4240	Shaft - Extension R.H.	5 14 1	82-2180	Panel - Control	6 3 1
51-4250	Shaft - Extension L.H.	5 * 1	82-2190	Switch - Bail	6 13 1
51-4260	Coupler	5 45 2	82-2260	Wire Harness	7 1 1
51-4270	Bearing - Shaft Extension	5 12 2	82-2260	Wire Harness	6 27 1
51-4291	Belt - Drive	5 18 2	82-2280	Decal - Reverse Handle	6 22 1
51-4370	Spring - Torsion R.H.	1 * 1	82-2290	Decal - Bar Control	6 12 1
51-4380	Spring - Torsion L.H.	1 17 1	82-2300	Switch - Clutch	6 6 1
51-4450	Screw - Leveler	1 18 2	82-3820	Boot - Switch	6 31 1
51-4480	Idler - Wheel	1 15 2	82-7632	Rod - Control	6 5 2
51-4490	Spacer - Idler Wheel	1 16 2	82-7680	Bail - Handle	6 11 1
51-4540	Retainer - Clutch	3 17 1	82-7690	Bar - Control	6 10 1
51-4580	Rod - Brake	5 19 2	82-7730	Decal - Proline	6 4 1
51-4650	Link - Brake	5 22 2	82-7750	Decal - Ground Speed	1 29 1
51-4660	Plate - Link Brake	5 35 2	82-8440	Fuel Tank Assembly	2 34 1
51-4700	Brake Band Assembly	5 33 2	86-7910	Module - Interlock	7 3 1
51-4810	Pulley - Idler	1 23 1	86-7910	Module - Interlock	6 38 1
51-4850	Lever - Brake, Parking	6 18 1	92-1181	Rim	5 24 2
52-2010	Decal - Parking Brake	6 9 1	92-1746	Bearing	5 27 4
52-2890	Bushing	2 35 2	93-1161	Frame	1 24 1
54-0230	Field Assembly	4 1 1	93-1163	Wheel & Tire Assembly	5 * 2
54-3200	Clutch Assembly	3 11 1	218-461	Nut	6 35 1
55-3570	Cap - Fuel Tank	1 1 1	218-595	Connector - Body	6 32 1
55-7410	Armature & Pulley Assembly	4 5 1	231-94	Tire	5 23 2
56-6360	Filter - Fuel	3 4 1	232-27	Valve Stem	5 25 2
57-5811	Panel - Bottom	6 28 1	237-7	"O"Ring	2 33 1
57-6360	Screw - Hex. Hd.	3 14 1	237-124	Grommet	1 21 1
57-6380	Screw - Hex. Hd.	3 8 4	237-141	Grommet - Rubber	6 17 2
63-7590	Relay	7 2 1	2412-87	Clamp	3 21 1
63-7590	Relay	6 37 1	2412-98	Clamp - Fuel Filter	3 3 2
63-8360	Key	6 34 2	2412-98	Clamp - Fuel line	1 2 1
63-8440	Decal - Hot	3 2 1	2412-108	Clamp	3 23 1
65-3090	Decal - Instructions	6 42 1	2412-120	"R"Clamp	6 29 2
66-7400	Plate - Control	1 28 1	251-291	Bearing - Pulley	4 8 1
67-6370	Bracket - Support R.H.	1 * 1	251-292	Bearing - Field	4 2 1
67-6380	Bracket - Support L.H.	1 11 1	283-6	Pin - Clevis	1 9 2
67-6400	Brake Arm R.H.	5 * 1	288-4	Cap - Pipe	3 18 1
67-6420	Brake Arm L.H.	5 20 1	289-51	Nipple	3 20 1
67-6440	Handle - Upper	6 1 1	302-5	Fitting - Grease	5 44 2
68-9690	Fitting - Rod	1 6 2	302-57	Fitting - Grease	5 28 2

*Not Illustrated

TORO PART NUMBER INDEX (Cont.)

3316-763A

Part No.	Description	Pg. Ref.		Part No.	Description	Pg. Ref.	
		No.	Qty.			No.	Qty.
321-2	Screw	3	22	3290-307	Pin - Cotter	1	7
321-2	Screw - Hex. Hd.	6	39	3290-307	Pin - Cotter	6	15
321-4	Screw - Hex. Hd.	5	13	3290-307	Pin - Cotter	5	42
322-2	Screw - Hex. Hd.	5	1	3290-378	Cable Tie	6	24
322-4	Screw - Hex. Hd.	1	26	3296-2	Nut - Lock	6	7
322-7	Screw - Hex. Hd.	5	34	3296-5	Nut - Lock	4	9
323-6	Screw - Hex. Hd.	1	13	3296-23	Nut - Lock	1	14
323-9	Screw - Hex. Hd.	1	22	3296-39	Nut - Lock	1	20
323-16	Screw - Hex. Hd.	1	12	3296-42	Nut - Lock	6	40
329-10	Screw - Hex. Hd.	5	7	3296-42	Nut - Lock	5	10
3234-11	Screw - Hex. Hd.	6	25	32103-25	Nut - Wing	1	4
3241-5	Screw - Socket Hd. Set	5	38	32105-1	Screw - Hex. Hd. Machine	6	14
3245-3	Screw - Socket Hd. Set	5	16	32105-14	Screw - Hex. Hd. Machine	6	23
3253-4	Washer - Lock	5	2	32120-64	Ring - Retaining	5	11
3253-4	Washer - Lock	3	7	32128-21	Nut - Hex. Flange	1	25
3253-4	Washer - Lock	1	27	32128-21	Nut - Hex. Flange	6	26
3254-5	Washer - Lock	6	36	32144-19	Screw - Self Tapping	6	30
3255-7	Washer - Lock	2	38	32151-40	Ring - Retaining	5	21
3256-23	Washer - Flat	1	5	32151-56	Ring - Retaining	5	41
3256-23	Washer - Flat	3	6	32151-72	Ring - Retaining	5	36
3256-24	Washer	2	36	32151-80	Ring - Push On	6	20
3257-5	Key - Woodruff	5	15	32151-91	Ring - Retaining	5	26

TABLE OF CONTENTS

Description	Page	Description	Page
Frame Assembly	1	Numeric Index	18
Engine Assembly	3	Optional Equipment	
Clutch Assembly	4	32" Cutting Unit Model No. 30133	
Axle Assemble	5	36" Cutting Unit Model No. 30136	
Handle Assembly	6	37" Cutting Unit Model No. 30737	
Electric Schematic	7	44" Cutting Unit Model No. 30144	
Engine Kohler		48" Cutting Unit Model No. 30148	
Transmission, Peerless	8	52" Cutting Unit Model No. 30152	
Crankcase	9	Standard Sulky Model No. 30122	
Crankshaft	10	Steerable Sulky Model No. 30123	
Oil Pan / Lubrication	11	Kits	
Cylinder Head, Valve / Breather	12	Bagging For 32" Deck Model No. 30124	
Ignition / Electrical	13	Bagging For 36" Deck Model No. 30125	
Blower Housing & Baffles	14	Bagging For 37" Deck Model No. 30129	
Starting System	15	Bagging For 44 & 52" Deck Model No. 30128	
Fuel System Engine Control,		Front Weight Part No. 80-3350	
Air Intake & Exhaust	16		

