



GrandStand[®] Mower

With 52in TURBO FORCE[®] Cutting Unit

Model No. 74559 - 290000157 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
52 Inch Deck Assembly	 3	Upper Control and Tower Assembly	 15
Deck Assembly No. 117-3634	 4	Lower Control Assembly	 16
Lever Assembly No. 107-1664	 5	Hydraulic Assembly	 17
Spring Idler Assembly No. 117-0445	 6	Hydraulic Motor Assembly No. 114-0549	 19
Idler Adjust Assembly No. 117-0446	 7	Hydraulic Pump Assembly No. 117-3597	 20
Spindle Assembly No. 107-8504	 8	Hydraulic Belt Drive Assembly	 21
Deflector Assembly No. 114-1910	 9	Platform Assembly	 22
Left Hand Belt Cover Assembly No. 117-3550	 10	Cushion Assembly No. 114-1917	 23
Right Hand Belt Cover Assembly No. 117-3551	 11	Platform Assembly No. 117-0431	 24
Wheel Assembly	 12	Parking Brake Assembly	 25
Frame and Muffler Guard Assembly	 13	Electrical Assembly	 26
Deck Lift Assembly	 14	Fuel Tank Assembly	 27
		Engine Assembly	 28
		Attachments and Accessories List	 29

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	LH. left hand
CARR. carriage	NI. nylon insert
CCW. counter clock wise	NPTF. national pipe thread fine
CW. clockwise	PFH. phillips flat head
DEG. degrees	PPH. phillips pan head
ECM. electronic control module	PPHTF. phillips pan head thread forming
EXT. external	PRH. phillips round head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power-take-off
HD. heavy-duty	RH. right hand
HF. hex flange	ROPS. roll-over protection system
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HSBH. hex socket button head	STD. standard
HSFH. hex socket flat head	TAP. self tapping
HSH. hex socket head	TTH. torx truss head
HWH. hex washer head	

Footnotes


❶ Not illustrated

❷ Not serviced separately

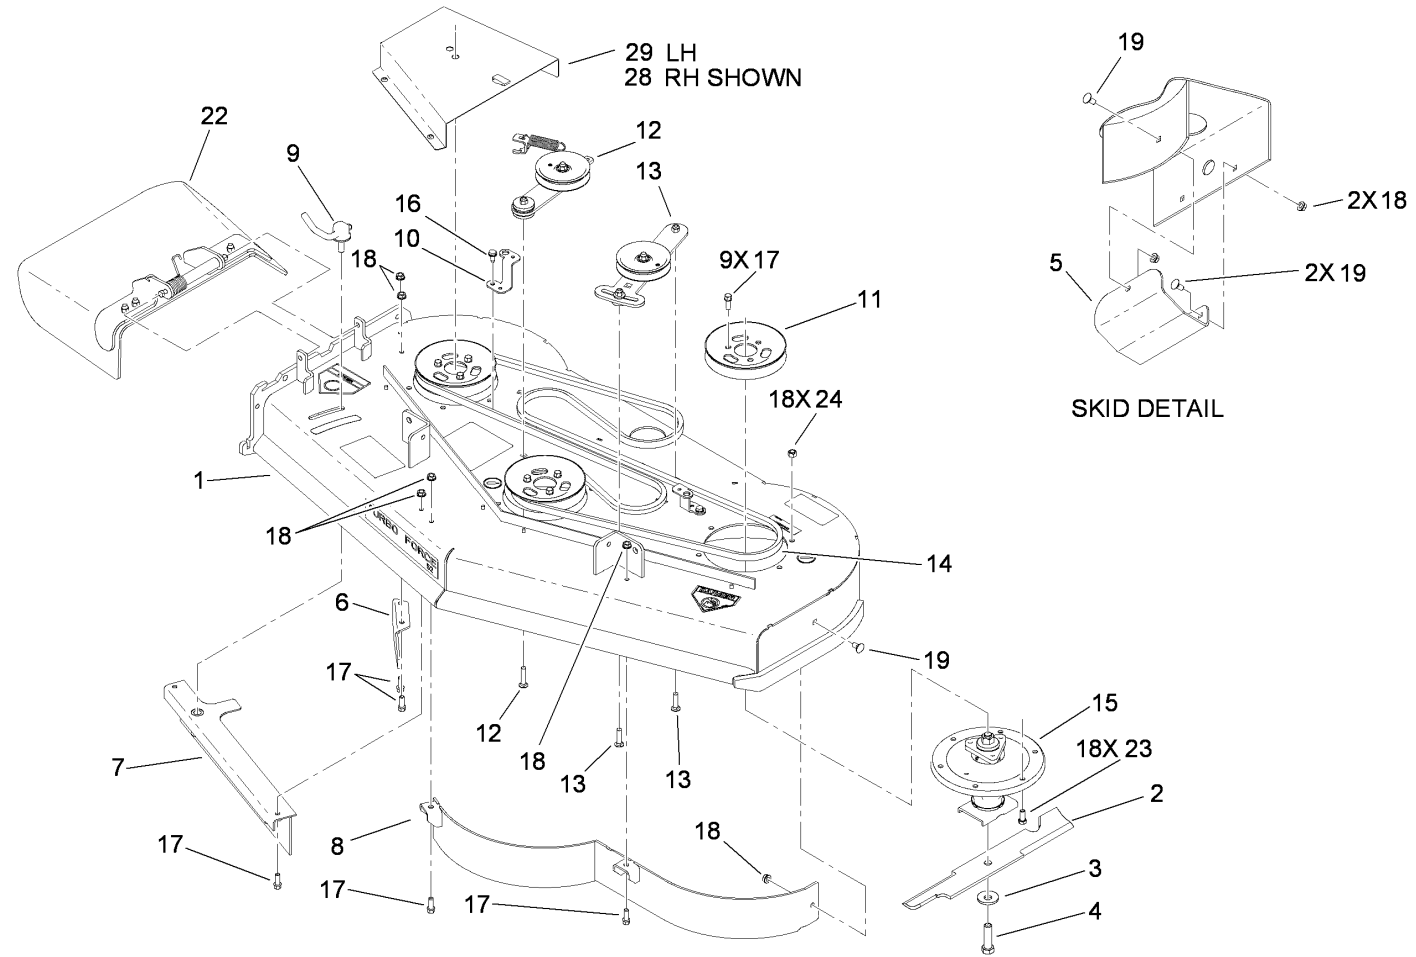

52 Inch Deck Assembly

Ref	Part No.	Qty.	Description				
1	117-3634	1	Deck ASM				
2	105-7781-03	3	Blade-18 Inch (Hi Flow)				
3	103-0865	3	Washer-Blade Bolt, Heavy				
4	103-0862	3	Screw-Cap				
5	114-1908-01	1	Skid				
6	106-3216-01	1	Baffle-Discharge				
7	105-7755-01	1	Baffle ASM				
8	114-1979-01	1	52 Inch Baffle ASM				
9	107-1664	1	Lever ASM				
10	108-2177-01	2	Bracket-Cover, Tall				
11	105-7735	3	Pulley				
12	117-0445	1	Spring Idler ASM				
13	117-0446	1	Idler Adjust ASM				
14	114-0454	1	Belt-V				
15	107-8504	3	Spindle ASM				
16	32144-70	2	Screw-HWHTF				
17	92-1624	14	Screw-HWH				
18	3290-357	9	Nut-HHF, Whiz				
19	3231-1	4	Screw-CARR				
22	114-1910	1	Deflector ASM				
23	33115-025	18	Screw-HH				
24	33025-00	18	Nut-Lock				
28	117-3550	1	LH Belt Cover ASM				
29	117-3551	1	RH Belt Cover ASM				

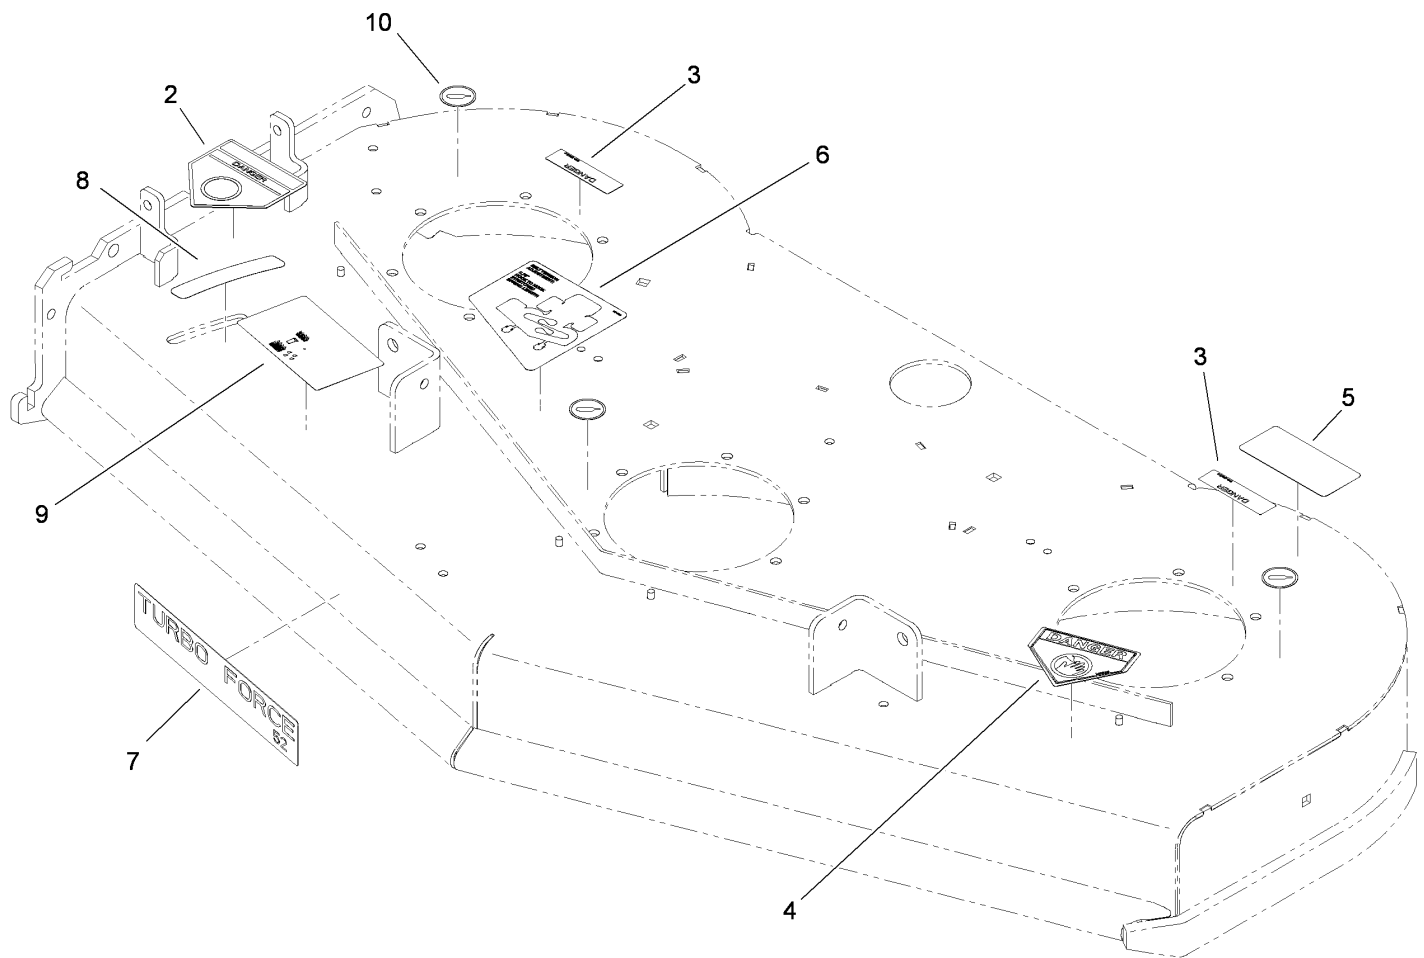


Deck Assembly No. 117-3634

Ref	Part No.	Qty.	Description				
2	54-9220	1	Decal-Danger				
3	98-5954	2	Decal-Cover, Missing				
4	1-403005	1	Decal-Danger				
5	68-8340	1	Decal-Torque				
6	117-0486	1	Decal-Tension, Belt				
7	107-1618	1	Decal				
8	110-2067	1	Decal-Setting, Baffle				
9	110-2068	1	Decal-Adjustment, Baffle				
10	58-6520	3	Decal-Grease				


Lever Assembly No. 107-1664

Ref	Part No.	Qty.	Description
1	106-3239	1	Screw-Lock
2	107-1644	1	Cap-Lock
3	106-3241	1	Lever-Lock
4	3296-29	1	Nut-Lock, NI

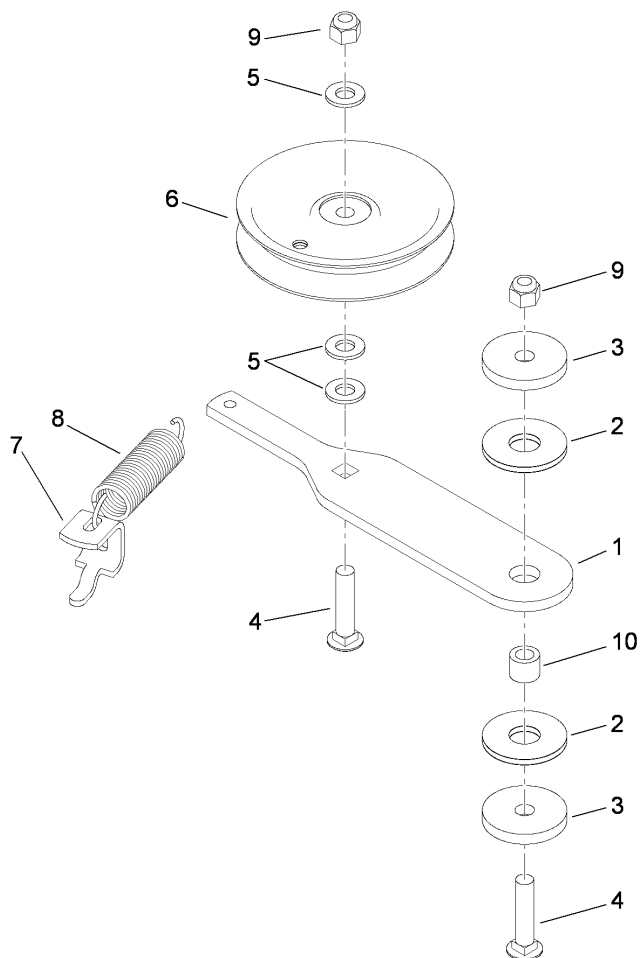


Spring Idler Assembly No. 117-0445

Ref	Part No.	Qty.	Description				
1	114-1992	1	Plate-Idler				
2	114-0463	2	Washer-Friction, Composite				
3	110-9981	2	Washer-Plain				
4	3231-5	2	Screw-CARR				
5	3256-24	3	Washer-Flat				
6	93-1622	1	Pulley-Idler				
7	117-0447-01	1	Bracket-Anchor, Spring				
8	108-4056	1	Spring-Extension				
9	3296-39	2	Nut-Lock, NI				
10	1-413088	1	Bushing-Lever, Lift				

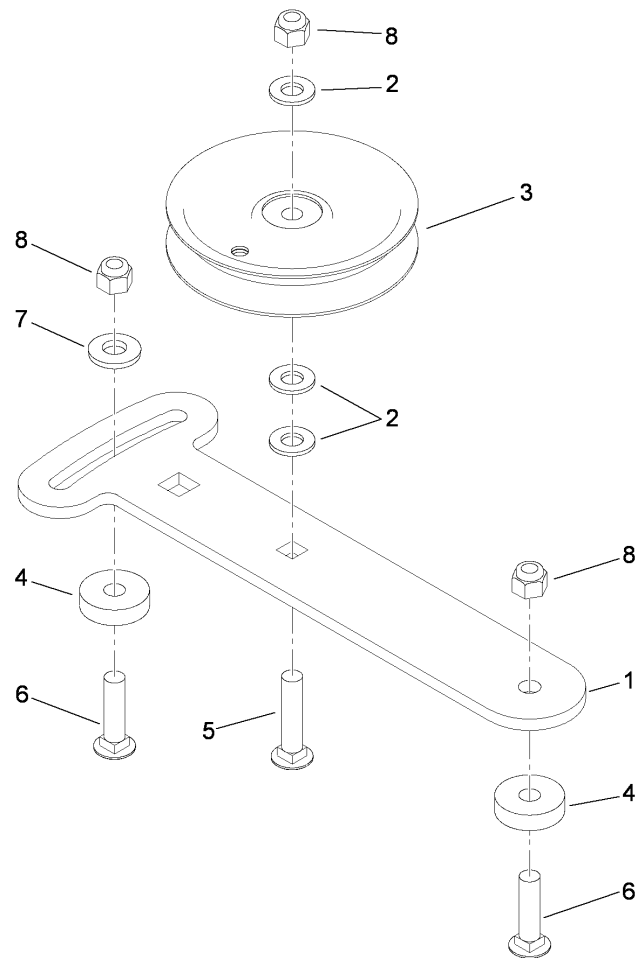


Idler Adjust Assembly No. 117-0446

Ref	Part No.	Qty.	Description				
1	114-1991	1	Plate-Idler				
2	3256-24	3	Washer-Flat				
3	93-1622	1	Pulley-Idler				
4	105-7788	2	Spacer				
5	3231-5	1	Screw-CARR				
6	3231-4	2	Screw-CARR				
7	98-5975	1	Washer-Belleville				
8	3296-39	3	Nut-Lock, NI				

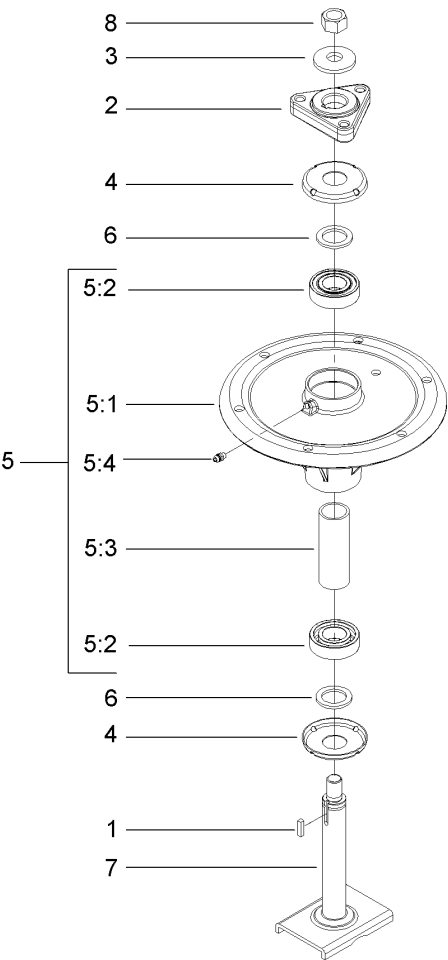


Spindle Assembly No. 107-8504

Ref	Part No.	Qty.	Description				
1	10-8040	1	Key-Square				
2	106-3277	1	Hub-Pulley				
3	103-0865	1	Washer-Blade Bolt, Heavy				
4	106-3204	2	Shield-Bearing				
5		1	Spindle Bearing ASM				
5:1	106-3211	1	Housing-Spindle				
5:2	113514	2	Bearing-Ball				
5:3	107-8502	1	Spacer-Bearing				
5:4	302-5	1	Fitting-Grease				
6	3-8514	2	Washer-Thrust				
7	107-8501	1	Spindle ASM				
8	3219-6	1	Nut-Hex				

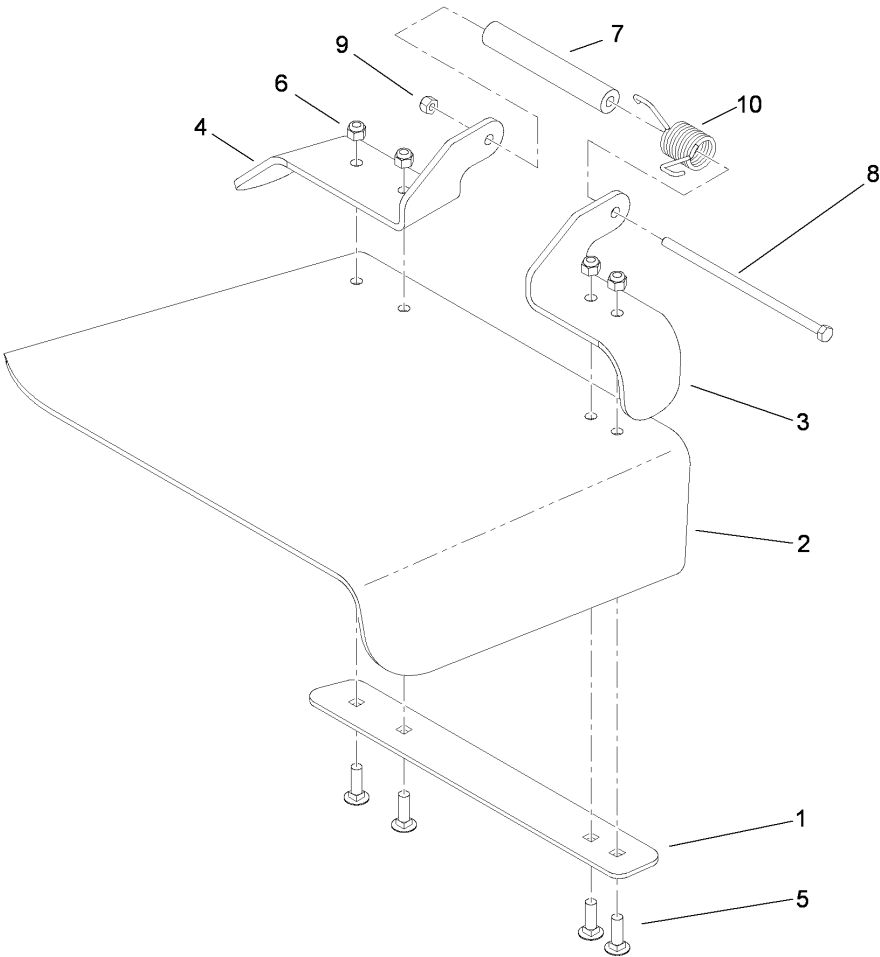


Deflector Assembly No. 114-1910

Ref	Part No.	Qty.	Description				
1	106-3248-03	1	Strap-Discharge				
2	110-0759	1	Deflector-Rubber				
3	108-7766-03	1	Bracket-Hinge, Front				
4	108-7767-03	1	Bracket-Hinge, Rear				
5	3231-25	4	Screw-CARR				
6	3296-39	4	Nut-Lock, NI				
7	105-4622	1	Spacer				
8	322-50	1	Screw-HH				
9	3296-29	1	Nut-Lock, NI				
10	108-4052	1	Spring-Torsion				

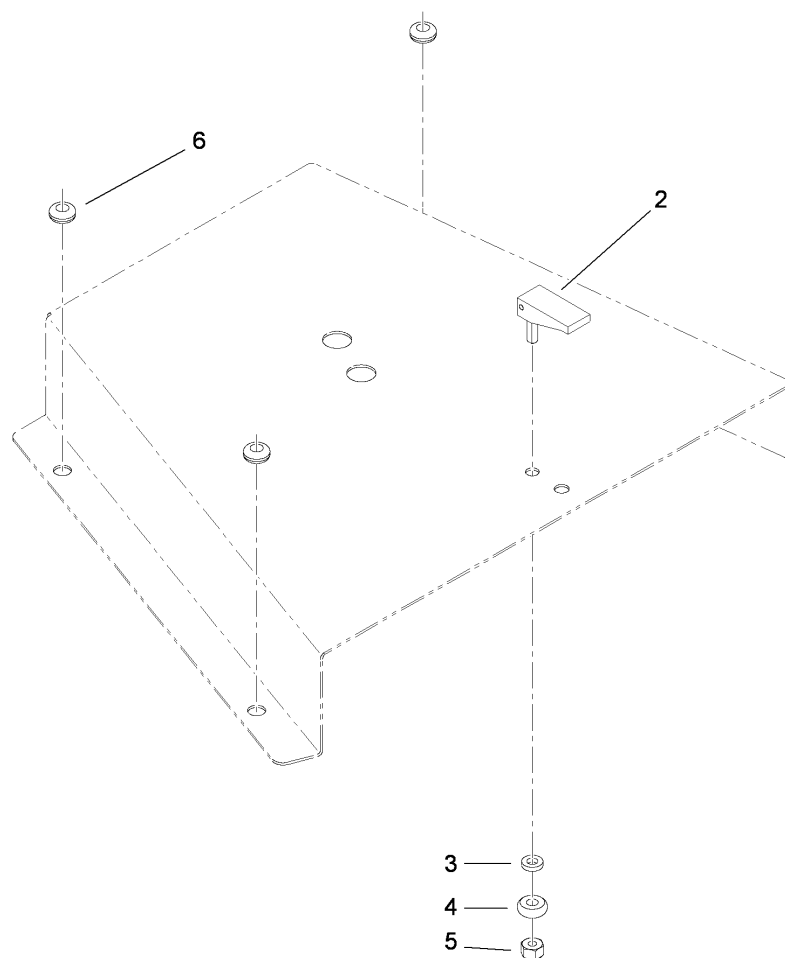


Right Hand Belt Cover Assembly No. 117-3551

Ref	Part No.	Qty.	Description
2	106-6777	1	Handle-Latch, Swell
3	99-3058	1	Washer
4	106-6778	1	Bushing-Latch, Swell
5	1-804254	1	Nut
6	237-84	3	Grommet

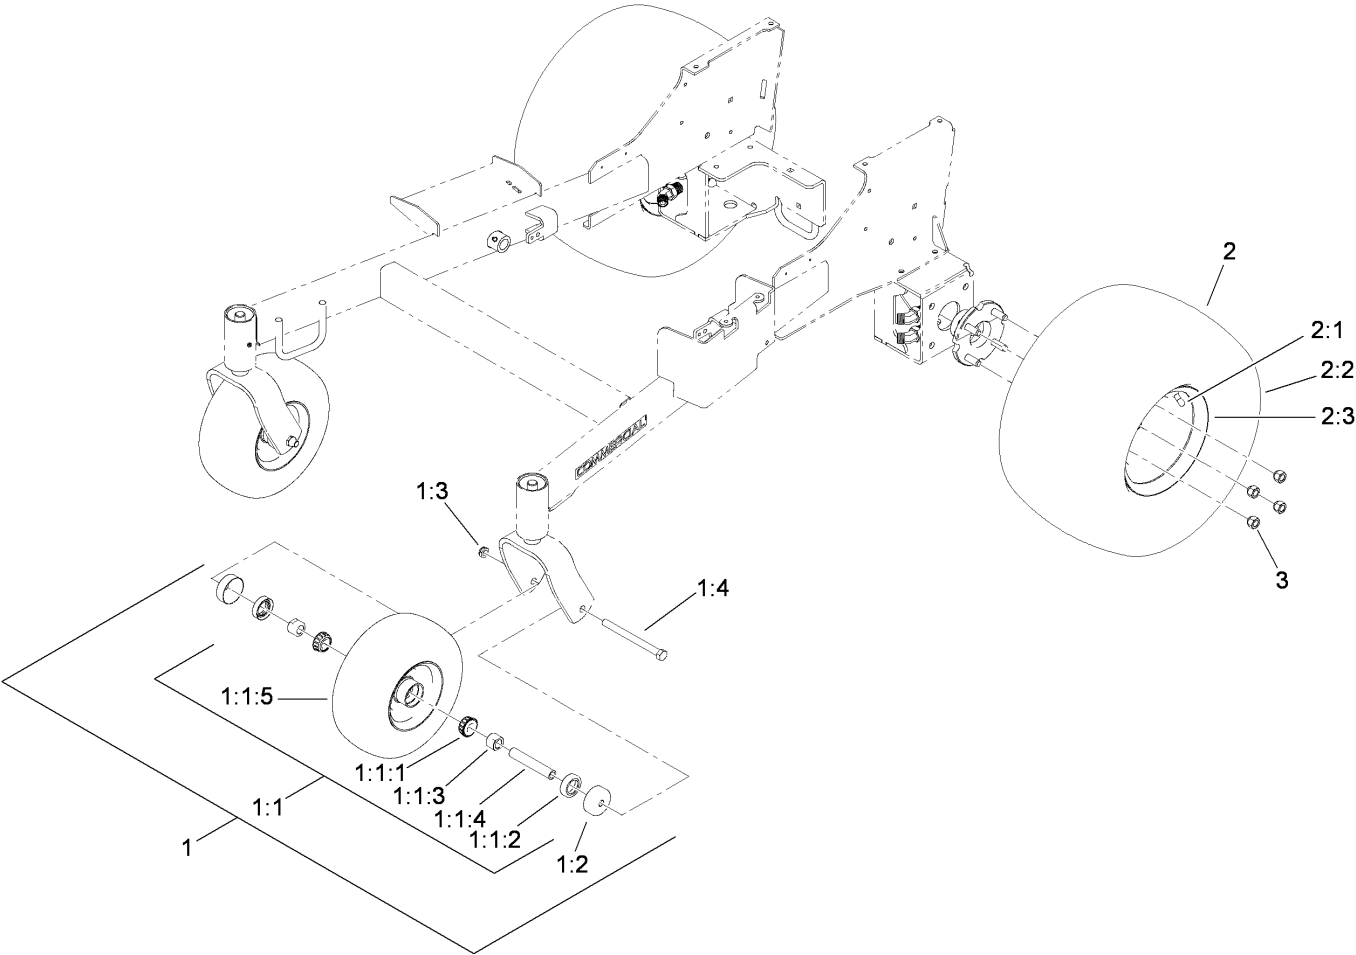


Wheel Assembly

Ref	Part No.	Qty.	Description				
1	112-3810	2	Wheel And Bearing ASM				
2		1	Wheel Bearing ASM				
1:1:1	1-633585	2	Bearing-Cone, Taper				
1:1:2	103-0063	2	Seal-Caster				
1:1:3	103-3051	2	Spacer-Nut				
1:1:4	103-3157	1	Axle-Caster				
1:1:5	110-9965	1	Wheel And Tire ASM				
1:2	103-2768	2	Guard-Seal				
1:3	3296-45	1	Nut-Lock, NI				
1:4	325-20	1	Screw-HH				
2	117-0429	2	Wheel ASM				
2:1	232-27	1	Stem-Valve				
2:2	117-0428	1	Tire				
2:3	106-8133	1	Rim-8 Inch				
3	242-50	8	Nut-Lug				

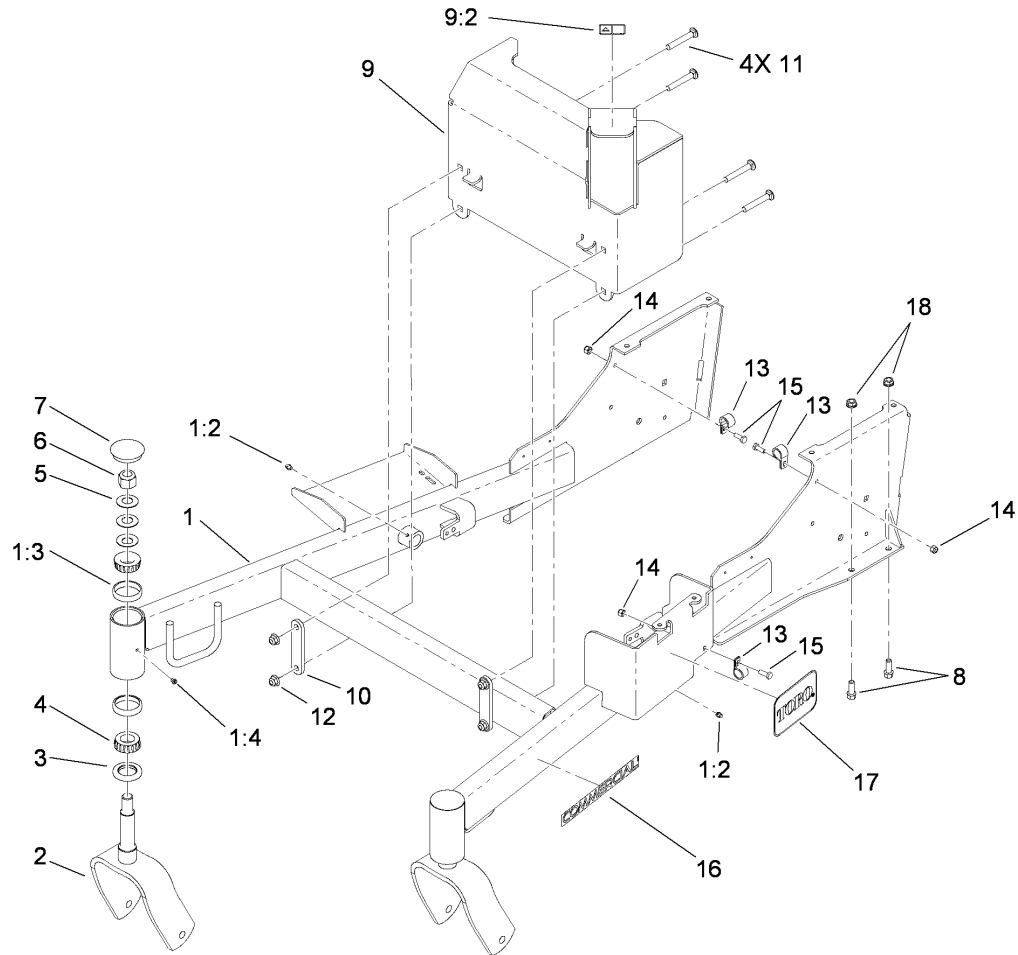


Frame and Muffler Guard Assembly

Ref	Part No.	Qty.	Description				
1	117-0520	1	Front Frame ASM				
1:2	302-5	2	Fitting-Grease				
1:3	1-543508	4	Cup-Bearing				
1:4	1-811010	2	Plug				
2	103-8618-01	2	Fork-Caster				
3	1-543511	2	Seal-Grease				
4	1-543509	4	Bearing-Roller, Tapered				
5	1-633508	6	Washer-Bellville				
6	3296-51	2	Nut-Lock, NI				
7	103-4882	2	Cap-Grease				
8	92-1624	4	Screw-HWH				
9	117-0434	1	Muffler Guard ASM				
9:2	106-5517	1	Decal-Surface, Hot				
10	117-0427-01	2	Bracket-Mounting, Guard				
11	3231-31	4	Screw-CARR				
12	104-8301	4	Nut-Flange, NI				
13	2412-87	3	Clamp-Cable				
14	3296-42	3	Nut-Lock, NI				
15	321-4	3	Screw-HH				
16	117-3591	2	Decal-Commercial				
17	68-3640	1	Decal				
18	3290-357	4	Nut-HHF, Whiz				

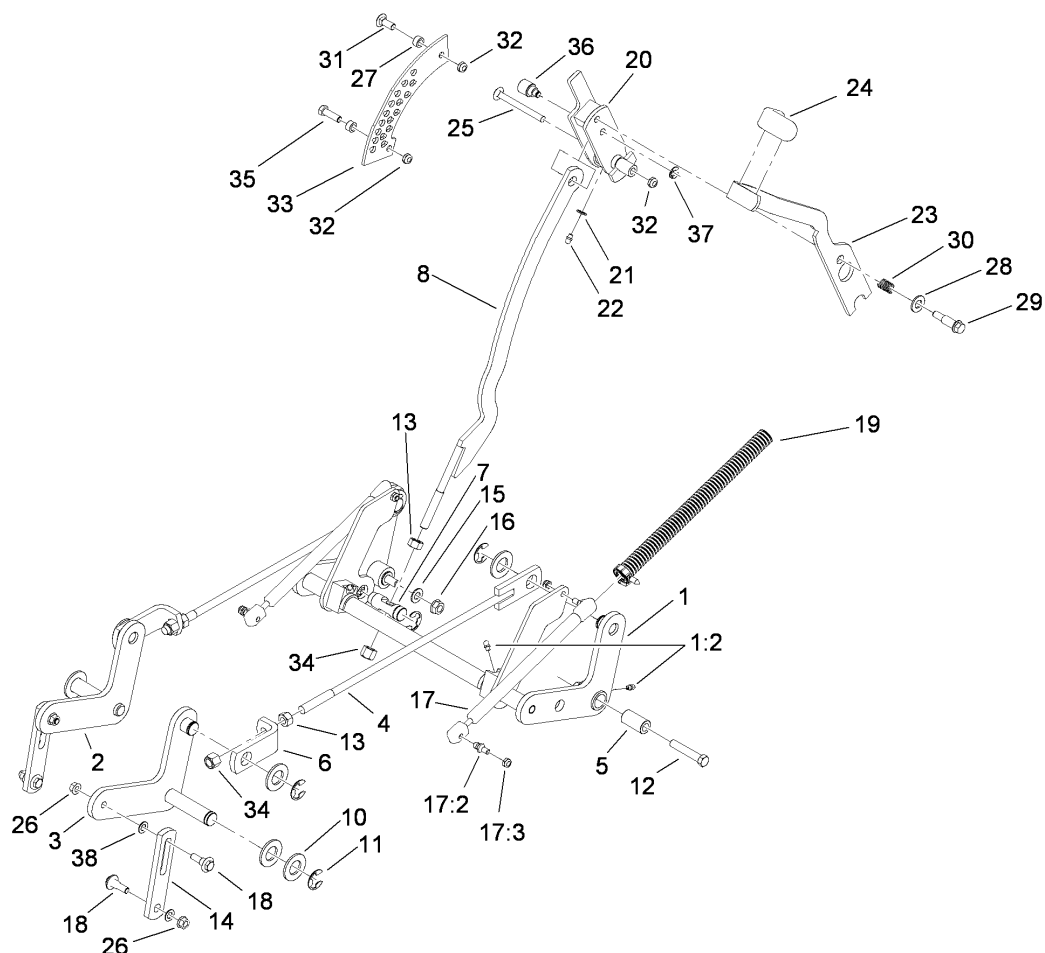

Deck Lift Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	117-0505	1	Lift ASM	23	114-5305-03	1	Lever-HOC
1:2	302-5	4	Fitting-Grease	24	1-633268	1	Grip-Lever, Brake
2	117-0489-01	1	RH Lift ASM	25	3231-24	1	Screw-CARR
3	117-0488-01	1	LH Lift ASM	26	32128-21	4	Nut-HF
4	114-5268	2	Lift Rod ASM	27	111044	2	Spacer
5	117-0498	2	Spacer	28	3256-26	1	Washer-Flat
6	117-0513	2	Bracket-Rod, Lift	29	66-0561	1	Screw-Shoulder
7	114-5274	1	Pin-HOC	30	65-9940	1	Spring
8	117-3611	1	Bar-Lift	31	3231-22	1	Screw-CARR
10	3256-29	8	Washer-Flat	32	3296-59	3	Nut-Lock, NI
11	32151-103	7	Ring-Retaining, EXT	33	114-5307	1	Bracket-HOC
12	324-10	2	Screw-HH	34	3296-23	3	Nut-Lock, NI
13	3217-9	3	Nut-HH	35	323-7	1	Screw-HH
14	117-0519	2	Link-Lift	36	117-3645	1	Hub-Pivot
15	3256-25	2	Washer-Flat	37	32151-47	1	Ring-Retaining
16	3296-48	2	Nut-Lock, NI	38	40-1940	4	Washer
17	117-0506	2	Gas Spring ASM				
17:2	88-6770	2	Stud-Ball				
17:3	3296-47	2	Nut-Lock, NI				
18	109-9840	4	Screw-Shoulder, HHF				
19	117-3575	2	Cover-Spring				
20	114-3512	1	HOC Handle ASM				
21	3256-22	1	Washer-Flat				
22	302-5	1	Fitting-Grease				

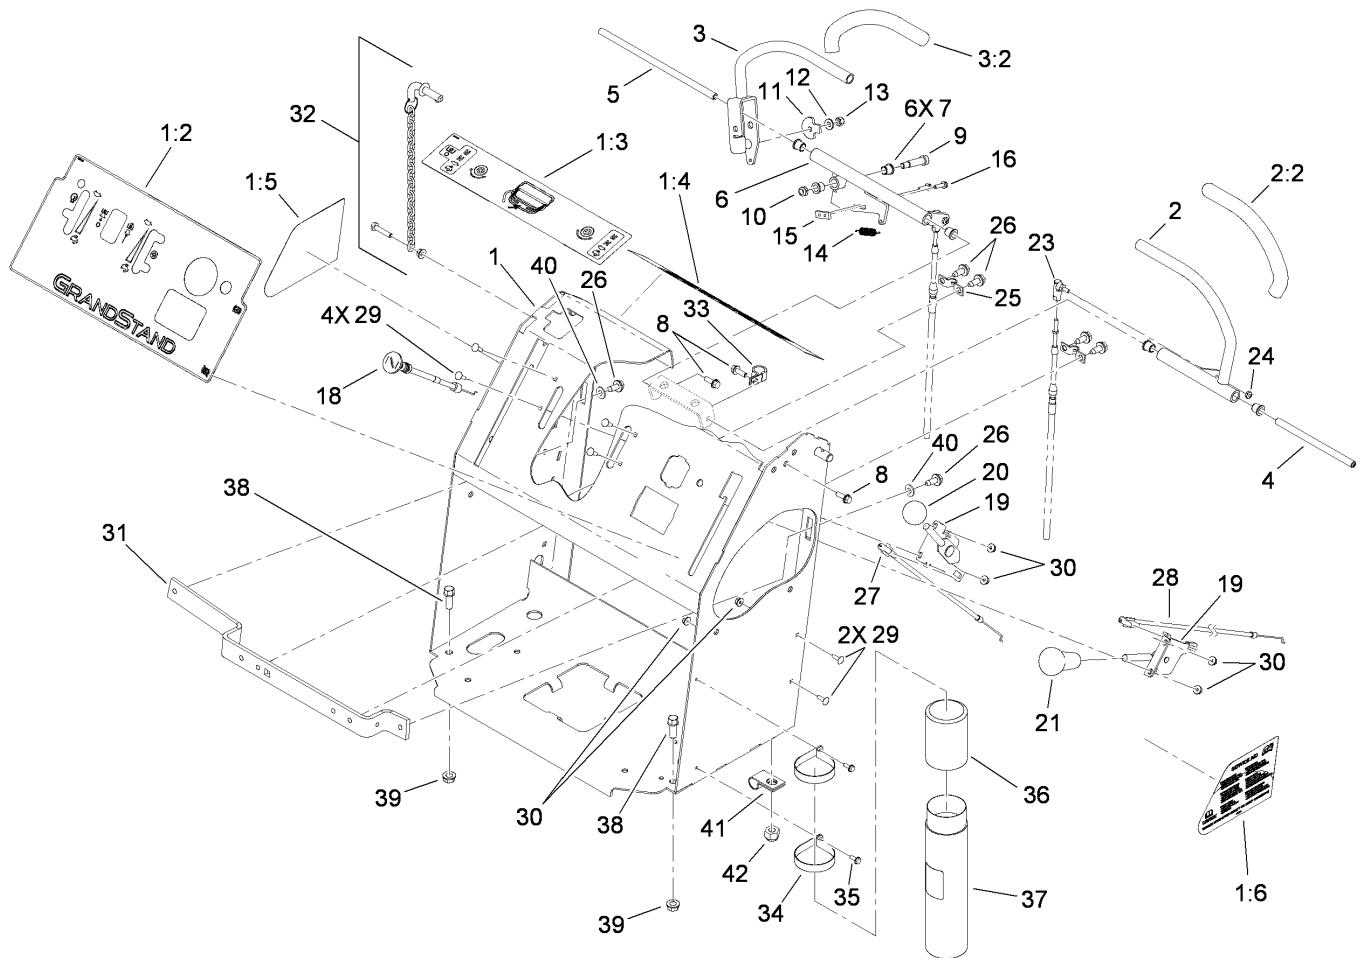

Upper Control and Tower Assembly


Ref	Part No.	Qty.	Description
1	114-1922	1	Control Tower ASM
1:2	117-0453	1	Decal-Panel, Control
1:3	117-0454	1	Decal-OpC
1:4	117-3626	1	Decal-Warning
1:5	117-0456	1	Decal-HOC
1:6	117-0485	1	Decal-Service Aid
2	114-3593	1	LH Lever ASM
2:2	114-0241	1	Grip-Lever
3	114-3594	1	RH Lever ASM
3:2	114-0241	1	Grip-Lever
4	114-0260	1	Shaft-Pivot
5	114-1904	1	Shaft-Pivot, Motion Control
6	114-5302	1	Motion Control ASM
7	103-9928	6	Bearing
8	3234-4	3	Screw-HHF
9	114-0239	1	Screw-HSH
10	3296-47	1	Nut-Lock, NI
11	114-0268	1	Cam-Lever, Handle Stop
12	3256-22	1	Washer-Flat
13	3296-42	1	Nut-Lock, NI
14	114-0249	1	Spring-Extension
15	1-633181	1	Plate-Tapped
16	32105-13	2	Screw-HWH
18	106-9962	1	Control-Choke, Push / Pull

Ref	Part No.	Qty.	Description
19	110-5547	2	Control Lever ASM
20	1-603175	1	Knob-Ball
21	99-7981	1	Knob-Grip, Soft
23	2411-38	2	Joint-Ball
24	3296-27	2	Nut-Lock, NI
25	93-2279	2	Clamp-Cable
26	32144-70	6	Screw-HWHTF
27	114-1966	1	Cable-Control
28	114-1950	1	Cable-Speed
29	1-807533	6	Bolt-CARR
30	3290-148	6	Nut-HF
31	114-1921-01	1	Bar-Cable
32	114-0409	1	HOC Pin ASM
33	2412-87	1	Clamp-Cable
34	2412-120	2	R-Clamp
35	32144-1	2	Screw-Taptite
36	104-7048	1	Cap-Housing
37	104-7050	1	Tube-Manual
38	92-1624	4	Screw-HWH
39	3290-357	3	Nut-HHF, Whiz
40	3256-23	2	Washer-Flat
41	2412-138	1	R-Clamp
42	3296-39	1	Nut-Lock, NI

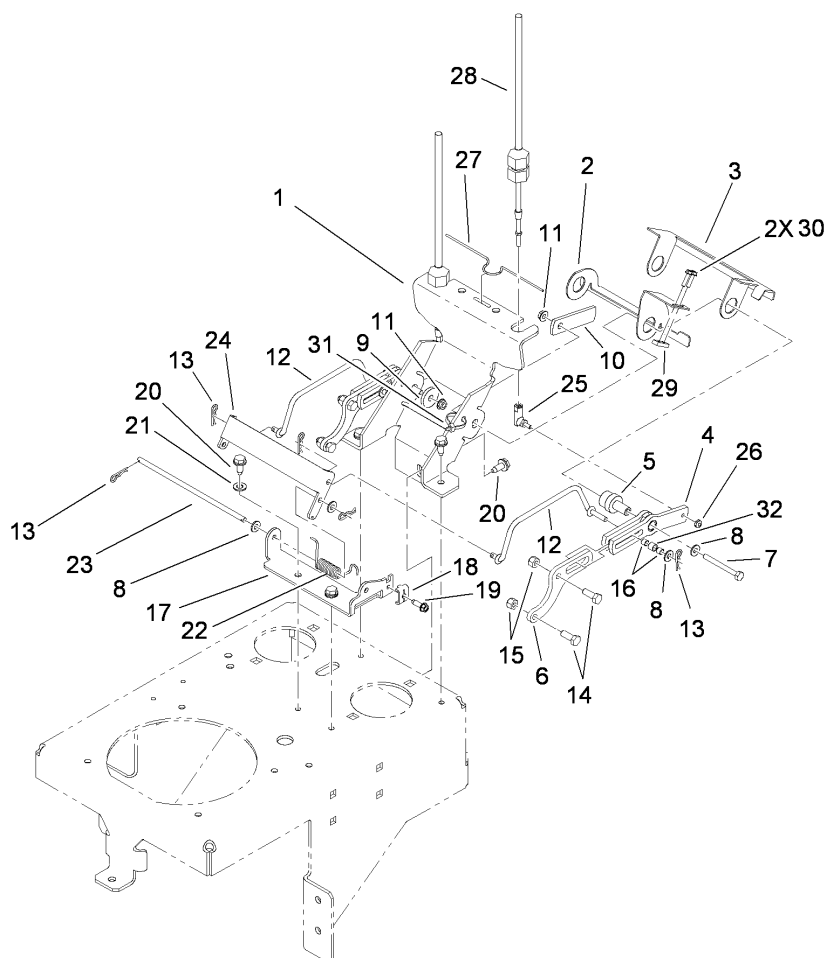

Lower Control Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	114-5304-01	1	Mount-Linkage, Drive	25	2411-38	2	Joint-Ball
2	114-1993	1	Lever-Switch	26	3296-27	2	Nut-Lock, NI
3	114-1999	1	Lever-Switch	27	114-0433	1	Clip-Spring
4	114-1956	2	Control Fork ASM	28	117-0474	2	Cable-Control, Traction
5	114-1955	2	Hub-Shoulder	29	1-633181	1	Plate-Tapped
6	114-3547	2	Arm-Control	30	32105-13	2	Screw-HWH
7	321-15	2	Screw-HH	31	3290-378	1	Tie-Cable
8	3256-22	8	Washer-Flat	32	114-3576	2	Bushing-Guide, Drill
9	65-8270	1	Washer				
10	114-5155-03	1	Arm-Switch, Stop				
11	32128-14	2	Nut-Hex, Flange				
12	114-5295	2	Rod-Link, Shifter				
13	3290-307	6	Pin-Hair				
14	322-4	4	Screw-HH				
15	3296-29	4	Nut-Lock, NI				
16	114-3534	4	Roller				
17	114-1912-03	1	Bracket-Shifter				
18	106-7297	1	Clamp-Cable				
19	49-2040	1	Screw-HWHTF				
20	32144-70	5	Screw-HWHTF				
21	3256-23	2	Washer-Flat				
22	106-2584	1	Spring-Torsion				
23	114-1978	1	Pin-Hinge				
24	114-5347	1	Arm-Dual, Shifter				

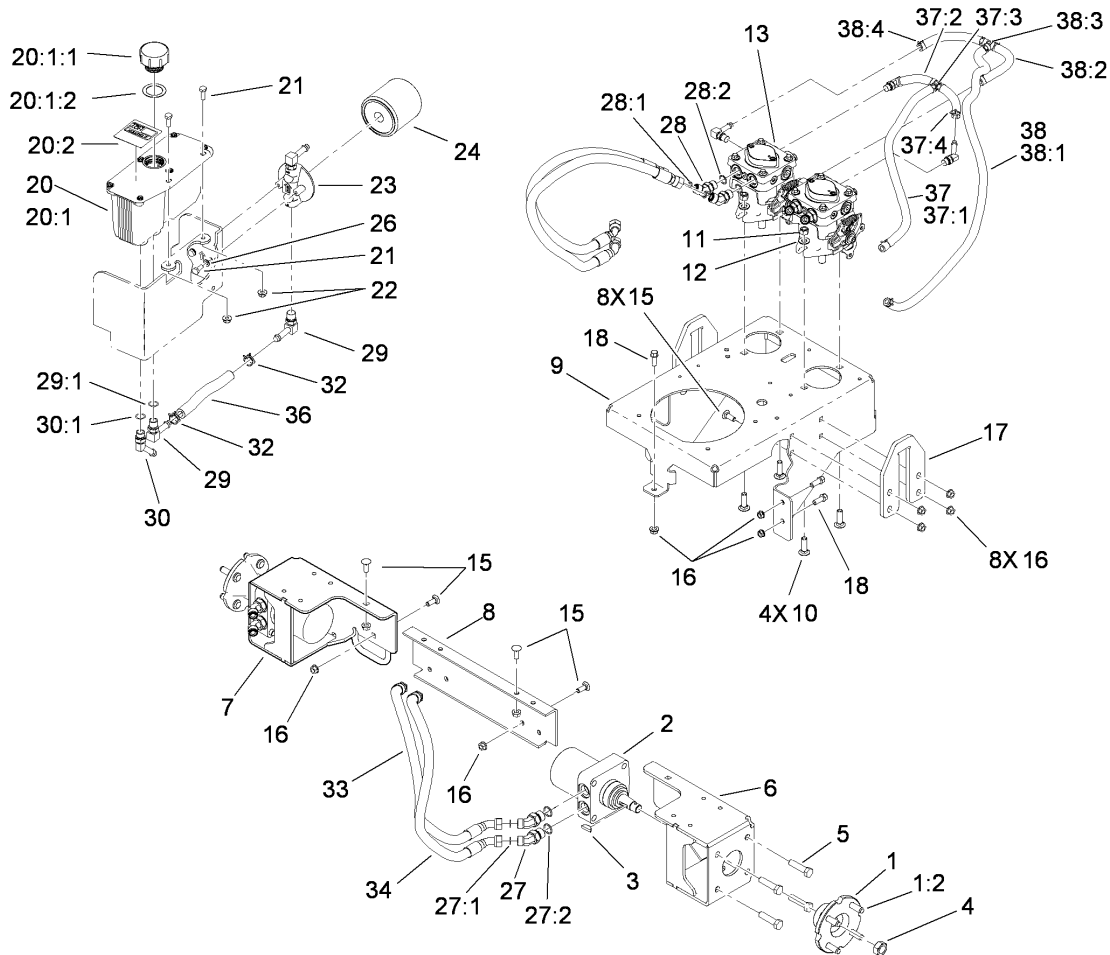

Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	105-0800	2	Wheel Hub / Stud ASM
1:2	10-6830	4	Stud-Type, Drive
2	114-0549	2	Motor-Wheel
3	3257-8	2	Key-Woodruff
4	85-7310	2	Nut-Motor, Wheel
5	325-8	8	Screw-HH
6	117-3572-01	1	LH Motor Mount ASM
7	117-3571-01	1	RH Motor Mount ASM
8	114-5168-01	1	Mount-Motor, Center
9	114-5166-01	1	Base-Engine
10	3232-3	4	Screw-CARR
11	3296-48	4	Nut-Lock, NI
12	3256-25	4	Washer-Flat
13	117-3597	2	Pump-Hydraulic
15	3231-22	12	Screw-CARR
16	3290-357	17	Nut-HHF, Whiz
17	114-5345-01	2	Plate-Lift
18	92-1624	5	Screw-HWH
20	107-8433	1	HYD Reservoir ASM
20:1		1	Reservoir-HYD
20:1:1	103-1948	1	Cap-Reservoir, HYD
20:1:2	103-1949	1	Gasket-Cap
20:2	115-4212	1	Decal-Warning
21	321-4	4	Screw-HH

Ref	Part No.	Qty.	Description
22	32128-33	2	Nut-HF
23	104-7836	1	Head-Filter
24	1-633750	1	Filter-Oil, HYD
26	3256-22	2	Washer-Flat
27	340-89	4	Fitting-HYD, 45 DEG
27:1	237-30	1	O-Ring
27:2	237-80	1	O-Ring
28	340-101	4	Fitting-HYD, 45 DEG
28:1	237-30	1	O-Ring
28:2	237-79	1	O-Ring
29	100-4887	5	Fitting-Barb
29:1	237-42	1	O-Ring
30	103-1807	3	Elbow-45 DEG
30:1	237-42	1	O-Ring
32	103-1988	2	Clamp-Hose
33	117-0442	2	HYD Hose ASM
34	117-0449	2	HYD Hose ASM
36	117-0459	1	Hose-Hydraulic
37	117-3569	1	Filter Hose ASM
37:1	117-0460	1	Hose-Hydraulic
37:2	117-0458	2	Hose-Hydraulic
37:3	1-603721	2	Fitting-Tee, Hose
37:4	103-1988	6	Clamp-Hose
38	117-3570	1	Tank Hose ASM

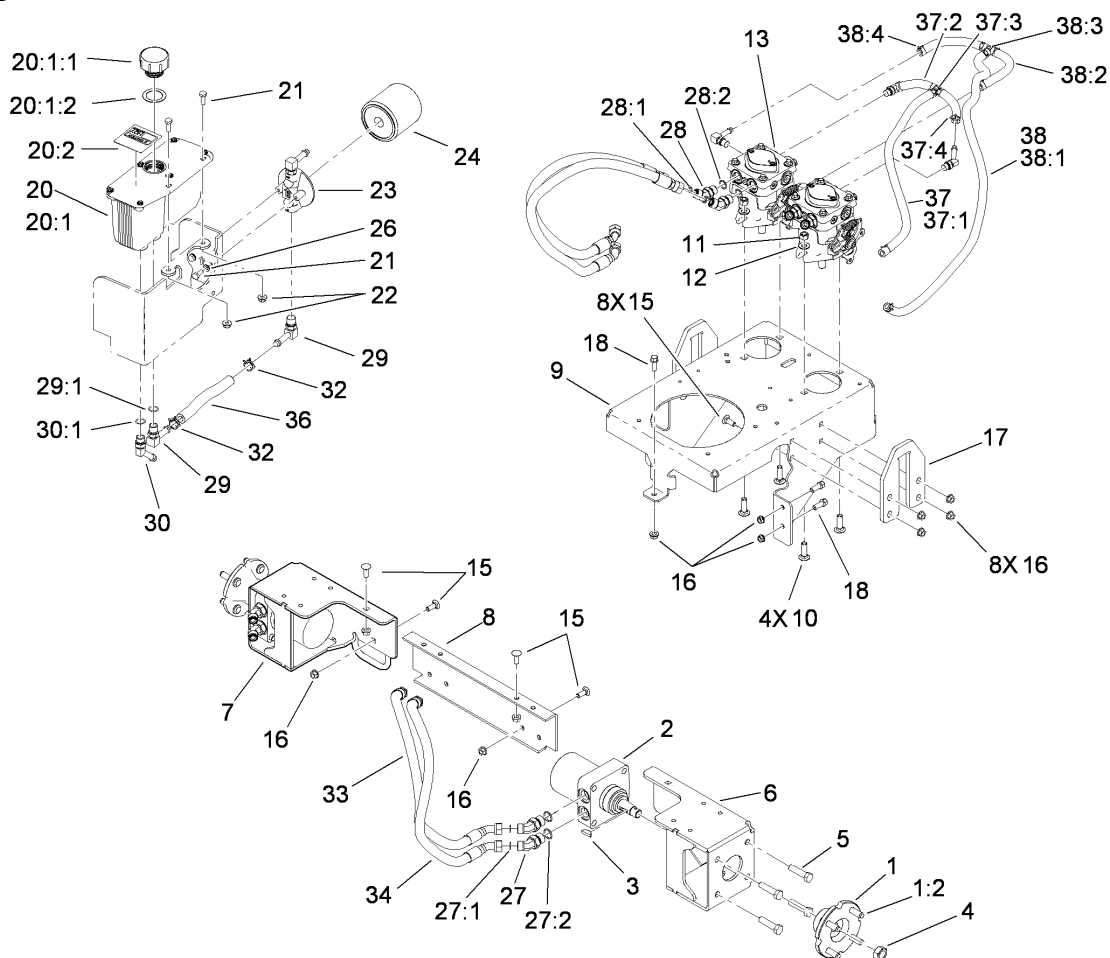


Hydraulic Assembly (continued)

Ref	Part No.	Qty.	Description
38:1	117-0461	1	Hose-Hydraulic
38:2	117-0459	2	Hose-Hydraulic
38:3	1-603721	2	Fitting-Tee, Hose
38:4	103-1988	6	Clamp-Hose

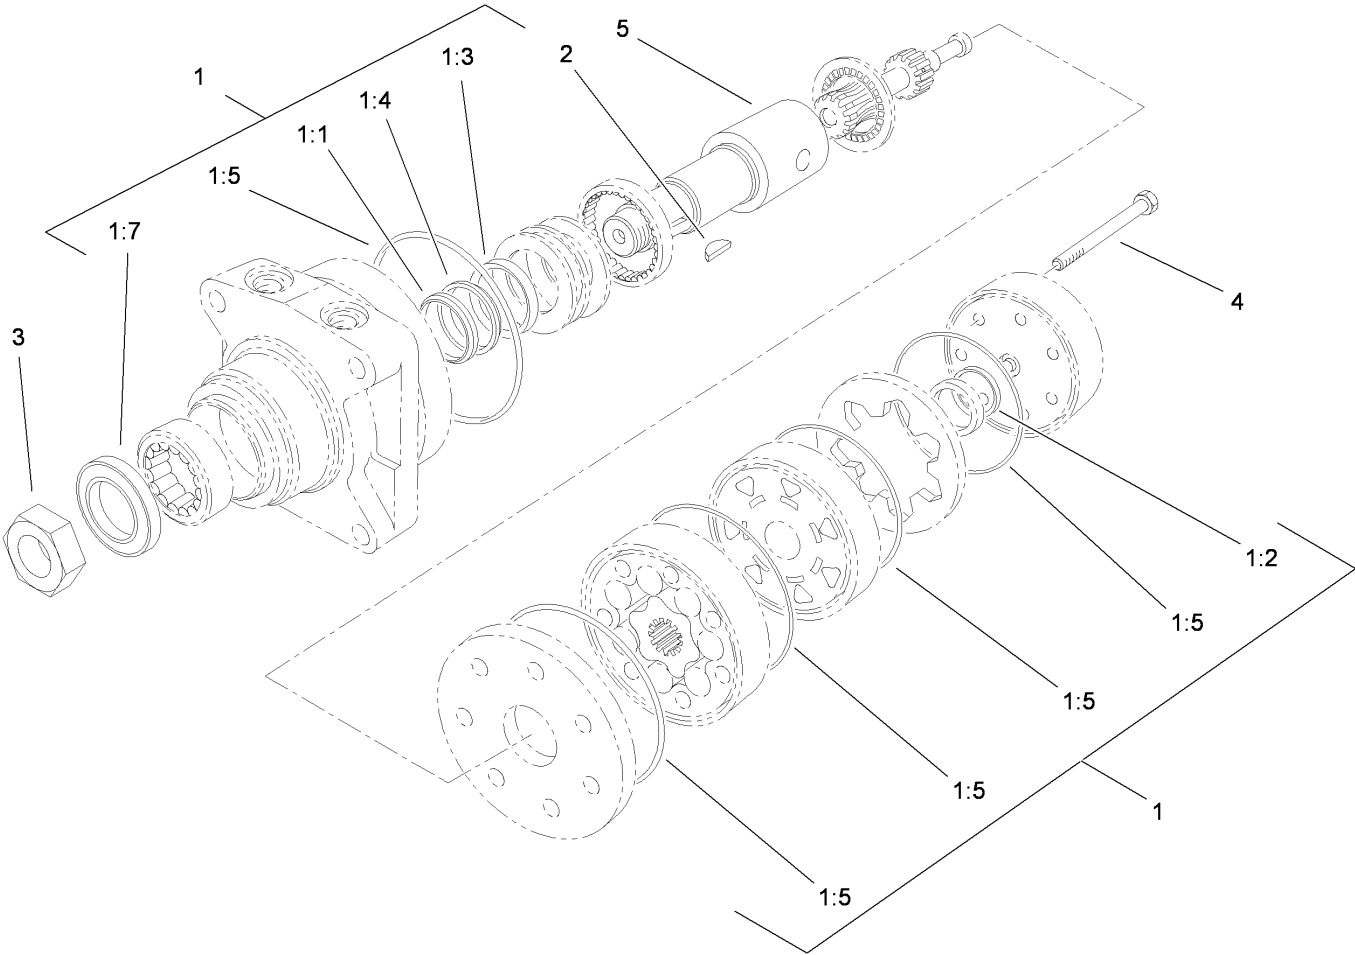

Hydraulic Motor Assembly No. 114-0549


Ref	Part No.	Qty.	Description				
1	1-000119	1	Seal Kit				
21:1		1	Ring-Back Up				
21:2		1	Seal-Commutator				
21:3		1	Seal-Shaft (Viton)				
21:4		1	Washer-Back Up, Steel				
21:5		5	Ring-Seal (Viton)				
21:7		1	Seal-Dirt And Water				
2	3257-8	1	Key-Woodruff				
3	85-7310	1	Nut-Motor, Wheel				
4	106-5549	6	Bolt-Special				
5	106-8764	1	Shaft-Coupling				

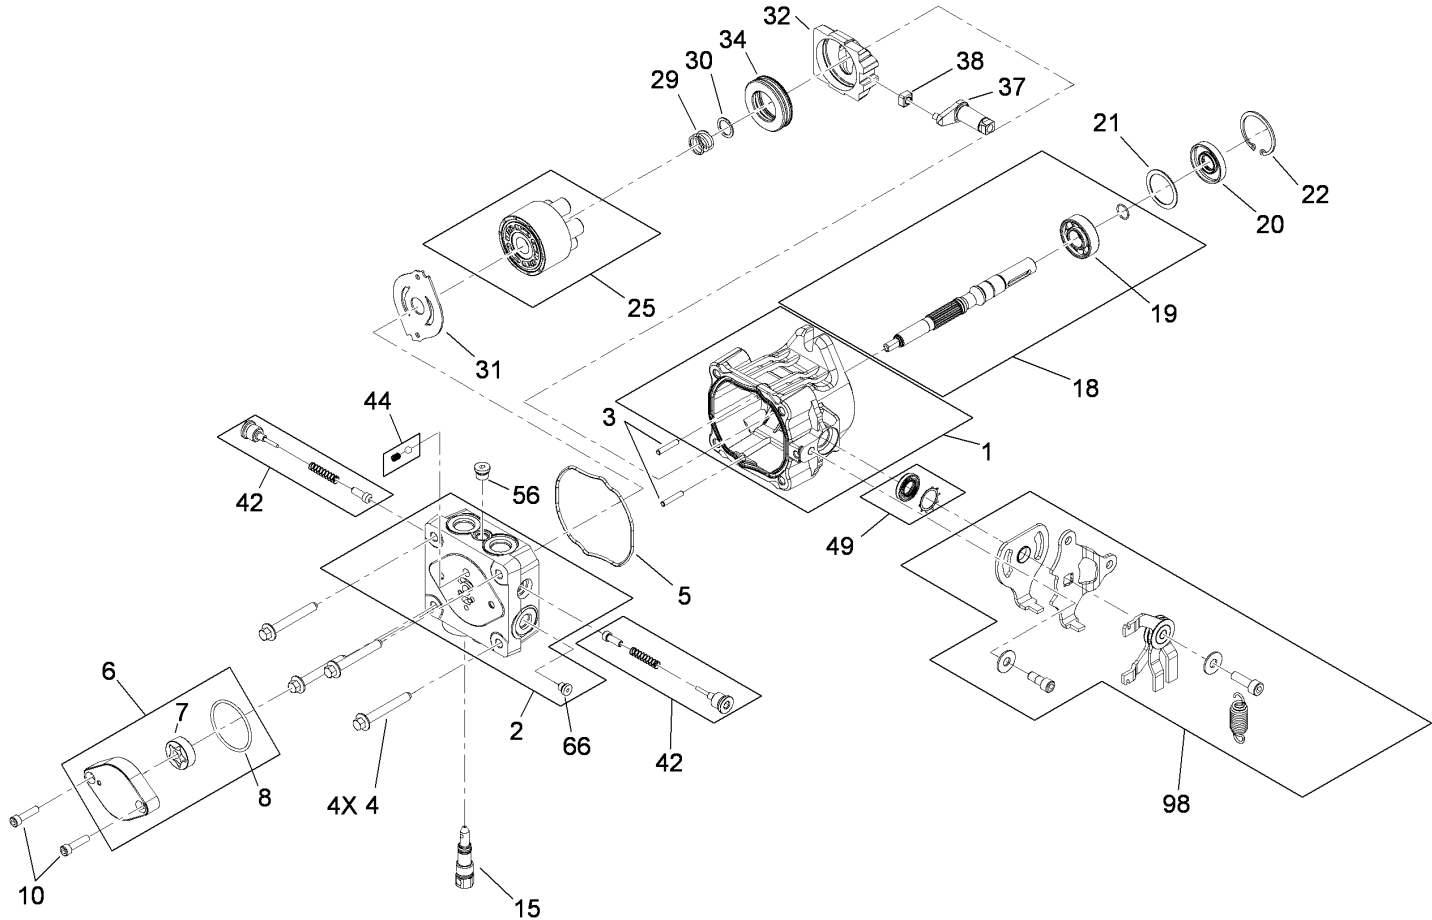

Hydraulic Pump Assembly No. 117-3597


Ref	Part No.	Qty.	Description
1	115-4464	1	Housing Kit
2	106-8752	1	End Cap Kit (W/Poppets)
3	106-8753	2	Pin-Headless, Straight
4	106-8754	4	Bolt-HF
5	106-8755	1	O-Ring
6	106-8756	1	Charge Pump Kit
7	104-2122	1	Gerotor ASM
8	106-8757	1	O-Ring
10	104-2111	2	Capscrew
15	106-8759	1	Bypass Valve Kit
18	103-2664	1	Input Shaft Kit
19	104-5311	1	Bearing-Ball
20	104-5310	1	Seal-Lip
21	104-5308	1	Spacer
22	104-5309	1	Ring-Retaining
25	103-2666	1	Cylinder Block Kit
29	94-1936	1	Spring-Block
30	94-1937	1	Washer-Thrust, Block
31	105-6185	1	Plate-Valve
32	94-1907	1	Swashplate-Variable
34	94-6922	1	Bearing-Thrust
37	115-4458	1	Arm-Trunnion, Tapered Square
38	94-1910	1	Guide-Slot
42	98-3252	2	Valve-Check (W/Poppet)

Ref	Part No.	Qty.	Description
44	106-8760	1	Charge Relief Valve Kit
49	114-8155	1	Trunnion Seal Kit
56	106-8762	1	Plug-HSH
66	106-8763	1	Plug-HSH
98	117-3629	1	Kit-Return
99	105-6184	1	Seal Overhaul Kit

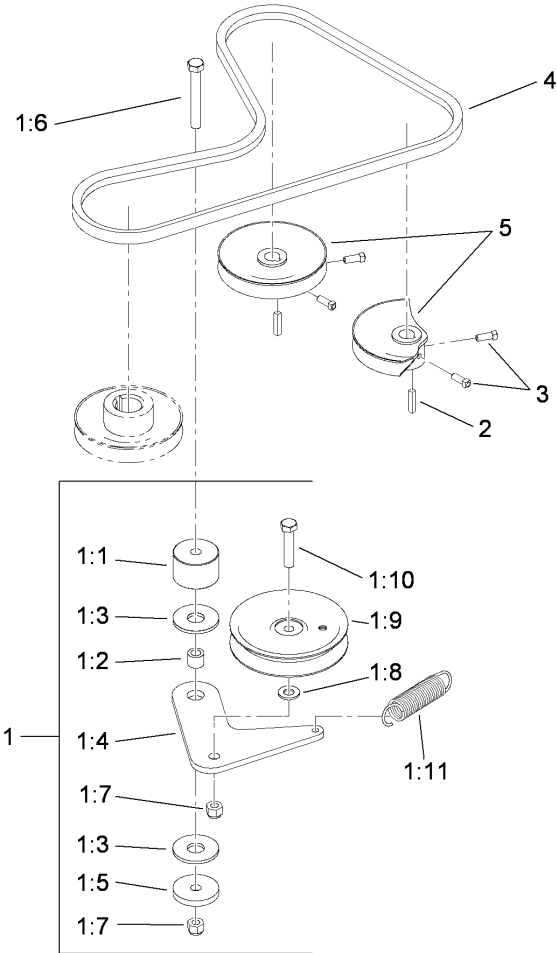


Hydraulic Belt Drive Assembly

Ref	Part No.	Qty.	Description				
1		1	Pump Idler Assembly				
1:1	117-3568	1	Hub-Idler				
1:2	1-413088	1	Bushing-Lever, Lift				
1:3	114-0463	2	Washer-Friction, Composite				
1:4	117-3622	1	Plate-Idler				
1:5	110-9981	1	Washer-Plain				
1:6	323-13	1	Screw-HH				
1:7	3296-39	2	Nut-Lock, NI				
1:8	3256-24	1	Washer-Flat				
1:9	93-1622	1	Pulley-Idler				
1:10	323-9	1	Screw-HH				
1:11	108-4056	1	Spring-Extension				
2	1-807272	2	Key				
3	3241-5	4	Screw-Set				
4	114567	1	Belt-V Lower PTO				
5	105-5648	2	Pulley-Pump				

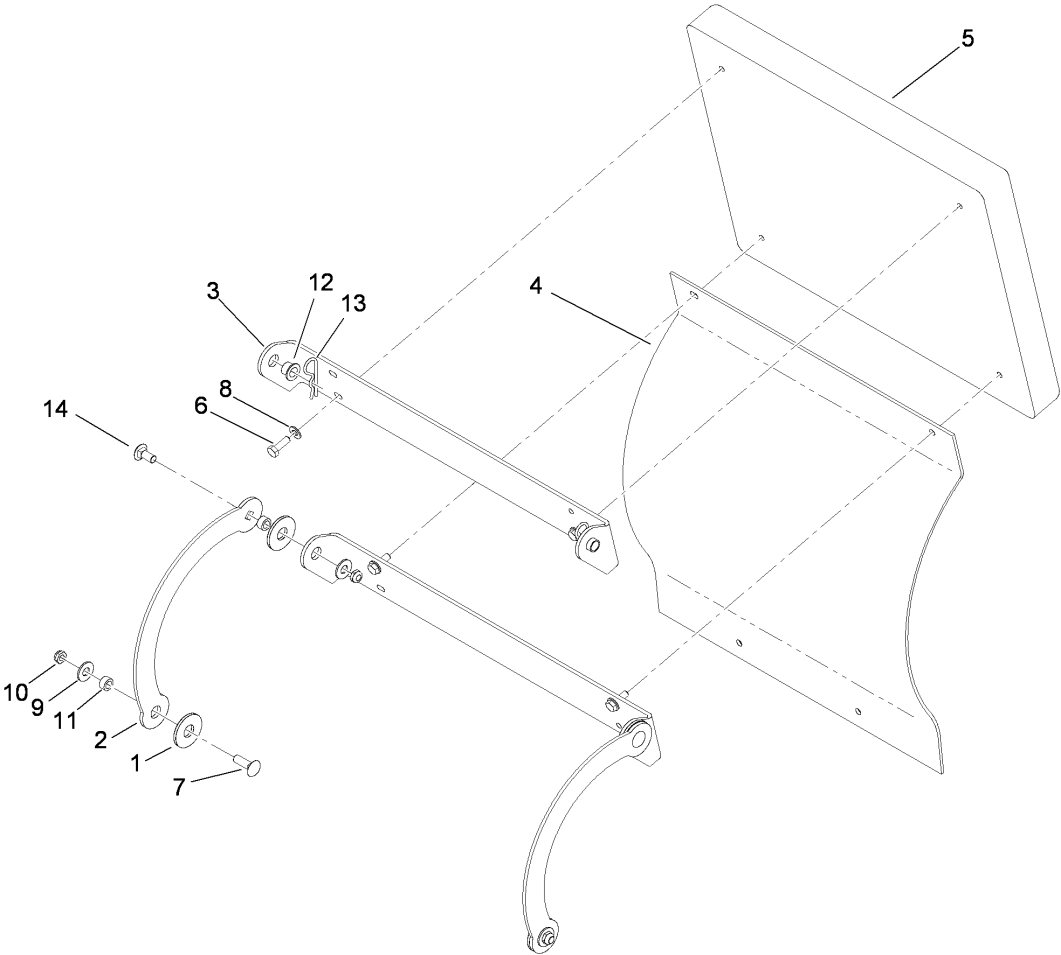


Cushion Assembly No. 114-1917

Ref	Part No.	Qty.	Description				
1	114-0463	4	Washer-Friction, Composite				
2	114-1915-01	2	Link-Pad				
3	114-1918-03	2	Hinge-Pad				
4	114-1919	1	Shield-Rear				
5	114-5314	1	Cushion-Pad				
6	322-5	4	Screw-HH				
7	3231-2	2	Screw-CARR				
8	3256-23	4	Washer-Flat				
9	3256-4	8	Washer-Flat				
10	3296-59	4	Nut-Lock, NI				
11	111044	4	Spacer				
12	93-2891	2	Bushing-Plastic				
13	3290-355	2	Pin-Hair				
14	3231-27	2	Screw-CARR				

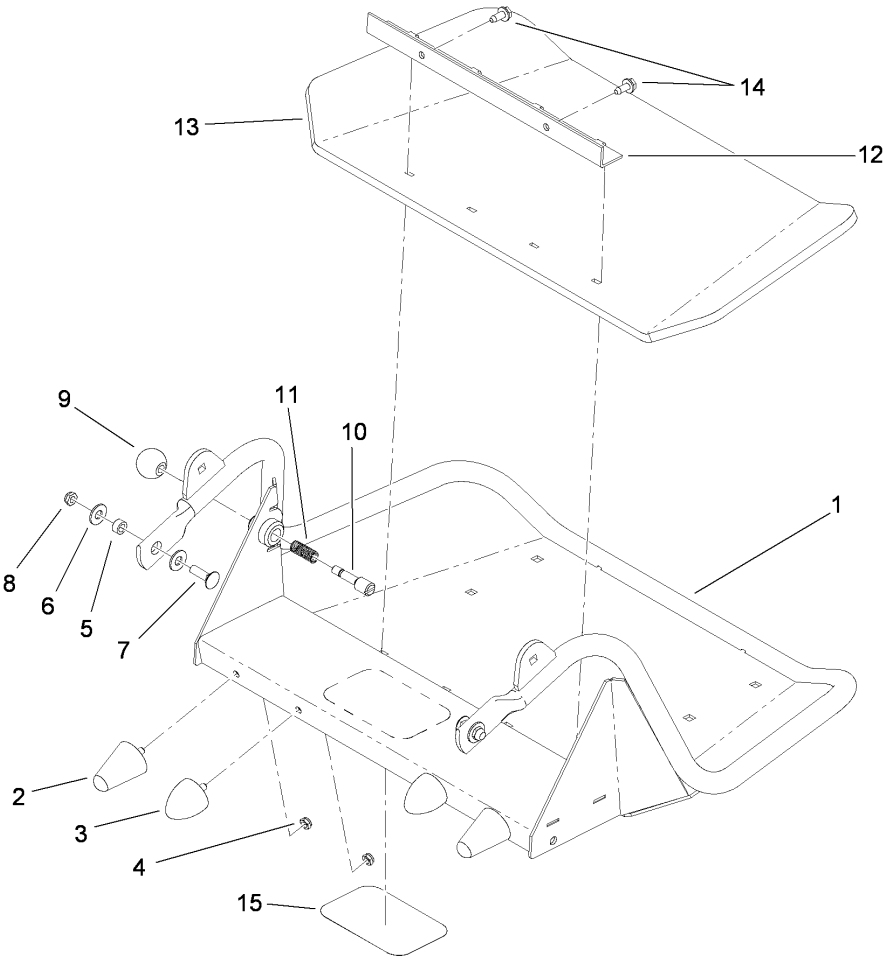


Platform Assembly No. 117-0431

Ref	Part No.	Qty.	Description				
1	114-1998-01	1	Platform ASM				
2	114-1925	2	Bumper-Rubber				
3	114-1926	2	Bumper-Rubber				
4	3296-47	4	Nut-Lock, NI				
5	111044	2	Spacer				
6	3256-4	4	Washer-Flat				
7	3231-25	2	Screw-CARR				
8	3296-59	2	Nut-Lock, NI				
9	1-603175	1	Knob-Ball				
10	114-5288	1	Pin-Latch				
11	114-5348	1	Spring				
12	114-1920-03	1	Clamp-Shield				
13	114-5349	1	Mat-Foot				
14	32144-70	2	Screw-HWHTF				
15	67-1300	1	Decal				

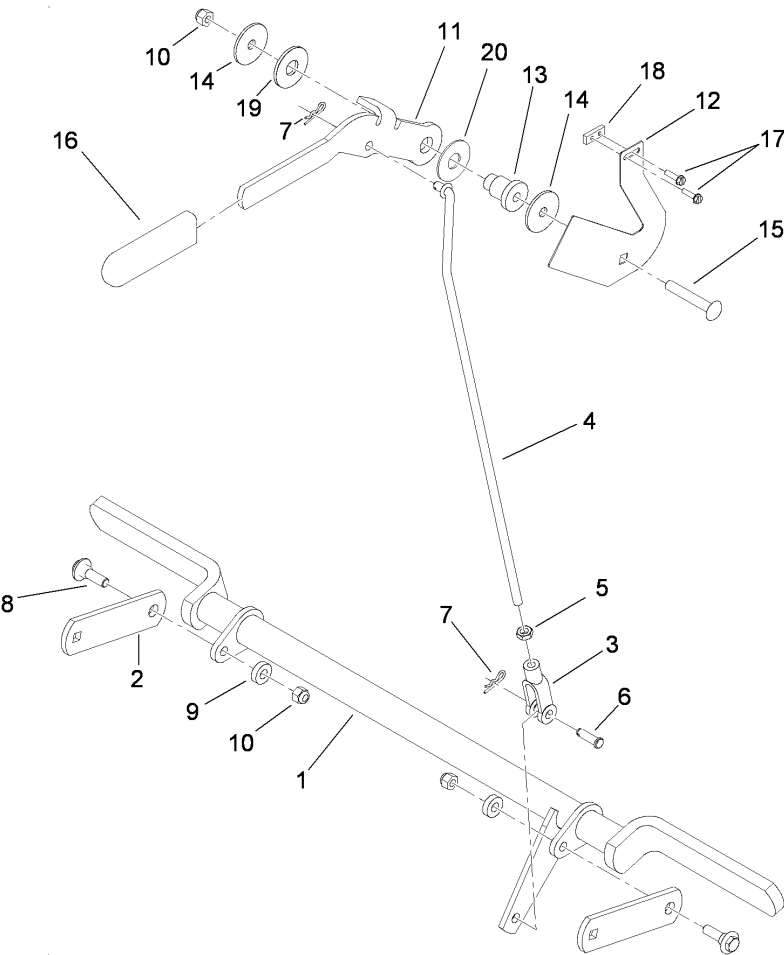

Parking Brake Assembly


Ref	Part No.	Qty.	Description				
1	114-5187-03	1	Brake ASM				
2	114-5186-01	2	Support-Brake				
3	1-633131	1	Yoke-Linkage, Brake				
4	114-5196	1	Rod-Brake				
5	3220-3	1	Nut-HJ				
6	283-2	1	Pin-Clevis				
7	3290-307	2	Pin-Hair				
8	614672	2	Bolt-Shoulder				
9	5-0652	2	Spacer				
10	3296-39	3	Nut-Lock, NI				
11	114-5258-03	1	Lever-Brake				
12	117-0452-03	1	Plate-Switch, Brake				
13	106-3214	1	Mount-Pulley				
14	63-7400	2	Washer-Rebound				
15	3231-44	1	Screw-CARR				
16	1-633268	1	Grip-Lever, Brake				
17	32105-13	2	Screw-HWH				
18	1-633181	1	Plate-Tapped				
19	114-0463	1	Washer-Friction, Composite				
20	3256-7	1	Washer-Flat				

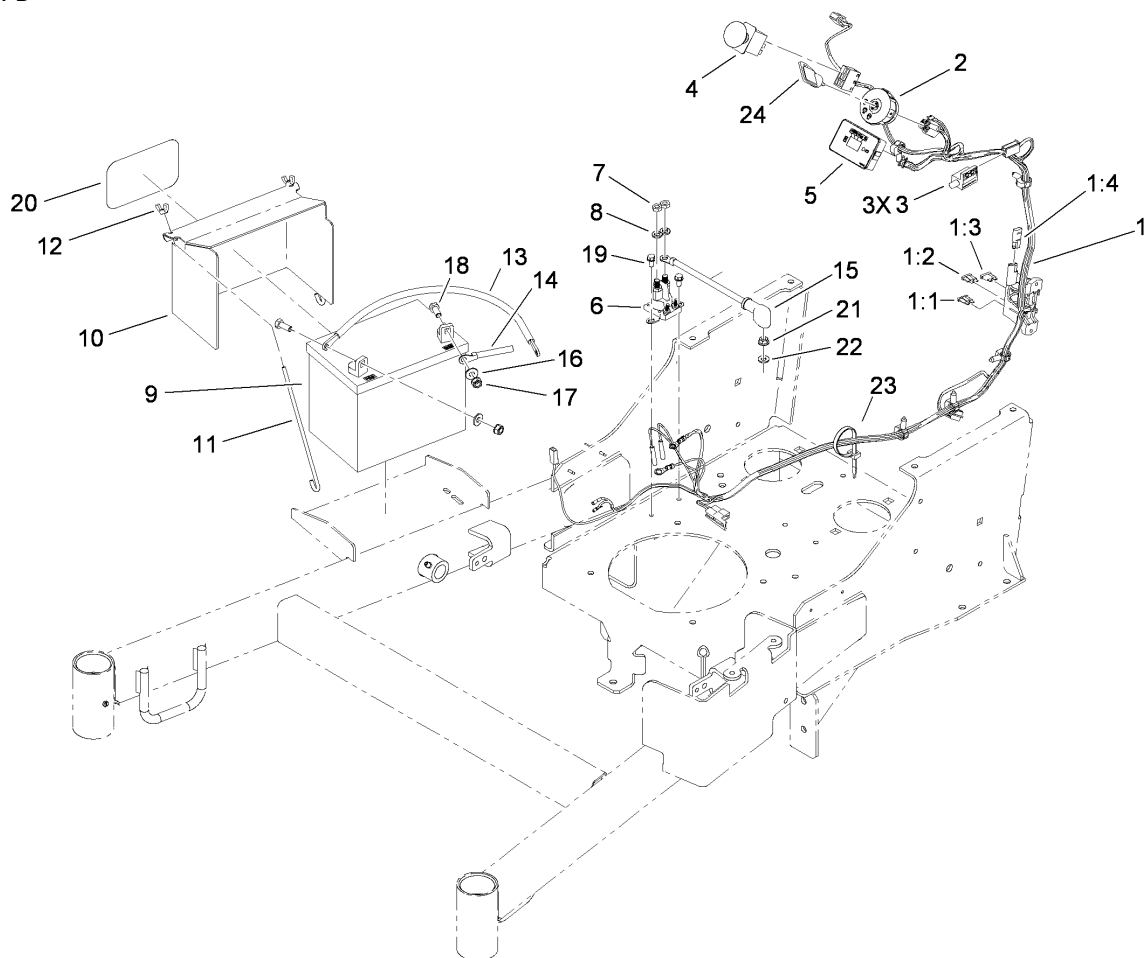

Electrical Assembly


Ref	Part No.	Qty.	Description
1	114-3536	1	Harness-Wire
1:1	109103	1	Fuse-30 Amp
1:2	109102	1	Fuse-25 Amp
1:3	218-578	1	Fuse-10 Amp
1:4	116-0053	1	Cap-Plug
2	110-6764	1	Switch-Ignition
3	1-513152	3	Switch-Closed, Normally
4	114-0279	1	Switch-PTO
5	115-4180	1	Module-Meter, Hour
6	117-1197	1	Solenoid
7	3220-2	2	Nut-Jam
8	3253-4	2	Washer-Lock
9	104-2491	1	Battery
10	117-0543-01	1	Cover-Battery
11	1-633651	2	Bolt-Holddown
12	1-543792	2	Wingnut
13	114-9404	1	Cable-Battery, Positive
14	105-0836	1	Cable-Battery, Black
15	106-8268	1	Cable-Battery, Red
16	3256-23	2	Washer-Flat
17	109-5715	2	Nut-HHF, Smooth
18	322-3	2	Screw-HH
19	32144-4	2	Screw-HWH
20	68-3640	1	Decal

Ref	Part No.	Qty.	Description
21	3256-22	1	Washer-Flat
22	32128-33	1	Nut-HF
23	3290-378	1	Tie-Cable
24	63-8360	1	Key-Ignition

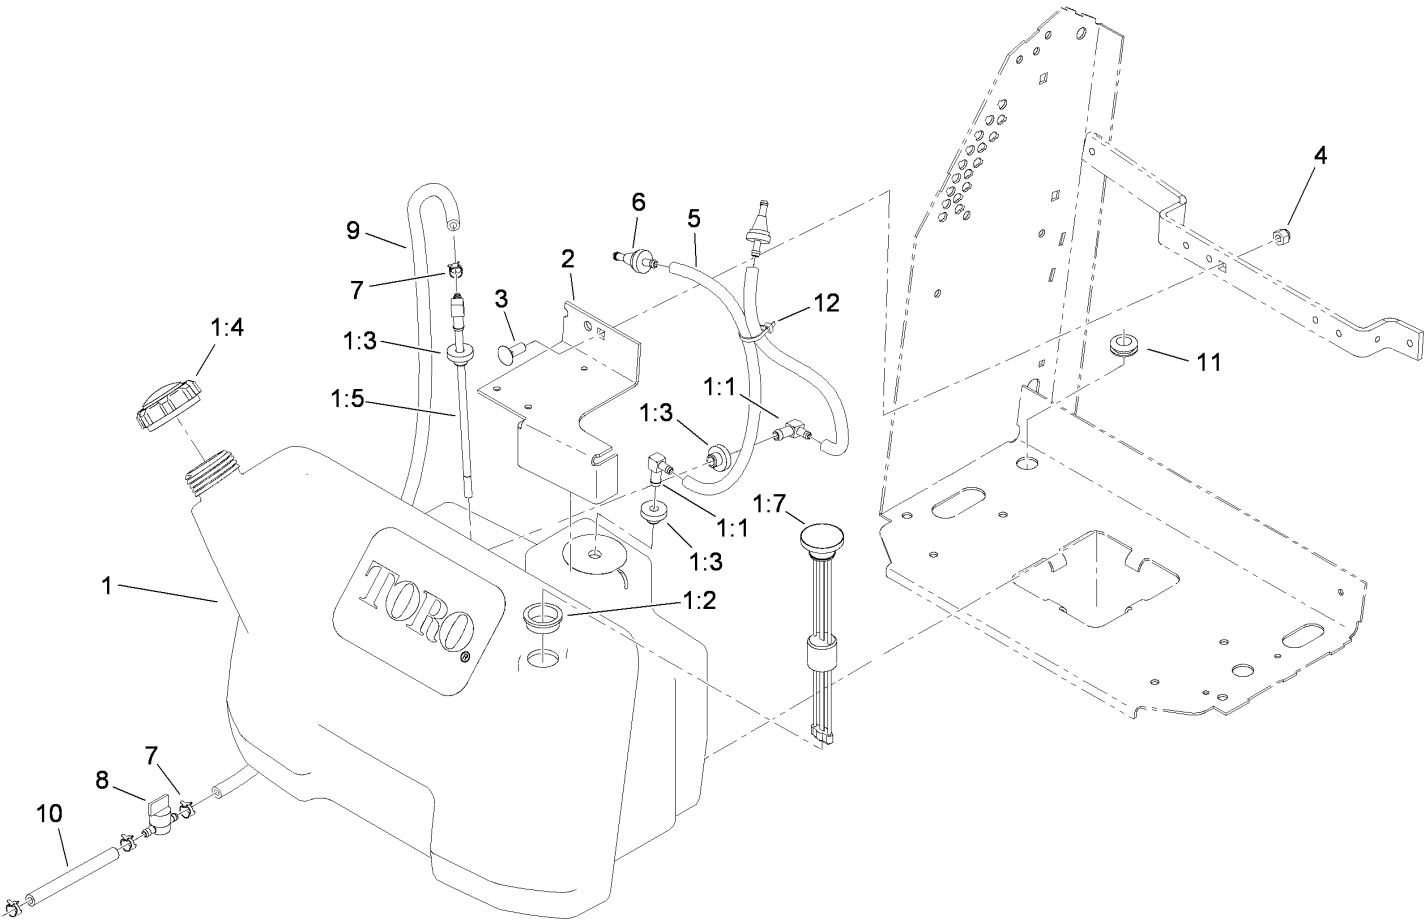

Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	117-9672	1	Tank ASM				
1:1	1-643172	2	Elbow-90 DEG				
1:2	95-8972	1	Grommet				
1:3	46-6560	3	Bushing				
1:4	109-9619	1	Cap-Fuel				
1:5	114-1928	1	Fitting-Fuel, Screen Tube				
1:7	99-7262	1	Gauge-Fuel				
2	114-1952-01	1	Support-Tank				
3	3231-2	1	Screw-CARR				
4	3296-39	1	Nut-Lock, NI				
5	109-0294	2	Hose-Fuel				
6	71-9280	2	Filter-Fuel				
7	2412-98	4	Clamp				
8	1-603770	1	Valve-Fuel				
9	109-3491	1	Hose-Fuel				
10	109-0678	1	Hose-Fuel				
11	112-7069	1	Grommet				
12	3290-378	1	Tie-Cable				

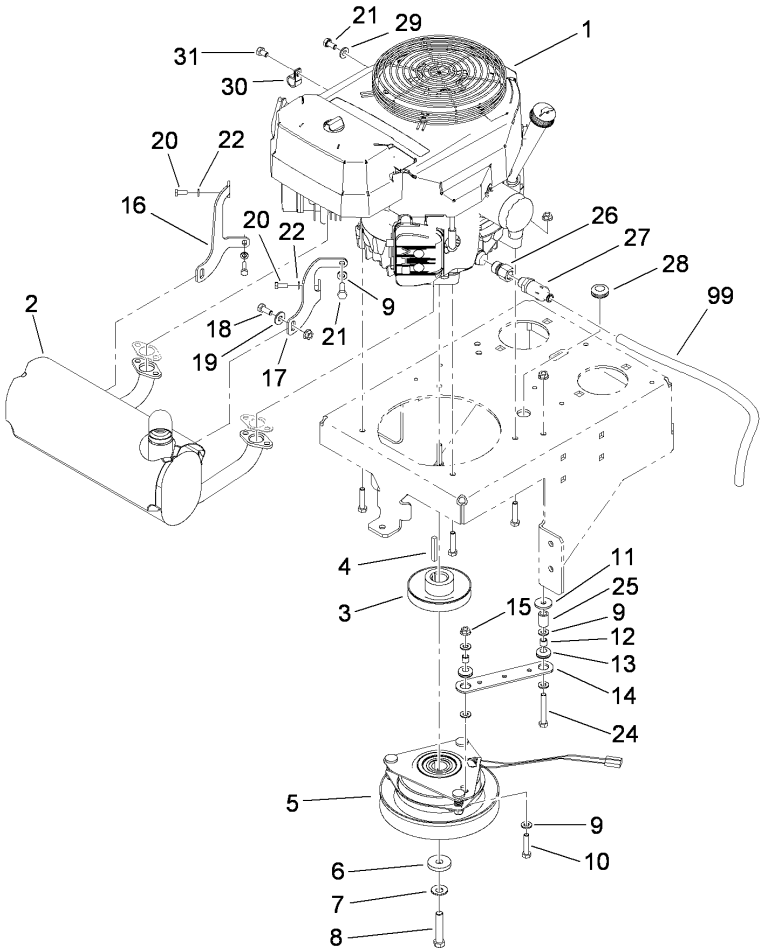

Engine Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	114-3590	1	Engine-Kawasaki, FH580V-Fs30	26	103-1966	1	Adapter
2	117-0430	1	Muffler-Engine	27	92-6877	1	Valve-Drain, Oil
3	112-7067	1	Pulley	28	112-7069	1	Grommet
4	608006	1	Key-Square	29	33094-00	1	Washer-Plain
5	105-2635	1	Clutch / Brake	30	2412-87	1	Clamp-Cable
6	107-4136	1	Washer	31	46-8090	1	Screw-Plastite
7	1-603610	1	Washer-Spring	99	103-1964	1	Hose-Drain, Oil
8	3212-9	1	Screw-HH				
9	3256-23	6	Washer-Flat				
10	322-7	5	Screw-HH				
11	1-613235	1	Washer				
12	1-633545	2	Spacer				
13	1-633630	2	Grommet-Brake				
14	1-633543-03	1	Strap-Clutch, Brake				
15	32128-20	8	Nut-HF				
16	109-3476-03	1	Bracket-Muffler, LH				
17	109-3477-03	1	Bracket-Muffler, RH				
18	322-3	2	Screw-HH				
19	3256-3	2	Washer-Flat				
20	33113-016	3	Screw-HH				
21	33114-016	2	Screw-HH				
22	3256-22	3	Washer-Flat				
24	322-11	1	Screw-HH				
25	104-6373	1	Tube-Retainer				

Attachments and Accessories

For 74559 - GrandStand Mower, With 52in TURBO FORCE Cutting Unit

Product Name	Model/Part
Blade-Hi-Flow, 18 Inch (6 Pack)	108-1117
Blade-Atomic, 18 Inch (6 Pack)	108-1118
Blade-Lo-Flow, 18 Inch (6 Pack)	110-0406
Blade-Recycler, 18 Inch (6 Pack)	110-0408
Blade-Med-Flow, 18 Inch (6 Pack)	110-0409
Light Kit	114-3505
Trash Bag Kit	117-0448
Recycler Kit	117-0541
Operator-Controlled Discharge Chute Kit	117-3600
Weight Kit	117-3620
Soft Bag (3 Bushel)	30104

NOTES

NOTES

