



**Count on it.**

Form No. 3362-768 Rev A

# Parts Catalog

## **Commercial Walk-Behind Mower** **Floating Deck, T-Bar, Gear Drive with 40in** **TURBO FORCE® Cutting Unit**

**Model No. 38096—Serial No. 290000001 and Up**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

|                                              |                                                |                                          |
|----------------------------------------------|------------------------------------------------|------------------------------------------|
| <b>AR:</b> as required                       | <b>HLH:</b> hex lag head                       | <b>PTO:</b> power-take-off               |
| <b>ASM:</b> assembly                         | <b>HOC:</b> height-of-cut                      | <b>RH:</b> right hand                    |
| <b>BBC:</b> blade brake clutch               | <b>HSBH:</b> hex socket button head            | <b>ROPS:</b> roll-over protection system |
| <b>CARR:</b> carriage                        | <b>HSFH:</b> hex socket flat head              | <b>SFH:</b> slotted fillister head       |
| <b>CCW:</b> counter clock wise               | <b>HSH:</b> hex socket head                    | <b>SHH:</b> slotted hex head             |
| <b>CW:</b> clockwise                         | <b>HWH:</b> hex washer head                    | <b>SHWH:</b> slotted hex washer head     |
| <b>DEG:</b> degrees                          | <b>HWHTF:</b> hex washer head thread forming   | <b>SPH:</b> slotted pan head             |
| <b>ECM:</b> electronic control module        | <b>HYD:</b> hydraulic                          | <b>SQH:</b> square head                  |
| <b>EXT:</b> external                         | <b>LH:</b> left hand                           | <b>SRH:</b> slotted round head           |
| <b>FH:</b> flat head                         | <b>NI:</b> nylon insert                        | <b>STD:</b> standard                     |
| <b>GA:</b> gauge                             | <b>NPTF:</b> national pipe thread fine         | <b>TAP:</b> self tapping                 |
| <b>HD:</b> heavy-duty                        | <b>PFH:</b> phillips flat head                 | <b>TTH:</b> torx truss head              |
| <b>HF:</b> hex flange                        | <b>PPH:</b> phillips pan head                  |                                          |
| <b>HH:</b> hex head                          | <b>PPHTF:</b> phillips pan head thread forming |                                          |
| <b>HHF:</b> hex head flange                  | <b>PRH:</b> phillips round head                |                                          |
| <b>HHFTF:</b> hex head flange thread forming | <b>PTH:</b> phillips truss head                |                                          |
| <b>HJ:</b> hex jam                           |                                                |                                          |

# Contents

|                                                            |    |
|------------------------------------------------------------|----|
| Engine and Clutch Assembly .....                           | 4  |
| Power-Take-Off Idler and Weight Assembly .....             | 5  |
| Fuel System Assembly .....                                 | 6  |
| Lower Control Assembly .....                               | 7  |
| Transmission Drive Assembly .....                          | 8  |
| Wheel Drive and Brake Assembly .....                       | 9  |
| Upper Handle Assembly .....                                | 10 |
| Control Panel Assembly .....                               | 11 |
| Carrier Frame Assembly .....                               | 12 |
| Deck Drive and Baffle Assembly .....                       | 13 |
| Deck Assembly No. 112-7081 .....                           | 14 |
| Spindle Assembly No. 110-0728 .....                        | 15 |
| Spindle Assembly No. 110-6927 .....                        | 16 |
| Lever Assembly No. 107-1664 .....                          | 17 |
| Deck Assembly .....                                        | 18 |
| Deflector Assembly No. 110-0790 .....                      | 19 |
| Cylinder and Crankcase Assembly Kawasaki FH541V-GS30 ..... | 20 |
| Piston and Crankshaft Assembly Kawasaki FH541V-GS30 .....  | 21 |
| Valve and Camshaft Assembly Kawasaki FH541V-GS30 .....     | 22 |
| Lubrication Equipment Assembly Kawasaki FH541V-GS30 .....  | 23 |
| Cooling Equipment Assembly Kawasaki FH541V-GS30 .....      | 24 |
| Electric Equipment Assembly Kawasaki FH541V-GS30 .....     | 25 |
| Control Equipment Assembly Kawasaki FH541V-GS30 .....      | 26 |
| Carburetor Assembly Kawasaki FH541V-GS30 .....             | 27 |
| Air Filter and Muffler Assembly Kawasaki FH541V-GS30 ..... | 28 |
| Fuel Tank and Valve Assembly Kawasaki FH541V-GS30 .....    | 29 |
| Starter Assembly Kawasaki FH541V-GS30 .....                | 30 |
| Label Assembly Kawasaki FH541V-GS30 .....                  | 31 |
| Attachments and Accessories .....                          | 32 |

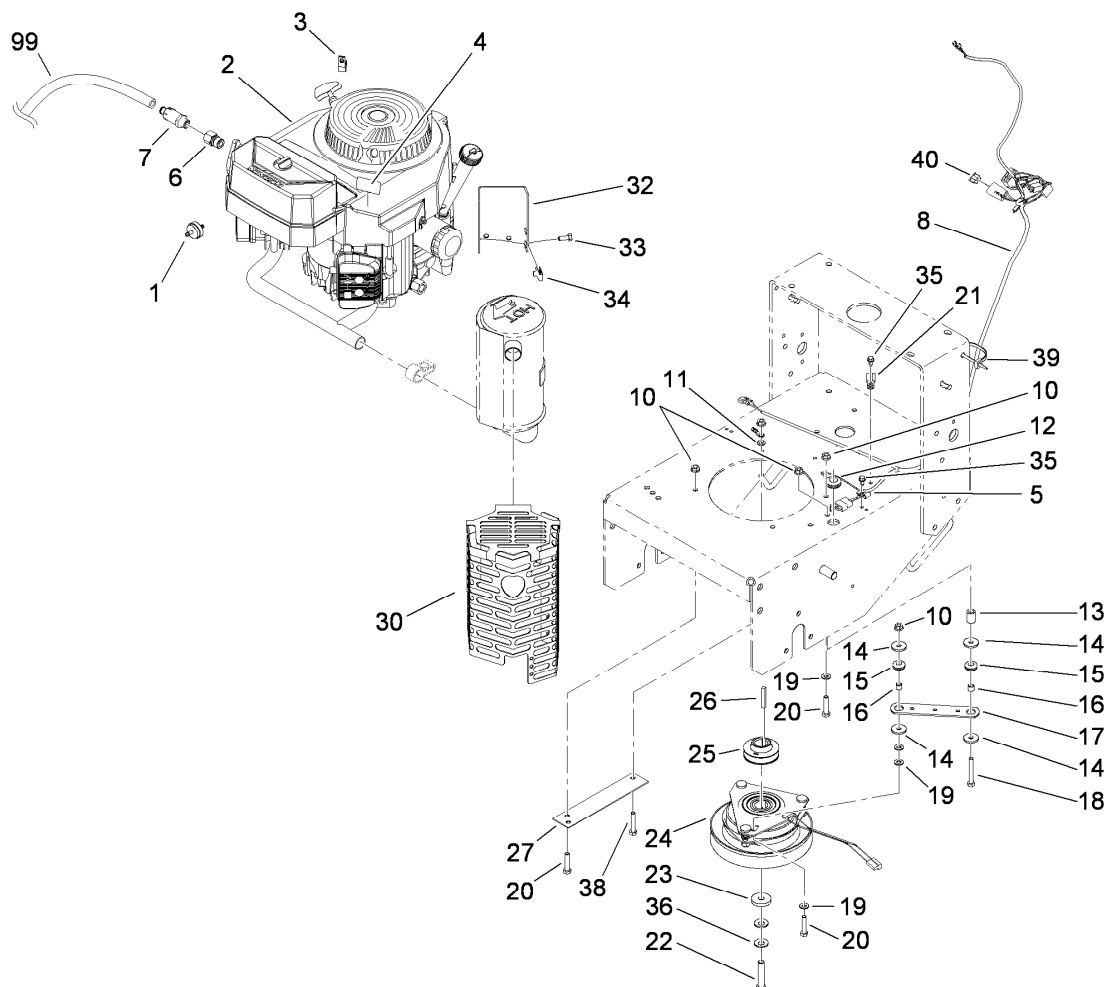


## Engine and Clutch Assembly

| Ref. | Part Number | Qty. | Description                     |
|------|-------------|------|---------------------------------|
| 1    | 56-6360     | 1    | Filter-Fuel                     |
| 2    |             | 1    | Engine-Kawasaki, FH541V-Gs30 ●■ |
| 3    | 2412-87     | 1    | Clamp-Cable                     |
| 4    | 106-0699    | 1    | Decal-Warning                   |
| 5    | 2412-72     | 1    | Clip-Closed, Insulated          |
| 6    | 103-1966    | 1    | Adapter                         |
| 7    | 92-6877     | 1    | Valve-Drain, Oil                |
| 8    | 104-8137    | 1    | Harness-Wire                    |
| 10   | 32128-20    | 6    | Nut-HF                          |
| 11   | 3255-8      | 1    | Washer-Lock                     |
| 12   | 112-7069    | 1    | Grommet                         |
| 13   | 104-6373    | 1    | Tube-Retainer                   |
| 14   | 1-613235    | 4    | Washer                          |
| 15   | 1-633630    | 2    | Grommet-Brake                   |
| 16   | 1-633545    | 2    | Spacer                          |
| 17   | 1-633543-03 | 1    | Strap-Clutch, Brake             |
| 18   | 322-11      | 1    | Screw-HH                        |
| 19   | 3256-23     | 5    | Washer-Flat                     |

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 20   | 322-7       | 4    | Screw-HH           |
| 21   | 2412-134    | 1    | Clamp-R            |
| 22   | 3212-9      | 1    | Screw-HH           |
| 23   | 107-4136    | 1    | Washer             |
| 24   | 105-2635    | 1    | Clutch / Brake     |
| 25   | 107-4112    | 1    | Pulley-Drive       |
| 26   | 608006      | 1    | Key-Square         |
| 27   | 94-5847-01  | 1    | Cover-Pulley       |
| 30   | 115-4150-03 | 1    | Muffler Shield ASM |
| 32   | 115-4154-03 | 1    | Bracket-Muffler    |
| 33   | 322-3       | 4    | Screw-HH           |
| 34   | 94-2413     | 4    | U-Nut              |
| 35   | 12-3270     | 2    | Screw              |
| 36   | 1-603610    | 2    | Washer-Spring      |
| 38   | 322-9       | 1    | Screw-HH           |
| 39   | 3290-378    | 1    | Tie-Cable          |
| 40   | 114241      | 1    | Fuse-7.5 Amp       |
| 99   | 103-1964    | 1    | Hose-Drain, Oil    |

● Not serviced separately


■ Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

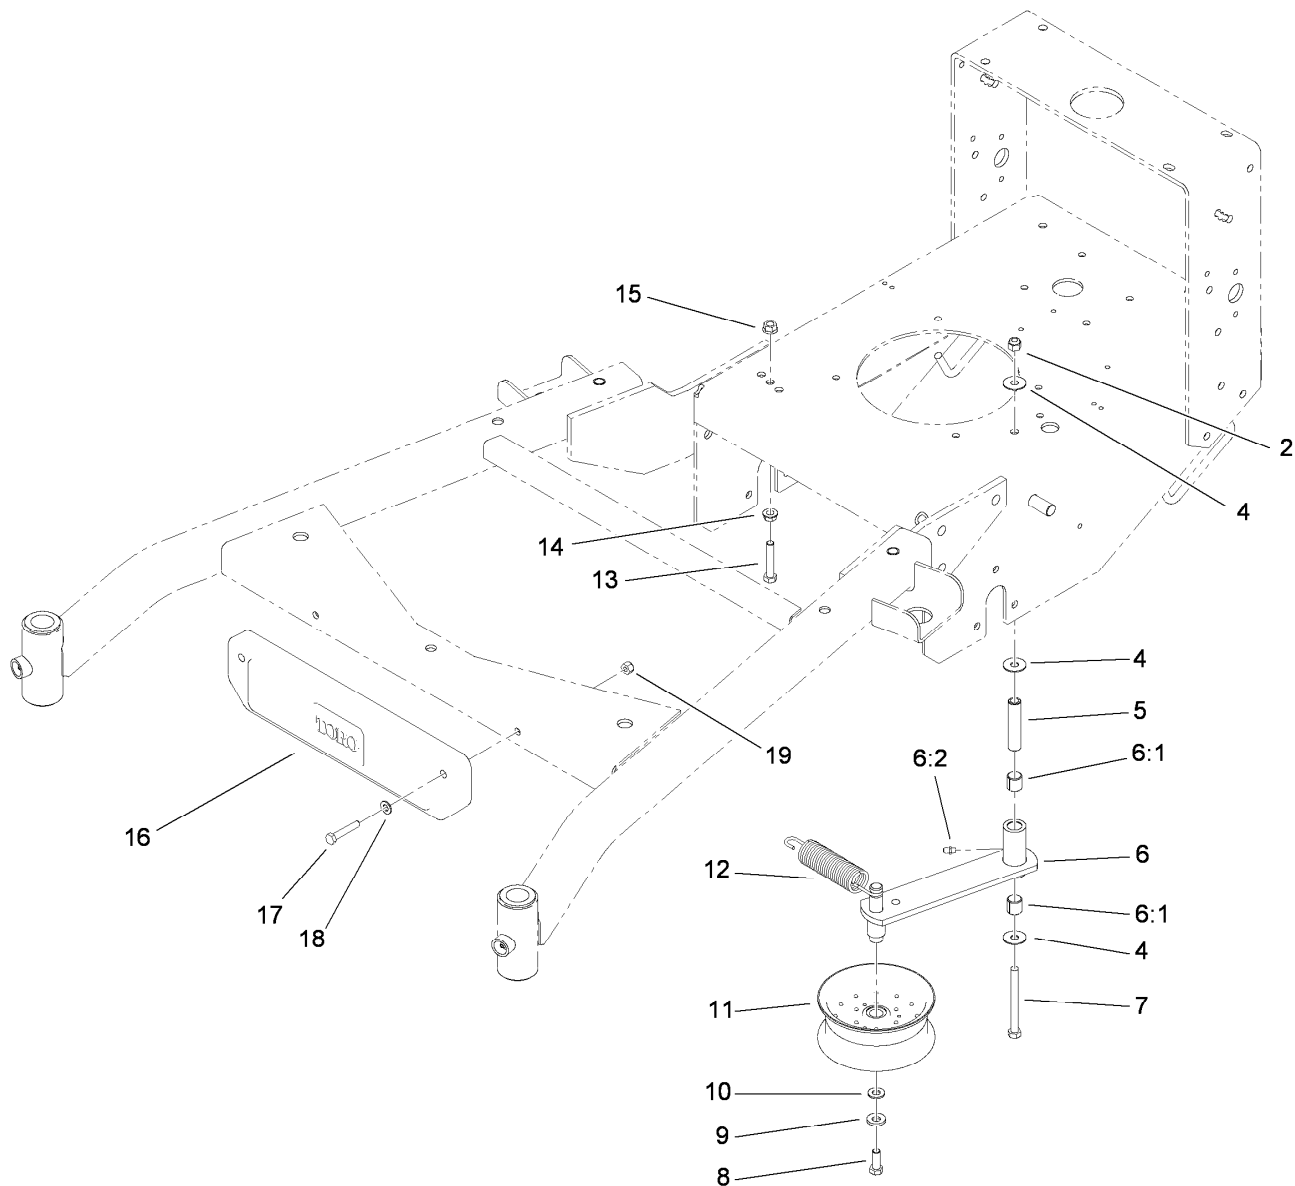

## Power-Take-Off Idler and Weight Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 2    | 3296-39     | 1    | Nut-Lock, NI      |
| 4    | 52-2860     | 3    | Washer            |
| 5    | 104-6377    | 1    | Tube-Idler        |
| 6    | 112-7055    | 1    | Idler Arm ASM     |
| 6:1  | 1-513034    | 2    | Sleeve-Bearing    |
| 6:2  | 302-5       | 1    | Fitting-Grease    |
| 7    | 323-42      | 1    | Screw-HH          |
| 8    | 323-6       | 1    | Screw-HH          |
| 9    | 98-5975     | 1    | Washer-Belleville |
| 10   | 3256-24     | 1    | Washer-Flat       |


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 11   | 1-413099    | 1    | Pulley-Idler     |
| 12   | 105-8443    | 1    | Spring-Extension |
| 13   | 323-10      | 1    | Screw-HH         |
| 14   | 3290-357    | 1    | Nut-HHF, Whiz    |
| 15   | 32128-21    | 1    | Nut-HF           |
| 16   | 112-7059-01 | 1    | Weight-Cast      |
| 17   | 322-9       | 2    | Screw-HH         |
| 18   | 3256-23     | 2    | Washer-Flat      |
| 19   | 3296-29     | 2    | Nut-Lock, NI     |

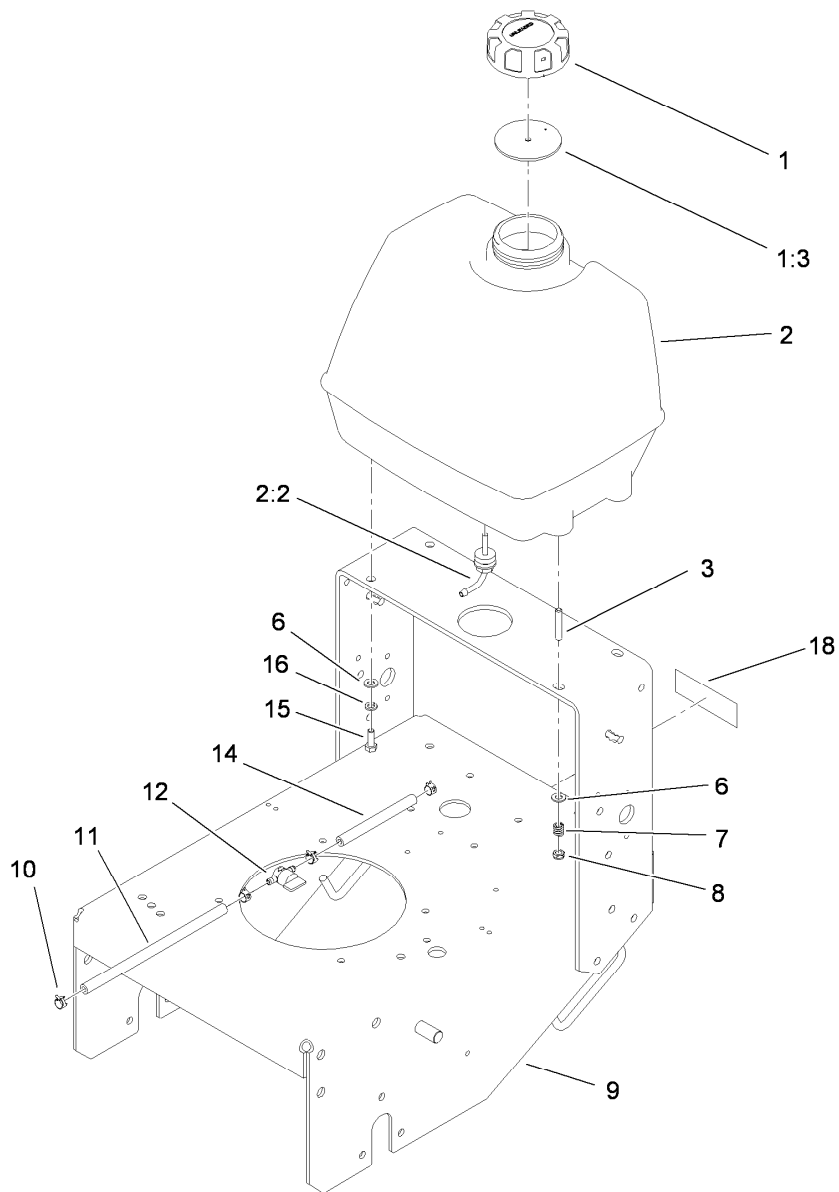

## Fuel System Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 88-3980     | 1    | Gas Cap ASM            |
| 1:3  | 88-4010     | 1    | Gasket-Cap, Gas        |
| 2    | 106-0730    | 1    | Fuel Tank ASM          |
| 2:2  | 103-2605    | 1    | Fitting-Fuel, Bulkhead |
| 3    | 104-8121    | 2    | Stud-Threaded          |
| 6    | 3256-23     | 4    | Washer-Flat            |
| 7    | 1-633349    | 2    | Spring-Tank, Fuel      |
| 8    | 3296-47     | 2    | Nut-Lock, NI           |


| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 9    | 110-4985-01 | 1    | Gear Frame ASM |
| 10   | 2412-98     | 4    | Clamp          |
| 11   | 110-4894    | 1    | Hose-Fuel      |
| 12   | 1-603770    | 1    | Valve-Fuel     |
| 14   | 107-0588    | 1    | Hose-Fuel      |
| 15   | 322-4       | 2    | Screw-HH       |
| 16   | 3253-4      | 2    | Washer-Lock    |
| 18   | 98-0776     | 1    | Decal-Caution  |

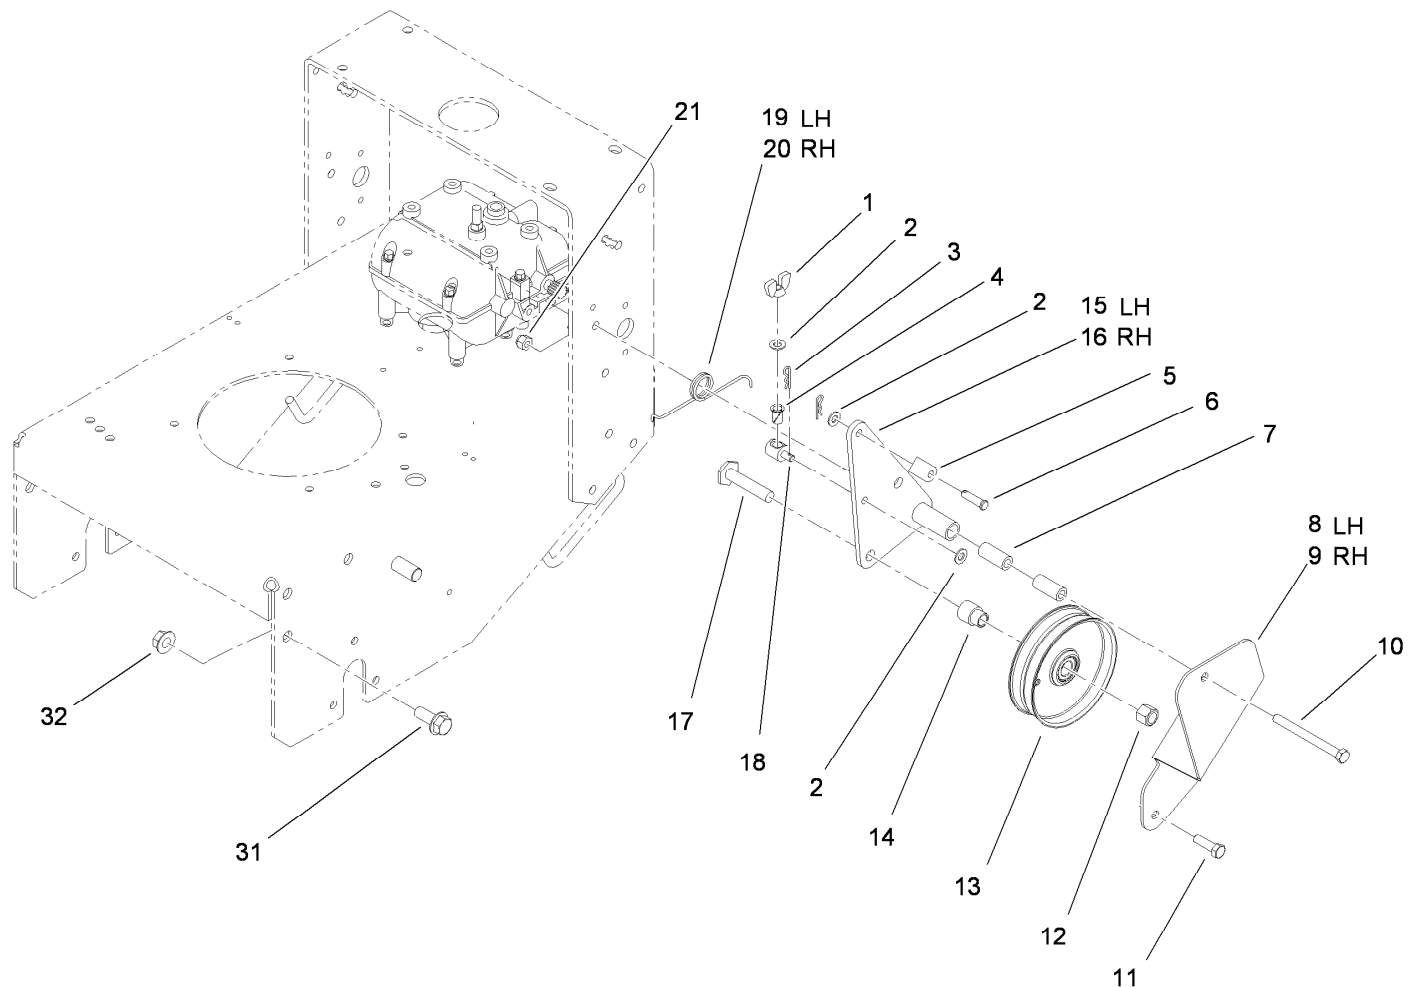

## Lower Control Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 32103-25    | 2    | Nut-Wing            |
| 2    | 3256-23     | 6    | Washer-Flat         |
| 3    | 3290-307    | 4    | Pin-Hair            |
| 4    | 52-2890     | 2    | Bushing-Nylon       |
| 5    | 74-0521     | 2    | Fitting-Rod         |
| 6    | 283-6       | 2    | Pin-Clevis          |
| 7    | 74-0040     | 4    | Spacer-Pivot, Idler |
| 8    | 108-2725-01 | 1    | Support-Idler, LH   |
| 9    | 108-2724-01 | 1    | Support-Idler, RH   |
| 10   | 323-16      | 2    | Screw-HH            |
| 11   | 323-7       | 4    | Screw-HH            |
| 12   | 3296-23     | 2    | Nut-Lock, NI        |

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 13   | 95-2800     | 2    | Pulley-Idler       |
| 14   | 95-2801     | 2    | Spacer-Pulley      |
| 15   | 108-2740-01 | 1    | LH Idler Arm ASM   |
| 16   | 108-2741-01 | 1    | RH Idler Arm ASM   |
| 17   | 51-4450     | 2    | Screw-Leveler      |
| 18   | 68-9690     | 2    | Fitting-Rod        |
| 19   | 51-4380     | 1    | Spring-Torsion, LH |
| 20   | 51-4370     | 1    | Spring-Torsion, RH |
| 21   | 3296-39     | 6    | Nut-Lock, NI       |
| 31   | 3234-32     | 6    | Screw-HHF          |
| 32   | 32128-23    | 6    | Nut-HF             |

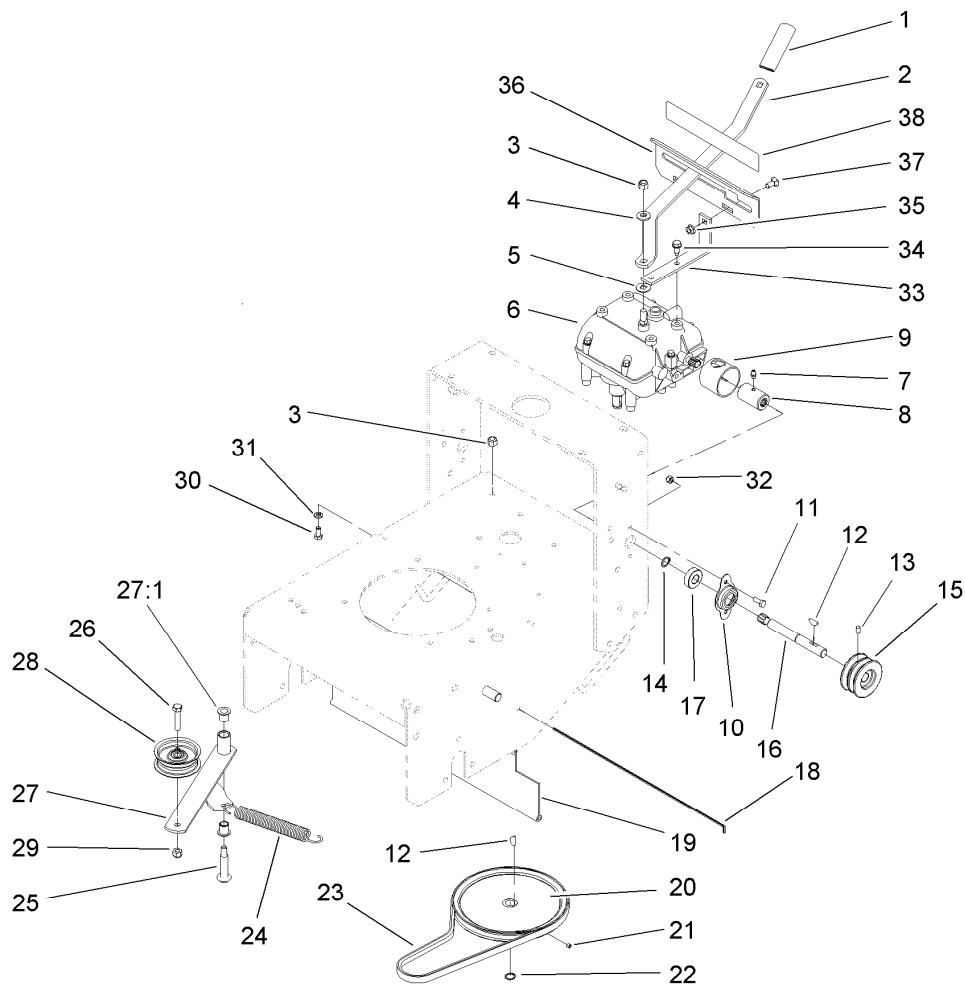


## Transmission Drive Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 47-1970     | 1    | Grip                |
| 2    | 98-3274-03  | 1    | Lever-Shift         |
| 3    | 3296-6      | 2    | Nut-Lock            |
| 4    | 98-5975     | 1    | Washer-Belleville   |
| 5    | 1-323379    | 1    | Washer              |
| 6    | 1-323500    | 1    | Transmission        |
| 7    | 302-5       | 2    | Fitting-Grease      |
| 8    | 1-323680    | 2    | Coupler             |
| 9    | 51-4220     | 2    | Guard-Coupler       |
| 10   | 1-323254    | 2    | Flange-Output       |
| 11   | 321-4       | 4    | Screw-HH            |
| 12   | 3257-5      | 3    | Key-Woodruff        |
| 13   | 3245-9      | 2    | Screw-Set           |
| 14   | 32151-62    | 2    | Ring-Retaining      |
| 15   | 105-2698    | 2    | Pulley-Transmission |
| 16   | 104-1102    | 2    | Shaft-Output        |
| 17   | 1-323252    | 2    | Bearing-Shaft       |
| 18   | 95-1529     | 1    | Rod-Shield          |
| 19   | 95-1526     | 1    | Shield-Trailing     |
| 20   | 105-5646    | 1    | Pulley-Driven       |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 21   | 3245-1      | 1    | Screw-Set, HSH        |
| 22   | 32120-64    | 1    | Ring-Snap, External   |
| 23   | 105-5668    | 1    | V-Belt                |
| 24   | 80-6610     | 1    | Spring-Extension      |
| 25   | 27-6230     | 1    | Bolt-Wheel            |
| 26   | 323-9       | 1    | Screw-HH              |
| 27   | 16-7509     | 1    | Lever-Idler           |
| 27:1 | 256-155     | 2    | Bushing-Flange        |
| 28   | 62-4540     | 1    | Pulley                |
| 29   | 3296-39     | 1    | Nut-Lock, NI          |
| 30   | 322-2       | 4    | Screw-HH              |
| 31   | 3253-4      | 4    | Washer-Lock           |
| 32   | 3296-42     | 4    | Nut-Lock, NI          |
| 33   | 1-323389-03 | 2    | Bracket-Plate, Shift  |
| 34   | 9264964     | 4    | Screw-HWH, Thread Cut |
| 35   | 32128-20    | 2    | Nut-HF                |
| 36   | 1-323387-03 | 1    | Plate-Shift           |
| 37   | 3230-1      | 2    | Bolt-CARR             |
| 38   | 98-3256     | 1    | Decal-Speed, Ground   |




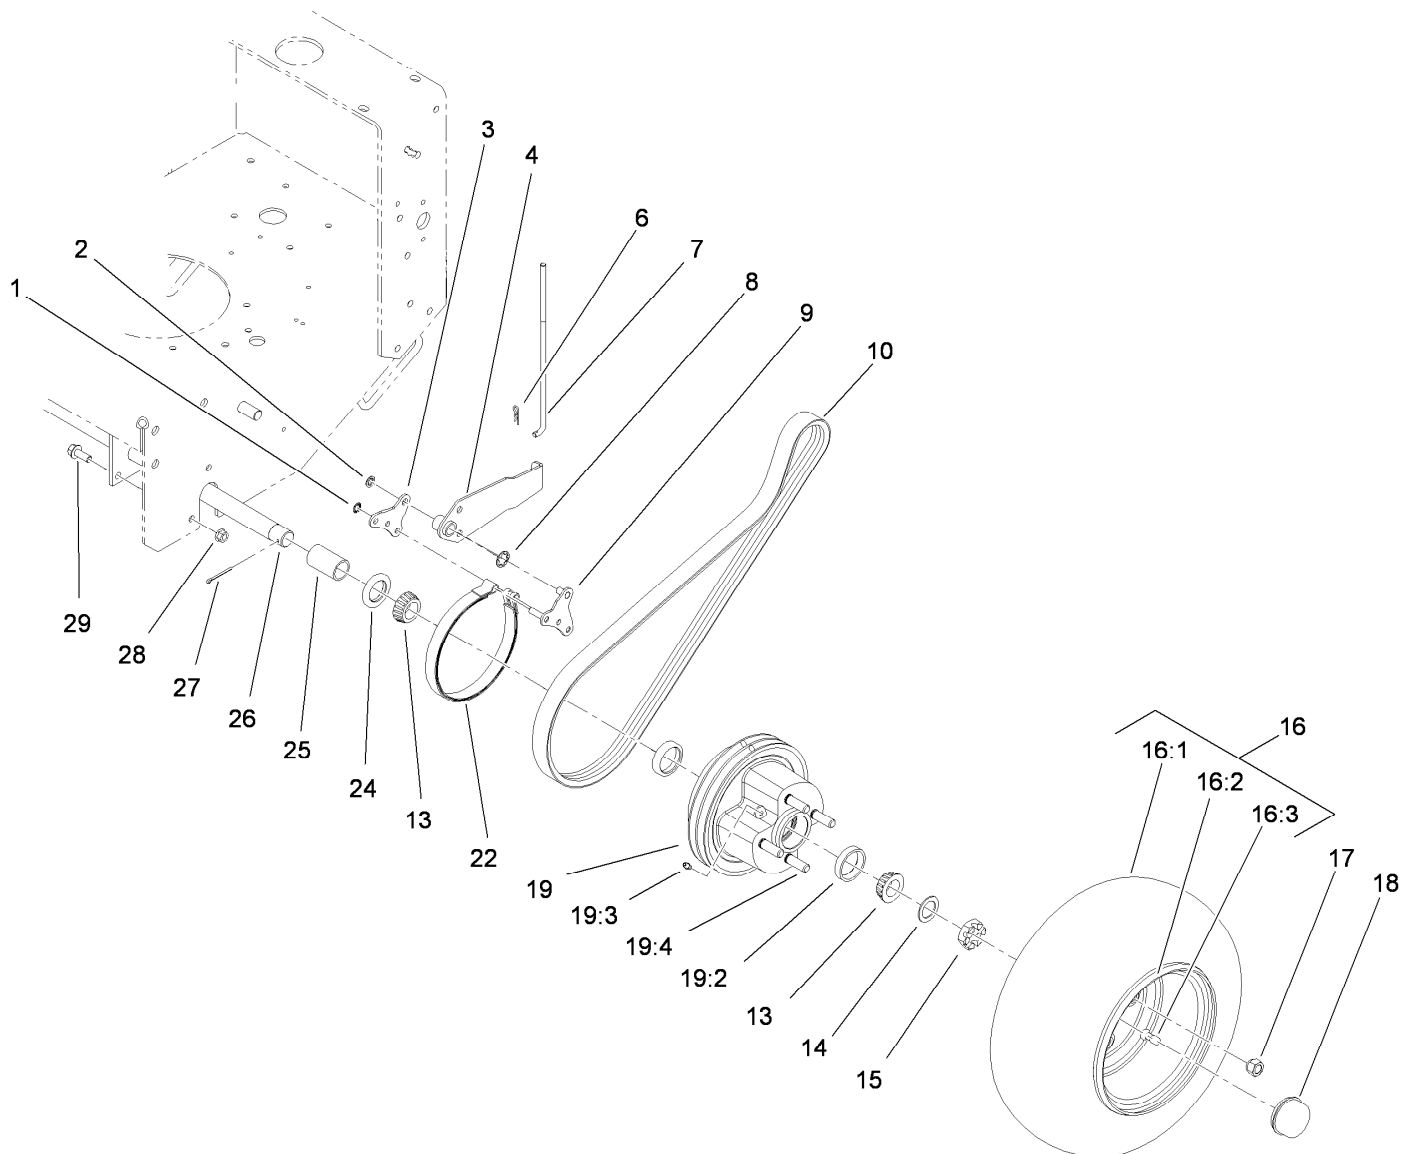

## Wheel Drive and Brake Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 32151-72    | 4    | Ring-Retaining           |
| 2    | 32151-56    | 2    | Ring-Retaining, External |
| 3    | 106-8792    | 2    | Plate-Link, Brake        |
| 4    | 110-5010-01 | 2    | Brake Arm ASM            |
| 6    | 3290-307    | 2    | Pin-Hair                 |
| 7    | 108-2730    | 2    | Rod-Brake                |
| 8    | 32151-40    | 2    | Ring-Retaining           |
| 9    | 106-8773    | 2    | Brake Link ASM           |
| 10   | 110-5004    | 2    | Belt-V, Banded           |
| 13   | 1-543509    | 4    | Bearing-Roller, Tapered  |
| 14   | 1-523157    | 2    | Washer-Spacer            |
| 15   | 1-809082    | 2    | Nut-SHH                  |
| 16   | 106-0892    | 2    | Wheel And Tire ASM       |
| 16:1 | 104-6322    | 1    | Tire                     |
| 16:2 | 106-0893    | 1    | Wheel                    |


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 16:3 | 232-27      | 1    | Stem-Valve       |
| 17   | 242-50      | 8    | Nut-Lug          |
| 18   | 241-119     | 2    | Cap-Dust         |
| 19   | 107-4090    | 2    | Wheel Hub ASM    |
| 19:2 | 1-543508    | 2    | Cup-Bearing      |
| 19:3 | 302-5       | 1    | Fitting-Grease   |
| 19:4 | 10-6830     | 4    | Stud-Type, Drive |
| 22   | 1-323262    | 2    | Band-Brake       |
| 24   | 1-543511    | 2    | Seal-Grease      |
| 25   | 110-5006    | 2    | Spacer-Wheel     |
| 26   | 110-4983-01 | 1    | Axle ASM         |
| 27   | 1-806800    | 2    | Pin-Cotter       |
| 28   | 32128-21    | 6    | Nut-HF           |
| 29   | 3234-11     | 6    | Screw-HHF        |

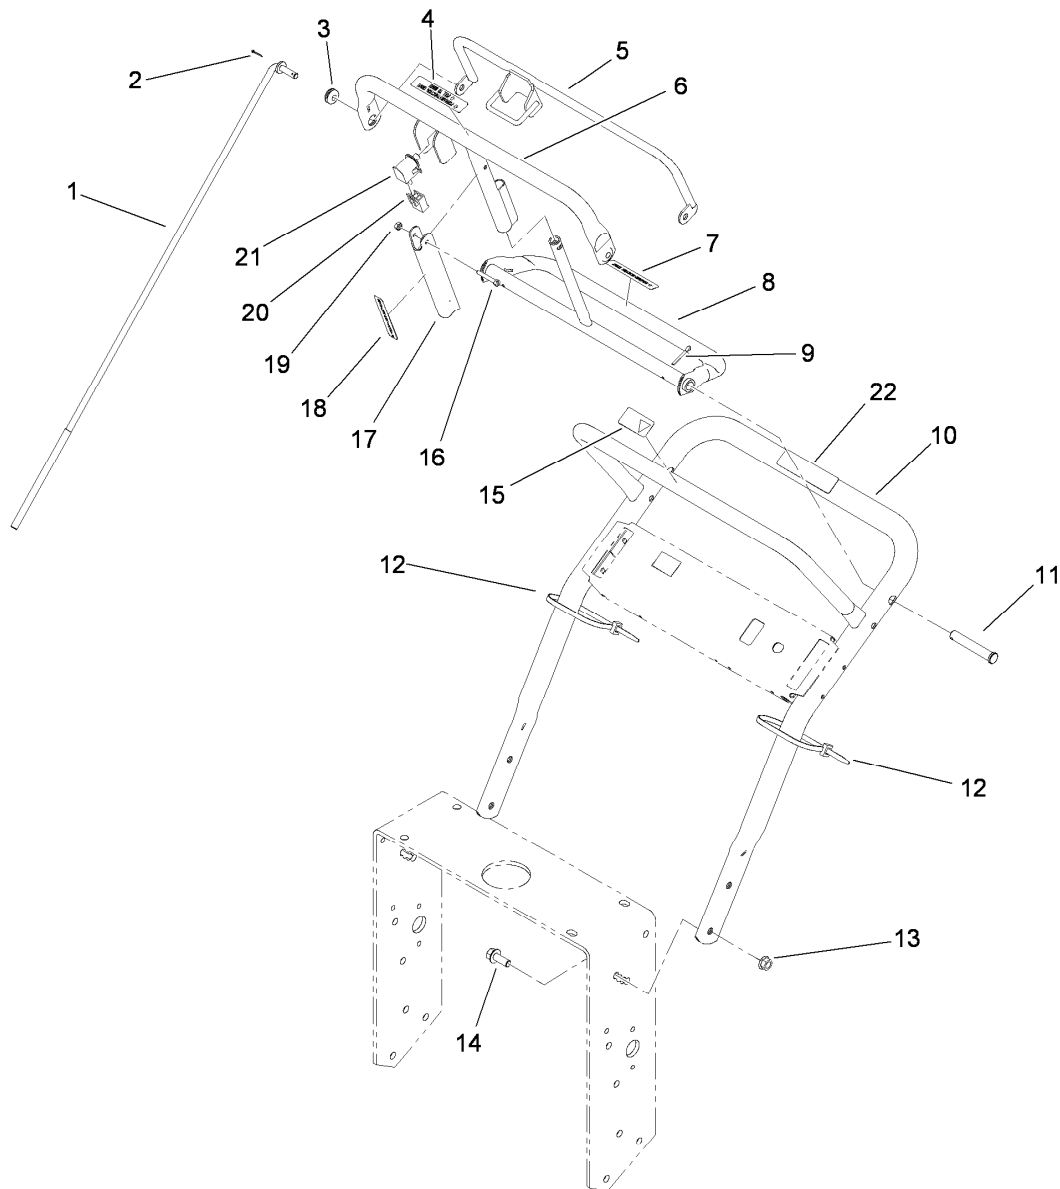

## Upper Handle Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 105-4677    | 2    | Rod-Control       |
| 2    | 3272-4      | 2    | Pin-Cotter        |
| 3    | 237-141     | 2    | Grommet-Rubber    |
| 4    | 82-2290     | 1    | Decal             |
| 5    | 82-7680-03  | 1    | Bail ASM          |
| 6    | 82-7690-03  | 1    | Bar-Control       |
| 7    | 82-2280     | 1    | Decal             |
| 8    | 106-5477-03 | 1    | Control Pivot ASM |
| 9    | 3272-11     | 2    | Pin-Cotter        |
| 10   | 105-3158-03 | 1    | Upper Handle ASM  |
| 11   | 283-55      | 2    | Pin-Clevis        |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 12   | 3290-378    | 2    | Tie-Cable             |
| 13   | 32128-21    | 4    | Nut-HF                |
| 14   | 3234-11     | 4    | Screw-HHF             |
| 15   | 98-4387     | 1    | Decal-Protection, Ear |
| 16   | 32105-1     | 1    | Screw-SHH             |
| 17   | 51-4850-03  | 1    | Lever-Brake, Parking  |
| 18   | 52-2010     | 1    | Decal-Lever, Parking  |
| 19   | 3296-2      | 1    | Nut-Lock, NI          |
| 20   | 218-595     | 1    | Connector-Body        |
| 21   | 82-2190     | 1    | Switch-Bail           |
| 22   | 117-2718    | 1    | Decal-Arrester, Spark |

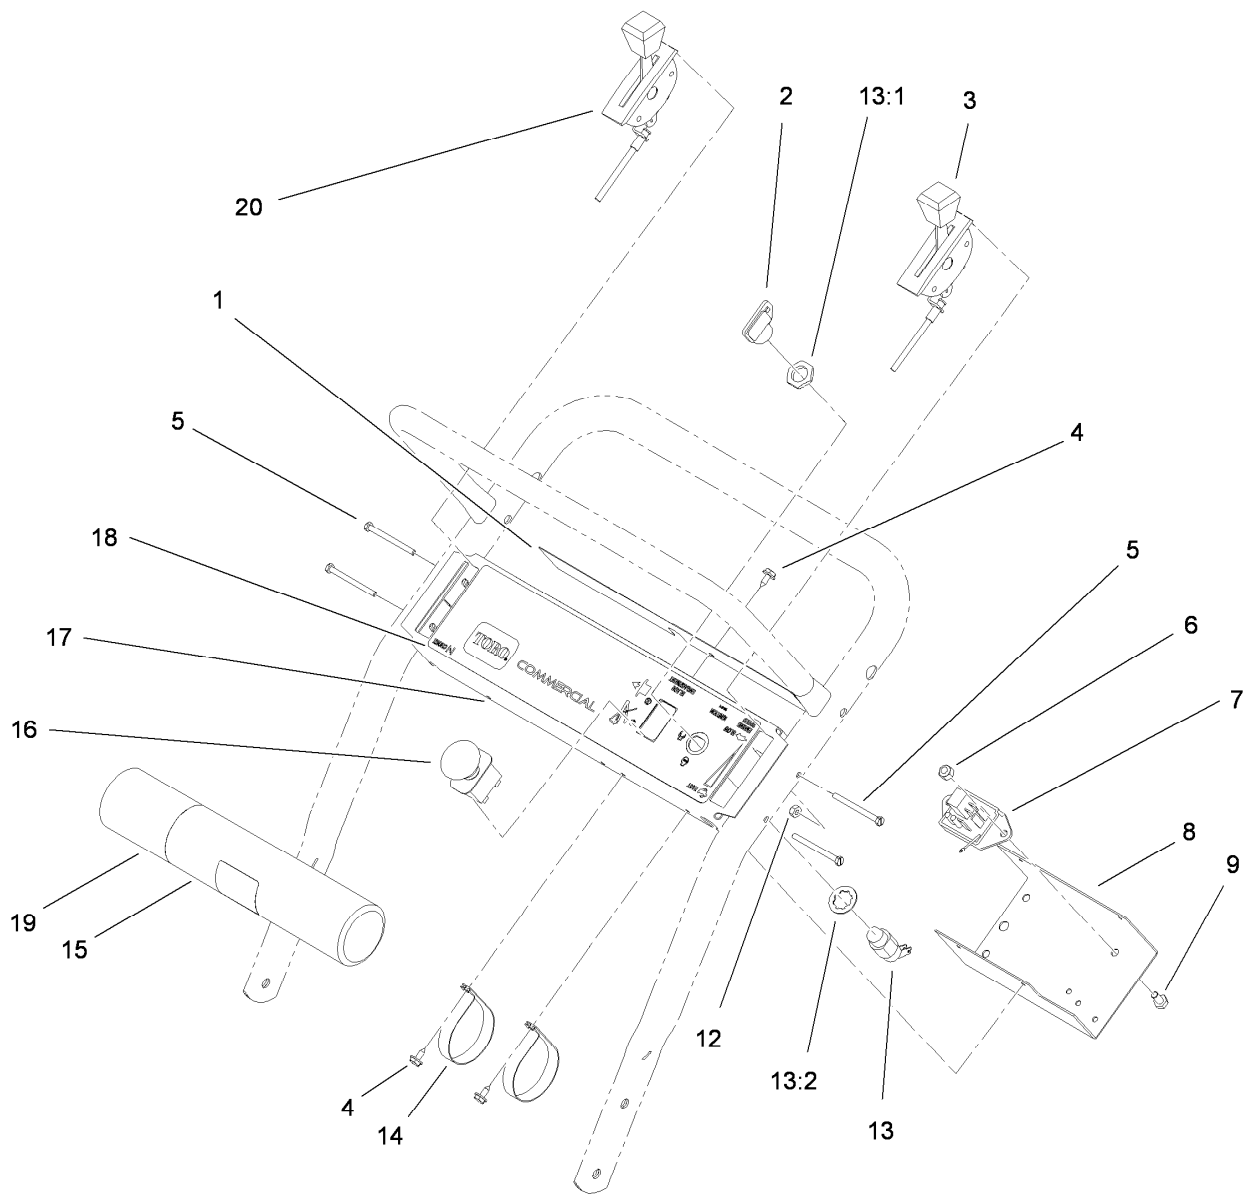

## Control Panel Assembly

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 1    | 105-0884    | 1    | Decal-Danger   |
| 2    | 63-8360     | 1    | Key-Ignition   |
| 3    | 110-4994    | 1    | Cable-Throttle |
| 4    | 32104-76    | 4    | Screw          |
| 5    | 32105-14    | 4    | Screw-SHH      |
| 6    | 3296-42     | 1    | Nut-Lock, NI   |
| 7    | 104-8141    | 1    | Module-Delay   |
| 8    | 93-1187-03  | 1    | Panel-Bottom   |
| 9    | 321-2       | 1    | Screw-HH       |
| 12   | 3296-2      | 4    | Nut-Lock, NI   |


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 13   | 29-5560     | 1    | Switch-On / Off     |
| 13:1 | 218-461     | 1    | Nut-HH              |
| 13:2 | 3254-5      | 1    | Washer-Tooth        |
| 14   | 2412-120    | 2    | R-Clamp             |
| 15   | 104-7050    | 1    | Tube-Manual         |
| 16   | 104-8140    | 1    | Switch-PTO          |
| 17   | 110-4982-03 | 1    | Panel-Control       |
| 18   | 110-4971    | 1    | Decal-Control Panel |
| 19   | 104-7048    | 1    | Cap-Housing         |
| 20   | 110-4995    | 1    | Cable-Choke         |

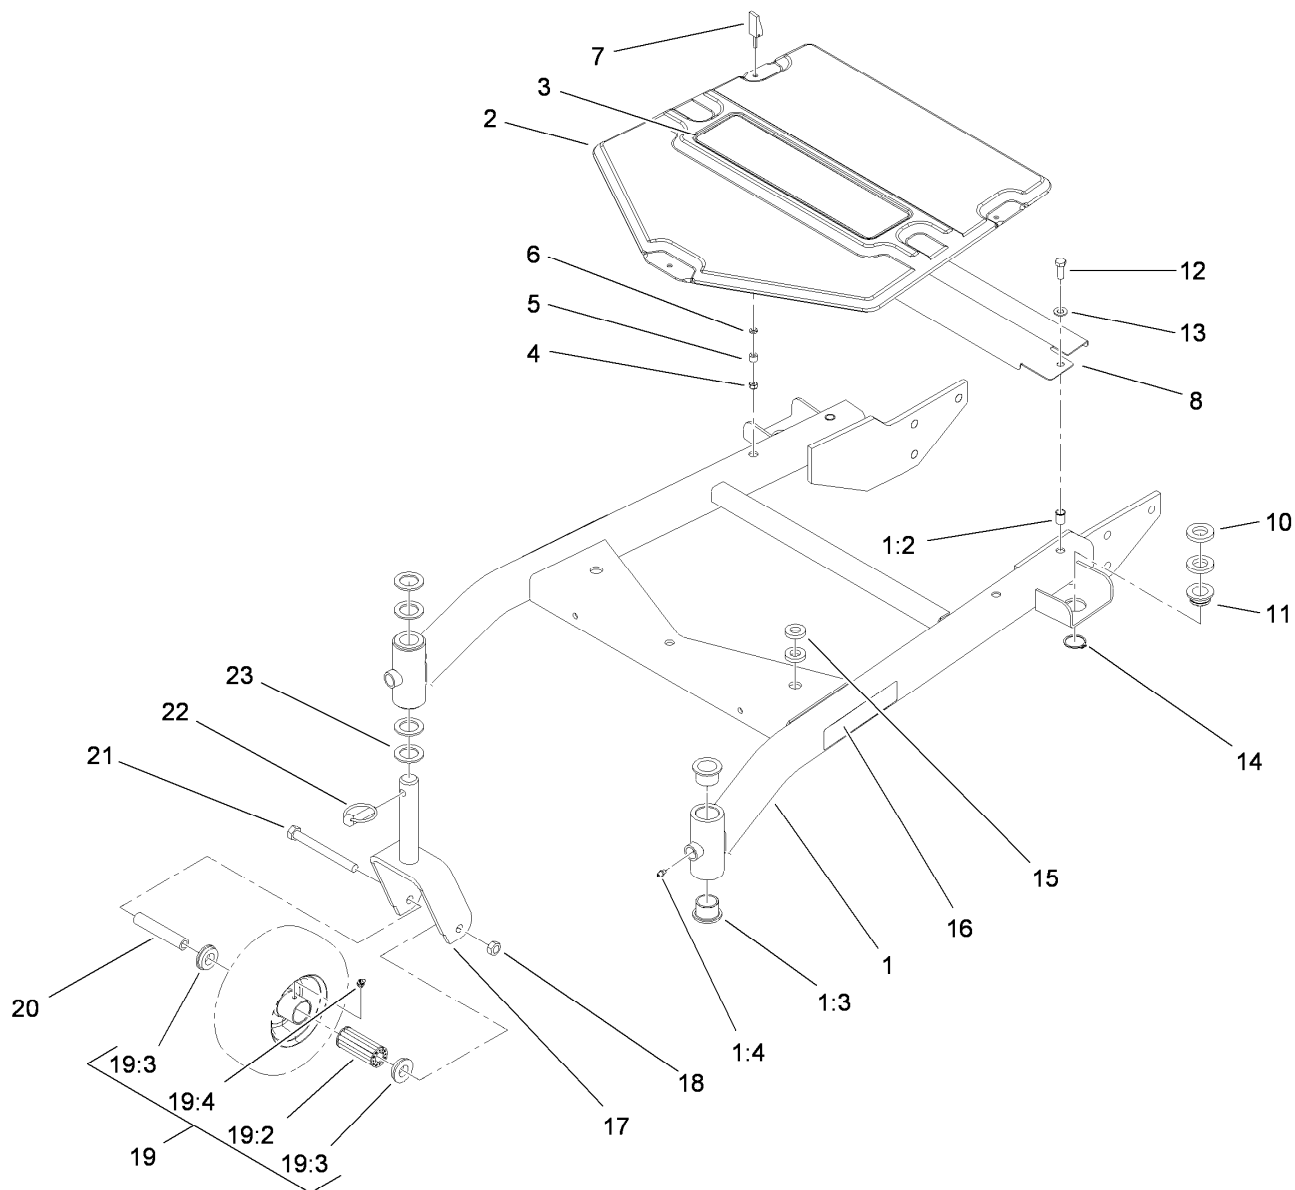

## Carrier Frame Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 110-6965    | 1    | Carrier Frame ASM    |
| 1:2  | 32148-9     | 2    | Insert-Nut           |
| 1:3  | 94-1291     | 4    | Bushing              |
| 1:4  | 302-5       | 2    | Fitting-Grease       |
| 2    | 110-6985    | 1    | Cover-Frame, Carrier |
| 3    | 112-9711    | 1    | Decal                |
| 4    | 1-804254    | 3    | Nut                  |
| 5    | 106-6778    | 3    | Bushing-Latch, Swell |
| 6    | 99-3058     | 3    | Washer               |
| 7    | 106-6777    | 3    | Handle-Latch, Swell  |
| 8    | 110-6971-01 | 1    | Shield-Belt          |
| 10   | 104-1105    | 4    | Spacer-Support, Deck |
| 11   | 1-513336    | 2    | Bushing-Deck         |
| 12   | 323-6       | 2    | Screw-HH             |


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 13   | 3256-24     | 2    | Washer-Flat        |
| 14   | 32120-33    | 2    | Ring-Retaining     |
| 15   | 1-323539    | 4    | Spacer             |
| 16   | 106-0635    | 2    | Decal-HOC          |
| 17   | 105-3159-01 | 2    | Castor Fork ASM    |
| 18   | 32153-5     | 2    | Nut-Lock, Side     |
| 19   | 110-5024    | 2    | Wheel And Tire ASM |
| 19:2 | 112-7066    | 1    | Bearing-Roller     |
| 19:3 | 1-513810    | 2    | Bushing            |
| 19:4 | 302-61      | 1    | Zerk               |
| 20   | 100-6453    | 2    | Bushing-Spanner    |
| 21   | 325-19      | 2    | Screw-HH           |
| 22   | 283-71      | 2    | Pin-Lynch          |
| 23   | 3-6781      | 8    | Washer-Thrust      |

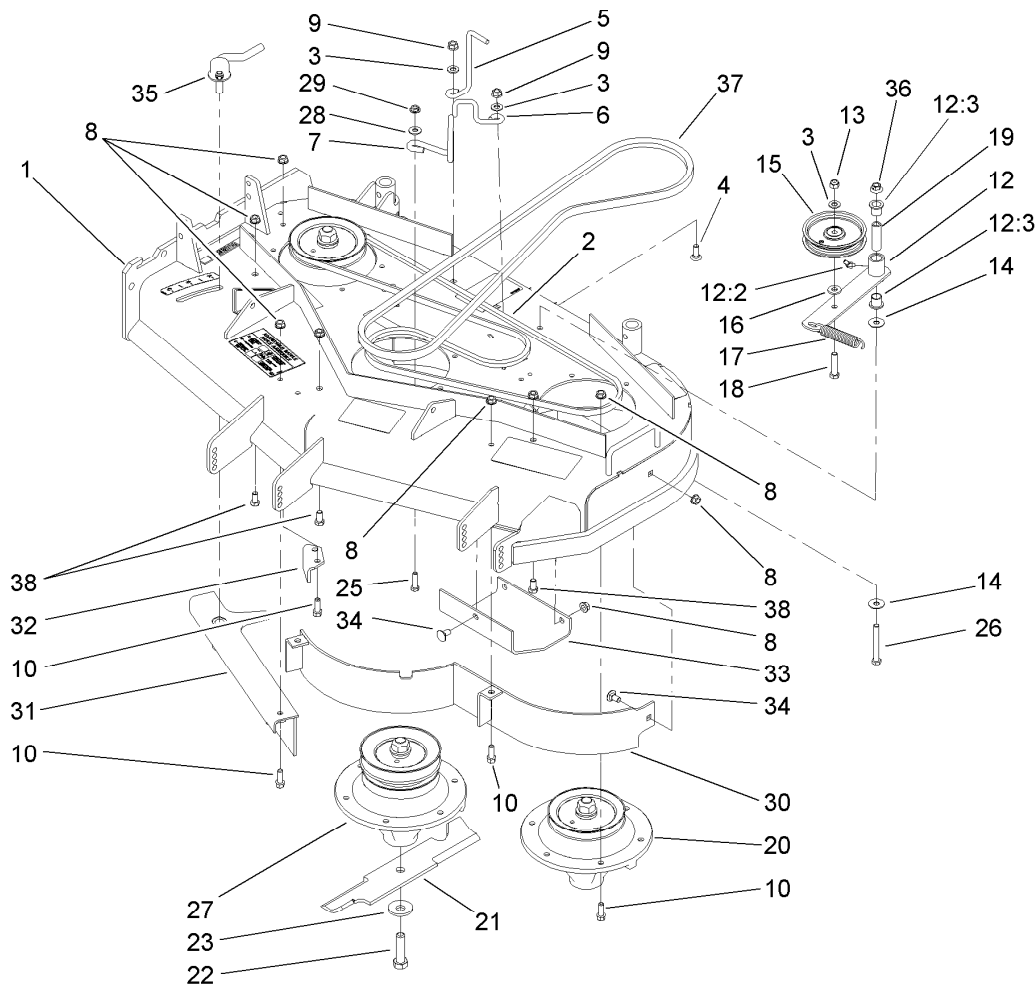

## Deck Drive and Baffle Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 112-7081    | 1    | Deck ASM             |
| 2    | 110-6972    | 1    | Belt-V               |
| 3    | 3256-24     | 3    | Washer-Flat          |
| 4    | 3231-22     | 2    | Screw-CARR           |
| 5    | 98-5980     | 1    | Guide-Belt           |
| 6    | 110-6975    | 1    | Guide-Belt           |
| 7    | 105-0850    | 1    | Guide-Belt           |
| 8    | 3290-357    | 29   | Nut-HHF, Whiz        |
| 9    | 32128-21    | 2    | Nut-HF               |
| 10   | 92-1624     | 22   | Screw-HWH            |
| 12   | 108-2728    | 1    | Idler Arm ASM        |
| 12:2 | 302-11      | 1    | Fitting-Lube, 45 DEG |
| 12:3 | 256-90      | 2    | Bushing-Flange       |
| 13   | 3296-39     | 1    | Nut-Lock, NI         |
| 14   | 52-2860     | 2    | Washer               |
| 15   | 93-1622     | 1    | Pulley-Idler         |
| 16   | 9202414     | 1    | Washer-Spacer        |
| 17   | 51-3650     | 1    | Spring-Extension     |
| 18   | 323-9       | 1    | Screw-HH             |

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 19   | 112-7091    | 1    | Spacer                    |
| 20   | 110-0728    | 2    | Spindle ASM               |
| 21   | 108-4081-03 | 3    | Blade-14 Inch (High Sail) |
| 22   | 51-4060     | 3    | Screw-Blade               |
| 23   | 103-0865    | 3    | Washer-Blade Bolt, Heavy  |
| 25   | 322-6       | 1    | Screw-HH                  |
| 26   | 323-14      | 1    | Screw-HH                  |
| 27   | 110-6927    | 1    | Spindle ASM               |
| 28   | 3256-3      | 1    | Washer-Flat               |
| 29   | 32128-13    | 1    | Nut-HF                    |
| 30   | 110-6910-03 | 1    | Baffle ASM                |
| 31   | 110-6940-03 | 1    | Adjust Baffle ASM         |
| 32   | 108-7273-01 | 1    | Baffle-Discharge          |
| 33   | 108-7282-01 | 1    | Plate-Skid                |
| 34   | 3231-1      | 4    | Screw-CARR                |
| 35   | 107-1664    | 1    | Lever ASM                 |
| 36   | 32128-19    | 1    | Nut-HF                    |
| 37   | 110-6973    | 1    | Belt-V                    |
| 38   | 323-4       | 3    | Screw-HH                  |

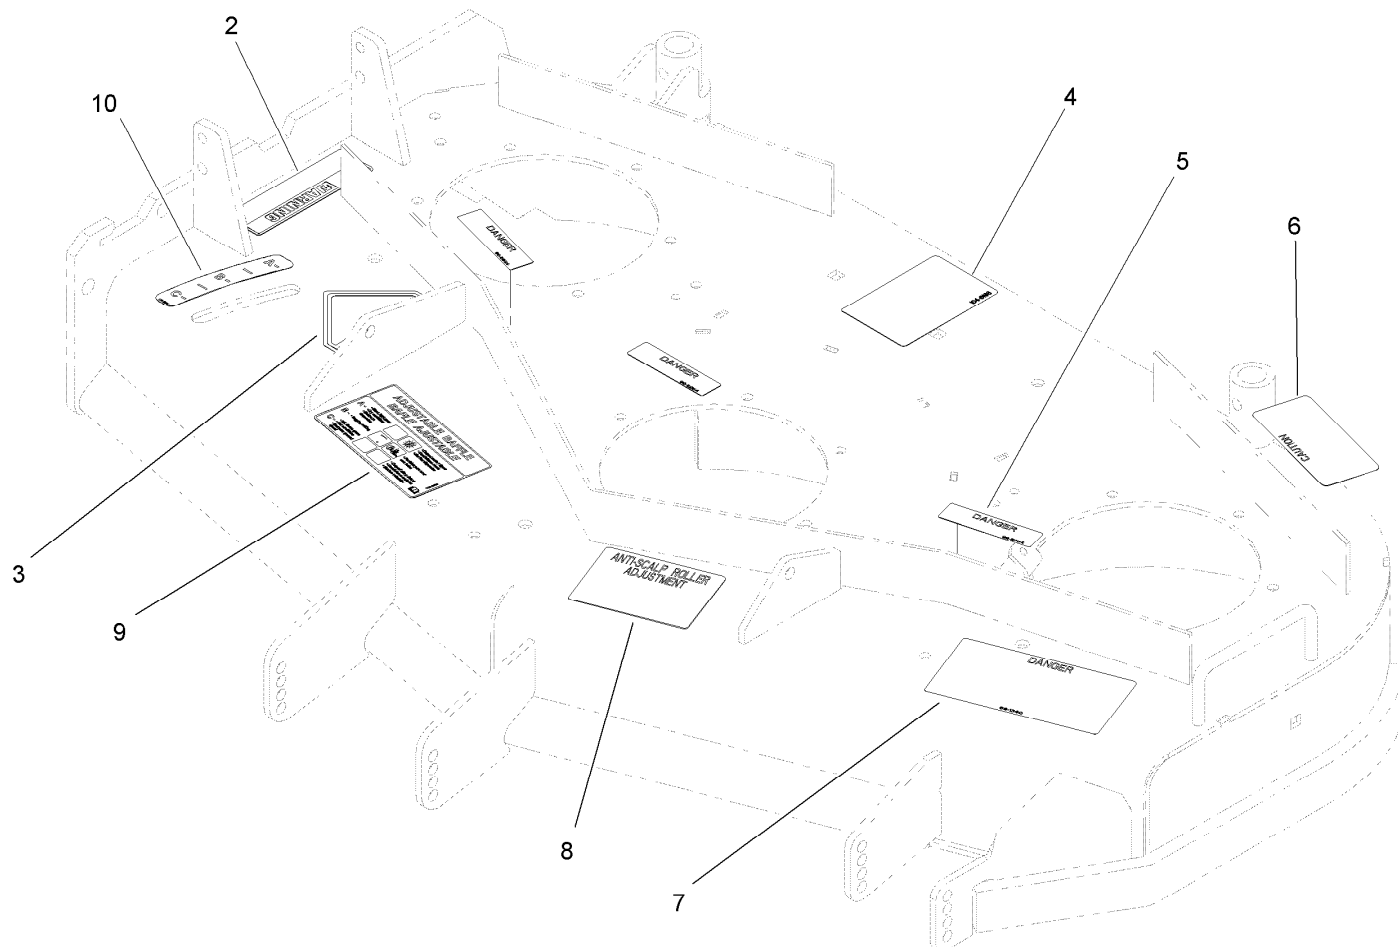


## Deck Assembly No. 112-7081

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 2    | 104-8569    | 1    | Decal-Warning               |
| 3    | 43-8480     | 1    | Decal-Danger                |
| 4    | 104-8186    | 1    | Decal-Routing, Belt         |
| 5    | 98-5954     | 3    | Decal-Cover, Missing        |
| 6    | 68-8340     | 1    | Decal-Torque                |
| 7    | 66-1340     | 1    | Decal-Danger, Thrown Object |
| 8    | 105-7798    | 1    | Decal-Scalp, Anti           |
| 9    | 110-2068    | 1    | Decal-Adjustment, Baffle    |
| 10   | 110-2067    | 1    | Decal-Setting, Baffle       |

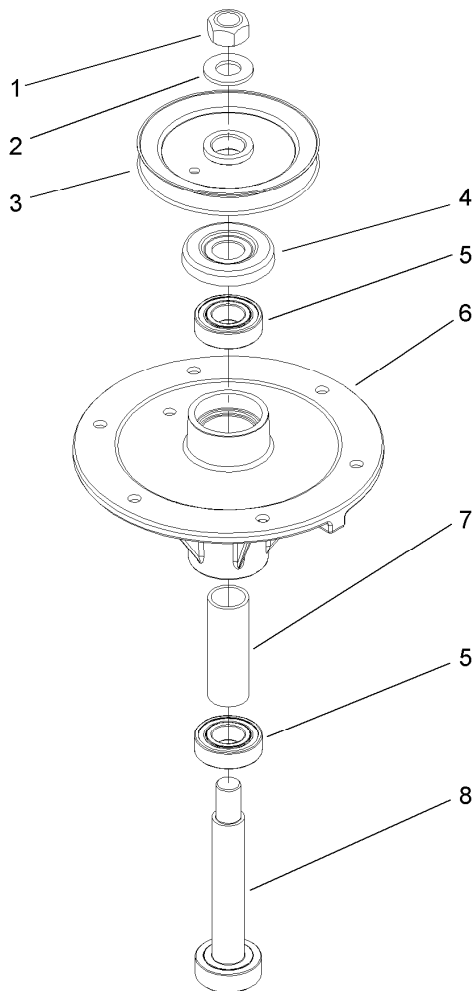

## Spindle Assembly No. 110-0728


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 3219-7             | 1           | Nut-Hex            |
| 2           | 7-4150             | 1           | Washer             |
| 3           | 104-1181           | 1           | Pulley ASM         |
| 4           | 106-0873           | 1           | Shield-Bearing     |
| 5           | 104-6325           | 2           | Bearing-Ball       |
| 6           | 108-6696           | 1           | Housing-Spindle    |
| 7           | 110-0727           | 1           | Spacer-Bearing     |
| 8           | 110-0726           | 1           | Shaft-Spindle      |

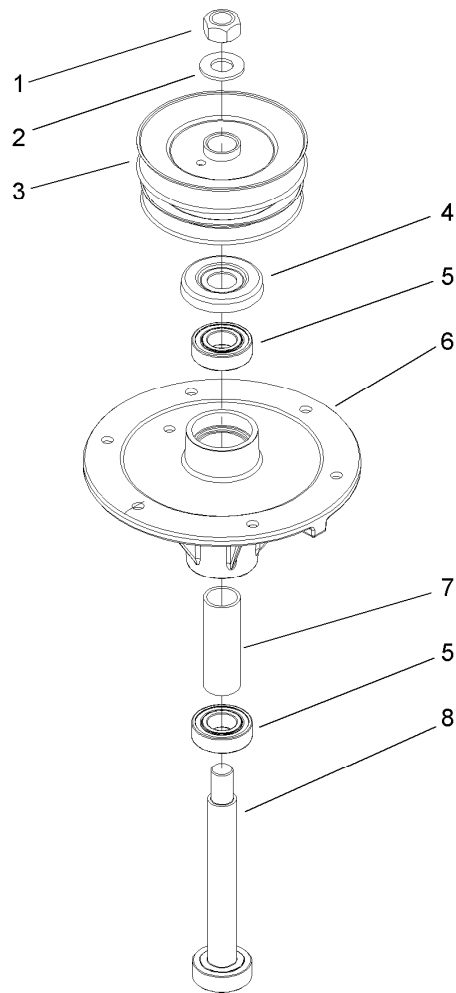

## Spindle Assembly No. 110-6927


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 3219-7             | 1           | Nut-Hex            |
| 2           | 7-4150             | 1           | Washer             |
| 3           | 110-6928           | 1           | Pulley And Hub ASM |
| 4           | 106-0873           | 1           | Shield-Bearing     |
| 5           | 104-6325           | 2           | Bearing-Ball       |
| 6           | 108-6696           | 1           | Housing-Spindle    |
| 7           | 110-0727           | 1           | Spacer-Bearing     |
| 8           | 110-0725           | 1           | Shaft-Spindle      |



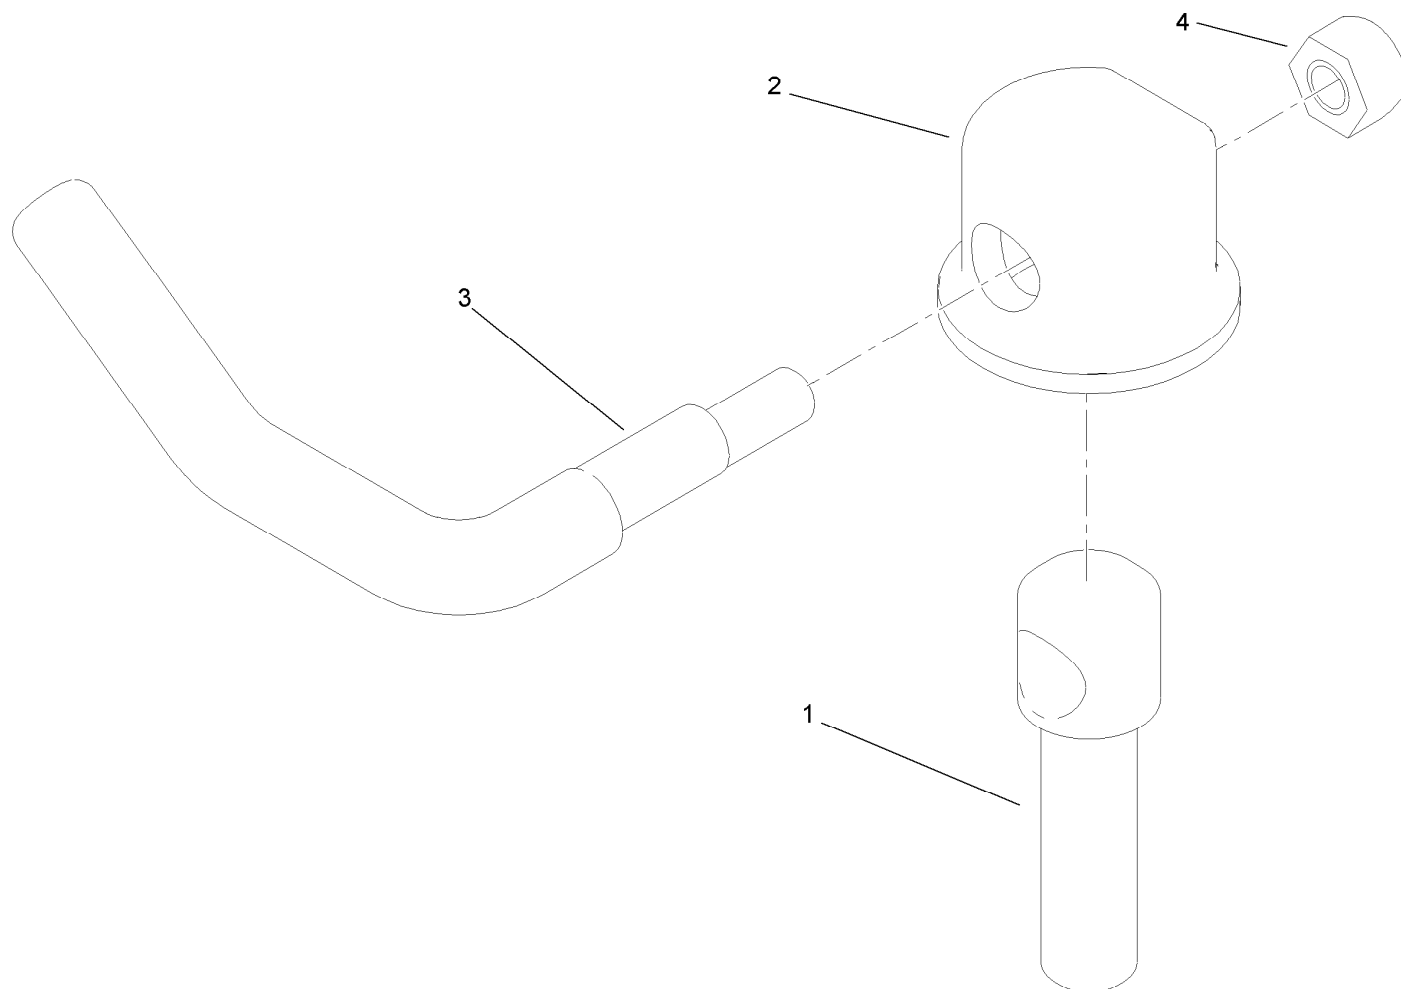

## Lever Assembly No. 107-1664


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 106-3239           | 1           | Screw-Lock         |
| 2           | 107-1644           | 1           | Cap-Lock           |
| 3           | 106-3241           | 1           | Lever-Lock         |
| 4           | 3296-29            | 1           | Nut-Lock, NI       |

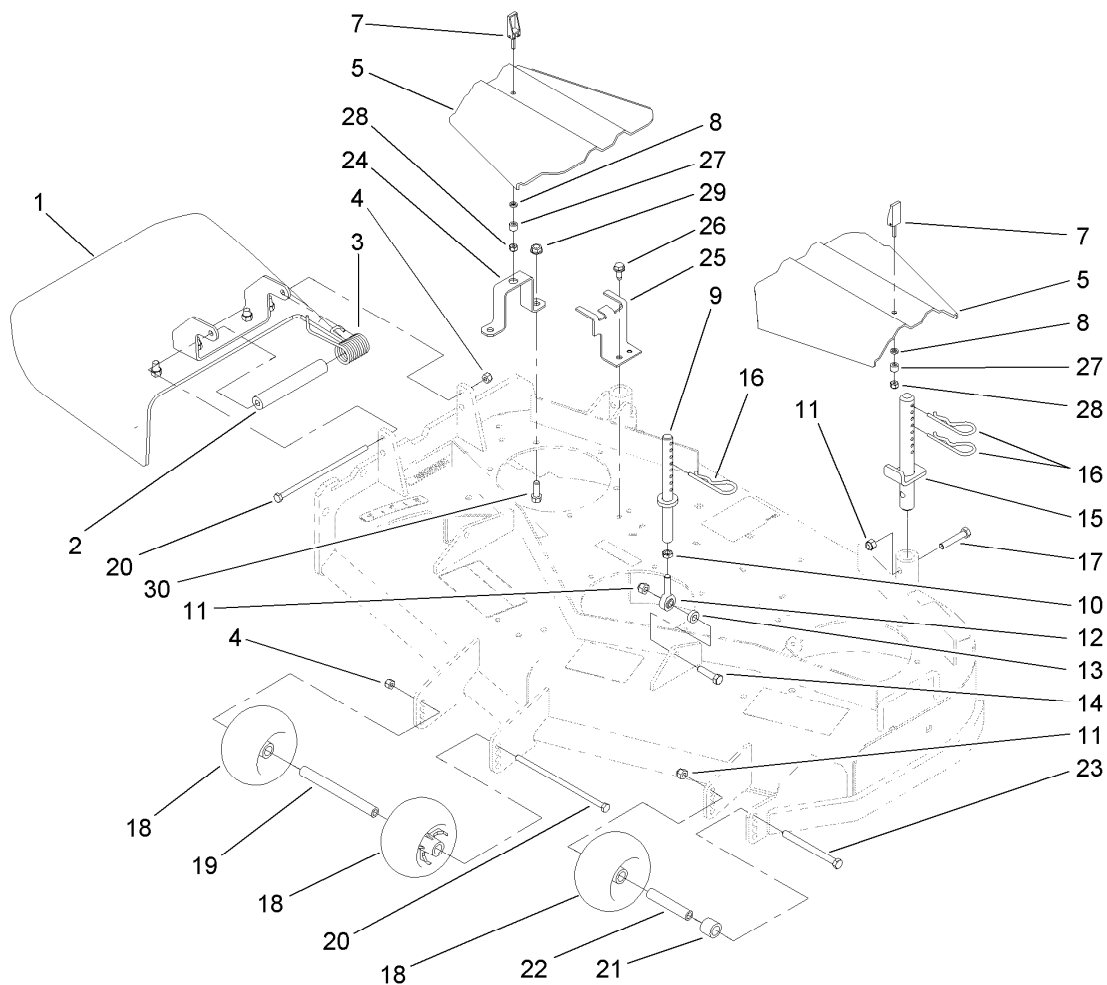

## Deck Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 110-0790    | 1    | Deflector ASM       |
| 2    | 105-4622    | 1    | Spacer              |
| 3    | 104-8554    | 1    | Spring-Torsion      |
| 4    | 3296-29     | 2    | Nut-Lock, NI        |
| 5    | 110-6984    | 2    | Cover-Belt          |
| 7    | 106-6777    | 2    | Handle-Latch, Swell |
| 8    | 99-3058     | 2    | Washer              |
| 9    | 108-2674    | 2    | Front Pin ASM       |
| 10   | 3220-3      | 2    | Nut-HJ              |
| 11   | 3296-39     | 5    | Nut-Lock, NI        |
| 12   | 1-613204    | 2    | Balljoint           |
| 13   | 104-1156    | 2    | Spacer              |
| 14   | 323-8       | 2    | Screw-HH            |
| 15   | 110-2086    | 2    | Rear Pin ASM        |
| 16   | 3290-256    | 6    | Pin-Hair            |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 17   | 323-10      | 2    | Screw-HH             |
| 18   | 1-603299    | 3    | Roller-Scalp, Anti   |
| 19   | 98-5967     | 1    | Spacer-Wheel         |
| 20   | 322-50      | 2    | Screw-HH             |
| 21   | 98-7913     | 1    | Tube-Spacer          |
| 22   | 98-7912     | 1    | Tube-Spanner         |
| 23   | 323-23      | 1    | Screw-HH             |
| 24   | 112-7053-01 | 2    | Bracket-Cover        |
| 25   | 112-7054-01 | 2    | Bracket-Cover        |
| 26   | 32144-70    | 2    | Screw-HWHTF          |
| 27   | 106-6778    | 2    | Bushing-Latch, Swell |
| 28   | 1-804254    | 2    | Nut                  |
| 29   | 3290-357    | 4    | Nut-HHF, Whiz        |
| 30   | 92-1624     | 4    | Screw-HWH            |

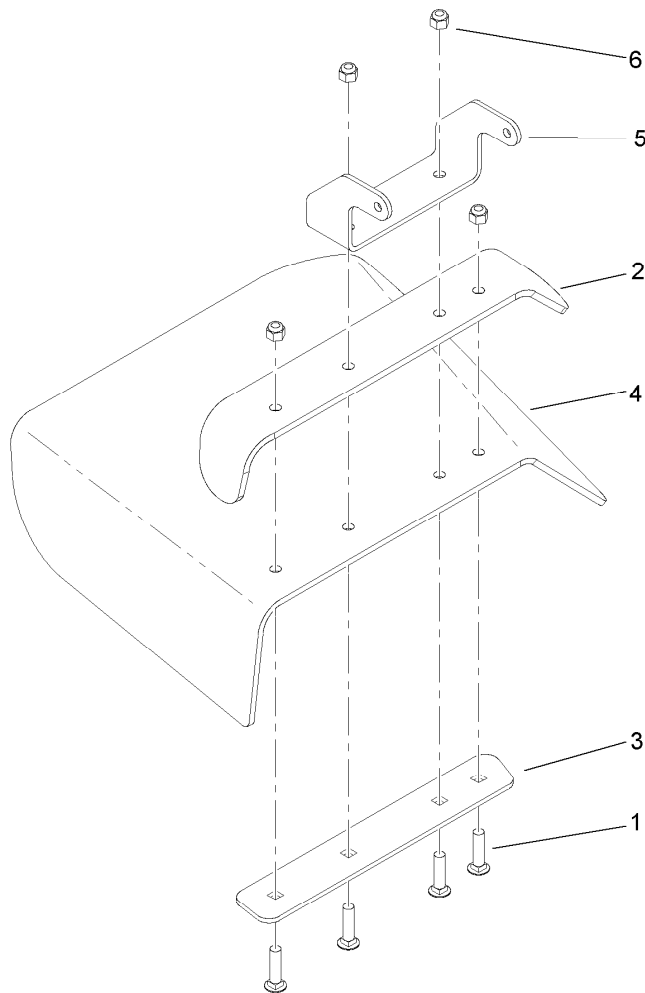

## Deflector Assembly No. 110-0790

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>          |
|-------------|--------------------|-------------|-----------------------------|
| 1           | 3231-4             | 4           | Screw-CARR                  |
| 2           | 110-0792-01        | 1           | Deflector                   |
| 3           | 110-0793-03        | 1           | Strap-Discharge             |
| 4           | 110-0791           | 1           | Deflector-Rubber            |
| 5           | 107-4164-01        | 1           | Bracket-Mounting, Deflector |
| 6           | 3296-39            | 4           | Nut-Lock, NI                |

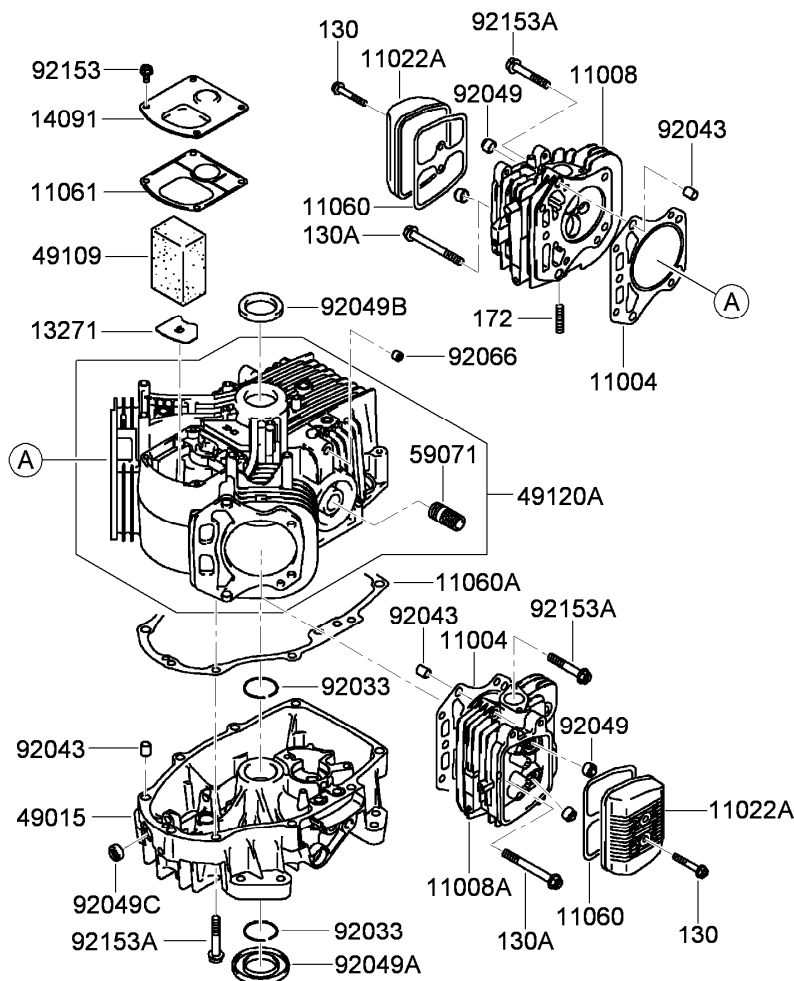


## Cylinder and Crankcase Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number | Qty. | Description               |
|--------|-------------|------|---------------------------|
| 130    | 130AA0640   | 4    | Bolt-Flanged (6X40) ●     |
| 130A   | 130CA0875   | 2    | Bolt-Flanged (8X75) ●     |
| 172    | 172BA0818   | 4    | Bolt-Stud (8X18) ●        |
| 11004  | 11004-7016  | 2    | Gasket-Head ●             |
| 11008  | 11008-6043  | 1    | Head-Cylinder, No. 1 ●    |
| 11008A | 11008-7020  | 1    | Head-Cylinder, No. 2 ●    |
| 11022A | 11022-7018  | 2    | Case-Rocker ●             |
| 11060  | 11060-7001  | 2    | Gasket-Case, Rocker ●     |
| 11060A | 11060-7008  | 1    | Gasket-Cover, Crankcase ● |
| 11061  | 11061-7001  | 1    | Gasket-Breather ●         |
| 13271  | 13271-7016  | 1    | Plate ●                   |
| 14091  | 14091-7006  | 1    | Cover ●                   |
| 49015  | 49015-6253  | 1    | Cover-Crankcase ●         |
| 49109  | 49109-7002  | 1    | Element-Breather ●        |
| 49120A | 49120-7113  | 1    | Crankcase ●               |

| Ref.   | Part Number | Qty. | Description                     |
|--------|-------------|------|---------------------------------|
| 59071  | 59071-2079  | 1    | Joint ●                         |
| 92033  | 92033-7003  | 2    | Ring-Snap ●                     |
| 92043  | 92043-7001  | 6    | Pin ●                           |
| 92049  | 92049-7001  | 4    | Seal-Oil, R V C2 (6X11X10.2) ●  |
| 92049A | 92049-7015  | 1    | Seal-Oil, S D (35X62X8 L HSH) ● |
| 92049B | 92049-7016  | 1    | Seal-Oil, S D (35X48X8 R HSH) ● |
| 92049C | 92049-7019  | 1    | Seal-Oil, S O (8X14X5 HSH) ●    |
| 92066  | 92066-7026  | 1    | Plug ●                          |
| 92153  | 92153-7043  | 4    | Bolt (6X12) ●                   |
| 92153A | 92153-7054  | 17   | Bolt (8X50) ●                   |


● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

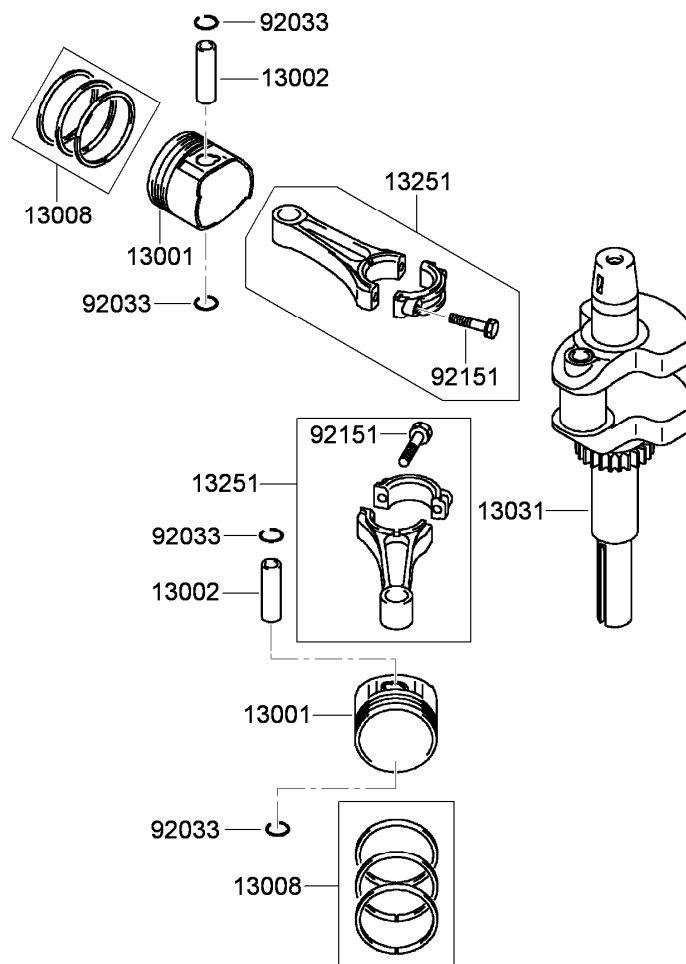

## Piston and Crankshaft Assembly Kawasaki FH541V-GS30

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 13001       | 13001-7010         | 2           | Piston-Engine ●      |
| 13002       | 13002-7001         | 2           | Pin-Piston ●         |
| 13008       | 13008-6060         | 2           | Piston Ring Set ●    |
| 13031       | 13031-7073         | 1           | Crankshaft ●         |
| 13251       | 13251-7010         | 2           | Connecting Rod ASM ● |
| 92033       | 92033-7002         | 4           | Ring-Snap ●          |
| 92151       | 92151-7017         | 4           | Bolt (6X35) ●        |


● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

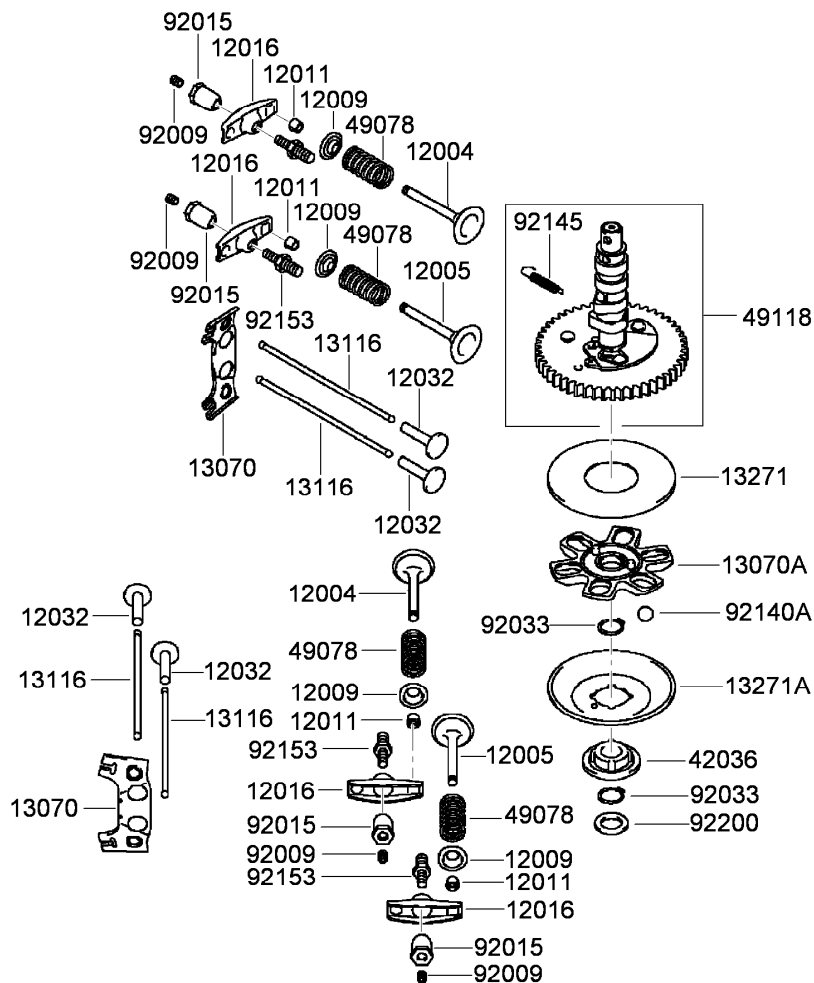

## Valve and Camshaft Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number | Qty. | Description              |
|--------|-------------|------|--------------------------|
| 12004  | 12004-7003  | 2    | Valve-Intake ●           |
| 12005  | 12005-7003  | 2    | Valve-Exhaust ●          |
| 12009  | 12009-7001  | 4    | Retainer-Spring, Valve ● |
| 12011  | 12011-2056  | 8    | Collet ●                 |
| 12016  | 12016-7008  | 4    | Arm-Rocker ●             |
| 12032  | 12032-7001  | 4    | Tappet ●                 |
| 13070  | 13070-7001  | 2    | Guide ●                  |
| 13070A | 13070-7004  | 1    | Guide ●                  |
| 13116  | 13116-2057  | 4    | Rod-Push ●               |
| 13271  | 13271-7007  | 1    | Plate ●                  |
| 13271A | 13271-7021  | 1    | Plate-Governor ●         |
| 42036  | 42036-7010  | 1    | Sleeve ●                 |
| 49078  | 49078-7001  | 4    | Spring-Valve, Engine ●   |
| 49118  | 49118-7004  | 1    | Camshaft ●               |
| 92009  | 92009-2341  | 4    | Screw ●                  |
| 92015  | 92015-2253  | 4    | Nut ●                    |
| 92033  | 92033-7001  | 2    | Ring-Snap ●              |
| 92140A | 92140-7005  | 6    | Ball ●                   |
| 92145  | 92145-7001  | 1    | Spring ●                 |
| 92153  | 92153-7019  | 4    | Bolt ●                   |
| 92200  | 92200-7001  | 1    | Washer ●                 |


● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

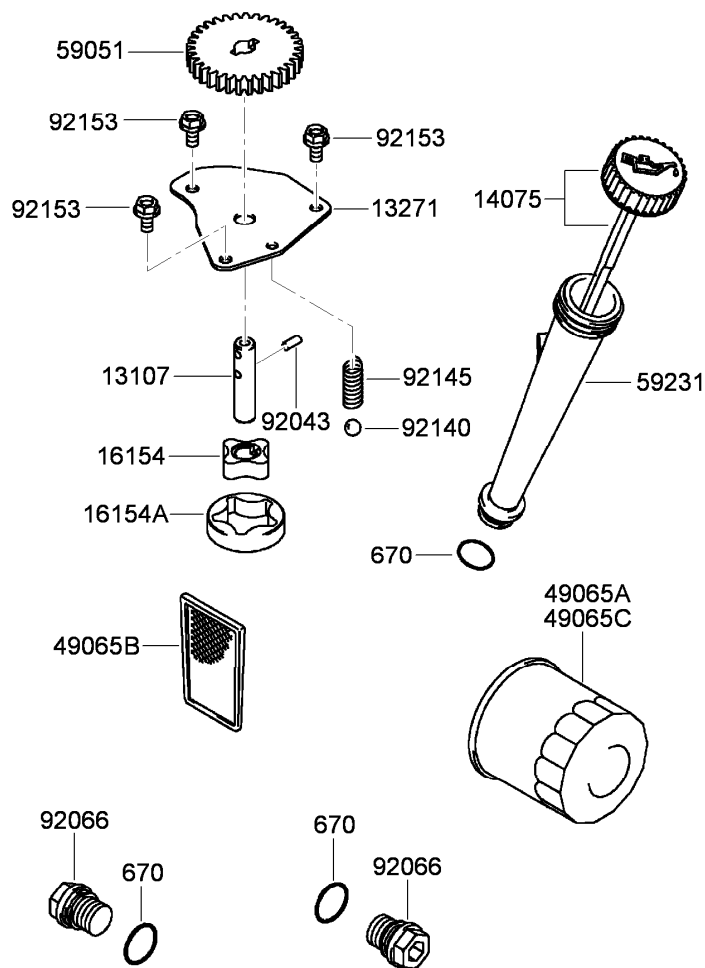

## Lubrication Equipment Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number | Qty. | Description                                                                                         |
|--------|-------------|------|-----------------------------------------------------------------------------------------------------|
| 670    | 670D2016    | 3    | O-Ring (16Mm) ●                                                                                     |
| 13107  | 13107-7009  | 1    | Shaft ●                                                                                             |
| 13271  | 13271-7017  | 1    | Plate ●                                                                                             |
| 14075  | 14075-7009  | 1    | Cap ASM ●                                                                                           |
| 16154  | 16154-2053  | 1    | Rotor-Pump (In) ●                                                                                   |
| 16154A | 16154-2054  | 1    | Rotor-Pump (Out) ●                                                                                  |
| 49065A | 49065-2078  | 1    | Filter-Oil (Part May Be<br>Used As Substitute And Is<br>Supplied Until The Stock Is<br>Exhausted) ● |
| 49065B | 49065-7004  | 1    | Filter-Oil ●                                                                                        |
| 49065C | 49065-7010  | 1    | Filter-Oil ●                                                                                        |
| 59051  | 59051-7011  | 1    | Gear-Spur ●                                                                                         |
| 59231  | 59231-7005  | 1    | Filler ●                                                                                            |
| 92043  | 92043-7003  | 2    | Pin ●                                                                                               |
| 92066  | 92066-7003  | 2    | Plug ●                                                                                              |
| 92140  | 92140-7003  | 1    | Ball ●                                                                                              |
| 92145  | 92145-7002  | 1    | Spring ●                                                                                            |
| 92153  | 92153-7043  | 3    | Bolt (6X12) ●                                                                                       |


● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

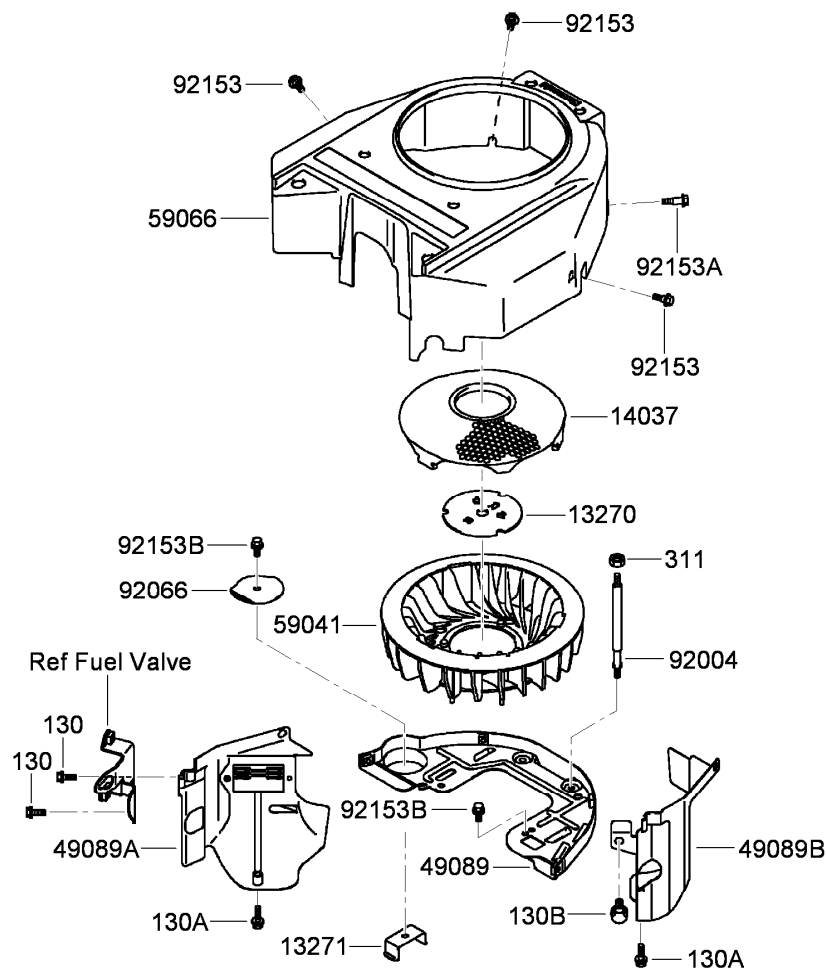

## Cooling Equipment Assembly Kawasaki FH541V-GS30


| Ref.   | Part Number   | Qty. | Description           |
|--------|---------------|------|-----------------------|
| 130    | 130AA0616     | 2    | Bolt-Flanged (6X16) ● |
| 130A   | 130AA0625     | 2    | Bolt-Flanged (6X25) ● |
| 130B   | 130AA0816     | 1    | Bolt-Flanged (8X16) ● |
| 311    | 311AA0600     | 2    | Nut-Hex (6Mm) ●       |
| 13270  | 13270-7007    | 1    | Plate ●               |
| 13271  | 13271-7002    | 1    | Plate ●               |
| 14037  | 14037-7025-9H | 1    | Screen ●              |
| 49089  | 49089-7032    | 1    | Shroud-Engine ●       |
| 49089A | 49089-7042    | 1    | Shroud-Engine ●       |
| 49089B | 49089-7043    | 1    | Shroud-Engine ●       |
| 59041  | 59041-7012    | 1    | Fan ●                 |
| 59066  | 59066-7037    | 1    | Housing-Fan ●         |
| 92004  | 92004-7006    | 2    | Stud ●                |
| 92066  | 92066-7004    | 1    | Plug ●                |
| 92153  | 92153-7007    | 3    | Bolt ●                |
| 92153A | 92153-7008    | 1    | Bolt ●                |
| 92153B | 92153-7043    | 3    | Bolt (6X12) ●         |



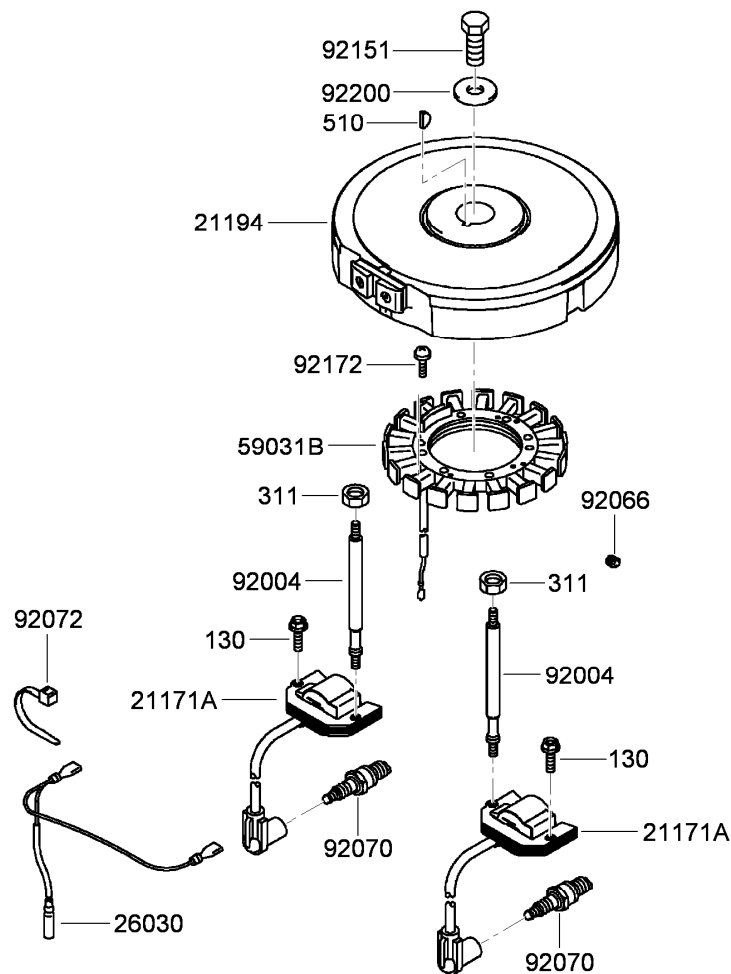

## Electric Equipment Assembly Kawasaki FH541V-GS30


| Ref.   | Part Number | Qty. | Description                     |
|--------|-------------|------|---------------------------------|
| 130    | 130AA0620   | 2    | Bolt-Flanged (6X20) ●           |
| 311    | 311AA0600   | 2    | Nut-Hex (6Mm) ●                 |
| 510    | 510A5100    | 1    | Key-Woodruff ●                  |
| 21171A | 21171-7034  | 2    | Ignition Coil ASM ●             |
| 21194  | 21194-7026  | 1    | Flywheel ●                      |
| 26030  | 26030-7001  | 1    | Harness ●                       |
| 59031B | 59031-7011  | 1    | Coil-Charging ●                 |
| 92004  | 92004-7009  | 2    | Stud ●                          |
| 92066  | 92066-7026  | 1    | Plug ●                          |
| 92070  | 92070-7003  | 2    | Spark Plug (R C J 8 Y, Solid) ● |
| 92072  | 92072-7003  | 3    | Band ●                          |
| 92151  | 92151-2097  | 1    | Bolt (12X30) ●                  |
| 92172  | 92172-7018  | 4    | Screw (5X20) ●                  |
| 92200  | 92200-7002  | 1    | Washer ●                        |

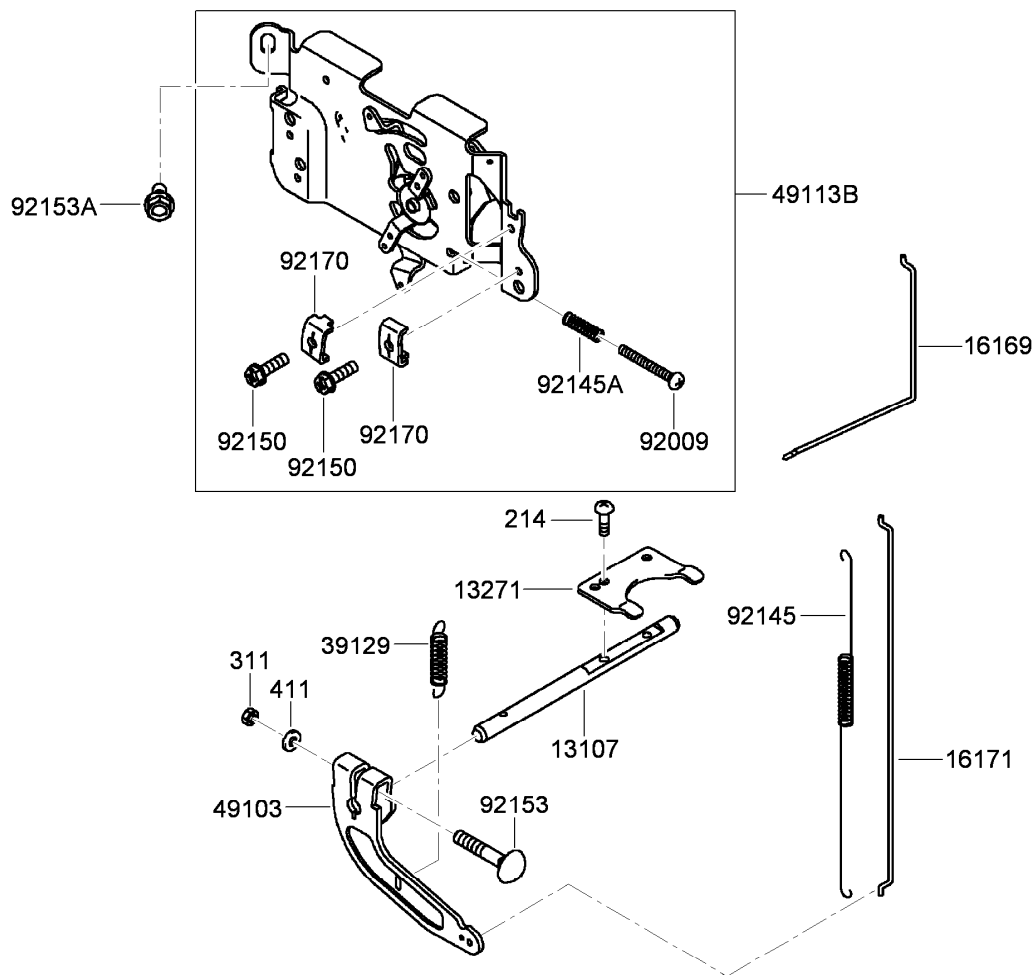

## Control Equipment Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number | Qty. | Description          |
|--------|-------------|------|----------------------|
| 214    | 214AA0408   | 2    | Screw-Pan +-(4X8) ●  |
| 311    | 311AA0600   | 1    | Nut-Hex (6Mm) ●      |
| 411    | 411AA0600   | 1    | Washer-Plain (6Mm) ● |
| 13107  | 13107-7010  | 1    | Shaft ●              |
| 13271  | 13271-7032  | 1    | Plate ●              |
| 16169  | 16169-7010  | 1    | Link-Choke ●         |
| 16171  | 16171-7001  | 1    | Link ●               |
| 39129  | 39129-7003  | 1    | Spring-Governor ●    |
| 49103  | 49103-7004  | 1    | Arm-Governor ●       |
| 49113B | 49113-7054  | 1    | Control Panel ASM ●  |
| 92009  | 92009-7007  | 1    | Screw (4X35) ●       |
| 92145  | 92145-7003  | 1    | Spring ●             |
| 92145A | 92145-7005  | 1    | Spring ●             |
| 92150  | 92150-2182  | 2    | Bolt (5X18) ●        |
| 92153  | 92153-7033  | 1    | Bolt (6X35) ●        |
| 92153A | 92153-7043  | 2    | Bolt (6X12) ●        |
| 92170  | 92170-7001  | 2    | Clamp ●              |

● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

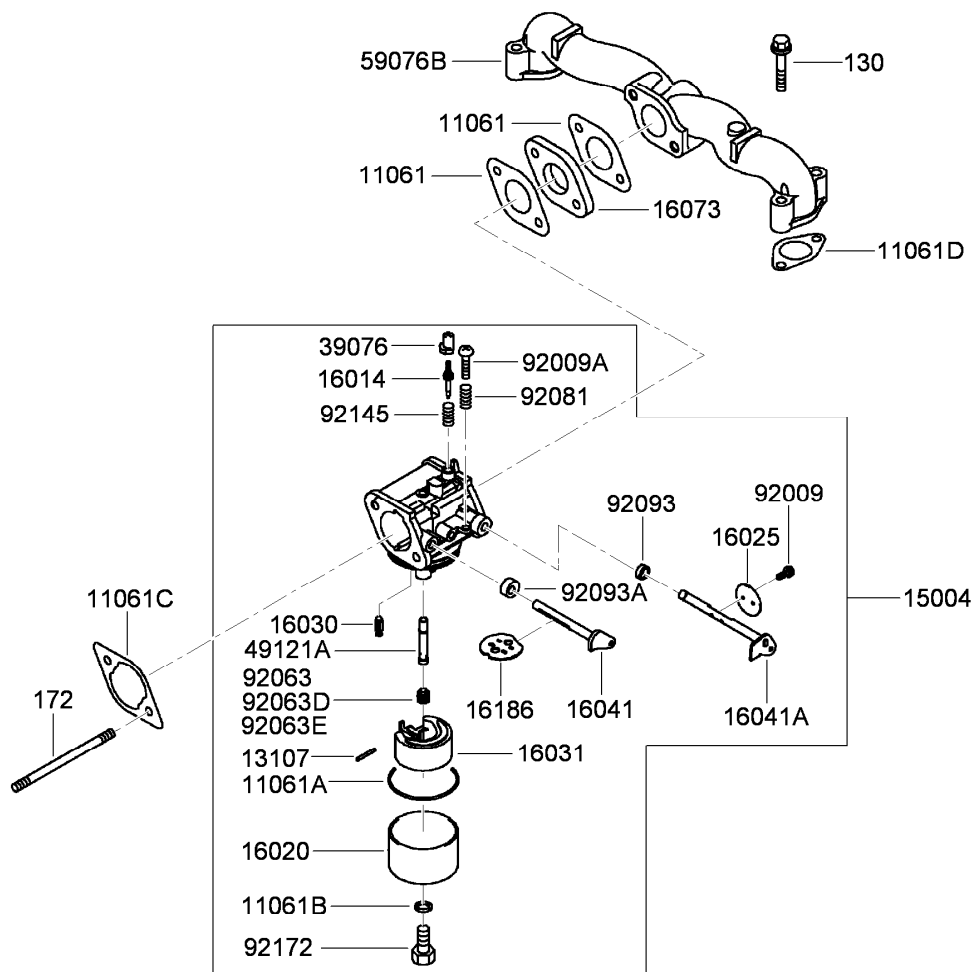


## Carburetor Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number | Qty. | Description                  |
|--------|-------------|------|------------------------------|
| 130    | 130AA0635   | 4    | Bolt-Flanged (6X35) ●        |
| 172    | 172BA0690   | 2    | Bolt-Stud (6X90) ●           |
| 11061  | 11061-7004  | 2    | Gasket-Insulator ●           |
| 11061A | 11061-7009  | 1    | Gasket-Chamber ●             |
| 11061B | 11061-7010  | 1    | Gasket-Screw ●               |
| 11061C | 11061-7018  | 1    | Gasket-Cleaner, Air ●        |
| 11061D | 11061-7019  | 2    | Gasket ●                     |
| 13107  | 13107-7018  | 1    | Shaft ●                      |
| 15004  | 15004-7057  | 1    | Carburetor ASM ●             |
| 16014  | 16014-7005  | 1    | Screw-Air, Pilot ●           |
| 16020  | 16020-7003  | 1    | Chamber-Float ●              |
| 16025  | 16025-7006  | 1    | Valve-Throttle ●             |
| 16030  | 16030-7003  | 1    | Valve-Float ●                |
| 16031  | 16031-7002  | 1    | Float ●                      |
| 16041  | 16041-7016  | 1    | Shaft-Choke, Carburetor ●    |
| 16041A | 16041-7018  | 1    | Shaft-Throttle, Carburetor ● |

| Ref.   | Part Number | Qty. | Description                 |
|--------|-------------|------|-----------------------------|
| 16073  | 16073-7007  | 1    | Insulator ●                 |
| 16186  | 16186-7001  | 1    | Choke Valve ASM ●           |
| 39076  | 39076-7001  | 1    | Limiter ●                   |
| 49121A | 49121-7017  | 1    | Nozzle-Main ●               |
| 59076B | 59076-7017  | 1    | Manifold-Intake ●           |
| 92009  | 92009-2083  | 2    | Screw ●                     |
| 92009A | 92009-2349  | 1    | Screw ●                     |
| 92063  | 92063-7029  | 1    | Jet-Main, No.82 (6560 Ft) ● |
| 92063D | 92063-7147  | 1    | Jet-Main, No.86 ●           |
| 92063E | 92063-7148  | 1    | Jet-Main-No.84 (3280 Ft) ●  |
| 92081  | 92081-2234  | 1    | Spring ●                    |
| 92093  | 92093-2100  | 1    | Seal ●                      |
| 92093A | 92093-7003  | 1    | Seal ●                      |
| 92145  | 92145-7015  | 1    | Spring ●                    |
| 92172  | 92172-7002  | 1    | Screw ●                     |


● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

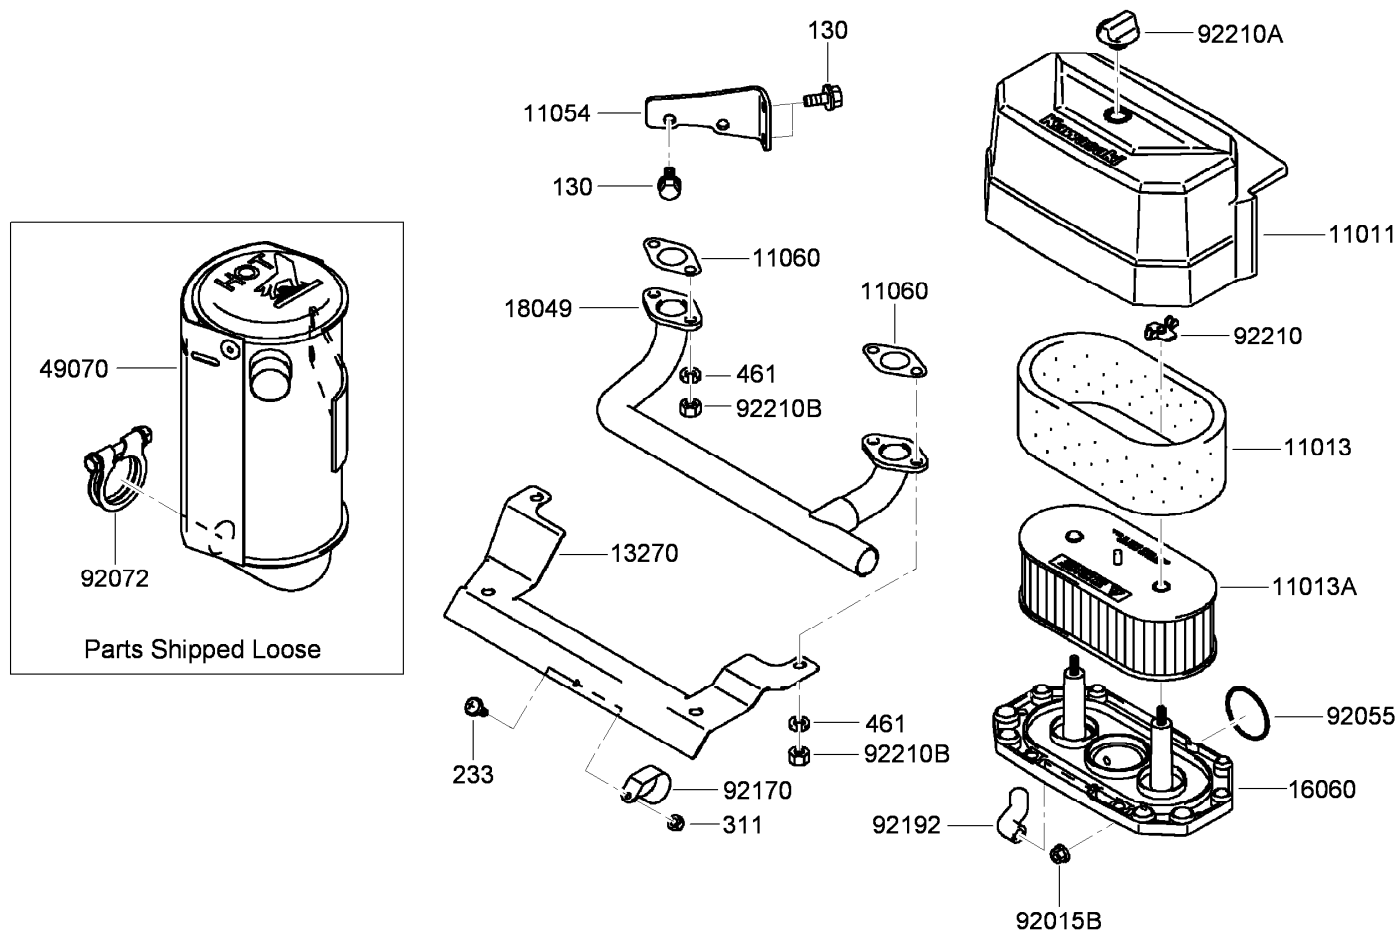

## Air Filter and Muffler Assembly Kawasaki FH541V-GS30


| Ref.   | Part Number   | Qty. | Description              |
|--------|---------------|------|--------------------------|
| 130    | 130AA0816     | 3    | Bolt-Flanged (8X16) ●    |
| 233    | 233AA0416     | 1    | Screw-Pan, Wp +-(4X16) ● |
| 311    | 311AA0400     | 1    | Nut-Hex (4Mm) ●          |
| 461    | 461DA0800     | 4    | Washer-Spring (8Mm) ●    |
| 11011  | 11011-7046    | 1    | Case-Filter, Air ●       |
| 11013  | 11013-7025    | 1    | Element-Filter, Air ●    |
| 11013A | 11013-7031    | 1    | Element-Filter, Air ●    |
| 11054  | 11054-7002-9H | 1    | Bracket ●                |
| 11060  | 11060-7021    | 2    | Gasket-Muffler ●         |
| 13270  | 13270-7008    | 1    | Plate ●                  |
| 16060  | 16060-7016    | 1    | Pipe-Intake ●            |
| 18049  | 18049-7001    | 1    | Pipe-Exhaust ●           |
| 49070  | 49070-7021    | 1    | Muffler ●                |
| 92015B | 92015-1367    | 2    | Nut ●                    |
| 92055  | 92055-7015    | 1    | O-Ring ●                 |
| 92072  | 92072-7012    | 1    | Band ●                   |
| 92170  | 92170-7002    | 1    | Clamp ●                  |
| 92192  | 92192-7010    | 1    | Tube ●                   |
| 92210  | 92210-7004    | 2    | Nut (M6) ●               |
| 92210A | 92210-7019    | 1    | Nut ●                    |
| 92210B | 92210-7027    | 4    | Nut (M8) ●               |

● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

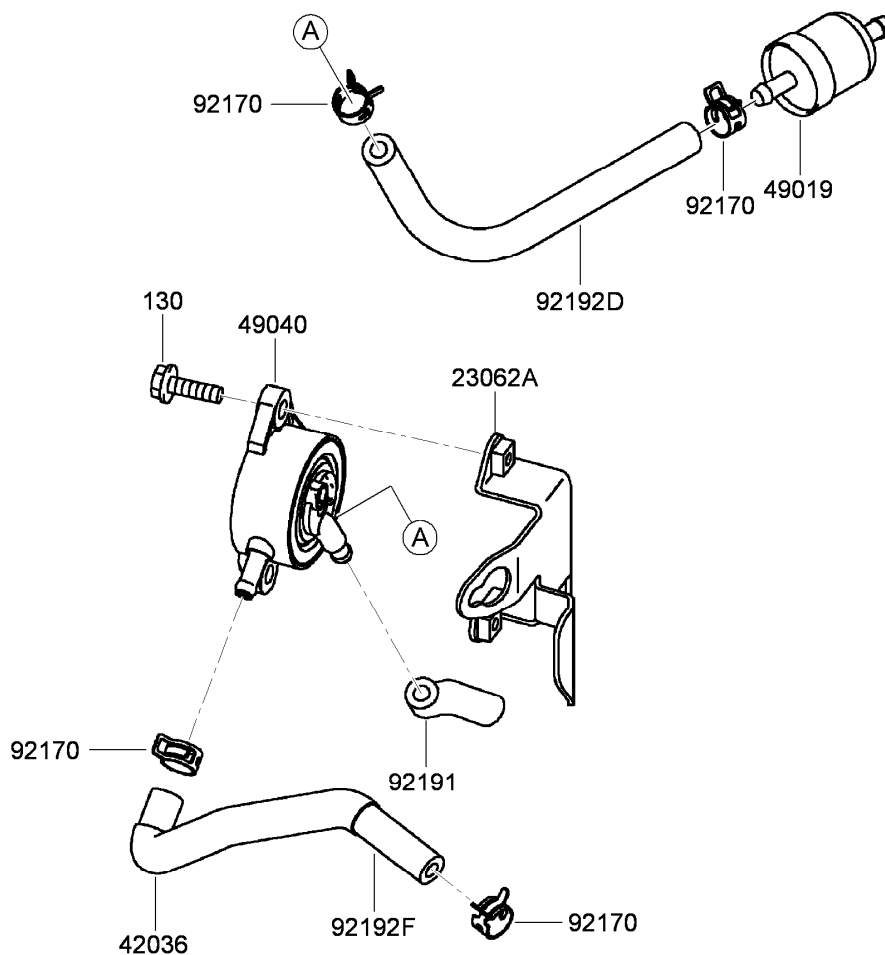

## Fuel Tank and Valve Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number   | Qty. | Description            |
|--------|---------------|------|------------------------|
| 130    | 130AA0620     | 2    | Bolt-Flanged (6X20) ●  |
| 23062A | 23062-7019-9H | 1    | Bracket ●              |
| 42036  | 42036-7012    | 1    | Sleeve ●               |
| 49019  | 49019-7001    | 1    | Filter-Fuel ●          |
| 49040  | 49040-7001    | 1    | Pump-Fuel ●            |
| 92170  | 92170-2009    | 4    | Clamp ●                |
| 92191  | 92191-7002    | 1    | Tube ●                 |
| 92192D | 92192-7135    | 1    | Tube (6.35X12.7X160) ● |
| 92192F | 92192-7136    | 1    | Tube (6.35X12.7X180) ● |

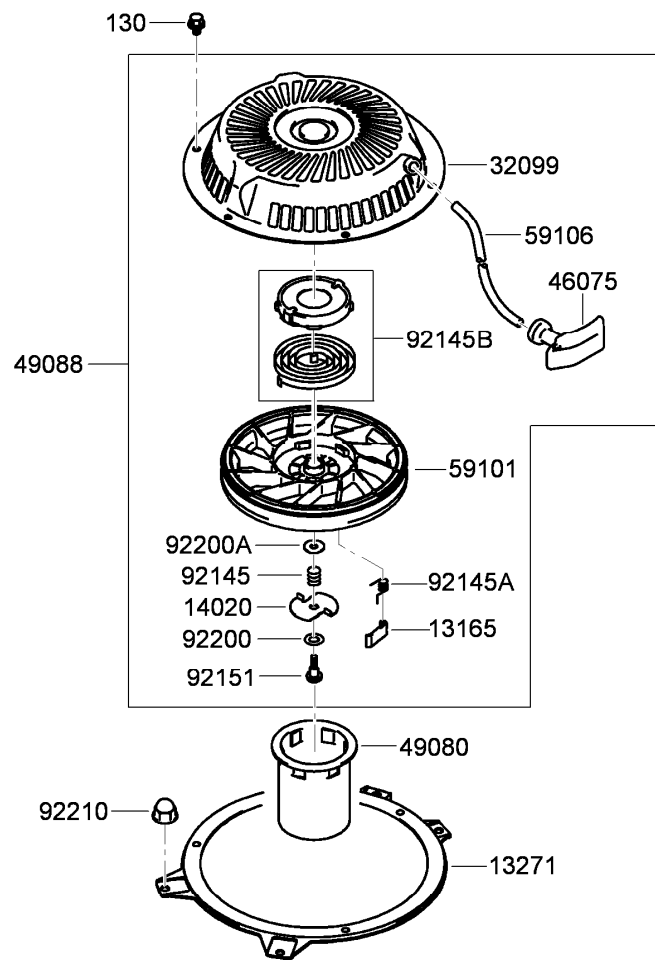

## Starter Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number   | Qty. | Description            |
|--------|---------------|------|------------------------|
| 130    | 130AA0608     | 3    | Bolt-Flanged (6X8) ●   |
| 13165  | 13165-7001    | 2    | Pawl-Starter, Recoil ● |
| 13271  | 13271-7003-9H | 1    | Plate ●                |
| 14020  | 14020-7001    | 1    | Retainer ●             |
| 32099  | 32099-7002    | 1    | Case-Starter, Recoil ● |
| 46075  | 46075-7001    | 1    | Grip-Starter, Recoil ● |
| 49080  | 49080-7001    | 1    | Pulley-Starting ●      |
| 49088  | 49088-7013    | 1    | Starter-Recoil ●       |
| 59101  | 59101-7001    | 1    | Reel-Starter, Recoil ● |
| 59106  | 59106-7005    | 1    | Rope ●                 |
| 92145  | 92145-7006    | 1    | Spring ●               |
| 92145A | 92145-7007    | 2    | Spring ●               |
| 92145B | 92145-7008    | 1    | Spring ●               |
| 92151  | 92151-7008    | 1    | Bolt ●                 |
| 92200  | 92200-7004    | 1    | Washer ●               |
| 92200A | 92200-7005    | 1    | Washer ●               |
| 92210  | 92210-0003    | 4    | Nut ●                  |

● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

56033



56070



56080



56080B



## Label Assembly Kawasaki FH541V-GS30

| Ref.   | Part Number | Qty. | Description     |
|--------|-------------|------|-----------------|
| 56033  | 56033-7001  | 1    | Label-Manual ●  |
| 56070  | 56070-7001  | 1    | Label-Warning ● |
| 56080  | 56080-2077  | 1    | Label-Brand ●   |
| 56080B | 56080-7056  | 1    | Label-Brand ●   |

● Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

# Attachments and Accessories

## For 38096 Commercial Walk-Behind Mower, Floating Deck, T-Bar, Gear Drive with 40in TURBO FORCE Cutting Unit

| Product Name                                  | Model/Part  |
|-----------------------------------------------|-------------|
| Blade-Rotary, 14 Inch (Recycling) .....       | 108-4089-03 |
| Blade-Rotary, 14 Inch (Mid Flow) .....        | 108-4110-03 |
| Blade-Rotary, 14 Inch (Low Flow) .....        | 108-4111-03 |
| Blade-Rotary, 14 Inch (Atomic) .....          | 108-4112-03 |
| 40 Inch Bagger Enhancement Kit .....          | 110-2025    |
| 40 Inch Recycler Kit .....                    | 110-2070    |
| Plate Kit .....                               | 110-6902    |
| Weight-Cast .....                             | 112-7059-01 |
| Weight Kit .....                              | 112-9971    |
| Blade-Recycler, 14 Inch (6-pack) .....        | 114-4961    |
| Blade-Low Flow, 14inch (6-pack) .....         | 114-4962    |
| Blade-Mid Flow, 14 Inch (6-pack) .....        | 114-4963    |
| Blade-High Flow, 14 Inch (6-pack) .....       | 114-4964    |
| Blade-Atomic, 14 Inch (6-pack) .....          | 114-4965    |
| Operator-Controlled Discharge Chute Kit ..... | 115-4190    |
| Soft Bag (3 Bushel) .....                     | 30104       |
| Tru Trak Sulky .....                          | 30110       |



**Notes:**

**Notes:**

**Notes:**



**Count on it.**