



TimeCutter™ Z4200 Riding Mower

Model No. 74360 - 290001199 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame Assembly	 3	Oil Pan and Lubrication Assembly Kohler SV590-0212	 20
Deck Lift and Seat Support Assembly	 4	Head, Valve and Breather Assembly Kohler SV590-0212	 21
Seat Assembly	 5	Ignition and Electrical Assembly Kohler SV590-0212	 22
Control Assembly	 6	Blower Housing Assembly Kohler SV590-0212	 23
Hydro Drive Assembly	 7	Starter Assembly Kohler SV590-0212	 24
RH Hydro Assembly No. 110-6771	 8	Fuel System Assembly Kohler SV590-0212	 25
LH Hydro Assembly No. 110-6770	 10	Engine Control Assembly Kohler SV590-0212	 26
Engine, Muffler and Clutch Assembly	 12	Air Intake and Filtration Assembly Kohler SV590-0212	 27
Styling and Fuel System Assembly	 13	Gaskets Kohler SV590-0212	 28
42 Inch Deck Assembly	 14	Decals Kohler SV590-0212	 29
42 Inch Deck Assembly No. 117-1290	 15	Attachments and Accessories List	 30
42 Inch Deck Spindle and Belt Drive Assembly	 16		
Electrical Assembly	 17		
Crankshaft Assembly Kohler SV590-0212	 18		
Crankcase Assembly Kohler SV590-0212	 19		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	LH. left hand
CARR. carriage	NI. nylon insert
CCW. counter clock wise	NPTF. national pipe thread fine
CW. clockwise	PFH. phillips flat head
DEG. degrees	PPH. phillips pan head
ECM. electronic control module	PPHTF. phillips pan head thread forming
EXT. external	PRH. phillips round head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power-take-off
HD. heavy-duty	RH. right hand
HF. hex flange	ROPS. roll-over protection system
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HSBH. hex socket button head	STD. standard
HSFH. hex socket flat head	TAP. self tapping
HSH. hex socket head	TTH. torx truss head
HWH. hex washer head	

Footnotes


- | | |
|----------------------|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Optional Equipment | ❹ Obtain parts from www.kohlerplus.com |

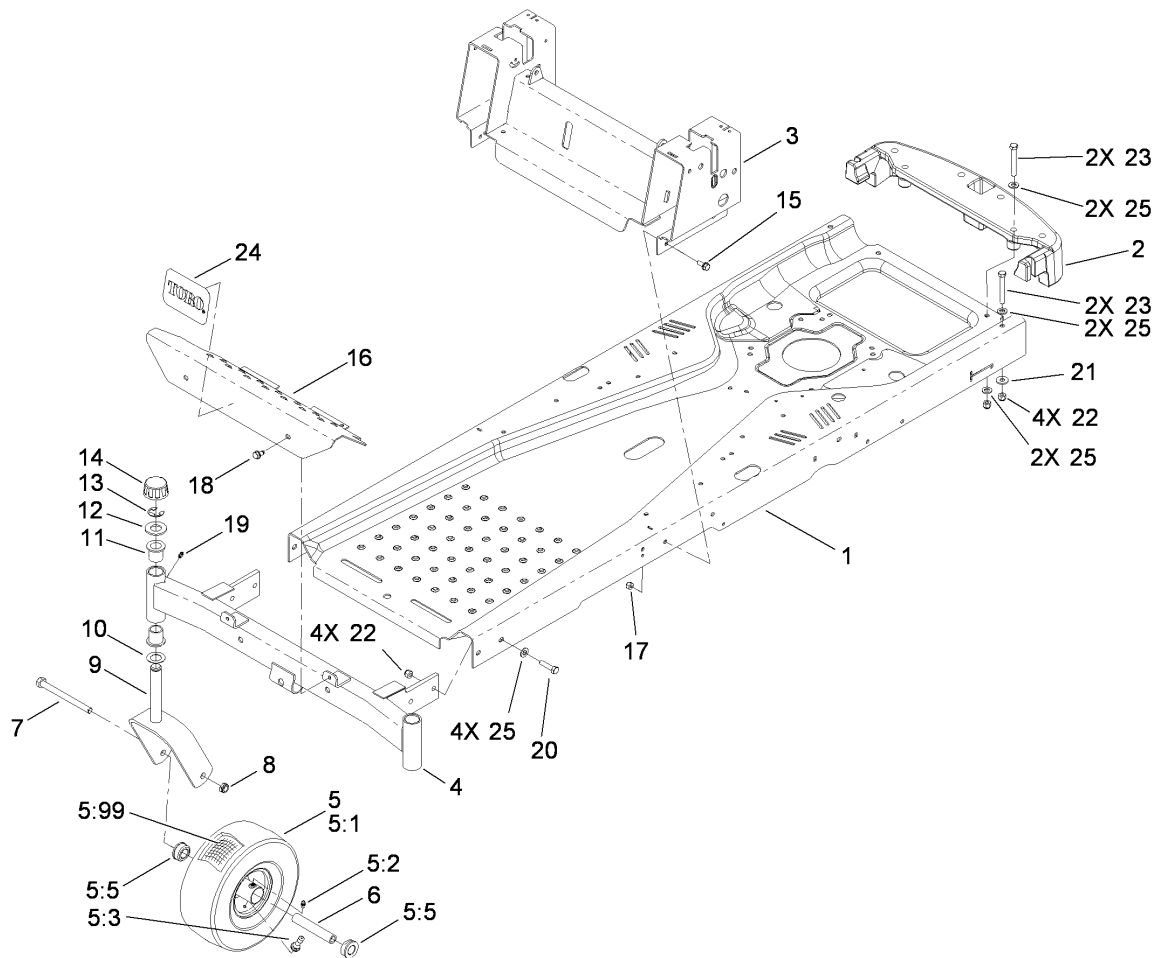

Frame Assembly


Ref	Part No.	Qty.	Description
1	115-2464-01	1	Frame
2	110-6899-03	1	Bumper-Rear
3	115-5041-03	1	Seat Pivot/Control ASM
4	108-7882-01	1	Front Axle ASM
5	105-3471	2	Front Wheel And Tire ASM
5:1	105-1943	1	Tire
5:2	302-5	1	Fitting-Grease
5:3	232-27	1	Stem-Valve
5:5	114-1640	2	Bushing-Flange
5:99	93-4244	1	Tube-Inner (W/Valve)
6	104-3667	2	Spanner-Wheel
7	325-22	2	Screw-HH
8	3296-45	2	Nut-Lock, NI
9	108-7851-01	2	Caster Fork ASM
10	110-6767	2	Washer-Thrust
11	1-303514	4	Bearing-Flanged
12	104-8076	2	Washer
13	32151-103	2	Ring-Retaining, EXT
14	61-9780	2	Cap-Hub
15	3234-47	7	Screw-HHF
16	108-7855-03	1	Footrest
17	3296-29	7	Nut-Lock, NI
18	32104-32	2	Screw-HWH
19	302-5	2	Fitting-Grease

Ref	Part No.	Qty.	Description
20	323-8	4	Screw-HH
21	80-6990	2	Washer-Hardened
22	3296-39	8	Nut-Lock, NI
23	323-13	4	Screw-HH
24	99-2385	1	Decal
25	3256-24	10	Washer-Flat

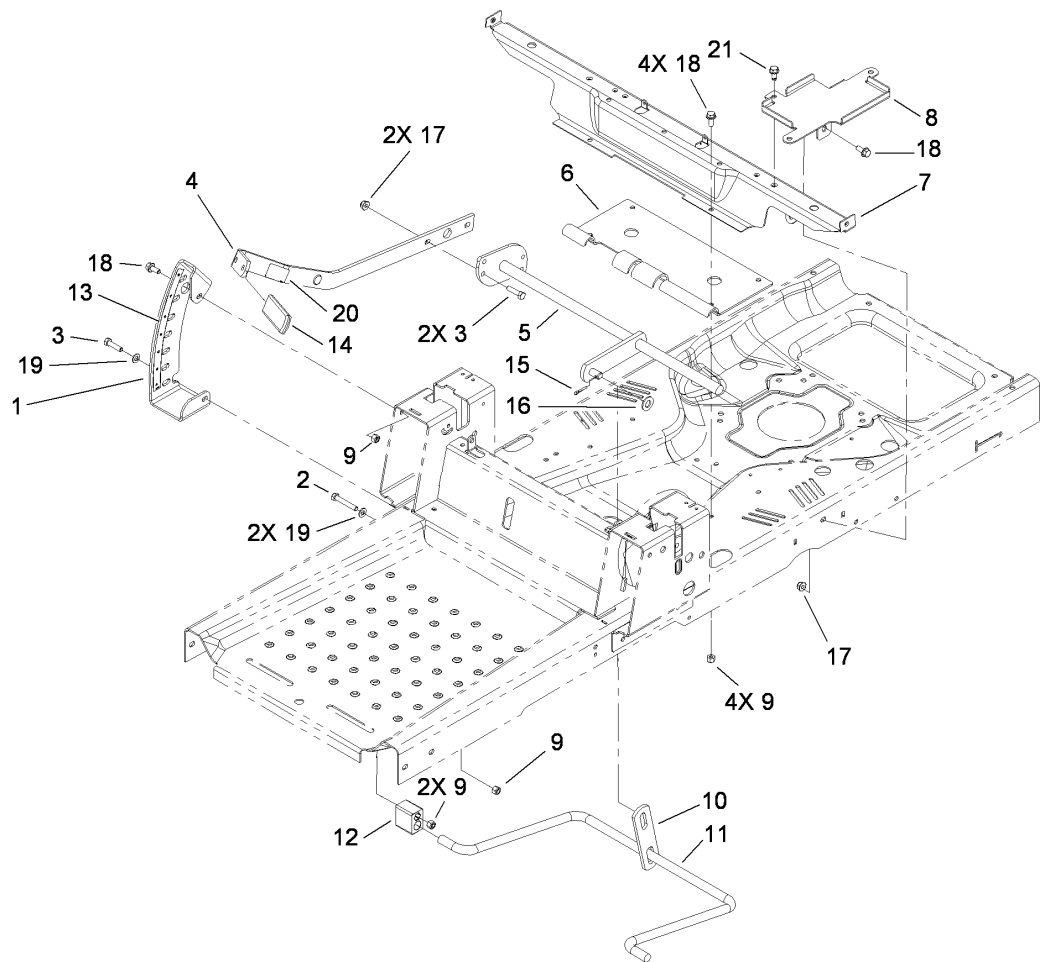


Deck Lift and Seat Support Assembly

Ref	Part No.	Qty.	Description				
1	112-4027-03	1	Sector-HOC				
2	322-10	2	Screw-HH				
3	322-6	3	Screw-HH				
4	112-3960-03	1	Lift Arm ASM				
5	108-7841-03	1	Lift Lever ASM				
6	110-6800-03	1	Plate-Lift				
7	110-6805-03	1	Bracket-Seat/Pods				
8	110-1937-03	1	Tray-Battery				
9	3296-29	8	Nut-Lock, NI				
10	108-7840	1	Link-Lift				
11	108-7839	1	Arm-Lift, Rear				
12	108-7845	2	Block-Pivot				
13	112-9802	1	Decal-HOC				
14	105-3450	1	Grip-Lever, Lift				
15	3272-10	1	Pin-Cotter				
16	3256-26	1	Washer-Flat				
17	104-8300	3	Nut-Flange, NI				
18	3234-47	6	Screw-HHF				
19	3256-23	3	Washer-Flat				
20	106-8743	1	Decal				
21	32104-32	1	Screw-HWH				

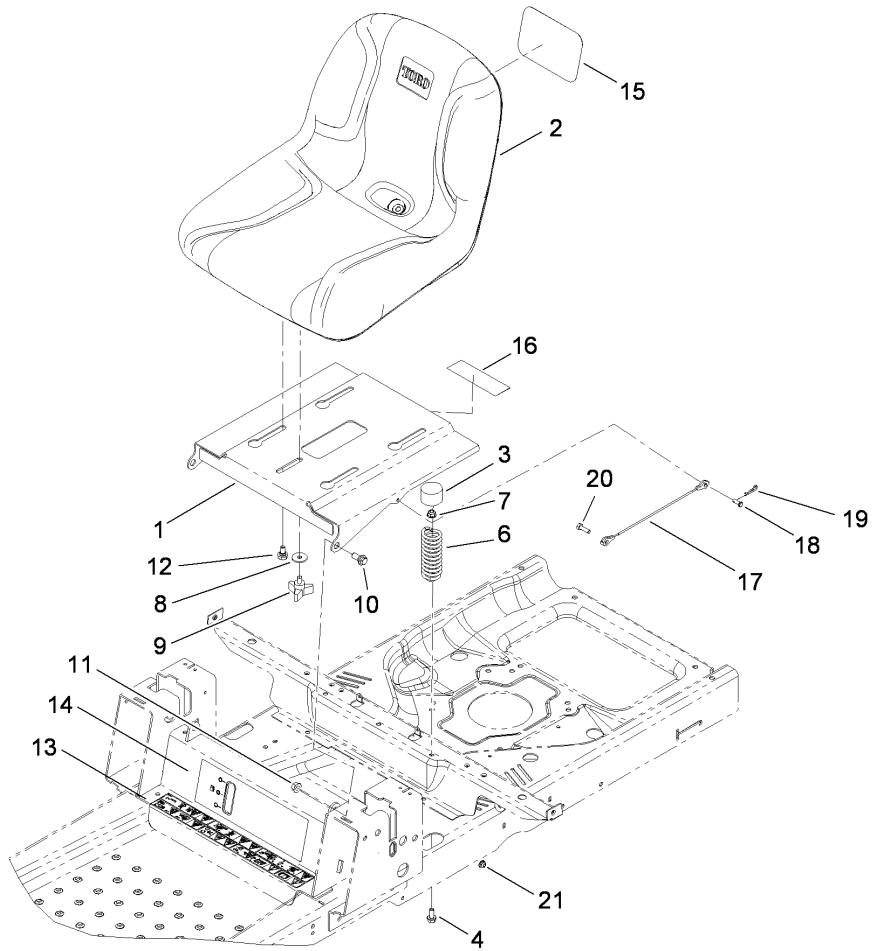

Seat Assembly


Ref	Part No.	Qty.	Description				
1	115-2465-03	1	Base-Seat				
2	117-1225	1	Seat-15 Inch				
3	701178	2	Cap-Protector				
4	3234-47	2	Screw-HHF				
6	92-7054	2	Spring-Compression				
7	104-8300	2	Nut-Flange, NI				
8	5-4460	1	Washer-Pivot				
9	92-9674	1	Knob				
10	94-7582	2	Bolt-Shoulder				
11	32128-21	2	Nut-HF				
12	37-8771	4	Bolt-Shoulder				
13	115-2469	1	Decal-Danger				
14	115-2450	1	Decal				
15	99-4693	1	Decal				
16	106-8717	1	Decal-Service				
17	109-2628	1	Cable-Stop, Seat				
18	60-1730	1	Pin-Clevis				
19	1-806003	1	Pin-Cotter, Hair				
20	321-5	1	Screw-HH				
21	104-7201	1	Nut-HF				

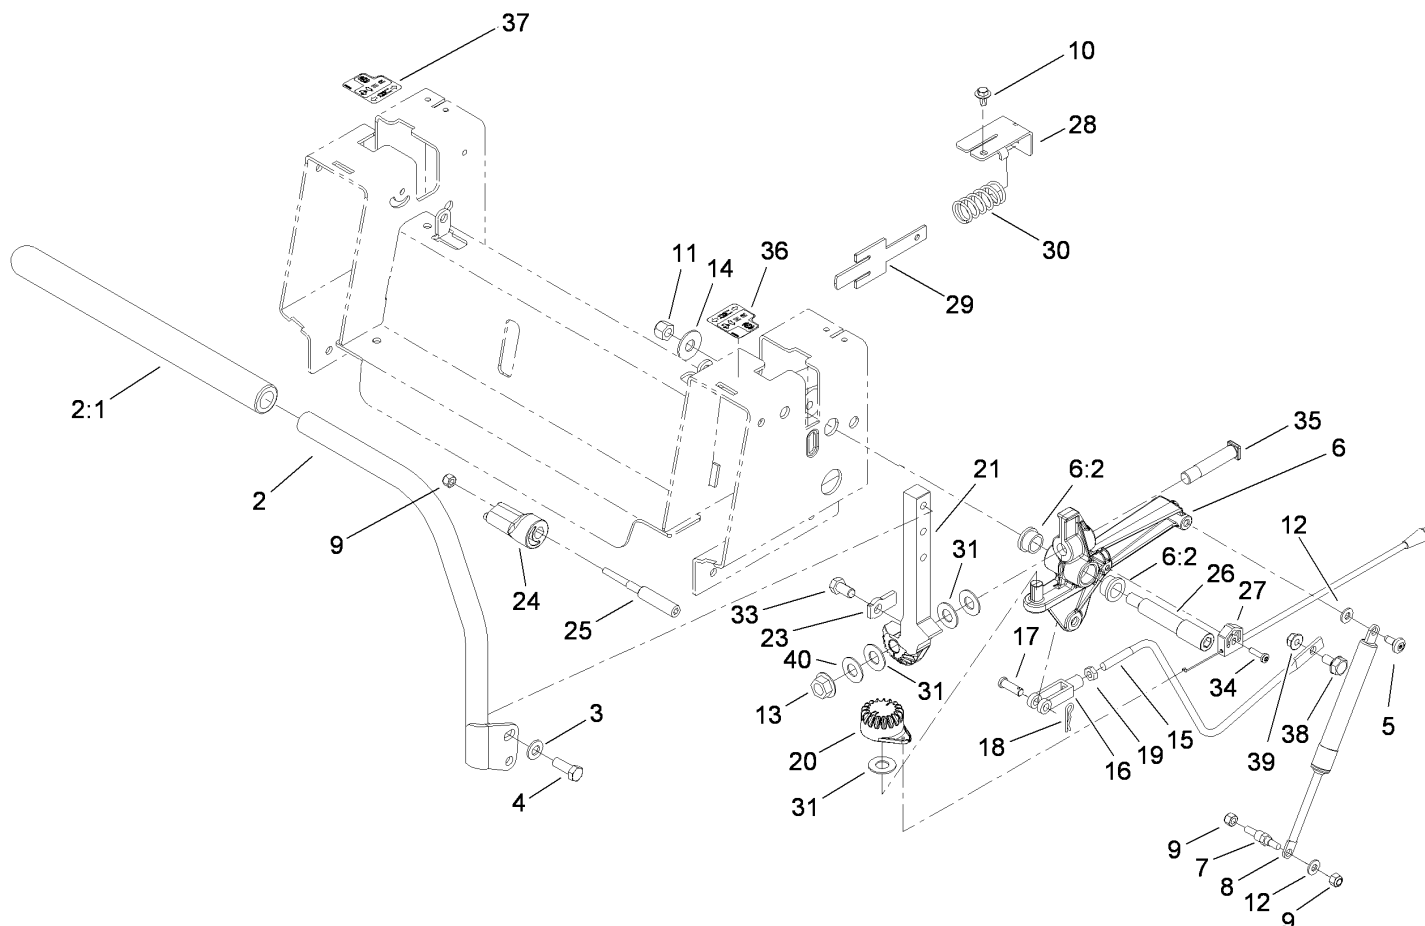

Control Assembly

Ref	Part No.	Qty.	Description
❶1	117-5339	1	RH Control Handle ASM
❶1:1	108-6187	1	Grip
2	117-5338	1	LH Control Handle ASM
2:1	108-6187	1	Grip
3	3256-24	4	Washer-Flat
4	323-6	4	Screw-HH
5	112-4004	2	Screw-Shoulder
6	110-6828	2	Activator Arm ASM
6:2	105-3455	2	Bushing
7	110-6810	2	Stud-Damper
8	103-2913	2	Damper-Control, Motion
9	3296-42	6	Nut-Lock, NI
10	46-8560	2	Screw-HHF
11	3296-48	2	Nut-Lock, NI
12	3256-22	4	Washer-Flat
13	32128-23	2	Nut-HF
14	3256-5	2	Washer-Flat
15	110-6693	2	Link-Hydro
16	1-303105	2	Yoke-Adjustable
17	1-808280	2	Pin-Clevis
18	1-806003	2	Pin-Cotter, Hair
19	3220-2	2	Nut-Jam
20	110-6845	2	Gear-Control
21	110-6783-05	1	Arm-Actuator, LH


Ref	Part No.	Qty.	Description
❶22	110-6782-05	1	Arm-Actuator, RH
23	115-5023	2	Tab-Stop
24	110-6873	2	Eccentric
25	110-6874	2	Screw-Eccentric
26	110-6875	2	Bolt-Shoulder
27	110-6858	2	Cable-Brake, Parking
28	110-6751	2	Bracket-Return
29	110-6750	2	Plate-Return
30	110-6752	2	Spring
31	110-6894	8	Washer-Pivot
33	323-4	2	Screw-HH
34	110-0863	2	Screw-Torx
35	110-6784	2	Bolt-Shoulder
36	112-9750	1	Decal-Control Lever, LH
37	112-9751	1	Decal-Control Lever, RH
38	37-8771	2	Bolt-Shoulder
39	104-8300	2	Nut-Flange, NI
40	112-9771	2	Washer-Teflon

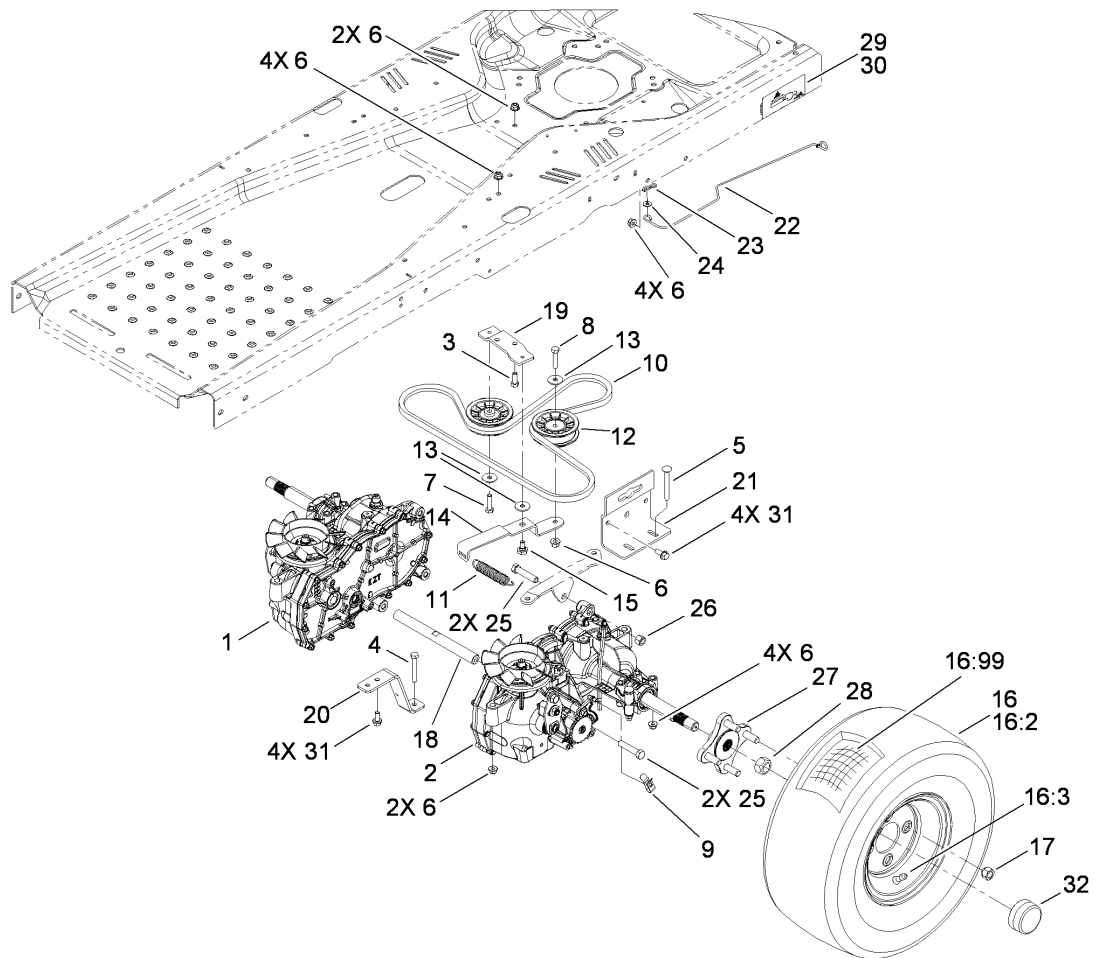

Hydro Drive Assembly


Ref	Part No.	Qty.	Description
1	110-6771	1	Hydro-RH
2	110-6770	1	Hydro-LH
3	322-4	2	Screw-HH
4	322-11	2	Screw-HH
5	3230-9	4	Screw-CARR
6	104-8300	17	Nut-Flange, NI
7	322-6	1	Screw-HH
8	322-7	1	Screw-HH
9	110-6677	2	Clip-Spring
10	110-6774	1	V-Belt
11	63-1590	1	Spring-Idler
12	110-6775	2	Pulley-Idler
13	5-4460	3	Washer-Pivot
14	110-1925	1	Arm-Idler
15	37-8771	1	Bolt-Shoulder
16	110-6881	2	Wheel And Tire ASM
16:2	110-6885	1	Tire
16:3	232-27	1	Stem-Valve
16:99	107-2491	1	Tube-Tire
17	242-50	8	Nut-Lug
18	110-6807	1	Shaft-Cross
19	110-1926	1	Plate-Pivot
20	110-6806-03	2	Strap-Torque
21	110-6878-03	2	Support-Hydro

Ref	Part No.	Qty.	Description
22	110-6787	2	Rod-Bypass
23	1-806003	2	Pin-Cotter, Hair
24	3256-22	2	Washer-Flat
25	324-8	4	Screw-HH
26	3296-48	2	Nut-Lock, NI
27	112-3979	2	Hub ASM
28	112-3982	2	Nut-Lock
29	114-8532	1	Decal-Transport, LH
30	114-8531	1	Decal-Transport, RH
31	3234-47	8	Screw-HHF
32	115-5057	2	Cover-Nut, Axle

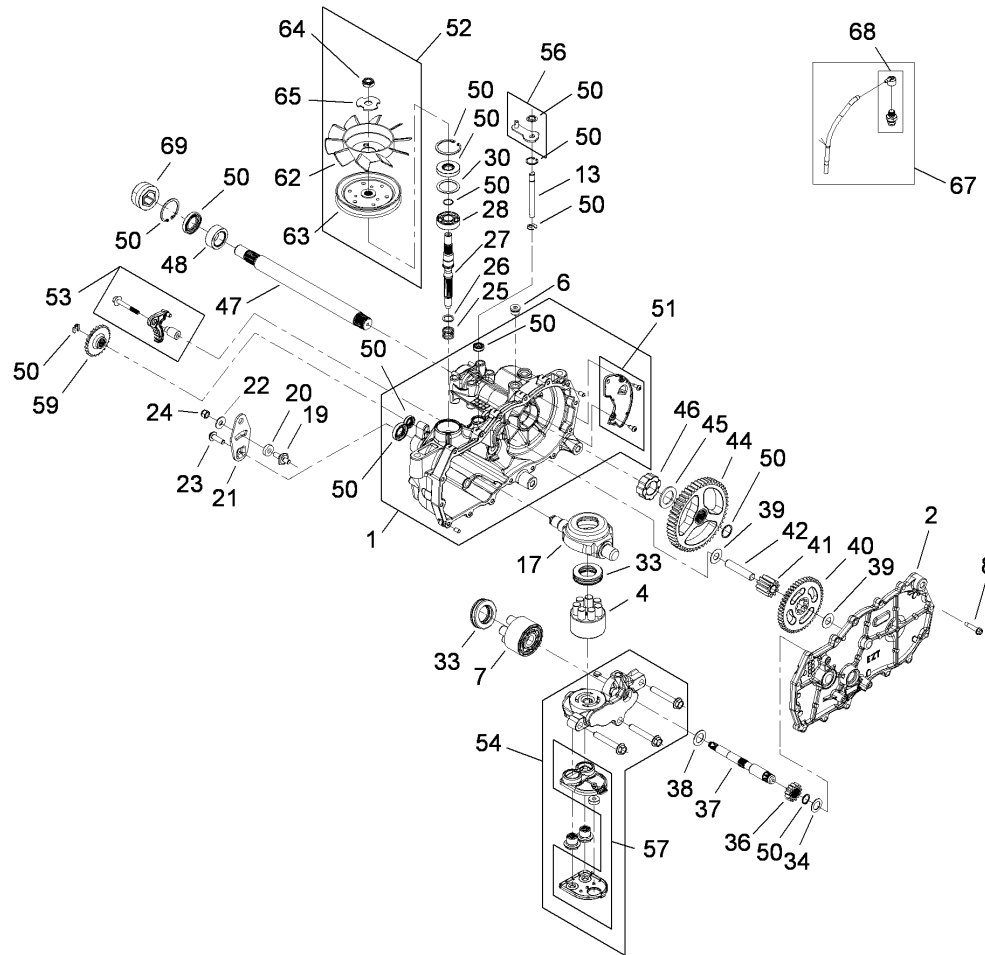


RH Hydro Assembly No. 110-6771

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	114-1630	1	RH Main Housing ASM	39	94-1933	2	Washer
2	114-1631	1	RH Side ASM	40	104-5317	1	Gear
4	110-8561	1	Pump Block ASM	41	104-5318	1	Gear-Jackshaft, 10T
6	104-2189	1	Plug-Thread, Straight	42	104-5329	1	Pin-Jackshaft
7	103-2666	1	Cylinder Block Kit	44	112-9855	1	Gear-52T, Bull
8	104-5305	16	Screw-HHF	45	112-9856	1	Washer
13	106-8678	1	Rod-Bypass	46	112-9857	1	Bearing-Sleeve
17	104-5304	1	Swashplate-Trunnion	47	112-9858	1	Shaft-Axle
19	104-2116	1	Stud	48	112-9859	1	Bushing-Axle
20	112-9853	1	Puck-Friction	50	106-8686	1	Seal Kit
21	106-8747	1	Arm-Control	51	106-8697	1	RH Expansion Plate Kit
22	5-4460	1	Washer-Pivot	52	106-8698	1	Fan Pulley Kit
23	107-2488	1	Screw	53	114-1633	1	Brake Arm Kit
24	105-1872	1	Nut	54	112-9861	1	RH Center Section Filter Kit
25	94-1936	1	Spring-Block	55	104-2147	1	Sealant
26	94-1937	1	Washer-Thrust, Block	56	107-2489	1	Bypass Arm Kit
27	104-5306	1	Shaft-Input	57	114-1634	1	Filter Kit
28	104-5311	1	Bearing-Ball	59	106-8694	1	Disc-Brake, Cog
30	104-5308	1	Spacer	62	110-8566	1	Fan-6 Inch, 10 Blade
33	94-6922	2	Bearing-Thrust	63	104-1754	1	Pulley
34	104-5339	1	Washer-Flat	64	105-1875	1	Nut-Lock
36	104-5316	1	Gear-Pinnion, 13T	65	107-9122	1	Washer-Slotted
37	114-1632	1	Shaft-Motor	67	112-9866	1	Breather Kit
38	104-5360	1	Washer-Shaft, Motor	68	114-1635	1	Breather ASM

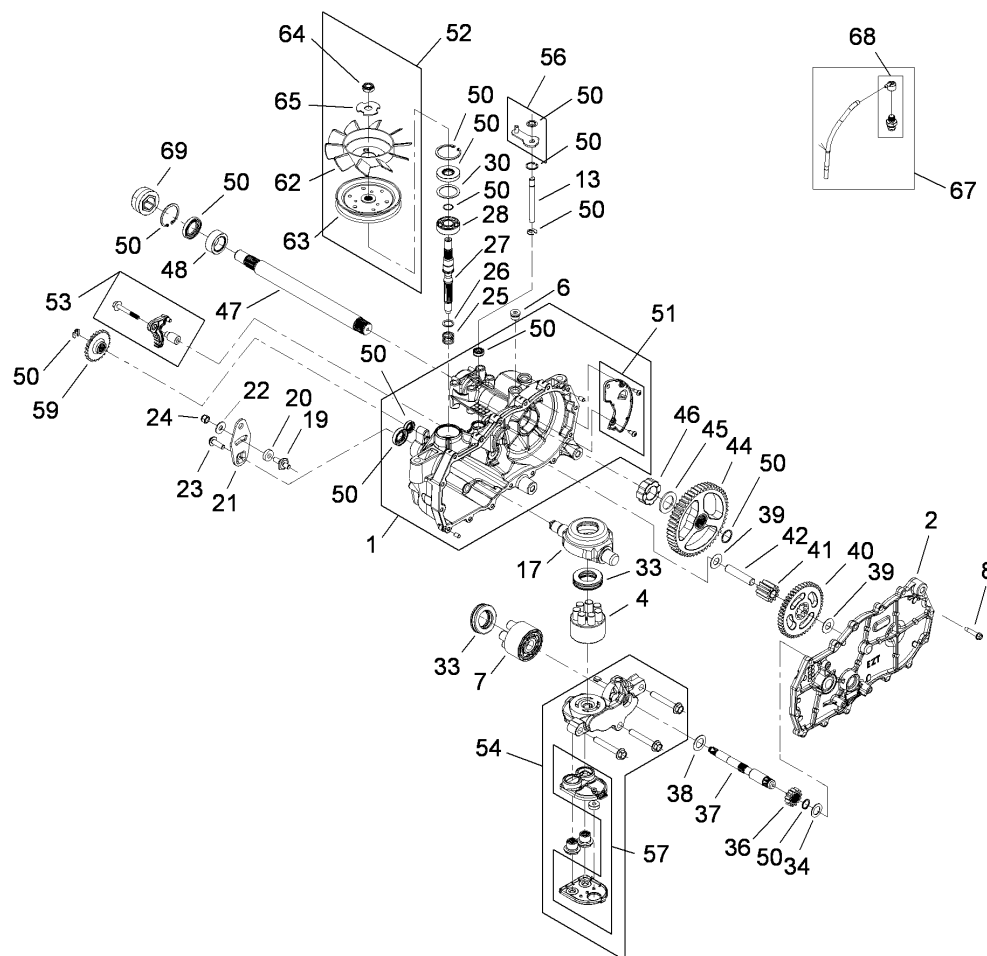

RH Hydro Assembly No. 110-6771 (continued)


Ref	Part No.	Qty.	Description
69	115-5057	1	Cover-Nut, Axle

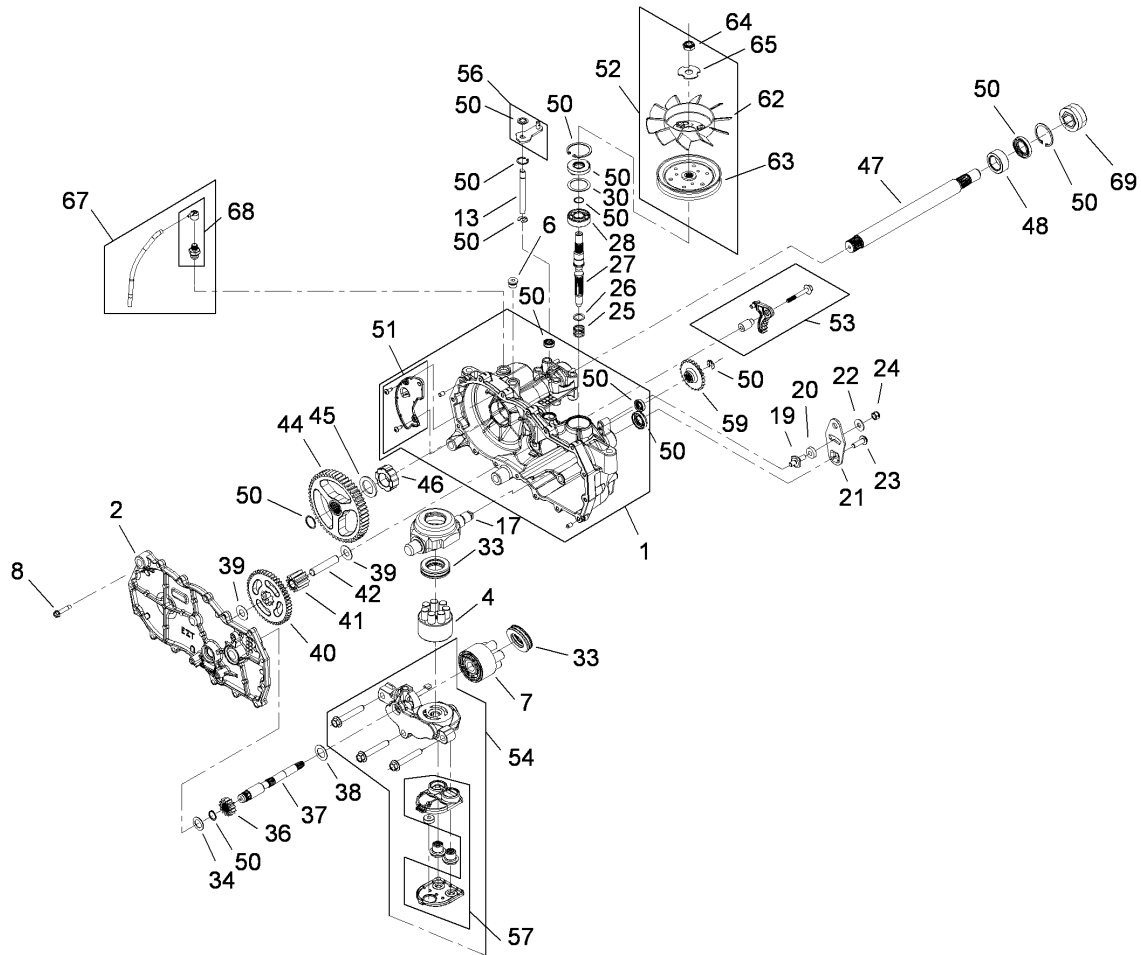

LH Hydro Assembly No. 110-6770


Ref	Part No.	Qty.	Description
1	114-1636	1	LH Main Housing ASM
2	114-1637	1	LH Side ASM
4	110-8561	1	Pump Block ASM
6	104-2189	1	Plug-Thread, Straight
7	103-2666	1	Cylinder Block Kit
8	104-5305	16	Screw-HHF
13	106-8678	1	Rod-Bypass
17	104-5304	1	Swashplate-Trunnion
19	104-2116	1	Stud
20	112-9853	1	Puck-Friction
21	106-8747	1	Arm-Control
22	5-4460	1	Washer-Pivot
23	107-2488	1	Screw
24	105-1872	1	Nut
25	94-1936	1	Spring-Block
26	94-1937	1	Washer-Thrust, Block
27	104-5306	1	Shaft-Input
28	104-5311	1	Bearing-Ball
30	104-5308	1	Spacer
33	94-6922	2	Bearing-Thrust
34	104-5339	1	Washer-Flat
36	104-5316	1	Gear-Pinnion, 13T
37	114-1632	1	Shaft-Motor
38	104-5360	1	Washer-Shaft, Motor

Ref	Part No.	Qty.	Description
39	94-1933	2	Washer
40	104-5317	1	Gear
41	104-5318	1	Gear-Jackshaft, 10T
42	104-5329	1	Pin-Jackshaft
44	112-9855	1	Gear-52T, Bull
45	112-9856	1	Washer
46	112-9857	1	Bearing-Sleeve
47	112-9858	1	Shaft-Axle
48	112-9859	1	Bushing-Axle
50	106-8686	1	Seal Kit
51	106-8687	1	LH Expansion Plate Kit
52	106-8698	1	Fan Pulley Kit
53	114-1633	1	Brake Arm Kit
54	112-9862	1	LH Center Section Filter Kit
55	104-2147	1	Sealant
56	107-2489	1	Bypass Arm Kit
57	114-1634	1	Filter Kit
59	106-8694	1	Disc-Brake, Cog
62	110-8566	1	Fan-6 Inch, 10 Blade
63	104-1754	1	Pulley
64	105-1875	1	Nut-Lock
65	107-9122	1	Washer-Slotted
67	112-9866	1	Breather Kit
68	114-1635	1	Breather ASM

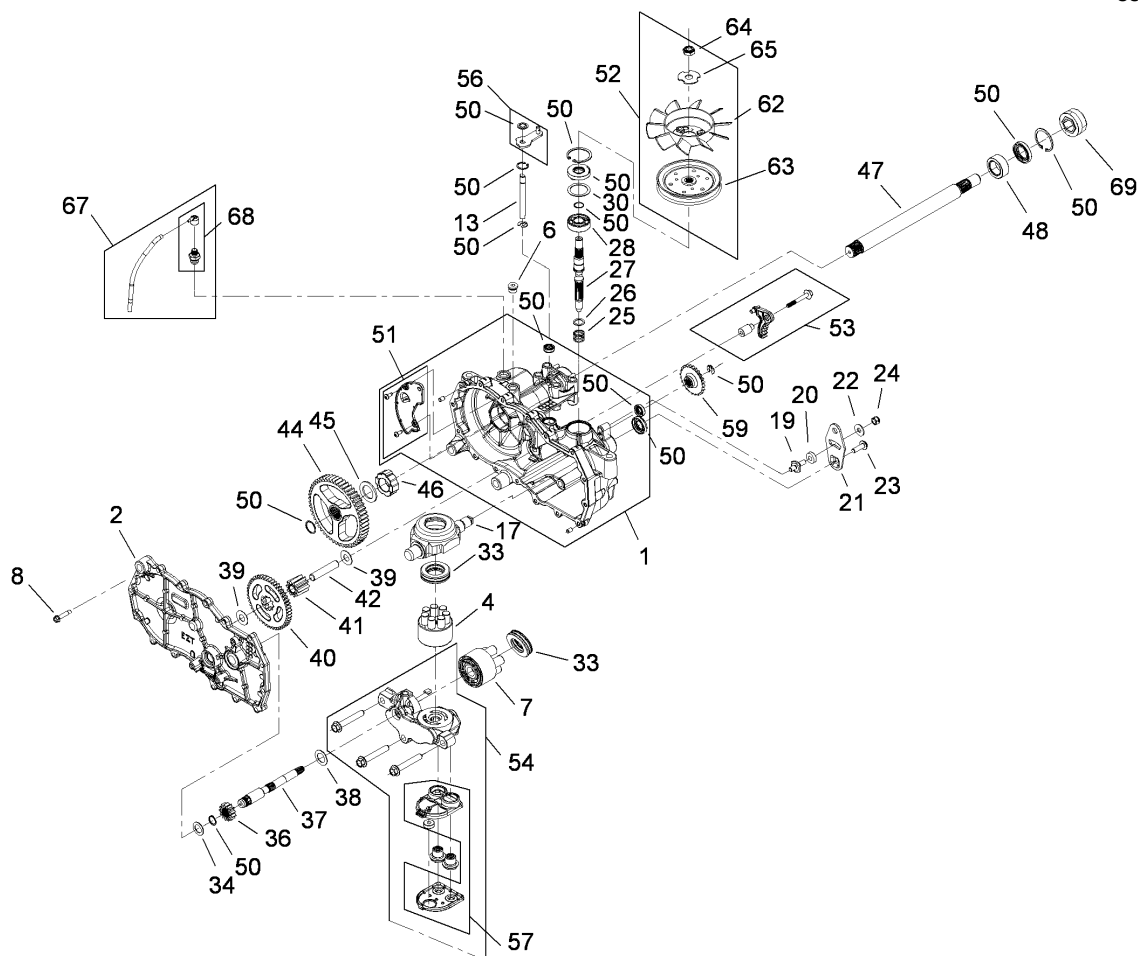

LH Hydro Assembly No. 110-6770 (continued)


Ref	Part No.	Qty.	Description
69	115-5057	1	Cover-Nut, Axle

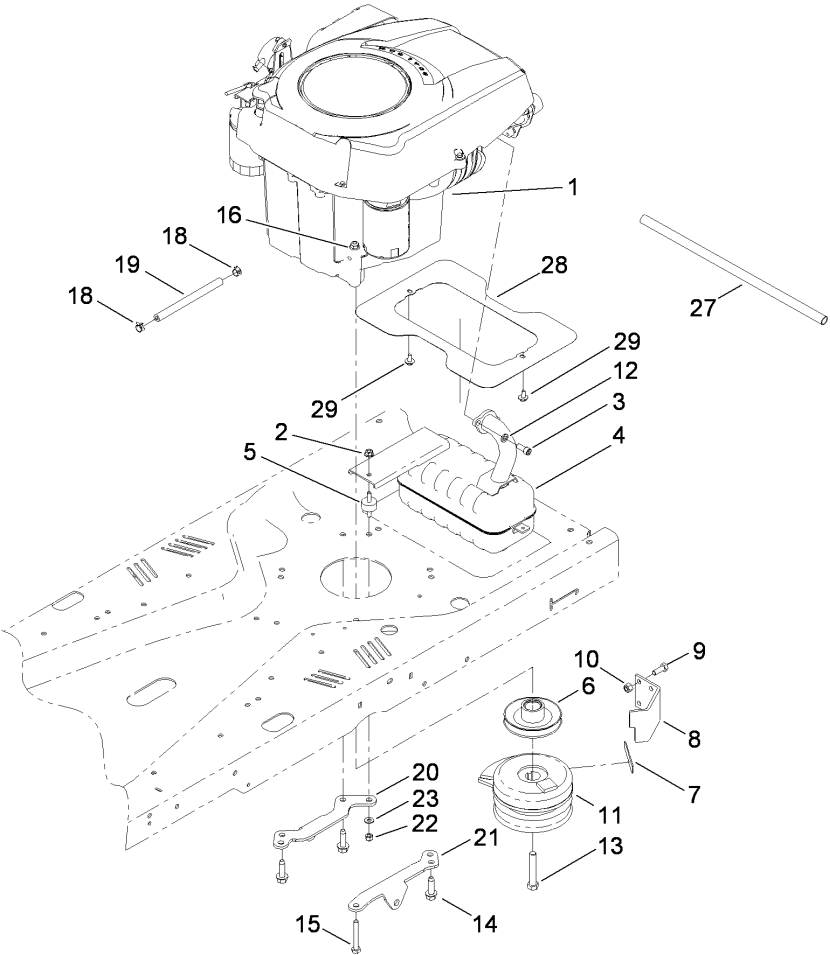

Engine, Muffler and Clutch Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1		1	Engine-Kohler, Sv590-0212	29	46-8560	2	Screw-HHF
2	32128-33	1	Nut-HF				
3	3274-10	2	Screw-HSH				
4	112-4024	1	Muffler-Kohler				
5	112-3976	1	Isolator				
6	114-1622	1	Pulley-Engine				
7	112-4033	1	Bumper				
8	110-6896	1	Stop-Clutch				
9	322-4	2	Screw-HH				
10	3296-29	2	Nut-Lock, NI				
11	104-3334	1	Clutch-Electric				
12	3253-4	2	Washer-Lock				
13	3212-10	1	Screw-HH				
14	32144-109	3	Screw				
15	322-11	1	Screw-HH				
16	104-8300	1	Nut-Flange, NI				
18	2412-98	2	Clamp				
19	109-0306	1	Hose-Fuel				
20	110-6798	1	Support-Hydro, RH				
21	110-6799	1	Support-Hydro, LH				
22	3296-42	1	Nut-Lock, NI				
23	3256-22	1	Washer-Flat				
27	106-7022	1	Tube-Drain, Oil				
28	114-8544	1	Shield-Heat				

13

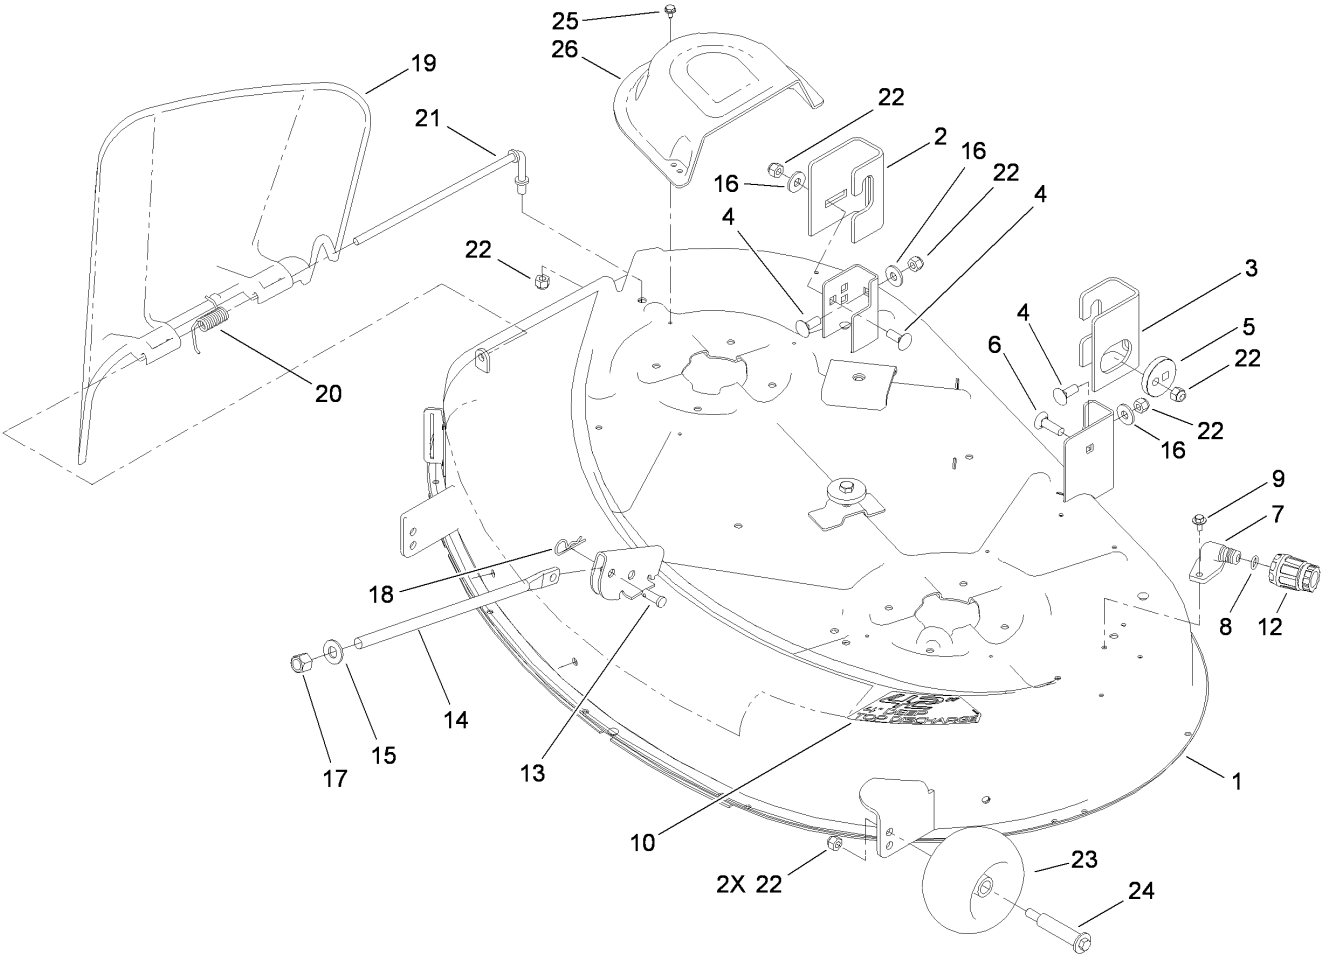


42 Inch Deck Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	117-1290	1	42 Inch Deck ASM	26	108-7889	2	Cover-Belt
2	108-7836	1	Bracket-Hanger, Right Rear				
3	108-7838	1	Bracket-Hanger, Left Rear				
4	3231-2	3	Screw-CARR				
5	112-3980	1	Eccentric				
6	3231-28	1	Screw-CARR				
7	95-2747	1	Fitting-Washout				
8	46-6290	1	O-Ring, Seal				
9	46-8560	2	Screw-HHF				
10	117-1222	1	Decal-42 Inch				
12	95-3270	1	Connector-Hose				
13	1-808284	1	Pin-Clevis				
14	108-7847	1	Rod-Lift				
15	87-7270	1	Washer-Thrust				
16	80-6990	3	Washer-Hardened				
17	3296-23	1	Nut-Lock, NI				
18	9335054	1	Pin-Hair				
19	112-3951	1	Deflector-42 Inch				
20	110-6694	1	Spring-Torsion				
21	112-4026	1	Rod-Pivot				
22	3296-39	7	Nut-Lock, NI				
23	1-603299	2	Roller-Scalp, Anti				
24	112-3977	2	Bolt-Shoulder				
25	32104-76	6	Screw				

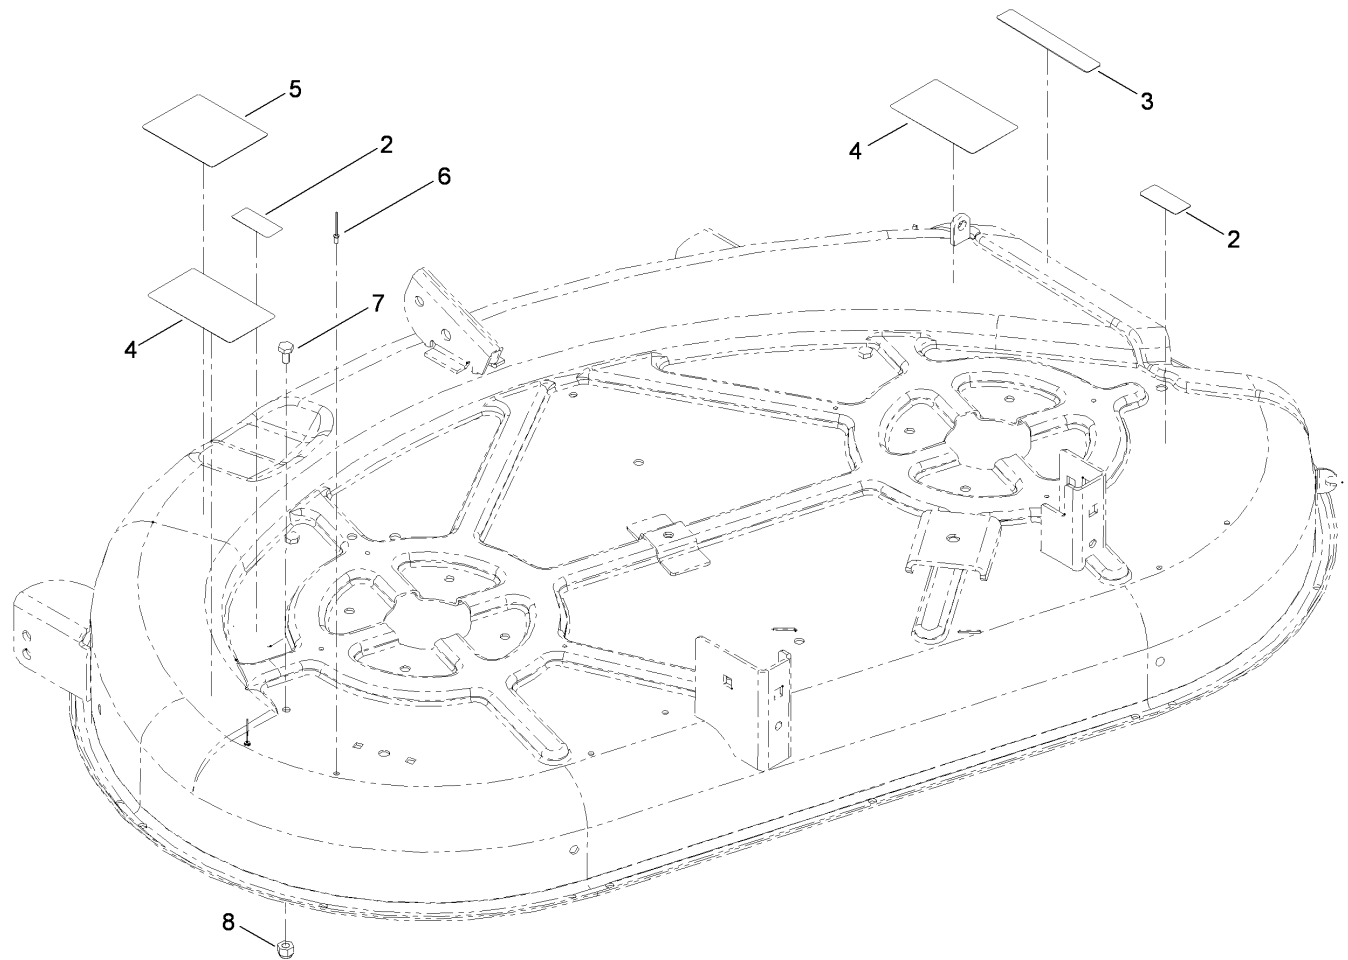

42 Inch Deck Assembly No. 117-1290


Ref	Part No.	Qty.	Description				
2	114-1606	2	Decal-Danger, Pulley				
3	93-7009	1	Decal-Danger, Deflector				
4	110-6691	2	Decal-Danger				
5	105-7015	1	Decal-Routing, Belt				
6	3290-282	2	Rivet-Blind				
7	321-2	3	Screw-HH				
8	3296-42	3	Nut-Lock, NI				

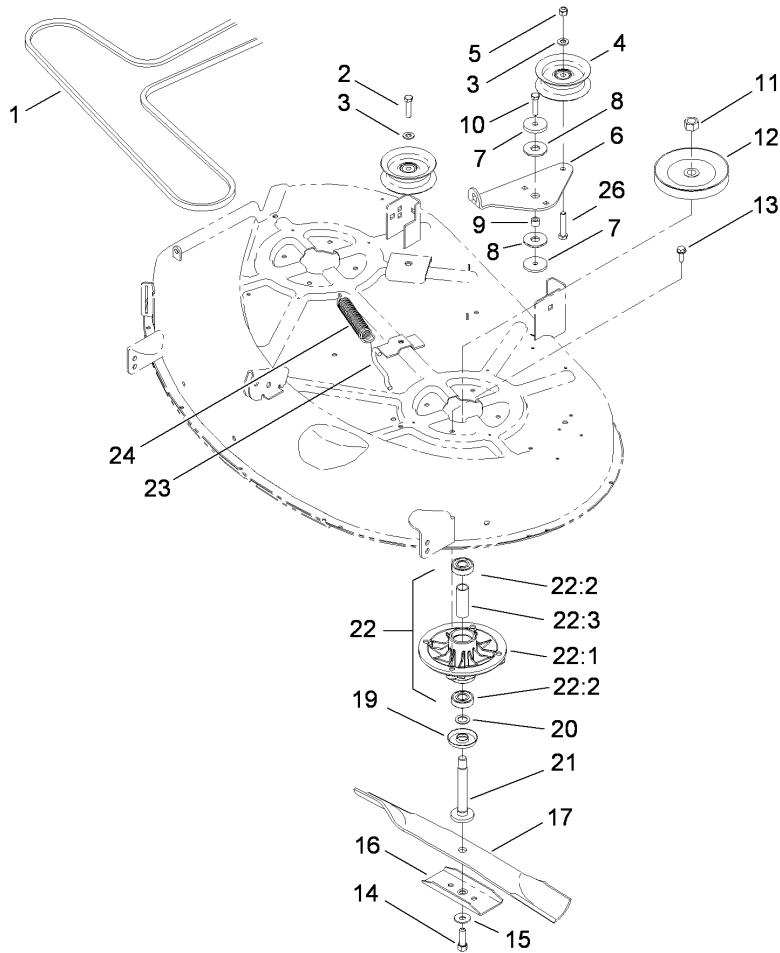

42 Inch Deck Spindle and Belt Drive Assembly


Ref	Part No.	Qty.	Description
1	110-6871	1	V-Belt
2	323-9	1	Screw-HH
3	3256-24	2	Washer-Flat
4	106-2175	2	Pulley-Idler, Flat
5	3296-39	1	Nut-Lock, NI
6	114-8540	1	Arm-Idler
7	110-9981	2	Washer-Plain
8	114-0463	2	Washer-Friction, Composite
9	115-4986	1	Spacer
10	323-8	1	Screw-HH
11	3219-6	2	Nut-Hex
12	110-6864	2	Pulley
13	32144-41	8	Screw-Taptite
14	26-0671	2	Screw-HH
15	3290-465	2	Washer-Belleville
16	106-2248-03	2	Stiffener-Blade
17	110-6568-03	2	Blade-21.6 Inch
19	80-4360	2	Shield-Bearing
20	80-4380	2	Spacer
21	117-1192	2	Shaft-Spindle
22		2	Spindle ASM
22:1	88-4510	1	Housing-Spindle
22:2	100-1048	2	Bearing-Ball
22:3	62-3661	1	Spacer

Ref	Part No.	Qty.	Description
23	88-5970	1	Hook-Return, Spring
24	106-2177	1	Spring-Extension
26	323-10	1	Screw-HH

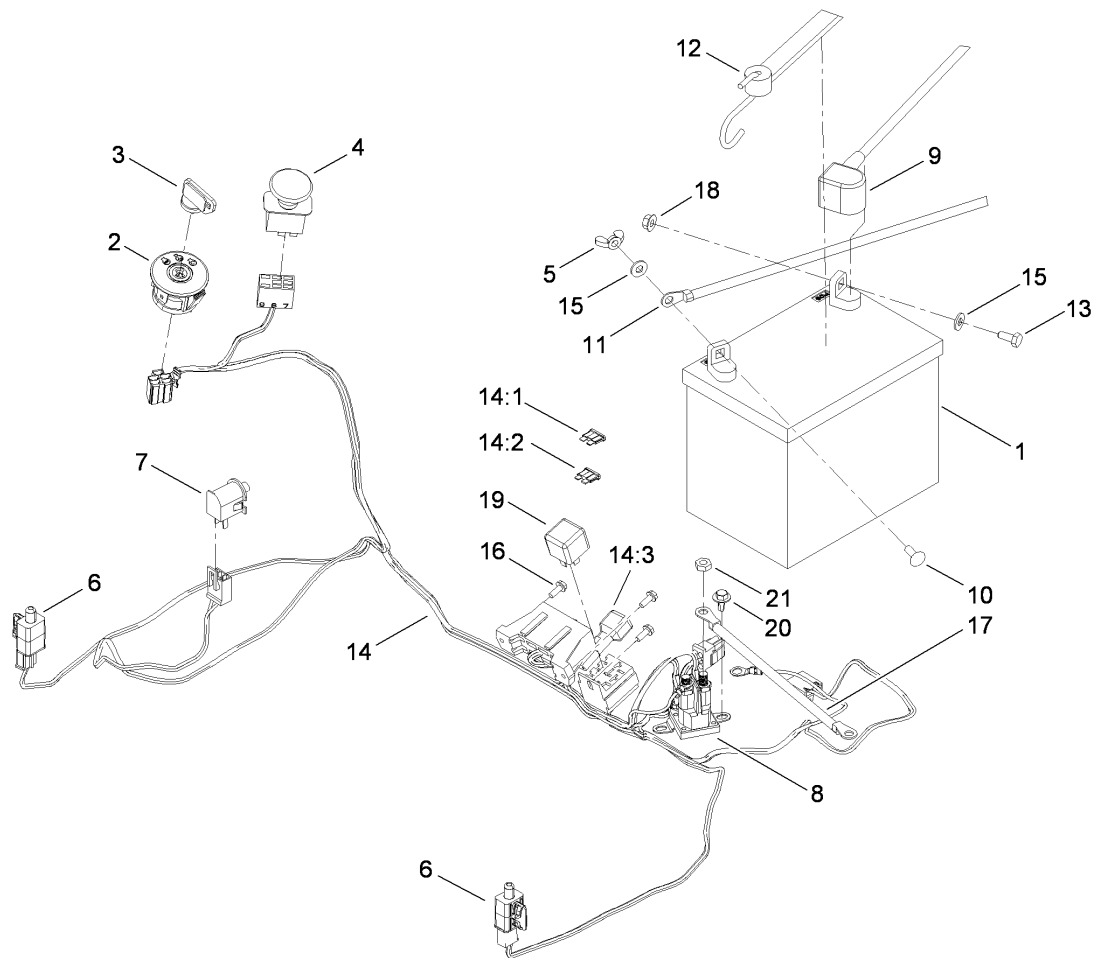


Electrical Assembly

Ref	Part No.	Qty.	Description				
1	104-2493	1	Battery				
2	110-6764	1	Switch-Ignition				
3	63-8360	1	Key-Ignition				
4	93-9998	1	Switch-PTO				
5	32103-22	1	Nut-Wing				
6	110-6765	2	Switch-Single Pole No				
7	82-2190	1	Switch-Bail				
8	117-1197	1	Solenoid				
9	110-6794	1	Cable-Battery, Red				
10	3229-1	1	Screw-CARR				
11	110-6793	1	Cable-Battery, Black				
12	104-2466	1	Holddown-Battery				
13	321-3	1	Screw-HH				
14	117-1216	1	Harness-Wiring				
14:1	109103	1	Fuse-30 Amp				
14:2	109102	1	Fuse-25 Amp				
14:3	100-4918	1	Diode				
15	3256-22	2	Washer-Flat				
16	32144-1	3	Screw-Taptite				
17	110-6792	1	Cable-Battery, Red				
18	32128-33	2	Nut-HF				
19	98-7249	1	Relay				
20	46-8560	2	Screw-HHF				
21	3220-2	2	Nut-Jam				

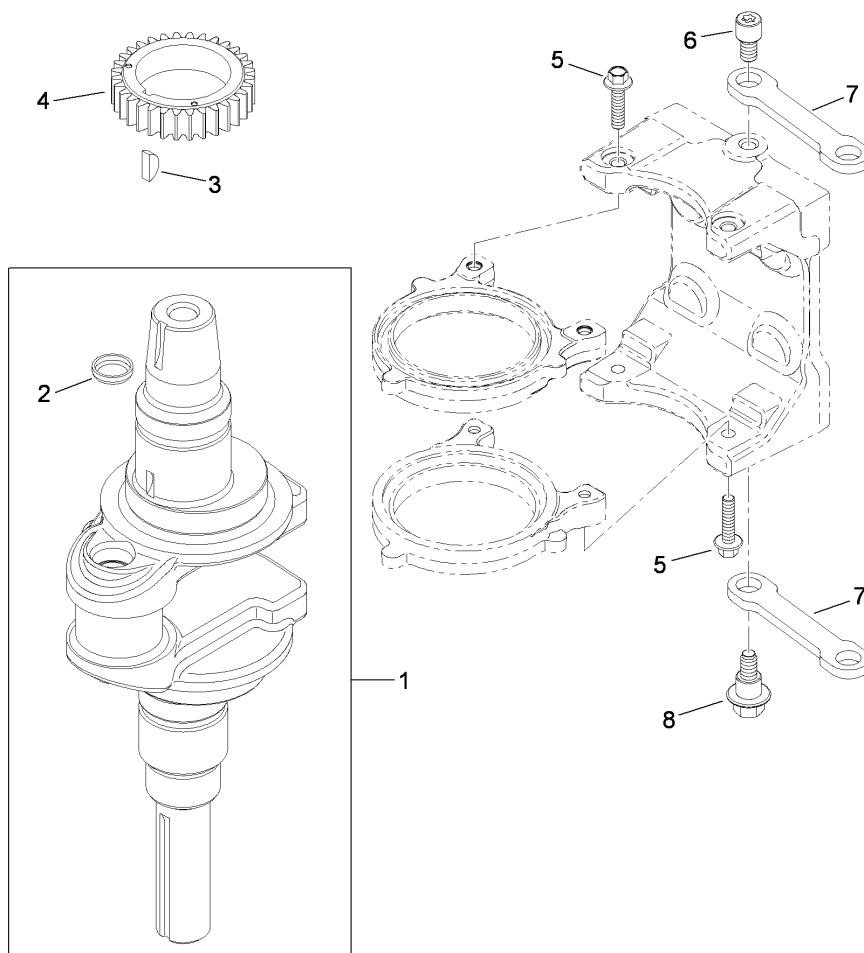

Crankshaft Assembly Kohler SV590-0212


Ref	Part No.	Qty.	Description
④1	20 014 32-S	1	Crankshaft ASM (Includes Ref 2)
④2	25 139 27-S	1	Plug-Cup
④3	X-42-15-S	1	Key (3/16 X 5/8)
④4	20 043 15-S	1	Gear-Crankshaft
④5	25 086 137-S	4	Screw-Flg (M6X1.0X25)
④6	25 086 214-S	1	Screw-Link, Pivot
④7	20 186 04-S	2	Linkage-Weight, Balance
④8	25 086 213-S	1	Screw-Shoulder

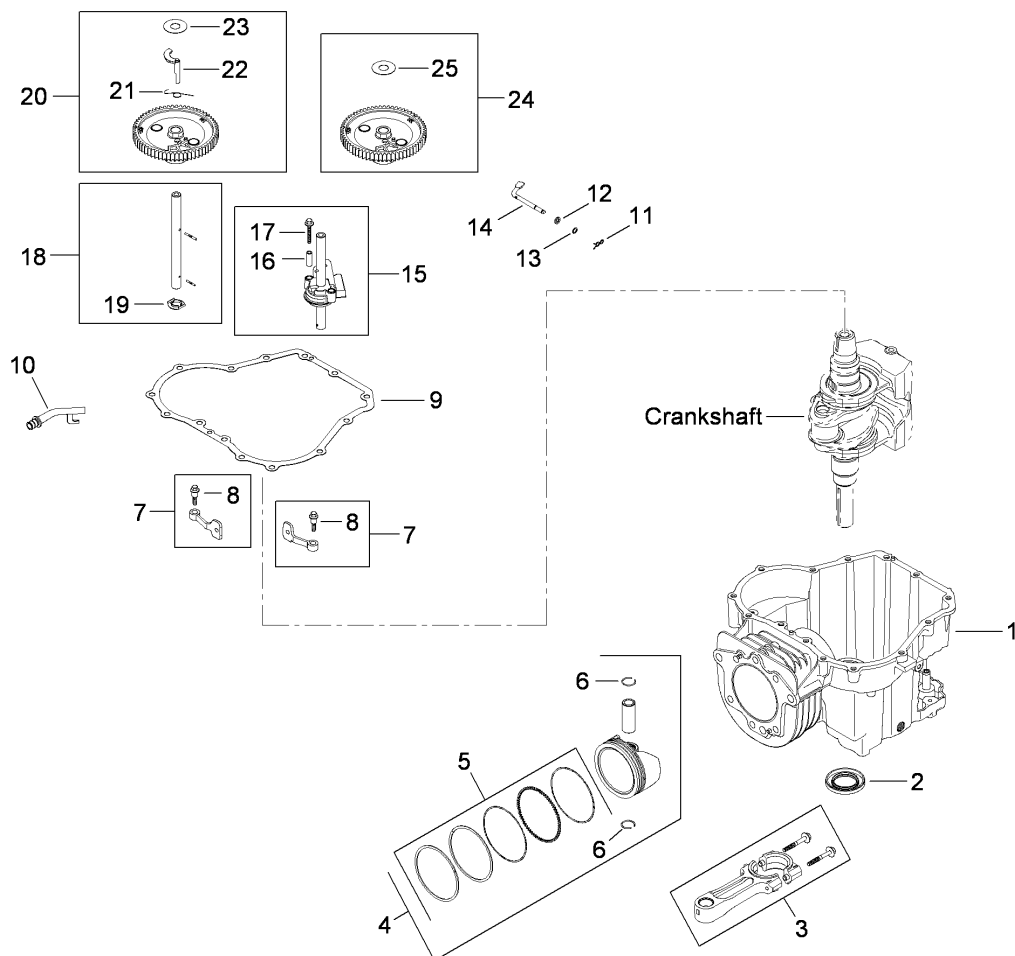

Crankcase Assembly Kohler SV590-0212

Ref	Part No.	Qty.	Description
❶1	20 522 05	1	Sv590/600 Short Block
❷2	20 032 01-S	1	Seal-Oil
❸3	20 067 05-S	1	Connecting Rod ASM
❹4	20 874 09-S	1	Piston W/Ring Set (94Mm) (Includes Ref 5, 6)
❺5	20 108 04-S	1	Ring Set (94Mm)
❻6	62 018 04-S	2	Retainer, Piston Pin
❼7	20 090 01-S	2	Cam Lever ASM
❽8	20 086 06-S	2	Bolt-Shoulder (M6X1X26)
❾9	20 041 01-S	1	Gasket-Plate, Closure
❿10	20 123 02-S	1	Tube-Back, Drain
⓫11	12 154 05-S	1	Clip-Pin, Hitch
⓬12	M-631015-S	1	Washer-Flat (6Mm)
⓭13	X-25-102-S	1	Washer-Flat (1/4)
⓮14	20 144 02-S	1	Shaft-Cross, Governor
⓯15	20 393 02-S	1	Oil Pump ASM (Includes Ref 9, 16, 17)
⓰16	20 112 02-S	2	Spacer-Screw, Oil Pump
⓱17	20 086 13-S	2	Screw-Pump, Oil
⓲18	20 144 11-S	1	Camshaft Center ASM (Exhaust) (Includes Ref 19)
⓳19	20 468 08-S	1	Washer-Thrust
⓴20	20 010 04-S	1	Cam Gear ASM (Includes Ref 21, 22, 23)
⓵21	20 089 06-S	1	Spring-A C R


Ref	Part No.	Qty.	Description
❷22	20 044 23-S	1	Weight-Acr
❷23	20 468 03-S	1	Washer-Thrust, A C R
❷24	20 010 04-S	1	Cam Gear ASM (Includes Ref 23)
❷25	20 468 03-S	1	Washer-Thrust, A C R

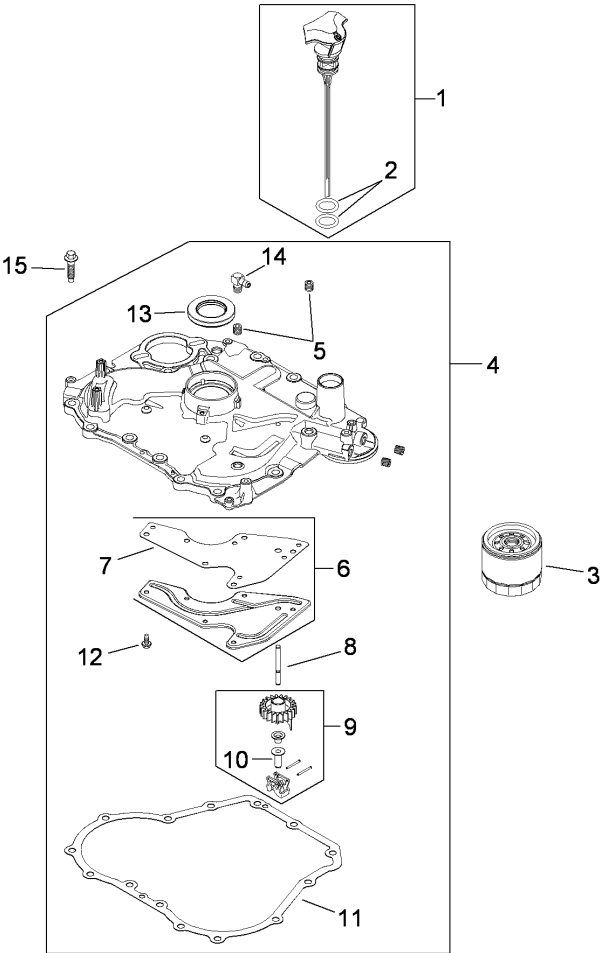

Oil Pan and Lubrication Assembly

Kohler SV590-0212


Ref	Part No.	Qty.	Description				
1	20 040 06-S	1	Dipstick ASM (STD) (Yellow) (Includes Ref 2)				
2	20 153 01-S	2	O Ring-Dipstick				
3	12 050 01-S	1	Filter-Oil				
4	20 009 30-S	1	Closure Plate ASM (Includes Ref 5-14)				
5	25 139 60-S	4	Plug-Pipe, Countersunk (1/8)				
6	20 096 02-S	1	Oil Passage Cover Kit (Includes Ref 7)				
7	20 041 02-S	1	Gasket-Passage, Oil				
8	20 144 03-S	1	Shaft-Gear, Governor				
9	25 310 07-S	1	Governor Gear ASM (Includes Ref 10)				
10	12 380 01-S	1	Pin-Regulating, Governor				
11	20 041 01-S	1	Gasket-Plate, Closure				
12	M-545013-S	6	Screw-Flg, Thd Frm (M5X0.8X13)				
13	20 032 01-S	1	Seal-Oil				
14	25 155 02-S	1	Connector-Hose, 90 DEG				
15	25 086 127-S	14	Screw-Flange, Hex (1/2 Dog Point)				

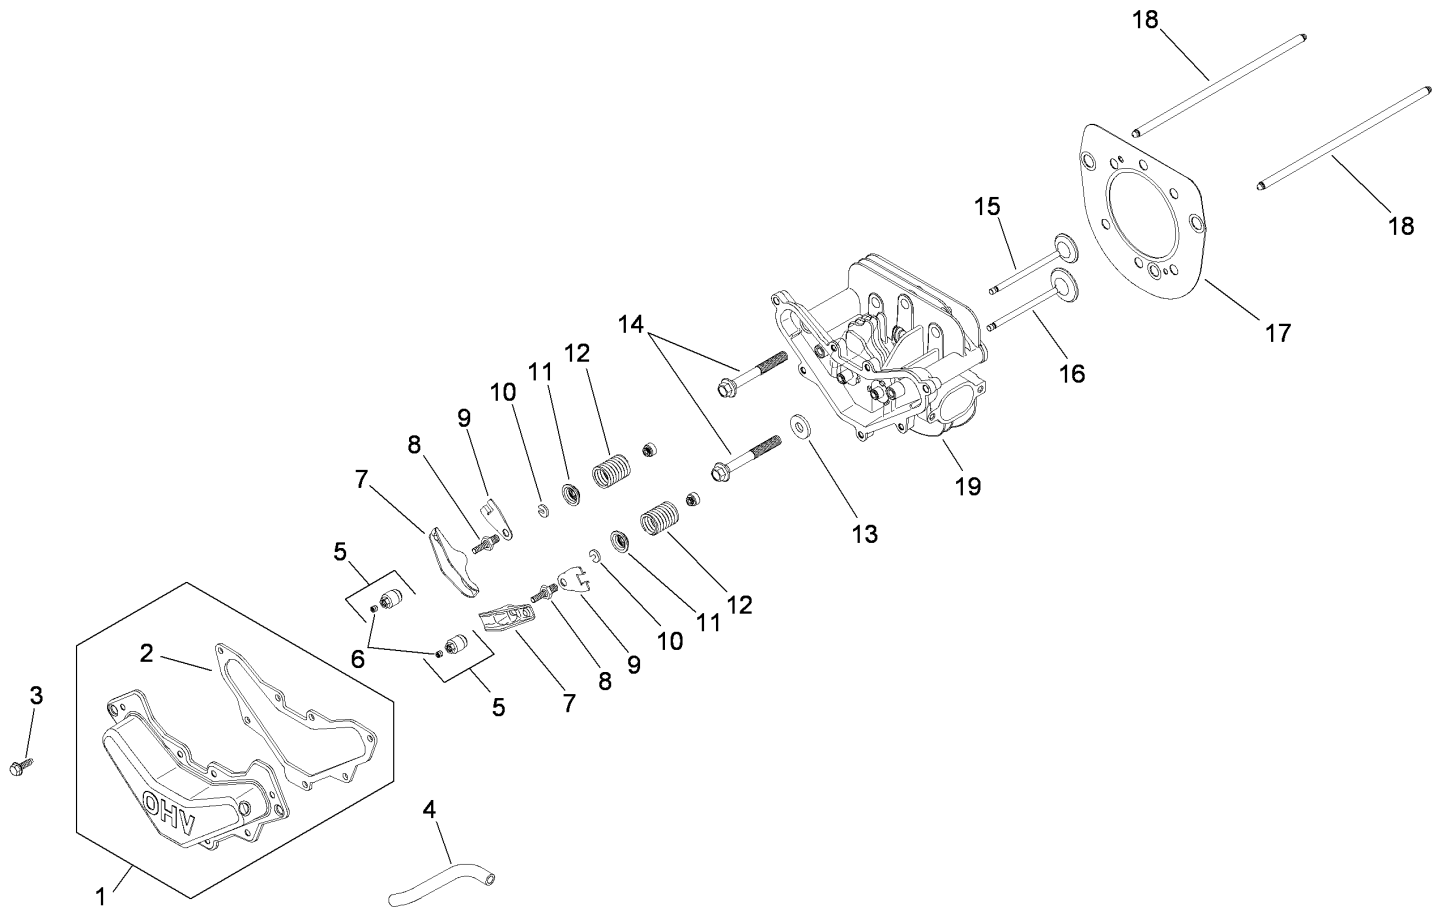

Head, Valve and Breather Assembly Kohler SV590-0212


Ref	Part No.	Qty.	Description
④1	20 096 07-S	1	Valve Cover Kit
④2	20 041 13-S	1	Gasket-Cover, Valve
④3	M-645020-S	7	Screw-HHFTF (M6X1.0X20)
④4	20 326 20-S	1	Hose-Breather
④5	20 599 03-S	2	Rocker Pivot ASM (Includes Ref 6)
④6	20 086 04-S	2	Screw-Set
④7	20 186 01-S	2	Arm-Rocker
④8	20 072 08-S	2	Stud, Rocker
④9	20 146 03-S	2	Plate-Guide, Push Rod
④10	20 062 01-S	2	Lock-Retainer
④11	20 173 01-S	2	Cap-Spring, Valve
④12	20 089 03-S	2	Spring-Valve
④13	12 468 05-S	1	Washer-Flat (1/2)
④14	20 086 02-S	6	Screw-Flange, Hex (M10X1.5X37)
④15	20 016 01-S	1	Valve-Exhaust
④16	20 017 01-S	1	Valve-Intake
④17	20 841 01-S	1	Cylinder Head Gasket Kit (Includes Ref 2, 13, 14, 12, 041 01-S, 12 041 02-S, 20 041 12-S, 20 041 17-S, 20 041 18-S, 25 086 87-S, X-21-1-S)
④18	20 411 04-S	2	Rod-Push
④19	20 318 11-S	1	Cylinder Head Kit (Includes 25 086 87-S, X-21-1-S)

Ref	Part No.	Qty.	Description
①④	12 041 01-S	1	Gasket-Carburetor
①④	12 041 02-S	1	Gasket-Base, Air Cleaner
①④	20 041 12-S	1	Gasket-Exhaust
①④	20 041 18-S	1	Gasket-Deflector, Heat
①④	20 041 17-S	1	Gasket-Deflector, Heat
①④	25 086 87-S	2	Capscrew-Socket, Hex Head
①④	X-21-1-S	2	Washer, Spring Lock 5/16

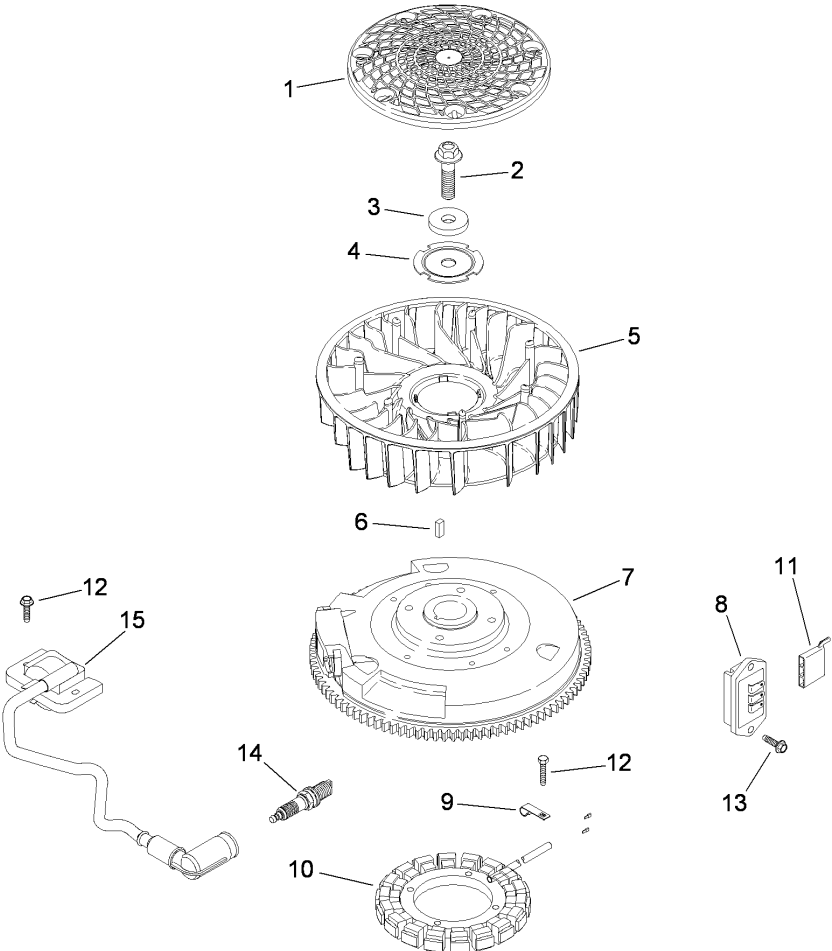


Ignition and Electrical Assembly
Kohler SV590-0212

Ref	Part No.	Qty.	Description				
1	20 162 02-S	1	Screen-Grass				
2	25 086 125-S	1	Screw-Flange, Hex				
3	25 468 09-S	1	Washer-Flat				
4	20 146 05-S	1	Plate-Mounting, Fan				
5	20 157 01-S	1	Fan				
6	25 340 02-S	1	Key-Flywheel, Straight				
7	20 025 40-S	1	Flywheel				
8	M-548025-S	2	Screw-Thread Forming (M5X0.8X25)				
9	20 154 04-S	1	Clip-Cable				
10	237878-S	1	15 Amp Stator Kit (Includes 25 452 01-S)				
11	25 155 41-S	1	Connector (3 Contact)				
12	M-545020-S	4	Screw-Flange, Thread Forming (M5X.8X20)				
13	41 403 10-S	1	Rectifier/Regulator				
14	25 132 14-S	1	Spark Plug (R F I)				
15	20 584 03-S	1	Module-Ignition (C D I Fixed)				
1	28 176 13-S	1	Harness-Wiring				
1	25 452 01-S	2	Terminal				
1	25 454 05-S	1	Tie				

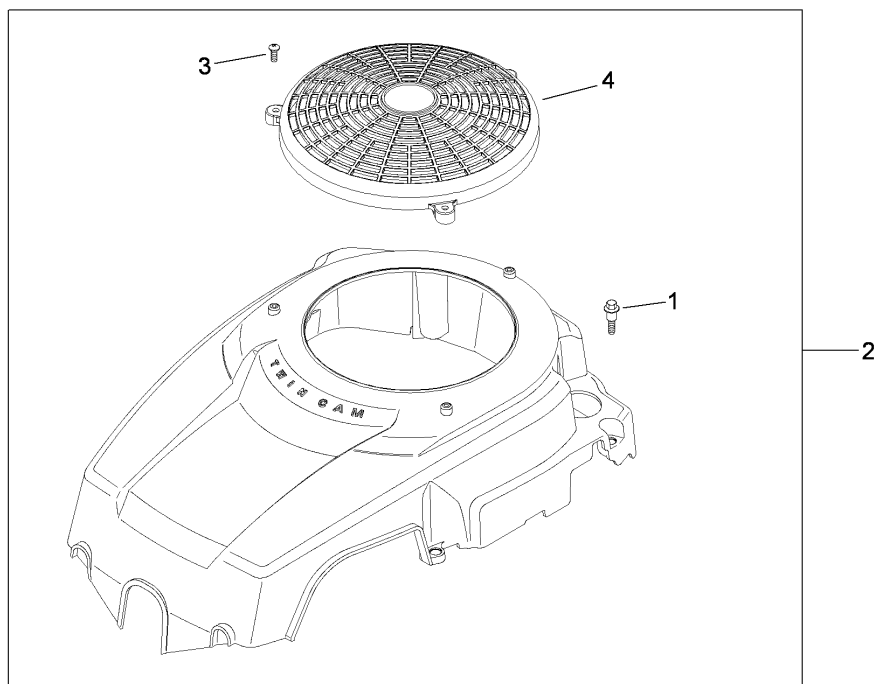


Blower Housing Assembly Kohler SV590-0212

Ref	Part No.	Qty.	Description				
41	20 086 06-S	4	Bolt-Shoulder (M6X1X26)				
42	20 755 11-S	1	Blower Housing And Guard Kit (Includes Ref 1, 3, 4 And 20 113 29-S, 41 037 10-S)				
43	24 086 41-S	3	Screw-PPH (11-16X1/2)				
44	20 314 06-S	1	Guard-Fixed				
14	20 113 29-S	1	Label-Round, Kohler				
14	41 037 10-S	1	Nameplate-Service				

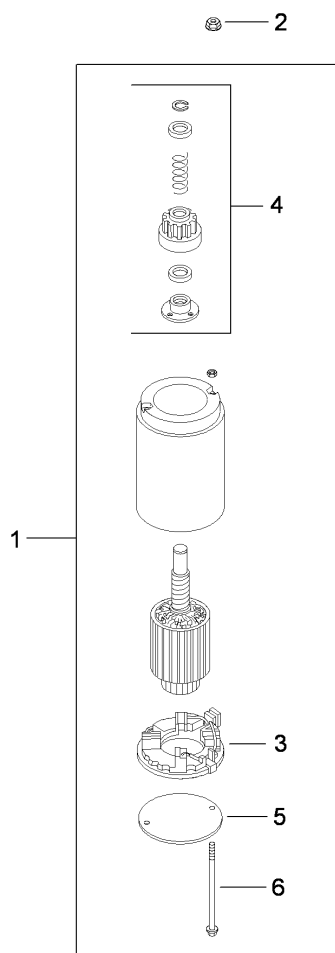

Starter Assembly Kohler SV590-0212


Ref	Part No.	Qty.	Description				
④1	20 098 05-S	1	Starter ASM (Service With Ref 3-6)				
④2	25 100 31-S	2	Nut-Flange, Hex Serrated (10-24)				
④3	12 221 02-S	1	Brush Kit				
④4	20 755 12-S	1	Drive Kit (J E)				
④5	20 227 01-S	1	Cap-End, Drive (J E)				
④6	20 211 02-S	1	Bolt-Thru				

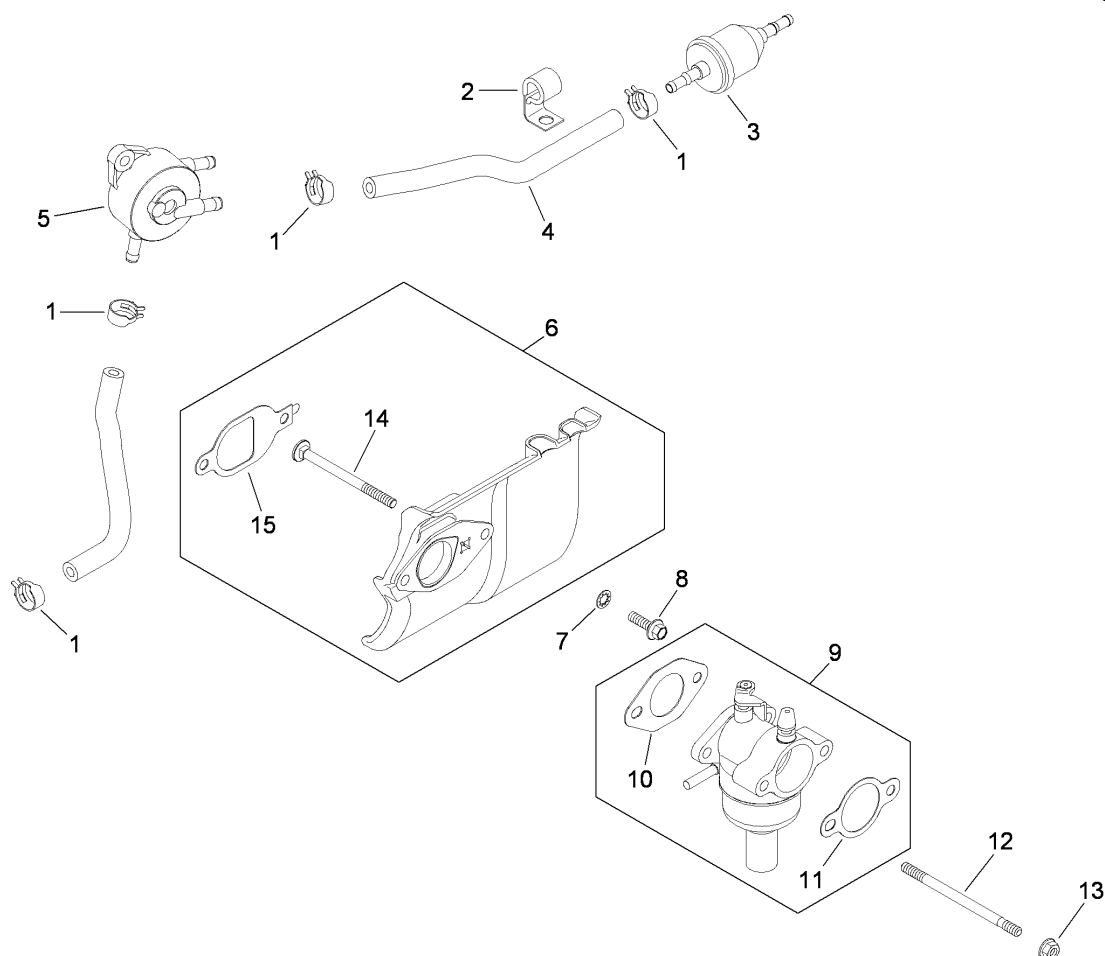

Fuel System Assembly


Kohler SV590-0212

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
41	25 237 14-S	4	Clamp-Hose, Spring (1/2)	14	12 757 03-S	1	Carburetor Repair Kit
42	47 154 01-S	1	Clip-Cable	14	12 757 33-S	1	Solenoid Repair Kit
43	25 050 22-S	1	Filter-Fuel	14	12 757 37-S	1	Bowl Replacement Repair Kit
44	25 111 34-S	2	Line-Fuel (24.0 Cut To Length)	14	20 755 07-S	1	High Altitude Kit (10, 000 Ft)
45	24 393 16-S	1	Pump-Fuel				
46	20 265 09-S	1	Heat Deflector Kit (Includes Ref 11, 14, 15, 20 332 01-S)				
47	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)				
48	M-651020-S	1	Screw-Flange, Hex (M6X1.0X20)				
49	20 853 33-S	1	Carburetor Kit (Includes Ref 10, 11) (S/W 12 755 109-S, 12 755 110-S, 12 757 02-S, 12 757 03-S, 12 757 33-S, 12 757 37-S, 20 755 07-S)				
410	12 041 01-S	1	Gasket-Carburetor				
411	12 041 02-S	1	Gasket-Base, Air Cleaner				
412	20 072 05-S	1	Stud-Mounting, Carburetor (M6X1.0X100)				
413	M-641060-S	2	Nut-Flange (M6X1.0)				
414	20 072 07-S	1	Stud-Carburetor				
415	20 041 18-S	1	Gasket-Deflector, Heat				
14	25 454 05-S	1	Tie				
14	12 755 109-S	1	High Altitude Kit (5000 Or 10000 Ft)				
14	12 755 110-S	1	Choke Shaft Kit				
14	12 757 02-S	1	Float Repair Kit				

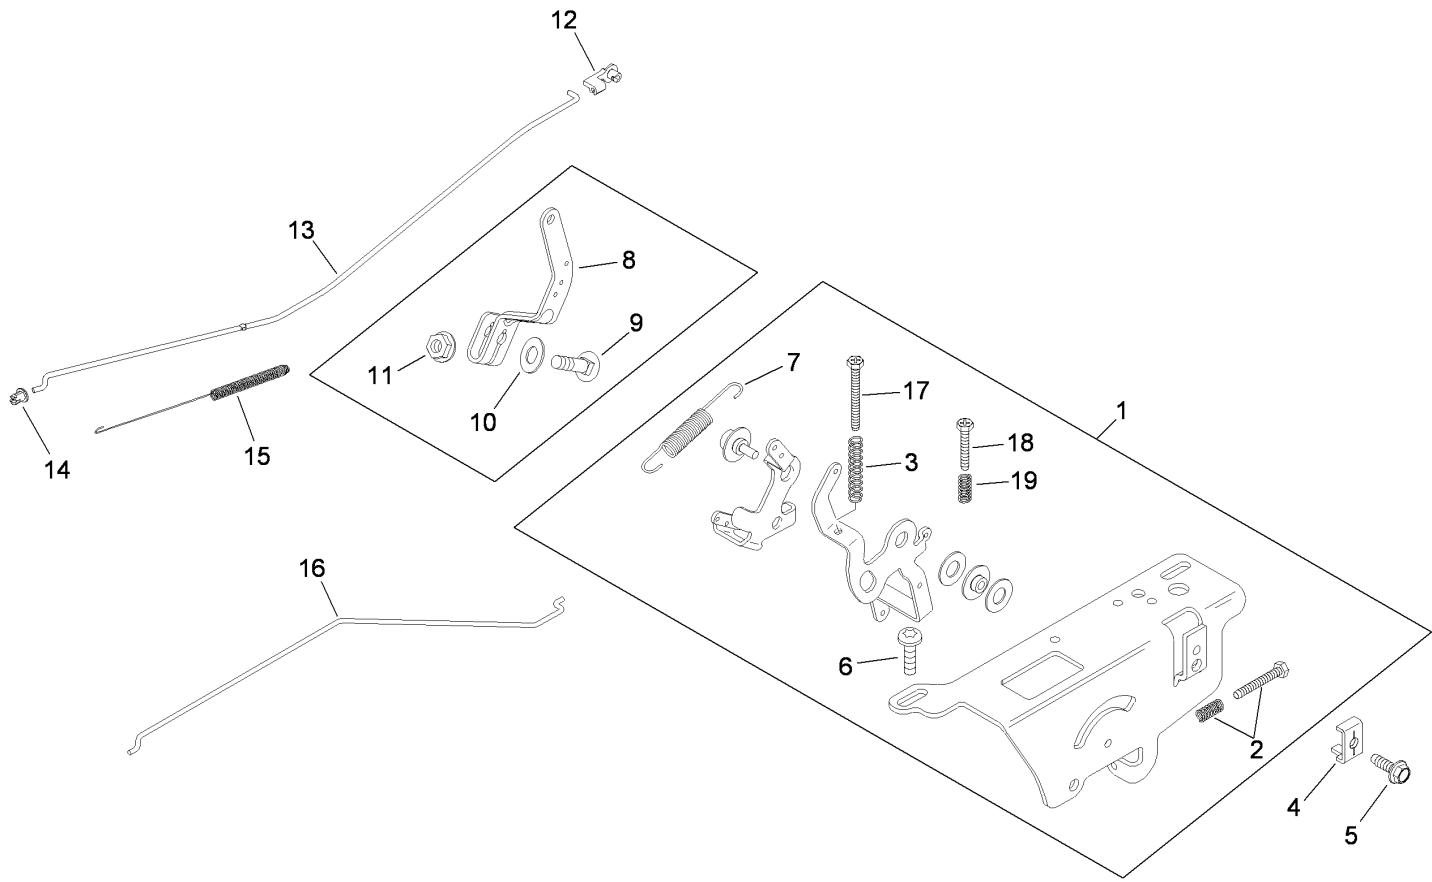


Engine Control Assembly
Kohler SV590-0212

Ref	Part No.	Qty.	Description				
④1	20 536 06-S	1	Speed Control ASM (Includes Ref 2, 3, 6 [qty 1], 7, 17, 18, 19)				
④2	25 086 297-S	1	Idle Adjusting Screw And Spring Kit				
④3	20 089 12-S	1	Spring-Control, Speed (Long)				
④4	12 237 01-S	2	Clamp-Cable				
④5	M-545016-S	2	Screw-Flange, Thread Forming (M5X0.8X16)				
④6	M-664020-S	2	Screw-Socket, 6 Lobed (Thread Forming, M6X1.0X20)				
④7	20 089 11-S	1	Spring-Governor				
④8	20 090 11-S	1	Governor Lever ASM (Includes Ref 9-11)				
④9	52 211 04-S	1	Bolt-Square Neck, Round Head (1/4-20X1)				
④10	X-22-11-S	1	Washer-Lock, Internal Tooth (1/4)				
④11	12 100 07-S	1	Nut-Flange, Hex (1/4-20)				
④12	25 158 11-S	1	Bushing-Retaining, Linkage				
④13	20 079 07-S	1	Linkage, Throttle				
④14	25 158 08-S	1	Bushing-Linkage, Throttle				
④15	20 089 10-S	1	Spring-Linkage				
④16	20 079 05-S	1	Linkage-Choke (Single Wire)				
④17	20 086 18-S	1	Screw-Phl Thd Frm (M4X0.7X38)				
④18	20 086 10-S	1	Screw-Thread Forming (M4X0.7X25)				
④19	12 089 11-S	1	Spring-Control, Speed				

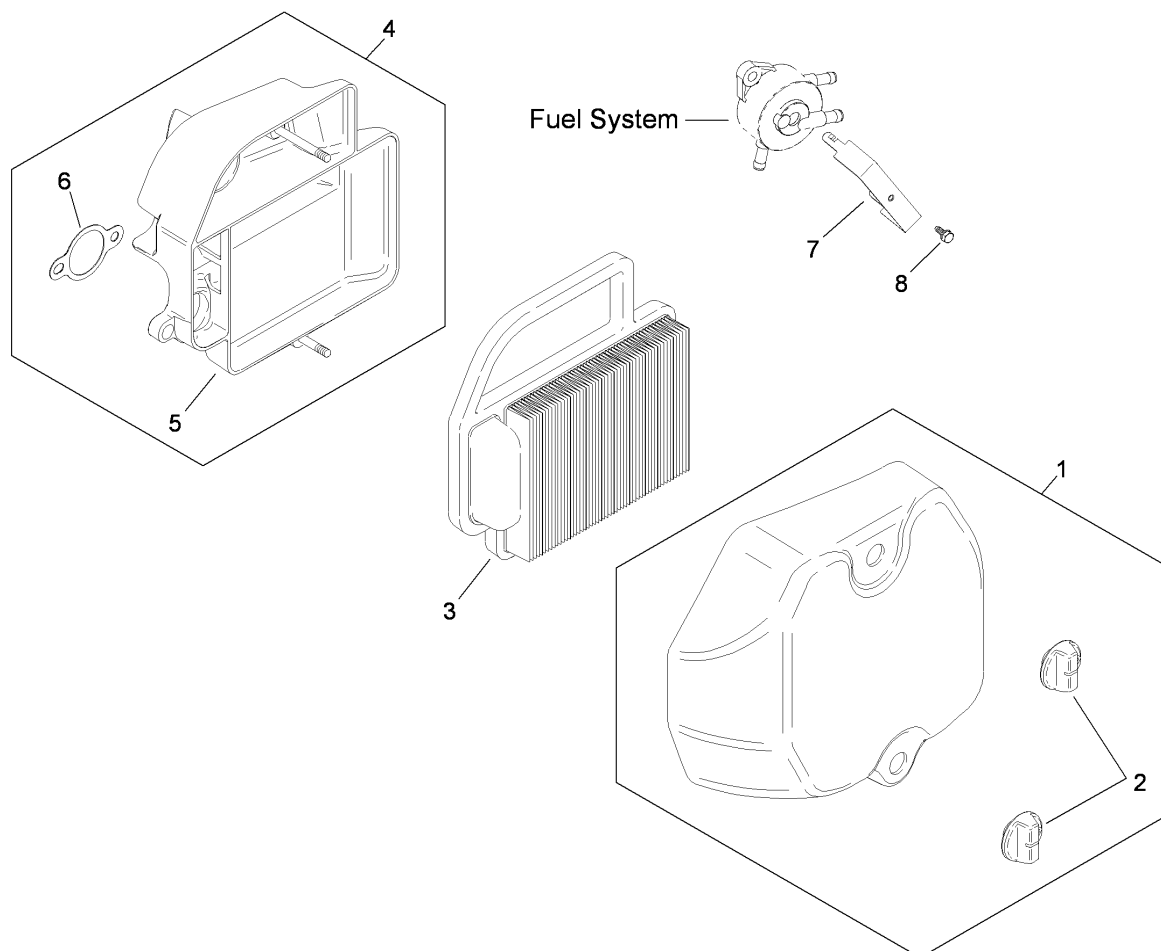

Air Intake and Filtration Assembly Kohler SV590-0212


Ref	Part No.	Qty.	Description				
④1	20 096 04-S	1	Air Cleaner Cover Kit (Includes Ref 2)				
④2	25 341 04-S	2	Knob-Cover				
④3	20 083 02-S	1	Element-Cleaner, Air				
④4	20 094 04-S	1	Air Cleaner Base Kit (Includes Ref 5, 6)				
④5	20 072 04-S	2	Stud-Base, Air Cleaner				
④6	12 041 02-S	1	Gasket-Base, Air Cleaner				
④7	20 126 12-S	1	Bracket-Pump, Fuel				
④8	M-445010-S	1	Screw-Thrd Frm (M4X0.7X10)				

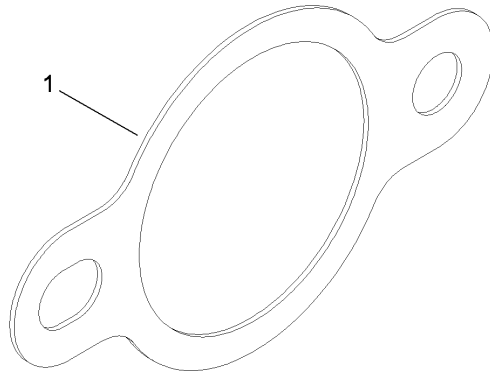

Gaskets

Kohler SV590-0212

Ref	Part No.	Qty.	Description				
41	20 041 12-S	1	Gasket-Exhaust				
1 4	20 755 05-S	1	Gasket Set				

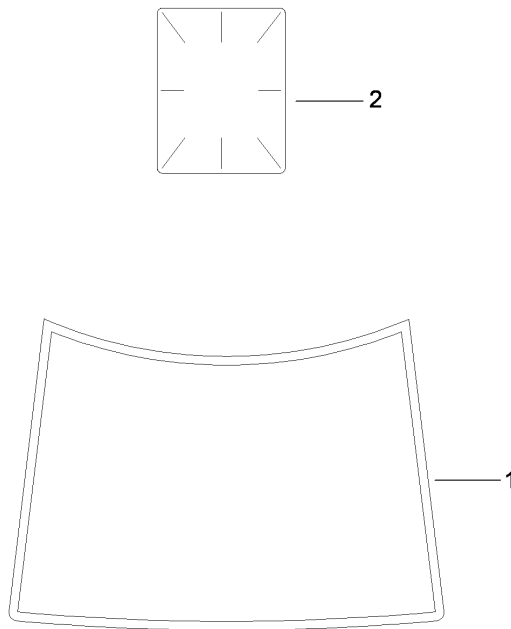

Artwork is representative
Actual labels may differ depending on model and specification number

Decals

Kohler SV590-0212

Ref	Part No.	Qty.	Description
41	20 113 13-S	1	Decal (19 H P)
42	25 113 39-S	1	Decal-Laminate, Clear

Attachments and Accessories

For 74360 - TimeCutter Z4200 Riding Mower

Product Name	Model/Part
Armrest Kit	108-6163
Smooth Tread Front Tire Kit	110-6739
Hour Meter Kit	112-9763
42 Inch Blowout Ring Kit	114-1620
Striping Kit	114-8545
Armrest Kit	79212
42 Inch Replacement Blade Kit	79220
42 Inch Recycler Kit	79311
Foot Assist Cutting Unit Lift Kit	79313
Engine Cover Kit	79314
Floor Mat Kit	79315
Rear Engine Guard	79316
Storage Cover	79317
Rear Hitch Kit	79318
Sunshade	79319
42 Inch and 50 Inch Twin Bagger	79324
10 cu. ft. Poly Dump Cart	79991
125 lb. Tow Spreader	79993
42 Inch Sweeper	79994
48 Inch Dethatcher	79995
40 Inch Spike Aerator	79996
Stake Side Kit	79997

NOTES

