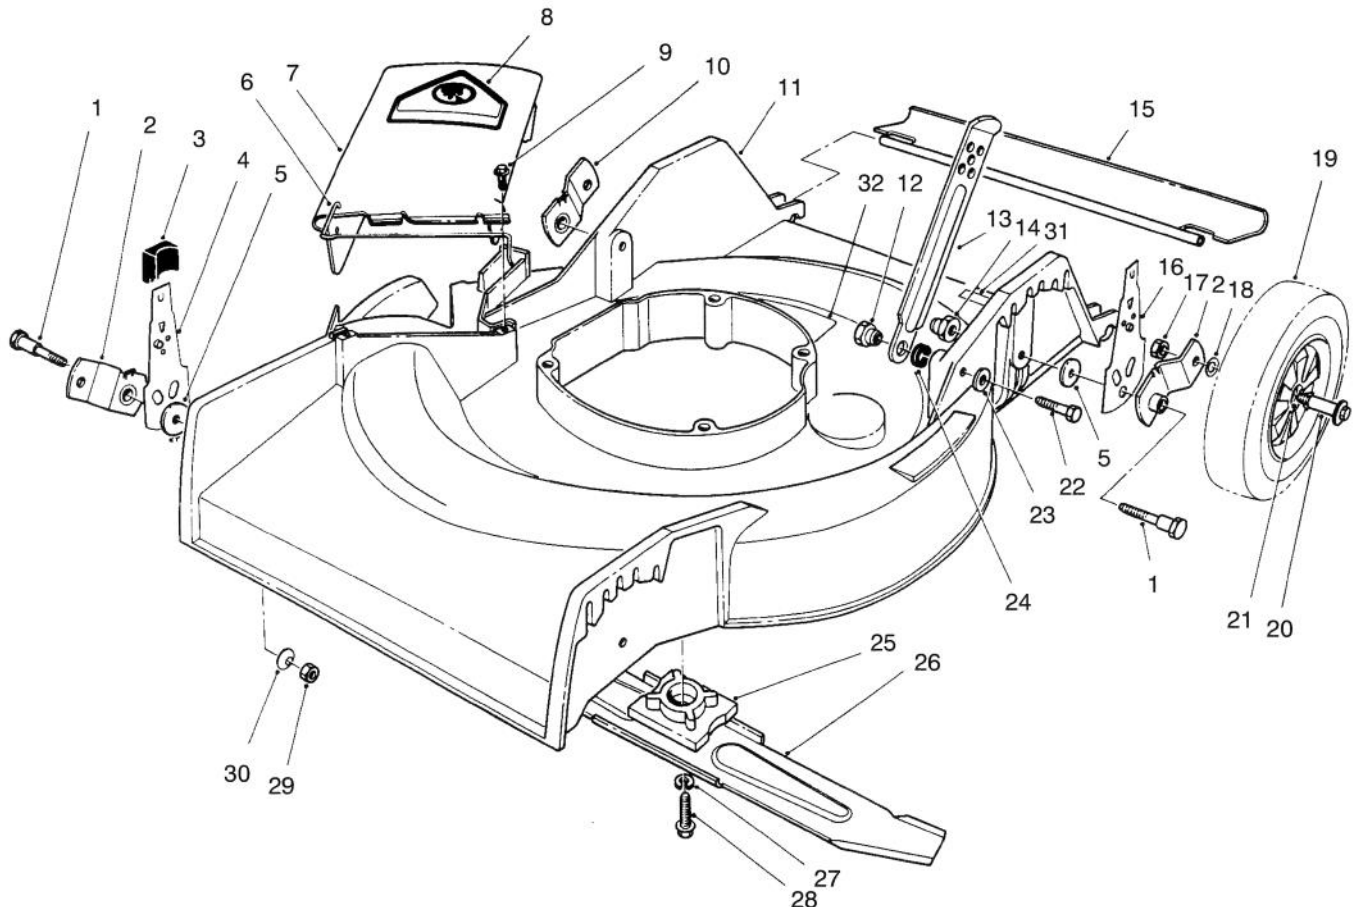


TORO®**MODEL NO. 16400-5900001 -
6900001 & UP****PARTS
CATALOG****21" SIDE DISCHARGE MOWER**


C-2225

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-0655	Screw - Pivot	4
2	20-2140	Pivot Arm "A"	2
3	25-7740	Knob - Spring Arm	4
4	66-6070	Spring Arm Front - R.H.	1
*	66-6010	Spring Arm - Front L.H.	1
5	33-0390	Washer - Pivot	4
6	20-2640	Hinge - Spring	1
7	13-4049	Deflector (Incl. Ref. #6 & 8)	1
8	39-5770	Decal - Danger	1
9	46-6811	Screw & Washer Assembly	2
10	20-2130	Pivot Arm "B"	2
11	13-2439	Housing (Incl. Ref. #31-32)	1
12	27-6520	Nut - Shoulder	2
13	82-7621	Latch - Handle	2
14	12-2080	Nut - Shoulder	2
15	66-5990	Shield - Rear	1

Ref. No.	Part No.	Description	No. Used
16	66-6030	Spring Arm - Rear	2
17	3296-6	Locknut	4
18	40-1940	Washer - Wheel Bolt	4
19	27-6200	Wheel & Tire Assembly (Incl. Ref. #21)	4
20	27-6231	Bolt - Wheel	4
21	27-6250	Bushing - Wheel	8
22	322-7	Screw - Hex Hd. Cap	2
23	3253-4	Washer - Lock	2
24	3-3287	Spacer - Handle Latch	2
25	49-7900	Retainer - Blade	1
26	20-2720	Blade	1
27	3253-22	Lockwasher	1
28	26-0671	Screw - Blade	1
29	3296-29	Locknut	2
30	3290-456	Washer - Belleville	2
31	92-1779	Decal - Warning	1
32	71-1280	Decal - Safety Instructions	1

*Not Illustrated

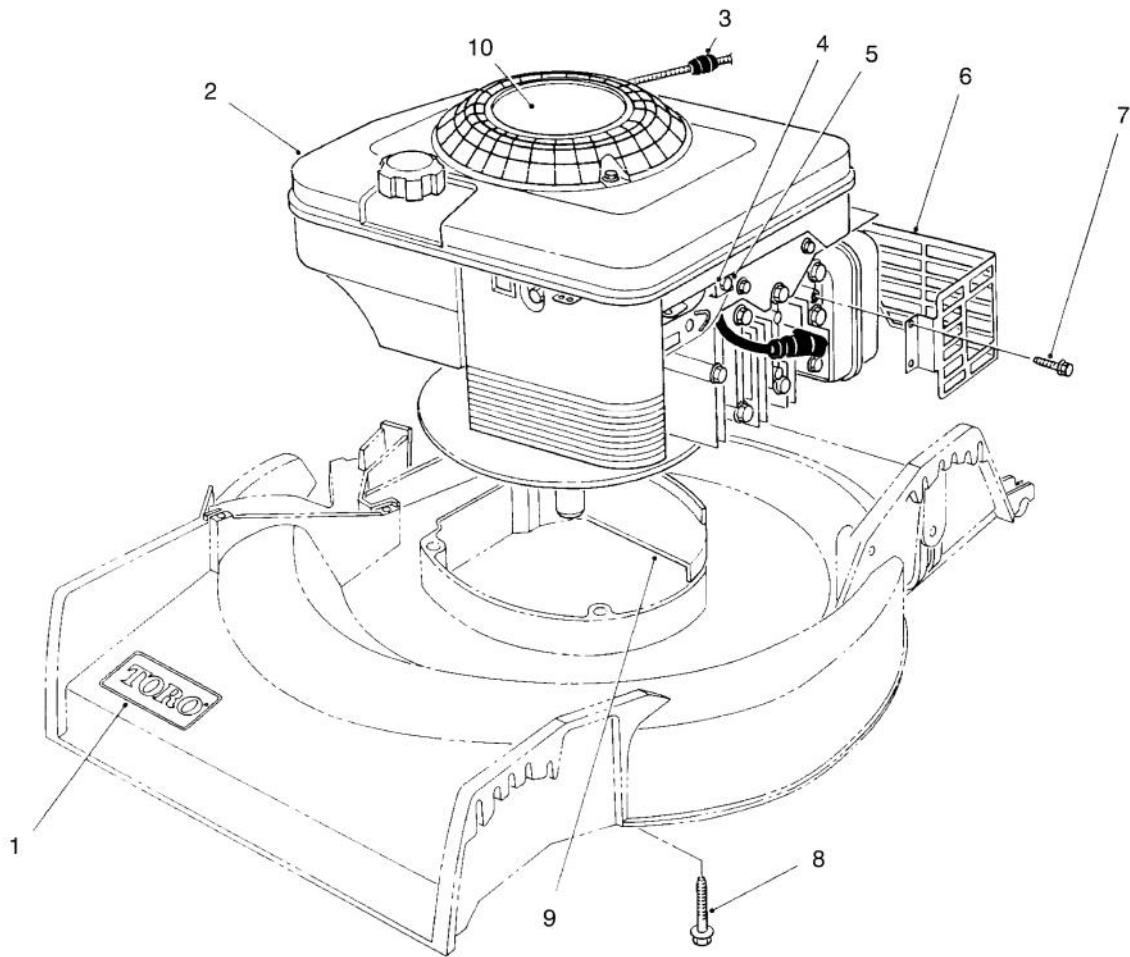


C-2226

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-0600	Decal - Toro	1
2		Engine	1
3	2210-316	Stop - Rope	1
4	2210-249	Clamp - Casing	1
5	93-8470	Screw - Clamp	1
6	82-8550	Shield - Muffler	1

Ref. No.	Part No.	Description	No. Used
7	32144-73	Screw - Hex Washer Hd. Thread Forming	3
8	11-0580	Screw - Engine	3
9	27-7470	Cap - Housing	1
10	92-2294	Decal - Engine	1

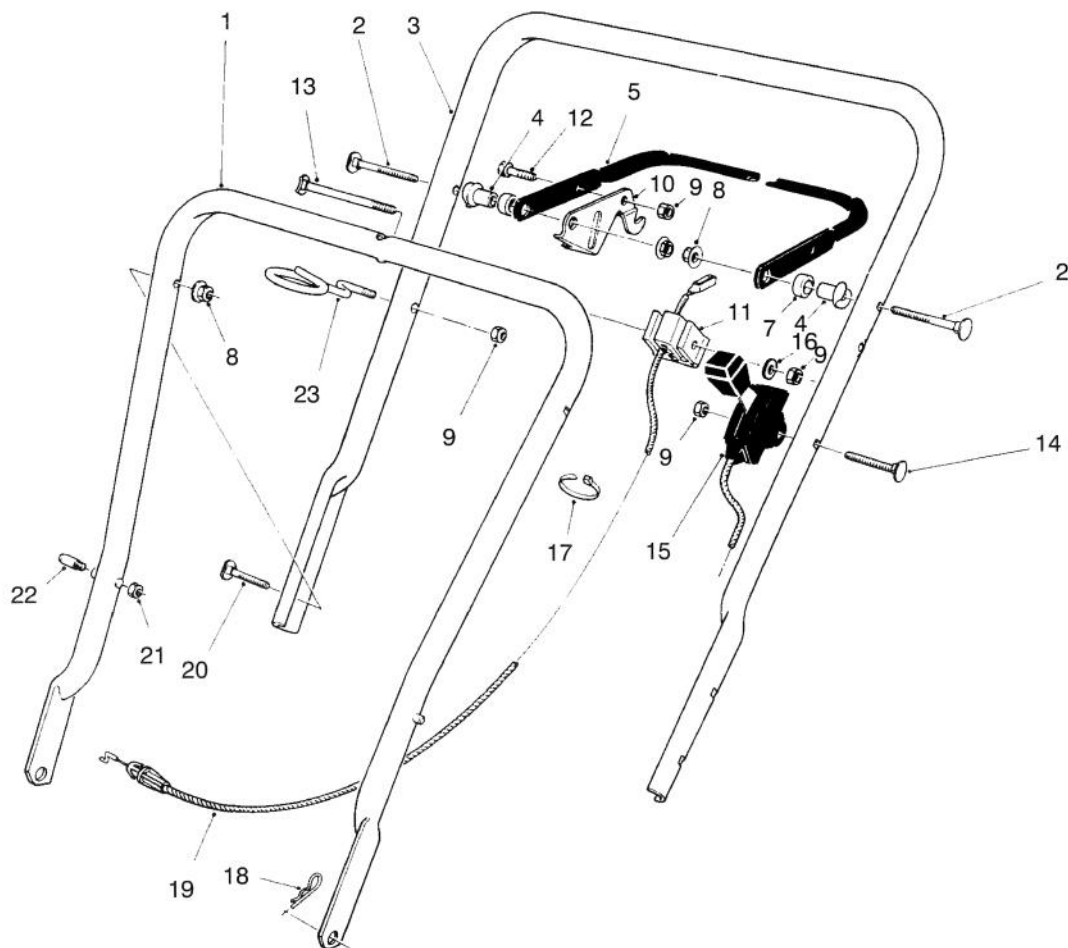

C-2227


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-1691	Lower Handle Assembly	1
2	92-2260	Screw - Handle	2
3	49-4238	Handle - Upper	1
4	49-1630	Support - Spacer	2
5	71-3080	Bar - Control	1
7	256-276	Spacer - Nylon	2
8	3296-74	Nut - Flange Lock	4
9	3296-73	Nut - Lock	4
10	77-5271	Lever - Control	1
11	46-6980	Support - Cable	1
12	321-39	Capscrew	1
13	92-2269	Screw - Handle	1
14	92-2266	Screw - Handle	1
15	93-8458	Control - Throttle (Bend Type #3) (Sheath Lg. 44 1/4") (Wire Lg. 2 1/16")	1

Ref. No.	Part No.	Description	No. Used
16	3256-1	Washer - Flat	1
17	3290-378	Tie - Cable	2
18	3290-255	Pin - Cotter Hair	2
19	92-8907	Cable - Brake	1
20	92-4095	Screw - Handle	2
†21	3296-47	Nut - Lock	2
†22	49-2750	Pin - Handle	2
23	86-9671	Guide - Rope	1
*	16-6779	Loose Parts (Incl. Ref. #8, 17-18, & 20)	1

*Not Illustrated

† Service Replacement Part

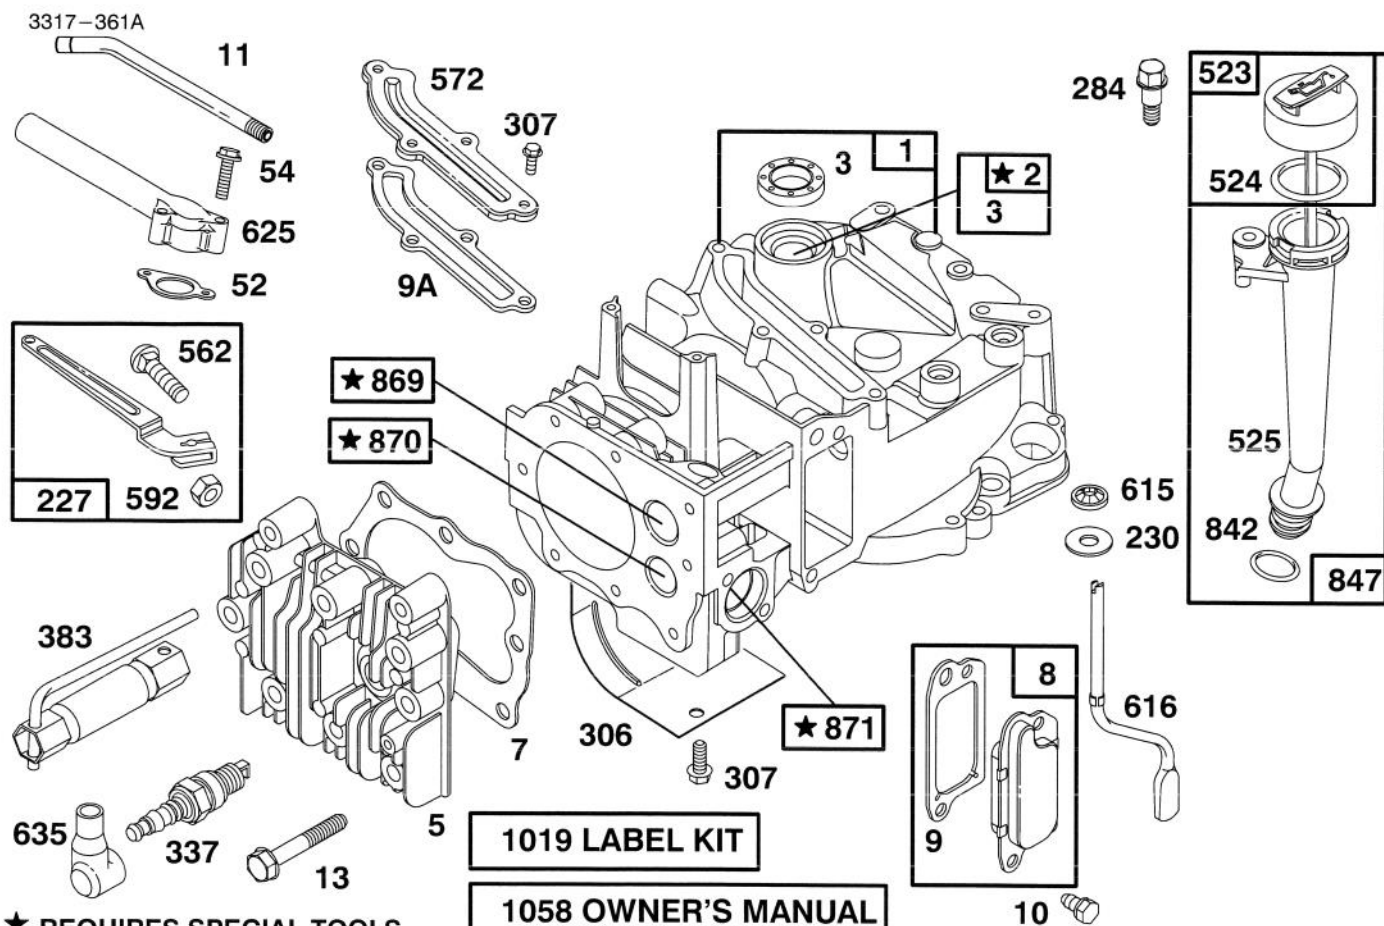


ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing - Cylinder	1
★3	299819	Seal - Oil	1
5	214349	Head - Cylinder	1
★7	272916	Gasket - Cylinder Head	1
8	495786	Breather Assembly	1
★9	272481	Gasket - Valve Cover	1
★9A	272238	Gasket - Baffle Plate	1
10	94650	Screw - Breather Mtg.	1
11	231933	Tube - Breather	1
13	94547	Screw - Cylinder Head	1
★52	272199	Gasket - Intake Elbow	1
54	94526	Screw - Intake Elbow Mtg.	1
227	492349	Lever Assembly - Gov.	1
230	67072	Washer - Gov. Crank	1
284	94511	Screw - Hex. Head	1
306	224324	Shield - Cylinder	1
307	94515	Screw - Sem	1
337	802592	Plug - Spark	1
383	89838	Wrench - Spark Plug	1

Ref. No.	Part No.	Description	No. Used
523	495264	Cap With Dipstick - Oil Filler	1
★524	280393	Seal - Filler Tube	1
525	495265	Tube - Oil Filler	1
562	92613	Bolt - Governor Lever	1
572	224328	Baffle - Cylinder	1
592	231082	Nut - Hex.	1
615	94474	Fastener	1
616	262578	Crank - Governor	1
625	281085	Tube - Fuel Intake	1
635	66538	Elbow - Spark Plug	1
★842	280966	Seal - O-Ring	1
847	495263	Oil Fill Tube and Dipstick Assy.	1
869	213512	Seat - Intake Valve	1
870	213513	Seat - Exhaust Valve	1
871	262001	Guide - Exhaust Valve	1
		Note: 63709 Guide - Intake Valve	1
1019	494256	Label Kit	1
1058	272262	Owner's Manual	1

★ Included in Gasket Set - Part No. 497316.

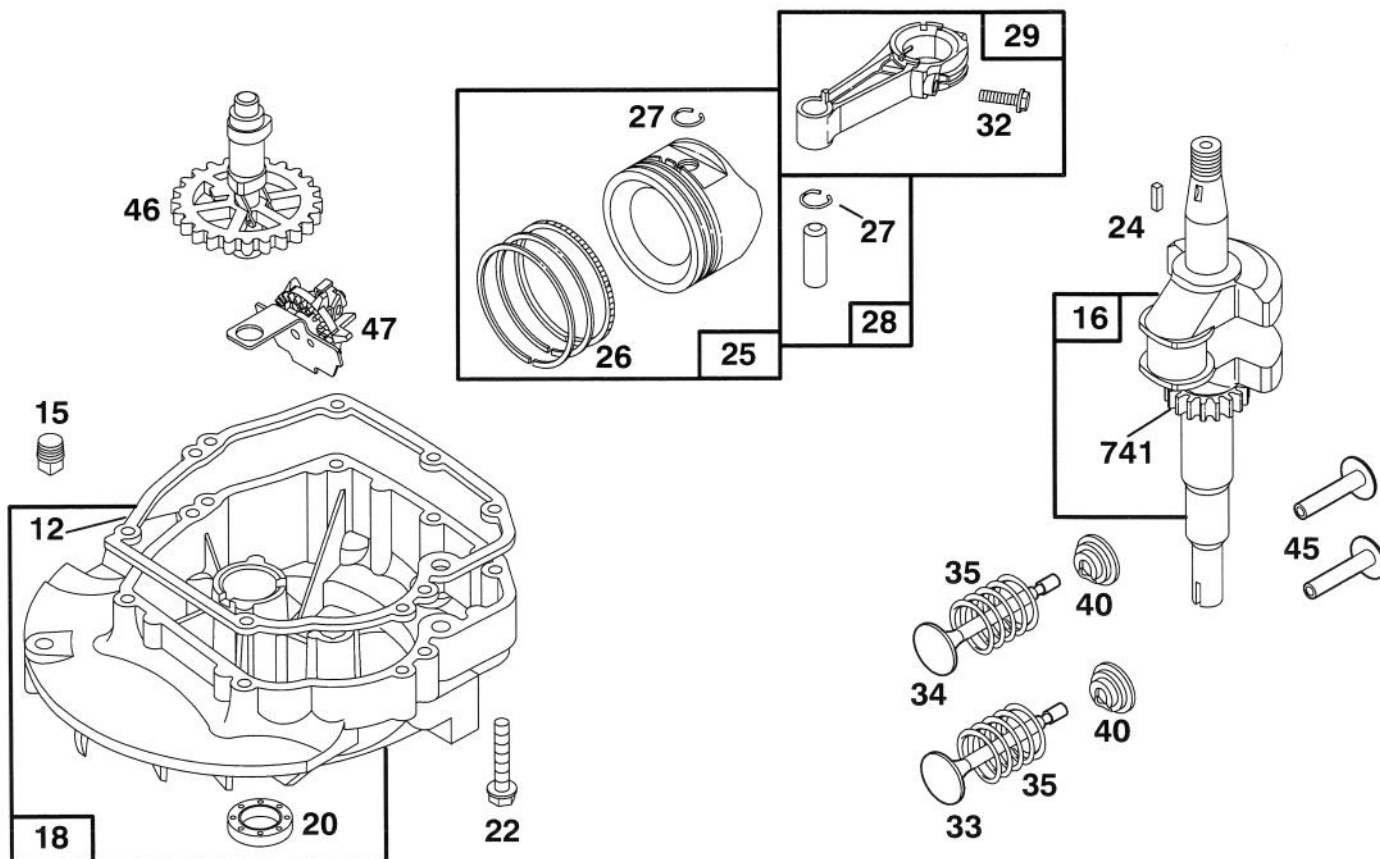


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1	27	26026	Lock – Piston Pin	1
15	94720	Plug – Oil Drain	1	28	298909	Pin – Piston (Standard)	1
16	494546	Crankshaft	1		298908	Pin – Piston (.005" O.S.)	1
		Note: Order 94388 For Timing Gear Key.	1	29	490566	Rod Assembly – Conn.	1
18	493279	Sump – Engine	1			Note: For Conn. Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	1
★20	399781	Seal – Oil	1	32	94699	Screw – Connecting Rod	1
22	94220	Screw – Hex. Head	1	33	262651	Valve – Exhaust	1
		Note: 94612 Screw – Hex. Head (One (1) Used in Hole Nearest Breather.)	1	34	262652	Valve – Intake	1
24	222698	Key – Flywheel	1	35	262224	Spring – Valve	1
25	493262	Piston Assy. (Standard)	1	40	93312	Retainer – Valve Spring	1
	493385	Piston Assy. (.010" O.S.)	1	45	262204	Tappet – Valve	1
	493386	Piston Assy. (.020" O.S.)	1	46	492830	Gear – Cam	1
	493387	Piston Assy. (.030" O.S.)	1	47	493737	Slinger – Oil	1
26	493261	Ring Set (Standard)	1	741	262598	Gear – Timing	1
	493388	Ring Set (.010" O.S.)	1				
	493389	Ring Set (.020" O.S.)	1				
	493390	Ring Set (.030" O.S.)	1				

★ Included in Gasket Set—Part No. 497316.

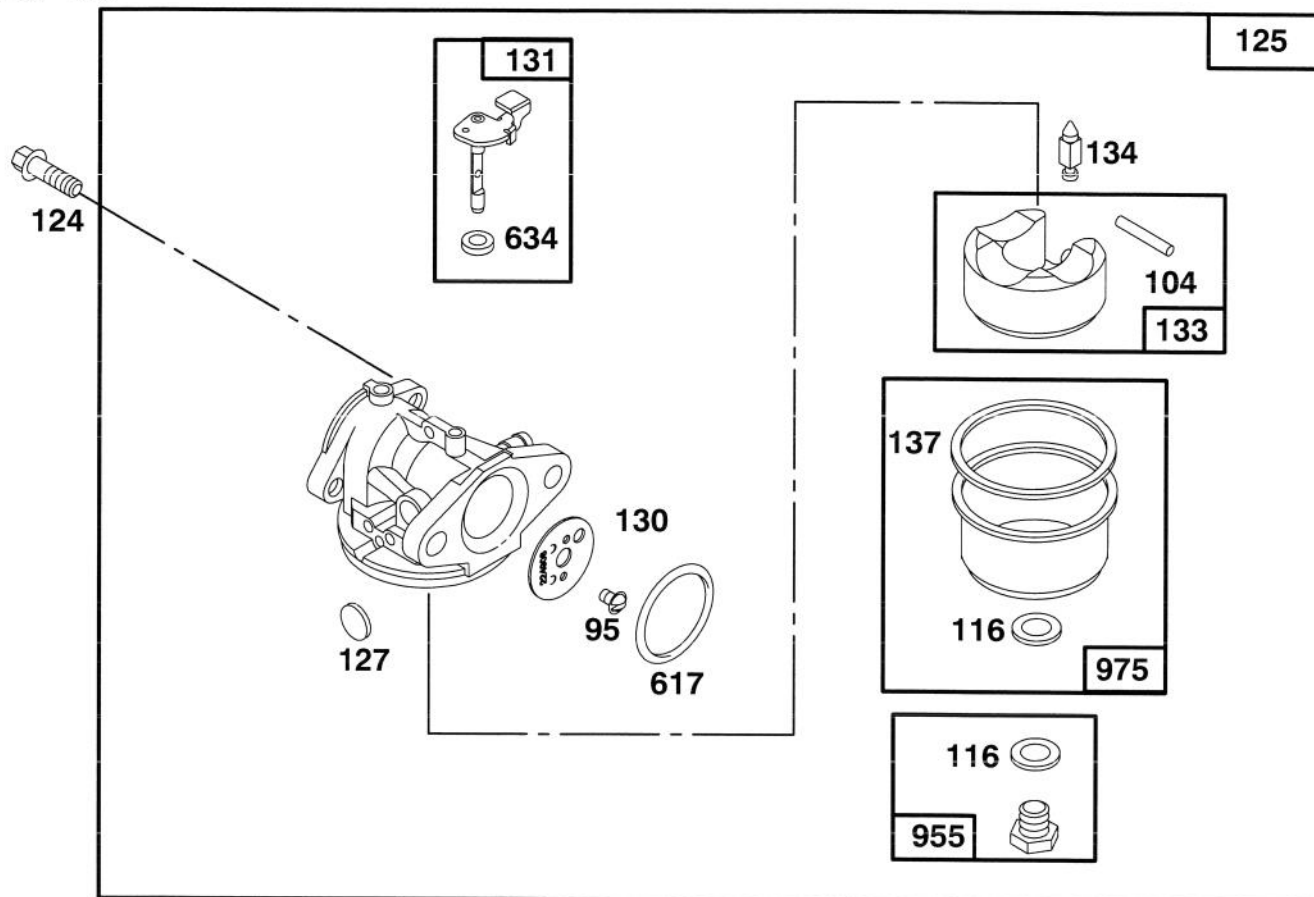

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw – Throttle Valve Mtg.	1
●104	231371	Pin – Float Hinge	1
●◆116		Gasket – Sealing (Sold in Kit Only).	1
124	94525	Screw – Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug – Welch (Sold in Kit Only)	1
130	224908	Valve – Throttle	1
131	493267	Shaft – Throttle	1
133	398187	Float Ass'y – Carburetor	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
●◆137		Gasket – Bowl (Sold in Kit Only)	1
●◆617	270344	Seal – Fuel Intake Tube	1
●◆634		Washer – Shaft (Sold in Kit Only)	1
955	497315	Screw – Bowl Mtg. (Std.) Note: 496495 Screw – Bowl Mtg. (High Altitude)	1
975	493640	Bowl Ass'y – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

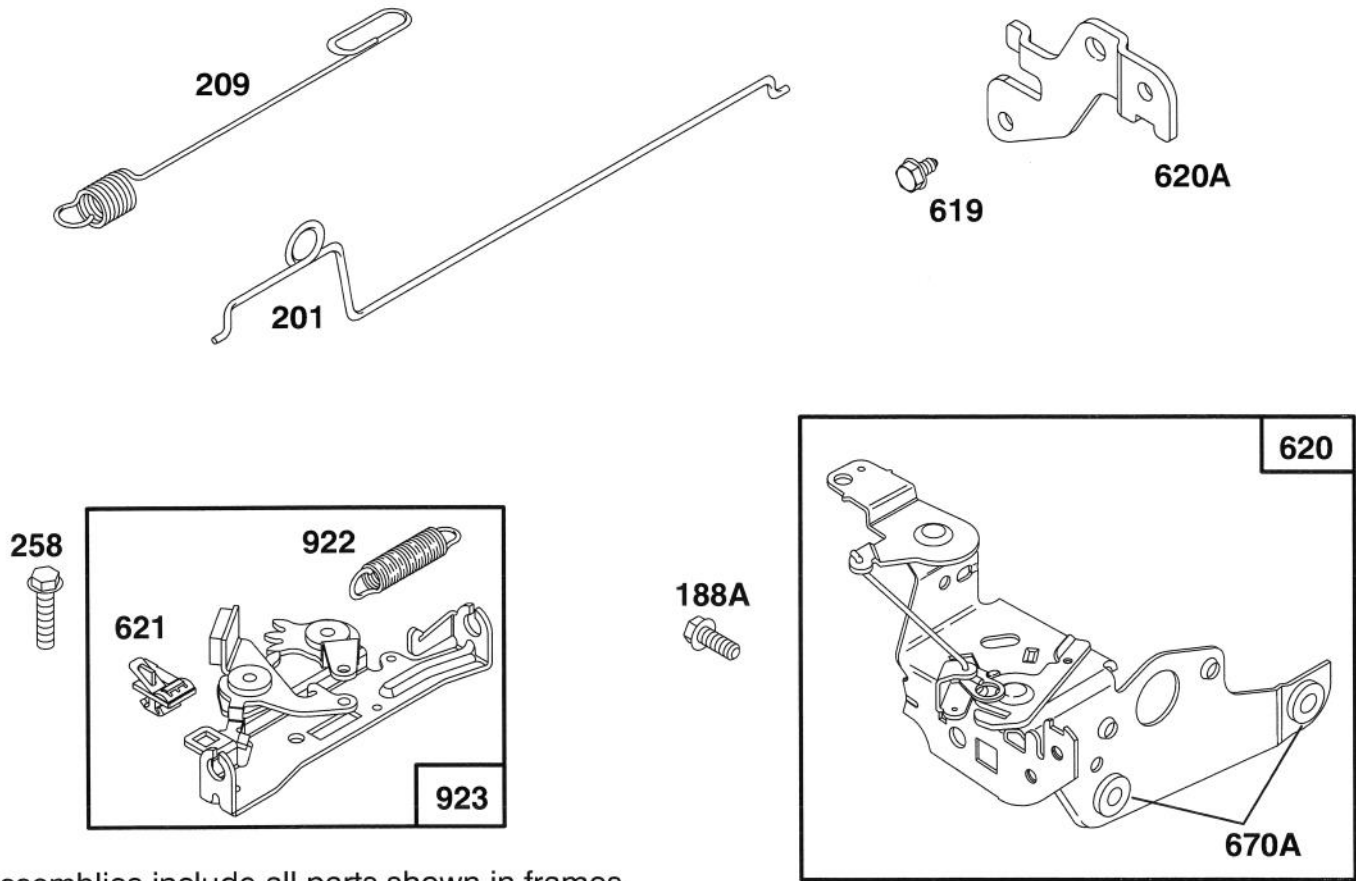


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
188A	94644	Screw - Hex. Head	1
201	262579	Link - Governor	1
209	263045	Spring - Governor	1
258	94512	Screw - Hex. Head	1
619	94620	Screw - Self Tapping	1
620	497203	Bracket - Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket - Control	1
621	396847	Switch - Stop	1
*670A	493823	Spacer - Bracket	1
922	262640	Spring - Brake	1
923	493442	Brake Assembly	1

* Included in Gasket Set - Part No. 497316.

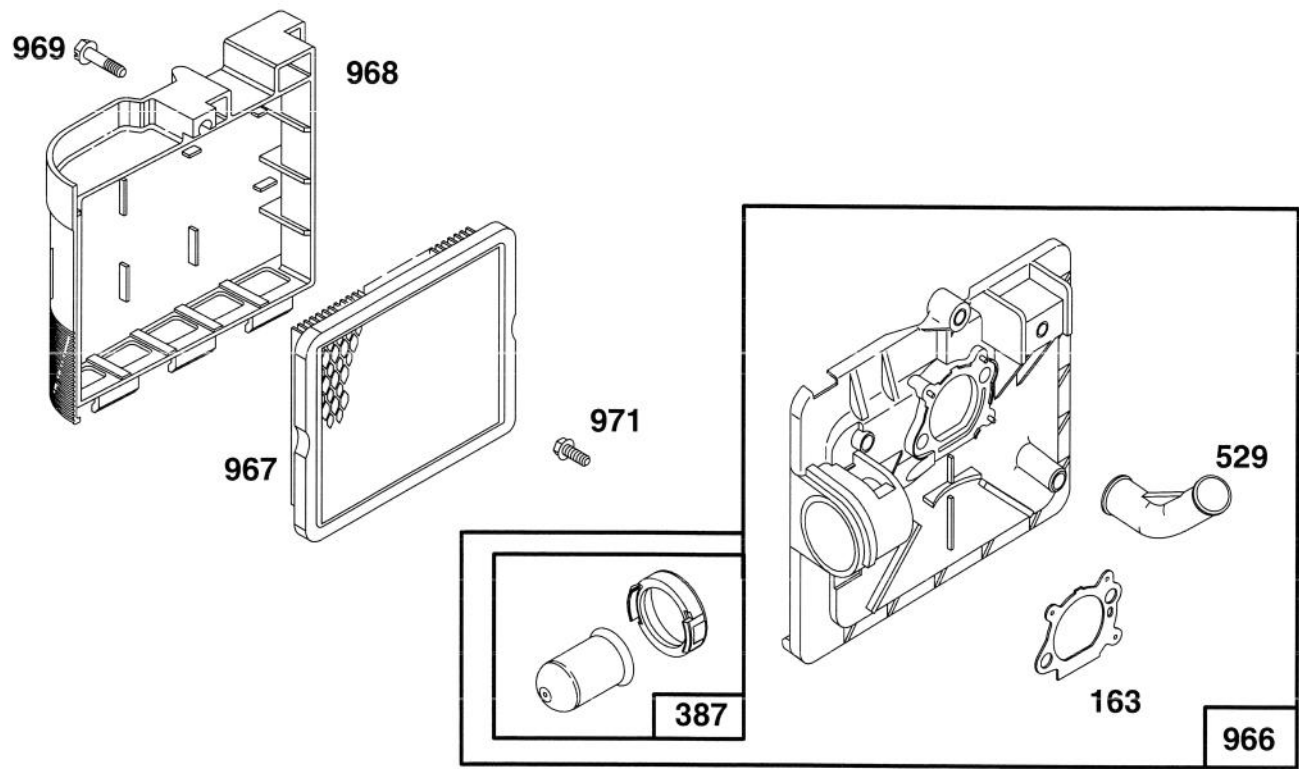


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
387	496115	Primer–Carburetor	1
529	281299	Grommet – Breather	1
966	496116	Base – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1

★ Included in Gasket Set–Part No. 497316.

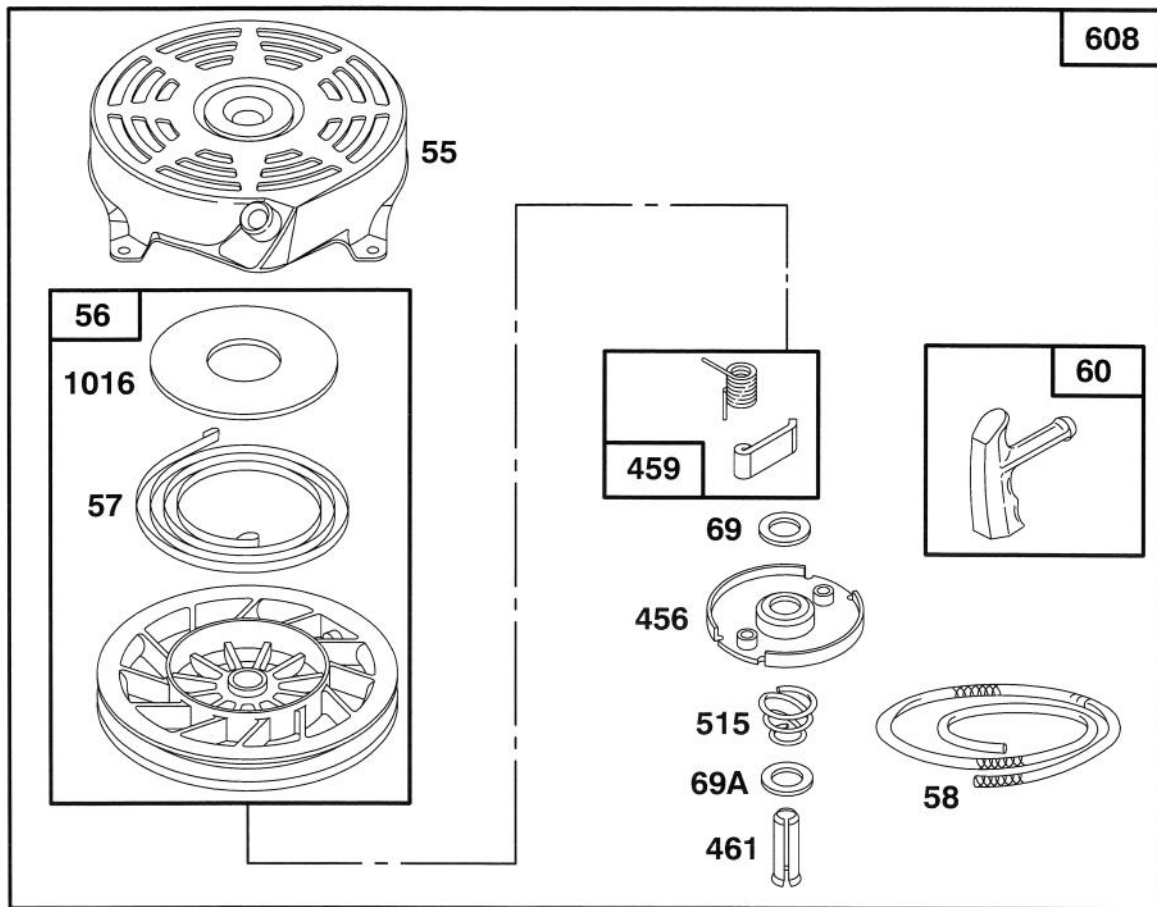


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
55	492831	Housing – Rewind Starter	1
56	493824	Pulley – Rewind Starter	1
57	262594	Spring – Rewind Starter	1
58	280399	Rope – Rewind Starter	1
60	393152	Handle – Rewind Starter	1
69	280973	Washer – Rewind Starter	1
69A	224322	Washer – Rewind Starter	1
456	224321	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	492833	Pawl – Starter	1
461	262626	Pin – Starter	1
515	262625	Spring – Torsion	1
608	493295	Starter Assy. – Rewind	1
		Includes:	
		94128 Screw – Hex Hd.	1
		92987 Nut – Hex	1
1016	224278	Cover – Rewind Starter	1

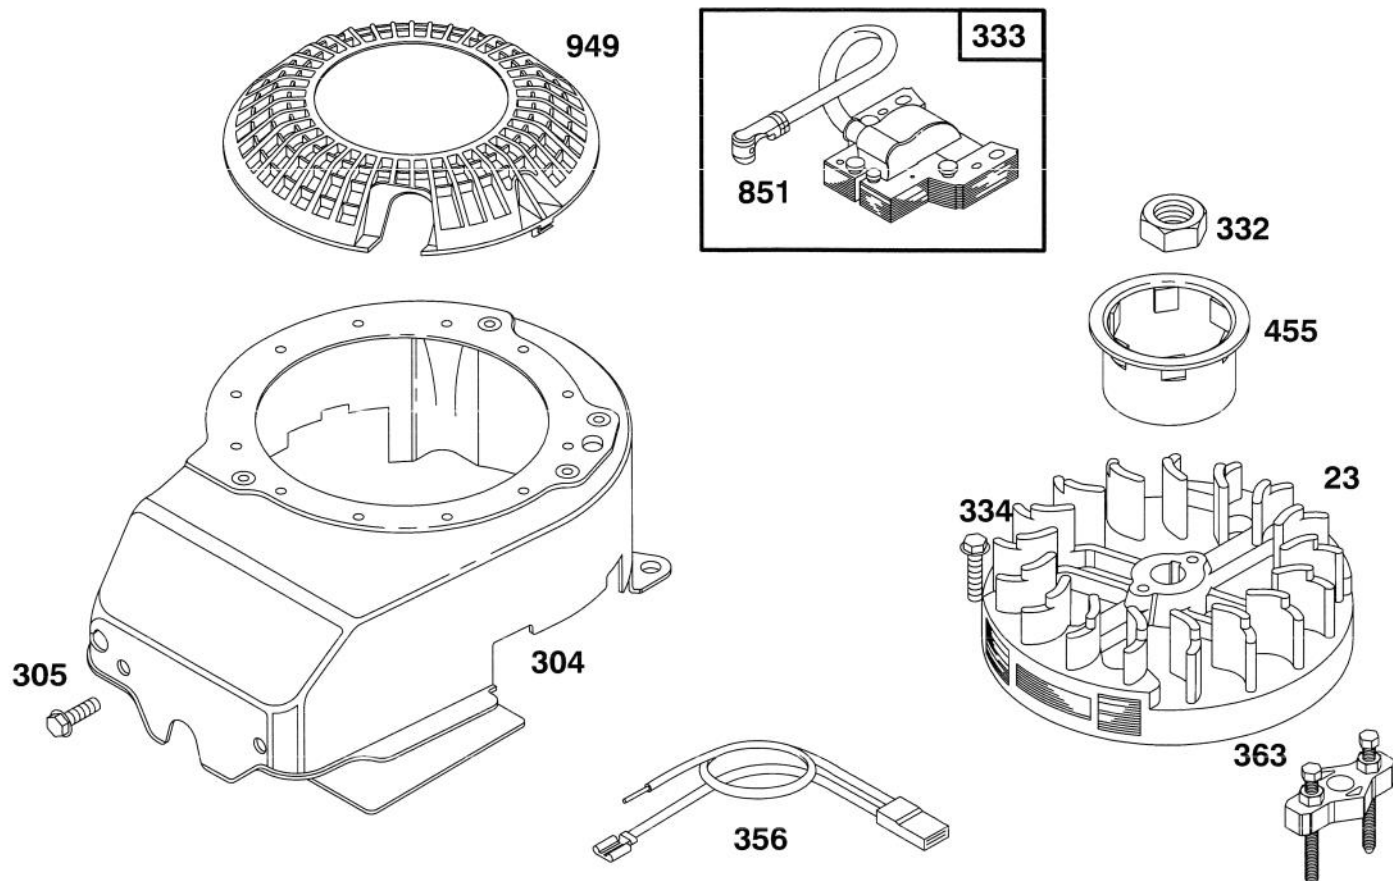


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
304	493293	Housing - Blower	1
305	94513	Screw - Sem	1
332	92284	Nut - Flywheel	1
333	802574	Armature - Magneto	1
334	93381	Screw - Sem	1

Ref. No.	Part No.	Description	No. Used
356	398808	Wire - Ground	1
363	19069	Puller - Flywheel	1
455	224250	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1
949	281136	Guard-Finger	1

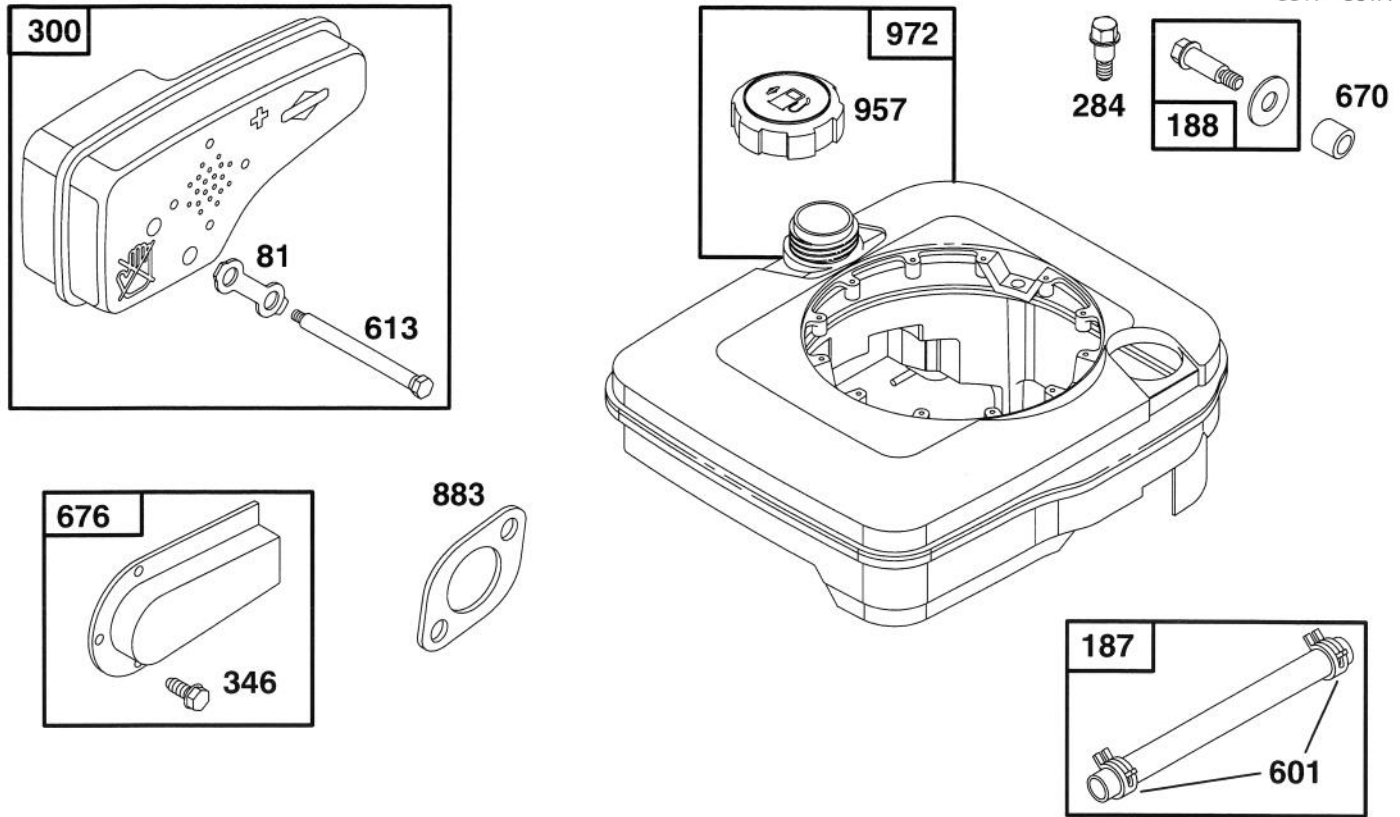




Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock - Muffler Screw	1
187	492790	Hose - Fuel	1
188	398540	Screw - Tank Mounting	1
284	94511	Screw - Hex. Head	1
300	490547	Muffler - Exhaust	1
346	93705	Screw - Hex. Head	1
601	93807	Clamp - Hose	1

Ref. No.	Part No.	Description	No. Used
613	94231	Screw - Muffler Mtg.	1
670	280512	Spacer - Fuel Tank	1
676	493871	Deflector - Muffler	1
*883	272253	Gasket-Muffler	1
957	397974	Cap Assy. - Fuel	1
972	497226	Tank Assembly - Fuel	1

* Included in Gasket Set - Part No. 497316.

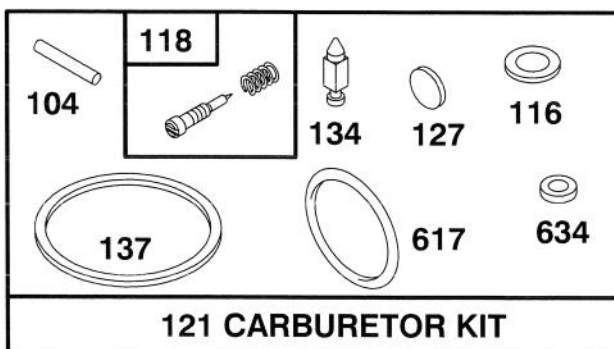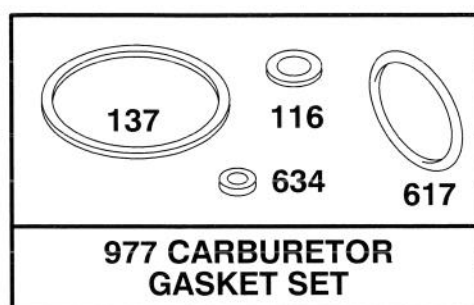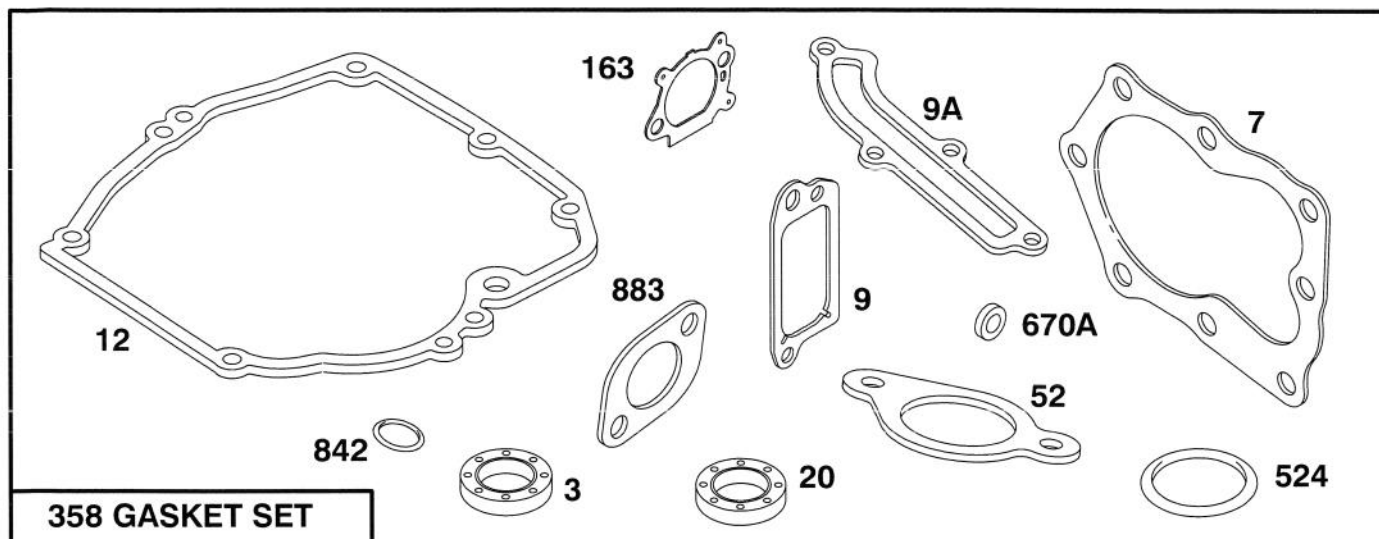

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 127702-0645-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal - Oil	1
★7	272916	Gasket - Cylinder Hd.	1
★9	272481	Gasket - Valve Cover	1
★9A	272238	Gasket - Baffle Plate	1
★12	272198	Gasket - Crankcase	1
★20	399781	Seal - Oil	1
★52	272199	Gasket - Intake Elbow	1
●104	231371	Pin - Float Hinge	1
●◆116		Gasket - Sealing (Sold in Kit Only).	1
●118	493765	Valve - Needle	1
121	493762	Carburetor Kit	1
●127		Plug - Welch (Sold in Kit Only).	1
●134	398188	Valve - Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket - Bowl (Sold in Kit Only).	1
★163	272653	Gasket - Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal - Filler Tube	1
●◆617	270344	Seal - Fuel Intake Tube	1
●◆634		Washer - Shaft (Sold in Kit Only).	1
★670A	493823	Spacer - Bracket (Includes 2)	1
★842	280966	Seal - O-Ring	1
★883	272253	Gasket - Muffler	1
977	490937	Gasket Set - Carburetor	1

- Included in Carburetor Kit—Part No. 493762.
- ◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 497316.

TORO PART NUMBER INDEX

3317-361A

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
3-0655	Screw - Pivot	1 1 4	77-5271	Lever - Control	3 10 1
3-3287	Spacer - Handle Latch	1 24 2	82-7621	Latch - Handle	1 13 2
11-0580	Screw - Engine	2 8 3	82-8550	Shield - Muffler	2 6 1
12-2080	Nut - Shoulder	1 9 2	86-9671	Guide - Rope	3 23 1
13-2439	Housing	1 11 1	92-1779	Decal - Warning	1 31 1
13-4049	Deflector	1 7 1	92-2260	Screw - Handle	3 2 2
16-6779	Loose Parts	3 * 1	92-2266	Screw - Handle	3 14 1
20-2130	Pivot Arm B	1 10 2	92-2269	Screw - Handle	3 13 1
20-2140	Pivot Arm A	1 2 2	92-2294	Decal - Engine	2 10 1
20-2640	Hinge - Spring	1 6 1	92-4095	Screw - Handle	3 20 2
20-2720	Blade	1 26 1	92-8907	Cable - Brake	3 19 1
25-7740	Knob - Spring Arm	1 3 4	93-8458	Control - Throttle	3 15 1
26-0671	Screw - Blade	1 28 1	93-8470	Screw - Clamp	2 5 1
27-6200	Wheel & Tire Assembly	1 19 4	2210-249	Clamp - Casing	2 4 1
27-6231	Bolt - Wheel	1 20 4	2210-316	Stop - Rope	2 3 1
27-6250	Bushing - Wheel	1 21 8	256-276	Spacer - Nylon	3 7 2
27-6520	Nut - Shoulder	1 12 2	321-39	Capscrew	3 12 1
27-7470	Cap - Housing	2 9 1	322-7	Screw - Hex Hd. Cap	1 22 2
33-0390	Washer - Pivot	1 5 4	3253-4	Washer - Lock	1 23 2
39-5770	Decal - Danger	1 8 1	3253-22	Lockwasher	1 27 1
40-1940	Washer - Wheel Bolt	1 18 4	3256-1	Washer - Flat	3 16 1
46-6811	Screw & Washer Assembly	1 9 2	3290-255	Pin - Cotter Hair	3 18 2
46-6980	Support - Cable	3 11 1	3290-378	Tie - Cable	3 17 2
49-1630	Support - Spacer	3 4 2	3290-456	Washer - Belleville	1 30 2
49-1691	Lower Handle Assembly	3 1 1	3296-6	Locknut	1 17 4
49-2750	Pin - Handle	3 22 2	3296-29	Locknut	1 29 2
49-4238	Handle - Upper	3 3 1	3296-47	Nut - Lock	3 21 2
49-7900	Retainer - Blade	1 25 1	3296-73	Nut - Lock	3 9 4
66-5990	Shield - Rear	1 15 1	3296-74	Nut - Flange Lock	3 8 4
66-6010	Spring Arm - Front L.H.	1 * 1	32144-73	Screw - Hex Washer Hd.	2 7 3
66-6030	Spring Arm - Rear	1 16 2			
66-6070	Spring Arm Front - R.H.	1 4 1			
71-0600	Decal - Toro	2 1 1			
71-1280	Decal - Safety Instructions	1 32 1			
71-3080	Bar - Control	3 5 1			

OPTIONAL EQUIPMENT

Grass Bagging Kit Part No. 47-6510
Giant Bagging Kit Part No. 29-9750

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's

service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

[illegible]

[illegible]

MAINTENANCE RECORD

[illegible]