



**Count on it.**

Form No. 3363-777 Rev A

# Parts Catalog

## TimeCutter® Z5060 Riding Mower

Model No. 74375—Serial No. 310000001 and Up

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required  
**ASM:** assembly  
**BBC:** blade brake clutch  
**CARR:** carriage  
**CCW:** counter clock wise  
**CW:** clockwise  
**DEG:** degrees  
**ECM:** electronic control module  
**EXT:** external  
**FH:** flat head  
**GA:** gauge  
**HD:** heavy-duty  
**HF:** hex flange  
**HH:** hex head  
**HHF:** hex head flange  
**HHFTF:** hex head flange thread forming  
**HJ:** hex jam  
**HLH:** hex lag head  
**HOC:** height-of-cut


**HSBH:** hex socket button head  
**HSFH:** hex socket flat head  
**HSH:** hex socket head  
**HWH:** hex washer head  
**HWHTF:** hex washer head thread forming  
**HYD:** hydraulic  
**LH:** left hand  
**NI:** nylon insert  
**NPTF:** national pipe thread fine  
**PFH:** phillips flat head  
**PPH:** phillips pan head  
**PPHTF:** phillips pan head thread forming  
**PRH:** phillips round head  
**PTH:** phillips truss head  
**PTO:** power-take-off  
**RH:** right hand  
**ROPS:** roll-over protection system  
**RRB:** rear roller brush

**SFH:** slotted fillister head  
**SHH:** slotted hex head  
**SHWH:** slotted hex washer head  
**SPH:** slotted pan head  
**SQH:** square head  
**SRH:** slotted round head  
**STD:** standard  
**TAP:** self tapping  
**TTH:** torx truss head

# Contents

|                                                        |    |
|--------------------------------------------------------|----|
| Frame and Caster Wheel Assembly . . . . .              | 4  |
| Deck Lift Assembly . . . . .                           | 5  |
| Seat Assembly . . . . .                                | 6  |
| Seat and Armrest Kit Assembly No. 117-1227 . . . . .   | 7  |
| Motion Control Assembly . . . . .                      | 8  |
| Hydro Traction Drive Assembly . . . . .                | 9  |
| RH Hydro Assembly No. 110-6771 . . . . .               | 10 |
| LH Hydro Assembly No. 110-6770 . . . . .               | 12 |
| Engine and Clutch Assembly . . . . .                   | 14 |
| Fuel Delivery and Body Styling Assembly . . . . .      | 15 |
| Electrical Assembly . . . . .                          | 16 |
| 50 Inch Deck Assembly . . . . .                        | 17 |
| 50 Inch Deck and Decal Assembly No. 117-1291 . . . . . | 18 |
| 50 Inch Deck Spindle and Blade Assembly . . . . .      | 19 |
| Attachments and Accessories . . . . .                  | 20 |




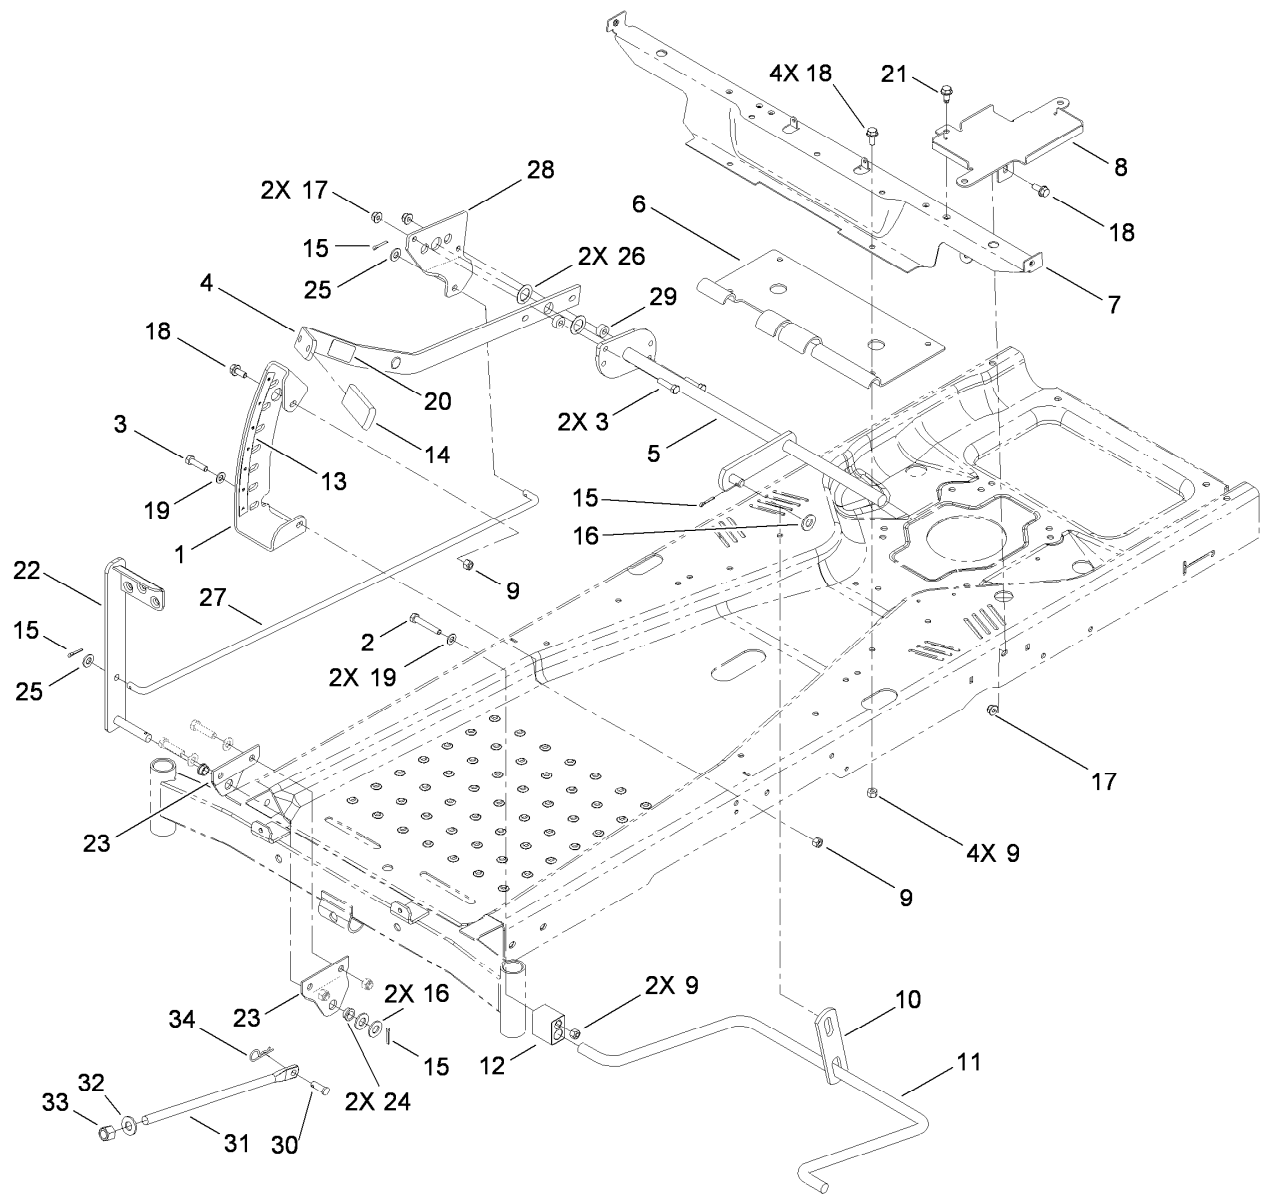

## Deck Lift Assembly


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 112-4027-03 | 1    | Sector-HOC        |
| 2    | 322-10      | 2    | Screw-HH          |
| 3    | 322-6       | 3    | Screw-HH          |
| 4    | 112-3960-03 | 1    | Lift Arm ASM      |
| 5    | 108-7841-03 | 1    | Lift Lever ASM    |
| 6    | 110-6800-03 | 1    | Plate-Lift        |
| 7    | 110-6805-03 | 1    | Bracket-Seat/Pods |
| 8    | 110-1937-03 | 1    | Tray-Battery      |
| 9    | 3296-29     | 8    | Nut-Lock, NI      |
| 10   | 108-7840    | 1    | Link-Lift         |
| 11   | 108-7839    | 1    | Arm-Lift, Rear    |
| 12   | 108-7845    | 2    | Block-Pivot       |
| 13   | 112-9802    | 1    | Decal-HOC         |
| 14   | 105-3450    | 1    | Grip-Lever, Lift  |
| 15   | 3272-10     | 4    | Pin-Cotter        |
| 16   | 3256-26     | 3    | Washer-Flat       |
| 17   | 104-8300    | 3    | Nut-Flange, NI    |

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 18   | 3234-47     | 6    | Screw-HHF        |
| 19   | 3256-23     | 3    | Washer-Flat      |
| 20   | 106-8743    | 1    | Decal-HOC        |
| 21   | 32104-32    | 1    | Screw-HWH        |
| 22   | 112-4018-03 | 1    | Pedal ASM        |
| 23   | 112-3954-03 | 2    | Bracket-Footlift |
| 24   | 256-156     | 2    | Bushing-Flange   |
| 25   | 3256-24     | 2    | Washer-Flat      |
| 26   | 3-6498      | 2    | Washer-Thrust    |
| 27   | 112-3958    | 1    | Rod-Lift         |
| 28   | 112-3959    | 1    | Plate-Footlift   |
| 29   | 112-3961    | 2    | Spacer           |
| 30   | 1-808284    | 1    | Pin-Clevis       |
| 31   | 108-7847    | 1    | Rod-Lift         |
| 32   | 87-7270     | 1    | Washer-Thrust    |
| 33   | 3296-23     | 1    | Nut-Lock, NI     |
| 34   | 9335054     | 1    | Pin-Hair         |

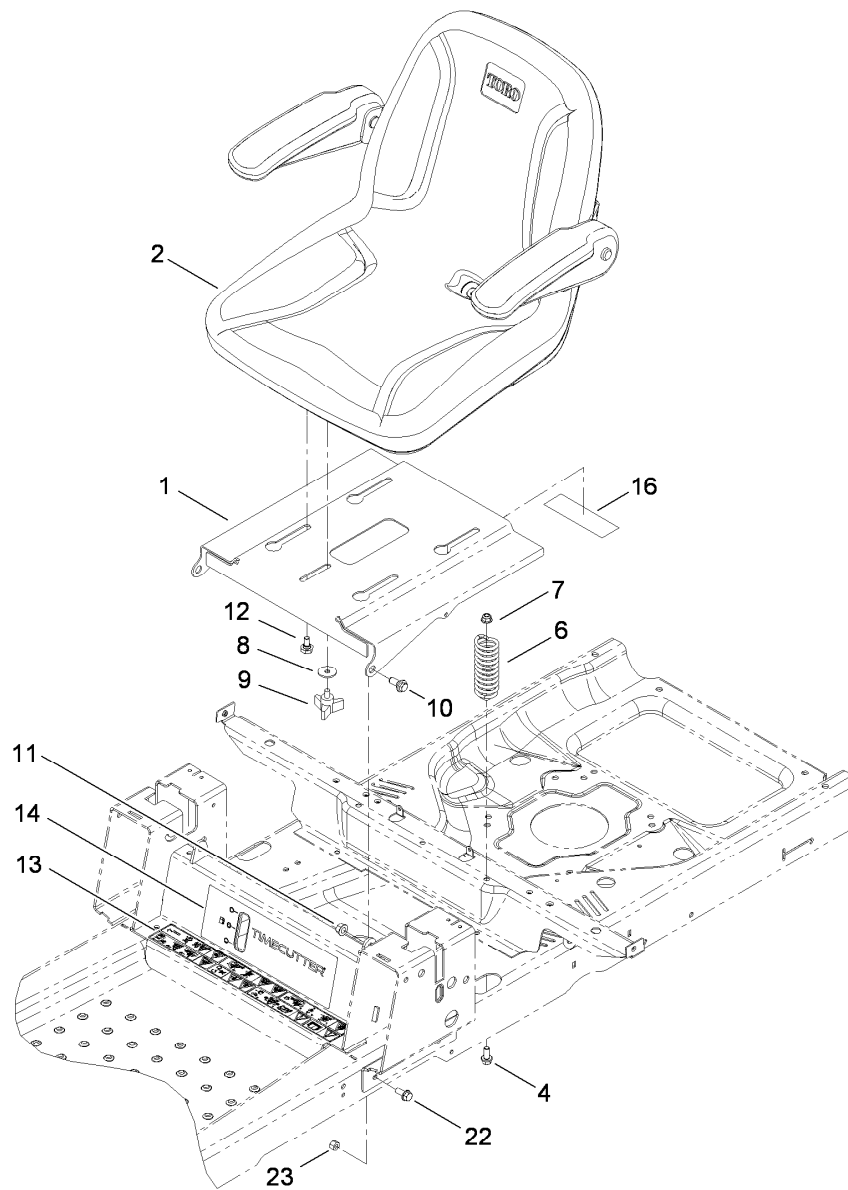


## Seat Assembly

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    | 115-2465-03 | 1    | Base-Seat                    |
| 2    | 117-1227    | 1    | 18 Inch Seat ASM W/ Armrests |
| 4    | 3234-47     | 2    | Screw-HHF                    |
| 6    | 92-7054     | 2    | Spring-Compression           |
| 7    | 104-8300    | 2    | Nut-Flange, NI               |
| 8    | 5-4460      | 1    | Washer-Pivot                 |
| 9    | 92-9674     | 1    | Knob                         |
| 10   | 94-7582     | 2    | Bolt-Shoulder                |
| 11   | 32128-21    | 2    | Nut-HF                       |
| 12   | 37-8771     | 4    | Bolt-Shoulder                |
| 13   | 115-2469    | 1    | Decal-Danger                 |
| 14   | 117-1268    | 1    | Decal-Timecutter             |
| 16   | 106-8717    | 1    | Decal-Service                |
| 22   | 3234-7      | 7    | Screw-HHF                    |
| 23   | 3296-29     | 7    | Nut-Lock, NI                 |

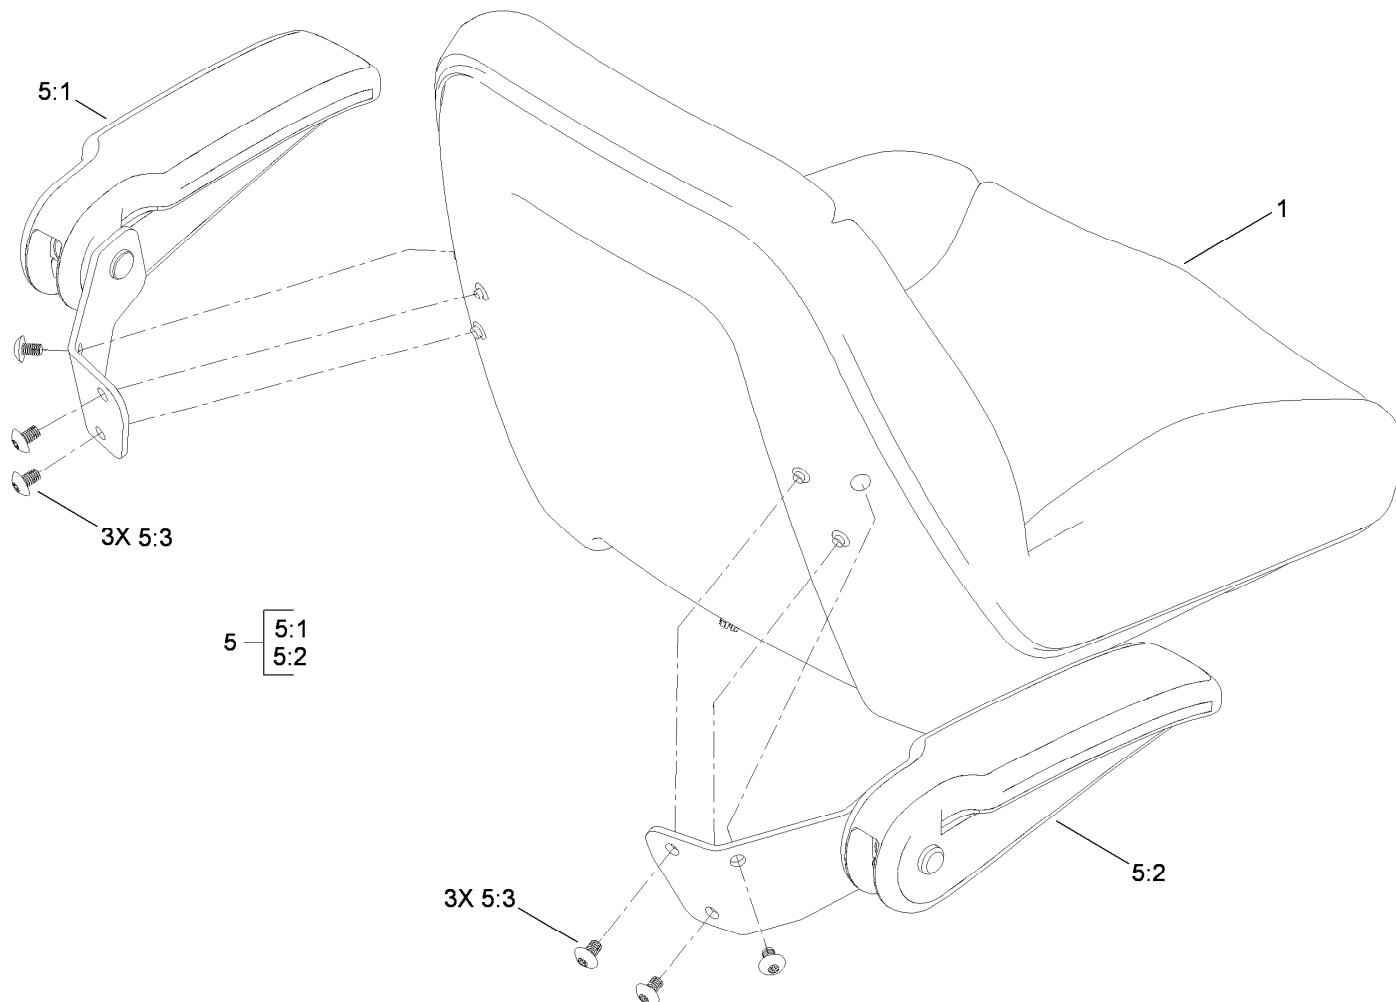

## Seat and Armrest Kit Assembly No. 117-1227

| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 1    | 117-1226    | 1    | Seat-18 Inch   |
| 5    | 108-6163    | 1    | Armrest Kit    |
| 5:1  | 110-6569    | 1    | LH Armrest Kit |
| 5:2  | 110-6570    | 1    | RH Armrest Kit |
| 5:3  | 108-6179    | 6    | Screw-HSBH     |

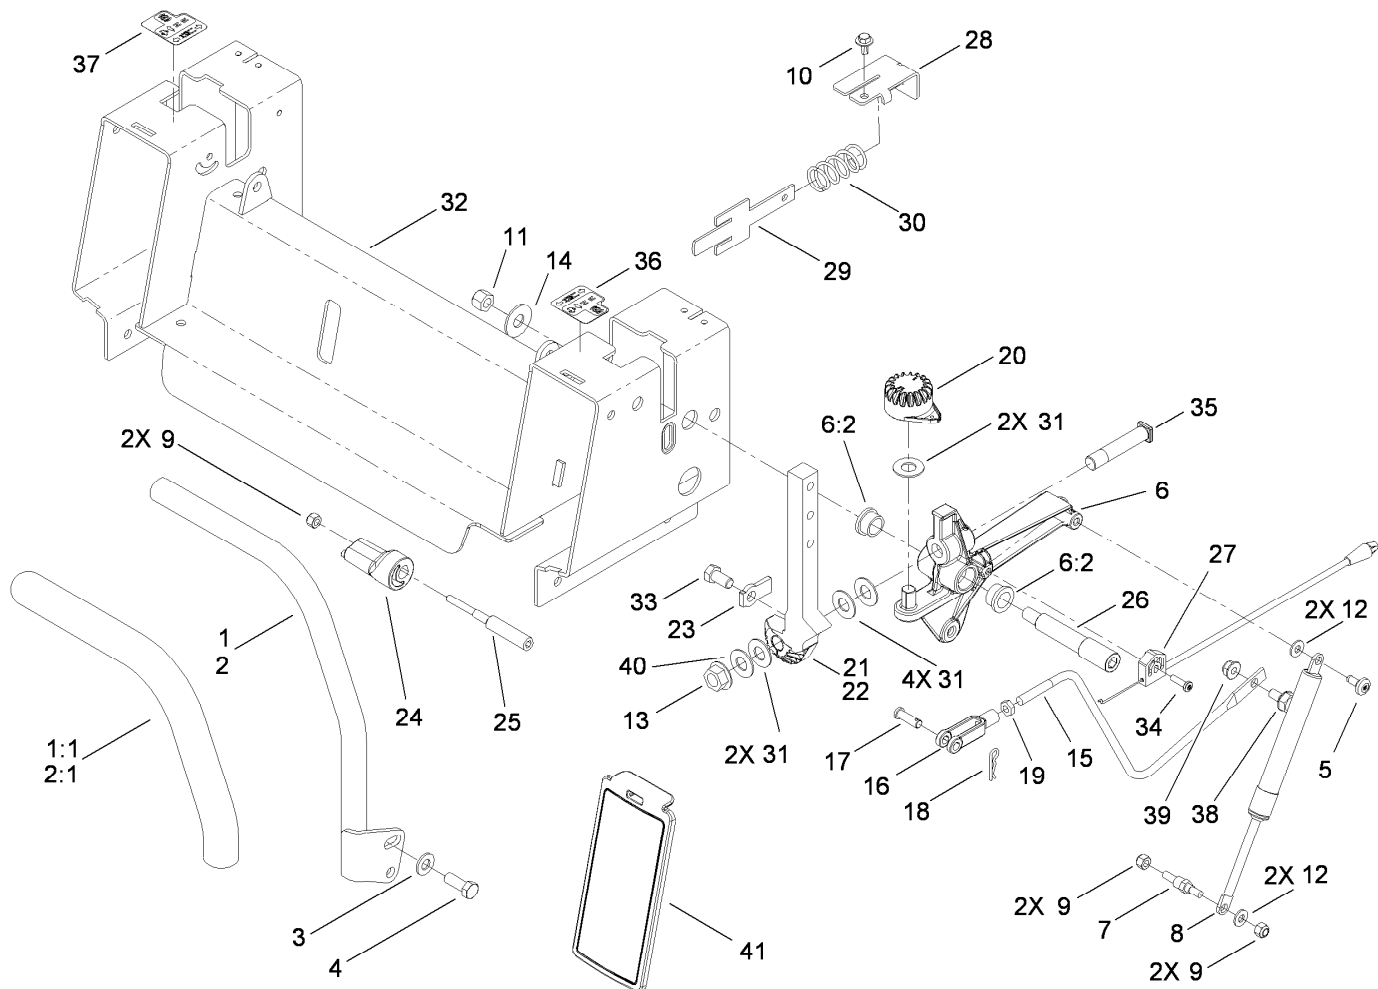


## Motion Control Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 117-5339    | 1    | RH Control Handle ASM   |
| 1:1  | 108-6187    | 1    | Grip                    |
| 2    | 117-5338    | 1    | LH Control Handle ASM ● |
| 2:1  | 108-6187    | 1    | Grip ●                  |
| 3    | 3256-24     | 4    | Washer-Flat             |
| 4    | 323-6       | 4    | Screw-HH                |
| 5    | 112-4004    | 2    | Screw-Shoulder          |
| 6    | 110-6828    | 2    | Activator Arm ASM       |
| 6:2  | 105-3455    | 2    | Bushing                 |
| 7    | 110-6810    | 2    | Stud-Damper             |
| 8    | 103-2913    | 2    | Damper-Control, Motion  |
| 9    | 3296-42     | 6    | Nut-Lock, NI            |
| 10   | 46-8560     | 2    | Screw-HHF               |
| 11   | 3296-48     | 2    | Nut-Lock, NI            |
| 12   | 3256-22     | 4    | Washer-Flat             |
| 13   | 32128-23    | 2    | Nut-HF                  |
| 14   | 3256-5      | 2    | Washer-Flat             |
| 15   | 110-6693    | 2    | Link-Hydro              |
| 16   | 1-303105    | 2    | Yoke-Adjustable         |
| 17   | 1-808280    | 2    | Pin-Clevis              |
| 18   | 1-806003    | 2    | Pin-Cotter, Hair        |
| 19   | 3220-2      | 2    | Nut-Jam                 |

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 20   | 110-6845    | 2    | Gear-Control            |
| 21   | 110-6783-05 | 1    | Arm-Actuator, LH        |
| 22   | 110-6782-05 | 1    | Arm-Actuator, RH ●      |
| 23   | 115-5023    | 2    | Tab-Stop                |
| 24   | 110-6873    | 2    | Eccentric               |
| 25   | 110-6874    | 2    | Screw-Eccentric         |
| 26   | 110-6875    | 2    | Bolt-Shoulder           |
| 27   | 110-6858    | 2    | Cable-Brake, Parking    |
| 28   | 110-6751    | 2    | Bracket-Return          |
| 29   | 110-6750    | 2    | Plate-Return            |
| 30   | 110-6752    | 2    | Spring-Compression      |
| 31   | 110-6894    | 8    | Washer-Pivot            |
| 32   | 115-5041-03 | 1    | Seat Pivot/Control ASM  |
| 33   | 323-4       | 2    | Screw-HH                |
| 34   | 110-0863    | 2    | Screw-Torx              |
| 35   | 110-6784    | 2    | Bolt-Shoulder           |
| 36   | 112-9750    | 1    | Decal-Control Lever, LH |
| 37   | 112-9751    | 1    | Decal-Control Lever, RH |
| 38   | 37-8771     | 2    | Bolt-Shoulder           |
| 39   | 104-8300    | 2    | Nut-Flange, NI          |
| 40   | 112-9771    | 2    | Washer-Teflon           |
| 41   | 110-6786    | 2    | Cover-Control           |


● Not illustrated

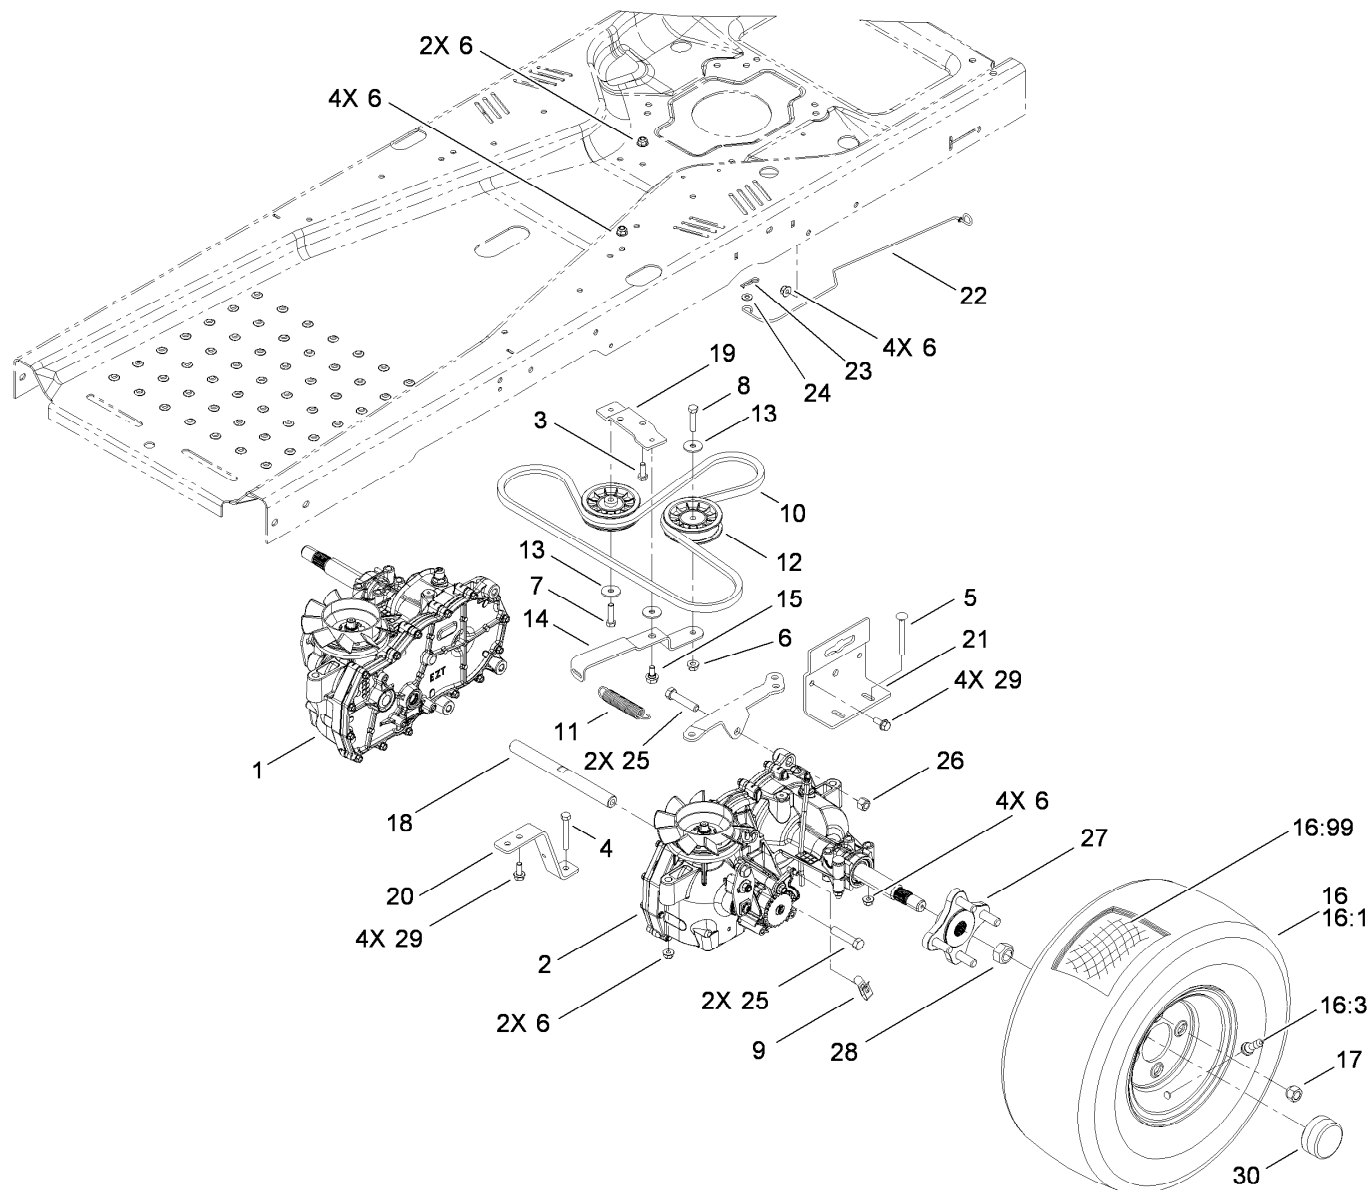

## Hydro Traction Drive Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 110-6771    | 1    | Hydro-RH           |
| 2    | 110-6770    | 1    | Hydro-LH           |
| 3    | 322-4       | 2    | Screw-HH           |
| 4    | 322-11      | 2    | Screw-HH           |
| 5    | 3230-9      | 4    | Screw-CARR         |
| 6    | 104-8300    | 17   | Nut-Flange, NI     |
| 7    | 322-6       | 1    | Screw-HH           |
| 8    | 322-7       | 1    | Screw-HH           |
| 9    | 110-6677    | 2    | Clip-Spring        |
| 10   | 110-6774    | 1    | V-Belt             |
| 11   | 63-1590     | 1    | Spring-Idler       |
| 12   | 110-6775    | 2    | Pulley-Idler       |
| 13   | 5-4460      | 3    | Washer-Pivot       |
| 14   | 110-1925    | 1    | Arm-Idler          |
| 15   | 37-8771     | 1    | Bolt-Shoulder      |
| 16   | 110-6883    | 2    | Wheel And Tire ASM |
| 16:1 | 110-6887    | 1    | Tire               |

| Ref.  | Part Number | Qty. | Description      |
|-------|-------------|------|------------------|
| 16:3  | 232-27      | 1    | Stem-Valve       |
| 16:99 | 232-37      | 1    | Tube             |
| 17    | 242-50      | 8    | Nut-Lug          |
| 18    | 110-6807    | 1    | Shaft-Cross      |
| 19    | 110-1926    | 1    | Plate-Pivot      |
| 20    | 110-6806-03 | 2    | Strap-Torque     |
| 21    | 110-6878-03 | 2    | Support-Hydro    |
| 22    | 110-6787    | 2    | Rod-Bypass       |
| 23    | 1-806003    | 2    | Pin-Cotter, Hair |
| 24    | 3256-22     | 2    | Washer-Flat      |
| 25    | 324-8       | 4    | Screw-HH         |
| 26    | 3296-48     | 2    | Nut-Lock, NI     |
| 27    | 112-3979    | 2    | Hub ASM          |
| 28    | 112-3982    | 2    | Nut-Lock         |
| 29    | 3234-47     | 8    | Screw-HHF        |
| 30    | 115-5057    | 2    | Cover-Nut, Axle  |

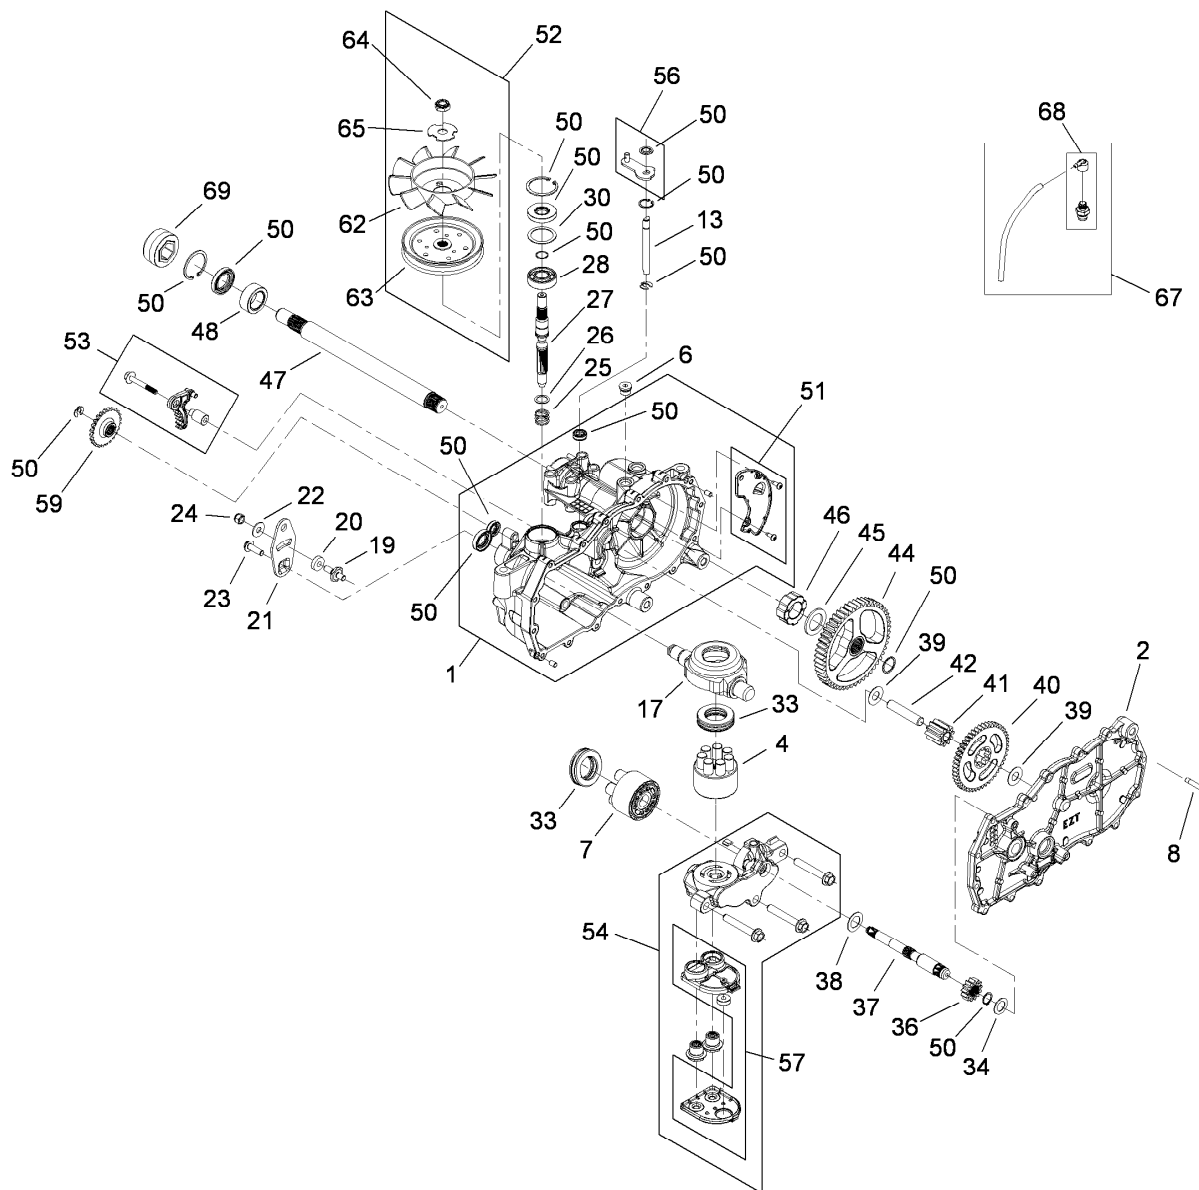


## RH Hydro Assembly No. 110-6771

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 114-1630    | 1    | RH Main Housing ASM   |
| 2    | 114-1631    | 1    | RH Side ASM           |
| 4    | 110-8561    | 1    | Pump Block ASM        |
| 6    | 104-2189    | 1    | Plug-Thread, Straight |
| 7    | 103-2666    | 1    | Cylinder Block Kit    |
| 8    | 104-5305    | 16   | Screw-HHF             |
| 13   | 106-8678    | 1    | Rod-Bypass            |
| 17   | 104-5304    | 1    | Swashplate-Trunnion   |
| 19   | 104-2116    | 1    | Stud                  |
| 20   | 112-9853    | 1    | Puck-Friction         |
| 21   | 106-8747    | 1    | Arm-Control           |
| 22   | 5-4460      | 1    | Washer-Pivot          |
| 23   | 107-2488    | 1    | Screw                 |
| 24   | 105-1872    | 1    | Nut                   |
| 25   | 94-1936     | 1    | Spring-Block          |
| 26   | 94-1937     | 1    | Washer-Thrust, Block  |
| 27   | 104-5306    | 1    | Shaft-Input           |
| 28   | 104-5311    | 1    | Bearing-Ball          |
| 30   | 104-5308    | 1    | Spacer                |

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 33   | 94-6922     | 2    | Bearing-Thrust               |
| 34   | 104-5339    | 1    | Washer-Flat                  |
| 36   | 104-5316    | 1    | Gear-Pinnion, 13T            |
| 37   | 114-1632    | 1    | Shaft-Motor                  |
| 38   | 104-5360    | 1    | Washer-Shaft, Motor          |
| 39   | 94-1933     | 2    | Washer                       |
| 40   | 104-5317    | 1    | Gear                         |
| 41   | 104-5318    | 1    | Gear-Jackshaft, 10T          |
| 42   | 104-5329    | 1    | Pin-Jackshaft                |
| 44   | 112-9855    | 1    | Gear-52T, Bull               |
| 45   | 112-9856    | 1    | Washer                       |
| 46   | 112-9857    | 1    | Bearing-Sleeve               |
| 47   | 112-9858    | 1    | Shaft-Axle                   |
| 48   | 112-9859    | 1    | Bushing-Axle                 |
| 50   | 106-8686    | 1    | Seal Kit                     |
| 51   | 106-8697    | 1    | RH Expansion Plate Kit       |
| 52   | 106-8698    | 1    | Fan Pulley Kit               |
| 53   | 114-1633    | 1    | Brake Arm Kit                |
| 54   | 112-9861    | 1    | RH Center Section Filter Kit |

● Not illustrated

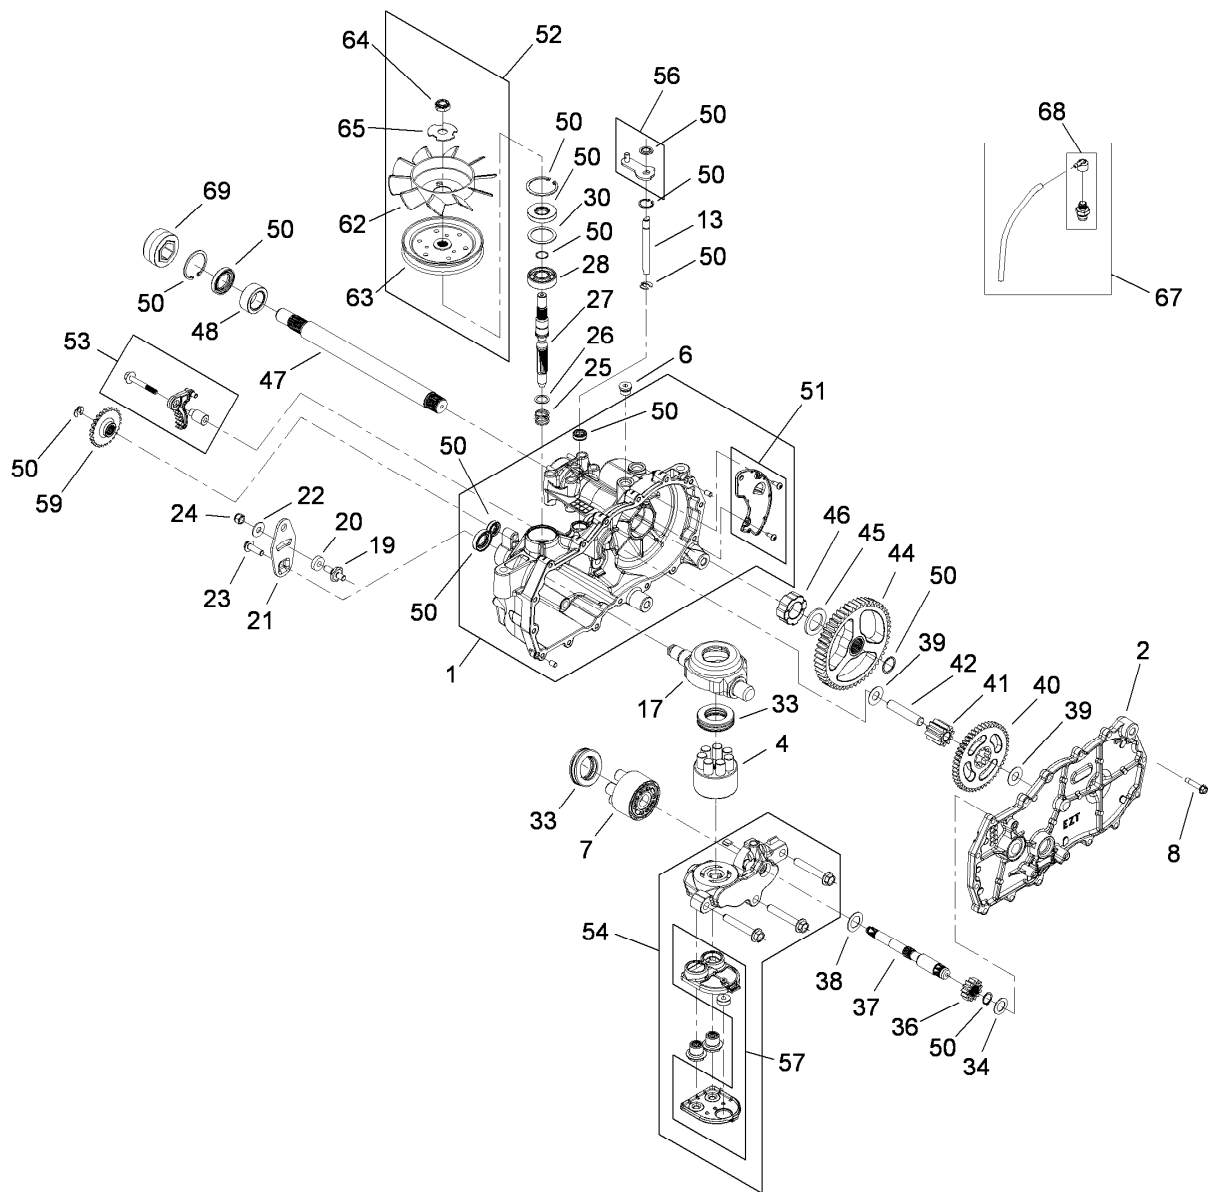


## RH Hydro Assembly No. 110-6771 (continued)

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 55   | 104-2147    | 1    | Sealant ●            |
| 56   | 107-2489    | 1    | Bypass Arm Kit       |
| 57   | 114-1634    | 1    | Filter Kit           |
| 59   | 106-8694    | 1    | Disc-Brake, Cog      |
| 62   | 110-8566    | 1    | Fan-6 Inch, 10 Blade |
| 63   | 104-1754    | 1    | Pulley               |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 64   | 105-1875    | 1    | Nut-Lock        |
| 65   | 107-9122    | 1    | Washer-Slotted  |
| 67   | 112-9866    | 1    | Breather Kit    |
| 68   | 114-1635    | 1    | Breather ASM    |
| 69   | 115-5057    | 1    | Cover-Nut, Axle |

● Not illustrated

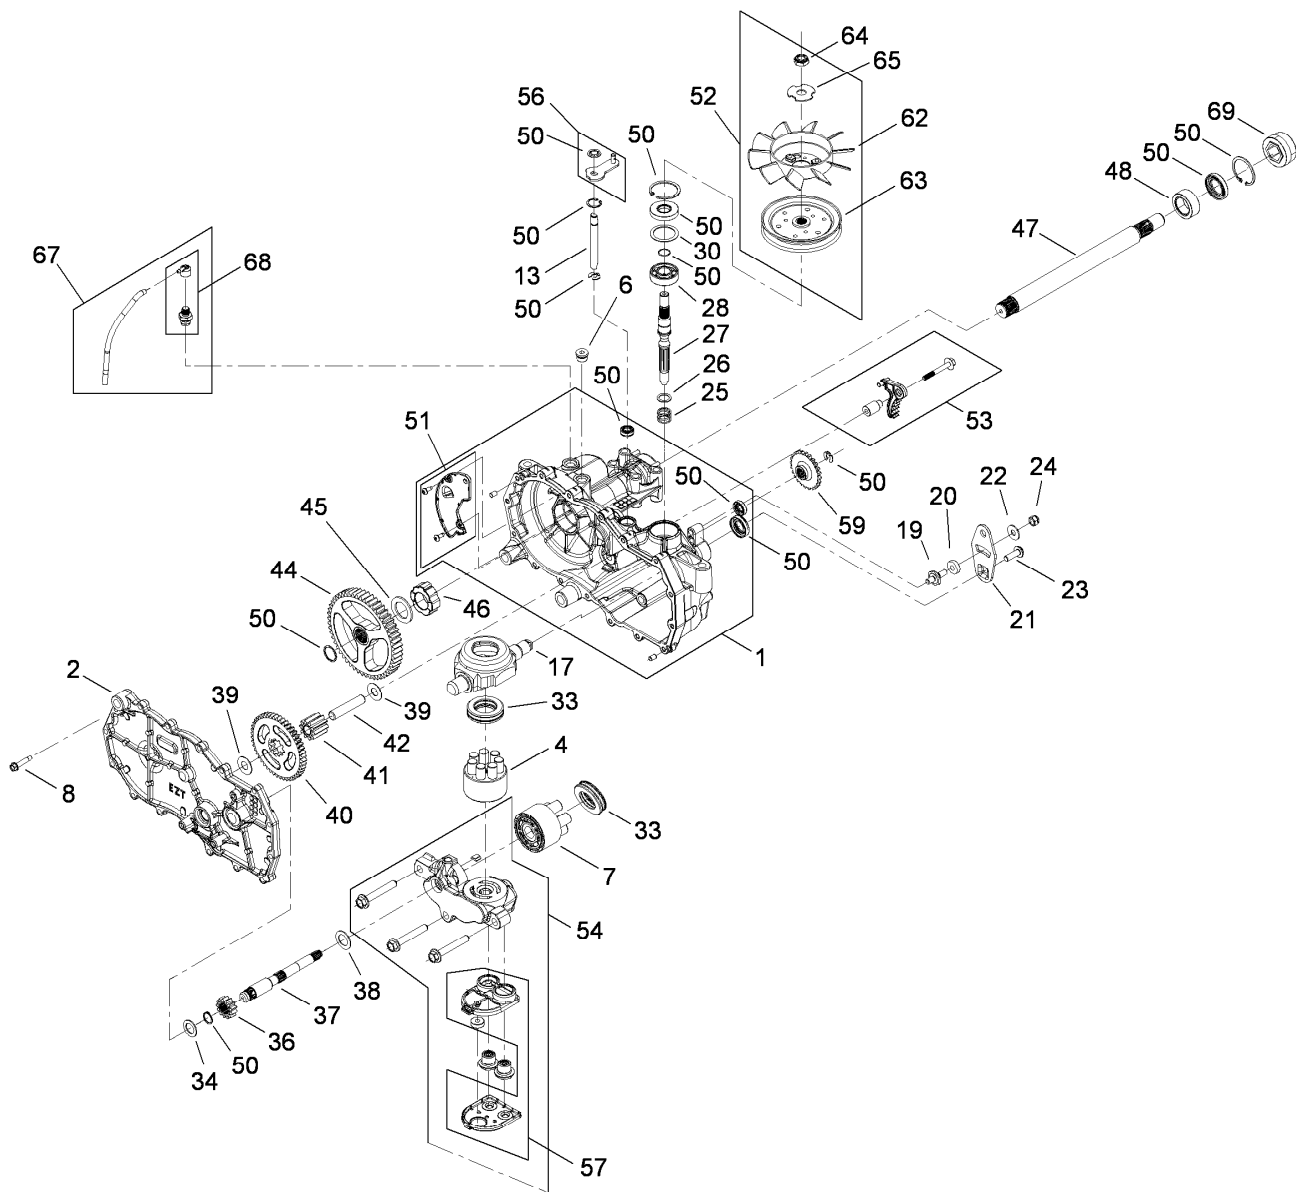


## LH Hydro Assembly No. 110-6770

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 114-1636    | 1    | LH Main Housing ASM   |
| 2    | 114-1637    | 1    | LH Side ASM           |
| 4    | 110-8561    | 1    | Pump Block ASM        |
| 6    | 104-2189    | 1    | Plug-Thread, Straight |
| 7    | 103-2666    | 1    | Cylinder Block Kit    |
| 8    | 104-5305    | 16   | Screw-HHF             |
| 13   | 106-8678    | 1    | Rod-Bypass            |
| 17   | 104-5304    | 1    | Swashplate-Trunnion   |
| 19   | 104-2116    | 1    | Stud                  |
| 20   | 112-9853    | 1    | Puck-Friction         |
| 21   | 106-8747    | 1    | Arm-Control           |
| 22   | 5-4460      | 1    | Washer-Pivot          |
| 23   | 107-2488    | 1    | Screw                 |
| 24   | 105-1872    | 1    | Nut                   |
| 25   | 94-1936     | 1    | Spring-Block          |
| 26   | 94-1937     | 1    | Washer-Thrust, Block  |
| 27   | 104-5306    | 1    | Shaft-Input           |
| 28   | 104-5311    | 1    | Bearing-Ball          |
| 30   | 104-5308    | 1    | Spacer                |

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 33   | 94-6922     | 2    | Bearing-Thrust               |
| 34   | 104-5339    | 1    | Washer-Flat                  |
| 36   | 104-5316    | 1    | Gear-Pinnion, 13T            |
| 37   | 114-1632    | 1    | Shaft-Motor                  |
| 38   | 104-5360    | 1    | Washer-Shaft, Motor          |
| 39   | 94-1933     | 2    | Washer                       |
| 40   | 104-5317    | 1    | Gear                         |
| 41   | 104-5318    | 1    | Gear-Jackshaft, 10T          |
| 42   | 104-5329    | 1    | Pin-Jackshaft                |
| 44   | 112-9855    | 1    | Gear-52T, Bull               |
| 45   | 112-9856    | 1    | Washer                       |
| 46   | 112-9857    | 1    | Bearing-Sleeve               |
| 47   | 112-9858    | 1    | Shaft-Axle                   |
| 48   | 112-9859    | 1    | Bushing-Axle                 |
| 50   | 106-8686    | 1    | Seal Kit                     |
| 51   | 106-8687    | 1    | LH Expansion Plate Kit       |
| 52   | 106-8698    | 1    | Fan Pulley Kit               |
| 53   | 114-1633    | 1    | Brake Arm Kit                |
| 54   | 112-9862    | 1    | LH Center Section Filter Kit |

● Not illustrated

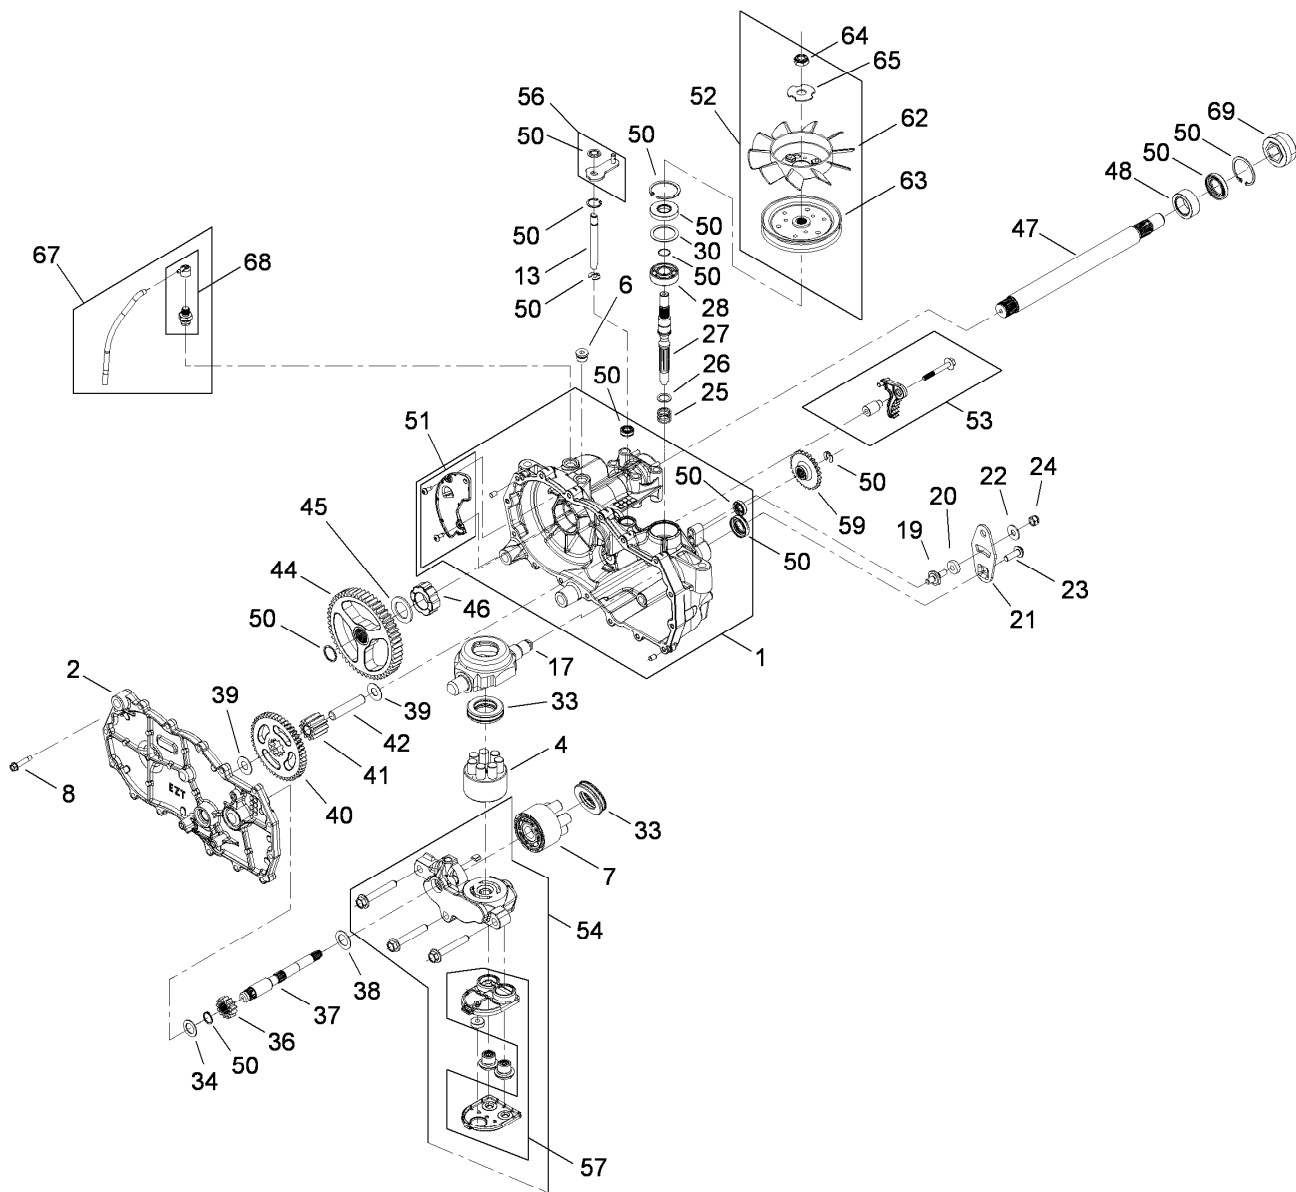


## LH Hydro Assembly No. 110-6770 (continued)

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 55   | 104-2147    | 1    | Sealant ●            |
| 56   | 107-2489    | 1    | Bypass Arm Kit       |
| 57   | 114-1634    | 1    | Filter Kit           |
| 59   | 106-8694    | 1    | Disc-Brake, Cog      |
| 62   | 110-8566    | 1    | Fan-6 Inch, 10 Blade |
| 63   | 104-1754    | 1    | Pulley               |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 64   | 105-1875    | 1    | Nut-Lock        |
| 65   | 107-9122    | 1    | Washer-Slotted  |
| 67   | 112-9866    | 1    | Breather Kit    |
| 68   | 114-1635    | 1    | Breather ASM    |
| 69   | 115-5057    | 1    | Cover-Nut, Axle |

● Not illustrated

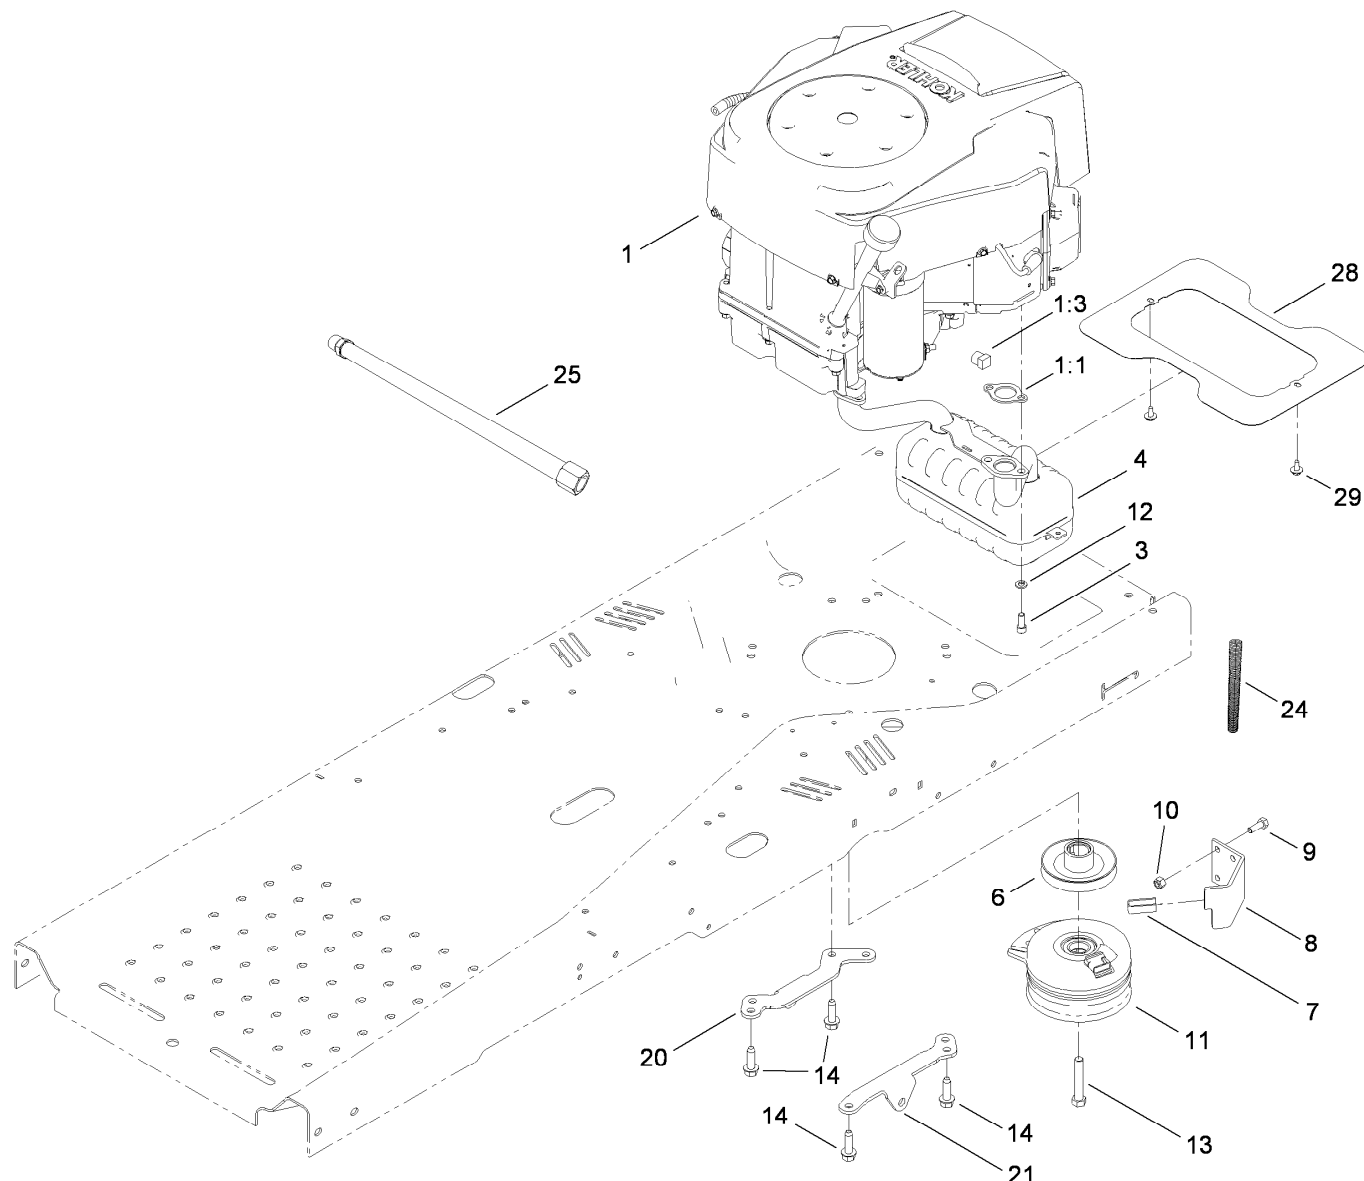


## Engine and Clutch Assembly

| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 1    |             | 1    | Engine-Kohler, Sv730-0029<br>● ■ |
| 1:1  | 110-6697    | 2    | Gasket-Exhaust                   |
| 1:3  | 281-2       | 1    | Plug-Pipe, SQH                   |
| 3    | 3274-10     | 4    | Screw-HSH                        |
| 4    | 117-7462    | 1    | Muffler-Kohler Twin              |
| 6    | 114-1622    | 1    | Pulley-Engine                    |
| 7    | 112-4033    | 1    | Bumper-Pad                       |
| 8    | 110-6896    | 1    | Stop-Clutch                      |
| 9    | 322-4       | 2    | Screw-HH                         |
| 10   | 3296-29     | 2    | Nut-Lock, NI                     |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 11   | 110-6766    | 1    | Clutch-Electric, PTO |
| 12   | 3253-4      | 4    | Washer-Lock          |
| 13   | 3212-11     | 1    | Screw-HH             |
| 14   | 32144-109   | 4    | Screw                |
| 20   | 110-6798    | 1    | Support-Hydro, RH    |
| 21   | 110-6799    | 1    | Support-Hydro, LH    |
| 24   | 112-9849    | 1    | Tubing-Convolutd     |
| 25   | 117-1261    | 1    | Oil Drain Hose ASM   |
| 28   | 114-8544-03 | 1    | Shield-Heat          |
| 29   | 46-8560     | 2    | Screw-HHF            |

● Not serviced separately


■ Obtain parts from [www.kohlerplus.com](http://www.kohlerplus.com)

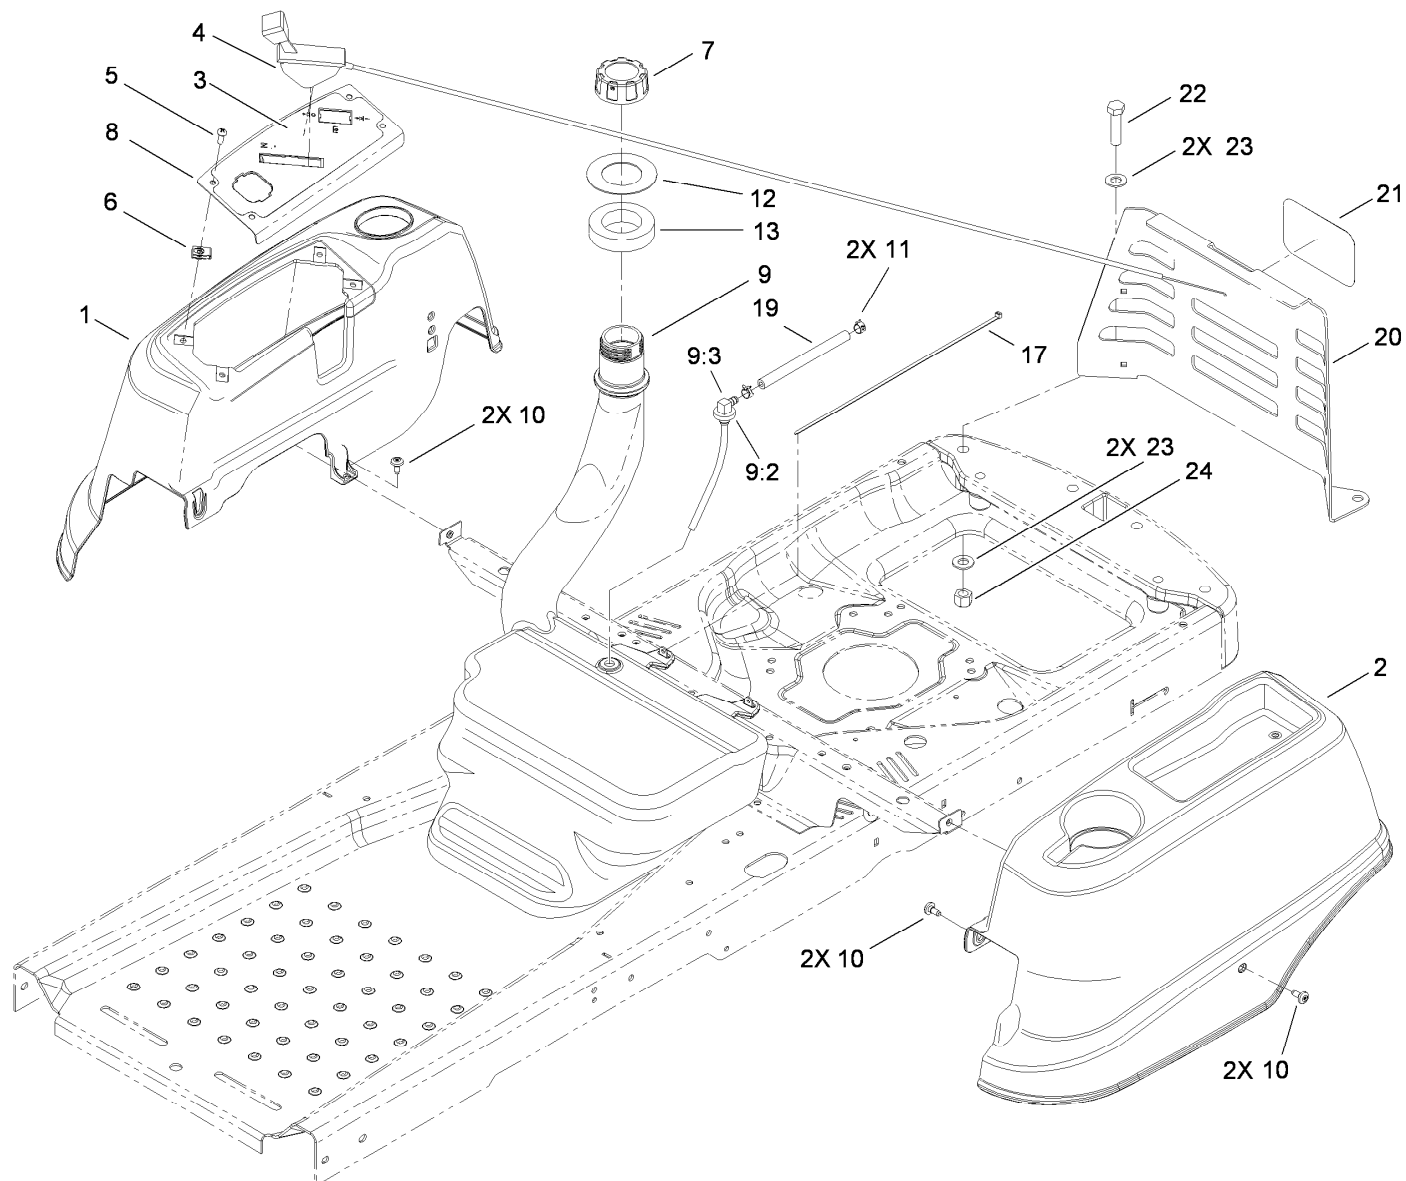

## Fuel Delivery and Body Styling Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 117-1219    | 1    | Pod-RH               |
| 2    | 117-1220    | 1    | Pod-LH               |
| 3    | 115-2500    | 1    | Decal-Panel, Control |
| 4    | 117-1295    | 1    | Cable-Throttle/Choke |
| 5    | 3258-166    | 4    | Screw-PRH            |
| 6    | 107069      | 4    | Clip                 |
| 7    | 93-7198     | 1    | Gas Cap ASM          |
| 8    | 110-1927-03 | 1    | Panel-Control        |
| 9    | 110-6890    | 1    | Fuel Tank ASM        |
| 9:2  | 46-6560     | 1    | Bushing              |
| 9:3  | 95-3970     | 1    | Fitting-90 Degree    |


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 112-4004    | 6    | Screw-Shoulder      |
| 11   | 2412-98     | 2    | Clamp               |
| 12   | 112-9760    | 1    | Washer-Rubber       |
| 13   | 55-9310     | 1    | Seal-Foam           |
| 17   | 100-9064    | 1    | Tie-Cable           |
| 19   | 107-0589    | 1    | Hose-Fuel           |
| 20   | 110-6685-03 | 1    | Support-Cover, Rear |
| 21   | 105-8278    | 1    | Decal               |
| 22   | 325-8       | 2    | Screw-HH            |
| 23   | 3256-26     | 4    | Washer-Flat         |
| 24   | 3296-23     | 2    | Nut-Lock, NI        |

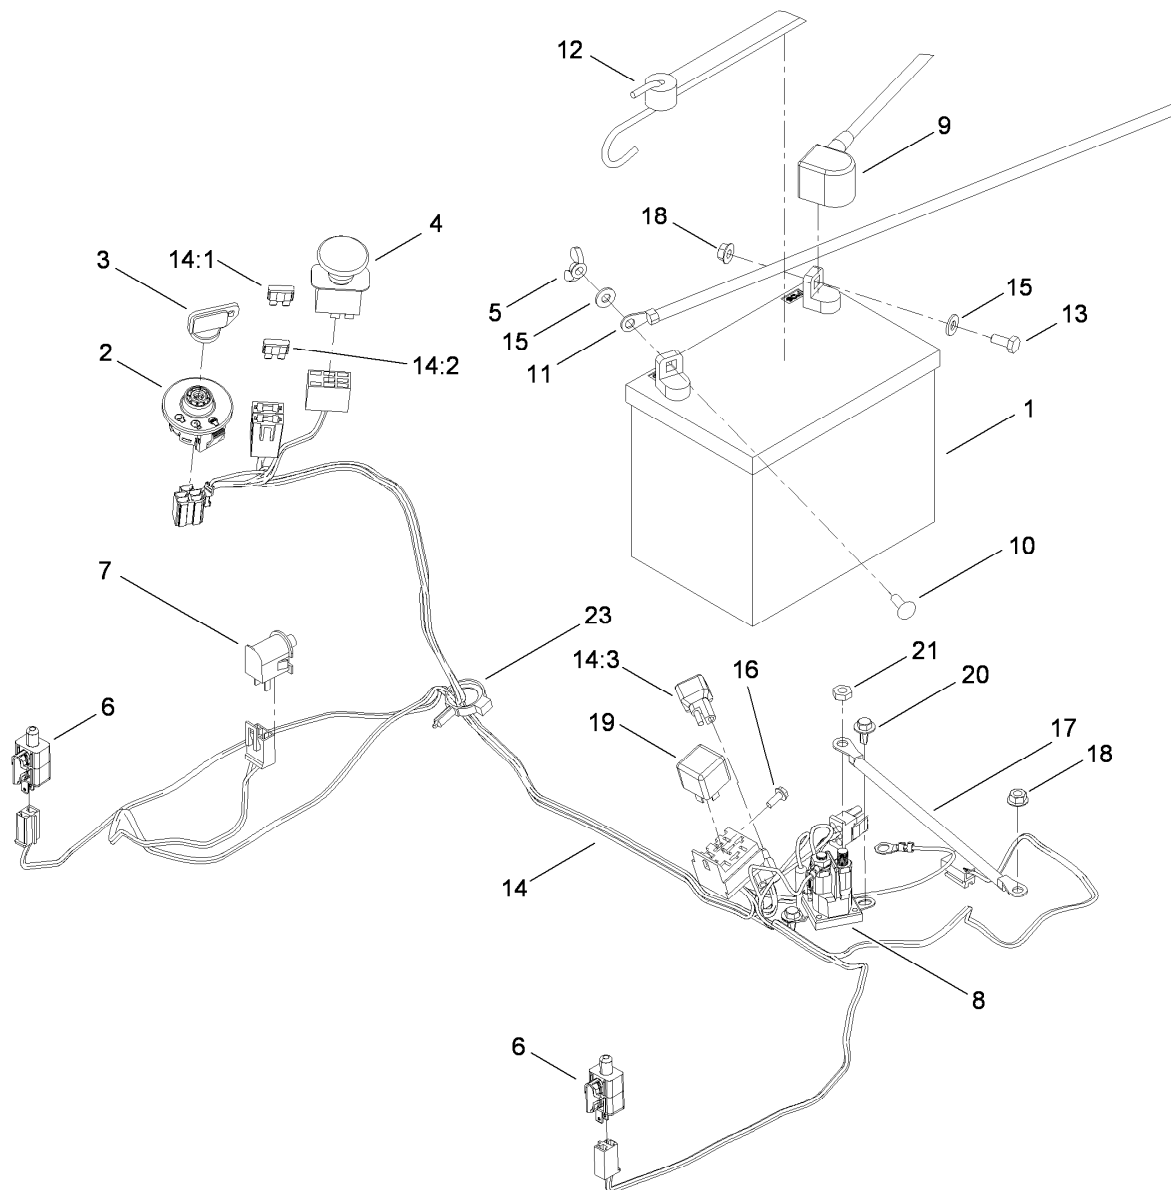

## Electrical Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 104-2493    | 1    | Battery               |
| 2    | 117-2222    | 1    | Switch-Ignition       |
| 3    | 63-8360     | 1    | Key-Ignition          |
| 4    | 93-9998     | 1    | Switch-PTO            |
| 5    | 32103-22    | 1    | Nut-Wing              |
| 6    | 110-6765    | 2    | Switch-Single Pole No |
| 7    | 82-2190     | 1    | Switch-Bail           |
| 8    | 117-1197    | 1    | Solenoid              |
| 9    | 110-6794    | 1    | Cable-Battery, Red    |
| 10   | 3229-1      | 1    | Screw-CARR            |
| 11   | 110-6793    | 1    | Cable-Battery, Black  |
| 12   | 104-2466    | 1    | Holddown-Battery      |
| 13   | 321-3       | 1    | Screw-HH              |


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 14   | 117-7384    | 1    | Harness-Wire       |
| 14:1 | 109103      | 1    | Fuse-30 Amp        |
| 14:2 | 109102      | 1    | Fuse-25 Amp        |
| 14:3 | 100-4918    | 1    | Diode              |
| 15   | 3256-22     | 2    | Washer-Flat        |
| 16   | 32144-1     | 1    | Screw-Taptite      |
| 17   | 110-6792    | 1    | Cable-Battery, Red |
| 18   | 32128-33    | 2    | Nut-HF             |
| 19   | 98-7249     | 1    | Relay              |
| 20   | 46-8560     | 2    | Screw-HHF          |
| 21   | 3220-2      | 2    | Nut-Jam            |
| 23   | 105-1853    | 1    | Clamp-Hose         |

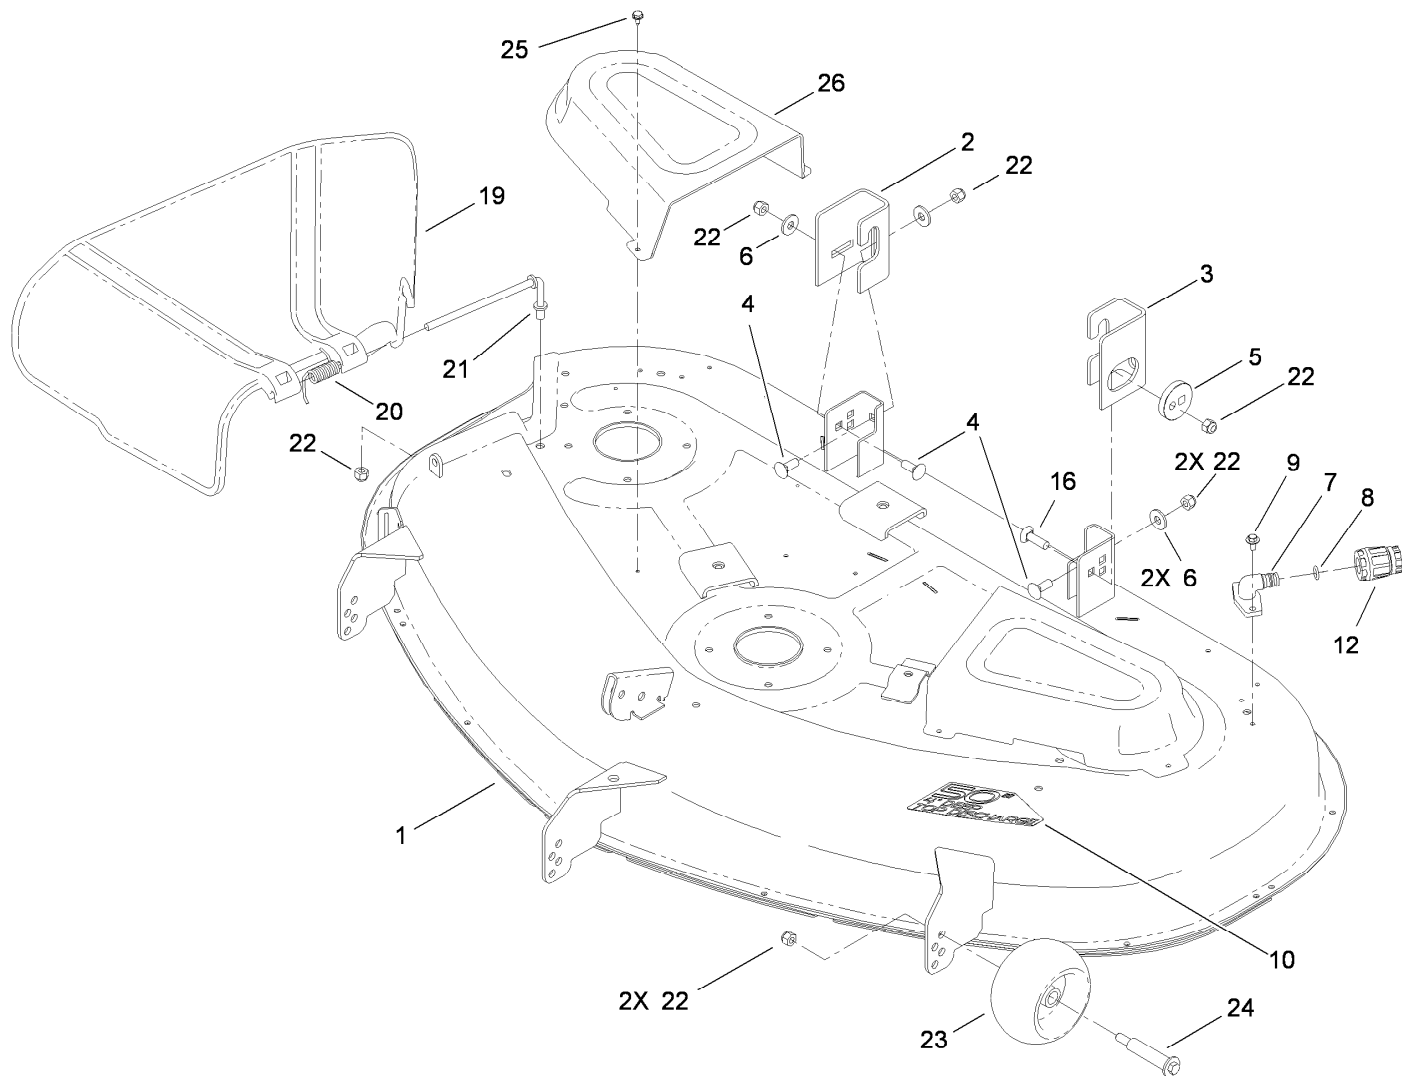

## 50 Inch Deck Assembly


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 117-1291    | 1    | 50 Inch Deck ASM           |
| 2    | 108-7836    | 1    | Bracket-Hanger, Right Rear |
| 3    | 108-7838    | 1    | Bracket-Hanger, Left Rear  |
| 4    | 3231-2      | 3    | Screw-CARR                 |
| 5    | 112-3980    | 1    | Eccentric                  |
| 6    | 80-6990     | 3    | Washer-Hardened            |
| 7    | 95-2747     | 2    | Fitting-Washout            |
| 8    | 46-6290     | 2    | O-Ring, Seal               |
| 9    | 46-8560     | 4    | Screw-HHF                  |
| 10   | 117-1223    | 1    | Decal-50"                  |

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 12   | 95-3270     | 1    | Connector-Hose     |
| 16   | 3231-28     | 1    | Screw-CARR         |
| 19   | 108-7895    | 1    | Deflector-50 Inch  |
| 20   | 110-6694    | 1    | Spring-Torsion     |
| 21   | 112-3950    | 1    | Rod-Pivot          |
| 22   | 3296-39     | 8    | Nut-Lock, NI       |
| 23   | 1-603299    | 3    | Roller-Scalp, Anti |
| 24   | 112-3977    | 3    | Bolt-Shoulder      |
| 25   | 32104-76    | 6    | Screw              |
| 26   | 108-7890    | 2    | Cover-Belt         |

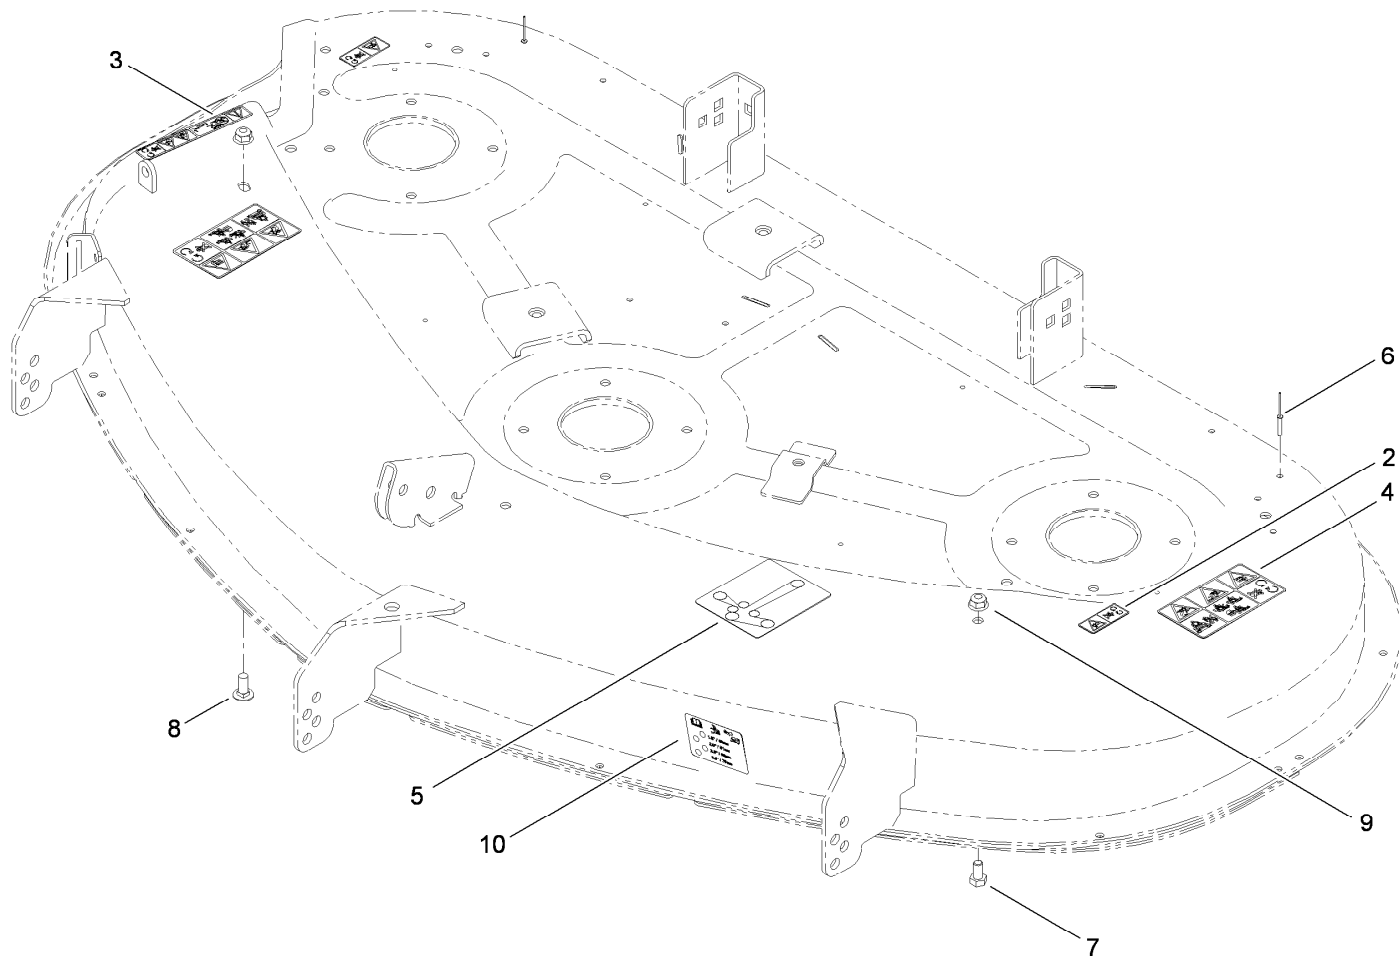

## 50 Inch Deck and Decal Assembly No. 117-1291

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 2    | 114-1606    | 2    | Decal-Danger, Pulley    |
| 3    | 93-7009     | 1    | Decal-Danger, Deflector |
| 4    | 110-6691    | 2    | Decal-Danger            |
| 5    | 99-3943     | 1    | Decal-Routing, Belt     |
| 6    | 3290-282    | 2    | Rivet-Blind             |
| 7    | 322-2       | 1    | Screw-HH                |
| 8    | 3230-23     | 1    | Screw-CARR              |
| 9    | 104-8300    | 2    | Nut-Flange, NI          |
| 10   | 112-9840    | 1    | Decal-Scalp, Anti       |

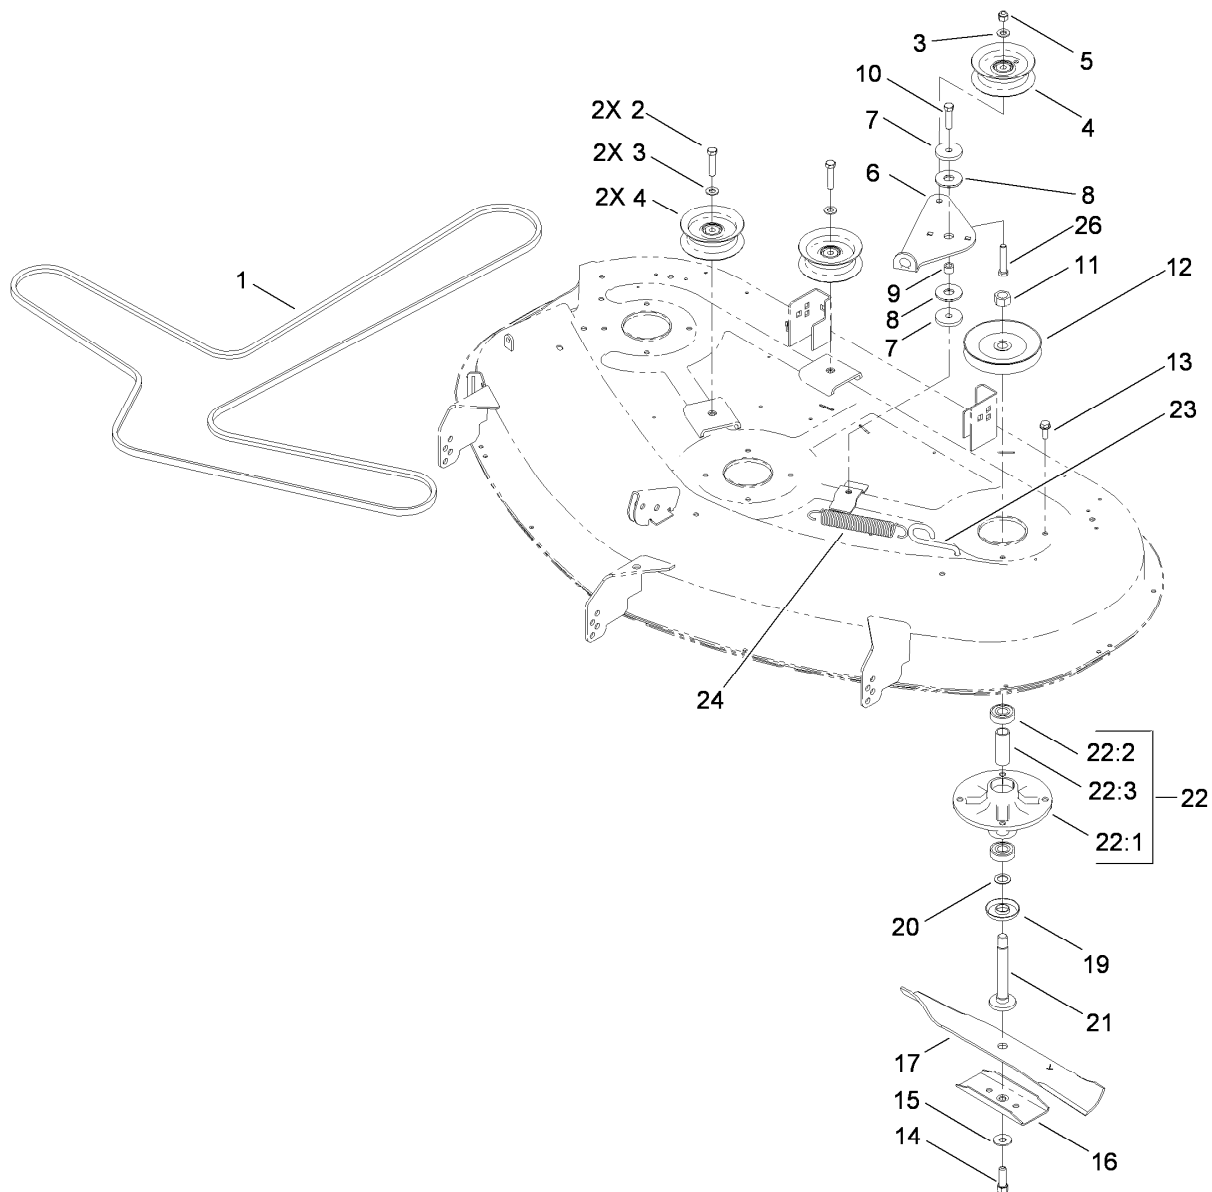

## 50 Inch Deck Spindle and Blade Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 110-6892    | 1    | V-Belt                     |
| 2    | 323-9       | 2    | Screw-HH                   |
| 3    | 3256-24     | 3    | Washer-Flat                |
| 4    | 106-2175    | 3    | Pulley-Idler, Flat         |
| 5    | 3296-39     | 1    | Nut-Lock, NI               |
| 6    | 114-8540    | 1    | Arm-Idler                  |
| 7    | 110-9981    | 2    | Washer-Plain               |
| 8    | 114-0463    | 2    | Washer-Friction, Composite |
| 9    | 115-4986    | 1    | Spacer                     |
| 10   | 323-8       | 1    | Screw-HH                   |
| 11   | 3219-6      | 3    | Nut-Hex                    |
| 12   | 110-6865    | 3    | Pulley                     |
| 13   | 32144-41    | 12   | Screw-Taptite              |
| 14   | 26-0671     | 3    | Screw-HH                   |

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 15   | 3290-465    | 3    | Washer-Belleville          |
| 16   | 106-2248-03 | 3    | Stiffener-Blade            |
| 17   | 110-6837-03 | 3    | Blade-17.5 Inch, High Lift |
| 19   | 80-4360     | 3    | Shield-Bearing             |
| 20   | 80-4380     | 3    | Spacer                     |
| 21   | 117-1192    | 3    | Shaft-Spindle              |
| 22   |             | 3    | Spindle ASM ●              |
| 22:1 | 88-4510     | 1    | Housing-Spindle            |
| 22:2 | 100-1048    | 2    | Bearing-Ball               |
| 22:3 | 62-3661     | 1    | Spacer                     |
| 23   | 112-3973    | 1    | Hook-Return, Spring        |
| 24   | 1-603414    | 1    | Spring-Extension           |
| 26   | 323-10      | 1    | Screw-HH                   |

● Not serviced separately

# Attachments and Accessories

## For 74375 TimeCutter Z5060 Riding Mower

| Product Name                           | Model/Part |
|----------------------------------------|------------|
| Hour Meter Kit.....                    | 112-9763   |
| Deck Ring Kit .....                    | 114-1608   |
| Striping Kit .....                     | 114-8545   |
| Replacement Blade Kit (3 Blades) ..... | 79221      |
| 50 Inch Recycler Kit.....              | 79312      |
| Engine Cover Kit.....                  | 79314      |
| Floor Mat Kit .....                    | 79315      |
| Storage Cover .....                    | 79317      |
| Rear Hitch Kit.....                    | 79318      |
| Sunshade .....                         | 79319      |
| 42 Inch and 50 Inch Twin Bagger .....  | 79324      |
| 10 cu. ft. Poly Dump Cart .....        | 79991      |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**