



Count on it.

Parts Catalog

44in Vacuum Bagger

XL Series™ Lawn Tractors

Model No. 79104—Serial No. 310000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake clutch

CARR: carriage

CCW: counter clock wise

CW: clockwise

DEG: degrees

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Drive Component Assembly 4


Blower Housing Assembly 5

Top Bag Assembly 6

44 Inch Deck Component Assembly 7

Bag And Frame Assembly 8


Baffle Assembly 9

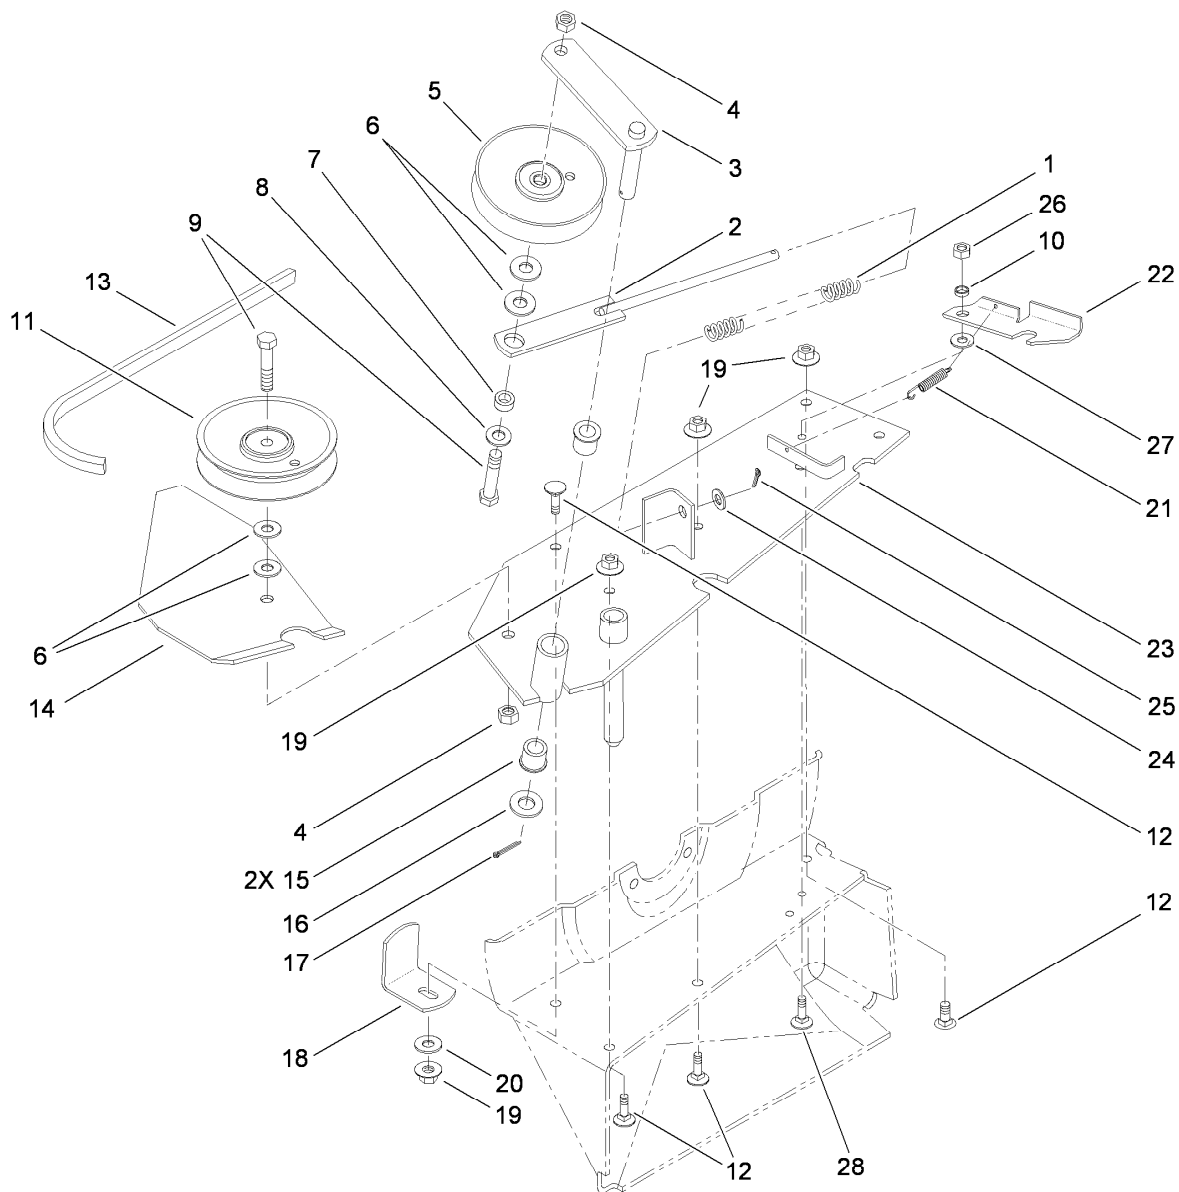

Drive Component Assembly

Ref.	Part Number	Qty.	Description
1	79-7110	1	Spring-Compression
2	79-2020	1	Spring-Rod
3	79-1970	1	Idler Arm ASM
4	3296-39	2	Nut-Lock, NI
5	92-7099	1	Pulley-Idler
6	3256-4	4	Washer-Flat
7	107213	1	Spacer
8	3256-24	1	Washer-Flat
9	323-10	2	Screw-HH
10	93-8013	1	Bushing
11	93-1622	1	Pulley-Idler
12	3230-16	4	Screw-CARR
13	93-8007	1	Belt-V
14	79-7280-03	1	Support-Shield, Belt


Ref.	Part Number	Qty.	Description
15	100284	2	Bushing
16	3256-26	1	Washer-Flat
17	3272-7	1	Pin-Cotter
18	79-7440	1	Bracket-Support, Housing
19	32128-20	4	Nut-HF
20	3256-3	1	Washer-Flat
21	79-7390	1	Spring-Extension
22	93-8012-03	1	Latch-Blower
23	93-8016-03	1	Mounting-Blower
24	3256-23	1	Washer-Flat
25	3272-10	1	Pin-Cotter
26	3296-29	1	Nut-Lock, NI
27	98-3499	1	Washer-Flat
28	3230-2	1	Bolt-CARR

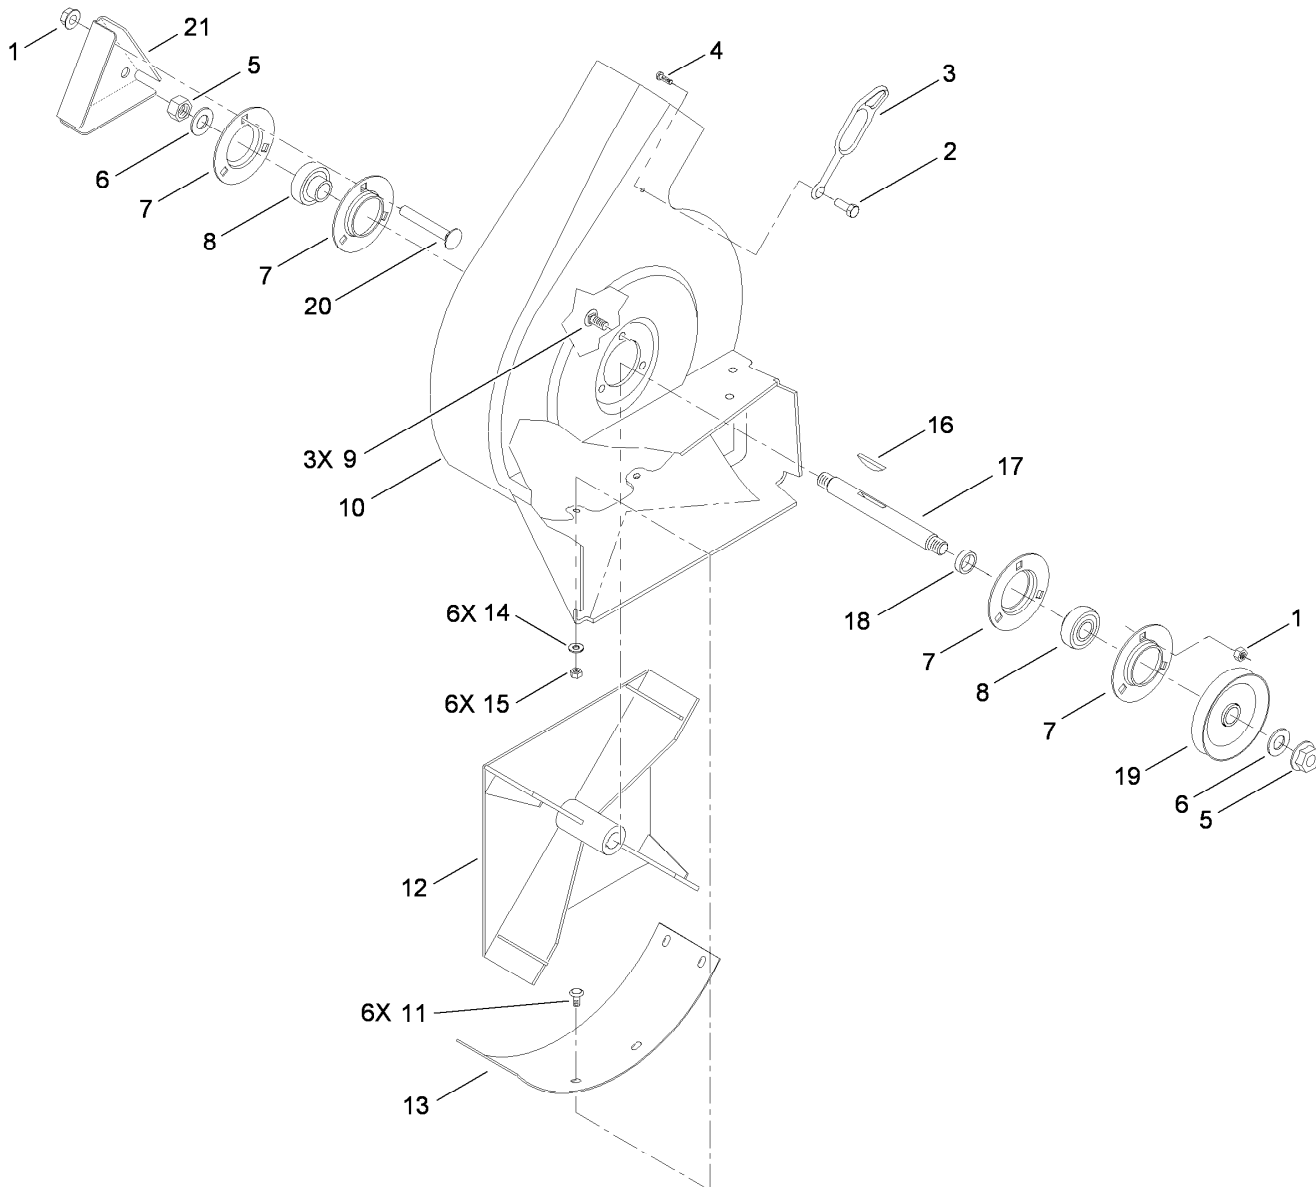

Blower Housing Assembly

Ref.	Part Number	Qty.	Description
1	32128-20	9	Nut-HF
2	3290-479	1	Fastener-Panel
3	82-5690	1	Retainer-Duct
4	22-9741	1	Spacer-Interlock
5	3220-6	2	Nut-Jam
6	3253-8	2	Washer-Lock
7	251-341	4	Flange
8	251-288	2	Bearing-Ball
9	3230-16	3	Screw-CARR
10	94-4378	1	Housing-Blower
11	3229-22	6	Screw-Carriage


Ref.	Part Number	Qty.	Description
12	79-4300-03	1	Impeller ASM
13	79-7170-03	1	Cover-Blower, Bottom
14	3256-22	6	Washer-Flat
15	3296-56	6	Nut-Lock, NI
16	3257-40	1	Key
17	79-1470	1	Shaft-Blower
18	7038	1	Spacer
19	79-1460	1	Pulley-Blower
20	3230-6	3	Screw-CARR
21	117-9842-03	1	Cover

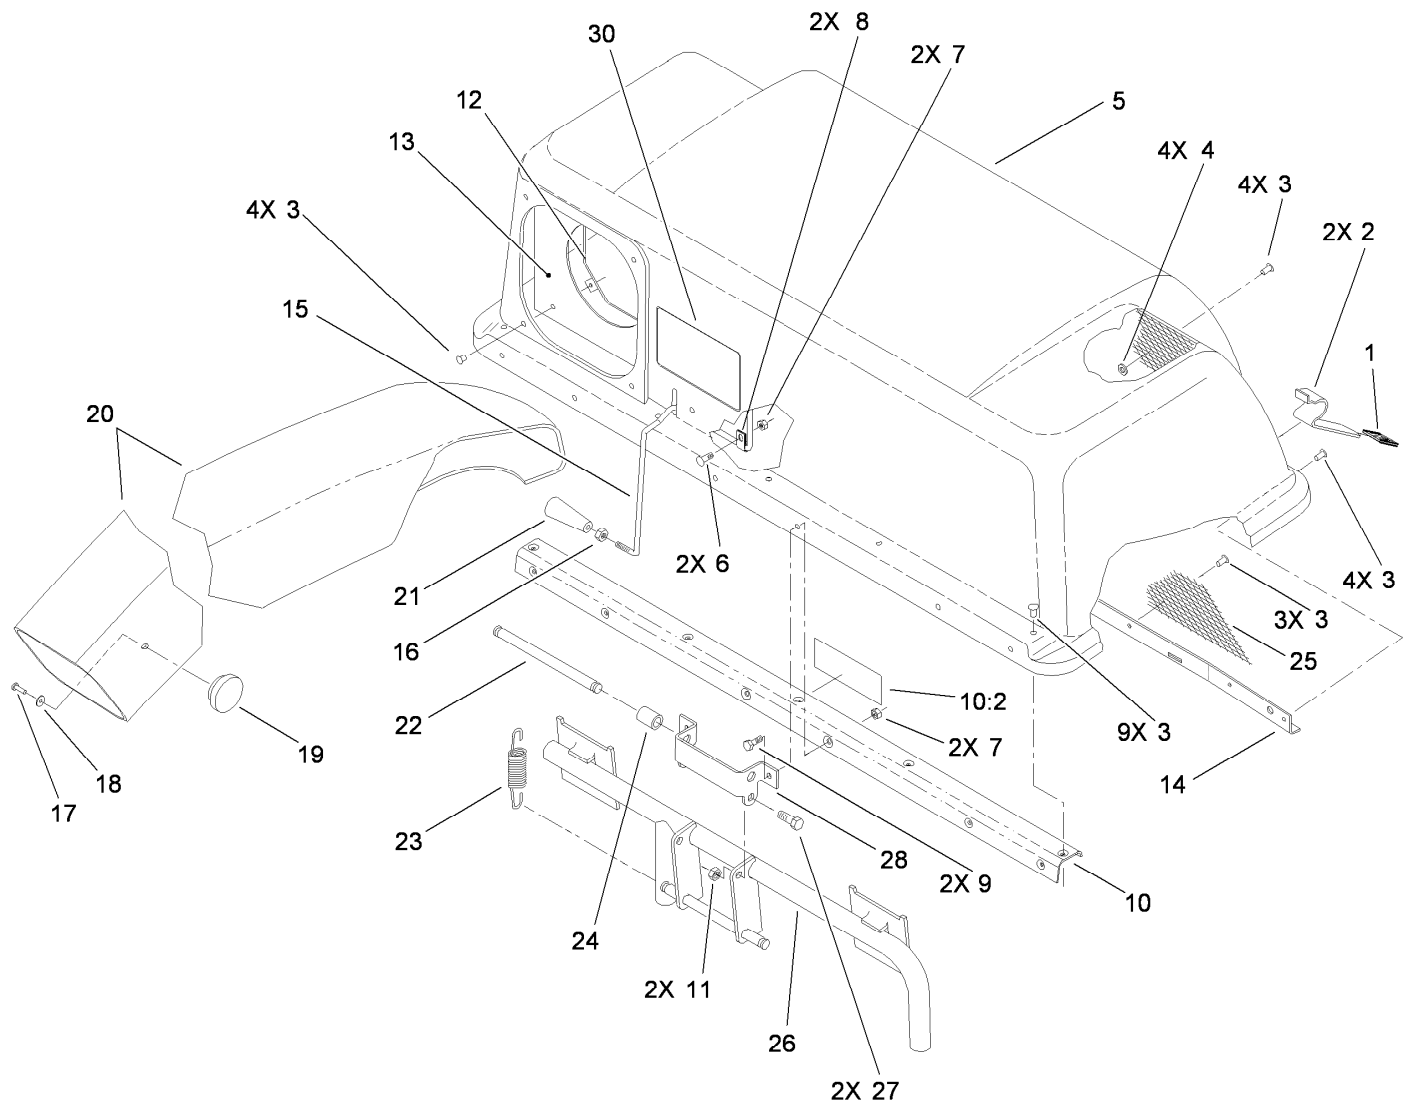

Top Bag Assembly

Ref.	Part Number	Qty.	Description
1	115880	2	Grip
2	115481-03	2	Latch-Bagger, Top
3	114439	24	Rivet-Pop
4	9202704	4	Washer
5	92-1734	1	Top-Bagger
6	321-4	2	Screw-HH
7	3296-42	4	Nut-Lock, NI
8	2412-91	2	Clamp
9	321-4	2	Screw-HH
10	94-4379	1	Bag Stiffener ASM
10:2	93-7320	1	Decal-Caution
11	3296-39	2	Nut-Lock, NI
12	114966	1	Clamp-Seal
13	117239	1	Seal-Chute
14	92-1736-03	1	Support-Screen


Ref.	Part Number	Qty.	Description
15	114969	1	Feeler-Fill, Bag
16	3218-1	1	Nut-Jam
17	32144-8	1	Screw-PPHTF
18	3256-49	1	Washer-Flat
19	233-68	1	Knob
20	100-6150	1	Chute-Discharge
21	118320	1	Handle-Tapered
22	114960	1	Pin-Spring
23	114962	2	Spring-Extension
24	9790944	2	Spacer
25	114967	1	Screen-Bagger
26	114955-03	1	Frame ASM
27	323-6	2	Screw-HH
28	114961-03	1	Hinge-Bag, Top
30	93-7329	1	Decal

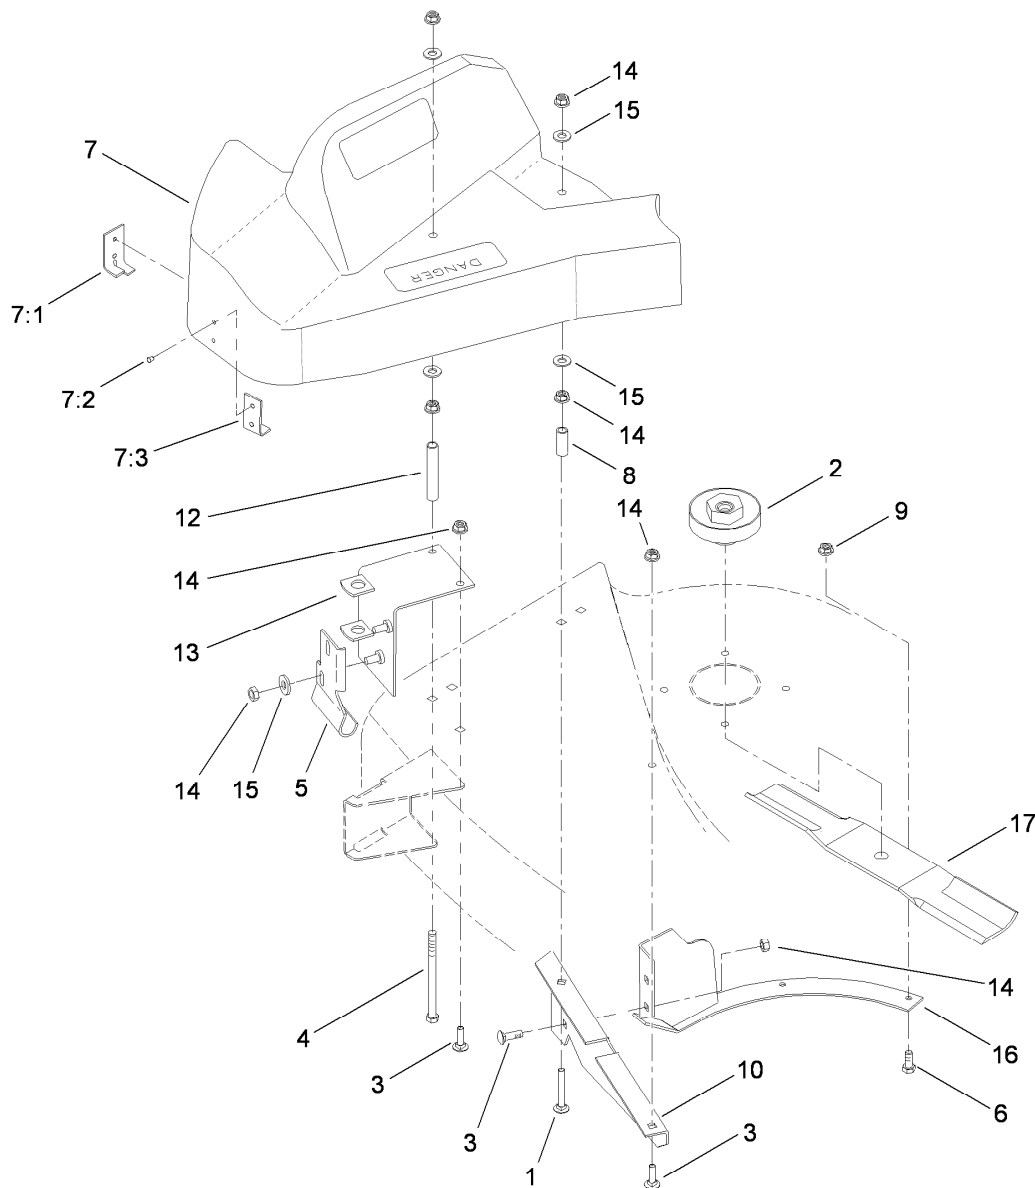

44 Inch Deck Component Assembly


Ref.	Part Number	Qty.	Description
1	3230-8	1	Screw-CARR
2	93-8008	1	Pulley
3	3230-16	4	Screw-CARR
4	100-4184	1	Screw-CARR
5	93-9344-03	1	Bracket-Pivot
6	321-4	2	Screw-HH
7	94-4380	1	Belt Shield ASM
7:1	93-8022	1	Bracket-Support, Shield
7:2	79-0470	4	Rivet-Pop
7:3	88-1870	1	Bracket-Support, Shield

Ref.	Part Number	Qty.	Description
8	93-8009	1	Tube-Latch
9	3296-42	2	Nut-Lock, NI
10	100-4188-03	1	Baffle-Rear
12	93-8023	1	Tube-Spacer
13	93-8020-03	1	Pivot-Bracket
14	3296-29	10	Nut-Lock, NI
15	3256-23	6	Washer-Flat
16	100-4189-03	1	RH Bagging Ring ASM
17	55-4940-03	3	Blade-Lift, High

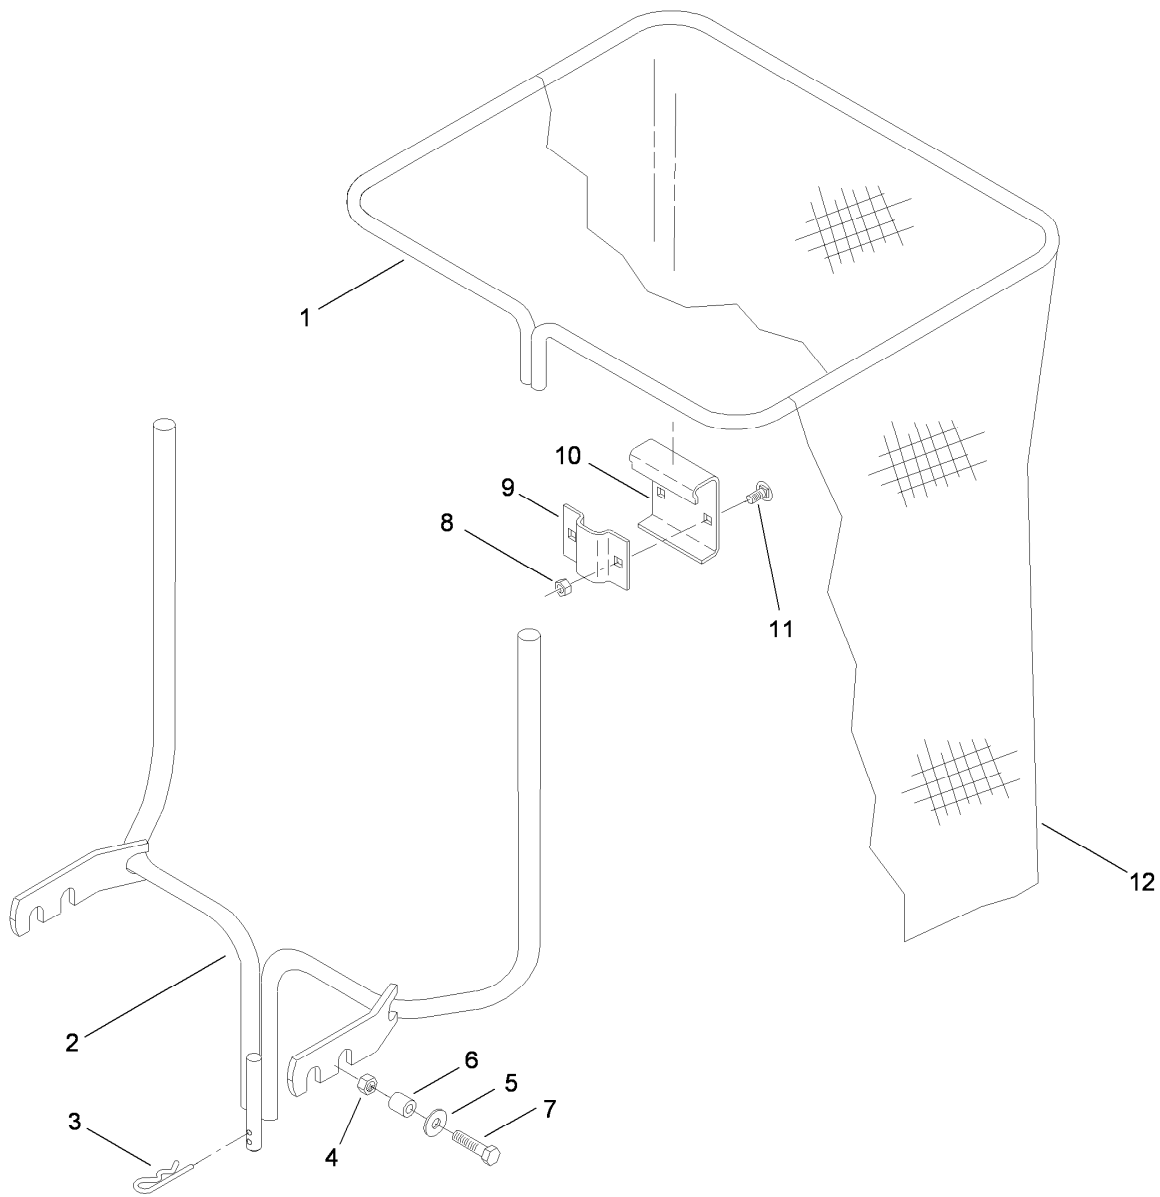

Bag And Frame Assembly

Ref.	Part Number	Qty.	Description
1	114972-03	2	Frame-Bag
2	93-8015-03	1	Bracket-Bagger ASM
3	9335064	1	Pin-Cotter, Hair
4	3296-39	2	Nut-Lock, NI
5	9202204	2	Washer
6	105474	2	Spacer
7	323-10	2	Screw-HH
8	3296-29	4	Nut-Lock, NI
9	114974-03	2	Clamp
10	114973-03	2	Hanger-Bag
11	3230-1	4	Bolt-CARR
12	93-1623	2	Bag-Depth

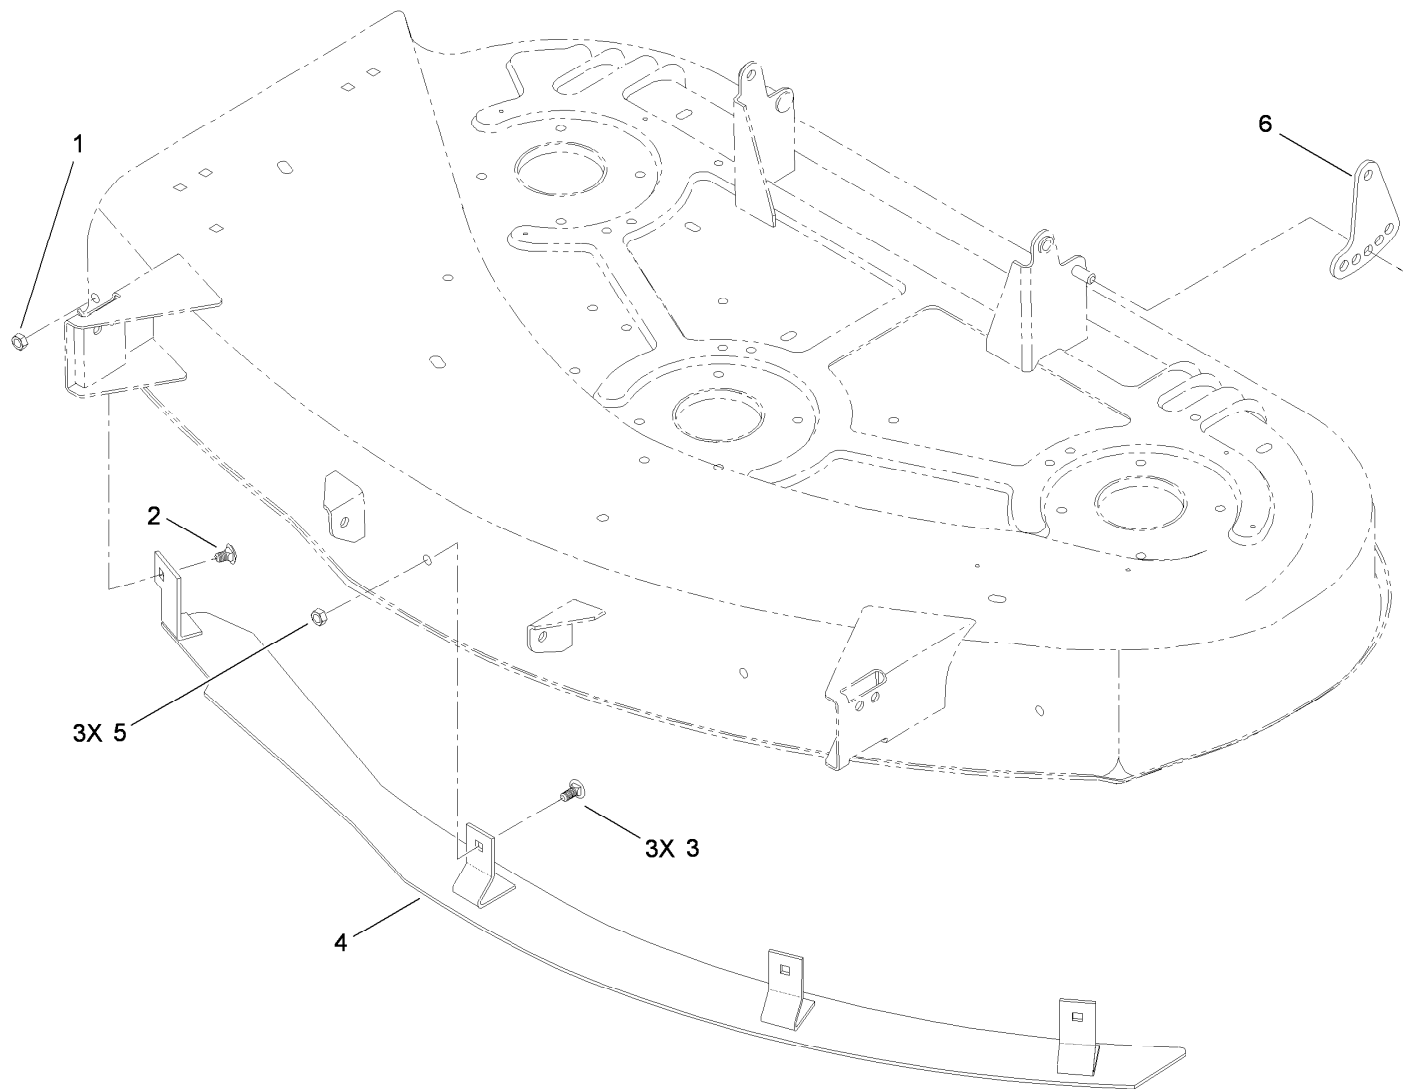

Baffle Assembly

Ref.	Part Number	Qty.	Description
1	3296-47	1	Nut-Lock, NI
2	3230-19	1	Screw-CARR
3	3230-16	3	Screw-CARR
4	93-9950-03	1	Baffle
5	3296-29	3	Nut-Lock, NI
6	93-9910-03	2	Link-Adjusting, HOC

Notes:

Notes:



Count on it.